


Heating

User Guide

FTC4 Controller

Making a
World of
Difference

FTC4 Controller

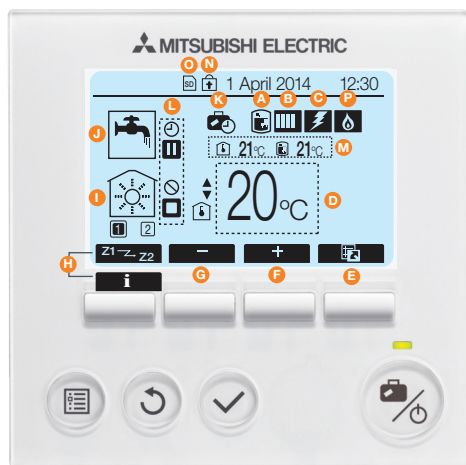

Button	Function
Menu	Access to system settings for initial set up and modifications
Back	Return to previous menu
Confirm	Used to select or save (Enter key)
Power / Holiday Mode	If system is switched off pressing once will turn system on. Pressing again when system is switched on will enable Holiday mode. Holding the button down for 3 secs will turn the system off
Function keys	Used to scroll through menu and adjust settings. Function is determined by visible menu screen

Main Screen Icons	Description
A Legionella Prevention	When this icon is displayed Legionella prevention mode is active
B Heat Pump	'Heat Pump' is running Defrosting Emergency heating
C Electric Heater	When this icon is displayed the 'Electric Heaters' (booster or immersion heater) are in use
D Target Temperature	Target flow temperature (Fixed flow temperature) Target room temperature (Room compensation) Compensation curve (Weather compensation)
E Summary Screen	Pressing the function button below this icon displays the summary screen
F +	Increase desired temperature
G -	Decrease desired temperature
H Z1 ~ Z2	Pressing the function button below this icon switches between Zone 1 and Zone 2
I Information	Pressing the function button below this icon displays the information screen
J Space Heating Mode	Heating mode Zone 1 or Zone 2
K DHW Mode	Normal or Eco mode domestic hot water
L Holiday Mode	When this icon is displayed 'Holiday mode' is activated
	Timer
	Prohibited
	Stand-by
	Stop
	Operating
M Current Temperature	Current room temperature Current water temperature of DHW tank
N	The Menu button is locked
O	SD memory card is inserted. Normal operation SD memory card inserted. Abnormal operation
P Boiler	When this icon is displayed, the boiler is in use