


# FLOOR CHANGE OPERATION METHOD OF TG-2000A (INTEGRATED CENTRALIZED CONTROL SOFTWARE)

Let us move to the [System set screen].

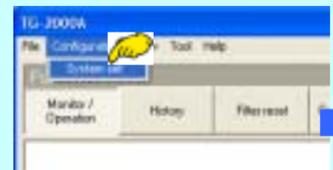




Select the [Configuration] from the [Menu bar] of each screen, and click the [System set].

Enter "SYSTEM" on the password input screen, and click [OK].

The system set screen is displayed.

Select the [Monitoring screen set-up].

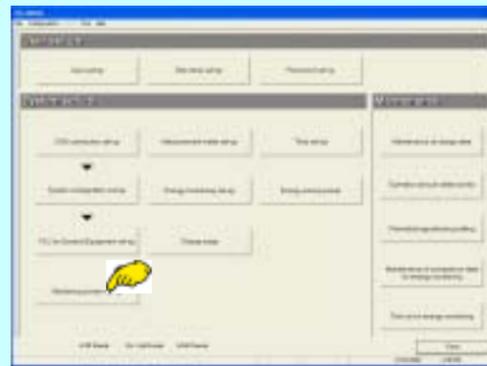

Select the [Monitoring screen set-up] in the system set column to display the [Monitoring screen set-up wizard].



The step of a monitoring screen set-up.

- Step 1: Group of icon
- Step 2: Set-up of the number of floors and floor name
- Step 3: Creation of a plane view
- Step 4: Set-up of icon arrange and name
- Step 5: Set-up of block registration
- Step 6: Set-up of block

Advance by clicking the [OK] button until obtaining the Step screen you desire to change.

## Caution and notice

- The password can be changed. In the case when your password has been changed, the above may differ.
- When the password has not been changed, enter in capital letters. The key operation with Shift + Caps Lock key creates capital letters (with the Caps Lock lamp being lighted).
- At the modification of plans, do not change the drawing area size of the Paint Brush.
- RE: Name of each group
  - LCD name : The group name shown on the liquid crystal of G-50A unit (10 characters maximum)
  - Short name : The name shown on the group icon of the floor screen (8 characters maximum)
  - Full name : The name appears when the cursor is applied to the group icon of the floor screen (20 characters maximum)
- For other names
  - Floor name : 16 characters maximum
  - Block name : 20 characters maximum
- For block
  - Only air-conditioning group can be set as block.

## To change the floor name


Go to the [Step 2 : Set-up of the number of floors, and floor names].



Select the floor name when the floor No. you desire to change for changing.

## To change the plan

Go to the [Step 3 : Creation of a plane view].

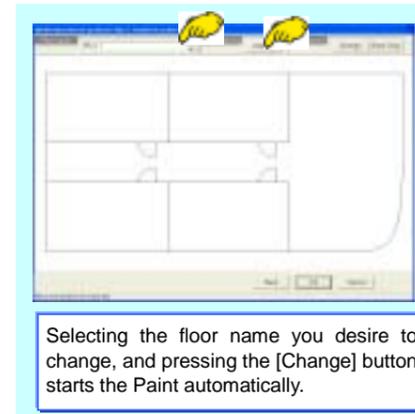


Selecting the floor name you desire to change, and pressing the [Change] button starts the Paint automatically.

By using the applicable operation of the Paint, the floor plan is modified.

After modification, select the [File] - [Exit] from the menu bar, and select [YES] on the confirming screen of storing.

## To change the configuration and name of icon

Go to the [Step 5 : Set-up of icon arrange and name].

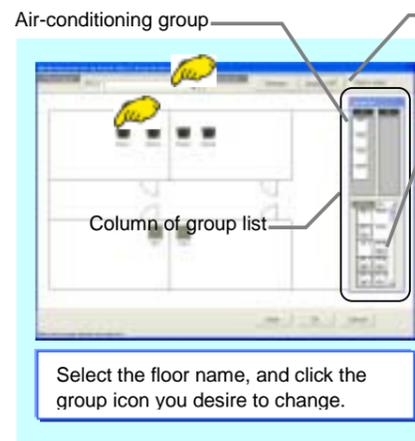

Select the floor name, and click the group icon you desire to change.

When the group name is modified, select the [Name change], and to move the configuration, select the [Move].

Click the [Delete].

Returns to the group list deleted from the floor.

Click the [Name change].


Modify each name.

Click the [Move].

Move to the destination changed, and move the icon by tapping.

## To change the block

Go to the [Step 6 : Set-up of block].

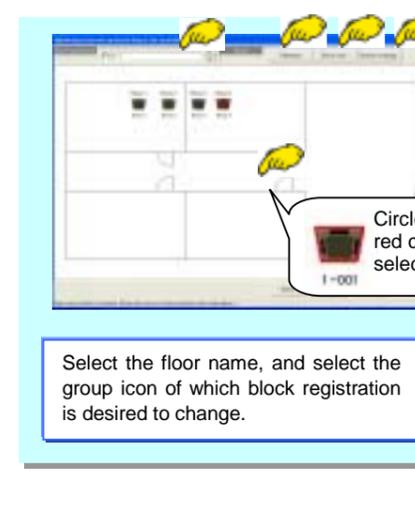

Select the floor name, and select the group icon of which block registration is desired to change.

Circled with red color if selected.

Click the [Release] button.

The block will be released.

Click the [Block set] button.

Select either new or existing to change the block.

Click the [Block name change] button.

Select the existing block of which name is desired to change, and enter a new name.