



Initial Settings

- When the G50A is powered for the first time select group setting option 4 (press 4), after the initialisation has finished.
- If system is already working Press “▲▼” curser keys together for 3 sec until the second menu appears.
- Select group setting option 1 (**press “I”**).
- Select the group to change with the group select switch.
- Enter the indoor addresses (001 enter; 002 enter etc) in that group.
- To enter the remote controller address press “▼” key until the curser is underneath “remote controller” and enter the remote controller address.
- If you want to name the group press “▼” until group name set is flashing, then press enter.
- Use the curser keys to highlight the letter required and press enter.
- When the name is complete press the back screen button to return to the group screen.
- Try to make the group number the same as first address in that group.
- When all groups are complete, press back screen to return to the menu. Press “▲▼” curser keys together for 3 sec to return to the user menu.

Timer Setting

- Press the back screen until the user menu is displayed. Select option 3 schedule setting (press 3).
- Use the curser keys to select the timer pattern P1, P2, P3 or P4 then press enter.
- Use the clock pattern buttons to set the On time.
- Move the curser and set the Off time.
- Once all the on/off's have been set press the back screen to return to the previous screen.
- Move the curser under the day of the week you want to apply the pattern to and with clock pattern buttons set the pattern number.
- If you want to apply the same timer patterns to each group move the curser to M in the bottom right of the screen and press enter to put the settings into memory change the group with the group setting button and use MR enter to put the timer settings into that group.
- When this is complete back screen to the menu and the timer is set.

Back Screen Button

- Repeated pressing of the back screen button will return to a menu screen.