


PAR-F27MEA

User Guide

CONTROLS

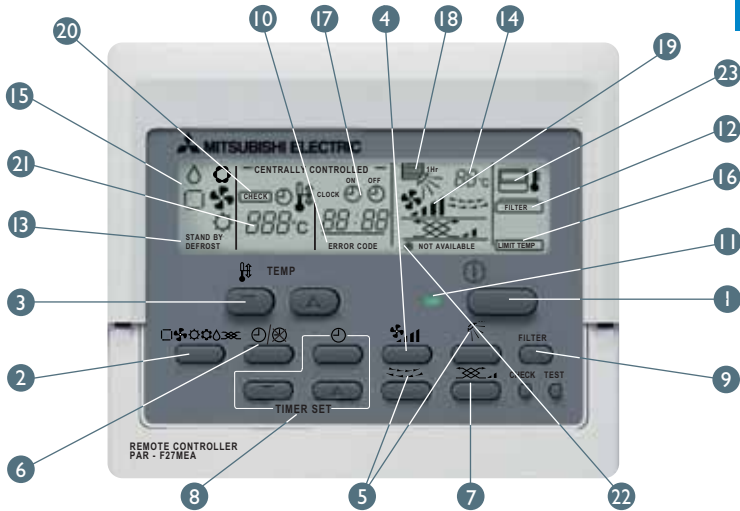

Operation Buttons

- | | |
|---|---|
| 1 | ON/OFF - Switches between run and stop. The light flashes when a malfunction occurs. |
| 2 | OPERATION MODE SWITCHING - Switches between Cool / Dry / Auto / Fan / Heat. Operation modes vary depending on the air conditioning system. Auto mode is for the City Multi R2 and WR2 series only. |
| 3 | TEMPERATURE SETTING - Sets the room temperature: Range of temperature setting: Cool / Dry: 19°C-30°C / Heat: 17°C-28°C / Auto: 19°C-28°C |
| 4 | FAN SPEED SETTING - Models with 4 airflow speed settings: Hi / Mid-2 / Mid-1 / Low. Models with 3 airflow speed settings: Hi / Mid / Low. Models with 2 airflow speed settings: Hi / Low. |
| 5 | AIR FLOW DIRECTION SETTING - Air flow direction angles 100% - 80% - 60% - 40%, Swing, Louver ON/OFF. Air flow direction setting buttons vary depending on the model. |
| 6 | TIMER SELECTION BUTTON - Switches between: One day timer: ON/OFF setting of one time on a single day can be applied. Daily timer: ON/OFF setting by the One day timer can be repeated everyday. Auto OFF timer: OFF timer can be set in a range from 30 minutes to 4 hours. Setting of Auto OFF timer automatically activates OFF timer at the next operation. |
| 7 | This is the Lossnay interlock button. |
| 8 | This sets the current time, timer start and stop times. |
| 9 | This resets the Filter service indication display. |

Display

- | | |
|----|---|
| 10 | ERROR - When an error is occurring on an air conditioner unit, the affected unit and the error code are displayed. |
| 11 | This lamp lights during operation, goes off when the unit stops and flashes when a malfunction occurs. |
| 12 | FILTER DISPLAY - Indicates that it is time to clean the filter. |
| 13 | DEFROST DISPLAY - This indicates when the defrost operation is performed. |
| 14 | INDOOR UNIT INTAKE TEMPERATURE - Measures the intake temperature of the indoor unit when the indoor unit is operating. |
| 15 | OPERATION MODE - Displays the operation mode. |
| 16 | LIMIT TEMP DISPLAY - Displayed when the set temperature range is restricted. |
| 17 | TIMERS - Displays the current time and timer set times. |
| 18 | This displays the air direction. |
| 19 | The selected fan speed is displayed. |
| 20 | This indicates when a malfunction has occurred. |
| 21 | This displays the selected temperature. |
| 22 | This lamp lights when electricity is supplied to the unit. |
| 23 | SENSOR DISPLAY - Displayed when the remote controller sensor is used. |