


Controls






User Guide

PAR-30MAA Remote Controller

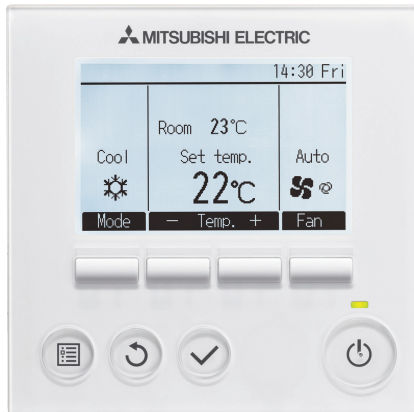
Making a
World of
Difference

PAR-30MAA Remote Controller




-  Menu
-  Previous Screen
-  Select
-  Function Buttons
-  Power ON/OFF

Controller Display

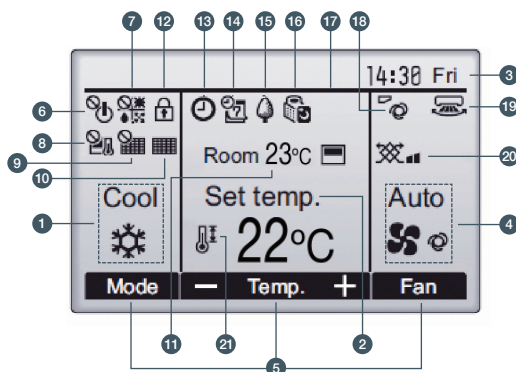

- | | |
|----------------------------|----------------------------|
| 1. Mode | 12. Buttons locked |
| 2. Setpoint | 13. On/off timer enabled |
| 3. Clock | 14. Weekly timer enabled |
| 4. Fan speed | 15. Energy saving mode |
| 5. Function | 16. Outdoor in silent mode |
| 6. On/off prohibited | 17. Thermistor reading |
| 7. Mode prohibited | 18. Vane settings |
| 8. Setpoint prohibited | 19. Louver settings |
| 9. Filter reset prohibited | 20. Ventilation settings |
| 10. Filter sign | 21. Setpoint limit |
| 11. Room temperature | |

Main Display

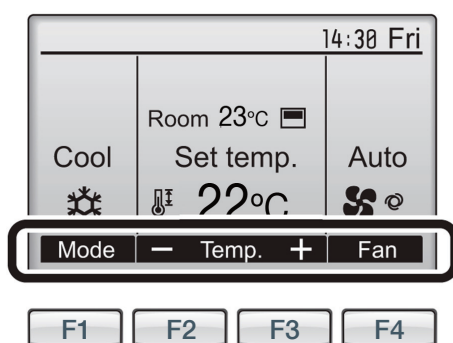

The **Function Buttons** are used to change the relevant display options

Press **F1** to cycle through the modes:
Cooling / Dry / Fan / Auto / Heating

Press **F2** to decrease temperature

Press **F3** to increase temperature


Press **F4** to alternate through fan speeds




Air Conditioning | Commercial Heating
Domestic Heating | Photovoltaics




Main Menu

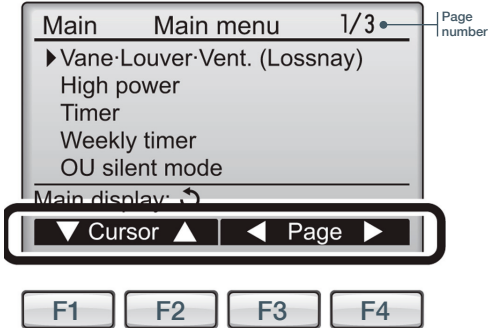

To view the main menu in order to set schedules, functions and maintenance, press the **Menu** button 

Use the function buttons **F1** and **F2** to move cursor up and down, **F3** and **F4** to change the page

Once you have moved the cursor next to the option you want, press the **Select** button 

To return to previous screen at any time, press the **Previous Screen** button 

Main Menu List

Setting and Display Items		Setting Details
Vane / Louver / Vent (Lossnay)		<p>Use to set the vane angle - Select a desired vane setting from five different settings.</p> <p>Use to turn On/Off the louver - Select a desired setting from "On" and "Off."</p> <p>Use to set the amount of ventilation - Select a desired setting from "Off," "Low," and "High."</p>
Timer	On/Off timer	Use to set the operation On/Off times - Time can be set in 5-minute increments. *Clock setting is required
	Auto-Off timer	Use to set the Auto-Off time - Time can be set to a value from 30 to 240 in 10-minute increments.
Weekly timer		Use to set the weekly operation On/Off times - Up to eight operation patterns can be set for each day. *Clock setting is required. *Not valid when the On/Off timer is enabled.
Restriction	Temp. range	Use to restrict the preset temperature range - Different temperature ranges can be set for different operation modes.
	Operation lock	Use to lock selected functions - The locked functions cannot be operated.
Energy saving*	Auto return	Use to get the units to operate at the preset temperature after performing energy-save operation for a specified time period - Time can be set to a value from 30 and 120 in 10-minute increments. * This function will not be valid when the preset temperature ranges are restricted.
	Schedule	Set the start/stop times to operate the units in the energy-save mode for each day of the week, and set the energy-saving rate - Up to four energy-save operation patterns can be set for each day. Time can be set in 5-minute increments. Energy-saving rate can be set to a value from 0% and 50 to 90% in 10% increments. *Clock setting is required.
Night setback		Use to make Night setback settings - Select "Yes" to enable the setting, and "No" to disable the setting. The temperature range and the start/stop times can be set. *Clock setting is required.
Filter information		Use to check the filter status - The filter sign can be reset.
Error information		Use to check error information when an error occurs - Error code, error source, refrigerant address, unit model, manufacturing number, contact information (dealer's phone number) can be displayed. *The unit model, manufacturing number, and contact information need to be registered in advance to be displayed.
Maintenance	Manual vane angle	Use to set the vane angle for each vane to a fixed position .
Initial setting	Clock	Use to set the current time .
	Main display	Use to switch between " Full " and " Basic " modes for the Main display - The default setting is "Full."
	Contrast	Use to adjust screen contrast .
	Language selection	Use to select the desired language .

*Function not supported by all models. *Not available/Unsupported function* will appear on display if user selects a function not supported by corresponding indoor unit model.



Telephone: 01707 282880

email: air.conditioning@meuk.mee.com web: www.airconditioning.mitsubishielectric.co.uk

UNITED KINGDOM Mitsubishi Electric Europe Living Environmental Systems Division
Travellers Lane, Hatfield, Hertfordshire, AL10 8XB, England General Enquiries Telephone: 01707 282880 Fax: 01707 278881
IRELAND Mitsubishi Electric Europe Westgate Business Park, Ballymount, Dublin 24, Ireland
Telephone: Dublin (01) 419 8800 Fax: Dublin (01) 419 8890 International code: (003531)



www.greengateway.mitsubishielectric.co.uk

Mitsubishi Electric's commitment
to the environment

