Heating

User Guide

FTC5 Main Controller

Making a World of Difference

FTC5 Main Controller

Button Function MITSUBISHI ELECTRIC Access to system settings for initial î Menu set up and modifications Diff 1 April 2015 12:30 2 0 0 Ð Back Return to previous menu 🗈 21°C 🖻 21°C 🙆 П \bigcirc Confirm Used to select or save (Enter key) D -z2 If system is switched off pressing once will turn system on. Pressing Power / Holiday again when system is switched on Mode will enable Holiday mode. Holding the button down for 3 secs will turn the system off <u>!</u> Used to scroll through menu and Function keys adjust settings. Function is determined by visible menu screen

Mai	n Screen Icons	Description
۵	Legionella Prevention	When this icon is displayed Legionella prevention mode is active
₿	Heat Pump	'Heat Pump' is running Defrosting Emergency heating
Θ	Electric Heater	When this icon is displayed the 'Electric Heaters' (booster or immersion heater) are in use
0	Target Temperature	Image: Target flow temperature (Fixed flow temperature) Image: Target room temperature (Room compensation) Compensation curve (Weather compensation)
Θ	Option Screen	Pressing the function button below this icon displays the option screen, including energy monitoring
	+	Increase desired temperature
G	_	Decrease desired temperature
0	Z1-Z- Z2	Pressing the function button below this icon switches between Zone 1 and Zone 2
	Information	Pressing the function button below this icon displays the information screen
0	Space Heating Mode	Heating mode Zone 1 or Zone 2
J	DHW Mode	Normal or Eco mode domestic hot water
6	Holiday Mode	When this icon is displayed 'Holiday mode' is activated
0	Ð	Timer
	\otimes	Prohibited
		Stand-by
		Stop
		Operating
M	Current Temperature	Current room temperature Current water temperature of DHW tank
N	ŧ	The Menu button is locked
0	SD SD	SD memory card is inserted. Normal operation SD memory card inserted. Abnormal operation
•	Boiler	When this icon is displayed, the boiler is in use



