

July 2026

OCH938

REVISED EDITION-B

SERVICE MANUAL

<Outdoor unit>

Model name


PUMY-SM112VKM2 PUMY-SM112VKM2-ET
PUMY-SM125VKM2 PUMY-SM125VKM2-ET
PUMY-SM140VKM2 PUMY-SM140VKM2-ET
PUMY-SM112YKM2 PUMY-SM112YKM2-ET
PUMY-SM125YKM2 PUMY-SM125YKM2-ET
PUMY-SM140YKM2 PUMY-SM140YKM2-ET

Salt proof model

PUMY-SM112VKM2-BS	PUMY-SM112VKM2-ET-BS
PUMY-SM125VKM2-BS	PUMY-SM125VKM2-ET-BS
PUMY-SM140VKM2-BS	PUMY-SM140VKM2-ET-BS
PUMY-SM112YKM2-BS	PUMY-SM112YKM2-ET-BS
PUMY-SM125YKM2-BS	PUMY-SM125YKM2-ET-BS
PUMY-SM140YKM2-BS	PUMY-SM140YKM2-ET-BS

• Some descriptions have been changed in REVISED EDITION-B.

OCH938A is void.

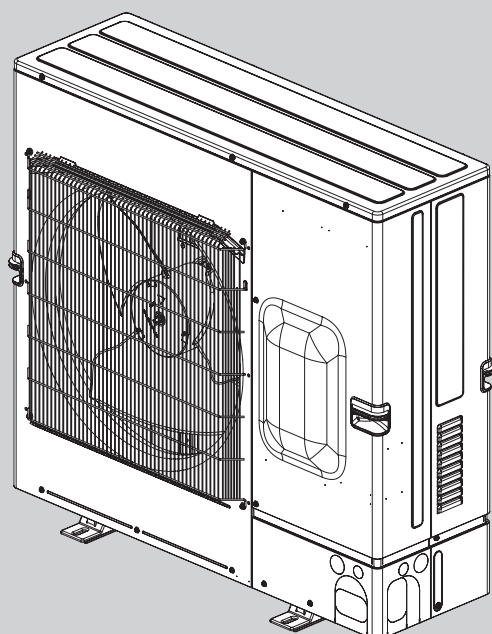

1. SERVICE REFERENCE	2
2. SAFETY PRECAUTION	3
3. OVERVIEW OF UNITS	9
4. SPECIFICATIONS	13
5. DATA	15
6. OUTLINES AND DIMENSIONS	28
7. WIRING DIAGRAM	29
8. TROUBLESHOOTING	31
9. DISASSEMBLY PROCEDURE	119
10. SYSTEM CONSTRUCTION	128
11. ELECTRICAL WIRING	130
12. REFRIGERANT PIPING TASKS	131
13. REMOTE CONTROLLER	132

Appendix: Installation manual (Excerpt of English Ver.)

PARTS CATALOG (OCB938)

CITY MULTI

1 SERVICE REFERENCE

PUMY-SM112VKM2.TH
PUMY-SM112VKM2-ET.TH
PUMY-SM125VKM2.TH
PUMY-SM125VKM2-ET.TH
PUMY-SM140VKM2.TH
PUMY-SM140VKM2-ET.TH

PUMY-SM112YKM2.TH
PUMY-SM112YKM2-ET.TH
PUMY-SM125YKM2.TH
PUMY-SM125YKM2-ET.TH
PUMY-SM140YKM2.TH
PUMY-SM140YKM2-ET.TH

PUMY-SM112VKM2-BS.TH
PUMY-SM112VKM2-ET-BS.TH
PUMY-SM125VKM2-BS.TH
PUMY-SM125VKM2-ET-BS.TH
PUMY-SM140VKM2-BS.TH
PUMY-SM140VKM2-ET-BS.TH

PUMY-SM112YKM2-BS.TH
PUMY-SM112YKM2-ET-BS.TH
PUMY-SM125YKM2-BS.TH
PUMY-SM125YKM2-ET-BS.TH
PUMY-SM140YKM2-BS.TH
PUMY-SM140YKM2-ET-BS.TH

2 SAFETY PRECAUTION

2-1. Always observe for safety

Preparation before the repair service

- Prepare the proper tools.
- Prepare the proper protectors.
- Provide adequate ventilation.
- After stopping the operation of the air conditioner, turn off the power-supply breaker.
- Discharge the condenser before the work involving the electric parts.

Precautions during the repair service

- Do not perform the work involving the electric parts with wet hands.
- Do not pour water into the electric parts.
- Do not touch the refrigerant.
- Do not touch the hot or cold areas in the refrigerating cycle.
- When the repair or the inspection of the circuit needs to be done without turning off the power, exercise great caution not to touch the live parts.
- When opening or closing the valve below freezing temperatures, refrigerant may spurt out from the gap between the valve stem and the valve body, resulting in injuries.

2-2. Cautions related to new refrigerant

■ Cautions for units utilizing refrigerant R32

Use new refrigerant pipes.

- Avoid using thin pipes.

Make sure that the inside and outside of refrigerant piping is clean and it has no contaminants such as sulfur, oxides, dirt, shaving particles, etc., which are hazard to refrigerant cycle. In addition, use pipes with specified thickness.

- Contamination inside refrigerant piping can cause deterioration of refrigerant oil, etc.

Store the piping indoors, and keep both ends of the piping sealed until just before brazing. (Leave elbow joints, etc. in their packaging.)

- If dirt, dust or moisture enters into refrigerant cycle, that can cause deterioration of refrigerant oil or malfunction of compressor.

The refrigerant oil applied to flare and flange connections must be ester oil, ether oil or alkylbenzene oil in a small amount.

- If large amount of mineral oil enters, that can cause deterioration of refrigerant oil, etc.

Do not use refrigerant other than R32.

- If other refrigerant (R22, etc.) is used, chlorine in refrigerant can cause deterioration of refrigerant oil, etc.

Use a vacuum pump with a reverse flow check valve.

- Vacuum pump oil may flow back into refrigerant cycle and that can cause deterioration of refrigerant oil, etc.

Use the following tools specifically designed for use with R32 refrigerant.

- The following tools are necessary to use R32 refrigerant.

Tools	
Gauge manifold	Flaring tool
Charge hose	Size adjustment gauge
Gas leak detector	Vacuum pump adaptor
Torque wrench	Electronic refrigerant charging scale

Handle tools with care.

- If dirt, dust or moisture enters into refrigerant cycle, that can cause deterioration of refrigerant oil or malfunction of compressor.
- Servicing shall be performed only as recommended by the manufacturer.

2-2-1. Warning for service

- Do not alter the unit.
- Servicing shall be performed only by methods recommended by the manufacturer.
- For installation and relocation work, follow the instructions in the Installation Manual and use tools and pipe components specifically made for use with refrigerant specified in the outdoor unit installation manual.
- Ask a dealer or an authorized technician to install, relocate and repair the unit.
- The appliance shall be stored so as to prevent mechanical damage from occurring.
- Be aware that refrigerants may not contain an odour.
- Pipe-work shall be protected from physical damage.
- The installation of pipe-work shall be kept to a minimum.
- Compliance with national gas regulations shall be observed.
- Keep any required ventilation openings clear of obstruction.
- The appliance shall be stored in a well-ventilated area where the room size corresponds to the room area as specified for operation.
- Maintenance, service and repair operations shall be performed by authorized technician with required qualification.
- Be sure to have appropriate ventilation in order to prevent ignition. Furthermore, be sure to carry out fire prevention measures that there are no dangerous or flammable objects in the surrounding area.



2-2-2. Cautions for service

- Perform service after recovering the refrigerant left in unit completely.
- Do not release refrigerant in the air.
- After completing service, charge the cycle with specified amount of refrigerant.
- If moisture or foreign matter might have entered the refrigerant piping during service, ensure to remove them.

2-2-3. Additional refrigerant charge

When charging directly from cylinder

R32 is a single refrigerant and its composition does not change. Therefore, both liquid charging and gas charging are possible. Liquid charging of refrigerant all at once from the low pressure side may cause the compressor malfunction. Accordingly, make sure that charging is gradual.

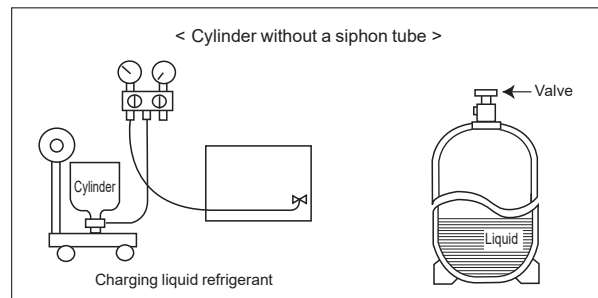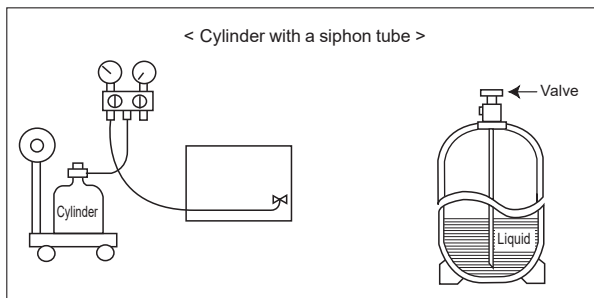

2-2-4. Service tools

Use the below service tools as exclusive tools for R32 refrigerant.

No.	Tool name	Specifications
1	Gauge manifold	Only for R32
		Use the existing fitting specifications. (UNF1/2)
		Use high-tension side pressure of 5.3MPa·G or over.
2	Charge hose	Only for R32
		Use pressure performance of 5.09MPa·G or over.
3	Electronic weighing scale	—
4	Gas leak detector	Use the detector for R134a, R407C, R410a or R32.
5	Adaptor for reverse flow check	Attach on vacuum pump.
6	Refrigerant charge base	—
7	Refrigerant cylinder	Only for R32
		Top of cylinder (Pink)
		Cylinder with syphon
8	Refrigerant recovery equipment	—

2-3. Precautions for salt-proof type “-BS” model

Although “-BS” model has been designed to be resistant to salt damage, observe the following precautions to maintain the performance of the unit.

- Avoid installing the unit in a location where it will be exposed directly to seawater or sea breeze.
- If the cover panel may become covered with salt, be sure to install the unit in a location where the salt will be washed away by rainwater. (If a sunshade is installed, rainwater may not clean the panel.)

- To ensure that water does not collect in the base of the outdoor unit, make sure that the base is level, not at angle. Water collecting in the base of the outdoor unit could cause rust.
- If the unit is installed in a coastal area, clean the unit with water regularly to remove any salt build-up.
- If the unit is damaged during installation or maintenance, be sure to repair it.
- Be sure to check the condition of the unit regularly.
- Be sure to install the unit in a location with good drainage.

2-4. Cautions for refrigerant piping work

New refrigerant R32 is adopted for replacement inverter series. Although the refrigerant piping work for R32 is the same as for R22, exclusive tools are required to avoid mixing with different types of refrigerant. Furthermore as the working pressure of R32 is 1.6 times higher than that of R22, their sizes of flared sections and flare nuts are different.

■ Thickness of pipes

Because the working pressure of R32 is higher compared to R22, be sure to use refrigerant piping with thickness shown below. (Never use pipes of 0.7 mm or below.)

Piping diameter and thickness

Nominal dimensions (in.)	Outside diameter (mm)	Thickness (mm)	
		R32/R410A	R22
1/4	6.35	0.8	0.8
3/8	9.52	0.8	0.8
1/2	12.70	0.8	0.8
5/8	15.88	1.0	1.0
3/4	19.05	—	1.0

■ Dimensions of flare cutting and flare nut

The component molecules in HFC refrigerant are smaller compared to the conventional refrigerants. In addition, R32 is a refrigerant which has higher risk of leakage because its working pressure is higher than that of other refrigerants.

Therefore, to enhance airtightness and strength, flare cutting dimension of copper pipe for R32 has been specified separately from the dimensions for other refrigerants as shown below. The dimension B of the flare nut for R32 also has partly been changed to increase strength as shown below. Set copper pipe correctly referring to copper pipe flaring dimensions for R32 below. For 1/2 and 5/8 inch pipes, the dimension B changes. Use torque wrench corresponding to each dimension.



Flare cutting dimensions

Nominal dimensions (in.)	Outside diameter (mm)	Dimension A ($\begin{smallmatrix} 0 \\ -0.4 \end{smallmatrix}$) (mm)	
		R32/R410A	R22
1/4	6.35	9.1	9.0
3/8	9.52	13.2	13.0
1/2	12.70	16.6	16.2
5/8	15.88	19.7	19.4
3/4	19.05	—	23.3

Flare nut dimensions

Nominal dimensions (in.)	Outside diameter (mm)	Dimension B ($\begin{smallmatrix} 0 \\ -0.4 \end{smallmatrix}$) (mm)	
		R32/R410A	R22
1/4	6.35	17.0	17.0
3/8	9.52	22.0	22.0
1/2	12.70	26.0	24.0
5/8	15.88	29.0	27.0
3/4	19.05	—	36.0

■ Tools for R32 (The following table shows whether conventional tools can be used or not.)

Tools and materials	Use	R32 tools	Can R22 tools be used ?	Can R407C tools be used ?	Can R410a tools be used ?
Gauge manifold	Air purge, refrigerant charge and operation check	Tool exclusive for R32	×	×	○
Charge hose		Tool exclusive for R32	×	×	○
Gas leak detector	Gas leak check	Tool for HFC refrigerant	×	○	○
Refrigerant recovery equipment	Refrigerant recovery	Tool exclusive for R32	×	×	○
Refrigerant cylinder	Refrigerant charge	Tool exclusive for R32	×	×	×
Safety charger	Prevent compressor malfunction when charging refrigerant by spraying liquid refrigerant	Tool exclusive for R32	×	×	○

Tools and materials	Use	R32 tools	Can R22 tools be used ?	Can R407C tools be used ?	Can R410a tools be used ?
Charge valve	Prevent gas from blowing out when detaching charge hose	Tool exclusive for R32	×	×	○
Vacuum pump	Vacuum drying and air purge	Tools for other refrigerants can be used if equipped with adopter for reverse flow check	△ (Usable if equipped with adopter for reverse flow)	△ (Usable if equipped with adopter for reverse flow)	△ (Usable if equipped with adopter for reverse flow)
Flaring tool*	Flaring work of piping	Tools for other refrigerants can be used by adjusting flaring dimension	△ (Usable by adjusting flaring dimension)	△ (Usable by adjusting flaring dimension)	△ (Usable by adjusting flaring dimension)
Bender	Bend the pipes	Tools for other refrigerants can be used	○	○	○
Pipe cutter*	Cut the pipes	Tools for other refrigerants can be used	○	○	○
Welder and nitrogen gas cylinder	Weld the pipes	Tools for other refrigerants can be used	○	○	○
Refrigerant charging scale	Refrigerant charge	Tools for other refrigerants can be used	○	○	○
Vacuum gauge or thermistor vacuum gauge and vacuum valve	Check the degree of vacuum. (Vacuum valve prevents back flow of oil and refrigerant to thermistor vacuum gauge)	Tools for other refrigerants can be used	○	○	○
Charging cylinder	Refrigerant charge	Tool exclusive for R32	×	–	×

×: Prepare a new tool. (Use the new tool as the tool exclusive for R32.)

△: Tools for other refrigerants can be used under certain conditions.

○: Tools for other refrigerants can be used.

2-5. Cautions for unit using R32 refrigerant

Basic work procedures are the same as those for conventional units using refrigerant R410A. However, pay careful attention to the following points:

1. Information on servicing

1-1. Checks on the area

Prior to beginning work on systems containing flammable refrigerants, safety checks are necessary to ensure that the risk of ignition is minimized. For repair to the refrigerating systems, (1-2) to (1-6) shall be completed prior to conducting work on the systems.

1-2. Work procedure

Work shall be undertaken under a controlled procedure so as to minimise the risk of a flammable gas or vapour being present while the work is being performed.

1-3. General work area

All maintenance staff and others working in the local area shall be instructed on the nature of work being carried out. Work in confined spaces shall be avoided.

1-4. Checking for presence of refrigerant

The area shall be checked with an appropriate refrigerant detector prior to and during work, to ensure the technician is aware of potentially toxic or flammable atmospheres. Ensure that the leak detection equipment being used is suitable for use with all applicable refrigerants, i.e. non-sparking, adequately sealed or intrinsically safe.

1-5. Presence of fire extinguisher

If any hot work is to be conducted on the refrigerating equipment or any associated parts, appropriate fire extinguishing equipment shall be available to hand. Have a dry powder or CO2 fire extinguisher adjacent to the charging area.

1-6. No ignition sources

No person carrying out work in relation to a refrigerating system which involves exposing any pipe work shall use any sources of ignition in such a manner that it can lead to the risk of fire or explosion. All possible ignition sources, including cigarette smoking, should be kept sufficiently far away from the site of installation, repairing, removing and disposal, during which refrigerant can possibly be released to the surrounding space. Prior to work taking place, the area around the equipment is to be surveyed to make sure that there are no flammable hazards or ignition risks. "No Smoking" signs shall be displayed.

1-7. Ventilated area

Ensure that the area is in the open or that it is adequately ventilated before breaking into the system or conducting any hot work. A degree of ventilation shall continue during the period that the work is carried out. The ventilation should safely disperse any released refrigerant and preferably expel it externally into the atmosphere.

1-8. Checks on the refrigeration equipment

Where electrical components are being changed, they shall be fit for the purpose and to the correct specification. At all times the manufacturer's maintenance and service guidelines shall be followed. If in doubt, consult the manufacturer's technical department for assistance. The following checks shall be applied to installations using flammable refrigerants:

- The refrigerant charge is in accordance with the room size within which the refrigerant containing parts are installed.
- The ventilation machinery and outlets are operating adequately and are not obstructed.
- Marking to the equipment continues to be visible and legible. Markings and signs that are illegible shall be corrected.
- Refrigerating pipe or components are installed in a position where they are unlikely to be exposed to any substance which can corrode refrigerant containing components, unless the components are constructed of materials which are

inherently resistant to being corroded or are suitably protected against being so corroded.

1-9. Checks on electrical devices

Repair and maintenance to electrical components shall include initial safety checks and component inspection procedures. If a fault exists that could compromise safety, then no electrical supply shall be connected to the circuit until it is satisfactorily dealt with. If the fault cannot be corrected immediately but it is necessary to continue operation, an adequate temporary solution shall be used. This shall be reported to the owner of the equipment so all parties are advised. Initial safety checks shall include that:

- capacitors are discharged: this shall be done in a safe manner to avoid possibility of sparking;
- no live electrical components and wiring are exposed while charging, recovering or purging the system;
- there is continuity of earth bonding

2. Sealed electrical components

Sealed electrical components shall not be repaired.

3. Cabling

Check that cabling will not be subject to wear, corrosion, excessive pressure, vibration, sharp edges or any other adverse environmental effects. The check shall also take into account the effects of aging or continual vibration from sources such as compressors or fans.

4. Detection of flammable refrigerants

Under no circumstances shall potential sources of ignition be used in the searching for or detection of refrigerant leaks. A halide torch (or any other detector using a naked flame) shall not be used.

The following leak detection methods are deemed acceptable for all refrigerant systems.

Electronic leak detectors may be used to detect refrigerant leaks but, in the case of flammable refrigerants, the sensitivity can be inadequate, or can need re-calibration. (Detection equipment shall be calibrated in a refrigerant-free area.)

Ensure that the detector is not a potential source of ignition and is suitable for the refrigerant used. Leak detection equipment shall be set at a percentage of the LFL of the refrigerant and shall be calibrated to the refrigerant employed, and the appropriate percentage of gas (25% maximum) is confirmed.

Leak detection fluids are also suitable for use with most refrigerants but the use of detergents containing chlorine shall be avoided as the chlorine can react with the refrigerant and corrode the copper pipe-work.

If a leak is suspected, all naked flames shall be removed/extinguished.

If a leakage of refrigerant is found which requires brazing, all of the refrigerant shall be recovered from the system, or isolated (by means of shut off valves) in a part of the system remote from the leak. Removal of refrigerant shall be according to 5. Refrigerant removal and circuit evacuation.

Field-made refrigerant joints indoors shall be tightness tested. The test method shall have a sensitivity of 5 grams per year of refrigerant or better under a pressure of at least 0.25 times the maximum allowable pressure. No leak shall be detected.

5. Refrigerant removal and circuit evacuation

When breaking into the refrigerant circuit to make repairs – or for any other purpose conventional procedures shall be used. However, for flammable refrigerants it is important that best practice is followed since flammability is a consideration. The following procedure shall be adhered to:

- safely remove refrigerant following local and national regulations
- evacuate
- purge the circuit with inert gas (optional for A2L)
- evacuate (optional for A2L)
- continuously flush with inert gas when using flame to open circuit
- open the circuit

The refrigerant charge shall be recovered into the correct recovery cylinders. The manufacturer shall specify the inert gases that can be used. Compressed air or oxygen shall not be used for purging refrigerant systems.

Purging of the refrigerant circuit shall be achieved by breaking the vacuum in the system with inert gas and continuing to fill until the working pressure is achieved, then venting to atmosphere, and finally pulling down to a vacuum. This process shall be repeated until no refrigerant is within the system. The system shall be vented down to atmospheric pressure to enable work to take place.

Ensure that the outlet for the vacuum pump is not close to any potential ignition sources and that ventilation is available.

6. Charging procedures

In addition to conventional charging procedures, the following requirements shall be followed:

- Ensure that contamination of different refrigerants does not occur when using charging equipment. Hoses or lines shall be as short as possible to minimize the amount of refrigerant contained in them.
- Cylinders shall be kept upright.
- Ensure that the refrigeration system is earthed prior to charging the system with refrigerant.
- Label the system when charging is complete (if not already).
- Extreme care shall be taken not to overfill the refrigeration system.

Prior to recharging the system, it shall be pressure-tested with the appropriate purging gas. The system shall be leaktested on completion of charging but prior to commissioning. A follow up leak test shall be carried out prior to leaving the site.

7. Decommissioning

Before carrying out this procedure, it is essential that the technician is completely familiar with the equipment and all its detail. It is recommended good practice that all refrigerants are recovered safely. Prior to the task being carried out, an oil and refrigerant sample shall be taken in case analysis is required prior to re-use of reclaimed refrigerant. It is essential that electrical power is available before the task is commenced.

- Become familiar with the equipment and its operation.
- Isolate system electrically.
- Before attempting the procedure, ensure that:
 - mechanical handling equipment is available, if required, for handling refrigerant cylinders;
 - all personal protective equipment is available and being used correctly;
 - the recovery process is supervised at all times by a competent person;
 - recovery equipment and cylinders conform to the appropriate standards.
- Pump down refrigerant system, if possible.
- If a vacuum is not possible, make a manifold so that refrigerant can be removed from various parts of the system.
- Make sure that cylinder is situated on the scales before recovery takes place.
- Start the recovery machine and operate in accordance with instructions.
- Do not overfill cylinders. (No more than 80 % volume liquid charge).
- Do not exceed the maximum working pressure of the cylinder, even temporarily.
- When the cylinders have been filled correctly and the process completed, make sure that the cylinders and the equipment are removed from site promptly and all isolation valves on the equipment are closed off
- Recovered refrigerant shall not be charged into another refrigeration system unless it has been cleaned and checked.

8. Labelling

Equipment shall be labelled stating that it has been decommissioned and emptied of refrigerant. The label shall be dated and signed. For appliances containing flammable refrigerants, ensure that there are labels on the equipment stating the equipment contains flammable refrigerant.

9. Recovery

When removing refrigerant from a system, either for servicing or decommissioning, it is required to follow good practice so that all refrigerants are removed safely. When transferring refrigerant into cylinders, ensure that only appropriate refrigerant recovery cylinders are employed. Ensure that the correct number of cylinders for holding the total system charge is available. All cylinders to be used are designated for the recovered refrigerant and labelled for that refrigerant (i.e. special cylinders for the recovery of refrigerant). Cylinders shall be complete with pressure-relief valve and associated shut-off valves in good working order. Empty recovery cylinders are evacuated and, if possible, cooled before recovery occurs. The recovery equipment shall be in good working order with a set of instructions concerning the equipment that is at hand and shall be suitable for the recovery of the flammable refrigerant. Consult manufacturer if in doubt. In addition, a set of calibrated weighing scales shall be available and in good working order. Hoses shall be complete with leak-free disconnect couplings and in good condition.

The recovered refrigerant shall be processed according to local legislation in the correct recovery cylinder, and the relevant waste transfer note arranged. Do not mix refrigerants in recovery units and especially not in cylinders. If compressors or compressor oils are to be removed, ensure that they have been evacuated to an acceptable level to make certain that flammable refrigerant does not remain within the lubricant. The compressor body shall not be heated by an open flame or other ignition sources to accelerate this process. Draining of oil from a system shall be carried out safely.

3 OVERVIEW OF UNITS

3-1. System construction

Outdoor unit	Horsepower	4.5 HP	5 HP	6 HP
	Model name	SM112	SM125	SM140
Applicable indoor unit	Capacity class	15 to 140		
	Number of units	Max. 12		
	Total system capacity range	50 to 130% of outdoor unit capacity		

Model name	CMY-Y62-G-E	CMY-Y64-G-E	CMY-Y68-G-E
Number of branches	2	4	8

Connectable indoor unit lineup (Heat pump inverter type)																			
Model type		Model name	Group *		10	15	20	25	32	40	50	63	71	80	100	125	140		
			A	B															
Ceiling Cassette	1-way flow	PMFY-MS·VCM-E/ET	✓				●	●	●	●	●								
	2 by 2	PLFY-MS·VFM-E/ET		✓		●	●	●	●	●	●								
		PLFY-MS·VFM2-E/ET	✓			●	●	●	●	●	●								
	4-way flow	PLFY-M·VEM6-E/ET		✓			●	●	●	●	●	●	●	●	●	●	●		
		PLFY-MS·VEM-E/ET		✓				●	●	●	●	●	●		●	●	●		
		PLFY-MS·VEM2-E/ET	✓					●	●	●	●	●	●		●	●	●		
Ceiling suspended		PCFY-MS·VKM-E/ET		✓						●		●				●	●		
		PCFY-MS·VKM2-E/ET	✓							●		●				●	●		
Wall mounted		PKFY-MS·VLM-E/ET		✓	●	●	●	●	●	●	●								
		PKFY-MS·VLM2-E/ET	✓		●	●	●	●	●	●	●								
		PKFY-MS·VKM-E/ET		✓									●				●		
		PKFY-MS·VKM2-E/ET	✓										●				●		
Ceiling concealed	Low static pressure	PEFY-MS·VMS(L)-A	✓			●	●	●	●	●	●	●							
	Middle static pressure	PEFY-M·VMA(L)-A1(TR)		✓			●	●	●	●	●	●	●	●	●	●	●	●	
		PEFY-MS·VMA(L)-A		✓				●	●	●	●	●	●	●	●	●	●	●	
		PEFY-MS·VMA(L)-A1	✓					●	●	●	●	●	●	●	●	●	●	●	
	High static pressure	PEFY-MS·VMHS-A	✓								●	●	●						

*Group A and Group B indoor units must not be mixed.

*Group B indoor units are not compatible with the functions of automatic address and circuit inspection.

Remote controller	Name	MA remote controller
	Model name	PAR-4xMAAB, PAR-4xMAA, PAR-3xMAA ("x" represents 0 or later)
	Functions	• Address setting is not required.

- Authorized connectable indoor units are as follows;
PUMY-SM112: PEFY-MS50VMA-A1 + PEFY-MS63VMA-A1
PUMY-SM125: PEFY-MS50VMA-A1 + PEFY-MS71VMA-A1
PUMY-SM140: PEFY-MS71VMA-A1 ×2

3-2. System construction (Branch box system)

Outdoor unit	Horsepower	4.5 HP	5 HP	6 HP
	Model name	SM112	SM125	SM140
Applicable indoor unit	Capacity class	15 to 100		
	Number of units	Max. 8		
	Total system capacity range	50 to 130% of outdoor unit capacity	50 to 130% of outdoor unit capacity	50 to 130% of outdoor unit capacity
		6.3 to 16.2 kW	7.1 to 18.2 kW	8.0 to 20.2 kW
Branch box that can be connected	Number of units	Max. 2*		

* Only 1 unit can be connected to a 6-branch type branch box.

Model	System only				
	Only M, S, P series indoor units (Connection with branch box)				
	One branch box		Two branch boxes		
	4-branch box × 1	6-branch box × 1	4-branch box × 2	4-branch box × 1 6-branch box × 1	6-branch box × 2
PUMY-SM112	Max. 8				Not allowed
PUMY-SM125	Max. 8				
PUMY-SM140	Max. 8				

Connectable indoor unit lineup (Heat pump inverter type)												
Model type	Model name	15	18	20	22	25	35	42	50	60	71	100
Wall mounted	MSZ-RW·VG								●			
	MSZ-RW·VG2					●	●		●			
	MSZ-LN·VG2					●	●		●			
	MSZ-LN·VG3					●	●		●			
	MSZ-AP·VG					●	●	●	●			
	MSZ-AY·VG(K)(P)					●	●	●	●			
	MSZ-AY·VG(K)(P)2					●	●	●	●			
	MSZ-EF·VG(K)		●		●	●	●	●	●			
	MSZ-EF·VG(K)2		●		●	●	●	●	●			
	MSZ-BT·VG(K)					●	●					
	MSZ-BT·VG(K)2					●	●					
	Compact											
Ceiling cassette	1-way flow	MLZ-KY·VG		●								
		MLZ-KP·VF				●	●		●			
		MLZ-KP·VG				●	●		●			
	2 by 2 type	SLZ-M·FA2	●			●	●		●			
		SLZ-M·FA3	●			●	●		●			
	4-way flow	PLA-M·EA2					●		●	●	●	●
		PLA-M·EA3					●		●	●	●	●
Ceiling suspended		PCA-M·KA2					●		●	●	●	●
		PCA-M·KA3					●		●	●	●	●
Ceiling concealed	Middle static pressure	PEAD-M·JA(L)2							●	●	●	●
		PEAD-M·JA(L)3							●	●	●	●
	Compact	SEZ-M·DA(L)2				●	●		●	●	●	
		SEZ-M·DA3				●	●		●	●	●	

Note:

- The lineup of a connectable indoor unit depends on a district/areas/country.

Branch box	PAC-MMK60BC	PAC-MMK40BC
Number of branches (Connectable indoor unit)	6 (MAX. 6 units)	4 (MAX. 4 units)

Note:

- A maximum of 2 branch boxes can be connected to 1 outdoor unit.




2-branch pipe (joint), optional parts	
Using 1 branch box	Not required
Using 2 branch boxes	Required Connection method: flare (MSDD-50AR2-E) Connection method: brazing (MSDD-50BR-E) Note: Select the appropriate model based on the connection method.



Option	Optional accessories of indoor units and outdoor units are available.
--------	---

3-3. System construction (Mixed system)

Model	Mixed system									
	One branch box					Two branch boxes				
	4-branch box × 1		6-branch box × 1			4-branch box × 2		4-branch box × 1 6-branch box × 1		6-branch box × 2
	M, S, P	CITY MULTI	M, S, P	CITY MULTI	M, S, P	CITY MULTI	M, S, P	CITY MULTI	M, S, P	CITY MULTI
PUMY-SM112	Max. 4	Max. 5	Max. 6	Max. 3	Max. 8	Max. 3	Max. 8	Max. 2	Not allowed	
PUMY-SM125	Max. 4	Max. 5	Max. 6	Max. 3	Max. 8	Max. 3	Max. 8	Max. 2		
PUMY-SM140	Max. 4	Max. 5	Max. 6	Max. 3	Max. 8	Max. 3	Max. 8	Max. 2		

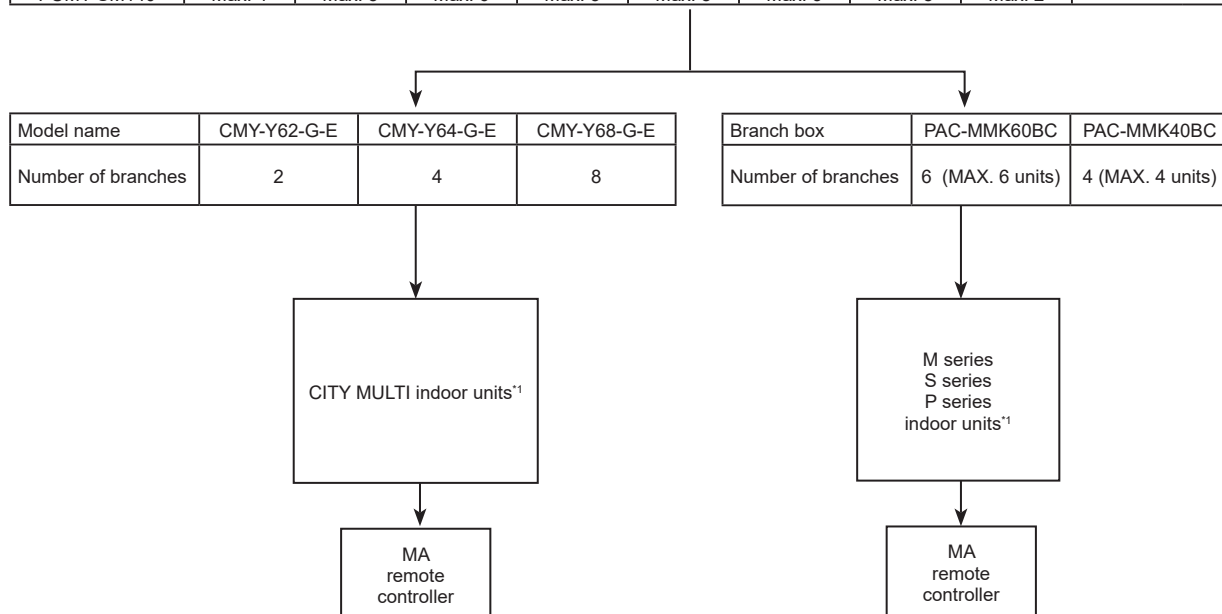

*1. Refer to “System construction” or “System construction (Branch box system)”, for more detail.

3-4. System Specifications

3-4-1. Outdoor Unit


Outdoor unit	Model name	SM112	SM125	SM140
Capacity	Cooling (kW)	12.5	14.0	15.5
	Heating (kW)	14.0	16.0	17.5

Cooling/Heating capacity indicates the maximum value at operation under the following condition.

Cooling Indoor: D.B. 27°C/W.B. 19°C
 Outdoor: D.B. 35°C
 Heating Indoor: D.B. 20°C
 Outdoor: D.B. 7°C/W.B. 6°C

3-4-2. Method for identifying MULTI-S model

■ Outdoor unit <When using model 125>

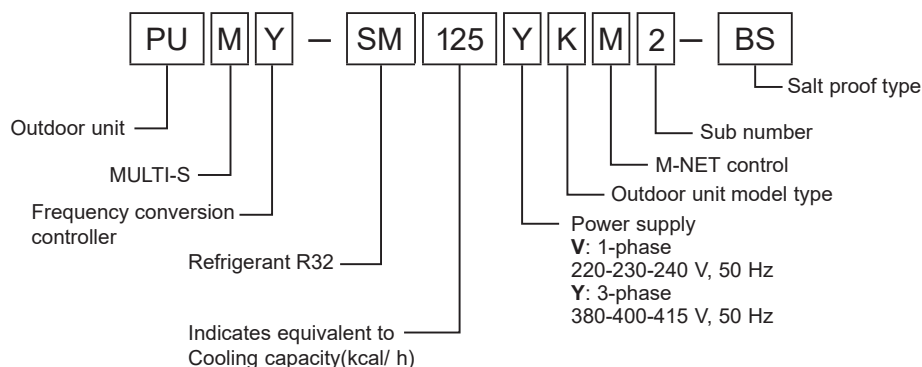

3-4-3. Operating temperature range

	Cooling		Heating	
	Branch box (M,S,P series)	CITY MULTI	Branch box (M,S,P series)	CITY MULTI
Indoor intake air temperature	W.B. 15 to 23°C	W.B. 15 to 24°C	D.B. 20 to 27°C	D.B. 17 to 28°C
Outdoor intake air temperature	D.B. 10 to 52°C	D.B. -15 to 52°C *1, *2	D.B. -20 to 21°C W.B. -20 to 15°C	

*1. This is applied when an optional air guide is attached. The guaranteed lowest temperature is normally -5°C.

*2. A guaranteed outdoor lowest temperature is 15°C when the following indoor units are connected: PKFY-*VLM or PKFY-*VKM.

D.B.: Dry Bulb Temperature

W.B.: Wet Bulb Temperature

4 SPECIFICATIONS

Model				PUMY-SM112VKM2(-BS) PUMY-SM112VKM2-ET(-BS)			PUMY-SM125VKM2(-BS) PUMY-SM125VKM2-ET(-BS)			PUMY-SM140VKM2(-BS) PUMY-SM140VKM2-ET(-BS)				
Power source				1-phase 220-230-240 V, 50 Hz										
Cooling capacity (Nominal) ¹		kW		12.5			14.0			15.5				
		kcal/h		10,750			12,040			13,330				
		Btu/h		42,650			47,768			52,886				
		Power input kW		3.32			4.19			4.81				
		Current input A		15.40	14.73	14.12	19.43	18.59	17.81	22.45	21.47	20.58		
COP		kW/kW		3.76			3.34			3.22				
		Indoor W.B.		15 to 24°C ⁷										
Temp. range of cooling		Outdoor D.B.		-5 to 52°C ³										
Heating capacity (Nominal) ²		kW		14.0			16.0			17.5				
		kcal/h		12,040			13,760			15,050				
		Btu/h		47,768			54,592			59,712				
		Power input kW		3.33			3.73			4.15				
		Current input A		15.45	14.77	14.16	17.30	16.55	15.86	19.25	18.41	17.64		
COP		kW/kW		4.20			4.28			4.21				
		Indoor D.B.		17 to 28°C ⁸										
Temp. range of heating		Outdoor W.B.		-20 to 15°C										
Indoor unit connectable		Total capacity		50 to 130% of outdoor unit capacity										
		Model/ Quantity		CITY MULTI		M/MS10 - M/MS140/12								
				Branch box ⁴		M/S/P15 - M/S/P100/8								
				Mixed system		4-branch box 1 unit		CITY MULTI		M/MS10-M/MS140/5				
						Branch box		M/S/P15-M/S/P100/4						
				6-branch box 1 unit		CITY MULTI		M/MS10-M/MS140/3						
				Branch box		M/S/P15-M/S/P100/6								
				4-branch box 2 unit		CITY MULTI		M/MS10-M/MS140/3						
				Branch box		M/S/P15-M/S/P100/8								
				4-branch box 1 unit + 6-branch box 1 unit		CITY MULTI		M/MS10-M/MS140/2						
Branch box		M/S/P15-M/S/P100/8												
Sound pressure level (SPL) (measured in anechoic room)		dB		Cooling		52			53			54		
				Heating		54			56			56		
Sound power level (PWL) (measured in anechoic room)		dB		Cooling		72			73			74		
				Heating		74			76			76		
Refrigerant piping diameter		Liquid pipe mm (in.)		9.52 (3/8)										
		Gas pipe mm (in.)		15.88 (5/8)										
Fan		Type × Quantity		Propeller Fan x 1										
		Airflow rate		m ³ /min		77/75			81/83			81/83		
				L/s		1,283/1,250			1,350/1,383			1,350/1,383		
				cfm		2,719/2,648			2,860/2,931			2,860/2,931		
		Control, Driving mechanism		DC control										
		Motor output kW		0.20 × 1										
External static press.		0 Pa/30 Pa ⁵												
Compressor		Type × Quantity		Twin rotary hermetic compressor x 1										
		Manufacturer		Mitsubishi Electric Corporation										
		Starting method		Inverter										
		Capacity control %		Cooling		27 to 100			24 to 100			20 to 100		
				Heating		16 to 100			15 to 100			14 to 100		
		Motor output kW		3.0			3.3			3.6				
		Case heater kW		0										
Lubricant		FW68CA (1.4 liter)												
External finish				Galvanized Steel Sheet Munsell No. 3Y 7.8/1.1										
External dimension H × W × D		mm		981 × 1,050 × 330 (+40)										
		in.		38-5/8 × 41-3/8 × 13 (+1-37/64)										
Protection devices		High pressure protection		High pressure switch										
		Inverter circuit (COMP/FAN)		Overcurrent detection, Overheat detection (Heat sink thermistor)										
		Compressor		Compressor thermistor, Overcurrent detection										
		Fan motor		Overheating, Voltage protection,										
Refrigerant		Type × original charge		R32 3.0 kg										
		Control		Linear expansion valve										
Net weight		kg (lb)		94 (208) ⁶										
Heat exchanger				Cross Fin and Copper tube										
HIC circuit (HIC: Heat Inter-Changer)				HIC circuit										
Defrosting method				Reversed refrigerant circuit										
Standard attachment		Document		Installation Manual										
		Accessory		Grounded lead wire, Muffler, Joint pipe-L										
Optional parts				Joint: CMY-Y62-G-E, Header: CMY-Y64/68-G-E										

Remarks

- Nominal cooling conditions:
Indoor: 27°C D.B./19°C W.B. [81°F D.B./66°F W.B.]
Outdoor: 35°C D.B. [95°F D.B.]
Pipe length: 7.5 m [24-9/16 ft]
Level difference: 0 m [0 ft]
- Nominal heating conditions:
Indoor: 20°C D.B. [68°F D.B.]
Outdoor: 7°C DB/6°C W.B. [45°F D.B./43°F W.B.]
Pipe length: 7.5 m [24-9/16 ft]
Level difference: 0 m [0 ft]
- 15 to 52°C D.B. [50 to 126°F D.B.] when using an optional air protect guide [PAC-SH95AG-E]
10 to 52°C D.B. when the following indoor units are connected: M/S/P series type indoor unit
15 to 52°C D.B. when the following indoor units are connected: PKFY*VLM or PKFY*VKM
- At least two indoor units must be connected when using branch box.
- It is possible to set the external static pressure to 30 Pa by Dip Switch.
- 95 (210), for PUMY-SM112/125/140VKM2-BS.TH
- 15 to 23°C W.B. [59 to 73°F W.B.] when using branch box (M/S/P series)
- 20 to 27°C D.B. [68 to 81°F W.B.] when using branch box (M/S/P series)

Notes:

- Nominal conditions *1, *2 are subject to ISO 15042.
- Due to continuing improvement, above specifications are subject to change without notice.
- See the following for unit conversion: kcal/h = kW × 860, Btu/h = kW × 3,412, cfm = m³/min × 35.31, lb = kg/0.4536
- Above specification data is subject to rounding variation.

Model			PUMY-SM112YKM2(-BS) PUMY-SM112YKM2-ET(-BS)			PUMY-SM125YKM2(-BS) PUMY-SM125YKM2-ET(-BS)			PUMY-SM140YKM2(-BS) PUMY-SM140YKM2-ET(-BS)			
Power source			3-phase 380-400-415 V, 50 Hz									
Cooling capacity (Nominal) ^{*1}		kW	12.5			14.0			15.5			
		kcal/h	10,750			12,040			13,330			
		Btu/h	42,650			47,768			52,886			
	Power input	kW	3.32			4.19			4.81			
	Current input	A	5.31	5.04	4.86	6.70	6.37	6.14	7.74	7.35	7.09	
	COP	kW/kW	3.76			3.34			3.22			
Temp. range of cooling	Indoor	W.B.	15 to 24°C ^{*7}									
	Outdoor	D.B.	-5 to 52°C ^{*3}									
Heating capacity (Nominal) ^{*2}		kW	14.0			16.0			17.5			
		kcal/h	12,040			13,760			15,050			
		Btu/h	47,768			54,592			59,712			
	Power input	kW	3.33			3.73			4.15			
	Current input	A	5.33	5.06	4.88	5.97	5.67	5.46	6.64	6.31	6.08	
	COP	kW/kW	4.20			4.28			4.21			
Temp. range of heating	Indoor	D.B.	17 to 28°C ^{*8}									
	Outdoor	W.B.	-20 to 15°C									
Indoor unit connectable	Total capacity			50 to 130% of outdoor unit capacity								
	Model/ Quantity	CITY MULTI	M/MS10 - M/MS140/12									
		Branch box ^{*4}	M/S/P15 - M/S/P100/8									
		Mixed system	4-branch box 1 unit	CITY MULTI	M/MS10-M/MS140/5							
				Branch box	M/S/P15-M/S/P100/4							
		6-branch box 1 unit	CITY MULTI	M/MS10-M/MS140/3								
			Branch box	M/S/P15-M/S/P100/6								
		4-branch box 2 unit	CITY MULTI	M/MS10-M/MS140/3								
			Branch box	M/S/P15-M/S/P100/8								
		4-branch box 1 unit + 6-branch box 1 unit	CITY MULTI	M/MS10-M/MS140/2								
	Branch box	M/S/P15-M/S/P100/8										
Sound pressure level (SPL) (measured in anechoic room)	dB	Cooling	52			53			54			
		Heating	54			56			56			
Sound power level (PWL) (measured in anechoic room)	dB	Cooling	72			73			74			
		Heating	74			76			76			
Refrigerant piping diameter	Liquid pipe	mm (in.)	9.52 (3/8)									
	Gas pipe	mm (in.)	15.88 (5/8)									
Fan	Type × Quantity		Propeller Fan x 1									
	Airflow rate	m³/min	77/75			81/83			81/83			
		L/s	1,283/1,250			1,350/1,383			1,350/1,383			
		cfm	2,719/2,648			2,860/2,931			2,860/2,931			
	Control, Driving mechanism		DC control									
	Motor output	kW	0.20 × 1									
	External static press.		0 Pa/30 Pa ^{*5}									
Compressor	Type × Quantity		Twin rotary hermetic compressor x 1									
	Manufacturer		Mitsubishi Electric Corporation									
	Starting method		Inverter									
	Capacity control	%	Cooling	27 to 100			24 to 100			20 to 100		
			Heating	16 to 100			15 to 100			14 to 100		
	Motor output	kW	3.0			3.3			3.6			
	Case heater	kW	0									
	Lubricant		FW68CA (1.4 liter)									
External finish		Galvanized Steel Sheet Munsell No. 3Y 7.8/1.1										
External dimension H × W × D	mm	981 × 1,050 × 330 (+40)										
		in	38-5/8 × 41-3/8 × 13 (+1-37/64)									
Protection devices	High pressure protection		High pressure switch									
	Inverter circuit (COMP./FAN)		Overcurrent detection, Overheat detection (Heat sink thermistor)									
	Compressor		Compressor thermistor, Overcurrent detection									
	Fan motor		Overheating, Voltage protection,									
Refrigerant	Type × original charge		R32 3.0 kg									
	Control		Linear expansion valve									
Net weight	kg (lb)		95 (210) ^{*6}									
Heat exchanger			Cross Fin and Copper tube									
HIC circuit (HIC: Heat Inter-Changer)			HIC circuit									
Defrosting method			Reversed refrigerant circuit									
Standard attachment	Document		Installation Manual									
	Accessory		Grounded lead wire, Muffler, Joint pipe-L									
Optional parts			Joint: CMY-Y62-G-E, Header: CMY-Y64/68-G-E									

Remarks

- *1. Nominal cooling conditions:
Indoor: 27°C D.B./19°C W.B. [81°F D.B./66°F W.B.]
Outdoor: 35°C D.B. [95°F D.B.]
Pipe length: 7.5 m [24-9/16 ft]
Level difference: 0 m [0 ft]
- *2. Nominal heating conditions:
Indoor: 20°C D.B. [68°F D.B.]
Outdoor: 7°C DB/6°C W.B. [45°F D.B./43°F W.B.]
Pipe length: 7.5 m [24-9/16 ft]
Level difference: 0 m [0 ft]
- *3. -15 to 52°C D.B. [50 to 126°F D.B.], when using an optional air protect guide [PAC-SH95AG-E]
10 to 52°C D.B. when the following indoor units are connected: M/S/P series type indoor unit
15 to 52°C D.B. when the following indoor units are connected: PKFY*VLM or PKFY*VKM
- *4. At least two indoor units must be connected when using branch box.
- *5. It is possible to set the external static pressure to 30 Pa by Dip Switch.
- *6. 96 (212), for PUMY-SM112/125/140YKM2-BS.TH
- *7. 15 to 23°C W.B. [59 to 73°F W.B.] when using branch box (M/S/P series)
- *8. 20 to 27°C D.B. [68 to 81°F W.B.] when using branch box (M/S/P series)

Notes:

- Nominal conditions *1, *2 are subject to ISO 15042.
- Due to continuing improvement, above specifications are subject to change without notice.
- See the following for unit conversion: kcal/h = kW × 860, Btu/h = kW × 3,412, cfm = m³/min × 35.31, lb = kg/0.4536
Above specification data is subject to rounding variation.

5-1. Selection of indoor and outdoor units

5-1-1. Cooling

Design condition		
Outdoor dry bulb temperature		45°C
Total cooling load		10.6 kW
Room 1	Indoor dry bulb temperature	27°C
	Indoor wet bulb temperature	20°C
	Cooling load	4.6 kW
Room 2	Indoor dry bulb temperature	24°C
	Indoor wet bulb temperature	18°C
	Cooling load	6.0 kW
Other	Indoor/Outdoor piping equivalent length	60 m

Capacity of indoor unit

P-FY series	Model class of indoor unit	10	15	—	20	—	25	32	—	40	—	50	—	63	71	80	100	125	140
	Model capacity (kW)	1.2	1.7	—	2.2	—	2.8	3.6	—	4.5	—	5.6	—	7.1	8.0	9.0	11.2	14.0	16.0
M series	Model class of indoor unit	—	15	18	20	22	25	—	35	—	42	50	60	—	71	—	100	—	—
S series	Model capacity (kW)	—	1.5	1.8	2.0	2.2	2.5	—	3.5	—	4.2	5.0	6.0	—	7.1	—	10.0	—	—
P series	Model capacity (kW)	—	1.5	1.8	2.0	2.2	2.5	—	3.5	—	4.2	5.0	6.0	—	7.1	—	10.0	—	—

■ Cooling calculation

- Tentative selection of indoor units

Room1: PEFY-MS50 5.6 kW (Rated)

Room2: PEFY-MS71 8.0 kW (Rated)

In this case, the total capacity is 13.6. (5.6 + 8.0 = 13.6)

- Tentative selection of outdoor unit

Proper outdoor unit in this case is SM125 as the total capacity of the indoor units is 13.6.

PUMY-SM125 14.0 kW (Rated)

- Calculation for the corrected capacity of the total indoor units (CTi)

Correction factor for indoor design wet bulb temperature: Room 1 (20°C) 1.03 (Refer to Figure 1.)

Room 2 (18°C) 0.94 (Refer to Figure 1.)

CTi = Σ (Rated capacity of indoor unit × Correction factor for indoor temperature)

$$= 5.6 \times 1.03 + 8.0 \times 0.94$$

$$= 13.3 \text{ kW}$$

- Calculation for the corrected capacity of the outdoor unit (CTo)

Correction factor for outdoor temperature (45°C)

0.86 (Refer to Figure 2.)

Correction factor for piping length (60 m)

0.90 (Refer to Figure 2.)

CTo = Rated capacity of outdoor unit × Correction factor for outdoor temperature × Correction factor for piping length

$$= 14.0 \times 0.86 \times 0.90$$

$$= 10.8 \text{ kW}$$

- Determination of maximum system capacity (CTx)

Comparison between CTi and CTo:

CTi = 13.3 > CTo = 10.8, thus, select CTo.

CTx = CTo = 10.8 kW

- Comparison with essential load

Against the essential load 10.6 kW, the maximum system capacity is 10.8 kW: A proper outdoor unit is selected.

- Calculation for the maximum indoor unit capacity of each room

When CTx = CTo, use the calculation formula below.

Room1: CTx × Corrected capacity for Room1/CTi

$$= 10.8 \times (5.6 \times 1.03) / 13.3$$

$$= 4.7 \text{ kW}$$

The capacity is enough for the cooling load of Room 1 (4.6 kW): A proper indoor unit is selected.

Room2: CTx × Corrected capacity for Room2/CTi

$$= 10.8 \times (8.0 \times 0.94) / 13.3$$

$$= 6.1 \text{ kW}$$

The capacity is enough for the cooling load of Room 2 (6.0 kW): A proper indoor unit is selected.

Note:

- If CTx = CTi, refer to the calculation formula in "Heating" to calculate the maximum indoor unit capacity of each room.
- Go on to the selection of units for heating after the selection for cooling has successfully completed. If failed, try again until proper units are selected.

5-1-2. Heating

Design condition		
Outdoor wet bulb temperature		2°C
Total heating load		13.2 kW
Room 1	Indoor dry bulb temperature	23°C
	Heating load	5.4 kW
Room 2	Indoor dry bulb temperature	23°C
	Heating load	7.8 kW
Other	Indoor/Outdoor piping equivalent length	60 m

Capacity of indoor unit

P-FY series	Model class of indoor unit	10	15	—	20	—	25	32	—	40	—	50	—	63	71	80	100	125	140
	Model Capacity (kW)	1.4	1.9	—	2.5	—	3.2	4.0	—	5.0	—	6.3	—	8.0	9.0	10.0	12.5	16.0	18.0
M series S series P series	Model class of indoor unit	—	15	18	20	22	25	—	35	—	42	50	60	—	71	—	100	—	—
	Model Capacity (kW)	—	1.7	2.1	2.3	2.5	2.9	—	4.0	—	4.8	5.7	6.9	—	8.1	—	11.2	—	—

■ Heating calculation

- Tentative selection of indoor units
 Room1: PEFY-MS50 6.3 kW.(Rated)
 Room2: PEFY-MS71 9.0 kW.(Rated)
 In this case, the total capacity is 15.3. (6.3 + 9.0 = 15.3)
- Tentative selection of outdoor unit
 Proper outdoor unit in this case is SM125 as the total capacity of the indoor units is 15.3.
 PUMY-SM125 16.0 kW
- Calculation for the corrected capacity of the total indoor units (CTi)
 Correction factor for indoor temperature: Room 1 (23°C) 0.88 (Refer to Figure 3.)
 Room 2 (23°C) 0.88 (Refer to Figure 3.)

$$CTi = \Sigma (\text{Rated capacity of indoor unit} \times \text{Correction factor for indoor temperature})$$

$$= 6.3 \times 0.88 + 9.0 \times 0.88$$

$$= 13.5 \text{ kW}$$
- Calculation for the corrected capacity of the outdoor unit (CTo)
 Correction factor for outdoor temperature (2°C WB) 1.00 (Refer to Figure 4.)
 Correction factor for piping length (60 m) 0.96 (Refer to "Correcting Capacity".)
 Correction factor for defrosting 0.83 (Refer to Table 1.)

$$CTo = \text{Rated capacity of outdoor unit} \times \text{Correction factor for outdoor temperature} \times \text{Correction factor for piping length} \times$$

$$\text{Correction factor for defrosting}$$

$$= 16.0 \times 1.00 \times 0.96 \times 0.83$$

$$= 12.8 \text{ kW}$$

Table 1 Table of correction factor for frosting and defrosting

Outdoor inlet air temp. (°C)	6	4	2	0	-2	-4	-6	-8	-10	-15	-20
Correction factor	1.00	0.91	0.83	0.82	0.83	0.84	0.89	0.89	0.89	0.89	0.89

- Determination of maximum system capacity (CTx)
Comparison between CTi and CTo:
 $CT_i = 13.5 < C_{To} = 13.7$, thus, select CTi.
 $CT_x = CT_i = 13.5 \text{ kW}$
- Comparison with essential load
Against the essential load 13.2 kW, the maximum system capacity is 13.5 kW: Proper indoor units have been selected.
- Calculation for the maximum indoor unit capacity of each room
When $CT_x = CT_i$, use the calculation formula below.
Room1: Rated capacity of Indoor unit $\times$ Correction factor for indoor temperature

$$= 6.3 \times 0.88$$

$$= 5.5 \text{ kW}$$
The capacity is enough for the heating load of Room 1 (5.4 kW): A proper indoor unit is selected.
Room2: Rated capacity of indoor unit $\times$ Corrected capacity for the indoor design temperature

$$= 9.0 \times 0.88$$

$$= 7.9 \text{ kW}$$
The capacity is enough for the heating load of Room 2 (7.8 kW): A proper indoor unit is selected.


Note:

- If $CT_x = C_{To}$, refer to the calculation formula in "Cooling" to calculate the maximum indoor unit capacity of each room.
- The selection of units is completed when proper units are selected.


5-2. Correction by temperature

The outdoor units have varied capacity at different designing temperature. With the nominal cooling/heating capacity value and the ratio below, the capacity can be observed at various temperature.

5-2-1. Cooling

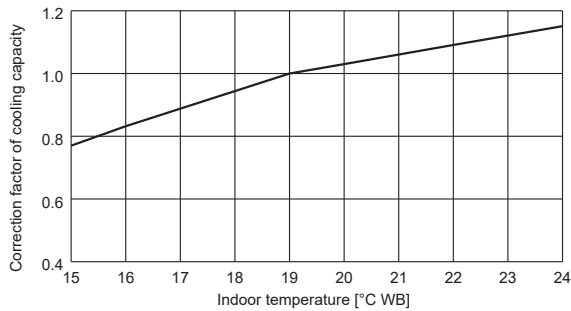


<Figure 1> Indoor unit temperature correction

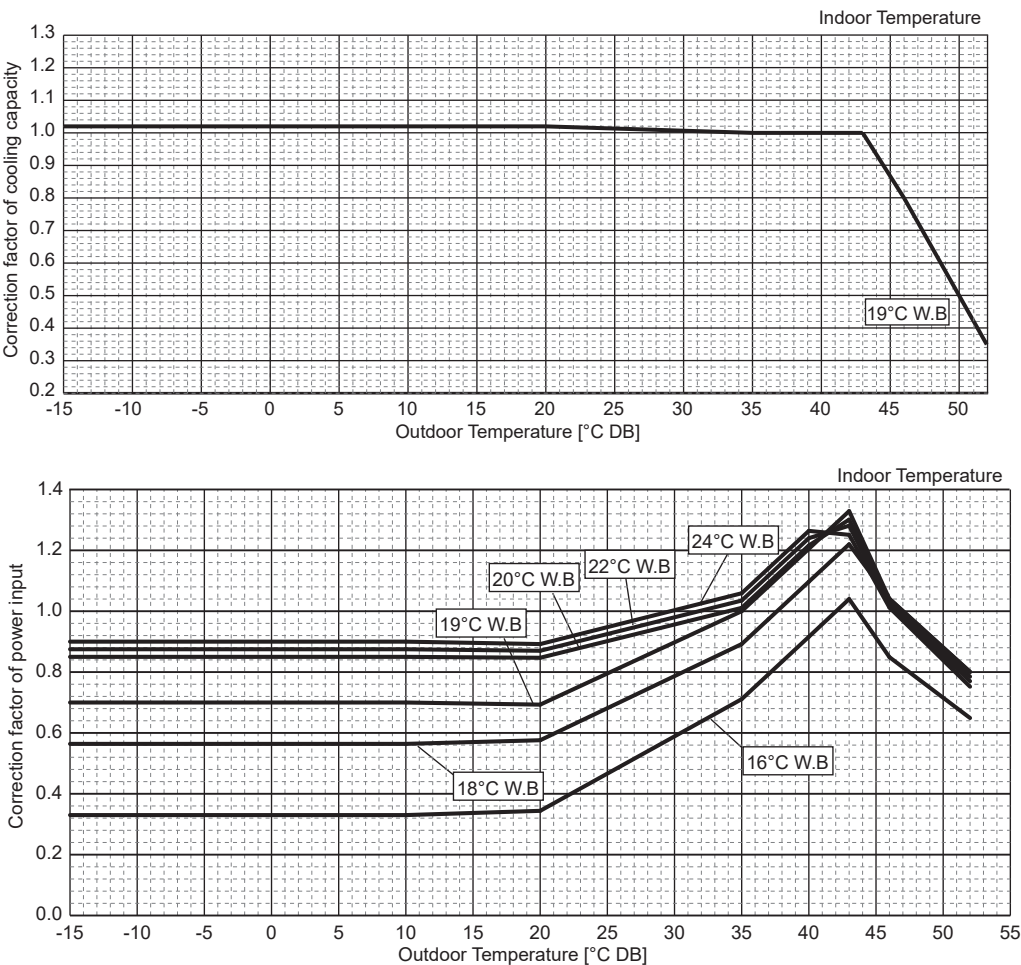


<Figure 2> Outdoor unit temperature correction

5-2-2. Heating

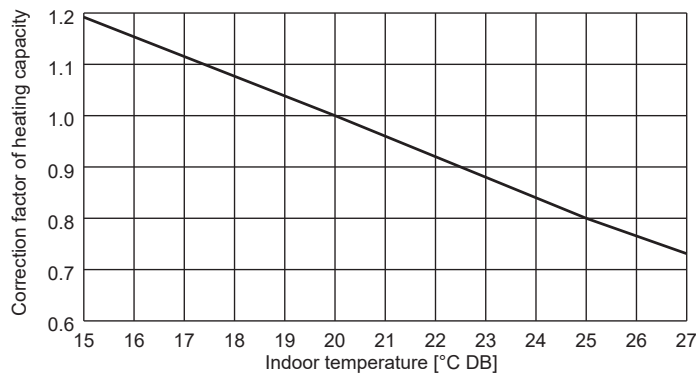

<Figure 3> Indoor unit temperature correction

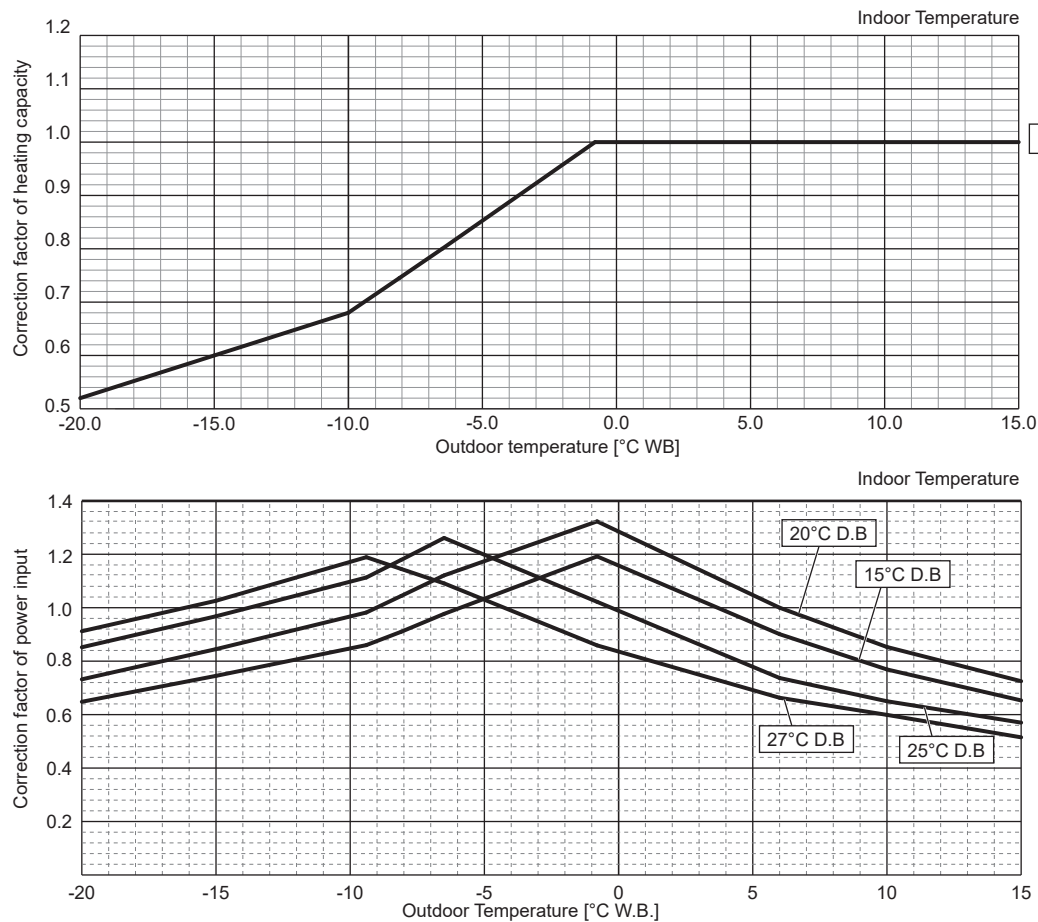

<Figure 4> Outdoor unit temperature correction

5-3. Standard operation data (Reference data)





Operation				SM112		SM125		SM140	
Operating conditions	Ambient temperature	Indoor	DB/ WB	27°C/19°C	20°C/—	27°C/19°C	20°C/—	27°C/19°C	20°C/—
	Outdoor	Outdoor		35°C	7°C/6°C	35°C	7°C/6°C	35°C	7°C/6°C
	Indoor unit	No. of connected units	Unit	2		2		2	
		No. of units in operation		2		2		2	
		Model	—	50 × 1/63 × 1		50 × 1/71 × 1		71 × 2	
	Piping	Main pipe	m	5		5		5	
		Branch pipe		2.5		2.5		2.5	
		Total pipe length		10		10		10	
	Fan speed		—	Hi		Hi		Hi	
	Amount of refrigerant		kg	4.8		4.8		4.8	
Outdoor unit	Electric current		A	VKM 15.40 YKM 5.31	VKM 15.45 YKM 5.33	VKM 19.43 YKM 6.70	VKM 17.30 YKM 5.97	VKM 22.45 YKM 7.74	VKM 19.25 YKM 6.64
	Voltage		V	VKM 230 YKM 400		VKM 230 YKM 400		VKM 230 YKM 400	
	Compressor frequency		Hz	55	67	63	73	72	81
LEV opening	Indoor unit		Pulse	247	462	209	301	200	278
Pressure	High pressure/Low pressure		MPaG	2.90/1.00	2.30/0.70	2.93/0.97	2.31/0.63	3.12/0.92	2.17/0.60
Temp. of each section	Outdoor unit	Discharge	°C	80.6	58.1	81.4	59.7	82.2	60.2
		Heat exchanger outlet		40.7	1.3	38.4	0.2	43.3	-0.4
		Accumulator inlet		9.8	-0.1	11.3	0.0	9.3	-1.6
		Compressor inlet		10.4	-0.6	9.3	-3.4	8.6	-2.1
	Indoor unit	LEV inlet		32.4	34.0	33.3	31.7	34.2	28.4
		Heat exchanger inlet		12.8	49.2	14.0	49.2	14.4	50.4

5-4. Standard capacity diagram





Before calculating the sum of total capacity of indoor units, please convert the value into the kW model capacity following the formula on "5-1. Selection of indoor and outdoor units".

PUMY-SM112

■ Cooling

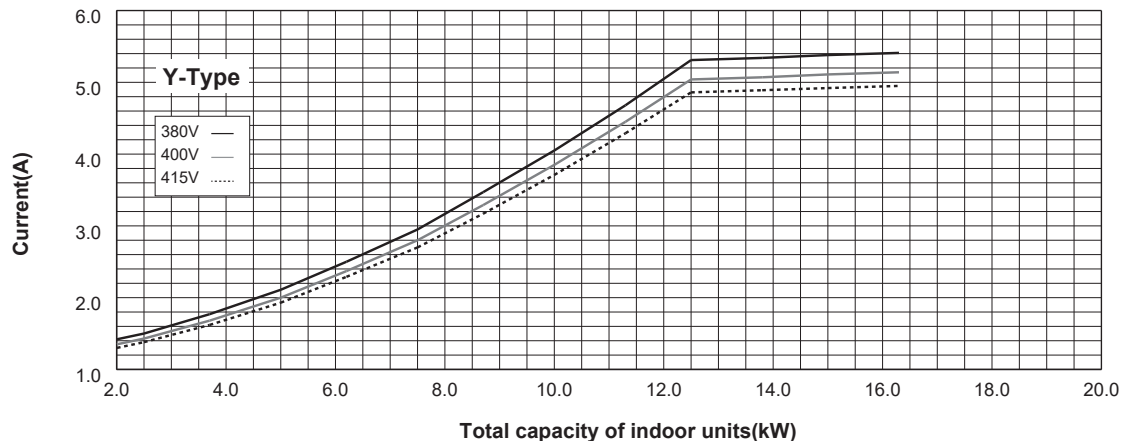
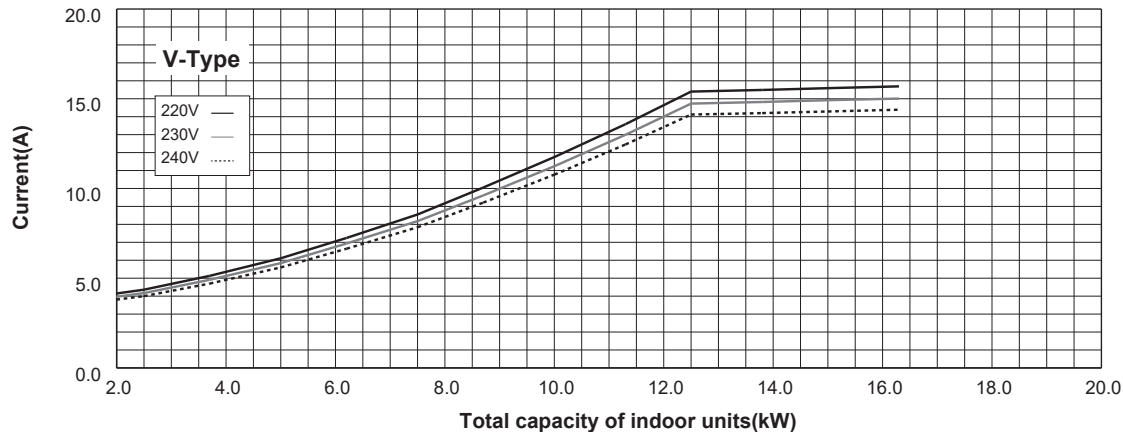
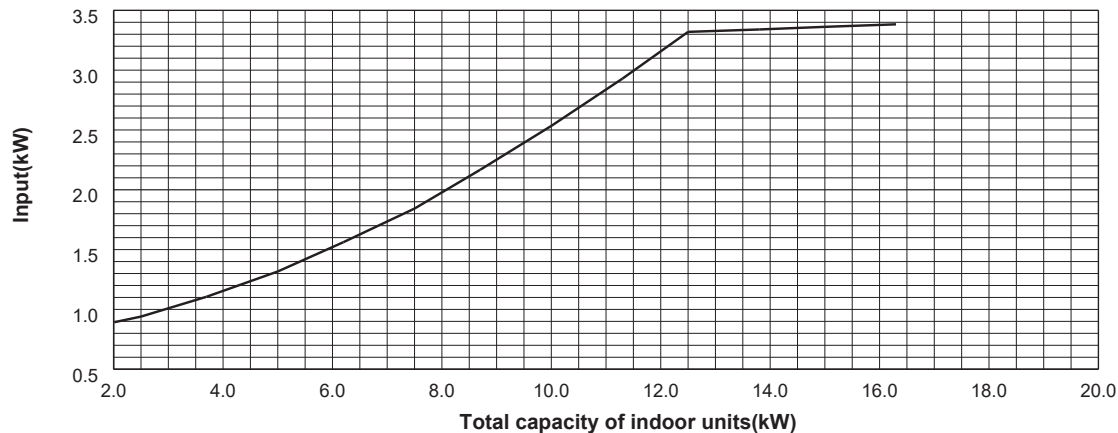
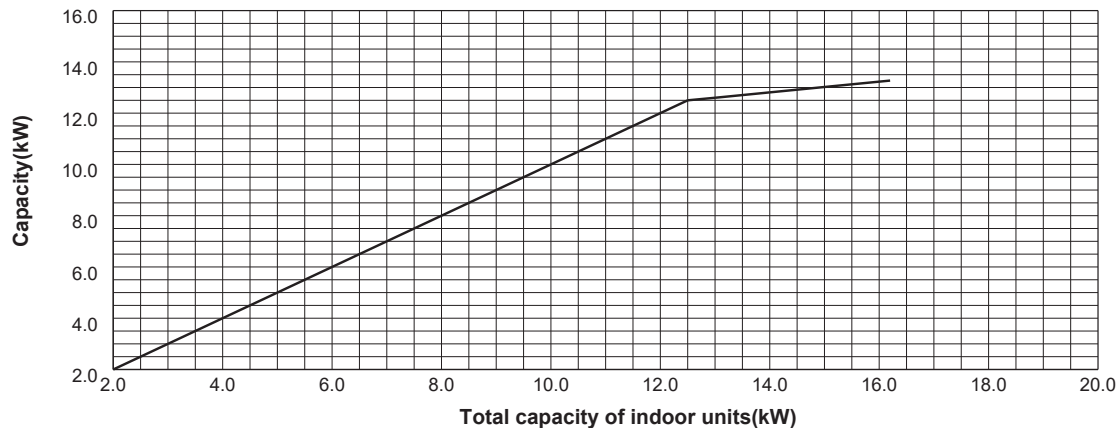


■ Heating

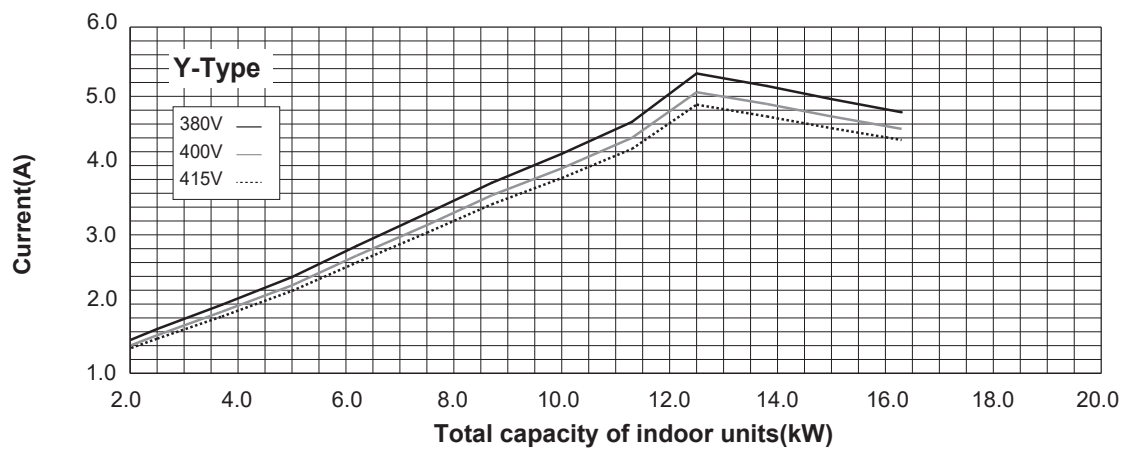
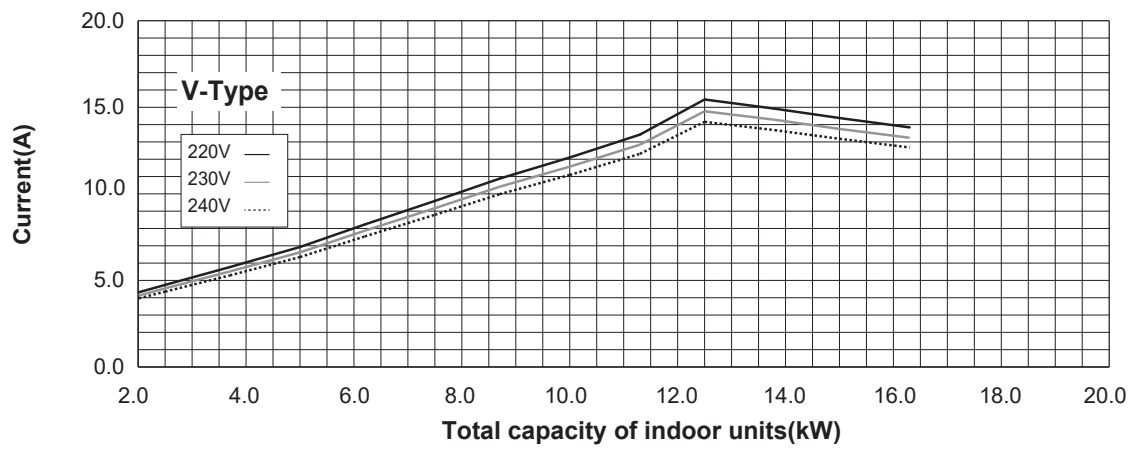
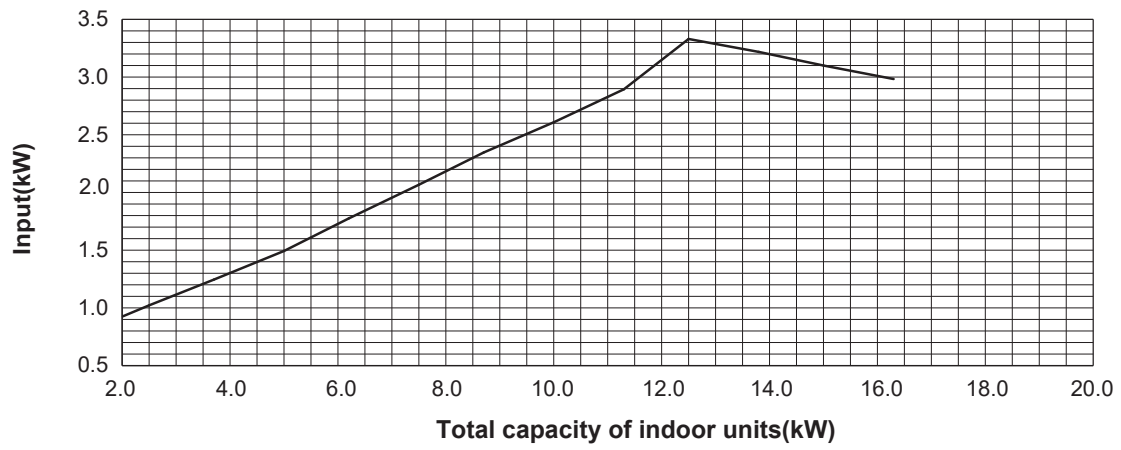
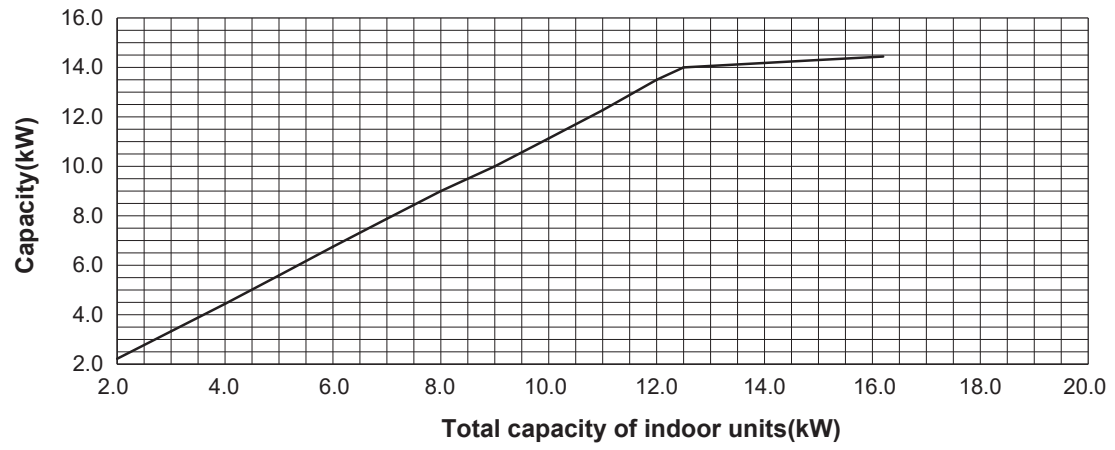


PUMY-SM125

■ Cooling

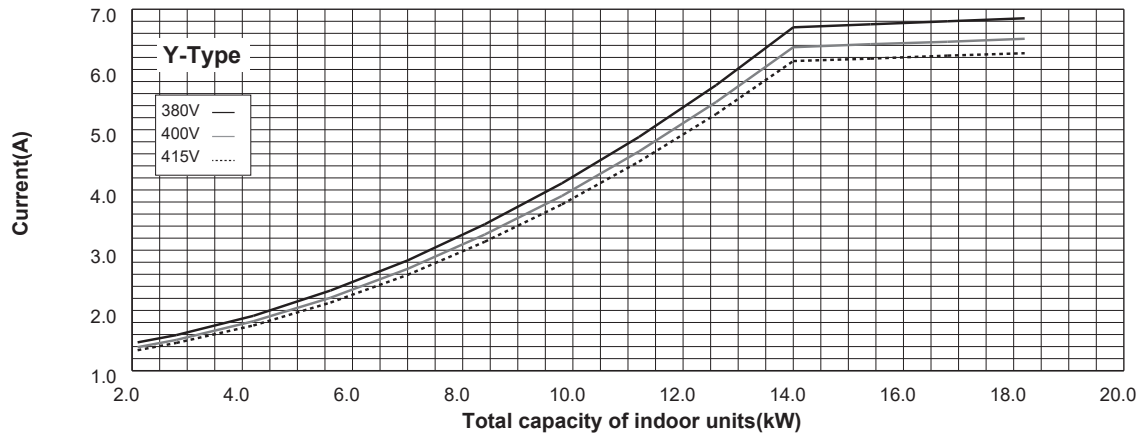
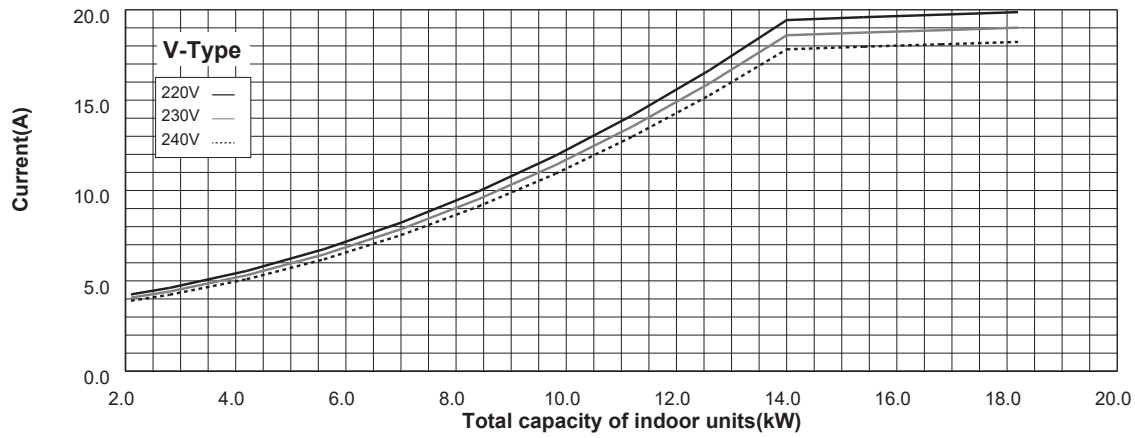
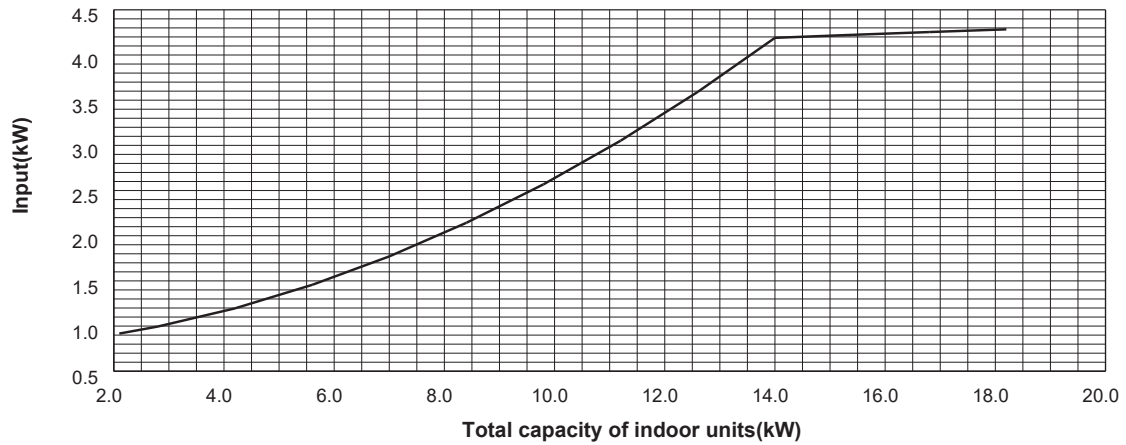
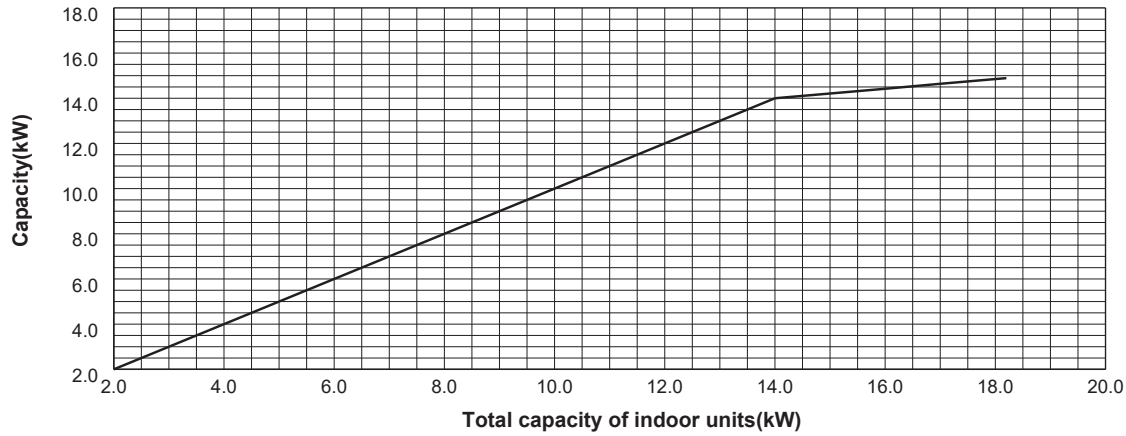


■ Heating

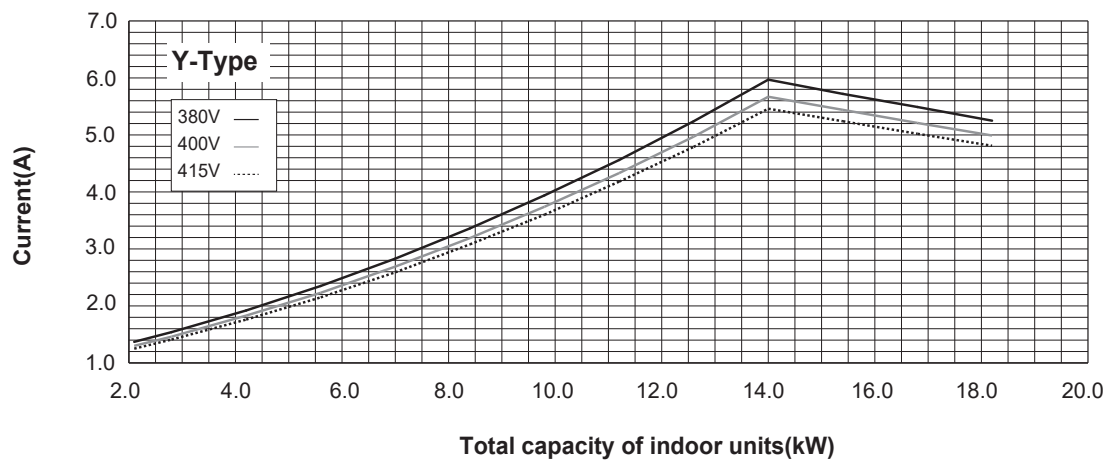
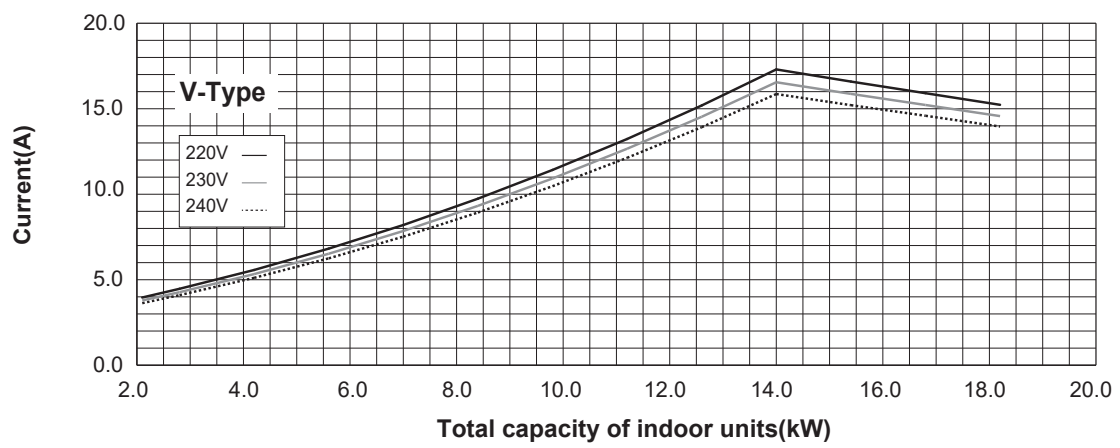
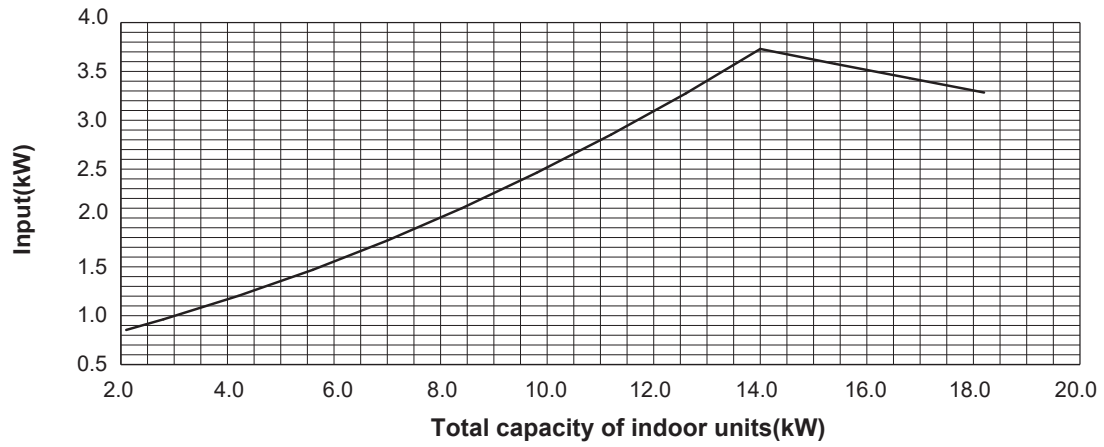
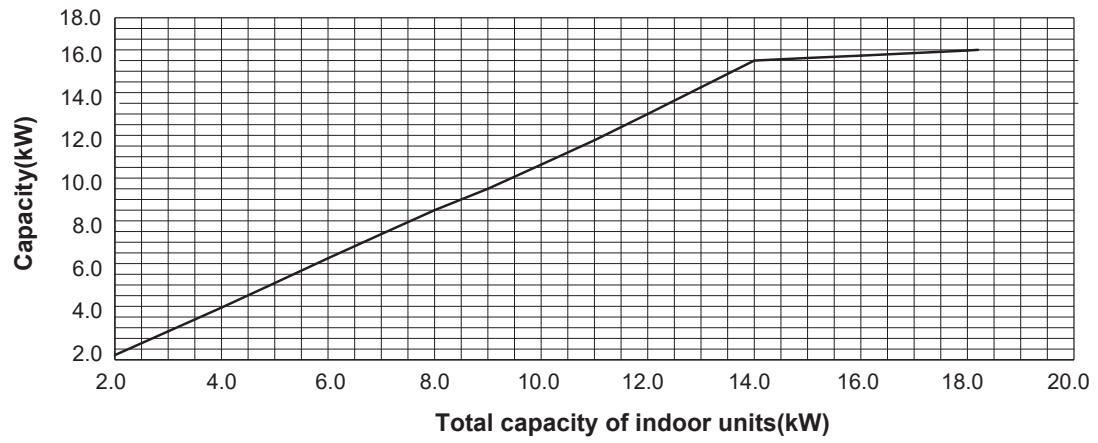


PUMY-SM140

■ Cooling

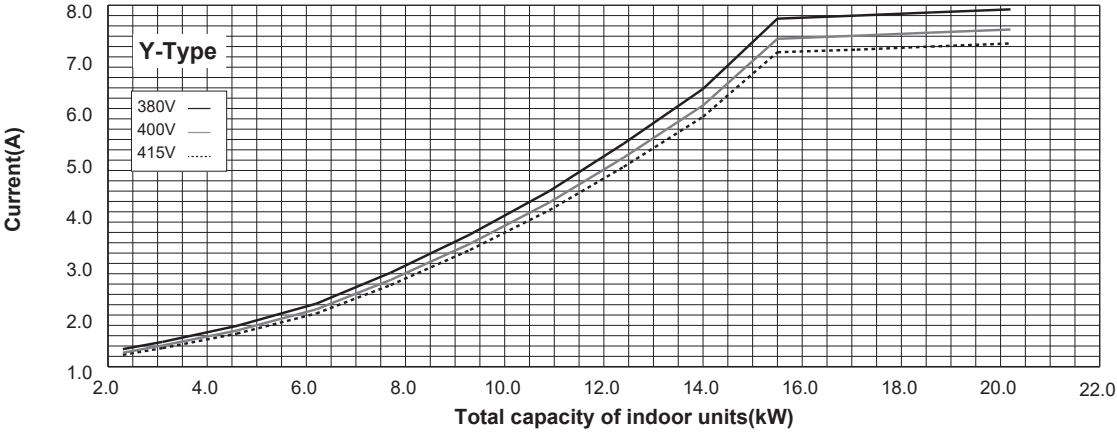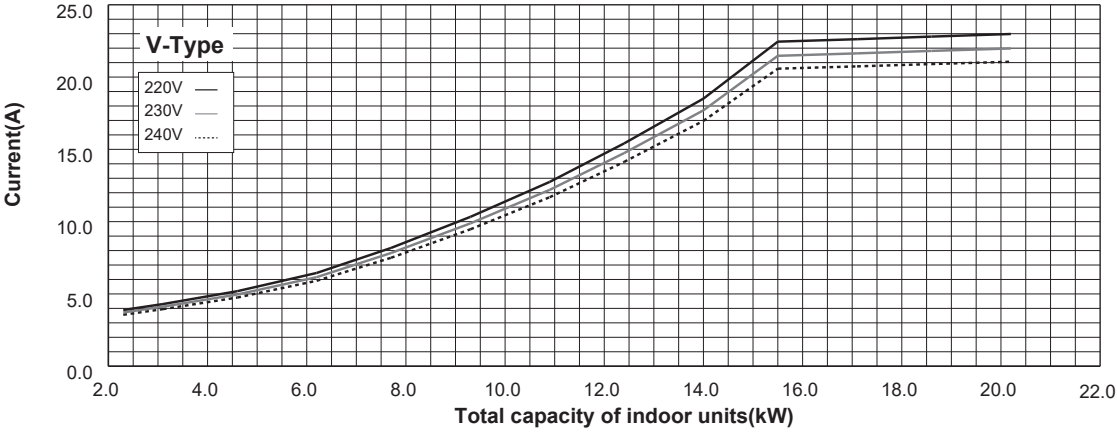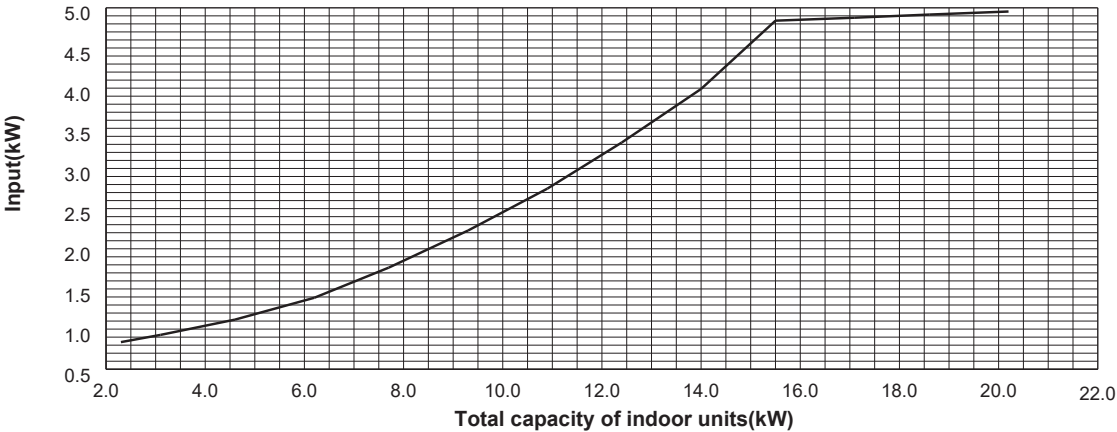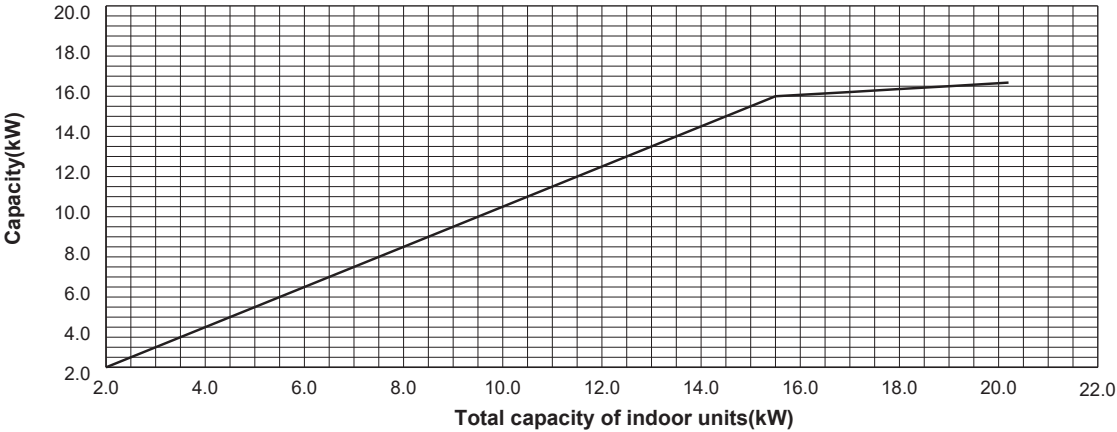

■ Heating

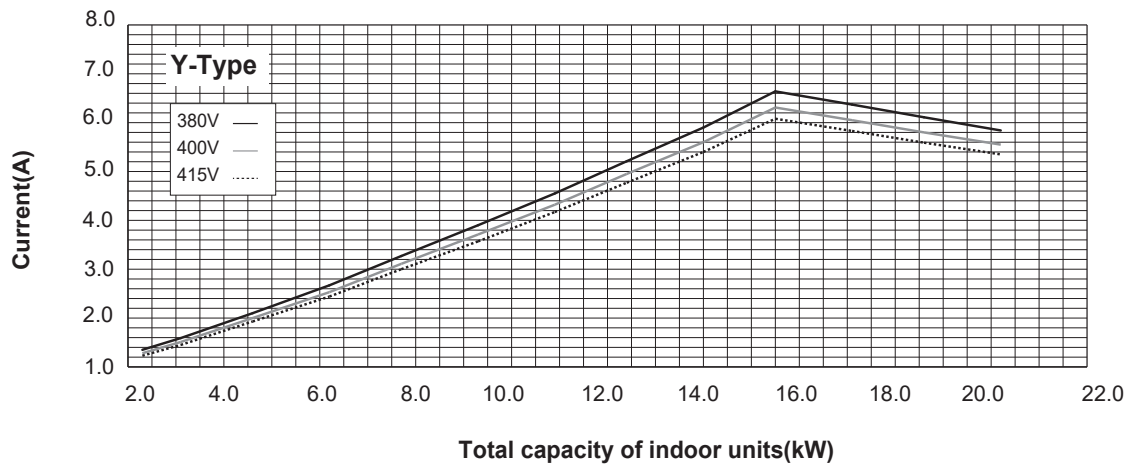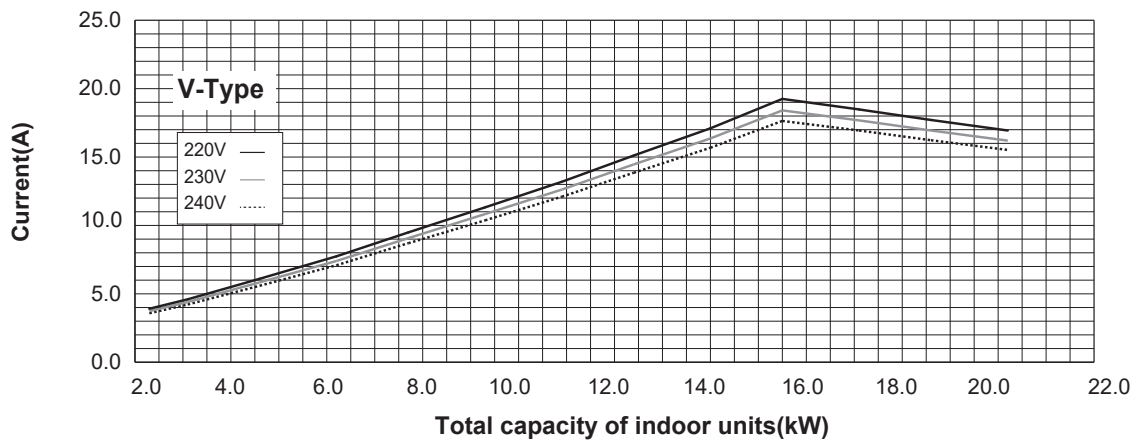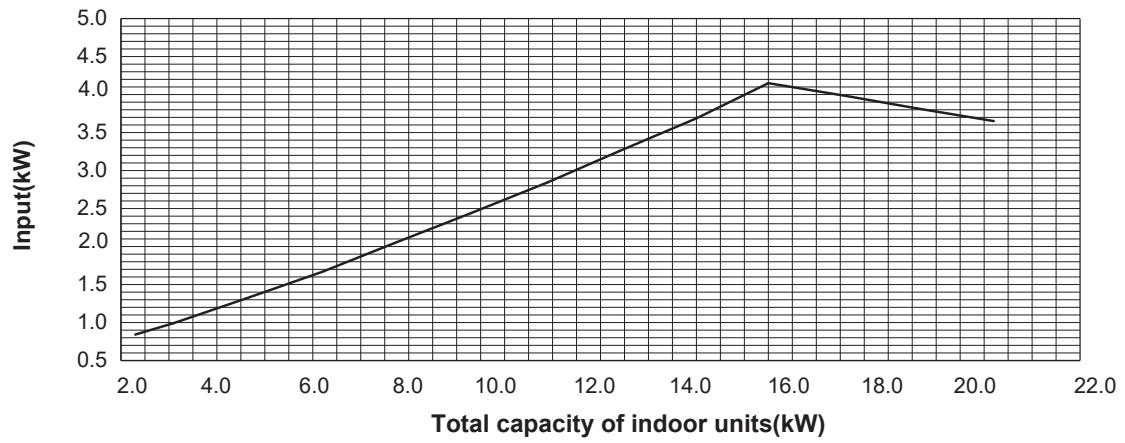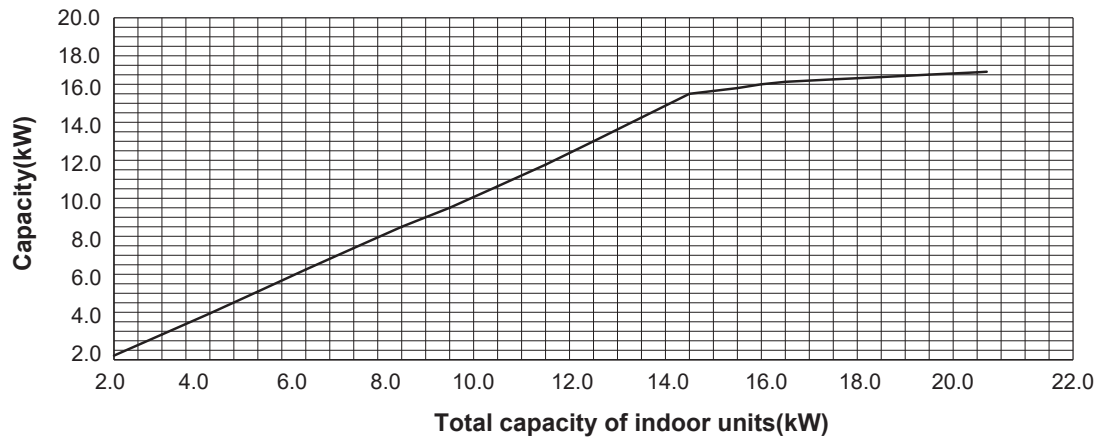


5-5. Correcting capacity for changes in the length of refrigerant piping

During cooling, obtain the ratio (and the piping equivalent length) of the outdoor units rated capacity and the total in-use indoor capacity, and find the capacity ratio corresponding to the standard piping length from Figure 5 to 7. Then multiply by the cooling capacity from Figure 1 and 2 in "5-2. Correction by temperature" to obtain the actual capacity. During heating, find the piping equivalent length, and find the capacity ratio corresponding to standard piping length from Figure 8. Then multiply by the heating capacity from Figure 3 and 4 in "5-2. Correction by temperature" to obtain the actual capacity.

■ Capacity Correction Curve


5-5-1. Cooling

PUMY-SM112

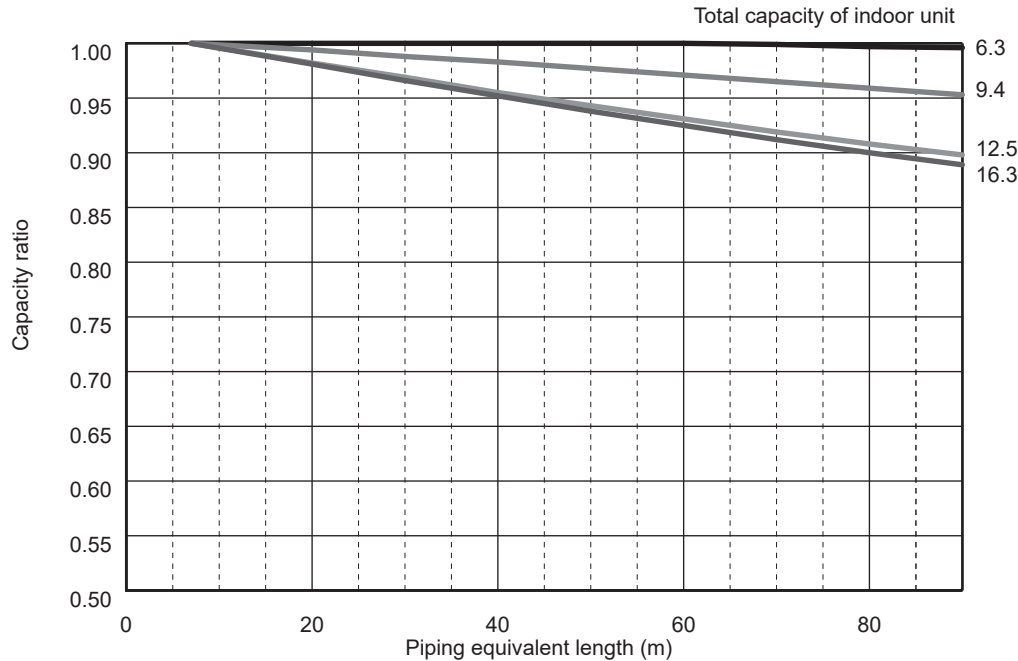


<Figure 5> Correction of refrigerant piping length

PUMY-SM125

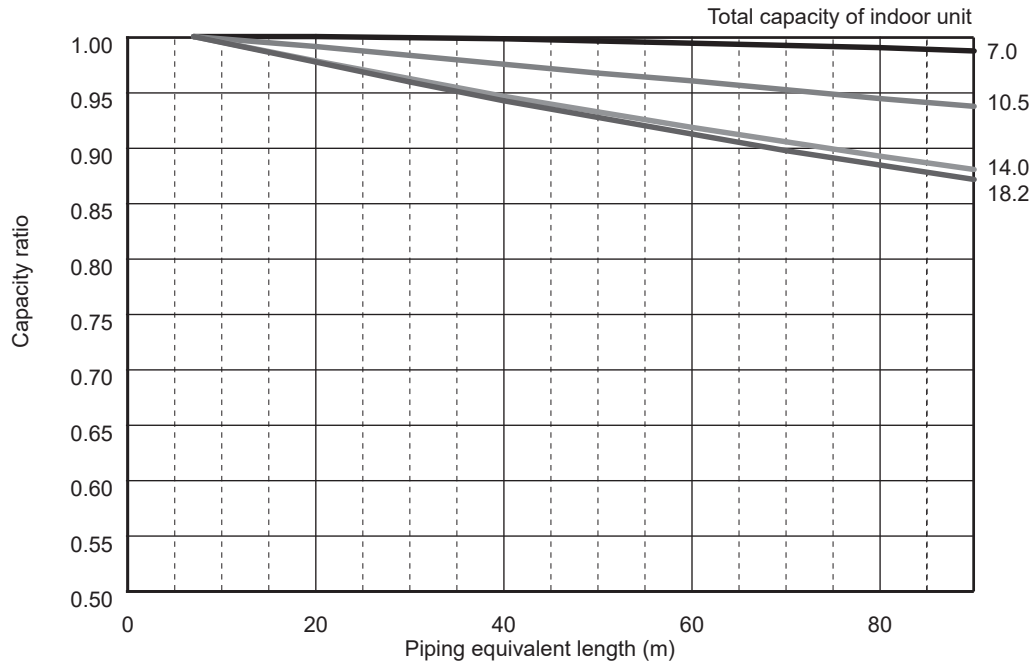

<Figure 6> Correction of refrigerant piping length

PUMY-SM140

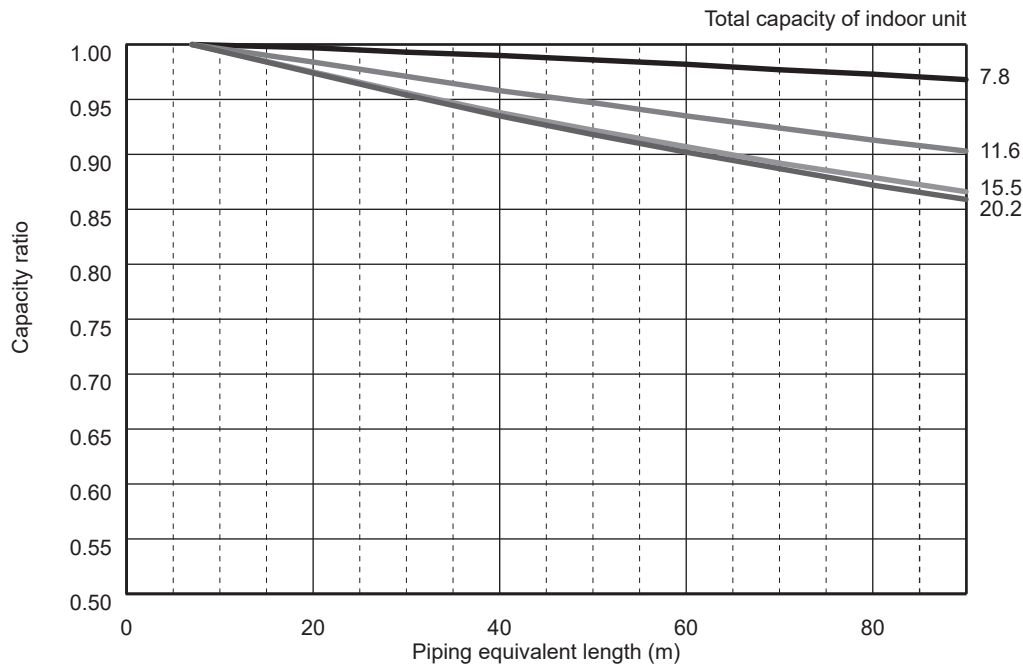


<Figure 7> Correction of refrigerant piping length

5-5-2. Heating

PUMY-SM112

PUMY-SM125

PUMY-SM140

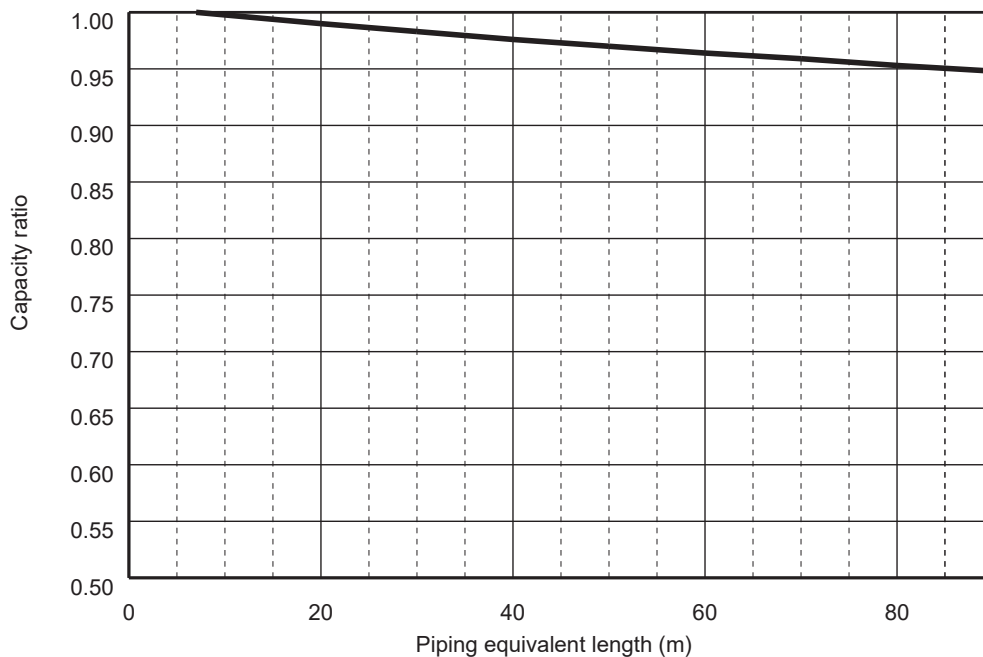

<Figure 8> Correction of refrigerant piping length

■ Method for obtaining the piping equivalent length

Piping equivalent length = piping length to the farthest indoor unit + $0.3 \times$ number of bends in the piping (m)

5-5-3. Correction of heating capacity for frost and defrosting


If heating capacity has been reduced due to frost formation or defrosting, multiply the capacity by the appropriate correction factor from the following table to obtain the actual heating capacity.

Correction factor diagram


Outdoor inlet air temp. (°C)	6	4	2	0	-2	-4	-6	-8	-10	-15	-20
Correction factor	1.00	0.91	0.83	0.82	0.83	0.84	0.89	0.89	0.89	0.89	0.89

5-6. Noise criterion curves



PUMY-SM112

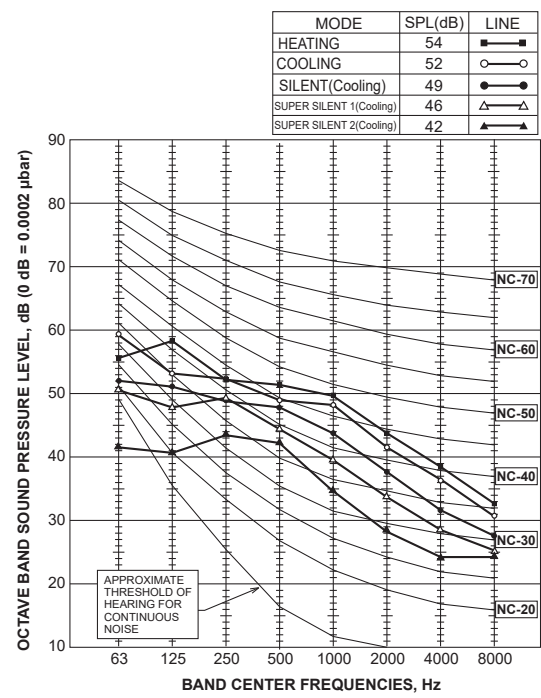


PUMY-SM125

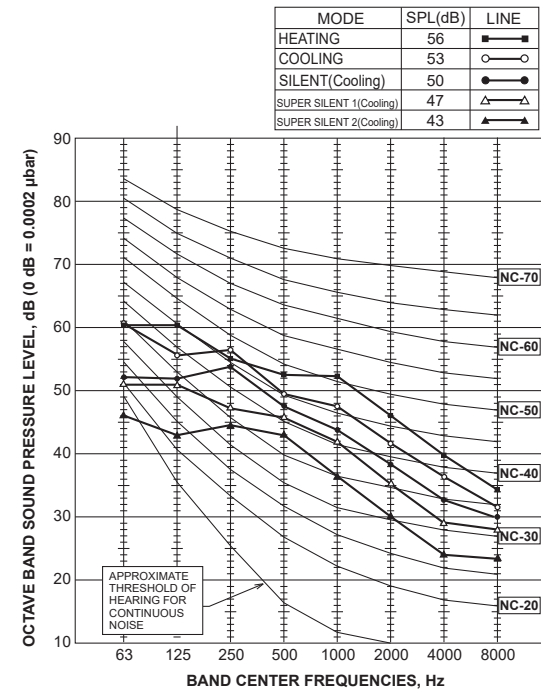

PUMY-SM140

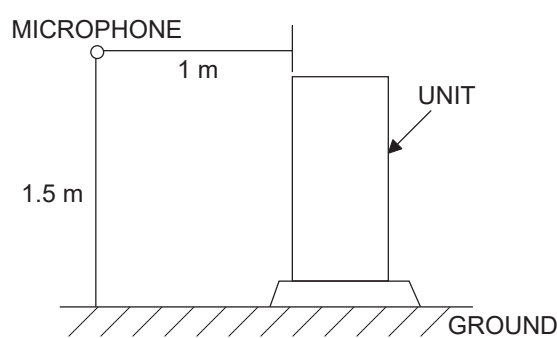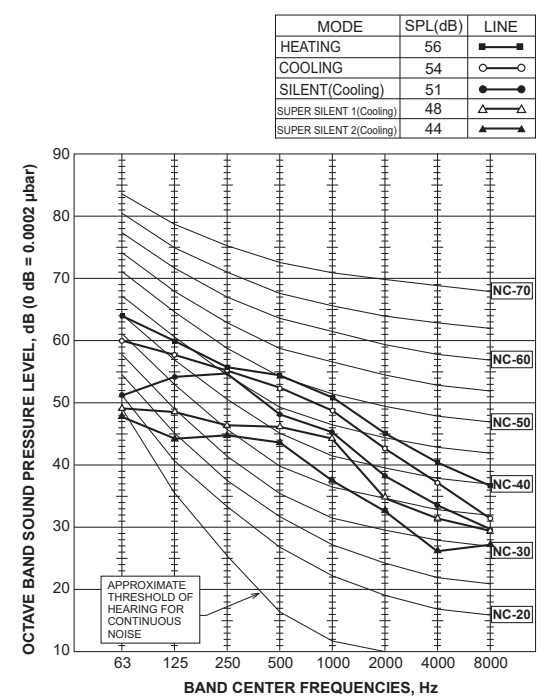

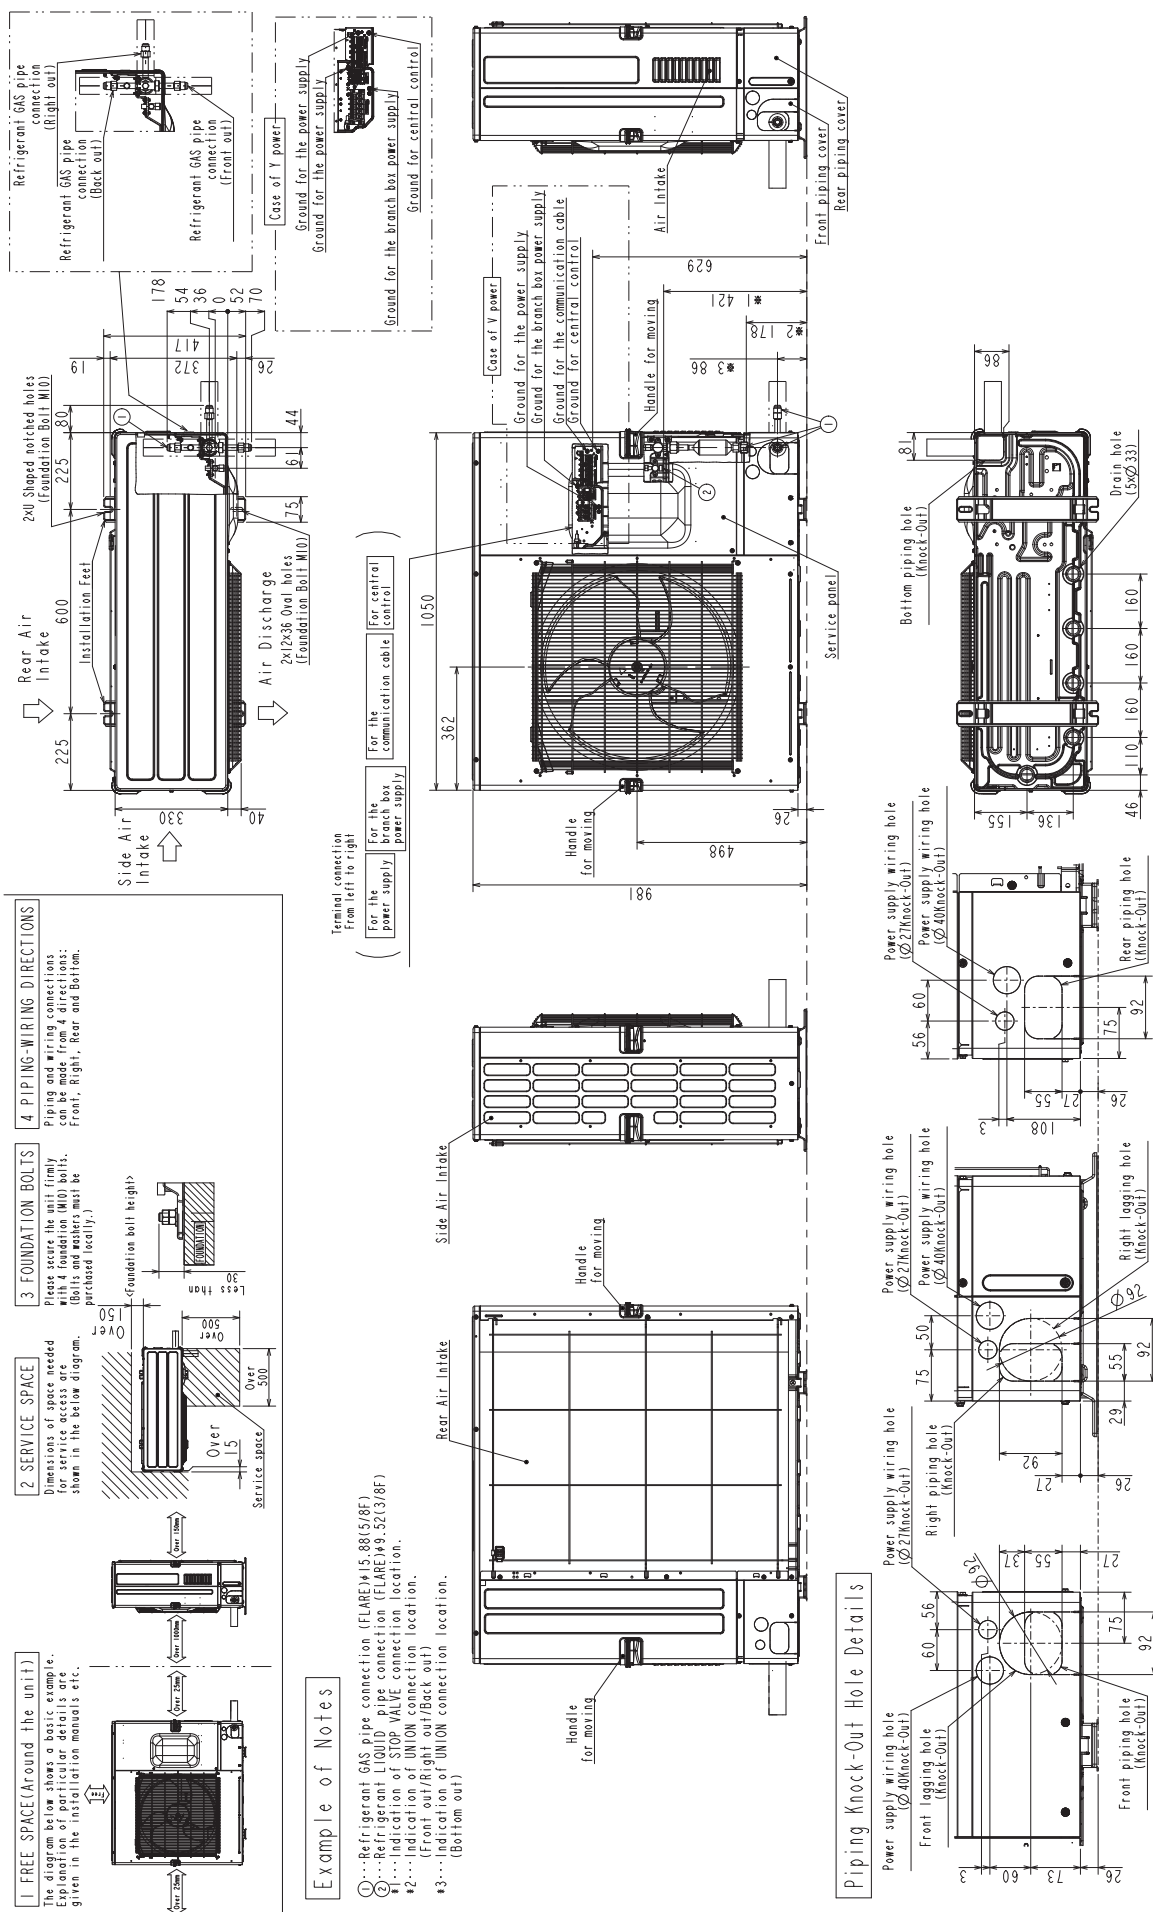


7 WIRING DIAGRAM

PUMY-SM112VKM2


PUMY-SM125VKM2

PUMY-SM140VKM2

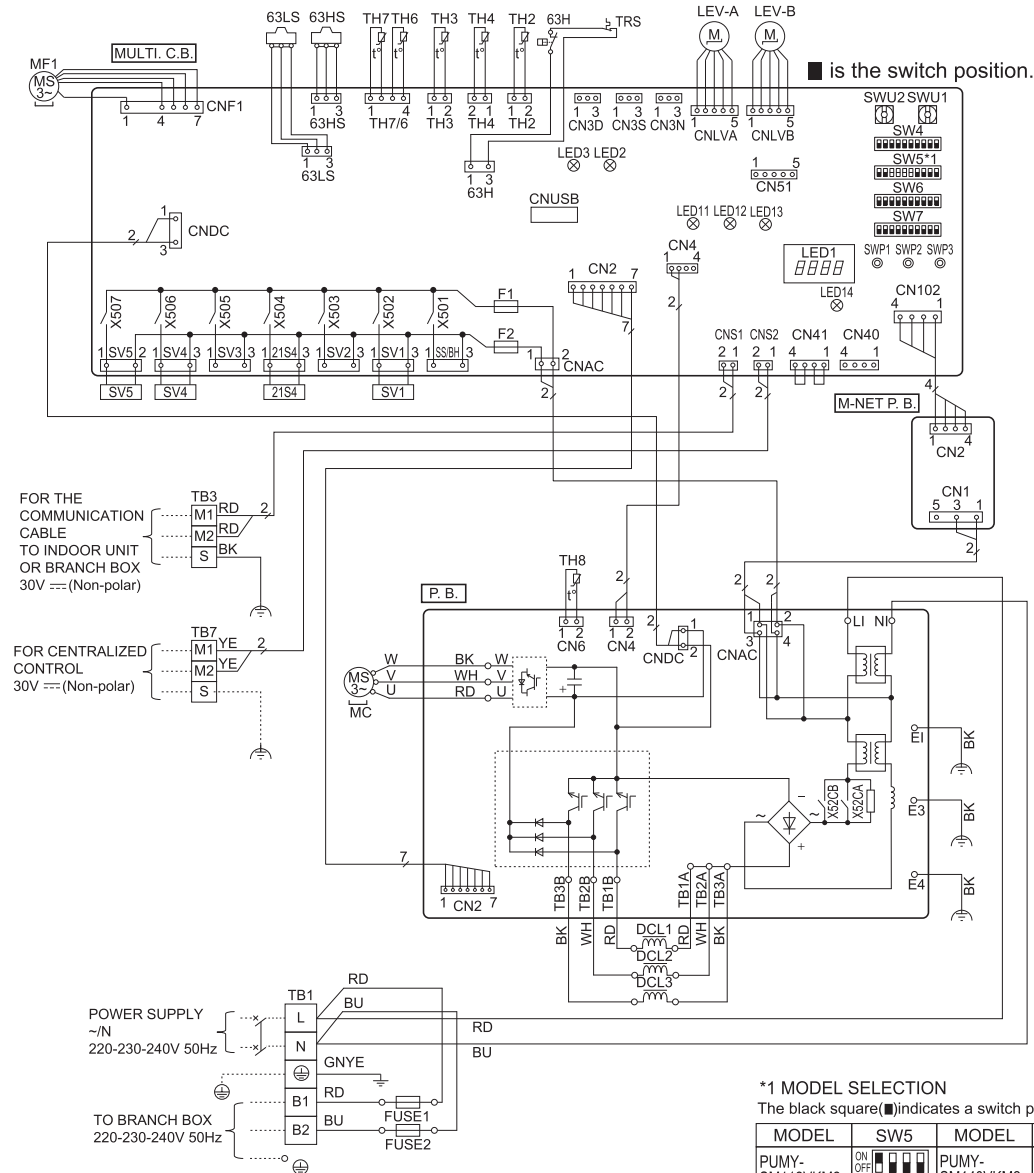

[LEGEND]

SYMBOL	NAME	SYMBOL	NAME	SYMBOL	NAME
TB1	Terminal Block <Power Supply/Branch Box>	TH7	Thermistor <Ambient>	SWU2	Switch <Unit Address Selection, tens digit>
TB3	Terminal Block <Indoor/Outdoor, Branch Box/Outdoor Transmission Line>	TH8	Thermistor <Heat Sink>	SWP3	Switch <Function Selection>
TB7	Terminal Block <Centralized Control Transmission Line>	LEV-A, LEV-B	Linear Expansion Valve	SS/BH	Connector <Connection for Option>
FUSE1,FUSE2	Fuse <T20AL250V>	DCL1, DCL2, DCL3	Reactor	CN3D	Connector <Connection for Option>
MC	Motor for Compressor	TRS	Thermal Protector	CN3S	Connector <Connection for Option>
MF1	Fan Motor	P.B.	Power Circuit Board	CN3N	Connector <Connection for Option>
63H	High Pressure Switch	U/V/W	Connection Terminal <U/V/W-Phase>	CN51	Connector <Connection for Option>
63HS	High Pressure Sensor	LI	Connection Terminal <L-Phase>	LED1	LED <Operation Inspection Display>
63LS	Low Pressure Sensor	NI	Connection Terminal <N-Phase>	LED11	Normal operation(Lit)/IC Error(Blink)
SV1	Solenoid Valve Coil <Bypass Valve>	TB1A, TB2A, TB3A, TB1B, TB2B, TB3B	Connection Terminal <Reactor>	LED12	Normal operation(Lit)Error(Blink) for central control transmission
SV4	Solenoid Valve Coil <Liquid Shut-off Valve>	E1, E3, E4	Connection Terminal <Electrical Parts Box>	LED13	Normal operation(Lit)Error(Blink) for indoor / outdoor transmission
SV5	Solenoid Valve Coil <Gas Shut-off Valve>	X52CA/B	52C Relay	LED14	LED <Power Supply to Main Microcomputer>
21S4	Solenoid Valve Coil <4-Way Valve>	MULTI. C.B.	Multi Controller Circuit Board	F1,F2	Fuse <T6.3AL250V>
TH2	Thermistor <HIC Pipe>	SW4	Switch <Display Selection>	X501~507	Relay
TH3	Thermistor <Outdoor Liquid Pipe>	SW5	Switch <Model Selection>	CNUSB	USB TYPE A
TH4	Thermistor <Compressor>	SW6	Switch <Function Selection/Test Run>	M-NET P.B.	M-NET Power Circuit Board
TH6	Thermistor <Suction Pipe>	SW7	Switch <Function Selection>		
		SWU1	Switch <Unit Address Selection, ones digit>		

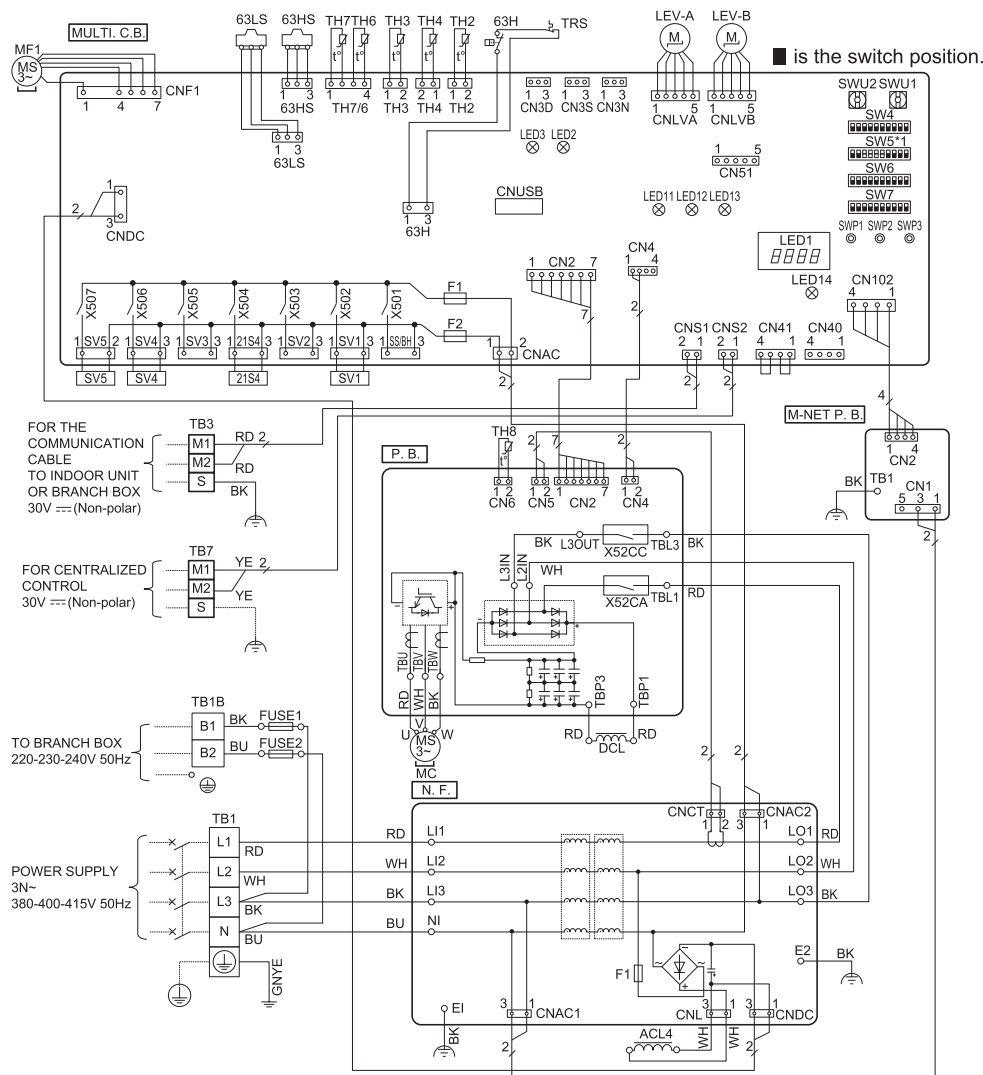

*1 MODEL SELECTION

The black square(■) indicates a switch position.

MODEL	SW5	MODEL	SW5
PUMY-SM112YKM2	ON OFF 3 4 5 6	PUMY-SM140YKM2	ON OFF 3 4 5 6
PUMY-SM125YKM2	ON OFF 3 4 5 6		

[LEGEND]

SYMBOL	NAME	SYMBOL	NAME	SYMBOL	NAME
TB1	Terminal Block <Power Supply>	TH8	Thermistor <Heat Sink>	SWU2	Switch <Unit Address Selection, tens digit>
TB1B	Terminal Block <Branch Box>	LEV-A, LEV-B	Linear Expansion Valve	SWP3	Switch <Function Selection>
TB3	Terminal Block <Indoor/Outdoor, Branch Box/Outdoor Transmission Line>	ACL4	Reactor	SS/BH	Connector <Connection for Option>
TB7	Terminal Block <Centralized Control Transmission Line>	DCL	Reactor	CN3D	Connector <Connection for Option>
FUSE1,FUSE2	Fuse <T20AL250V>	TRS	Thermal Protector	CN3S	Connector <Connection for Option>
MC	Motor for Compressor	P.B.	Power Circuit Board	CN3N	Connector <Connection for Option>
MF1	Fan Motor	TBU/V/W	Connection Terminal <U/V/W-Phase>	CN51	Connector <Connection for Option>
63H	High Pressure Switch	TBL1/L2N/TBL3	Connection Terminal <L1/L2/L3-Power Supply>	LED1	LED <Operation Inspection Display>
63HS	High Pressure Sensor	TBP1/P3	Connection Terminal	LED11	Normal operation(Lit)/IC Error(Blink)
63LS	Low Pressure Sensor	X52CA/C	52C Relay	LED12	Normal operation(Lit)/Error(Blink) for central control transmission
SV1	Solenoid Valve Coil <Bypass Valve>	N.F.	Noise Filter Circuit Board	LED13	Normal operation(Lit)/Error(Blink) for indoor / outdoor transmission
SV4	Solenoid Valve Coil <Liquid Shut-off Valve>	LO1/LO2/LO3	Connection Terminal <L1/L2/L3-Power Supply>	LED14	LED <Power Supply to Main Microcomputer>
SV5	Solenoid Valve Coil <Gas Shut-off Valve>	LI1/LI2/LI3/NI	Connection Terminal <L1/L2/L3/N-Power Supply>	F1,F2	Fuse <T6.3AL250V>
21S4	Solenoid Valve Coil <4-Way Valve>	EI, E2	Connection Terminal <Electrical Parts Box>	X501-X507	Relay
TH2	Thermistor <HIC Pipe>	F1	Fuse <T6.3AL250V>	CNUSB	USB TYPE A
TH3	Thermistor <Outdoor Liquid Pipe>	MULTI. C.B.	Multi Controller Circuit Board	M-NET P.B.	M-NET Power Circuit Board
TH4	Thermistor <Compressor>	SW4	Switch <Display Selection>	TB1	Connection Terminal <Electrical Parts Box>
TH6	Thermistor <Suction Pipe>	SW5	Switch <Model Selection>		
TH7	Thermistor <Ambient>	SW6	Switch <Function Selection/Test Run>		
		SW7	Switch <Function Selection>		
		SWU1	Switch <Unit Address Selection, ones digit>		

8 TROUBLESHOOTING

8-1. Checkpoints for test run

8-1-1. Procedures before test run

- Before a test run, make sure that the following work is completed.
 - Installation related:
Make sure that the panel of cassette type is installed and electrical wiring is done.
Otherwise electrical functions like auto vane will not operate normally.
 - Piping related:
Perform leakage test of refrigerant and drain piping. Make sure that all joints are perfectly insulated.
Check stop valves on both liquid and gas sides are fully open.
 - Electrical wiring related:
Check ground wire, transmission cable, remote controller cable, and power supply cable for secure connection.
Make sure that all switch settings of address or adjustments for special specification systems are correctly made.
- Safety check:
 - With the insulation multimeter of 500 V, inspect the insulation resistance.
 - Do not touch the transmission cable and remote controller cable with the multimeter.
 - The resistance should be over 1.0 MΩ. Do not proceed inspection if the resistance is less than 1.0 MΩ.
 - Inspect between the outdoor unit power supply terminal block and ground first, metallic parts like refrigerant pipes or the electrical box next, then inspect all electrical wiring of outdoor unit, indoor unit, and all linked equipment.
- Before operation:
 - For compressor protection, turn on the breaker for the outdoor unit and wait at least 12 hours before a test run.
 - Register control systems into remote controller(s). Never touch the on/off switch of the remote controller(s). Refer to "Special function operation setting (for M-NET Remote Controller)" as for settings.
In MA remote controller(s), this registration is unnecessary.
- More than 12 hours later after turning on the power to the outdoor unit, turn on all the power switches for the test run.
Perform test run and make test run reports.

8-1-2. Test run

Refer to "13-4. Test run" for operation procedure.

8-1-3. Error information

Refer to "13-2. Error information" when an error occurs.

8-1-4. Error history

Refer to "13-6. Error history" to check the errors occurred in the past.

8-1-5. Self-diagnosis

Refer to "13-7. Self-diagnosis" to search for the error history.

8-1-6. Countermeasures for error during test run

If a problem occurs during test run, a code number will appear on the remote controller (or LED on the outdoor unit), and the air conditioning system will automatically cease operating.

Determine the nature of the abnormality and apply corrective measures.

Make sure to turn the power OFF before connecting/disconnecting any connectors, or replacing boards.

Error code (2 digits)	Error code (4 digits)	Trouble	Detected Unit				Remarks
			Indoor	Outdoor	Power Supply Interface for Alarm Kit	Remote Controller	
Ed	0403	Serial communication error/Model selection SW error		O			Outdoor unit outdoor multi controller circuit board – Power circuit board communication trouble, Incorrect setting of model selection
EF	0910	Circuit inspection (Own unit)	O				
EF	0911	Circuit inspection (Other unit)	O		O		
EF	0912	Circuit inspection (Alarm kit)			O		
U2	1102	Compressor temperature trouble		O			Check delay code 1202
UL	1300	Low pressure trouble		O			
UE	1302	High pressure trouble or compressor protector/thermal protector trouble		O			Check delay code 1402
U7	1500	Superheat due to low discharge temperature trouble		O			Check delay code 1600
U2	1501	Refrigerant shortage trouble		O			Check delay code 1601
		Closed valve in cooling mode		O			Check delay code 1501
P6	1503	Freeze protection of plate heat exchanger	O				
		Freeze protection of branch box or indoor unit	O				
EF	1508	4-way valve trouble in heating mode		O			Check delay code 1608
FL/EF/FL	1521/1522/1524	Refrigerant leakage/Refrigerant sensor failure	O	O	O		The error cannot be canceled by the remote controller after this error detection. The error code may be displayed as EF when the abnormality is re-notified.

Error code (2 digits)	Error code (4 digits)	Trouble	Detected Unit				Remarks
			Indoor	Outdoor	Power Supply Interface for Alarm Kit	Remote Controller	
L6	2135	Circulation water freeze protection	O				
PA	2500	Water leakage	O				
P5	2502	Drain overflow protection	O				
P4	2503	Drain sensor abnormality	O				
-	3121	Out-of-range outside air temperature		O			
UF	4100	Compressor current interruption (locked compressor)		O			Check delay code 4350
Pb	4114	Fan trouble (Indoor unit)	O				
UP	4210	Compressor overcurrent interruption/ Failure in 12 VDC power supply circuit on power circuit board		O			
U9	4220	Voltage shortage/overvoltage/PAM error/L1 open phase/primary current sensor error/ power synchronization signal error		O			Check delay code 4320
U5	4230	Heat sink temperature trouble		O			Check delay code 4330
U6	4250	Power module trouble		O			Check delay code 4350
U8	4400	Fan trouble (Outdoor unit)		O			Check delay code 4500
U3	5101	Air inlet thermistor (TH21) open/short	O				
		Compressor temperature thermistor (TH4) open/short		O			Check delay code 1202
U4	5102	Liquid pipe temperature thermistor (TH22) open/short	O				
		Suction pipe temperature thermistor (TH6) open/short		O			Check delay code 1211
U4	5103	Gas pipe temperature thermistor (TH23) open/short	O				
U4	5105	Outdoor liquid pipe temperature thermistor (TH3) open/short		O			Check delay code 1205
U4	5106	Ambient temperature thermistor (TH7) open/short		O			Check delay code 1221
U4	5109	HIC pipe temperature thermistor (TH2) open/short		O			Check delay code 1222
U4	5110	Heat sink temperature thermistor (TH8) open/short		O			Check delay code 1214
F5	5201	High pressure sensor (63HS) trouble		O			Check delay code 1402
F3	5202	Low pressure sensor (63LS) trouble		O			Check delay code 1400
UH	5300	Primary current error		O			Check delay code 4310
FH	5558	Refrigerant sensor error	O	O			
P4	5701	Contact failure of drain float switch	O				
A0	6600	Duplex address error	O	O		O	Only M-NET Remote controller is detected.
A2	6602	Transmission processor hardware error	O	O		O	Only M-NET Remote controller is detected.
A3	6603	Transmission bus BUSY error	O	O		O	Only M-NET Remote controller is detected.
A6	6606	Signal communication error with transmis- sion processor	O	O		O	Only M-NET Remote controller is detected.
A7	6607	No ACK error	O			O	Only M-NET Remote controller is detected.
A8	6608	No response frame error	O			O	Only M-NET Remote controller is detected.
FH	6815	Supervisor mode alarm kit communication error, MA supervisor remote controller communication error	O				
E0/E4	6831	MA communication receive error	O			O	Only MA Remote controller is detected.
E4	6831	Sensor and Alarm Kit communication error	O				
E3/E5	6832	MA communication send error	O			O	Only MA Remote controller is detected.
E3/E5	6833	MA communication send error	O			O	Only MA Remote controller is detected.
E0/E4	6834	MA communication receive error	O			O	Only MA Remote controller is detected.
EF	7100	Total capacity error		O			
EF	7101	Capacity code error	O	O			
EF	7102	Connecting excessive number of units and branch boxes		O			
EF	7105	Address setting error		O			
EF	7118	Refrigerant leak detection system error		O			
EF	7119	Connection error of M-NET line (origin)	O		O		
EF	7120	Connection error of M-NET line (not origin)	O		O		
EF	7121	Power outage detection	O	O	O		
EF	7130	Incompatible unit combination		O			

Notes:

- When the outdoor unit detects No ACK error/No response error, the target indoor unit is treated as a stop, and not assumed to be abnormal.
- The error codes displayed on the units may be different between the error source and others. In that case, please refer to the error code of error source by displayed attribute and address.
- Refer to the service manual of the indoor unit or the remote controller for details of the errors detected by the indoor unit or the remote controller or any errors not indicated in the table above.

■ Self-diagnosis function

The indoor and outdoor units can be diagnosed automatically using the self-diagnosis switch (SW4) and LED1 (LED indication) found on the outdoor multi controller circuit board.

LED indication: Set all contacts of SW4 to OFF.


■ **During normal operation**

The LED indicates the drive state of the controller in the outdoor unit.

Bit	1	2	3	4	5	6	7	8
Indication	Compressor operated	Always lit	21S4	SV1	SV2	SV3	SV4	SV5

- Example

 When the compressor, SV1, SV4 and SV5 are on during cooling operation.




Abnormal points and detection methods

Serial communication between the outdoor multi controller circuit board and outdoor power circuit board is defective.

Causes and checkpoints

- Wire breakage or contact failure of connector CN2 or CN4
- Malfunction of power board communication circuit on outdoor multi controller circuit board
- Malfunction of communication circuit on outdoor power circuit board
- Incorrect setting of model selection

Diagnosis of failure

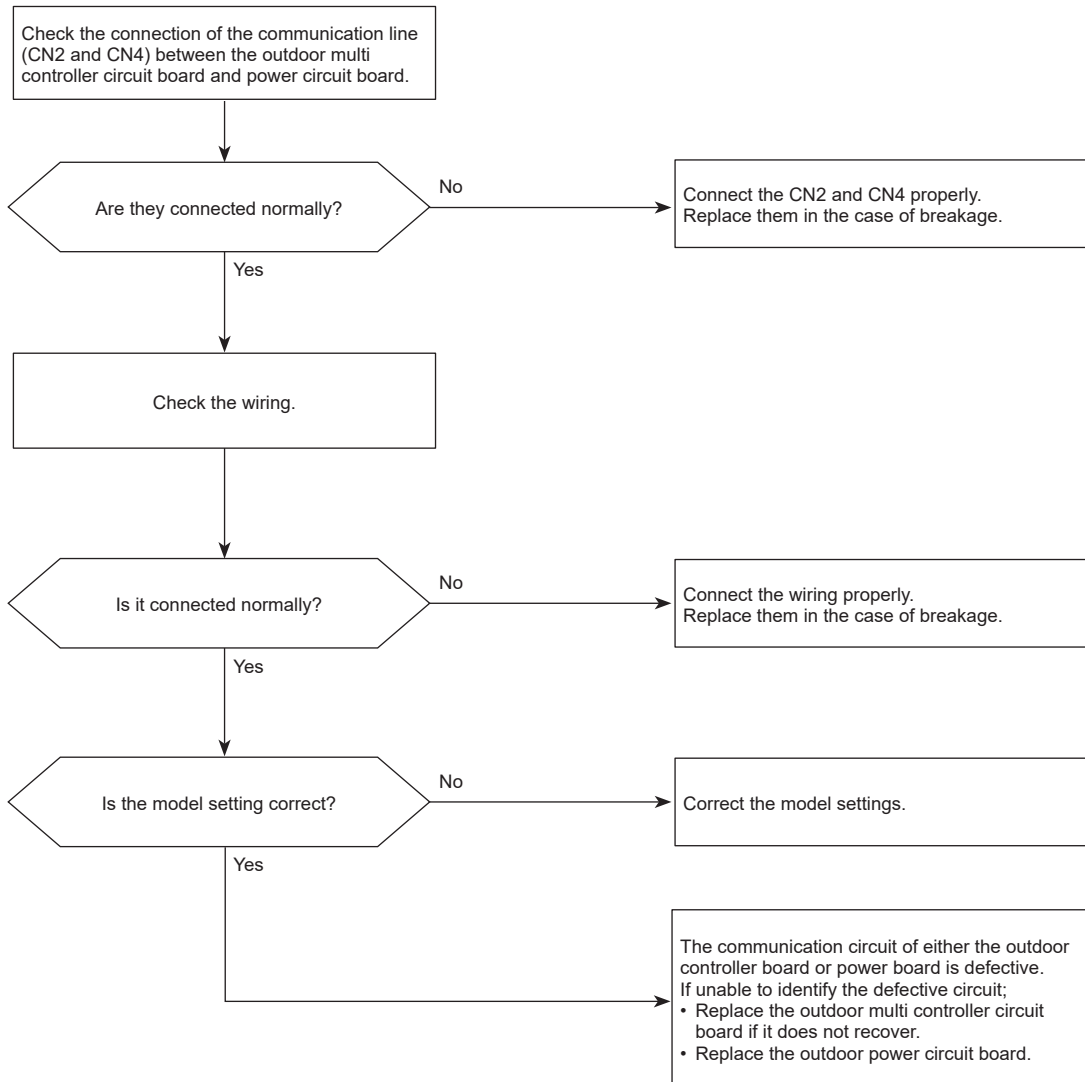

Abnormal points and detection methods

- TH4 falls into either of the following temperature conditions:
 - over 105°C continuously for 5 minutes
 - over 110°C
- The saturation temperature converted from the pressure detected by the high pressure sensor exceeds 40°C during defrosting, and TH4 exceeds 105°C

TH4:

Thermistor <Compressor>


LEV:

Linear expansion valve


Causes and checkpoints

- Malfunction of stop valve
- Over-heated compressor operation caused by shortage of refrigerant
- Defective thermistor
- Defective outdoor multi controller circuit board
- LEV performance failure
- Defective indoor controller board
- Clogged refrigerant system caused by foreign object
- Refrigerant shortage (Refrigerant liquid accumulation in compressor while indoor unit is OFF/thermo-OFF.)
- Malfunction of shut-off valves

Diagnosis of failure

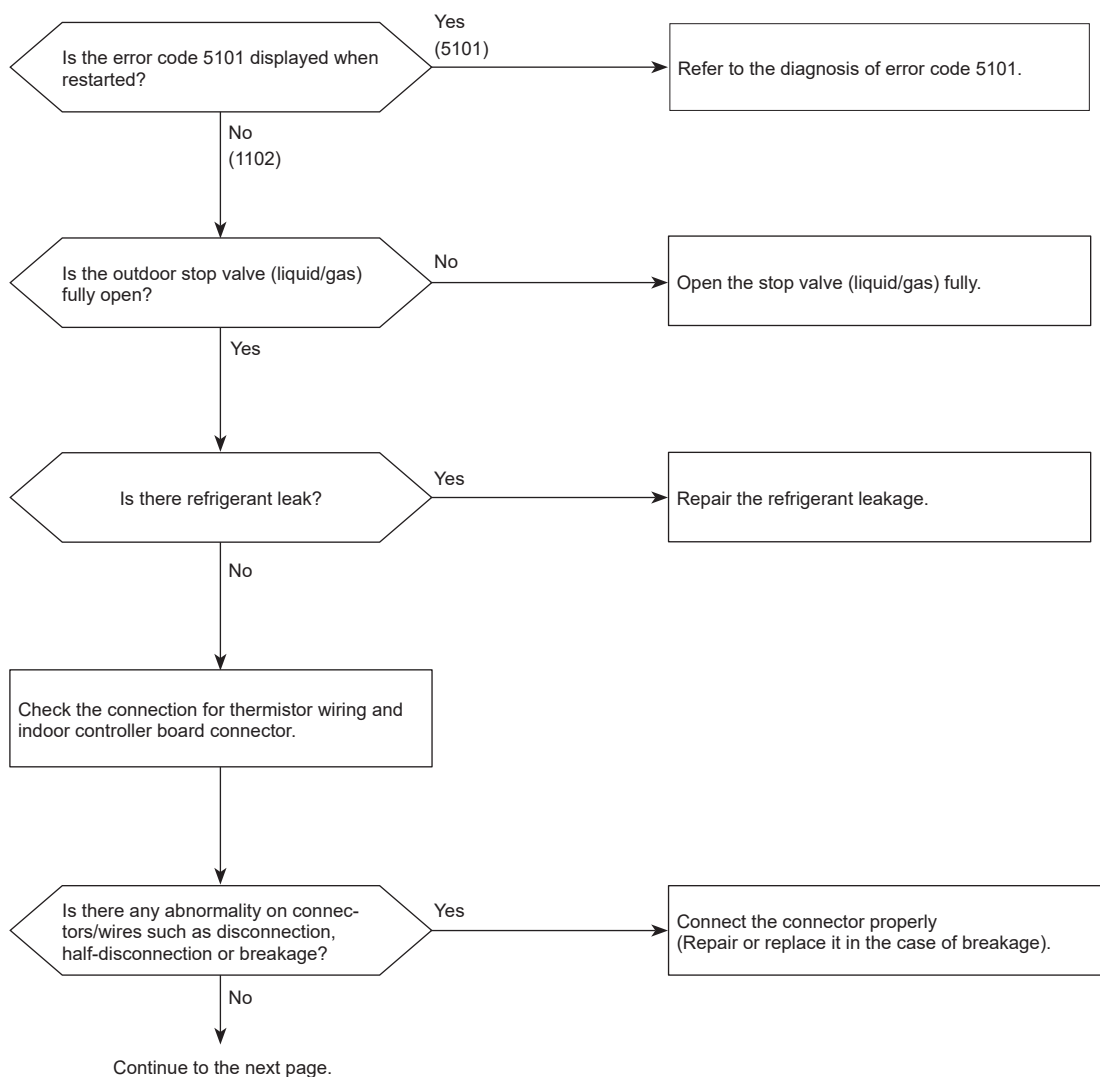

Diagnosis of failure

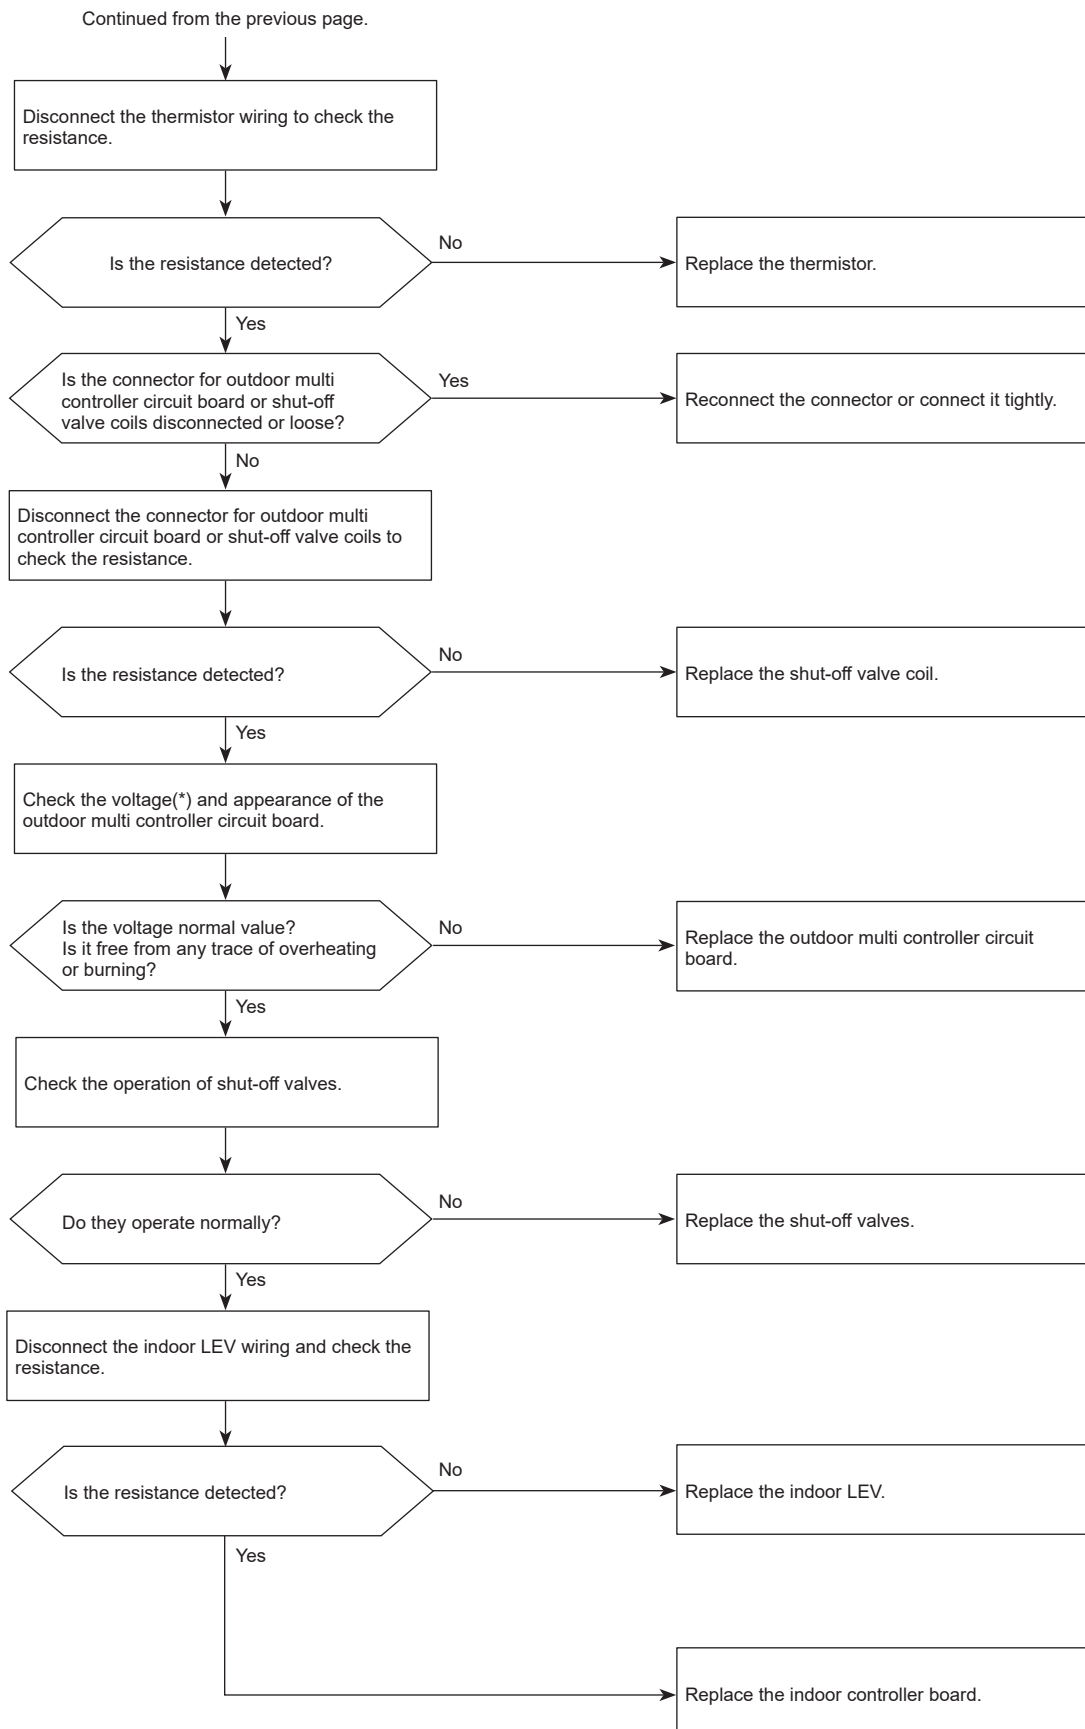

*For the voltage, refer to "How to check the components".

Abnormal points and detection methods

63L equipped model

- Low pressure (63L is in operation)
63L operates (under 0.00 MPaG) during compressor operation.

63L:

Low pressure switch

LEV:

Linear expansion valve

SV1:

Solenoid valve


TH7:

Thermistor <Ambient>


Causes and checkpoints

- Defective operation of stop valve (not fully open)
- Clogged or broken pipe
- Malfunction or locked outdoor fan motor
- Short-cycle of outdoor unit
- Dirt of outdoor heat exchanger
- Remote controller transmitting error caused by noise interference
- Contact failure of outdoor multi controller circuit board connector
- Defective outdoor multi controller circuit board
- Short-cycle of indoor unit
- Decreased airflow, clogged filter, or dirt on indoor unit
- Malfunction or locked indoor fan motor
- Decreased airflow caused by defective inspection of outdoor temperature thermistor (It detects lower temperature than actual temperature.)
- Indoor LEV performance failure
- Malfunction of fan driving circuit
- SV1 performance failure
- Defective low pressure sensor
- Malfunction of low pressure sensor input circuit on outdoor multi controller circuit board


Diagnosis of failure

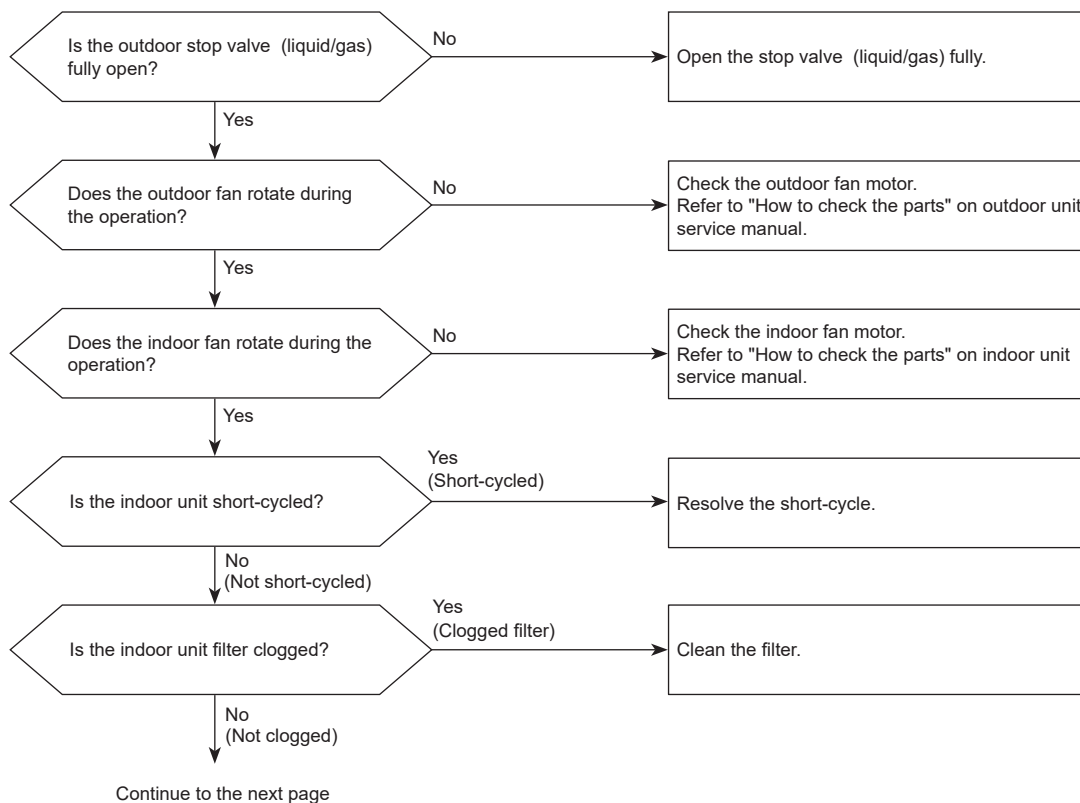

Diagnosis of failure

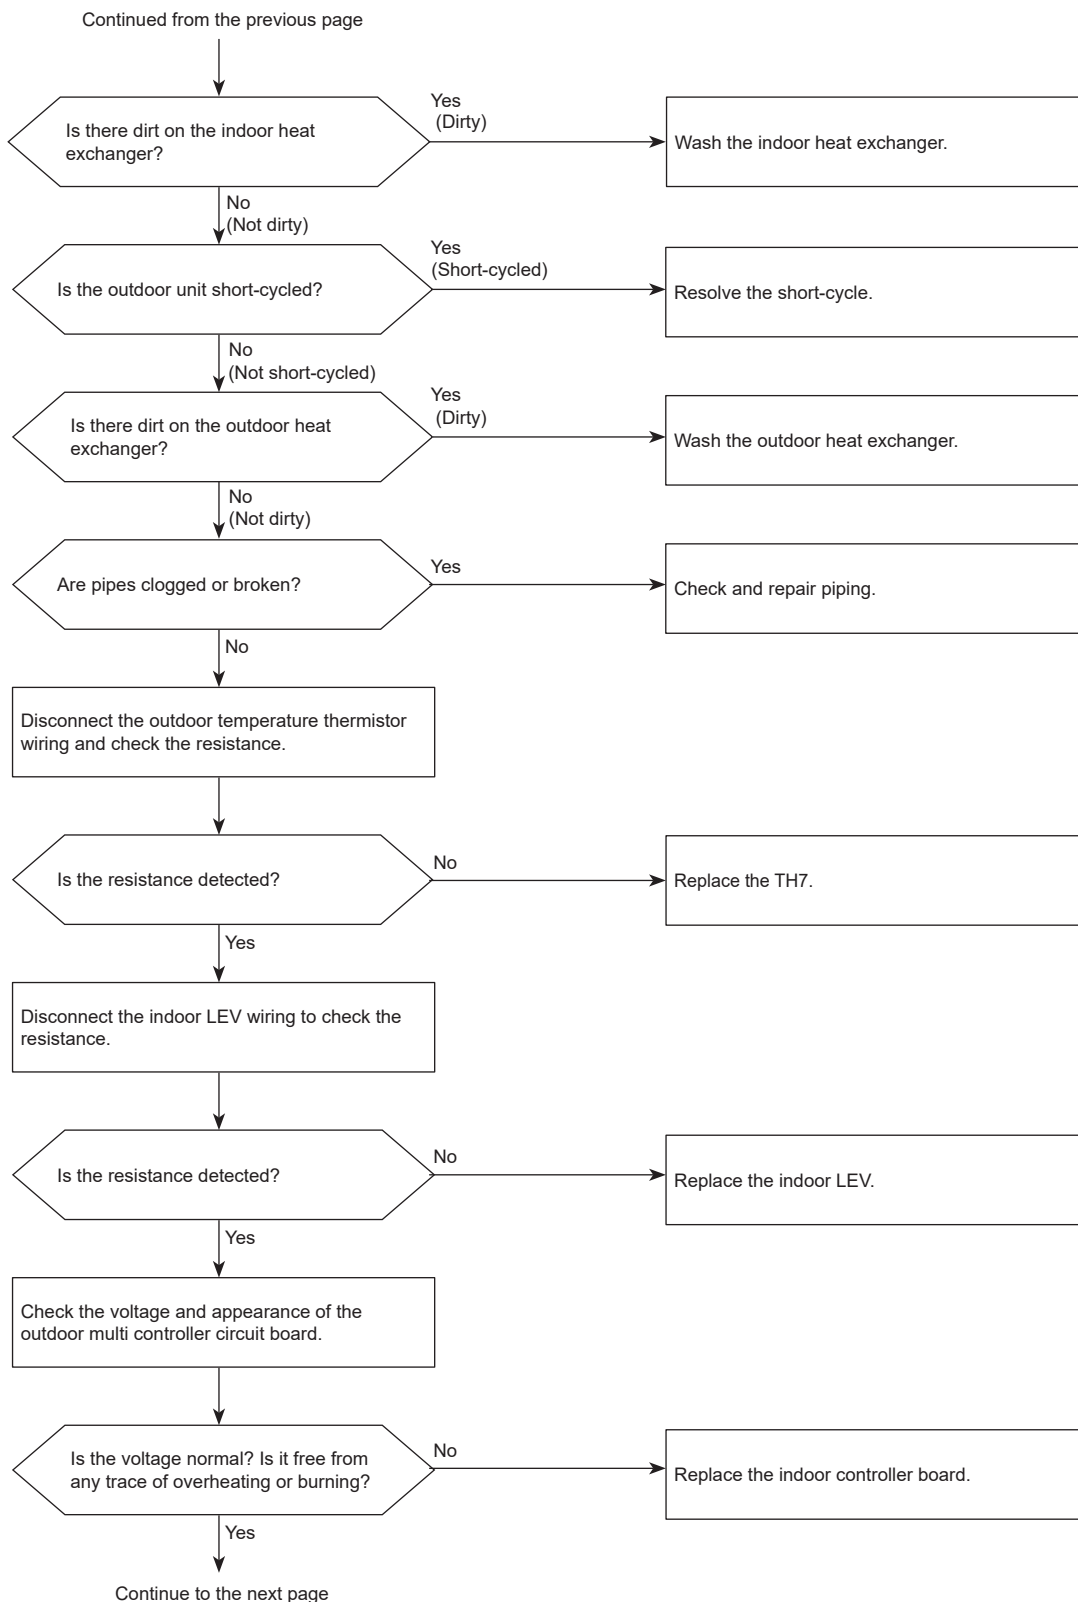

Diagnosis of failure

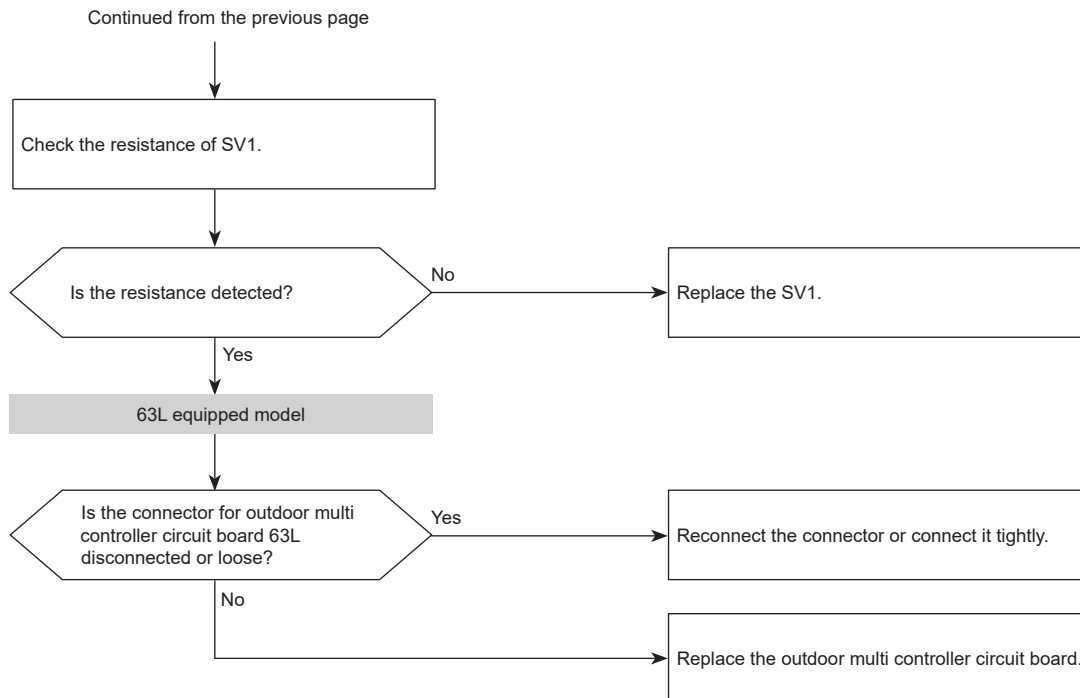

Abnormal points and detection methods

- High pressure abnormality (63H operation)
63H operates(*) during compressor operation.
(* 4.15 MPaG)
- High pressure abnormality (63HS detected)
 - A pressure detected by 63HS is 4.31 MPaG or more during compressor operation.
 - A pressure detected by 63HS is 4.14 MPaG or more for 3 minutes during compressor operation.

63H:

High pressure switch

63HS:

High pressure sensor

LEV:

Linear expansion valve

SV1:

Solenoid valve

TH7:

Thermistor <Ambient>

TH4:

Thermistor <Compressor>


TRS:

Thermal protector


Causes and checkpoints

- Faulty operation of stop valve (not fully open)
- Clogged or broken pipe
- Malfunction or locked outdoor fan motor
- Short-cycle of outdoor unit
- Dirt of outdoor heat exchanger
- Remote controller transmitting error caused by noise interference
- Contact failure of the outdoor multi controller circuit board connector
- Defective outdoor circuit board
- Short-cycle of indoor unit
- Decreased airflow, clogged filter, or dirt on indoor unit
- Malfunction or locked indoor fan motor
- Decreased airflow caused by faulty inspection of outdoor temperature thermistor (It detects lower temperature than actual temperature.)
- Indoor LEV performance failure
- Malfunction of fan driving circuit
- SV1 performance failure
- Defective High pressure sensor
- Defective High pressure sensor input circuit on outdoor multi controller circuit board
- High compressor temperature (Thermal protector TRS operated)
- Malfunction of shut-off valves


Diagnosis of failure

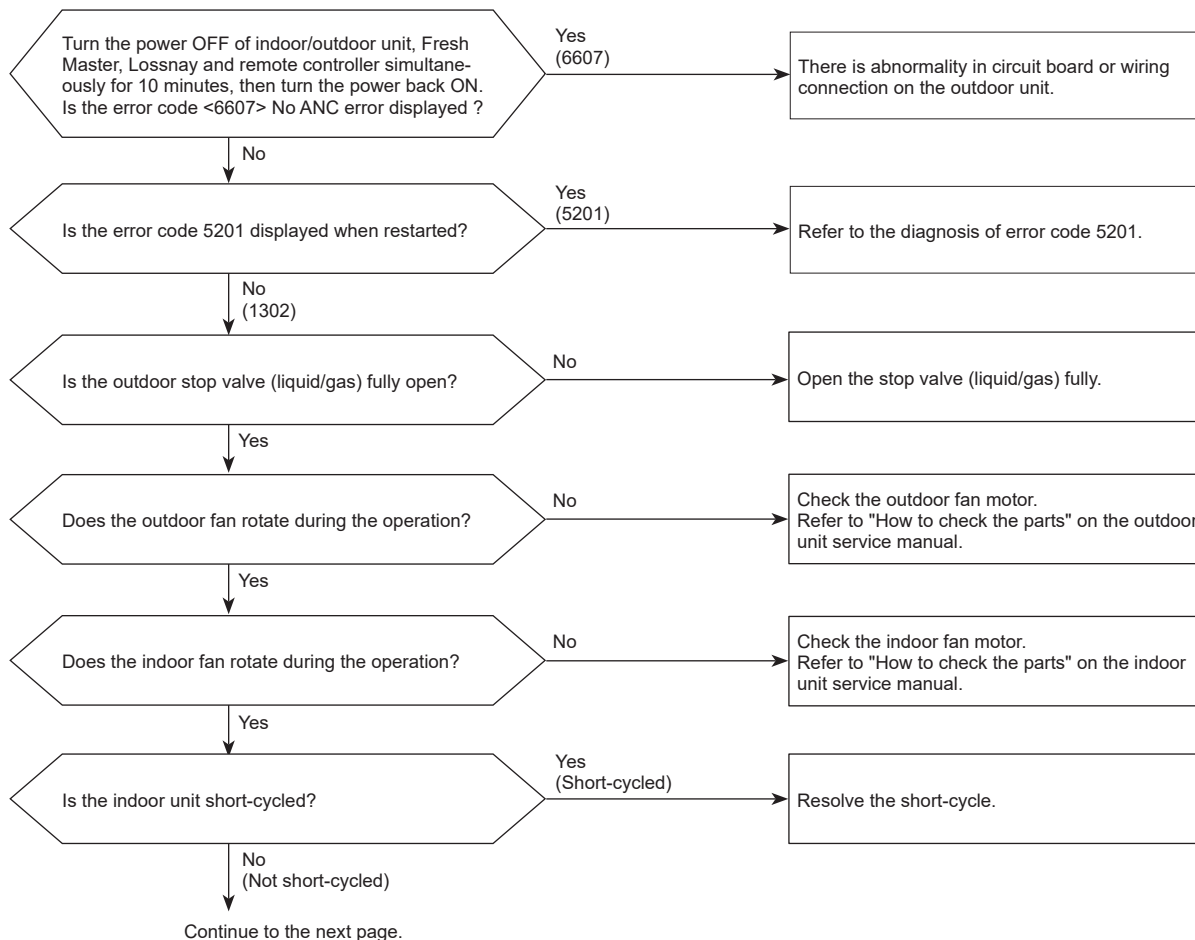

Diagnosis of failure

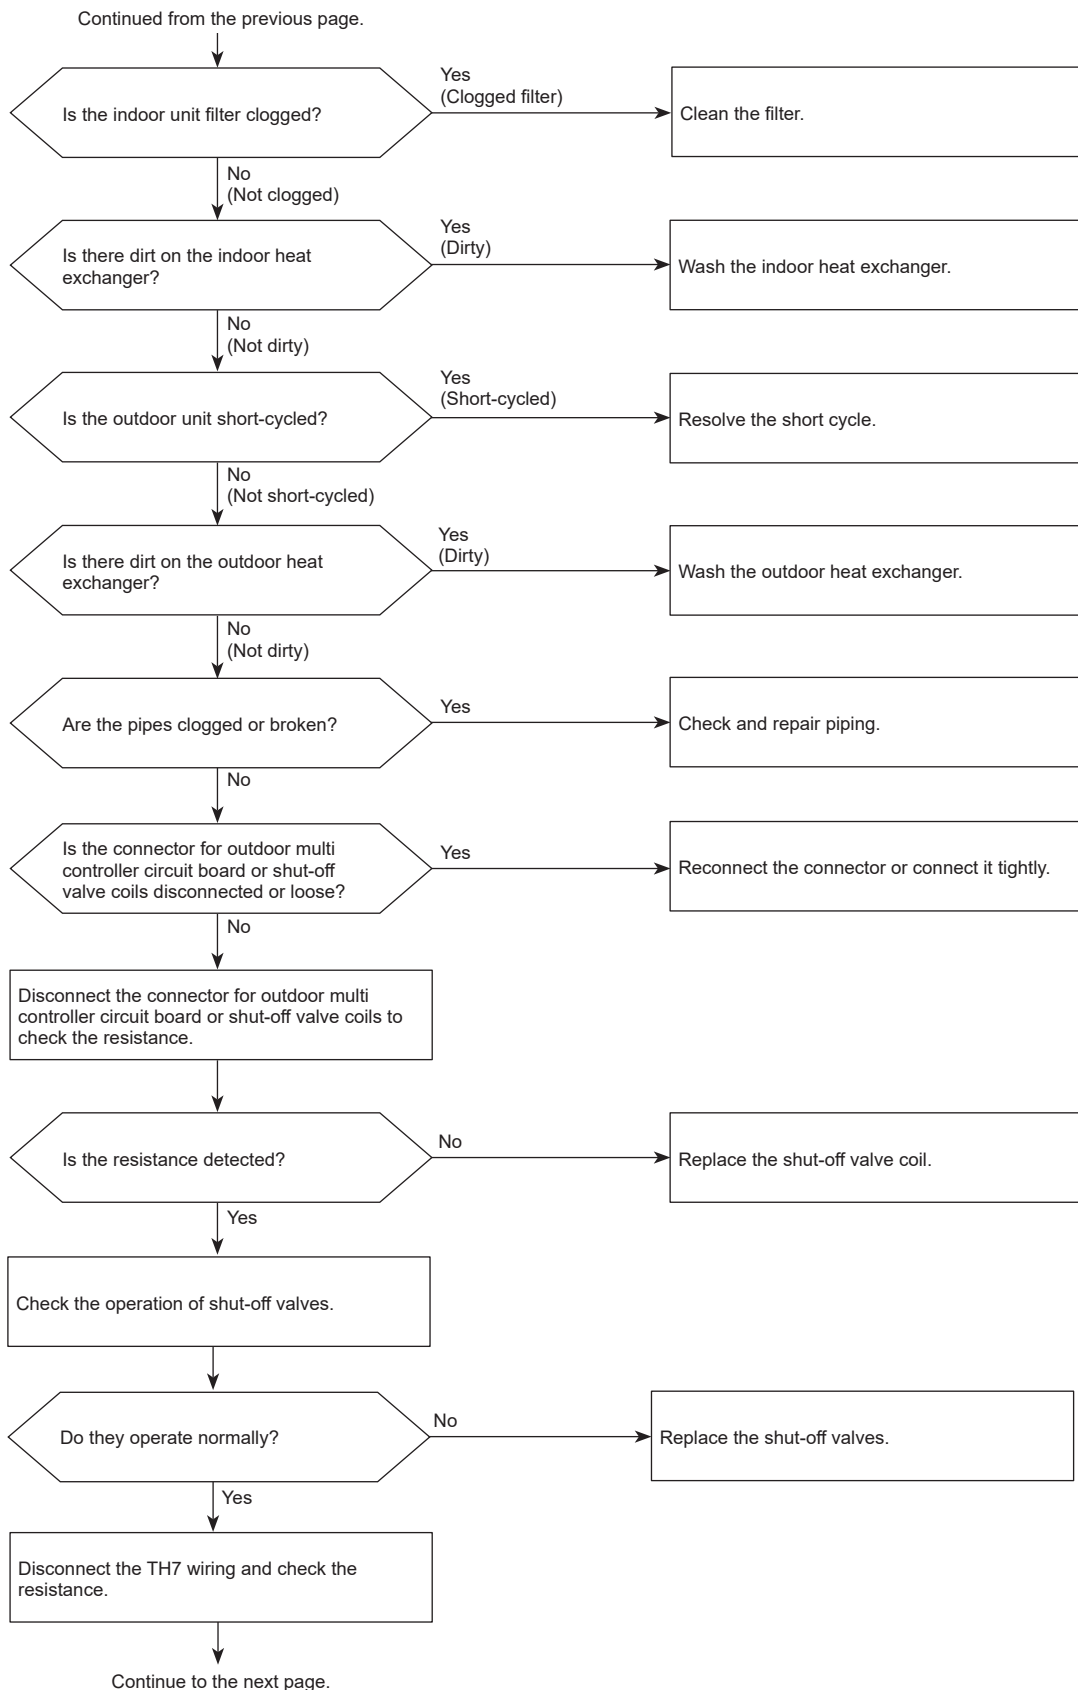


Diagnosis of failure

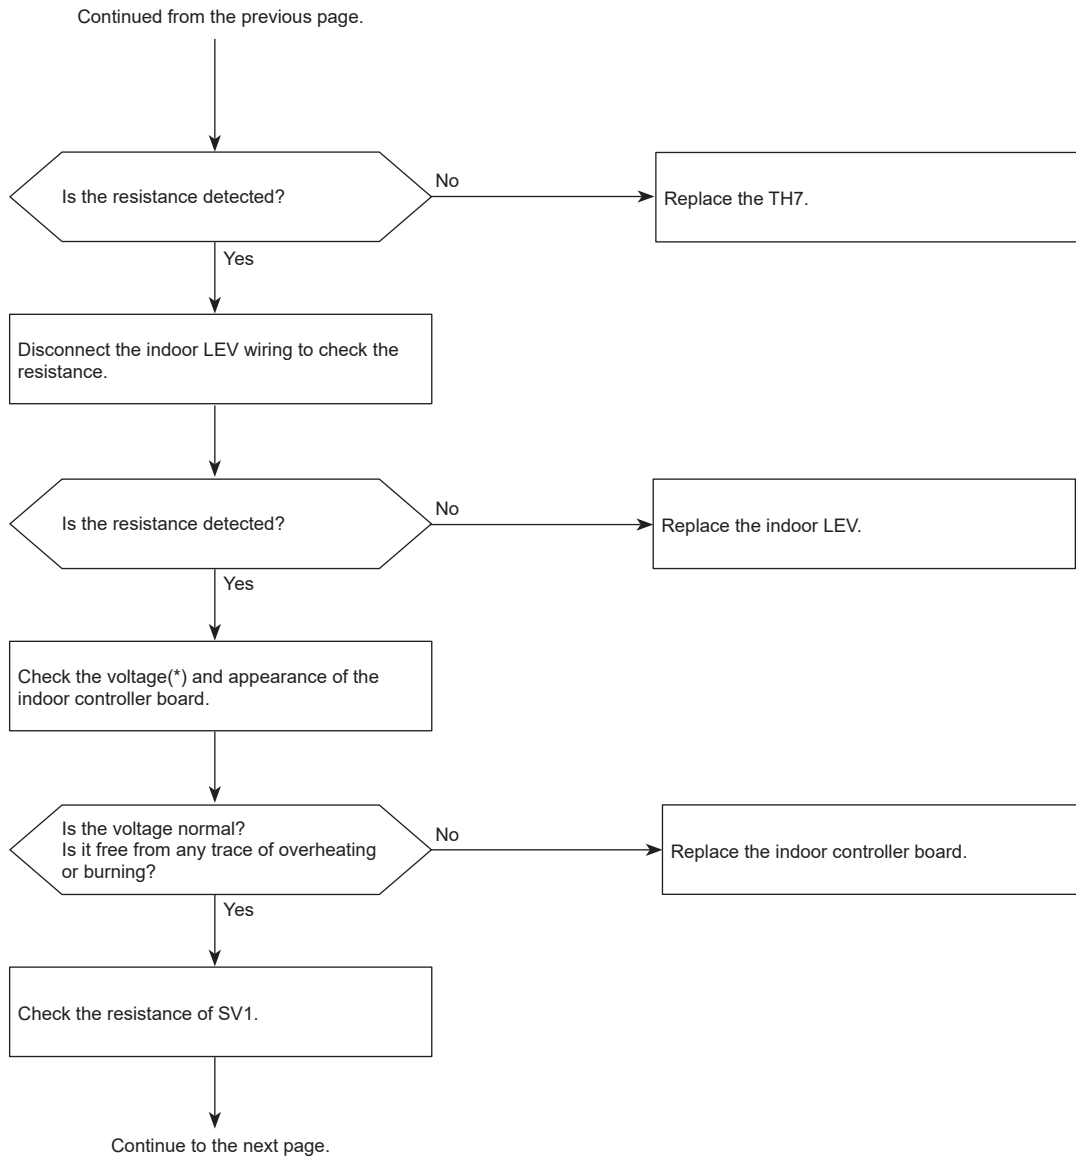

*For the voltage, refer to "How to check the components".

Diagnosis of failure

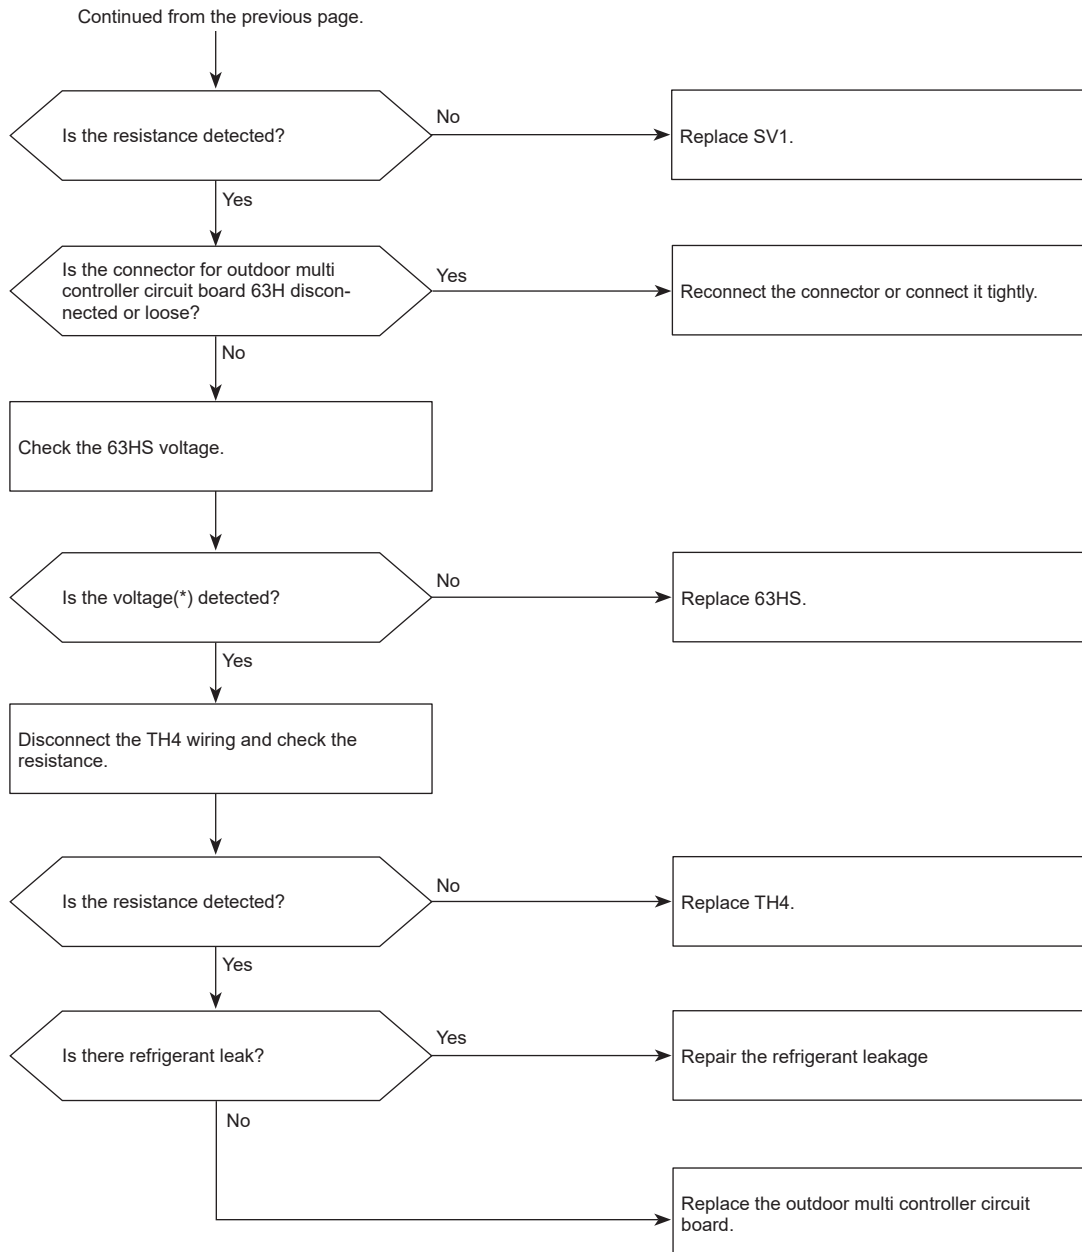

*For the voltage, refer to "How to check the components".

Abnormal points and detection methods

10 or more minutes after the compressor starts operation, if a discharge superheat of -15°C^* or less is detected for 5 consecutive minutes even though the indoor LEV has the minimum open pulse.

LEV:

Linear expansion valve

TH4:

Thermistor <Compressor>

63HS:


High pressure sensor

* At this temperature, conditions for the abnormality detection will not be satisfied if no abnormality is detected on either TH4 or 63HS.


Causes and checkpoints

- Disconnection or loose connection of TH4
- Defective holder of TH4
- Disconnection of LEV coil
- Disconnection of LEV connector
- LEV performance failure
- Malfunction of shut-off valves

Diagnosis of failure

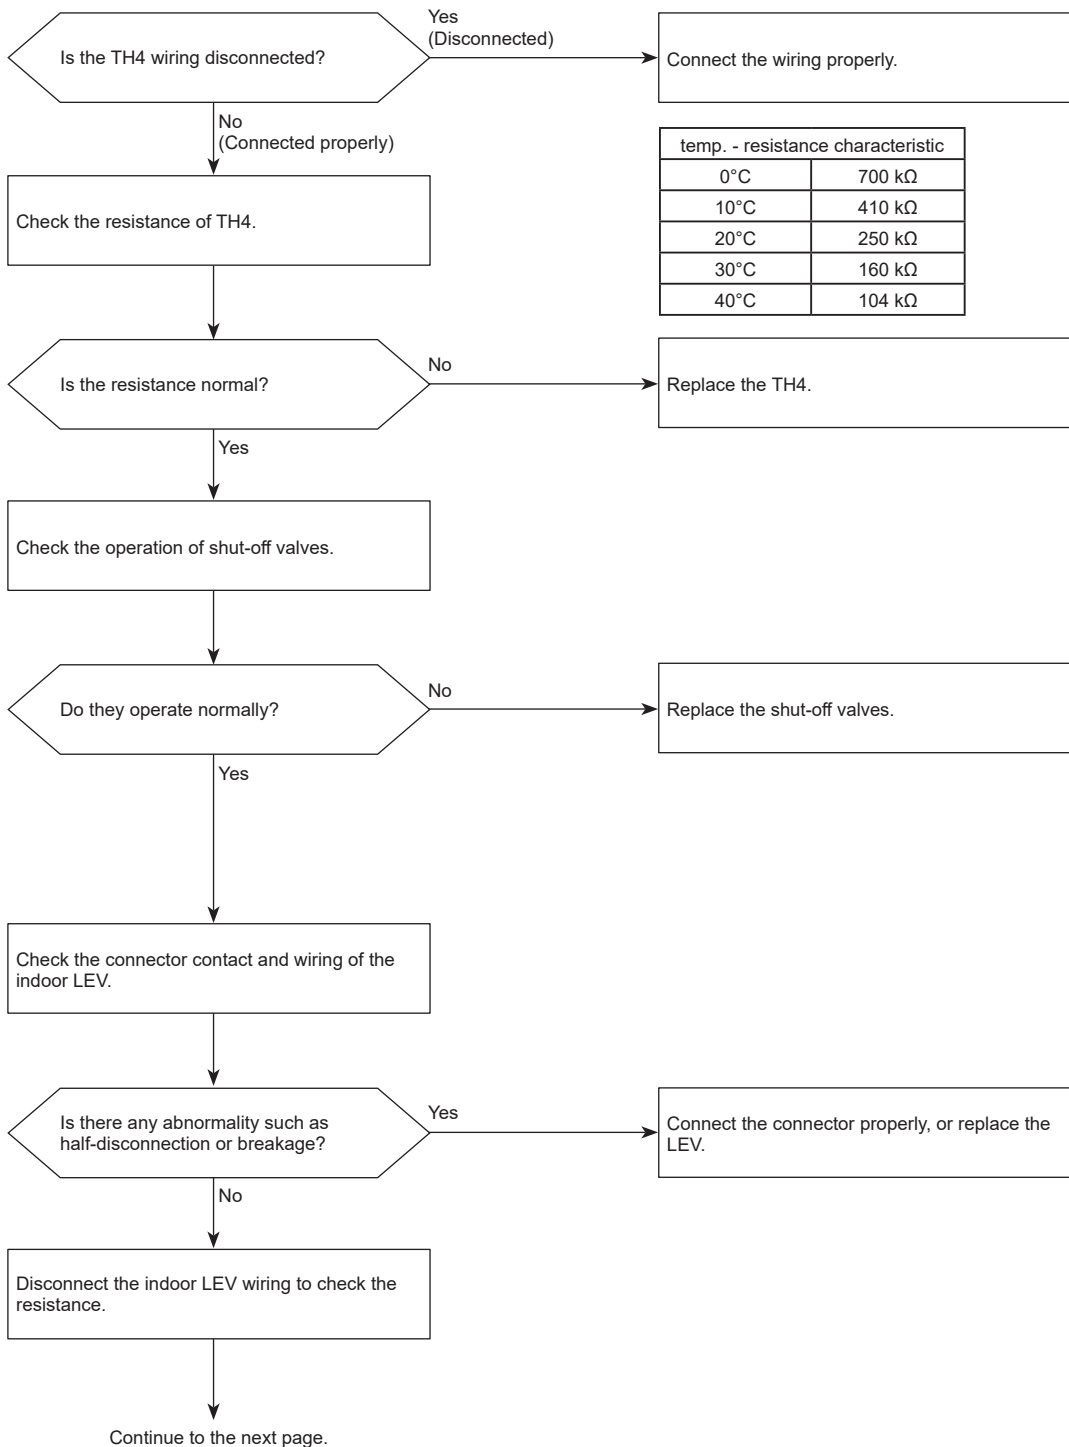

Diagnosis of failure

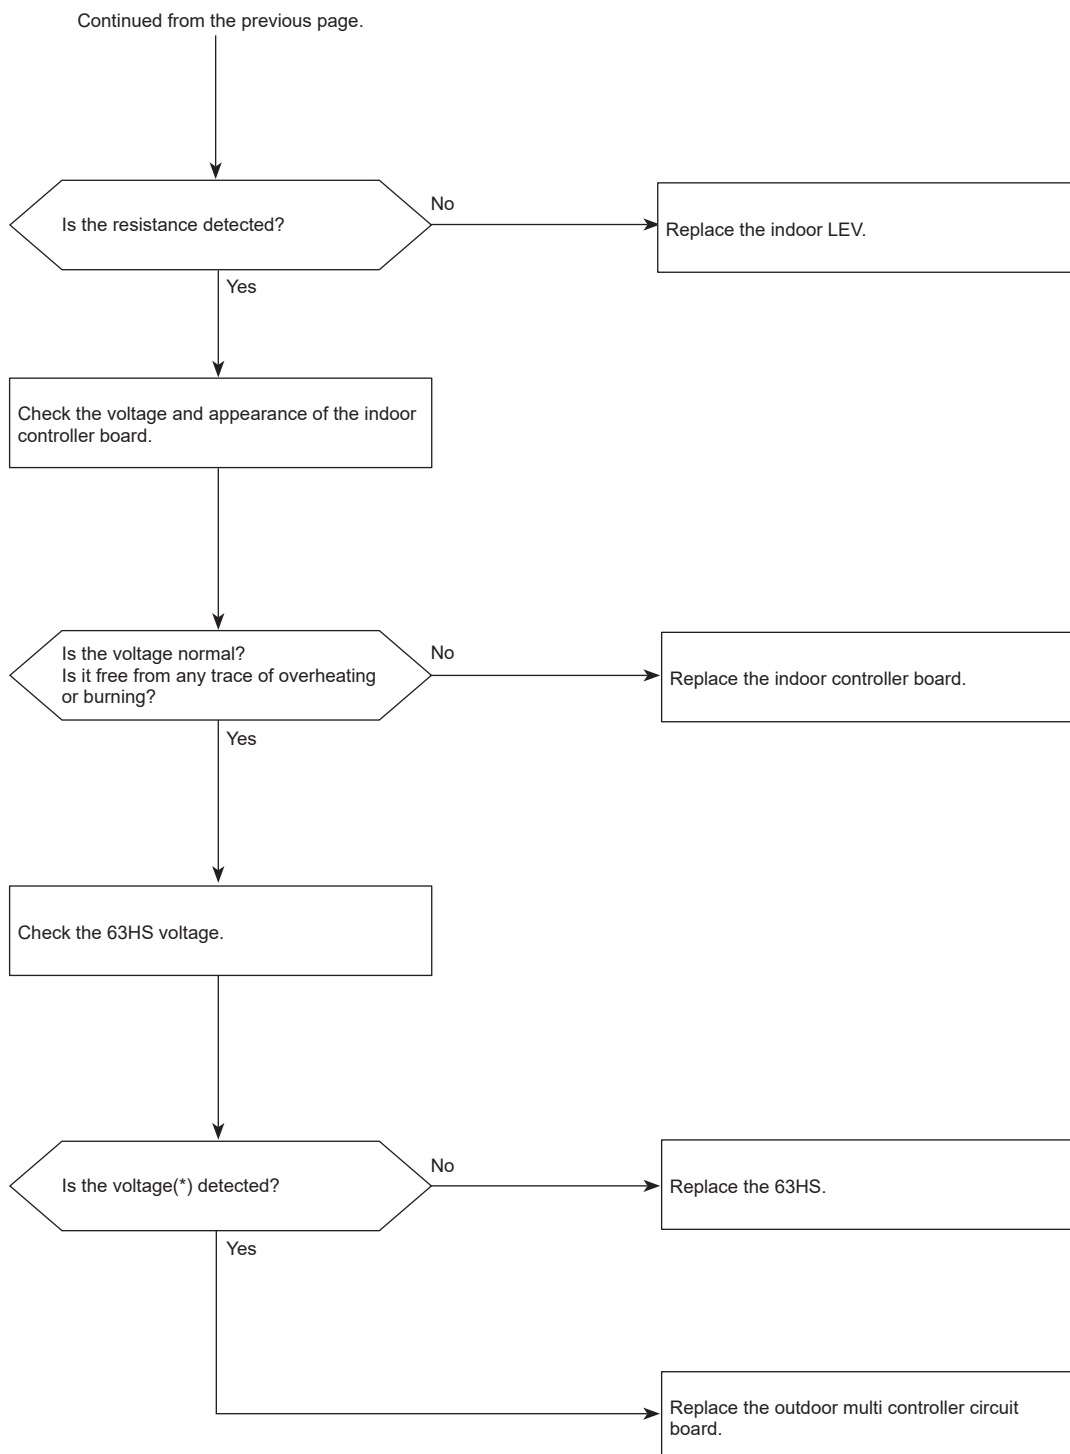

*For the voltage, refer to "How to check the components".

Abnormal points and detection methods

- All of the following conditions have been satisfied for 15 consecutive minutes:
 - The compressor is operating in HEAT mode.
 - Discharge superheat is 80°C or more.
 - Difference between TH7 and TH3 fits the formula of $TH7 - TH3 < 5^{\circ}C$
 - The saturation temperature converted from the pressure detected by the high pressure sensor is below 35°C.
- All of the following conditions have been satisfied:
 - The compressor is in operation.
 - When cooling, discharge superheat is 80°C or more, and the saturation temperature converted from the pressure detected by the high pressure sensor is over -40°C.
 - When heating, discharge superheat is 90°C or more.

Causes and checkpoints

- Defective operation of stop valve (not fully open)
- Defective thermistor
- Defective outdoor multi controller circuit board
- Indoor LEV performance failure
- Gas leakage or shortage
- Defective 63HS
- Malfunction of shut-off valves

TH3:

Thermistor <Outdoor liquid pipe>

TH7:

Thermistor <Ambient>


LEV:

Linear expansion valve


63HS:

High pressure sensor

Diagnosis of failure

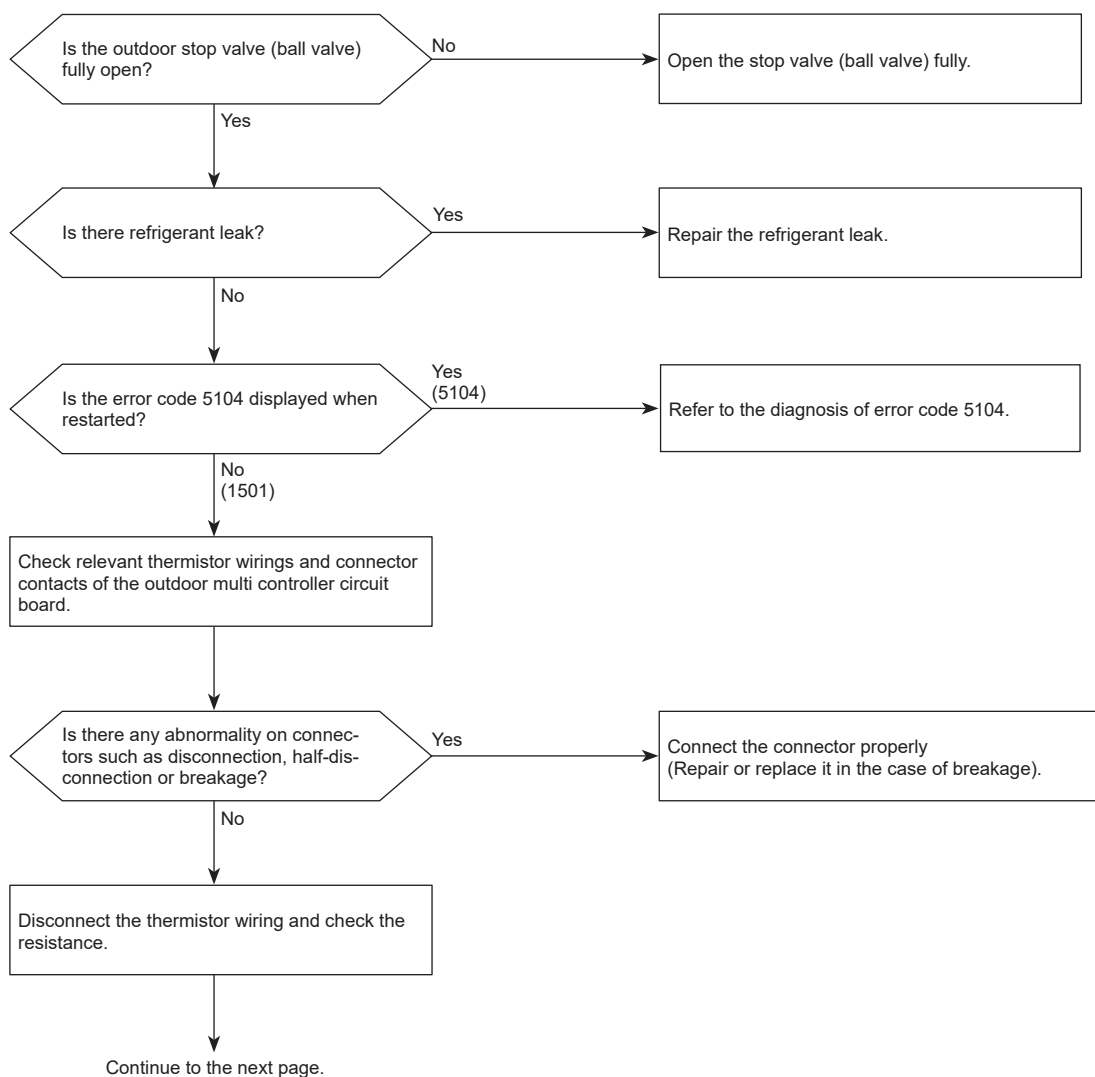

Diagnosis of failure

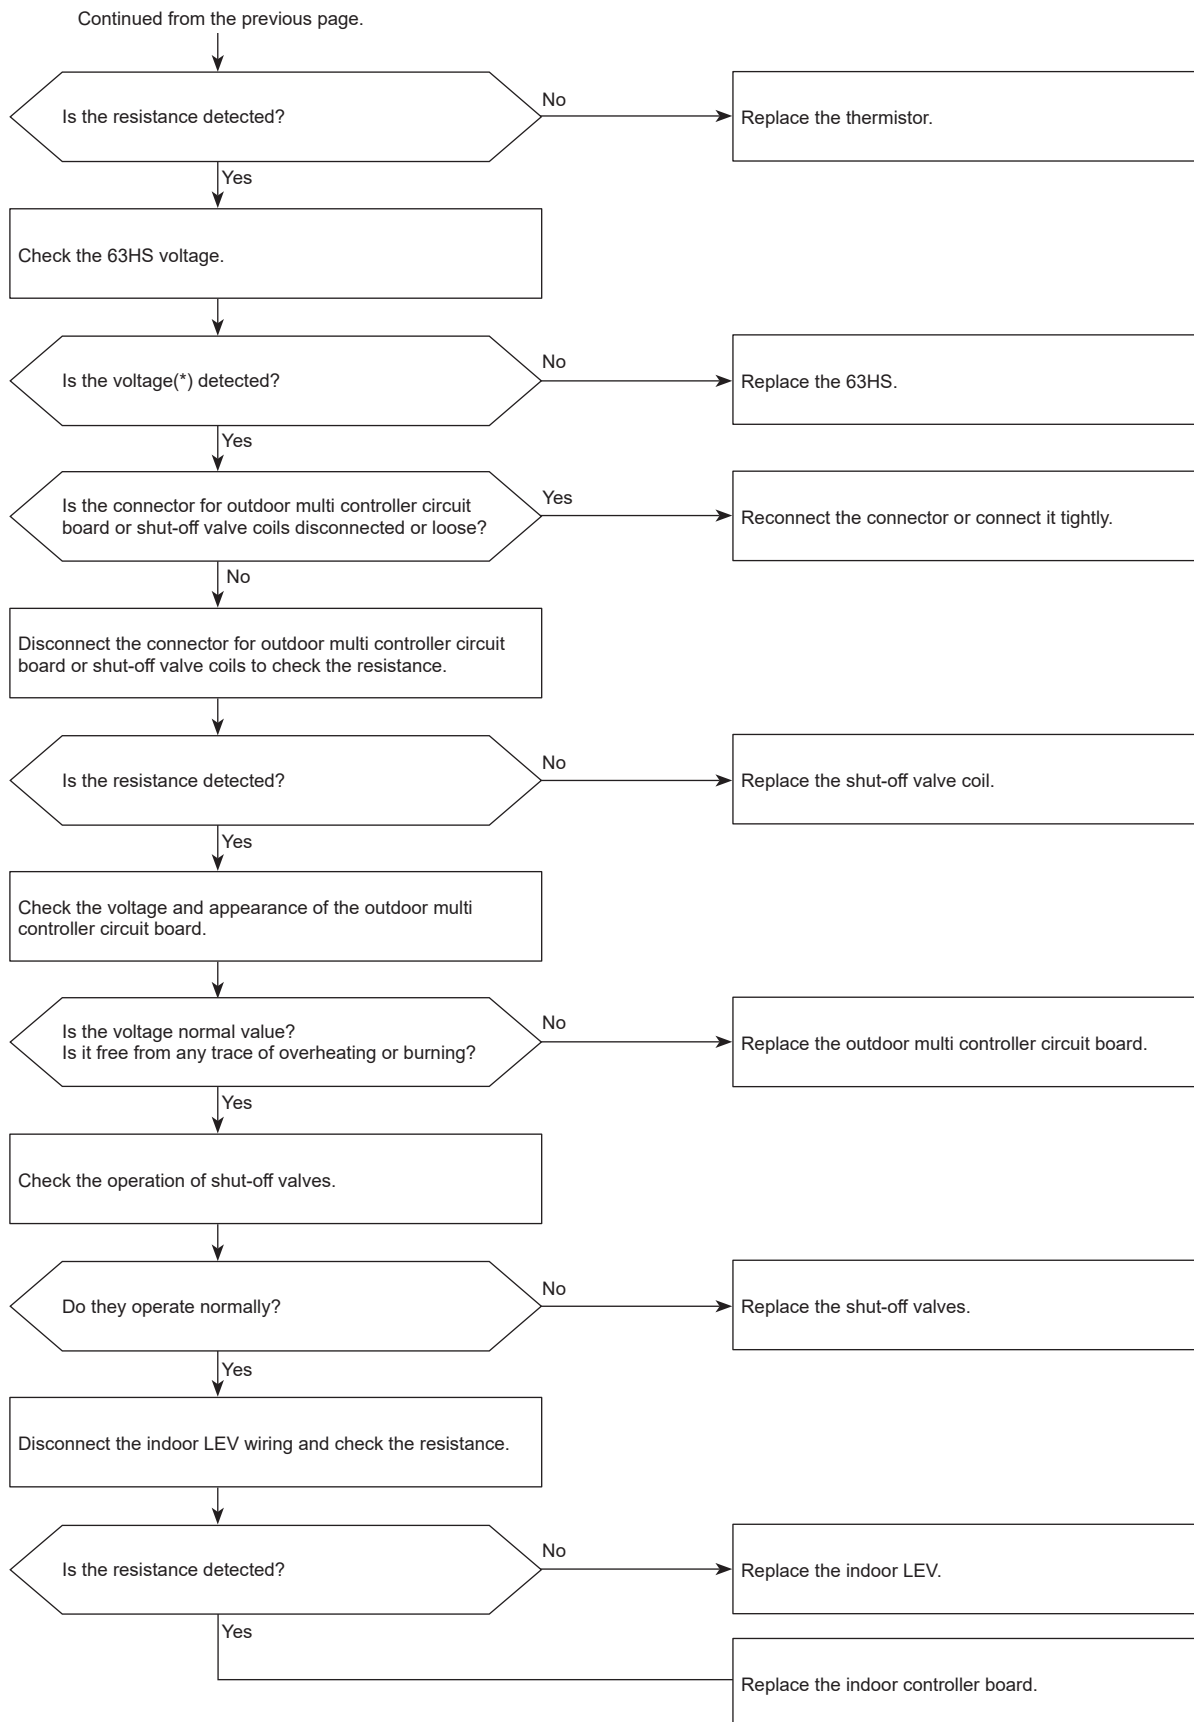

*For the voltage, refer to "How to check the components".

1501 (U2): Closed valve in cooling mode

Abnormal points and detection methods

Stop valve is closed during cooling operation.
Both of the following temperature conditions have been satisfied for 20 minutes or more during cooling operation.

TH22j-TH21j $\geq -2^{\circ}\text{C}$

TH23j-TH21j $\geq -2^{\circ}\text{C}$

Note:

- For indoor unit, the abnormality is detected if an operating unit satisfies the condition.

Causes and checkpoints

- Outdoor liquid/gas valve is closed.
- Malfunction of outdoor LEV (LEV1) (blockage)
- Malfunction of shut-off valves

TH21:

Indoor intake temperature thermistor (RT11 or TH1)

TH22:

Indoor liquid pipe temperature thermistor (RT13 or TH2)


TH23:

Indoor gas pipe temperature thermistor (TH-A to E)

LEV:

Linear expansion valve

Diagnosis of failure

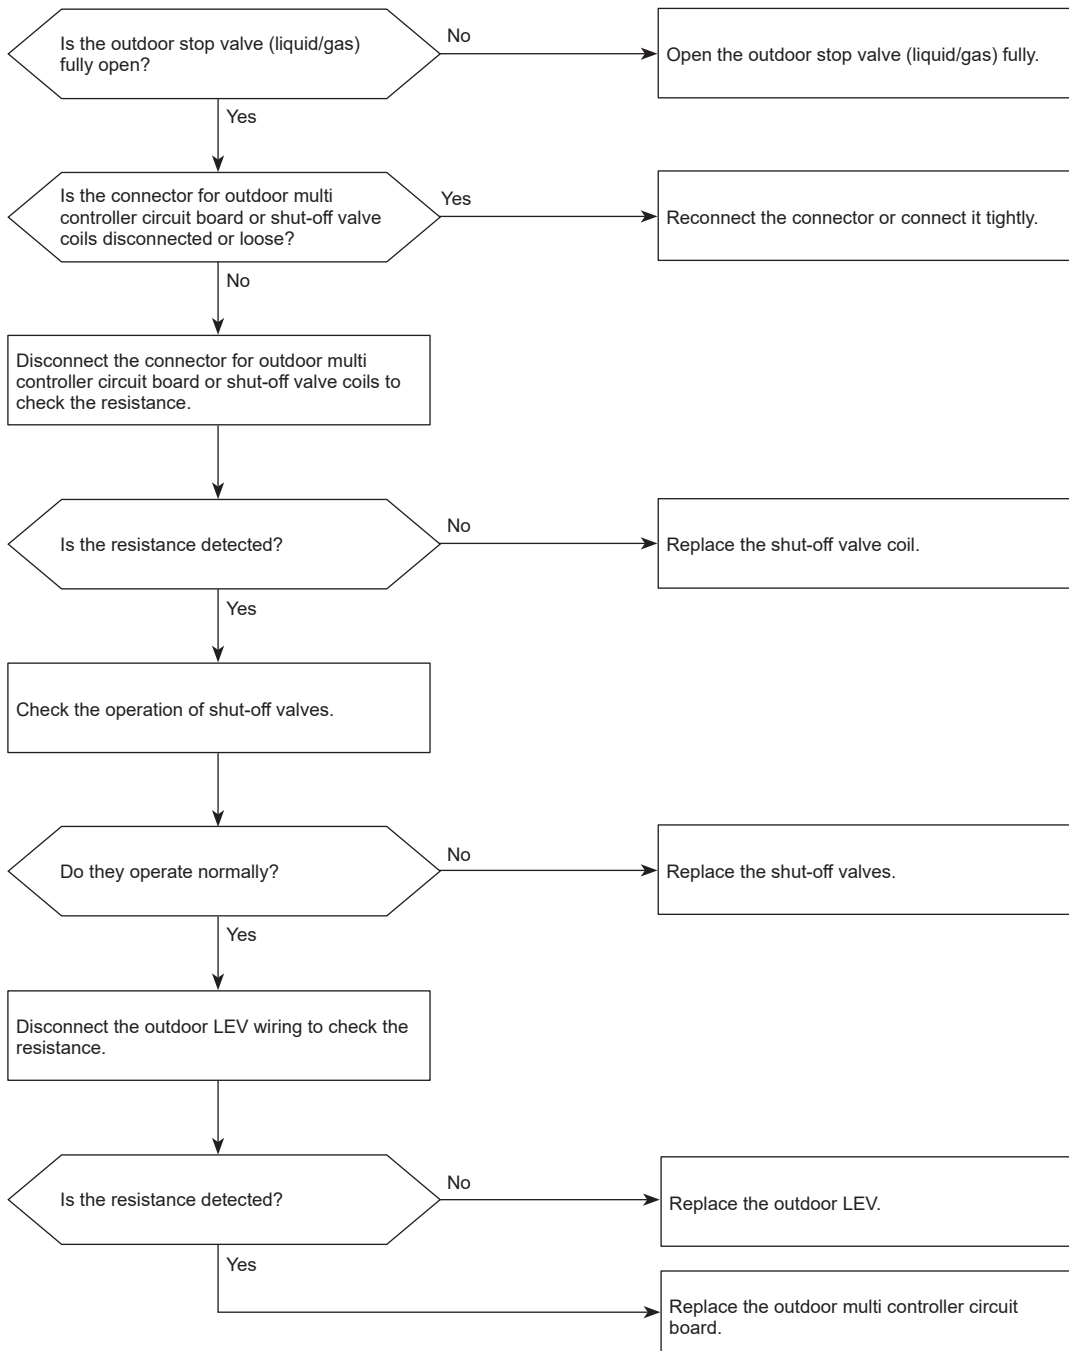

1503 (P6): Freeze protection of plate heat exchanger / Freeze protection of branch box or indoor unit

Abnormal points and detection methods

The purpose of the error code is to prevent indoor unit from freezing or condensation which is caused when a refrigerant keeps flowing into the indoor unit that is not operating.


All of the following conditions have been satisfied:

- The compressor is operating in COOL mode.
- 15 minutes have passed after the startup of the compressor, or the change in the number of operating indoor units is made (including a change by turning thermo-ON/OFF).
- After the condition 2 above is satisfied, the thermistor of indoor unit in STOP detects $TH22j \leq -5^{\circ}\text{C}$ for 5 consecutive minutes.

Causes and checkpoints

- Wrong piping connection between indoor unit and branch box
- Miswiring between indoor unit and branch box
- Miswiring of LEV in branch box
- Malfunction of LEV in branch box

Diagnosis of failure

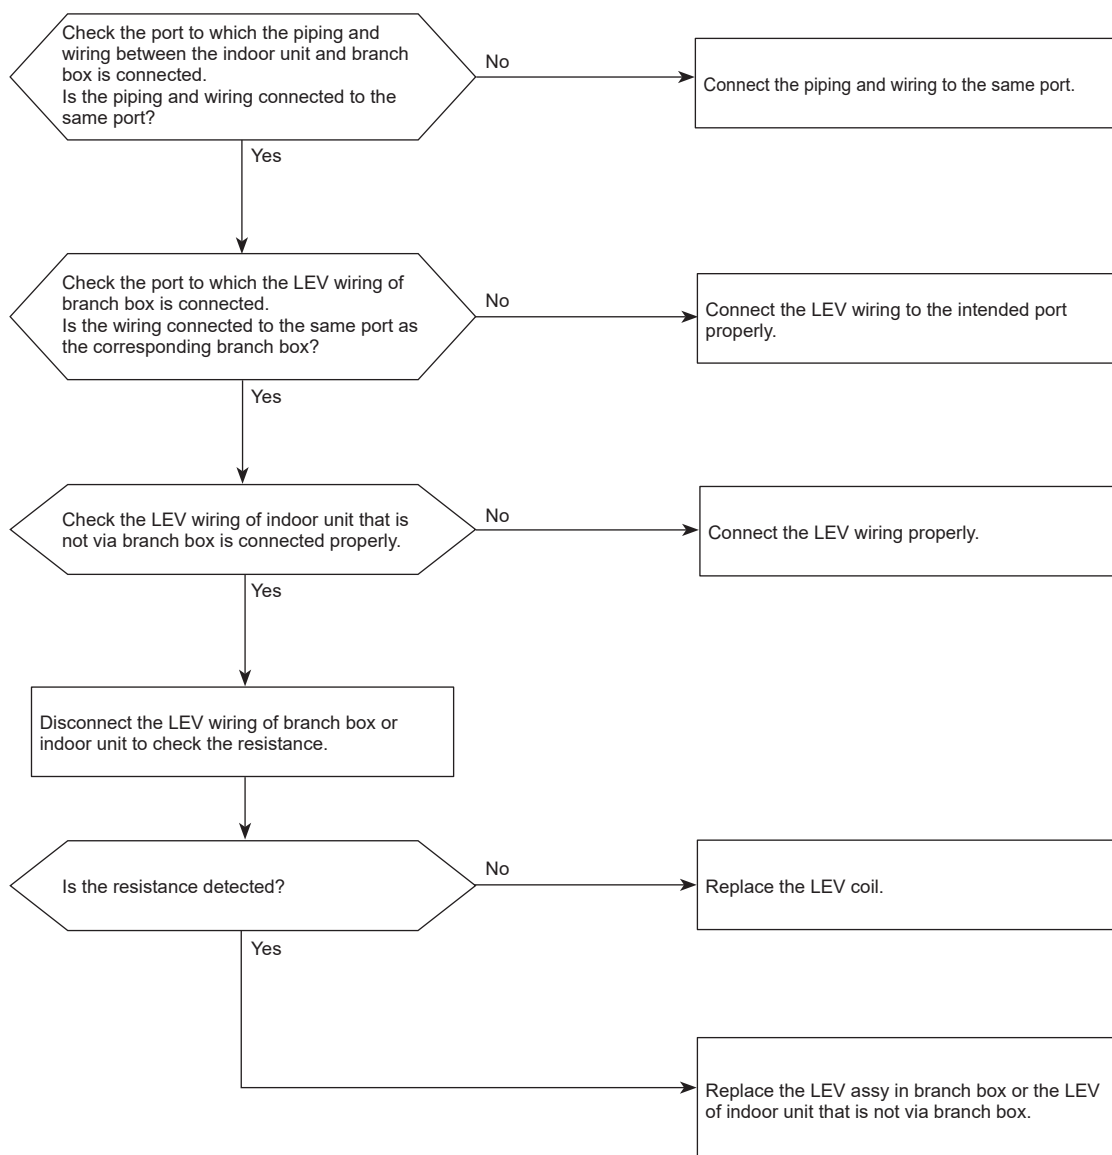

1508 (EF): 4-way valve trouble in heating mode

Abnormal points and detection methods

4-way valve does not operate during heating operation.
Any of the following temperature conditions is satisfied for 3 minutes or more during heating operation when the outdoor temperature is -20°C or more:

$\text{TH22j}-\text{TH21j} \leq -10^{\circ}\text{C}$

$\text{TH23j}-\text{TH21j} \leq -10^{\circ}\text{C}$

$\text{TH22j} \leq 3^{\circ}\text{C}$

$\text{TH23j} \leq 3^{\circ}\text{C}$

Note:

- For indoor unit, the abnormality is detected if an operating unit satisfies the condition.

TH21:

Indoor intake temperature thermistor (RT11 or TH1)

TH22:

Indoor liquid pipe temperature thermistor (RT13 or TH2)


TH23:

Indoor gas pipe temperature thermistor (TH-A to E)

Causes and checkpoints

- 4-way valve failure
- Disconnection or failure of 4-way valve coil
- Clogged drain pipe
- Disconnection or loose connection of connectors
- Malfunction of input circuit on outdoor multi controller circuit board
- Defective outdoor power circuit board

Diagnosis of failure

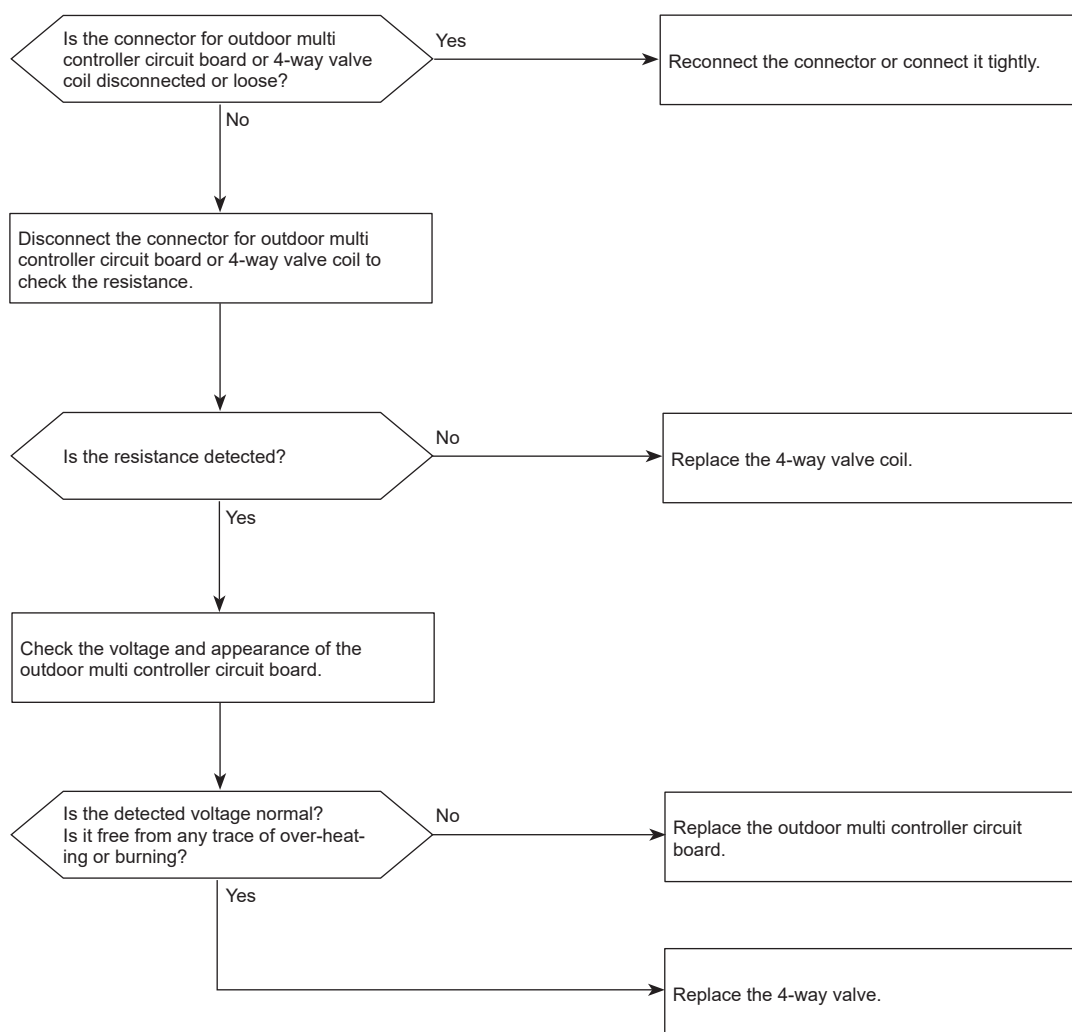

Refer to "How to check the parts" for ohm values.

1521/1522/1524 (FL/EF): Refrigerant leakage/ Refrigerant sensor failure

Abnormal points and detection methods

Refrigerant is leaking from the air conditioner.
The refrigerant sensor has detected refrigerant leak.
Refrigerant is leaking in the room where the alarm is beeping.
In the case of EN378 system (SW5-7 ON), this error is also caused by a refrigerant sensor failure.


Causes and checkpoints

- Refrigerant leak from air conditioner
- Refrigerant leak from piping
- False detection (The refrigerant sensor reacted to other gas.)
- A refrigerant sensor has failed.

Notes:

- When this error occurs, both of the alarm in the applicable room and the supervisor mode alarm beep. Also, the system closes the shut-off valve and performs refrigerant recovery.
- When this error occurs, ventilate the room.
- When this error occurs, do not turn off the power until the fan in the outdoor unit stops.

Diagnosis of failure

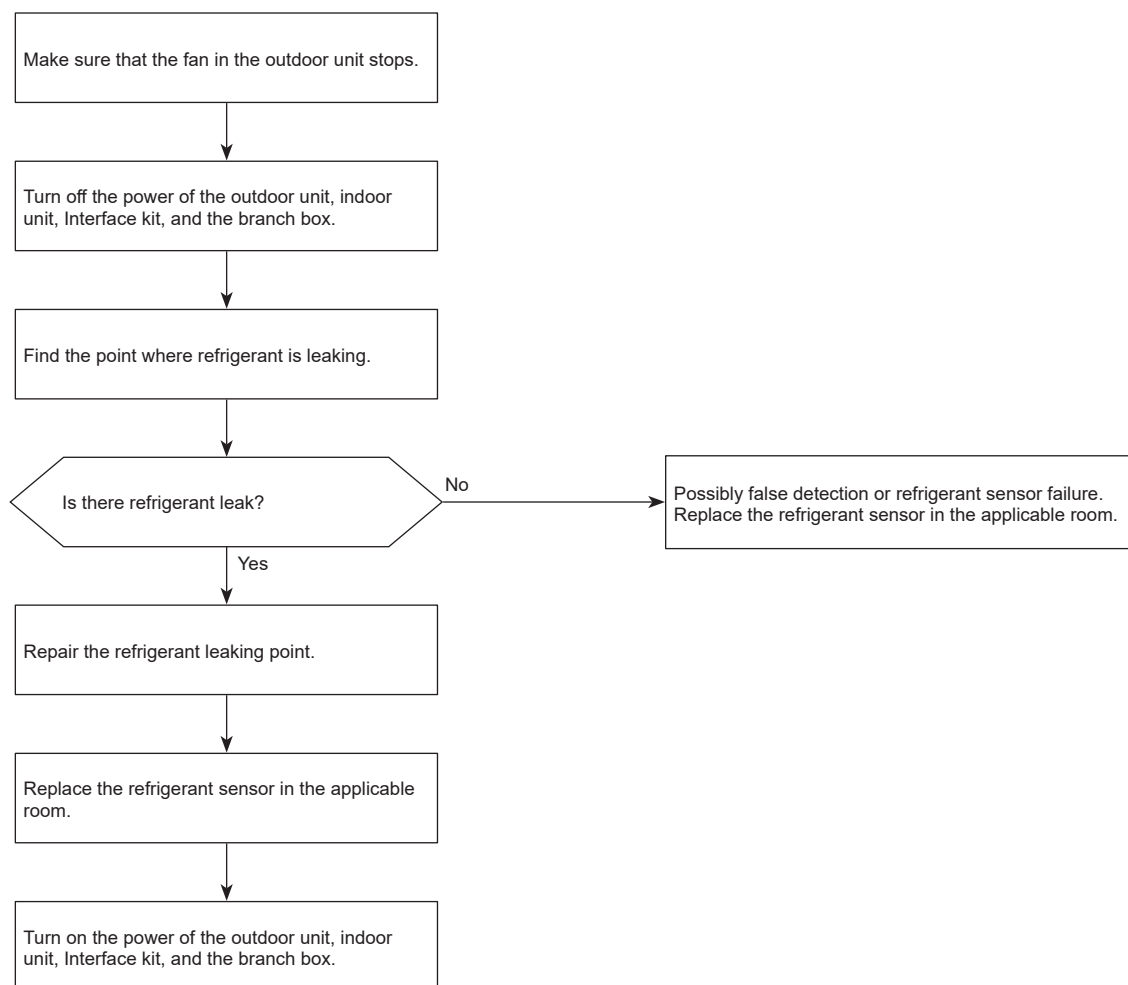


Abnormal points and detection methods

Overcurrent of DC bus or compressor is detected within 30 seconds after the compressor starts the operation.


Causes and checkpoints

- Closed stop valve
- Decrease of power supply voltage
- Looseness, disconnection, or wrong phase of compressor wiring connection
- Incorrect DIP-SW setting of model selection on the outdoor controller board
- Defective compressor
- Defective outdoor power circuit board
- Malfunction of shut-off valves

Diagnosis of failure

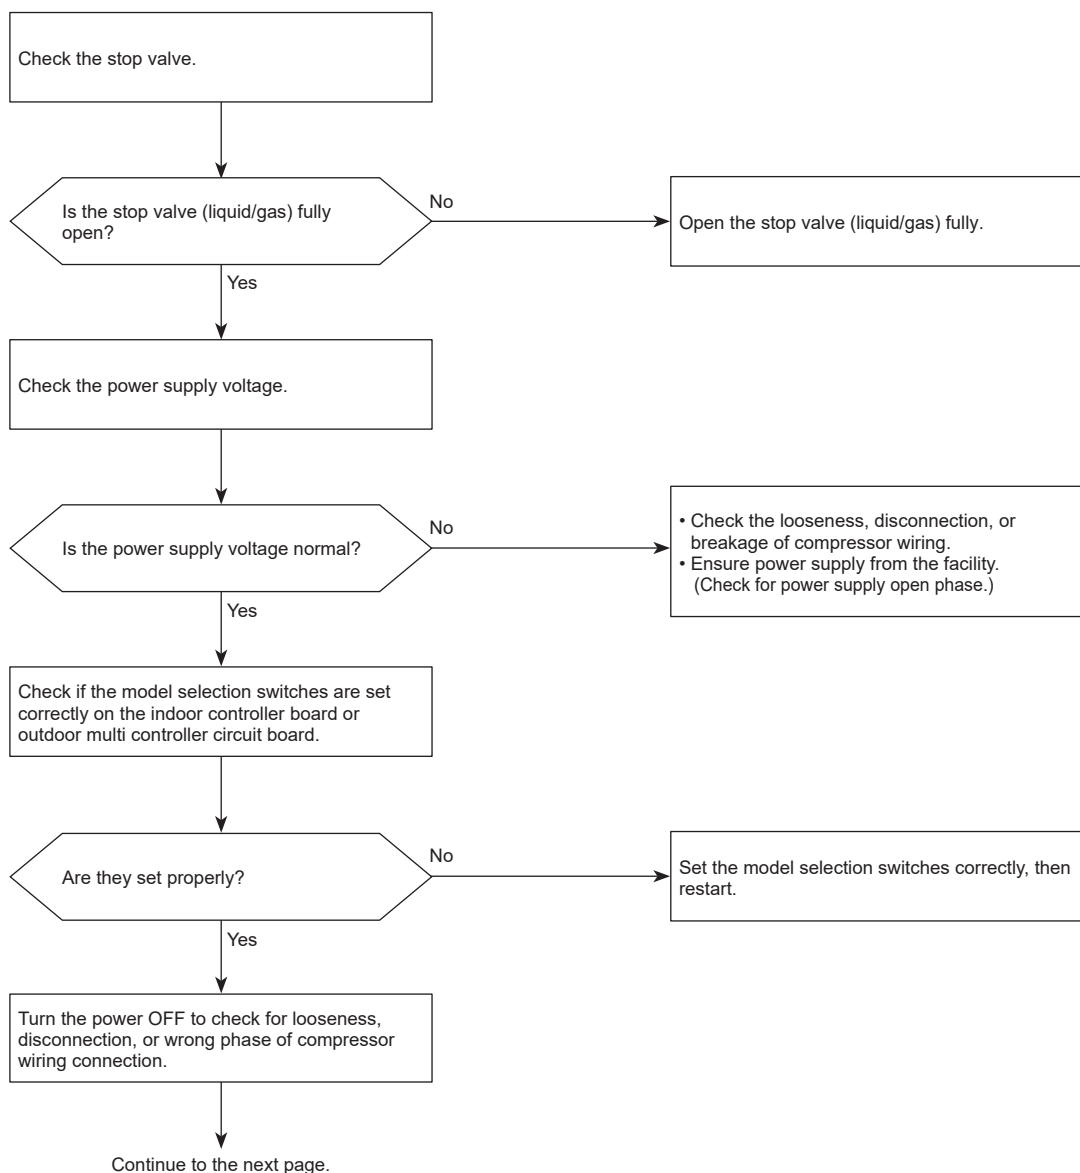

Diagnosis of failure

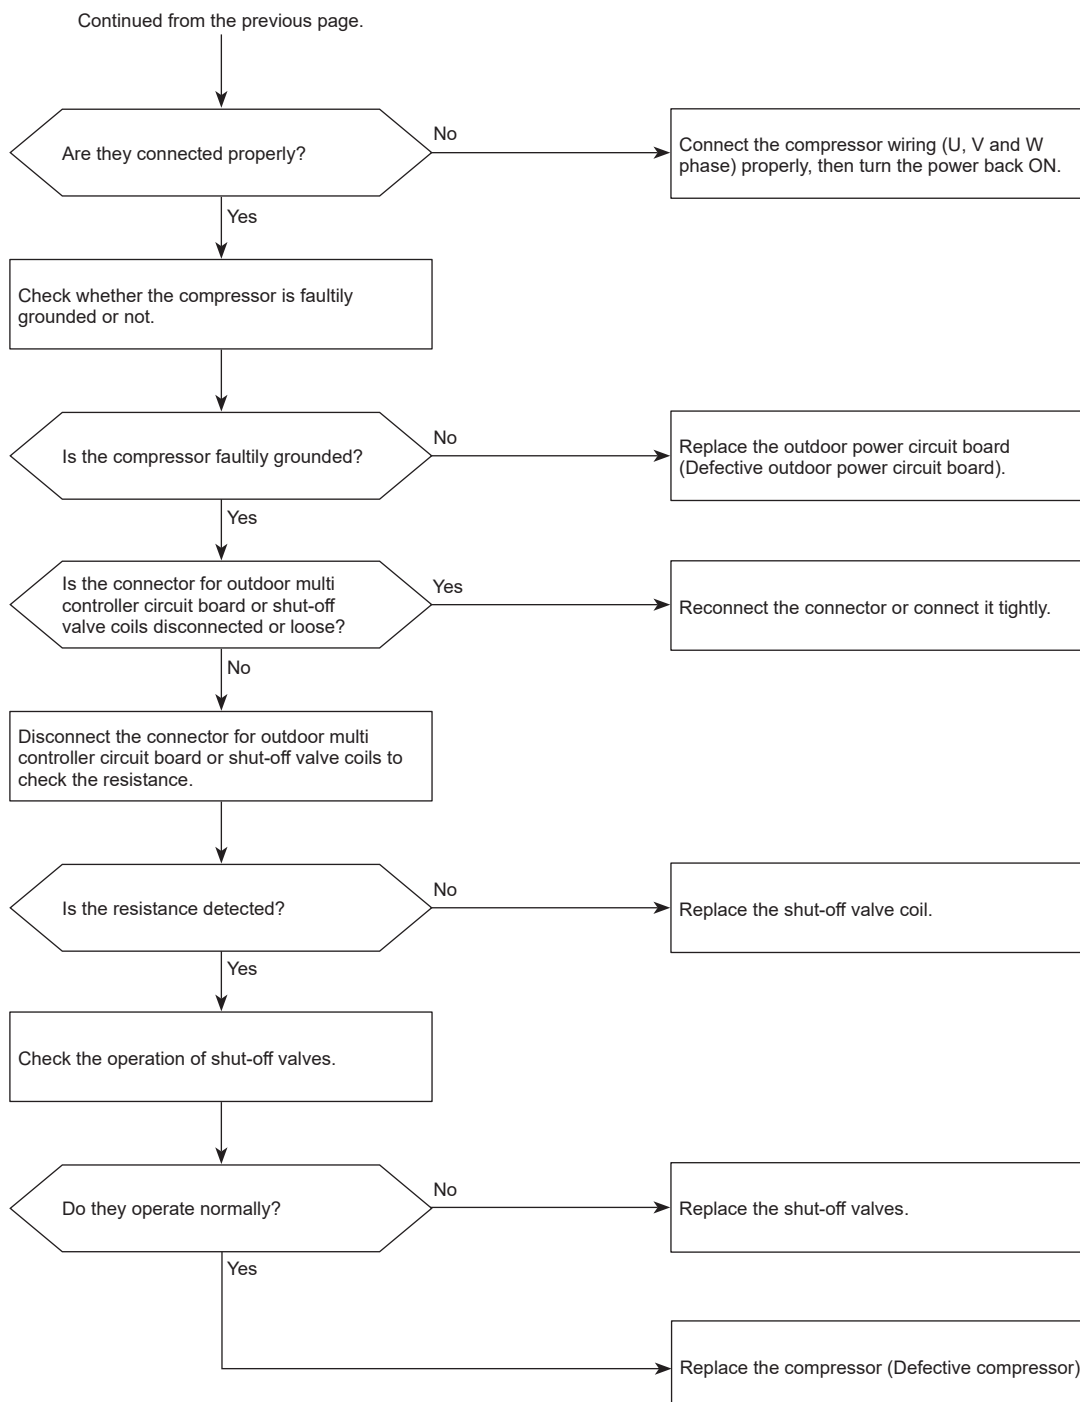

4210 (UP): Compressor overcurrent interruption/Failure in 12 VDC power supply circuit on power circuit board

Chart 1 of 2


Abnormal points and detection methods

- Overcurrent of DC bus or compressor is detected 30 or more seconds after the compressor starts the operation.
- 12 VDC power is not supplied from the 12 VDC supply circuit on the power circuit board.

Causes and checkpoints

- Closed outdoor stop valve
- Decrease of power supply voltage
- Looseness, disconnection, or wrong phase of compressor wiring connection
- Model selection error on indoor controller board or outdoor multi controller circuit board
- Defective compressor
- Defective outdoor power circuit board
- Defective outdoor multi controller circuit board
- Malfunction of indoor/outdoor unit fan
- Short-cycle of indoor/outdoor unit
- Malfunction of shut-off valves


Diagnosis of failure

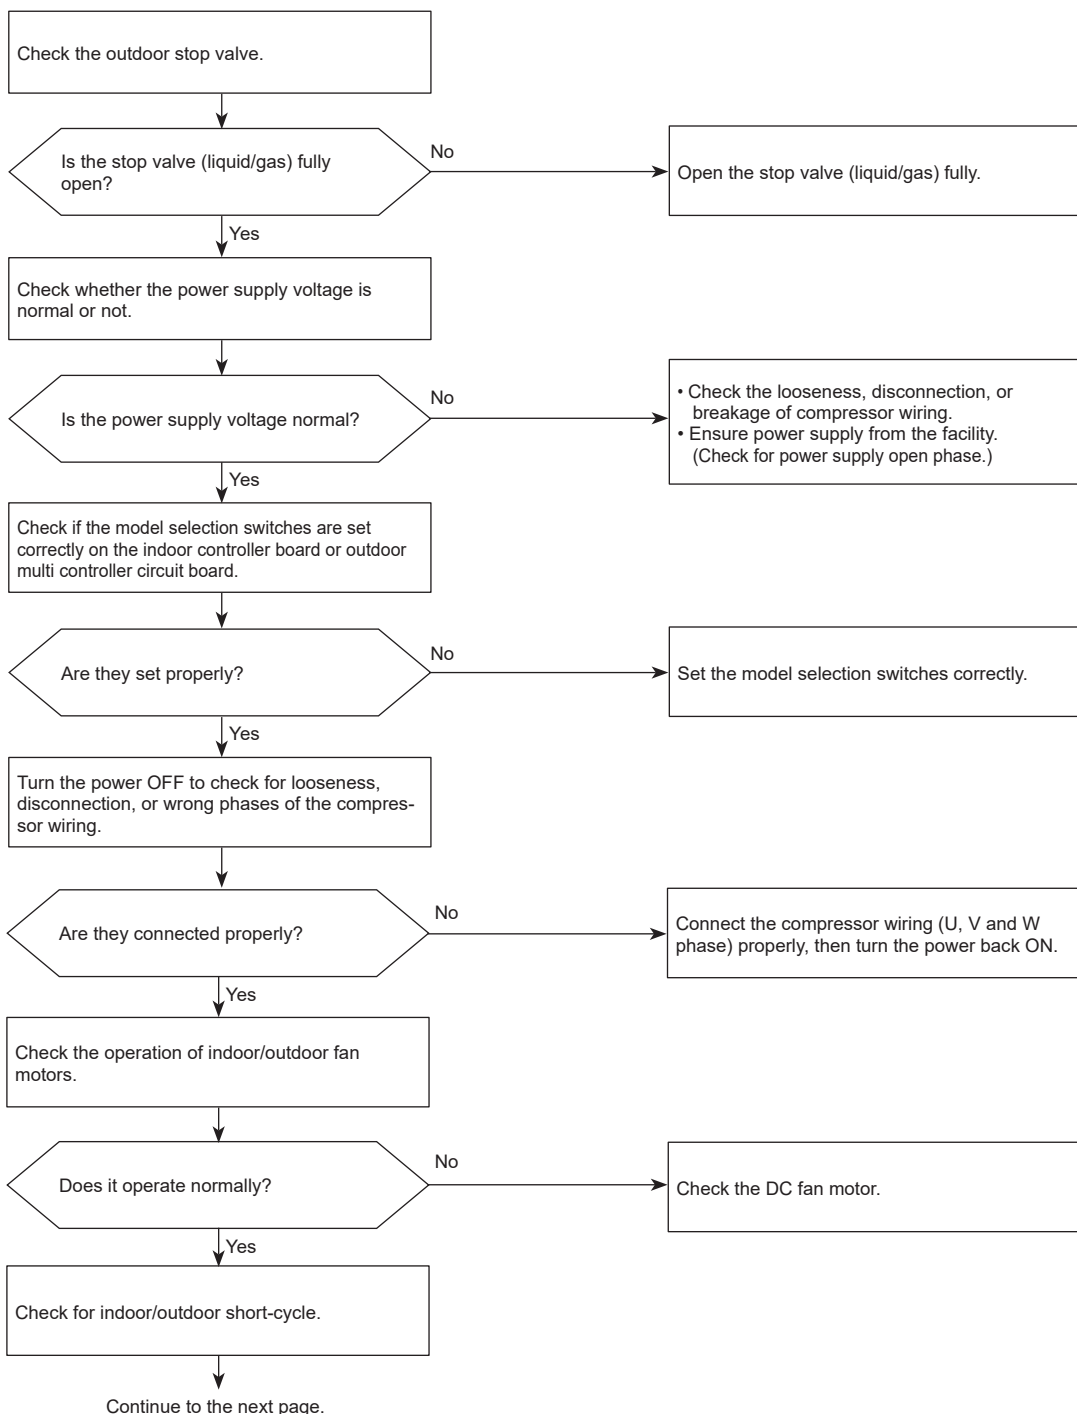

4210 (UP): Compressor overcurrent interruption/Failure in 12 VDC power supply circuit on power circuit board

Chart 2 of 2

Diagnosis of failure

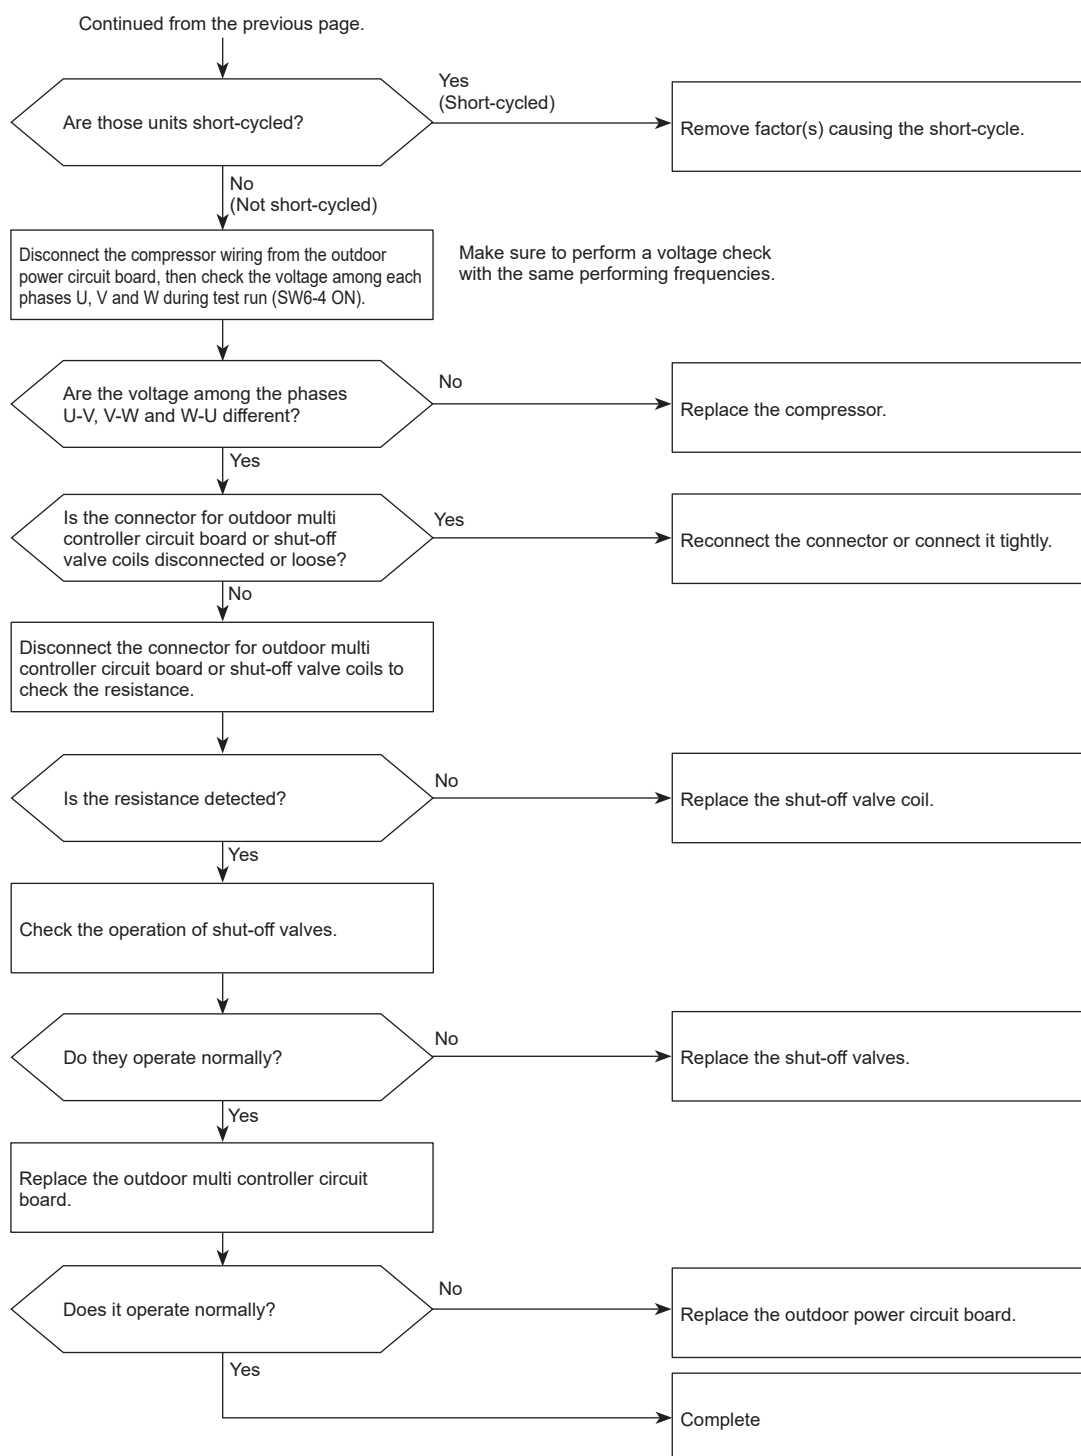

4220 (U9): Voltage shortage/Overvoltage/PAM error/L1 open phase/ Primary current sensor error/Power synchronization signal error

Chart 1 of 2

Abnormal points and detection methods

Any of the following symptoms are detected;

- Decrease of DC bus voltage to 200 V (1-phase), 350 V (3-phase)
- Increase of DC bus voltage to 400 V (1-phase), 760 V (3-phase)
- DC bus voltage stays at 310 V or less for 30 consecutive seconds when the operational frequency is over 20 Hz.

Any of the following conditions is satisfied while the detections value of primary current is 0.1 A or less.

- The operational frequency is 40 Hz or more.
- The compressor current is 6 A or more.

Causes and checkpoints


- Decrease/increase of power supply voltage
- L1 open-phase (3-phase only)
- Primary current sensor failure
- Disconnection of compressor wiring
- Malfunction of 52C relay
- Defective outdoor power circuit board
- Malfunction of 52C relay driving circuit on outdoor multi controller circuit board
- Disconnection of CN5 (3-phase only)
- Disconnection of CN2
- Malfunction of primary current detecting circuit on outdoor power circuit board
- Malfunction of resistor connected to 52C relay on outdoor power circuit board (3-phase only)
- Short circuit of power supply voltage wiring

1-phase: 1-phase model

3-phase: 3-phase 3-wire model

The black square (■) indicates a switch position.

Diagnosis of failure

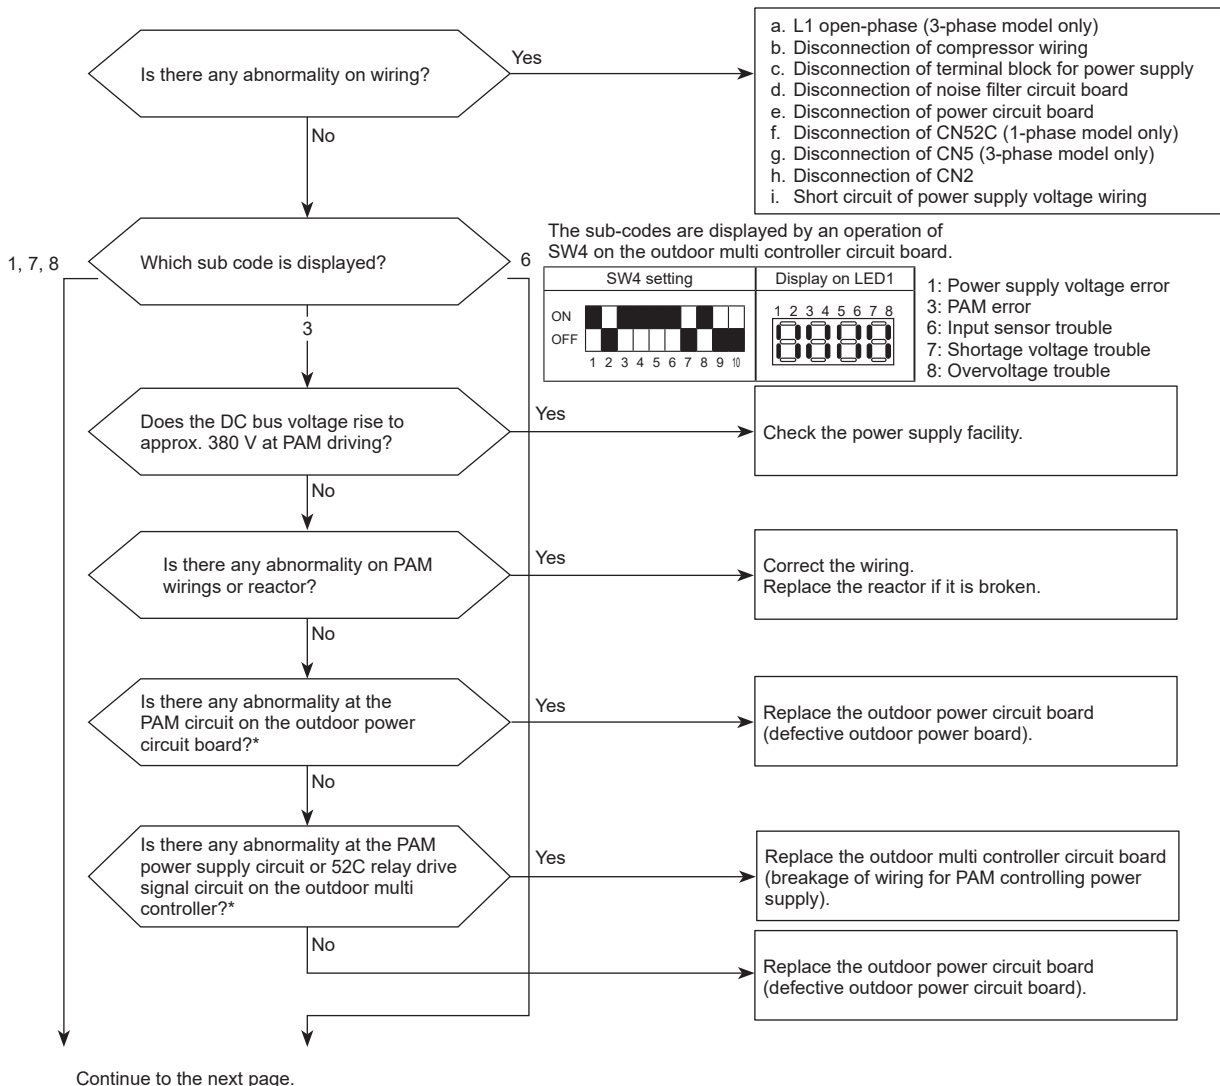

*Refer to "How to check the parts".


4220 (U9): Voltage shortage/Overvoltage/PAM error/L1 open phase/ Primary current sensor error/Power synchronization signal error

Chart 2 of 2

The black square (■) indicates a switch position.

Diagnosis of failure

Continued from the previous page.

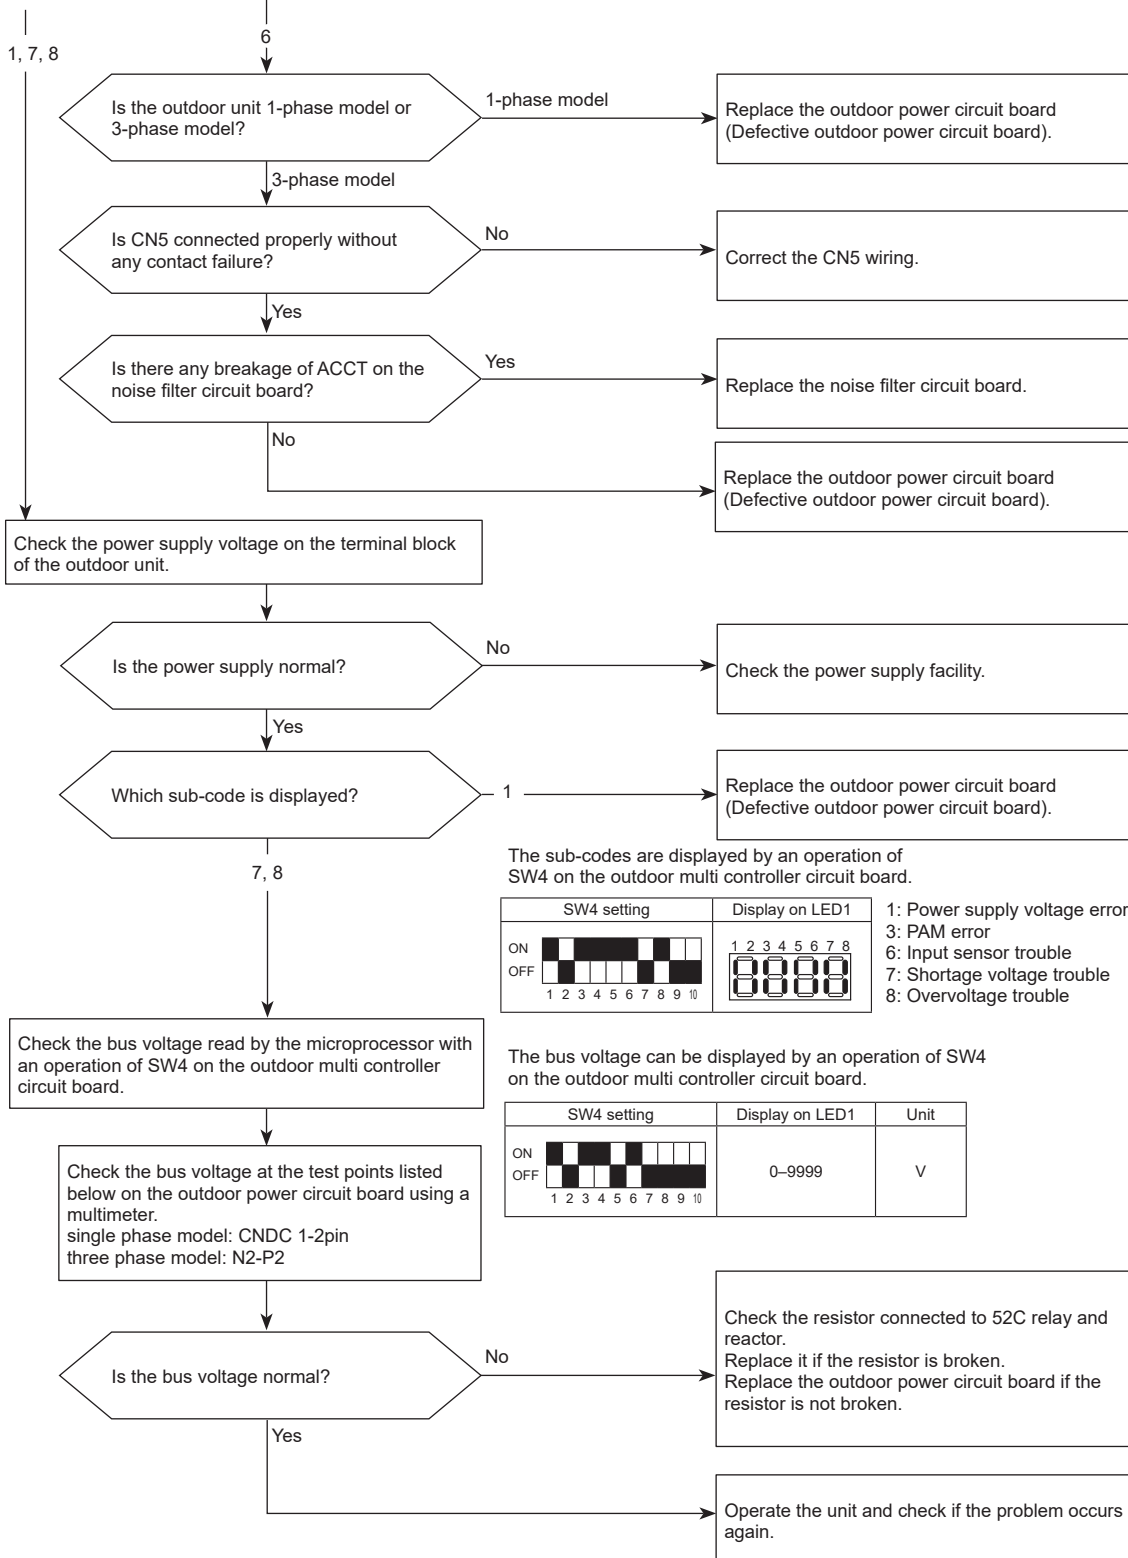

4230 (U5): Heat sink temperature trouble

Abnormal points and detection methods


TH8 detects a temperature outside the specified range during compressor operation.

TH8: Thermistor <Heat sink>

Causes and checkpoints

- Blocked outdoor fan
- Malfunction of outdoor fan motor
- Blocked airflow path
- Rise of ambient temperature
- Characteristic defect of thermistor
- Malfunction of input circuit on outdoor power circuit board
- Malfunction of outdoor fan driving circuit

Diagnosis of failure

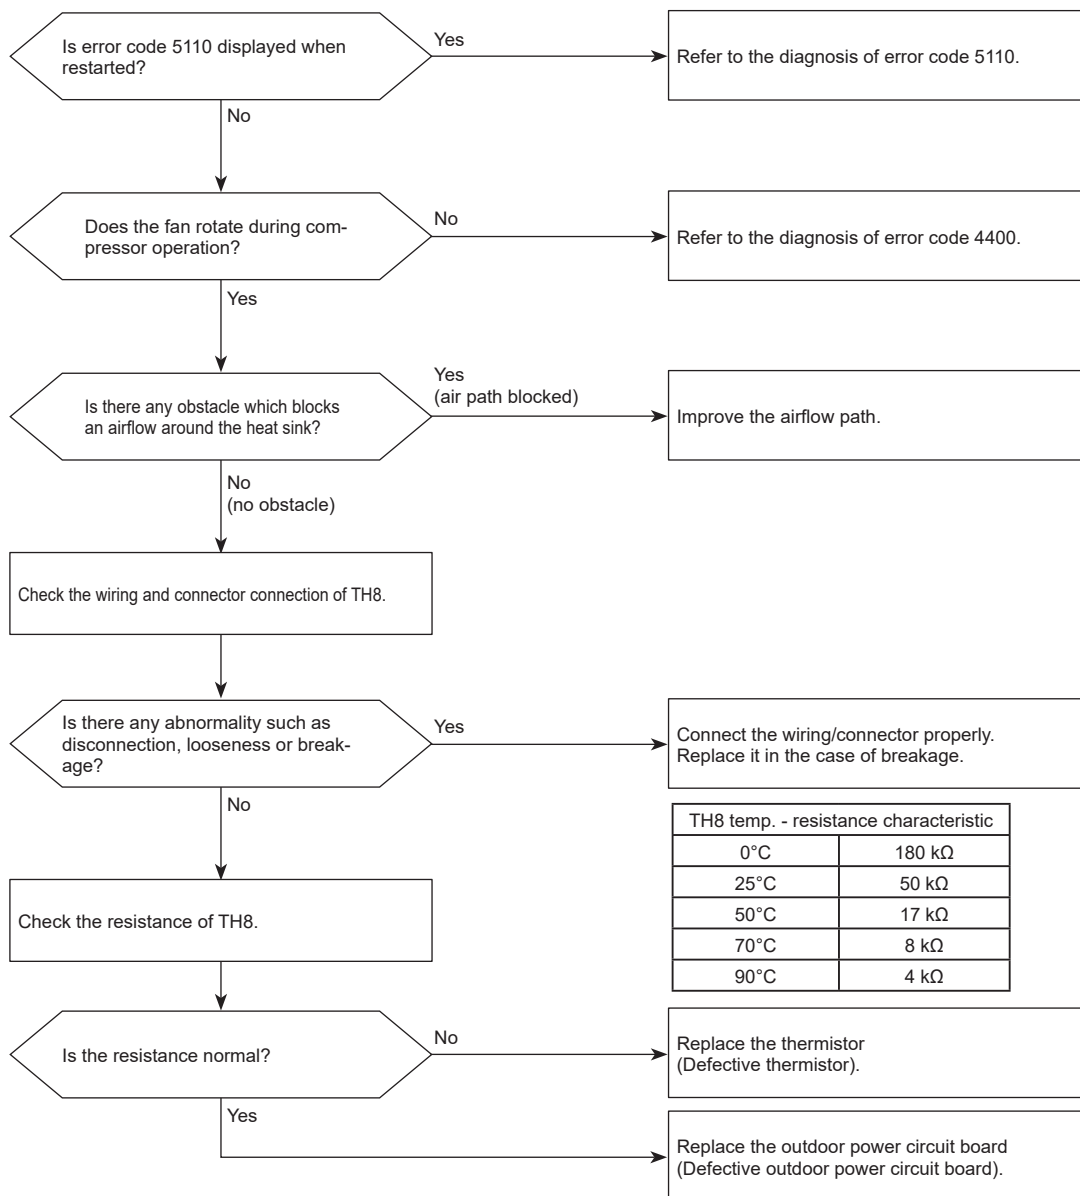

4250 (U6): Power module trouble

Abnormal points and detection methods


Both of the following conditions have been satisfied:

- Overcurrent of DC bus or compressor is detected during compressor operation.
- Inverter power module is determined to be faulty.

Causes and checkpoints

- Short-circuit caused by looseness or disconnection of compressor wiring
- Defective compressor
- Defective outdoor power circuit board

Diagnosis of failure

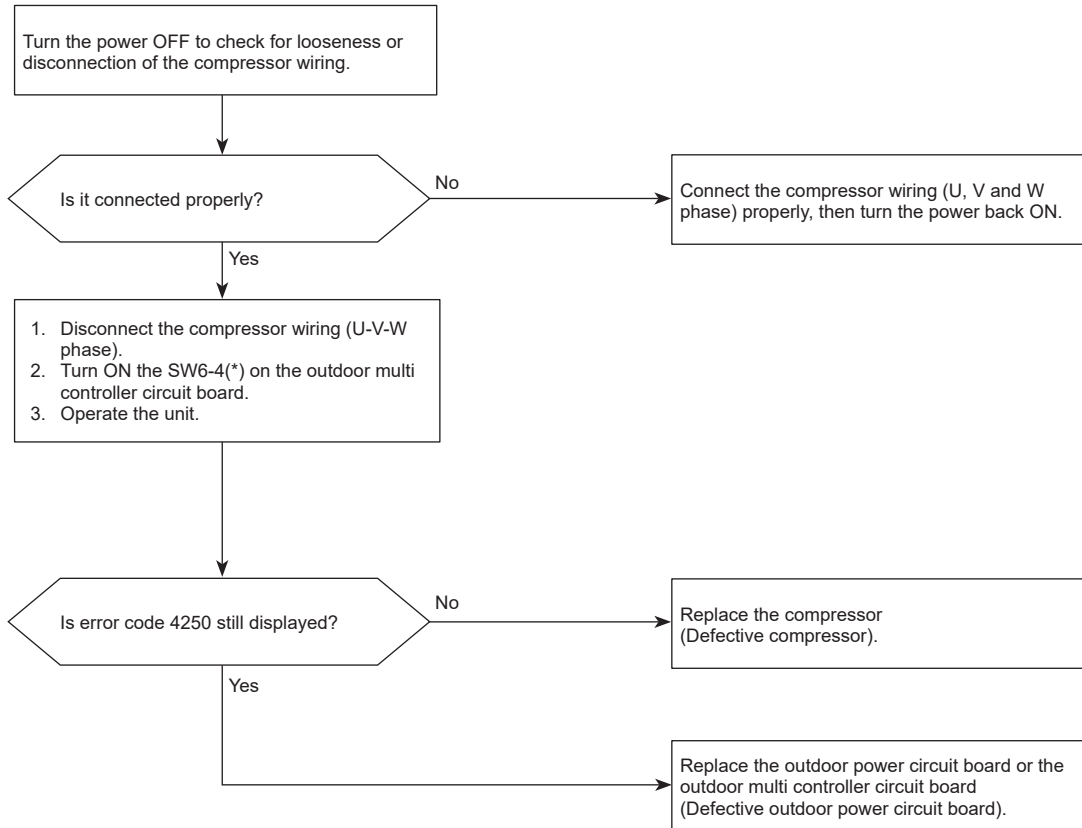

* SW6-4 ON: Ignore 5300 (UH) error.

4400 (U8): Fan trouble (Outdoor unit)


Abnormal points and detection methods

No rotational frequency is detected, a value outside the specified range is detected during fan motor operation.

Causes and checkpoints

- Malfunction of fan motor
- Disconnection of CNF connector
- Defective outdoor multi controller circuit board

Diagnosis of failure

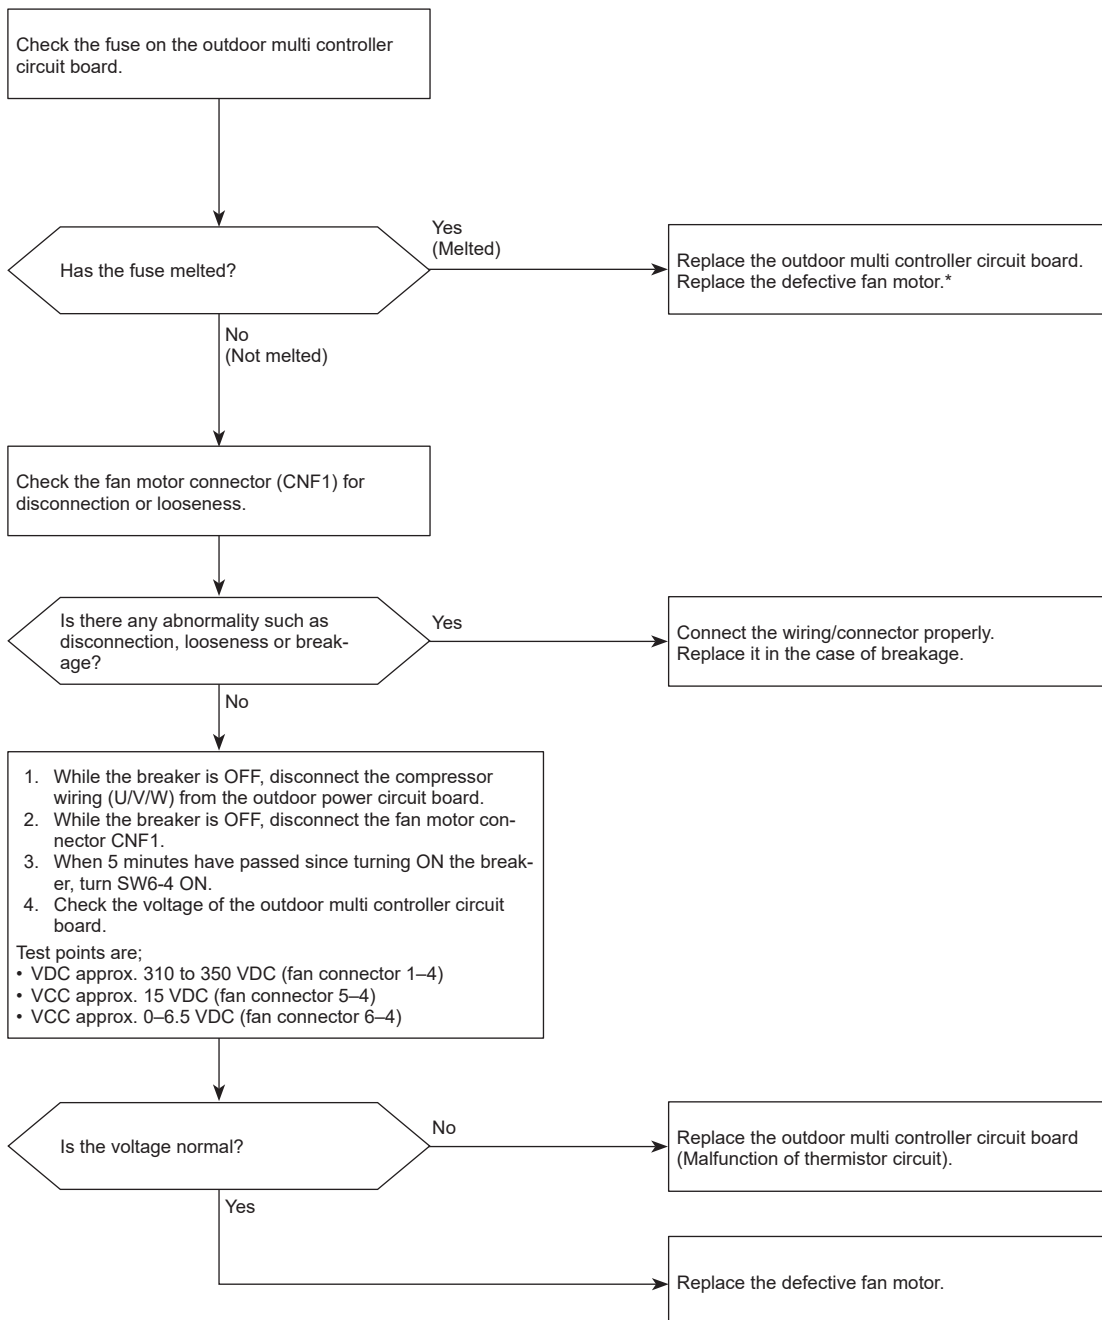

* For the detail, refer to "Check method of DC fan motor (fan motor/outdoor multi controller circuit board)".

Note:

- Set SW6-4 OFF after the troubleshooting completes.
- The fan sometimes starts on-off cycle operation during low-load operation or cooling at low outside temperature. It is not abnormal; the operation ensures reliability of the product.

5101 (U3): Compressor temperature thermistor (TH4) open/short <Detected in outdoor unit>

Abnormal points and detection methods

TH4 is found to be open/short.
(The open/short detection is disabled for 10 minutes after compressor starts, during defrosting operation, or for 10 minutes after returning from the defrosting operation.)

Open:

3°C or less*

Short:

217°C or more

TH4:


Thermistor <Compressor>

Causes and checkpoints

- Disconnection or contact failure of connectors
- Faulty thermistor
- Defective outdoor multi controller circuit board

The black square (■) indicates a switch position.

Diagnosis of failure

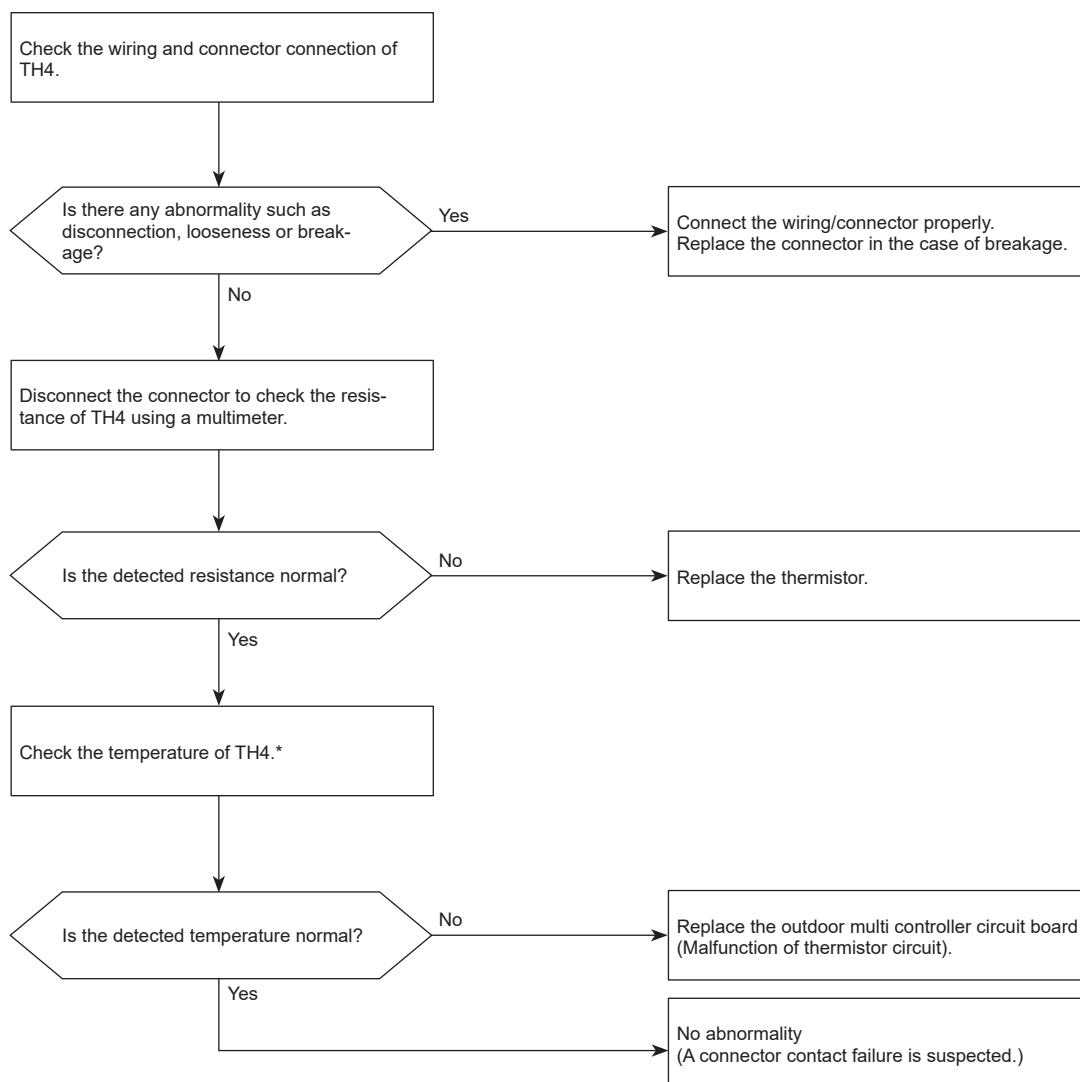

* The detected temperature of TH4 can be displayed by an operation of SW4 on the outdoor multi controller circuit board.

SW4 setting		Display on LED1	Unit
ON		-99.9~999.9	°C
OFF			
	1 2 3 4 5 6 7 8 9 10		

5102 (U4): Suction pipe temperature thermistor (TH6) open/short <Detected in outdoor unit>

Abnormal points and detection methods

TH6 is found to be open/short.
(The open/short detection is disabled for 10 seconds to 10 minutes after compressor starts, during defrosting operation, or for 10 minutes after returning from the defrosting operation.)

Open:

–40°C or less

Short:

90°C or more

TH6:


Thermistor <Suction pipe>

Causes and checkpoints

- Disconnection or contact failure of connectors
- Faulty thermistor
- Defective outdoor multi controller circuit board

The black square (■) indicates a switch position.

Diagnosis of failure

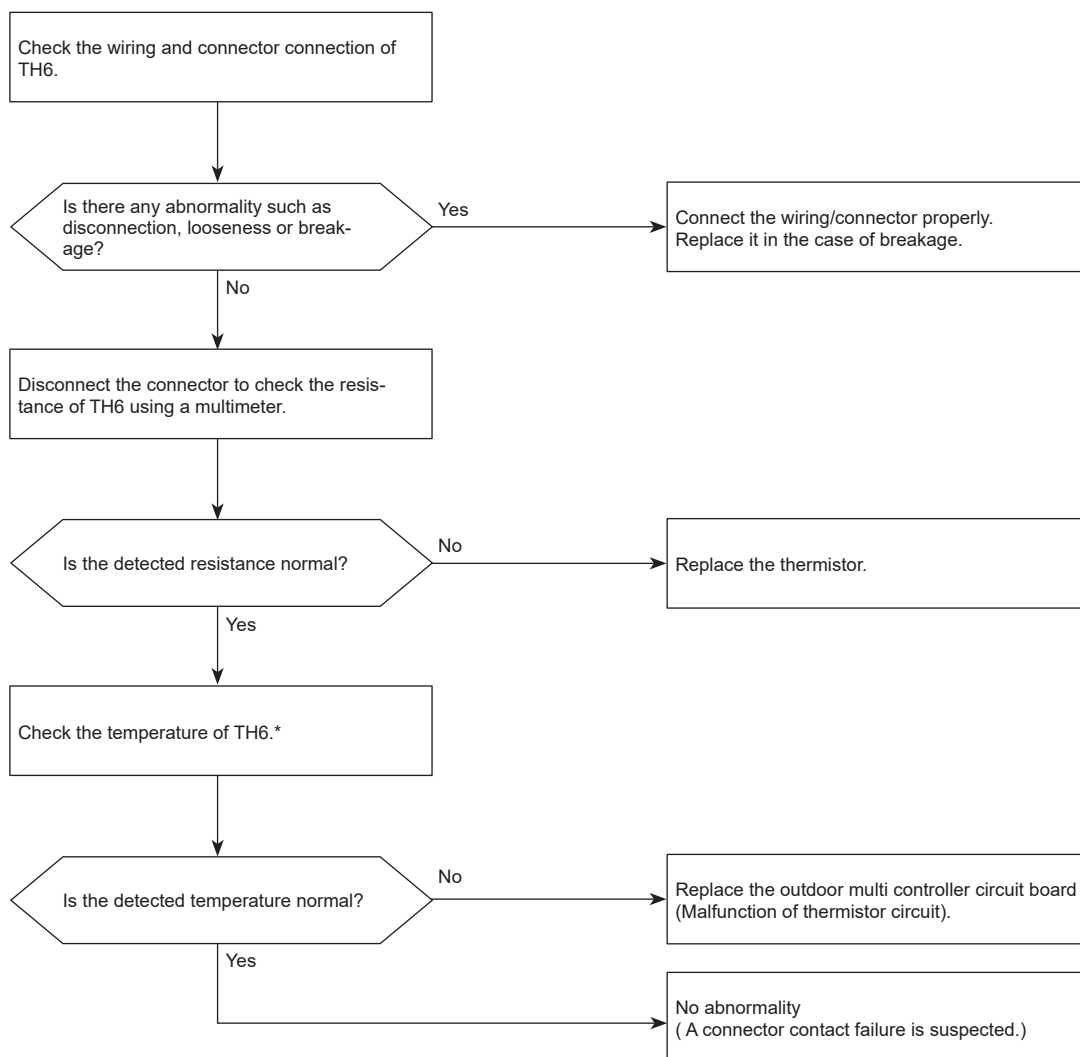

* The detected temperature of TH6 can be displayed by an operation of SW4 on the outdoor multi controller circuit board.

SW4 setting		Display on LED1	Unit
ON	■ ■ ■ ■ ■ ■ ■ ■ ■ ■	–99.9–999.9	°C
OFF	□ □ □ □ □ □ □ □ □ □		
	1 2 3 4 5 6 7 8 9 10		

5105 (U4): Outdoor liquid pipe temperature thermistor (TH3) open/short

Abnormal points and detection methods

TH3 is found to be open/short.
(The open/short detection is disabled for 10 seconds to 10 minutes after compressor starts, during defrosting operation, or for 10 minutes after returning from the defrosting operation.)

Open:

–40°C or less

Short:

90°C or more

TH3:


Thermistor <Outdoor liquid pipe>

Causes and checkpoints

- Disconnection or contact failure of connectors
- Faulty thermistor
- Defective outdoor multi controller circuit board

The black square (■) indicates a switch position.

Diagnosis of failure

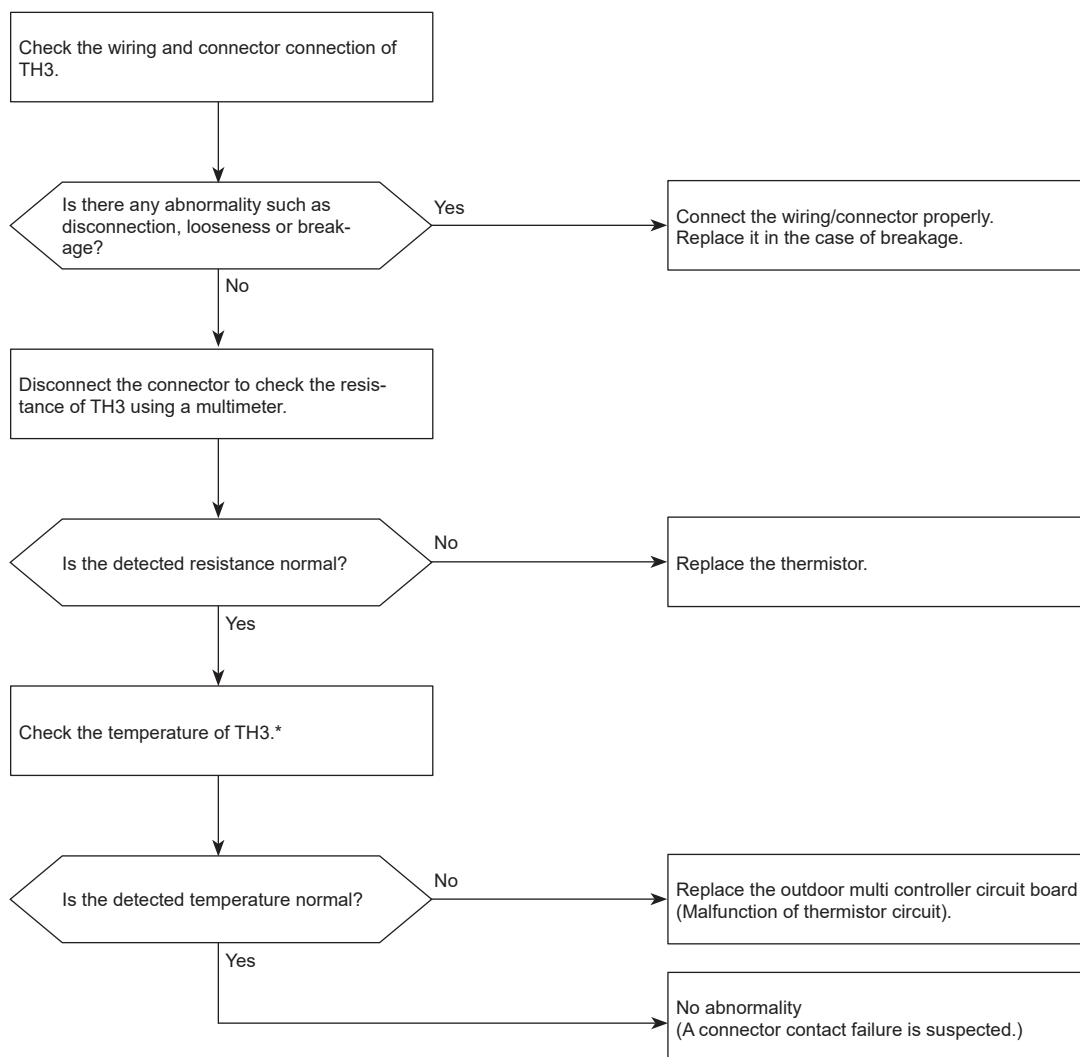

* The detected temperature of TH3 can be displayed by an operation of SW4 on the outdoor multi controller circuit board.

SW4 setting		Display on LED1	Unit
ON	■ ■ ■ ■ ■ ■ ■ ■ ■ ■	–99.9–999.9	°C
OFF	□ □ □ □ □ □ □ □ □ □		
	1 2 3 4 5 6 7 8 9 10		

5106 (U4): Ambient temperature thermistor (TH7) open/short

Abnormal points and detection methods

TH7 is found to be open/short

Open:

–40°C or less

Short:

90°C or more

TH7:


Thermistor <Ambient>

Causes and checkpoints

- Disconnection or contact failure of connectors
- Faulty thermistor
- Defective outdoor multi controller circuit board

The black square (■) indicates a switch position.

Diagnosis of failure

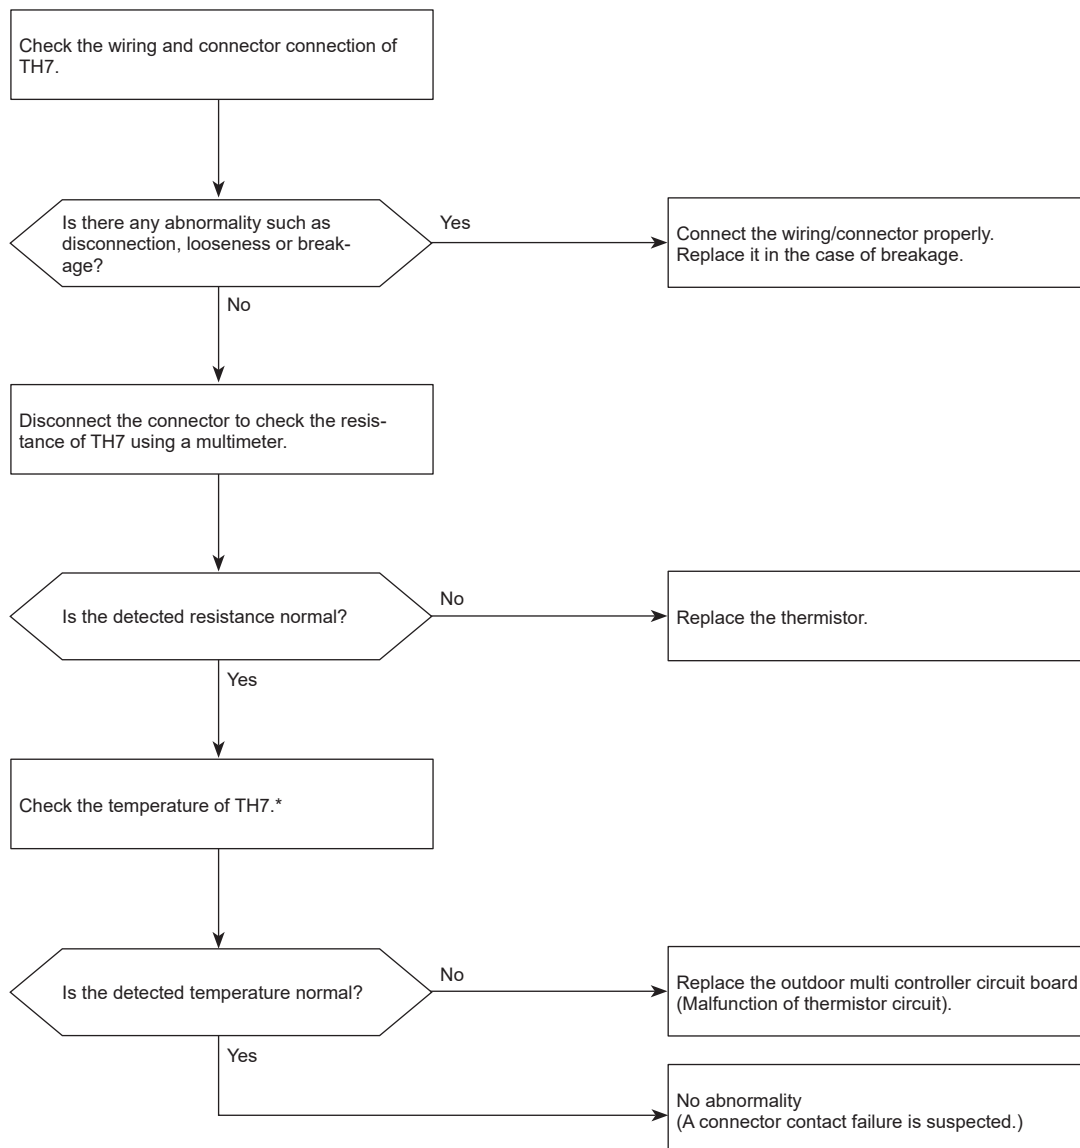

* The detected temperature of TH7 can be displayed by an operation of SW4 on the outdoor multi controller circuit board.

SW4 setting		Display on LED1	Unit
ON	■	–99.9–999.9	°C
OFF	□		
	1 2 3 4 5 6 7 8 9 10		

5109 (U4): HIC pipe temperature thermistor (TH2) open/short

Abnormal points and detection methods

TH2 is found to be open/short.

Open:

–40°C or less

Short:

90°C or more

TH2:


Thermistor <HIC pipe>

Causes and checkpoints

- Disconnection or contact failure of connectors
- Faulty thermistor
- Defective outdoor multi controller circuit board

The black square (■) indicates a switch position.

Diagnosis of failure

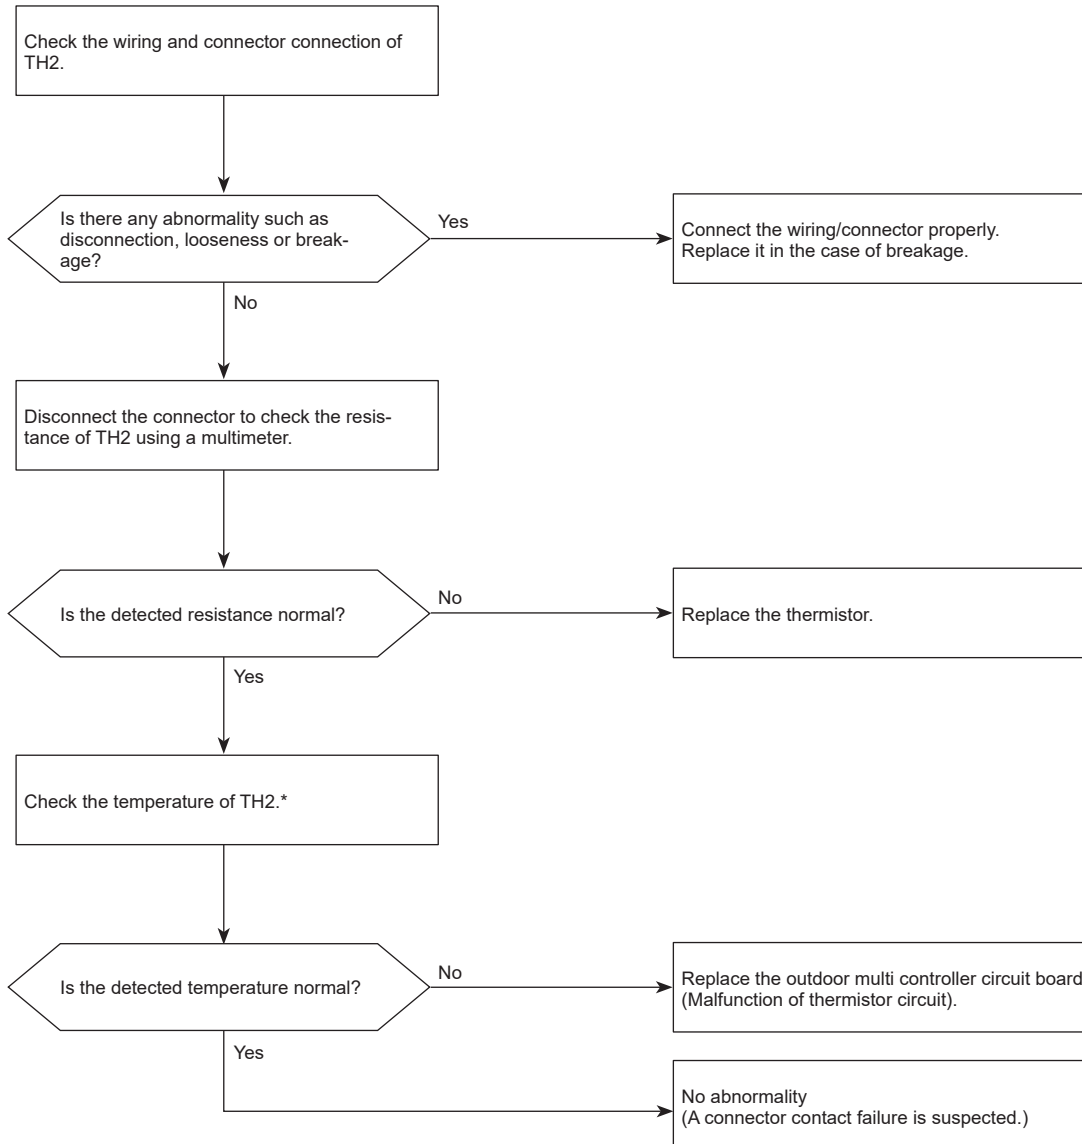

* The detected temperature of TH2 can be displayed by an operation of SW4 on the outdoor multi controller circuit board.

SW4 setting		Display on LED1	Unit
ON	■	-99.9~999.9	°C
OFF	□		
	1 2 3 4 5 6 7 8 9 10		

5110 (U4): Heat sink temperature thermistor (TH8) open/short

Abnormal points and detection methods

TH8 (Internal thermistor) is found to be open/short.


- Open:
–48.4°C or less
- Short:
102.4°C or more
- TH8:
Thermistor <Heat sink>

Causes and checkpoints

- Disconnection or contact failure of connectors
- Faulty thermistor
- Defective outdoor multi controller circuit board

The black square (■) indicates a switch position.

Diagnosis of failure

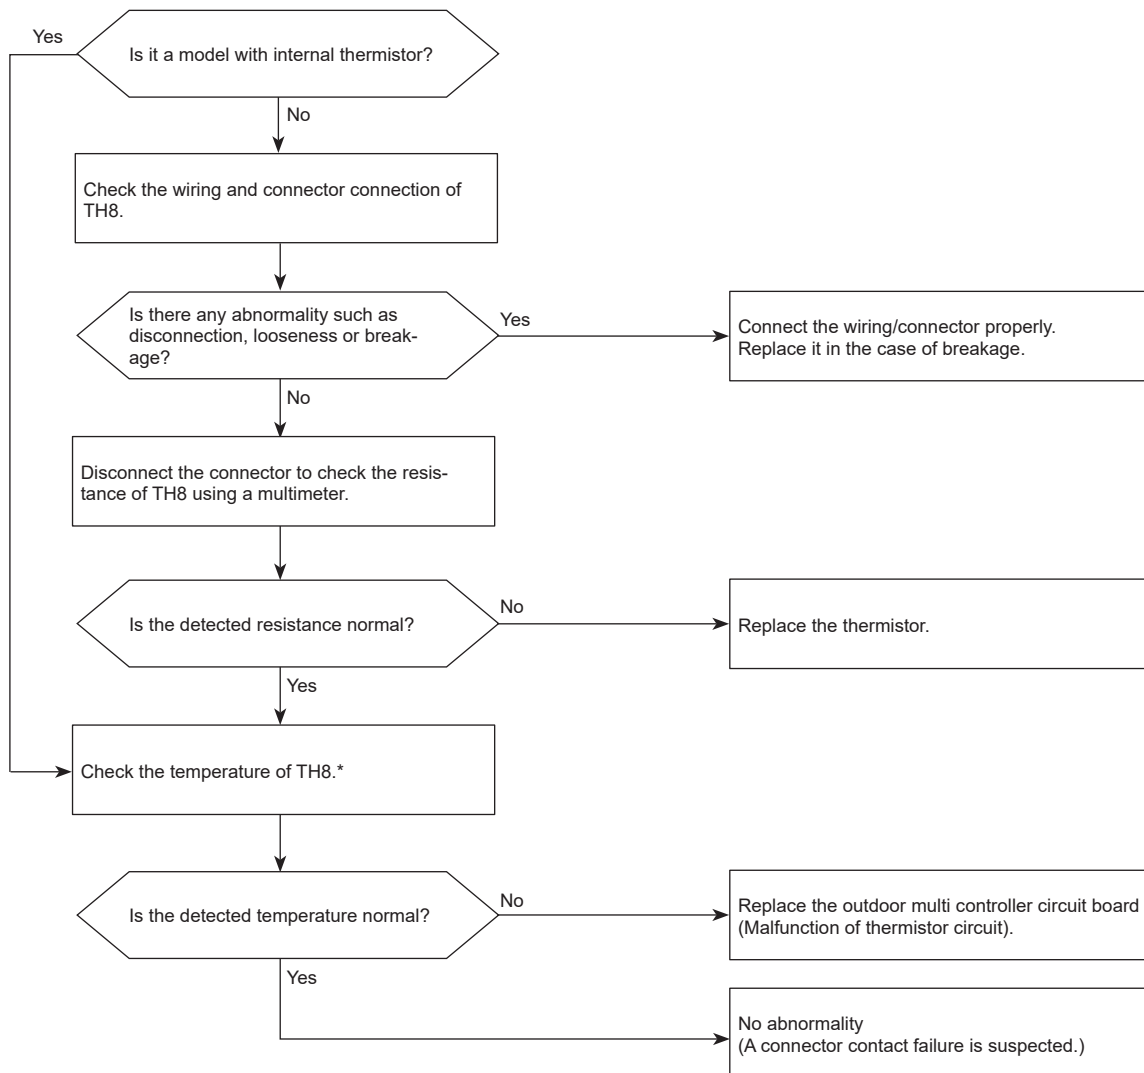

* The detected temperature of TH8 can be displayed by an operation of SW4 on the outdoor multi controller circuit board.

SW4 setting		Display on LED1	Unit
ON		–99.9–999.9	°C
OFF			
	1 2 3 4 5 6 7 8 9 10		

5201 (F5): High pressure sensor (63HS) trouble

Abnormal points and detection methods


- The detected pressure in the high pressure sensor is 1 kgf/cm² or less during operation, the compressor stops operation and enters into an anti-restart mode for 3 minutes.
- The detected pressure is 1 kgf/cm² or less immediately before restarting, the compressor falls into an abnormal stop with error code 5201.
- For 3 minutes after compressor restarting, during defrosting operation, and for 3 minutes after returning from defrosting operation, above mentioned symptoms are not determined to be abnormal.

Causes and checkpoints

- Defective high pressure sensor
- Decrease of internal pressure caused by gas leakage
- Disconnection or contact failure of connector
- Malfunction of input circuit on outdoor multi controller circuit board

The black square (■) indicates a switch position.

Diagnosis of failure

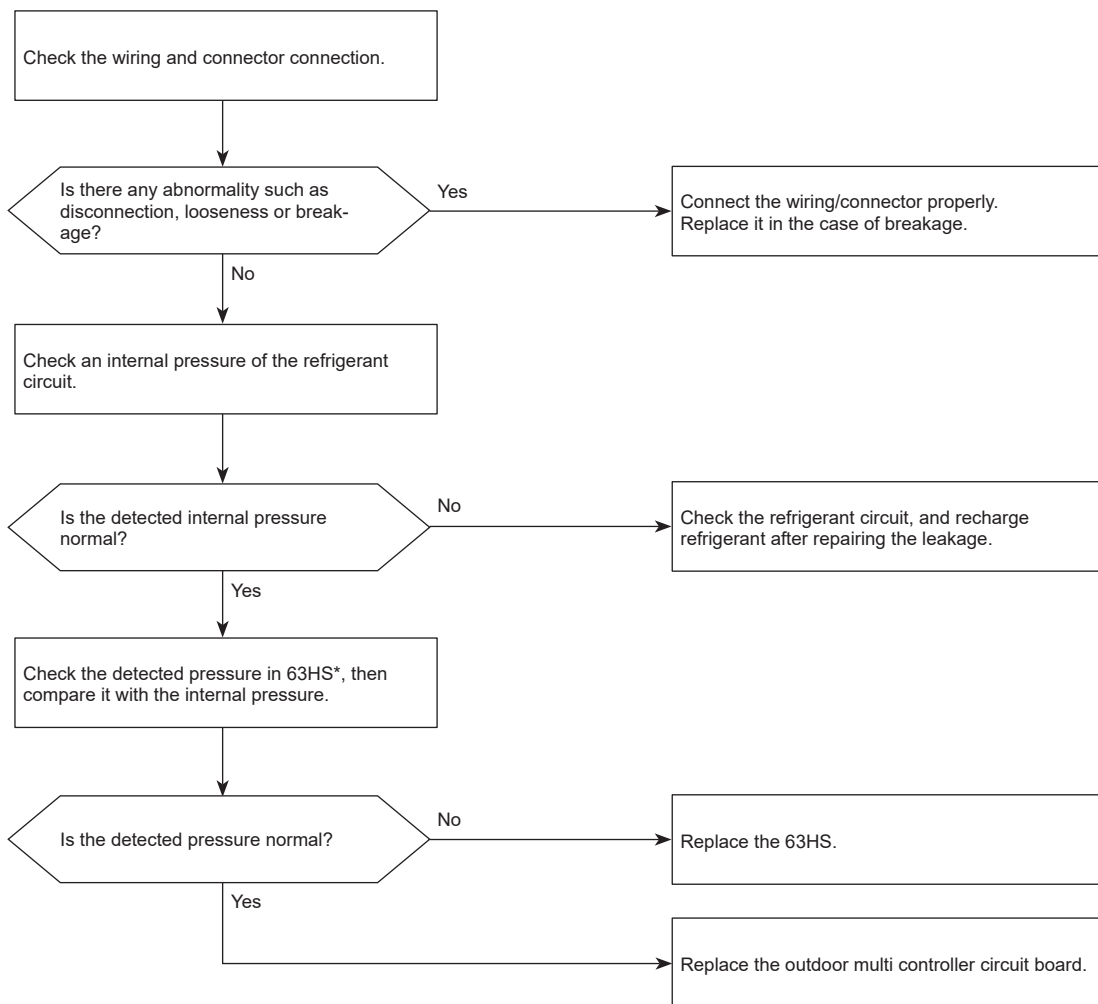

* For pressure, refer to "How to check the components".

The detected pressure in 63HS can be displayed by an operation of SW4 on the outdoor multi controller circuit board.

SW4 setting	Display on LED1	Unit
ON OFF 1 2 3 4 5 6 7 8 9 10	-99.9~999.9	kgf/cm ²

5202 (F3): Low pressure sensor (63LS) trouble

Abnormal points and detection methods


- The detected pressure in the low pressure sensor is -2.3 kgf/cm^2 or less, or 23.1 kgf/cm^2 or more during operation, the compressor stops operation with error code 5202.
- For 3 minutes after compressor restarting, during defrosting operation, and for 3 minutes after returning from defrosting operation, above mentioned symptoms are not determined to be abnormal.

Causes and checkpoints

- Defective low pressure sensor
- Decrease of internal pressure caused by gas leakage
- Disconnection or contact failure of connector
- Malfunction of input circuit on outdoor multi controller circuit board

The black square (■) indicates a switch position.

Diagnosis of failure

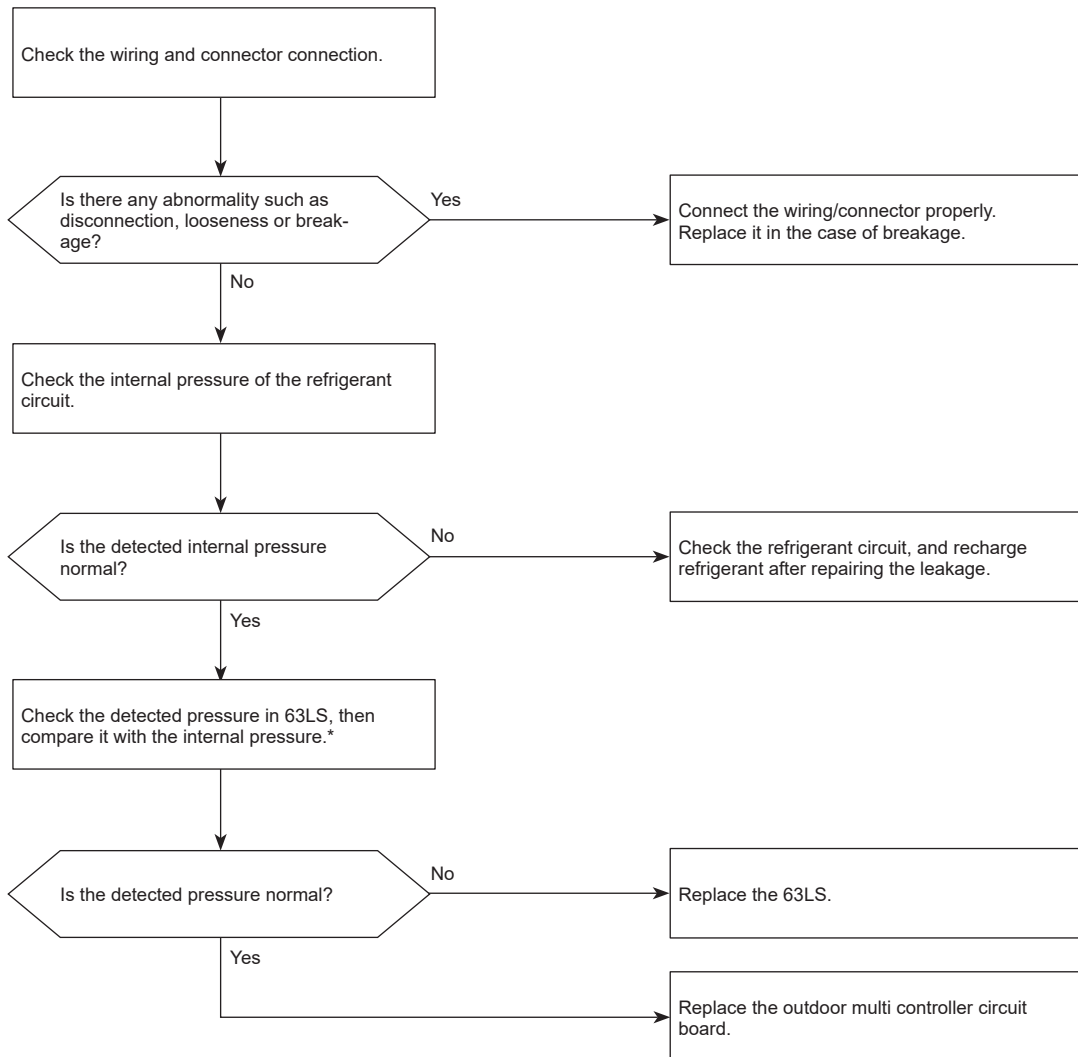

* The detected pressure in 63LS can be displayed by an operation of SW4 on the outdoor multi controller circuit board.

SW4 setting		Display on LED1	Unit
ON	■ ■ ■ ■ ■ ■ ■ ■ ■ ■	-99.9~999.9	kgf/cm ²
OFF	■ ■ ■ ■ ■ ■ ■ ■ ■ ■		
	1 2 3 4 5 6 7 8 9 10		

5300 (UH): Current sensor trouble


Abnormal points and detection methods

The detected current sensor input value (primary current) during compressor operation is outside the specified range.

Causes and checkpoints

- Decrease/Trouble of power supply voltage
- Disconnection of compressor wiring
- Input sensor trouble on outdoor power circuit board

Diagnosis of failure

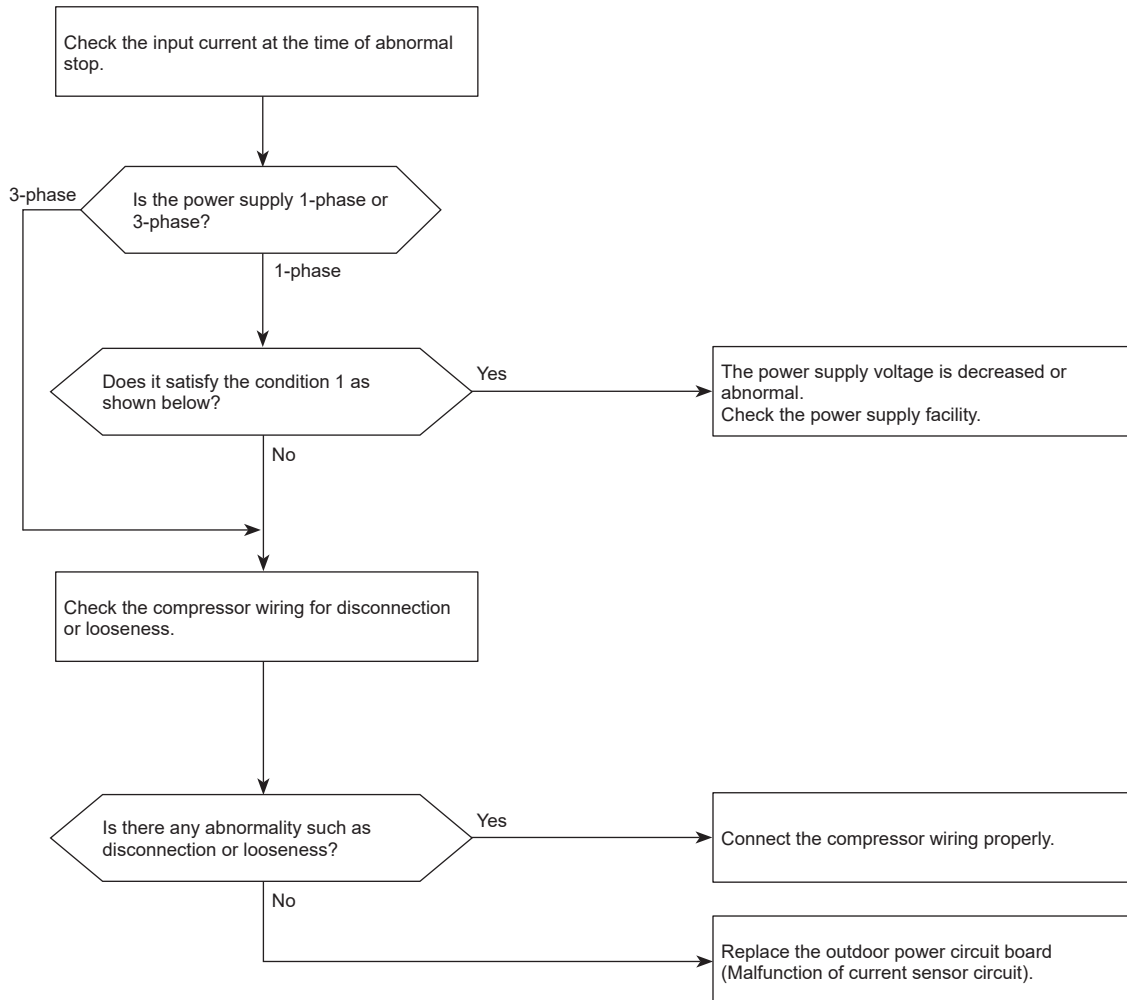

Condition 1:

Model	Error detecting condition
1-phase model	34 A or more for 10 consecutive seconds, or 38 A or more

* Applicable only for single phase model

5558 (FH): Refrigerant sensor error

Abnormal points and detection methods

A refrigerant sensor has failed.


Note:

- When this error occurs in EN378 system (SW5-7 ON), both the controller in the applicable room and the controller in the supervisor room produce an alarm. Also, the system closes the shut-off valve and performs refrigerant recovery.

Causes and checkpoints

- A refrigerant sensor connected to an M-IC has failed.
- A Sensor and Alarm Kit connected to a branch box has failed.

Diagnosis of failure

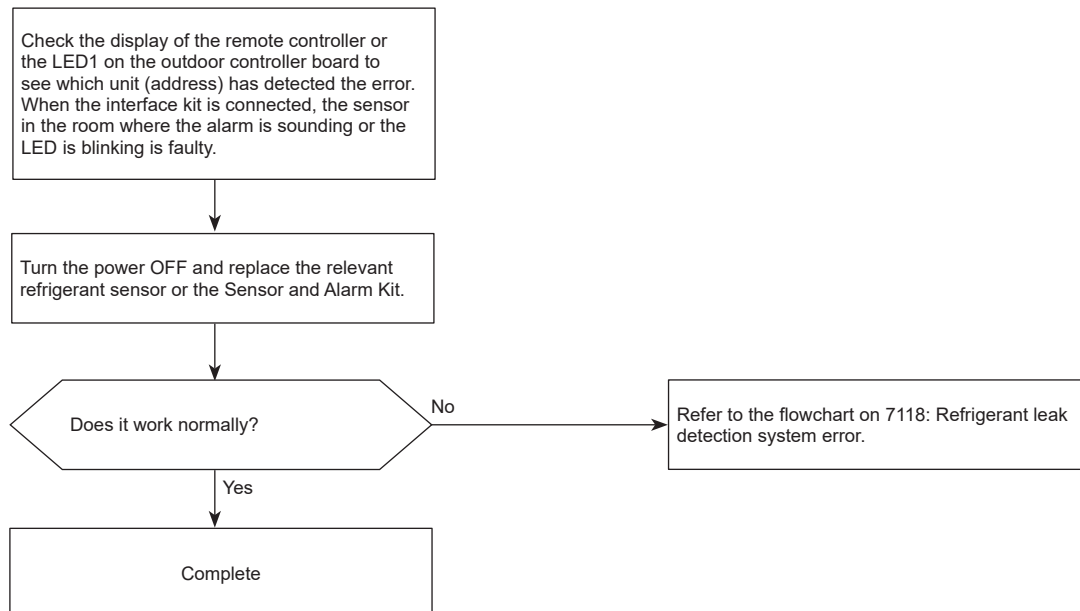

6600 (A0): Duplex address error


Abnormal points and detection methods

2 or more units with the same address exist.

Causes and checkpoints

- There are 2 units or more with the same address in their controller among outdoor unit, indoor unit, Fresh Master, Lossnay or remote controller.
- Noise interference on indoor/outdoor connectors

Diagnosis of failure

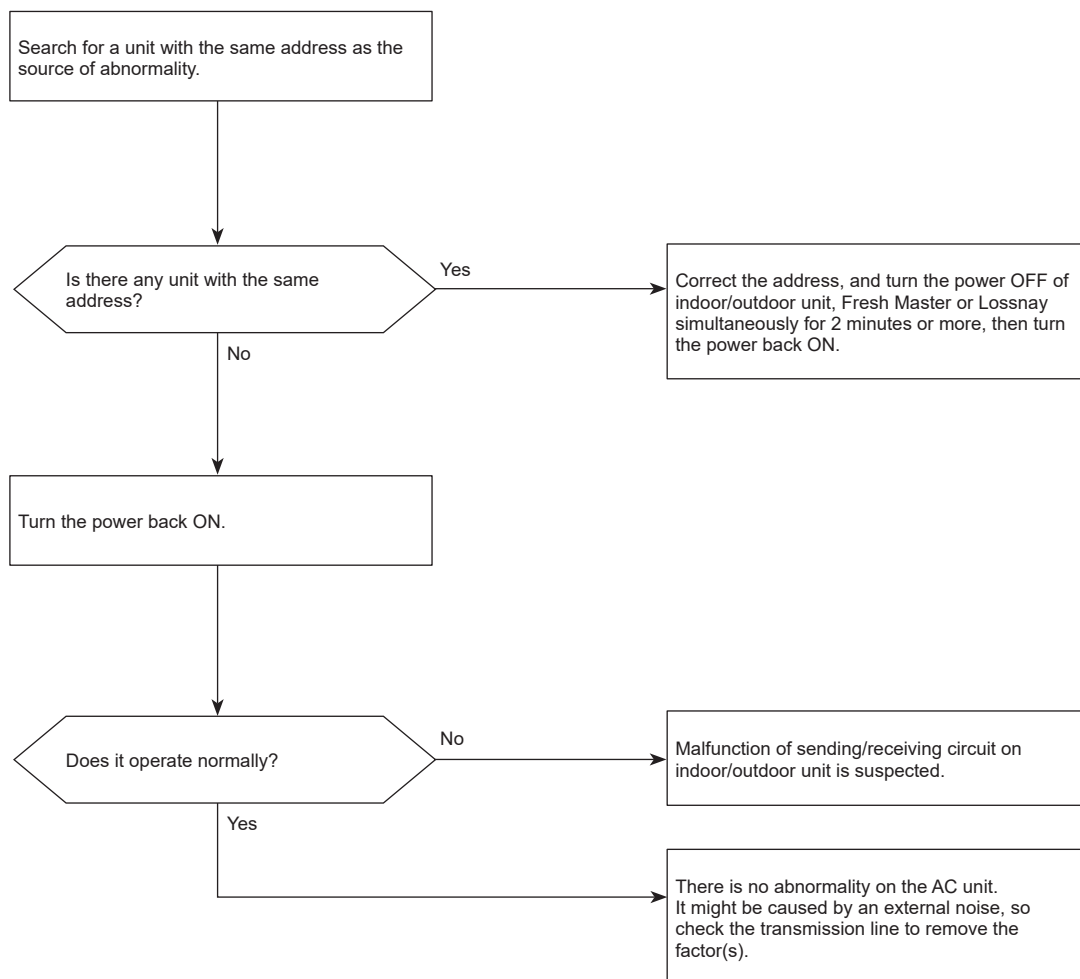

6602 (A2): Transmission processor hardware error


Abnormal points and detection methods

The transmission line shows “1” although the transmission processor transmitted “0”.

Causes and checkpoints

- A transmitting data collision occurred because of a wiring work or polarity change has performed while the power is ON on either of the indoor/outdoor unit, Fresh Master or Lossnay.
- Malfunction of transmitting circuit on transmission processor
- Noise interference on indoor/outdoor connectors

Diagnosis of failure

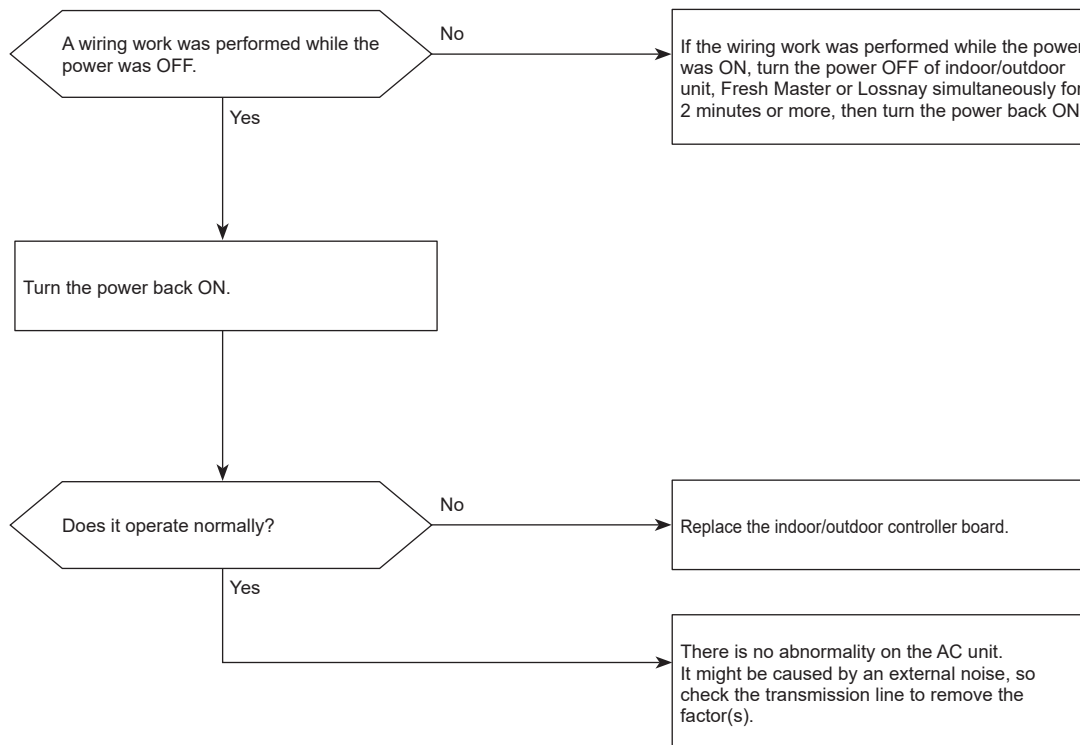

6603 (A3): Transmission bus BUSY error


Abnormal points and detection methods

- Transmission fails due to collision and it continues for 8 to 10 minutes.
- Data cannot be output on the transmission line because of noise etc. consecutively for 8 to 10 minutes.

Causes and checkpoints

- The transmission processor is unable to transmit due to a short-cycle voltage such as noise is mixed on the transmission line.
- The transmission processor is unable to transmit due to an increase of transmission data amount caused by a miswiring of the terminal block (transmission line) (TB3) and the terminal block (centralized control line) (TB7) on the outdoor unit.
- The share on transmission line becomes high due to a mixed transmission caused by a malfunction of repeater on the outdoor unit, which is a function to connect/disconnect transmission from/to control system and centralized control system.

Diagnosis of failure

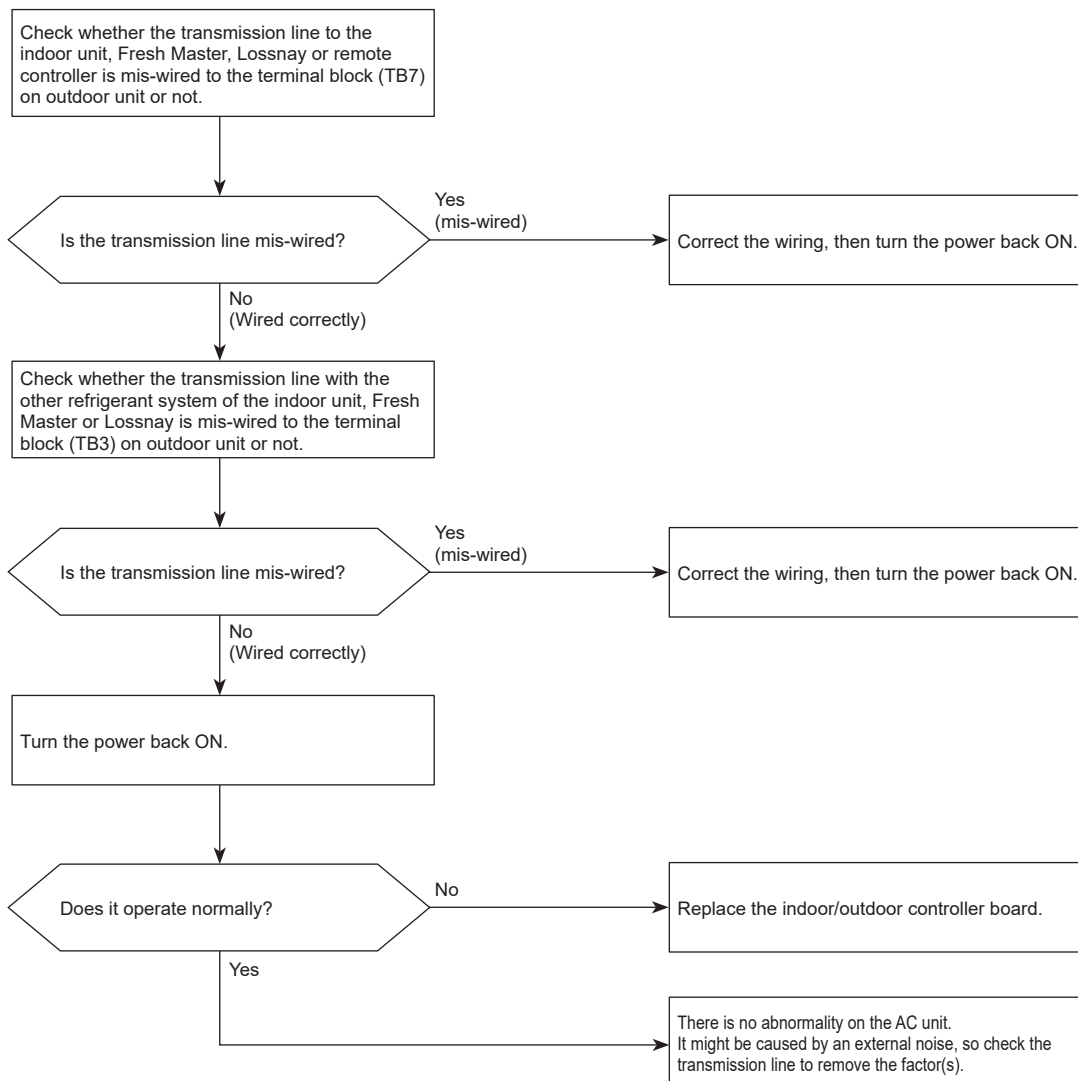

6606 (A6): Signal communication error with transmission processor


Abnormal points and detection methods

- The data of unit/transmission processor were not normally transmitted.
- The address transmission from the unit processor was not normally transmitted.

Causes and checkpoints

- Accidental disturbance such as noise or lightning surge
- Hardware malfunction of transmission processor

Diagnosis of failure

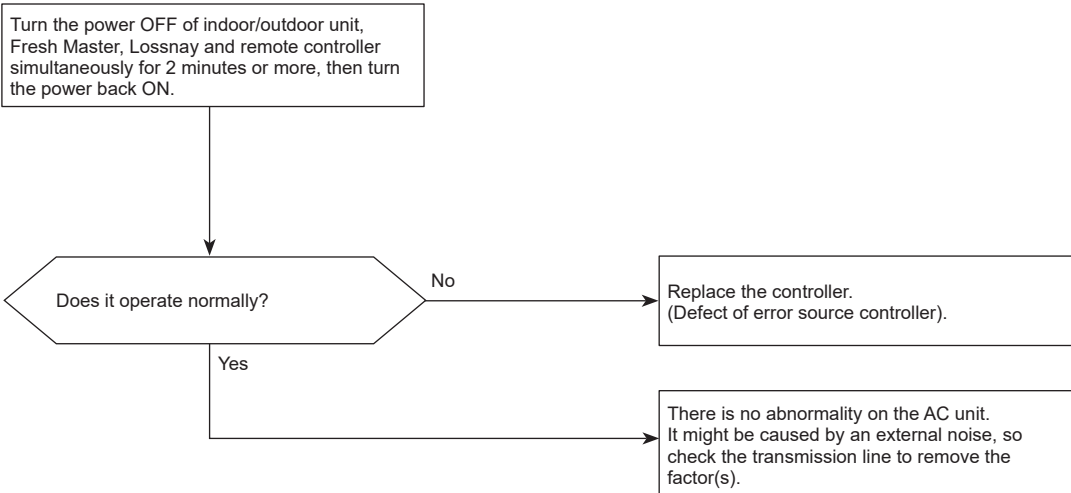

Abnormal points and detection methods

■ Common to all

An abnormality detected by the sending side controller when receiving no ACK from the receiving side, though signal was once sent. The sending side detects the abnormality when that occurs 6 times in succession at 30 second intervals.

■ The address/attribute of the outdoor unit was displayed:

An abnormality detected by the indoor unit if it received no ACK when transmitting signal to the outdoor unit.

■ The address/attribute of the indoor unit was displayed:

An abnormality detected by the remote controller if it received no ACK when transmitting signal to the indoor unit.

■ The address/attribute of the remote controller was displayed:

An abnormality detected by the indoor unit if it received no ACK when transmitting signal to the remote controller.

■ The address/attribute of Fresh Master was displayed:

An abnormality detected by the indoor unit if it received no ACK when transmitting signal to the Fresh Master.

Causes and checkpoints

- The previous address unit does not exist since the address switch was changed while power was on.
- Decline of transmission voltage/signal because the transmission line exceeds the following limits.
 - Indoor/outdoor transmission line maximum distance: 200 m
 - For remote controller line: 12 m
- Decline of transmission voltage/signal due to unmatched transmission line types
 - Types for shield line: CVVS, CPEVS, or MVVS
 - Line diameter: 1.25 mm² or more
- Decline of transmission voltage/signal due to excessive number of connected units
- Malfunction due to accidental disturbance such as noise or lightning surge
- Defect of error source controller

- Contact failure of indoor/outdoor unit transmission line.
- Disconnection of transmission connector (CN2M) on indoor unit.
- Malfunction of sending/receiving circuit on indoor/outdoor unit.
- Disconnection of the connectors on the circuit board
- Cut off of power supply for outdoor unit caused by high pressure protection (63H).

- While operating with the indoor units in a different refrigerant system, an abnormality is detected when the indoor unit transmits signal to the remote controller during the other refrigerant-system outdoor unit is turned OFF, or within 2 minutes after it turned back ON.
- Contact failure of indoor unit or remote controller transmission line
- Disconnection of transmission connector (CN2M) on indoor unit
- Malfunction of sending/receiving circuit on indoor unit or remote controller

- While operating with the indoor units in a different refrigerant system, an abnormality is detected when the indoor unit transmits signal to the remote controller during the other refrigerant-system outdoor unit is turned OFF, or within 2 minutes after it turned back ON.
- Contact failure of indoor unit or remote controller transmission line
- Disconnection of transmission connector (CN2M) on indoor unit
- Malfunction of sending/receiving circuit on indoor unit or remote controller

- While the indoor unit is operating with the remote controller in a different refrigerant system, an abnormality is detected when the indoor unit transmits signal to the remote controller while the outdoor unit in the same refrigerant system as the Fresh Master is turned OFF, or within 2 minutes after it turned back ON.
- Contact failure of indoor unit or Fresh Master transmission line
- Disconnection of transmission connector (CN2M) on indoor unit or Fresh Master
- Malfunction of sending/receiving circuit on indoor unit or Fresh Master

Abnormal points and detection methods

■ The address/attribute of Lossnay was displayed:

An abnormality detected by the indoor unit if it received no ACK when transmitting signal to the Lossnay.

- An abnormality is detected when the indoor unit transmits signal to Lossnay while the Lossnay is turned OFF.
- While the indoor unit is operating with Lossnay in a different refrigerant system, an abnormality is detected when the indoor unit transmits signal to the Lossnay while the outdoor unit in the same refrigerant system as the Lossnay is turned OFF, or within 2 minutes after it turned back ON.
- Contact failure of indoor unit or Lossnay transmission line
- Disconnection of transmission connector (CN2M) on indoor unit
- Malfunction of sending/receiving circuit on indoor unit or Lossnay

■ The displayed address/attribute is not assigned to any controller.


- The previous address unit does not exist since the address switch was changed while power was on.
- The abnormality was detected when the indoor unit sent or received signal because the address of the Fresh Master/Lossnay was changed after a setting for linking the Fresh master/Lossnay was made on the remote controller.

Diagnosis of failure


Note:

- When the address of the outdoor unit is displayed as abnormal, the outdoor circuit board may be faulty. If the unit is not restored after conducting the following procedure, check the outdoor circuit board.

Procedure 1:

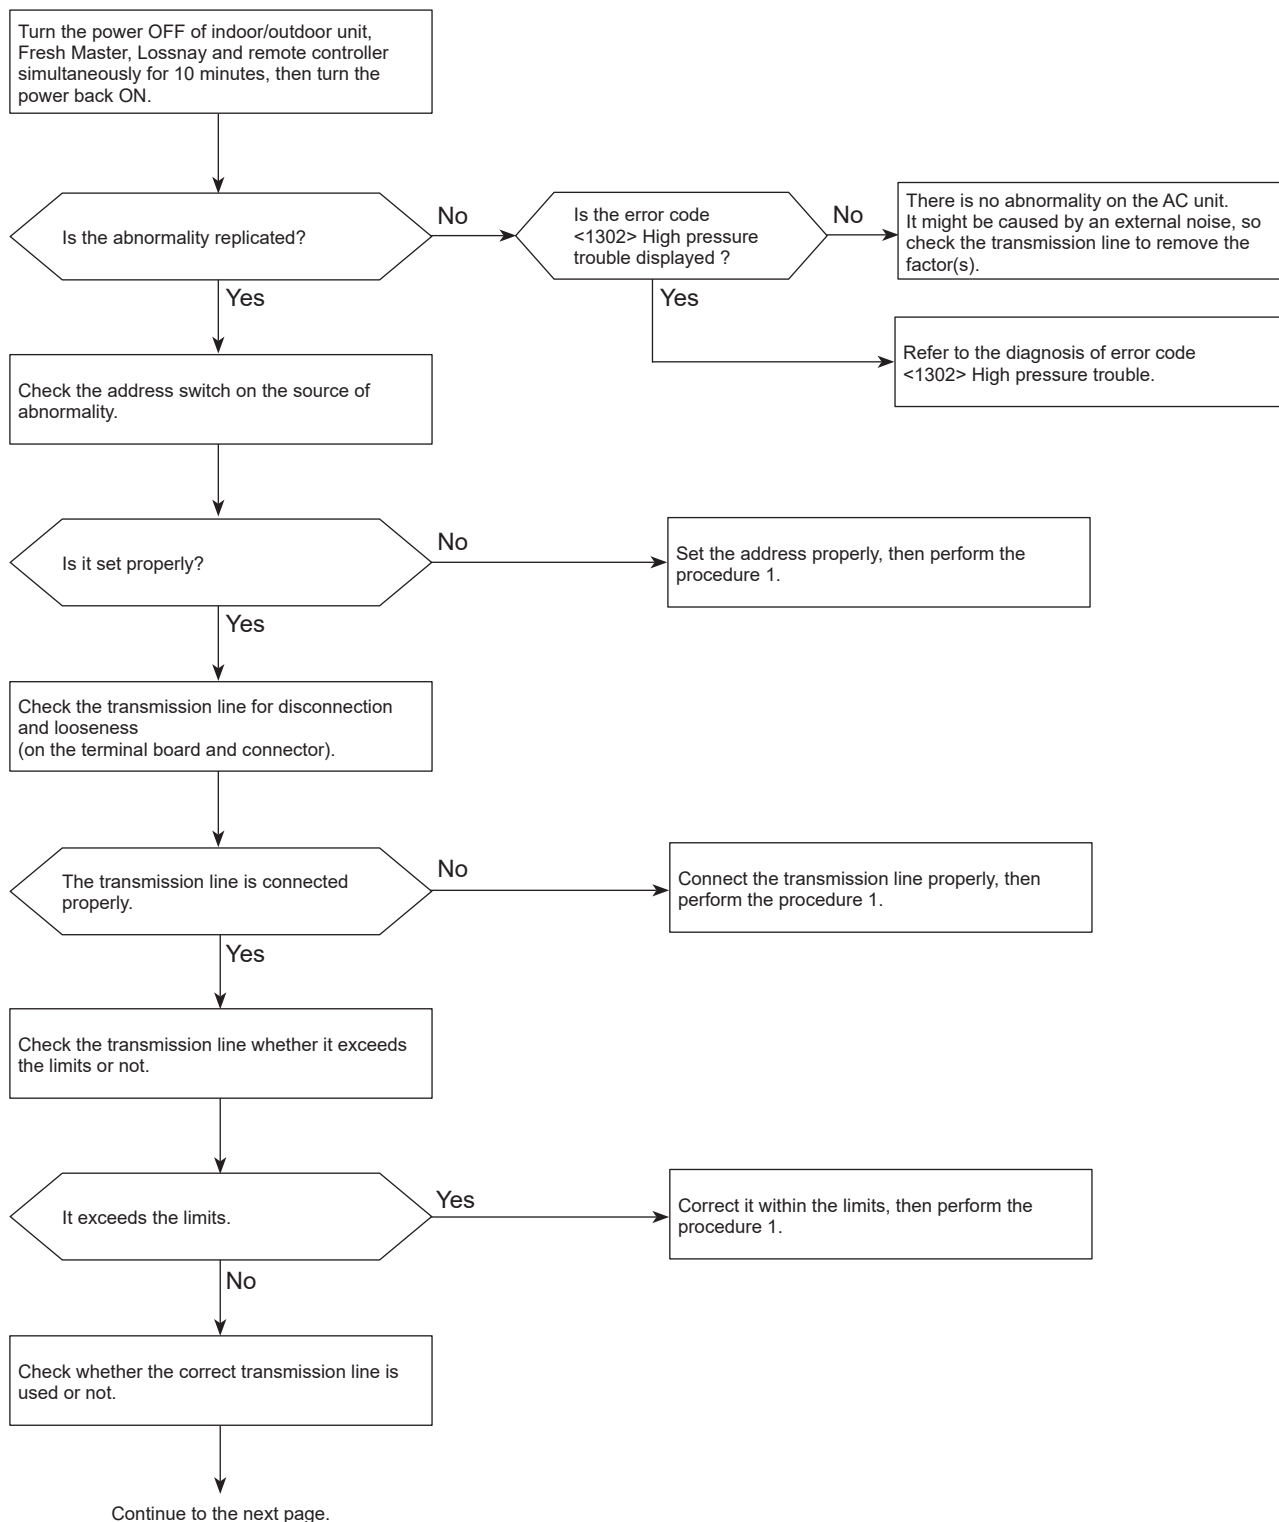

Diagnosis of failure

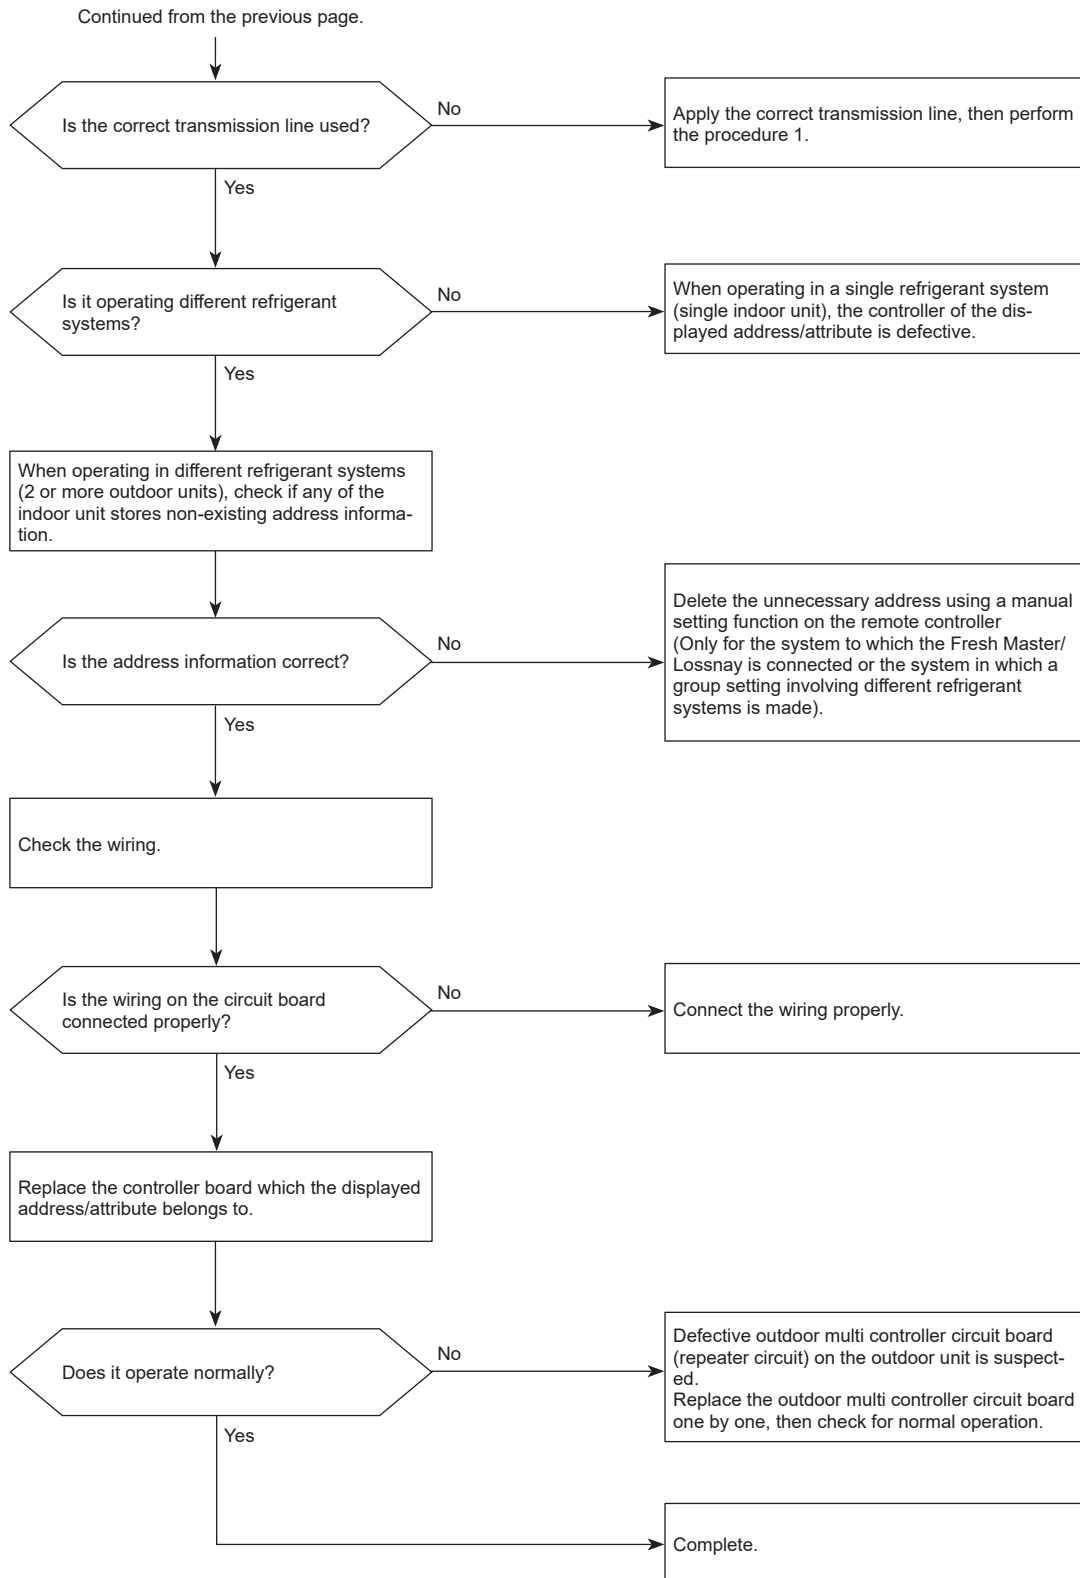

6608 (A8): No response frame error


Abnormal points and detection methods

Although the sending side controller received ACK that notifies the reception of signal, no response command is transmitted from the receiving side.
The sending side detects the abnormality when that occurs 6 times in succession at 30 second intervals.

Causes and checkpoints

- Continuous failure of transmission due to noise, etc.
- Decline of transmission voltage/signal because the transmission line exceeds the following limits.
 - Indoor/outdoor transmission line maximum distance: 200 m
 - On remote controller line: 12 m
- Decline of transmission voltage/signal due to unmatched transmission line types
 - Types for shield line: CVVS, CPEVS, or MVVS
 - Line diameter: 1.25 mm² or more
- Accidental malfunction of error source controller

Diagnosis of failure

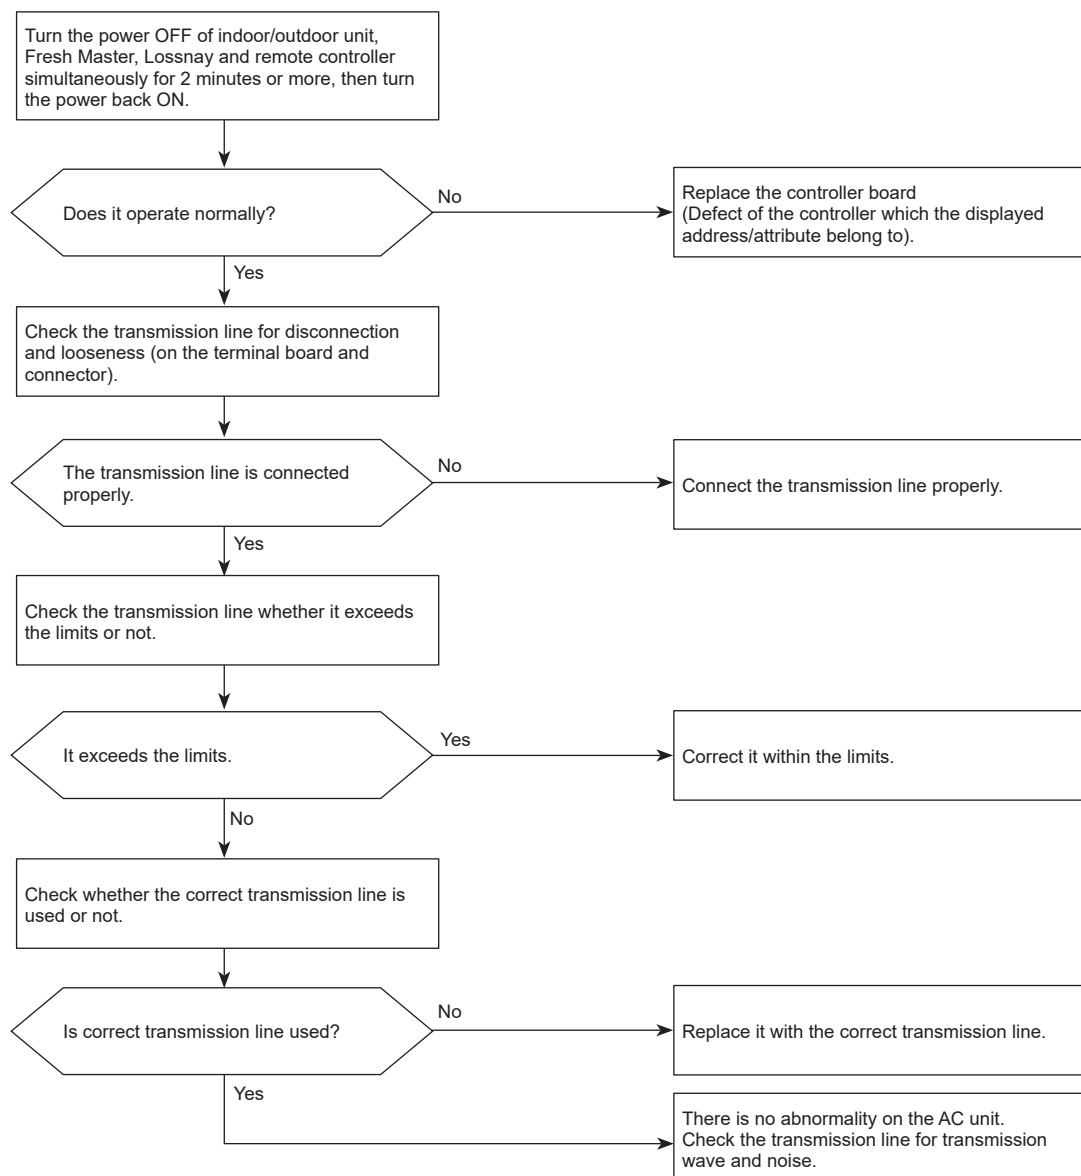

6815 (FH): Supervisor mode alarm kit communication error, MA supervisor remote controller communication error


Abnormal points and detection methods

A communication error has occurred with a Sensor and Alarm Kit in supervisor mode or with an MA remote controller in supervisor mode.

Causes and checkpoints

- A wire of the MA remote controller in supervisor mode connected to M-IC is incorrect or broken.
- A wire of a Sensor and Alarm Kit in supervisor mode connected to a branch box is incorrect or broken, or a DIP switch has not been set.

Diagnosis of failure

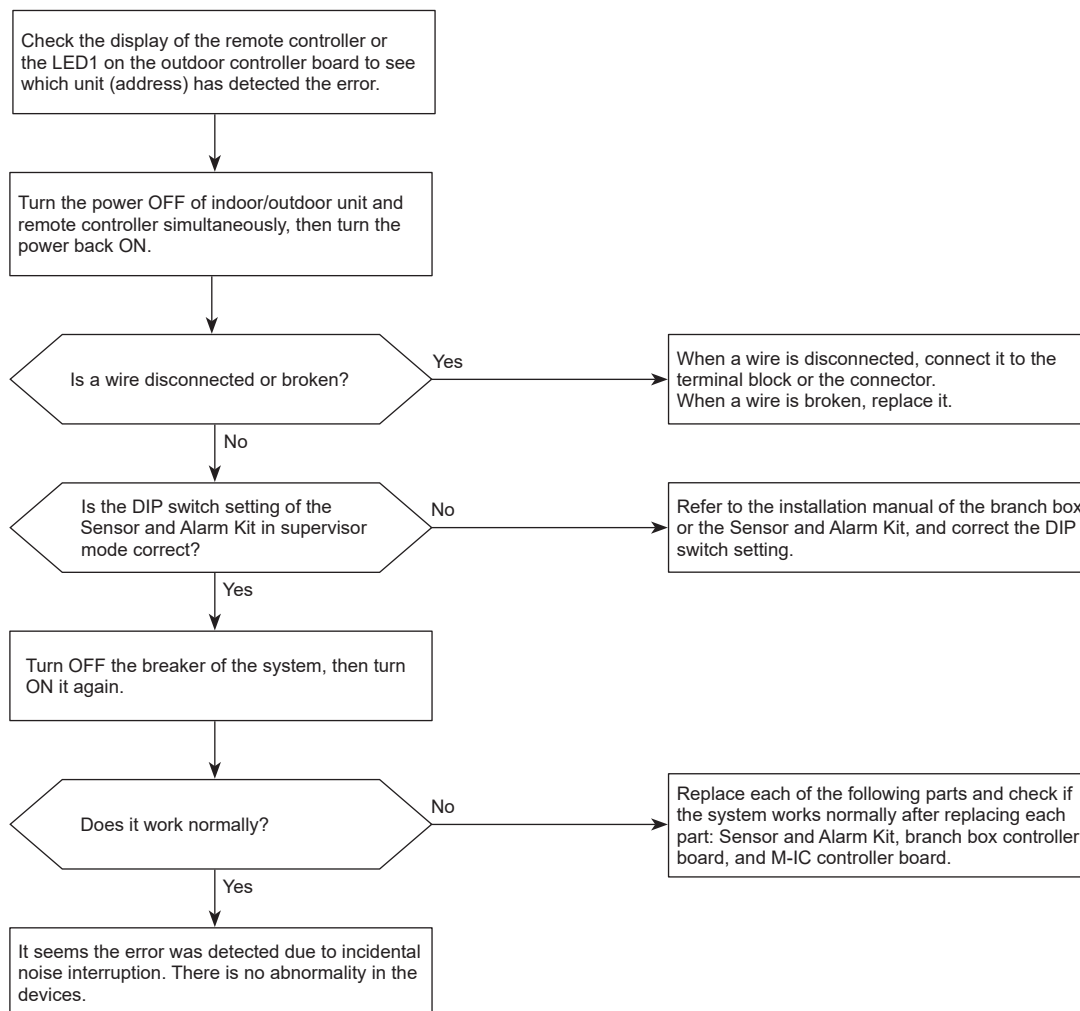

Abnormal points and detection methods


Detected in remote controller or indoor unit:

- The main or sub remote controller cannot receive signal from indoor unit which has the "0" address.
- The sub remote controller cannot receive signal.
- The indoor controller board cannot receive signal from remote controller or another indoor unit.
- The indoor controller board cannot receive signal.

Causes and checkpoints

- Contact failure of remote controller wiring
- Irregular wiring
(A wiring length, number of connecting remote controllers or indoor units, or a wiring thickness does not meet the conditions specified in the chapter "Electrical Work" in the installation manual of the indoor unit.)
- Malfunction of the remote controller sending/receiving circuit in the indoor unit with the LED2 blinking.
- Malfunction of the remote controller sending/receiving circuit
- Remote controller transmitting error caused by noise interference

Diagnosis of failure

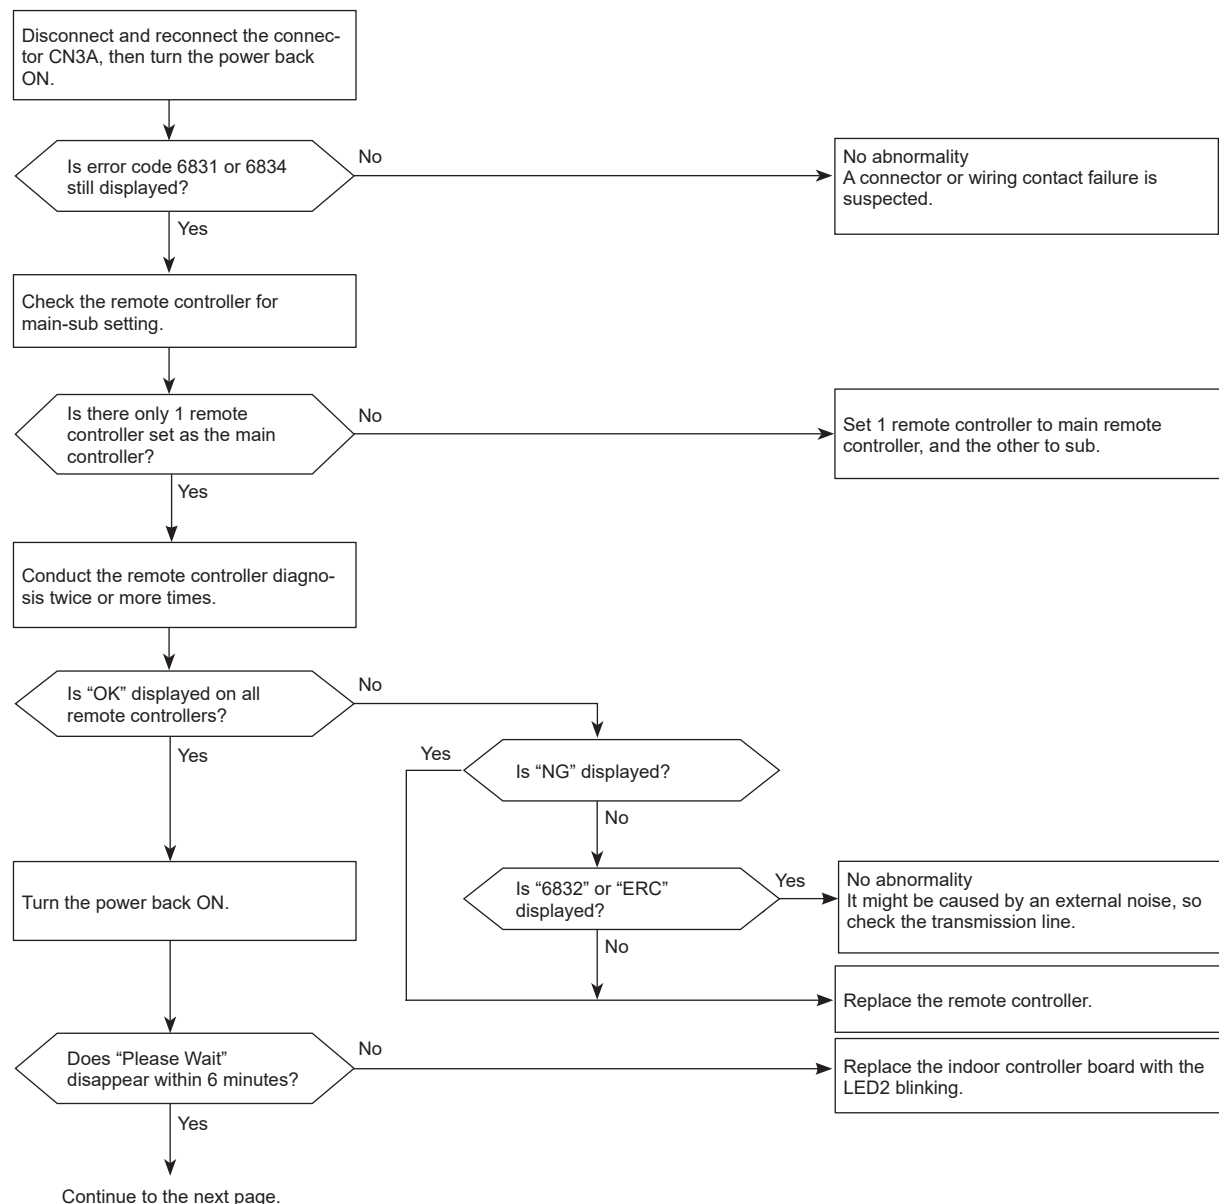


Note:

- It takes 6 seconds at maximum until the result is displayed.

Diagnosis of failure

Continued from the previous page.

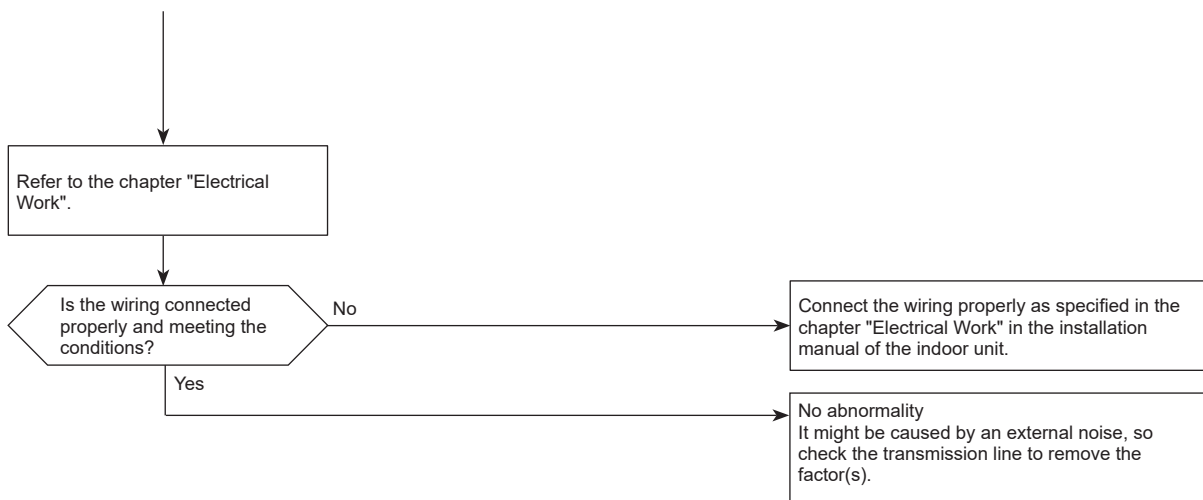

6831 (E4): Sensor and Alarm Kit communication error


Abnormal points and detection methods

An communication error has occurred with a refrigerant sensor.

Causes and checkpoints

- A wire of a refrigerant sensor connected to an M-IC is incorrect or broken.
- A wire of a Sensor and Alarm Kit connected to a branch box is incorrect or broken, or a DIP switch has not been set.

Diagnosis of failure

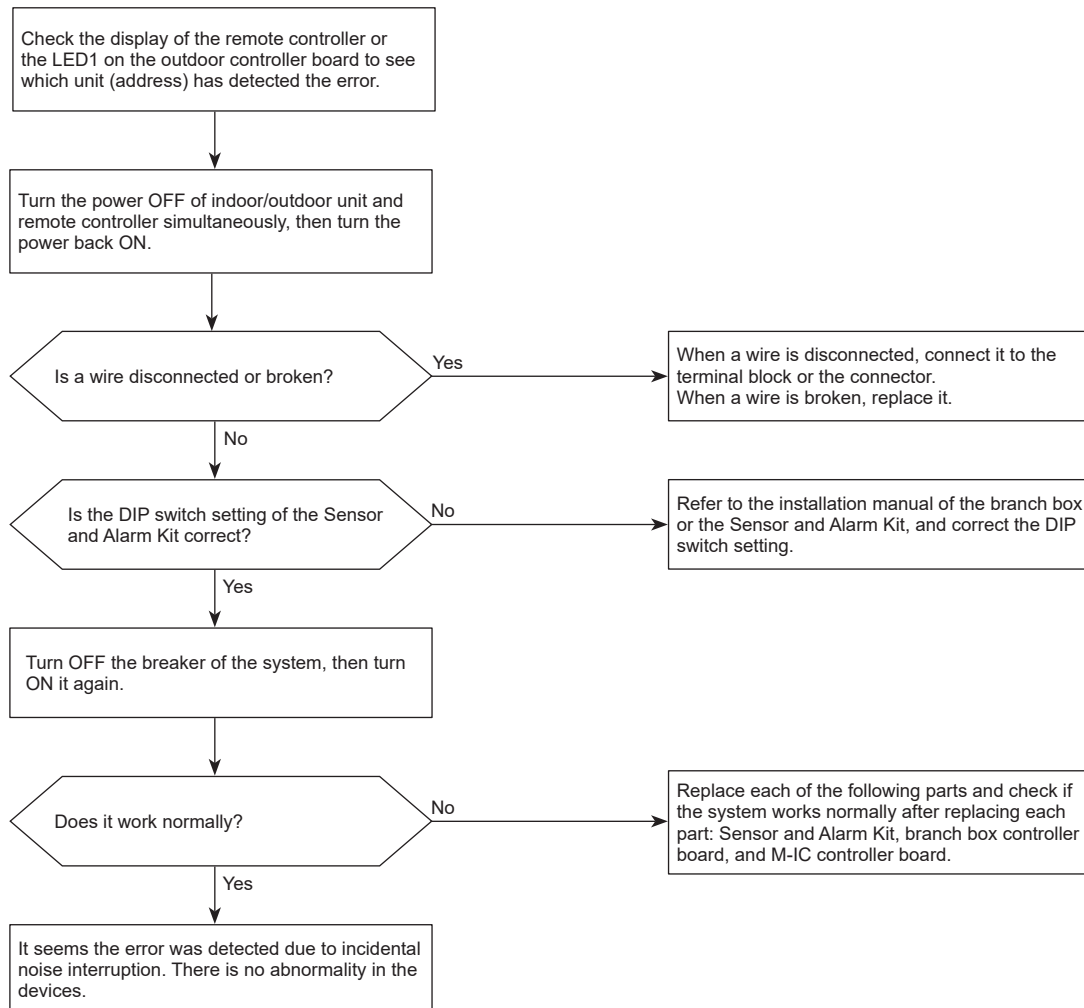


Abnormal points and detection methods

Detected in remote controller or indoor unit.

Causes and checkpoints


- There are 2 remote controllers set as main.
- Malfunction of remote controller sending/receiving circuit
- Malfunction of sending/receiving circuit on indoor controller board
- Remote controller transmitting error caused by noise interference

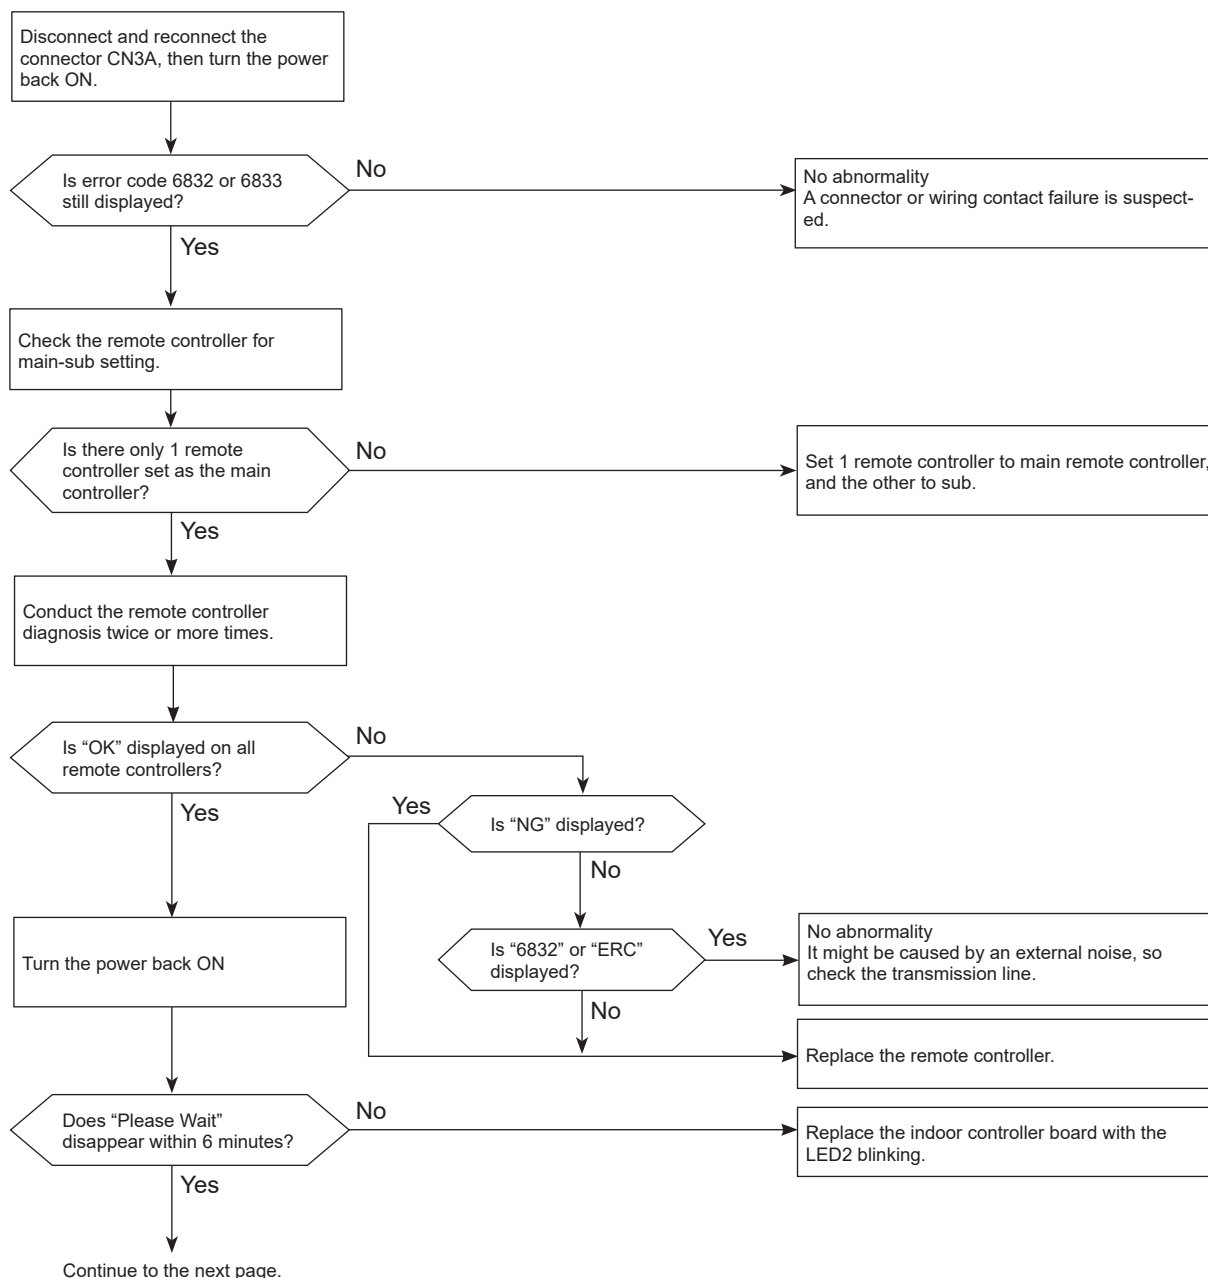Diagnosis of failure**Note:**

- It takes 6 seconds at maximum until the result is displayed.

Diagnosis of failure

Continued from the previous page.

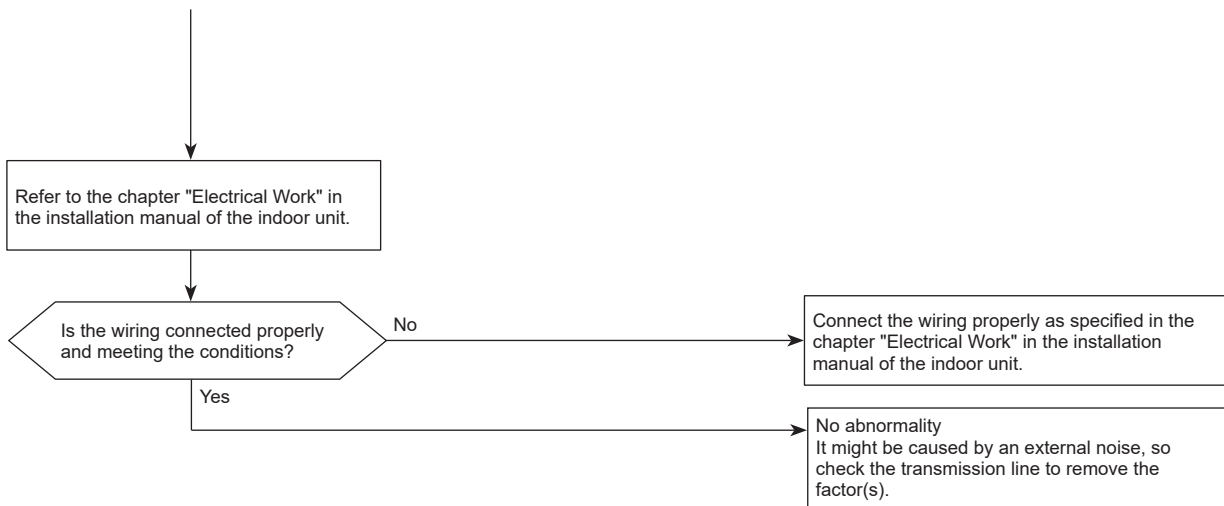

7100 (EF): Total capacity error


Abnormal points and detection methods

The sum of the model class of the connected indoor units exceeds the specified value (130% of the outdoor unit model class), error code 7100 is displayed.

Causes and checkpoints

- The total of number on connected indoor unit model names exceeds the specified capacity level.
- The setting of the model selection switches of the outdoor unit is registered wrongly.

Diagnosis of failure

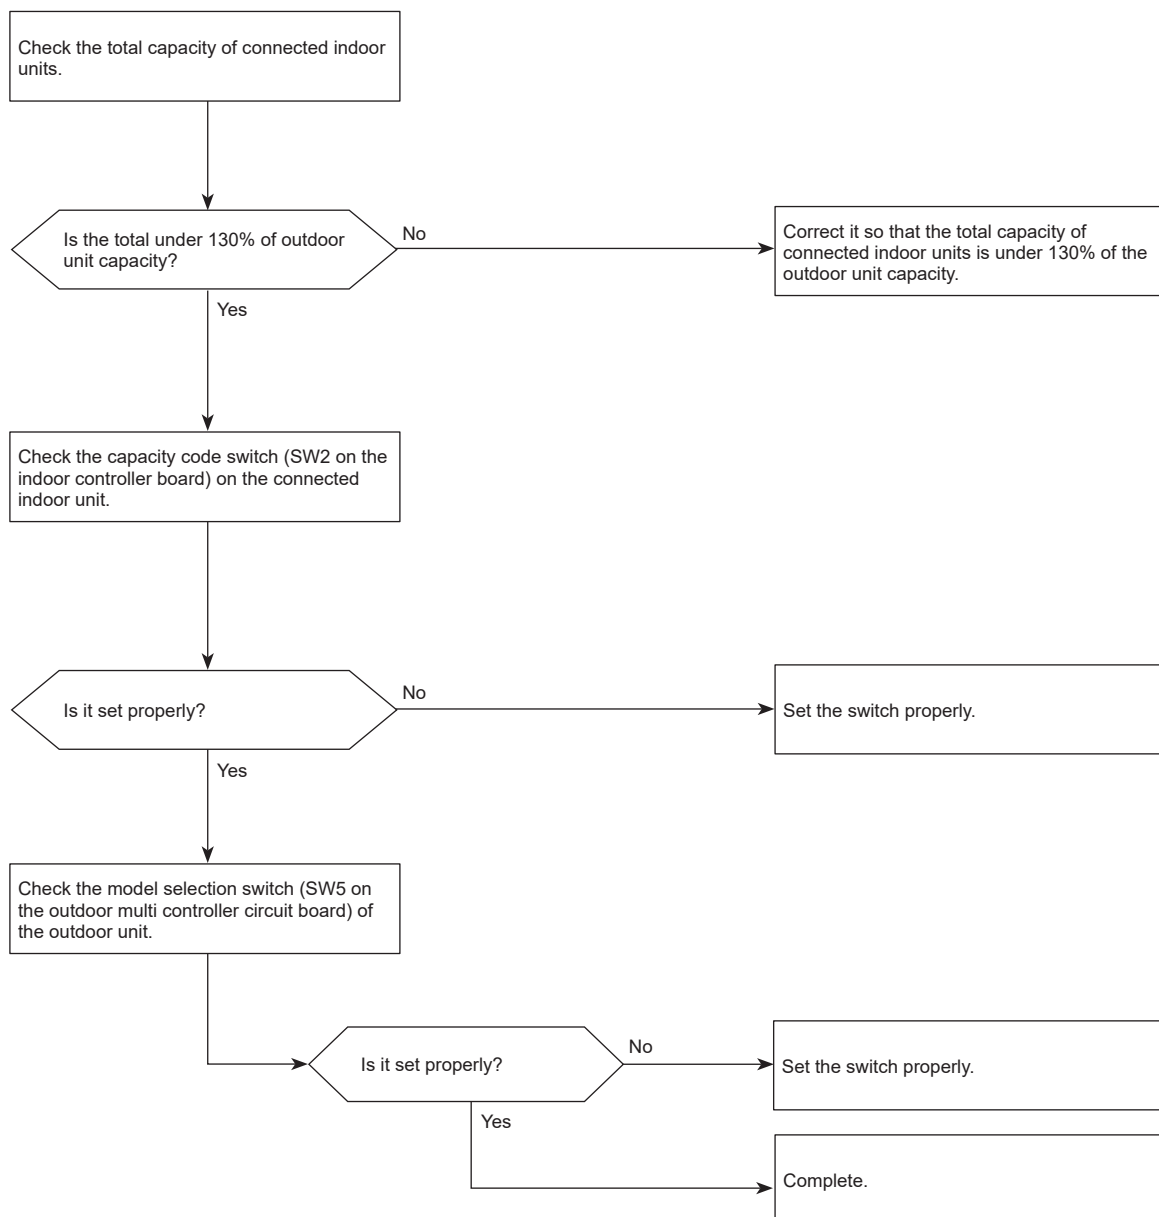

7101 (EF): Capacity code error


Abnormal points and detection methods

- A connected indoor unit is incompatible, error code 7101 is displayed.

Causes and checkpoints

The model name of connected indoor unit (capacity code) is read as incompatible.

Diagnosis of failure

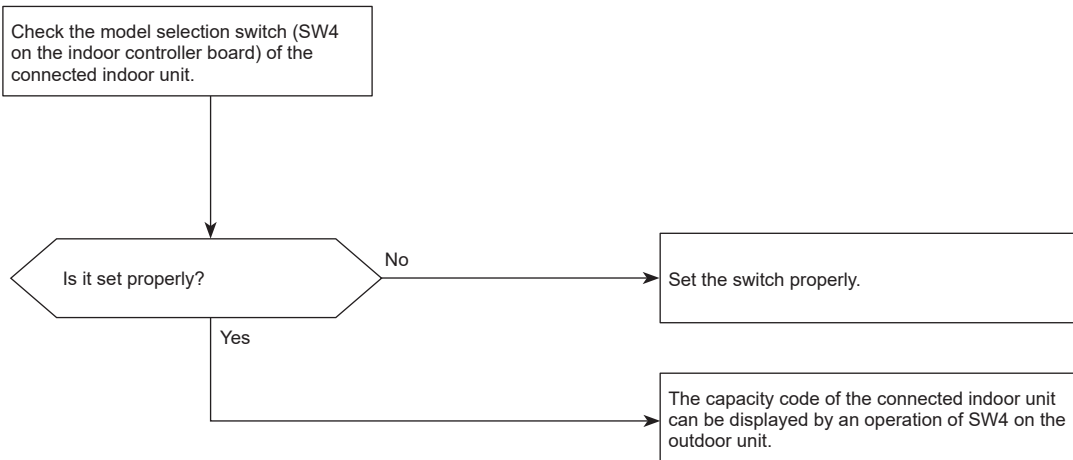

7102 (EF): Connecting excessive number of units and branch boxes

Abnormal points and detection methods

The number of the connected indoor units exceeds the limit, error code 7102 is displayed.


Causes and checkpoints

Connecting more indoor units and branch boxes than the limit.

If connecting status does not comply with the following limit;

- Connectable up to 12 indoor units
- Connect at least 1 indoor unit (Abnormal if connected none).
- Connectable up to 2 branch boxes

Diagnosis of failure

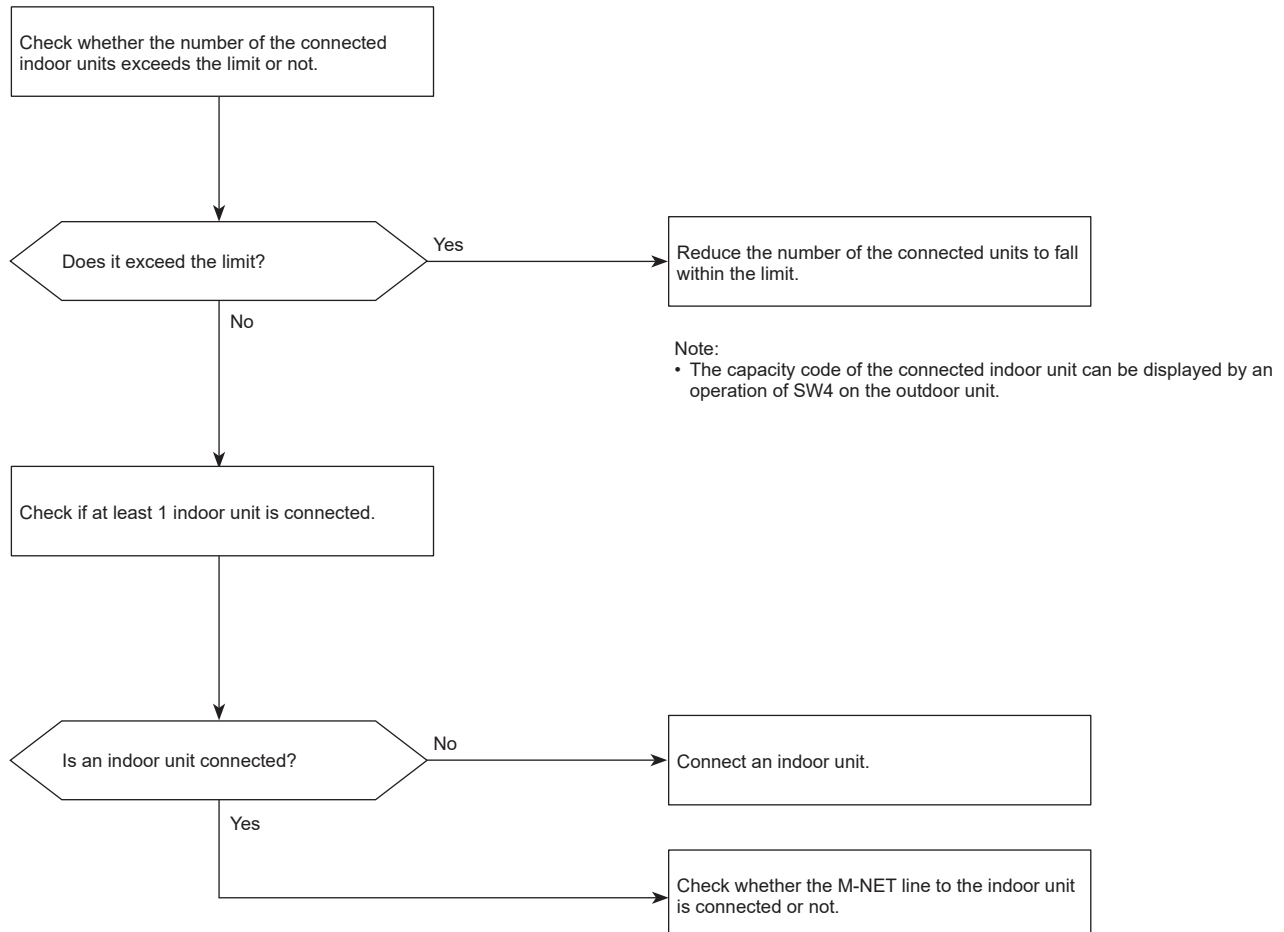

7105 (EF): Address setting error

Abnormal points and detection methods


The address setting is wrong.

Causes and checkpoints


There is a unit without correct address setting in the range specified in the installation manual.

Diagnosis of failure


<Outdoor unit>

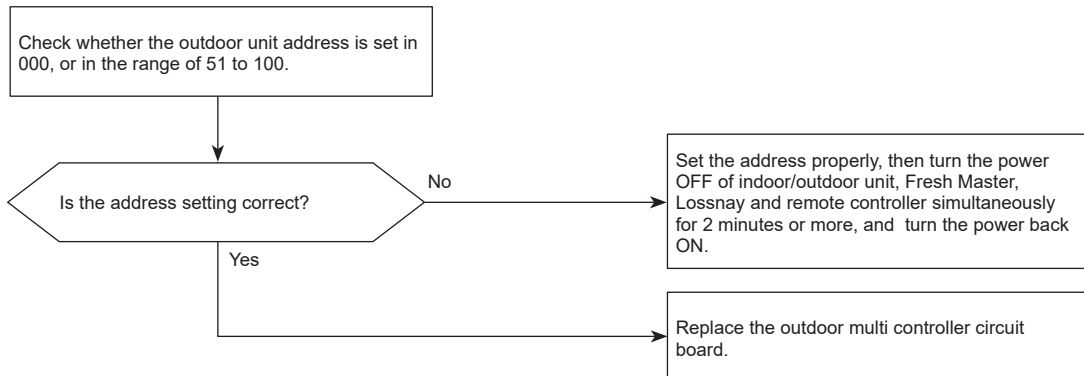

<Indoor unit>

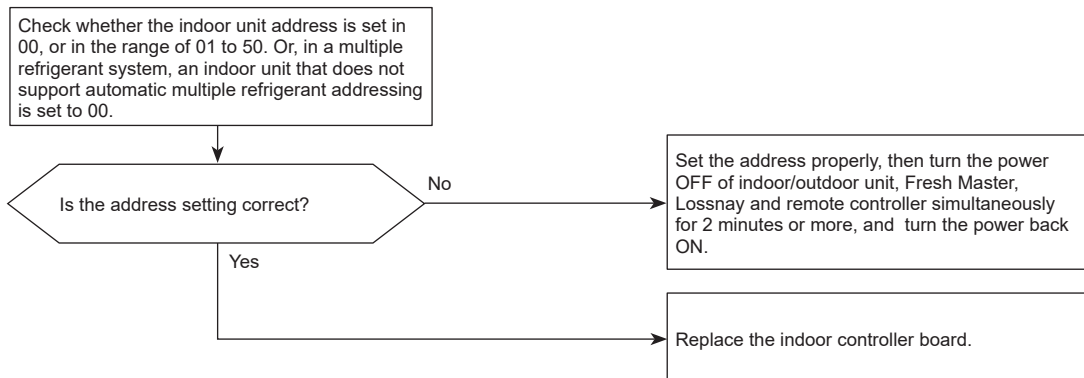

<Branch box>

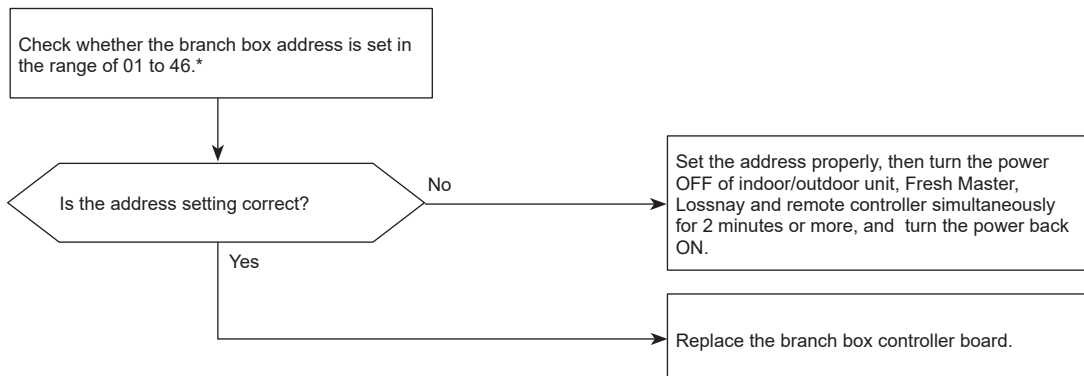

* Branch box port addresses are set sequentially and they must not exceed 50. For example, when 5 indoor units are connected and the branch box address (port A address) is set to 47, it is not allowable because the port E address exceeds 50 (A: 47, B: 48, C: 49, D: 50, E: 51).


Abnormal points and detection methods

The system construction is not appropriate, so refrigerant leak cannot be detected at start-up. The outdoor unit detects this error.

Causes and checkpoints


- A refrigerant sensor is not connected to an M-IC or there is an abnormality in the connection.
- An MA remote controller with alarm is not connected to an M-IC or there is an abnormality in the connection.
- Required number of Sensor and Alarm Kits is not connected to the branch box or there is an abnormality in the connection.
- The outdoor unit could not receive information of the system construction correctly due to incidental noise interruption to the communication circuit.

Diagnosis of failure

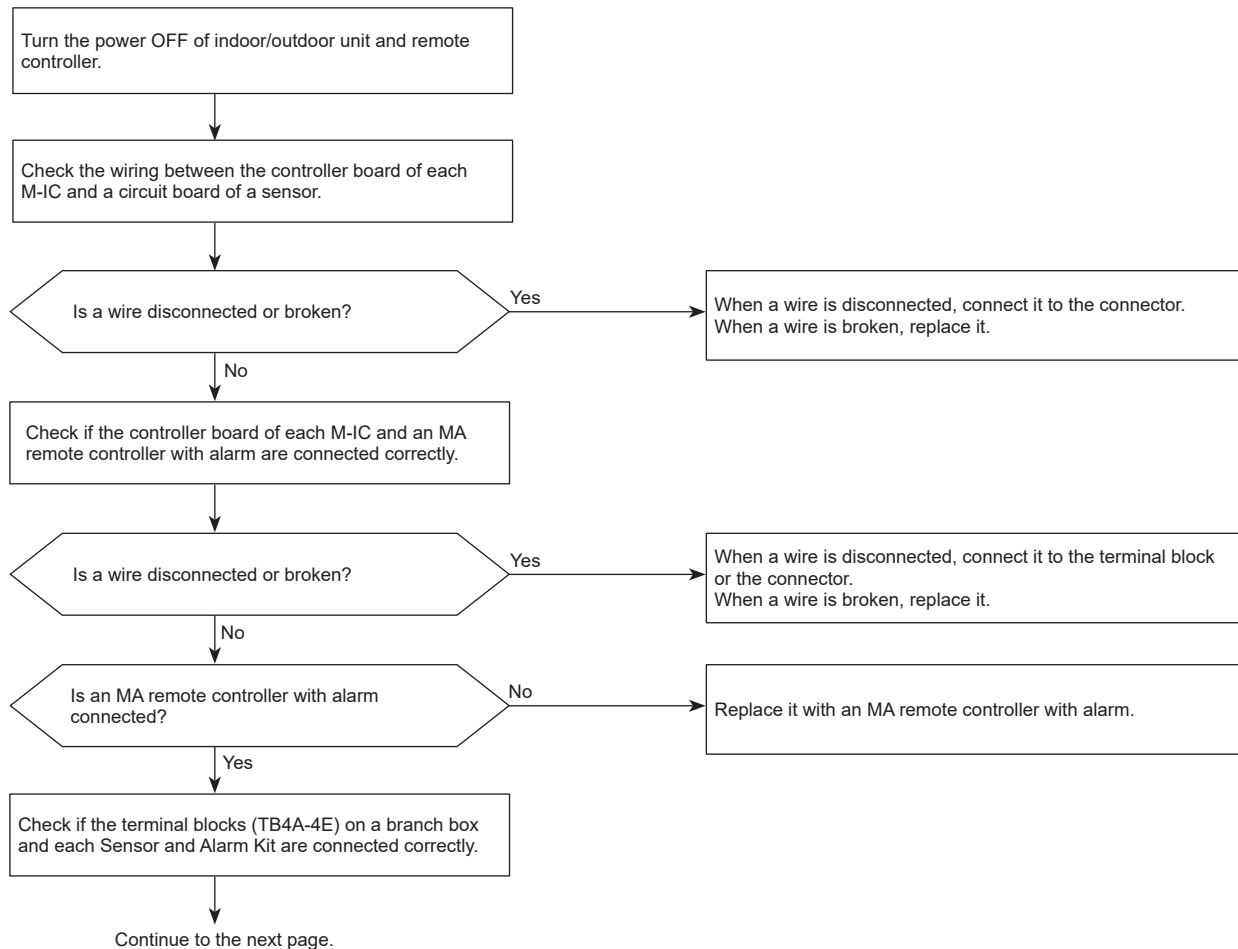

Diagnosis of failure

Continued from the previous page.

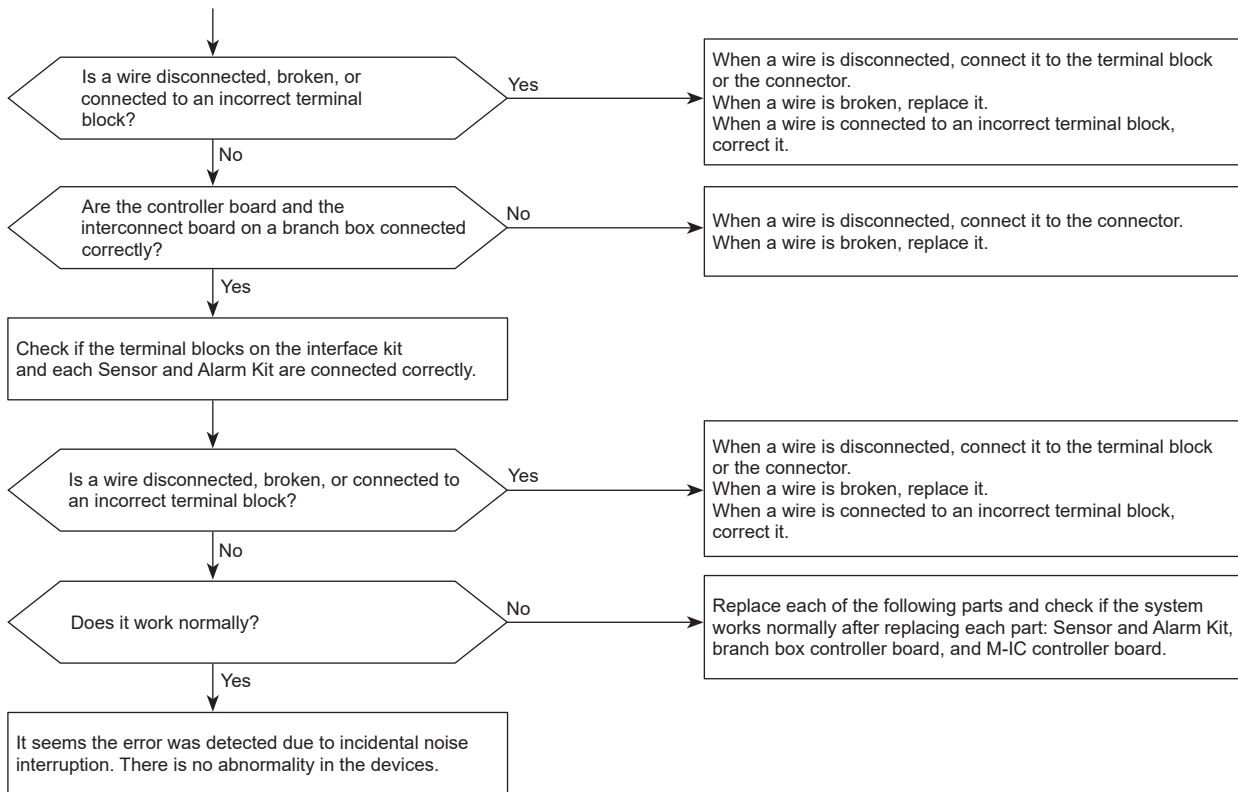

7121 (EF): Power supply failure


Abnormal points and detection methods

- Occurs when power is not supplied to the indoor unit or the Power Supply Interface for Alarm Kit at the initial startup of the outdoor unit.

Causes and checkpoints

- Power is not supplied to the indoor unit or the Power Supply Interface for Alarm Kit.
- Check whether the indoor unit or the Power Supply Interface for Alarm Kit is properly connected.

Diagnosis of failure

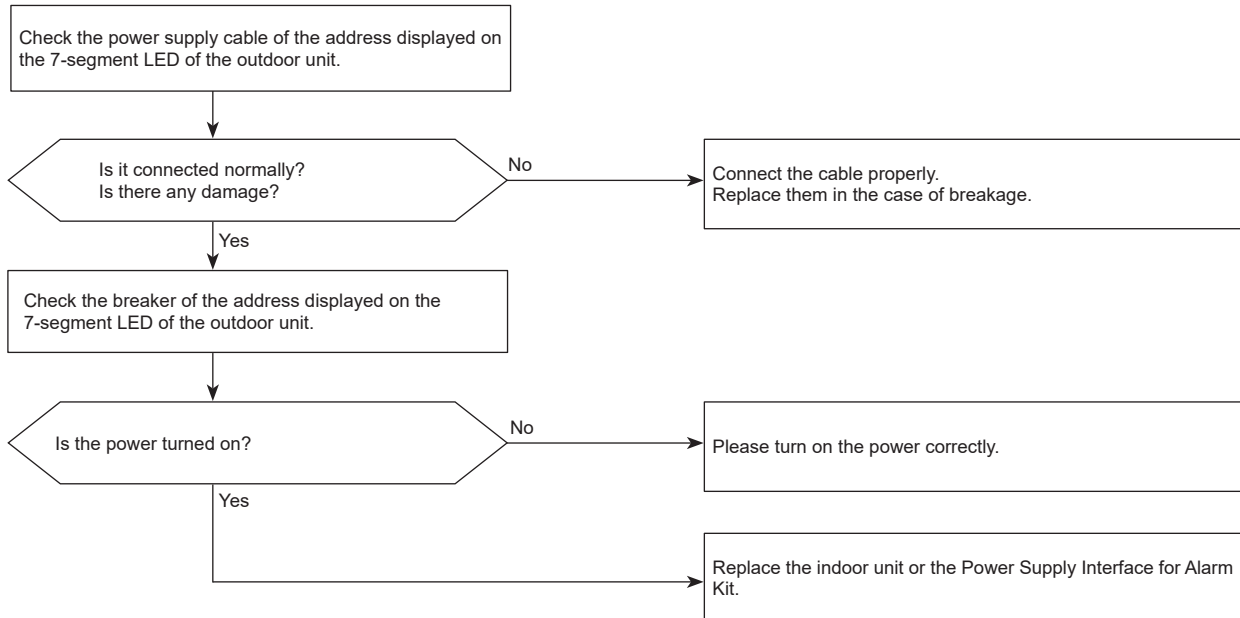

7130 (EF): Incompatible unit combination error


Abnormal points and detection methods

The connected indoor unit is not compatible with the outdoor unit, the outdoor unit detects the error at startup.

Causes and checkpoints

Connecting indoor unit(s) which is not authorized to connect to the outdoor unit.

Diagnosis of failure

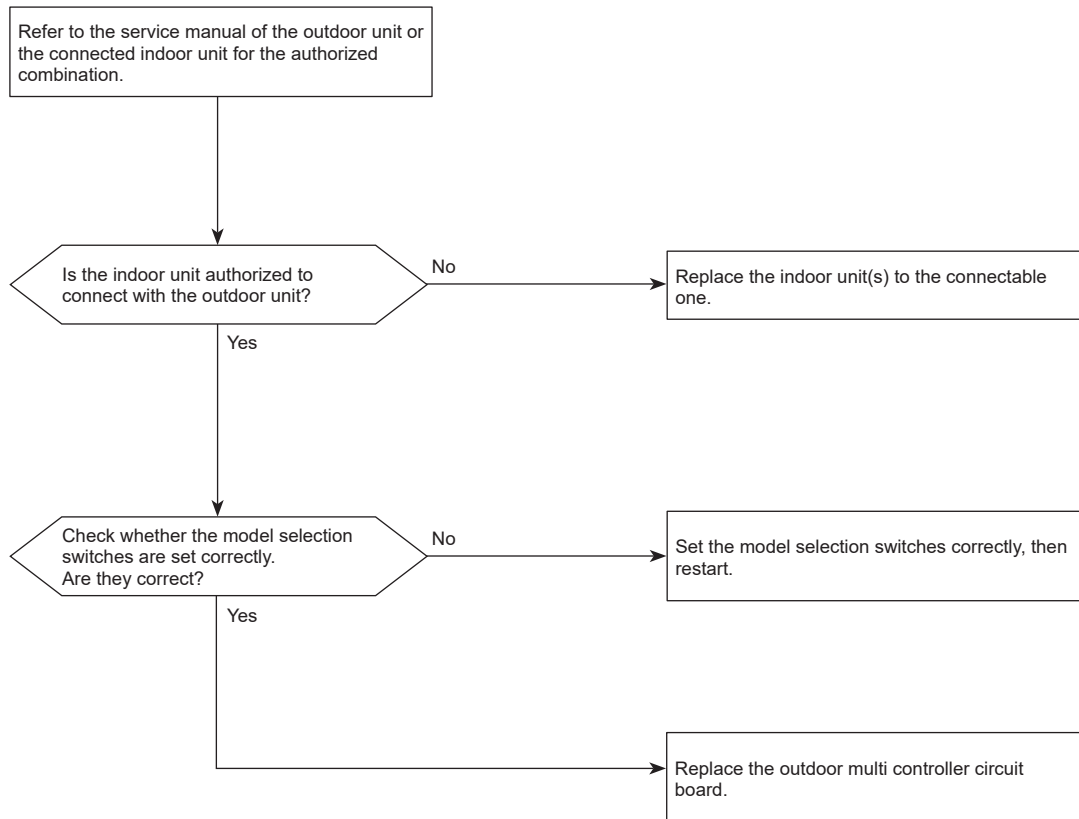

8-2. Remote controller diagnosis

Refer to "Remote controller check" in MA remote controller operation manual.

8-3. Remote controller trouble

8-3-1. For MA remote controller systems

Symptom or inspection code	Cause
Though the content of operation is displayed on the remote controller, some indoor units do not operate.	• The power supply of the indoor unit is not on. • Wiring between indoor units in the same group is not finished. • M-IC and A-IC are connected in the same group. • The fuse on the indoor unit controller board is blown.
Though the indoor unit operates, the display of the remote controller goes out soon.	• The power supply of the indoor unit (Main) is not on. • In the case of connecting the system controller, the setting of the system controller does not correspond to that of MA remote controller. • The fuse on the indoor unit (Main) controller board is blown.
The display of the remote controller does not come up.	The remote controller is not fed until the power supply of both indoor unit and outdoor unit is on and the startup of both units is finished normally. • The power supply of the indoor unit is not on. • The power supply of the outdoor unit is not on. • The number of connected remote controllers is over the limit (Maximum: 2 units) or the number of connected indoor units is over the limit (Maximum: 16 units). • The address of the indoor unit is "00" and the address for the outdoor unit is the one other than "00". • The transmission line of the indoor/outdoor unit is connected to TB15. • MA remote controller is connected to the transmission line of the indoor/outdoor unit. • The remote controller cable is shorted or down. • The power supply cable or the transmission line is shorted or down. • The fuse on the indoor unit controller board is blown.
"Please Wait" keeps being displayed or it is displayed periodically. (“Please Wait” is usually displayed for 3 minutes after the power supply of the outdoor unit is on.)	• The power supply of the outdoor unit is not on. • The power supply of the feeding expansion unit for the transmission line is not on. • The setting of MA remote controller is not main remote controller, but sub-remote controller. • MA remote controller is connected to the transmission line of the indoor/outdoor unit.
The remote controller does not operate.	• The power supply of the indoor unit (Main) is not on. • The transmission line of the indoor/outdoor unit is connected to TB15. • The transmission line of the indoor/outdoor unit is shorted, down or badly contacted. • The fuse on the indoor unit controller board is blown.
Inspection method and solution	
• Check the part where the abnormality occurs. 1. The entire system 2. In the entire refrigerant system 3. In the same group only 4. 1 indoor unit only	In the case of the entire system or in the entire refrigerant system • Check the self-diagnosis LED of the outdoor unit. • Check the items shown in the left that are related to the outdoor unit. In the case of in the same group only or 1 indoor unit only • Check the items shown in the left that are related to the indoor unit.

8-4. The following symptoms do not represent product failure

Symptom	Cause
Even the cooling (heating) operation selection button is pressed, the indoor unit cannot be operated. Display: "Cooling (Heating)" blinks	The indoor unit cannot cool (heat) if other indoor units are heating (cooling).
The auto vane runs freely. Display: Normal display	Because of the control operation of auto vane, it may change over to horizontal blow automatically from the downward blow in cooling because the downward blow operation has been continued for 1 hour. At defrosting in heating, hot adjusting and thermostat OFF, it automatically changes over to horizontal blow.
Fan setting changes during heating. Display: Normal display	Ultra-low speed operation is commenced at thermostat OFF. Light air automatically change over to set value by time or piping temperature at thermostat ON.
Fan stops during heating operation. Display: "Heat Defrost" 	The fan stops during defrosting.
Fan does not stop while operation has been stopped. Display: Light is off	Fan runs for 1 minute after stopping to exhaust residual heat (only in heating).
No setting of fan while start SW has been turned on. Display: "Heat Standby" 	Ultra-low speed operation for 5 minutes after SW ON or until piping temperature reaches 35°C. Then low speed operates for 2 minutes and operates at the normal set air volume. (Hot adjust control)
Indoor unit remote controller shows "Please Wait" indicator for about 2 minutes when turning ON power supply. Display: "Please Wait" blinks	The system is in the process of startup. Operate remote controller again after "Please Wait" disappears.
Drain pump does not stop while unit has been stopped. Display: Light is off	After a stop of cooling operation, unit continues to operate drain pump for 3 minutes and then stops.
Drain pump continues to operate while unit has been stopped. Display: —	Unit continues to operate drain pump if drainage is generated, even during a stop.

8-5. Internal switch function table

8-5-1. Function of switches

■ SWU1 and SWU2



SWU2



SWU1

(tens digit) (ones digit)

Bit	When to set
Rotary switch	Before turning the power ON

■ SW4: Digital display switch

Initial setting



The black square (■) indicates a switch position.

Bit	When to set	Purpose
1-10	Any time	To display outdoor unit's information to the LED on outdoor multi controller circuit board. Refer to "8-10. Outdoor unit information display".

■ SW5: Function switch

Initial setting



* Initial settings for SW5-3, 5-4, 5-5, and 5-6 are depending on the capacity.
The black square (■) indicates a switch position.

Bit	Function	Operation in each switch setting			Purpose	Additional information
		ON	OFF	When to set		
1	Select operating system startup	With centralized controller	Without centralized controller	Before turning the power ON	Turn ON when the centralized controller is connected to the outdoor unit.	- SW5-1 must be turned ON if a centralized controller is connected to the system. An example of this would be a TC-24, EB50A, AG150, AE50 or AE200. If SW5-1 is OFF, while using a centralized controller, in rare circumstances problems may be encountered such as indoor units not responding to group commands. - Group setting of 2 or more A-IC units which are connected to branch box via centralized controller is not allowed.
2	Clear connection information	Activated	Deactivated	Before turning the power ON	To clear connection information.	Clear connection information when relocating units or connecting additional units.
3	Model selection				-	-
4						
5						
6						
7	Switching the interface kit connection	Connection	No connection	Before turning the power ON	Turn ON When the system is configured with an Interface kit connected.	If turn the power on with the setting ON when the interface kit is not connected, an error 7118 will occur.
8	-	-	-	-	-	-
9	-	-	-	-	-	-
10	-	-	-	-	-	-

■ SW6: Function switch

Initial setting

ON	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐
OFF	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒
	1	2	3	4	5	6	7	8	9	10

The black square (■) indicates a switch position.

Bit	Function	Operation in each switch setting			Purpose	Additional information
		ON	OFF	When to set		
1	ON/OFF from outdoor unit	Activated	Deactivated	Anytime after the power is turned ON	-	-
2	Mode setting	Heating	Cooling	Anytime after the power is turned ON	-	-
3	Manual defrost	Activated	Deactivated	While the compressor is running in Heating mode	Turn ON when it is necessary to perform the defrosting operation forcedly. (Effective only at startup, or 10 minutes after the last defrosting operation)	It performs the defrosting operation forcedly. (Heating operation is stopped temporarily.)
4	Ignore current sensor abnormality and rotational frequency abnormality of outdoor fan motor	Activated	Deactivated	Anytime after the power is turned ON	To perform a test run for electrical parts alone without running the compressor. Also, to perform the troubleshooting of electrical parts without operating the outdoor unit's fan.	Make sure to connect the connectors to the compressor after checking the electrical parts. Be careful not to get electrical shock while working on electrical parts.
5	Pump down	Activated	Deactivated	While the compressor is running	To facilitate outdoor unit the pumping down operation. Frequency = Fixed to 65 Hz Indoor-linear expansion valve = Fully open Outdoor fan step = Fixed to 10	Refer to a section referring to the pumping down on outdoor units installation manuals. It might not be possible to collect all the refrigerant if the amount is excessive. Do not perform pump down work when there is a gas leak. The intake of air or other gases causes abnormally high pressure in the refrigeration cycle, which may cause explosion or injury.
6	-	-	-	-	-	-
7	-	-	-	-	-	-
8	-	-	-	-	-	-
9	-	-	-	-	-	-
10	Self-diagnosis monitor display / SW4 function setting mode	SW4 function setting mode	Self-diagnosis monitor display	Anytime after the power is turned ON.	-	-

■ SW7: Function switch

Initial setting

ON	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐
OFF	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒
	1	2	3	4	5	6	7	8	9	10

The black square (■) indicates a switch position.

Bit	Function	Operation in each switch setting			Purpose	Additional information
		ON	OFF	When to set		
1	-	-	-	-	-	-
2	-	-	-	-	-	-
3	-	-	-	-	-	-
4	-	-	-	-	-	-
5	-	-	-	-	-	-
6	-	-	-	-	-	-
7	-	-	-	-	-	-
8	-	-	-	-	-	-
9	-	-	-	-	-	-
10	-	-	-	-	-	-

8-5-2. Additional DIP switch settings at the time of shipment

To set the function, turn on SW6-10, set SW4, and then press and hold down SWP3 for 2 seconds or longer. This changes the setting (OFF/ON). The setting is displayed on LED1 by illuminating "Pattern No." and "ON" or "OFF" alternately at intervals of 1 second. Make sure that the function is set correctly. You need to reset the settings when replacing the controller board. Write the setting you have selected in the electric wiring label on the service panel.

Function Item No.	Switch (SW4) 12345678910	Function	Operation in each switch setting			Purpose	Additional information
			ON	OFF	When to set		
0001	1000000000	Clear abnormal data	Activated	Deactivated	OFF to ON any time after the power is turned on	To delete an error history.	-
0003	1100000000	Switching the target discharge pressure (Pdm)	Activated	Deactivated	Any time	To raise the performance by setting the Pdm higher during HEAT operation.*1	Power consumption increases due to a higher frequency. (The performance would not increase at the maximum operating frequency.)
0004	0010000000	Switching (1) the target evaporation temperature (ETm)	Activated	Deactivated	Any time	To raise/lower the temperature by changing the target ETm during COOL operation.	Switching it to lower the temperature, it raises the power consumption, and produces more condensation. Switching it to raise the temperature, it makes the performance insufficient.
0005	1010000000	Switching (2) the target evaporation temperature (ETm)	Activated	Deactivated	Any time	Switch to lower the temperature: raises the performance Switch to raise the temperature: prevents condensation.*2	
0006	0110000000	Switching the primary current limitation	Activated	Deactivated	When the compressor is stopped	To lower the primary current limit by 29.5 A. This switch is used for a model with a breaker capacity 40 A.	The performance of the unit might be somewhat reduced since the frequency would not rise enough due to the lowered current limitation.
0008	0001000000	Decreasing the target subcool (Heating mode)	Activated	Deactivated	Any time	To reduce the discharge temperature decrease due to refrigerant liquid accumulation in the units	A refrigerant flow noise might be generated if the subcool value is too small.
0009	1001000000	Auto change over from remote controller (IC with the minimum address)	Activated	Deactivated	When the compressor is stopped	Enables the indoor unit with the minimum address to select AUTO mode, and switches the operation mode of the other indoor units to the same mode	Cannot be set when the centralized control is ON.
0010	0101000000	Switching Silent/ Demand mode	Demand control	Silent mode	Any time	-	About the Silent mode / Demand control setting, refer to "Outdoor unit input/output connector"
0012	0011000000	Change of defrosting control	Activated (For high humidity)	Deactivated	Any time	To shorten the defrosting prohibition time in high humidity (or heavy snow) region, in order to reduce malfunctions caused by frost	The performance of HEAT operation is somewhat reduced since the defrosting operation is frequently performed.
0017	1000100000	High heating performance mode	Activated	Deactivated	Any time	To raise the performance of HEAT operation if it is insufficient	The performance may not be raised depending on the capacity of indoor units in operation, or outside air temperature.
0019	1100100000	Change the indoor unit's LEV opening at startup	Activated	Deactivated	Any time	To set the LEV opening at startup higher than usual (+150 pulses), To improve the operation with the LEV almost clogged	The refrigerant flow noise at startup become louder.
0021	1010100000	Setting to energize the freeze stat heater (optional part) only during heating	Activated *3	Deactivated *4	Any time	To reduce snow on the base, even it blows inside the unit, by setting the base heater ON while the HEAT operation is stopped	Power consumption raises while the operation is stopped.
0024	0000011000	External static pressure mode	Activated	Deactivated	Any time	To raise the fan rotation to raise the performance when an external static pressure is applied.	It can support the external static pressure up to 30 Pa. The power input and the sound level become larger due to increasing the outdoor unit's fan rotation.
0025	1001100000	Change the indoor unit's LEV opening at defrost	Activated	Deactivated	Any time	To set the LEV opening higher than usual during defrosting operation (Only Qj ≤ 10 is valid, + 300 pulses), To avoid the discharge temperature increase and provide efficient defrosting operation	The refrigerant flow noise during the defrosting operation become louder.
0026	0101100000	While the outdoor unit is in HEAT operation, additionally increase by 50 to 70 pulses of the LEV opening on the indoor unit which is in FAN, STOP, COOL or thermo-OFF. *5	Activated	Deactivated	Any time	To additionally increase by about 50 to 70 pulses of the LEV opening for units other than in HEAT operation, To avoid a refrigerant shortage (less capacity) due to refrigerant liquid accumulation in the units which is not in operation	A refrigerant flow noise might be generated in units other than the one in operation.
0028	0011100000	While the outdoor unit is in HEAT operation, fully close the LEV on the indoor unit which is in FAN or COOL.*6	Activated	Deactivated	Any time	To reduce the room temperature increase by setting the LEV opening lower for the indoor units in FAN or COOL	The refrigerant is more likely to collect in the indoor units in FAN or COOL, which can cause refrigerant shortage of units, resulting in less capacity and increase in discharge temperature.
0029	1011100000	Maximum frequency down at 1 hour after COOL operation	Activated	Deactivated	Any time	To reduce dew condensation on the indoor unit by lowering the frequency	The performance might be insufficient.
0043	1101010000	Address initialization/resetting	Activated	Deactivated	When the compressor is stopped	In a system that uses Interface Kit, this is used to initialize the address when the address of the outdoor unit is changed or the address set by the automatic address of the Interface Kit is changed for some reason.	Please turn the power on within 10 minutes of turning the function ON. If more than 10 minutes have passed, the function will automatically turn OFF. Please turn it OFF and ON again before turning the power on.

*1.

No.0003	OFF	ON
Target Pdm (kgf/cm ²)	29.5	31.5


*2.

No. 0004	OFF	ON	OFF	ON
No. 0005	OFF	OFF	ON	ON
Target ETm (°C)	9	11	6	14

- *3. When the ambient temperature is 4°C or below during heating operation, the freeze prevention heater is energized.
- *4. When heating mode is OFF (include thermo-OFF in cooling mode), and the ambient temperature is 4°C or below, the freeze prevention heater is energized.
- *5. Function item No.0026 Opens the indoor-linear expansion valve as a countermeasure against the indoor unit in FAN, COOL, STOP, or thermo-OFF operation with refrigerant-shortage status due to an accumulation of liquid refrigerant in the indoor unit.
- *6. Function item No.0028 Countermeasure against room temperature rise for indoor unit in FAN and COOL mode


8-6. Outdoor unit input/output connector

■ State (CN51)

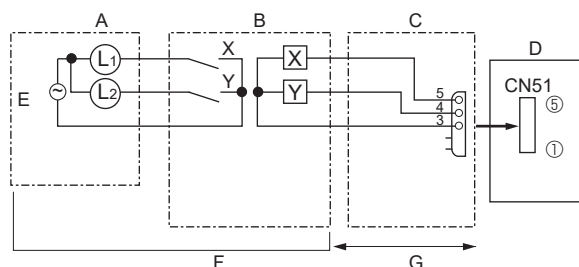


- A: Distant control board
 B: Relay circuit
 C: External output adapter (PAC-SA88HA-E)
 D: Outdoor unit control board
 E: Lamp power supply
 F: Procure locally
 G: Max. 10m [32 ft]
 L1: Error display lamp
 L2: Compressor operation lamp
 X, Y: Relay (coil rating: ≤ 0.9W. DC 12 VDC)

■ Auto changeover (CN3N)

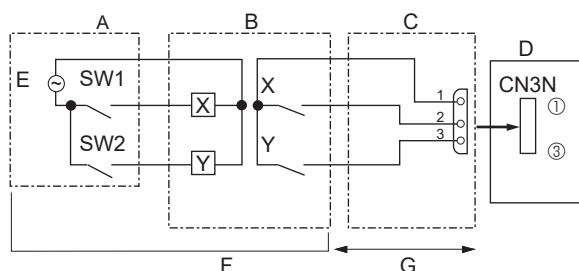

- A: Remote control panel
 B: Relay circuit
 C: External input adapter (PAC-SC36NA-E)
 D: Outdoor unit control board
 E: Relay power supply
 F: Procure locally
 G: Max. 10 m [32 ft]
 SW1: Switch
 SW2: Switch
 X, Y: Relay (contact rating: ≥ 0.1 A. 15 VDC, min. applicable load: ≤ 1 mA)
 SW1-ON: Heating, SW1-OFF: Cooling
 SW2-ON: Validity of SW1, SW2-OFF: Invalidity of SW1

■ Silent Mode/Demand Control (CN3D)

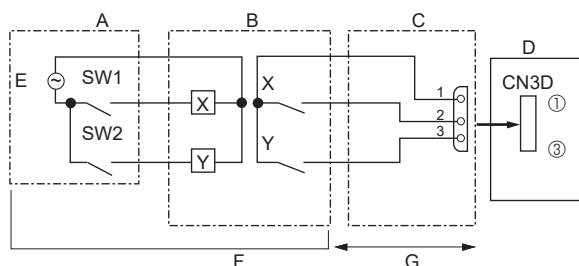

- A: Remote control panel
 B: Relay circuit
 C: External input adapter (PAC-SC36NA-E)
 D: Outdoor unit control board
 E: Relay power supply
 F: Procure locally
 G: Max. 10 m [32 ft]
 SW1: Switch
 SW2: Switch
 X, Y: Relay (contact rating: ≥ 0.1 A. 15 VDC, min. applicable load: ≤ 1 mA)

The silent mode and the demand control are selected by the function setting No. 0010
 It is possible to set it to the following power consumption (compared with ratings) by setting SW1, 2.

	Function setting No. 0010	SW1	SW2	Function
Silent mode (Cooling only)	OFF	OFF	OFF	Normal
		ON	OFF	Silent mode
		OFF	ON	Super silent mode 1
		ON	ON	Super silent mode 2
Demand control	ON	OFF	OFF	100% (Normal)
		ON	OFF	75%
		ON	ON	50%
		OFF	ON	0% (Stop)

8-7. How to check the parts


8-7-1. Checkpoints for each part

■ Thermistors

Disconnect the connector then measure the resistance with a multimeter (at the ambient temperature 10 to 30°C).

Thermistors	Normal	Abnormal
TH4 (Compressor)	160 to 410 kΩ	Open or short
TH2 (HIC pipe)	4.3 to 9.6 kΩ	
TH3 (Outdoor liquid pipe)		
TH6 (Suction pipe)		
TH7 (Ambient)		
TH8 (Heat sink)	39 to 105 kΩ	

■ Fan motor (MF1)

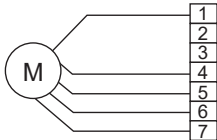

Measure the resistance between the connector pins with a multimeter (at the ambient temperature 20°C).


Connector pins	Normal	Abnormal
Red - Blue	$1.1 \pm 0.05 \text{ M}\Omega$	Open or short (Short, for White - Blue)
Brown - Blue	$40 \pm 4 \text{ k}\Omega$	
Orange - Blue	$220 \pm 22 \text{ k}\Omega$	
White - Blue	Open	

■ Solenoid valve coil <4-way valve> (21S4)

Measure the resistance between the terminals with a multimeter (at the ambient temperature 20°C).

Normal	Abnormal
$1725 \pm 172.5 \Omega$	Open or short

■ Motor for compressor (MC)

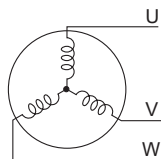

Measure the resistance between the terminals with a multimeter (at the ambient temperature 20°C).

Model	Normal	Abnormal
PUMY-SM•VKM2	$0.440 \pm 0.022 \Omega$	Open or short
PUMY-SM•YKM2	$0.880 \pm 0.044 \Omega$	

■ Solenoid valve coil <Bypass valve> (SV1)

Measure the resistance between the terminals with a multimeter (at the ambient temperature 20°C).

Normal	Abnormal
$1182.5 \pm 83 \Omega$	Open or short

■ Liquid shut-off valve coil (SV4)

Measure the resistance between the terminals with a multimeter (at the ambient temperature 20°C).


Normal	Abnormal
$1182.5 \pm 83 \Omega$	Open or short

■ Gas shut-off valve coil (SV5)

Measure the resistance between the terminals with a multimeter (at the ambient temperature 20°C).


Normal	Abnormal
$1182.5 \pm 83 \Omega$	Open or short

■ Linear expansion valve (LEV-A)

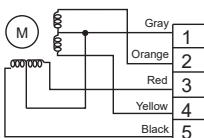

Connector pins	Normal	Abnormal
Gray - Black	$46 \pm 3 \Omega$	Open or short
Gray - Red		
Gray - Yellow		
Gray - Orange		

■ Linear expansion valve (LEV-B)

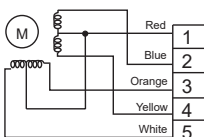

Connector pins	Normal	Abnormal
Red - White	46 ± 4 Ω	Open or short
Red - Orange		
Red - Yellow		
Red - Blue		

8-8. How to check the components

8-8-1. Thermistor feature chart

■ Low temperature thermistors


- TH2 (HIC pipe)
- TH3 (Outdoor liquid pipe)
- TH6 (Suction pipe)
- TH7 (Ambient)

Thermistor R0 = 15 kΩ ± 3 %

B constant = 3480 ± 1 %

$$R_t = 15 \exp\left\{3480\left(\frac{1}{273+t} - \frac{1}{273}\right)\right\}$$

Temperature	Resistance value
0°C	15 kΩ
10°C	9.6 kΩ
20°C	6.3 kΩ
25°C	5.2 kΩ
30°C	4.3 kΩ
40°C	3.0 kΩ

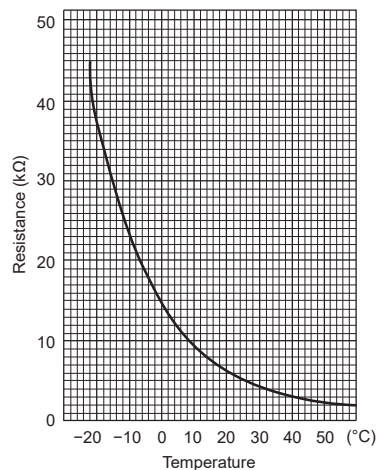

■ Medium temperature thermistor


- TH8 (Heat sink)

Thermistor R50 = 17 kΩ ± 2 %

B constant = 4150 ± 3 %

$$R_t = 17 \exp\left\{4150\left(\frac{1}{273+t} - \frac{1}{323}\right)\right\}$$

Temperature	Resistance value
0°C	180 kΩ
25°C	50 kΩ
50°C	17 kΩ
70°C	8 kΩ
90°C	4 kΩ

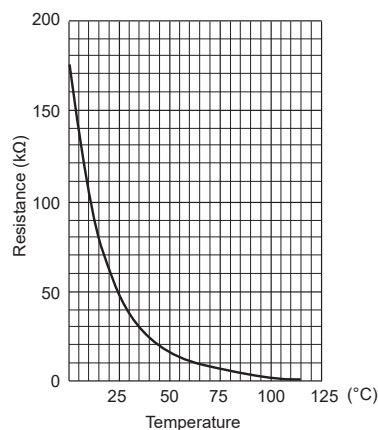

■ High temperature thermistor


- TH4 (Compressor)

Thermistor R120 = 7.465 kΩ ± 2 %

B constant = 4057 ± 2 %

$$R_t = 7.465 \exp\left\{4057\left(\frac{1}{273+t} - \frac{1}{393}\right)\right\}$$


Temperature	Resistance value
20°C	250 kΩ
30°C	160 kΩ
40°C	104 kΩ
50°C	70 kΩ
60°C	48 kΩ
70°C	34 kΩ
80°C	24 kΩ
90°C	17.5 kΩ
100°C	13.0 kΩ
110°C	9.8 kΩ

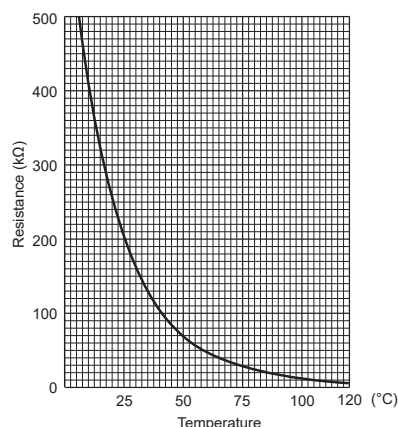

8-8-2. High pressure sensor

■ The methods of comparing the high pressure sensor measurement and gauge pressure

 By configuring the digital display setting switch (SW4) as shown in the figure below, the pressure as measured by the high pressure sensor appears on the LED1 on the control board.



The black square (■) indicates a switch position.

- While the outdoor unit is stopped, compare the gauge pressure and the pressure displayed on the self-diagnosis LED1.
 - When the gauge pressure is between 0 and 0.098 MPaG, internal pressure is caused due to gas leak.
 - When the pressure displayed on the self-diagnosis LED1 is between 0 and 0.098 MPaG, the connector may be faulty or be disconnected. Check the connector and go to the method 4.
 - When the pressure displayed on the self-diagnosis LED1 exceeds 5.0 MPaG, go to the method 3.
 - If other than listed above, compare the pressures while the sensor is running. Go to the method 2.
- Compare the gauge pressure and the pressure displayed on the self-diagnosis LED1 after 15 minutes have passed since the start of operation. (Compare them by MPaG/psig unit.)
 - When the difference between both pressures is within 0.25 MPaG, both the high pressure sensor and the control board are normal.
 - When the difference between both pressures exceeds 0.25 MPaG, the high pressure sensor has a problem. (performance deterioration)
 - When the pressure displayed on the self-diagnosis LED1 does not change, the high pressure sensor has a problem.
- Remove the high pressure sensor from the control board to check the pressure on the self-diagnosis LED1.
 - When the pressure displayed on the self-diagnosis LED1 is between 0 and 0.098 MPaG, the high pressure sensor has a problem.
 - When the pressure displayed on the self-diagnosis LED1 is approximately 5.0 MPaG, the control board has a problem.
- Remove the high pressure sensor from the control board, and short-circuit between the pin 2 and pin 3 connectors (63HS) to check the pressure with the self-diagnosis LED1.
 - When the pressure displayed on the self-diagnosis LED1 exceeds 5.0 MPaG, the high pressure sensor has a problem.
 - If other than listed above, the control board has a problem.



■ High pressure sensor configuration (63HS)

The high pressure sensor consists of the circuit shown in the figure below. If 5 VDC is applied between the red and the black wires, voltage corresponding to the pressure between the white and the black wires will be output, and the value of this voltage will be converted by the microprocessor. The output voltage is 0.078 V per 0.098 MPaG.

Note:

- The pressure sensor on the body side is designed to connect to the connector. The connector pin number on the body side is different from that on the control board side.

	Body side	Control board side
Vcc	Pin 1	Pin 3
Vout	Pin 2	Pin 2
GND	Pin 3	Pin 1

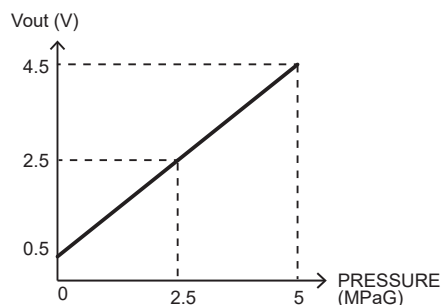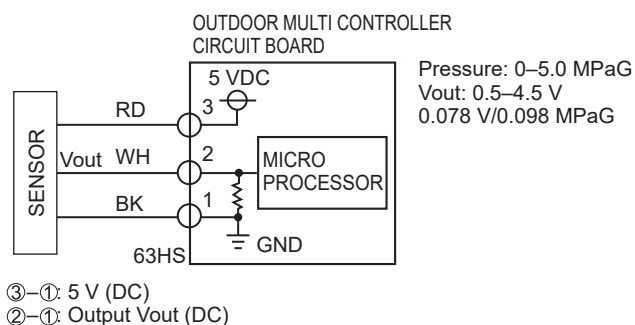

8-8-3. Low pressure sensor

■ The methods of comparing the low pressure sensor measurement and gauge pressure

By configuring the digital display setting switch (SW4) as shown in the figure below, the pressure as measured by the low pressure sensor appears on the LED1 on the control board.



The black square (■) indicates a switch position.

- While the outdoor unit is stopped, compare the gauge pressure and the pressure displayed on the self-diagnosis LED1.
 - When the gauge pressure is between 0 and 0.098 MPaG, internal pressure is caused due to gas leak.
 - When the pressure displayed on the self-diagnosis LED1 is between 0 and 0.098 MPaG, the connector may be faulty or be disconnected. Check the connector and go to the method 4.
 - When the outdoor temperature is 30°C or less, and the pressure displayed on the self-diagnosis LED1 exceeds 1.7 MPaG, go to the method 3.
 - When the outdoor temperature exceeds 30°C, and the pressure displayed on the self-diagnosis LED1 exceeds 1.7 MPaG, go to the method 5.
 - If other than listed above, compare the pressures while the sensor is running. Go to the method 2.
- Compare the gauge pressure and the pressure displayed on the self-diagnosis LED1 after 15 minutes have passed since the start of operation. (Compare them by MPaG/psig unit.)
 - When the difference between both pressures is within 0.2 MPaG, both the low pressure sensor and the control board are normal.
 - When the difference between both pressures exceeds 0.2 MPaG, the low pressure sensor has a problem. (performance deterioration)
 - When the pressure displayed on the self-diagnosis LED1 does not change, the low pressure sensor has a problem.
- Remove the low pressure sensor from the control board to check the pressure with the self-diagnosis LED1.
 - When the pressure displayed on the self-diagnosis LED1 is between 0 and 0.098 MPaG, the low pressure sensor has a problem.
 - When the pressure displayed on the self-diagnosis LED1 is approximately 1.7 MPaG, the control board has a problem.
- Remove the low pressure sensor from the control board, and short-circuit between the pin 2 and pin 3 connectors (63LS) to check the pressure with the self-diagnosis LED1.
 - When the pressure displayed on the self-diagnosis LED1 exceeds 1.7 MPaG, the low pressure sensor has a problem.
 - If other than listed above, the control board has a problem.
- Remove the high pressure sensor (63HS) from the control board, and insert it into the connector for the low pressure sensor (63LS) to check the pressure with the self-diagnosis LED1.
 - When the pressure displayed on the self-diagnosis LED1 exceeds 1.7 MPaG, the control board has a problem.
 - If other than listed above, go to the method 2.


■ Low pressure sensor configuration (63LS)

The low pressure sensor consists of the circuit shown in the figure below. If 5 VDC is applied between the red and the black wires, voltage corresponding to the pressure between the white and the black wires will be output, and the value of this voltage will be converted by the microprocessor. The output voltage is 0.173 V per 0.098 MPaG.


Note:

- The pressure sensor on the body side is designed to connect to the connector. The connector pin number on the body side is different from that on the control board side.

	Body side	Control board side
Vcc	Pin 1	Pin 3
Vout	Pin 2	Pin 2
GND	Pin 3	Pin 1

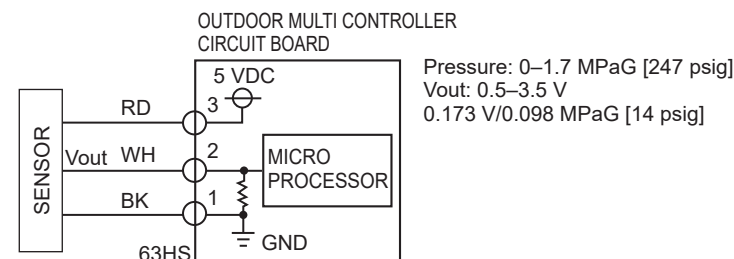

- ③-①: 5 V (DC)
②-①: Output Vout (DC)

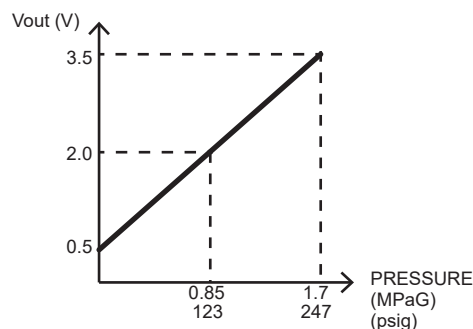


8-9. Test point diagram

■ Outdoor multi controller circuit board

⚠ Caution:

- TEST POINT① is high voltage.

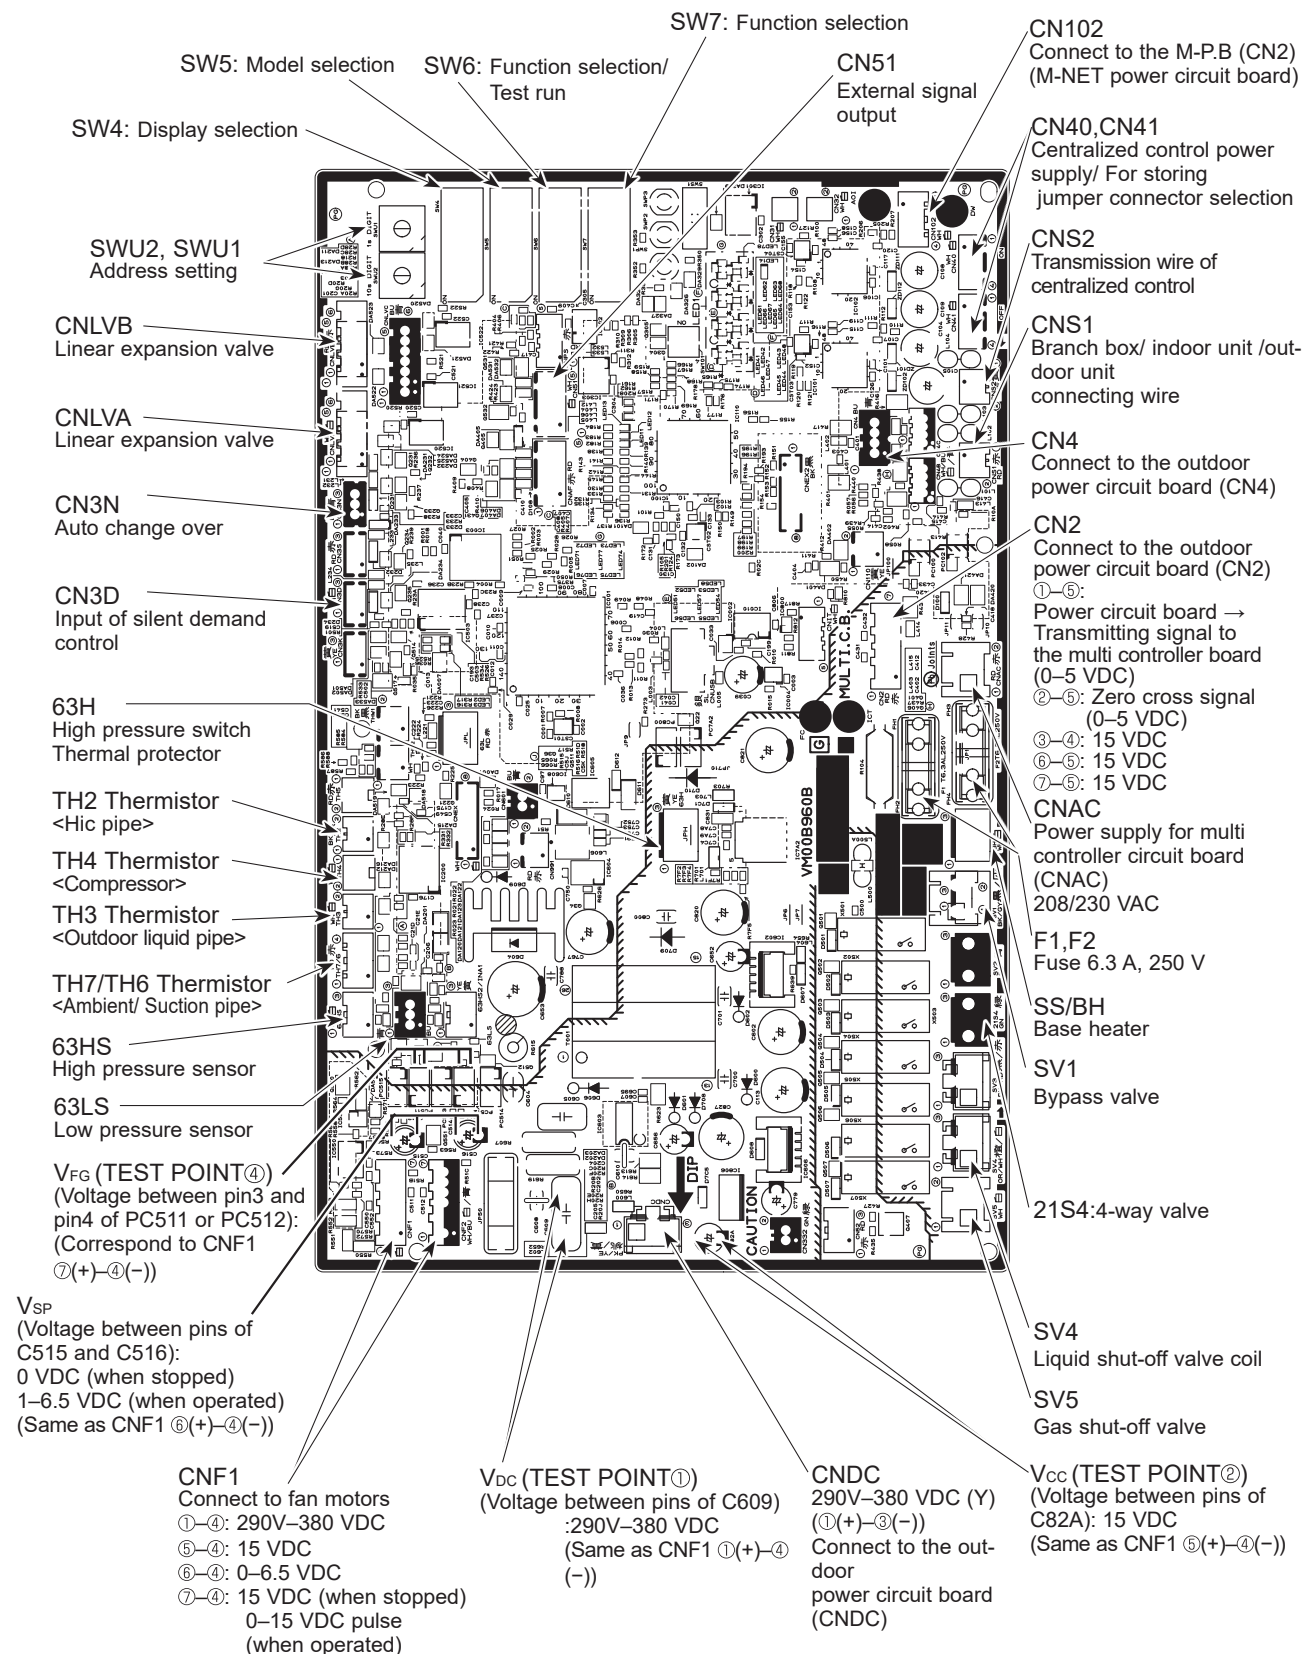

■ Outdoor power circuit board

PUMY-SM112VKM2

PUMY-SM125VKM2

PUMY-SM140VKM2

Brief check of the power module

If they are short-circuited, it means that they are broken.
Measure the resistance in the following points (connectors, etc.).

1. Check of power module

(1) Check of DIODE circuit

[R]–[P1], [S]–[P1], [R]–[N1], [S]–[N1]

(2) Check of IGBT circuit

[P2]–[L1], [P2]–[L2], [P2]–[L3], [N2]–[L1], [N2]–[L2], [N2]–[L3]

(3) Check of INVERTER circuit

[P3]–[U], [P3]–[V], [P3]–[W], [N3]–[U], [N3]–[V], [N3]–[W]

Note: The marks [R], [S], [L1], [L2], [P1], [N1], [U], [V], and [W] shown in the diagram are not actually printed on the board.

CN2

Connect to the outdoor multi controller circuit board (CN2)

①–⑤: Transmitting signal to outdoor controller circuit board (0–5 VDC)

②–⑥: Zero cross signal (0–5 VDC)

③–④: 15 VDC

⑥–⑦: 15 VDC

⑦–⑧: 15 VDC

TB1A, TB2A, TB3A,
TB1B, TB2B, TB3B
Connect to DCL

CNDC

310–380 VDC (①+, ③–)
Connect to the outdoor controller circuit board (CNDC)

CN6

Thermistor (TH8)

CN4

Connect to the outdoor multi controller circuit board (CN4)

U/V/W

Connect to the compressor (MC)
Voltage among phases: 10-180 VAC

CNAC


220-240 VAC
Connect to the outdoor multi controller circuit board (CNAC)
Connect to the M-NET power circuit board (CN1)

S/NI, R/LI

Voltage of 220-240 VAC is input
(Connect to the terminal block (TB1))

E1, E3, E4

Connect to the electrical parts box

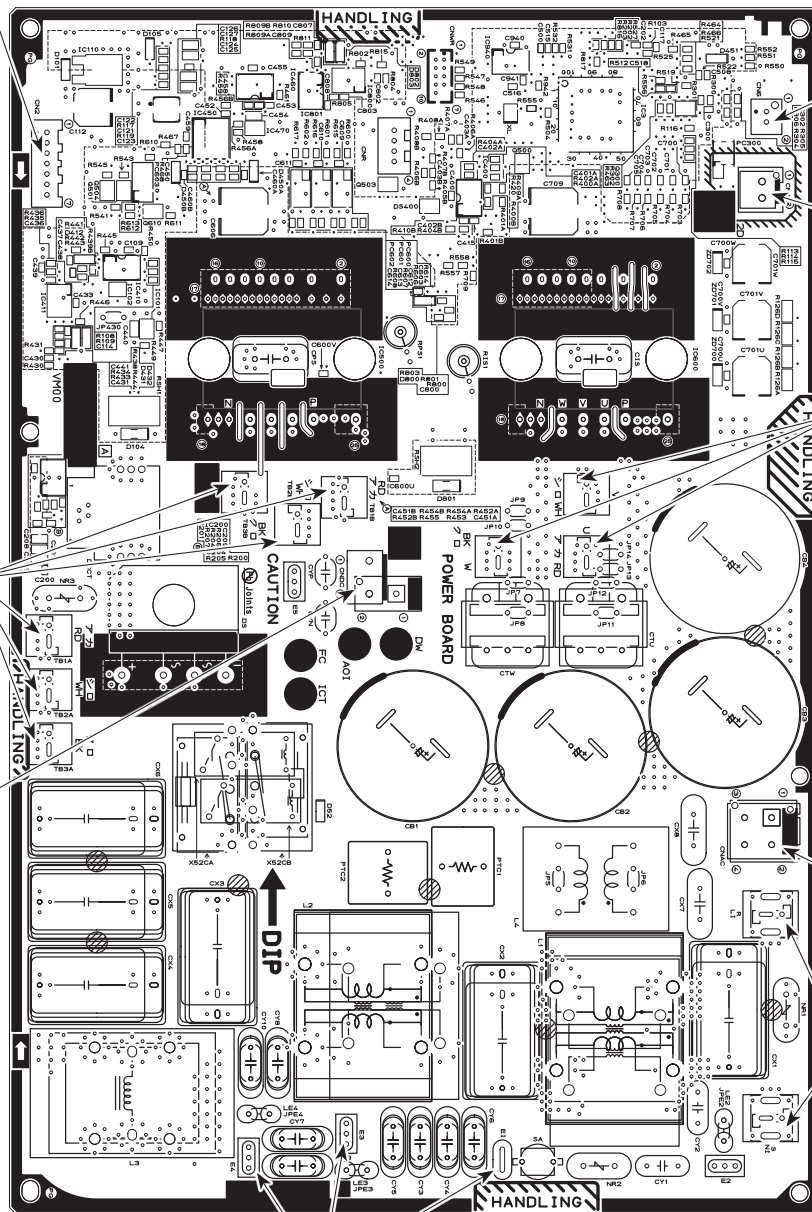

■ Outdoor power circuit board

PUMY-SM112YKM2

PUMY-SM125YKM2

PUMY-SM140YKM2


Brief check of the power module

If they are short-circuited, it means that they are broken.
Measure the resistance in the following points (connectors, etc.).


1. Check of the diode module
[L1]–[P1], [L2]–[P1], [L3]–[P1], [L1]–[N1], [L2]–[N1], [L3]–[N1]

2. Check of DIP-IPM
[P2]–[U], [P2]–[V], [P2]–[W], [N2]–[U], [N2]–[V], [N2]–[W]

Note: The marks [L1], [L2], [L3], [N1], [N2], [P1], [P2], [U], [V], and [W] shown in the diagram are not actually printed on the board.

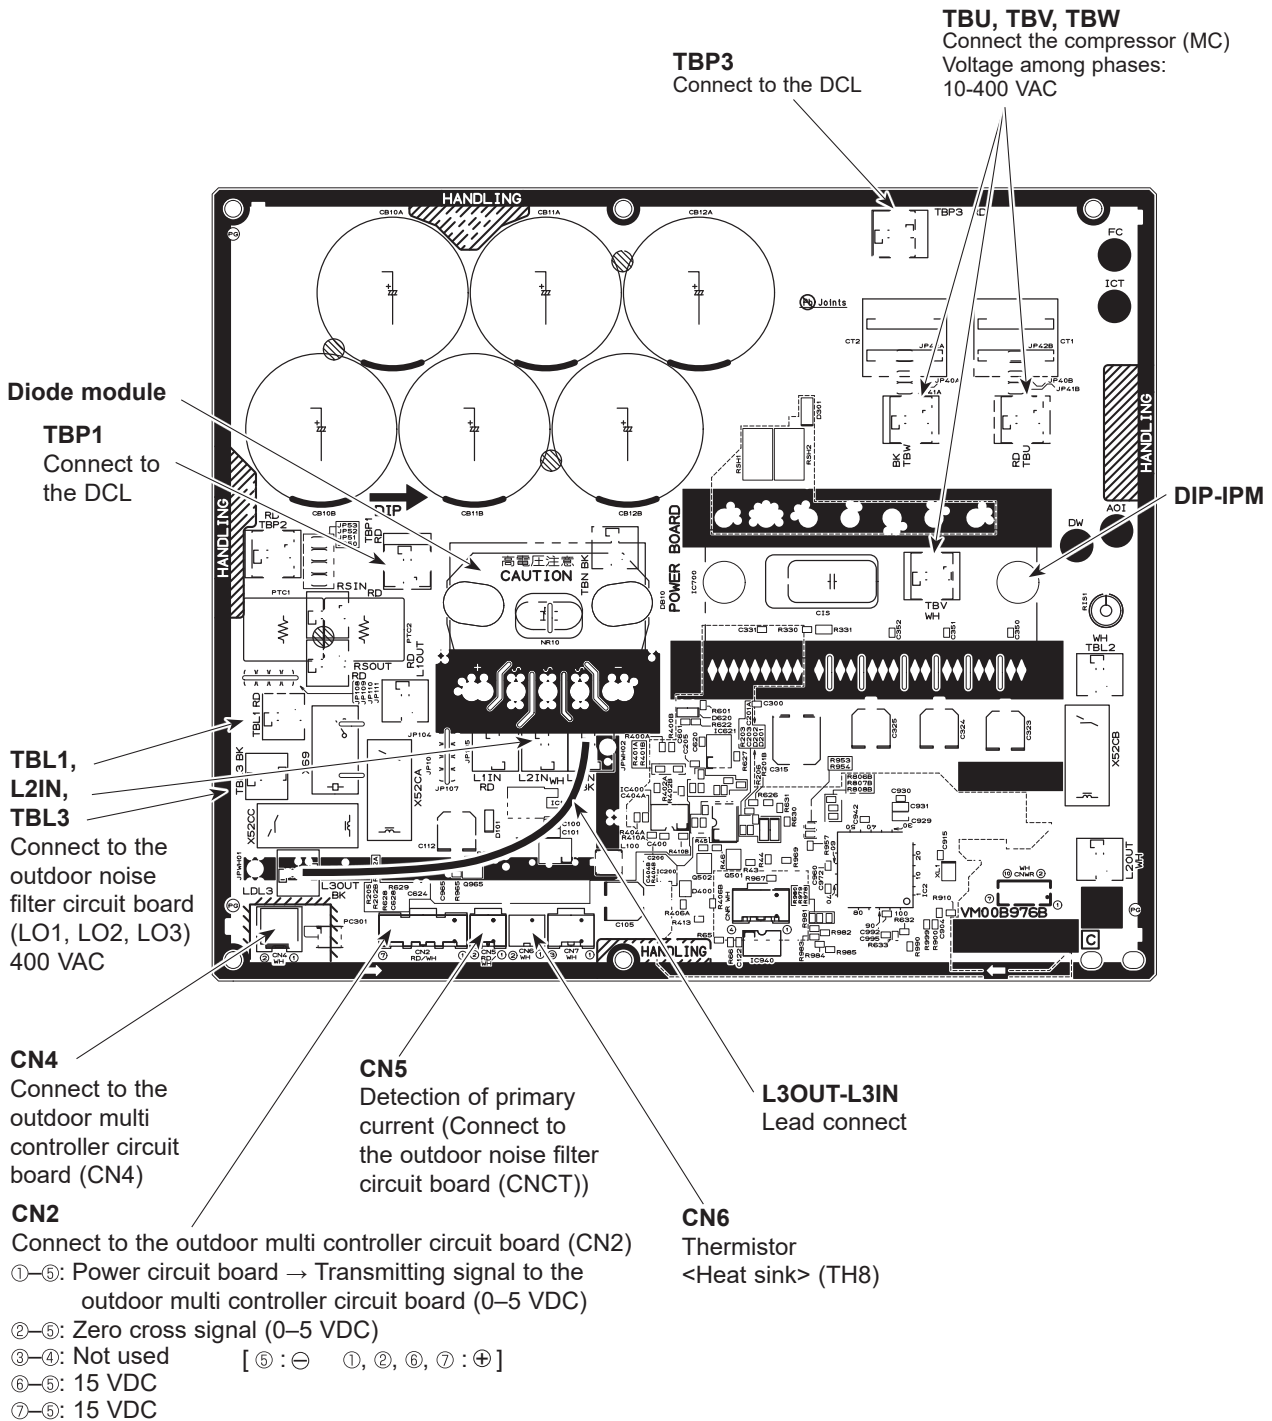

■ M-NET power circuit board

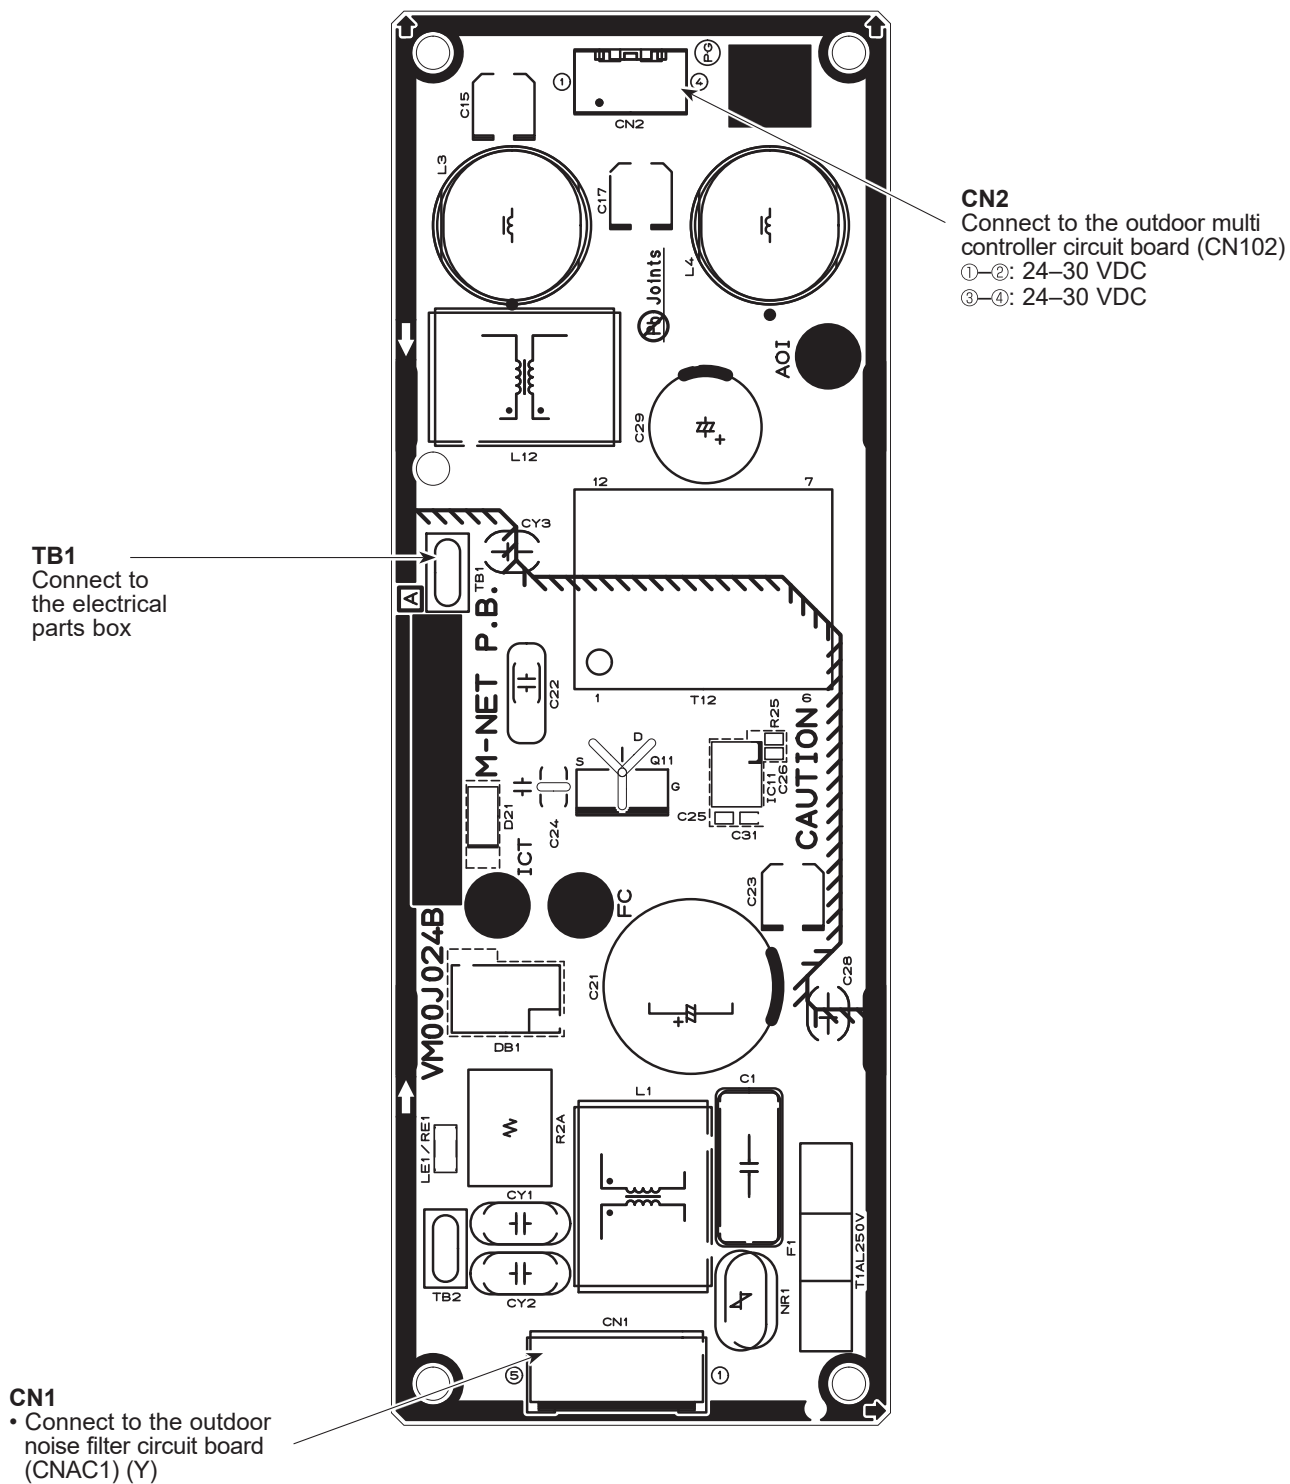

■ Outdoor noise filter circuit board

PUMY-SM112YKM2

PUMY-SM125YKM2

PUMY-SM140YKM2

LI1, LI2, LI3, NI
POWER SUPPLY
LI1-LI2/LI2-LI3/LI3-LI1: 400 VAC input
LI1-NI/LI2-NI/LI3-NI: 230 VAC input
(Connect to the terminal block (TB1))

E1
Connect to the
electrical parts box

CNAC1
230 VAC
(Connect to the
M-NET power
circuit board (CN1))

CNAC2
230 VAC
(Connect to the
outdoor multi
controller
circuit board (CNAC))


CNL
Connect to the ACL4

CNDC
(Connect to the
outdoor controller
circuit board
(CNDC))

E2
Connect to the
electrical parts box

LO1, LO2, LO3
POWER SUPPLY
LO1-LO2/LO2-LO3/LO3-LO1: 400 VAC OUTPUT
(Connect to the outdoor power circuit board (TBL1, L2IN, TBL3))

CNCT
Primary current
(Connect to the
outdoor power
circuit board
(CN5))

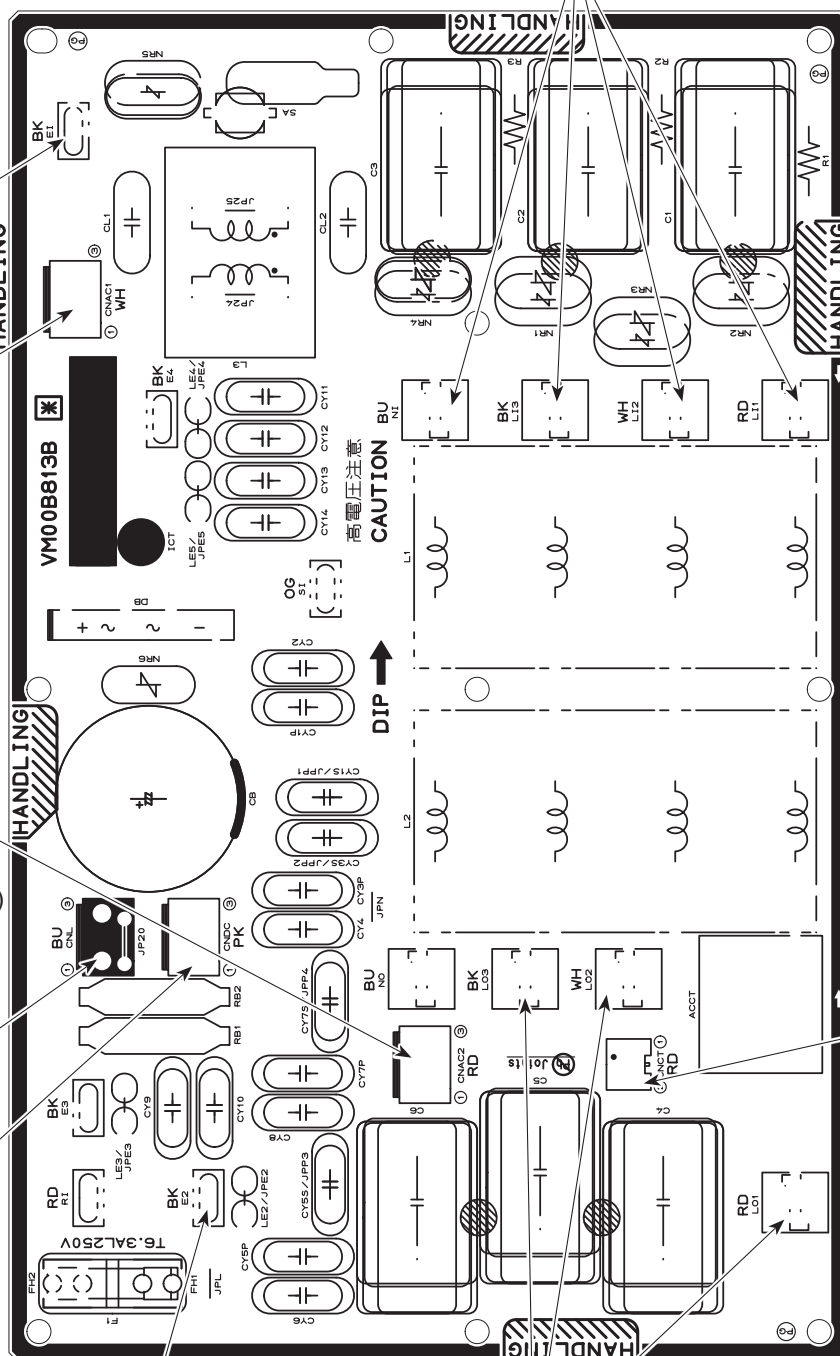

8-10. Outdoor unit information display

SW: setting
0: OFF
1: ON

No.	SW4 setting	Contents	LED1							
			1	2	3	4	5	6	7	8
0	12345678910 0000000000	Relay output	Compressor operation	52C	21S4	SV1	(SV2)	-	-	Always lighting
		Error code	0000–9999 (Alternating display of addresses and error code)							
			Note: When abnormality occurs, check the display.							
1	1000000000	Indoor unit check status	No.1 unit check	No.2 unit check	No.3 unit check	No.4 unit check	No.5 unit check	No.6 unit check	No.7 unit check	No.8 unit check
			Note: Light on at time of abnormality							
2	0100000000	Protection input	High pressure abnormality	Superheat due to low discharge temperature abnormality	Compressor shell temperature abnormality	TH4 abnormality	TH3 abnormality	Outdoor fan rotation frequency abnormality	TH7 abnormality	TH8 abnormality
			Note: Display detected microprocessor protection or abnormality							
3	1100000000	Protection input	Heat sink overheating	Compressor overcurrent interception	Voltage abnormality	Insufficient refrigerant amount abnormality	Current sensor/primary current abnormality	63LS abnormality	63HS abnormality	start overcurrent interception abnormality delay
			Note: Display detected microprocessor protection or abnormality							
4	0010000000	Protection input	Abnormality in the number of indoor units	Address double setting abnormality	Indoor unit capacity error	Over capacity	Indoor unit address error	Outdoor unit address error	Current sensor open/short	Serial communication abnormality (outdoor unit)
			Note: Display detected microprocessor protection or abnormality							
5	1010000000	Abnormality delay display 1	High pressure abnormality delay	Superheat due to low discharge temperature delay	Compressor shell temperature abnormality delay	TH4 abnormality delay	TH3 abnormality delay	Outdoor fan rotation frequency abnormality delay	TH7 abnormality delay	TH8 abnormality delay
			Note: Display all abnormalities remaining in abnormality delay							
6	0110000000	Abnormality delay display 2	Heat sink overheating delay	Compressor overcurrent interception delay	Voltage abnormality delay	Insufficient refrigerant amount abnormality delay	Current sensor/primary current abnormality delay	63LS abnormality delay	63HS abnormality delay	start overcurrent interception abnormality delay
			Note: Display all abnormalities remaining in abnormality delay							
7	1110000000	Abnormality delay display 3	63LS abnormality delay	TH2 abnormality delay	4-way valve abnormality delay	Delay caused by closed valve in cooling mode	Power module abnormality delay	TH6 abnormality delay	Current sensor open/short delay	—
			Note: Display all abnormalities remaining in abnormality delay							
8	0001000000	Abnormality delay history 1	High pressure abnormality delay	Superheat due to low discharge temperature delay	Compressor shell temperature abnormality delay	TH4 abnormality delay	TH3 abnormality delay	Outdoor fan rotation frequency abnormality delay	TH7 abnormality delay	TH8 abnormality delay
			Note: Display all abnormalities remaining in abnormality delay							
9	1001000000	Abnormality delay history 2	Heat sink overheating delay	Compressor overcurrent interception delay	Voltage abnormality delay	Insufficient refrigerant amount abnormality delay	Current sensor/primary current abnormality delay	63LS abnormality delay	63HS abnormality delay	start overcurrent interception abnormality delay
			Note: Display all abnormalities remaining in abnormality delay							
10	0101000000	Abnormality delay history 3	63LS abnormality delay	TH2 abnormality delay	4-way valve abnormality delay	Delay caused by closed valve in cooling mode	Power module abnormality delay	TH6 abnormality delay	Current sensor open/short delay	—
			Note: Display all abnormalities remaining in abnormality delay							
11	1101000000	Abnormality code history 1 (the latest)	Alternating display of addresses 0000–9999 and abnormality code (including abnormality delay code)							
			Following is the delay code and the details of the abnormal delay.							
12	0011000000	Abnormality code history 2	1202: Discharge/Comp. temperature, Thermistor <Compressor>(TH4)							
			1205: Thermistor <Outdoor liquid pipe> (TH3)							
13	1011000000	Abnormality code history 3	1211: Thermistor <Suction pipe> (TH6)							
			1214: Thermistor <Heat sink> (TH8)							
14	0111000000	Abnormality code history 4	1221: Thermistor <Ambient> (TH7)							
			1402: High pressure (63H), High pressure sensor (63HS)							
15	1111000000	Abnormality code history 5	1600: Over charge refrigerant							
			1601: Insufficient refrigerant							
16	0000100000	Abnormality code history 6	4165: Power synchronization signal abnormality delay							
			4320: Frequency converter insufficient wiring voltage							
17	1000100000	Abnormality code history 7	4330: Heat sink temperature							
			4350: Power module							
18	0100100000	Abnormality code history 8	Notes:							
			• Display abnormalities up to present (including abnormality terminals)							
19	1100100000	Abnormality code history 9	• History record in 1 is the latest; records become older in sequence; history record in 10 is the oldest.							
20	0010100000	Abnormality code history 10 (the oldest)								
21	1010100000	Cumulative time	0–9999 (unit: 1 hour)							
			Note: Display of cumulative compressor operating time							
22	0110100000	Cumulative time	0–9999 (unit: 10 hours)							
			Note: Display of cumulative compressor operating time							
23	1110100000	Outdoor unit operation display	Excitation Current	Restart after 3 minutes	Compressor operation	Abnormality detection	—	—	—	—

	SW4 setting	Contents	LED1							
No.			1	2	3	4	5	6	7	8
24	0001100000	Indoor unit operation mode	No.1 unit mode	No.2 unit mode	No.3 unit mode	No.4 unit mode	No.5 unit mode	No.6 unit mode	No.7 unit mode	No.8 unit mode
			Cooling: light on, Heating: light blinking, Stop fan: light off							
25	1001100000	Indoor unit operation display	No.1 unit Thermo ON	No.2 unit Thermo ON	No.3 unit Thermo ON	No.4 unit Thermo ON	No.5 unit Thermo ON	No.6 unit Thermo ON	No.7 unit Thermo ON	No.8 unit Thermo ON
26	0101100000	Capacity code (No. 1 indoor unit)	Notes: •Display of indoor unit capacity code •The No. 1 unit will start from the M-NET address with the lowest number							
27	1101100000	Capacity code (No. 2 indoor unit)								
28	0011100000	Capacity code (No. 3 indoor unit)								
29	1011100000	Capacity code (No. 4 indoor unit)								
30	0111100000	Capacity code (No. 5 indoor unit)								
31	1111100000	IC1 operation mode	OFF	Fan	Cooling thermo-ON	Cooling thermo-OFF	Heating thermo-ON	Heating thermo-OFF	—	—
32	0000100000	IC2 operation mode								
33	1000100000	IC3 operation mode								
34	0100100000	IC4 operation mode								
35	1100100000	IC5 operation mode	Note: Display of indoor unit operating mode							
36	0010010000	OC operation mode	Compressor ON/OFF	Heating/ Cooling	Abnormal/ Normal	Defrost/No	Refrigerant pull back/No	Excitation current/No	3-min delay/ No	—
			Note: Light on/light off							
37	1010010000	External connection status	CN3N1-3 input	CN3N1-2 input	CN3S1-2 input	CN3D1-3 input	CN3D1-2 input	—	—	—
			Note: Input: light on, No input: light off							
38	0110010000	Communication demand capacity	0-255 (%)							
			Note: Display of communication demand capacity							
39	1110010000	Number of compressor ON/ OFF	0000-9999 (unit: x10)							
			Note: Display a count of compressor operation/stop							
40	0001010000	Compressor operating current	0-999.9 (Arms)							
			Note: Display detected current							
41	1001010000	Input current of outdoor unit	0-999.9 (A)							
			Note: Display detected current							
42	0101010000	Thermo-ON operating time	0000-9999 (unit: x10)							
			Note: Display cumulative time of thermo-ON operation							
43	1101010000	Total capacity of thermo-ON	0-255							
			Note: Display total capacity code of indoor units in thermo-ON							
44	0011010000	Number of indoor units	0-255							
			Note: Display number of connected indoor units							
45	1011010000	DC bus voltage	0-9999 (V)							
			Note: Display bus voltage							
46	0111010000	State of LEV control	Td overheat prevention	SHd decrease prevention	Min.Sj correction depends on Td	Min.Sj correction depends on Shd	LEV opening correction depends on Pd	LEV opening correction depends on Td	Correction of high compression ratio prevention	—
			Note: Display active LEV control							
47	1111010000	State of compressor frequency control 1	Condensing temperature limit control	Compressor temperature control	—	Discharge temp. (heating) backup control	Pd abnormality control (heating)	Pd Back up control (heating)	—	Freeze prevention control at the beginning of SHd
			Note: Display active compressor frequency control							
48	0000110000	State of compressor frequency control 2	Heat sink overheat prevention control	Secondary current control	Input current control	—	Frequency restrain of receipt voltage change	Low pressure decrease prevention	H2-up inhibit control at the beginning of SHd	—
			Note: Display active compressor frequency control							
49	1000110000	Protection input	63LS abnormality	TH2 abnormality	—	—	4-way valve disconnection abnormality	Frozen protection	TH6 abnormality	Power module abnormality
50	0100110000	The second current value when microprocessor of power board abnormality is detected	0-999.9 (Arms)							
			Note: Display data at time of abnormality							
51	1100110000	Heatsink temperature when microprocessor of power board abnormality is detected	-99.9-999.9 (°C) (Short/Open: -99.9 or 999.9)							
			Note: Display data at time of abnormality							

No.	SW4 setting	Contents	LED1							
			1	2	3	4	5	6	7	8
52	0010110000	Outdoor LEV-A opening pulse	0–2000 (pulse)							
53	1010110000	Outdoor LEV-A opening pulse abnormality delay	Note: Display of opening pulse of outdoor LEV							
54	0110110000	Outdoor LEV-A opening pulse abnormality								
55	1110110000	Outdoor LEV-B opening pulse								
56	0001110000	Outdoor LEV-B opening pulse abnormality delay								
57	1001110000	Outdoor LEV-B opening pulse abnormality								
58	0101110000	63LS (Low pressure)	–99.9–999.9 (kgf/cm ²) (Short/open: –99.9 or 999.9)							
59	1101110000	63LS abnormality delay	Note: Display of data from sensor and thermistor							
60	0011110000	63 LS abnormality								
61	1011110000	TH2 (HIC pipe)								
62	0111110000	TH2 (HIC) abnormality delay	–99.9–999.9 (°C) (Short/open: –99.9 or 999.9)							
63	1111110000	TH2 (HIC) abnormality	Note: Display of data from sensor and thermistor							
64	0000001000	Operational frequency								
65	1000001000	Target frequency	0–255 (Hz)							
66	0100001000	Outdoor fan control step number	0–15							
69	1010001000	IC1 LEV Opening pulse	0–2000 (pulse)							
70	0110001000	IC2 LEV Opening pulse	Note: Display of opening pulse of indoor LEV							
71	1110001000	IC3 LEV Opening pulse								
72	0001001000	IC4 LEV Opening pulse								
73	1001001000	IC5 LEV Opening pulse								
74	0101001000	High pressure sensor (Pd)	–99.9–999.9 (kgf/cm ²) (Short/open: –99.9 or 999.9)							
75	1101001000	TH4(Compressor) (Td) data	–99.9–999.9 (°C) (Short/open: –99.9 or 999.9)							
76	0011001000	TH6(Suction pipe) (ET) data	Note: Display of outdoor subcool (SC) data and detection data from high pressure sensor and each thermistor							
77	1011001000	TH7 (Ambient) data								
78	0111001000	TH3 (Outdoor liquid pipe) data								
80	0000101000	TH8 (Heat sink) data								
81	1000101000	IC1 TH23 (Gas)	–99.9–999.9 (°C)							
82	0100101000	IC2 TH23 (Gas)	(When indoor unit is not connected, it is displayed as 0.)							
83	1100101000	IC3 TH23 (Gas)	Note: Display detected data of indoor unit thermistors							
84	0010101000	IC4 TH23 (Gas)								
85	1010101000	IC5 TH23 (Gas)								
86	0110101000	IC1 TH22 (Liquid)								
87	1110101000	IC2 TH22 (Liquid)								
88	0001101000	IC3 TH22 (Liquid)								
89	1001101000	IC4 TH22 (Liquid)								
90	0101101000	IC5 TH22 (Liquid)								
91	1101101000	IC1 TH21 (Intake)								
92	0011101000	IC2 TH21 (Intake)								
93	1011101000	IC3 TH21 (Intake)								
94	0111101000	IC4 TH21 (Intake)								
95	1111101000	IC5 TH21 (Intake)								
96	0000011000	Outdoor SC (cooling)	–99.9–999.9 (°C) (Short/open: –99.9 or 999.9)							
97	1000011000	Target subcool step	–99.9–999.9 (°C)							
98	0100011000	IC1 SC/SH	–99.9–999.9 (°C) (Short/open: –99.9 or 999.9)							
99	1100011000	IC2 SC/SH	During heating: subcool (SC) During cooling: superheat (SH) (Fixed to “0” during cooling operation)							
100	0010011000	IC3 SC/SH								
101	1010011000	IC4 SC/SH	Note: Display of indoor SC/SH data							
102	0110011000	IC5 SC/SH								
103	1110011000	Discharge superheat (SHd)	–99.9–999.9 (°C)							
105	1001011000	Target Pd display (heating) kgf/cm ²	Pdm (0.0–30.0) (kgf/cm ²)							
106	0101011000	Target ET display (cooling)	ETm (–2.0–23.0) (°C)							
			Note: Display of all control target data							

No.	SW4 setting	Contents	LED1							
			1	2	3	4	5	6	7	8
107	1101011000	Target outdoor SC (cooling)	SCm (0.0–20.0) (°C) Note: Display of all control target data							
108	0011011000	Target indoor SC/SH (IC1)	SCm/SHm (0.0–20.0) (°C) Note: Display of all control target data							
109	1011011000	Target indoor SC/SH (IC2)								
110	0111011000	Target indoor SC/SH (IC3)								
111	1111011000	Target indoor SC/SH (IC4)								
112	0000111000	Target indoor SC/SH (IC5)								
113	1000111000	Indoor unit check status (IC9-12)	No.9 unit check	No.10 unit check	No.11 unit check	No.12 unit check	—	—	—	—
			Note: Light on at time of abnormality							
114	0100111000	Indoor unit operation mode (IC9-12)	No.9 unit mode	No.10 unit mode	No.11 unit mode	No.12 unit mode	—	—	—	—
			Note: COOL/DRY: light on, HEAT: light blinking, FAN/STOP: light off							
115	1100111000	Indoor unit operation display (IC9-12)	No.9 unit operation	No.10 unit operation	No.11 unit operation	No.12 unit operation	—	—	—	—
			Note: Thermo-ON: light on, Thermo-OFF: light off							
116	0010111000	IC9 operation mode	STOP	Fan	Cooling Thermo-ON	Cooling thermo-OFF	Heating thermo-ON	Heating thermo-OFF	—	—
117	1010111000	IC10 operation mode								
118	0110111000	IC11 operation mode								
119	1110111000	IC12 operation mode	Note: Display of indoor unit operation mode							
120	0001111000	Target indoor SC/SH (IC9)	SCm/SHm (0.0–14.0) (°C) Note: Display of all control target data							
121	1001111000	Target indoor SC/SH (IC10)								
122	0101111000	Target indoor SC/SH (IC11)								
123	1101111000	Target indoor SC/SH (IC12)								
124	0011111000	IC9 LEV opening pulse abnormality delay								
			0–2000 (pulse) Note: Display of opening pulse of indoor LEV at time of abnormality delay							
125	1011111000	IC10 LEV opening pulse abnormality delay								
126	0111111000	IC11 LEV opening pulse abnormality delay								
127	1111111000	IC12 LEV opening pulse abnormality delay								
128	0000000100	Actual frequency of abnormality delay								
			0–255 (Hz) Note: Display of actual frequency at time of abnormality delay							
129	1011000100	Fan step number at time of abnormality delay	0–15 Note: Display of fan step number at time of abnormality delay							
130	0100000100	Outdoor LEV-A opening pulse abnormality delay	0–2000 (pulse) Note: Display of opening pulse of outdoor LEV-A at time of abnormality delay							
131	1100000100	IC1 LEV opening pulse abnormality delay	0–2000 (pulse) Note: Delay of opening pulse of indoor LEV at time of abnormality delay							
132	0010000100	IC2 LEV opening pulse abnormality delay								
133	1010000100	IC3 LEV opening pulse abnormality delay								
134	0110000100	IC4 LEV opening pulse abnormality delay								
135	1110000100	IC5 LEV opening pulse abnormality delay								
136	0001000100	High pressure sensor data at time of abnormality delay								
			–99.9–999.9 (kgf/cm ²) (Short/open: –99.9 or 999.9) Note: Display of data from high pressure sensor, all thermistors, and SC/SH at time of abnormality delay							
137	1001000100	TH4 (Compressor) sensor data at time of abnormality delay	–99.9–999.9 (°C) (Short/open: –99.9 or 999.9) Note: Display of data from high pressure sensor, all thermistors, and SC/SH at time of abnormality delay							
138	0101000100	TH6 (Suction pipe) sensor data at time of abnormality delay								
139	1101000100	TH3 (Outdoor liquid pipe) sensor data at time of abnormality delay								
140	0011000100	TH8 (Heat sink) sensor data at time of abnormality delay								

No.	SW4 setting	Contents	LED1							
			1	2	3	4	5	6	7	8
141	1011000100	OC SC (cooling) at time of abnormality delay	-99.9~999.9 (°C) (Short/open: -99.9 or 999.9) During heating: subcool (SC) During cooling: superheat (SH) (Fixed to "0" during cooling operation) Note: Display of data from high pressure sensor, all thermistors, and SC/SH at time of abnormality delay							
142	0111000100	IC1 SC/SH at time of abnormality delay								
143	1111000100	IC2 SC/SH at time of abnormality delay								
144	0000100100	IC3 SC/SH at time of abnormality delay								
145	1000100100	IC4 SC/SH at time of abnormality delay								
146	0100100100	IC5 SC/SH at time of abnormality delay								
147	1100100100	IC9 SC/SH at time of abnormality delay								
148	0010000100	IC10 SC/SH at time of abnormality delay								
149	1010100100	IC11 SC/SH at time of abnormality delay								
150	0110100100	IC12 SC/SH at time of abnormality delay								
151	1110100100	IC9 LEV opening pulse at time of abnormality	0~2000 (pulse) Note: Display of opening pulse of indoor LEV at time of abnormality							
152	0001100100	IC10 LEV opening pulse at time of abnormality								
153	1001100100	IC11 LEV opening pulse at time of abnormality								
154	0101100100	IC12 LEV opening pulse at time of abnormality								
155	1101100100	IC9 SC/SH at time of abnormality	-99.9~999.9 (°C) (Short/open: -99.9 or 999.9) During heating: subcool (SC) During cooling: superheat (SH) (Fixed to "0" during cooling operation) Note: Display of indoor SC/SH data at time of abnormality							
156	0011100100	IC10 SC/SH at time of abnormality								
157	1011100100	IC11 SC/SH at time of abnormality								
158	0111100100	IC12 SC/SH at time of abnormality								
159	1111100100	IC9 Capacity code	0~255 Notes: Display of indoor unit capacity code							
160	0000010100	IC10 Capacity code								
161	1000010100	IC11 Capacity code								
162	0100010100	IC12 Capacity code								
163	1100010100	IC9 SC/SH	-99.9~999.9 (°C) (Short/open: -99.9 or 999.9) During heating: subcool (SC) During cooling: superheat (SH) (Fixed to "0" during cooling operation) Note: Display of indoor SC/SH data							
164	0010010100	IC10 SC/SH								
165	1010010100	IC11 SC/SH								
166	0110010100	IC12 SC/SH								
170	0101010100	ROM version monitor	0.00~99.99 (ver) Note: Display of version data of ROM							
171	1101010100	ROM type	Note: Display of ROM type							
172	0011010100	Check sum mode	0000~FFFF Note: Display of check sum code of ROM							
173	1011010100	IC9 TH23 (Gas)	-99.9~999.9 (°C) Note: Display detected data of indoor unit thermistors							
174	0111010100	IC10 TH23 (Gas)								
175	1111010100	IC11 TH23 (Gas)								
176	0000110100	IC12 TH23 (Gas)								
177	1000110100	IC9 TH22 (Liquid)								
178	0100110100	IC10 TH22 (Liquid)								
179	1100110100	IC11 TH22 (Liquid)								
180	0010110100	IC12 TH22 (Liquid)								
185	1001110100	IC9 TH21 (Intake)								
186	0101110100	IC10 TH21 (Intake)								
187	1101110100	IC11 TH21 (Intake)								
188	0011110100	IC12 TH21 (Intake)								
189	1011110100	4420 Error history	—	—	ACTM error	—	—	Current sensor error	Under voltage error	Over voltage error

No.	SW4 setting	Contents	LED1							
			1	2	3	4	5	6	7	8
190	0111110100	External connection status at time of abnormality delay	CN3N 1-3 input	CN3N 1-2 input	CN3S 1-2 input	CN3D 1-3 input	CN3D 1-2 input	—	—	—
191	1111110100	External connection status at time of abnormality	CN3N 1-3 input	CN3N 1-2 input	CN3S 1-2 input	CN3D 1-3 input	CN3D 1-2 input	—	—	—
192	0000001100	Actual frequency of abnormality	0–255 (Hz) Note: Display of actual frequency at time of abnormality							
193	1000001100	Fan step number at time of abnormality	0–15 Note: Display of fan step number at time of abnormality							
194	0100001100	Outdoor LEV-A opening pulse at time of abnormality	0–2000 (pulse) Note: Display of opening pulse of outdoor LEV-A at time of abnormality							
195	1100001100	IC1 LEV opening pulse at time of abnormality	0–2000 (pulse) Note: Display of opening pulse of indoor LEV at time of abnormality							
196	0010001100	IC2 LEV opening pulse at time of abnormality								
197	1010001100	IC3 LEV opening pulse at time of abnormality								
198	0110001100	IC4 LEV opening pulse at time of abnormality								
199	1110001100	IC5 LEV opening pulse at time of abnormality								
200	0001001100	High pressure sensor data at time of abnormality	–99.9–999.9 (kgf/cm ²) (Short/open: –99.9 or 999.9) Note: Display of data from high pressure sensor, all thermistors, and SC/SH at time of abnormality							
201	0001001100	TH4 (Compressor) sensor data at time of abnormality	–99.9–999.9 (°C) (Short/open: –99.9 or 999.9) Note: Display of data from high pressure sensor, all thermistors, and SC/SH at time of abnormality							
202	0101001100	TH6 (Suction pipe) sensor data at time of abnormality								
203	1101001100	TH3 (Outdoor liquid pipe) sensor data at time of abnormality								
204	0011001100	TH8 (Heat sink) sensor data at time of abnormality								
205	1011001100	OC SC (cooling) at time of abnormality	–99.9–999.9 (°C) (Short/open: –99.9 or 999.9) During heating: subcool (SC) During cooling: superheat (SH) (Fixed to "0" during cooling operation) Note: Display of indoor SC/SH data at time of abnormality							
206	0111001100	IC1 SC/SH at time of abnormality								
207	1111001100	IC2 SC/SH at time of abnormality								
208	0000101100	IC3 SC/SH at time of abnormality								
209	1000101100	IC4 SC/SH at time of abnormality								
210	0100101100	IC5 SC/SH at time of abnormality								
211	1100101100	IC6 Capacity code	0–255 Note: Display of indoor unit capacity code							
212	0010101100	IC7 Capacity code								
213	1010101100	IC8 Capacity code								
214	0110101100	IC6 operation mode	OFF	Fan	Cooling thermo-ON	Cooling thermo-OFF	Heating thermo-ON	Heating thermo-OFF	—	—
215	1110101100	IC7 operation mode								
216	0001101100	IC8 operation mode	Note: Display of indoor unit operation mode							
217	1001101100	IC6 LEV opening pulse	0–2000 (pulse) Note: Display of opening pulse of indoor LEV							
218	0101101100	IC7 LEV opening pulse								
219	1101101100	IC8 LEV opening pulse								

No.	SW4 setting	Contents	LED1							
			1	2	3	4	5	6	7	8
220	0011101100	IC6 TH23 (Gas)	-99.9–999.9 (°C)							
221	1011101100	IC7 TH23 (Gas)	Note: Display detected data of indoor unit thermistor							
222	0111101100	IC8 TH23 (Gas)								
223	1111101100	IC6 TH22 (liquid)								
224	0000011100	IC7 TH22 (liquid)								
225	1000011100	IC8 TH22 (liquid)								
226	0100011100	IC6 TH21 (intake)								
227	1100011100	IC7 TH21 (intake)								
228	0010011100	IC8 TH21 (intake)								
229	1010011100	IC6 SC/SH	-99.9–999.9 (°C) (Short/open: -99.9 or 999.9)							
230	0110011100	IC7 SC/SH	During heating: subcool (SC) During cooling: superheat (SH) (Fixed to "0" during cooling operation)							
231	1110011100	IC8 SC/SH								
232	0001011100	Target indoor SC/SH (IC6)	SCm/SHm (0.0–20.0) (°C)							
233	1001011100	Target indoor SC/SH (IC7)	Note: Display of all control target data							
234	0101011100	Target indoor SC/SH (IC8)								
235	1101011100	IC6 LEV opening pulse abnormality delay	0–2000 (pulse) Note: Display of opening pulse of indoor LEV at time of abnormality delay							
236	0011011100	IC7 LEV opening pulse abnormality delay								
237	1011011100	IC8 LEV opening pulse abnormality delay								
238	0111011100	IC6 SC/SH at time of abnormality delay	-99.9–999.9 (°C) (Short/open: -99.9 or 999.9) During heating: subcool (SC) During cooling: superheat (SH) (Fixed to "0" during cooling operation)							
239	1111011100	IC7 SC/SH at time of abnormality delay								
240	0000111100	IC8 SC/SH at time of abnormality delay	Note: Display of indoor SC/SH data at time of abnormality delay							
241	1000111100	IC6 LEV opening pulse at time of abnormality								
242	0100111100	IC7 LEV opening pulse at time of abnormality								
243	1100111100	IC8 LEV opening pulse at time of abnormality	0–2000 (pulse) Note: Display of opening pulse of indoor LEV at time of abnormality							
244	0010111100	IC6 SC/SH at time of abnormality								
245	1010111100	IC7 SC/SH at time of abnormality								
246	0110111100	IC8 SC/SH at time of abnormality								
250	0101111100	IC9 LEV opening pulse	0–2000 (pulse) Note: Display of opening pulse of indoor LEV							
251	1101111100	IC10 LEV opening pulse								
252	0011111100	IC11 LEV opening pulse								
253	1011111100	IC12 LEV opening pulse								

8-11. Operation data collection and storage functions

Operation data of the units collected on the outdoor unit can be recorded in the flash memory of the control board. This data can also be exported to and recorded in a USB memory stick. Refer to "8-11-3. Storing data on a USB memory stick" for information on storing data on a USB memory stick. Refer to "8-11-4. Collecting operation data" for information on the collection of operation data.

8-11-1. Preparation

A USB memory stick and a portable battery charger are required to store data on a USB memory stick (not supplied). Prepare a USB memory stick and a portable battery charger as described in "8-11-2. Necessary materials".

8-11-2. Necessary materials

The use of the USB function requires a USB memory stick and a portable battery charger. See below for the types of USB memory stick and portable charger that can be used.

■ USB memory stick

Use a USB memory stick that meets the following specifications.

- USB 2.0 compatible
- Formatted in FAT 32
- Without a security function

■ Portable battery charger

Use a portable battery charger that meets the following specifications for rewriting the software.

- USB 2.0 compatible
- Voltage and amperage rating of 5 V and 2.1 A (Max.)

A LEAD WIRE ASSY USB is required to connect the control board and the portable charger. Use a cable that meets the following specifications.

- [Type A male] - [Male XA connector for the PCB] USB cable

For details of "LEAD WIRE ASSY USB", please contact the sales office. The connector on the control board side is a female XA connector for the PCB.

8-11-3. Storing data on a USB memory stick

Store operation data recorded in the flash memory on the control board in a USB memory stick. The content of the stored file can be confirmed using the maintenance tool. Operation data should be stored in a dedicated mode (Store Mode). The procedure for making the operation data settings is shown below.

1. Preparation of a USB memory stick

Since the size of the saved file containing operation data is 50 MB, prepare a USB memory stick with 50 MB or more available memory. A USB memory stick which has other data in it may also be used. However, it is recommended to clear the remaining data in advance to prevent any malfunctions. The saved file is named "MNTXXX.MT." XXX represents a serial number from 000 to 100. Since files named "MNT101.MT" or more cannot be created, unnecessary folders and files should be deleted.

2. Storing on a USB memory stick

Data can be stored to a USB memory stick either with the main power to the outdoor unit turned ON (Method 2) or OFF (Method1). For safety reasons, it is recommended to store the data on a USB memory stick with the main power to the outdoor unit turned OFF (Method 1). If turning off the power is not feasible, take appropriate measures to ensure safety.

■ Method 1: Storing data on a USB memory stick with the main power to the outdoor unit turned OFF (Recommended)

Starting up the unit in the data storage mode

- Turn off the main power to the outdoor unit.
- Connect a USB memory stick to the USB port (CNUSB) on the control board.
- With SWP3 (ENTER) being held down, connect the portable battery charger to the XA connector (CN601) for the PCB, and supply power to the control board. Wait for five seconds until the USB memory stick is recognized.
- [Usb] will appear on the LED1. (See the figure below.) If [Usb] does not appear, please check if system was started in Storage Mode or USB memory stick is not connected or switch SWP3 may not be pressed deeply enough.
- When [Usb] has appeared on the LED1, lift the finger off SWP3 (ENTER). The unit is now in the data storage mode.

Storing data

- Press SWP3 (ENTER). If the data storage process has properly started, the progress (0-99) will be shown on the LED1.
- [End] on the LED1 indicates successful completion of the data storage process. It takes approximately five minutes for the data storage process to be completed.

Ending the data storage mode

- When done storing data, disconnect the USB memory stick from the control board.
- Press and hold SWP3 (ENTER) for approximately 10 seconds until [End] disappears from the LED1.
- Restart the indoor and outdoor units that were stopped to perform data storage.
- If the data collection process needs to be started, check the operation data collection status by following the procedures explained in "8-11-4. Collecting operation data" and making the necessary settings.

■ Method 2: Storing data on a USB memory stick with the main power to the outdoor unit turned ON

Starting up the unit in the data storage mode

- Stop the operation of all indoor units. Although operation data can be collected without stopping all indoor units, doing so may be detected as a communication error.
- Connect a USB memory stick to the USB port (CNUSB) on the control board. Wait for five seconds until the USB memory stick is recognized.
- Press and hold SWP3 (ENTER) for approximately 10 seconds until [Usb] appears on the LED1.
- When [Usb] has appeared on the LED, lift the finger off SWP3 (ENTER). The unit is now in the data storage mode.

Storing data

- Press SWP3 (ENTER). If the data storage process has properly started, the progress (0-99) will be shown on the LED1.
- [End] on the LED indicates successful completion of the data storage process. It takes approximately five minutes for the data storage process to be completed.

Ending the data storage mode

- When done storing data, disconnect the USB memory stick from the control board.
- Press and hold SWP3 (ENTER) for approximately 10 seconds until [End] disappears from the LED1.
- Restart the indoor and outdoor units that were stopped to perform data storage.
- If the data collection process needs to be started, check the operation data collection status by following the procedures explained in "8-11-4. Collecting operation data" and making the necessary settings.

Note:

- Display of [Usb] and [End]

■ Confirmation of stored file

Confirm that the operation data is stored in the USB memory stick. Insert the USB memory stick into a computer, and check the contents in the memory stick. Check that there is a file named "MNTXXX.MT" in the memory stick. "XXX" represents serial numbers from "000" to "100."

8-11-4. Collecting operation data

This function is used to collect the operation data of the outdoor and indoor units via M-NET, and record the data in the flash memory on the control board. When the memory is full, it is overwritten from the first segment. The settings for checking the status of operation data collection, for starting/ending data collection, and for continuing/stopping error-data collection are made, using the switches on the control board. The items to be set are shown in the table below. The data collection setting is enabled by default, and the setting for error data collection during an error is disabled by default.

Switch setting			Function	Operation set by the switch (LED1 indication)			Unit for setting
SW6-10 SW4							
	No.	12345678910		ON	OFF	When to set	
OFF	277	1010100010	Data being collected	-	-	Anytime after the power is turned ON.	OC setting is necessary.
ON	34	0100010000	Data collection enabled	Enabled	Disabled	Anytime after the power is turned ON.	OC setting is necessary.
ON	35	1100010000	Data collection during an error	Enabled	Disabled	While the compressor is running in Heating mode	OC setting is necessary.

Note:

- When setting SW4 on the control board, make sure the outdoor unit is energized. Also refer to "8-5. Internal switch function table" as a reference.

The procedure for making the operation data settings is shown below.

1. Status confirmation

Confirm the current status of operation data collection by setting the switches on the control board following the table shown above.

Switch setting: SW6-10: OFF

SW4: 277

Check the status on the maintenance LED display (LED1).

- When [ON] or [OFF] is displayed, go to step 2 and the later steps.
- When [Err] is displayed, go to step 3 and the later steps.
- When [F-Er] is displayed, it indicates an error in the flash memory on the control board.

2. Setting Start and End of data collection

1. Set the switches on the control board by following the table shown above.
Switch setting: SW6-10: ON
SW4: 34
2. Press SWP3 (ENTER). With each switch operation, the setting can be alternately switched ON and OFF.
3. After conducting the step 1, check that the operating condition is stable.
Data collection start: OFF (Enabled)
Data collection end: ON (Disabled)
Setting procedure is now completed.

3. Settings for error-data collection during an error

Stops or continues error-data collection when an error occurs.

1. Referring to the table above, set the control switches.
Switch setting: SW6-10: ON
SW4: 35
Stop collecting error-data when an error occurs: OFF
Continue collecting error-data when an error occurs: ON
2. To set the switches, press SWP3 (ENTER). Pressing SWP3 (ENTER) toggles between ON and OFF. Error data in the 6000's and the 7000's will be collected, regardless of the SW4 (35) settings.

4. Restarting data collection

If "Err" is shown, it indicates that data collection is being suspended for some reason, even though data collection is enabled. To restart, it is necessary to set the switches on the control board. Referring to 2-1 and 2-2, set the switches on the control board from OFF (original setting) to ON, and then to OFF again, and make sure the switches settings are indicated as being ON, following the instructions in 1.

9

DISASSEMBLY PROCEDURE

————>: Indicates the visible parts in the photos/figures.
 ----->: Indicates the invisible parts in the photos/figures.


Note:

- Turn OFF the power supply before disassembly.

1. Removing the service panel and top panel

1. Remove 3 service panel fixing screws (5 × 12) and slide the hook on the right downward to remove the service panel.
2. Remove screws (2 for front, 3 for rear/5 × 12) of the top panel and remove it.

Photo 1

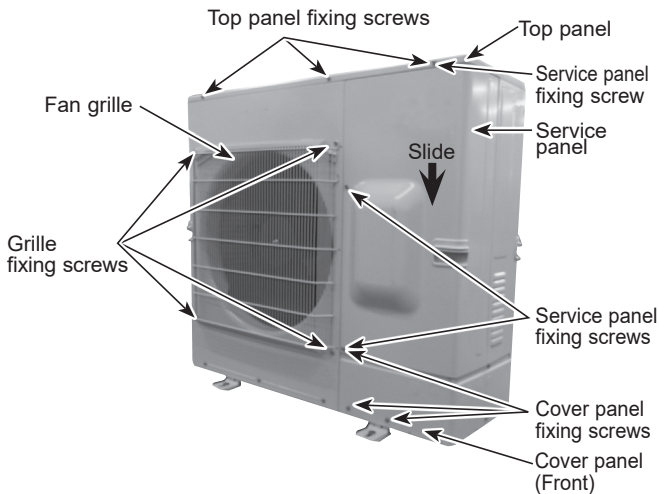

2. Removing the fan motor (MF1)

1. Remove the service panel. (See Photo 1)
2. Remove the top panel. (See Photo 1)
3. Remove the front panel. Remove the 2 cover panel fixing screws (5 × 12), and slide the cover panel (Front) upward to remove it. (See Photo 1) Cover panel (front) is fixed cover panel (Rear) by hook on right side.
4. Remove the front panel.
5. Remove a nut (for right handed screw of M6) to detach the propeller. (See Photo 2)
6. Disconnect the connectors CNF1 on the outdoor multi controller circuit board in the electrical parts box. (See Photo 4)
7. Loosen a clamp on the side of the motor support. (See Photo 3)
8. Remove 4 fan motor fixing screws (5 × 20) to detach the fan motor. (See Photo 3)

Note:

- Tighten the propeller fan with a torque of $5.7 \pm 0.3\text{N}\cdot\text{m}$ [$4.2 \pm 0.2\text{ lbf}\cdot\text{ft}$].

Photo 2

Front panel fixing screws


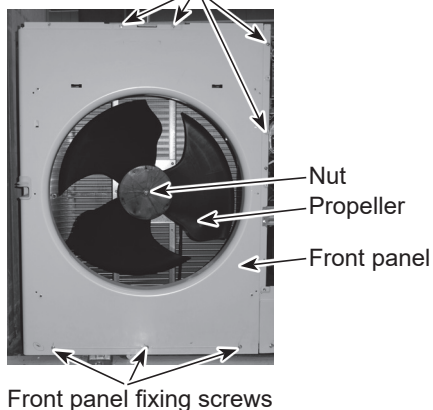


Photo 3

Fan motor fixing screws

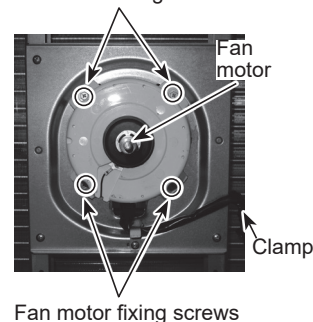

3. Removing the electrical parts box

1. Remove the service panel. (See Photo 1)
2. Remove the top panel. (See Photo 1)
3. Disconnect the connecting wire from the terminal block.
(See Photo 5 for VKM type, or Photo 7 for YKM type)
4. Remove all the following connectors from the outdoor multi controller circuit board;


<Diagram symbol in the connector housing>

- Fan motor (CNF1)
- Thermistor <HIC pipe> (TH2)
- Thermistor <Outdoor liquid pipe> (TH3)
- Thermistor <Compressor> (TH4)
- Thermistor <Ambient/Suction pipe> (TH7/6)
- High pressure switch (63H)
- High pressure sensor (63HS)
- Low pressure sensor (63LS)
- 4-way valve (21S4)
- Bypass valve (SV1)
- Linear Expansion valves (CNLVA, CNLVB)
- Liquid shut-off valve (SV4)
- Gas shut-off valve (SV5)

Pull out the disconnected wires from the electrical parts box.

5. Remove the comp felt (top).
6. Remove a nut from the terminal cover to remove the cover, and disconnect the compressor lead wire. (See Photo11)
7. Remove 2 electrical parts box fixing screws (4 × 10) and detach the electrical parts box by pulling it upward.
The electrical parts box is fixed with 2 hooks on the left and 1 hook on the right.

Photo 4

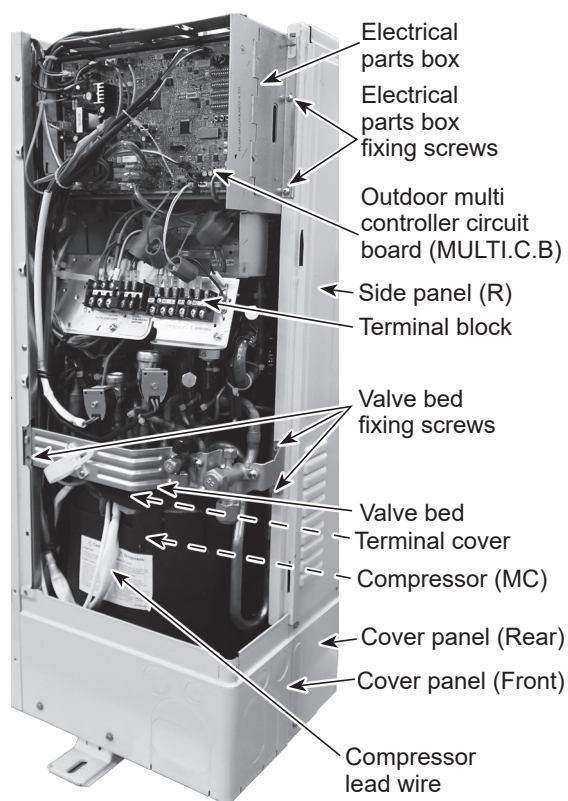


4. Disassembling the electrical parts box (VKM type)


1. Disconnect all the connectors on the multi controller circuit board.
2. Remove 2 screws (A) which fix the plate holding the multi controller circuit board and the electrical parts box. (See Photo 5)
3. Remove the multi controller circuit board. (See Photo 5)
4. Disconnect the M-NET power board connector on the back plate of the controller circuit board.
5. Disconnect the connectors of reactor on the back plate of the electrical parts box. (See Photo 6)
6. Remove 6 screws (B) on the back plate of the electrical parts box. (See Photo 6)
7. Remove the 3 reactors. (See Photo 6)

Notes:

- When reassembling the electrical parts box, make sure that the wirings are correct.
- When exchanging the reactor, make sure to exchange all the 3 reactors.

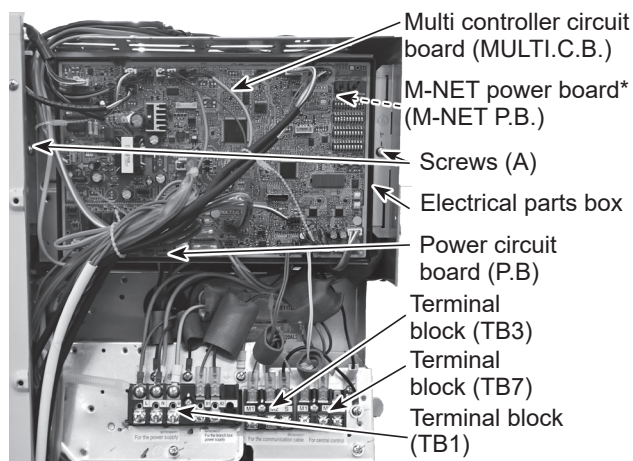Photo 5

* The M-NET power board is installed behind the multi controller circuit board.

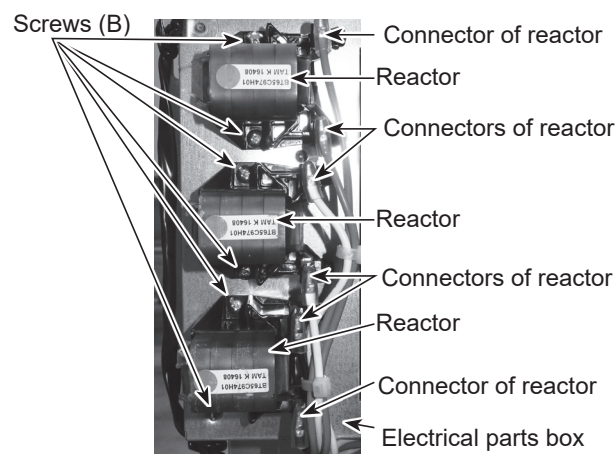Photo 6

5. Disassembling the electrical parts box (YKM type)

1. Disconnect all the connectors on the multi controller circuit board.
2. Remove 2 screws (A) which fix the plate holding the multi controller circuit board and the electrical parts box.
3. Remove the multi controller circuit board. (See Photo 7)
4. Disconnect the M-NET power board connector on the back plate of the controller circuit board.
5. Disconnect all the connectors on the noise filter circuit board. (See Photo 8)
6. Remove 9 supports on the noise filter circuit board. (See Photo 8)
7. Remove the noise filter circuit board. (See Photo 8)
8. Remove the noise filter plate fixing screws. (See Photo 8)
9. Disconnect the connectors of reactor on the bottom plate of the electrical parts box. (See Photo 9)
10. Remove 4 screws (B) on the bottom plate of the electrical parts box. (See Photo 9)
11. Remove the reactor. (See Photo 9)

Note:

- When reassembling the electrical parts box, make sure that the wirings are correct.



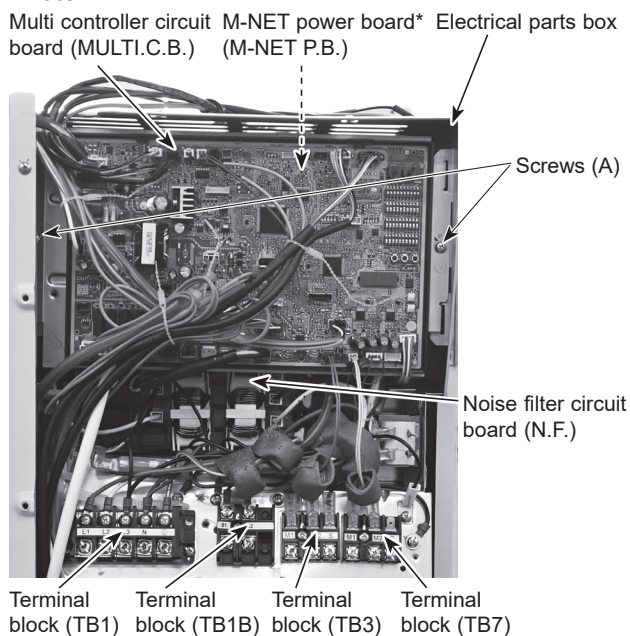
Photo 7**Photo 8**

Photo 9

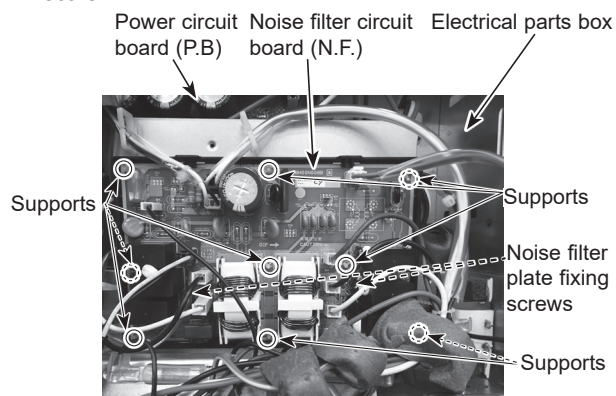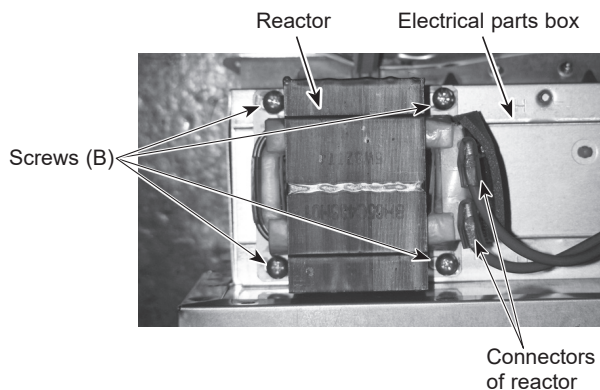

* The M-NET power board is installed behind the multi controller circuit board.

6. Removing thermistors

■ Removing the thermistors <Compressor> (TH4) / <HIC pipe> (TH2)

1. Remove the service panel. (See Photo 1)
2. Remove the top panel. (See Photo 1)
3. Disconnect the connectors TH4 and TH2 on the multi controller board in the electrical parts box.
4. Loosen the fastener fixing the connectors to the electrical parts box. (See Photo 10)
5. Pull out the thermistor <HIC pipe> (TH2) from the sensor holder. (See Photo 13)
6. Remove the comp felt (top) and pull out the thermistor <Compressor> (TH4) from the sensor holder. (See Photo 11)

Photo 10


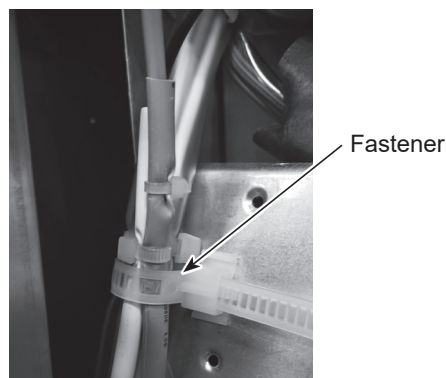


Photo 11

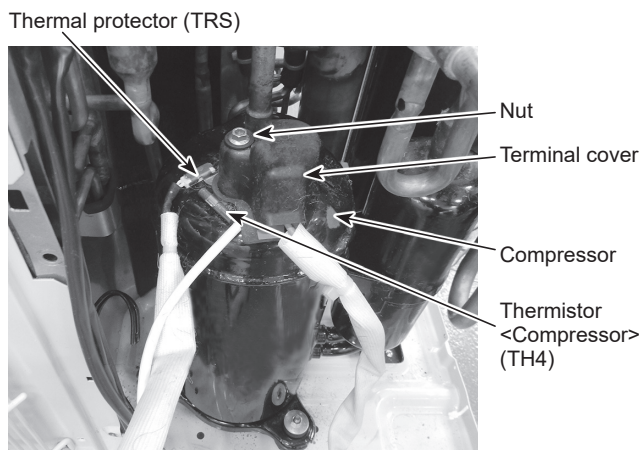

■ Removing the thermistors <Outdoor liquid pipe> (TH3) / <Suction pipe> (TH6) / <Ambient> (TH7), and the thermal protector (TRS)

1. Remove the service panel. (See Photo 1)
2. Remove the top panel. (See Photo 1)
3. Remove the Cover panel(Front). (See Photo 1))
4. Remove the side panel (R) and Cover panel (Rear) by removing the following screws:
 - Electrical parts box fixing screws (4 × 10): 2 pieces
 - Valve bed fixing screws (5 × 12): 2 pieces
 - Side panel fixing screw on the right side of the panel (5 × 12): 1 piece
 - Side panel fixing screw in the rear of the panel (5 × 12): 4 pieces
5. Disconnect the following connectors on the multi controller circuit board in the electrical parts box.
 - TH3: White
 - TH7/6: Red
6. Loosen the fastener fixing the connector to the electrical parts box. (See Photo 10)
7. Pull out each thermistor from the sensor holder. (See Photo 12, 13)

Note:

- When replacing the thermistor <Ambient> (TH7), replace it together with the thermistor <Suction pipe> (TH6) since they are combined together.
- When replacing the thermal protector (TRS), replace it together with the connector of the high pressure switch (63H) since they are combined together.

Photo 12

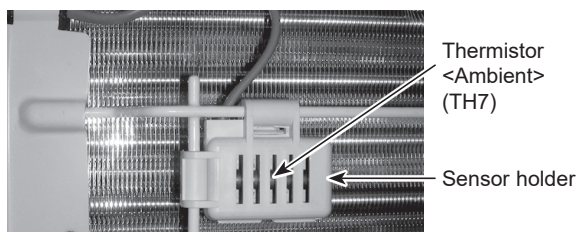


Photo 13


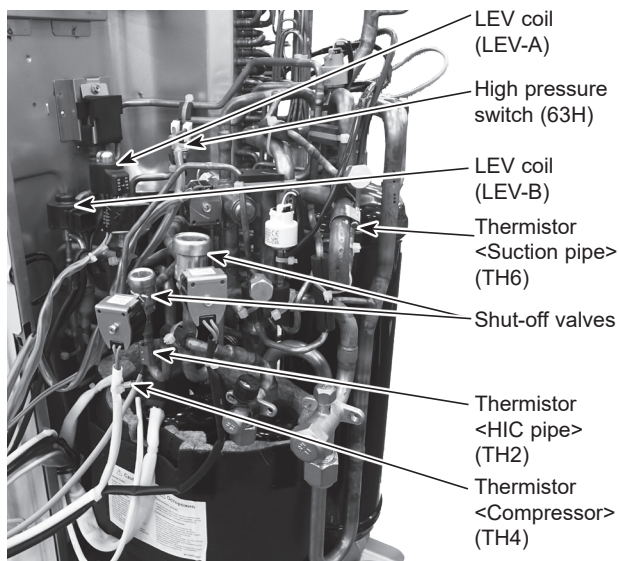


Photo 14

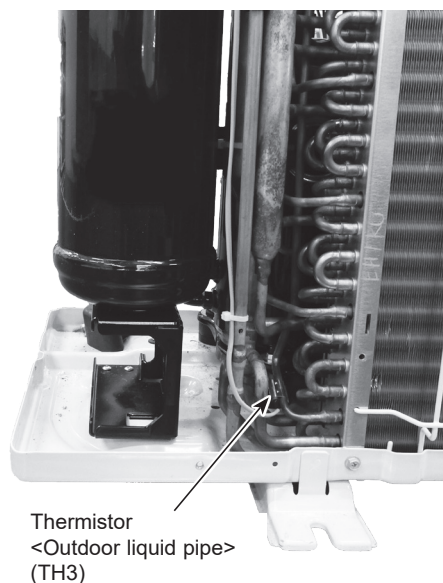

7. Removing LEV coils

1. Remove the service panel. (See Photo 1)
2. Disconnect the connector CNLVA for LEV-A and CNLVB for LEV-B on the multi controller circuit board in the electrical parts box.
3. Remove each LEV coil by sliding the coil upward. (See Photo 13)

8. Removing linear expansion valve (LEV-A, LEV-B)

1. Remove the service panel. (See Photo 1)
2. Remove the top panel. (See Photo 1)
3. Remove the electrical parts box. (Refer to procedure 3)
4. Remove the linear expansion valve coil.
5. Recover refrigerant.
6. Remove the welded part of linear expansion valve.

⚠ Caution:

- Recover refrigerant with the stop valves opened through both the check valves and the service ports.

Notes:

- Recover refrigerant without spreading it in the air.
- The welded part can be removed easily after removing the side panel (R).
- When installing the linear expansion valve, cover it with a wet cloth to prevent it from heating (120°C or more), then braze the pipes so that the inside of pipes are not oxidized.

9. Removing shut-off valve coils (for liquid shut-off valve and gas shut-off valve)

1. Remove the service panel. (See Photo 1)
2. Disconnect the connector SV4 for the liquid shut-off valve and the connector SV5 for the gas shut-off valve on the multi controller circuit board in the electrical parts box.
3. Remove shut-off valve coil fixing screws (M4 x 6).
4. Remove the shut-off valve coils toward you. (See Photo 15)

Note:

- Tighten the coils with a torque of 1.47-1.96 N·m [1.08-1.45 lbf·ft].

10. Removing shut-off valve

1. Remove the service panel. (See Photo 1)
2. Remove the top panel. (See Photo 1)
3. Remove the electrical parts box. (Refer to procedure 3)
4. Remove the shut-off valve coil. (Refer to procedure 9)
5. Recover refrigerant.

6. Remove the welded part of the shut-off valve. (See Photo 15)

⚠ Caution:

- Recover refrigerant with the stop valves opened through both the check valves and the service ports.

Notes:

- Recover refrigerant without spreading it in the air.
- The welded part can be removed easily after removing the side panel (R).
- When installing the shut-off valve, cover it with a wet cloth to prevent it from heating (120°C or more), then braze the pipes so that the inside of pipes are not oxidized.

11. Removing the 4-way valve coil (21S4)

1. Remove the service panel. (See Photo 1)
2. Remove 4-way valve coil fixing screws (M5 × 7).
3. Remove the 4-way valve coil by sliding the coil toward you.
4. Disconnect the connector 21S4 on the outdoor multi controller circuit board in the electrical parts box.

12. Removing the 4-way valve

1. Remove the service panel. (See Photo 1)
2. Remove the top panel. (See Photo 1)
3. Remove the electrical parts box. (Refer to procedure 3)
4. Remove 3 valve bed fixing screws (5 × 12) and 4 stop valve fixing screws (5 × 16), then remove the valve bed. (See Photo 4)
5. Remove 4 side panel (R) fixing screws (5 × 12) in the rear of the unit, then remove the right side panel.
6. Remove the 4-way valve coil. (See Photo 15)
7. Recover refrigerant.
8. Remove the welded part of 4-way valve.


⚠ Caution:

- Recover refrigerant with the stop valves opened through both the check valves and the service ports.

Notes:

- Recover refrigerant without spreading it in the air.
- The welded part can be removed easily after removing the side panel (R).
- When installing the 4-way valve, cover it with a wet cloth to prevent it from heating (120°C or more), then braze the pipes so that the inside of pipes are not oxidized.

Photo 15

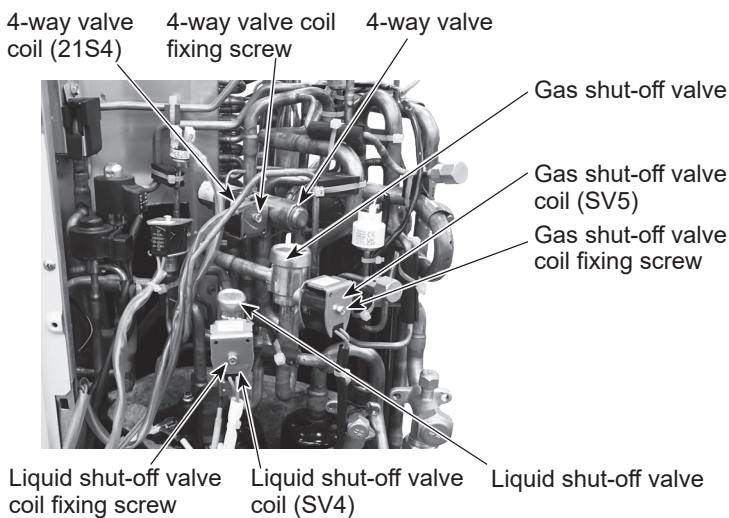

13. Removing bypass valve coil (SV1) and bypass valve

1. Remove the service panel. (See Photo 1)
2. Remove the top panel. (See Photo 1)
3. Disconnect the connector SV1 on the multi controller circuit board in the electrical parts box.
4. Remove the electrical parts box. (Refer to procedure 3)
5. Remove the bypass valve coil fixing screw (M4 × 6).
6. Remove the bypass valve coil by sliding the coil upward. (See Photo 16)
7. Recover refrigerant.
8. Remove the welded part of bypass valve.

⚠ Caution:


- Recover refrigerant with the stop valves opened through both the check valves and the service ports.

Notes:

- Recover refrigerant without spreading it in the air.
- When installing the bypass valve, cover it with a wet cloth to prevent it from heating (120°C or more), then braze the pipes so that the inside of pipes are not oxidized.

Photo 16

High pressure switch High pressure sensor

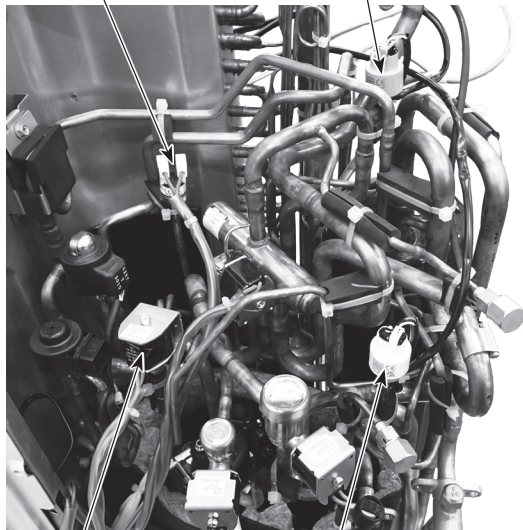

Bypass valve coil (SV1) Low pressure sensor

14. Removing the high pressure switch (63H)

1. Remove the service panel. (See Photo 1)
2. Remove the top panel. (See Photo 1)
3. Remove the electrical parts box. (Refer to procedure 3)
4. Remove the side panel (R). (Refer to procedure 12)
5. Pull out the lead wire of high pressure switch.
6. Recover refrigerant.
7. Remove the welded part of high pressure switch.

⚠ Caution:

- Recover refrigerant with the stop valves opened through both the check valves and the service ports.

Notes:

- Recover refrigerant without spreading it in the air.
- The welded part can be removed easily after removing the side panel (R).
- When installing the high pressure switch, cover it with a wet cloth to prevent it from heating (100°C or more), then braze the pipes so that the inside of pipes are not oxidized.

15. Removing the low pressure sensor (63LS) and the high pressure sensor (63HS)

1. Remove the service panel. (See Photo 1)
2. Remove the top panel. (See Photo 1)
3. Remove the side panel (R). (Refer to procedure 12)
4. Disconnect the connectors 63LS and 63HS on the multi controller circuit board in the electrical parts box.
5. Loosen the clamps which are fixing the low pressure sensor and high pressure sensor lead wire to the top of the electrical parts box. (See Photo 17)
6. Recover refrigerant.
7. Remove the welded part of low pressure sensor and high pressure sensor.


⚠ Caution:

- Recover refrigerant with the stop valves opened through both the check valves and the service ports.

Notes:

- Recover refrigerant without spreading it in the air.
- The welded part can be removed easily after removing the side panel (R).
- When installing the low pressure sensor and high pressure sensor, cover them with a wet cloth to prevent them from heating (100°C or more), then braze the pipes so that the inside of pipes are not oxidized.

Photo 17

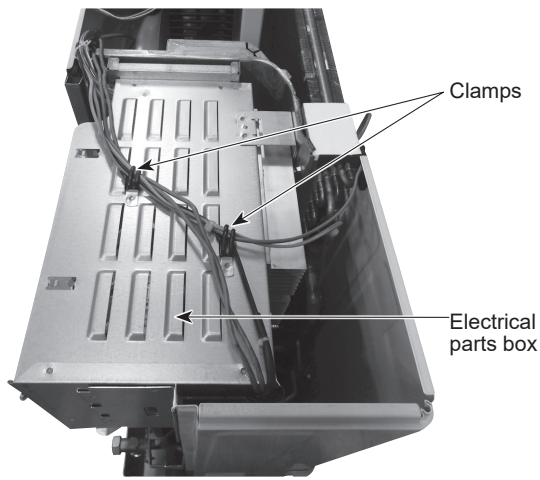

16. Removing the compressor (MC)

1. Remove the service panel. (See Photo 1)
2. Remove the top panel. (See Photo 1)
3. Remove the electrical parts box. (Refer to procedure 3)
4. Remove the valve bed by removing the following screws:
 - Valve bed fixing screws (5 × 12): 3 pieces
 - Stop valve fixing screws (5 × 16): 4 pieces
5. Remove 2 cover panel (Front) fixing screws (5 × 12) and remove the cover panel (Front).
6. Remove 5 cover panel (Rear) fixing screws (5 × 12) and remove the cover panel (Rear).
7. Remove 2 side panel (R) fixing screws in the rear of the panel (5 × 12) and remove the side panel (R).
8. Remove the comp felt (top) and (body).
9. Remove the nut on the terminal cover to remove the terminal cover, and remove the compressor lead wire. (See Photo 11)
10. Remove the thermistor <Compressor> (TH4) and Thermal protector (TRS).
11. Recover refrigerant.
12. Remove the 3 compressor fixing nuts and washers for motor using spanner or adjustable wrench.
13. Remove the welded pipe of compressor inlet and outlet and then remove the compressor.


⚠ Caution:

- Recover refrigerant with the stop valves opened through both the check valves and the service ports.

Notes:

- Recover refrigerant without spreading it in the air.
- When reconnecting the compressor wirings, ensure that the connection is correct: Check the color of the wiring and the label on the terminal block, and connect properly.

Photo 18

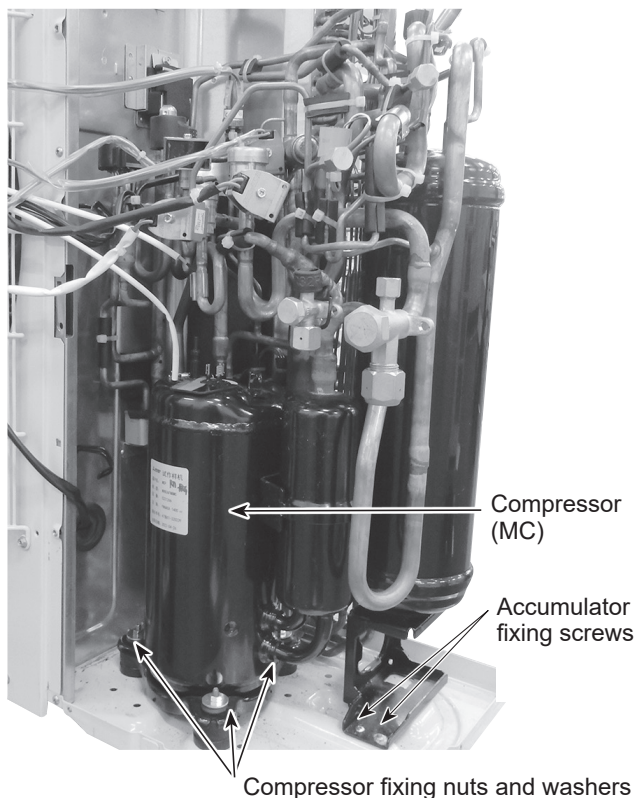

17. Removing the accumulator

1. Remove the service panel. (See Photo 1)
2. Remove the top panel. (See Photo 1)
3. Remove the electrical parts box. (Refer to procedure 3)
4. Remove the valve bed. (Refer to the procedure 16-4)
5. Remove the cover panel (Front). (Refer to the procedure 16-5)
6. Remove the cover panel (Rear). (Refer to the procedure 16-6)
7. Remove the side panel (R). (Refer to the procedure 16-7)
8. Recover refrigerant.
9. Remove welded pipe of accumulator inlet and outlet.
10. Remove 2 accumulator leg fixing screws (4 × 10). (See Photo 18)

 Caution:


- Recover refrigerant with the stop valves opened through both the check valves and the service ports.

Note:


- Recover refrigerant without spreading it in the air.

10 SYSTEM CONSTRUCTION

10-1. Example of refrigerant piping and transmission cable wiring

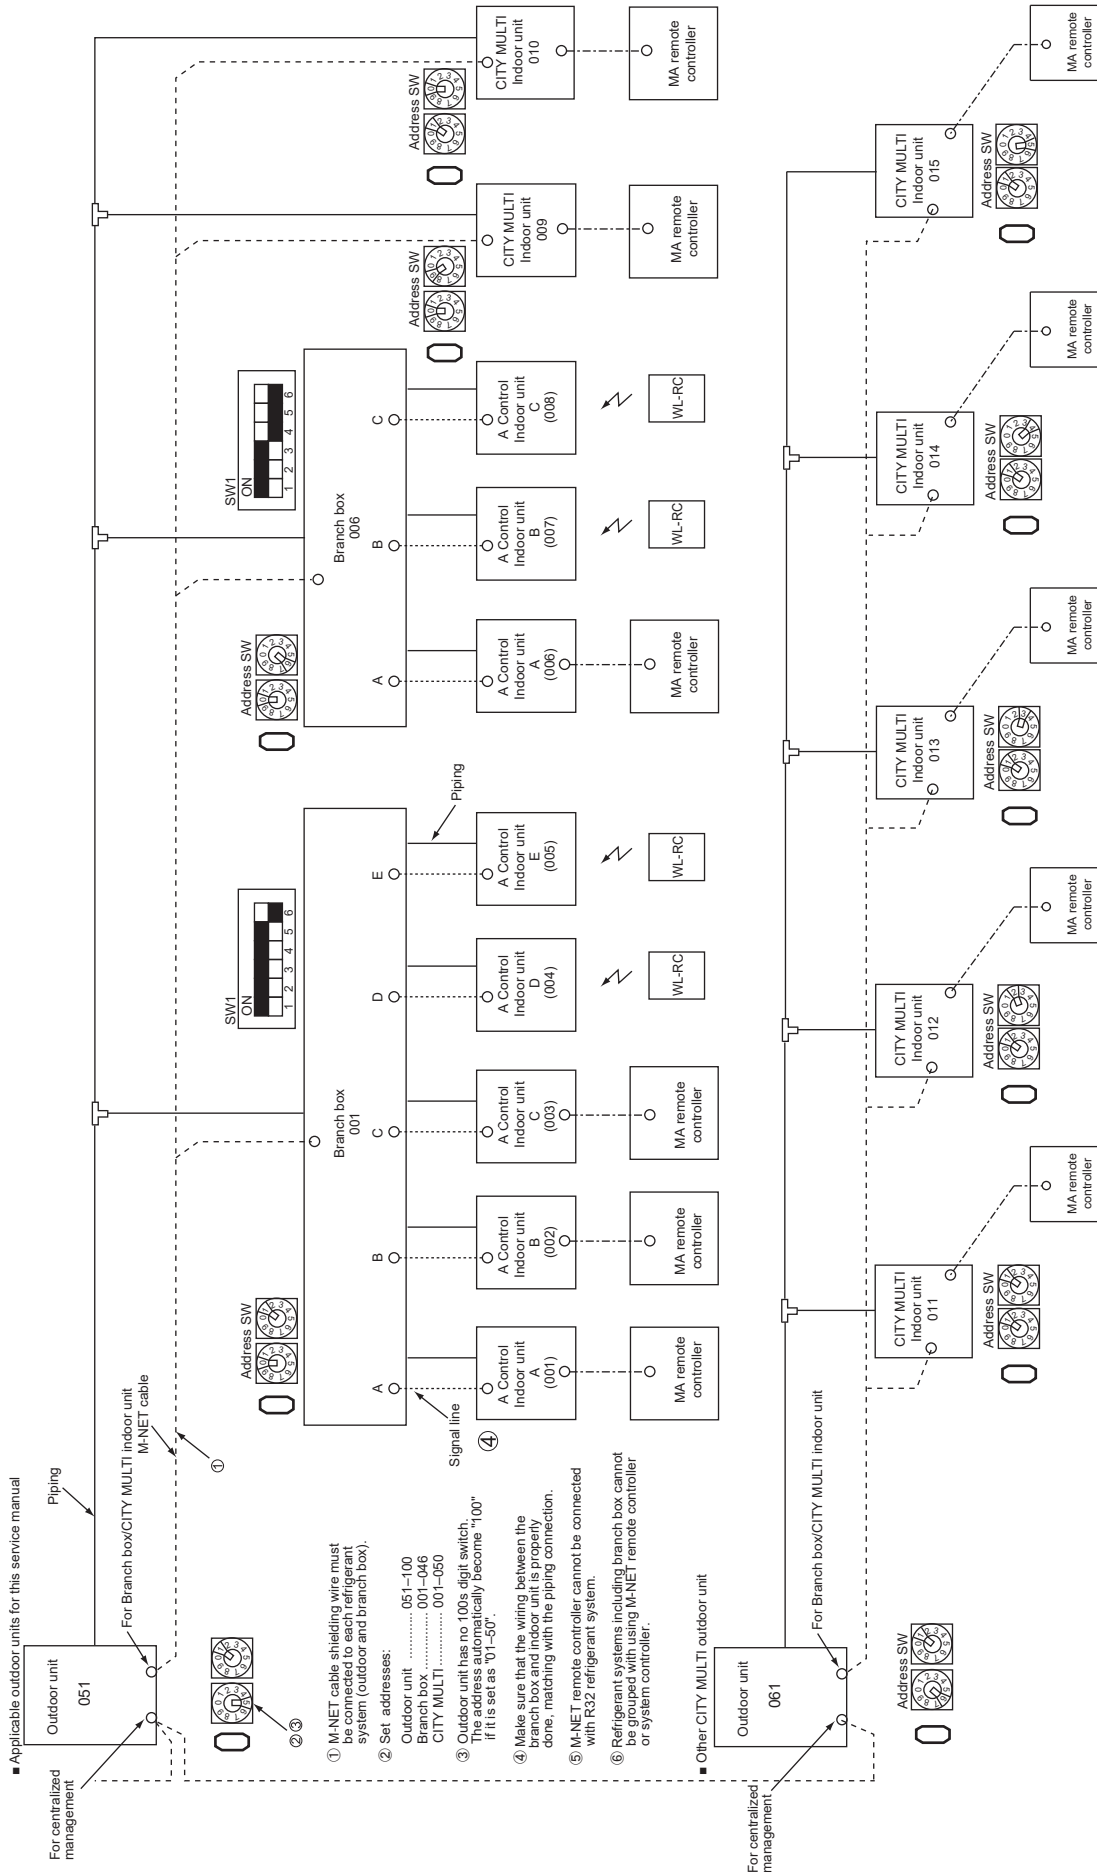

10-2. Refrigerant system diagram

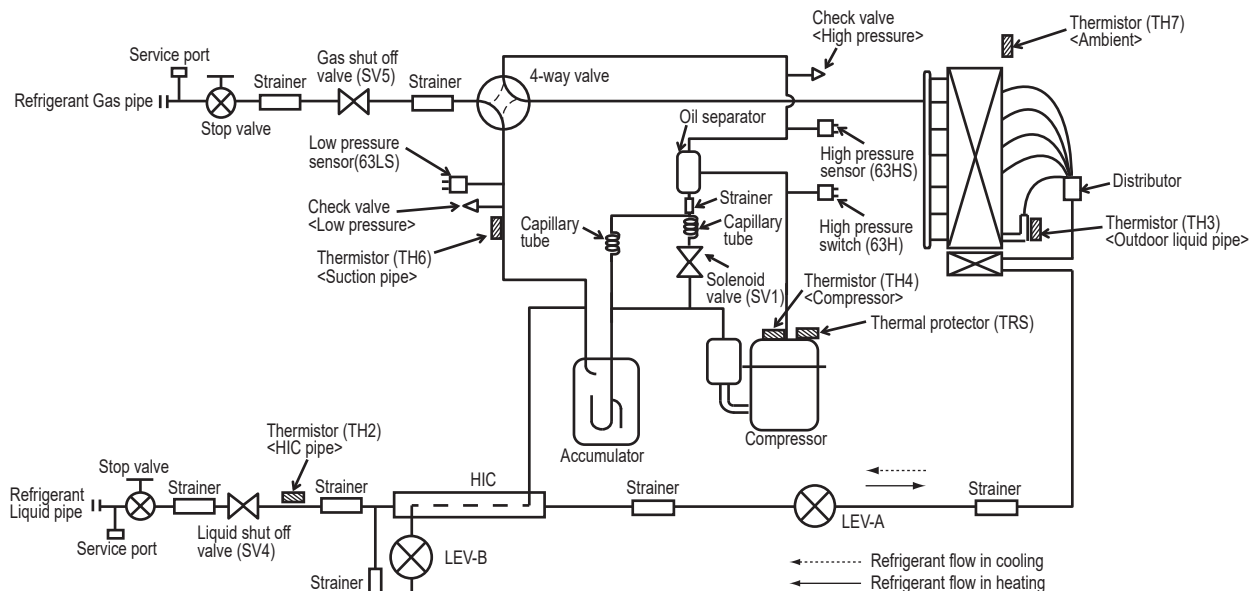


Refrigerant piping specifications <dimensions of flared connector>

Unit: mm <in.>

Capacity		Liquid piping		Gas piping
Indoor unit	M(S)10/15/20/25/32/40/50	The farthest piping length from the first joint ≤ 30 m	ø6.35 <1/4>	ø12.7 <1/2>
		The farthest piping length from the first joint > 30 m	ø9.52 <3/8>	
	M(S)63/80/100/125/140	ø9.52 <3/8>		ø15.88 <5/8>
Outdoor unit	SM112/125/140	ø9.52 <3/8>		ø15.88 <5/8>

10-3. Refrigerant system diagram (when using branch box)

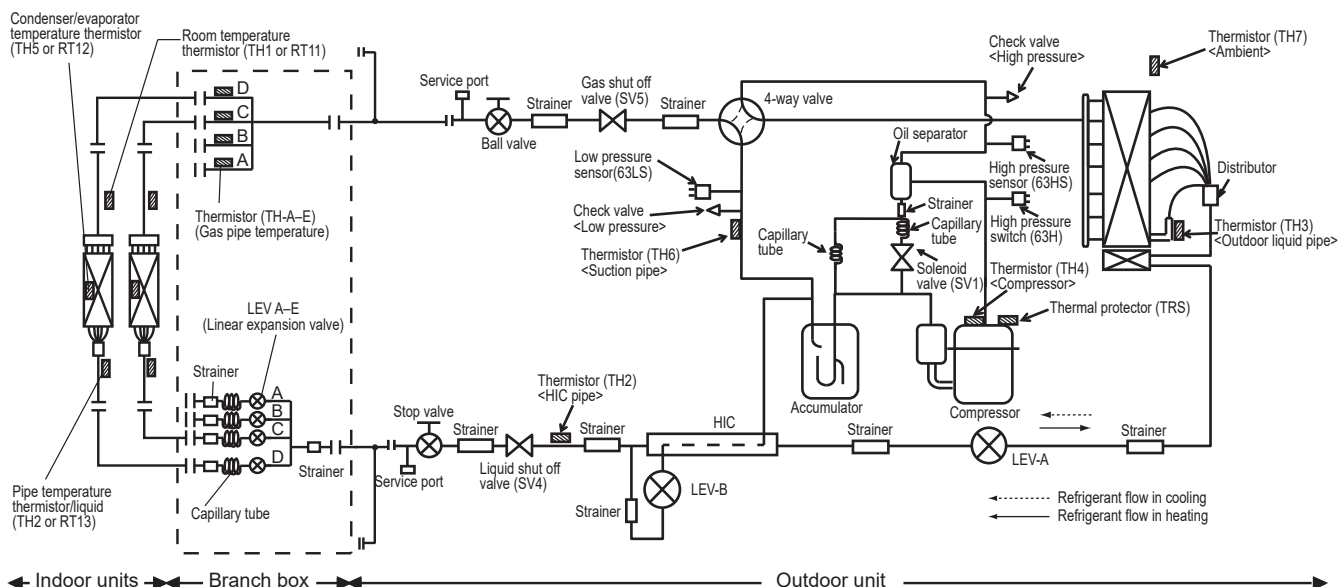

Note:

- A maximum of 2 branch boxes can be connected to 1 outdoor unit.

10-4. Selecting pipe size

Refer to installation manual "Selecting pipe size" for piping connection.

10-5. System control

Refer to installation manual "Wiring transmission cables" for system control.

11 ELECTRICAL WIRING

Refer to installation manual “Electrical work” for details.

12 REFRIGERANT PIPING TASKS

12-1. Refrigerant piping system

Refer to installation manual “Pipe length and height difference” for refrigerant piping system.

12-2. PRECAUTIONS AGAINST REFRIGERANT LEAKAGE

12-2-1. Introduction


If a large amount of R32 refrigerant leaks in a room, suffocation or fire may result. Satisfy the installation area specified in the installation manual to meet safety standards.

13 REMOTE CONTROLLER

13-1. Remote controller functions

13-1-1. PAR-42MAAB

Controller interface

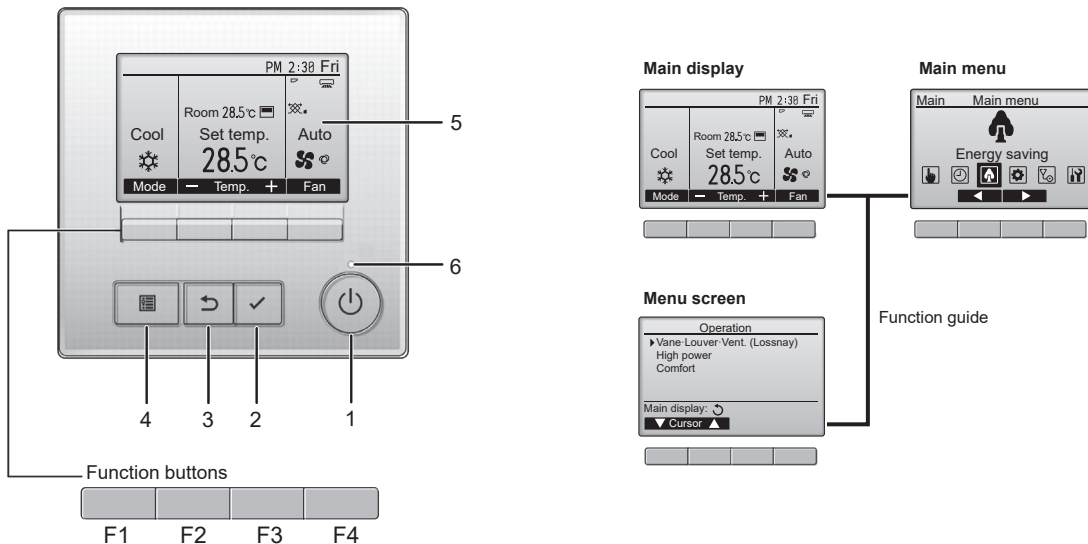

Note:

- The functions of the function buttons change depending on the screen. Refer to the button function guide that appears at the bottom of the LCD for the functions they serve on a given screen. When the system is centrally controlled, the button function guide that corresponds to the locked button will not appear.


- ON/OFF button**
Press to turn ON/OFF the indoor unit.
 - Select button**
Press to save the setting.
 - Return button**
Press to return to the previous screen.
 - Menu button**
Press to open the main menu.
 - Backlit LCD**
Operation settings will appear.
When the backlight is off, pressing any button, except for the ON/OFF button, turns the backlight on, and it will stay lit for a certain period of time depending on the screen.
 - ON/OFF lamp**
This lamp lights up in green while the unit is in operation. It blinks while the remote controller is starting up or when there is an error.
- F1: Function button 1**
Main display: Press to change the operation mode.
Menu screen: The button function varies depending on the screen.
- F2: Function button 2**
Main display: Press to decrease temperature.
Main menu: Press to move the cursor left.
Menu screen: The button function varies depending on the screen.
- F3: Function button 3**
Main display: Press to increase temperature.
Main menu: Press to move the cursor right.
Menu screen: The button function varies depending on the screen.
- F4: Function button 4**
Main display: Press to change the fan speed.
Menu screen: The button function varies depending on the screen.

Display


The main display can be displayed in 2 different modes: [Full] and [Basic]. The initial setting is [Full]. To switch to [Basic] mode, change the setting on the [Main display] setting. (Refer to operation manual included with remote controller.)

■ [Full] mode

All icons are displayed for explanation.

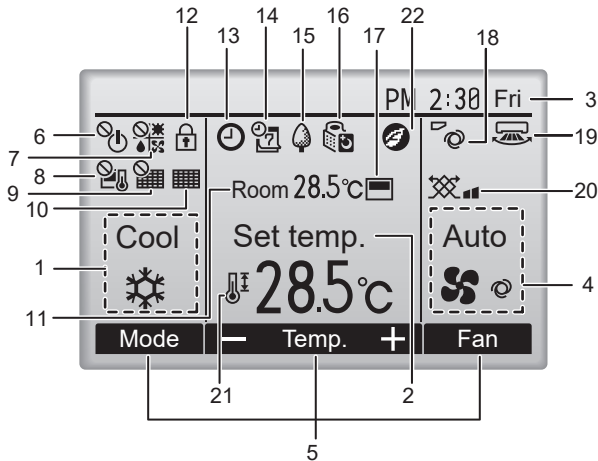

■ [Basic] mode

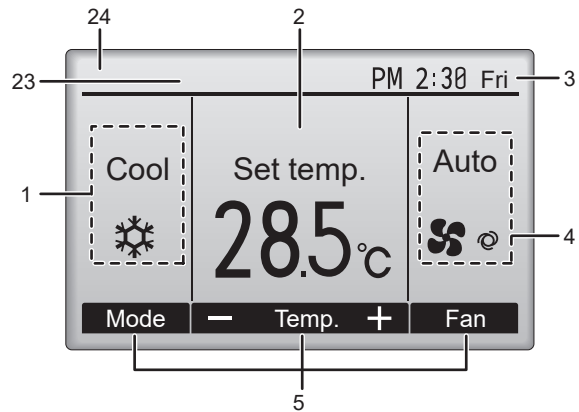

Note:

- Most settings (except ON/OFF, mode, fan speed, temperature) can be made from the main menu.

1. Operation mode
2. Preset temperature
3. Clock
4. Fan speed
5. Button function guide: Functions of the corresponding buttons appear here.
6. : Appears when the ON/OFF operation is centrally controlled.
7. : Appears when the operation mode is centrally controlled.
8. : Appears when the preset temperature is centrally controlled.
9. : Appears when the filter reset function is centrally controlled.
10. : Appears when filter needs maintenance.
11. Room temperature
12. : Appears when the buttons are locked.
13. : Appears when [On/Off timer], [Night setback], or [Auto-off] function is enabled.
: Appears when the timer is disabled by the centralized control system.
14. : Appears when [Weekly timer] is enabled.
15. : Appears while the units are operated in the energy saving mode.
(Will not appear on some models of indoor units)
16. : Appears while the outdoor units are operated in the silent mode.
17. : Appears when the built-in thermistor on the remote controller is activated to monitor the room temperature (11).
: Appears when the thermistor on the indoor unit is activated to monitor the room temperature.
18. : Indicates the vane setting.
19. : Indicates the louver setting.*1
20. : Indicates the ventilation setting.
21. : Appears when the preset temperature range is restricted.
22. : Appears when an energy saving operation is performed using [3D i-See sensor] function.*1
23. Centrally controlled: Appears for a certain period of time when a centrally-controlled item is operated.
24. Preliminary error display: An error code appears during the preliminary error.

*1. These functions are not applied to the floor standing models.


Menu structure

Press [] button.

Move the cursor to the desired item with F1 and F2 buttons, and press [] button

Note:

- Not all functions are available on all models of indoor units.

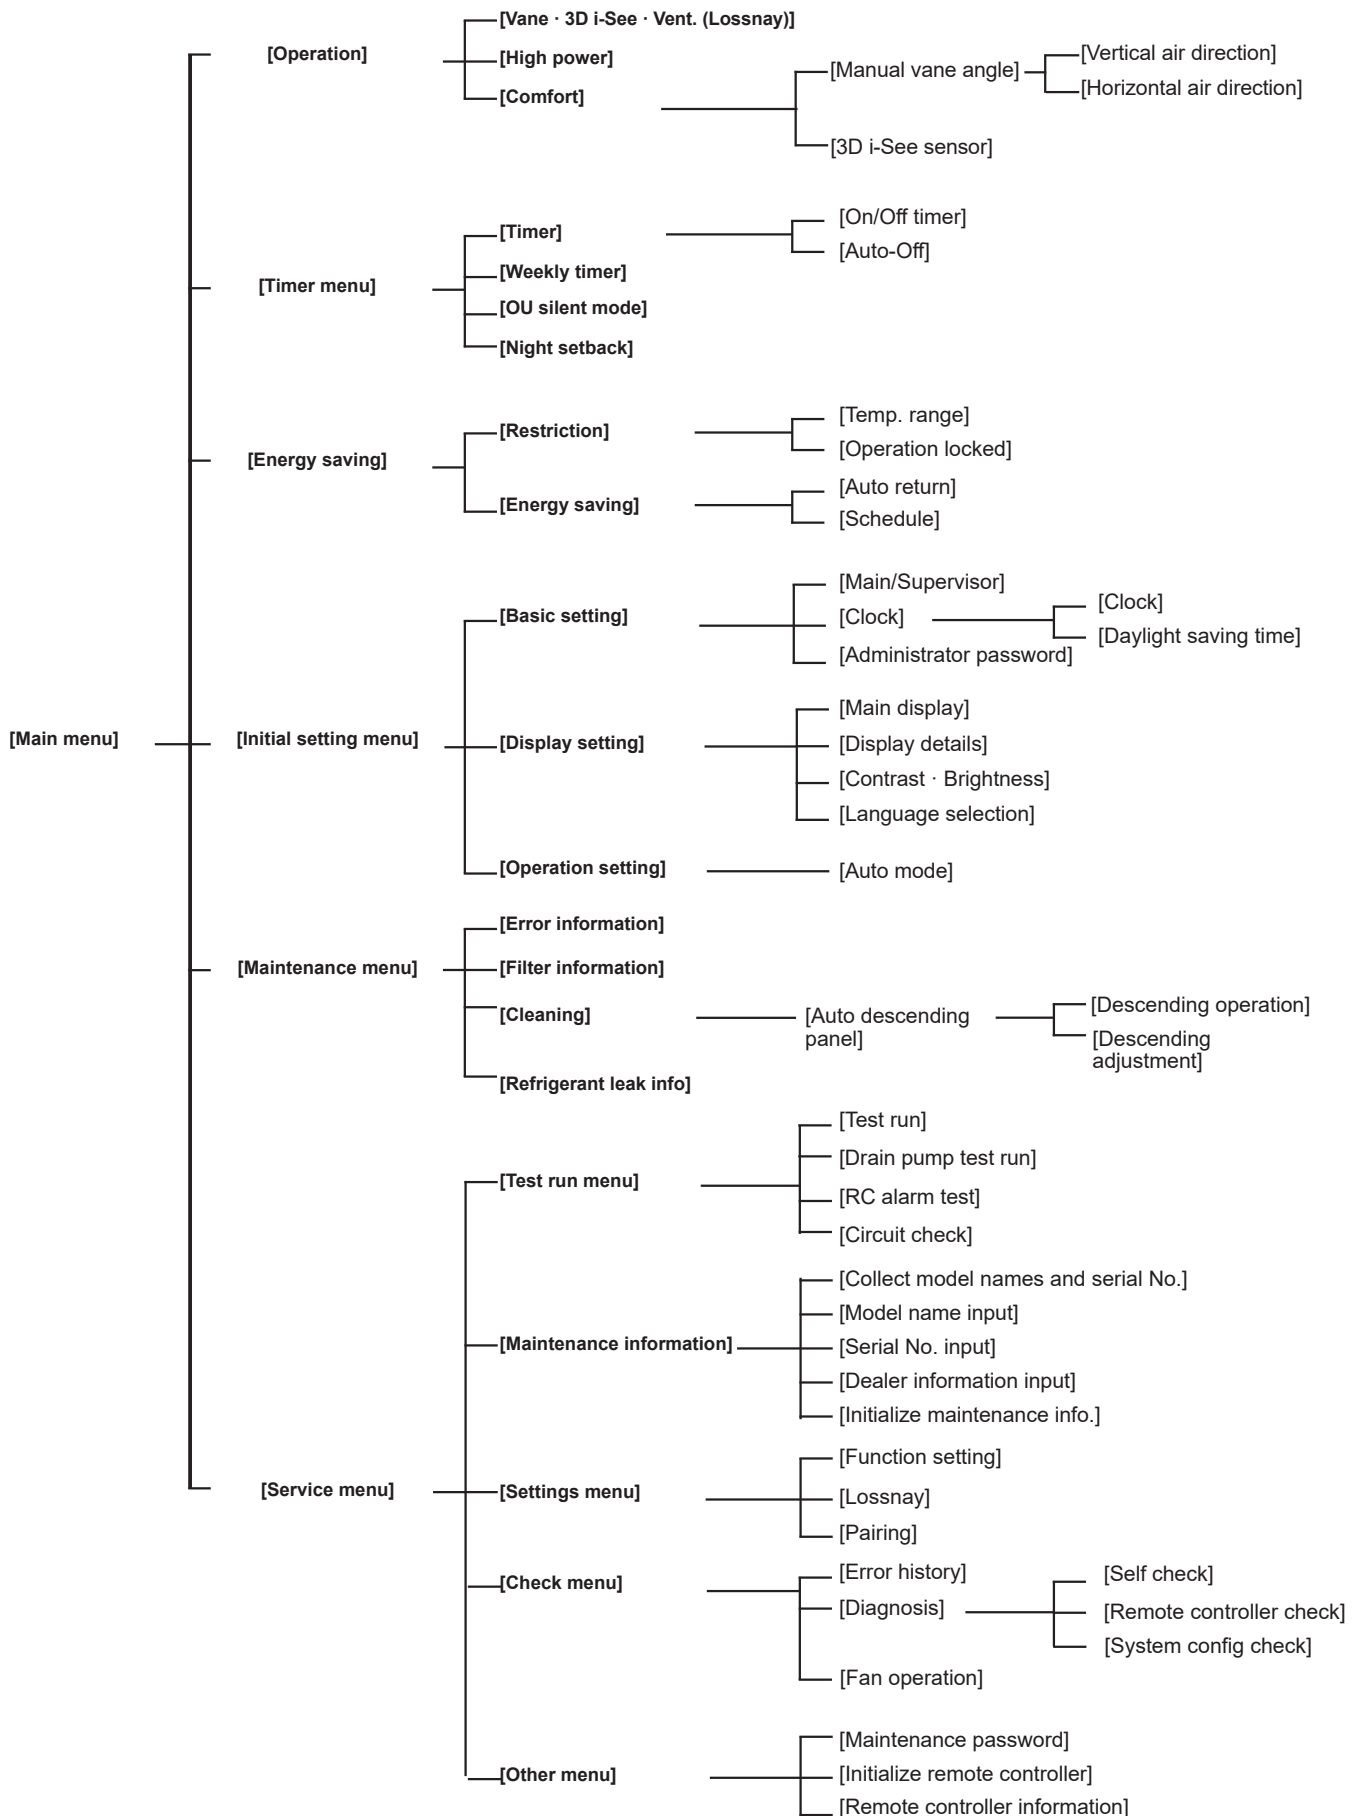

Main menu list

Main menu	Setting and display items		Setting details
Operation	Vane · 3D i-See · Vent. (Vane.Vent. (Lossnay))		Vane: Use to set the vertical air direction. Louver: Use to set the horizontal air direction. 3D i-See sensor: This setting is available only for the air conditioners that support easy setting function of motion sensing air direction. Vent: Use to set the amount of ventilation.
	High power ^{*3}		Use to reach the comfortable room temperature quickly. • Units can be operated in the High-power mode for up to 30 minutes.
	Comfort	Manual vane angle	Vertical air direction • Sets the vertical airflow direction (vane) of each unit. Horizontal air direction • Sets the horizontal airflow direction (vane) of each unit.
		3D i-See sensor	Use to set the following functions for 3D i-See sensor. • Air distribution • Energy saving option • Seasonal airflow
	Timer	Timer	ON/OFF timer ^{*1}
Auto-OFF timer			Use to set the Auto-OFF time. • Time can be set to a value from 30 to 240 in 10-minute increments.
Weekly timer ^{*1,*2}		Use to set the weekly operation ON/OFF time. • Up to 8 operation patterns can be set for each day. (Not valid when the ON/OFF timer is enabled.)	
OU silent mode ^{*1,*3}		Use to set the time periods in which priority is given to quiet operation of outdoor units over temperature control. Set the start/stop time for each day of the week. • Select the desired silent level from "Normal," "Middle," and "Quiet."	
Night setback ^{*1}		Use to make Night setback settings. • Select "Yes" to enable the setting, and "No" to disable the setting. The temperature range and the start/stop times can be set.	
Energy saving		Restriction	Temp. range ^{*2}
	Operation lock		Use to lock selected functions. • The locked functions cannot be operated.
	Energy saving	Auto return ^{*2}	Use to get the units to operate at the preset temperature after performing energy saving operation for a specified time period. • Time can be set to a value from 30 and 120 in 10-minute increments. (This function will not be valid when the preset temperature ranges are restricted.)
		Schedule ^{*1,*3}	Set the start/stop time to operate the units in the energy saving mode for each day of the week, and set the energy saving rate. • Up to 4 energy saving operation patterns can be set for each day. • Time can be set in 5-minute increments. • Energy saving rate can be set to a value from 0% or 50 to 90% in 10% increments.
Initial setting	Basic setting	Main/Supervisor	When connecting 2 remote controllers, one of them needs to be designated as a sub controller.
		Clock	Use to set the current time.
		Daylight saving time	Set the daylight saving time.
		Administrator password	The administrator password is required to make the settings for the following items. • Timer setting • Energy saving setting • Weekly timer setting • Restriction setting • Outdoor unit silent mode setting • Night set back
		Display setting	Main display
	Display details		Make the settings for the remote controller related items as necessary. Clock: The initial settings are "Yes" and "24h" format. Temperature: Set either Celsius (°C) or Fahrenheit (°F). Room temp.: Set Show or Hide. Auto mode: Set Auto mode display or Only Auto display.
	Contrast · Brightness		Use to adjust screen contrast and brightness.
	Language selection		Use to select the desired language.
	Operation setting	Auto mode	Whether or not to use Auto mode can be selected by using the button. This setting is valid only when indoor units with Auto mode function are connected.
Maintenance	Error information		Use to check error information when an error occurs. • Error code, error source, refrigerant address, model name, manufacturing number, contact information (dealer's phone number) can be displayed. (The model name, manufacturing number, and contact information need to be registered in advance to be displayed.)
	Filter information		Use to check the filter status. • The filter sign can be reset.
	Cleaning	Auto descending panel	Use to lift and lower the auto descending panel (Optional parts).
	Refrigerant leak info		Use to check error information when a refrigerant leakage occurs. • Error code, error source, error source address, unit model, manufacturing number, contact information (dealer's phone number) can be displayed. • The unit model, manufacturing number, and contact information need to be registered in advance to be displayed.

Main menu	Setting and display items		Setting details
Service	Test run		Select "Test run" from the Service menu to bring up the Test run menu. • Test run • Drain pump test run
	Input maintenance info.		Select "Input maintenance Info." from the Service menu to bring up the Maintenance information screen. The following settings can be made from the Maintenance Information screen. • Model name input • Serial No. input • Dealer information input • Initialize maintenance info.
	Settings	Function setting	Make the settings for the indoor unit functions via the remote controller as necessary.
		LOSSNAY setting	This setting is required only when the operation of CITY MULTI units is interlocked with LOSSNAY units.
	Check	Error history	Display the error history and execute "delete error history".
		Diagnosis	Self check: Error history of each unit can be checked via the remote controller. Remote controller check: When the remote controller does not work properly, use the remote controller checking function to troubleshoot the problem.
	Others	Maintenance password	Use to change the maintenance password.
		Initialize remote controller	Use to initialize the remote controller to the factory shipment status.
		Remote controller information	Use to display the remote controller model name, software version, and serial number.

*1. Clock setting is required.

*2. 1°C increments.


*3. This function is available only when certain outdoor units are connected.

13-1-2. PAR-SL97A-E

Controller interface

*For explanation purposes, all of the items that appear in the display are shown.

*All items are displayed when the Reset button is pressed.

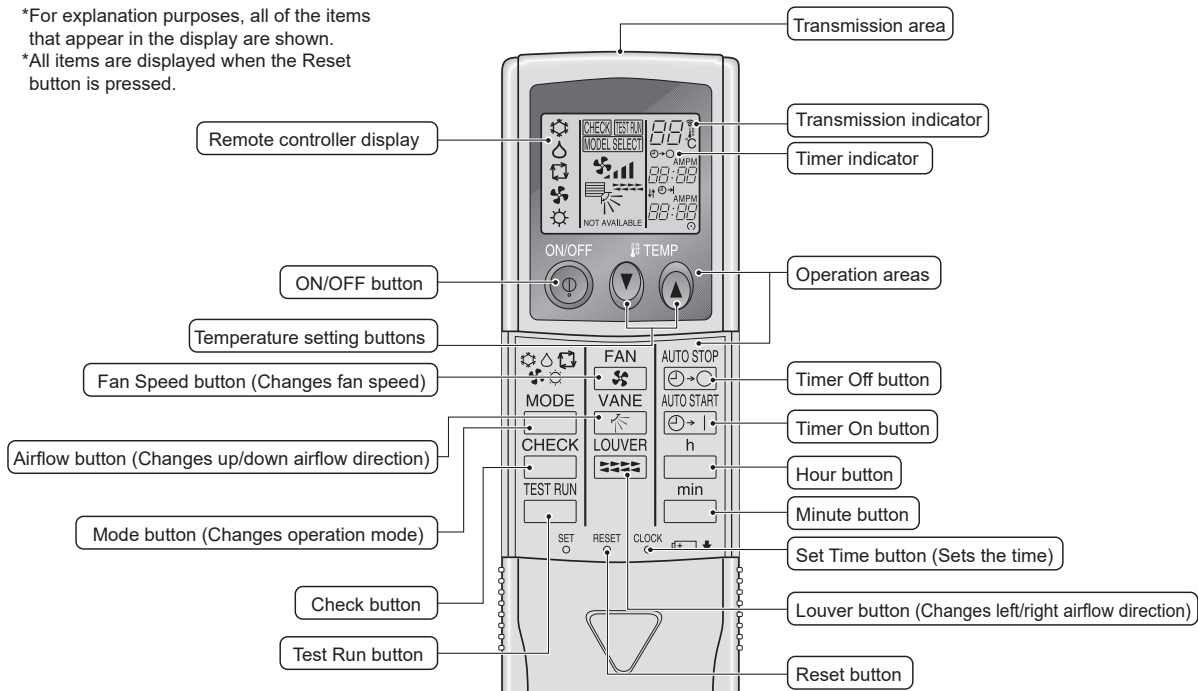


Instructions for use

- When using the wireless remote controller, point it towards the receiver on the indoor unit.
- If the remote controller is operated within approximately three minutes after power is supplied to the indoor unit, the indoor unit may beep three times as the unit is performing the initial automatic check.
- The indoor unit beeps to confirm that the signal transmitted from the remote controller has been received. Signals can be received up to approximately 7 meters in a direct line from the indoor unit in an area 45° to the left and right of the unit. However, illumination such as fluorescent lights and strong light can affect the ability of the indoor unit to receive signals.
- If the operation lamp near the receiver on the indoor unit is blinking, the unit needs to be inspected. Consult your dealer for service.
- Handle the remote controller carefully. Do not drop the remote controller or subject it to strong shocks. In addition, do not get the remote controller wet or leave it in a location with high humidity.
- To avoid misplacing the remote controller, install the holder included with the remote controller on a wall and be sure to always place the remote controller in the holder after use.

13-1-3. PAR-SL103A-E

Controller interface

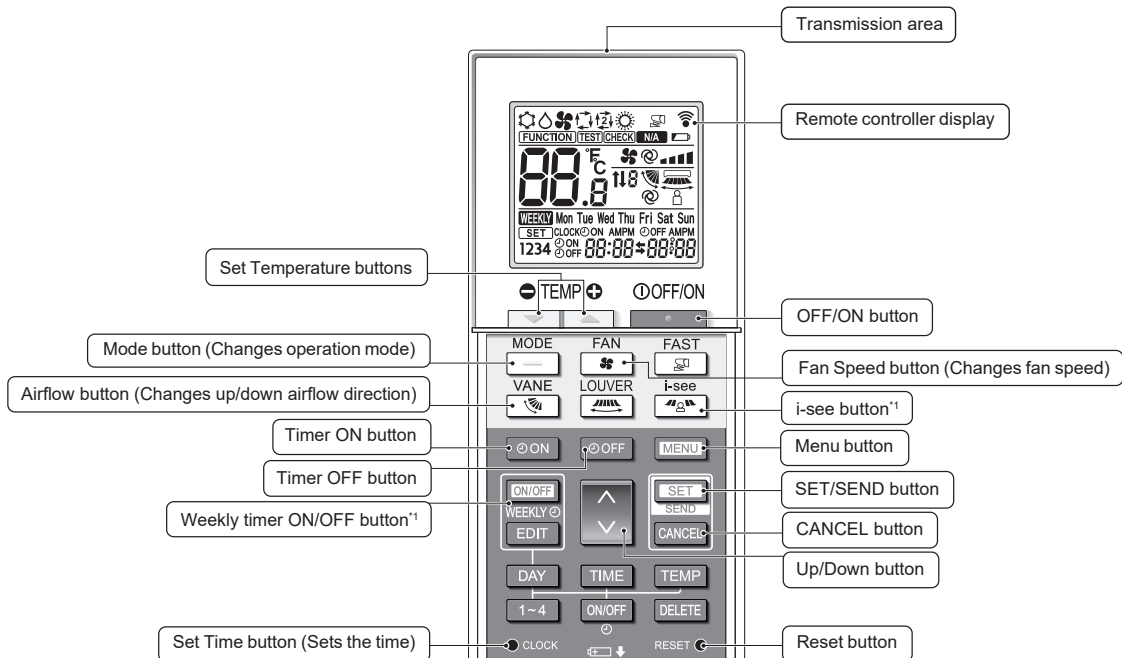

*1. This button is enabled or disabled depending on the model of the indoor unit.

Display

Operation mode

Cool Dry
 Fan Auto (single set point)
 Heat Auto (dual set point)

Temperature setting

The units of temperature can be changed. For details, refer to the installation manual.

Vane setting

Step 1 Step 2 Step 3 Step 4 Step 5 Swing Auto

Not available

Appears when a non-supported function is selected.

Battery replacement indicator

Appears when the remaining battery power is low.

Fan speed setting

Auto

3D i-See sensor (Air distribution)

Default Direct Indirect

When Direct or Indirect is selected, the vane setting is set to Auto.

13-2. [Error information]

Operating instructions

■ How to check the error information when an error occurs

When an error occurs, the following screen will appear. Check the error status, stop the operation, and consult your dealer.

1. Check the error information

Error code, error unit, refrigerant address, date and time of occurrence, model name, and serial number will appear. The model name and serial number will appear only if the information has been registered.

- Press F1 or F2 button to go to the next screen.
- Contact information (dealer's phone number) will appear if the information has been registered.

Error information 1/2

Error code 2502

Error unit IU 1

Time Occurred 02/01 4:48

Reset error: Reset button

▼ Page ▲ Reset

➡

Error information 2/2

Contact information

Dealer

Tel

Reset error: Reset button

▼ Page ▲ Reset

F1 F2 F3 F4 blinks

[Menu]

[Back]

[Check]

[Power]

2. Reset the error

- Press F4 button or [Power] button to reset the error that is occurring.
- Select [OK] with F4 button.

Note:

- Errors cannot be reset while the ON/OFF operation is prohibited.
- To go back to [Service menu], press [Menu] button.

Error information 1/2

Error code 2502

Error unit IU 1

Time Occurred 02/01 4:48

Reset error: Reset button

▼ Page ▲ Reset

➡

Error reset

Reset current error?

Cancel OK

➡

Error reset

Error reset

Main menu: [Menu]

F1 F2 F3 F4 blinks

[Menu]


[Back]

[Check]

[Power]

■ How to check the error information later

While no errors are occurring, page 2/2 of the error information can be viewed by selecting [Error information] from [Maintenance menu]. Errors cannot be reset on this screen.

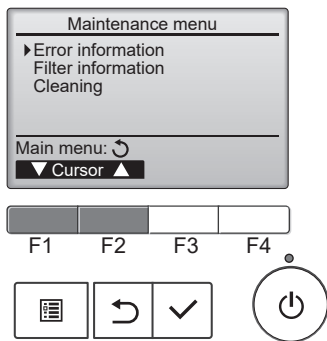


13-3. [Service menu]

Note:


- Maintenance password is required to set each item in the service menu.

Operating instructions

1. Press [] button to open the main menu.
2. Select [Service] from [Main menu], and press [] button.
A window asking for the password will appear when [Service menu] is selected.

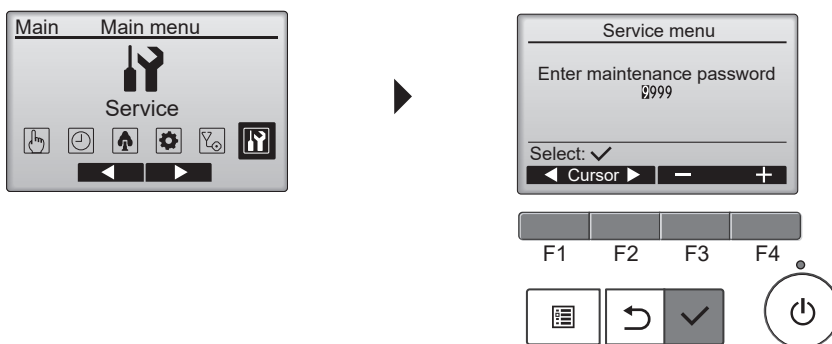

3. Enter the current maintenance password (4 numerical digits).
Move the cursor to the digit you want to change with F1 or F2 button and set each number (0 through 9) with F3 or F4 button.
4. Press [] button.
[Service menu] will appear if the password matches.

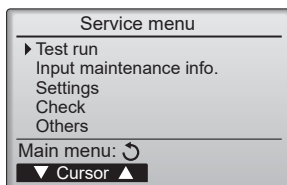

Notes:

- The initial maintenance password is "9999". Change the default password as necessary to prevent unauthorized access. Have the password available for those who need it.
- If you forget your maintenance password, you can initialize the password to the default password "9999" by pressing and holding F1 button for 10 seconds on the maintenance password setting screen.
- Air conditioning units need to be stopped depending on the item you want to set. Remote controller might not be used when the system is centrally controlled. The following screen will appear in this case.



Notes:


- To go back to [Service menu], press [] button.
- To return to the previous screen, press [] button.

13-4. [Test run]

13-4-1. PAR-42MAAB

Operating instructions

1. Select [Service] from [Main menu], and press [✓] button.
2. Select [Test run] with F1 or F2 button, and press [✓] button.

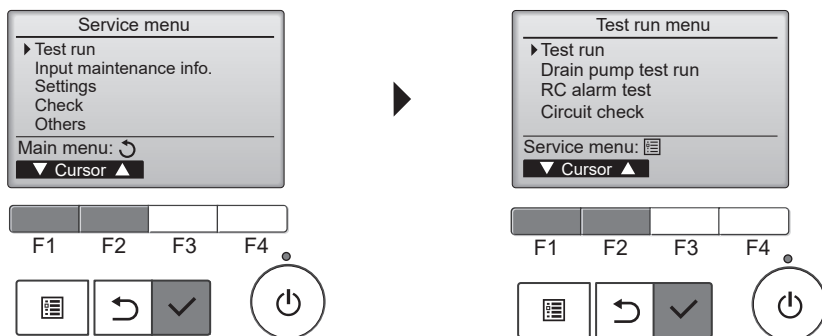


■ Test run operation

1. Press F1 button to go through the operation modes in the order of [Cool] and [Heat].

Cooling mode: Check if the cold air blows out.

Heating mode: Check if the heat blows out.

2. Check the operation of the outdoor unit's fan.
3. Press [✓] button and open the vane setting screen.

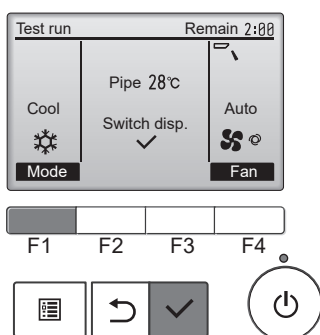


■ Auto vane check

1. Check the auto vane with F1, F2 and F3 buttons.
2. Press [↺] button to return to test run operation.
3. Press [⏻] button.

Notes:

- When the test run is completed, [Test run menu] screen will appear.
- The test run will automatically stop after 2 hours.
- The function is available only for the model with vanes.

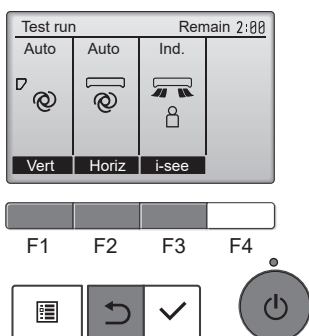

13-4-2. PAR-SL97A-E


Measure an impedance between the power supply terminal block on the outdoor unit and ground with a 500 V megohm-meter and check that it is equal to or greater than 1.0 MΩ.

Operating instructions

1. Turn on the main power to the unit.
2. Press button twice continuously.
(Start this operation from the status of remote controller display turned off.)
The symbol of and current operation mode are displayed.
3. Press button to activate the cool mode , then check whether cool air blows out from the unit.
4. Press button to activate the heat mode , then check whether warm air blows out from the unit.
5. Press button and check whether strong air blows out from the unit.
6. Press button and check whether the auto vane operates properly.
7. Press button to stop the test run.

Notes:


- Point the remote controller towards the indoor unit receiver to perform steps 2 to 7.
- It is not possible to run in the fan, the dry or the auto mode.

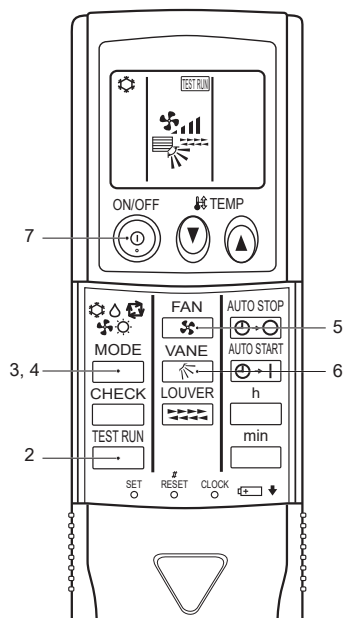

13-4-3. PAR-SL103A-E

Operating instructions

1. Stop the air conditioner
 - Press **ON/OFF** button to stop the air conditioner.
 - If the weekly timer is enabled (**WEEKLY** is shown on the display), press **ON/OFF WEEKLY** button to disable it (**WEEKLY** is off).
2. Start the test run
 - Press **MENU** button for 5 seconds.
CHECK appears on the display and the unit starts the service mode.
 - Press **MENU** button.
TEST appears on the display and the unit starts the test run mode.
 - Press the following buttons to start the test run.
 - MODE**: Switch the operation mode between cooling and heating and start the test run.
 - FAN**: Switch the fan speed and start the test run.
 - VANE**: Switch the airflow direction and start the test run.
 - LOUVER**: Switch the louver and start the test run.
 - SET**: Start the test run.
3. Stop the test run.
 - Press **ON/OFF** button to stop the test run.
 - After 2 hours, the stop signal is transmitted.

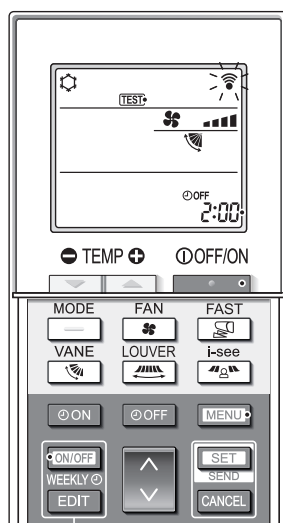



13-5. [Function setting]

13-5-1. PAR-42MAAB

Operating instructions

1. Open the [Function setting] screen.
 - Select [Service] from [Main menu], and press [✓] button.
 - Select [Setting] from [Service menu], and press [✓] button.
 - Select [Function setting] and press [✓] button.

 [Function setting] screen will appear.

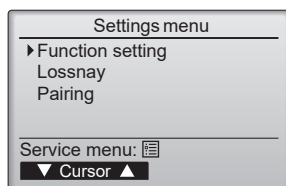




2. Set the function.
 - Press F1 or F2 button to move the cursor to one of the following: M-NET address, function setting number, or setting value.
 - Press F3 or F4 button to change the settings to the desired settings.
 - Once the settings have been completed, press [✓] button.
A screen will appear indicating that the settings information is being sent.
 - To check the current settings of a given unit, enter the setting for its M-NET address and function setting number, select Conf for the Function, and press [✓] button.
A screen will appear indicating that the settings are being searched for.
When the search is done, the current settings will appear.

When the settings information has been sent, a screen will appear indicating its completion.

- To make additional settings, press [↺] button to return to the screen shown in the above step. Set the function numbers for other indoor units by following the same steps.

Notes:



- Refer to the installation manual of the indoor unit for the information about initial settings, function setting numbers, and setting values of indoor units.
- Be sure to write down the settings for all functions if any of the initial settings has been changed after the completion of installation work.

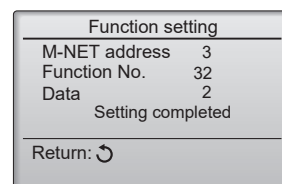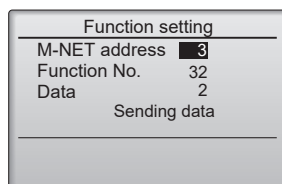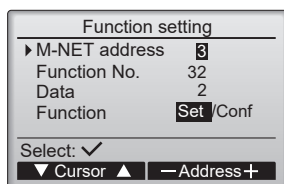



13-6. [Error history]

Operating instructions

 1. Open [Service menu] and select [Check].
 - Select [Service] from [Main menu], and press [✓] button.
 - Select [Check] with F1 or F2 button, and press [✓] button.

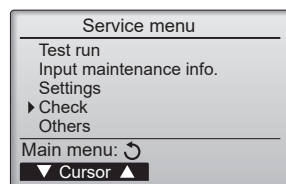

 2. Select [Error history] with F1 or F2 button, and press [✓] button.

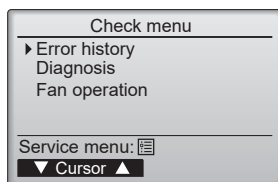

3. 16 error history records will appear.



4 records are shown per page, and the top record on the first page indicates the latest error record.

Error history 1/4				
Error	Unt#	dd/mm/yy		
2502	1	12/04/20	12:34	
2502	1	12/04/20	12:34	
2502	1	12/04/20	12:34	
2502	1	12/04/20	12:34	



4. Delete the error history.

- Press F4 button [Delete].
A confirmation screen will appear asking if you want to delete the error history.
- Press F4 button [OK] to delete the history.
[Error history deleted] will appear on the screen.
- Press [↶] button to go back to [Check menu] screen.

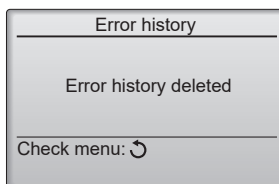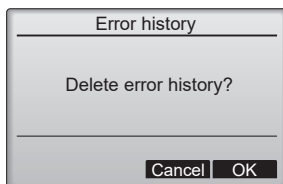


13-7. Self-diagnosis

13-7-1. PAR-42MAAB



Operating instructions

1. Open [Self check] screen
 - Select [Service] from [Main menu], and press [✓] button.
 - Select [Check] from [Service menu], and press [✓] button.
 - Select [Diagnosis] from [Check menu], and press [✓] button.
 - Select [Self check] with F1 or F2 button, and press [✓] button.
[Self check] screen will appear.

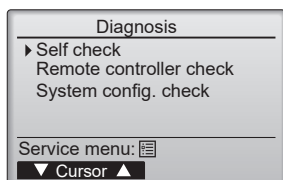


2. Enter the M-NET address with F1 or F2 button, and press [✓] button.

- Error code, unit number, attribute, and indoor unit demand signal ON/OFF status at the contact will appear.
[-] will appear when there is no error history.

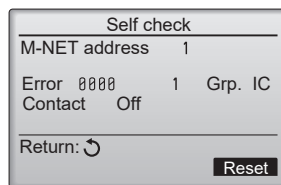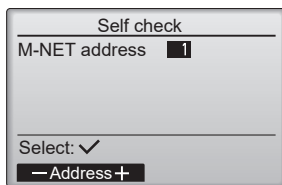

<Error history is shown.>

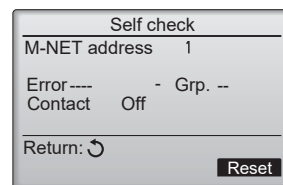

<Error history is not shown.>

3. Reset the error history.



- Press F4 button [Reset].

A confirmation screen will appear to ask you if you want to delete the error history.

- Press F4 button [OK] to delete the error history.

[Request rejected] will appear if deletion fails.


[Unit not exist] will appear if no indoor unit is assigned to the entered address.

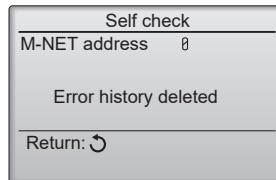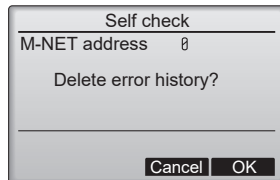

13-7-2. PAR-SL97A-E

Operating instructions


1. Press button twice.
CHECK appears, and the refrigerant address "00" blinks.
Make sure that the remote controller's display has stopped before continuing.
2. Press buttons to select the refrigerant address of the indoor unit for self-diagnosis.
Set the address of the indoor unit that is to be self-diagnosed.
3. Point the remote controller at the sensor of the indoor unit and press button.
If an air conditioner error occurs, the indoor unit's sensor emits an intermittent buzzer sound, the operation light blinks, and the error code is output.
4. Point the remote controller at the sensor of the indoor unit and press button.
The check mode is cancelled.

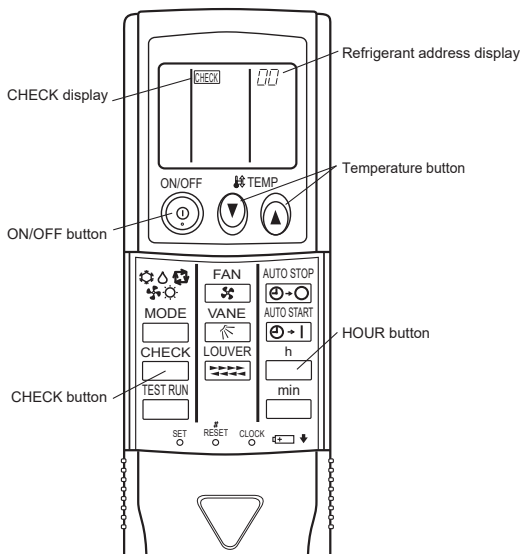

13-7-3. PAR-SL103A-E

Operating instructions

1. Press button to stop the air conditioner.
If the weekly timer is enabled (is shown on the display), press button to disable it (is off).
2. Press button for 5 seconds. CHECK appears and the unit starts the self-check mode.
3. Press button to select the refrigerant address (M-NET address) of the indoor unit for which you want to perform the self-check.
4. Press button.
If an error is detected, the error code is indicated by the number of beeps from the indoor unit and the number of blinks of the operation indicator lamp.
5. Press button.
CHECK and the refrigerant address (M-NET address) go off and the self-check is completed.

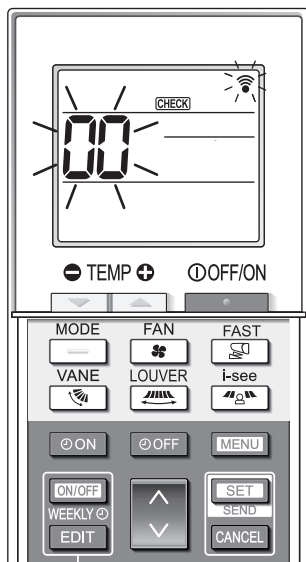


13-8. [Remote controller check]

Operating instructions

If operations cannot be completed with the remote controller, diagnose the remote controller with this function.



1. Go to [Remote controller check] screen.
 - Select [Service] from [Main menu], and press [✓] button.
 - Select [Check] from [Service menu], and press [✓] button.
 - Select [Diagnosis] from [Check menu], and press [✓] button.
 - Select [Remote controller check] with F1 or F2 button, and press [✓] button.

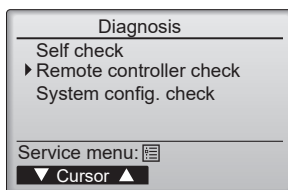

2. Start the remote controller check.
 - Select [Remote controller check] from [Diagnosis], and press [✓] button to start the remote controller check and see the check results.

Notes:

 - To cancel the remote controller check and exit [Remote controller check] menu screen, press [𐀀] or [↺] button.
- The remote controller will not reboot itself.

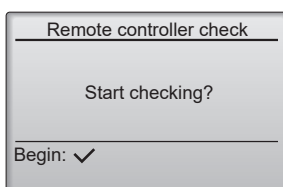

3. Check the result of the remote controller check.

See the following descriptions for each result:

[OK]:

- The remote controller has no problem. Check other parts to find problems.

[E3], [6832]:

- There is noise on the transmission line, or the indoor unit or another remote controller is faulty. Check the transmission line and the other remote controllers.


[NG] (ALL0, ALL1):

- Send-receive circuit fault. The remote controller needs to be replaced.

[ERC]:

- The number of data errors is the discrepancy between the number of bits in the data transmitted from the remote controller and that of the data that was actually transmitted over the transmission line. If data errors are found, check the transmission line for external noise interference.

If [✓] button is pressed after the remote controller check results are displayed, remote controller check will end, and the remote controller will automatically reboot itself.

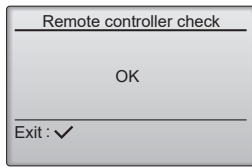

Remote controller check results screen

Note:

- Check the remote controller display and see if anything is displayed (including lines). Nothing will appear on the remote controller display if the correct voltage (8.5 – 12 VDC) is not supplied to the remote controller. If this is the case, check the remote controller wiring and indoor units.

CITY MULTI

MITSUBISHI ELECTRIC CORPORATION

HEAD OFFICE: TOKYO BUILDING, 2-7-3, MARUNOUCHI, CHIYODA-KU, TOKYO100-8310, JAPAN

© Copyright 2026 MITSUBISHI ELECTRIC CORPORATION

Issued: Jul. 2026 No. OCH938B

Issued: Jun. 2026 No. OCH938A

Published: Apr. 2026 No. OCH938

Made in Japan

Specifications are subject to change without notice.

Air-Conditioners

PUMY-SM-VKM2 Series

PUMY-SM-VKM2-BS Series

PUMY-SM-VKM2-ET Series

PUMY-SM-VKM2-ET-BS Series

PUMY-SM-YKM2 Series

PUMY-SM-YKM2-BS Series

PUMY-SM-YKM2-ET Series

PUMY-SM-YKM2-ET-BS Series

For use with R32

INSTALLATION MANUAL	FOR INSTALLER	English
INSTALLATIONSHANDBUCH	FÜR INSTALLATEUR	Deutsch
MANUEL D'INSTALLATION	POUR L'INSTALLATEUR	Français
INSTALLATIEHANDLEIDING	VOOR DE INSTALLATEUR	Nederlands
MANUAL DE INSTALACIÓN	PARA EL INSTALADOR	Español
MANUALE DI INSTALLAZIONE	PER L'INSTALLATORE	Italiano
ΕΓΧΕΙΡΙΔΙΟ ΟΔΗΓΙΩΝ ΕΓΚΑΤΑΣΤΑΣΗΣ	ΓΙΑ ΑΥΤΟΝ ΠΟΥ ΚΑΝΕΙ ΤΗΝ ΕΓΚΑΤΑΣΤΑΣΗ	Ελληνικά
MANUAL DE INSTALAÇÃO	PARA O INSTALADOR	Português
INSTALLATIONS MANUAL	TIL INSTALLATØREN	Dansk
INSTALLATIONS MANUAL	FÖR INSTALLATÖREN	Svenska
MONTAJ EL KİTABI	MONTÖR İÇİN	Türkçe
ПОСІБНИК З УСТАНОВЛЕННЯ	ДЛЯ СПЕЦІАЛІСТА З МОНТАЖУ	Українська
РЪКОВОДСТВО ЗА МОНТАЖ	ЗА МОНТАЖНИКА	Български
INSTRUKCJA MONTAŻU	DLA INSTALATORA	Polski
INSTALLASJONSHÅNDBOK	FOR MONTØR	Norsk
ASENNUSOPAS	ASENTAJALLE	Suomi
INSTALAČNÍ PŘÍRUČKA	PRO MONTÁŽNÍ PRACOVNÍKY	Čeština
NÁVOD NA INŠTALÁCIU	PRE MONTÉRA	Slovenčina
TELEPÍTÉSI KÉZIKÖNYV	A TELEPÍTŐ RÉSZÉRE	Magyar
NAMESTITVENI PRIROČNIK	ZA MONTERJA	Slovenščina
MANUAL DE INSTALARE	PENTRU INSTALATOR	Română
PAIGALDUSJUHEND	PAIGALDAJALE	Eesti
MONTĀŽAS ROKASGRĀMATA	UZSTĀDĪŠANAS SPECIĀLISTAM	Latviski
MONTAVIMO VADOVAS	SKIRTA MONTUOTOJUI	Lietuviškai
PRIRUČNIK ZA POSTAVLJANJE	ZA INSTALATERA	Hrvatski
UPUTSTVO ZA UGRADNJU	ZA MONTERA	Srpski

1. Safety precautions.....	1	6. Electrical work	28
2. Installation location.....	4	7. Test run.....	47
3. Installing the outdoor unit	19	8. Special functions	51
4. Installing the refrigerant piping	19	9. Preventive maintenance for the unit.....	52
5. Drainage piping work.....	27	10. Specifications	52



Note: This symbol mark is for related countries only.

This symbol mark is according to the directive 2012/19/EU Article 14 Information for users and Annex IX.

Your MITSUBISHI ELECTRIC product is designed and manufactured with high quality materials and components which can be recycled and reused.

This symbol means that electrical and electronic equipment, at their end-of-life, should be disposed of separately from your household waste.

Please, dispose of this equipment at your local community waste collection/recycling centre.

In the European Union there are separate collection systems for used electrical and electronic product.

Please, help us to conserve the environment we live in!



 
Caution:

- Do not vent R32 into the atmosphere.

Confirmation of parts attached

In addition to this manual, the following part is supplied with the outdoor unit.

It is used for grounding the S terminal of transmission terminal block TB7. For details refer to "6. Electrical work".



Grounding lead wire

1. Safety precautions

- ▶ Before installing the unit, make sure you read all the "Safety precautions".
- ▶ Please report to or take consent by the supply authority before connection to the system.
- ▶ PUMY-SM-VKM series complying with IEC/EN 61000-3-12
- ▶ PUMY-SM-VKM series is designed for use in the residential, commercial and light-industrial environment.
- ▶ PUMY-SM-YKM series is designed as professional equipment.

After installation work has been completed, explain the "Safety Precautions," use, and maintenance of the unit to the customer according to the information in the Operation Manual and perform the test run to ensure normal operation. Both the Installation Manual and Operation Manual must be given to the user for keeping. These manuals must be passed on to subsequent users.



: Indicates a part which must be grounded.



Warning:

Carefully read the labels affixed to the main unit.



Warning:

Describes precautions that must be observed to prevent danger of injury or death to the user.



Caution:

Describes precautions that must be observed to prevent damage to the unit.

MEANINGS OF SYMBOLS DISPLAYED ON THE UNIT

	WARNING (Risk of fire)	This mark is for R32 refrigerant only. Refrigerant type is written on nameplate of outdoor unit. In case that refrigerant type is R32, this unit uses a flammable refrigerant. If refrigerant leaks and comes in contact with fire or heating part, it will create harmful gas and there is risk of fire.
	Read the OPERATION MANUAL carefully before operation.	
	Service personnel are required to carefully read the OPERATION MANUAL and INSTALLATION MANUAL before operation.	



Warning:

- The unit must not be installed by the user. Ask a dealer or an authorized technician to install the unit. If the unit is installed incorrectly, water leakage, electric shock, or fire may result.
- This appliance is intended to be used by expert or trained users in shops, in light industry and on farms, or for commercial use by lay persons.
- For installation work, follow the instructions in the Installation Manual and use tools and pipe components specifically made for use with R32 refrigerant. If pipe components not designed for R32 refrigerant are used and the unit is not installed correctly, the pipes may burst and cause damage or injuries. In addition, water leakage, electric shock, or fire may result.

- When installing the unit, use appropriate protective equipment and tools for safety. Failure to do so could cause injuries.
- The unit must be installed according to the instructions in order to minimize the risk of damage from earthquakes, typhoons, or strong winds. An incorrectly installed unit may fall down and cause damage or injuries.
- The unit must be securely installed on a structure that can sustain its weight. If the unit is mounted on an unstable structure, it may fall down and cause damage or injuries.

1. Safety precautions

- If the air conditioner is installed in a small room, measures must be taken to prevent the refrigerant concentration in the room from exceeding the safety limit in the event of refrigerant leakage. Consult a dealer regarding the appropriate measures to prevent the allowable concentration from being exceeded. Should the refrigerant leak and cause the concentration limit to be exceeded, hazards due to lack of oxygen in the room may result.
- Ventilate the room if refrigerant leaks during operation. If refrigerant comes into contact with a flame, it may ignite or poisonous gases will be released.
- All electric work must be performed by a qualified technician according to local regulations and the instructions given in this manual. The units must be powered by dedicated power lines and the correct voltage and circuit breakers must be used. Power lines with insufficient capacity or incorrect electrical work may result in electric shock or fire.
- Use C1220 copper phosphorus, for copper and copper alloy seamless pipes, to connect the refrigerant pipes. If the pipes are not connected correctly, the unit will not be properly grounded and electric shock may result.
- Use only specified cables for wiring. The wiring connections must be made securely with no tension applied on the terminal connections. Also, never splice the cables for wiring (unless otherwise indicated in this document). Failure to observe these instructions may result in overheating or a fire.
- The terminal block cover panel of the outdoor unit must be firmly attached. If the cover panel is mounted incorrectly and dust and moisture enter the unit, electric shock or fire may result.
- The appliance shall be installed in accordance with national wiring regulations.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- When installing or relocating, or servicing the air conditioner, use only the specified refrigerant (R32) to charge the refrigerant lines. Do not mix it with any other refrigerant and do not allow air to remain in the lines. If air is mixed with the refrigerant, then it can be the cause of abnormal high pressure in the refrigerant line, and may result in an explosion and other hazards. The use of any refrigerant other than that specified for the system will cause mechanical failure or system malfunction or unit breakdown. In the worst case, this could lead to a serious impediment to securing product safety.
- Do not perform pump down work when there is a gas leak. The intake of air or other gases causes abnormally high pressure in the refrigeration cycle, which may cause explosion or injury.
- Use only authorized accessories and ask a dealer or an authorized technician to install them. If accessories are incorrectly installed, water leakage, electric shock, or fire may result.
- Do not alter the unit. It may cause fire, electric shock, injury or water leakage.
- The user should never attempt to repair the unit or transfer it to another location. If the unit is installed incorrectly, water leakage, electric shock, or fire may result. If the air conditioner must be repaired or moved, ask a dealer or an authorized technician.
- After installation has been completed, check for refrigerant leaks. If refrigerant leaks into the room and comes into contact with the flame of a heater or portable cooking range, it may ignite or poisonous gases will be released.
- When opening or closing the valve below freezing temperatures, refrigerant may spurt out from the gap between the valve stem and the valve body, resulting in injuries.
- Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer.
- The appliance shall be stored in a room without continuously operating ignition sources (for example: open flames, an operating gas appliance or an operating electric heater).
- Do not pierce or burn.
- Be aware that refrigerants might not contain an odour.
- Pipe-work shall be protected from physical damage.
- The installation of pipe-work shall be kept to a minimum.
- Compliance with national gas regulations shall be observed.
- Keep any required ventilation openings clear of obstruction.
- Do not use low temperature solder alloy in case of brazing the refrigerant pipes.
- When performing brazing work, be sure to ventilate the room sufficiently. Make sure that there are no hazardous or flammable materials nearby. When performing the work in a closed room, small room, or similar location, make sure that there are no refrigerant leaks before performing the work. If refrigerant leaks and accumulates, it may ignite or poisonous gases may be released.
- The appliance shall be stored in a well-ventilated area where the room size corresponds to the room area as specified for operation.
- Keep gas-burning appliances, electric heaters, and other fire sources (ignition sources) away from the location where installation, repair, and other air conditioner work will be performed. If refrigerant comes into contact with a flame, fire may result and poisonous gases will be released.
- Do not smoke during work and transportation.
- When installing or removing the air conditioner, carry the refrigerant leak detector.
- For safety purposes, be sure always keep the power on, except during maintenance.
- Refrigerant pipes must be protected against external force.

en

1.1. Before installation



- **Caution:**
- Do not use the unit in an unusual environment. If the air conditioner is installed in areas exposed to steam, volatile oil (including machine oil), or sulfuric gas, areas exposed to high salt content such as the seaside, or areas where the unit will be covered by snow, the performance can be significantly reduced and the internal parts can be damaged.
- Do not install the unit where combustible gases may leak, be produced, flow, or accumulate. If combustible gas accumulates around the unit, fire or explosion may result.
- The outdoor unit produces condensation during the heating operation. Make sure to provide drainage around the outdoor unit if such condensation is likely to cause damage.
- When installing the unit in a hospital or communications office, be prepared for noise and electronic interference. Inverters, home appliances, high-frequency medical equipment, and radio communications equipment can cause the air conditioner to malfunction or breakdown. The air conditioner may also affect medical equipment, disturbing medical care, and communications equipment, harming the screen display quality.
- Follow the instructions below to prevent abrasive components contained in sandpaper and cutting tools from entering the refrigerant circuit because those components can cause failures of the compressor and valves.
 - To deburr pipes, use a reamer or other deburring tools, not sandpaper.
 - To cut pipes, use a pipe cutter, not a grinder or other tools that use abrasive materials.
 - When cutting or deburring pipes, do not allow cutting chips or other foreign matters to enter the pipes.
 - If cutting chips or other foreign matters enter pipes, wipe them off the inside of the pipes.

1. Safety precautions

1.2. Before installation (relocation)

-  Caution:
- Be extremely careful when transporting the units. Two or more persons are needed to handle the unit, as it weighs 20 kg or more. Do not grasp the packaging bands. Wear protective gloves to remove the unit from the packaging and to move it, as you can injure your hands on the fins or other parts.
 - Be sure to safely dispose of the packaging materials. Packaging materials, such as nails and other metal or wooden parts may cause stabs or other injuries.
 - The base and attachments of the outdoor unit must be periodically checked for looseness, cracks or other damage. If such defects are left uncorrected, the unit may fall down and cause damage or injuries.
- Do not clean the air conditioner unit with water. Electric shock may result.
 - Tighten all flare nuts to specification using a torque wrench. If tightened too much, the flare nut can break after an extended period and refrigerant can leak out.

1.3. Before electric work

-  Caution:
- Be sure to install circuit breakers. If not installed, electric shock may result.
 - For the power lines, use standard cables of sufficient capacity. Otherwise, a short circuit, overheating, or fire may result.
 - When installing the power lines, do not apply tension to the cables. If the connections are loosened, the cables can snap or break and overheating or fire may result.
- Be sure to ground the unit. Do not connect the ground wire to gas or water pipes, lightning rods, or telephone grounding lines. If the unit is not properly grounded, electric shock may result.
 - Use circuit breakers (ground fault interrupter, isolating switch (+B fuse), and molded case circuit breaker) with the specified capacity. If the circuit breaker capacity is larger than the specified capacity, breakdown or fire may result.

1.4. Before starting the test run

-  Caution:
- Turn on the main power switch more than 12 hours before starting operation. Starting operation just after turning on the power switch can severely damage the internal parts. Keep the main power switch turned on during the operation season.
 - Before starting operation, check that all panels, guards and other protective parts are correctly installed. Rotating, hot, or high voltage parts can cause injuries.
 - Do not touch any switch with wet hands. Electric shock may result.
- Do not touch the refrigerant pipes with bare hands during operation. The refrigerant pipes are hot or cold depending on the condition of the flowing refrigerant. If you touch the pipes, burns or frostbite may result.
 - After stopping operation, be sure to wait at least five minutes before turning off the main power switch. Otherwise, water leakage or breakdown may result.

1.5. Using R32 refrigerant air conditioners

-  Caution:
- Use C1220 copper phosphorus, for copper and copper alloy seamless pipes, to connect the refrigerant pipes. Make sure the insides of the pipes are clean and do not contain any harmful contaminants such as sulfuric compounds, oxidants, debris, or dust. Use pipes with the specified thickness. (Refer to 4.1.) Note the following if reusing existing pipes that carried R22 refrigerant.
 - Replace the existing flare nuts and flare the flared sections again.
 - Do not use thin pipes. (Refer to 4.1.)
 - Store the pipes to be used during installation indoors and keep both ends of the pipes sealed until just before brazing. (Leave elbow joints, etc. in their packaging.) If dust, debris, or moisture enters the refrigerant lines, oil deterioration or compressor breakdown may result.
 - Servicing shall be performed only as recommended by the manufacturer.
 - Use ester oil, ether oil, alkylbenzene oil (small amount) as the refrigeration oil applied to the flared sections. If mineral oil is mixed in the refrigeration oil, oil deterioration may result.
- Do not use refrigerant other than R32 refrigerant. If another refrigerant is used, the chlorine will cause the oil to deteriorate.
 - Use the following tools specifically designed for use with R32 refrigerant. The following tools are necessary to use R32 refrigerant. Contact your nearest dealer for any questions.

Tools (for R32)	
Gauge manifold	Flare tool
Charge hose	Size adjustment gauge
Gas leak detector	Vacuum pump adapter
Torque wrench	Electronic refrigerant charging scale

- Be sure to use the correct tools. If dust, debris, or moisture enters the refrigerant lines, refrigeration oil deterioration may result.

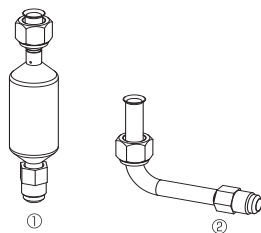


Fig. 1-1

1.6. Accessories of outdoor unit (Fig. 1-1)

The piping in the figure on the left is included. Use it in connection with the on-site piping. Refer to 4.2.

- ① Mufflerx1
- ② Joint pipe-Lx1

2. Installation location

2.1. Refrigerant pipe

Refer to Fig. 4-3, 4-4, 4-5.

2.2. Choosing the outdoor unit installation location

- R32 is heavier than air—as well as other refrigerants—so tends to accumulate at the base (in the vicinity of the floor). If R32 accumulates around base, it may reach a flammable concentration in case room is small. To avoid ignition, maintaining a safe work environment is required by ensuring appropriate ventilation. If a refrigerant leak is confirmed in a room or an area where there is insufficient ventilation, refrain from using of flames until the work environment can be improved by ensuring appropriate ventilation.
- Avoid locations exposed to direct sunlight or other sources of heat.
- Select a location from which noise emitted by the unit will not inconvenience neighbors.
- Select a location permitting easy wiring and pipe access to the power source and indoor unit.
- Avoid locations where combustible gases may leak, be produced, flow, or accumulate.
- Note that water may drain from the unit during operation.
- Select a level location that can bear the weight and vibration of the unit.
- Avoid locations where the unit can be covered by snow. In areas where heavy snow fall is anticipated, special precautions such as raising the installation location or installing a hood on the air intake must be taken to prevent the snow from blocking the air intake or blowing directly against it. This can reduce the airflow and a malfunction may result.
- Avoid locations exposed to oil, steam, or sulfuric gas.
- Use the transportation handles of the outdoor unit to transport the unit. If the unit is carried from the bottom, hands or fingers may be pinched.
- Refrigerant pipes connection shall be accessible for maintenance purposes.
- Install outdoor units in a place where at least one of the four sides is open, or in a sufficiently large space without depressions. (Fig. 2-1)
- Do not install the outdoor unit at the inside of building such as a basement or machinery room, where the refrigerant stagnates.

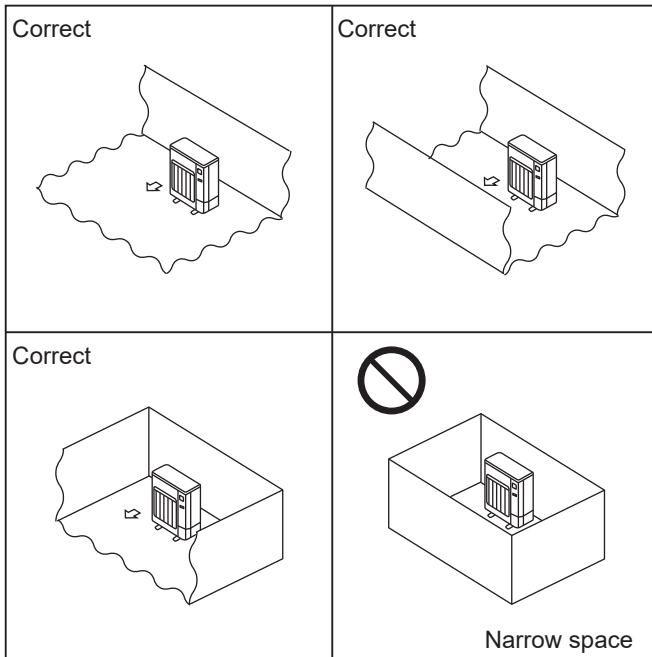


Fig. 2-1

2. Installation location

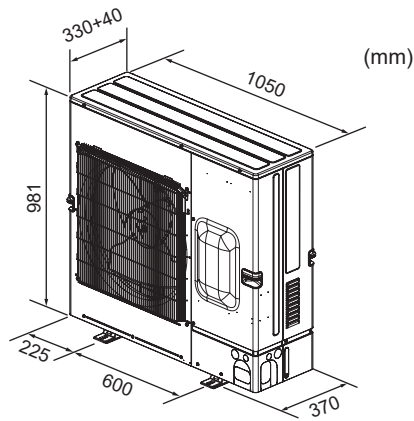


Fig. 2-2

2.3. Outline dimensions (Outdoor unit) (Fig. 2-2)

Constraints on indoor unit installation

You should note that indoor units that can be connected to this outdoor unit are the following models.

- Indoor units with model numbers 10-140 can be connected.
- When using Branch box, Indoor units with model numbers 15-100 can be connected.
- Refer to the table 1 below for possible room, indoor unit combinations.

Verification

The rated capacity should be determined by observing the table below. The unit's quantities are limited as shown in the following table 2. For the next step, make sure that the total rated capacity selected will stay in a range of 50% – 130% of the outdoor unit capacity.

- PUMY-SM112 6.3 – 16.2 kW
- PUMY-SM125 7.1 – 18.2 kW
- PUMY-SM140 8.0 – 20.2 kW

Table 1-1 City Multi indoor units

Indoor unit type	10	15	20	22	25	28	32	36	40	45	50	56	63
Rated capacity (Cooling) (kW)	1.2	1.7	2.2	2.5	2.8	3.2	3.6	4.0	4.5	5.0	5.6	6.3	7.1

Indoor unit type	71	80	100	125	140
Rated capacity (Cooling) (kW)	8.0	9.0	11.2	14.0	16.0

Table 1-2 M, S, P series

Indoor unit type	15	20	22	25	35	42	50	60	71	80	100
Rated capacity (Cooling) (kW)	1.5	2.0	2.2	2.5	3.5	4.2	5.0	6.0	7.1	8.0	10.0

Table 2 Connectable indoor units and Branch boxes quantities

Model	Only system					
	Only City Multi indoor units (Connection without Branch box)	Only M, S, P series indoor units (Connection with Branch box)				
		One Branch box		Two Branch boxes		
		4-Branch box × 1	6-Branch box × 1	4-Branch box × 2	4-Branch box × 1 6-Branch box × 1	6-Branch box × 2
PUMY-SM112	Max. 12	Max. 8				
PUMY-SM125	Max. 12	Max. 8				
PUMY-SM140	Max. 12	Max. 8				

Model	Mixed system									
	One Branch box				Two Branch boxes					
	4-Branch box × 1		6-Branch box × 1		4-Branch box × 2		4-Branch box × 1 6-Branch box × 1		6-Branch box × 2	
	M, S, P	City Multi	M, S, P	City Multi	M, S, P	City Multi	M, S, P	City Multi	M, S, P	City Multi
PUMY-SM112	Max. 4	Max. 5	Max. 6	Max. 3	Max. 8	Max. 3	Max. 8	Max. 2	Not allowed	
PUMY-SM125	Max. 4	Max. 5	Max. 6	Max. 3	Max. 8	Max. 3	Max. 8	Max. 2		
PUMY-SM140	Max. 4	Max. 5	Max. 6	Max. 3	Max. 8	Max. 3	Max. 8	Max. 2		

Combinations in which the total capacity of indoor units exceeds the capacity of the outdoor unit will reduce the cooling capacity of each indoor unit below their rated cooling capacity.

Thus, combine indoor units with an outdoor unit within the outdoor unit's capacity, if possible.

2. Installation location

2.4. Ventilation and service space

Note:

The dimensions given along the arrows below are required to guarantee the air conditioner's performance. Install the unit in as wide a place as possible for later service or repairs.

2.4.1. When installing a single outdoor unit

Minimum dimensions are as follows, except for Max., meaning Maximum dimensions, indicated.

Refer to the figures for each case.

- ① Obstacles at rear only (Fig. 2-3)
- ② Obstacles at rear and above only (Fig. 2-4)
- ③ Obstacles at rear and sides only (Fig. 2-5)
- ④ Obstacles at front only (Fig. 2-6)
- * When using an optional air outlet guide, the clearance is 500 mm or more.
- ⑤ Obstacles at front and rear only (Fig. 2-7)
- * When using an optional air outlet guide, the clearance is 500 mm or more.
- ⑥ Obstacles at rear, sides, and above only (Fig. 2-8)
- * Do not install the optional air outlet guides for upward airflow.

2.4.2. When installing multiple outdoor units

Leave 25 mm space or more between the units.

- ① Obstacles at rear only (Fig. 2-9)
- ② Obstacles at rear and above only (Fig. 2-10)
 - * No more than 3 units must be installed side by side. In addition, leave space as shown.
 - * Do not install the optional air outlet guides for upward airflow.
- ③ Obstacles at front only (Fig. 2-11)
 - * When using an optional air outlet guide, the clearance is 1000 mm or more.
- ④ Obstacles at front and rear only (Fig. 2-12)
 - * When using an optional air outlet guide, the clearance is 1000 mm or more.
- ⑤ Single parallel unit arrangement (Fig. 2-13)
 - * When using an optional air outlet guide installed for upward airflow, the clearance is 1000 mm or more.
- ⑥ Multiple parallel unit arrangement (Fig. 2-14)
 - * When using an optional air outlet guide installed for upward airflow, the clearance is 1500 mm or more.
- ⑦ Stacked unit arrangement (Fig. 2-15)
 - * The units can be stacked up to 2 units high.
 - * No more than 2 stacked units must be installed side by side. In addition, leave space as shown.

UNIT: mm

en

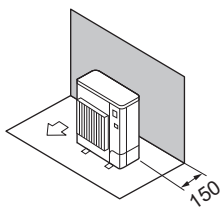


Fig. 2-3

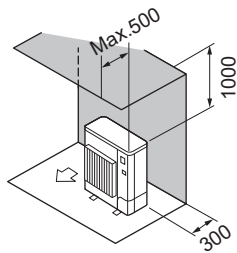


Fig. 2-4

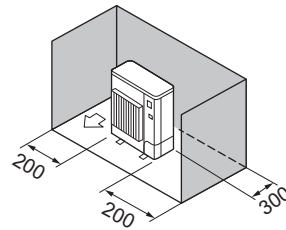


Fig. 2-5

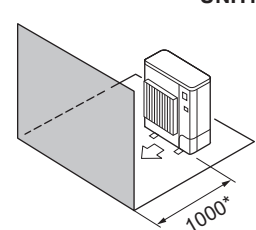


Fig. 2-6

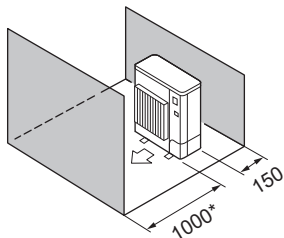


Fig. 2-7

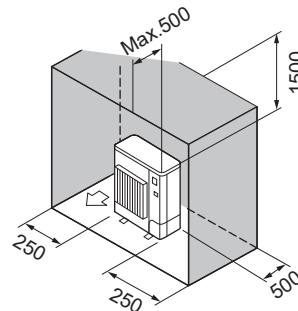


Fig. 2-8

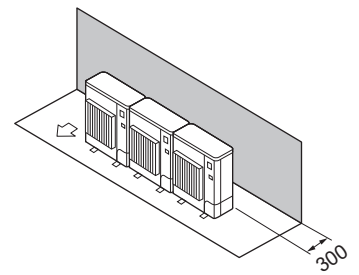


Fig. 2-9

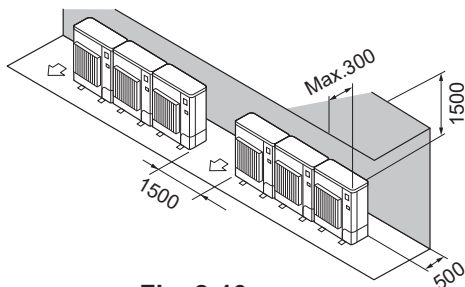


Fig. 2-10

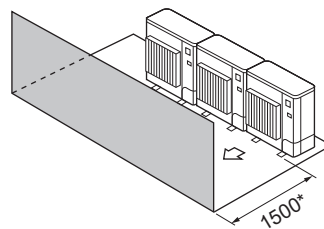


Fig. 2-11

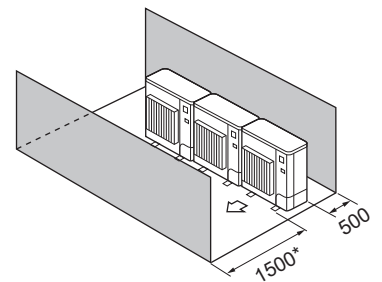


Fig. 2-12

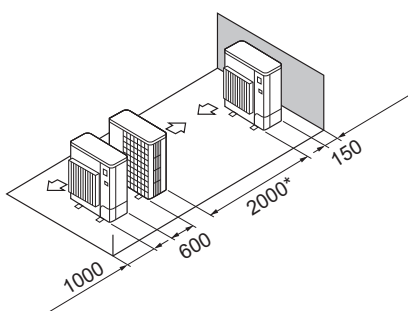


Fig. 2-13

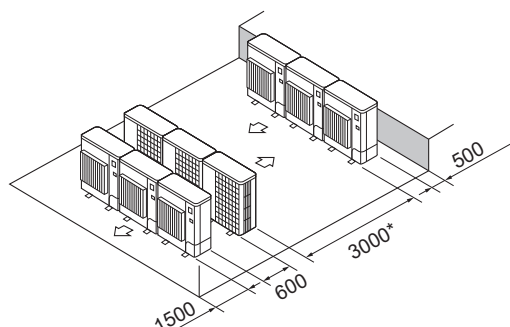


Fig. 2-14

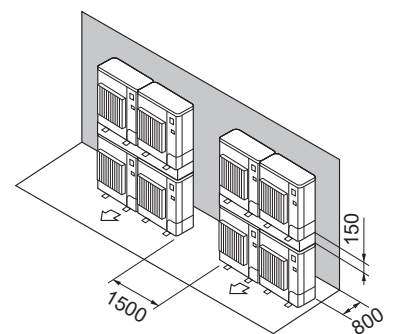


Fig. 2-15

2. Installation location

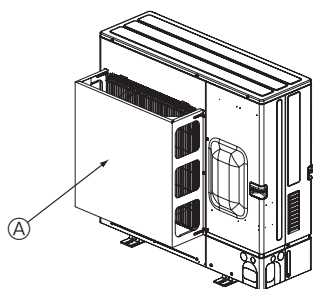


Fig. 2-16

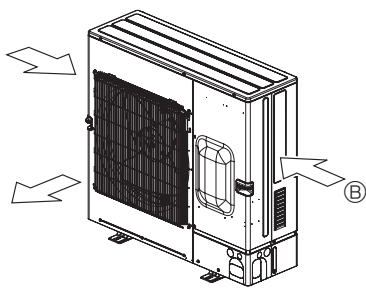


Fig. 2-17

2.4.3. Windy location installation

When installing the outdoor unit on a rooftop or other location unprotected from the wind, situate the air outlet of the unit so that it is not directly exposed to strong winds. Strong wind entering the air outlet may impede the normal airflow and a malfunction may result.

The following shows two examples of precautions against strong winds.

- ① Install an optional air protect guide if the unit is installed in a location where strong winds from a typhoon, etc. may directly enter the air outlet. (Fig. 2-16)

Ⓐ Air protect guide

- ② Position the unit so that the air outlet blows perpendicularly to the seasonal wind direction, if possible. (Fig. 2-17)

Ⓑ Wind direction

2. Installation location

2.5. Minimum installation area

■ Indoor units

Install in a room with a floor area of $A_{\min}$ or more, corresponding to refrigerant quantity m (factory-charged refrigerant + locally added refrigerant).

* For the factory-charged refrigerant amount, refer to the spec nameplate or installation manual.





For the amount to be added locally, refer to the installation manual.

Install the indoor unit so that the height from the floor to the bottom of the indoor unit is h_0 .

For wall mounted: 1.8 m or more

For ceiling suspended, cassette and ceiling concealed: 2.5 m or more

* There are restrictions in installation height for each model, so read the installation manual for the particular unit.

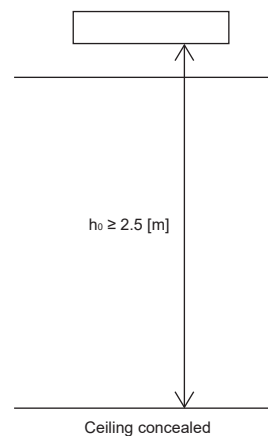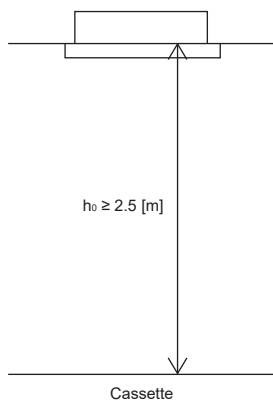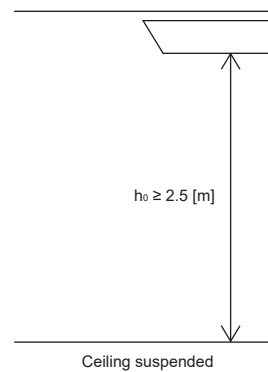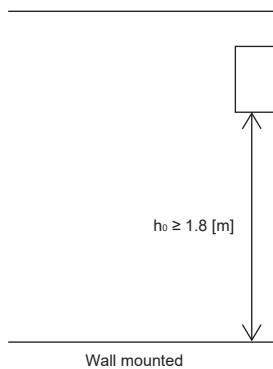

2. Installation location

en

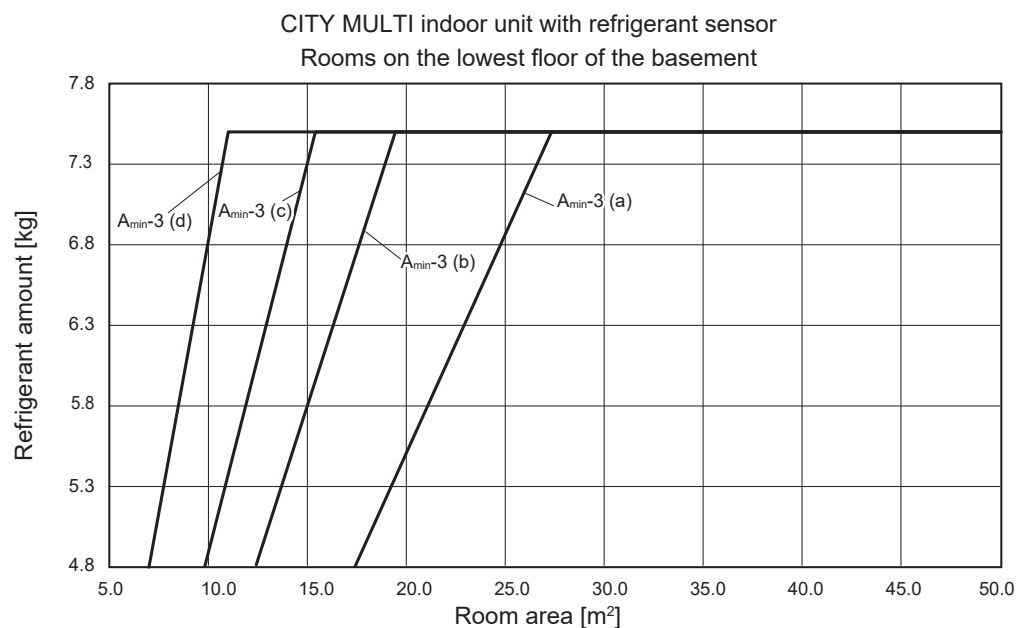
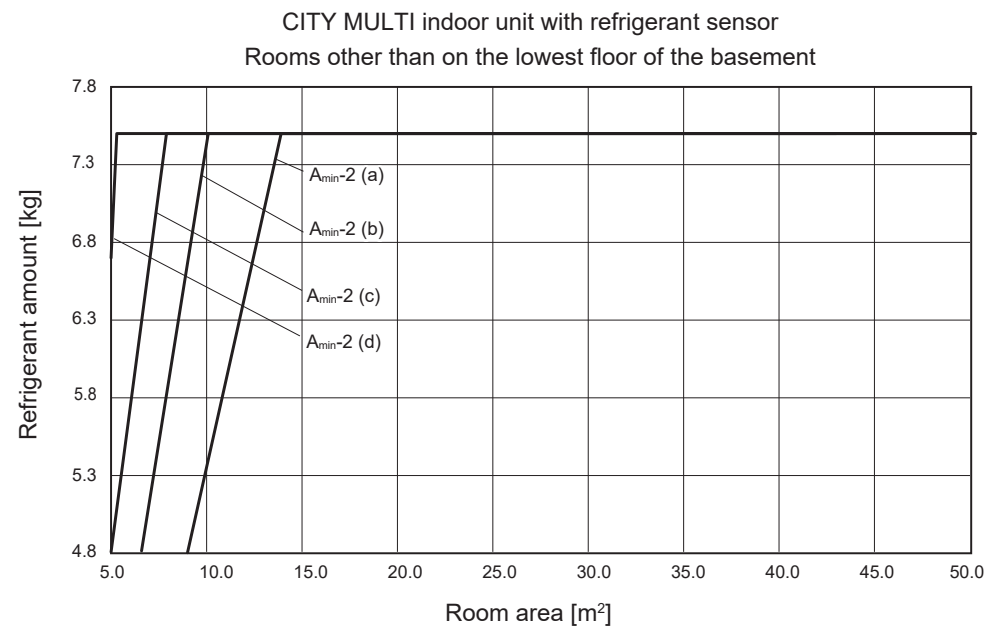
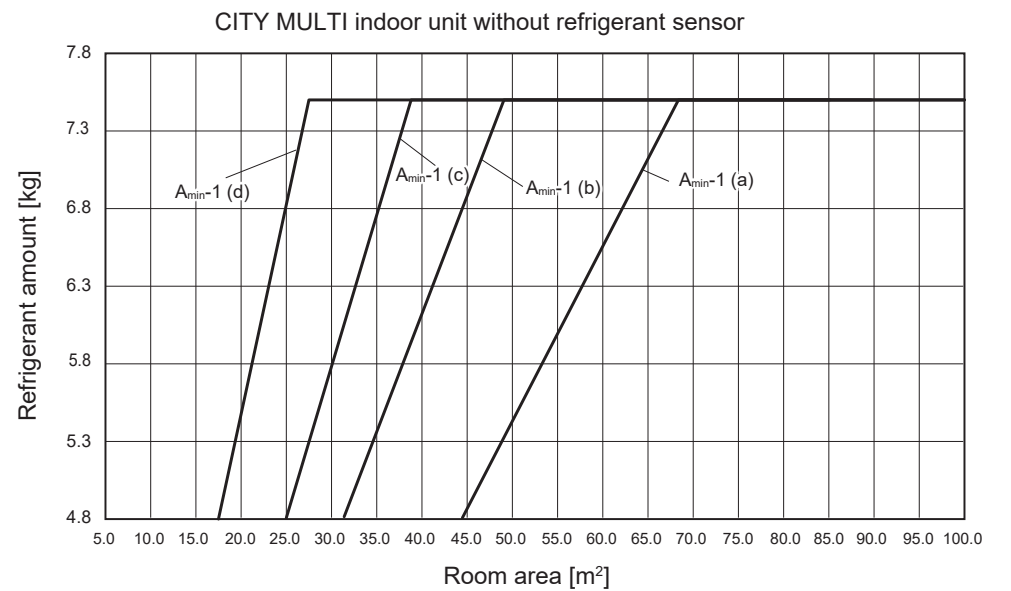


Fig. 2-18

2. Installation location

CITY MULTI indoor unit without refrigerant sensor								CITY MULTI indoor unit with refrigerant sensor or Branch Box system (With the SENSOR AND ALARM KIT connection)															
								Rooms other than on the lowest floor of the basement								Rooms on the lowest floor of the basement							
Installation height [m]								Installation height [m]								Installation height [m]							
1.8		2.5		3.2		4.5		1.8		2.5		3.2		4.5		1.8		2.5		3.2		4.5	
Amin-1(a)		Amin-1(b)		Amin-1(c)		Amin-1(d)		Amin-2(a)		Amin-2(b)		Amin-2(c)		Amin-2(d)		Amin-3(a)		Amin-3(b)		Amin-3(c)		Amin-3(d)	
Amin	Mmax	Amin	Mmax	Amin	Mmax	Amin	Mmax	Amin	Mmax	Amin	Mmax	Amin	Mmax	Amin	Mmax	Amin	Mmax	Amin	Mmax	Amin	Mmax	Amin	Mmax
[m ²]	[kg]	[m ²]	[kg]	[m ²]	[kg]	[m ²]	[kg]	[m ²]	[kg]	[m ²]	[kg]	[m ²]	[kg]	[m ²]	[kg]	[m ²]	[kg]	[m ²]	[kg]	[m ²]	[kg]	[m ²]	[kg]
-	-	-	-	-	-	17.5	4.8	-	-	-	-	5.0	4.8	5.0	6.7	-	-	-	-	-	-	-	-
-	-	-	-	-	-	20.0	5.4	-	-	-	-	6.0	5.7	5.4	7.2	-	-	-	-	-	-	-	-
-	-	-	-	25.0	4.8	25.0	6.8	-	-	6.4	4.8	7.0	6.7	5.6	7.5	-	-	-	-	-	-	-	-
-	-	31.5	4.8	30.0	5.8	27.5	7.5	-	-	7.0	5.2	7.9	7.5	100.0	7.5	-	-	-	-	-	-	7.0	4.8
-	-	35.0	5.3	35.0	6.8	100.0	7.5	-	-	8.0	6.0	100.0	7.5			-	-	-	-	-	-	8.0	5.5
44.0	4.8	40.0	6.1	38.8	7.5			9.0	4.8	9.0	6.7					-	-	-	-	9.9	4.8	9.0	6.2
45.0	4.9	45.0	6.8	100.0	7.5			10.0	5.4	10.0	7.5					-	-	-	-	10.0	4.9	10.0	6.9
50.0	5.4	49.2	7.5					11.0	5.9	100.0	7.5					-	-	-	-	11.0	5.4	11.0	7.5
55.0	6.0	100.0	7.5					12.0	6.4							-	-	12.6	4.8	12.0	5.8	100.0	7.5
60.0	6.5							13.0	7.0							-	-	13.0	4.9	13.0	6.3		
65.0	7.1							13.9	7.5							-	-	14.0	5.3	14.0	6.8		
68.4	7.5							100.0	7.5							-	-	15.0	5.7	15.0	7.3		
100.0	7.5															17.5	4.8	16.0	6.1	15.4	7.5		
																18.0	4.9	17.0	6.5	100.0	7.5		
																19.0	5.2	18.0	6.9				
																20.0	5.5	19.0	7.2				
																21.0	5.8	19.6	7.5				
																22.0	6.0	100.0	7.5				
																23.0	6.3						
																24.0	6.6						
																25.0	6.9						
																26.0	7.1						
																27.0	7.4						
																27.2	7.5						
																100.0	7.5						

• Installation height ≥ 1.8 m

• Mmax = Installation height $\times$ Amin $\times 0.061$
Amin ≥ 5 m²

• Installation height ≥ 1.8 m

• Mmax = Installation height $\times$ Amin $\times 0.3$
Amin ≥ 5 m²

• Installation height ≥ 1.8 m

• Mmax = Installation height $\times$ Amin $\times 0.307/2$
Amin ≥ 5 m²

Fig. 2-19

2. Installation location

2.6. Precautions for R32 system

This air conditioner unit uses a mildly flammable R32 refrigerant.

This system is supported by the safety standard complying with the Enhanced Tightness Refrigerant System of IEC60335-2-40.

Install the unit according to the following requirements so that the system can satisfy the standards.

- For piping connection, use the mechanical joint (brazing and flare connection, etc.) complying with the latest version of ISO14903.

Ensure that the piping installed in a room is securely protected from damage due to an external force.

- Be sure to install an indoor unit in a room where the conditions in Figs. 2-18/19 are satisfied.

Install an indoor unit with refrigerant sensor or the SENSOR AND ALARM KIT depending on the conditions. Refer to 2.7. for the detail.

<When the system requires the SENSOR ALARM KIT connection>

- For the Branch box system, be sure to install the SENSOR AND ALARM KIT for each indoor unit.
- Install the SENSOR AND ALARM KIT into the specified area within 30 cm above a floor. Refer to the installation manual of the SENSOR AND ALARM KIT for the detail.
- Never install the Branch box in a room.
- Ensure that the Branch box is installed above the ceiling of corridor, bath room, etc., where persons are not regularly there.
Do not provide any vent or mesh between the space where the Branch box will be installed and the room below it.
- Install the Supervisor Alarm based on the standards in IEC60335-2-40 when it is required such as in a hotel or a hospital.
The mode of the SENSOR AND ALARM KIT can be changed to the Sensor and alarm mode or Supervisor mode.
For the setting when the Supervisor Alarm is connected, refer to the installation manual of the Branch box and SENSOR AND ALARM KIT.
- When the sensor detects the refrigerant leakage, the system closes the shut-off valve and performs refrigerant recovery while the alarm sounds.
Take appropriate measures in a service because the air conditioner cannot be operated again after the refrigerant recovery operation.
- The sensor must be replaced after it detects a refrigerant leak. Refer to the installation manual of the SENSOR AND ALARM KIT for the detail.


Precautions for the system connection

- For the Branch box system, install the SENSOR AND ALARM KIT for each indoor unit.

Note:

For the Branch box system, the air conditioner does not operate if the SENSOR AND ALARM KIT is not installed for each indoor unit.


The CITY MULTI indoor unit without refrigerant sensor can be installed as long as the minimum installation area A_{min-1} is satisfied.

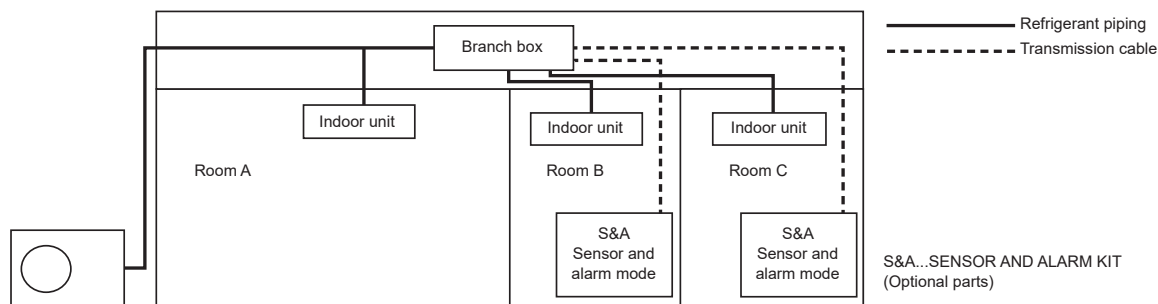

- The Supervisor Alarm is necessary for the environment required in IEC60335-2-40 such as in a place where the movement of people is limited (a hospital, etc.) or where there is a sleeping facility (a hotel, etc.).


The mode must be set to the Supervisor mode when the SENSOR AND ALARM KIT is used as the Supervisor Alarm.

Refer to the installation manual of the SENSOR AND ALARM KIT for the detail.

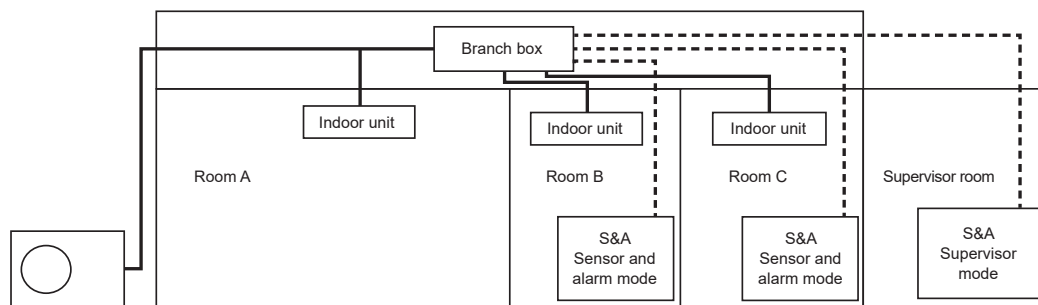


- If the Supervisor room also has an indoor unit with the same refrigerant system, set the Supervisor mode and Sensor and alarm mode and install the SENSOR AND ALARM KIT respectively.

Refer to the installation manual of the SENSOR AND ALARM KIT for the detail.

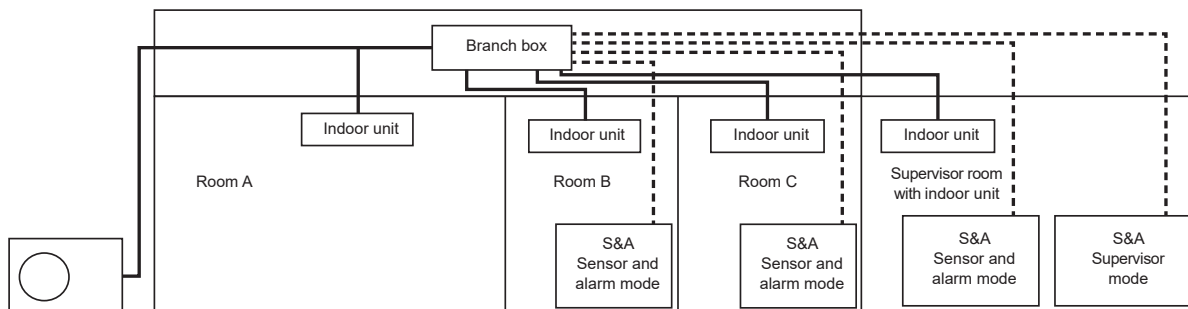


2. Installation location


- Be sure to install the SENSOR AND ALARM KIT for each indoor unit when the Branch box is connected in the system.
When multiple indoor units are installed in a room, install the SENSOR AND ALARM KIT for each indoor unit.

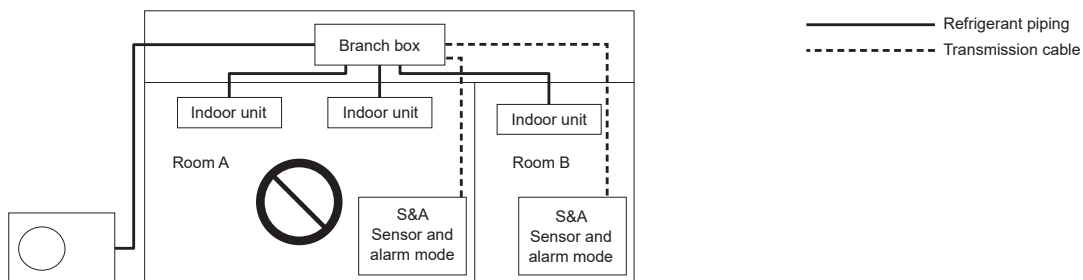


- Be sure to set the mode of the SENSOR AND ALARM KIT to the Supervisor mode when the Supervisor Alarm is connected.

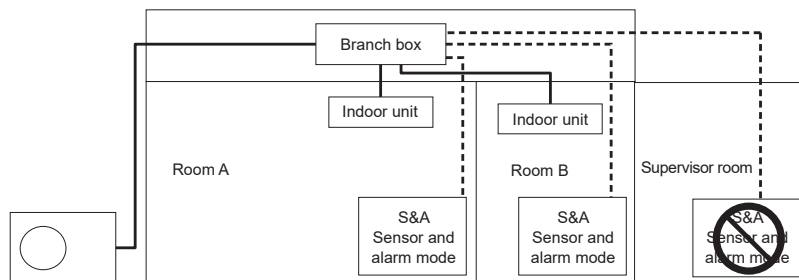


- Be sure to install the SENSOR AND ALARM KIT in the room where an indoor unit is installed.

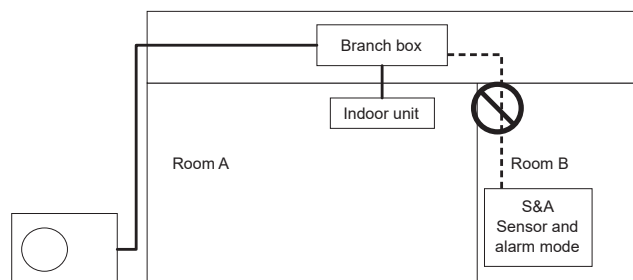

- Do not install the Branch box in a room.

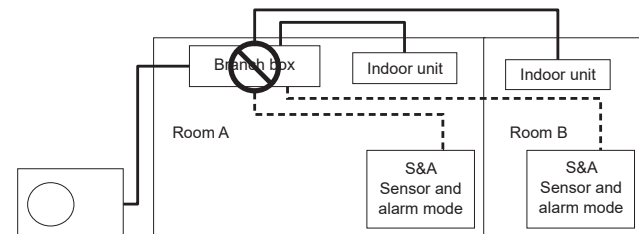

- Do not install an indoor unit across a number of rooms.

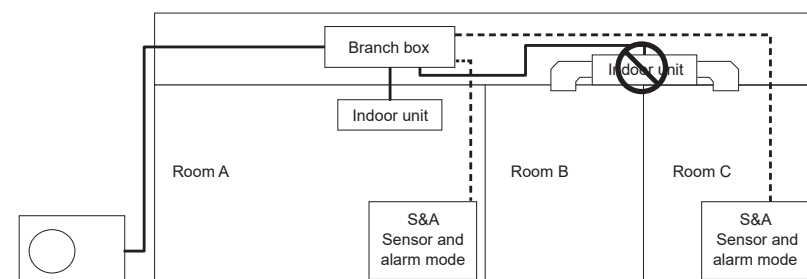

2. Installation location

<When the system requires the connection of the CITY MULTI indoor unit with refrigerant sensor>

- For the CITY MULTI indoor unit with refrigerant sensor, be sure to connect the MA remote controller with alarm for each indoor unit.
- Install the Supervisor Alarm based on the standards in IEC60335-2-40 when it is required such as in a hotel or a hospital.

The mode of the MA remote controller with alarm can be changed to the Main Remote Controller mode or Supervisor Remote Controller mode.


For the setting when the MA remote controller in Supervisor Remote Controller mode is connected, refer to the installation manual of the CITY MULTI indoor unit with refrigerant sensor and the MA remote controller with alarm.

- When the sensor detects the refrigerant leakage, the system closes the shut-off valve and performs refrigerant recovery while the alarm sounds. Take appropriate measures in a service because the air conditioner cannot be operated again after the refrigerant recovery operation.
- The sensor must be replaced after it detects a refrigerant leak. Refer to the installation manual of the CITY MULTI indoor unit with refrigerant sensor for the detail.


Note:

For the CITY MULTI indoor unit with refrigerant sensor, the air conditioner does not operate if the MA remote controller with alarm is not installed for each indoor unit.


The CITY MULTI indoor unit without refrigerant sensor can be installed as long as the minimum installation area $A_{\min-1}$ is satisfied.

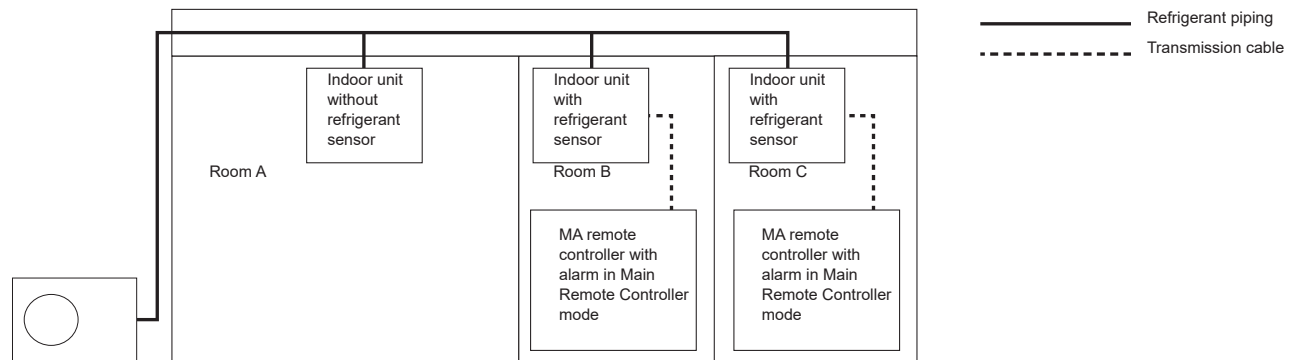

- The Supervisor Alarm is necessary for the environment required in IEC60335-2-40 such as in a place where the movement of people is limited (a hospital, etc.) or where there is a sleeping facility (a hotel, etc.).
- The mode must be set to the Supervisor Remote Controller mode when the MA remote controller with alarm is used as the Supervisor Alarm. Refer to the installation manual of the MA remote controller with alarm for the detail.

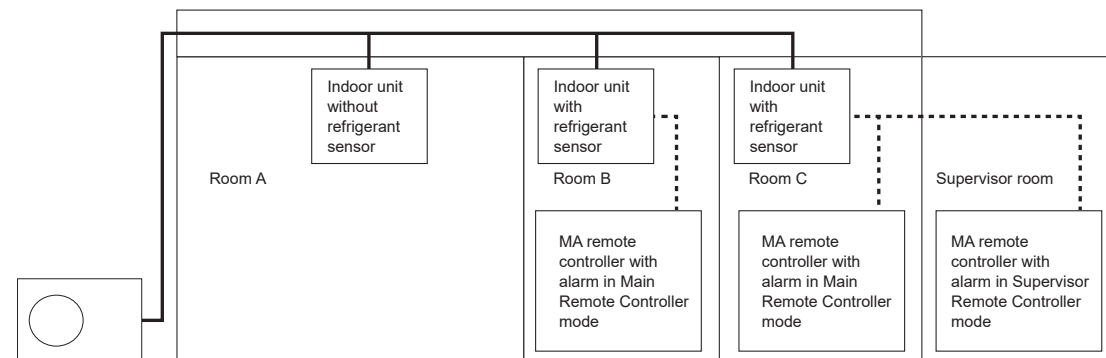


- If the Supervisor room also has an indoor unit with the same refrigerant system, set the Supervisor Remote Controller mode and Main Remote Controller mode and install the MA remote controller with alarm respectively. Refer to the installation manual of the MA remote controller with alarm for the detail.

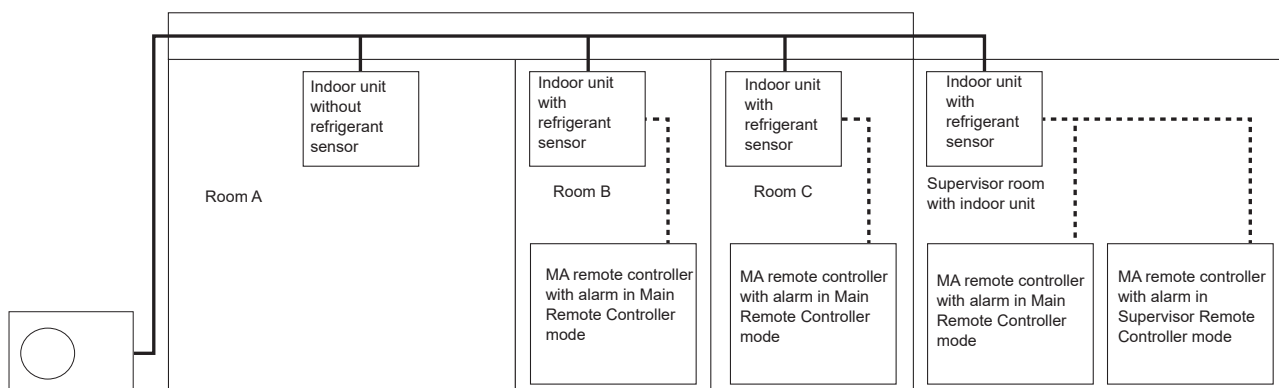


2. Installation location


- Be sure to install the MA remote controller with alarm for each indoor unit when the CITY MULTI indoor unit with refrigerant sensor is connected in the system. When multiple CITY MULTI indoor units with refrigerant sensor are installed in a room, install the MA remote controller with alarm for each indoor unit.

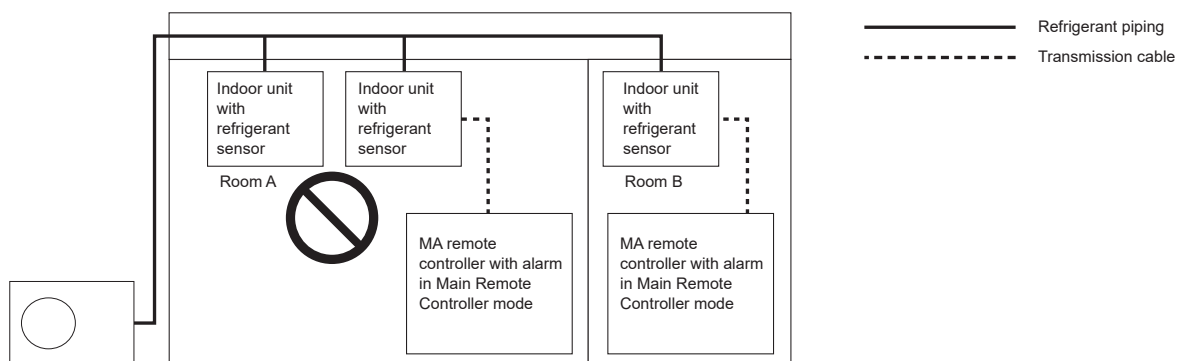


- Be sure to set the mode of the MA remote controller with alarm to the Supervisor Remote Controller mode when the Supervisor Alarm is connected.

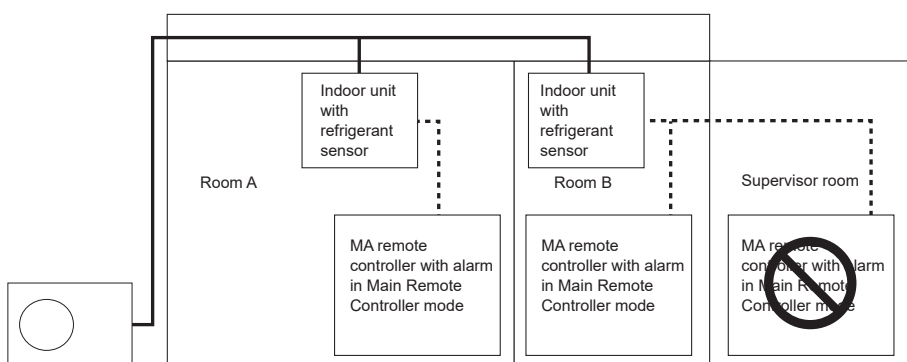

- Be sure to install the MA remote controller with alarm in the room where an indoor unit is installed.

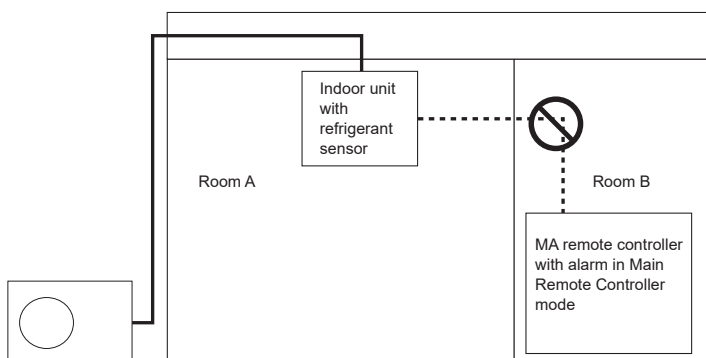

- Do not install an indoor unit across a number of rooms.

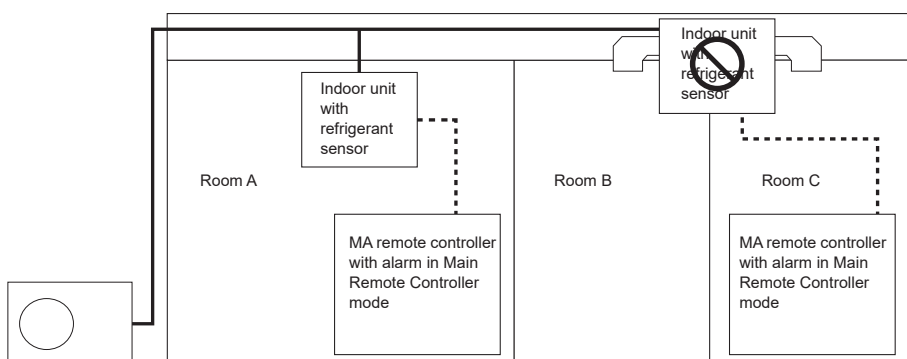

2. Installation location

2.7. Calculation of the minimum installation area

The maximum allowable refrigerant amount is calculated based on the floor area of each room where the system is connected so that the system can satisfy the safety standards.

Use Figs. 2-18/19 to calculate the maximum allowable refrigerant amount for the smallest room where the CITY MULTI indoor unit without refrigerant sensor or the CITY MULTI indoor unit with refrigerant sensor or the Branch box system (with the SENSOR AND ALARM KIT connection) is to be installed.


<Case 1: CITY MULTI indoor unit without refrigerant sensor>

1. Confirm the installation height of indoor units. Depending on the installation height, select the value from A_{min}-1 (a) to (d).

Note:

The wall-mounted unit cannot be installed in the area lower than 1.8 m, and the other indoor units cannot be installed in the area lower than 2.5 m.

2. Calculate the maximum allowable refrigerant amount " $m_{\max}$ " for the smallest room.
3. Calculate the refrigerant amount in the system according to 4.8.
4. An indoor unit can be installed if the refrigerant amount in the system " m " is less than " $m_{\max}$ ".
Review the system if the condition is not satisfied.

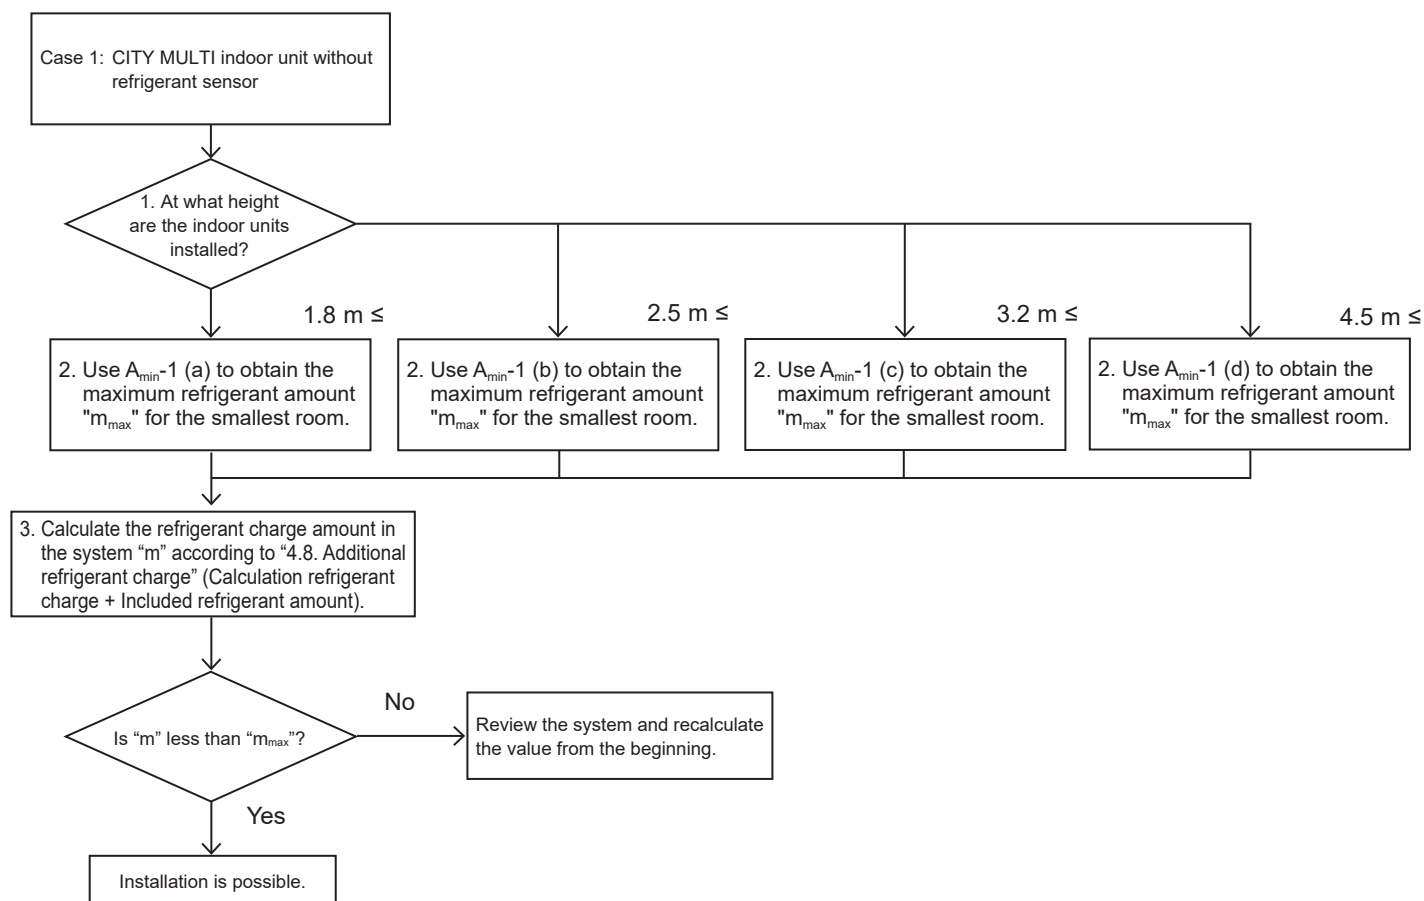

2. Installation location

<Case 2: CITY MULTI indoor unit with refrigerant sensor or Branch box system (with the SENSOR AND ALARM KIT connection)>

For rooms on the lowest floor of the basement and rooms on the other floors, calculate each maximum allowable refrigerant amount for the minimum installation area and select the smallest value.


1. Confirm whether or not indoor units are installed in the rooms on the lowest floor of the basement.
2. Confirm the installation height of the indoor units when the indoor units are installed in the rooms on the lowest floor of the basement.

Depending on the installation height, select the value from Amin-3 (a) to (d).


Note:

The wall-mounted unit cannot be installed in the area lower than 1.8 m and the other indoor units cannot be installed in the area lower than 2.5 m.

3. Calculate the maximum allowable refrigerant amount " $m_{\max 1}$ " for the smallest room.
4. Confirm whether or not indoor units are installed in the rooms other than on the lowest floor of the basement.
5. Confirm the installation height of indoor units when the indoor units are installed in the rooms other than on the lowest floor of the basement.
Depending on the installation height, select the value from Amin-2 (a) to (d).
6. Calculate the maximum allowable refrigerant amount " $m_{\max 2}$ " for the smallest room.
7. When both of " $m_{\max 1}$ " and " $m_{\max 2}$ " have been obtained, regard a smaller value as " $m_{\max}$ ". When either one has been obtained, regard the value as " $m_{\max}$ ".
8. An indoor unit can be installed if the refrigerant amount in the system " m " is less than " $m_{\max}$ ".
Review the system if the condition is not satisfied.

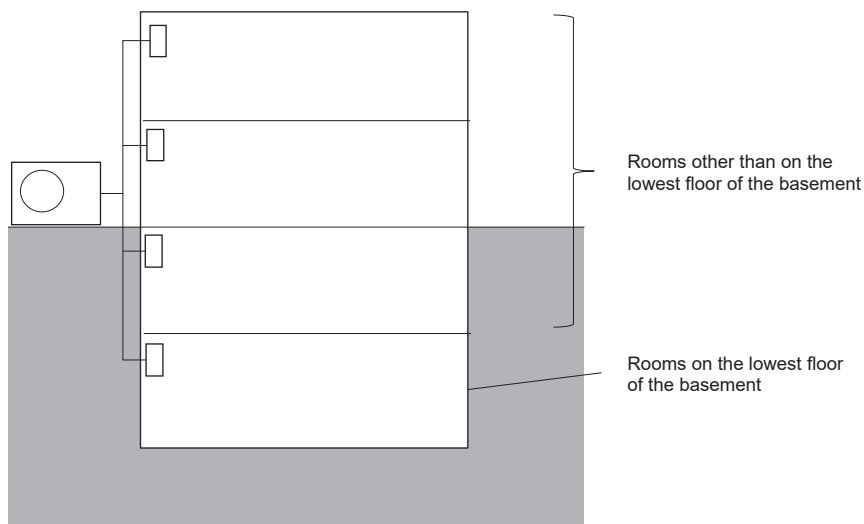


2. Installation location

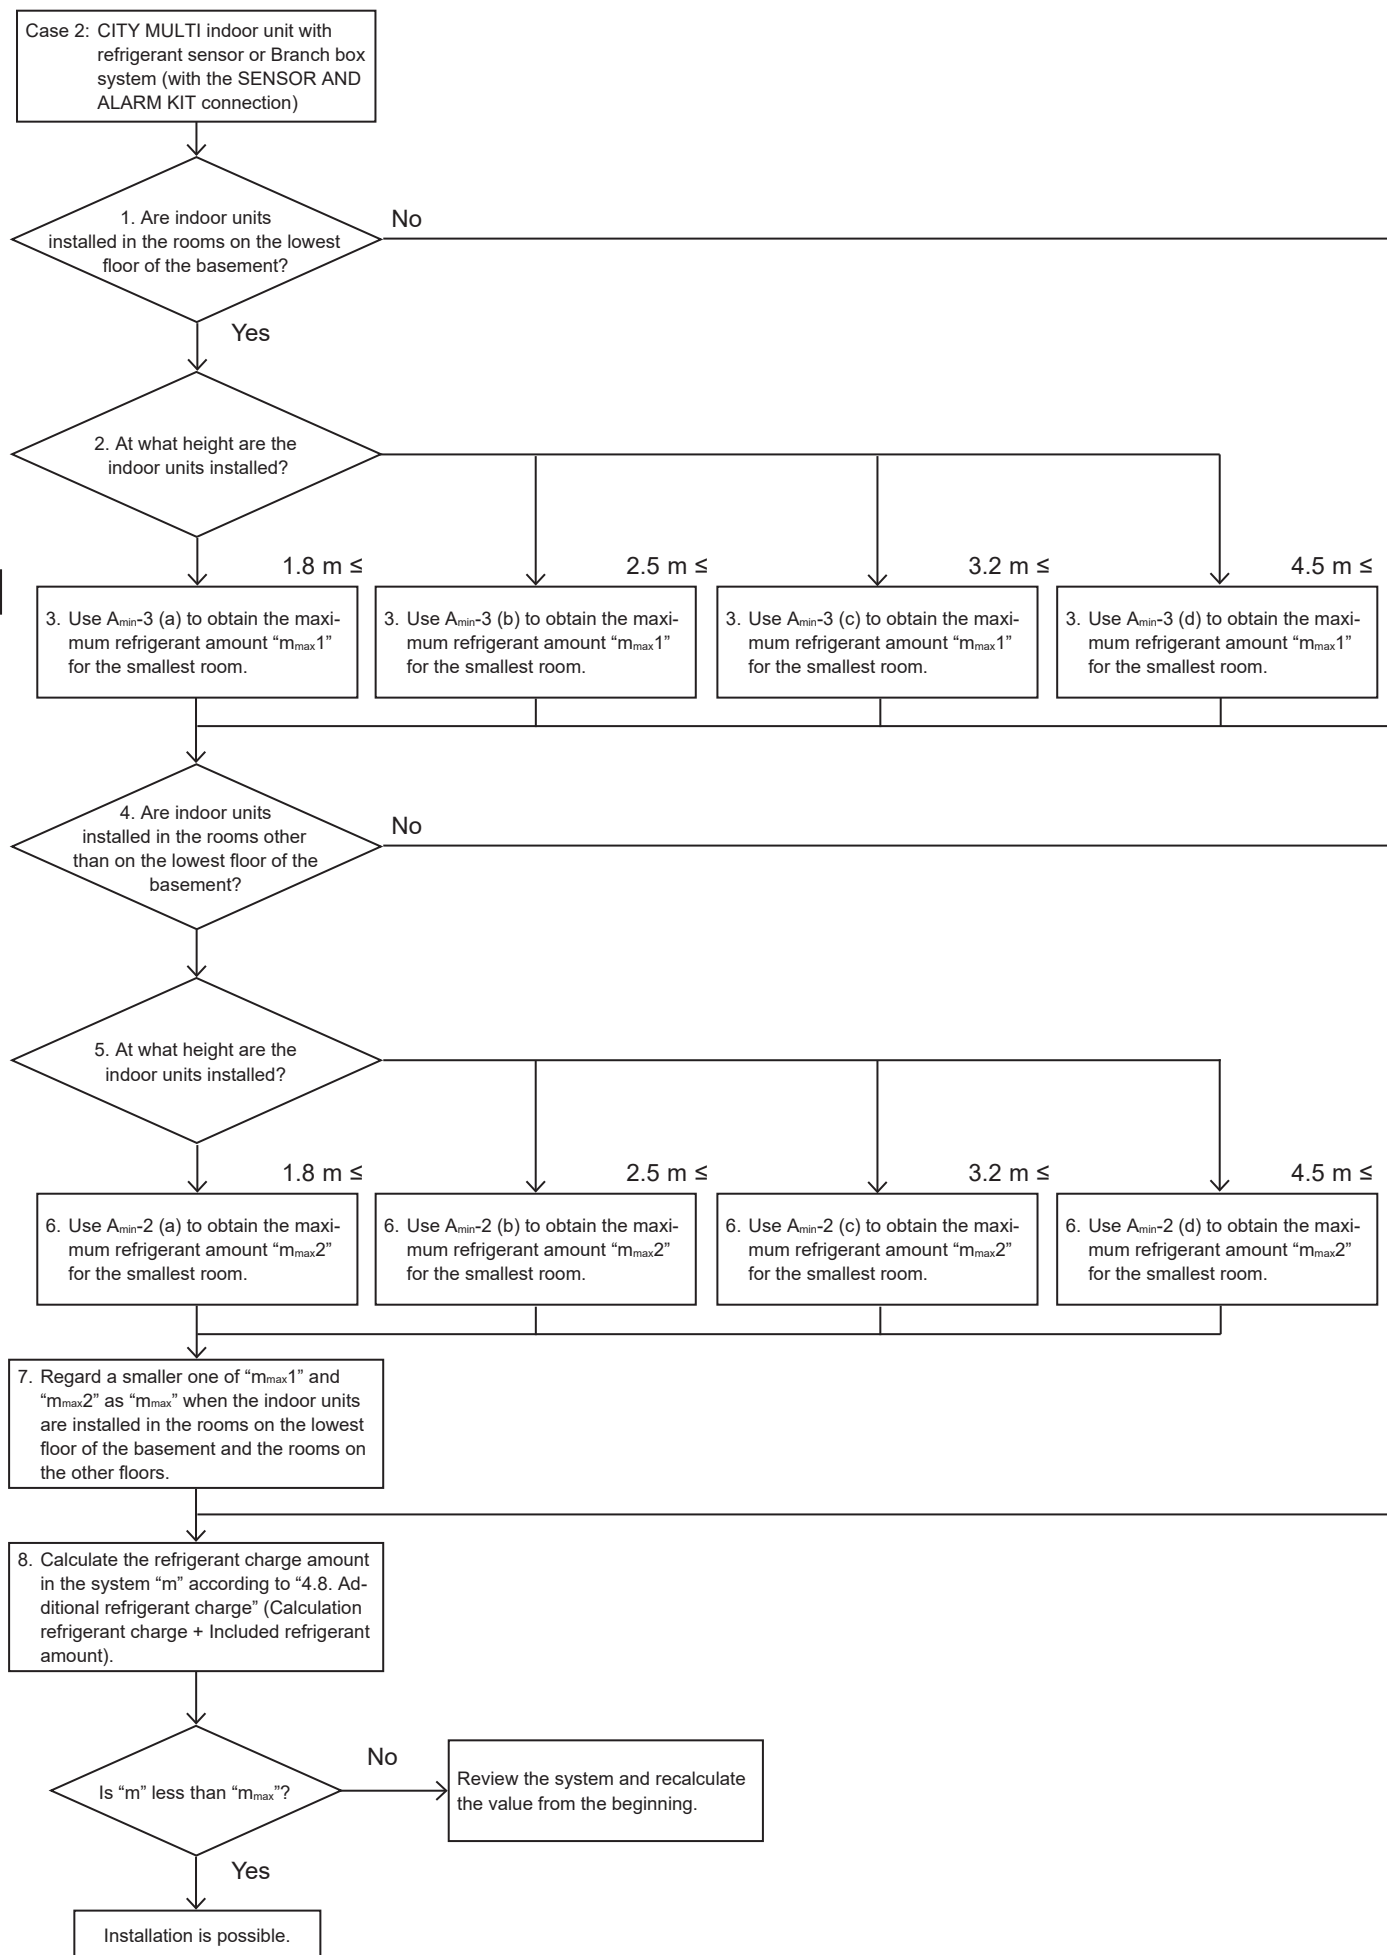

2. Installation location


<Case 3: Mixed system>

For the mixed system, use the smallest value of each maximum allowable refrigerant amount " m_{max} " obtained in Case 1 and Case 2.
An indoor unit can be installed if the refrigerant amount in the system " m " is less than the maximum allowable refrigerant amount " m_{max} ".
Review the system if the condition is not satisfied.

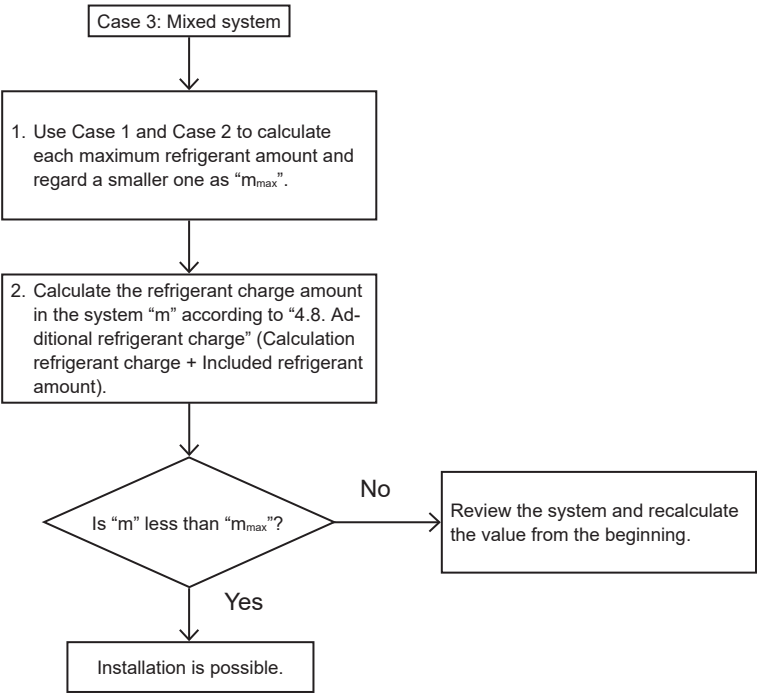

en

3. Installing the outdoor unit

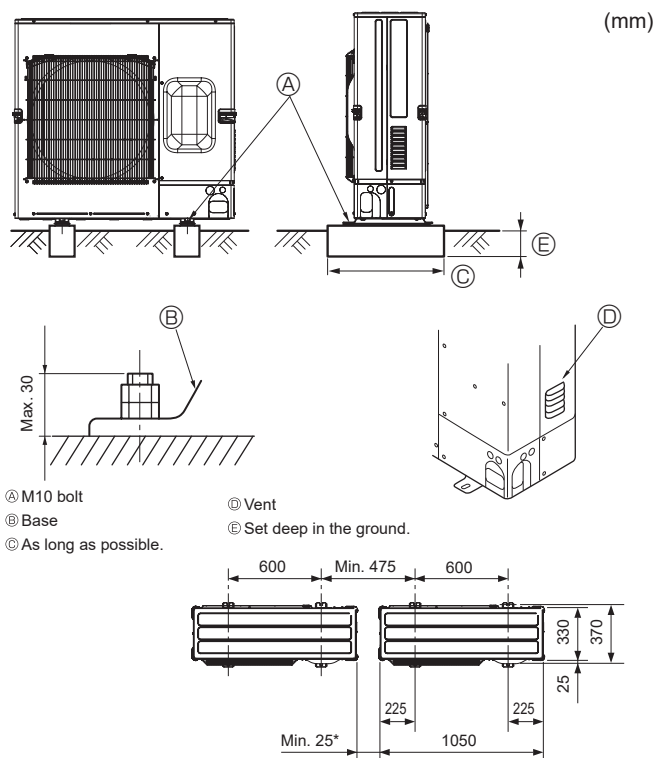

* When installing a single outdoor unit, the clearance is 15 mm or more.

Fig. 3-1

- Be sure to install the unit in a sturdy, level surface to prevent rattling noises during operation. (Fig. 3-1)

<Foundation specifications>

Foundation bolt	M10
Thickness of concrete	120 mm
Length of bolt	70 mm
Weight-bearing capacity	320 kg

- Make sure that the length of the foundation bolt is within 30 mm of the bottom surface of the base.

- Secure the base of the unit firmly with four-M10 foundation bolts in sturdy locations.

Installing the outdoor unit

- Do not block the vent. If the vent is blocked, operation will be hindered and breakdown may result.
- In addition to the unit base, use the installation holes on the back of the unit to attach wires, etc., if necessary to install the unit. Use self-tapping screws ($\phi 5 \times 15$ mm or less) and install on site.

Warning:

- The unit must be securely installed on a structure that can sustain its weight. If the unit is mounted on an unstable structure, it may fall down and cause damage or injuries.
- The unit must be installed according to the instructions in order to minimize the risk of damage from earthquakes, typhoons, or strong winds. An incorrectly installed unit may fall down and cause damage or injuries.

Caution:

- Install unit on a rigid structure to prevent excessive operation sound or vibration.

4. Installing the refrigerant piping

4.1. Precautions for devices that use R32 refrigerant

- Refer to page 3 for precautions not included below on using air conditioners with R32 refrigerant.
- Use ester oil, ether oil, alkylbenzene oil (small amount) as the refrigeration oil applied to the flared sections.
- Use C1220 copper phosphorus, for copper and copper alloy seamless pipes, to connect the refrigerant pipes. Use refrigerant pipes with the thicknesses specified in the table to the below. Make sure the insides of the pipes are clean and do not contain any harmful contaminants such as sulfuric compounds, oxidants, debris, or dust.

Warning:

When installing or relocating, or servicing the air conditioner, use only the specified refrigerant (R32) to charge the refrigerant lines. Do not mix it with any other refrigerant and do not allow air to remain in the lines.

If air is mixed with the refrigerant, then it can be the cause of abnormal high pressure in the refrigerant line, and may result in an explosion and other hazards.

The use of any refrigerant other than that specified for the system will cause mechanical failure or system malfunction or unit breakdown. In the worst case, this could lead to a serious impediment to securing product safety.

$\phi 6.35$, $\phi 9.52$, $\phi 12.7$	Thickness 0.8 mm
$\phi 15.88$	Thickness 1.0 mm

- Do not use pipes thinner than those specified above.
- The thicknesses listed in the table above are based on Japanese standards. Use pipes with a maximum working pressure of 4.15 MPa [601 psig] or higher according to local standards.

Caution:

Follow the instructions below to prevent abrasive components contained in sandpaper and cutting tools from entering the refrigerant circuit because those components can cause failures of the compressor and valves.

- To deburr pipes, use a reamer or other deburring tools, not sandpaper.
- To cut pipes, use a pipe cutter, not a grinder or other tools that use abrasive materials.
- When cutting or deburring pipes, do not allow cutting chips or other foreign matters to enter the pipes.
- If cutting chips or other foreign matters enter pipes, wipe them off the inside of the pipes.

4. Installing the refrigerant piping

4.2. Selecting pipe size

Conversion formula

1/4 F	ø6.35 mm
3/8 F	ø9.52 mm
1/2 F	ø12.7 mm
5/8 F	ø15.88 mm
3/4 F	ø19.05 mm

4.2.1. Pipe size

A, B, C, D, E (Fig. 4-3, 4, 5)

	Liquid pipe	Gas pipe
PUMY-SM112-140	ø9.52 mm	ø15.88 mm

a, b, c to j (Fig. 4-3, 4, 5)

Indoor unit series	Model number	Liquid pipe		Gas pipe
CityMulti	10-50	a, b, c, d, e, f ≤ 30 m	ø6.35 mm	ø12.7 mm
		a, b, c, d, e, f > 30 m	ø9.52 mm *1	
	63-140	ø9.52 mm		ø15.88 mm
M series or S series *3	15-42	ø6.35 mm		ø9.52 mm
	50-60	ø6.35 mm		ø12.7 mm
	71-80	ø9.52 mm		ø15.88 mm
P series *3	35-60 *2	ø6.35 mm		ø12.7 mm
	71-100	ø9.52 mm		ø15.88 mm


*1 If the piping length after the first joint exceeds 30 m, use a pipe size of ø9.52 for the pipes of the system that exceeds 30 m.

*2 When using 35, 50 type indoor unit of P series, use the flare nut attached to the indoor unit.

Do not use the flare nut in the indoor unit accessory. If it is used, a gas leakage or even a pipe extraction may occur.

*3 If the pipe size of indoor unit is different, use a different-diameter joint.

4.2.2. Valve size of Branch box

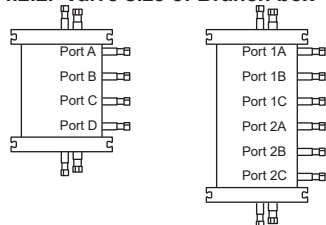

(1) Valve size of Branch box for outdoor unit/other Branch box

Liquid pipe	ø9.52 mm
Gas pipe	ø15.88 mm

(2) Valve size of Branch box for indoor unit

4-branches model

Port A	Liquid pipe	ø6.35 mm
	Gas pipe	ø9.52 mm
Port B	Liquid pipe	ø6.35 mm
	Gas pipe	ø9.52 mm
Port C	Liquid pipe	ø6.35 mm
	Gas pipe	ø9.52 mm
Port D	Liquid pipe	ø6.35 mm
	Gas pipe	ø9.52 mm

6-branches model

Port 1A	Liquid pipe	ø6.35 mm
	Gas pipe	ø9.52 mm
Port 1B	Liquid pipe	ø6.35 mm
	Gas pipe	ø9.52 mm
Port 1C	Liquid pipe	ø6.35 mm
	Gas pipe	ø12.7 mm
Port 2A	Liquid pipe	ø6.35 mm
	Gas pipe	ø9.52 mm
Port 2B	Liquid pipe	ø6.35 mm
	Gas pipe	ø9.52 mm
Port 2C	Liquid pipe	ø9.52 mm
	Gas pipe	ø15.88 mm

4.2.3. Different-diameter joint (optional parts)

 


Fig. 4-1



Fig. 4-2

Model name	Connected pipes diameter mm	Diameter A mm	Diameter B mm
PAC-SJ88RJ-E	ø9.52 → ø12.7	ø9.52	ø12.7
PAC-SK88RJ-E	ø12.7 → ø9.52	ø12.7	ø9.52
PAC-SK89RJ-E	ø12.7 → ø15.88	ø12.7	ø15.88
PAC-SJ87RJ-E	ø6.35 → ø9.52	ø6.35	ø9.52
PAC-SK90RJ-E	ø9.52 → ø15.88	ø9.52	ø15.88

4.2.4. Branch pipe (optional parts)

According to the connection method, you can choose the favorite one.

2-branch joint	CMY-Y62-G-E
4-branch header	CMY-Y64-G-E
8-branch header	CMY-Y68-G-E

2-branch pipe (Joint)

Model name	Connection method
MSDD-50AR2-E	flare
MSDD-50BR-E	brazing

■ Installation procedure (2 branches pipe (Joint))

Refer to the installation manuals of MSDD-50AR2-E and MSDD-50BR-E.

4. Installing the refrigerant piping

4.3. Pipe length and height difference

4.3.1. Connection without Branch box (Fig. 4-3)

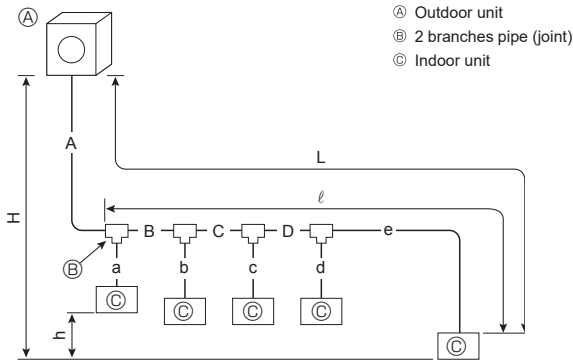


Fig. 4-3 (a)

Permissible length (one-way)	Total piping length	$A + B + C + D + a + b + c + d + e \leq 120 \text{ m}$
	Farthest piping length (L)	$L = A + B + C + D + e \leq 70 \text{ m}$
	Farthest piping length after the first branch (l)	$l = B + C + D + e \leq 50 \text{ m}$
Permissible height difference (one-way)	In indoor/outdoor section (H)	$H \leq 50 \text{ m}$ (In the case of outdoor unit is set higher than indoor unit) $H \leq 40 \text{ m}$ (In the case of outdoor unit is set lower than indoor unit)
	In each indoor unit (h)	$h \leq 15 \text{ m}$


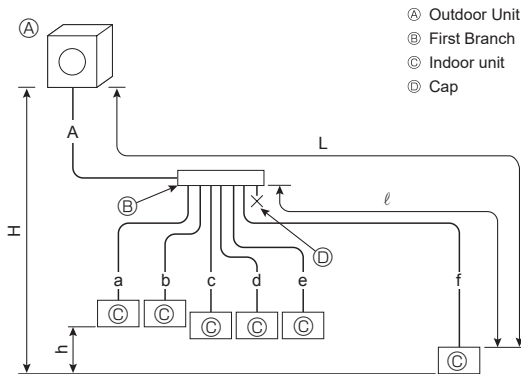


Fig. 4-3 (b)

Permissible length (one-way)	Total piping length	$A + a + b + c + d + e + f \leq 120 \text{ m}$
	Farthest piping length (L)	$L = A + f \leq 70 \text{ m}, l = a + b + c + d + e \leq 50 \text{ m}$
Permissible height difference (one-way)	In indoor/outdoor section (H)	$H \leq 50 \text{ m}$ (In the case of outdoor unit is set higher than indoor unit) $H \leq 40 \text{ m}$ (In the case of outdoor unit is set lower than indoor unit)
	In each indoor unit (h)	$h \leq 15 \text{ m}$

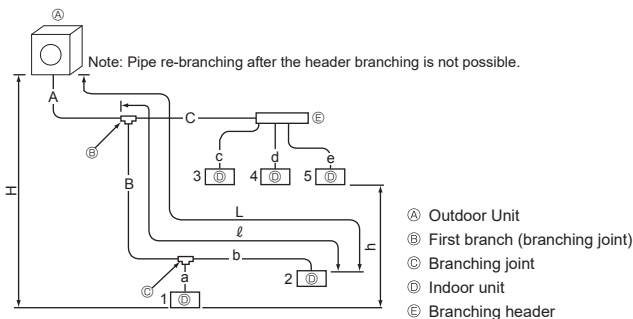

Permissible length (one-way)	Total piping length	$A + B + C + a + b + c + d + e \leq 120 \text{ m}$
	Farthest piping length (L)	$L = A + B + b \leq 70 \text{ m}$
	Farthest piping length after the first branch (l)	$B + b \leq 50 \text{ m}$
Permissible height difference (one-way)	In indoor/outdoor section (H)	$H \leq 50 \text{ m}$ (In the case of outdoor unit is set higher than indoor unit) $H \leq 40 \text{ m}$ (In the case of outdoor unit is set lower than indoor unit)
	In each indoor unit (h)	$h \leq 15 \text{ m}$

Fig. 4-3 (c)

4. Installing the refrigerant piping

4.3.2. Connection with Branch box (Fig. 4-4)

- This unit has flared connections on each indoor unit and Branch box and outdoor unit sides.
- Remove the valve cover of the outdoor unit, then connect the pipe.

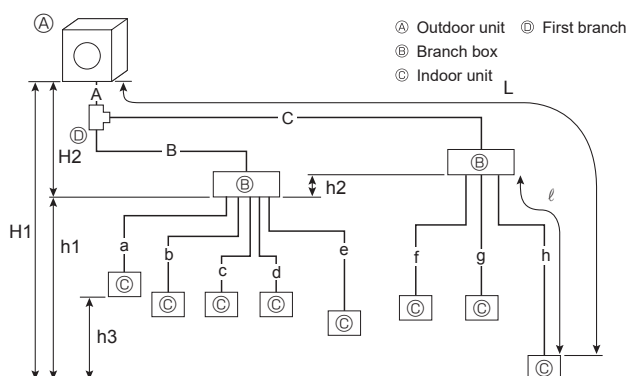


Fig. 4-4

Permissible length (one-way)	Total piping length	$A + B + C + a + b + c + d + e + f + g + h \leq 120 \text{ m}$
	Farthest piping length (L)	$A + C + h \leq 80 \text{ m}$
	Piping length between outdoor unit and Branch boxes	$A + B + C \leq 55 \text{ m}$
	Farthest Branch box from the first joint	$C \leq 50 \text{ m}$
	Farthest piping length after Branch box (ℓ)	$h \leq 25 \text{ m}$
	Total piping length between Branch boxes and indoor units	$a + b + c + d + e + f + g + h \leq 95 \text{ m}$
Permissible height difference (one-way)	In indoor/outdoor section (H1)	$H1, H2 \leq 50 \text{ m}$ (In the case of outdoor unit is set higher than indoor unit)
	Branch box/outdoor unit section (H2)	$H1, H2 \leq 40 \text{ m}$ (In the case of outdoor unit is set lower than indoor unit)
	In Branch box/indoor unit section (h1)	$h1 + h2 \leq 15 \text{ m}$
	In each branch unit (h2)	$h2 \leq 15 \text{ m}$
	In each indoor unit (h3)	$h3 \leq 12 \text{ m}$
Number of bends	When using a branch joint	$ A + B + a , A + B + b , A + B + c , A + B + d , A + B + e , A + C + f , A + C + g , A + C + h \leq 15$
	When not using a branch joint	$ A + a , A + b , A + c , A + d , A + C + e , A + C + f , A + C + g , A + C + h \leq 15$

en

4. Installing the refrigerant piping

4.3.3. Mixed system (City Multi indoor units and M, S, P series indoor units via Branch box) (Fig. 4-5)

1. In case of using one Branch box

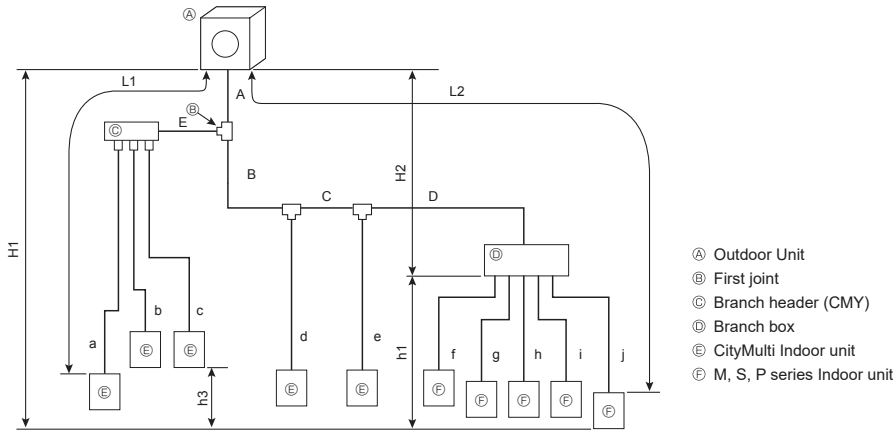


Fig. 4-5 (a)

Permissible length (One-way)	Total piping length	$A + B + C + D + E + a + b + c + d + e + f + g + h + i + j \leq 120 \text{ m}$
	Farthest piping length (L1)	$A + E + a \text{ or } A + B + C + e \leq 70 \text{ m}$
	Farthest piping length. Via Branch box (L2)	$A + B + C + D + j \leq 80 \text{ m}$
	Piping length between outdoor unit and Branch box	$A + B + C + D \leq 55 \text{ m}$
	Farthest piping length from the first joint	$B + C + D \text{ or } B + C + e \leq 50 \text{ m}$
	Farthest piping length after Branch box	$j \leq 25 \text{ m}$
	Total piping length between Branch boxes and indoor units	$f + g + h + i + j \leq 95 \text{ m}$
Permissible height difference (One-way)	In indoor/outdoor section (H1)	$H1, H2 \leq 50 \text{ m}$ (In the case of outdoor unit is set higher than indoor unit)
	Branch box/outdoor unit section (H2)	$H1, H2 \leq 40 \text{ m}$ (In the case of outdoor unit is set lower than indoor unit)
	In Branch box/indoor unit section (h1)	$h1 \leq 15 \text{ m}$
	In each indoor unit (h3)	$h3 \leq 12 \text{ m}$
Number of bends		$ A + E + a , A + E + b , A + E + c , A + B + d , A + B + C + e ,$ $ A + B + C + D + f , A + B + C + D + g , A + B + C + D + h ,$ $ A + B + C + D + i , A + B + C + D + j \leq 15$

2. In case of using two Branch boxes

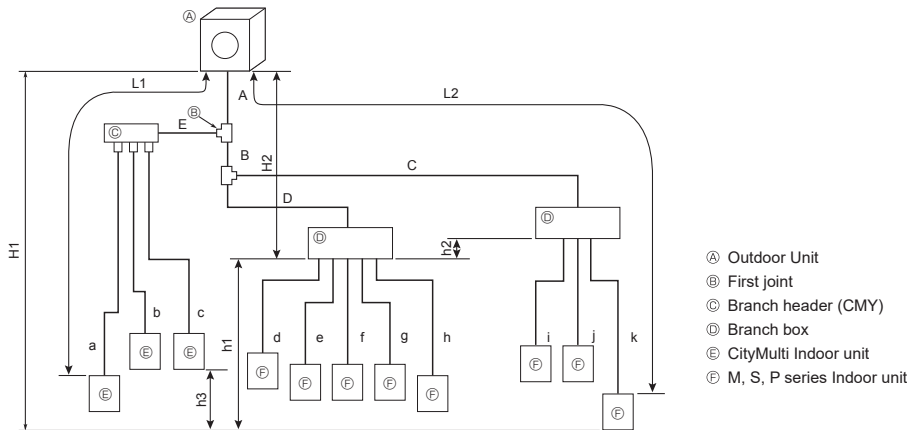


Fig. 4-5 (b)

Permissible length (One-way)	Total piping length	$A + B + C + D + E + a + b + c + d + e + f + g + h + i + j + k \leq 120 \text{ m}$
	Farthest piping length (L1)	$A + E + a \leq 70 \text{ m}$
	Farthest piping length. Via Branch box (L2)	$A + B + C + k \leq 80 \text{ m}$
	Piping length between outdoor unit and Branch boxes	$A + B + C + D \leq 55 \text{ m}$
	Farthest piping length from the first joint	$B + C \text{ or } E + a \leq 50 \text{ m}$
	Farthest piping length after Branch box	$k \leq 25 \text{ m}$
	Farthest Branch box from outdoor unit	$A + B + C \leq 55 \text{ m}$
	Total piping length between Branch boxes and indoor units	$d + e + f + g + h + i + j + k \leq 95 \text{ m}$
Permissible height difference (One-way)	In indoor/outdoor section (H1)	$H1, H2 \leq 50 \text{ m}$ (In the case of outdoor unit is set higher than indoor unit)
	Branch box/outdoor unit section (H2)	$H1, H2 \leq 40 \text{ m}$ (In the case of outdoor unit is set lower than indoor unit)
	In Branch box/indoor unit section (h1+h2)	$h1 + h2 \leq 15 \text{ m}$
	In each branch unit (h1)	$h2 \leq 15 \text{ m}$
	In each indoor unit (h3)	$h3 \leq 12 \text{ m}$
Number of bends		$ A + E + a , A + E + b , A + E + c , A + B + D + d , A + B + D + e , A + B + D + f ,$ $ A + B + D + g , A + B + D + h , A + B + C + i , A + B + C + j , A + B + C + k \leq 15$

4. Installing the refrigerant piping

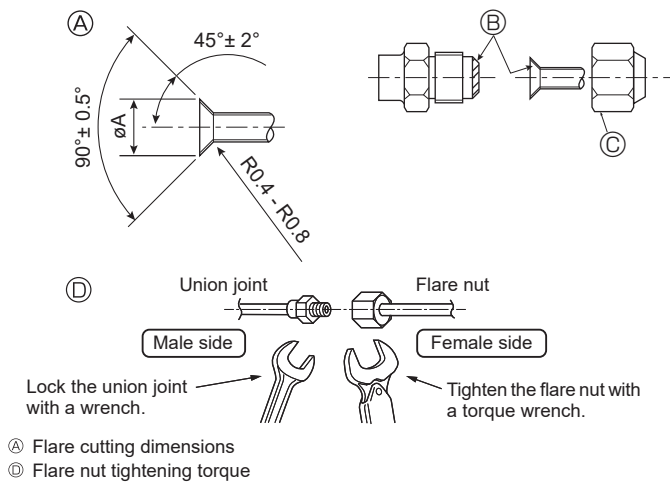


Fig. 4-6

Ⓐ (Fig. 4-6)

Copper pipe O.D. (mm)	Flare dimensions øA dimensions (mm)
ø6.35	8.7 - 9.1
ø9.52	12.8 - 13.2
ø12.7	16.2 - 16.6
ø15.88	19.3 - 19.7

ⓓ (Fig. 4-6)

Copper pipe O.D. (mm)	Flare nut O.D. (mm)	Tightening torque (N·m)
ø6.35	17	14 - 18
ø6.35	22	34 - 42
ø9.52	22	34 - 42
ø12.7	26	49 - 61
ø12.7	29	68 - 82
ø15.88	29	68 - 82
ø15.88	36	100 - 120

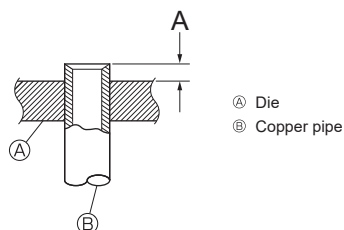


Fig. 4-7

4.4. Connecting pipes (Fig. 4-6)

- Conduct sufficient anti-condensation and insulation work to prevent water dripping from the refrigerant piping. (liquid pipe/gas pipe)
- Increase insulation depending on the environment where the refrigerant piping is installed, or condensation may occur on the surface of the insulation material. (Insulation material Heat-resistant temperature: 120 °C, Thickness: 15 mm or more)
 - * When the refrigerant piping is used in locations subject to high temperature and humidity such as in the attic, further addition of insulation may be required.
- To insulate the refrigerant piping, apply heat-resistant polyethylene foam between the indoor unit and insulation material as well as to the net between the insulation material filling all gaps. (Condensation forming on the piping may result in condensation in the room or burns when contacting the piping.)
- The indoor parts of the drain pipe should be wrapped with polyethylene foam insulation materials (specific gravity of 0.03, thickness of 9 mm or more).
- Apply thin layer of refrigerant oil to pipe and joint seating surface before tightening flare nut. Ⓐ
- Apply refrigerating machine oil over the entire flare seat surface. ⓓ
- Use the flare nuts for the following pipe size. ⓐ
- For connection, first align the center, then tighten the first 3 to 4 turns of flare nut by hand.
- Use 2 wrenches to tighten piping connections. ⓓ
- Use leak detector or soapy water to check for gas leaks after connections are completed.
- When bending the pipes, be careful not to break them. Bend radius of 100 mm to 150 mm is sufficient.
- Make sure the pipes do not contact the compressor. Abnormal noise or vibration may result.

① Pipes must be connected starting from the indoor unit.

Flare nuts must be tightened with a torque wrench.

② Flare the liquid pipes and gas pipes and apply a thin layer of refrigeration oil (Applied on site).

• When usual pipe sealing is used, refer to Table 4 for flaring of R32 refrigerant pipes. The size adjustment gauge can be used to confirm A measurements.

⚠ Warning:

When installing the unit, securely connect the refrigerant pipes before starting the compressor.

Table 4 (Fig. 4-7)

Copper pipe O.D. (mm)	A (mm)	
	Flare tool for R32	Flare tool for R22-R407C
	Clutch type	
ø6.35	0 - 0.5	1.0 - 1.5
ø9.52	0 - 0.5	1.0 - 1.5
ø12.7	0 - 0.5	1.0 - 1.5
ø15.88	0 - 0.5	1.0 - 1.5
ø19.05	0 - 0.5	1.0 - 1.5

en

25

 


Fig. 4-9



 Caution:

Be sure to connect the Muffler, otherwise abnormal vibration or noise will occur.

- ③ Vacuum-evacuate air from the indoor unit and the connection piping.
- ④ After connecting the refrigerant pipes, check the connected pipes and the indoor unit for gas leaks. (Refer to 4.6. Refrigerant pipe airtight testing method)
- ⑤ Vacuumize the refrigerant lines through the service port of the liquid and gas stop valves. And then open the stop valves completely (for both the liquid and gas stop valves). The outdoor unit has the shut-off valve, so the refrigerant line of the indoor and outdoor units are not connected until the air conditioner operates after being energized.
 - If the stop valves are left closed and the unit is operated, the compressor and control valves will be damaged.
 - Use a leak detector or soapy water to check for gas leaks at the pipe connection sections of the outdoor unit.
 - Do not use the refrigerant from the unit to evacuate air from the refrigerant lines.
 - After the valve work is completed, tighten the valve caps to the correct torque: 20 to 25 N·m (200 to 250 kgf·cm).

Failure to replace and tighten the caps may result in refrigerant leakage. In addition, do not damage the insides of the valve caps as they act as a seal to prevent refrigerant leakage.
- ⑥ Use sealant to seal the ends of the thermal insulation around the pipe connection sections to prevent water from entering the thermal insulation.

(1) Connect the testing tools.

- ⚠ Caution:**
If an airtightness test was performed on the outdoor unit when it was relocated, vacuumize the refrigerant lines with the stop valves opened through both the check valves and the service ports.

4. Installing the refrigerant piping

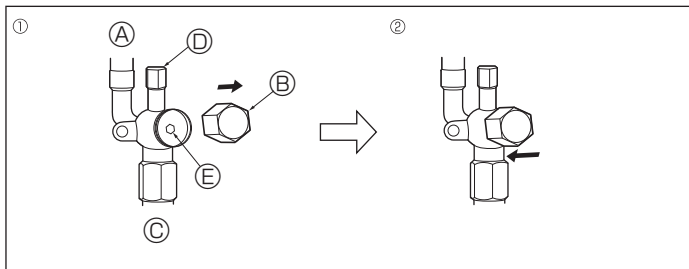


Fig. 4-10

4.7. Stop valve opening method (Fig. 4-10)

• Gas side

- ① Remove the cap and turn the valve rod counterclockwise as far as it will go with the use of a 5 mm hexagonal wrench. Stop turning when it hits the stopper. (ø15.88: Approximately 13 revolutions)
- ② Make sure that the stop valve is open completely and rotate the cap back to its original position.

• Liquid side

- ① Remove the cap and turn the valve rod counterclockwise as far as it will go with the use of a 4 mm hexagonal wrench. Stop turning when it hits the stopper. (ø9.52: Approximately 10 revolutions)
- ② Make sure that the stop valve is open completely and rotate the cap back to its original position.

- Ⓐ Unit side
- Ⓑ Cap
- Ⓒ Local pipe side
- Ⓓ Service port
- Ⓔ Valve stem

Refrigerant pipes are protectively wrapped

- The pipes can be protectively wrapped up to a diameter of ø90 before or after connecting the pipes. Cut out the knockout in the pipe cover following the groove and wrap the pipes.

Pipe inlet gap

- Use putty or sealant to seal the pipe inlet around the pipes so that no gaps remain. (If the gaps are not closed, noise may be emitted or water and dust will enter the unit and breakdown may result.)


Precautions when using the charge valve (Fig. 4-11)

Do not tighten the service port too much when installing it, otherwise, the valve core could be deformed and become loose, causing a gas leak.

After positioning section Ⓒ in the desired direction, turn section Ⓐ only and tighten it. Do not further tighten sections Ⓐ and Ⓓ together after tightening section Ⓐ.

⚠ Warning:

- When opening or closing the valve below freezing temperatures, refrigerant may spurt out from the gap between the valve stem and the valve body, resulting in injuries.

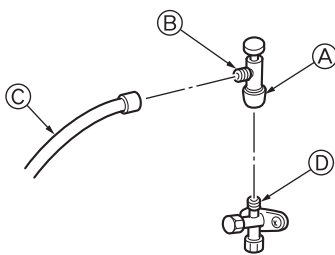

* The figure to the left is an example only. The stop valve shape, service port position, etc., may vary according to the model.

* Turn section Ⓐ only. (Do not further tighten sections Ⓐ and Ⓓ together.)

- Ⓒ Charge hose
- Ⓓ Service port

Fig. 4-11

en

4. Installing the refrigerant piping

4.8. Additional refrigerant charge

Additional refrigerant charge

Refrigerant for the indoor units is not included in the outdoor unit when the unit is shipped from the factory. Refrigerant of 1.4 kg equivalent to 27 m total extended piping length is already included when the outdoor unit is shipped. *1 Thus, if the total extended piping length is 27 m or less, there is no need to charge with additional refrigerant for the piping. If the total extended piping length exceeds 27 m, charge each refrigerant piping system with additional refrigerant at the installation site. In addition, in order to carry out service, enter the size and length of each liquid pipe and additional refrigerant charge amounts in the spaces provided on the "Refrigerant amount" plate on the outdoor unit.

* When the unit is stopped, charge the unit with the additional refrigerant through the liquid stop valve after the pipe extensions and indoor units have been vacuumized. When the unit is operating, add refrigerant to the gas check valve using a safety charger. Do not add liquid refrigerant directly to the check valve.

Calculation of additional refrigerant charge

- Calculate the additional charge amount based on the designated amount for total capacity of connected indoor units and the extended piping. When the amount for the extended piping is less than 0, calculate the additional charge amount without it.
- Calculate the additional refrigerant charge using the procedure shown below, and charge with the additional refrigerant.
- For amounts less than 0.1 kg, round up the calculated additional refrigerant charge.
(For example, if the calculated charge is 6.01 kg, round up the charge to 6.1 kg.)
- The amount of additional refrigerant which is calculated from the total capacity of indoor units and the combination of extended pipes must not be over 4.5 kg.
(Refer to 2.3. for the capacity of indoor units, and 4.2. and 4.3. for extended piping.)

<Additional Charge>

Calculation of refrigerant charge

en

Additional refrigerant charge for the piping	=	Additional refrigerant charge for the indoor units	+	Liquid pipe size Total length of ø9.52 × 0.051	+	Liquid pipe size Total length of ø6.35 × 0.019	-	Refrigerant amount for outdoor unit
(kg)		1.8 kg		(m) × 0.051 (kg/m)		(m) × 0.019 (kg/m)		1.4 kg *1

Additional charge amount for piping *2

*1 In case of the PKFY model indoor unit is in the refrigerant cycle, refrigerant of 0.6 kg equivalent to 11 m total extended piping length is already included when the outdoor unit is shipped.

*2 If this value is less than 0, the additional charge amount for the piping shall be 0.

Included refrigerant amount when shipped from the factory

Included refrigerant amount
3.0 kg

<Example>

Outdoor model : SM140

Indoor 1 : MS100 (11.2 kW)

2 : MS40 (4.5 kW)

A : ø9.52 30 m

a : ø9.52 15 m

b : ø6.35 10 m

At the conditions below:

The total length of each pipe size is as follows:

ø9.52 : A = 30 m
ø9.52 : a = 15 m
ø6.35 : b = 10 m

<Calculation example>

Additional refrigerant charge

1.8 + (30 + 15) × 0.051 + 10 × 0.019 - 1.4 = 2.9 kg (rounded up)


- Do not vent R32 into the atmosphere:
R32 is a fluorinated greenhouse gas with a Global Warming Potential (GWP)=675.
- Make sure to indicate the followings with ineffaceable ink on the designated label / spec label.

(3) On site additionally charge amount (kg)

(4) Tonne of CO₂ equivalent (additionally charge amount)

(5) Total refrigerant amount (1) + (3)

(6) Total tonne of CO₂ equivalent (2) + (4)
- (1) Precharge refrigerant amount (kg)
(2) Tonne of CO₂ equivalent (Precharge)
It is already written on the label and varies depending on the model.

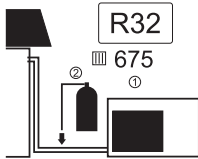

□ Weight
▢ Tonne of CO₂ equivalent
▣ GWP

	□ kg	▢ = □ × ▣ / 1000
①	3.0	2.03
②		
③ = ① + ②		

Model Name	Precharge refrigerant amount (kg)	Tonne of CO ₂ equivalent (Precharge)
PUMY-SM112/125/140V(Y)KM2(-BS) PUMY-SM112/125/140V(Y)KM2-ET(-BS)	3.0	2.03

5. Drainage piping work

Outdoor unit drainage pipe connection

When drain piping is necessary, use the drain socket or the drain pan (option).

Drain socket	PAC-SG61DS-E
Drain pan	PAC-SH97DP-E


6. Electrical work

6.1. Caution


- ① Follow ordinance of your governmental organization for technical standard related to electrical equipment, wiring regulations and guidance of each electric power company.
- ② Use self-extinguishing distribution cables for power supply wiring.
- ③ Wiring for control (hereinafter referred to as transmission line) shall be (5 cm or more) apart from power source wiring so that it is not influenced by electric noise from power source wiring. (Do not insert transmission line and power source wire in the same conduit.)
- ④ Be sure to provide designated grounding work to outdoor unit.
- ⑤ Give some allowance to wiring for electrical part box of indoor and outdoor units, because the box is sometimes removed at the time of service work.
- ⑥ Never connect the main power source to terminal block of transmission line. If connected, electrical parts will be burnt out.
- ⑦ Use 2-core shield cable for transmission line. If transmission lines of different systems are wired with the same multicore cable, the resultant poor transmitting and receiving will cause erroneous operations.
- ⑧ Only the transmission line specified should be connected to the terminal block for outdoor unit transmission.
(Transmission line to be connected with indoor unit : Terminal block TB3 for transmission line, Other : Terminal block TB7 for centralized control)
Erroneous connection does not allow the system to operate.

- ⑨ In case to connect with the upper class controller or to conduct group operation in different refrigerant systems, the control line for transmission is required between the outdoor units each other.
Connect this control line between the terminal blocks for centralized control. (2-wire line with no polarity)
When conducting group operation in different refrigerant systems without connecting to the upper class controller, replace the insertion of the short circuit connector from CN41 of one outdoor unit to CN40.
- ⑩ Group is set by operating the remote controller.
- ⑪ Power on the indoor units and the branch box side first, then the outdoor side.
- ⑫ Make sure that the transmission line and power supply wiring do not contact the coil of the shut-off valve. The insulation of the wiring may tear.

<PUMY-SM-VKM>

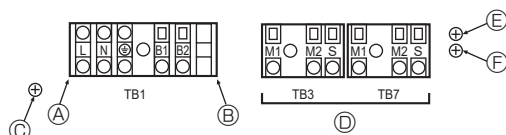

<PUMY-SM-YKM>

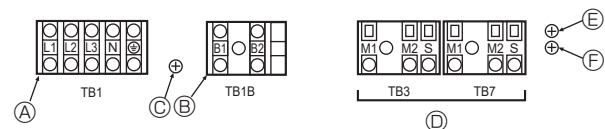

- A Power source
 B Power supply for Branch box
 C Screw on the electrical component box for ground connection (TB1/TB1B)
 D Transmission line
 E Screw on the electrical component box for ground connection (TB3)
 F Screw on the electrical component box for ground connection (TB7)

Fig. 6-1

6.2. Control box and connecting position of wiring (Fig. 6-1)

1. Connect the wiring between the outdoor unit and the indoor unit or Branch box to the transmission terminal block (TB3) of the outdoor unit.
Connect the wiring between the outdoor unit and the centralized control system to the transmission terminal block (TB7) of the outdoor unit.
Connect the ground of the shielded wiring to the shield terminal (S) of the terminal block (TB3) or (TB7).
If the connection of the outdoor unit's transmission power supply connector has been changed from CN41 to CN40, connect the shield terminal (S) of the terminal block (TB7) to the screw (E) using the included lead wire.
* The shield (S) terminal of the transmission terminal block (TB3) is connected to the ground (E) when the unit is shipped from the factory.
2. The terminal (B1) and (B2) on the terminal block (TB1B or TB1) is for supplying power to the Branch box (220 – 240 VAC).
3. Remove the knock-out pieces from the piping cover, pass the power supply and transmission wires through the appropriate knock-out holes, and connect the wires to the terminal block.
4. Fix power source wiring to terminal box by using buffer bushing for tensile force (PG connection or the like).

⚠ Caution:

Never connect the transmission line for the indoor unit or the centralized control system transmission line to this terminal block (TB1). If the transmission lines are connected, the indoor unit terminal block or centralized control terminal block could be damaged.

6.3. Wiring transmission cables

① Types of control cables

1. Wiring transmission cables

Types of transmission cables	Shielding wire CVVS, CPEVS or MVVS
Cable diameter	More than 1.25 mm ²
Maximum wiring length	Within 200 m

2. MA Remote control cable

Type of remote control cable	Sheathed 2-core cable (unshielded) CVV
Cable diameter	0.3 to 1.25 mm ² *
Remarks	Within 200 m *

* Cable diameter and length may differ depending on the remote controller. Refer to installation manual of each remote controller for details.

② Wiring examples

• Controller name, symbol and allowable number of controllers.

Name	Symbol	Allowable number of controllers
Outdoor unit controller	OC	–
Indoor unit controller	CITY MULTI series	M-IC
	M, S, P series	A-IC
Branch box	BC	0 to 2 units per 1 OC *1
Remote controller *2 *3 *4	MA	MA-RC
	Wireless	WL-RC

Note:

- *1. The number of connectable units may be limited by some conditions such as an indoor unit's capacity or each unit's equivalent power consumption.
- *2. Don't use the Lossnay controller (PZ-61DR-E, PZ-43SMF-E, PZ-52SF-E, PZ-60DR-E).
- *3. The M-NET remote controller cannot be connected.
- *4. Only the system controllers designed for R32 refrigerant can be connected.

<Wiring Method and Address Setting: include Branch box system>
Please refer to the Branch box Installation Manual.

en

6. Electrical work


6.4. System control

Example of an MA remote controller system

6.4.1 Example for CITY MULTI system

Standard system (1 MA remote controller for each indoor unit)

■ Example of wiring transmission cables

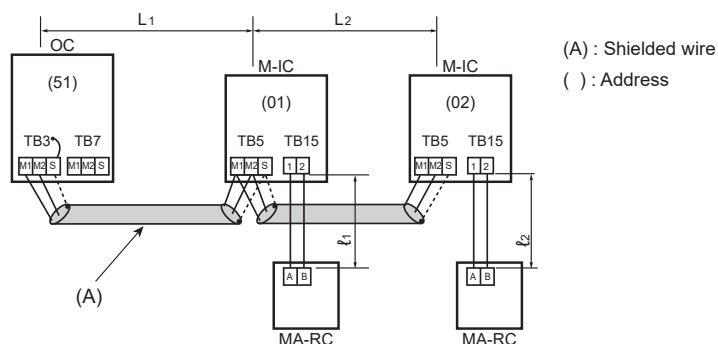

■ Address settings

For the manual address setting, see the table below.

Note:

- For the automatic address setting, set all the addresses to "00".

Unit	Range	Setting Method
M-IC	001 to 050	-
OC	051 to 100	Use the smallest address of all the indoor unit plus 50. * The address automatically becomes "100" if it is set as "01-50".
MA-RC	-	-


■ Wiring Method

- Always use shielded wire when making connections between the outdoor unit (OC) and the indoor unit (M-IC).
- Use the feed wiring to connect the terminals M1, M2, and S (Connected to ground) on the transmission cable terminal block (TB3) for the outdoor unit (OC) to terminals M1, M2, and S (Connected to ground) on the transmission cable terminal block (TB5) of each CITY MULTI series indoor unit (M-IC). Use the nonpolarized 2-core wire.
- Connect the terminals 1 and 2 on the transmission cable terminal block (TB15) for each CITY MULTI series indoor unit with the terminal block for the MA remote controller (MA-RC).
- If the interface kit is not connected, set SW5-7 on all outdoor units to OFF.

■ Permissible Lengths

- Indoor/outdoor transmission line Maximum length:
 $L1 + L2 \leq 200 \text{ m}$ (1.25 mm² or more)
- MA remote controller cable length:
 $\ell1, \ell2 \leq 200 \text{ m}$ (0.3 to 1.25 mm²)

■ Constraint items

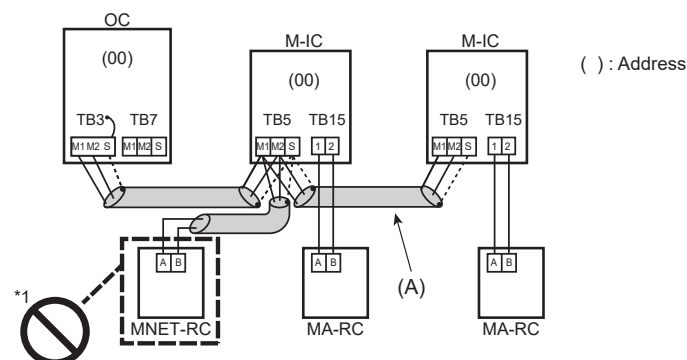


*1. Cannot connect the M-NET remote controller.

6. Electrical work

Using 2 MA remote controllers

■ Example of wiring transmission cables

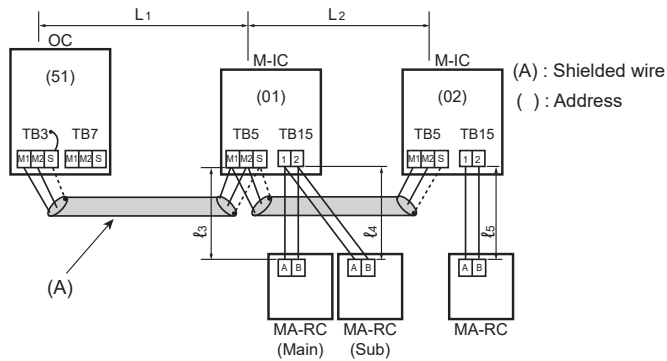

■ Address settings

For the manual address setting, see the table below.

Note:

- For the automatic address setting, set all the addresses to "00".

Unit	Range	Setting Method
M-IC	001 to 050	-
OC	051 to 100	Use the smallest address of all the indoor unit plus 50. * The address automatically becomes "100" if it is set as "01-50".
MA-RC	-	-


■ Wiring method

- Always use shielded wire when making connections between the outdoor unit (OC) and the indoor unit (M-IC).
- Use the feed wiring to connect the terminals M1, M2, and S (Connected to ground) on the transmission cable terminal block (TB3) for the outdoor unit (OC) to the terminals M1, M2, and S (Connected to ground) on the transmission cable terminal block (TB5) of each CITY MULTI series indoor unit (M-IC). Use the nonpolarized 2-core wire.
- Connect the terminals 1 and 2 on the transmission cable terminal block (TB15) for each CITY MULTI series indoor unit with the terminal block for the MA remote controller (MA-RC).
- In the case of using the 2 remote controllers, connect the terminals 1 and 2 on the transmission cable terminal block (TB15) for each indoor unit with the terminal block for the 2 MA remote controllers.
 - Set either one of the MA remote controllers to the "sub remote controller".
 - Refer to the installation manual of the MA remote controller.
- If the interface kit is not connected, set SW5-7 on all outdoor units to OFF.

■ Permissible Lengths

- Indoor/outdoor transmission line Maximum length:
 $L1 + L2 \leq 200 \text{ m (1.25 mm}^2 \text{ or more)}$
- MA remote controller cable length:
 $\ell3 + \ell4, \ell5 \leq 200 \text{ m (0.3 to 1.25 mm}^2 \text{)}$

■ Constraint items

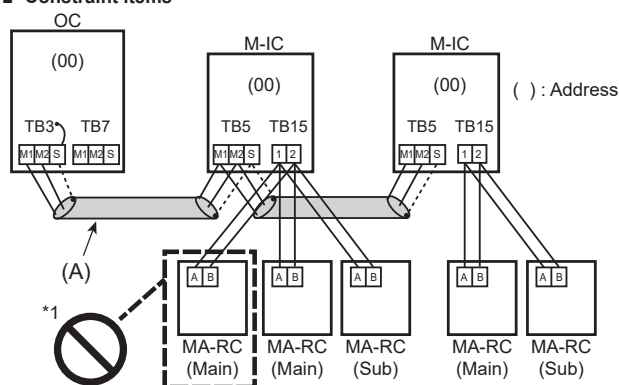

- *1. The 3 MA remote controllers or more cannot be connected with the CITY MULTI series indoor unit of the same group.


en

6. Electrical work

Group operation

The group operation is available only for the indoor units designed for it. Refer to the service manual for details.

■ Example of wiring transmission cables

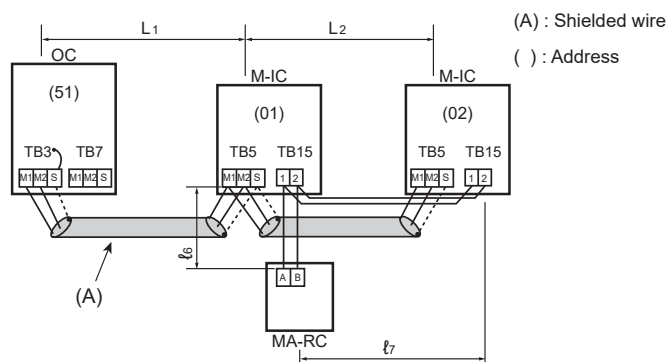

en

■ Address settings

For the manual address setting, see the table below.

Note:

- For the automatic address setting, set all the addresses to "00".

Unit	Range	Setting Method
M-IC	001 to 050	-
OC	051 to 100	Use the smallest address of all the indoor unit plus 50. * The address automatically becomes "100" if it is set as "01-50".
MA-RC	-	-


■ Wiring method

1. Always use shielded wire when making connections between the outdoor unit (OC) and the indoor unit (M-IC).
2. Use the feed wiring to connect the terminals M1, M2, and S (Connected to ground) on the transmission cable terminal block (TB3) for the outdoor unit (OC) to the terminals M1, M2, and S (Connected to ground) on the transmission cable terminal block (TB5) of each CITY MULTI series indoor unit (M-IC). Use the nonpolarized 2-core wire.
3. Connect the terminals 1 and 2 on the transmission cable terminal block (TB15) for each CITY MULTI series indoor unit with the terminal block for the MA remote controller (MA-RC).
4. In the case of group operation using the MA remote controller (MA-RC), connect the terminals 1 and 2 on the transmission cable terminal block (TB15) of each CITY MULTI series indoor unit. Use the non-polarized 2-core wire.
5. In the case of same group operation, need to set the address that is only main CITY MULTI series indoor unit. Please set the smallest address within number 01-50 of the CITY MULTI series indoor unit with the most functions in the same group.
6. If the interface kit is not connected, set SW5-7 on all outdoor units to OFF.

■ Permissible Lengths

1. Indoor/outdoor transmission line Maximum length:
 $L1 + L2 \leq 200 \text{ m}$ (1.25 mm² or more)
2. MA remote controller cable length:
 $l6 + l7 \leq 200 \text{ m}$ (0.3 to 1.25 mm²)

■ Constraint items

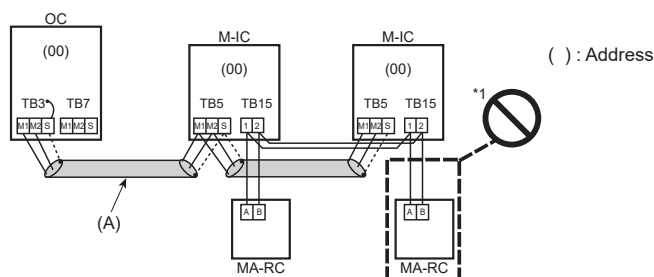


- *1. The second MA remote controller is connected with the terminal block (TB15) for the MA remote controller of the same CITY MULTI series indoor unit (M-IC) as the first MA remote controller.

6. Electrical work

Using supervisor remote controller

■ Example of wiring transmission cables

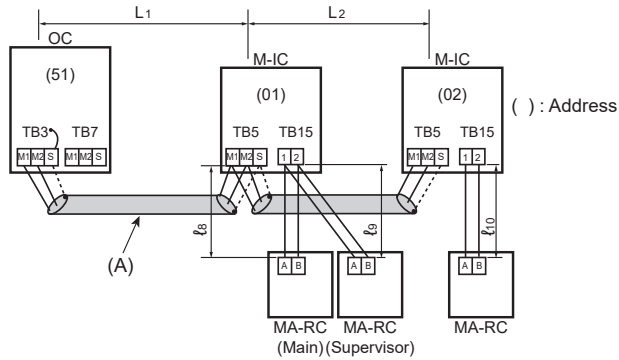

■ Address settings

For the manual address setting, see the table below.

Note:

- For the automatic address setting, set all the addresses to "00".

Unit	Range	Setting Method
M-IC	001 to 050	-
OC	051 to 100	Use the smallest address of all the indoor unit plus 50. * The address automatically becomes "100" if it is set as "01-50".
MA-RC	-	-


■ Wiring method

- Always use shielded wire when making connections between the outdoor unit (OC) and the indoor unit (M-IC).
- Use the feed wiring to connect the terminals M1, M2, and S (Connected to ground) on the transmission cable terminal block (TB3) for the outdoor unit (OC) to the terminals M1, M2, and S (Connected to ground) on the transmission cable terminal block (TB5) of each CITY MULTI series indoor unit (M-IC). Use the nonpolarized 2-core wire.
- Connect the terminals 1 and 2 on the transmission cable terminal block (TB15) for each CITY MULTI series indoor unit with the terminal block for the MA remote controller (MA-RC).
- In the case of using the 2 remote controllers, connect the terminals 1 and 2 on the transmission cable terminal block (TB15) for each indoor unit with the terminal block for the 2 MA remote controllers.
 - Set either one of the MA remote controllers to "Supervisor Remote Controller".
 - Refer to the installation manual of the MA remote controller.
- If the interface kit is not connected, set SW5-7 on all outdoor units to OFF.

■ Permissible Lengths

- Indoor/outdoor transmission line Maximum length:
 $L1 + L2 \leq 200 \text{ m}$ (1.25 mm² or more)
- MA remote controller cable length:
 $l8 + l9 \leq 100 \text{ m}$, $l10 \leq 200 \text{ m}$ (0.3 to 1.25 mm²)

■ Constraint items

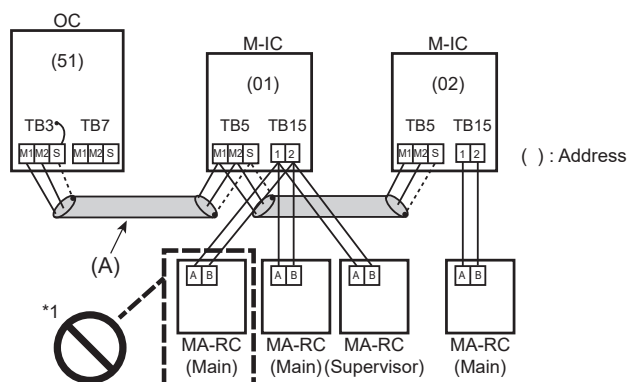


*1. The 3 MA remote controllers or more cannot be connected with the CITY MULTI series indoor unit of the same group.

en


6. Electrical work

6.4.2 Example of Branch Box system

■ Examples of wiring transmission cables

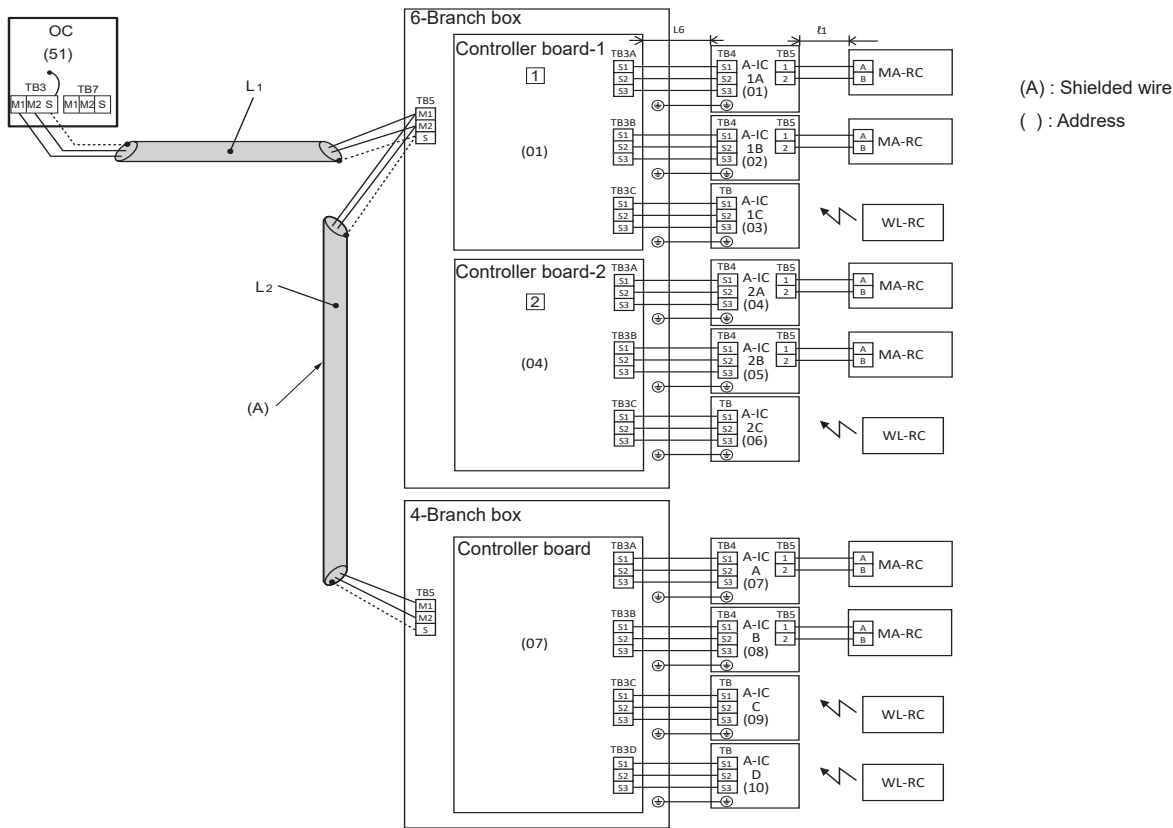

■ Examples of SENSOR AND ALARM KIT Wiring

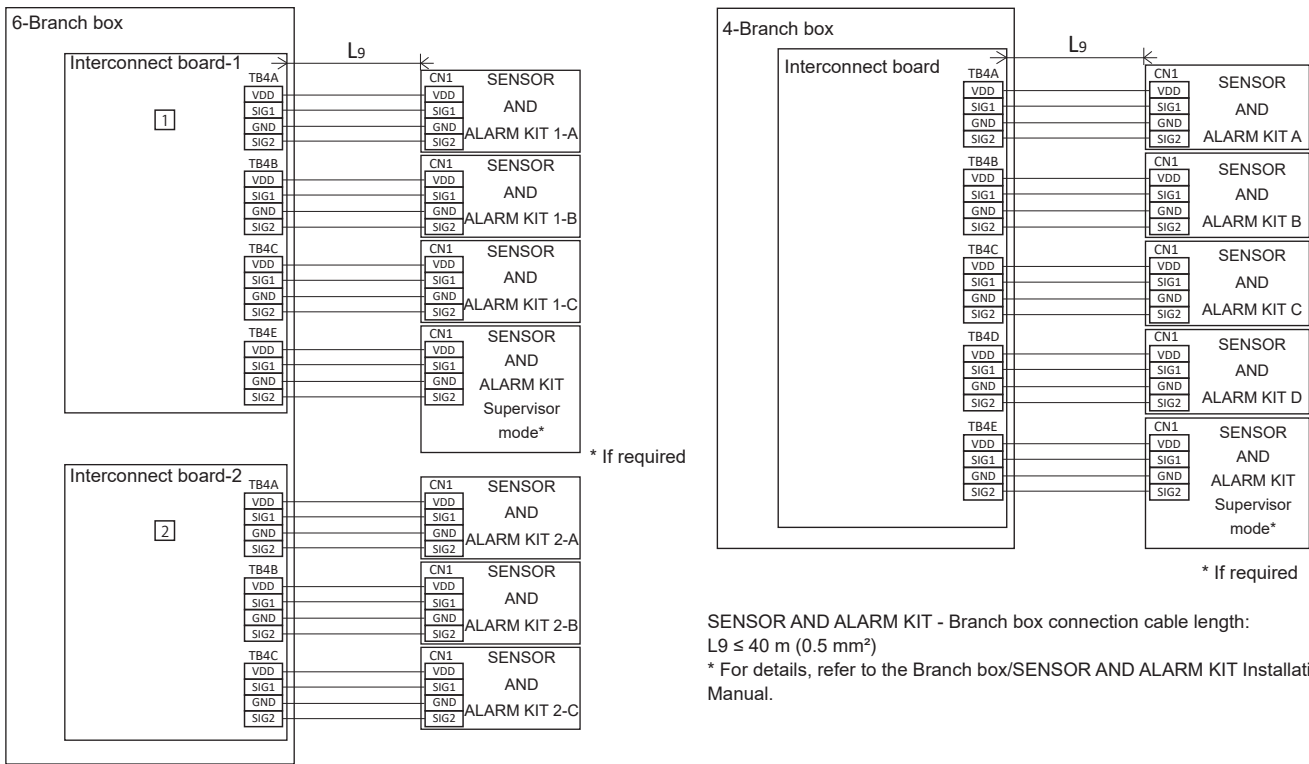

6. Electrical work

■ Address Settings

The Branch Box system requires the manual address setting. See the table below.

Unit	Range	Setting Method
A-IC	001 to 050	According to the set address of the connected Branch Box, set the A-IC addresses sequentially by SW1, SW11, SW12 on the Branch Box. (For example, when setting the Branch Box address to 01, the A-IC addresses set 01, 02, 03, and 04.)
Branch box	001 to 050	Use a number within the range 1–50, but it should not make the highest address of connected A-IC exceed 50.
OC	051 to 100	Use the smallest address of all the indoor units plus 50. * The address automatically becomes "100" if it is set as "01–50".
MA-RC	-	-

■ Wiring Method

1. Always use the shielded wire when making connections between the outdoor unit (OC) and the Branch Box, as well for all BC-BC wiring.
2. Use the feed wiring to connect terminals M1, M2, and S (Connected to ground) on the transmission cable terminal block (TB3) for the outdoor unit (OC) to the terminals M1, M2, and S (Connected to ground) on the transmission cable terminal block (TB5) of each Branch Box. Use the nonpolarized 2-core wire.
3. Connect the terminals 1 and 2 on the transmission cable terminal block (TB5/TB15) of the A-control indoor unit (A-IC) to the terminal block for the MA remote controller (MA-RC).
4. If the interface kit is not connected, set SW5-7 on all outdoor units to OFF.

■ Permissible Lengths

1. Branch Box / Outdoor transmission line Maximum length (M-NET cable):
 $L1 + L2 \leq 200 \text{ m}$ (1.25mm² or more)
2. Indoor / Branch Box transmission line Maximum length (A-control cable) :
 $L6 \leq 25 \text{ m}$ (1.5 mm²)
3. MA Remote controller cable length:
 $m1 \leq 200 \text{ m}$ (0.3 to 1.25 mm²)

en




*2. The M-NET remote controller cannot be connected.

6. Electrical work

6.4.3 Example of Branch Box and A-control indoor unit system with Interface Kit

■ Example of wiring transmission cables

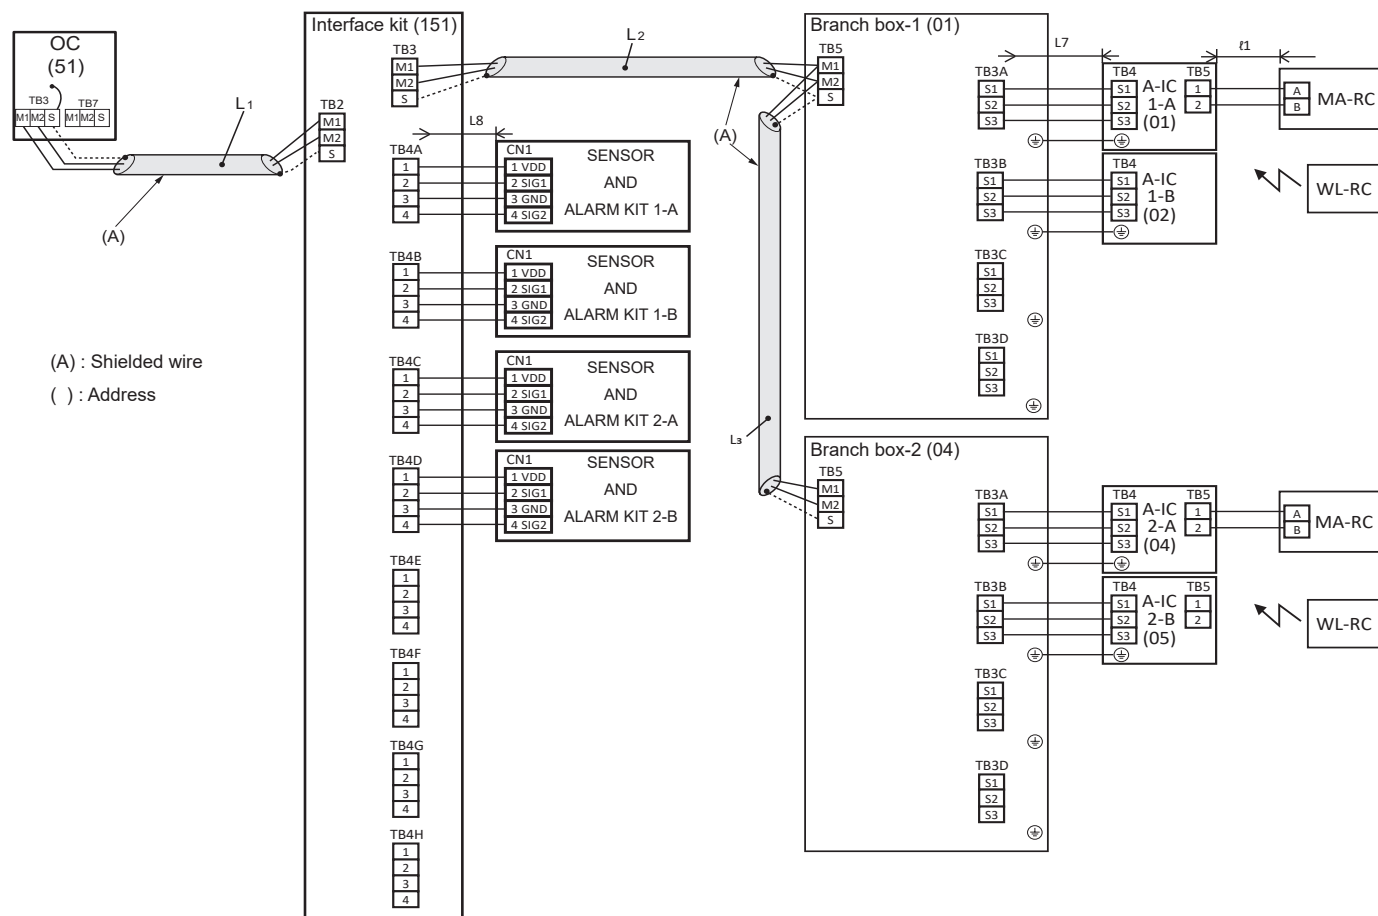

■ Address Settings

For the manual address setting, see the table below.

Note:

- The automatic address setting is available for the Interface kit and the outdoor unit (OC). The Branch Box always requires the manual address setting.
- For the automatic address setting, set the address of the applicable device to "00".

Unit	Range	Setting Method
M-IC	001 to 050	-
A-IC	001 to 050	According to the set address of the connected Branch box, set the A-IC addresses sequentially by SW1, SW11, SW12 on the Branch box. (For example, when the Branch box address is set to 01, set the A-IC addresses to 01, 02, 03 and 04.)
Branch Box	001 to 050	Use a number within the range 1-50, but it should not make the highest address of connected A-IC exceed 50.
OC	051 to 100	Use the smallest address of all the indoor unit plus 50. * The address automatically becomes "100" if it is set as "01-50".
MA-RC	-	-
Interface Kit	151 to 200	Use the number within the range 151-200.(If it is set as "200", switch setting is "00")

■ Wiring Method


1. Always use the shielded wire when making connections between the outdoor unit (OC), Interface kit and Branch box, as well as all OC-OC, BC-BC, OC-IF, and IF-BC wiring.
2. Use the feed wiring to connect the terminals M1, M2 and S (Connected to ground) on the transmission cable terminal block (TB3) of each outdoor unit (OC) to the terminals M1, M2, and S on the transmission cable terminal block (TB2) of the Interface kit. Also connect the terminals M1, M2, and S on the transmission cable terminal block (TB3) of the Interface kit to the terminals M1, M2, and S on the transmission cable terminal block (TB5) of the Branch Box. Use the nonpolarized 2-core wire.
3. Connect the terminals 1 and 2 on the transmission cable terminal block (TB5/TB15) of the A-control indoor unit (A-IC) or the CITY MULTI series indoor unit (M-IC) to the terminal block on the MA remote controller (MA-RC).
4. For systems with interface kit connected, turn SW5-7 ON.
* SENSOR AND ALARM KIT and Branch Box also needs to be set up. For details, refer to the installation manual for the SENSOR AND ALARM KIT and Branch Box.
If the SW setting is incorrect, a system error (e.g. error 7130) may occur and the system may not start up.

■ Permissible Lengths

1. Indoor / Branch box/ outdoor transmission line Maximum length (M-NET cable):
 $L1 + L2 + L3 \leq 200 \text{ m}$ (1.25 mm² or more)
2. Indoor / Branch box transmission line Maximum length (A-Control cable):
 $L7 \leq 25 \text{ m}$ (1.5 mm²)
3. MA Remote controller cable length:
 $L1 \leq 200 \text{ m}$ (0.3 to 1.25 mm²)
4. Sensor and alarm kit - Branch box connection cable length:
 $L8 \leq 40 \text{ m}$, (0.5 mm²)

6. Electrical work

■ Constraint items

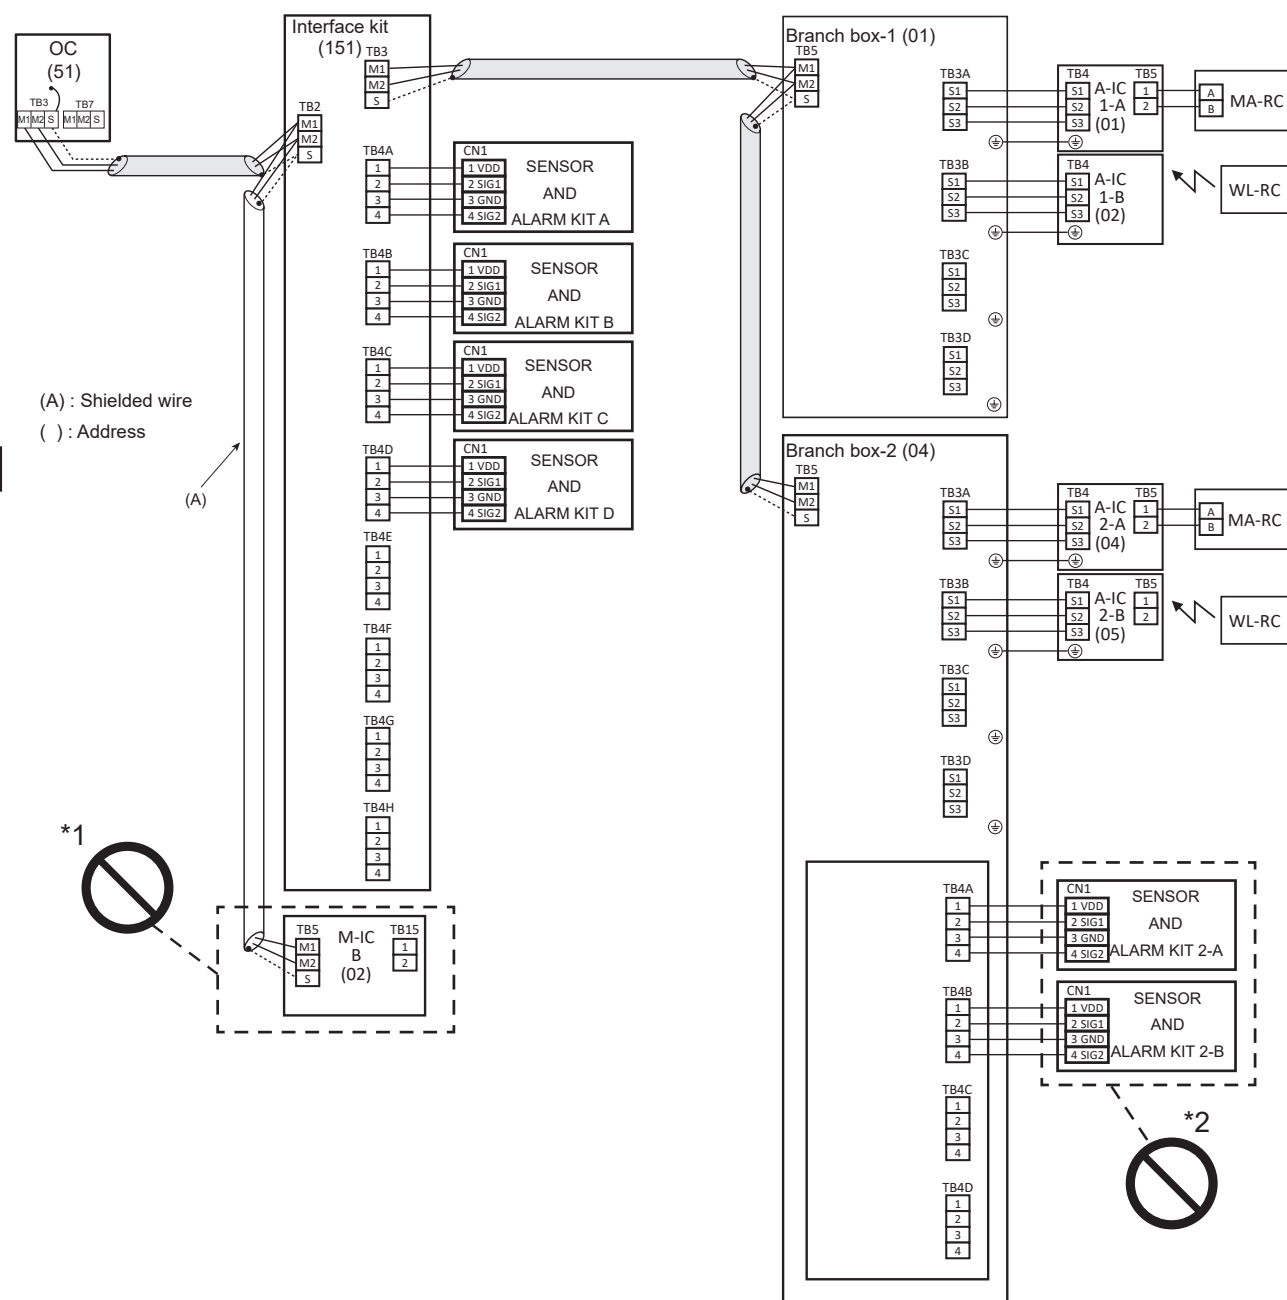

*1 When connecting the interface kit, it is not possible to connect an M-IC or Branch Box without through the interface kit.


*2 The sensor and alarm kit must be connected to the interface kit.

6. Electrical work

6.4.4 Example of CITY MULTI system with Interface Kit

Connecting with the Interface kit is available only for the indoor units designed for it. Refer to the service manual for details.

■ Examples of wiring transmission cables

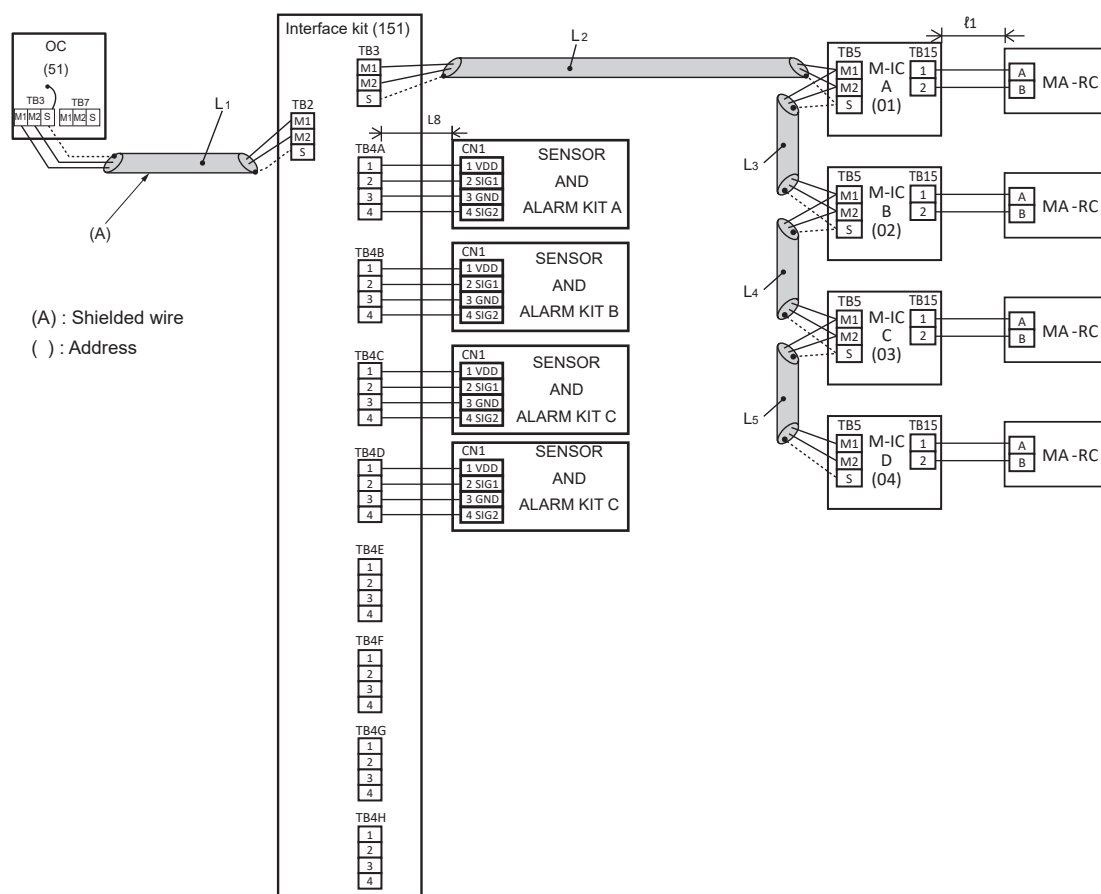

■ Address settings

For the manual address setting, see the table below.

Note:

- If the automatic address setting is available for the indoor unit, address setting is not required. Refer to the service manual for details.
- For the automatic address setting, set the address of the applicable device to "00".

Unit	Range	Setting Method
M-IC	001 to 050	-
OC	51 to 100	Use the smallest address of all the indoor unit plus 50. * The address automatically becomes "100" if it is set as "01-50".
MA-RC	-	Address setting is not necessary.
Interface kit	151 to 200	Use the number within the range 151-200. (If it is set as "200", switch setting is "00".)

en

6. Electrical work


■ Wiring Method

1. Always use the shielded wire when making connections between the outdoor unit (OC), Interface kit, and Indoor unit (M-IC), as well for all IC-IC, OC-IF, and IF-IC wiring.
2. Use the feed wiring to connect the terminals M1, M2, and S (Connected to ground) on the transmission cable terminal block (TB3) for the outdoor unit (OC) to the terminals M1, M2, and S on the transmission cable terminal block (TB2) of the Interface kit. Also connect the terminals M1, M2, and S on the transmission cable terminal block (TB3) of the Interface kit to the terminals M1, M2, and S on the transmission cable terminal block (TB5) of the Indoor unit (M-IC). Use the nonpolarized 2-core wire.
3. Connect the terminals 1 and 2 on the transmission cable terminal block (TB15) for each CITY MULTI series indoor unit with the terminal block for the MA remote controller (MA-RC).
4. For systems with the interface kit connected, turn SW5-7 ON.
 * The SENSOR AND ALARM KIT and M-IC also needs to be set up. For details, refer to the installation manual for the SENSOR AND ALARM KIT and indoor unit.
 If the SW setting is incorrect, a system error (e.g. error 7130) may occur and the system may not start up.

■ Permissible Lengths

1. Indoor / Branch box / outdoor transmission line Maximum length (M-NET cable):
 $L1 + L2 + L3 + L4 + L5 \leq 200 \text{ m}$ (1.25 mm² or more)
2. MA Remote controller cable length:
 $\varnothing 1 \leq 200 \text{ m}$ (0.3 to 1.25 mm²)
3. Sensor and alarm kit - Branch box connection cable length:
 $L6 \leq 40 \text{ m}$, (0.5 mm²)

■ Constraint items

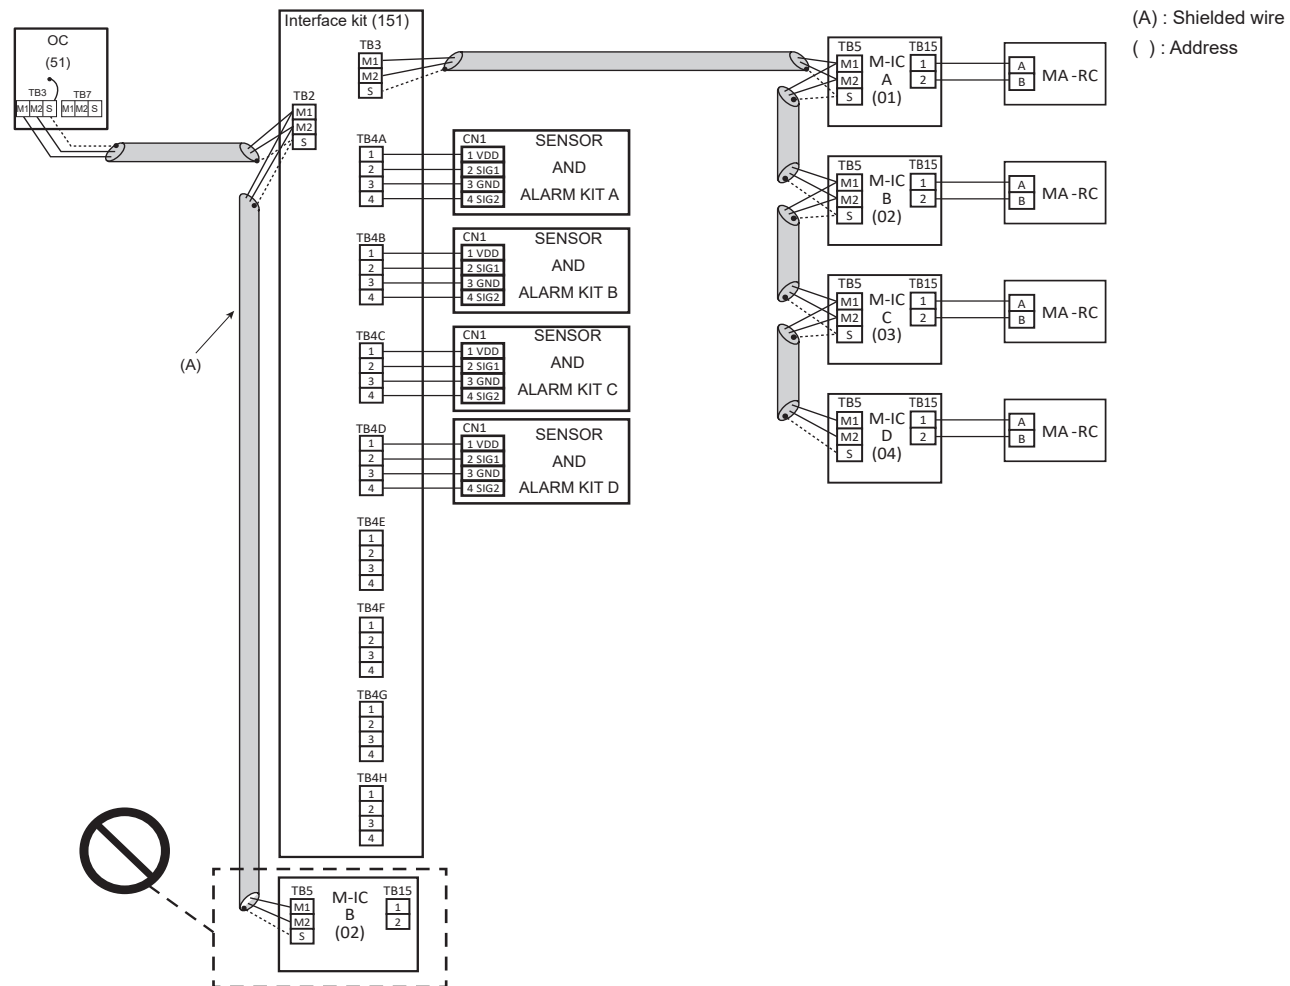


When connecting the interface kit, it is not possible to connect a M-IC or Branch box without through the interface kit.

6. Electrical work

6.4.5 Example of 2 or more outdoor units

■ Examples of wiring transmission cables

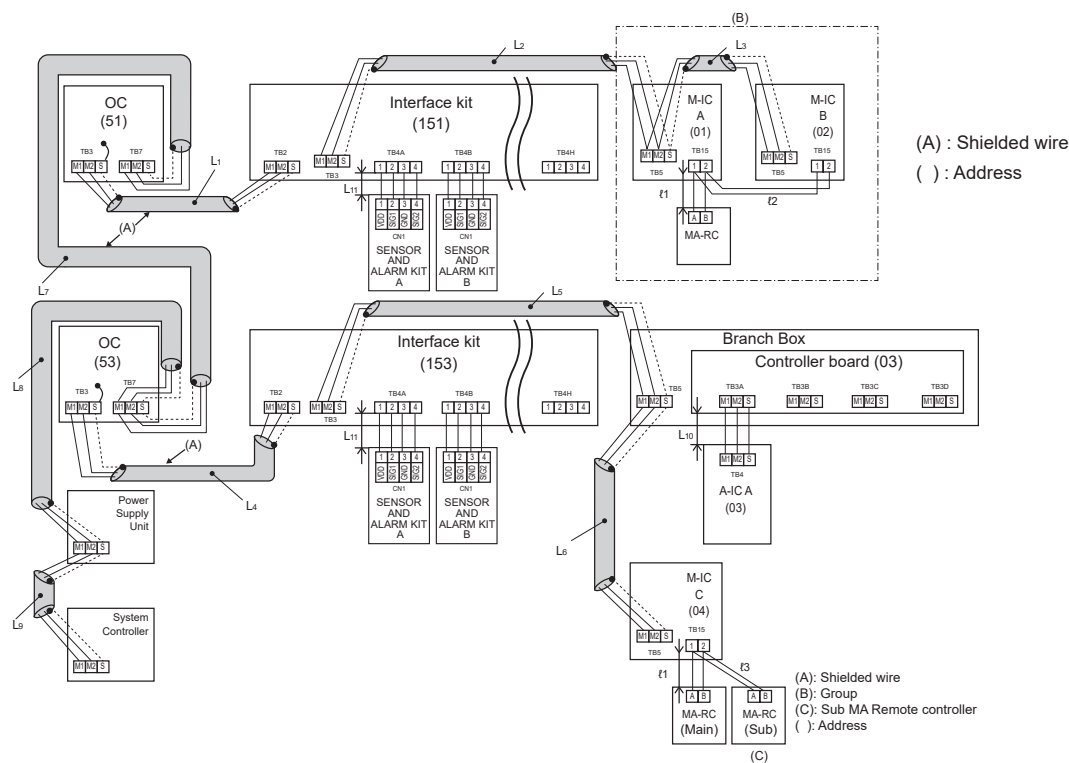

■ Address Settings

For the manual address setting, see the table below.

Note:

- The automatic address setting is available for the Interface kit.
- If the automatic address setting is available for the M-IC, address setting is not required. Refer to the service manual for details.
- The outdoor unit (OC) and the Branch Box always require the manual address setting.
- Assign addresses to the outdoor units (OC) sequentially from the lowest address, spacing them according to the maximum number of the indoor units connected to each unit. (For example, if two indoor units are connected to the first outdoor unit "51", the second outdoor unit will be "53".)
- For the automatic address setting, set the address of the applicable device to "00".

Unit	Range	Setting Method
M-IC	001 to 050	-
A-IC	001 to 050	According to the set address of connected Branch box, set the A-IC addresses sequentially by SW1, SW11, SW12 on the Branch box. (For example, when the Branch box address is set to 01, set the A-IC addresses to 01, 02, 03, and 04.)
Branch Box	001 to 050	Use a number within the range 1-50, but it should not make the highest address of the connected A-IC exceed 50.
OC	051 to 100	Use the smallest address of all the Branch boxes plus 50. * The address automatically becomes "100" if it is set as "01-50".
MA-RC	-	-
Interface Kit	151 to 200	Use the number within the range 151-200. (If it is set as "200", the switch setting is "00".)

■ Wiring Method

1. Always use the shielded wire when making connections between the outdoor unit (OC), Interface kit, and the M-IC/Branch box, as well for all OC-OC, OC-IF, IF-IC, IC-IC, and IF-BC wiring.
2. Use the feed wiring to connect the terminals M1, M2, and S (Connected to ground) on the transmission cable terminal block (TB3) of each outdoor unit (OC) to the terminals M1, M2, and S (Connected to ground) on the transmission cable terminal block (TB2) of the Interface kit. Also connect the terminals M1, M2, and S on the transmission cable terminal block (TB3) of the Interface Kit to the terminals M1, M2, and S on the transmission cable terminal block (TB5) of the M-IC/Branch box. Use the nonpolarized 2-core wire.
3. Connect the terminals 1 and 2 on the transmission cable terminal block (TB5/TB15) of the A-control indoor unit (A-IC) or the CITY MULTI series indoor unit (M-IC) to the terminal block on the MA remote controller (MA-RC).
4. Connect together the terminals M1, M2, and S on the terminal block for the centralized control (TB7) for the outdoor unit (OC).
5. When the system controller is connected to the system, set SW5-1 on all outdoor units to ON.
Also, set the power supply switching connectors (CN40, CN41) as follows.

6. Electrical work

Refrigerant system	Connection with system controller	Transmission line power supply unit	Power supply switching connector settings
Single refrigerant	—	—	Remains CN41 (default setting)
Multiple refrigerants	Connection with indoor/outdoor transmission line	Not required	For one outdoor unit only, switch the power supply switching connector (CN41) to (CN40). * Short-circuit the S (shield) terminal and the ground terminal () of the terminal block (TB7) of one outdoor unit switched to CN40.
	Connection with central control system transmission line	Required	Remains CN41 (default setting)

6. For systems with the interface kit connected, turn SW5-7 ON.

* SENSOR AND ALARM KIT, M-IC and Branch Box also needs to be set up. For details, refer to the installation manual for the SENSOR AND ALARM KIT, Indoor unit, and Branch Box.

If the SW setting is incorrect, an system error (e.g. error 7130) may occur and the system may not start up.

■ Permissible Lengths

1. Maximum line length via outdoor unit (M-NET cable):

$L1 + L2 + L3 + L7 + L8 + L9, L4 + L5 + L6 + L8 + L9, L1 + L2 + L3 + L4 + L5 + L6 + L7 \leq 500$ m (1.25 mm² or more)

2. Indoor/Branch box/outdoor transmission line Maximum length (M-NET cable):

$L1 + L2 + L3, L4 + L5 + L6, L7 + L8, L9 \leq 200$ m (1.25 mm² or more)

3. Indoor/Branch box transmission line Maximum length (A-Control cable):

$L10 \leq 25$ m (1.5 mm²)


4. MA Remote controller cable length:

$l1, l1 + l2, l1 + l3 \leq 200$ m (0.3 to 1.25 mm²)

5. Sensor and alarm kit - Branch box connection cable length:

$L11 \leq 40$ m, (0.5 mm²)

■ Constraint items

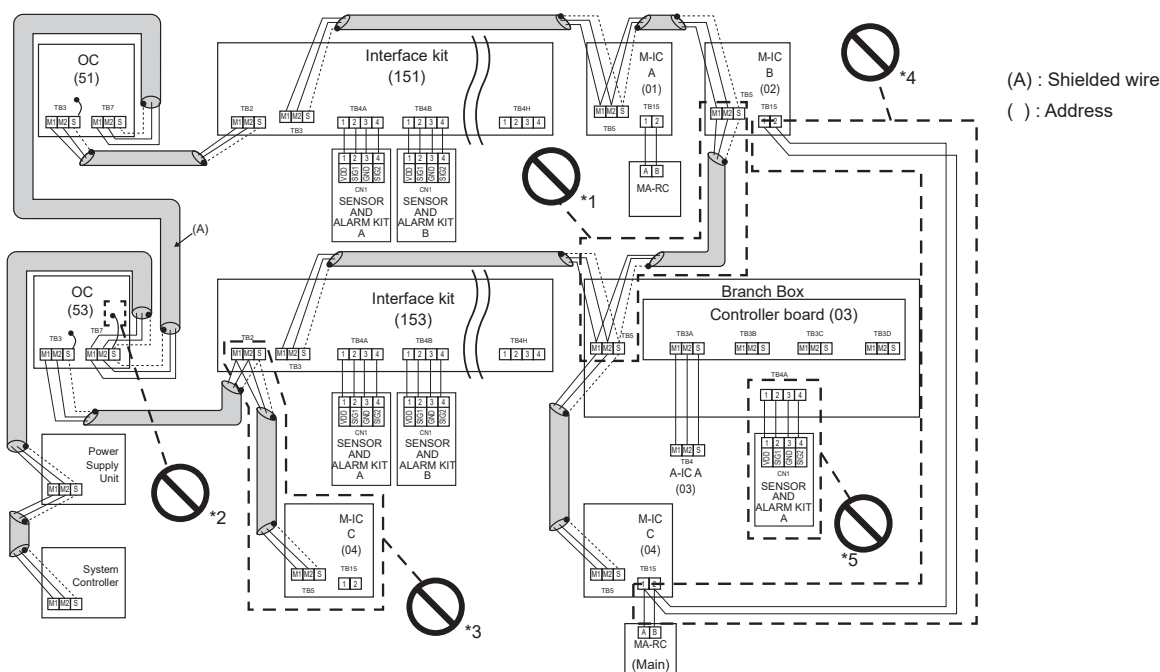

*1. Never connect together the terminal blocks (TB5) for the transmission wires for the CITY MULTI series indoor units (M-IC) that have been connected to different outdoor units (OC).

*2. The earth processing of the terminal S for the centralized control terminal block (TB7) is unnecessary. Connect the terminal S on the power supply unit with the earth.

*3. When connecting the interface kit, it is not possible to connect a M-IC or Branch box without through the interface kit.

*4. Grouping across the refrigerant systems is prohibited.

*5. If connecting the interface kit, the Sensor and alarm kit must be connected to the interface kit.


6. Electrical work

6.5. Wiring of main power supply and equipment capacity

Schematic Drawing of Wiring: When Not Using a Branch box (Example) (Fig. 6-2)


■ PUMY-SM-VKM

 ~N 220-230-240 V 50 Hz



■ PUMY-SM-YKM

 3N~ 380-400-415 V 50 Hz



~N 220-230-240 V 50 Hz

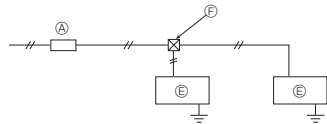



Fig. 6-2

Schematic Drawing of Wiring: When using a Branch box (Example) (Fig. 6-3)

<When Power Is Supplied from the Outdoor Unit>


■ PUMY-SM-VKM

~N 220-230-240 V 50 Hz

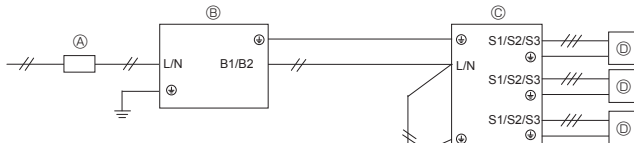


■ PUMY-SM-YKM

3N~ 380-400-415 V 50 Hz

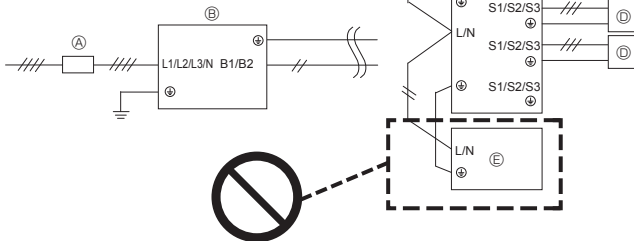

~N 220-230-240 V 50 Hz

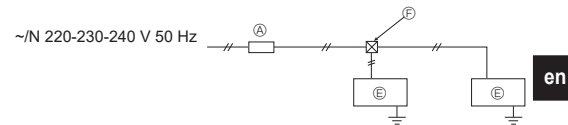


- Ⓐ Switch
(Breakers for Wiring and Current Leakage)
- Ⓑ Outdoor Unit
- Ⓒ Branch box
- Ⓓ A-Control Indoor Unit
(M, S, P series indoor unit)
- Ⓔ M-NET Control Indoor Unit
(City Multi indoor unit)
- Ⓕ Pull Box

* The M-NET Control Indoor unit cannot receive power supplied from an outdoor unit, so provide it with power separately.

<When Power Is Supplied Separately>

■ PUMY-SM-VKM

~N 220-230-240 V 50 Hz

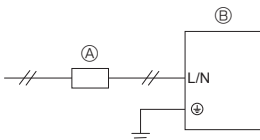

■ PUMY-SM-YKM

3N~ 380-400-415 V 50 Hz

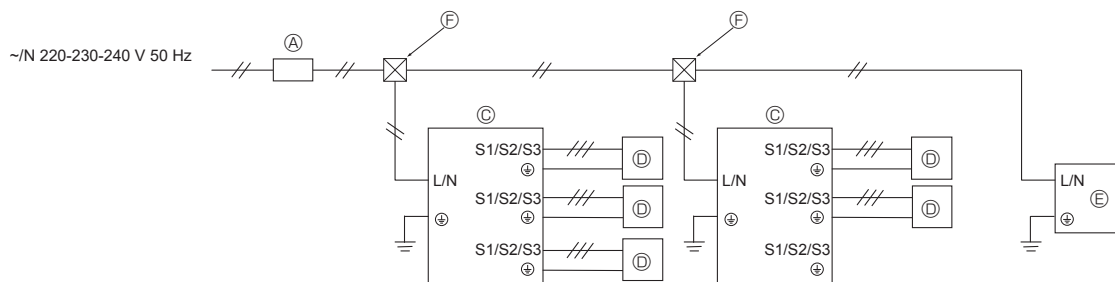
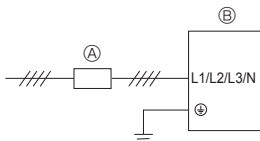


Fig. 6-3

Note:

The interface kit must be a power supply separately. For details, refer to the installation manual of interface kit.

6. Electrical work

Cross-sectional area of Wire for Main Power Supply and On/Off Capacities

<When power is supplied separately>

Model		Power Supply	Minimum Wire Cross-sectional area (mm ²)		Breaker for Wiring *1	Breaker for Current Leakage
			Main Cable	Ground		
Outdoor Unit	SM112-140VKM2	~N 220-230-240 V 50 Hz	6.0	6.0	32 A	32 A 30 mA 0.1 sec. or less
	SM112-140YKM2	3N~ 380-400-415 V 50 Hz *2	2.5	2.5	16 A	16 A 30 mA 0.1 sec. or less

<When power is supplied from the outdoor unit>

Model		Power Supply	Minimum Wire Cross-sectional area (mm ²)		Breaker for Wiring *1	Breaker for Current Leakage
			Main Cable	Ground		
Outdoor Unit	SM112-140VKM2	~N 220-230-240 V 50 Hz	6.0	6.0	40 A	40 A 30 mA 0.1 sec. or less
	SM112-140YKM2	3N~ 380-400-415 V 50 Hz *2	4.0	4.0	25 A	25 A 30 mA 0.1 sec. or less

*1 A breaker with at least 3.0 mm contact separation in each poles shall be provided. Use non-fuse breaker (NF) or earth leakage breaker (NV).

*2 In multi-phase appliances, the colour of the neutral conductor of the supply cord, if any, shall be blue.

<Indoor units> When power is supplied separately

Total operating current of the indoor unit	Minimum wire thickness (mm ²)			Ground-fault interrupter *1	Local switch (A)		Breaker for wiring (NFB)
	Main Cable	Branch	Ground		Capacity	Fuse	
F0 = 16 A or less *2	1.5	1.5	1.5	20 A current sensitivity *3	16	16	20
F0 = 25 A or less *2	2.5	2.5	2.5	30 A current sensitivity *3	25	25	30
F0 = 32 A or less *2	4.0	4.0	4.0	40 A current sensitivity *3	32	32	40

Apply to IEC61000-3-3 about max. permissive system impedance.

*1 The Ground-fault interrupter should support inverter circuit.

The Ground-fault interrupter should combine using of local switch or wiring breaker.

*2 Please take the larger of F1 or F2 as the value for F0.

F1 = Total operating maximum current of the indoor units × 1.2

F2 = {V1 × (Quantity of Type 1)/C} + {V1 × (Quantity of Type 2)/C} + {V1 × (Quantity of Type 3)/C} + ... + {V1 × (Quantity of Type 12)/C}

Connect to Branch box (PAC-MMK·BC)

Indoor unit		V1	V2
Type 1	PCA-M·KA3	19.8	2.4
	SEZ-M·DA(L)3		
Type 2	PEAD-M·JA(L)3	18.6	3.0
Type 3	PLA-M·EA3	17.1	2.4
	SLZ-M·FA3		
Type 4	MLZ-KP·VG	9.9	
Type 5	MLZ-KY·VG	7.4	
	MSZ-AY·VG(K)(P)2		
	MSZ-EF·VG(K)2		
	MSZ-LN·VG2, MSZ-LN·VG3		
	MSZ-RW·VG2		
Type 6	MSZ-BT·VG(K)2	6.1	
Type 7	Branch box (PAC-MMK40BC)	5.1	3.0
Type 8	Branch box (PAC-MMK60BC)	10.2	6.0

Connect to City Multi

Indoor unit		V1	V2
Type 9	PMFY-MS·VCM	19.8	2.4
	PCFY-MS·VKM2		
	PKFY-MS·VLM2		
	PKFY-MS·VKM2		
Type 10	PEFY-MS·VMA(L)	18.6	3.0
	PEFY-M·VMA(L)-A1		
Type 11	PLFY-M·VEM6	17.1	2.4
	PLFY-MS·VEM2		
	PLFY-MS·VFM2		
Type 12	PEFY-MS·VMS(L)	18.6	2.4
Type 13	PEFY-MS·VMHS	26.8	1.6

C : Multiple of tripping current at tripping time 0.01s

Please pick up "C" from the tripping characteristic of the breaker.

6. Electrical work

<Example of "F2" calculation>

Condition PLFY-M·VEM6-E × 4 + PEFY-M·VMA(L)-A1 × 1, C = 8 (refer to right sample chart)

$$F2 = 17.1 \times 4/8 + 18.6 \times 1/8$$

$$= 10.875$$

→ 16 A breaker (Tripping current = 8×16 A at 0.01s)


*3 Current sensitivity is calculated using the following formula.

$$G1 = V2 \times (\text{Quantity of Type1}) + V2 \times (\text{Quantity of Type2}) + V2 \times (\text{Quantity of Type3}) + \dots + V2 \times (\text{Quantity of Type12}) + V3 \times (\text{Wire length[km]})$$

G1	Current sensitivity
30 or less	30 mA 0.1 sec. or less
100 or less	100 mA 0.1 sec. or less

Wire thickness	V3
1.5 mm ²	48
2.5 mm ²	56
4.0 mm ²	66

Sample chart

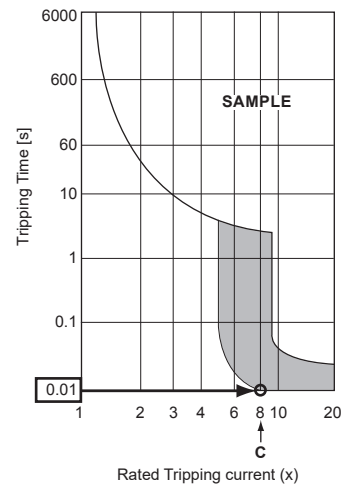


1. Bear in mind ambient conditions (ambient temperature, direct sunlight, rain water, etc.) when proceeding with the wiring and connections.
2. The wire size is the minimum value for metal conduit wiring. The power cord size should be 1 rank thicker consideration of voltage drops. Make sure the power-supply voltage does not drop more than 10%.
3. Specific wiring requirements should adhere to the wiring regulations of the region.
4. Power supply cords of parts of appliances for outdoor use shall not be lighter than polychloroprene sheathed flexible cord (design 60245 IEC57). For example, use wiring such as YZW.
5. Install an earth longer than other cables.

⚠ Warning:

- Be sure to use specified wires to connect so that no external force is imparted to terminal connections. If connections are not fixed firmly, it may cause heating or fire.
- Be sure to use the appropriate type of overcurrent protection switch. Note that generated overcurrent may include some amount of direct current.
- Be sure to attach the terminal block covers/panel of the outdoor unit securely. If it is not attached correctly, it could result in a fire or an electric shock due to dust, water, etc.

⚠ Caution:

- Be careful not to make mis-wiring.
- Firmly tighten the terminal screws to prevent them from loosening.
- After tightening, pull the wires lightly to confirm that they not move.
- If the connecting wire is incorrectly connected to the terminal block, the unit does not operate normally.
- Some installation site may require attachment of an earth leakage breaker. If no earth leakage breaker is installed, it may cause an electric shock.
- Do not use anything other than breaker and fuse with correct capacity. Using fuse and wire or copper wire with too large capacity may cause a malfunction of unit or fire.
- Properly route wiring so as not to contact the sheet metal edge or a screw tip.

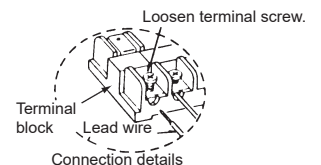

IMPORTANT

Make sure that the current leakage breaker is one compatible with higher harmonics.


Always use a current leakage breaker that is compatible with higher harmonics as this unit is equipped with an inverter.

The use of an inadequate breaker can cause the incorrect operation of inverter.

Never splice the power cable or the indoor-outdoor-Branch box connection cable, otherwise it may result in a smoke, a fire or communication failure.

⚠ Warning:

- Please turn off the main power supply when servicing. And do not touch the B1, B2 terminals when the power is energized. If isolator should be used between outdoor unit and Branch box, please use 2 pole type. (Please refer to figure below.)

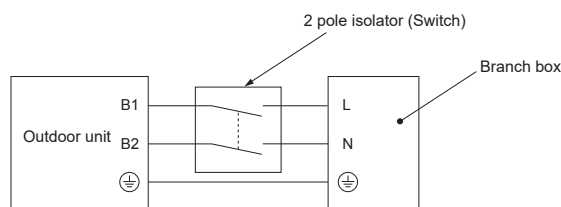

⚠ Caution:

After using the isolator, be sure to turn off and on the main power supply to reset the system. Otherwise, the outdoor unit may not be able to detect the Branch box(es) or indoor units.

Be sure to connect the outdoor-Branch box/indoor-Branch box connecting cables directly to the units (no intermediate connections). Intermediate connections can lead to communication errors if water enters the cables and causes insufficient insulation to ground or a poor electrical contact at the intermediate connection point.

6. Electrical work

6.6. Address setting

Switch address setting

	Outdoor	Branch box * The 6-Branch box model is equipped with two control boards. For detailed settings, refer to the Branch box Installation Manual.		M, S, P series Indoor	CITY MULTI series	Interface kit																															
		Address		Connection Setting																																	
Switch	  SWU2 SWU1   SW12 SW11	ON OFF 1 2 3 4 5 6 SW1	None	  SW12 SW11   SW12 SW11																																	
Range	51 - 100	1 - 50		—	1 - 50	151 - 200																															
Setting	CITY MULTI series Indoor or Branch box address + 50	• According to the set address (for example, 01), the addresses for the connected indoor units are set sequentially (for example, 02, 03, and 04). • The 6-Branch box model is equipped with two control boards, so settings are required for each of the control boards. <table><tr><td>SW1</td><td>1</td><td>2</td><td>3</td><td>4</td><td></td></tr><tr><td></td><td>ON</td><td>ON</td><td>ON</td><td>ON</td><td></td></tr><tr><td>Port</td><td>A</td><td>B</td><td>C</td><td>D</td><td></td></tr><tr><td>Address</td><td>01</td><td></td><td></td><td></td><td>(SW11, 12)</td></tr><tr><td></td><td></td><td>02</td><td>03</td><td>04</td><td>(sequential numbers)</td></tr></table>		SW1	1	2	3	4			ON	ON	ON	ON		Port	A	B	C	D		Address	01				(SW11, 12)			02	03	04	(sequential numbers)	Refer to the following table.	There are no address settings for the indoor units.	—	—
SW1	1	2	3	4																																	
	ON	ON	ON	ON																																	
Port	A	B	C	D																																	
Address	01				(SW11, 12)																																
		02	03	04	(sequential numbers)																																

- Specify whether indoor units are connected to each port.

	4-Branch model			6-Branch model					
				Control board-1			Control board-2		
SW1	Port	OFF	ON	Port	OFF	ON	Port	OFF	ON
1	A	Not connected	Connected	1-A	Not connected	Connected	2-A	Not connected	Connected
2	B	Not connected	Connected	1-B	Not connected	Connected	2-B	Not connected	Connected
3	C	Not connected	Connected	1-C	Not connected	Connected	2-C	Not connected	Connected
4	D	Not connected	Connected	Not used			Not used		
5	Not used			Not used			Not used		
6	Supervisor alarm	Not connected	Connected	Supervisor alarm	Not connected	Connected	Not used		

Note: 1. Branch box address

When setting the address, use a number within the range 1–50.

6. Electrical work

Automatic address setting

The automatic address setting has restrictions depending on the system configuration.
Refer to each section for details.

One Outdoor Unit system

Combination					
Outdoor Unit	Interface Kit	CITY MULTI Indoor unit	Branch Box	Automatic address setting	Refer to
✓		✓		All units allowed	6.4.1
✓	✓	✓		All units allowed	6.4.3
✓			✓	Branch Box requires manual settings	6.4.2
✓	✓		✓	Branch Box requires manual settings	6.4.4

2 or more Outdoor Units system

Combination					
Outdoor Unit	Interface Kit	CITY MULTI Indoor unit	Branch Box	Automatic address setting	Refer to
✓		✓		Outdoor unit requires manual settings. For indoor units, manual settings are required for some models. For details, refer to the service handbook.	6.4.5
✓	✓	✓		Outdoor unit requires manual settings. For indoor units, manual settings are required for some models. For details, refer to the service handbook.	6.4.5
✓			✓	Outdoor unit and Branch Box require manual settings.	6.4.5
✓	✓		✓	Outdoor unit and Branch Box require manual settings.	6.4.5

Address Initialization/Resetting Operation

In a system using Interface Kit, if you need to change the address of the outdoor unit or, for any reason, change the address set by automatic address, follow the steps below to perform address initialization/resetting.

1. Shut down all indoor units in the refrigerant circuit system for which you are performing address initialization/resetting.
2. Turn ON function setting No. 43 on the OC. (Note 1)
3. Turn OFF the OC power, then turn it on. (Note 2)

Note 1: For information on how to operate the function settings, see 8.2. Function Settings.

Note 2: Turn the power on within 10 minutes of setting the function setting ON.

If more than 10 minutes have passed, the function setting will automatically change from ON to OFF.
Turn the power back ON and then turn the power on.

7. Test run

7.1. Before test run

- ▶ After completing installation and the wiring and piping of the indoor and outdoor units, check for refrigerant leakage, looseness in the power supply or control wiring, wrong polarity, and no disconnection of one phase in the supply.
 - ▶ Use a 500-volt M-ohm tester to check that the resistance between the power supply terminals and ground is at least 1 MΩ.
 - ▶ Do not carry out this test on the control wiring (low voltage circuit) terminals.
-  **Warning:**
Do not use the air conditioner if the insulation resistance is less than 1 MΩ.

Insulation resistance

After installation or after the power source to the unit has been cut for an extended period, the insulation resistance will drop below 1 MΩ due to refrigerant accumulation in the compressor. This is not a malfunction. Perform the following procedures.

1. Remove the wires from the compressor and measure the insulation resistance of the compressor.
2. If the insulation resistance is below 1 MΩ, the compressor is faulty or the resistance dropped due to the accumulation of refrigerant in the compressor.

3. After connecting the wires to the compressor, the compressor will start to warm up after power is supplied. After supplying power for the times indicated below, measure the insulation resistance again.
 - The insulation resistance drops due to accumulation of refrigerant in the compressor. The resistance will rise above 1 MΩ after the compressor is warmed up for 12 hours.
(The time necessary to warm up the compressor varies according to atmospheric conditions and refrigerant accumulation.)
 - To operate the compressor with refrigerant accumulated in the compressor, the compressor must be warmed up at least 12 hours to prevent breakdown.
4. If the insulation resistance rises above 1 MΩ, the compressor is not faulty.

Caution:

- **The compressor will not operate unless the power supply phase connection is correct.**

- **Turn on the power at least 12 hours before starting operation.**

- Starting operation immediately after turning on the main power switch can result in severe damage to internal parts. Keep the power switch turned on during the operational season.

- ▶ **The followings must be checked as well.**

- The outdoor unit is not faulty. LED on the control board of the outdoor unit flash when the outdoor unit is faulty.
- Both the gas and liquid stop valves are completely open.

7.2. Test run

7.2.1. Using remote controller

Refer to the indoor unit installation manual.

- Be sure to perform the test run for each indoor unit. Make sure each indoor unit operates properly following the installation manual attached to the unit.
- If you perform the test run for all indoor units at once, you cannot detect any erroneous connection, if any, of the refrigerant pipes and the connecting wires.
- The compressor operation is not available for 3 minutes at least after the power is supplied.
- The compressor can emit noise just after turn on the power supply or in case of low outside air temperature.
- Depending on the operating conditions, the outdoor unit fan may stop while the compressor is operating, but this is not a malfunction.

About the restart protective mechanism

Once the compressor stops, the restart preventive device operates so the compressor will not operate for 3 minutes to protect the air conditioner.

7.2.2. Using SW6 in outdoor unit

Note:

In case of the test run from outdoor unit, all indoor units operate. Therefore, you can not detect any erroneous connection of refrigerant pipes and the connecting wires. If it aims at detection of any erroneous connection, be sure to carry out the test run from remote controller with reference to "7.2.1. Using remote controller."

SW6-1	ON	Cooling operation
SW6-2	OFF	
SW6-1	ON	Heating operation
SW6-2	ON	

- * After performing the test run, set SW6-1 to OFF.

- A few seconds after the compressor starts, a clanging noise may be heard from the inside of the outdoor unit. The noise is coming from the check valve due to the small difference in pressure in the pipes. The unit is not faulty.

The test run operation mode cannot be changed by DIP switch SW6-2 during the test run. (To change the test run operation mode during the test run, stop the test run by DIP switch SW6-1. After changing the test run operation mode, resume the test run by switch SW6-1.)

7.3. Refrigerant collecting (Pump down)

Perform the following procedures to collect the refrigerant when moving the indoor unit or the outdoor unit.

1. Turn off the circuit breaker.
2. Connect the low pressure side of the gauge manifold to the service port of the gas side stop valve.
3. Close the liquid stop valve.
4. Supply power (circuit breaker).
 - * Start-up of the indoor-outdoor communication takes about 3 minutes after the power (circuit breaker) is turned on. Start the pump-down operation 3 to 4 minutes after the power (circuit breaker) is turned ON.
5. Perform the test run for cooling operation (SW6-1: ON and SW6-2: OFF). The compressor (outdoor unit) and ventilators (indoor and outdoor units) start operating and test run for cooling operation begins. Immediately after performing the test run for cooling operation, set the outdoor service switch SW6-5 (pump down switch) from OFF to ON.
 - * Do not continue to operate for a long time with the switch SW6-5 set to ON. Make sure to switch it to OFF after pump down is completed.
 - * Only set the SW6-1 to ON if the unit is stopped. However, even if the unit is stopped and the SW6-1 is set to ON less than 3 minutes after the compressor stops, the refrigerant collecting operation cannot be performed. Wait until the compressor has been stopped for 3 minutes and then set the SW6-1 to ON again.
 - * When connecting a Cylinder or Hydrobox unit, do not use the DipSW functions of outdoor unit. Operate all of the indoor units, excluding a Cylinder or Hydrobox unit, in cooling mode.

6. Fully close the gas stop valve when the pressure reading on the gauge drops 0.05 - 0.00 MPa (approximately 0.5 - 0.0 kgf/cm²)
7. Stop the air conditioner operation (SW6-1: OFF). Set the outdoor service switch SW6-5 from ON to OFF.
 - * When connecting a Cylinder or Hydrobox unit, stop the indoor units operation.
8. Turn off the power supply (circuit breaker).
 - * If too much refrigerant has been added to the air conditioner system, the pressure may not drop to 0.05 MPa (0.5 kgf/cm²). If this occurs, use a refrigerant collecting device to collect all of the refrigerant in the system, and then recharge the system with the correct amount of refrigerant after the indoor and outdoor units have been relocated.

Warning:

- **When pumping down the refrigerant, stop the compressor before disconnecting the refrigerant pipes. The compressor may burst and cause injury if any foreign substance, such as air, enters the system.**
- **Do not perform pump down work when there is a gas leak. The intake of air or other gases causes abnormally high pressure in the refrigeration cycle, which may cause explosion or injury.**

7. Test run

7.4. Circuit inspection


Note:
Checking method varies depending on your system configuration.
The circuit inspections are performed on the MA remote controller or the sensor alarm kit.
This function may not be supported depending on the indoor unit and the Branch Box,
so please refer to the service handbook for details.

7.4.1 Using MA remote controller (PAR-42MAAB or later)

1. Press the Menu button at the main display.



2. Use the F2 and F3 buttons to move the cursor.

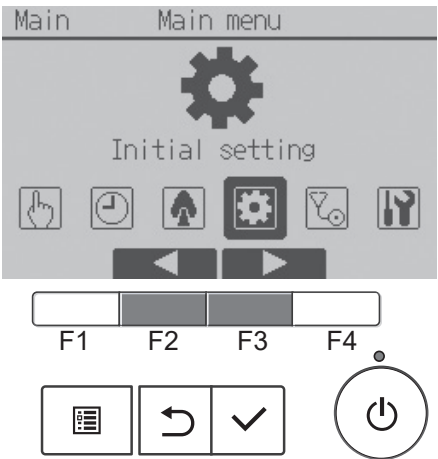

3. Select the [Service] menu and press [✓] button.




7. Test run


4. Select [Test run] and press [✓] button.





5. Select [Circuit check] and press [✓] button.

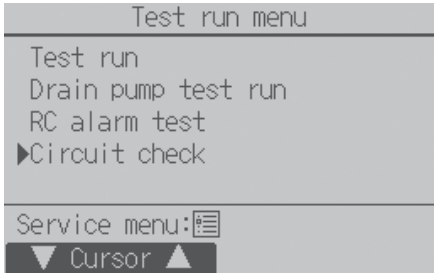


6. After confirming the screen, press [✓] button to start the circuit inspection.

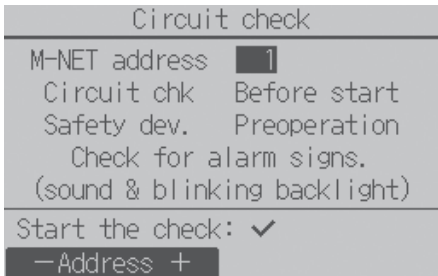

- When the alarm is activated, an alarm will sound, and then the operation lamp and backlight will flash. (Approximately 10 seconds)
- The operating time of the safety shut-off valve varies depending on the system. (Approximately 10 seconds to 2 minutes)
- When the supervisor remote controller is connected, the alarm of the supervisor remote controller will also sound, and then the operation lamp and backlight will flash. (Approximately 10 seconds)
- To stop the alarm, press the [Stop] button. A confirmation screen will be displayed, so select [Yes] to stop the alarm.

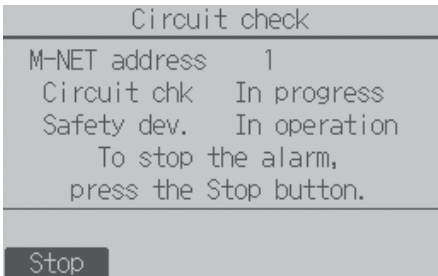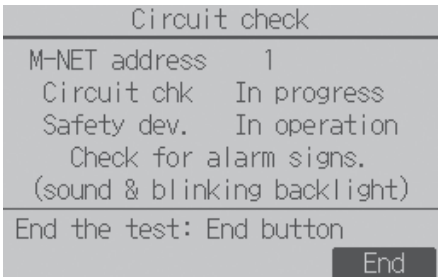

7. After the safety shut-off valve completed its operation, press [✓] button to complete the circuit inspection.

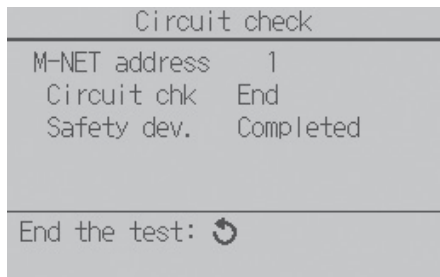

7. Test run

- If the circuit inspection is interrupted:
The circuit inspection will be marked as "incomplete".
An error may be displayed on a unit other than the circuit inspection target. In that case, please clear the error.
If an error is displayed on the remote controller, perform the start/stop operation on the main remote to clear the error.
- If the circuit inspection result is abnormal:
Please check the situation, abnormality has actually been detected or that the device has occur a power outage.
- If the alarm does not sound or the lamp does not flash:
The remote controller may be malfunctioning. Please stop using it and contact your nearest service center.
- To clear an abnormality on the supervisor remote controller, perform the start/stop operation on the main remote controller.
Note: After 5 minutes have passed since the circuit inspection was completed, the abnormality display will be cleared.



7.4.2 Using SENSOR AND ALARM KIT (PAC-SL72SA or later)

1. Press and hold the button on the sensor alarm kit for 5 seconds.
 2. When the button is released, the buzzer sounds and all lamps light up.
Press the button once briefly within 3 seconds again, the circuit inspection will start.
 3. When the alarm is triggered, an alarm will sound and the lamps will light up in sequence (white/red/orange).
(For a few to 10 seconds)

When the supervisor remote controller is connected, the alarm of the supervisor remote controller will also sound, and then the operation lamp and backlight will flash.
(Approximately 10 seconds)

The operating time of the safety shut-off valve varies depending on the system.
(Approximately 10 seconds to 2 minutes)
 4. After the safety shut-off valve completed its operation, all the lamps will light up.
Press the alarm stop button to complete the circuit inspection.
- If the circuit inspection does not start, try to press the button again.
After holding it down for 5 seconds, you must press it again briefly within 3 seconds.
 - If the alarm does not sound, the sensor alarm kit may be faulty.
Please stop using it and contact your nearest service center.
 - If the lamp does not light up properly, the sensor alarm kit may be faulty.
Please stop using it and contact your nearest service center.

LED lights in order

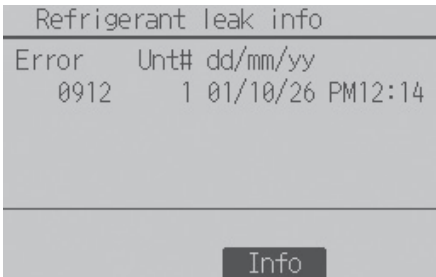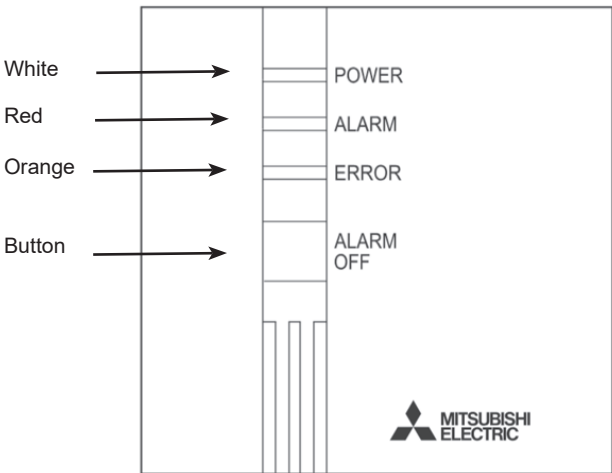


en

8. Special functions

8.1. OUTDOOR UNIT INPUT/OUTPUT CONNECTOR

• State (CN51)

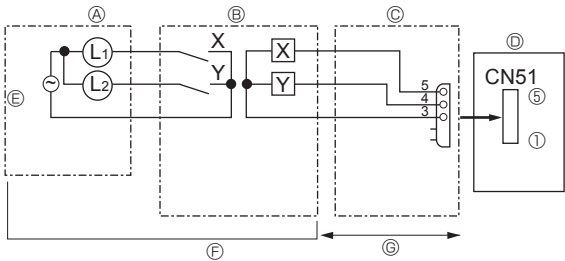

- Ⓐ Distant control board

Ⓑ Relay circuit

Ⓒ External output adapter (PAC-SA88HA-E)

Ⓓ Outdoor unit control board

L1: Error display lamp


L2: Compressor operation lamp

X, Y: Relay (coil rating: ≤ 0.9 W, 12 VDC)
- Ⓔ Lamp power supply

Ⓕ Procure locally

Ⓖ Max. 10 m

• Silent Mode / Demand Control (CN3D)

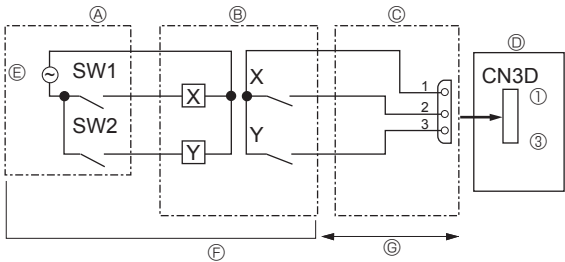

- Ⓐ Remote control panel

Ⓑ Relay circuit

Ⓒ External input adapter (PAC-SC36NA-E)

Ⓓ Outdoor unit control board

SW1: Switch

SW2: Switch

X, Y: Relay (contact rating: ≥ 0.1 A, 15 VDC)
(min. applicable load: ≤ 1 mA)
- Ⓔ Relay power supply

Ⓕ Procure locally

Ⓖ Max. 10 m

The silent mode and the demand control are selected by switching the function setting No.10 on the outdoor controller board. It is possible to set it to the following power consumption (compared with ratings) by setting SW1, 2.

	Outdoor controller board function setting No.10	SW1	SW2	Function
Silent mode	OFF	OFF	OFF	Normal
		ON	OFF	Silent mode *
		OFF	ON	Super silent mode1 *
		ON	ON	Super silent mode2 *
Demand control	ON	OFF	OFF	100% (Normal)
		ON	OFF	75%
		ON	ON	50%
		OFF	ON	0% (Stop)

* Cooling only

• External static pressure mode (30 Pa)

The external static pressure mode (30 Pa) is enabled by switching the function setting No. 24 on the outdoor controller board to ON. However, the silent mode cannot be used when this mode is enabled.

Outdoor controller board function setting No. 24	ON	OFF
External static pressure mode (30 Pa)	Enabled	Disabled

8.2. Function setting

Make function settings by setting the dipswitches SW4, SW6, and SWP3 on the main board. Write down the switch settings on the electrical wiring diagram label on the control box front panel for future reference when the control box needs to be replaced.

- Take the following steps to make function settings.
 - Set the SW6-10 to ON.
 - Set SW4 as shown in the table below to select the setting item No.0006, 0010, 0024 or 0042. (The setting item No. will be displayed on LED1.)
 - Press SWP3 for 2 seconds or longer to change the settings. (The setting item No. and the setting condition (enable [ON] / normal [OFF]) are displayed alternately by the second.)

Function	Setting item No.	SW4 0: OFF, 1: ON *1										Setting (LED1 display)	
		1	2	3	4	5	6	7	8	9	10	ON	OFF
Primary current limitation	0006	0	1	1	0	0	0	0	0	0	0	Enable	Disable
Switching the Silent/Demand mode	0010	0	1	0	1	0	0	0	0	0	0	Demand control	Silent mode
External static pressure	0024	0	0	0	1	1	0	0	0	0	0	Enable	Disable
Address initialization/resetting	0043	1	1	0	1	0	1	0	0	0	0	Initialization/resetting	Disable

*1 Make the SW4 setting after the unit is energized.

9. Preventive maintenance for the unit

The maintenance cycle does not indicate the guarantee period.

The list below is applicable under the following conditions:

- The unit is used normally: it does not start and stop frequently. (The number of start/stop is 6 times or less per hour in normal use though it depends on the model.)
- The operating time is assumed to be 10 hours a day and 2,500 hours a year. (It can be longer for the unit which operates during the night.)

Additionally, the “maintenance cycle” and “replacement cycle” need to be reviewed to be shortened when the following conditions are satisfied:

- The unit is used under high temperature or high humidity, or in the place where the temperature or humidity changes severely.
- The unit is used in the place where the power (voltage, frequency, or waveform) fluctuates a lot. (The unit cannot be used if the power is out of the allowable range.)
- The unit is used in the place where a lot of vibration or impacts are applied.
- The unit is used in a bad environment such as in the dusty area, the high-salt area, or the area where noxious gas (sulfur dioxide or hydrogen sulfide) or oil-mist exists.
- The unit starts and stops frequently or the operating time is long (such as under 24-hour air conditioning).

List of “inspection cycle” and “maintenance cycle”

Part name	Inspection cycle	Maintenance cycle (Replacement or repairing)
Compressor	1 year	20,000 hours
Motor		20,000 hours
Electronic boards		25,000 hours
Heat exchanger		5 years
Expansion valve		20,000 hours
Valve (solenoid valve, 4-way valve)		20,000 hours
Sensor		5 years
Drain pan		8 years

10. Specifications

PUMY-SM112/125/140V(Y)KM2(-BS) PUMY-SM112/125/140V(Y)KM2-ET(-BS)		Cooling [D.B.*1]	Heating [W.B.*2]
Maximum operating temperature	°C	52	15
Minimum operating temperature	°C	-5	-20

*1 D.B. : Dry Bulb Temperature

*2 W.B. : Wet Bulb Temperature

en

<ENGLISH>

English is original. The other language versions are translations of the original.

CAUTION

- Refrigerant leakage may cause suffocation. Provide ventilation in accordance with EN378-1.
- Be sure to wrap insulation around the piping. Direct contact with the bare piping may result in burns or frostbite.
- Never put batteries in your mouth for any reason to avoid accidental ingestion.
- Battery ingestion may cause choking and/or poisoning.
- Install the unit on a rigid structure to prevent excessive operation sound or vibration.
- The A-weighted sound pressure level is below 70dB.
- This appliance is intended to be used by expert or trained users in shops, in light industry and on farms, or for commercial use by lay persons.

<DEUTSCH>

Das Original ist in Englisch. Die anderen Sprachversionen sind vom Original übersetzt.

VORSICHT

- Wenn Kältemittel austritt, kann dies zu Erstickten führen. Sorgen Sie in Übereinstimmung mit EN378-1 für Durchlüftung.
- Die Leitungen müssen isoliert werden. Direkter Kontakt mit nicht isolierten Leitungen kann zu Verbrennungen oder Erfrierungen führen.
- Nehmen Sie niemals Batterien in den Mund, um ein versehentliches Verschlucken zu vermeiden.
- Durch das Verschlucken von Batterien kann es zu Erstickungen und/oder Vergiftungen kommen.
- Installieren Sie das Gerät auf einem stabilen Untergrund, um übermäßige Betriebsgeräusche oder -schwingungen zu vermeiden.
- Der A-gewichtete Schalldruckpegel ist niedriger als 70dB.
- Dieses Gerät ist vorgesehen für die Nutzung durch Fachleute oder geschultes Personal in Werkstätten, in der Leichtindustrie und in landwirtschaftlichen Betrieben oder für die kommerzielle Nutzung durch Laien.

<FRANÇAIS>

L'anglais est l'original. Les versions fournies dans d'autres langues sont des traductions de l'original.

PRECAUTION

- Une fuite de réfrigérant peut entraîner une asphyxie. Fournissez une ventilation adéquate en accord avec la norme EN378-1.
- Assurez-vous que la tuyauterie est enveloppée d'isolant. Un contact direct avec la tuyauterie nue peut entraîner des brûlures ou des engelures.
- Ne mettez jamais des piles dans la bouche pour quelque raison que ce soit pour éviter de les avaler par accident.
- Le fait d'ingérer des piles peut entraîner un étouffement et/ou un empoisonnement.
- Installez l'appareil sur une structure rigide pour prévenir un bruit de fonctionnement et une vibration excessifs.
- Le niveau de pression acoustique pondéré est en dessous de 70 dB.
- Cet appareil est conçu pour un utilisateur expert ou les utilisateurs formés en magasin, dans l'industrie légère et dans l'agriculture ou dans le commerce par le profane.

<NEDERLANDS>

Het Engels is het origineel. De andere taalversies zijn vertalingen van het origineel.

VOORZICHTIG

- Het lekken van koelvloeistof kan verstikking veroorzaken. Zorg voor ventilatie in overeenstemming met EN378-1.
- Isoleer de leidingen met isolatiemateriaal. Direct contact met de onbedekte leidingen kan leiden tot brandwonden of bevriezing.
- Stop nooit batterijen in uw mond om inslikking te voorkomen.
- Het inslikken van batterijen kan verstikking of vergiftiging veroorzaken.
- Installeer het apparaat op een stabiele structuur om overmatig lawaai of trillingen te voorkomen.
- Het niveau van de geluidsdruk ligt onder 70 dB(A).
- Dit apparaat is bedoeld voor gebruik door ervaren of opgeleide gebruikers in werkplaatsen, in de lichte industrie en op boerderijen, of voor commercieel gebruik door leken.

<ESPAÑOL>

El idioma original del documento es el inglés. Las versiones en los demás idiomas son traducciones del original.

CUIDADO

- Las pérdidas de refrigerante pueden causar asfixia. Se debe proporcionar la ventilación determinada en EN378-1.
- Asegúrese de colocar el aislante alrededor de las tuberías. El contacto directo con la tubería puede ocasionar quemaduras o congelación.
- Para evitar una ingestión accidental, no coloque las pilas en su boca bajo ningún concepto.
- La ingestión de las pilas puede causar asfixia y/o envenenamiento.
- Coloque la unidad en una estructura rígida para evitar que se produzcan sonidos o vibraciones excesivos debidos a su funcionamiento.
- El nivel de presión acústica ponderado A es inferior a 70 dB.
- Este aparato está destinado a su uso por parte de usuarios expertos o capacitados en talleres, industrias ligeras y granjas, o a su uso comercial por parte de personas no expertas.

<ITALIANO>

Il testo originale è redatto in lingua Inglese. Le altre versioni linguistiche rappresentano traduzioni dell'originale.

ATTENZIONE

- Le perdite di refrigerante possono causare asfissia. Prevedere una ventilazione adeguata in conformità con la norma EN378-1.
- Accertarsi di applicare materiale isolante intorno alle tubature. Il contatto diretto con le tubature non schermate può provocare ustioni o congelamento.
- Non introdurre in nessun caso le batterie in bocca onde evitare ingestioni accidentali.
- L'ingestione delle batterie può provocare soffocamento e/o avvelenamento.
- Installare l'unità su una struttura rigida in modo da evitare rumore o vibrazioni eccessivi durante il funzionamento.
- Il livello di pressione del suono ponderato A è inferiore a 70dB.
- Questa apparecchiatura è destinata all'utilizzo da parte di utenti esperti o addestrati in negozi, industria leggera o fattorie oppure a un uso commerciale da parte di persone non esperte.

<ΕΛΛΗΝΙΚΑ>

Η γλώσσα του πρωτοτύπου είναι η αγγλική. Οι εκδόσεις άλλων γλωσσών είναι μεταφράσεις του πρωτοτύπου.

ΠΡΟΣΟΧΗ

- Η διαρροή του ψυκτικού ενδέχεται να προκαλέσει ασφυξία. Φροντίστε για τον εξερισμό σύμφωνα με το πρότυπο EN378-1.
- Φροντίστε να τυλίξετε με μονωτικό υλικό τη σωλήνωση. Η απευθείας επαφή με τη γυμνή σωλήνωση ενδέχεται να προκαλέσει εγκαυματα ή κρυοπαγήματα.
- Μη βάζετε ποτέ τις μπαταρίες στο στόμα σας για κανένα λόγο ώστε να αποφύγετε την κατά λάθος κατάποσή τους.
- Η κατάποση μπαταριών μπορεί να προκαλέσει πνιγμό ή/και δηλητηρίαση.
- Εγκαταστήστε τη μονάδα σε σταθερή κατασκευή ώστε να αποφύγετε τον έντονο ήχο λειτουργίας ή τους κραδασμούς.
- Η Α-σταθμισμένη στάθμη ηχητικής πίεσης είναι κάτω των 70dB.
- Η συσκευή αυτή προορίζεται για χρήση από έμπειρους ή εκπαιδευμένους χρήστες σε καταστήματα, στην ελαφριά βιομηχανία και σε αγροκτήματα, ή για εμπορική χρήση από άτομα τα οποία δεν είναι ειδήμονες.

<PORTUGUÊS>

O idioma original é o inglês. As versões em outros idiomas são traduções do idioma original.

CUIDADO

- A fuga de refrigerante pode causar asfixia. Garanta a ventilação em conformidade com a norma EN378-1.
- Certifique-se de que envolve as tubagens com material de isolamento. O contacto directo com tubagens não isoladas pode resultar em queimaduras ou ulcerações provocadas pelo frio.
- Nunca coloque pilhas na boca, por nenhum motivo, para evitar a ingestão accidental.
- A ingestão de uma pilha pode causar obstrução das vias respiratórias e/ou envenenamento.
- Instale a unidade numa estrutura robusta, de forma a evitar ruídos ou vibrações excessivos durante o funcionamento.
- O nível de pressão sonora ponderado A é inferior a 70 dB.
- Este equipamento destina-se a ser utilizado por especialistas ou utilizadores com formação em lojas, na indústria ligeira e em quintas, ou para utilização comercial por leigos.

<DANSK>

Engelsk er originalen. De andre sprogversioner er oversættelser af originalen.

FORSIGTIG

- Lækage af kølemiddel kan forårsage kvælning. Sørg for udluftning i overensstemmelse med EN378-1.
- Sørg for at pakke rørene ind i isolering. Direkte kontakt med ubeklædte rør kan forårsage forbrændinger eller forfrysninger.
- Batterier må under ingen omstændigheder tages i munden for at forhindre utilsigtet indtagelse.
- Indtagelse af batterier kan forårsage kvælning og/eller forgiftning.
- Installer enheden på en fast struktur for at forhindre for høje driftslyde eller vibrationer.
- Det A-vægtede lydtrykniveau er under 70dB.
- Dette apparat er beregnet til at blive brugt af eksperter eller udlærte brugere i butikker, inden for let industri og på gårde eller til kommerciel anvendelse af lægmænd.

<SVENSKA>

Engelska är originalspråket. De övriga språkversionerna är översättningar av originalet.

FÖRSIKTIGHET

- Köldmedelsläckage kan leda till kvävning. Tillhandahåll ventilation i enlighet med EN378-1.
- Kom ihåg att linda isolering runt rören. Direktkontakt med bara rör kan leda till brännskador eller köldskador.
- Stoppa aldrig batterier i munnen, de kan sväljas av misstag.
- Om ett batteri sväljs kan det leda till kvävning och/eller förgiftning.
- Montera enheten på ett stadigt underlag för att förhindra höga driftljud och vibrationer.
- Den A-vägda ljudtrycksnivån är under 70dB.
- Denna apparat är ämnad för användning av experter eller utbildade användare i affärer, inom lätt industri och på lantbruk, eller för kommersiell användning av lekmän.

<TÜRKÇE>

Aslı İngilizcedir. Diğer dillerdeki sürümler aslının çevirisidir.

DİKKAT

- Soğutucu kaçağı boğulmaya neden olabilir. EN378-1 uyarınca uygun havalandırma sağlayın.
- Borular etrafına yalıtım yapıldığından emin olun. Borulara doğrudan çıplak elle dokunulması yanıklara veya soğuk ısırıklarına neden olabilir.
- Kazara yutmamak için, pilleri kesinlikle hiçbir amaçla ağzınızda tutmayın.
- Pillerin yutulması boğulmaya ve/veya zehirlenmeye yol açabilir.
- Asırı çalısma seslerini veya titreşimi önlemek için, üniteyi sağlam bir yapı üzerine monte edin.
- A ağırıklı ses gücü seviyesi 70dB'nin altındadır.
- Bu cihaz atölyelerde, hafif endüstriyel tesislerde ve çiftliklerde uzman veya eğitimli kullanıcılar tarafından kullanılmak üzere veya normal kullanıcılar tarafından ticari kullanım için tasarlanmıştır.

<УКРАЇНСЬКА>

Переклад оригіналу. Текст іншими мовами є перекладом оригіналу.

ОБЕРЕЖНО

- Виток холодоагенту може призвести до душення. Необхідно забезпечити вентиляцію відпо- відно до стандарту EN 378-1.
- Труби необхідно обмотати ізоляційним матеріалом. Прямий контакт із непокритою трубою може призвести до опіку або обмороження.
- Забороняється класти елементи живлення в рот із будь-яких причин, оскільки є ризик випад- ково їх проковтнути.
- Попадання елемента живлення в травну систему може стати причиною задухи та/або отруєння.
- Встановлюйте блок на міцній конструкції, щоб уникнути надмірного рівня звуку роботи або вібрації.
- Рівень амплітудно зваженого акустичного тиску становить нижче 70 дБ.
- Цей прилад призначається для використання спеціалістами або особами, що пройшли відпо- відне навчання, у крамницях, легкій промисловості та сільськогосподарських підприємствах, а також для комерційного використання неспеціалістами.

<БЪЛГАРСКИ>

Оригиналът е текстът на английски език. Версиите на други езици са преводи на оригинала.

ВНИМАНИЕ

- Изтичането на хладилен агент може да причини задушаване. Осигурете вентилация съобразно с EN378-1.
- Не забравяйте да увиете изолация около тръбите. Директният контакт с оголени тръби може да причини изгаряне или измръзване.
- При никакви обстоятелства не поставяйте батериите в устата си, за да не ги погълне- те по невнимание.
- Това може да доведе до задушаване и/или натравяне.
- Монтирайте тялото върху твърда конструкция, за да предотвратите прекомерен шум или вибрации по време на работа.
- А-петегленото ниво на звуково налягане е под 70 dB.
- Този уред е предназначен за използване от експерти или обучени потребители в магази- ни, в леката промишленост и във ферми, или за търговска употреба от неспециалисти.

<POLSKI>

Językiem oryginału jest język angielski. Inne wersje językowe stanowią tłumaczenie oryginału.

UWAGA

- Wyciek czynnika chłodniczego może spowodować uduszenie. Należy zapewnić wentylację zgodnie z normą EN378-1.
- Należy pamiętać, aby owinać izolację wokół przewodów rurowych. Bezpośredni kontakt z niezabezpieczonymi przewodami rurowymi może doprowadzić do poparzeń lub odmrożeń.
- Nie wolno wkładać baterii do ust z jakiegokolwiek powodu, aby uniknąć przypadkowego połknięcia.
- Połknięcie baterii może spowodować zadławienie i/lub zatrucie.
- Zainstalować urządzenie na sztywnej konstrukcji, aby zapobiec nadmiernemu hałasowi i wibracjom.
- Poziom dźwięku A nie przekracza 70 dB.
- W sklepach, w przemyśle lekkim i w gospodarstwach rolnych urządzenie powinni obsługiwać profesjonalni lub przeszkoleni użytkownicy, a w środowisku handlowym mogą to być osoby nieposiadające fachowej wiedzy.

<NORSK>

Originalspråket er engelsk. De andre språkversjonene er oversettelser av originalen.

⚠ FORSIKTIG

- Kjølemiddellekkasje kan forårsake kvelning. Sørg for ventilering i samsvar med EN378-1.
- Pass på at isoleringen pakkes godt rundt røret. Direkte kontakt med ukledte rør kan forårsake brannskader eller forfrysninger.
- Aldri plasser batteri i munnen, da dette kan medføre en risiko for at du svelger batteriet ved et uhell.
- Hvis du svelger et batteri, kan du risikere kvelning og/eller forgiftning.
- Installer enheten på en stabil struktur for å forhindre unødvendig mye driftsstøy eller vibrering.
- Det A-vektede lydtryknivået er under 70 dB.
- Dette apparatet er ment for bruk av eksperter eller faglært personell i butikker, lettindustri og på gårder, eller for kommersielt bruk av ikke-fagmenn.

<SUOMI>

Englanti on alkuperäinen. Muut kieliversiot ovat alkuperäiskappaleen käännöksiä.

⚠ HUOMIO

- Vuotava kylmäaine voi aiheuttaa tukehtumisen. Ilmanvaihdon on oltava EN378-1-standardin mukainen.
- Kääri putken ympärille eristysmateriaalia. Paljaan putken koskettamisesta voi seurata palotai paleltumavammoja.
- Älä koskaan laita paristoja suuhun, jotta et vahingossa nielaisisi niitä.
- Paristojen nieleminen voi aiheuttaa tukehtumisen ja/tai myrkytyksen.
- Asenna yksikkö tukeviin rakenteisiin, jotta sen käytöstä ei syntyisi ylimääräistä ääntä tai värinää.
- A-painotettu äänenpainetaso on alle 70 dB.
- Laite on tarkoitettu asiantuntijoiden tai laitteelle koulutuksen saaneiden käyttöön kaupoissa, pienteollisuudessa ja maatilolla tai maailloille kaupalliseen käyttöön.

<ČEŠTINA>

Originál je v angličtině. Ostatní jazykové verze jsou překladem originálu.

⚠ POZOR

- Únik chladicího média může způsobit udušení. Zajistěte větrání v souladu s normou EN 378-1.
- Okolo potrubí vždy omotejte izolaci. Přímý kontakt s obnaženým potrubím může způsobit popálení nebo omrzliny.
- Nikdy nevkládejte baterie do úst, aby nedošlo k jejich polknutí.
- Polknutí baterie může způsobit zadušení a/nebo otravu.
- Jednotku nainstalujte na pevnou konstrukci, aby nedocházelo ke vzniku nadměrného provozního hluku a vibrací.
- Hladina akustického tlaku A je nižší než 70 dB.
- Toto zařízení je určeno pro prodejny, lehký průmysl a farmy, kde je musí obsluhovat odborníci a školení uživatelé, a pro komerční použití, kde je mohou obsluhovat laici.

<SLOVENČINA>

Peklad anglického originálu. Všetky jazykové verzie sú preložené z angličtiny.

⚠ UPOZORNENIE

- Únik chladiva môže spôsobiť udusenie. Zabezpečte vetranie podľa normy EN 378-1.
- Nezabudnite potrubie obaliť izoláciou. Priamy kontakt s nezabaleným potrubím môže spôsobiť popáleniny alebo omrzliny.
- Batérie si nikdy z akéhokoľvek dôvodu nekladte do úst, aby nedošlo k ich náhodnému požitiu.
- Požitie batérií môže vyvolať dusenie a/alebo otravu.
- Nainštalujte jednotku na pevný konštrukčný prvok, aby ste obmedzili nadmerný prevádzkový hluk a vibrácie.
- Hladina akustického tlaku A je nižšia ako 70 dB.
- Toto zariadenie je určené na používanie odborníkmi alebo zaškolenými používateľmi v komerčných priestoroch, v prostredí ľahkého priemyslu, na farmách, alebo na komerčné použitie bežnými používateľmi.

<MAGYAR>

Az angol változat az eredeti. A többi nyelvi változat az eredeti fordítása.

⚠ VIGYÁZAT

- A hűtőközeg szivárgása fulladást okozhat. Gondoskodjon az EN378-1 szabvány előírásai szerinti szellőzésről.
- Feltétlenül szigetelje körbe a csöveket. A csupasz cső megérintése égési vagy fagyási sérülést okozhat.
- Ne vegyen a szájába elemet semmilyen célból, mert véletlenül lenyelheti!
- A lenyelt elem fulladást és/vagy mérgezést okozhat.
- A készüléket merev szerkezetre szerelje fel, hogy megakadályozza a túlzott üzemi zajt és vibrációt.
- Az A-súlyozott hangnyomásszint 70 dB alatt van.
- A készülék üzletek, a könnyűipar és gazdaságok szakértő vagy képzett felhasználói, valamint laikus felhasználók által kereskedelmi használatra készült.

<SLOVENŠČINA>

Izvirnik je v angleščini. Druge jezikovne različice so prevodi izvirnika.

⚠ POZOR

- Puščanje hladiva lahko povzroči zadušitev. Zagotovite prezačevanje po standardu EN378-1.
- Cevi ovijte z izolacijo. Neposredni stik z golimi cevmi lahko povzroči opekline ali ozeblino.
- Nikoli in iz nobenega razloga ne vstavljajte baterij v usta, da jih po nesreči ne pogoltnete.
- Če baterije pogoltnete, se lahko zadušite in/ali zastrupite.
- Enoto namestite na togo konstrukcijo, da preprečite pretiran zvok ali tresljaje med delovanjem.
- A-utežena raven zvočnega tlaka je pod 70 dB.
- Naprava je namenjena za uporabo s strani strokovnih ali ustrezno usposobljenih uporabnikov v trgovinah, lahki industriji in na kmetijah ter za komercialno uporabo s strani nestrokovnih uporabnikov.

<ROMÂNĂ>

Textul original este în limba engleză. Versiunile pentru celelalte limbi sunt traduceri ale originalului.

⚠ ATENȚIE

- Scurgerea de agent frigorific poate cauza asfixierea. Asigurați o ventilație corespunzătoare, conform standardului EN378-1.
- Asigurați-vă că înfășurați materialul izolator în jurul conductelor. Contactul direct cu conductele neizolate se poate solda cu arsuri sau degerături.
- Nu introduceți niciodată și pentru niciun motiv bateriile în gură, pentru a evita ingerarea accidentală a acestora.
- Ingerarea bateriilor poate cauza sufocarea și/sau intoxicația.
- Instalați unitatea pe o structură rigidă pentru a preveni producerea unui nivel excesiv de sunete sau vibrații.
- Nivelul de presiune acustică ponderat în A este mai mic de 70 dB.
- Acest aparat este destinat utilizării de către utilizatori specializați sau instruiți în cadrul spațiilor comerciale, spațiilor din cadrul industriei ușoare și al fermelor sau în scopuri comerciale de către nespecialiști.

<EESTI>

Originaaljuhend on ingliskeelne. Muudes keeltes versioonid on originaali tõlked.

⚠ ETTEVAATUST!

- Külmaaine leke võib põhjustada lämbumist. Tuulutamine standardi EN378-1 kohaselt.
- Mähkige torude ümber kindlasti isolatsiooni. Vahetu kontakt paljaste torudega võib põhjustada põletusi või külmakahjustusi.
- Hoiduge patareide tahtmatust allaneelamisest, ärge kunagi pange ühelgi põhjusel patareisid suhu.
- Patarei allaneelamine võib põhjustada lämbumist ja/või mürgitust.
- Paigaldage seade jäigale struktuurile, et vältida ülemäärast tööheli ja vibreerimist.
- A-filtriga helirõhu tase on madalam kui 70 dB.
- Seade on mõeldud kasutamiseks asjatundjatele ja väljaõppe läbinud kasutajatele poodides, kergtööstuses ja taludes ning kommertskasutuseks tavaisikute poolt.

<LATVISKI>

Orīģināls ir angļu valodā. Versijas citās valodās ir oriģināla tulkojums.

⚠ UZMANĪBU

- Aukstumaģenta noplūdes gadījumā pastāv nosmakšanas risks. Ir jānodrošina standartam EN378-1 atbilstoša ventilācija.
- Aptiniet caurules ar izolējošu materiālu. Pieskaroties neapfītām caurulēm, var gūt apdegumus vai apsaldējumus.
- Aizliegts ievietot baterijas mutē; pastāv norīšanas risks.
- Bateriju norīšana var izraisīt aizrīšanas un/vai saindēšanas.
- Uzstādiet iekārtu uz izturīgas struktūras, lai izvairītos no pārlieku liela darbības trokšņa vai vibrācijas.
- A — izstarotais skaņas spiediena līmenis ir mazāks par 70 dB.
- Šis iekārtu paredzēts lietot speciālistiem vai apmācītiem lietotājiem veikalos, vieglās rūpniecības telpās un lauksaimniecības fermās, kā arī to var lietot nespeciālisti komerciālām vajadzībām.

<LIETUVIŠKAI>

Originalas yra anglų k. Versijos kitomis kalbomis yra originalo vertimas.

⚠ ATSARGIAI

- Dėl šaltnešio nuotėkio galima užusti. Išvėdinkite patalpą pagal EN378-1.
- Būtinai vamzdelius apvyniokite izoliacija. Prisilietus prie plikų vamzdelių galima nusideginti arba nušalti.
- Siekdami išvengti atsitiktinio prarijimo, niekada nedėkite baterijų į burną.
- Prarijus bateriją galima užspringti ir / arba apsinuodyti.
- Įrenginį sumontuokite ant tvirtos struktūros, kad nesigirdėtų pernelyg didelio veikimo triukšmo ar vibracijos.
- A svertinis garso slėgio lygis nesiekia 70 dB;
- Šis prietaisas skirtas naudoti specialistui ar išmokytiems naudotojams dirbtuvėse, lengvojoje pramonėje ar ūkiuose arba komerciniam naudojimui nespecialistams.

<HRVATSKI>

Tekst je izvorno napisan na engleskom jeziku. Tekst na ostalim jezicima predstavlja prijevod izvorno napisanog teksta.

⚠ OPREZ

- Čurenje rashladnog sredstva može uzrokovati gušenje. Osigurajte ventilaciju u skladu s normom HR EN378-1.
- Obvezno stavite izolaciju oko položenih cijevi. Izravni doticaj s golim cijevima može dovesti do opekline ili smrzavanja.
- Nikada ne stavljajte baterije u usta ni zbog kojeg razloga kako biste izbjegli slučajno gutanje.
- Gutanje baterija može prouzročiti gušenje i/ili trovanje.
- Postavite jedinicu na čvrstu površinu kako biste izbjegli prebučan zvuk tijekom rada ili pojavu vibracija.
- Razina zvučnog tlaka A niža je od 70dB.
- Ovaj uređaj mogu upotrebljavati stručnjaci ili osposobljeni korisnici u trgovinama, lakoj industriji i na poljoprivrednim gospodarstvima ili laici u komercijalne svrhe.

<SRPSKI>

Prevod originala. Verzije na drugim jezicima su prevodi originala.

⚠ OPREZ

- Čurenje rashladne tečnosti može da dovede do gušenja. Obezbedite ventilaciju u skladu sa EN378-1.
- Obavezno obmotajte izolaciju oko cevi. Direktan kontakt sa golom cevi može izazvati opekotine ili promrzline.
- Nikada nemojte stavljati baterije u usta iz bilo kog razloga, kako bi se sprečilo slučajno gutanje.
- Gutanje baterija može da izazove gušenje i/ili trovanje.
- Ugradite jedinicu na čvrstu strukturu kako biste sprečili previše jak zvuk rada ili vibracije.
- Razina zvučnog tlaka A niža je ispod 70 dB.
- Ovaj uređaj je namenjen za upotrebu od strane stručnih ili obučanih korisnika u prodavnicama, u lakoj industriji i na farmama ili za komercijalnu upotrebu od strane ne kvalifikovanih lica.

This product is designed and intended for use in the residential, commercial, and light-industrial environment.

Manufacturer

mitsubishi electric consumer products (thailand) co., ltd.
700/406 moo 7, tambon don hua roh,
amphur muang, chonburi 20000, thailand
Contact.LES@mcp.meap.com

Importer within the EU / Authorised representative within the EU

Mitsubishi Electric Europe B.V.
Living Environment Systems Business Unit
2, Rue de l'Union, 92565 Rueil-Malmaison Cedex, France
Contact.LES@fra.mee.com

Importer within the UK

Mitsubishi Electric Europe B.V.
UK Branch
Travellers Lane, Hatfield, Hertfordshire, AL10 8XB, United Kingdom
<https://gb.mitsubishielectric.com/en/>

Türkiye içindeki ithalatçı

mitsubishi electric turkey elektrik ürünleri a.ş.
Şerifali Mahallesi Kale Sokak No: 41, 34775 Ümraniye, İstanbul, Türkiye
<https://tr.mitsubishielectric.com/tr/>

Please be sure to put the contact address / telephone number on
this manual before handing it to the customer.

MITSUBISHI ELECTRIC CORPORATION

HEAD OFFICE: TOKYO BUILDING, 2-7-3, MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN