

*Changes for the Better*

Models **PUHY-P250YHM-A**  
**PFD-P250VM-E**  
**PFD-P500VM-E**

**R410A**

# Service Handbook

# Safety Precautions

- Before installing the unit, thoroughly read the following safety precautions.
- Observe these safety precautions for your safety.

## **WARNING**

This symbol is intended to alert the user to the presence of important instructions that must be followed to avoid the risk of serious injury or death.

## **CAUTION**

This symbol is intended to alert the user to the presence of important instructions that must be followed to avoid the risk of serious injury or damage to the unit.

- After reading this manual, give it to the user to retain for future reference.
- Keep this manual for easy reference. When the unit is moved or repaired, give this manual to those who provide these services.  
When the user changes, make sure that the new user receives this manual.

## **WARNING**

### **Ask your dealer or a qualified technician to install the unit.**

Improper installation by the user may result in water leakage, electric shock, smoke, and/or fire.

### **Properly install the unit on a surface that can withstand the weight of the unit.**

Unit installed on an unstable surface may fall and cause injury.

### **Only use specified cables. Securely connect each cable so that the terminals do not carry the weight of the cable.**

Improperly connected or fixed cables may produce heat and start a fire.

### **Take appropriate safety measures against strong winds and earthquakes to prevent the unit from falling.**

If the unit is not installed properly, the unit may fall and cause serious injury to the person or damage to the unit.

### **Do not make any modifications or alterations to the unit. Consult your dealer for repair.**

Improper repair may result in water leakage, electric shock, smoke, and/or fire.

### **Do not touch the heat exchanger fins.**

The fins are sharp and dangerous.

### **In the event of a refrigerant leak, thoroughly ventilate the room.**

If refrigerant gas leaks and comes in contact with an open flame, poisonous gases will be produced.

### **Properly install the unit according to the instructions in the installation manual.**

Improper installation may result in water leakage, electric shock, smoke, and/or fire.

### **Have all electrical work performed by an authorized electrician according to the local regulations and instructions in this manual, and a dedicated circuit must be used.**

Insufficient capacity of the power supply circuit or improper installation may result in malfunctions of the unit, electric shock, smoke, and/or fire.

 **WARNING**

**Securely attach the terminal block cover (panel) to the unit.**

If the terminal block cover (panel) is not installed properly, dust and/or water may infiltrate and pose a risk of electric shock, smoke, and/or fire.

**Only use the type of refrigerant that is indicated on the unit when installing or reinstalling the unit.**

Infiltration of any other type of refrigerant or air into the unit may adversely affect the refrigerant cycle and may cause the pipes to burst or explode.

**When installing the unit in a small room, exercise caution and take measures against leaked refrigerant reaching the limiting concentration.**

Consult your dealer with any questions regarding limiting concentrations and for precautionary measures before installing the unit. Leaked refrigerant gas exceeding the limiting concentration causes oxygen deficiency.

**Consult your dealer or a specialist when moving or reinstalling the unit.**

Improper installation may result in water leakage, electric shock, and/or fire.

**After completing the service work, check for a gas leak.**

If leaked refrigerant is exposed to a heat source, such as a fan heater, stove, or electric grill, poisonous gases may be produced.

**Do not try to defeat the safety features of the unit.**

Forced operation of the pressure switch or the temperature switch by defeating the safety features of these devices, or the use of accessories other than the ones that are recommended by MITSUBISHI may result in smoke, fire, and/or explosion.

**Only use accessories recommended by MITSUBISHI.**

Ask a qualified technician to install the unit. Improper installation by the user may result in water leakage, electric shock, smoke, and/or fire.

**Control box houses high-voltage parts.**

When opening or closing the front panel of the control box, do not let it come into contact with any of the internal components. Before inspecting the inside of the control box, turn off the power, keep the unit off for at least 10 minutes, and confirm that the voltage between FT-P and FT-N on INV Board has dropped to DC20V or less. (It takes about 10 minutes to discharge electricity after the power supply is turned off.)

## Precautions for handling units for use with R410A

### CAUTION

#### **Do not use the existing refrigerant piping.**

- ♦A large amount of chlorine that may be contained in the residual refrigerant and refrigerating machine oil in the existing piping may cause the refrigerating machine oil in the new unit to deteriorate.
- ♦R410A is a high-pressure refrigerant and can cause the existing pipes to burst.

#### **Use refrigerant pipes made of phosphorus deoxidized copper. Keep the inner and outer surfaces of the pipes clean and free of such contaminants as sulfur, oxides, dust, dirt, shaving particles, oil, and water.**

These types of contaminants inside the refrigerant pipes may cause the refrigerant oil to deteriorate.

#### **Store the pipes to be installed indoors, and keep both ends of the pipes sealed until immediately before brazing. (Keep elbows and other joints wrapped in plastic.)**

Infiltration of dust, dirt, or water into the refrigerant system may cause the refrigerating machine oil to deteriorate or cause the unit to malfunction.

#### **Use a small amount of ester oil, ether oil, or alkylbenzene to coat flares and flanges.**

Infiltration of a large amount of mineral oil may cause the refrigerating machine oil to deteriorate.

#### **Charge liquid refrigerant (as opposed to gaseous refrigerant) into the system.**

If gaseous refrigerant is charged into the system, the composition of the refrigerant in the cylinder will change and may result in performance loss.

#### **Use a vacuum pump with a reverse-flow check valve.**

If a vacuum pump that is not equipped with a reverse-flow check valve is used, the vacuum pump oil may flow into the refrigerant cycle and cause the refrigerating machine oil to deteriorate.

#### **Prepare tools for exclusive use with R410A. Do not use the following tools if they have been used with the conventional refrigerant (gauge manifold, charging hose, gas leak detector, reverse-flow check valve, refrigerant charge base, vacuum gauge, and refrigerant recovery equipment.).**

- ♦If the refrigerant or the refrigerating machine oil left on these tools are mixed in with R410A, it may cause the refrigerating machine oil to deteriorate.
- ♦Infiltration of water may cause the refrigerating machine oil to deteriorate.
- ♦Gas leak detectors for conventional refrigerants will not detect an R410A leak because R410A is free of chlorine.

#### **Do not use a charging cylinder.**

If a charging cylinder is used, the composition of the refrigerant will change, and the unit may experience power loss.

#### **Exercise special care when handling the tools for use with R410A.**

Infiltration of dust, dirt, or water into the refrigerant system may cause the refrigerating machine oil to deteriorate.

#### **Only use refrigerant R410A.**

The use of other types of refrigerant that contain chlorine (i.e. R22) may cause the refrigerating machine oil to deteriorate.

---

## Before installing the unit

### WARNING

#### **Do not install the unit where a gas leak may occur.**

If gaseous refrigerant leaks and piles up around the unit, it may be ignited.

#### **Do not use the unit to keep food items, animals, plants, artifacts, or for other special purposes.**

The unit is not designed to preserve food products.

#### **Do not use the unit in an unusual environment.**

- ♦ Do not install the unit where a large amount of oil or steam is present or where acidic or alkaline solutions or chemical sprays are used frequently. Doing so may lead to a remarkable drop in performance, electric shock, malfunctions, smoke, and/or fire.
- ♦ The presence of organic solvents or corrosive gas (i.e. ammonia, sulfur compounds, and acid) may cause gas leakage or water leakage.

#### **When installing the unit in a hospital, take appropriate measures to reduce noise interference.**

High-frequency medical equipment may interfere with the normal operation of the air conditioner or vice versa.

#### **Do not install the unit on or over things that cannot get wet.**

When the humidity level exceeds 80% or if the drainage system is clogged, the indoor unit may drip water. Drain water is also discharged from the outdoor unit. Install a centralized drainage system if necessary.

## Before installing the unit (moving and reinstalling the unit) and performing electrical work

### CAUTION

#### **Properly ground the unit.**

Do not connect the grounding wire to a gas pipe, water pipe, lightning rod, or grounding wire from a telephone pole. Improper grounding may result in electric shock, smoke, fire, and/or malfunction due to noise interference.

#### **Do not put tension on the power supply wires.**

If tension is put on the wires, they may break and result in excessive heat, smoke, and/or fire.

#### **Install an earth leakage breaker to avoid the risk of electric shock.**

Failure to install an earth leakage breaker may result in electric shock, smoke, and/or fire.

#### **Use the kind of power supply wires that are specified in the installation manual.**

The use of wrong kind of power supply wires may result in current leak, electric shock, and/or fire.

#### **Use breakers and fuses (current breaker, remote switch <switch + Type-B fuse>, moulded case circuit breaker) with the proper current capacity.**

The use of wrong capacity fuses, steel wires, or copper wires may result in malfunctions, smoke, and/or fire.

#### **Do not spray water on the air conditioner or immerse the air conditioner in water.**

Otherwise, electric shock and/or fire may result.

**When handling units, always wear protective gloves to protect your hands from metal parts and high-temperature parts.**

#### **Periodically check the installation base for damage.**

If the unit is left on a damaged platform, it may fall and cause injury.

#### **Properly install the drain pipes according to the instructions in the installation manual. Keep them insulated to avoid dew condensation.**

Improper plumbing work may result in water leakage and damage to the furnishings.

#### **Exercise caution when transporting products.**

- ♦Products weighing more than 20 kg should not be carried alone.
- ♦Do not carry the product by the PP bands that are used on some products.
- ♦Do not touch the heat exchanger fins. They are sharp and dangerous.
- ♦When lifting the unit with a crane, secure all four corners to prevent the unit from falling.

#### **Properly dispose of the packing materials.**

- ♦Nails and wood pieces in the package may pose a risk of injury.
- ♦Plastic bags may pose a risk of choking hazard to children. Tear plastic bags into pieces before disposing of them.

---

## Before the test run

### CAUTION

#### **Turn on the unit at least 12 hours before the test run.**

Keep the unit turned on throughout the season. If the unit is turned off in the middle of a season, it may result in malfunctions.

#### **To avoid the risk of electric shock or malfunction of the unit, do not operate switches with wet hands.**

#### **Do not touch the refrigerant pipes with bare hands during and immediately after operation.**

During or immediately after operation, certain parts of the unit such as pipes and compressor may be either very cold or hot, depending on the state of the refrigerant in the unit at the time. To reduce the risk of frost bites and burns, do not touch these parts with bare hands.

#### **Do not operate the unit without panels and safety guards.**

Rotating, high-temperature, or high-voltage parts on the unit pose a risk of burns and/or electric shock.

#### **Do not turn off the power immediately after stopping the operation.**

Keep the unit on for at least five minutes before turning off the power to prevent water leakage or malfunction.

#### **Do not operate the unit without the air filter.**

Dust particles may build up in the system and cause malfunctions.

# CONTENTS

---

## I Read Before Servicing

[1] Read Before Servicing .....	3
[2] Necessary Tools and Materials .....	4
[3] Piping Materials .....	5
[4] Storage of Piping .....	7
[5] Pipe Processing .....	7
[6] Brazing .....	8
[7] Air Tightness Test .....	9
[8] Vacuum Drying (Evacuation) .....	10
[9] Refrigerant Charging .....	11
[10] Remedies to be taken in case of a Refrigerant Leak .....	11
[11] Characteristics of the Conventional and the New Refrigerants .....	12
[12] Notes on Refrigerating Machine Oil .....	13

## II Restrictions

[1] System configuration .....	17
[2] Types and Maximum allowable Length of Cables .....	18
[3] Switch Settings and Address Settings .....	20
[4] An Example of a System to which an MA Remote Controller is connected .....	24
[5] Restrictions on Pipe Length .....	32

## III Outdoor Unit Components

[1] Outdoor Unit Components and Refrigerant Circuit .....	35
[2] Control Box of the Outdoor Unit .....	37
[3] Outdoor Unit Circuit Board .....	38

## IV Indoor Unit Components

[1] External Dimensions .....	45
[2] Indoor Unit Components and Internal Structure .....	47
[3] Control Box of the Indoor Unit .....	51
[4] Indoor Unit Circuit Board .....	52
[5] Separating the top and bottom of the unit .....	53

## V Electrical Wiring Diagram

[1] Electrical Wiring Diagram of the Outdoor Unit .....	59
[2] Electrical Wiring Diagram of the Indoor Unit .....	60

## VI Refrigerant Circuit

[1] Refrigerant Circuit Diagram .....	65
[2] Principal Parts and Functions .....	67

## VII Control

[1] Functions and Factory Settings of the Dipswitches .....	73
[2] Controlling the Outdoor Unit .....	78
[3] Controlling the Indoor Unit .....	89
[4] Operation Flow Chart .....	93

## VIII Test Run Mode

[1] Items to be checked before a Test Run .....	99
[2] Test Run Method .....	100
[3] Operating Characteristic and Refrigerant Amount .....	101
[4] Adjusting the Refrigerant Amount .....	101
[5] Refrigerant Amount Adjust Mode .....	103
[6] The following symptoms are normal .....	105
[7] Standard Operation Data (Reference Data) .....	106

## IX Troubleshooting

[1] Error Code Lists .....	109
[2] Responding to Error Display on the Remote Controller .....	112
[3] Investigation of Transmission Wave Shape/Noise .....	160
[4] Troubleshooting Principal Parts .....	163
[5] Refrigerant Leak .....	182
[6] Compressor Replacement Instructions .....	183
[7] Troubleshooting Using the Outdoor Unit LED Error Display .....	185
[8] Maintenance/Inspection Schedule .....	186

## X LED Monitor Display on the Outdoor Unit Board

[1] How to Read the LED on the Service Monitor .....	191
--	-----





---

## I Read Before Servicing

[1] Read Before Servicing .....	3
[2] Necessary Tools and Materials.....	4
[3] Piping Materials .....	5
[4] Storage of Piping .....	7
[5] Pipe Processing .....	7
[6] Brazing.....	8
[7] Air Tightness Test.....	9
[8] Vacuum Drying (Evacuation) .....	10
[9] Refrigerant Charging.....	11
[10] Remedies to be taken in case of a Refrigerant Leak.....	11
[11] Characteristics of the Conventional and the New Refrigerants .....	12
[12] Notes on Refrigerating Machine Oil.....	13



---

## [1] Read Before Servicing

---

**1. Check the type of refrigerant used in the system to be serviced.**

**Refrigerant Type**

New refrigerant series split-type air-conditioners for computer rooms R410A

**2. Check the symptoms exhibited by the unit to be serviced.**

Refer to this service handbook for symptoms relating to the refrigerant cycle.

**3. Thoroughly read the safety precautions at the beginning of this manual.**

**4. Preparing necessary tools: Prepare a set of tools to be used exclusively with each type of refrigerant.**

Refer to "Necessary Tools and Materials" for information on the use of tools.(page 4)

**5. Verification of the connecting pipes: Verify the type of refrigerant used for the unit to be moved or replaced.**

- Use refrigerant pipes made of phosphorus deoxidized copper. Keep the inner and outer surfaces of the pipes clean and free of such contaminants as sulfur, oxides, dust, dirt, shaving particles, oil, and water.
- These types of contaminants inside the refrigerant pipes may cause the refrigerant oil to deteriorate.

**6. If there is a leak of gaseous refrigerant and the remaining refrigerant is exposed to an open flame, a poisonous gas hydrofluoric acid may form. Keep workplace well ventilated.**



**CAUTION**

- Install new pipes immediately after removing old ones to keep moisture out of the refrigerant circuit.
- The use of refrigerant that contains chloride, such as R22, will cause the refrigerating machine oil to deteriorate.

## [2] Necessary Tools and Materials

Prepare the following tools and materials necessary for installing and servicing the unit.

### Tools for use with R410A (Adaptability of tools that are for use with R22 or R407C)

#### 1. To be used exclusively with R410A (not to be used if used with R22 or R407C)

Tools/Materials	Use	Notes
Gauge Manifold	Evacuation and refrigerant charging	Higher than 5.09MPa[738psi] on the high-pressure side
Charging Hose	Evacuation and refrigerant charging	The hose diameter is larger than the conventional model.
Refrigerant Recovery Cylinder	Refrigerant recovery	
Refrigerant Cylinder	Refrigerant charging	The refrigerant type is indicated. The cylinder is pink.
Charging Port on the Refrigerant Cylinder	Refrigerant charging	The charge port diameter is larger than that of the current port.
Flare Nut	Connection of the unit with the pipes	Use Type-2 Flare nuts.

#### 2. Tools and materials that may be used with R410A with some restrictions

Tools/Materials	Use	Notes
Gas Leak Detector	Gas leak detection	The ones for use with HFC refrigerant may be used.
Vacuum Pump	Vacuum drying	May be used if a check valve adapter is attached.
Flare Tool	Flare processing	Flare processing dimensions for the piping in the system using the new refrigerant differ from those of R22. Refer to next page.
Refrigerant Recovery Equipment	Refrigerant recovery	May be used if compatible with R410A.

#### 3. Tools and materials that are used with R22 or R407C that may also be used with R410A

Tools/Materials	Use	Notes
Vacuum Pump with a Check Valve	Vacuum drying	
Bender	Bending pipes	
Torque Wrench	Tightening flare nuts	Only the flare processing dimensions for pipes that have a diameter of $\varnothing 12.70$ (1/2") and $\varnothing 15.88$ (5/8") have been changed.
Pipe Cutter	Cutting pipes	
Welder and Nitrogen Cylinder	Welding pipes	
Refrigerant Charging Meter	Refrigerant charging	
Vacuum Gauge	Vacuum level check	

#### 4. Tools and materials that must not be used with R410A

Tools/Materials	Use	Notes
Charging Cylinder	Refrigerant charging	Prohibited to use

Tools for R410A must be handled with special care to keep moisture and dust from infiltrating the cycle.

### [3] Piping Materials

**Do not use the existing piping!**

#### 1. Copper pipe materials

O-material (Annealed)	Soft copper pipes (annealed copper pipes). They can easily be bent with hands.
1/2H-material (Drawn)	Hard copper pipes (straight pipes). They are stronger than the O-material (Annealed) at the same radial thickness.

- The distinction between O-materials (Annealed) and 1/2H-materials (Drawn) is made based on the strength of the pipes themselves.
- O-materials (Annealed) can easily be bent with hands.
- 1/2H-materials (Drawn) are considerably stronger than O-material (Annealed) at the same thickness.

#### 2. Types of copper pipes

Maximum working pressure	Refrigerant type
3.45 MPa [500psi]	R22, R407C etc.
4.30 MPa [624psi]	R410A etc.

#### 3. Piping materials/Radial thickness

Use refrigerant pipes made of phosphorus deoxidized copper.  
 The operation pressure of the units that use R410A is higher than that of the units that use R22.  
 Use pipes that have at least the radial thickness specified in the chart below.  
 (Pipes with a radial thickness of 0.7 mm or less may not be used.)

Pipe size (mm[in])	Radial thickness (mm)	Type
ø6.35 [1/4"]	0.8t	O-material (Annealed)
ø9.52 [3/8"]	0.8t	
ø12.7 [1/2"]	0.8t	
ø15.88 [5/8"]	1.0t	
ø19.05 [3/4"]	1.0t	1/2H-material, H-material (Drawn)
ø22.2 [7/8"]	1.0t	
ø25.4 [1"]	1.0t	
ø28.58 [1-1/8"]	1.0t	
ø31.75 [1-1/4"]	1.1t	

- The pipes in the system that uses the refrigerant currently on the market are made with O-material (Annealed), even if the pipe diameter is less than ø19.05 (3/4"). For a system that uses R410A, use pipes that are made with 1/2H-material (Drawn) unless the pipe diameter is at least ø19.05 (3/4") and the radial thickness is at least 1.2t.
- The figures in the radial thickness column are based on the Japanese standards and provided only as a reference. Use pipes that meet the local standards.

**4. Thickness and refrigerant type indicated on the piping materials**


Ask the pipe manufacturer for the symbols indicated on the piping material for new refrigerant.

**5. Flare processing (O-material (Annealed) and OL-material only)**

The flare processing dimensions for the pipes that are used in the R410A system are larger than those in the R22 system.

Flare processing dimensions (mm[in])

Pipe size (mm[in])	A dimension (mm)	
	R410A	R22, R407C
ø6.35 [1/4"]	9.1	9.0
ø9.52 [3/8"]	13.2	13.0
ø12.7 [1/2"]	16.6	16.2
ø15.88 [5/8"]	19.7	19.4
ø19.05 [3/4"]	24.0	23.3

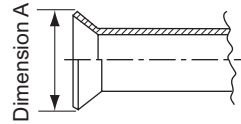


If a clutch-type flare tool is used to flare the pipes in the system using R410A, the length of the pipes must be between 1.0 and 1.5 mm. For margin adjustment, a copper pipe gauge is necessary.

**6. Flare nut**

The flare nut type has been changed to increase the strength. The size of some of the flare nuts have also been changed.

Flare nut dimensions (mm[in])

Pipe size (mm[in])	B dimension (mm)	
	R410A	R22, R407C
ø6.35 [1/4"]	17.0	17.0
ø9.52 [3/8"]	22.0	22.0
<b>ø12.7 [1/2"]</b>	<b>26.0</b>	<b>24.0</b>
<b>ø15.88 [5/8"]</b>	<b>29.0</b>	<b>27.0</b>
ø19.05 [3/4"]	36.0	36.0

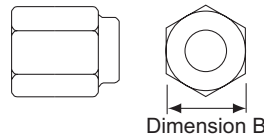

The figures in the radial thickness column are based on the Japanese standards and provided only as a reference. Use pipes that meet the local standards.

---

## [4] Storage of Piping


---

### 1. Storage location



Store the pipes to be used indoors. (Warehouse at site or owner's warehouse)  
If they are left outdoors, dust, dirt, or moisture may infiltrate and contaminate the pipe.

### 2. Sealing the pipe ends

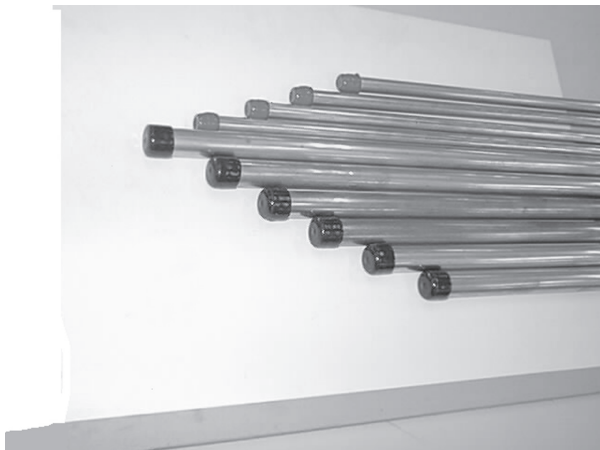

Both ends of the pipes should be sealed until just before brazing.  
Keep elbow pipes and T-joints in plastic bags.

The new refrigerator oil is 10 times as hygroscopic as the conventional refrigerating machine oil (such as Suniso) and, if not handled with care, could easily introduce moisture into the system. Keep moisture out of the pipes, for it will cause the oil to deteriorate and cause a compressor failure.

---

## [5] Pipe Processing

---

Use a small amount of ester oil, ether oil, or alkylbenzene to coat flares and flanges.

### Note

- Use a minimum amount of oil.
- Use only ester oil, ether oil, and alkylbenzene.




## [6] Brazing


No changes have been made in the brazing procedures. Perform brazing with special care to keep foreign objects (such as oxide scale, water, and dust) out of the refrigerant system.

Example: Inside the brazed connection

Use of oxidized solder for brazing

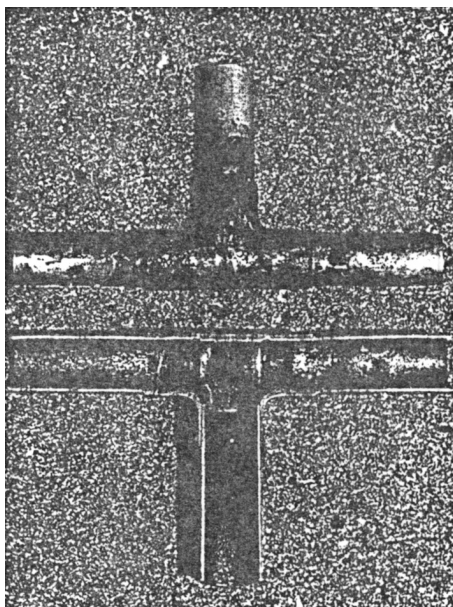

Use of non-oxidized solder for brazing

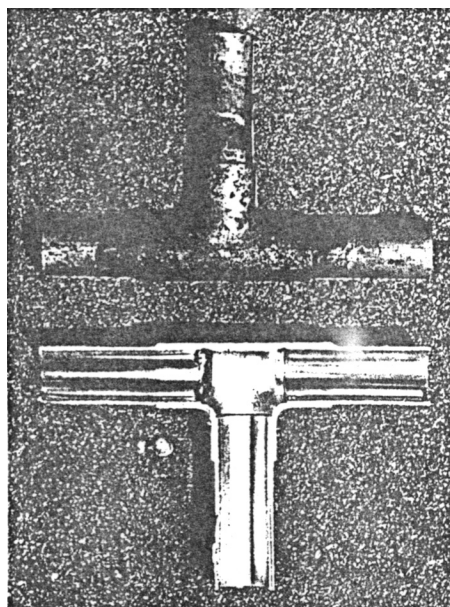

### 1. Items to be strictly observed

- ♦Do not conduct refrigerant piping work outdoors if raining.
- ♦Use non-oxidized solder.
- ♦Use a brazing material (BCuP-3) that requires no flux when brazing between copper pipes or between a copper pipe and copper coupling.
- ♦If installed refrigerant pipes are not immediately connected to the equipment, then braze and seal both ends.

### 2. Reasons

- ♦The new refrigerating machine oil is 10 times as hygroscopic as the conventional oil and is more likely to cause unit failure if water infiltrates into the system.
- ♦Flux generally contains chloride. Residual flux in the refrigerant circuit will cause sludge to form.

### 3. Notes


Do not use commercially available antioxidants because they may cause the pipes to corrode or refrigerating machine oil to deteriorate.

---


## [7] Air Tightness Test

---

No changes have been made in the detection method. Note that a refrigerant leak detector for R22 will not detect an R410A leak.

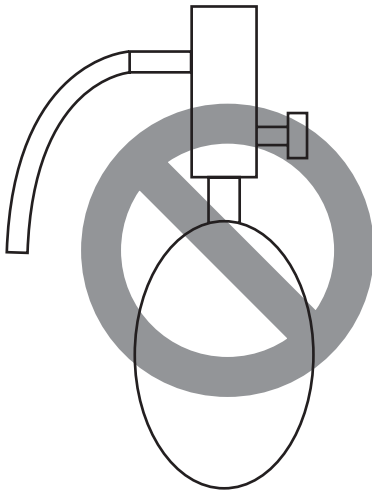

Halide torch

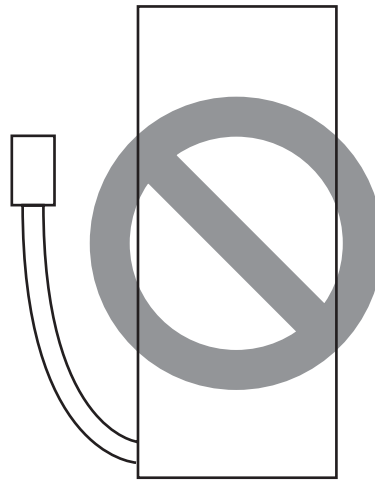

R22 leakage detector

### 1. Items to be strictly observed

- Pressurize the equipment with nitrogen up to the design pressure (4.15MPa[601psi]), and then judge the equipment's air tightness, taking temperature variations into account.
- When using refrigerant instead of a leak detector to find the location of a leak, use R410A.
- Refrigerant R410A must be charged in its liquid state (vs. gaseous state).

### 2. Reasons

- Oxygen, if used for an air tightness test, poses a risk of explosion. (Only use nitrogen to check air tightness.)
- Refrigerant R410A must be charged in its liquid state. If gaseous refrigerant in the cylinder is drawn out first, the composition of the remaining refrigerant in the cylinder will change and become unsuitable for use.

### 3. Notes

Procure a leak detector that is specifically designed to detect an HFC leak. A leak detector for R22 will not detect an HFC(R410A) leak.

---

## [8] Vacuum Drying (Evacuation)

---



(Photo1) 15010H



(Photo2) 14010

Recommended vacuum gauge:  
ROBINAIR 14010 Thermistor Vacuum Gauge

### 1. Vacuum pump with a reverse-flow check valve (Photo1)

To prevent the vacuum pump oil from flowing into the refrigerant circuit during power OFF or power failure, use a vacuum pump with a reverse-flow check valve.

A reverse-flow check valve may also be added to the vacuum pump currently in use.

### 2. Standard of vacuum degree (Photo 2)

Use a vacuum pump that attains 0.5Torr(65Pa) or lower degree of vacuum after 5 minutes of operation, and connect it directly to the vacuum gauge. Use a pump well-maintained with an appropriate lubricant. A poorly maintained vacuum pump may not be able to attain the desired degree of vacuum.

### 3. Required precision of vacuum gauge

Use a vacuum gauge that registers a vacuum degree of 5Torr(650Pa) and measures at intervals of 1Torr(130Pa). (A recommended vacuum gauge is shown in Photo2.)

Do not use a commonly used gauge manifold because it cannot register a vacuum degree of 5Torr(650Pa).

### 4. Evacuation time

- After the degree of vacuum has reached 5Torr(650Pa), evacuate for an additional 1 hour. (A thorough vacuum drying removes moisture in the pipes.)
- Verify that the vacuum degree has not risen by more than 1Torr(130Pa) 1hour after evacuation. A rise by less than 1Torr(130Pa) is acceptable.
- If the vacuum is lost by more than 1Torr(130Pa), conduct evacuation, following the instructions in section 6. Special vacuum drying.

### 5. Procedures for stopping vacuum pump

To prevent the reverse flow of vacuum pump oil, open the relief valve on the vacuum pump side, or draw in air by loosening the charge hose, and then stop the operation.

The same procedures should be followed when stopping a vacuum pump with a reverse-flow check valve.


### 6. Special vacuum drying

- When 5Torr(650Pa) or lower degree of vacuum cannot be attained after 3 hours of evacuation, it is likely that water has penetrated the system or that there is a leak.
- If water infiltrates the system, break the vacuum with nitrogen. Pressurize the system with nitrogen gas to 0.5kgf/cm<sup>2</sup>G(0.05MPa) and evacuate again. Repeat this cycle of pressurizing and evacuation either until the degree of vacuum below 5Torr(650Pa) is attained or until the pressure stops rising.
- Only use nitrogen gas for vacuum breaking. (The use of oxygen may result in an explosion.)

---

## [9] Refrigerant Charging

---

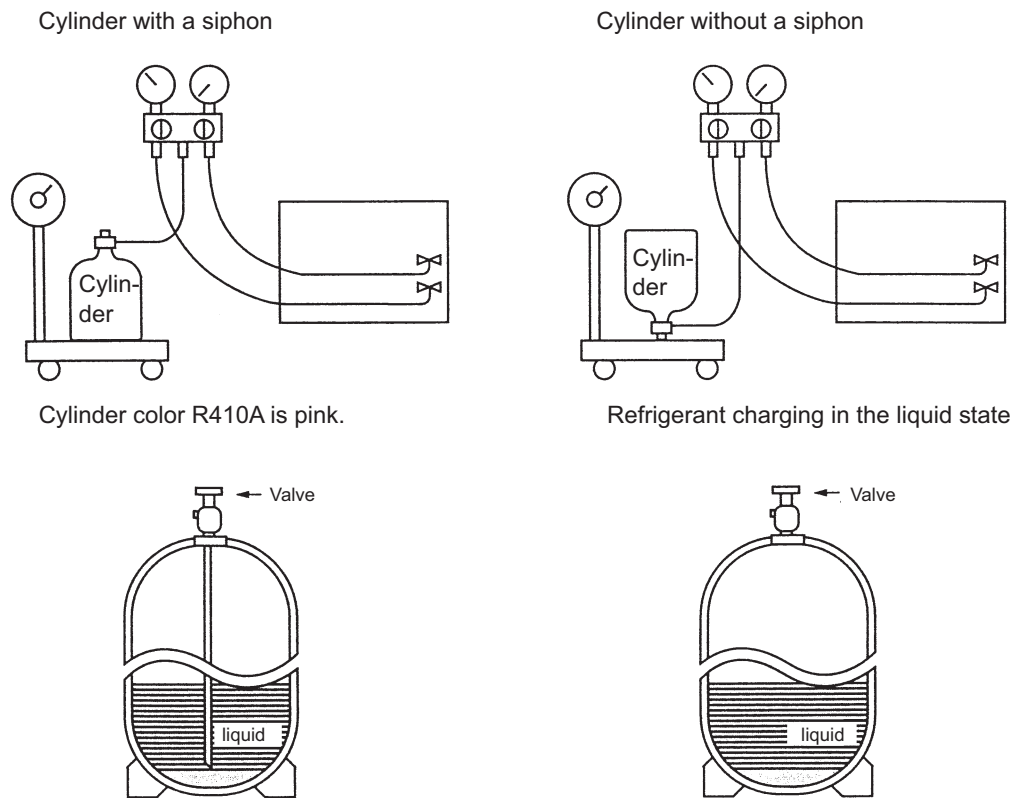

### 1. Reasons

R410A is a pseudo-azeotropic HFC blend (boiling point R32=-52°C[-62°F], R125=-49°C[-52°F]) and can almost be handled the same way as a single refrigerant, such as R22. To be safe, however, draw out the refrigerant from the cylinder in the liquid phase. If the refrigerant in the gaseous phase is drawn out, the composition of the remaining refrigerant will change and become unsuitable for use.

### 2. Notes

When using a cylinder with a siphon, refrigerant is charged in the liquid state without the need for turning it upside down. Check the type of the cylinder on the label before use.

---

## [10] Remedies to be taken in case of a Refrigerant Leak

---

If the refrigerant leaks out, it may be replenished. The entire refrigerant does not need to be replaced. (Charge refrigerant in the liquid state.)

Refer to "IX [5] Refrigerant Leak".(page 182)

## [11] Characteristics of the Conventional and the New Refrigerants

### 1. Chemical property

As with R22, the new refrigerant (R410A) is low in toxicity and chemically stable nonflammable refrigerant. However, because the specific gravity of vapor refrigerant is greater than that of air, leaked refrigerant in a closed room will accumulate at the bottom of the room and may cause hypoxia. If exposed to an open flame, refrigerant will generate poisonous gases. Do not perform installation or service work in a confined area.

	New Refrigerant (HFC type)		Conventional Refrigerant (HCFC type)
	R410A	R407C	R22
	R32/R125	R32/R125/R134a	R22
Composition (wt%)	(50/50)	(23/25/52)	(100)
Type of Refrigerant	Pseudo-azeotropic Refrigerant	Non-azeotropic Refrigerant	Single Refrigerant
Chloride	Not included	Not included	Included
Safety Class	A1/A1	A1/A1	A1
Molecular Weight	72.6	86.2	86.5
Boiling Point (°C/°F)	-51.4/-60.5	-43.6/-46.4	-40.8/-41.4
Steam Pressure (25°C,MPa/77°F,psi) (gauge)	1.557/226	0.9177/133	0.94/136
Saturated Steam Density (25°C,kg/m <sup>3</sup> /77°F,psi)	64.0	42.5	44.4
Flammability	Nonflammable	Nonflammable	Nonflammable
<b>Ozone Depletion Coefficient (ODP)<sup>*1</sup></b>	<b>0</b>	<b>0</b>	<b>0.055</b>
Global Warming Coefficient (GWP) <sup>*2</sup>	1730	1530	1700
Refrigerant Charging Method	Refrigerant charging in the liquid state	Refrigerant charging in the liquid state	Refrigerant charging in the gaseous state
Replenishment of Refrigerant after a Refrigerant Leak	Available	Available	Available

\*1 When CFC11 is used as a reference

\*2 When CO<sub>2</sub> is used as a reference

### 2. Refrigerant composition

R410A is a pseudo-azeotropic HFC blend and can almost be handled the same way as a single refrigerant, such as R22. To be safe, however, draw out the refrigerant from the cylinder in the liquid phase. If the refrigerant in the gaseous phase is drawn out, the composition of the remaining refrigerant will change and become unsuitable for use. If the refrigerant leaks out, it may be replenished. The entire refrigerant does not need to be replaced.

### 3. Pressure characteristics

The pressure in the system using R410A is 1.6 times as great as that in the system using R22.

Temperature (°C/°F)	Pressure (gauge)		
	R410A	R407C	R22
	MPa/psi	MPa/psi	MPa/psi
-20/-4	0.30/44	0.18/26	0.14/20
0/32	0.70/102	0.47/68	0.40/58
20/68	1.34/194	0.94/136	0.81/117
40/104	2.31/335	1.44/209	1.44/209
60/140	3.73/541	2.44/354	2.33/338
65/149	4.17/605	2.75/399	2.60/377

## [12] Notes on Refrigerating Machine Oil

### 1. Refrigerating machine oil in the HFC refrigerant system

HFC type refrigerants use a refrigerating machine oil different from that used in the R22 system. Note that the ester oil used in the system has properties that are different from commercially available ester oil.

Refrigerant	Refrigerating machine oil
R22	Mineral oil
R407C	Ester oil
R410A	Ester oil

### 2. Effects of contaminants\*1

Refrigerating machine oil used in the HFC system must be handled with special care to keep contaminants out. The table below shows the effect of contaminants in the refrigerating machine oil on the refrigeration cycle.

### 3. The effects of contaminants in the refrigerating machine oil on the refrigeration cycle.

Cause		Symptoms	Effects on the refrigerant cycle
Water infiltration		Frozen expansion valve and capillary tubes	Clogged expansion valve and capillary tubes Poor cooling performance Compressor overheat Motor insulation failure Burnt motor Coppering of the orbiting scroll Lock Burn-in on the orbiting scroll
	Hydrolysis	Sludge formation and adhesion Acid generation Oxidization Oil degradation	
Air infiltration	Oxidization		
Infiltration of contaminants	Dust, dirt	Adhesion to expansion valve and capillary tubes	Clogged expansion valve, capillary tubes, and drier Poor cooling performance Compressor overheat
		Infiltration of contaminants into the compressor	Burn-in on the orbiting scroll
	Mineral oil etc.	Sludge formation and adhesion	Clogged expansion valve and capillary tubes Poor cooling performance Compressor overheat
		Oil degradation	Burn-in on the orbiting scroll

\*1. Contaminants is defined as moisture, air, processing oil, dust/dirt, wrong types of refrigerant, and refrigerating machine oil.

---

---

## II Restrictions

[1] System configuration .....	17
[2] Types and Maximum allowable Length of Cables .....	18
[3] Switch Settings and Address Settings .....	20
[4] An Example of a System to which an MA Remote Controller is connected.....	24
[5] Restrictions on Pipe Length .....	32





---

**[1] System configuration**


---

Indoor unit model	Outdoor unit model
PFD-P250VM-E	PUHY-P250YHM-A
PFD-P500VM-E	PUHY-P250YHM-A x 2 *1

\*1 When two outdoor units are connected to one indoor unit, two refrigerant circuits must be connected.

Only one refrigerant circuit can be connected to the indoor unit at factory shipment. To connect two refrigerant circuits, perform some work on the unit.

**1. Restrictions when the PFD-type indoor units are connected (related to the system)**

**(1) The PFD-type indoor units cannot be connected to the ME remote controller.**

**(2) The address settings must be made on this system.**

**(3) The following functions cannot be selected on the PFD-type indoor units.**

- 1) Switching between automatic power recovery Enabled/Disabled (Fixed to "Enabled" in the PFD-type indoor units)
- 2) Switching between power source start/stop (Fixed to "Disabled" in the PFD-type indoor units)

**(4) The PFD-type indoor units and other types of indoor units cannot be grouped.**

**(5) The following functions are limited when the system controller (such as G-50A) is connected.**

- 1) To perform group operation in the system with two refrigerant circuits (combination of two outdoor units and one indoor unit: P500 model only), the addresses of the controller boards No.1 and No.2 on a indoor unit must be set within a group.
- 2) The local operation cannot be prohibited with the main remote controller.
- 3) When the switches of the PFD-type indoor units are set as follows, the unit ON/OFF operation cannot be made with the main remote controller.

•When the Normal/Local switching switch is set to "Local"

•When the DipSW1-10 on the controller circuit board is set to "ON"


## [2] Types and Maximum allowable Length of Cables

### 1. Wiring work

#### (1) Notes

- 1) Have all electrical work performed by an authorized electrician according to the local regulations and instructions in this manual.
- 2) Install external transmission cables at least 5cm [1-31/32"] away from the power supply cable to avoid noise interference. (Do not put the control cable and power supply cable in the same conduit tube.)
- 3) Provide grounding for the outdoor unit as required.
- 4) Run the cable from the electric box of the indoor or outdoor unit in such way that the box is accessible for servicing.
- 5) Do not connect power supply wiring to the terminal block for transmission line. Doing so will damage the electronic components on the terminal block.
- 6) Use 2-core shielded cables as transmission cables.

Use a separate 2-core control cable for each refrigerant system. Do not use a single multiple-core cable to connect indoor units that belong to different refrigerant systems. The use of a multiple-core cable may result in signal transmission errors and malfunctions.

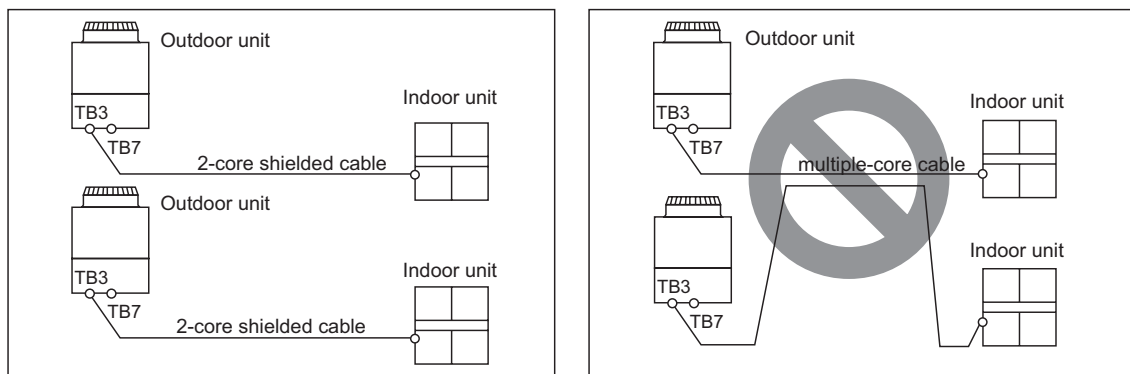

TB3:Terminal block for transmission line connection  
TB7:Terminal block for transmission line for centralized control

### (2) Control wiring

Different types of control wiring are used for different systems.

Refer to section "[4] An Example of a System to which an MA Remote Controller is connected" before performing wiring work.

#### Types and maximum allowable length of cables

Control lines are categorized into 2 types: transmission line and remote controller line.

Use the appropriate type of cables and observe the maximum allowable length specified for a given system. If a given system has a long transmission line or if a noise source is located near the unit, place the unit away from the noise source to reduce noise interference.

#### 1) M-NET transmission line

Cable type	Facility type	All facility types
	Type	Shielded cable CVVS, CPEVS, MVVS
	Number of cores	2-core cable
	Cable size	Larger than 1.25mm <sup>2</sup> [AWG16]
Maximum transmission line distance between the outdoor unit and the farthest indoor unit		200m [656ft] max.
Maximum transmission line distance for centralized control and Indoor/outdoor transmission line (Maximum line distance via outdoor unit)		500m [1640ft] max. *The maximum overall line length from the power supply unit on the transmission lines for centralized control to each outdoor unit or to the system controller is 200m [656ft] max.

2) Remote controller wiring

		MA remote controller
Cable type	Type	CVV
	Number of cores	2-core cable
	Cable size	0.3 to 1.25mm <sup>2</sup> *1 [AWG22 to 16]
Maximum overall line length		200m [656ft] max.

\*1 The use of cables that are smaller than 0.75mm<sup>2</sup> [AWG18] is recommended for easy handling.

### [3] Switch Settings and Address Settings

#### 1. Switch setting

Refer to section "[4] An Example of a System to which an MA Remote Controller is connected" before performing wiring work. Set the switches while the power is turned off.

If the switch settings are changed while the unit is being powered, those changes will not take effect, and the unit will not function properly.

#### 2. Address settings

##### (1) Address settings table

The need for address settings and the range of address setting depend on the configuration of the system. Refer to section "II [4] An Example of a System to which an MA Remote Controller is connected"

Unit or controller		Symbols	Address setting range	Setting method	Address setting
Indoor unit	Main/sub unit	IC	01 to 50* <sup>1</sup>	In case of 10HP system, assign an odd number starting with "01". In case of 20HP system with two refrigerant circuits, assign a sequential odd number starting with "01" to the upper indoor controller, and assign "the address of the upper indoor controller + 1" to the lower indoor controller.	00
MA remote controller		MA	No address settings required. (The main/sub switch must be configured if two remote controllers are connected to the system or if the indoor units are connected to different outdoor units.)		Main
Outdoor unit		OC	51 to 100* <sup>1</sup>	Assign an address of the indoor units in the same refrigerant system and 50.	00

\*1. If a given address overlaps any of the addresses that are assigned to indoor or outdoor units in other refrigerant systems, use a different, unused address within the setting range.

##### (2) Power supply switch connector connection on the outdoor unit

**(Factory setting: The male power supply switch connector is connected to CN41.)**

System configuration	Connection to the system controller	Power supply unit for transmission lines	Group operation of units in a system with multiple outdoor units	Power supply switch connector connection
System with one outdoor unit	—	—	—	Leave CN41 as it is (Factory setting)
System with multiple outdoor units	Not connected	—	Not grouped	Disconnect the male connector from the female power supply switch connector (CN41) and connect it to the female power supply switch connector (CN40) on only one of the outdoor units. *Connect the S (shielded) terminal on the terminal block (TB7) on the outdoor unit whose CN41 was replaced with CN40 to the ground terminal (⌚) on the electric box.
	With connection to the indoor-outdoor transmission line	Not required	Grouped/not grouped	
	With connection to the centralized control system	Not required (Powered from the outdoor unit)	Grouped/not grouped	
	Required	Required	Grouped/not grouped	

**(3) Settings of MA remote controller Main/Sub switching switch (When MA remote controller is used: factory setting "Main")**

Main/sub settings are available on the MA remote controller. When two remote controllers are connected, set either of them to "Sub".

**(4) Selecting the position of temperature detection for the indoor unit (Factory setting: SWC "Standard")**

To use a suction temperature sensor, set SWC to "Option". (The suction temperature sensor is supplied as standard specification.)

**(5) Connection of two refrigerant circuits**

When two refrigerant circuits are connected on site, make the switch settings on the controller circuit board following the instructions described in the installation manual for the indoor unit.

**(6) Cooling-only setting for the indoor unit (Factory setting: SW3-1 on the indoor unit to "OFF.")**

When using indoor unit as a cooling-only unit, set SW3-1 on the indoor unit to ON.

**(7) Various types of control using input-output signal connector on the outdoor unit (various connection options)**

Type	Usage	Function	Terminal to be used <sup>*1</sup>	Option
Input	Prohibiting cooling/heating operation (thermo OFF) by an external input to the outdoor unit. *It can be used as the DEMAND control device for each refrigerant system.	DEMAND (level)	CN3D <sup>*2</sup>	Adapter for external input (PAC-SC36NA-E)
	Performs a low level noise operation of the outdoor unit by an external input to the outdoor unit. * It can be used as the silent operation device for each refrigerant system.	Low-noise mode (level) <sup>*3*4</sup>		
	Forces the outdoor unit to perform a fan operation by receiving signals from the snow sensor. <sup>*5</sup>	Snow sensor signal input (level)	CN3S	
Output	How to extract signals from the outdoor unit *It can be used as an operation status display device. *It can be used for an interlock operation with external devices.	Operation status of the compressor	CN51	Adapter for external output (PAC-SC37SA-E)
		Error status		

\*1. For detailed drawing, refer to "Example of wiring connection".

\*2. For details, refer to 1) through 2) shown below.

\*3. Low-noise mode is valid when Dip SW4-4 on the outdoor unit is set to OFF. When DIP SW4-4 is set to ON, 4 levels of on-DEMAND are possible, using different configurations of low-noise mode input and DEMAND input settings.

\*4. By setting Dip SW5-5, the Low-noise mode can be switched between the Capacity priority mode and the Low-noise priority mode.  
When SW5-5 is set to ON: The Low-noise mode always remains effective.  
When SW5-5 is set to OFF: The Low-noise mode is cancelled when certain outside temperature or pressure criteria are met, and the unit goes into normal operation (capacity priority mode).





Low-noise mode is effective		Capacity priority mode becomes effective	
Cooling	Heating	Cooling	Heating
TH7 < 30°C [86°F] and 63HS1 < 32kg/cm <sup>2</sup>	TH7 > 3°C [37°F] and 63LS > 4.6kg/cm <sup>2</sup>	TH7 > 35°C [95°F] or 63HS1 > 35kg/cm <sup>2</sup>	TH7 < 0°C [32°F] or 63LS < 3.9kg/cm <sup>2</sup>

\*5. When multiple outdoor units exist in one refrigerant circuit system, settings on every outdoor unit (signal input) are required.

**⚠ CAUTION**

- 1) Wiring should be covered by insulation tube with supplementary insulation.
- 2) Use relays or switches with IEC or equivalent standard.
- 3) The electric strength between accessible parts and control circuit should have 2750V or more.

**Example of wiring connection**

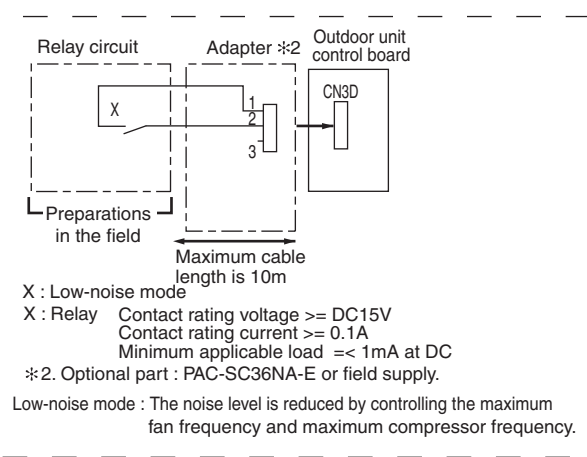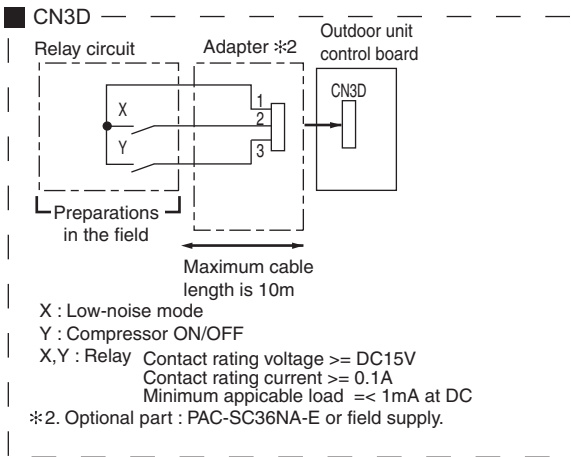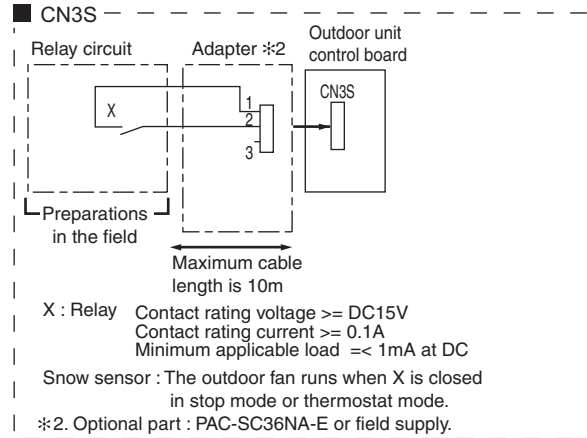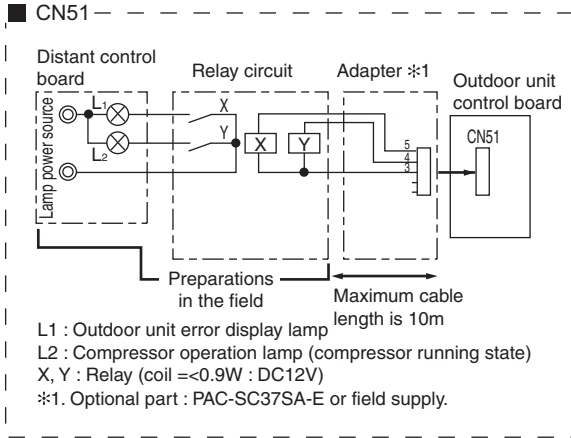

1) SW4-4: OFF (Compressor ON/OFF, Low-noise mode)

CN3D 1-3P	Compressor ON/OFF
Open	Compressor ON
Short-circuit	Compressor OFF

CN3D 1-2P	Low-noise mode*1
Open	OFF
Short-circuit	ON


\*1. This function and the 4-level on-DEMAND function can be used together. Input the order to CN3D 1-2P on the outdoor unit whose SW4-4 is set to OFF.

2) When SW4-4 on one outdoor unit in one refrigerant circuit system is set to ON (4 levels of on-DEMAND) \*2

	CN3D 1-2P	
CN3D 1-3P	Open	Short-circuit
Open	100% (No DEMAND)	75%
Short-circuit	0% (Compressor OFF)	50%

\*2. Input the order to CN3D on the outdoor unit whose SW4-4 is set to ON.

Note the following steps to be taken when using the STEP DEMAND  
 (Example) When switching from 100% to 50%




If the step listed as the wrong example above is taken, thermo may go off.  
 The percentage of the demand listed in the table above is an approximate value based on the compressor volume and does not necessarily correspond with the capacity.  
 When this function is enabled, the night mode cannot be enabled.



**[4] An Example of a System to which an MA Remote Controller is connected**

**1. System with one refrigerant**

**(1) Sample control wiring**

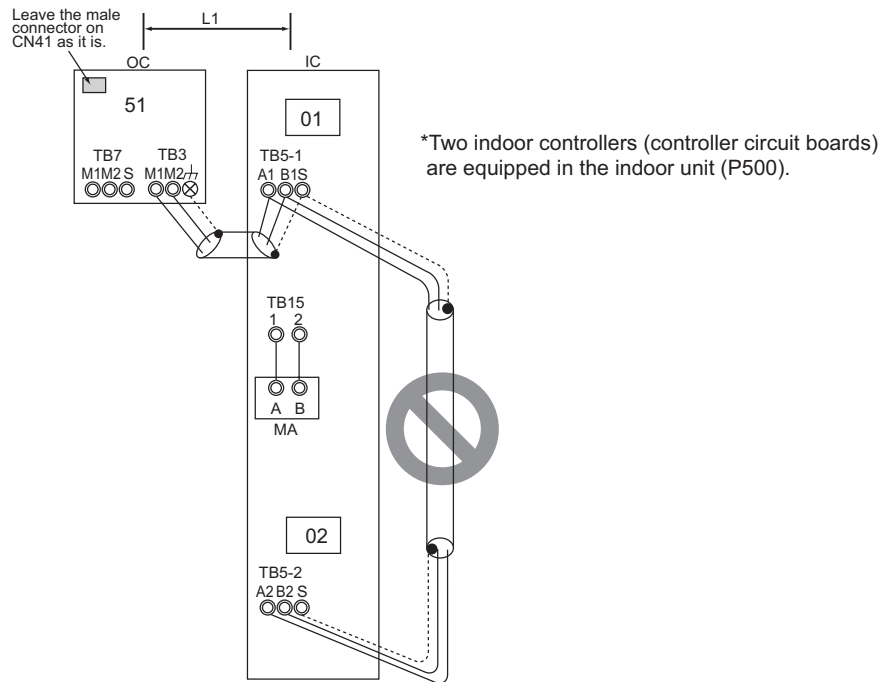

**(2) Notes**

- 1) Leave the male connector on the female power supply switch connector (CN41) on the outdoor unit as it is.
- 2) It is not necessary to provide grounding to S terminal on the terminal block for transmission line for centralized control (TB7).
- 3) Although two indoor controllers (controller circuit boards) are equipped inside the indoor unit, the board on No.2 side (lower side) is not used. Do not connect wiring to the lower controller circuit board.

**(3) Maximum allowable length**

- 1) Indoor/outdoor transmission line  
 Maximum distance (1.25mm<sup>2</sup> [AWG16] or larger)  
 $L1 \leq 200\text{m}$  [656ft]

**(4) Wiring method**

- 1) Indoor/outdoor transmission line  
 Connect M1, M2 terminals of the indoor/outdoor transmission line terminal block (TB3) on the outdoor unit (OC) and A1, B1 terminals of the indoor/outdoor terminal block (TB5-1) on the indoor unit (IC). (Non-polarized 2-core cable)

•Only use shielded cables.

**Shielded cable connection**

Connect the earth terminal of the OC and S terminal of the IC terminal block (TB5-1).

- 2) Switch setting


Address setting is required as follows.

**(5) Address setting method**

Procedures	Unit or controller			Address setting range	Setting method	Notes	Factory setting
1	Indoor unit	Main unit	IC	01 to 50	Assign a sequential odd number starting with "01" to the upper indoor controller.		00
		Sub unit	IC	01 to 50	Assign sequential numbers starting with the address of the main unit in the same group. (Main unit address +1)		
2	Outdoor unit		OC	51 to 100	Add 50 to the address assigned to the indoor unit connected to the system with one outdoor unit.		00
3	MA remote controller	Main remote controller	MA	No settings required.	-		Main
		Sub remote controller	MA	Sub remote controller	Settings to be made with the sub/main switch		

## 2. System with two refrigerant circuits

### (1) Sample control wiring

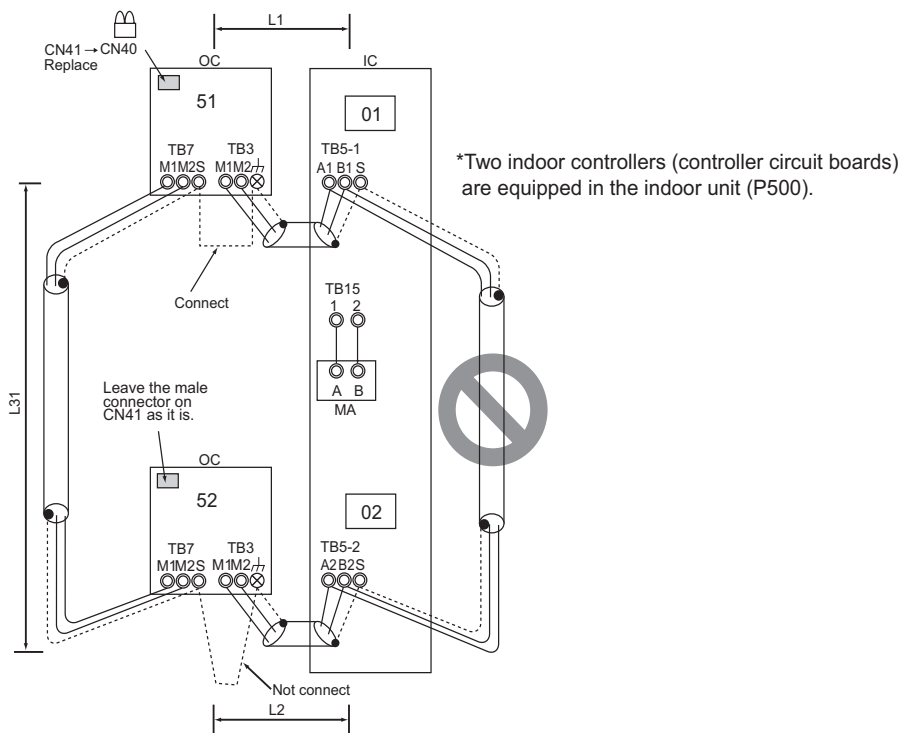

### (2) Notes

- 1) Assign the sequential number to the indoor units.
- 2) Do not connect the terminal blocks (TB5) on the indoor units that are connected to different outdoor units with each other.
- 3) Replacement of male power supply switch connector (CN41) must be performed only on one of the outdoor units.
- 4) Provide grounding to S terminal on the terminal block for transmission line for centralized control (TB7) on only one of the outdoor units.
- 5) When the power supply unit is connected to the transmission line for centralized control, leave the male connector on the female power supply switch connector (CN41) as it is. (Factory setting)

### (3) Maximum allowable length

- 1) Indoor/outdoor transmission line  
Maximum distance (1.25mm<sup>2</sup> [AWG16] or larger)  
L1, L2 ≤ 200m [656ft]
- 2) Transmission line for centralized control  
Maximum line distance via outdoor unit.  
(1.25mm<sup>2</sup> [AWG16] or larger)  
L1+L31+L2 ≤ 500m [1640ft]

**(4) Wiring method**

1) Indoor/outdoor transmission line

Connect M1, M2 terminals of the indoor/outdoor transmission line terminal block (TB3) on the outdoor unit (OC) and A1, B1 terminals of the indoor/outdoor terminal block (TB5-1) on the indoor unit (IC). (Non-polarized 2-core cable)

•Only use shielded cables.

**Shielded cable connection**

Connect the earth terminal of the OC and S terminal of the IC terminal block (TB5-1).

2) Transmission line for centralized control

Daisy-chain terminals M1 and M2 on the terminal block for transmission line for centralized control (TB7) on each outdoor unit (OC). Disconnect the male connector

on the controller board from the female power supply switch connector (CN41), and connect it to the female power supply switch connector (CN40) on only one of the outdoor units.

•Only use shielded cables.

**Shielded cable connection**

To ground the shielded cable, daisy-chain the S-terminals on the terminal block (TB7) on each of the outdoor units. Connect the S (shielded) terminal on the terminal block (TB7) on the outdoor unit whose male connector on CN41 was disconnected and connected to CN40 to the earth terminal(earth) on the electric box.

3) Switch setting


Address setting is required as follows.

**(5) Address setting method**

Procedures	Unit or controller			Address setting range	Setting method	Notes	Factory setting
1	Indoor unit	Main unit	IC	01 to 50	Assign a sequential odd number starting with "01" to the upper indoor controller.		00
		Sub unit	IC	01 to 50	Assign sequential numbers starting with the address of the main unit in the same group. (Main unit address +1)		
2	Outdoor unit		OC	51 to 100	Add 50 to the address assigned to the indoor unit connected to the system with one outdoor unit.		00
3	MA remote controller	Main remote controller	MA	No settings required.	-		Main
		Sub remote controller	MA	Sub remote controller	Settings to be made with the sub/main switch		

**3. System in which two MA remote controllers are connected to one indoor unit**

**(1) Sample control wiring**

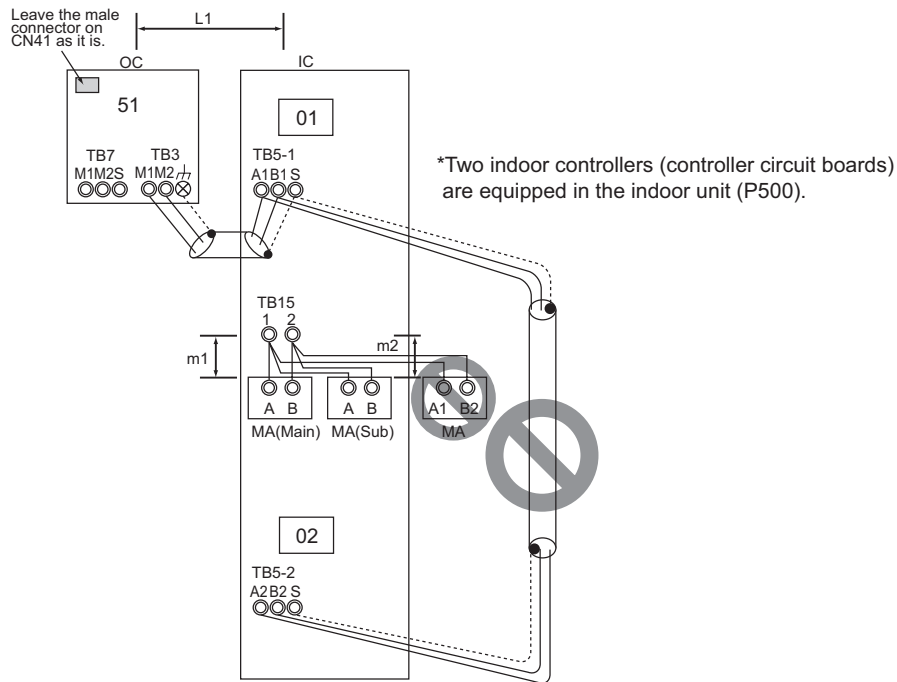

**(2) Notes**

- 1) Leave the male connector on the female power supply switch connector (CN41) on the outdoor unit as it is.
- 2) It is not necessary to provide grounding to S terminal on the terminal block for transmission line for centralized control (TB7).
- 3) Although two indoor controllers (controller circuit boards) are equipped inside the indoor unit, the board on No.2 side (lower side) is not used. Do not connect wiring to the lower controller circuit board.
- 4) No more than two MA remote controllers (including both main and sub controllers) can be connected to a group of indoor units. If three or more MA remote controllers are connected, remove the wire for the MA remote controller from the terminal block (TB15).

**(3) Maximum allowable length**

- 1) Indoor/outdoor transmission line  
Same as [4] 1.
- 2) MA remote controller wiring  
Maximum overall line length (0.3 to 1.25mm<sup>2</sup> [AWG 22 to 16])  
 $m1+m2 \leq 200\text{m}$  [656ft]

**(4) Wiring method**

- 1) Indoor/outdoor transmission line  
Same as [4] 1.
- 2) MA remote controller wiring

**When 2 remote controllers are connected to the system**

When two remote controllers are connected to the system, connect terminals 1 and 2 of the terminal block (TB15) on the indoor unit (IC) to the terminal block on the MA remote controllers (option).


- Set the Main/Sub switch on the connected MA remote controllers (option) to SUB.(See the installation manual for the MA remote controller for the setting method.)
- 3) Switch setting  
Address setting is required as follows.

**(5) Address setting method**

Procedures	Unit or controller			Address setting range	Setting method	Notes	Factory setting
1	Indoor unit	Main unit	IC	01 to 50	Assign a sequential odd number starting with "01" to the upper indoor controller.		00
		Sub unit	IC	01 to 50	Assign sequential numbers starting with the address of the main unit in the same group. (Main unit address +1)		
2	Outdoor unit		OC	51 to 100	Add 50 to the address assigned to the indoor unit connected to the system with one outdoor unit.		00
3	MA remote controller	Main remote controller	MA	No settings required.	-		Main
		Sub remote controller	MA	Sub remote controller	Settings to be made with the sub/main switch		

**4. System in which two indoor units are grouped with the MA remote controller**

**(1) Sample control wiring**

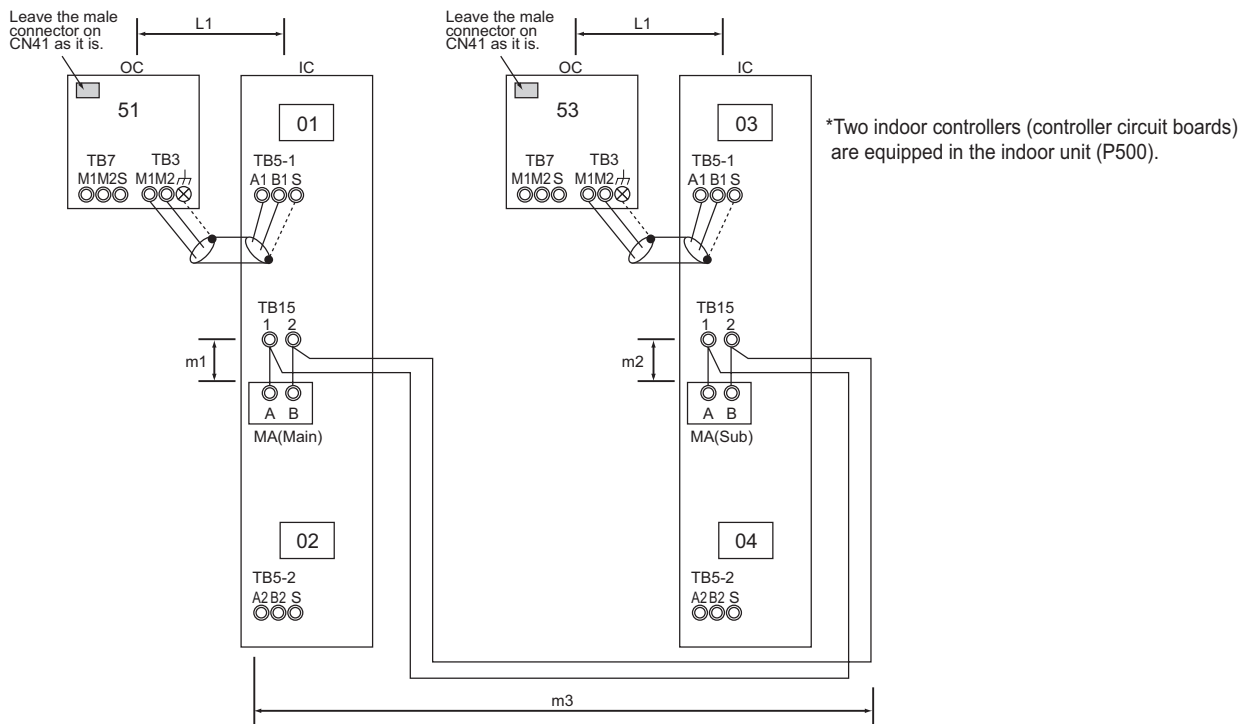

**(2) Notes**

- 1) Leave the male connector on the female power supply switch connector (CN41) on the outdoor unit as it is.
- 2) It is not necessary to provide grounding to S terminal on the terminal block for transmission line for centralized control (TB7).
- 3) Although two indoor controllers (controller circuit boards) are equipped inside the indoor unit, the board on No.2 side (lower side) is not used. Do not connect wiring to the lower controller circuit board.
- 4) No more than two MA remote controllers (including both main and sub controllers) can be connected to a group of indoor units. If three or more MA remote controllers are connected, remove the wire for the MA remote controller from the terminal block (TB15).

**(3) Maximum allowable length**

- 1) Indoor/outdoor transmission line  
Same as [4] 1.
- 2) MA remote controller wiring  
Maximum overall line length ( 0.3 to 1.25mm<sup>2</sup> [AWG22 to 16])  
 $m1+m2+m3 \leq 200m$  [656ft]

**(4) Wiring method**

- 1) Indoor/outdoor transmission line  
Same as [4] 1.
- 2) MA remote controller wiring

- Set the Main/Sub switch on one of the MA remote controllers to SUB.
- 3) Switch setting  
Address setting is required as follows.

**Group operation of indoor units**

To perform a group operation of indoor units (IC), daisy-chain terminals 1 and 2 on the terminal block (TB15) on all indoor units (IC). (Non-polarized 2-core cable)

**(5) Address setting method**


Procedures	Unit or controller			Address setting range	Setting method	Notes	Factory setting
1	Indoor unit	Main unit	IC	01 to 50	Assign a sequential odd number starting with "01" to the upper indoor controller.		00
		Sub unit	IC	01 to 50	Assign sequential numbers starting with the address of the main unit in the same group. (Main unit address +1)		
2	Outdoor unit		OC	51 to 100	Add 50 to the address assigned to the indoor unit connected to the system with one outdoor unit.		00
3	MA remote controller	Main remote controller	MA	No settings required.	-		Main
		Sub remote controller	MA	Sub remote controller	Settings to be made with the sub / main switch		




**[5] Restrictions on Pipe Length**

**1. Sample connection**

**(1) System with one refrigerant circuit**

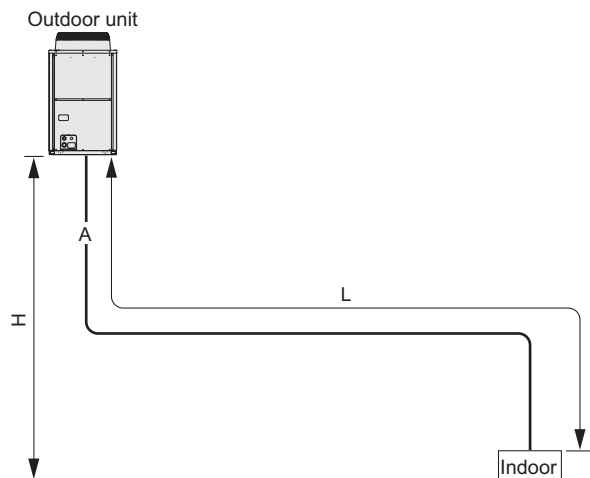

**(2) System with two refrigerant circuits**

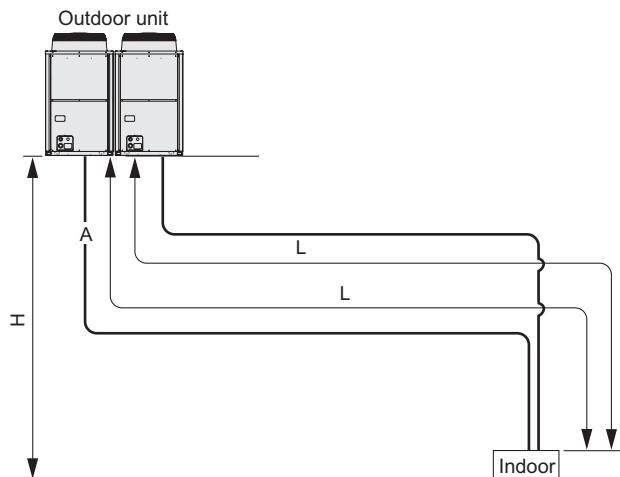

Allowable length	Total pipe length (L) from the outdoor unit to the farthest indoor unit	Actual length 165m [541ft] or less
Allowable height difference	Height difference between the indoor and the outdoor units (H)	50m [164ft] or less (40m [131ft] or less when the outdoor unit is lower, 15m [49ft] when the outdoor temperature is 10°C [50°F] or lower)

**2. Refrigerant pipe size**

Outdoor unit model	Liquid pipe (mm)[inch]	Gas pipe (mm)[inch]
P250 model	ø9.52 [3/8"] *1	ø22.2 [7/8"]

\*1 Use the pipe whose size is ø12.7 [1/2"] when the pipe length is 90m [295ft] or more.

---

### III Outdoor Unit Components


[1] Outdoor Unit Components and Refrigerant Circuit .....	35
[2] Control Box of the Outdoor Unit.....	37
[3] Outdoor Unit Circuit Board.....	38




## [1] Outdoor Unit Components and Refrigerant Circuit

### 1. PUHY-P250YHM-A

#### (1) Front view of a outdoor unit

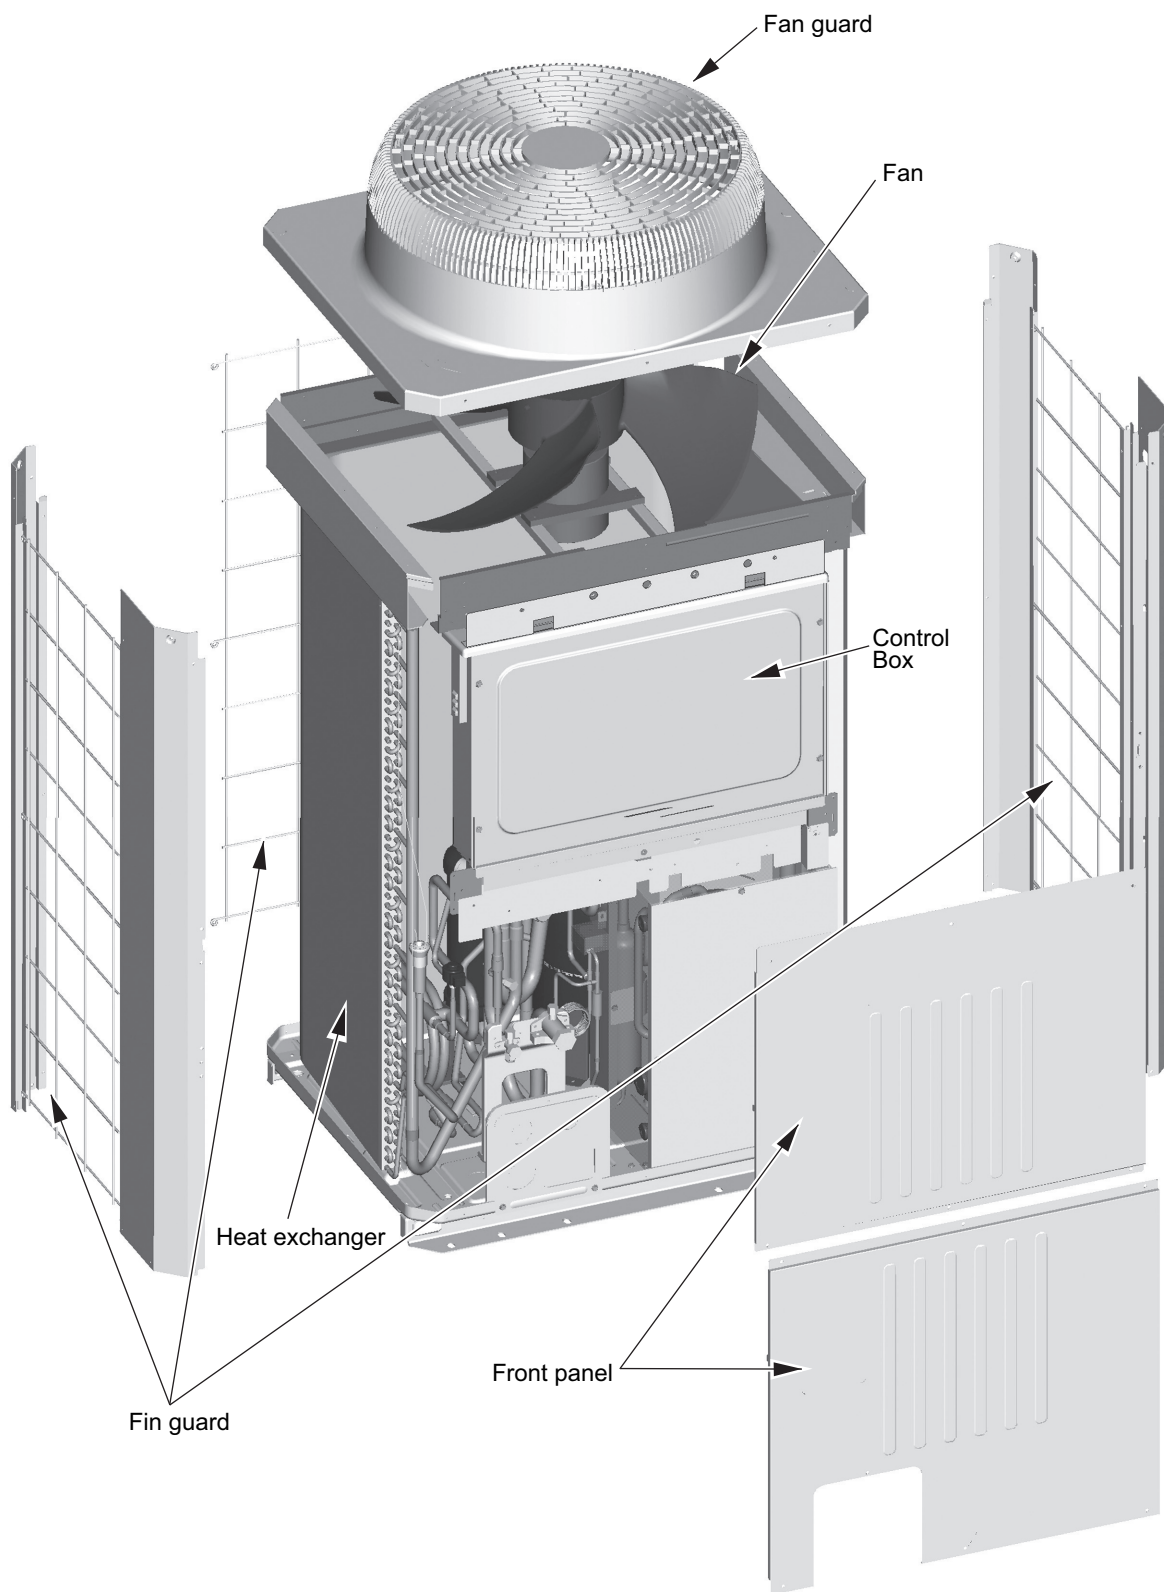


**2. PUHY-P250YHM-A**  
**(1) Refrigerant circuit**

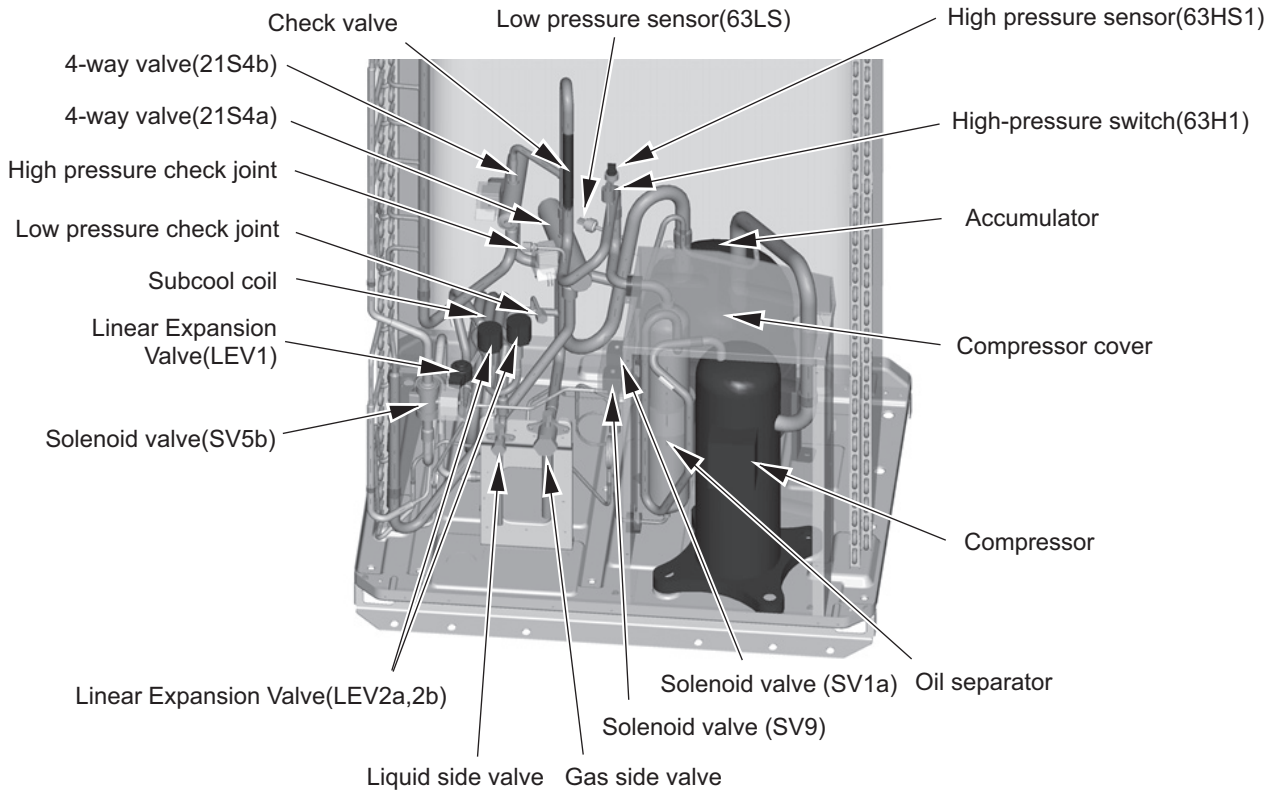


## [2] Control Box of the Outdoor Unit

### <HIGH VOLTAGE WARNING>

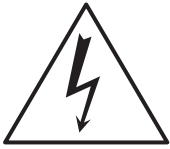

- Control box houses high-voltage parts.
- When opening or closing the front panel of the control box, do not let it come into contact with any of the internal components.
- Before inspecting the inside of the control box, turn off the power, keep the unit off for at least 10 minutes, and confirm that the voltage between FT-P and FT-N on INV Board has dropped to DC20V or less. (It takes about 10 minutes to discharge electricity after the power supply is turned off.)

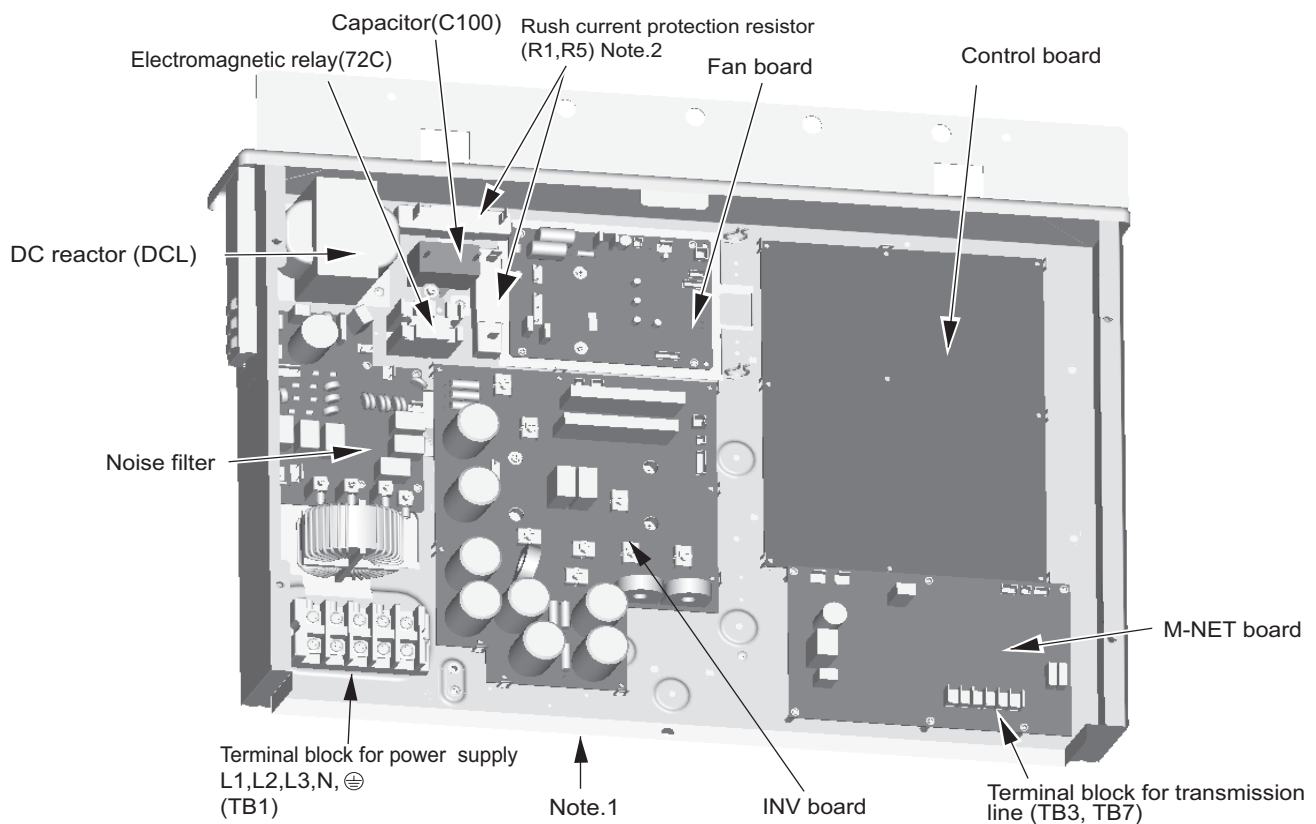


#### Note


- 1) Exercise caution not to damage the bottom and the front panel of the control box. Damage to these parts affect the water-proof and dust proof properties of the control box and may result in damage to its internal components.
- 2) Faston terminals have a locking function. Make sure the cable heads are securely locked in place. Press the tab on the terminals to remove them.

### [3] Outdoor Unit Circuit Board

#### 1. Outdoor unit control board

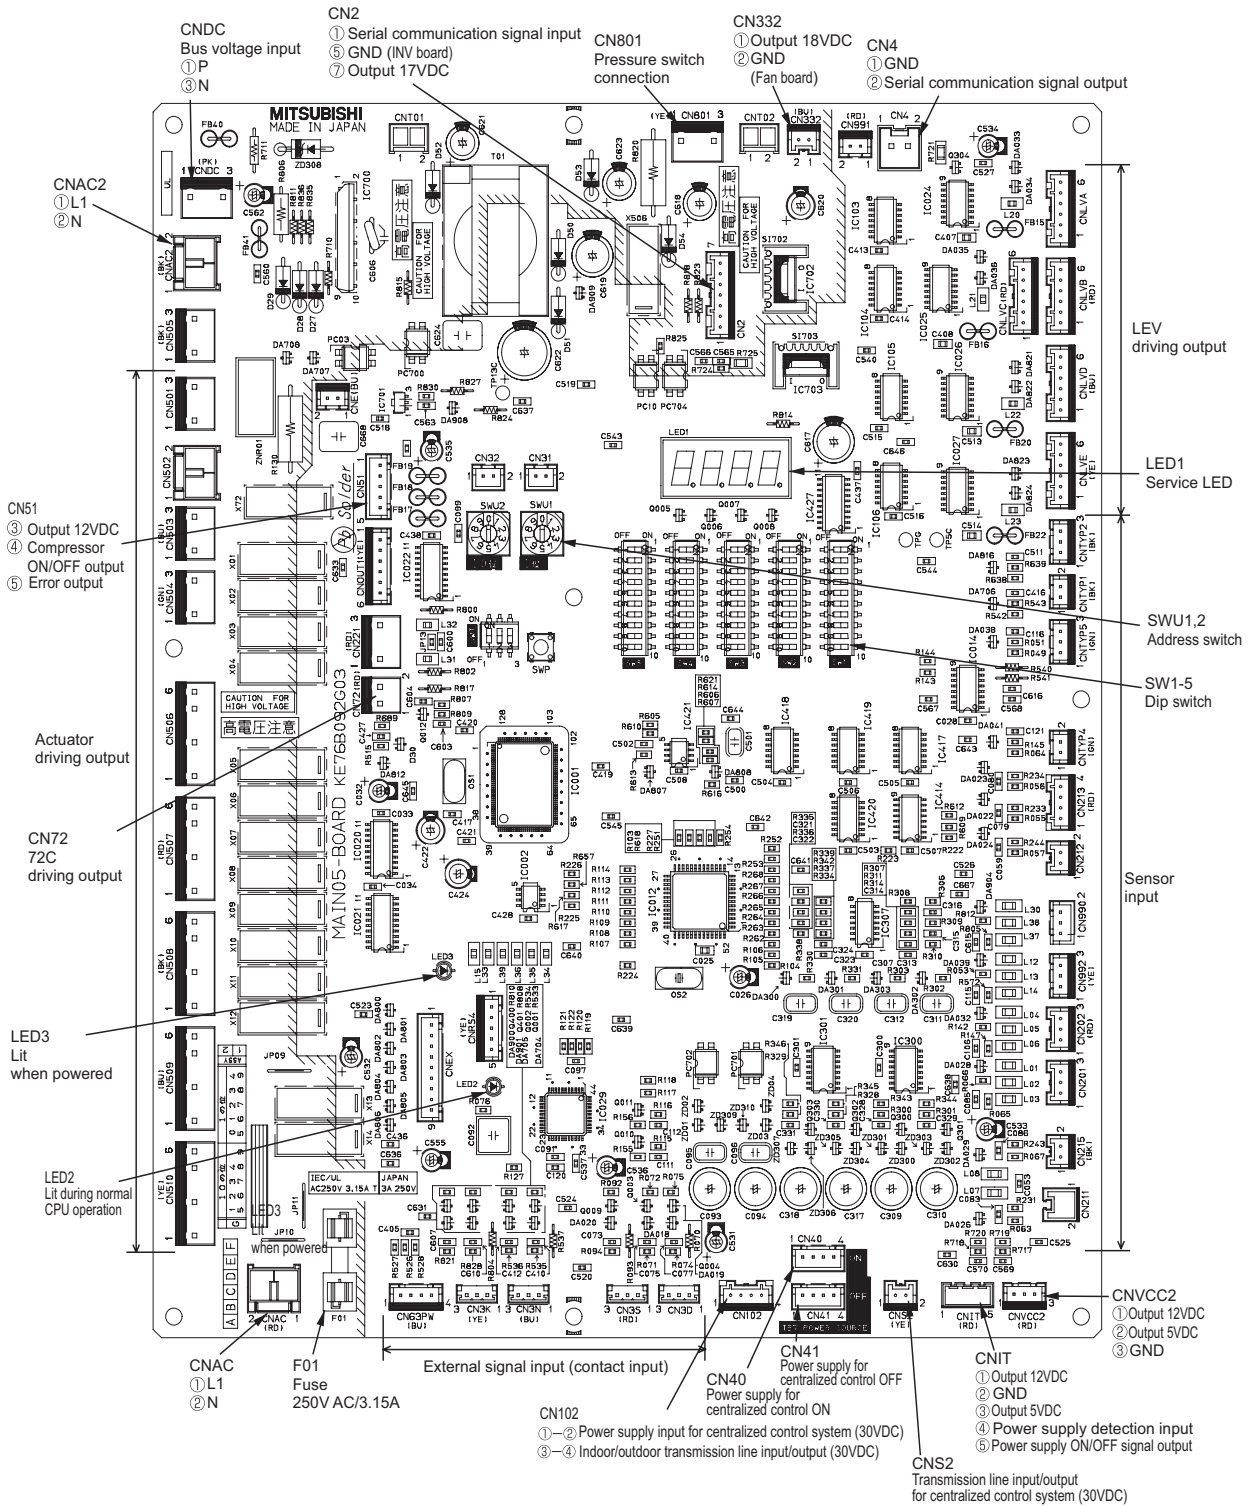


2. M-NET board

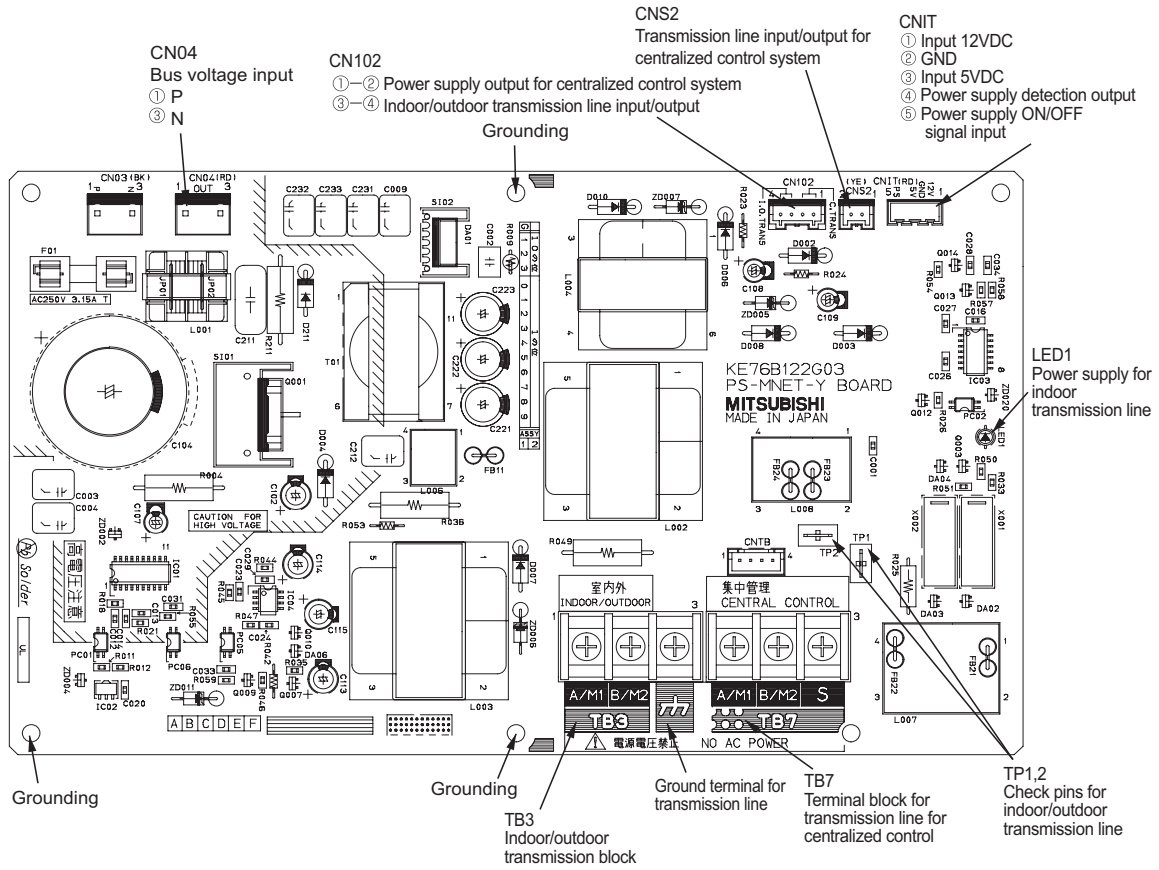




3. INV board

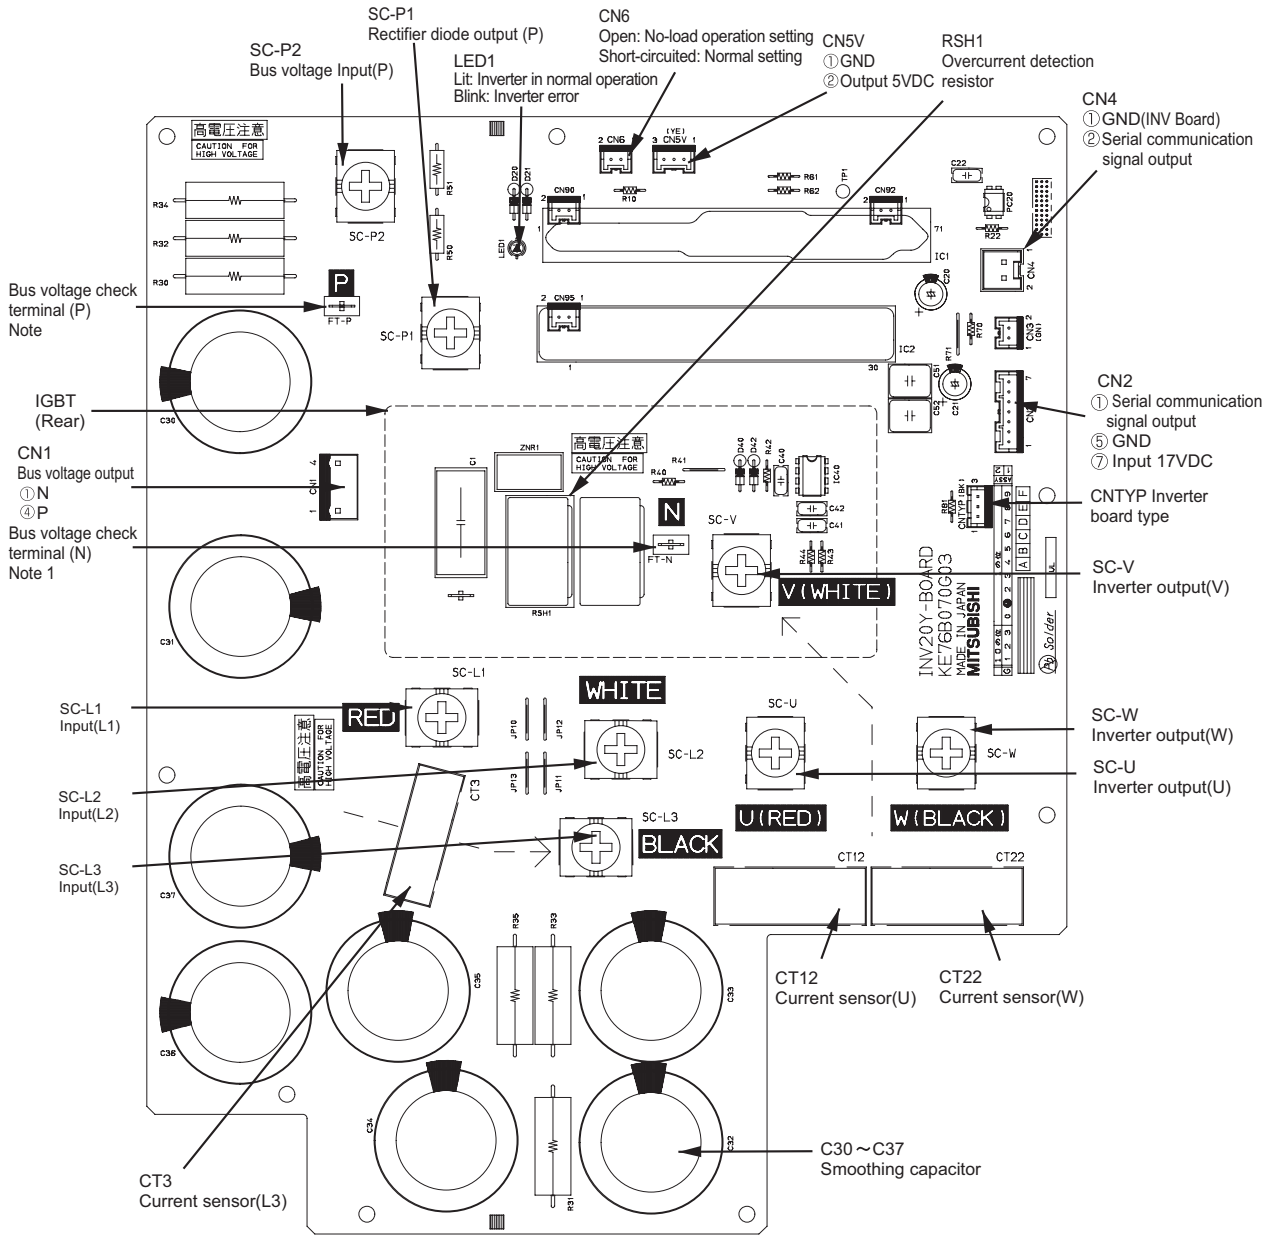


**Note**

- 1) Before inspecting the inside of the control box, turn off the power, keep the unit off for at least 10 minutes, and confirm that the voltage between FT-P and FT-N on INV Board has dropped to DC20V or less. It takes about 10 minutes to discharge electricity after the power supply is turned off.

4. Fan board

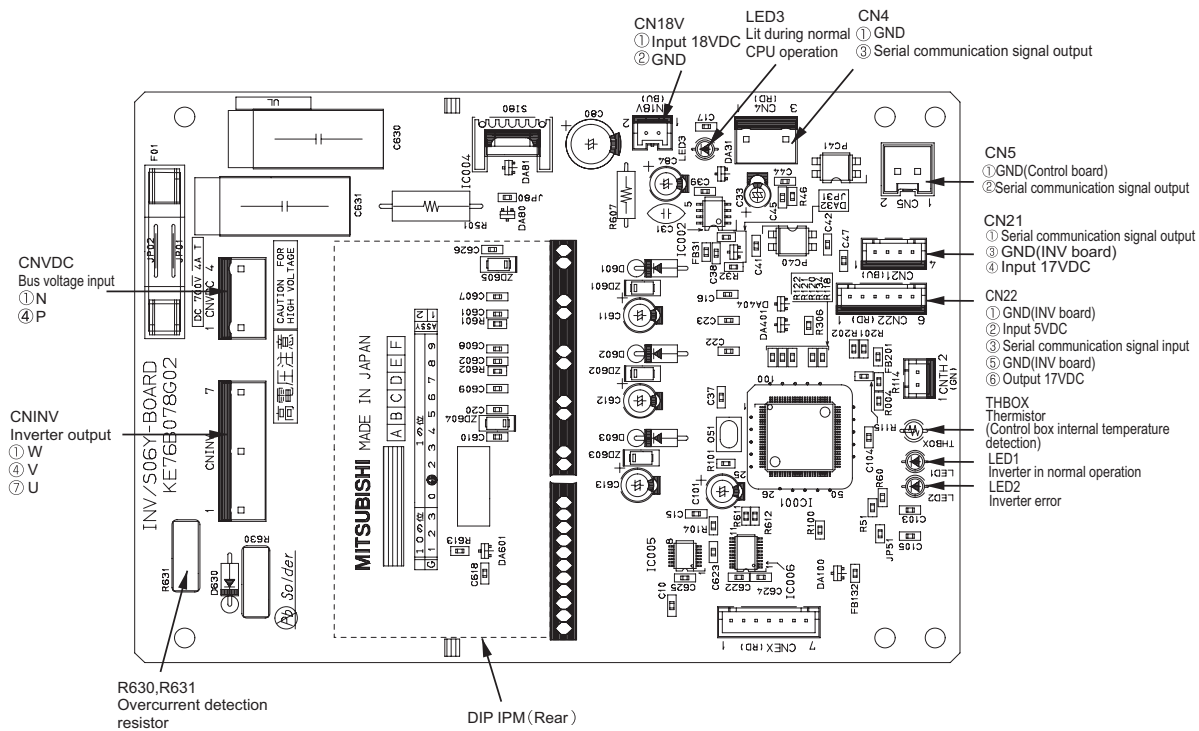

5. Noise Filter

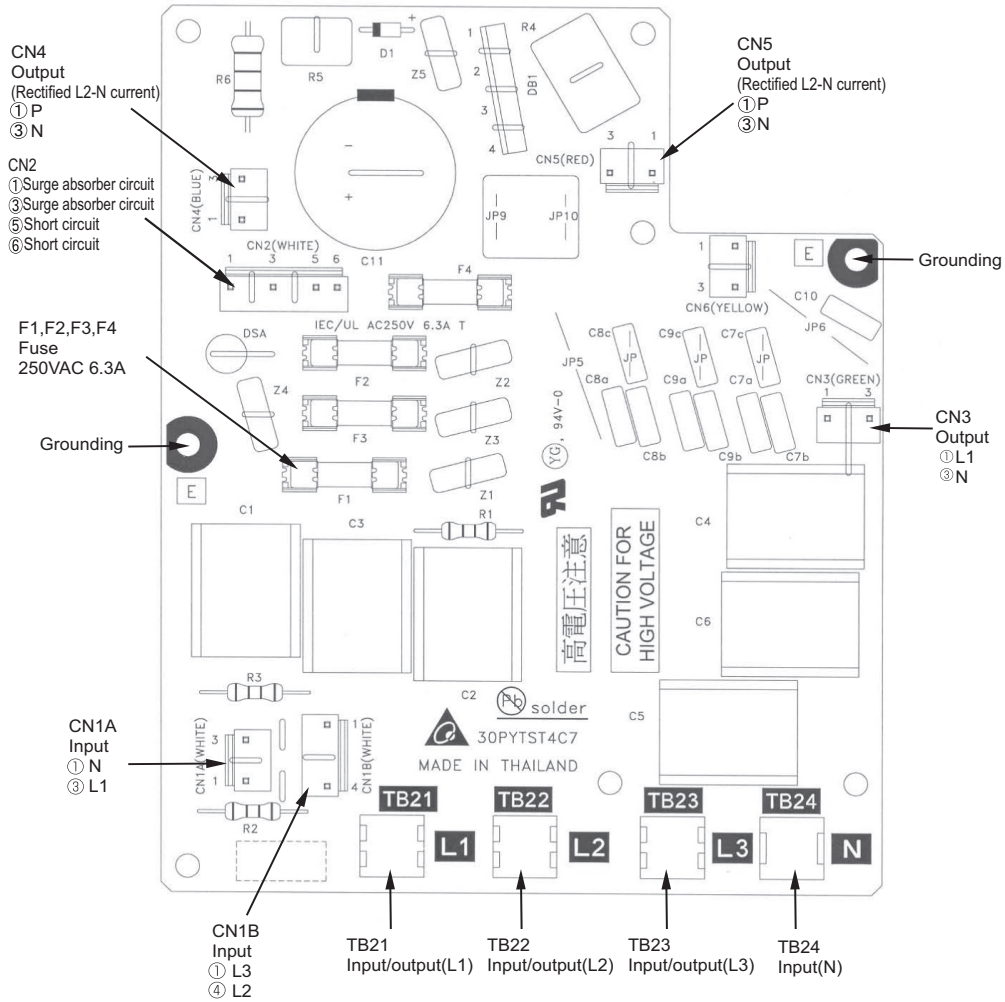

---

## IV Indoor Unit Components


[1] External Dimensions .....	45
[2] Indoor Unit Components and Internal Structure .....	47
[3] Control Box of the Indoor Unit.....	51
[4] Indoor Unit Circuit Board.....	52
[5] Separating the top and bottom of the unit.....	53



[1] External Dimensions


1. PFD-P250VM-E model

Unit : mm

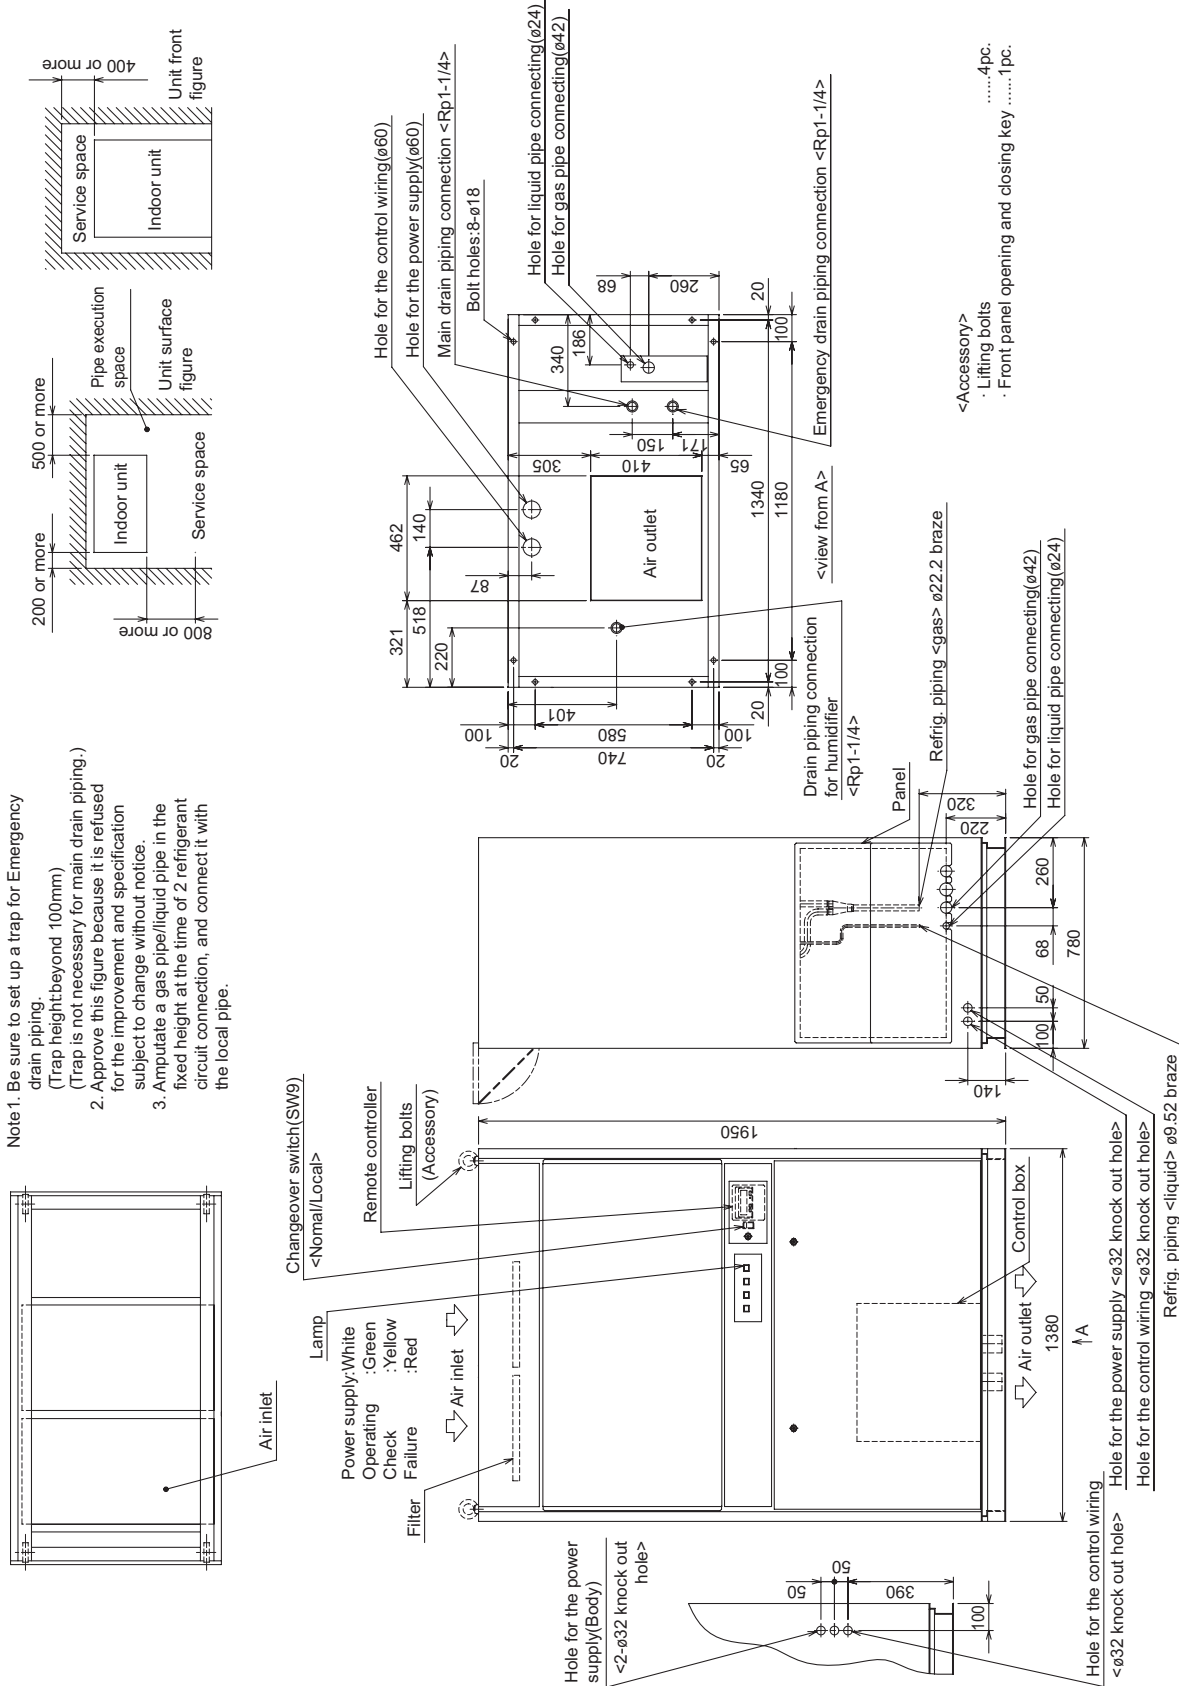

2. PFD-P500VM-E model

Unit : mm

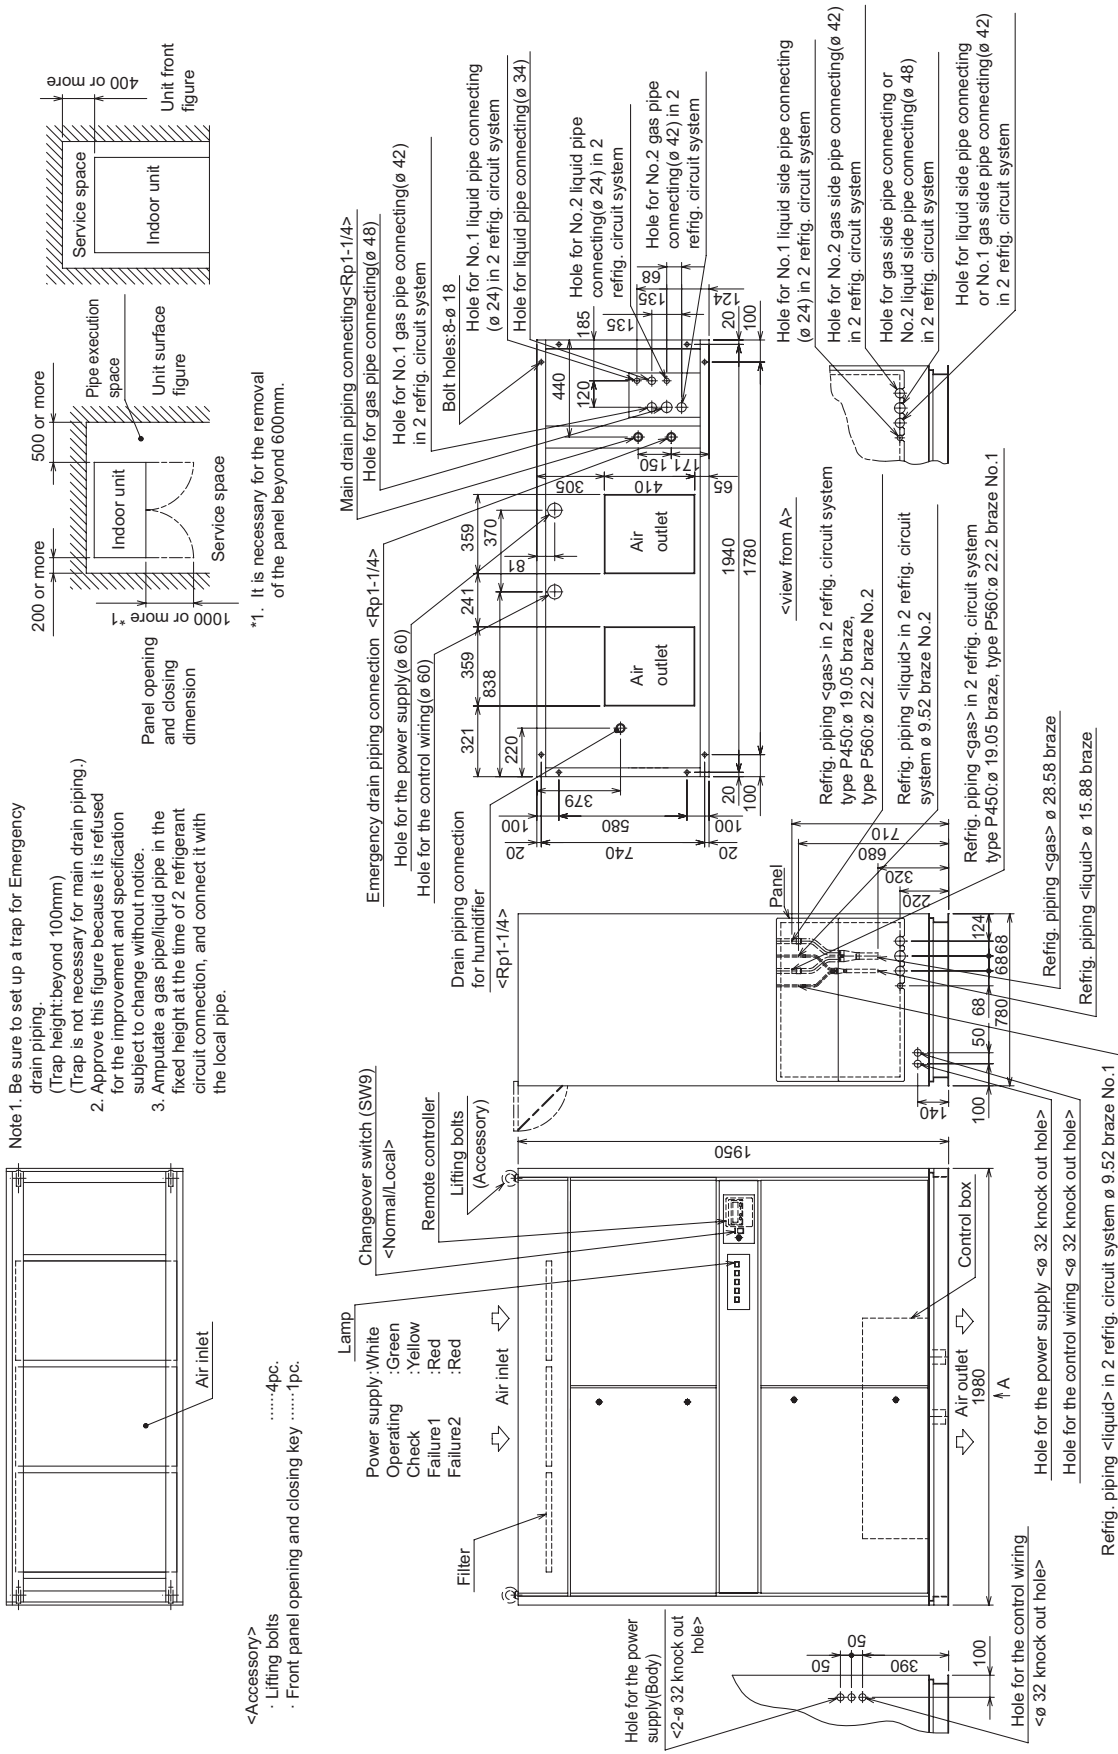


---

## [2] Indoor Unit Components and Internal Structure


---

### 1. PFD-P250VM-E model

#### (1) Front view of a indoor unit

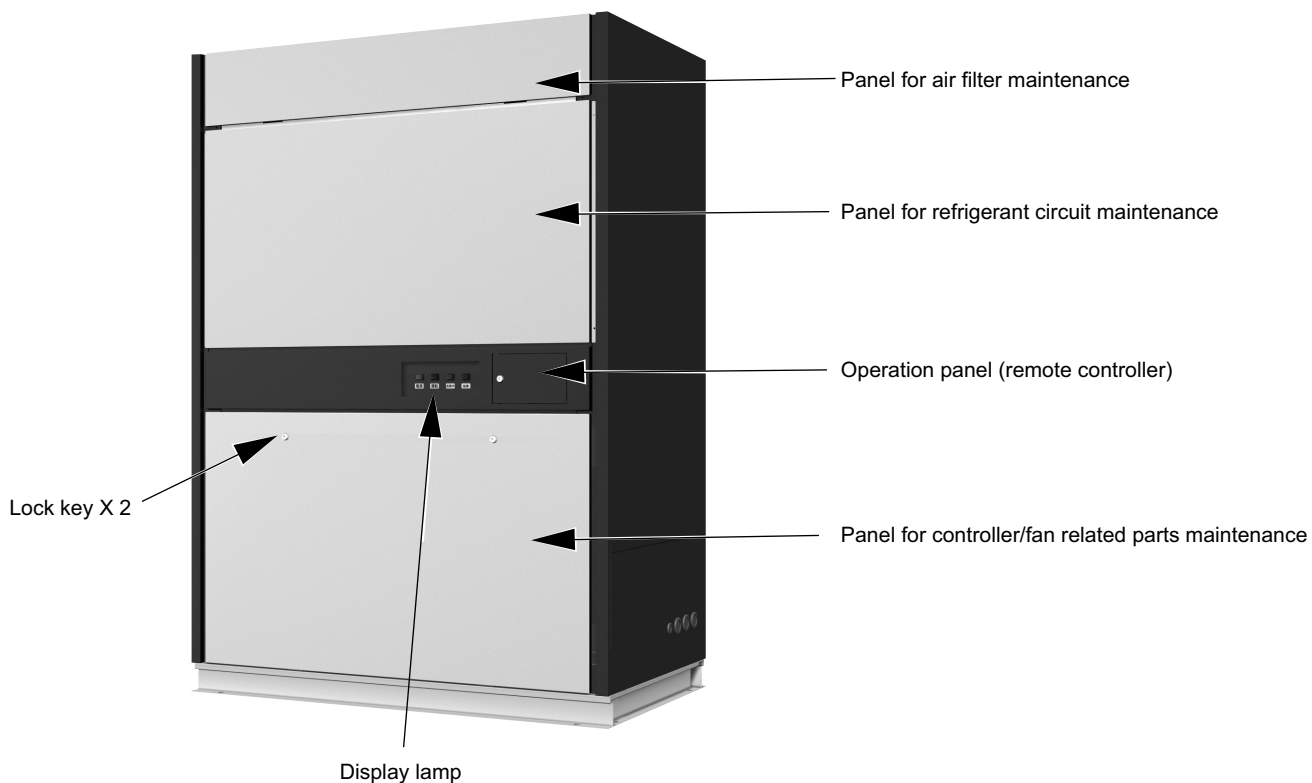


#### (2) Rear view of a indoor unit

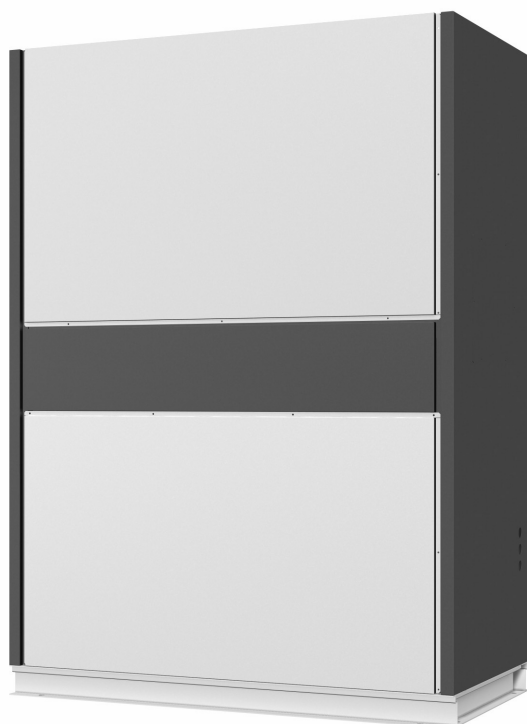




**(3) Front view of internal structure**

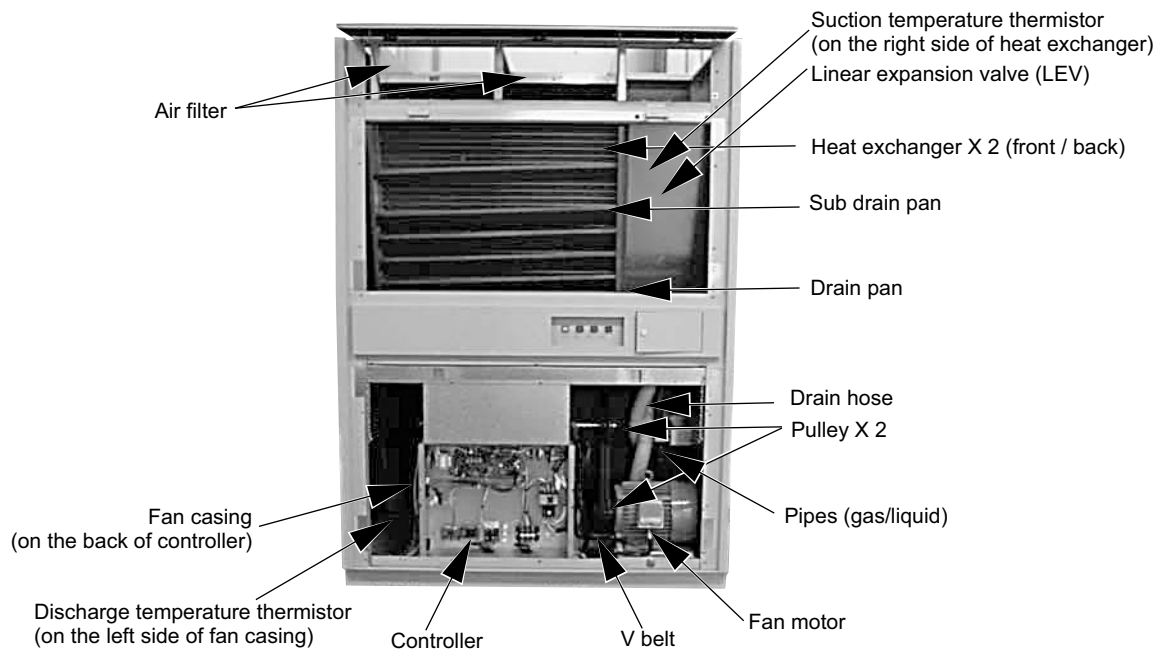


**(4) Rear view of internal structure**

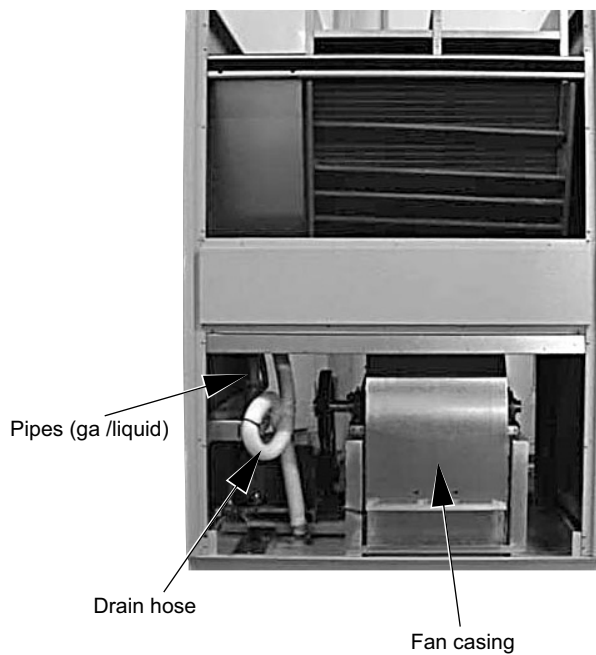

**2. PFD-P500VM-E model**


**(1) Front view of a indoor unit**

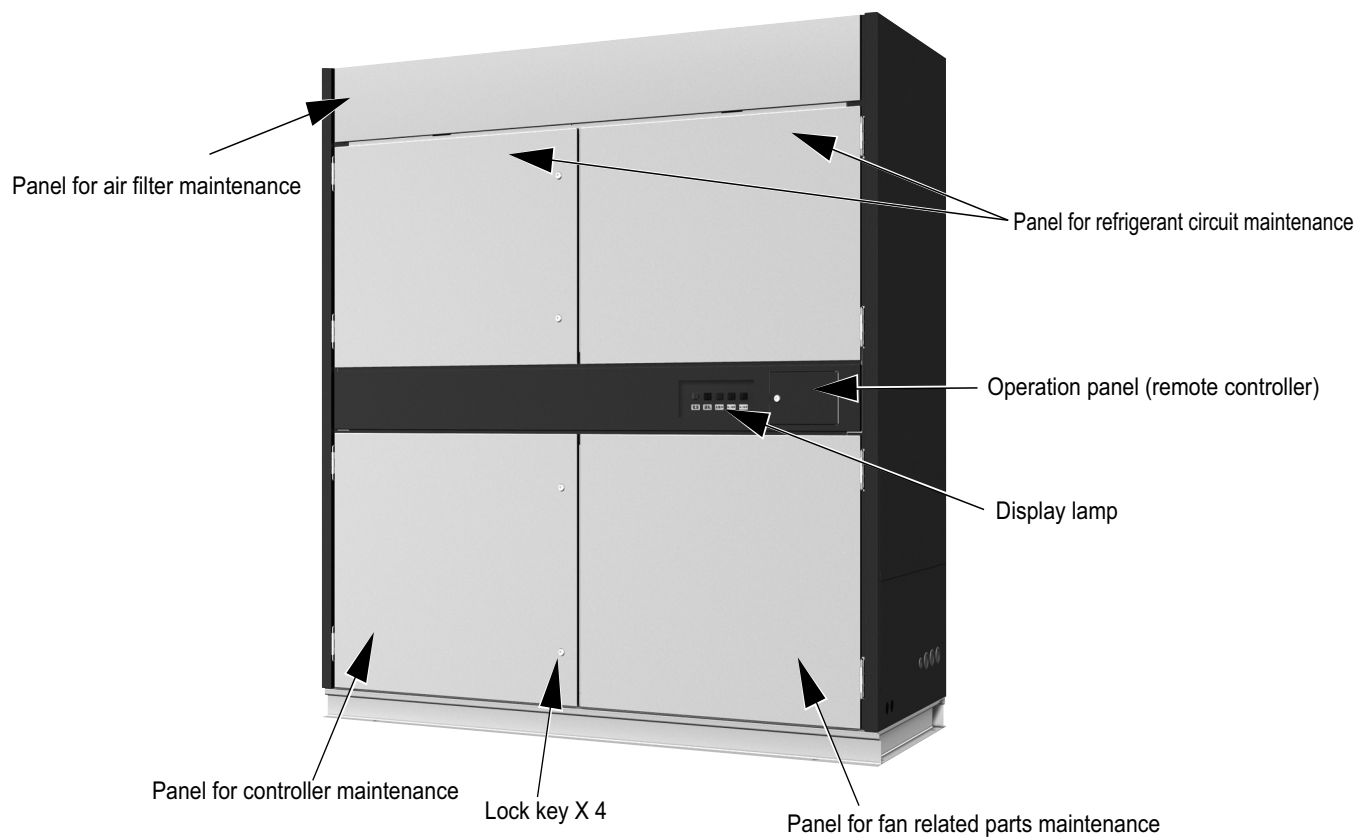


**(2) Rear view of a indoor unit**



**(3) Front view of internal structure**

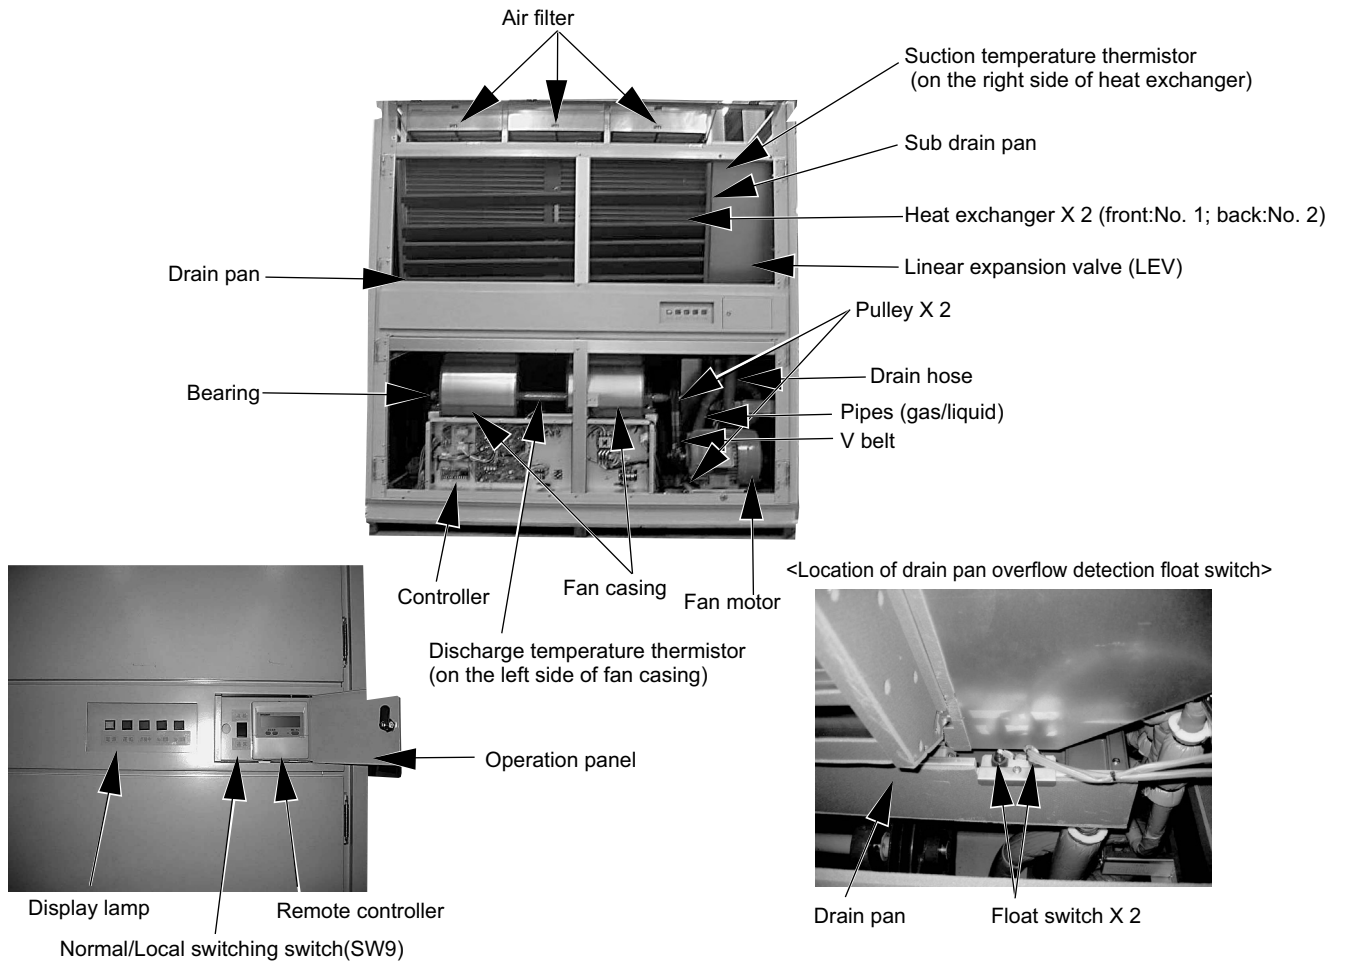


**(4) Rear view of internal structure**

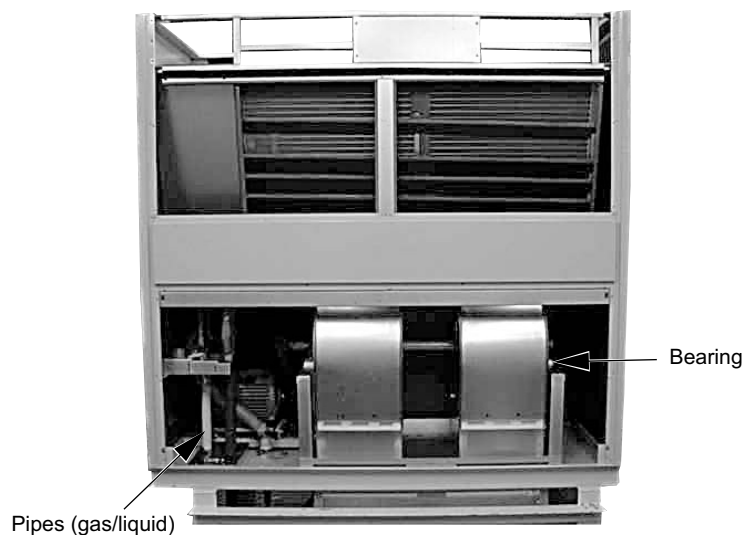


**[3] Control Box of the Indoor Unit**

**1. PFD-P250VM-E model**

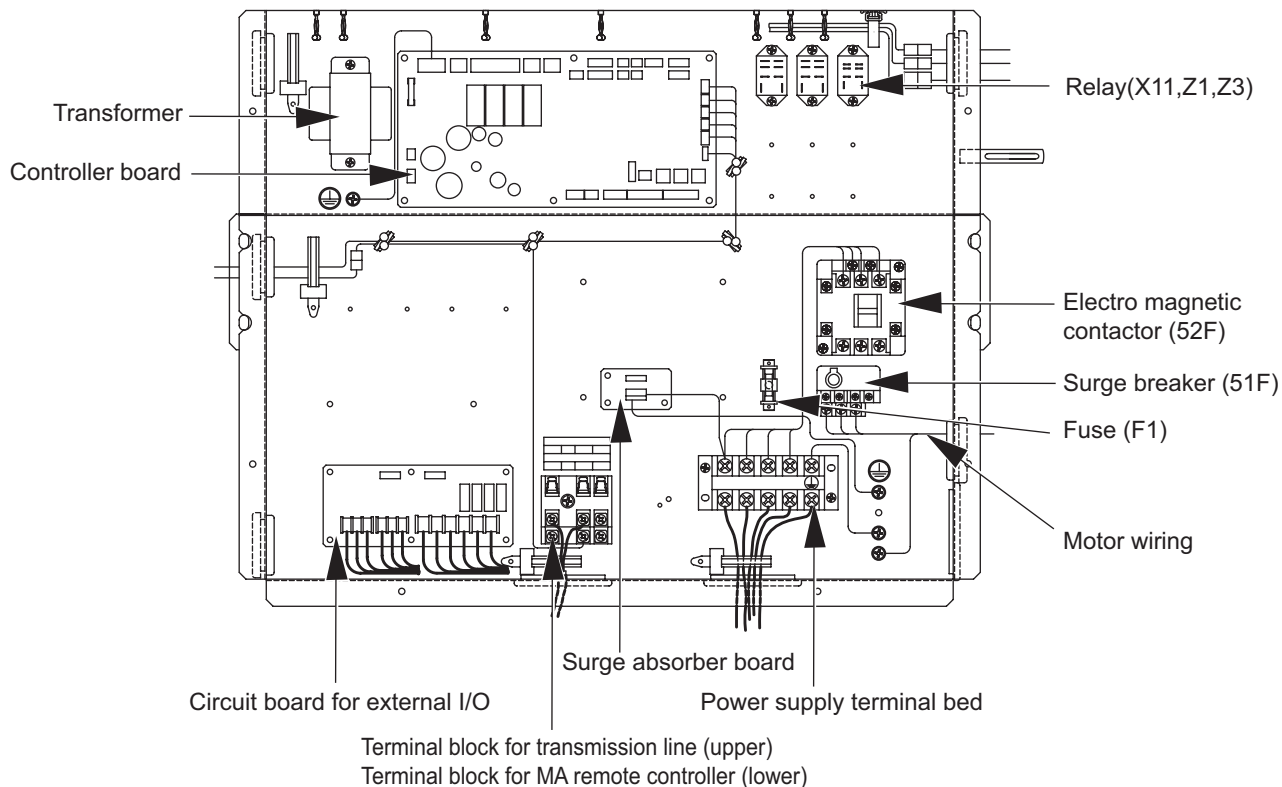


**2. PFD-P500VM-E model**

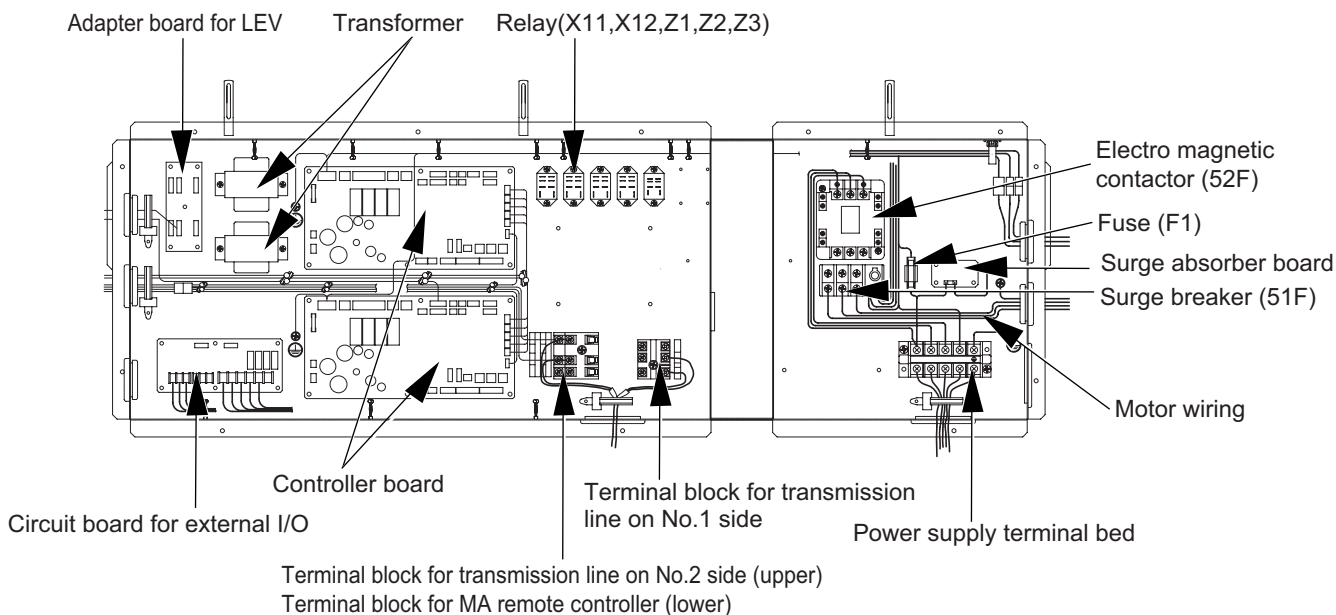


**[4] Indoor Unit Circuit Board**

**1. PFD-P250,P500VM-E models**

**(1) Indoor Control Board**

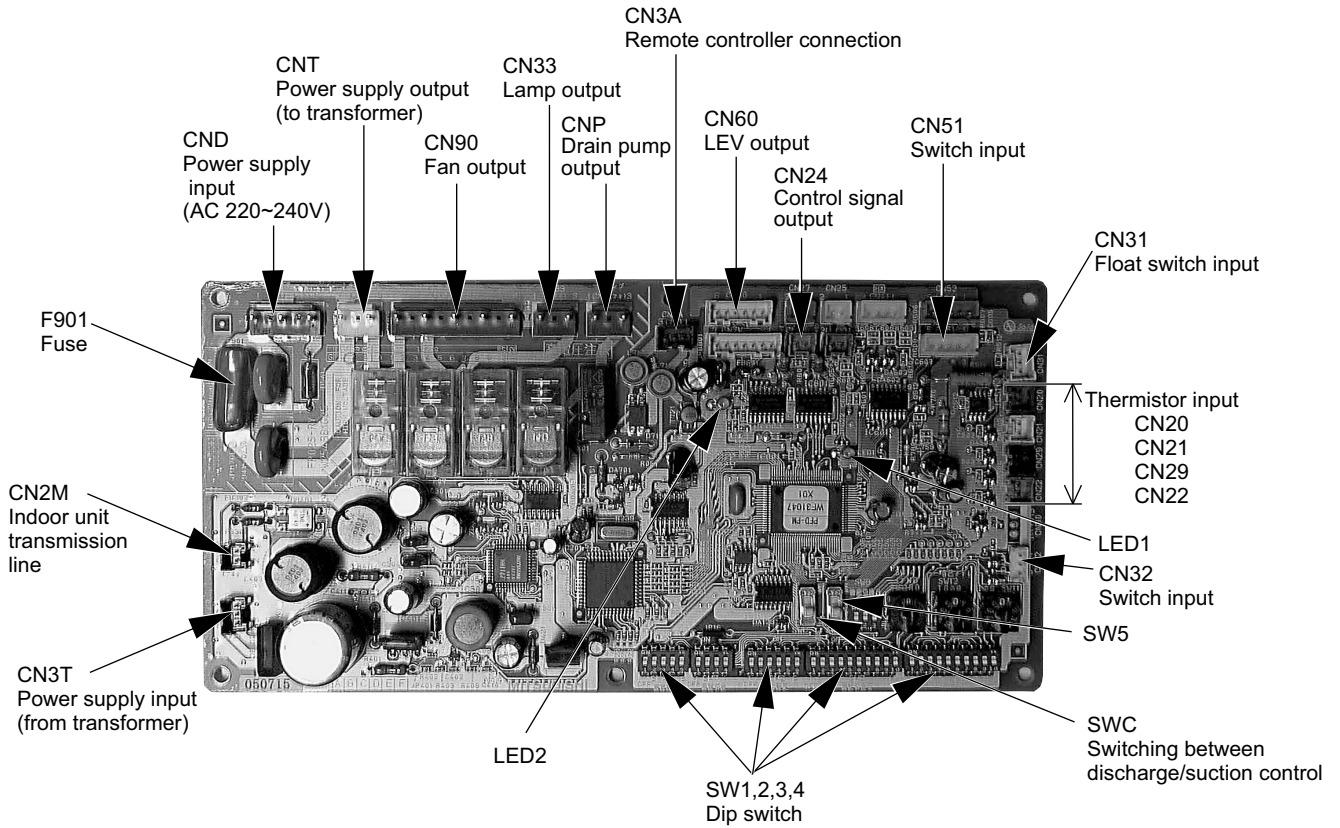

**(2) External Input/Output Circuit Board**

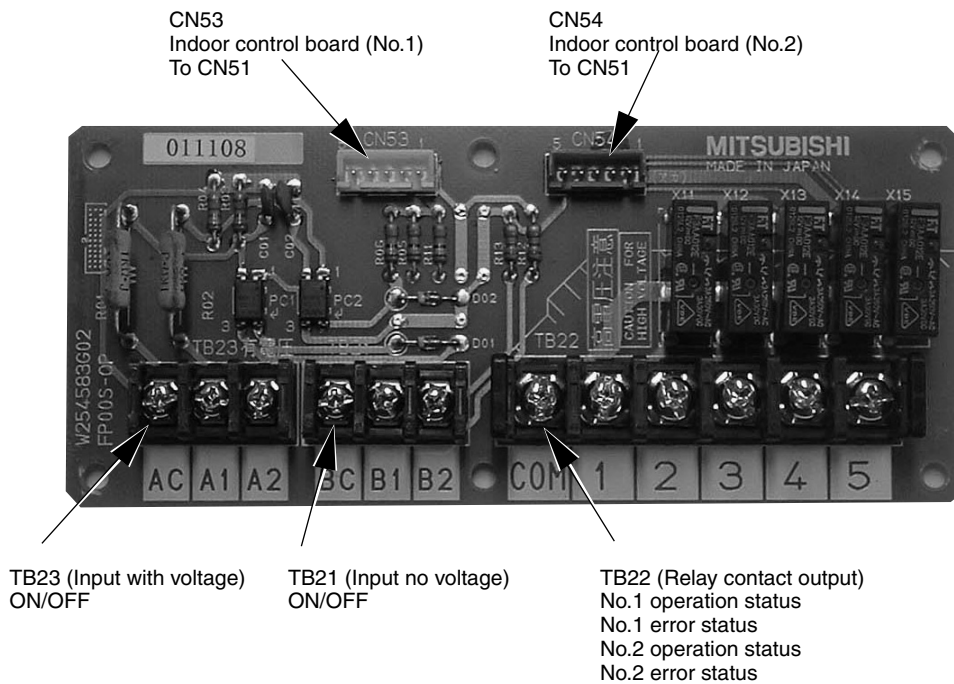

## [5] Separating the top and bottom of the unit

The top and the bottom of the unit can be separated. (Requires brazing)

When separating the top and the bottom of the unit, perform the work on a level surface.

Follow the procedures below when separating the sections.

Necessary tools and materials:

- Ratchet wrench with a socket size of 17 mm (for M10)
- General tools
- Cable ties (for wires)
- Gray vinyl tape (for pipes)
- Supporting wood piece Height 800 mm x width 100 mm x thickness 20 (mm) 1 piece

(1) Removing the decoration panel and filter

<Model 250>

- Remove the front panels (2), rear panels (2), and the side panels (2) in this order by removing the hinges and the screws on the unit as shown in [Fig.1].
- Open the filter cover and remove the filters (2 filters).

<Model 500>

- Remove the front panels (4), rear panels (3), and the side panels (2) in this order by removing the hinges and screws on the unit as shown in [Fig.1].
- Open the filter cover and remove the filters (3 filters).

(2) Disconnecting the electric wires

- Disconnect the wiring connectors from the remote controller, thermistor, float switch, lamp, and linear expansion valve as shown in [Fig.2].
- After removing the connectors, pull out the wires from the control box.
- Unclamp the wires from the frame.
- Put all wires together in a bundle on the unit.

(3) Removing the drain hose and the pipes from the brazed section of the pipe

- Remove the drain hose by unscrewing the screws on both ends of the hose band.
- Peel off the pipe cover on the pipe so that the torch flame will not reach the cover. Remove the pipe from the brazed section as shown in [Fig.3].


\*Protect the section around the area to be worked on from the torch flame (drain pan, wiring, insulation material on the frame etc).

(4) Separate the top and the bottom of the unit


- Unscrew the screws and loosen bolt ① that are marked with the letter A in [Fig.1] (on four corners)
- Loosen bolt ② loose enough to allow the top and the bottom of the unit to be separated. Be sure to re-tighten bolt ② after separating the top and bottom (Tightening torque: 74N·m).

Separation work is now complete. Exercise caution not to damage or scratch the unit during transportation or get your fingers caught between the units.

< Model 250 >

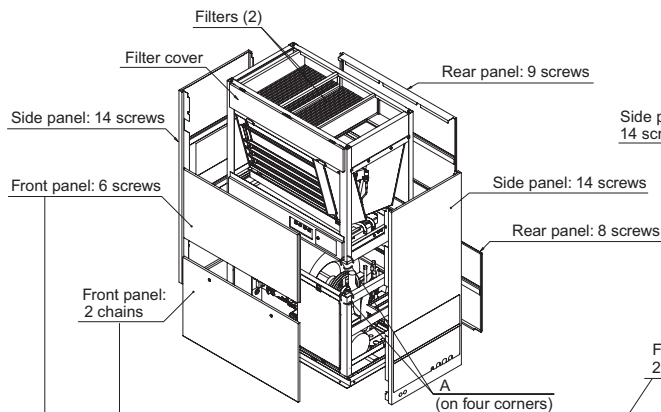


< Model 500 >

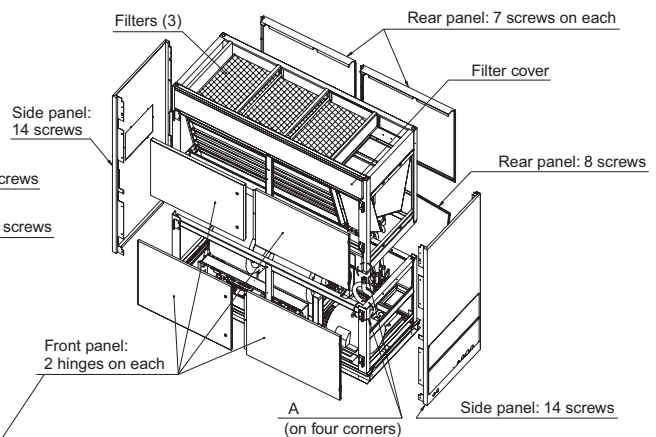

[Fig.1]

Detailed view of section A

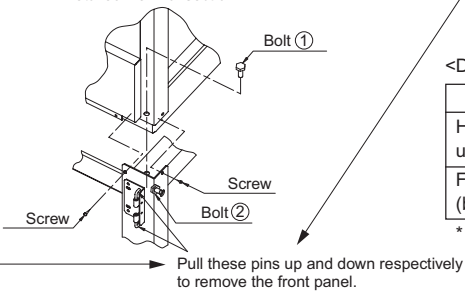


<Dimensions and weight of parts>


	Height (mm)	Width (mm)	Depth (mm)	Weight (kg)
Heat exchanger unit (top)	1120+510	P250:1380	780	P250:158
	*1	P500:1980		P500:246
Fan unit (bottom)	860	P250:1380	780	P250:128.5
		P500:1980		P500:159

\* Length of protruded pipe (removable)

<Model 250>


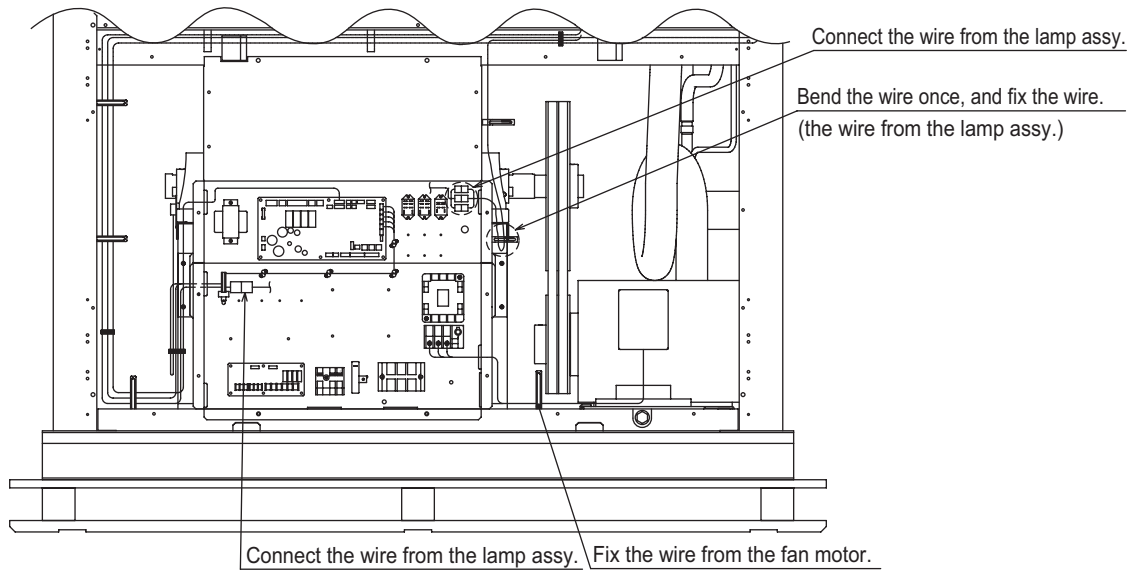


<Model 500>


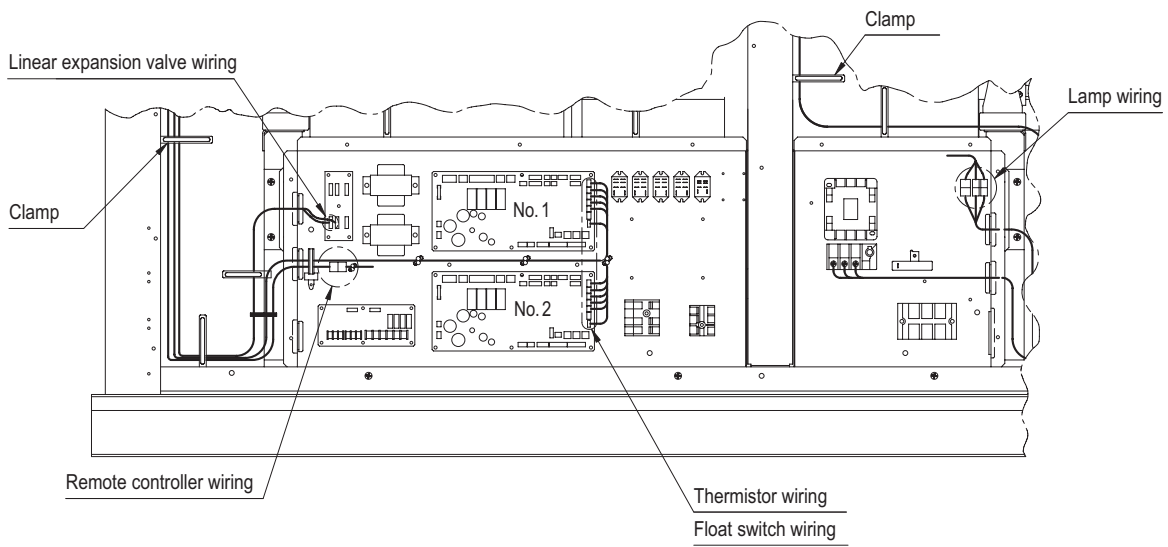


[Fig.2]

**<Model 250>**

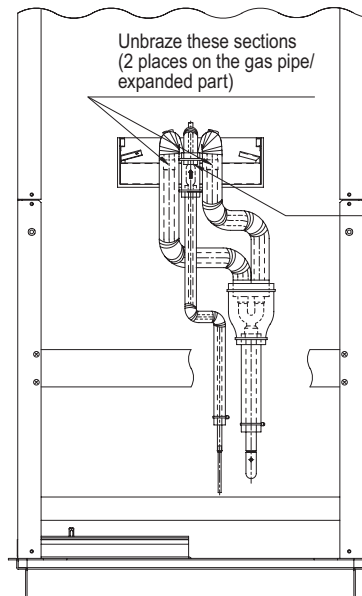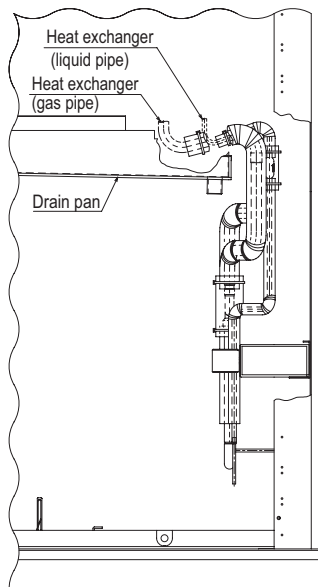

**<Model 500>**

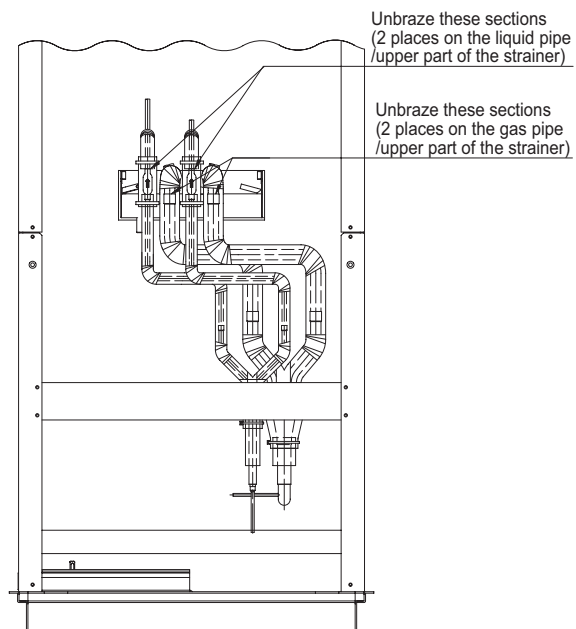
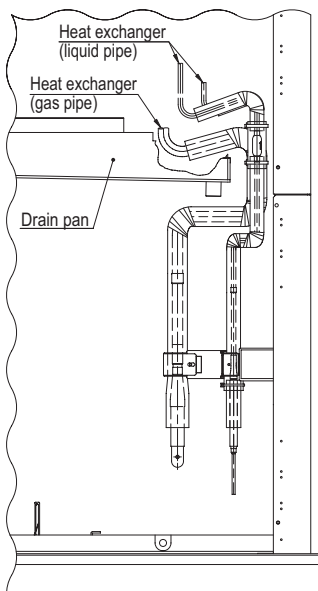


[Fig. 3]



**Note**

1. Peel off the pipe cover carefully. The cover will be needed again when putting the units together.
2. When loading the unit on an elevator, place the separated sections upright as shown below.  
(Place the right side up.) Place a piece of wood at the bottom of the bottom section for support to keep it level.

**<Model 250>**

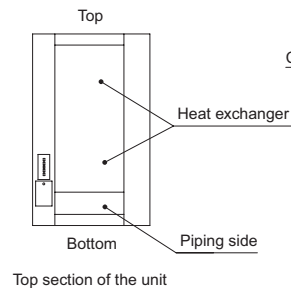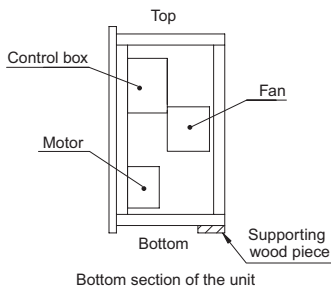

**<Model 500>**

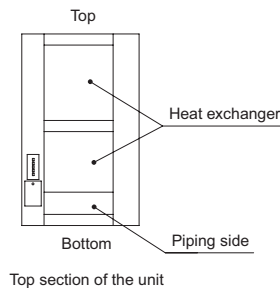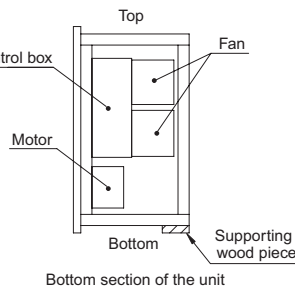




To put the top and bottom sections of the unit together, follow the procedures above in the reverse order.

- Check to make sure that the frame is perpendicular to the horizontal plane before putting the panels together.
- When the frames will not fit back into place, loosen bolt ② as shown in [Fig.1], place the frames, and tighten bolt ②.
- Be sure to securely tighten all screws and bolts. (tightening torque: 74N·m)
- Using [Fig.4] and Table 1 as a reference, connect all connectors correctly.  
Use a cable tie and bundle the wires as they were before.
- Keep torch flame away from the insulation material on the drain pan and from other flammable materials when performing brazing work. Use the shielding board that is supplied.
- Perform a test run and check for abnormal sound, rattling, and water leaks.

<Model 250>

Table 1

Board No.	Connector	Wire mark	Connector color	No. of pins	Parts name
No.1	CN31	1	White	3	Float switch
	CN20	S1	Red	2	Inlet thermistor
	CN21	E1	White	2	Liquid pipe thermistor
	CN29	G1	Black	2	Gas pipe thermistor
	CN60	V1	White	6	Linear expansion valve

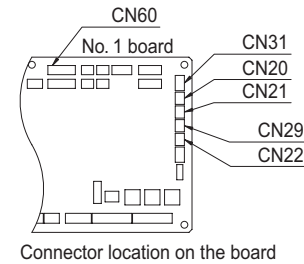


Connector location on the board

[Fig. 4]

<Model 500>

Table 1

Board No.	Connector	Wire mark	Connector color	No. of pins	Parts name
No.1	CN31	1	White	3	Float switch
	CN20	S1	Red	2	Inlet thermistor
	CN21	E1	White	2	Liquid pipe thermistor
	CN29	G1	Black	2	Gas pipe thermistor
	LEV2A	V1	White	6	Linear expansion valve
No.2	CN31	2	White	3	Float switch
	CN20	S2	Red	2	Inlet thermistor
	CN21	E2	White	2	Liquid pipe thermistor
	CN29	G2	Black	2	Gas pipe thermistor
	LEV2B	V2	White	6	Linear expansion valve

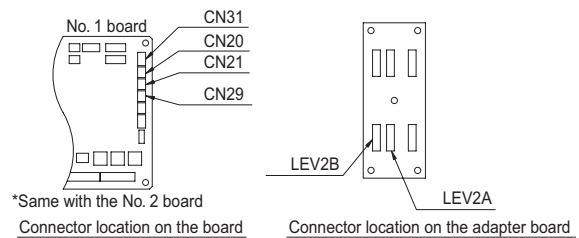

\*Same with the No. 2 board

Connector location on the board

Connector location on the adapter board

[Fig. 4]

**⚠ Caution**

Use a hand-lift truck to transport the units; they are heavy even when the top and button sections are separated. Carrying the units by hand is dangerous and may result in personal injury if the units fall or topple over. Exercise caution not to get your fingers caught when separating or assembling the top and bottom sections of the unit.

---


## V Electrical Wiring Diagram

[1] Electrical Wiring Diagram of the Outdoor Unit .....	59
[2] Electrical Wiring Diagram of the Indoor Unit.....	60



# [1] Electrical Wiring Diagram of the Outdoor Unit



## 1. Electrical wiring diagram of the outdoor unit (1) PUHY-P250YHM-A

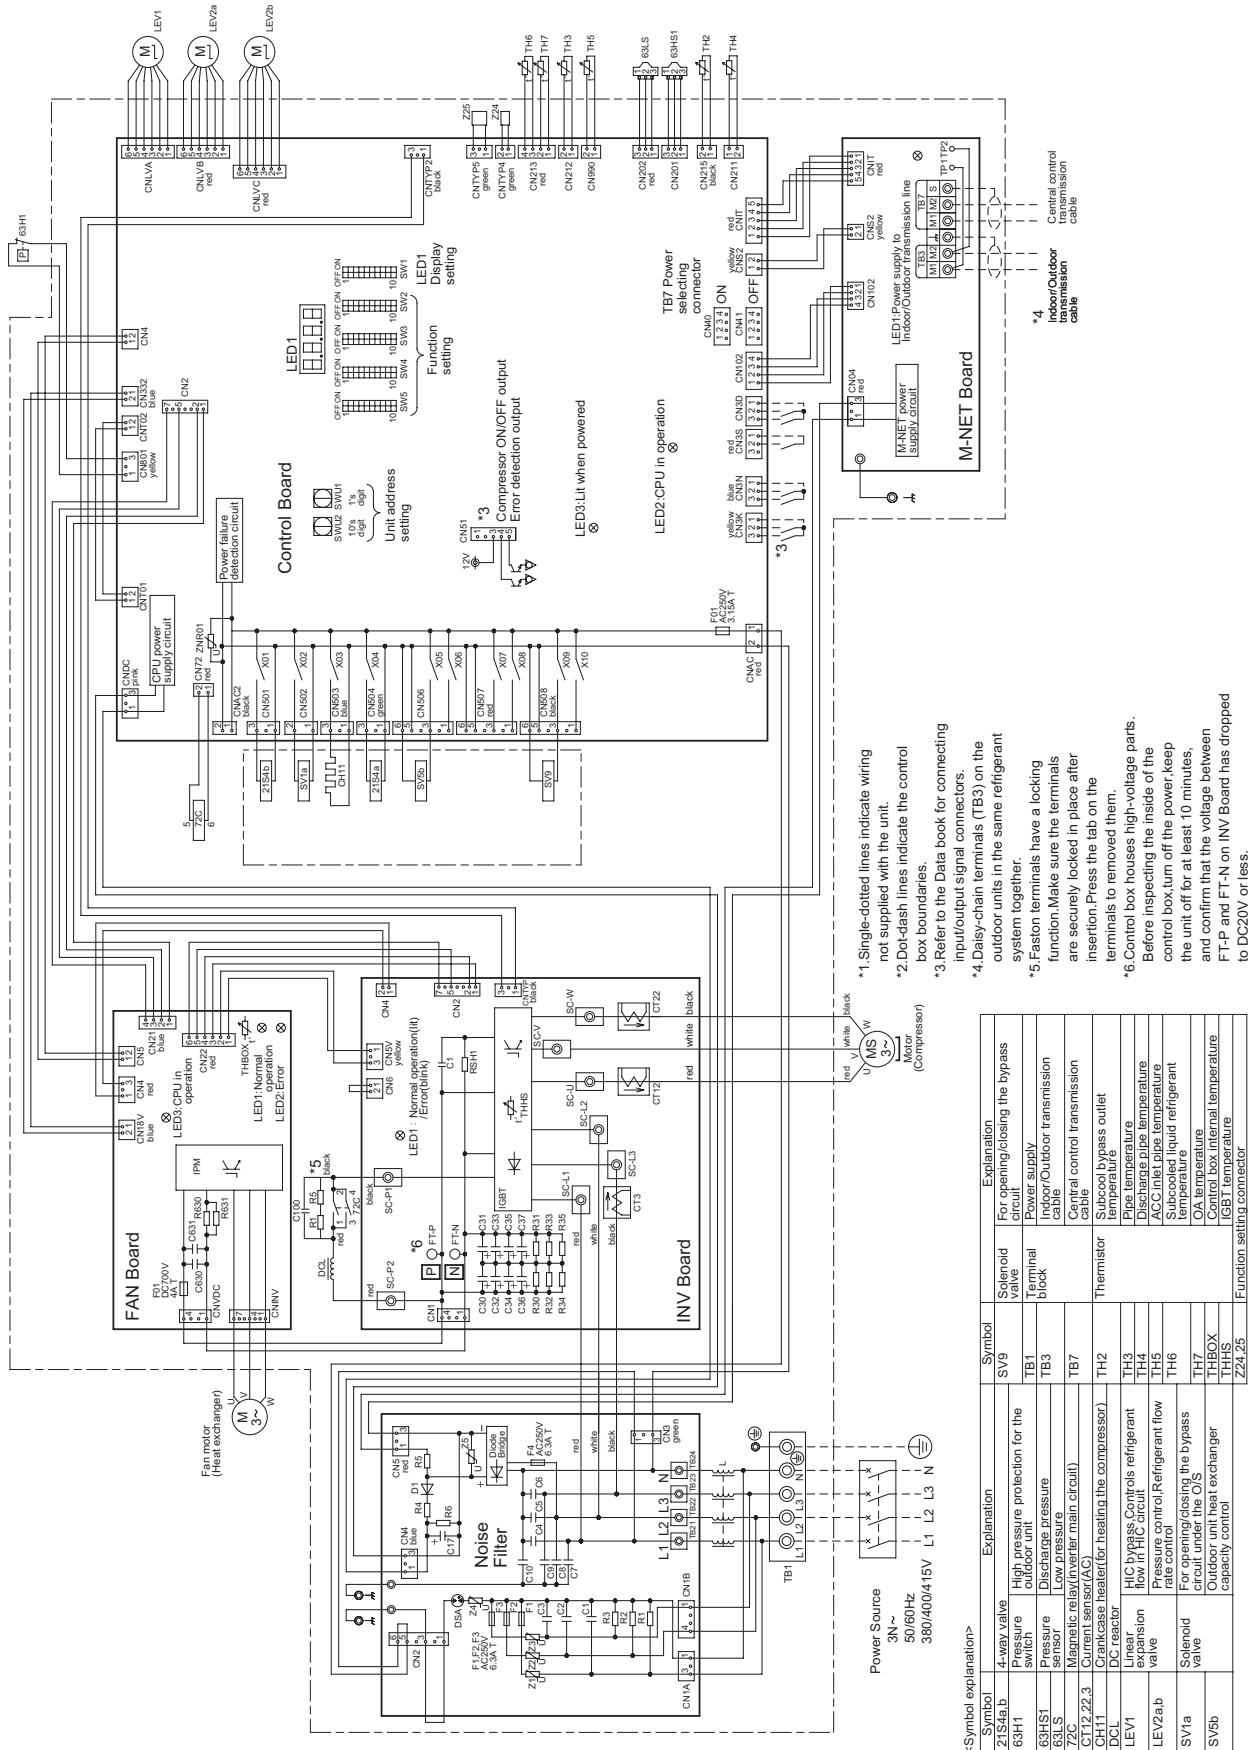

## [2] Electrical Wiring Diagram of the Indoor Unit

### 1. PFD-P250VM-E

SYMBOL	NAME
MF	Fan motor
I.B.	Indoor controller board
S.B.	Surge absorber board
IFB	External input/output board
TB2	Power source terminal bed
TB5	Transmission terminal bed
TB15	Transmission terminal bed
TB21	Terminal bed for distant location on/off <No voltage or current>
TB22	Terminal bed for distant location display
TB23	Terminal bed for distant location on/off <With voltage and current>
F901	Fuse<6-3/16A>
F1	Fuse<5A>
ZNR1, ZNR2, ZNR901	Varistor
DSA1	Surge absorber
T	Transformer
LEV	Electronic linear expan. valve
52F	Contactor(fan I/D)
51F	Over current relay (fan I/D)
33P-1	Float switch
TH21	Thermistor (inlet temp. detection)
TH22	Thermistor (piping temp. detection/liquid)
TH23	Thermistor (piping temp. detection/gas)
TH24	Thermistor (outlet temp. detection)
SW1(I.B.)	Switch (for mode selection)
SW2(I.B.)	Switch (for capacity code)
SW3(I.B.)	Switch (for model selection)
SW4(I.B.)	Switch (for model selection)
SW9	Switch (normal/local)
SW11(I.B.)	Switch (1st digit address set)
SW12(I.B.)	Switch (2nd digit address set)
SW14(I.B.)	Switch (connection No.set)
SWC(I.B.)	Switch (outlet/inlet temp. control)
X11	Auxiliary relay(check)
Z1	Auxiliary relay(fan)
L1	Auxiliary relay(fan failure detection)
L2	LED display (failure)
L3	LED display (status)
L4	LED display (check)
L4	LED display (power supply)
RC	MA Remote controller

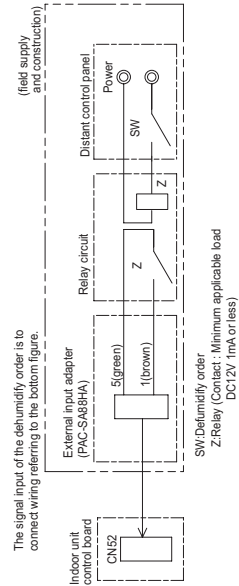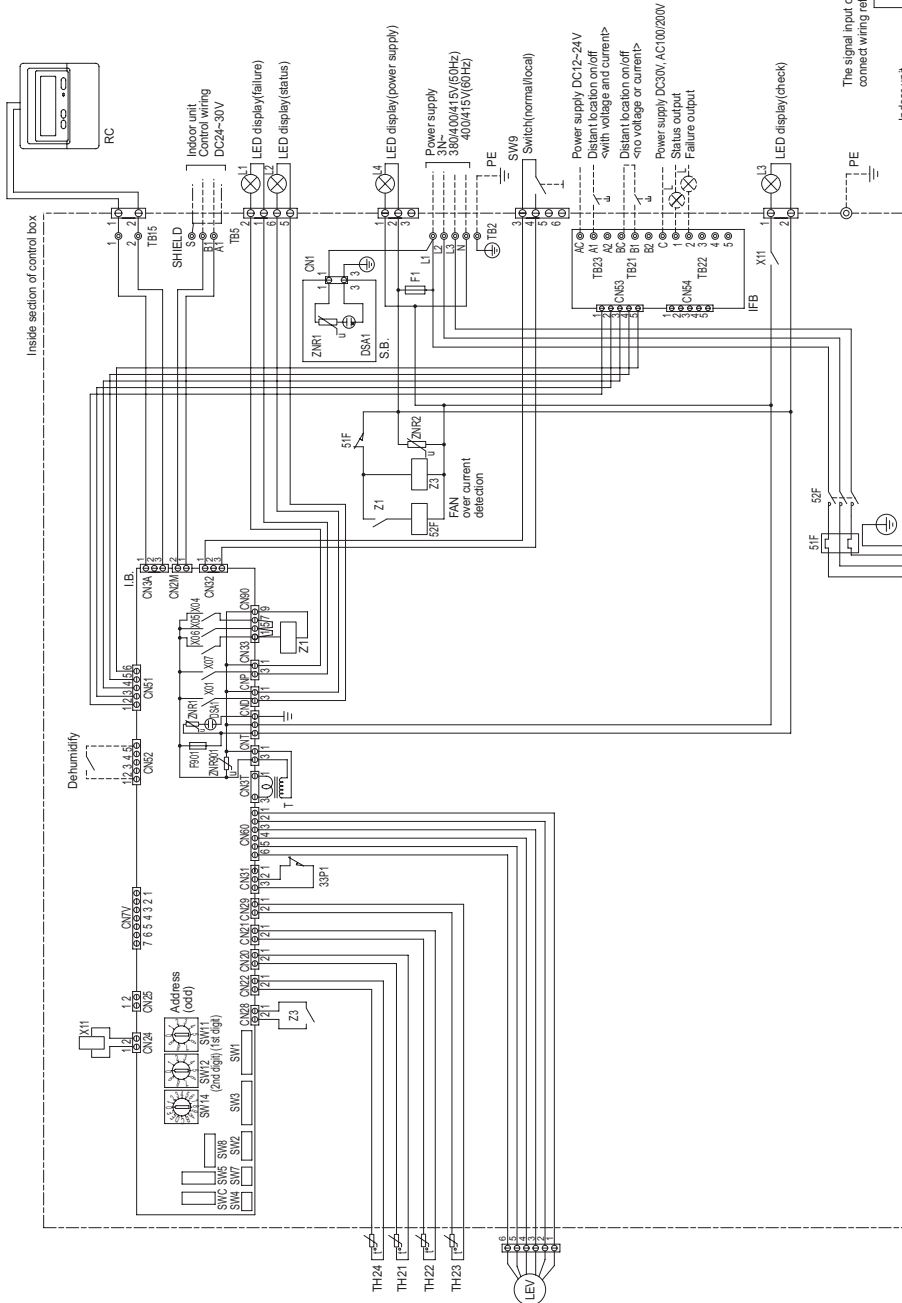




The signal input of the dehumidifier, order is to connect wiring relating to the bottom figure.

(field supply and construction)

- Note: 1. The dotted lines show field wiring.
- 2. The address setting of the indoor unit should always be odd.
- 3. The outdoor unit to which the indoor unit is connected with the transmission line, the address of the outdoor unit should be the indoor unit +50.
- 4. Mark ⊕ indicates terminal bed, ⊖ connector, ⊞ board insertion connector or fastening connector of control board.

2. PFD-P500VM-E

SYMBOL	NAME
MF	Fan motor
IB.1, IB.2	Indoor controller board
AD.B.	Adapter board
S.B.	Surge absorber board
IFB	External input/output board
TB2	Power source terminal bed
TB5-1, -2	Transmission terminal bed
TB15	Terminal bed for distant location
TB21	Terminal bed for distant location on/off <No voltage or current>
TB22	Terminal bed for distant location display
TB23	Terminal bed for distant location on/off <With voltage and current>
F901	Fuse <5A>
ZNR1, ZNR2, ZNR901	Varistor
DSA1	Surge absorber
T	Transformer
LEV1, 2	Electronic linear expan. valve
52F	Contact (fan I/D)
51F	Over current relay (fan I/D)
33P1, 33P2	Float switch
TH21-1, TH21-2	Thermistor (inlet temp. detection)
TH22-1, TH22-2	Thermistor (piping temp. detection/liquid)
TH23-1, TH23-2	Thermistor (piping temp. detection/gas)
TH24-1, TH24-2	Thermistor (outlet temp. detection)
SW1(1.B.)	Switch (for mode selection)
SW2(1.B.)	Switch (for capacity code)
SW3(1.B.)	Switch (for mode selection)
SW4(1.B.)	Switch (for model selection)
SW9	Switch (normal/local)
SW11(1.B.)	Switch (1st digit address set)
SW12(1.B.)	Switch (2nd digit address set)
SW14(1.B.)	Switch (connection No. set)
SW(C1.B.)	Switch (outlet/inlet temp. control)
X11, X12	Auxiliary relay (check)
Z1, Z2	Auxiliary relay (fan)
Z3	Auxiliary relay (fan failure detection)
L1	LED display (fan No.1 failure)
L2	LED display (fan No.2 failure)
L3	LED display (status)
L4	LED display (check)
L5	LED display (power supply)
RC	MA Remote controller

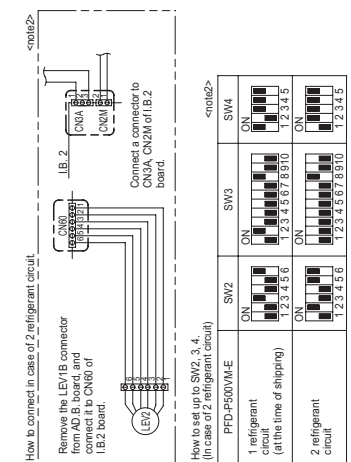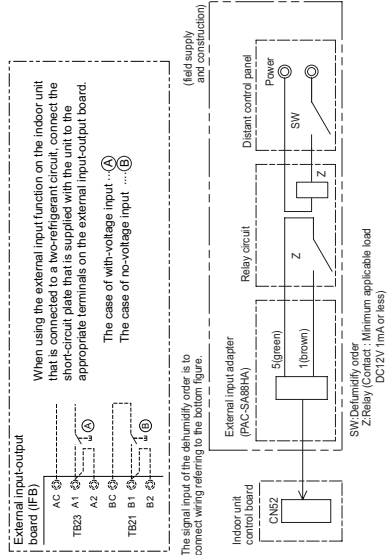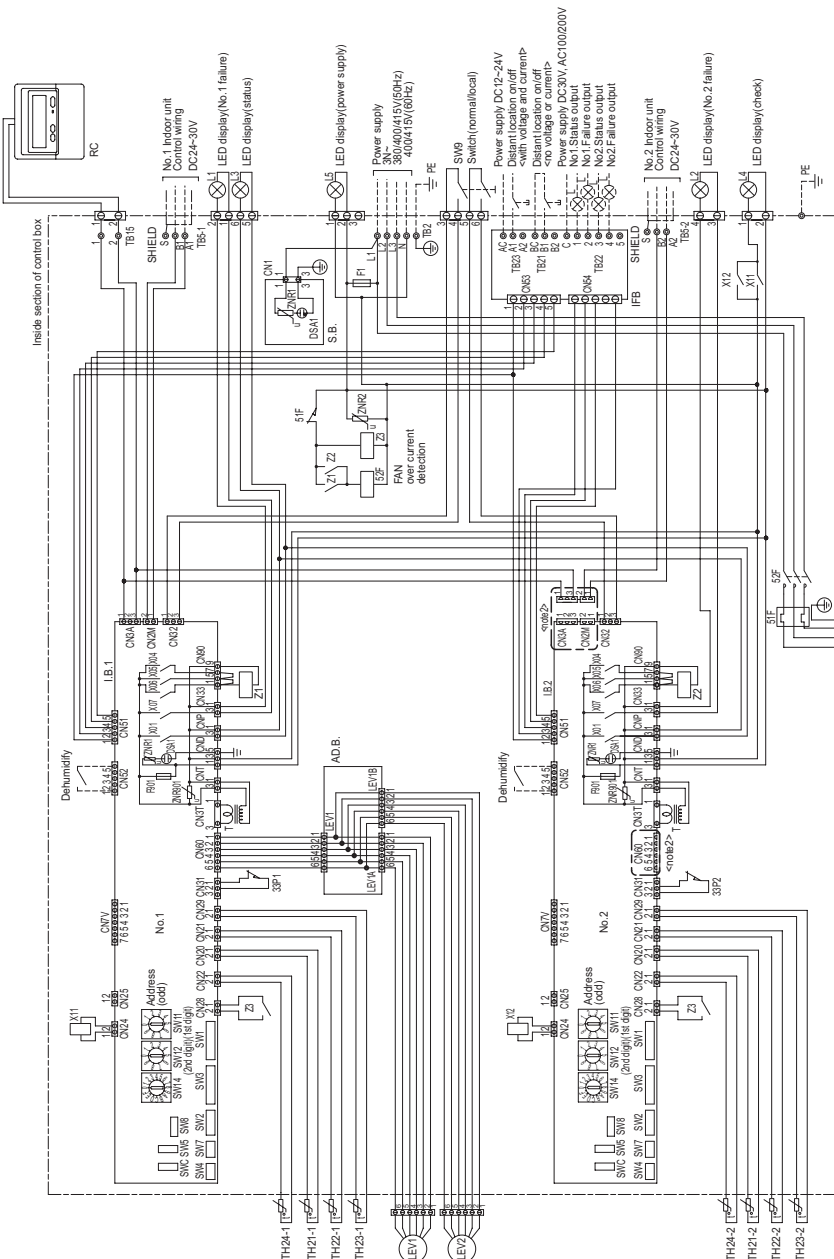

- Note:
- The dotted lines show field wiring.
  - It is wiring for 1 refrigerant system at the time of shipping. Change wiring and SW2, 3, 4 (No.1 & No.2) as this figure in field when you change it to 2 refrigerant circuit.
  - Set up the address of No.1 board in the odd number, and set up the address of No.2 board in the even number. But, set up the address of the No.2 board in the No.1 board + 1.
  - The outdoor unit to which the indoor unit is connected with the transmission line, the address of the outdoor unit should be the indoor unit +50.
  - Mark ⊕ indicates terminal bed, ⊖ connector, ⊞ board insertion connector or fastening connector of control board.

---

---

## VI Refrigerant Circuit


[1] Refrigerant Circuit Diagram .....	65
[2] Principal Parts and Functions .....	67






**[1] Refrigerant Circuit Diagram**

**1. System with one refrigerant**  
**(1) PUHY-P250YHM-A**

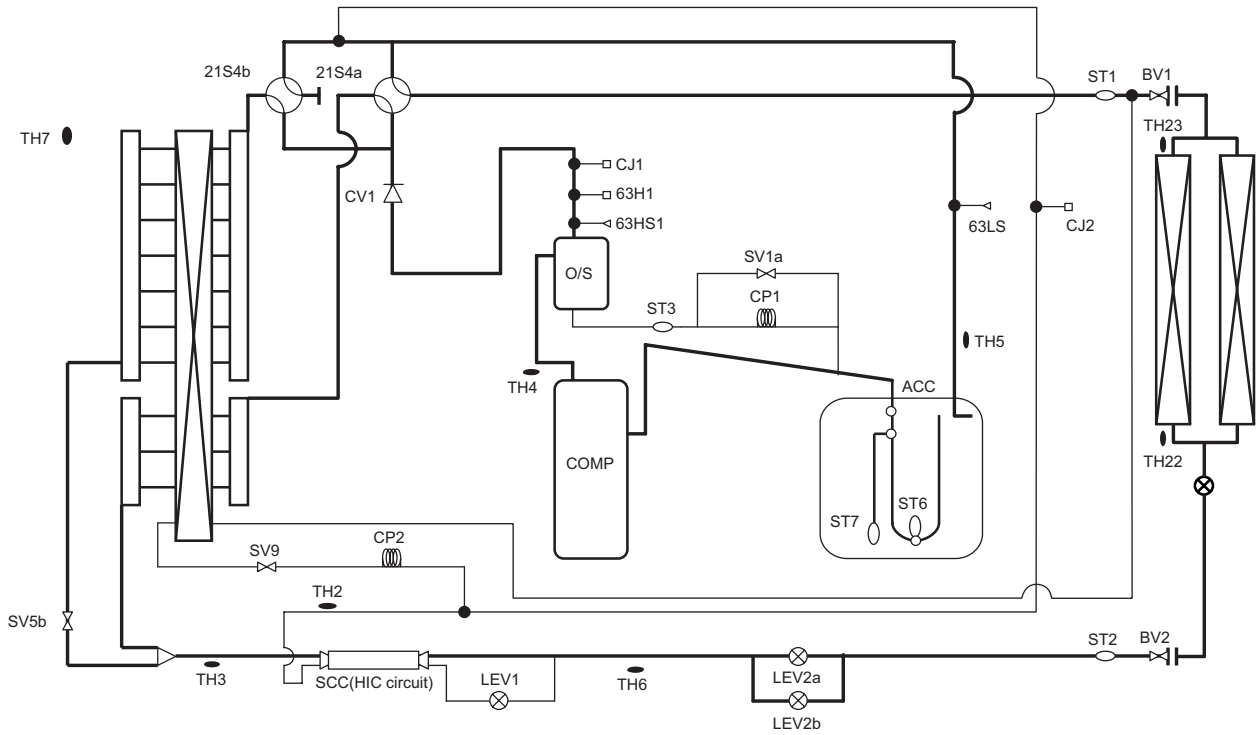

**2. System with two refrigerant circuits**  
**(1) PUHY-P250YHM-A x 2**

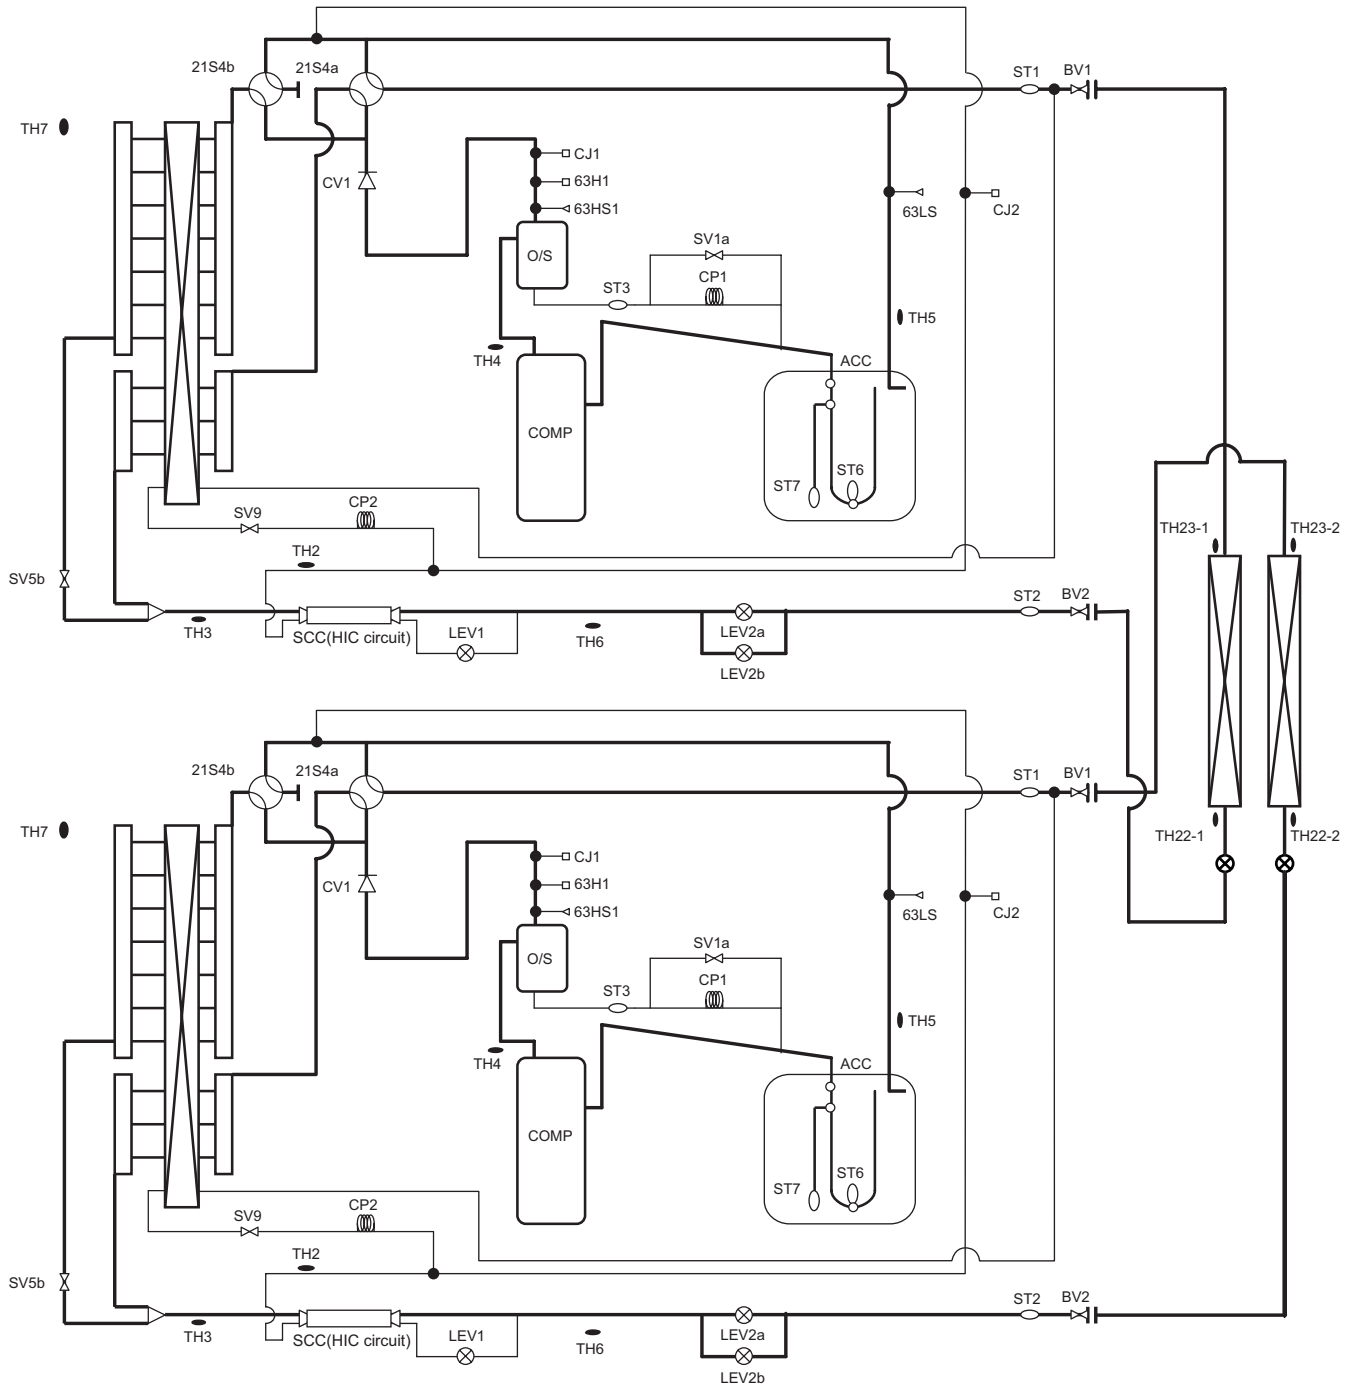

**[2] Principal Parts and Functions**

**1. Outdoor unit**


Part name	Symbols (functions)	Notes	Usage	Specifications	Check method
Com-pressor	MC1 (Comp1)		Adjusts the amount of circulating refrigerant by adjusting the operating frequency based on the operating pressure data	250 models Low-pressure shell scroll compressor Wirewound resistance 20°C[68°F] : 0.981ohm	
High pres-sure sensor	63HS1		1) Detects high pressure 2) Regulates frequency and provides high-pressure protection	<p>63HS1</p> <p>Pressure 0~4.15 MPa [601psi] Vout 0.5~3.5V 0.071V/0.098 MPa [14psi] Pressure [MPa] =1.38 x Vout [V]-0.69 Pressure [psi] =(1.38 x Vout [V] - 0.69) x 145</p> <p>1 GND (Black) 2 Vout (White) 3 Vcc (DC5V) (Red)</p>	
Low pres-sure sensor	63LS		1) Detects low pressure 2) Provides low-pressure protection	<p>63LS</p> <p>Pressure 0~1.7 MPa [247psi] Vout 0.5~3.5V 0.173V/0.098 MPa [14psi] Pressure [MPa] =-0.566 x Vout [V] - 0.283 Pressure [psi] =(-0.566 x Vout [V] - 0.283) x 145</p> <p>1 GND (Black) 2 Vout (White) 3 Vcc (DC5V) (Red)</p>	
Pres-sure switch	63H1		1) Detects high pressure 2) Provides high-pressure protection	4.15MPa[601psi] OFF setting	

Part name	Symbols (functions)	Notes	Usage	Specifications	Check method
Ther-mistor	TH4 (Discharge)		1) Detects discharge air temperature 2) Provides high-pressure protection  0°C[32°F] :698kohm 10°C[50°F] :413kohm 20°C[68°F] :250kohm 30°C[86°F] :160kohm 40°C[104°F] :104kohm 50°C[122°F] : 70kohm 60°C[140°F] : 48kohm 70°C[158°F] : 34kohm 80°C[176°F] : 24kohm 90°C[194°F] :17.5kohm 100°C[212°F] :13.0kohm 110°C[230°F] : 9.8kohm	Degrees Celsius $R_{120} = 7.465k\Omega$ $R_{25/120} = 4057$ $R_t = 7.465 \exp\{4057(\frac{1}{273+t} - \frac{1}{393})\}$	Resistance check
	TH2		LEV 1 is controlled based on the TH2, TH3, and TH6 values.	Degrees Celsius $R_0 = 15k\Omega$ $R_{0/80} = 3460$ $R_t = 15 \exp\{3460 (\frac{1}{273+t} - \frac{1}{273})\}$	Resistance check
	TH3 (Pipe temperature)		1) Controls frequency 2) Controls defrosting during heating operation 3) Detects subcool at the heat exchanger outlet and controls LEV1 based on HPS data and TH3 data	0°C[32°F] :15kohm 10°C[50°F] :9.7kohm 20°C[68°F] :6.4kohm 25°C[77°F] :5.3kohm 30°C[86°F] :4.3kohm 40°C[104°F] :3.1kohm	
	TH7 (Outdoor temperature)		1) Detects outdoor air temperature 2) Controls fan operation		
	TH5		LEV2a and LEV2b are controlled based on the 63LS and TH5 values.		
	TH6		Controls LEV1 based on TH2, TH3, and TH6 data.		
	THHS Inverter heat sink temperature		Controls inverter cooling fan based on THHS temperature	Degrees Celsius $R_{50} = 17k\Omega$ $R_{25/120} = 4016$ $R_t = 17 \exp\{4016 (\frac{1}{273+t} - \frac{1}{323})\}$	
	THBOX Control box internal temperature detection			0°C[32°F] :161kohm 10°C[50°F] :97kohm 20°C[68°F] :60kohm 25°C[77°F] :48kohm 30°C[86°F] :39kohm 40°C[104°F] :25kohm	
Sole-noid valve	SV1a Discharge-suction bypass		1) High/low pressure bypass at start-up and stopping, and capacity control during low-load operation 2) High-pressure-rise prevention	AC208-230V Open while being powered/ closed while not being powered	Continuity check with a tester
	SV5b Heat exchanger capacity control		Controls outdoor unit heat exchanger capacity		
	SV9		High-pressure-rise prevention	Open while being powered/ closed while not being powered	

Part name	Symbols (functions)	Notes	Usage	Specifications	Check method
Linear expansion valve	LEV1 (SC control)		Adjusts the amount of bypass flow from the liquid pipe on the outdoor unit during cooling	DC12V Opening of a valve driven by a stepping motor 0-480 pulses (direct driven type)	Same as indoor LEV The resistance value differs from that of the indoor LEV. (Refer to the section "LEV Troubleshooting."(page 167))
	LEV2a LEV2b (Refrigerant flow adjustment)		Adjusts refrigerant flow during heating	DC12V Opening of a valve driven by a stepping motor 1400 pulses	Same as indoor LEV
Heater	CH11		Heats the refrigerant in the compressor	Cord heater AC230V P250 model 1511 ohm 35W	Resistance check
4-way valve	21S4a		Changeover between heating and cooling	AC208-230V Dead: cooling cycle Live: heating cycle	Continuity check with a tester
	21S4b		1) Changeover between heating and cooling 2) Controls outdoor unit heat exchanger capacity	AC208-230V Dead: cooling cycle Outdoor unit heat exchanger capacity at 100% Live: heating cycle Outdoor unit heat exchanger capacity at 50% or heating cycle	

2. Indoor unit

Part name	Symbols (functions)	Notes	Usage	Specifications	Check method
Linear expansion valve (LEV)	LEV		1) Adjusts superheat at the heat exchanger outlet of the indoor unit during cooling 2) Adjusts subcool at the heat exchanger outlet of the indoor unit during cooling	DC12V Opening of a valve driven by a stepping motor 0-(2000) pulses	Continuity check with a tester Continuity between white, red, and orange. Continuity between yellow, brown, and blue.
Ther-mistor	TH21 (Suction air temperature)		Indoor unit control (Thermo)	$R_0 = 15k\Omega$ $R_{0/80} = 3460$ $R_t = 15 \exp\{3460 (\frac{1}{273+t} - \frac{1}{273})\}$  0°C[32°F] : 15kohm 10°C[50°F] :9.7kohm 20°C[68°F] :6.4kohm 25°C[77°F] :5.3kohm 30°C[86°F]:4.3kohm 40°C[104°F] :3.1kohm	Resistance check
	TH22 (Pipe temperature)		Indoor unit control (Freeze prevention, Pre-heating stand-by)		
	TH23 (Gas pipe temperature)		LEV control during cooling operation (Superheat detection)		
	TH24 (Dis-charge air temperature)		Controls indoor unit discharge (thermostat)		
Float Switch	33P1		Detects drain pan water level	Contact Resistance: Under 250 mohm B contact type	Continuity check with a tester
	33P2	P500 model only			
Motor	MF		Sends air	PFD-P250VM-E AC380~415V Type E 4P Output 3.7kW	Rotation number check Standard 930rpm
				PFD-P500VM-E AC380~415V Type B 4P Output 5.5kW	Rotation number check Standard 978rpm



---

## VII Control

[1] Functions and Factory Settings of the Dipswitches .....	73
[2] Controlling the Outdoor Unit .....	78
[3] Controlling the Indoor Unit .....	89
[4] Operation Flow Chart.....	93





## [1] Functions and Factory Settings of the Dipswitches

### 1. Outdoor unit

#### (1) Control board

Switch		Function	Function according to switch setting		Switch setting timing	
			OFF	ON	OFF	ON
SWU	1-2	Unit address setting	Set to 51-100 with the dial switch		Before power on	
SW1	1-10	For self-diagnosis/operation monitoring	Refer to the LED monitor display on the outdoor unit board.		Anytime after power on	
SW2	1	-	-	-	-	
	2	Deletion of connection information	Normal control	Deletion	Before power on	
	3	Deletion of error history SW	(OC) Storage of IC/OC error history	(OC) Deletion of IC/OC error history	Anytime after power on (When switched from OFF to ON)	
	4	Pump down mode	Normal control	Pump down mode	After being energized and while the compressor is stopped	
	5	-	-	-	-	
	6	-	-	-	-	
	7	Forced defrost Note 2	Normal control	Forced defrost starts	10 minutes after compressor start-up	Anytime after power on (When switched from OFF to ON)
	8	Defrost timer setting Note 2	50 minutes	90 minutes	Anytime after power on (When switched from OFF to ON)	
	9	-	-	-	-	
	10	-	-	-	-	

#### Note

- 1) Unless otherwise specified, leave the switch to OFF where indicated by "-", which may be set to OFF for a reason.
- 2) Refer to "VII [2] Controlling the Outdoor Unit" for details.(page 78)

Switch		Function	Function according to switch setting		Switch setting timing	
			OFF	ON	OFF	ON
SW3	1	Test run mode: enabled/disabled	SW3-2 disabled	SW3-2 enabled	Anytime after power on	
	2	Test run mode: ON/OFF	Stops all ICs	Sends a test-run signal to all ICs	After power on and when SW3-1 is on.	
	3	Defrost start temperature	-10°C [14°F]	-5°C [23°F]	Anytime after power on	
	4	Defrost end temperature	10°C [50°F]	15°C [59°F]	Anytime after power on (except during defrost operation)	
	5	-	-	-	-	
	6	-	-	-	-	
	7	-	-	-	-	
	8	-	-	-	-	
	9	Model setting	Outdoor standard static pressure	Outdoor high static pressure	Before being energized	
	10	Model setting	High static pressure 60Pa	High static pressure 30Pa	Before being energized	
SW4	1	-	-	-	-	
	2	-	-	-	-	
	3	Refrigerant amount adjustment	Normal operation mode	Refrigerant amount adjust mode	Anytime after being energized (except during initial startup mode. Automatically cancelled 60 minutes after compressor startup)	
	4	Low-noise mode/step demand switching	Low-noise mode Note 2	Step demand mode	Before being energized	
	5	-	-	-	-	
	6	Cumulative compressor operation time data deletion	Cumulative compressor operation time data is retained.	Cumulative compressor operation time data is deleted.	Anytime after power on (when the unit is turned on)	
	7	-	-	-	-	
	8	-	-	-	-	
	9	-	-	-	-	
	10	Dehumidifying operation priority mode: Enable/Disable	Enabled	Disabled	Anytime after being powered	

**Note**

- 1) Unless otherwise specified, leave the switch to OFF where indicated by "-", which may be set to OFF for a reason.
- 2) The noise level is reduced by controlling the compressor frequency and outdoor fan rotation speed.  
Setting of CN3D is required.(page 22)

Switch	Function	Function according to switch setting		Switch setting timing		
		OFF	ON	OFF	ON	
SW5	1	Model selection	See the table below Note 3		Before being energized	
	2					
	3					
	4					
	5	Low-noise mode selection	Capacity priority mode Note 2	Low-noise mode	Before being energized	
	6	-	-	-	-	
	7	Model selection	See the table below Note 3		Before being energized	
	8	-	-	-	-	
	9	-	-	-	-	
	10	System rotation control	No units are specified as the control unit	Control unit is specified.	While the unit is stopped (When the switch is turned from OFF to ON)	

**Note**

- 1) Unless otherwise specified, leave the switch to OFF where indicated by "-", which may be set to OFF for a reason.
- 2) When set to the capacity priority mode and if the following conditions are met, the Low-noise mode will terminate, and the unit will go back into the normal operation mode.  
Cooling: Outside temperature is high or high pressure is high.
- 3) The table below summarizes the factory settings for dipswitches SW5-1 through SW5-4, and SW5-7. The factory setting for all other dipswitches is OFF.

SW 5					model
1	2	3	4	7	
ON	ON	OFF	OFF	ON	P250YHM model

**(2) INV board**

Functions are switched with the following connector.

Connector	Function	Function according to connector		Setting timing	
		Enabled	Disabled	Enabled	Disabled
CN6 short-circuit connector	Enabling/disabling the following error detection functions; ACCT sensor failure (5301 Detail No. 115) ACCT sensor circuit failure (5301 Detail No.117) IPM open/ACCT erroneous wiring (5301 Detail No. 119) Detection of ACCT erroneous wiring (5301 Detail No.120)	Error detection enabled	Error detection disable (No load operation is possible.)	Anytime after power on	

**Note**

- CN6 short-circuit connector is mated with the mating connector.
- Leave the short-circuit connector on the mating connector during normal operation to enable error detection and protect the equipment from damage.

**2. Function of the switch (Indoor unit)**

**(1) Dipswitches**





1) SW1,3

Switch	Function	Function according to switch setting		Switch setting timing		Notes
		OFF	ON	OFF	ON	
SW1	1	-	-	-	-	While the unit is stopped (Remote controller OFF)
	2	Clogged filter detection	Not available	Available		
	3	Filter check reminder time setting	100h	2500h		
	4	-	-	-		
	5	Remote display option	Fan output	Thermo-ON signal		
	6	-	-	-		
	7	-	-	-		
	8	-	-	-		
	9	External input	Level	Pulse		
	10	Operation switching	External input	MA remote controller		
SW3	1	Model setting	Heat pump	Cooling-only		
	2	Capacity code	Refer to the combination with SW2			
	3	-	-	-		
	4	-	-	-		
	5	-	-	-		
	6	-	-	-		
	7	LEV setting conversion function	Not available	Available		
	8	-	-	-		
	9	-	-	-		
	10	-	-	-		
SW7	1	Reset of the integrated operation time Valid/Invalid (fan belt)	Not available	Available		
	2	Reset of the integrated operation time Valid/Invalid (fan motor)	Not available	Available		
	3	-	-	-		
	4	-	-	-		

Note 1. Setting timing for DIPSW 1 and 3 is during unit stoppage (remote controller OFF). It is not necessary to reset the settings by power-off.

Note 2. Settings in the shaded areas are factory settings.

2) SW2,SW3-2,SW4

Model	System	Capacity code	SW3-2	SW2	SW4
P250	One-refrigerant circuit connection	50	OFF	ON OFF 	ON OFF 
P500	Two-refrigerant circuit connection*	50	OFF	ON OFF 	ON OFF 

\* The setting is changed at site under two-refrigerant circuit connection


<Capacity code and function setting>

If the capacity code or the model setting is changed upon replacement of the circuit board, power reset the indoor and outdoor units.


3) SW5

Function	Operation by switch setting	Switch setting timing
Reset of the integrated operation time	Resetting the integrated operation time according to the setting of SW7-1 and 7-2	During unit stoppage (remote controller OFF) (when switching from OFF to ON)

4) SW8

Function	Operation by switch setting	Switch setting timing
Compulsory thermo OFF setting during test run (used in the grouped indoor units connected to different outdoor units)	 <p>ON: 1 2 3 OFF: 1 2 3 Normal control</p> <p>ON: 1 2 3 OFF: 1 2 3 Compulsory thermo OFF</p>	Anytime after power on

(2) Slide switches


Switch	Function	Operation by switch setting	Switch setting timing						
SWC 1~2	Switching between suction/discharge temperature control	Option  Standard * <table border="1" data-bbox="798 683 1252 772"> <thead> <tr> <th colspan="2">Input setting</th> </tr> </thead> <tbody> <tr> <td>Option</td> <td>Suction temperature control</td> </tr> <tr> <td>Standard</td> <td>Discharge temperature control</td> </tr> </tbody> </table>	Input setting		Option	Suction temperature control	Standard	Discharge temperature control	Anytime after power on
Input setting									
Option	Suction temperature control								
Standard	Discharge temperature control								

\* The settings for the two circuit boards must be equivalent to switch between suction/discharge temperature control under two-refrigerant circuit system.

3. Function of the switch <Remote controller>

(1) MA remote controller (PAR-20MAA)

The SW is located at the bottom of the remote controller under the cover. Operate the switches to perform the remote controller main/sub setting or other function settings. Normally, do not change the settings of switches other than the SW1 (main/sub switching switch). (All the switches are set to "ON" at factory setting.)

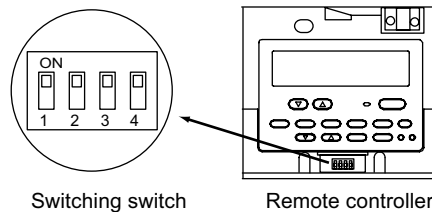

Switching switch

Remote controller

Switch	Function	ON	OFF	Operation by switch settings	Switch setting timing
1	Remote controller main/sub setting	Main	Sub	When two remote controllers are connected to one group, set either of the remote controllers to "Sub".	Before power on
2	At power on of the remote controller	Normal startup	Timer mode startup	To resume the operation with timer mode after the power is restored when the schedule timer is connected, set to "Timer mode startup".	Before power on
3	Cooling/heating display set by automatic setting	Displayed	Not displayed	When the automatic mode is set and the "Cooling"/"Heating" display is not necessary, set to "Not displayed".	Before power on
4	Suction temperature display (discharge temperature display)	Displayed	Not displayed	When the suction temperature (discharge temperature) display is not necessary, set to "Not displayed".	Before power on

## [2] Controlling the Outdoor Unit

### -1- Initial Control

- When the power is turned on, the initial processing of the microcomputer is given top priority.
- During the initial processing, control processing of the operation signal is suspended. (The control processing is resumed after the initial processing is completed. Initial processing involves data processing in the microcomputer and initial setting of each of the LEV opening. This process will take up to 1 minute. This process will take approximately three minutes when it is performed for the first time.)
- During the initial processing, the LED monitor on the outdoor unit's control board displays S/W version -> refrigerant type -> heat pump -> cooling only and capacity -> and communication address in turn every second.

### -2- Control at Start-up

- The upper limit of frequency during the first 3 minutes of the operation is 50 Hz.
- When the power is turned on, normal operation will start after the initial start-up mode (to be described later) has been completed (with a restriction on the frequency).

### -3- Bypass Control

Bypass solenoid valves (SV1a), which bypass the high- and low- pressure sides, perform the following functions.

#### (1) Bypass solenoid valve (SV1a) (ON = Open), (SV9) (ON = Open)

Operation	SV1a	
	ON	OFF
When starting-up the compressor of each outdoor unit	ON for 4 minutes.	
After the restoration of thermo or 20 seconds after restart	ON for 4 minutes.	
During cooling or heating operation with the compressor stopped	Always ON. Exception: OFF when 63HS1-63LS is 0.2 MPa [29 psi] or less	
After the operation has stopped	ON for 3 minutes. Exception: OFF when 63HS1-63LS is 0.2 MPa [29 psi] or less	
During defrost operation	ON	
While the compressor is operating at the minimum frequency and when the low pressure (63LS) drops (3 or more minutes after compressor startup)	When low pressure (63LS) drops below 0.23 MPa [33 psi].	When low pressure (63LS) exceeds 0.38 MPa [55 psi].
When high pressure (63HS1) rises	When 63HS1 exceeds 3.62 MPa [525 psi]	When 63HS1 is or below 3.43 MPa [497 psi] and 30 seconds have passed

Operation	SV9	
	ON	OFF
When high pressure (63HS1) rises during the heating operation	When 63HS1 exceeds 3.50MPa [507psi]	When 63HS1 is or below 2.70Mpa [391psi]
When startup or resuming operation after a defrost cycle	ON for 5 minutes and goes OFF	
Others	Always OFF	

**-4- Compressor Frequency Control**

- Depending on the capacity required, the frequency of the compressor is controlled to bring the evaporation temperature (Te) close to the target evaporation temperature (Tem) during cooling operation, and to keep constant condensing temperature (49°C[120°F] = 2.88MPa[418psi]) during heating operation.
- The target evaporation temperature (Tem) varies as follows during cooling operation depending on the capacity required.  
 When the capacity exceeds the needs : Tem is lowered.  
 When lacking in capacity : Tem is raised.  
 Minimum and maximum Tem Valued :  $-10^{\circ}\text{C}[14^{\circ}\text{F}] \leq \text{Tem} < 25^{\circ}\text{C}[77^{\circ}\text{F}]$

Model	Frequency/cooling (Hz)		Frequency/heating (Hz)	
	Max	Min	Max	Min
250 model	87	15	95	15

**(1) Pressure limit**

- The upper limit of high pressure (63HS1) is preset, and when it exceeds the upper limit, the frequency is decreased every 15 seconds.
- The actuation pressure is when the high-pressure reading on 63HS1 is 3.58MPa[519psi].

**(2) Discharge temperature limit**

- Discharge temperature (TH4) of the compressor in operation is monitored, and when it exceeds the upper limit, the frequency is decreased every minute.
- Operating temperature is 115°C [239°F].

**(3) Periodic frequency control**

Frequency control other than the ones performed at start-up, upon status change, and for protection is called periodic frequency control (convergent control) and is performed in the following manner.

**Periodic control cycle**

Periodic control is performed after the following time has passed

- 30 seconds after either compressor start-up or the completion of defrost operation
- 30 seconds after frequency control based on discharge temperature or pressure limit

**The amount of frequency change**

The amount of frequency change is controlled to approximate the target value based on the evaporation temperature (Te) and condensing temperature (Tc).



## -5- Defrost Operation Control

### (1) Starting the defrost operation

- The defrost cycle starts when the pipe temperature (TH3) at or below the value in the table below has continuously been detected for three minutes after the cumulative compressor operation time of 50 minutes have passed (90 minutes when the defrost prohibit timer is set to 90 minutes.).
- If 10 minutes have passed since compressor start-up or since the completion of defrost operation, forced defrost operation will start by turning on the forced defrost switch (DIP SW2-7).
- Even if the defrost prohibit timer is set to 90 minutes, the actual defrost prohibit time for the next operation will be 50 minutes if defrosting took 12 minutes.
- In the multiple-outdoor-unit system, all of the outdoor units that are in operation go into the defrost mode simultaneously. The unit(s) that is stopped at the time defrost operation starts remains stopped.

Model	TH3	
	SW3 - 3 OFF	SW3 - 3 ON
250 model	- 10°C [14°F]	- 5°C [23°F]

### (2) Defrost operation

Compressor frequency	Model	Compressor frequency
	250 model	98 Hz
Outdoor unit fan	Stopped	
SV1a	ON	
SV5b	ON	
21S4a	OFF	
21S4b	OFF	
SV9	OFF	
LEV1	480 pulses	
LEV2a	1400 pulses	
LEV2b	1400 pulses	

### (3) Stopping the defrost operation

- The defrost cycle ends when 12 minutes have passed since the beginning of the cycle, or when the pipe temperature (TH3), in the following table, or above has been continuously detected for 4 minutes.
- Defrost operation will not stop its operation for 2 minutes once started unless the piping temperature exceeds 25°C [77°F] within 2 minutes, in which case the operation will stop.
- In the multiple-outdoor-unit system, defrosting is stopped on all units at the same time.

Model	TH3	
	SW3 - 3 OFF	SW3 - 3 ON
250 model	10°C [50°F]	15°C [59°F]

### (4) Problems during defrost operation

- If a problem is detected during defrost operation, the operation will be stopped, and the defrost prohibition time based on the integrated compressor operation time will be set to 20 minutes.

## -6- Refrigerant Recovery Control

Recovery of refrigerant is performed during heating operation to prevent the refrigerant from accumulating inside the unit while it is stopped (unit in fan mode), or inside the indoor unit that is in cooling mode or in heating mode with thermo off. It is also performed during cooling operation to prevent an excessive amount of refrigerant from accumulating in the outdoor heat exchanger.

It is also performed during cooling operation to prevent an excessive amount of refrigerant from accumulating in the outdoor heat exchanger.

### (1) During heating operation


#### Starting refrigerant recovery mode

The refrigerant recovery mode in heating starts when all of the following three conditions are met:

- 15 minutes have passed since the completion of previous refrigerant recovery.
- TH4 > 115°C [239°F]
- Frequencies below 50 Hz

#### Refrigerant recovery

- 1) Refrigerant is recovered with the LEV on the applicable indoor unit (unit under stopping mode, fan mode, cooling, heating with thermo off) being opened for 30 seconds.

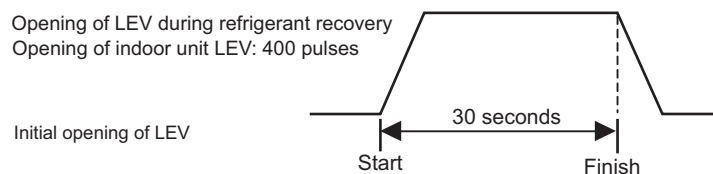

- 2) Periodic capacity control of the outdoor units and periodic LEV control of the indoor units will be suspended during refrigerant recovery operation; they will be performed after the recovery has been completed.

### (2) During cooling operation

#### Starting refrigerant recovery mode

The refrigerant recovery mode starts when all the following conditions are met:

- 30 minutes have passed since the completion of previous refrigerant recovery.
- When the unit keeps running for 3 minutes in a row or more with high discharge temperature
- TH4 > 105°C [221°F] or 63HS1 > 3.43 MPa [497 psi] (35 kg/cm<sup>2</sup>G) and SC0 > 10°C [18°F]

#### Refrigerant recovery

The opening of LEV1 is increased and periodic control begins again.

## -7- Capacity Control of Outdoor Fan

### (1) Control method

- Depending on the capacity required, the rotation speed of the outdoor unit fan is controlled by the inverter to keep based on the evaporating temperature during cooling operation and condensing temperature during heating operation.

### (2) Control

- Outdoor unit fan stops while the compressor is stopped (except in the presence of input from snow sensor).
- The fan operates at full speed for 5 seconds after start-up.(Only when TH7<0°C [32°F])
- The outdoor unit fan stops during defrost operation.

**-8- Subcool Coil Control (Linear Expansion Valve <LEV1>)**

- ♦The LEV opening is adjusted every 30 seconds to keep constant either the amount of subcool at the outdoor unit heat exchanger outlet, which is calculated based on the high pressure (63HS1) and liquid pipe temperature (TH3) or the amount of superheat, which is calculated based on the low pressure (63LS) and bypass outlet temperature (TH2) of the subcool coil.
- ♦Valve opening is corrected based on the subcool coil inlet/outlet temperature (TH3, TH6), high pressure (63HS1), and discharge temperature (TH4). The valve is at the closed position (0) during heating operation, while the compressor is stopped, and during Cooling Thermo-OFF.
- ♦The valve remains open at the preset position (480 pulses) during the defrost cycle.


**-9- Refrigerant flow control (Linear expansion valve <LEV2a, LEV2b>)**

- ♦These valves control the refrigerant flow during heating operation. They remain open at the preset position (1400 pulses) during cooling operation.
- ♦Valve opening is controlled based on the values of high pressure (63HS1), discharge temperature (TH4), low pressure(63LS), and piping temperature (TH5).
- ♦The valve moves to the predetermined position while the unit is stopped.
- ♦The valve remains open at the preset position. (1400 pulses)

**-10- Control at Initial Start-up**

- ♦When started up for the first time before 12 hours have elapsed after power on, the unit goes into the initial startup mode.

**1. Flowchart of initial operation**

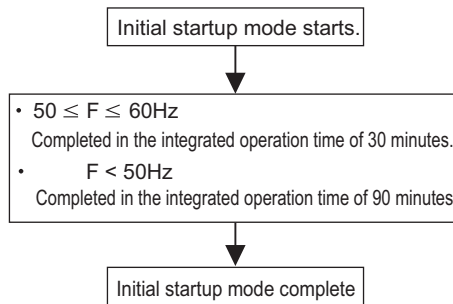

## -11- Emergency Operation Mode

Backup mode is a mode in which the unit is operated when the thermistor malfunctions. The unit automatically goes into the backup mode when the following error is detected.

### (1) Starting the emergency operation

- 1) When an error occurs, the error source and the error code will be displayed on the display on the remote controller.
- 2) When the error type displayed in 1 above allows the unit to run the emergency operation (as shown in the table below), the retry operation will start automatically.

Pattern of emergency operation mode	Error source	Type of error that allows the unit to go into the emergency operation	Type of error that does not allow the unit to go into the emergency operation	Operation
Thermistor error		TH2 TH3 TH5 TH6	5102 5103 5105 5106	Sensor values are interpolated and the unit goes into the backup mode based on its result.

### (2) Ending the emergency operation

- 1) End conditions
  - When one of the following conditions is met, emergency operation will end.
    - When an error is reset
      - \*When resetting an error with the remote controller or the external input
    - When an error is detected that does not allow the unit to run the emergency operation.

### (3) Miscellaneous

- 1) End conditions
  - When encountering problems other than the ones listed above, the system makes an error stop without performing emergency operation. (Only the indoor fan operates unless problems are found with the fan.)
  - When problems are found in only one of the two units of a 2-refrigerant circuit, only the unit with the problems will run an emergency operation or stop its operation, and the other unit will keep running its operation.
  - Emergency operation is intended only as a first aid until the unit is serviced. Have the unit serviced without delay to restore a normal operation.

**-12- Capacity Control between Outdoor Units (when two refrigerant circuits are connected)**

The following two capacity control methods between indoor units are available.

- Control to make only one of the outdoor units (which has the smaller address) operate and keep running during low-load hours at startup.
- Control to make one of the outdoor units stop, and the other outdoor unit operate when the load becomes low during normal operation. After a certain period of time has passed since only one of the outdoor units started operation, the unit in operation stops, and the other outdoor unit starts operation automatically.

**(1) Starting Conditions**

- Air conditioning load that is calculated based on the return air temperature is 50% or above.
- Operation frequencies of both indoor and outdoor units remain near the minimum level three minutes after start-up.

**(2) Stopping Conditions**

- When operation frequency of the running unit rises up near the maximum capacity.
- When it is determined that the load is over 50%, using suction temperature as a reference.
- When compressor stops while running only one unit.

**-13- Dehumidification priority control**

The dehumidification priority control is the control to increase the amount of dehumidification by increasing the frequency of the compressor when the external signal (dehumidification command) is received during cooling operation.

During dehumidification priority control, the room temperature may drop below the preset temperature set during normal operation.

Under this control, the set temperature will be compulsory at the minimum value.

(Under discharge temperature control:14°C[57°F] Under suction temperature control:19°C[66°F])

The temperature nor the humidity can be controlled simultaneously as the reheat function is not available.

**-14- Operation Mode**

**(1) Indoor unit operation mode**

The operation mode can be selected from the following 4 modes using the remote controller.

1	Cooling mode
2	Heating mode
3	Fan mode
4	Stopping mode

**(2) Outdoor unit operation mode**

1	Cooling mode	All indoor units in operation are in cooling mode.
2	Heating mode	All indoor units in operation are in heating mode.
3	Stopping mode	All indoor units are in fan mode or stopping mode.

**Note**

The heating mode can be used for standby of the indoor unit when the outdoor temperature is low. Confirm that the devices to be cooled are not influenced by the heat.

The discharge temperature control cannot be used.

The discharge temperature is controlled not to drop less or equal 30°C[86°F]. It may take time to reach the indoor target temperature.

When the indoor temperature reaches the cooling operation range, switch the operation from heating to cooling.

### **-15- DEMAND Control**

Cooling/heating operation can be prohibited (Thermo-OFF) by an external input to the indoor units.

**Note**

When DIP SW4-4 is set to ON, the 4-step DEMAND control is enabled.

Refer to Chapter II [3] 2. (7) "Various types of control using input-output signal connector on the outdoor unit (various connection options)" for details.(page 21)

**-16- System Rotation Control Instructions**

1. General Descriptions

- Each group can consist of a maximum of 5 systems and a minimum of 2 systems.
- With the use of this control function, one system in a given group serves as a backup and remains stopped.
- The unit designated as the control unit (System 1 in Figure 1) sends command signals to other units in the group to start or stop, and rotates the backup unit every 480 hours.
- Rotation sequence is in the ascending order of address, starting from the lowest address after the control unit address. (e.g., System 2 -> System 3 -> System 4 -> System 5 -> System 1 in Figure 1 below)
- If other units in the group detect an error or if there is a communication failure between the systems, this control is terminated, and the backup unit goes into operation.

**⚠ CAUTION**

To enable this control function, the following wiring and settings are required at installation.

- 1) Daisy-chain terminals M1 and M2 on the terminal block for transmission line for centralized control (TB7) on all applicable outdoor units.  
Move the power jumper connected to CN41 to CN40 on only one of the outdoor units.  
To supply power to the outdoor unit from a power supply unit, leave the power jumper connected to CN41 as it is (factory setting).
- 2) Check that the label on the indoor unit circuit board reads KE90D352, if it does not, replace the circuit board.
- 3) Set the SW1-9 and SW1-10 on indoor units as follows to enable the external input: (SW1-9: ON; SW1-10: OFF).
- 4) Assign sequential addresses to the units as shown below (Figure 1 and 2).  
(Only use odd numbers for the 10HP system.)
- 5) Make the rotation group settings by setting the appropriate switches on the outdoor units.  
<Refer to Item 2 below.>

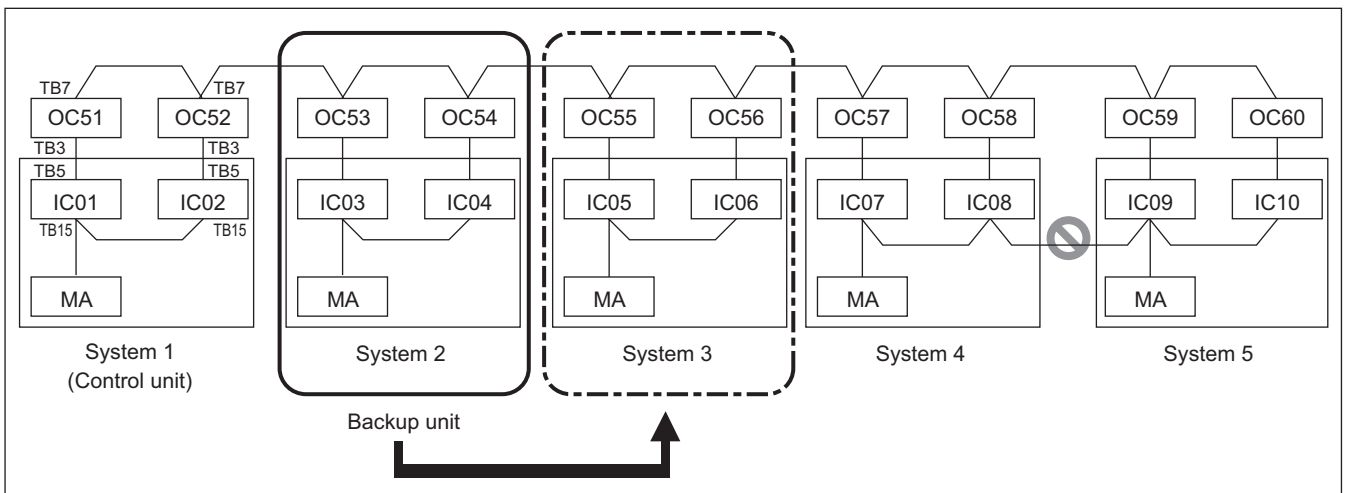


Figure 1 Sample 20HP system group

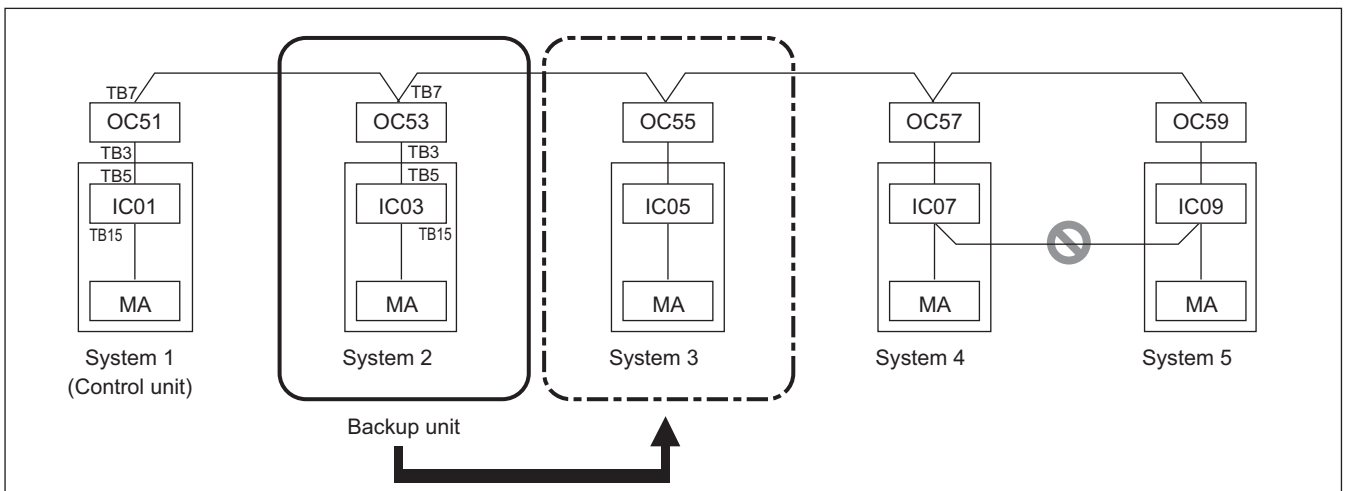


Figure 2 Sample 10HP system group

(1) Rotation Group Setting

- Group setting is required to enable the system rotation control function.
- Group setting must be made after the setup sequence for all applicable indoor and outdoor units have been completed.
- By turning the Dip SW5-10 from OFF to ON on the outdoor unit with the lowest odd number address in a given group while the unit is stopped, this unit is designated as the control unit.
- The control unit sends signals to other units with the addresses that equals "the control unit address + 2, +4, +6, +8" in this order and includes the units that returned the response signal in the group.  
If there is a unit that does not return a response signal or if a response is returned that indicates another unit is designated as a control unit, communication and group setting will be completed.
- Group setting pattern will fall into one of the following 9 patterns as shown in Figure 3. In patterns 5 and 9, only the control unit will be designated, but this function will not be used.
- In patterns 6 through 9, the second CU and on will be in another group.

	Outdoor unit addresses				
	A	A+2	A+4	A+6	A+8
Pattern 1	CU	○	○	○	○
Pattern 2	CU	○	○	○	x
Pattern 3	CU	○	○	x	—
Pattern 4	CU	○	x	—	—
Pattern 5	CU	x	—	—	—
Pattern 6	CU	○	○	○	CU
Pattern 7	CU	○	○	CU	—
Pattern 8	CU	○	CU	—	—
Pattern 9	CU	CU	—	—	—

A: Odd numbers between 51 and 91

CU: Control unit    ○ : Response returned    x : No response    — : Optional

Figure 3 Group patterns

(2) Starting Conditions

This control function is initiated after group settings have been made and if all of the following conditions are met.

- Initial setup sequence for all the units in the group has been completed.
- All the units in the group are in operation.
- No errors are detected by any unit in the group.

(3) Rotation Operation

- When the above starting conditions are met, the control unit will bring the backup unit to stop, and the system rotation timer starts counting.
- When the system rotation timer reaches 480 hours, units are rotated to become the backup unit.
- When rotation is performed, first the stopped backup unit is started, then the system rotation timer is reset, and finally the next backup unit is brought to stop in three minutes or less.
- The address of the unit that is currently designated as the backup unit can be found by setting Dip SW1 on the outdoor unit that is designated as the control unit as shown below.



(4) End Conditions

- This control function is terminated by turning the Dip SW 5-10 from ON to OFF on the control unit (outdoor unit) while the unit is stopped.
- When this function is disabled, the group setting information and the system rotation timer on the control unit will be cleared. If any backup unit other than the control unit is stopped as a backup unit, that unit will automatically resume its operation.

(5) Running/Stopping the Units on Rotation

- Indoor units whose SW9 (Normal/Local switching switch) is set to "Local" will not be able to accept the Run/Stop signal from the control unit and will not operate properly. After the unit whose SW9 is set to "Local" is operated or stopped from the MA remote controller, the operation status needs to be changed back to the original status, and the SW9 setting needs to be set back to "Normal."
- If an attempt is made to Run/Stop the indoor unit whose SW9 is set to "Normal", the following types of errors may happen.  
Example 1 Backup units are not rotated when the system rotation timer has reached 480 hours.  
Example 2 The backup unit does not go into operation when a unit in the group detects an error.  
These symptoms can be solved by bringing the stopped unit into operation. By doing so, although all the units will temporarily operate, the rotation function will remain effective.



(6) When an Error Occurs

- If an error is detected by a unit or a communication failure between the systems in the group while the rotation function is enabled, the units will perform the actions as described in Table 1, and the rotation control will be temporarily stopped.
- When the starting conditions are met, this function will be resumed, and the rotation sequence and the system rotation timer count effective at the time of error will be kept.

Table.1 Operation of Units during an Error

	Rotation status	A unit in the group made an abnormal stop.	Communication failure between systems
Control unit	Backup unit	Goes into operation	Goes into operation
	Regular unit	Sends a startup signal to the backup unit	Sends a startup signal to the backup unit
Other units	Backup unit	Goes into operation by receiving a signal from the control unit	1) Goes into operation by receiving a signal from the control unit 2) Goes into operation <sup>*1</sup>
	Regular unit	Sends its own error status to the control unit	-

\*1. The backup unit will automatically resume its operation when periodical communication from the control unit is lost.

(7) Rotation Function Test Run Mode

- Proper operation of the rotation function can be checked in a short time using the rotation function test run mode.
- Rotation function test run mode can be initiated by starting the control unit in the test run mode (via MA remote controller).
- In this mode, the system rotation timer setting is reduced to approximately three minutes (from the usual 480 hours), and the test run will automatically end when the control unit is rotated to the backup unit.
- At the completion of the test run mode, the system rotation timer setting goes back to 480 hours, and this function will remain effective.

**Note**

Important Notes on Rotation Control

- All the units in the system using the rotation function must be the same capacity and installed within the same area to be cooled.
- Check that the items to be cooled are not affected no matter which unit stops when designated as a backup unit.
- The backup unit automatically goes into operation only when there is a problem with other units in the group. It will not automatically go into operation even if the heat load increases.
- The control unit cannot perform a test run while the system rotation function is performed. Disable the system rotation control function to perform a test run.
- If multiple units are grouped with an MA remote controller or a G-50A controller, this control function will not work properly.

---

## [3] Controlling the Indoor Unit

---

<Indoor unit control>

There are two controller circuit boards with two refrigerant circuits inside the indoor unit of 20 HP.  
There is one controller circuit board with one refrigerant circuit. Each refrigerant circuit is controlled independently (in case of one refrigerant circuit, one-to-one control of indoor unit and outdoor unit) in the following method.

### -1- Thermostat Functions

#### (1) Thermostat Functions and Function Selection

- Two control methods are available; suction temperature control and discharge temperature control.
  - The suction/discharge temperature control can be switched by the switches (SWC) on the controller circuit board inside the controller of the indoor unit.
  - The discharge temperature control is selected (SWC is set to "Standard") at factory shipment.
  - To switch the control, set SWC on two controller circuit boards inside the controller as follows.
    - To perform suction temperature control: Set SWC to "Option".
    - To perform discharge temperature control: Set SWC to "Standard".
  - The SWC settings made on two controller circuit boards must be equivalent. <20HP only>
- \*Only the suction temperature control is performed in the heating mode regardless of the SWC settings.

#### (2) Thermostat Reading

##### A. Discharge temperature control (SWC is set to "Standard".)

###### (a) Thermo ON Condition

- Three minutes have past since thermo OFF AND
- TH24 -Preset temperature > 1°C [34°F]
- The TH21 value has gone up by 1°C or more compared to its value during Thermo-OFF.
  - TH24: Discharge thermistor
  - TH21: Suction thermistor

###### (b) Thermo OFF Condition

- < When Dipsw4-5 on the outdoor unit is ON >
- 30 minutes have past since thermo ON AND
- TH24 -Target Temperature < -1°C [30°F] has been detected for 10 minutes  
OR TH24 - Target Temperature < -5°C [23°F] was detected
- < When Dipsw4-5 on the outdoor unit is OFF >
- Two minutes have past since thermo ON
- TH24 - Target Temperature < -1°C [30°F] has been detected for 5 minute. AND F=Fmin

##### B. Suction Temperature Control (SWC is set to "Option".)

###### (a) Thermo ON Condition

- Three minutes have past since thermo OFF AND
- TH21 - Target Temperature > 1°C [34°F]

###### (b) Thermo OFF Condition

- < When Dipsw4-5 on the outdoor unit is ON >
- Thirty minutes have past since thermo ON AND
- TH21 - Target Temperature < -1°C [30°F] has been detected for 10 minutes  
OR TH21 - Target Temperature < -5°C [23°F] was detected.
- < When Dipsw4-5 on the outdoor unit is OFF >
- Two minutes have past since thermo ON AND
- TH21 - Target Temperature < -1°C [30°F] has been detected for 5 minute. AND F=Fmin

## -2- Actuator Control

### (1) LEV Control

- At startup, the LEV is set to the initial position based on the outside temperature.
- After the start-up, the degree of LEV opening is controlled every minute so that the superheat detected by the thermistors TH22 (liquid pipe) and TH23 (gas pipe) of the indoor unit can be within a certain range.
- Depending on the operating condition of the outdoor unit, a control other than the superheat control described above may be performed.
- The degree of LEV full opening/closing is 41 pulses.

### (2) Fan Control

Whether the thermostat is ON or OFF, the fan stays ON except during operation stoppage.

Exception: Fan stops when problem with the fan is detected (Error Code 4109).

\* Fan problems may be experienced in the following situations: Surge breaker trip (51F) or malfunctions of sub relays (Z1,Z2, or Z3.)

### (3) Float Switch Control

The unit makes an error stop when the contact point (B contact) of the float switch loses its contact (i.e. loosened floated parts, disconnected wire, unfastened connector etc.) for more than 1 minute or longer.

### (4) Indicator Lamp

Indicator lamps on the front side of the unit indicate the operation status of the indoor unit.

Power Supply Lamp (White) : Lit upon power ON. Extinguished upon power OFF.

Operation Lamp (Green) : Lit during operation. Extinguished during stoppage.

Error Lamp (Red) : Lit when errors are detected in each refrigerant circuit. Extinguished during normal operation or after error reset.

Inspection lamp (orange) : Lit when the inspection switch of the indoor unit is ON (during inspection). Extinguished when the switch is OFF (during normal operation).

## -3- Temperature Setting Range

The temperature range can be set between 19°C [66°F] (14°C [57°F]) and 30°C [86°F] using the remote controller when the suction temperature control (or the discharge temperature control) is performed.

\* Depending on the operating conditions, target temperature and actual discharge/suction temperatures may not match. For example, even if the target discharge temperature is set at 14 °C [57°F], if the load exceeds the capability of the unit, the actual temperature will not reach 14°C [57°F]

## -4- Emergency Operation Mode

The emergency operation is an operation that operates the unit temporarily depending on the error types described later. The emergency operation is run automatically when the following errors are detected.

### (1) Starting an Emergency Operation

- When the following problems are detected, the system runs an emergency operation, displaying error codes.
- During this operation, near normal operation is run, ignoring the following abnormal operation data. (Some of the actuator will run at a fixed state during this time.)

Chart: Types of errors in which emergency operation can be run

	Types of Errors		Error codes
	TH21	Open/Short Detection	
Thermistor Error	TH21	Open/Short Detection	5101
	TH22		5102
	TH23		5103
	TH24		5104

### (2) Stopping the Emergency Operation

Emergency operation mode is stopped in the following situations:

- When abnormal mode is reset
  - \* How to reset an abnormal mode
  - When the operation is stopped by the remote controller or by the external input
- A different type of error is detected during emergency operation
  - \* i.e. when TH22 error is detected during emergency operation caused by TH21 error
- When emergency operation disabled error is detected

### **(3) Miscellaneous**

- When the errors other than described in the chart, the unit makes an error stop without performing emergency operation. (Only the indoor fan operates, however; it stops when the fan is in trouble.)
- When one of the two refrigerant circuits, the outdoor unit with the refrigerant circuit in error performs emergency operation or makes an error stop, while the other outdoor unit keeps normal operation.
- Emergency operation is intended only as a first aid until the unit is serviced. Have the unit serviced without delay to restore a normal operation.

### **-5- Twenty-second restart-suspension mode**

The unit will be in a twenty-second restart-suspension mode (same operation as Thermo OFF) in any of the following situations.

- When the demand for outdoor unit changes from Thermo ON to Thermo OFF.
- When operation mode changes from normal to emergency mode.
- When anti-freeze mode is completed.
- \* The outdoor unit has also a twenty-second restart-suspension mode, and it works separately from the indoor unit.

### **-6- Anti-Freeze Control (In cooling mode)**

#### **(1) Starting Conditions**

This operation will start when all of the following conditions are met:

- Thermo ON status has been detected for 16 minutes.
- TH22 (liquid pipe temp. Thermistor) < 1°C[34°F] has been detected for 20 minutes.

#### **(2) Control Operation**

The unit will be in the same condition as Thermo OFF condition for six minutes. When the following conditions are met, the unit will be in a 20-second restart-suspension mode.

#### **(3) Stopping Conditions**

When either of the following conditions is met:

- TH22 ≥ 10°C[50°F]
- Six minutes have elapsed since the beginning of this operation.


### -7- Switching Between Pulse and Level of MA Remote Controller External Input

The start/stop operation can be performed by either of the MA remote controller or the external input (pulse/level).


DIPSW on the address circuit board (No.1 and No. 2)		Valid operation
SW1-10 = OFF	SW1-9 = OFF	External input (level)
	SW1-9 = ON	External input (pulse)
SW1-10 = ON		MA remote controller

- \* The manipulator for centralized control can be operated regardless of the SW1-9 status (ON), and SW1-10 status (OFF).
- \* For the MA remote controller and the external input, the operation command sent later has no priority.
- \* When the Normal/Inspection switch on the main unit is set to "Inspection", the external input will be disabled. Only the operation performed by the MA remote controller is valid.

#### Input

Function	Usage	Signal specifications
Start/Stop	Sending ON/OFF command to the indoor unit	Pulse (With-voltage/No-voltage a-contact) * <In case of with-voltage> Power supply:12~24V DC Electrical current:10mA (12V DC) <Pulse specification> 

\* Use a contact point for small electrical current (12V DC 1mA).

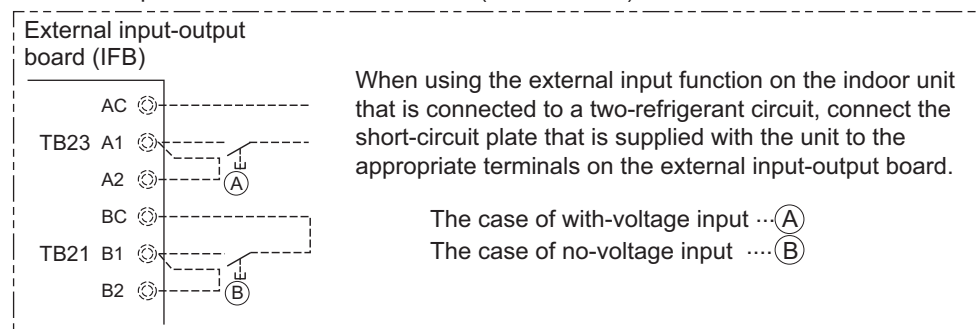

### -8- Operation during Electrical Power Failure

After the controller in this air conditioning unit receives signals indicating power failure or an instantaneous drop in voltage, unless the unit receives a command not to restart, it will resume its operation after power supply is restored.

Depending on the duration of power outage, the following operations will be run.

Duration of Power Outage	Unit Operation
Shorter than 6msec	Both indoor and outdoor units will stay on.
Longer than 6msec and Shorter than 50msec (Note1, Note2)	It is recognized by the unit as an instantaneous power outage Indoor Unit: The fan stays on. Outdoor Unit: Compressor stops, then resumes its operation 20 seconds later.
Longer than 50msec (Note1, Note2)	It is recognized by the unit as power outage. Air-conditioning unit will stop (incl. fan and compressor). It will resume operation after the power has been restored. * The time it takes for the indoor unit fan to resume its operation after power failure is as follows: 20 seconds + (indoor unit address/2) seconds (55 seconds max.). * The compressor on the outdoor unit will resume its operation according to the operation signal from the indoor units after 30 seconds since power restoration.


Note 1: When indoor unit is in the maintenance mode, it will not resume operation even after the power has been restored.

Note 2: After the unit resumes its operation, MA remote controller will display 'HO' for fifteen seconds, **during which time the MA remote controller will not respond. To turn off the unit during this time, turn off the power with an electric leak breaker.**

**[4] Operation Flow Chart**

**1. Mode determination flowchart**

**(1) Indoor unit (cooling, heating, fan mode)**

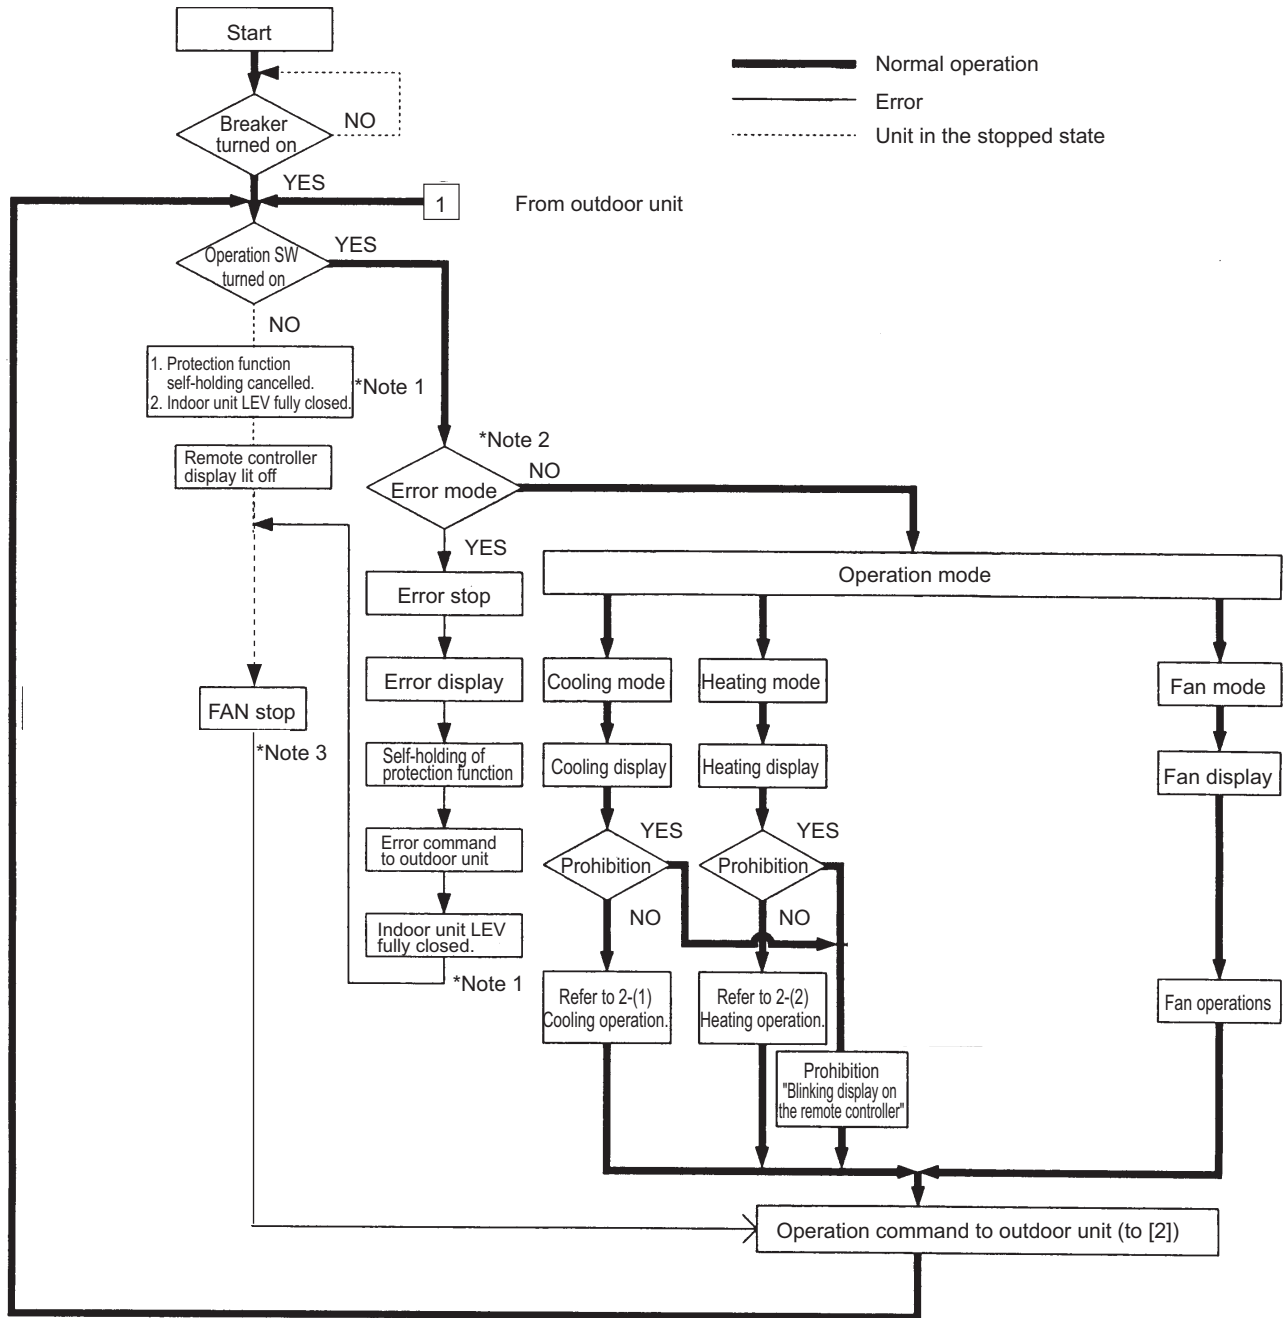


\*Note 1. Indoor unit LEV fully closed : Opening 41.

\*Note 2. The system may go into the error mode on either the indoor unit or the outdoor unit side. If some of the indoor units are experiencing a problem (except water leakage), only those indoor units that are experiencing the problems will stop. If the outdoor unit is experiencing a problem, all connected indoor units will stop.

\*Note 3. The fan stops only when there is a problem with the fan.

(2) Outdoor unit (cooling and heating modes)

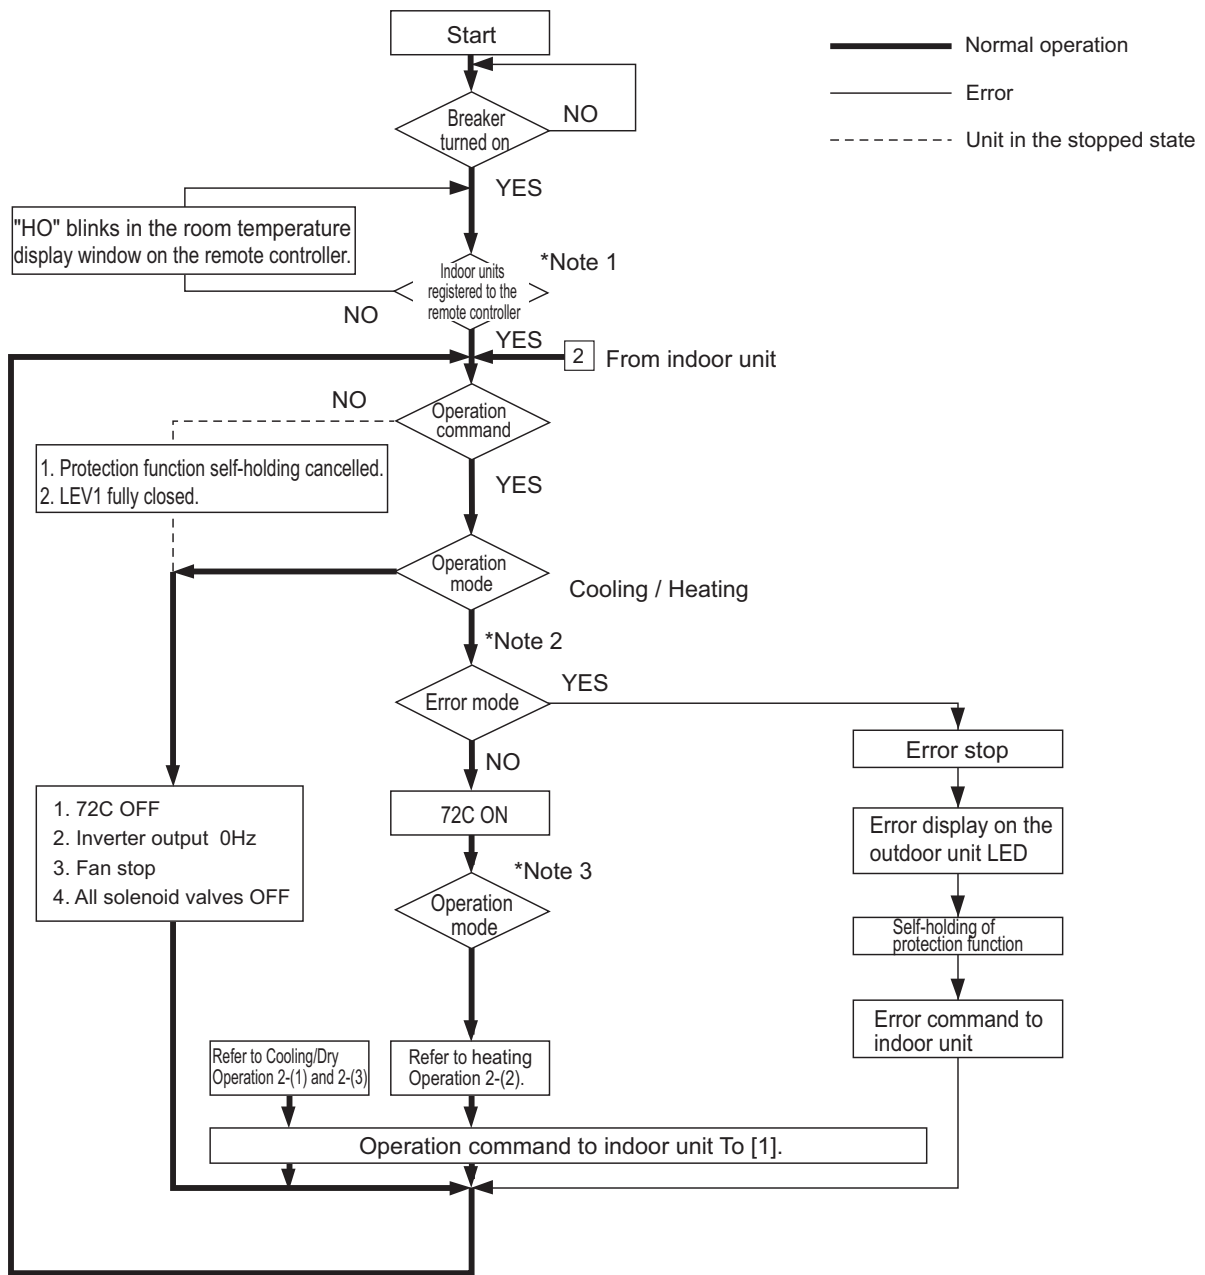


\*Note 1. For approximately one minute after power on, a search for the indoor unit address, remote controller address, and group information is performed. While this process is performed, "HO" blinks on the display.

\*Note 2. The system may go into the error mode on either the indoor unit or the outdoor unit side. In either case, the connected indoor and outdoor units will come to an error stop. (If the units go into the backup mode, they will remain in operation.)

\*Note 3. The outdoor unit operates according to the operation mode selection signal from the indoor unit.

2. Operations in each mode

(1) Cooling operation

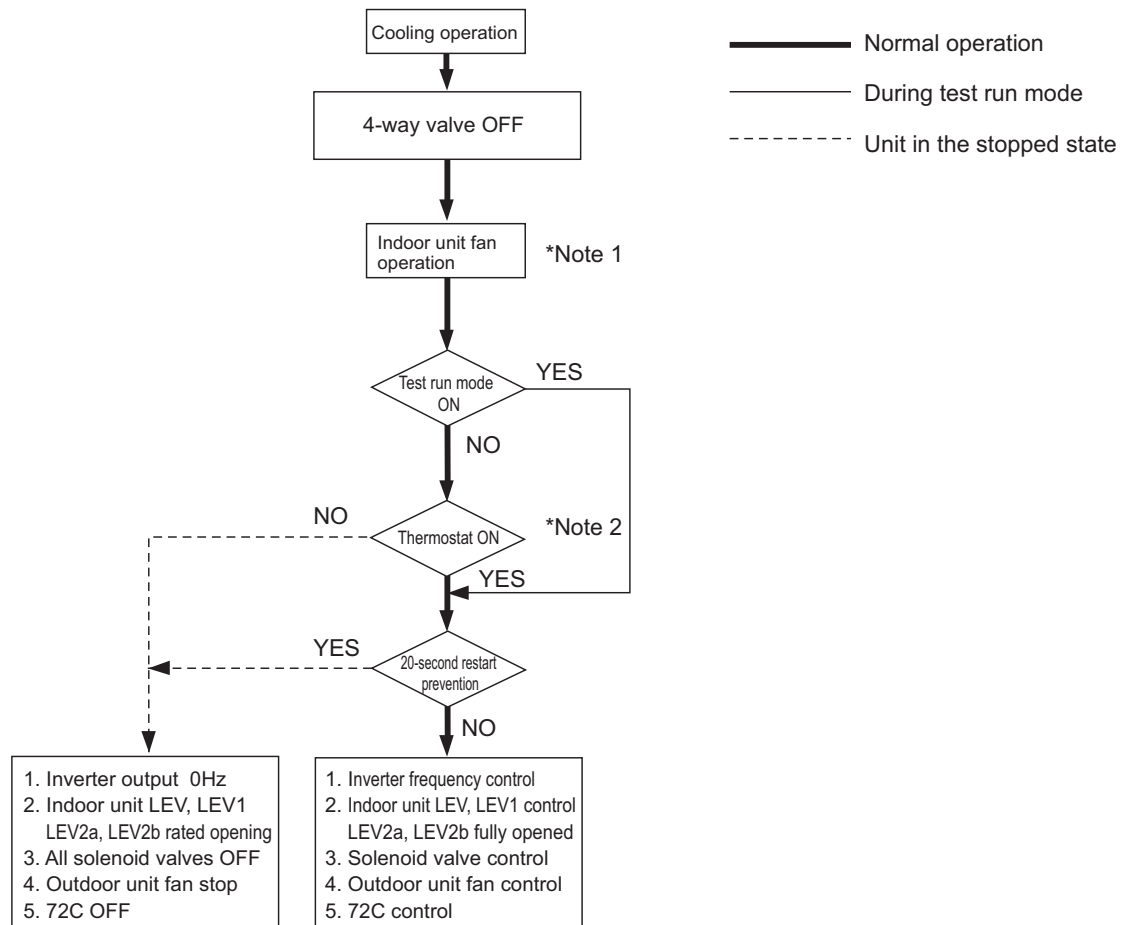


\*Note 1. The indoor fan operates in the cooling mode regardless of the ON/OFF state of the thermostat.

\*Note 2. The following two methods are available to perform the test run.

- 1) Using DipSW3-1 and 3-2 on the outdoor unit
- 2) Using MA remote controller



**(2) Heating operation**

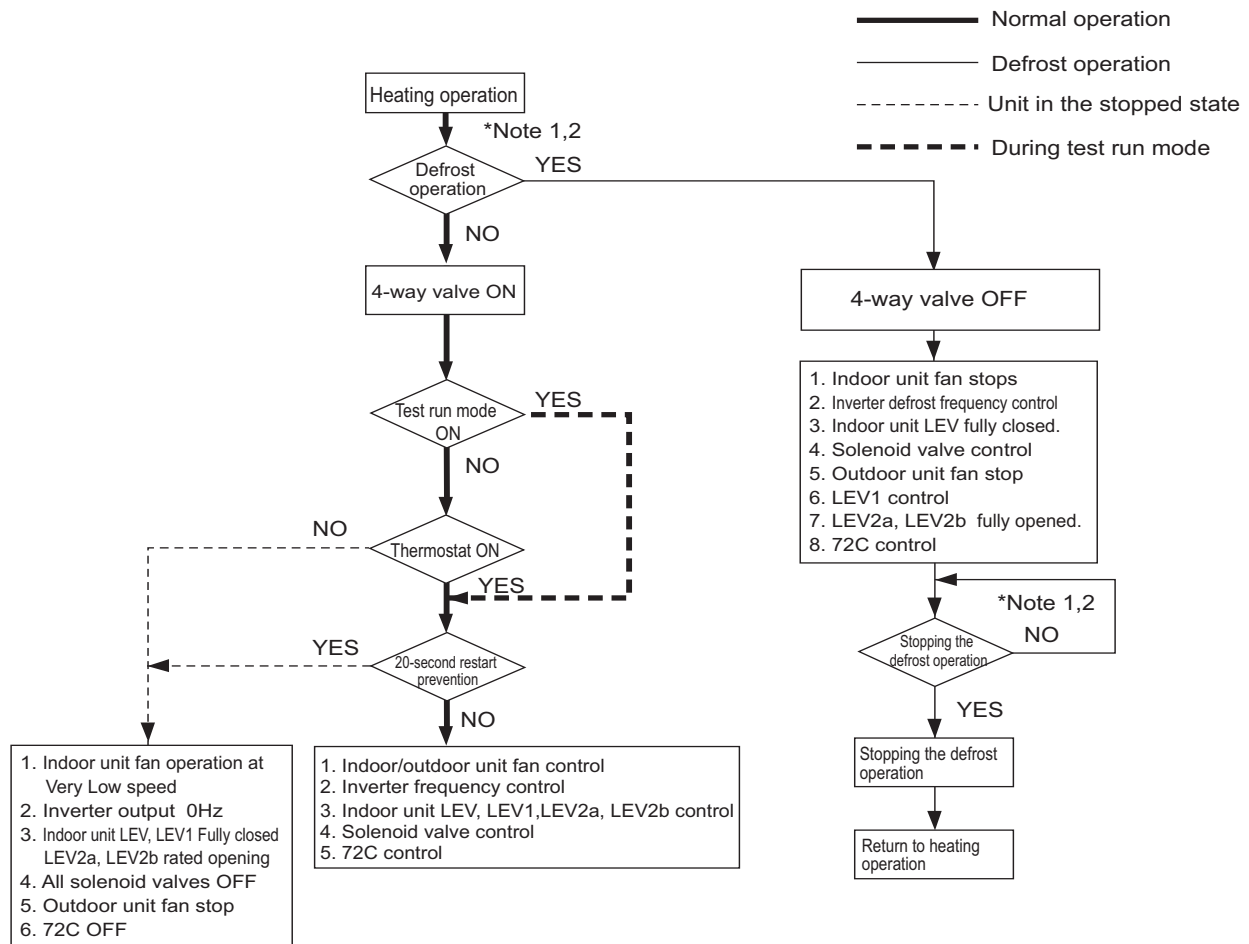

**Note**

- 1) When outdoor unit starts defrosting, it transmits defrost operations command to indoor unit, and the indoor unit start defrosting operations. Similarly when defrosting operation stops, indoor unit returns to heating operation after receiving defrost end command of outdoor unit.
- 2) Defrost end condition: 12 or more minutes must pass after defrost operation or outdoor unit piping temperature. Refer to "-5-. Defrost operation control" of [2] Controlling the Outdoor Unit(page 80) for the temperature.
- 3) The discharge temperature is controlled to keep approx. 30°C[86°F] or below in heating mode.

---

## VIII Test Run Mode

[1] Items to be checked before a Test Run .....	99
[2] Test Run Method .....	100
[3] Operating Characteristic and Refrigerant Amount .....	101
[4] Adjusting the Refrigerant Amount .....	101
[5] Refrigerant Amount Adjust Mode .....	103
[6] The following symptoms are normal. ....	105
[7] Standard Operation Data (Reference Data) .....	106



---

## **[1] Items to be checked before a Test Run**

---

**(1) Check for refrigerant leak and loose cables and connectors.**

**(2) Measure the insulation resistance between the power supply terminal block and the ground with a 500V megger and make sure it reads at least 1.0Mohm.**

**Note**

- Do not operate the unit if the insulation resistance is below 1.0Mohm.
- Do not apply megger voltage to the terminal block for transmission line. Doing so will damage the controller board.
- The insulation resistance between the power supply terminal block and the ground could go down to close to 1Mohm immediately after installation or when the power is kept off for an extended period of time because of the accumulation of refrigerant in the compressor.
- If insulation resistance reads at least 1Mohm, by turning on the main power and powering the crankcase heater for at least 12 hours, the refrigerant in the compressor will evaporate and the insulation resistance will go up.
- Do not measure the insulation resistance of the terminal block for transmission line for the unit remote controller.

**(3) Check that the valve on the gas pipe and liquid pipe are fully open.**

**Note**

Securely tighten the cap.

**(4) Check the phase sequence and the voltage of the power supply.**

**(5) [When a transmission booster is connected]**

**Turn on the transmission booster before turning on the outdoor units.**

**Note**

- If the outdoor units are turned on first, the connection information for the refrigerant circuit may not be properly recognized.
- In case the outdoor units are turned on before the transmission booster is turned on, perform a power reset on the outdoor units after turning on the power booster.

**(6) Turn on the main power to the unit at least 12 hours before test run to power the crankcase heater.**

**Note**

Insufficient powering time may result in compressor damage.





**(7) When a power supply unit is connected to the transmission line for centralized control, perform a test run with the power supply unit being energized. Leave the power jumper connector on CN41 as it is (factory setting).**

**[2] Test Run Method**

Procedures	
Turn on the main power. → It will take approximately three minute until the unit is operable. Leave the unit on for 12 hours (to power the outdoor unit compressor crankcase heater).	
Run an individual test on each of the refrigerant circuit to make sure that pipes or wires are not cross-connected.	
1	First, run a test on No.1-side refrigerant circuit.
2	Set the Normal/Maintenance Switch of the indoor unit to Maintenance.
3	While the unit is stopped, set the SW8-2 on <b>the circuit board on No.2 side</b> to "OFF". (See Note 1.)
4	Run a <b>test</b> , using the remote controller for the indoor unit. → Indoor fan will start, and outdoor unit of only No.1 refrigerant circuit will start operating. During this time, the outdoor unit on No.2-side refrigerant circuit will remain at a halt. → Confirm that indoor fan and outdoor unit in the No.1-side refrigerant circuit operate normally. → Confirm that pipes or wires are connected correctly.
5	Stop the operation with the remote controller for the indoor unit. → End of No.1 refrigerant circuit test run.
6	Run a test on No.2-side refrigerant circuit.
7	While the unit is stopped, set the SW8-2 on <b>the circuit board on No.1 side</b> to "OFF", and set the SW8-2 on <b>the circuit board on No.2 side</b> to "ON".
8	Run a <b>test</b> by using the remote controller in the indoor unit. → Indoor fan will start, and only the outdoor unit in No.2-side refrigerant circuit will start. During this time, the outdoor unit in No.1-side refrigerant circuit is stopped. → Confirm that indoor fan and outdoor unit of No.2-side refrigerant circuit are operating normally. → Confirm that pipes and wires are connected correctly.
9	Stop the test, using the remote controller for the indoor unit. → End of No.2 refrigerant circuit test run.
10	While the unit is stopped, set the SW8-2 on <b>the circuit board on No.1 side</b> to "ON".
11	Finally, run simultaneous tests in both No.1- and No.2-side refrigerant circuit.
12	Perform <b>test run</b> with the remote controller for the indoor unit. → Indoor fan will start, and outdoor units in both No.1- and No.2-side refrigerant circuit will start. → Confirm that indoor fan and both outdoor units operate normally.
13	Stop the test, using the remote controller in the indoor unit → End of test
14	Switch the Normal/Maintenance switch inside indoor unit back to Normal. → After the test run is completed, set the Normal/Maintenance switch to "Normal", and confirm that the SW8 on the circuit boards on both No.1 and No.2 sides is set as shown below (factory setting).

Note 1 When two refrigerant circuits are connected, both refrigerant circuits start running when the operation is started with the remote controller without setting the SW8 on the indoor unit as shown on the right.

To enable each refrigerant circuit to operate individually, the setting of the SW8 shown on the right is required.

SW8	Unit operation	Remarks
ON  OFF  1 2 3	Performs test run when the test run command is received	Factory setting
ON  OFF  1 2 3	Remains a halt even if the test run command is received	

Unit operation when SW8 on the circuit board inside the indoor unit is operated

Note 2 The error code is displayed on the remote controller when the error lamp is lit on the indoor unit during test run. Refer to Chapter IX "Troubleshooting" for check codes.

Note 3 Set the Dip SW4-5 to "ON" on the outdoor unit if the test run cannot be kept due to low load. After the test run is completed, set the Dip SW4-5 to "OFF". **(The SW must be switched while the unit is stopped.)**

Note 4 When one refrigerant circuit is connected, the procedures 3 and 6-13 in the chart above are not required.

Note 5 When the test run is performed for the first time after the power is turned on, the standby operation of the compressor is performed. The compressor may run and stop repeatedly. This is not a malfunction. This operation lasts for 70 minutes at maximum.

### [3] Operating Characteristic and Refrigerant Amount

It is important to have a clear understanding of the characteristics of refrigerant and the operating characteristics of air conditioners before attempting to adjust the refrigerant amount in a given system.

#### 1. Operating characteristic and refrigerant amount

The following table shows items of particular importance.

- 1) During cooling operation, the amount of refrigerant in the accumulator is the smallest when all indoor units are in operation.
- 2) During heating operation, the amount of refrigerant in the accumulator is the largest when all indoor units are in operation.
- 3) General tendency of discharge temperature
  - Discharge temperature tends to rise when the system is short on refrigerant.
  - Changing the amount of refrigerant in the system while there is refrigerant in the accumulator has little effect on the discharge temperature.
  - The higher the pressure, the more likely it is for the discharge temperature to rise.
  - The lower the pressure, the more likely it is for the discharge temperature to rise.
- 4) When the amount of refrigerant in the system is adequate, the compressor shell temperature is 10 to 60°C [18 to 108°F] higher than the low pressure saturation temperature (Te).
  - > If the temperature difference between the compressor shell temperature and low pressure saturation temperature (Te) is smaller than 5°C [9°F], an overcharging of refrigerant is suspected.

### [4] Adjusting the Refrigerant Amount

#### 1. Symptoms

Overcharging or undercharging of refrigerant can cause the following symptoms:

Before attempting to adjust the amount of refrigerant in the system, thoroughly check the operating conditions of the system. Then, adjust the refrigerant amount by running the unit in the refrigerant amount adjust mode.

The system comes to an abnormal stop, displaying 1500 (overcharged refrigerant) on the controller.	Overcharged refrigerant
The operating frequency does not reach the set frequency, and there is a problem with performance.	Insufficient refrigerant amount
The system comes to an abnormal stop, displaying 1102 (abnormal discharge temperature) on the controller.	

#### 2. Amount of refrigerant

##### (1) To be checked during operation

Operate all indoor units in either cooling-only or heating-only mode, and check such items as discharge temperature, subcooling, low pressure, suction temperature, and shell bottom temperature to estimate the amount of refrigerant in the system.

Symptoms	Conclusion
Discharge temperature is high. (Normal discharge temperature is below 95°C [203°F].)	Slightly undercharged refrigerant
Low pressure is unusually low.	
Suction superheat is large. (Normal suction superheat is less than 20°C [36°F].)	
Compressor shell bottom temperature is high. (The difference between the compressor shell bottom temperature and low pressure saturation temperature (Te) is greater than 60°C [108°F].)	Slightly overcharged refrigerant
Discharge superheat is small. (Normal discharge superheat is greater than 10°C [18°F].)	
Compressor shell bottom temperature is low. (The difference between the compressor shell bottom temperature and low pressure saturation temperature (Te) is less than 5°C [9°F].)	

### 3. Amount of refrigerant to be added

The amount of refrigerant that is shown in the table below is factory-charged to the outdoor units. The amount necessary for extended pipe (field piping) is not included and must be added on site.

Outdoor unit model	P250
Amount of pre-charged refrigerant in the outdoor unit (kg)	9.0
Amount of pre-charged refrigerant in the outdoor unit [lbs-oz]	19-13

#### (1) Calculation formula

The amount of refrigerant to be added depends on the size and the length of field piping. (unit in m[ft])

$$\begin{aligned} \text{Amount of added refrigerant (kg)} &= (0.29 \times L_1) + (0.2 \times L_2) + (0.12 \times L_3) + (0.06 \times L_4) + (0.024 \times L_5) + \alpha \\ \text{Amount of added refrigerant (oz)} &= (3.12 \times L_1') + (2.15 \times L_2') + (1.29 \times L_3') + (0.65 \times L_4') + (0.26 \times L_5') + \alpha' \end{aligned}$$


$L_1$  : Length of  $\phi 19.05$  [3/4"] liquid pipe (m)       $L_1'$  : Length of  $\phi 19.05$  [3/4"] liquid pipe [ft]  
 $L_2$  : Length of  $\phi 15.88$  [5/8"] liquid pipe (m)       $L_2'$  : Length of  $\phi 15.88$  [5/8"] liquid pipe [ft]  
 $L_3$  : Length of  $\phi 12.7$  [1/2"] liquid pipe (m)       $L_3'$  : Length of  $\phi 12.7$  [1/2"] liquid pipe [ft]  
 $L_4$  : Length of  $\phi 9.52$  [3/8"] liquid pipe (m)       $L_4'$  : Length of  $\phi 9.52$  [3/8"] liquid pipe [ft]  
 $L_5$  : Length of  $\phi 6.35$  [1/4"] liquid pipe (m)       $L_5'$  : Length of  $\phi 6.35$  [1/4"] liquid pipe [ft]  
 $\alpha, \alpha'$  : Refer to the table below.

Total capacity of connected indoor units	$\alpha$ (kg)	$\alpha'$ (oz)
P250 model	2.0	71
P500 model*1	4.0	142

\*1. For P500 model, the value will be 2.0kg x 2 when two refrigerant circuits are connected.

Round up the calculation result to the nearest 0.01kg. (Example: 18.54kg to 18.6kg)  
 Round up the calculation result in increments of 4oz (0.1kg) or round it up to the nearest 1oz. (Example: 178.21 to 179oz)

#### (2) Example:Outdoor unit PUHY-P250YHM-A x 2; Indoor unit PFD-P500VM-E

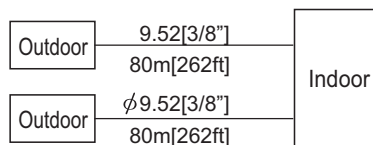

When the liquid pipe size is  $\phi 9.52$ , and the pipe length is 80m,  
 According to the above formula

$$\text{Amount of refrigerant to be charged (kg)} = 0.06 \times 80 + 2.0 = 6.8 \text{ kg}$$

The final result will be as follows:

$$\text{Amount of refrigerant to be charged} = 6.8 \text{ kg} \text{ (for one refrigerant circuit)}$$

When the liquid pipe size is  $\phi [3/8"]$ , and the pipe length is 262ft,  
 According to the above formula

$$\text{Amount of refrigerant to be charged (oz)} = 0.65 \times 262 + 71 = 241.3 \text{ oz}$$

The final result will be as follows:

$$\text{Amount of refrigerant to be charged} = 242 \text{ oz} \text{ (for one refrigerant circuit)}$$

#### CAUTION

Charge liquid refrigerant (as opposed to gaseous refrigerant) into the system.

- If gaseous refrigerant is charged into the system, the composition of the refrigerant in the cylinder will change and may result in performance loss.

## [5] Refrigerant Amount Adjust Mode

### 1. Procedures

Follow the procedures below to add or extract refrigerant as necessary depending on the operation mode.

When the function switch (SW4-3) on the main board on the outdoor unit (OC only) is turned to ON, the unit goes into the refrigerant amount adjust mode, and the following sequence is followed.

#### Operation

**When the unit is in the refrigerant amount adjust mode, the LEV on the indoor unit does not open as fully as it normally does during cooling operation to secure subcooling.**

#### Note

- 1) Refrigerant charge is adjusted based on the values of TH4, TH3, TH6, and Tc as shown in the flowchart below. Check the TH4, TH3, TH6, and Tc values, using the formula in the flowchart. The TH4, TH3, TH6, and Tc values can be displayed by setting the diagnostic switch (SW1) on the MAIN board.
- 2) There may be cases when the refrigerant amount may seem adequate for a short while after starting the unit in the refrigerant amount adjust mode but turn out to be inadequate later on (when the refrigerant system stabilizes).

#### When the amount of refrigerant is truly adequate.


TH3-TH6 on the indoor unit is 5°C [9°F] or above and SH on the indoor unit is between 5 and 15°C [9 and 27°F].

**The refrigerant amount may seem adequate at the moment, but may turn out to be inadequate later on.**


TH3-TH6 on the indoor unit is 5°C [9°F] or less and SH on the indoor unit is 5°C [9°F] or less.

Wait until the TH3-TH6 reaches 5°C [9°F] or above and the SH of the indoor unit is between 5 and 15°C [9 and 27°F] to determine that the refrigerant amount is adequate.

- 3) High pressure must be at least 2.0MPa[290psi] to enable a proper adjustment of refrigerant amount to be made.
- 4) Refrigerant amount adjust mode automatically ends 90 minutes after beginning. When this happens, by turning off the SW4-3 and turning them back on, the unit will go back into the refrigerant amount adjust mode.

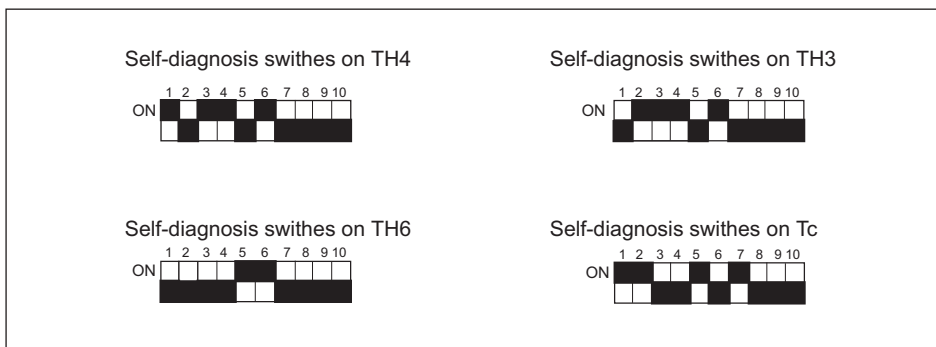



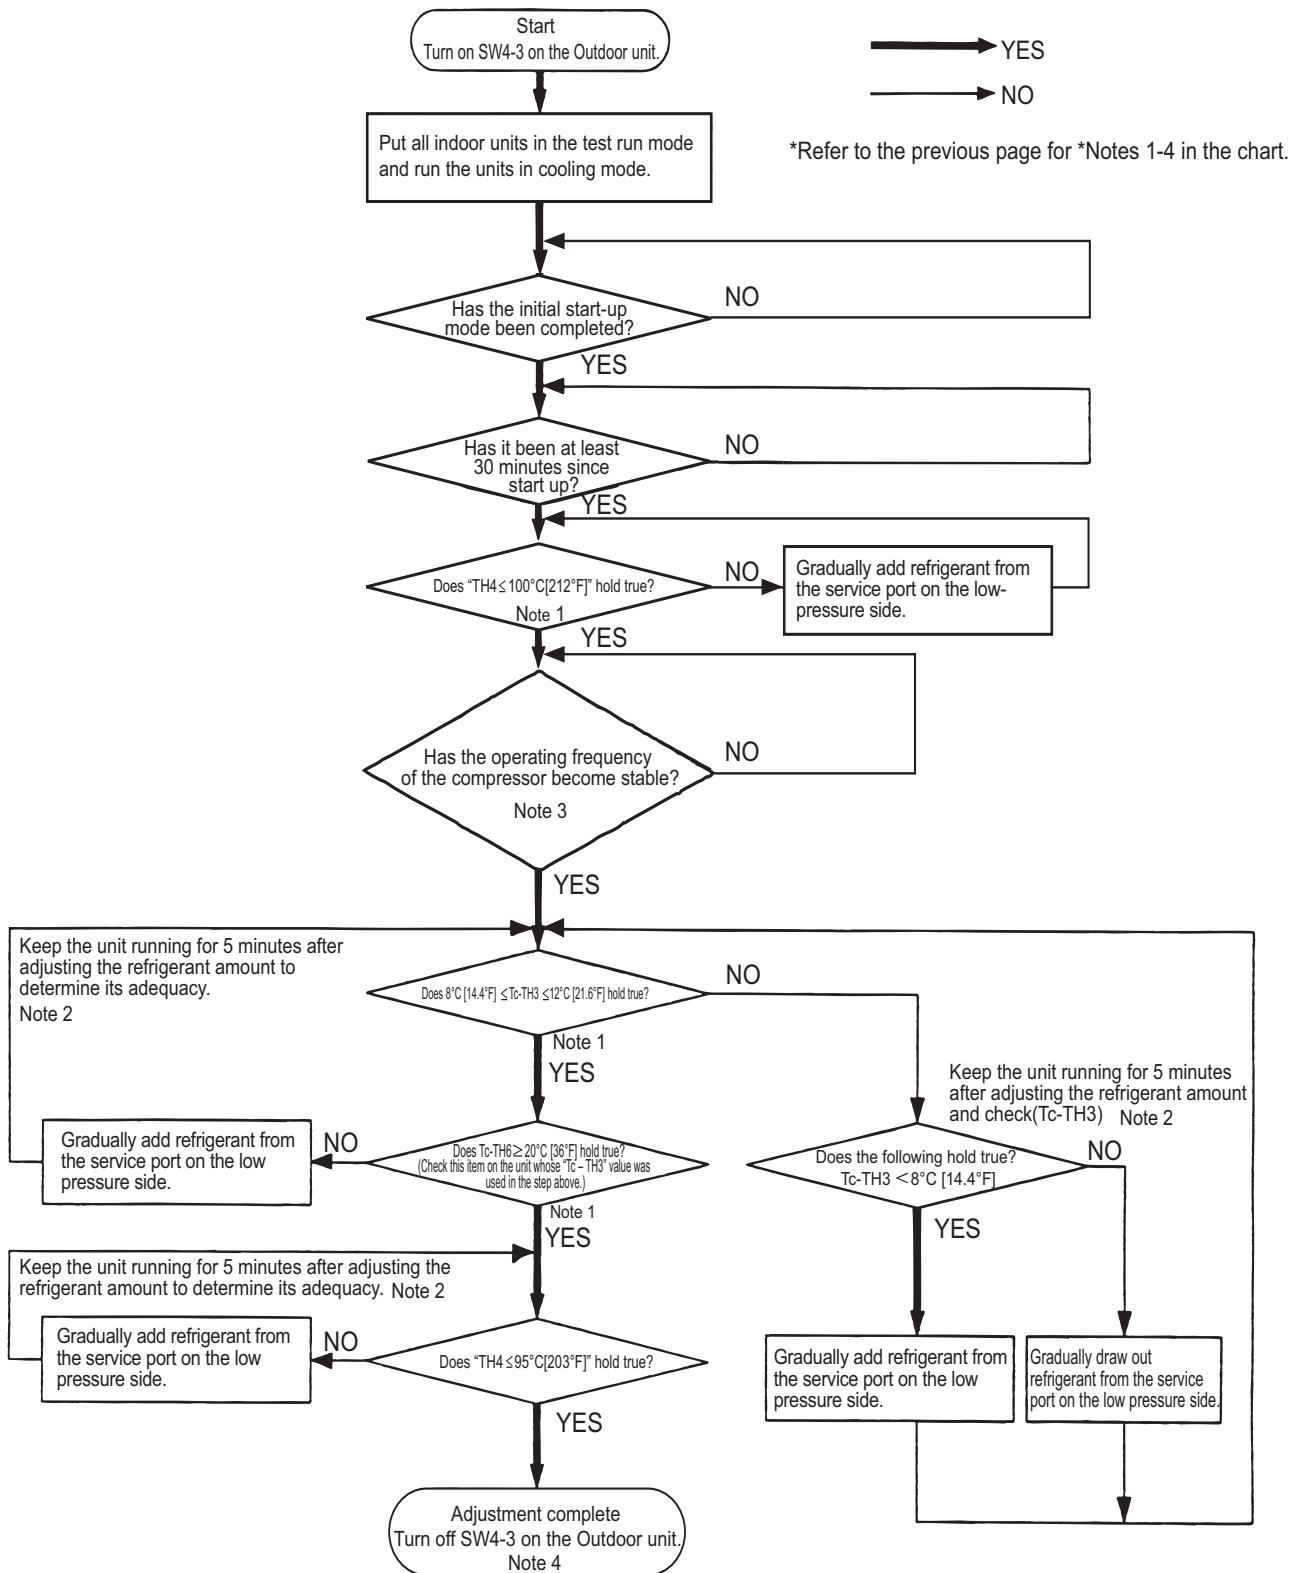

**⚠ CAUTION**  
Do not release the extracted refrigerant into the air.

**⚠ CAUTION**  
Charge liquid refrigerant (as opposed to gaseous refrigerant) into the system.  
•If gaseous refrigerant is charged into the system, the composition of the refrigerant in the cylinder will change and may result in performance loss.

**[6] The following symptoms are normal.**

Symptoms	Remote controller display	Cause
The fan stops during heating operation.	Defrost	The fan remains stopped during defrost operation.
When the main power is turned on, the display shown on the right appears on the indoor unit remote controller for 5 minutes.	"Ho" blinks	System is starting up. Wait until "HO" goes off.
Sound of the refrigerant flow is heard from the indoor unit immediately after starting operation.	Normal display	This is caused by the transient instability of the refrigerant flow and is normal.

**[7] Standard Operation Data (Reference Data)**

**(1) Cooling operation**

Operation				Indoor unit model	Outdoor unit model
				PFD-P500VM-E	PUHY-P250YHM-A x 2
Operating conditions	Ambient temperature	Indoor	DB/WB	27°C/19°C [81°F/66°F]	
		Outdoor		35°C/- [95°F/-]	
	Piping	Total pipe length	m[ft]	7.5 [24-9/16]	
Outdoor unit	Compressor frequency		Hz	58	
LEV opening	Indoor unit		Pulse	700	
	SC (LEV1)			126	
Pressure	Pressure High pressure (after O/S) /low pressure (before accumulator)		MPa [psi]	2.90/0.99 [421/144]	
Temp. of each section	Outdoor unit	Discharge(TH4)	°C [°F]	76 [169]	
		Heat exchanger outlet (TH3)		44 [111]	
		Compressor inlet		21 [70]	
		Compressor shell bottom		36 [97]	
		SC heat exchanger outlet (TH6)		28 [82]	
		Bypass outlet (TH2)		14 [57]	
	Indoor unit	LEV inlet		26 [79]	
		Heat exchanger outlet		18 [64]	

---

## IX Troubleshooting

[1] Error Code Lists .....	109
[2] Responding to Error Display on the Remote Controller .....	112
[3] Investigation of Transmission Wave Shape/Noise.....	160
[4] Troubleshooting Principal Parts .....	163
[5] Refrigerant Leak .....	182
[6] Compressor Replacement Instructions .....	183
[7] Troubleshooting Using the Outdoor Unit LED Error Display .....	185
[8] Maintenance/Inspection Schedule .....	186



**[1] Error Code Lists**

Error Code	Preliminary error code	Error (preliminary) detail code	Error code definition		Searched unit			Notes
					Outdoor unit	Indoor unit	Remote controller	
0403	4300 4305	01 05 (Note)	Serial communication error		O			
1102	1202	-	Discharge temperature fault		O			
1301	-	-	Low pressure fault		O			
1302	1402	-	High pressure fault		O			
1500	1600	-	Refrigerant overcharge		O			
-	1605	-	Preliminary suction pressure fault		O			
2503	-	-	Float switch trip			O		
4102	4152	-	Open phase		O			
4106	-	-	Transmission power supply fault		O			
4109	-	-	Fan fault			O		
4115	-	-	Power supply signal sync error		O			
4220 4225 (Note)	4320 4325 (Note)	[108]	Abnormal bus voltage drop		O			
		[109]	Abnormal bus voltage rise		O			
		[111]	Logic error		O			
		[131]	Low bus voltage at startup		O			
4230	4330	-	Heatsink overheat protection		O			
4240	4340	-	Overload protection		O			
4250 4255 (Note)	4350 4355 (Note)	[101]	IPM error		O			
		[104]	Short-circuited IPM/Ground fault		O			
		[105]	Overcurrent error due to short-circuited motor		O			
		[106]	Instantaneous overcurrent		O			
		[107]	Overcurrent		O			
4260	-	-	Heatsink overheat protection at startup		O			
5101	1202	-	Temperature sensor fault	Return air temperature (TH21)		O		
5102	1217	-	Temperature sensor fault	Indoor unit pipe temperature (TH22)		O		
				HIC bypass circuit outlet temperature (TH2)	O			
5103	1205	00	Temperature sensor fault	Indoor unit gas-side pipe temperature (TH23)		O		
				Pipe temperature at heatexchanger outlet (TH3)	O			
5104	1202	-	Temperature sensor fault	Supply air temperature (TH24)		O		
				Outdoor unit discharge temperature (TH4)	O			

Error Code	Preliminary error code	Error (preliminary) detail code	Error code definition		Searched unit			Notes
					Outdoor unit	Indoor unit	Remote controller	
5105	1204	-	Temperature sensor fault	Accumulator inlet temperature (TH5)	○			
5106	1216	-	Temperature sensor fault	HIC circuit outlet temperature (TH6)	○			
5107	1221	-	Temperature sensor fault	Outside temperature (TH7)	○			
5110	1214	01	Temperature sensor fault	Heatsink temperature (THHS)	○			
5201	-	-	High-pressure sensor fault (63HS1)		○			
5301	4300	[115]	ACCT sensor fault		○			
		[117]	ACCT sensor circuit fault		○			
		[119]	Open-circuited IPM/Loose ACCT connector		○			
		[120]	Faulty ACCT wiring		○			
6600	-	-	Address overlap		○	○	○	
6601	-	-	Polarity setting error		○			
6602	-	-	Transmission processor hardware error		○	○	○	
6603	-	-	Transmission line bus busy error		○	○	○	
6606	-	-	Communication error between device and transmission processors		○	○	○	
6607	-	-	No ACK error		○	○	○	
6608	-	-	No response error		○	○	○	
6831	-	-	MA controller signal reception error (No signal reception)			○	○	
6832	-	-	MA remote controller signal transmission error (Synchronization error)			○	○	
6833	-	-	MA remote controller signal transmission error (Hardware error)			○	○	
6834	-	-	MA controller signal reception error (Start bit detection error)			○	○	
7100	-	-	Total capacity error		○			
7101	-	-	Capacity code setting error		○	○		
7102	-	-	Wrong number of connected units		○			
7105	-	-	Address setting error		○			
7110	-	-	Connection information signal transmission/reception error		○			
7111	-	-	Remote controller sensor fault			○		
7113	-	-	Function setting error		○			
7117	-	-	Model setting error		○			
7130	-	-	Incompatible unit combination		○			

**Note**

The last digit in the check error codes in the 4000's and 5000's and two-digit detail codes indicate if the codes apply to compressor inverter or fan inverter.

**Example**

Code 4225 (detail code 108): Bus voltage drop in the fan inverter system

Code 4230 : Heatsink overheat protection in the compressor inverter system

The last digit	Inverter system
0 or 1	Compressor inverter system
5	Fan inverter system



---

## [2] Responding to Error Display on the Remote Controller

---

### 1. Error Code

<b>0403</b>
-------------

**Serial communication error**

### 2. Error definition and error detection method

Serial communication error between the control board and the INV board on the compressor, and between the control board and the Fan board

Detail code 01: Between the control board and the INV board

Detail code 05: Between the control board and the Fan board

### 3. Cause, check method and remedy

#### (1) Faulty wiring

Check the following wiring connections.

##### 1) Between Control board and Fan board

Control board	FAN board
CN2	CN21
CN4	CN5
CN332	CN18V

##### 2) Between Fan board and INV board

FAN board	INV board
CN22	CN2 CN5V
CN4	CN4

#### (2) INV board failure, Fan board failure and Control board failure

Replace the INV board or the Fan board or control board when the power turns on automatically, even if the power source is reset.

#### Note

Refer to section -6- "Inverter" under part [4] Troubleshooting Principal Parts for error codes related to the inverter.(page 173)

**1. Error Code**

**1102**

**Discharge temperature fault**

**2. Error definition and error detection method**

- 1) If the discharge temperature sensor detects a temperature of 120° C [248°F] or higher during operation (first detection), the outdoor unit stops, goes into the 20-second restart delay mode, and automatically restarts after twenty seconds.
- 2) If the discharge temperature sensor detects a temperature of 120°C [248°F] or higher again (second detection) within 30 minutes of the first stoppage of the outdoor unit as described above, the outdoor unit stops again, goes into the 20-second restart mode, and restarts after 20 seconds.
- 3) If the discharge temperature detects a temperature of 120°C [248°F] or higher again (third detection) within 30 minutes of the second stoppage of the outdoor unit as described above, the unit comes to an abnormal stop, and "1102" appears on the display.
- 4) If the discharge temperature of 120°C [248°F] or more is detected more than 30 minutes after the previous stop of the outdoor unit, the detection is regarded as the first detection, and the operation described in step 1 above will start.
- 5) For 30 minutes after the stop (the first stop or the second stop) of the outdoor unit, preliminary errors will be displayed on the LED display.

**3. Cause, check method and remedy**

Cause	Check method and remedy
(1) Gas leak, gas shortage	Refer to the page on refrigerant amount evaluation.(page 101)
(2) Overload operation	Check operating conditions and operation status of indoor/outdoor units.
(3) LEV failure on the indoor unit (4) Outdoor unit LEV1 actuation failure Outdoor unit LEV2a, b actuation failure	Perform a cooling or heating operation to check the operation. Cooling: Indoor unit LEV LEV1 LEV2a,b Heating: Indoor unit LEV LEV2a,b Refer to the section on troubleshooting the LEV.(page 167)
(5) Closed refrigerant service valve	Confirm that the refrigerant service valve is fully open.
(6) Outdoor fan (including fan parts) failure, motor failure, or fan controller malfunction Rise in discharge temp. by low pressure drawing for (3) - (6).	Check the fan on the outdoor unit. Refer to the section on troubleshooting the outdoor unit fan.(page 166)
(7) Gas leak between low and high pressures (4-way valve failure, Compressor failure, Solenoid valve (SV1a) failure)	Perform a cooling or heating operation and check the operation.
(8) Thermistor failure (TH4)	Check the thermistor resistor.(page 128)
(9) Input circuit failure on the controller board thermistor	Check the inlet air temperature on the LED monitor.

**1. Error Code**

<b>1301</b>
-------------

**Low pressure fault**

**2. Error definition and error detection method**

When starting the compressor from Stop Mode for the first time if low pressure reads 0.098MPa [14psi] immediately before start-up, the operation immediately stops.

**3. Cause, check method and remedy**

Cause	Check method and remedy
(1) Inner pressure drop due to a leakage.	Refer to the section on troubleshooting the low pressure sensor.(page 164)
(2) Low pressure sensor failure	
(3) Short-circuited pressure sensor cable due to torn outer rubber	
(4) A pin on the male connector is missing.	
(5) Disconnected wire	
(6) Failure of the low pressure input circuit on the controller board	

## 1. Error Code

1302

### High pressure fault 1 (Outdoor unit)

## 2. Error definition and error detection method

- 1) If the pressure sensor detects a pressure of 3.78 MPa [548 psi] or higher during operation, the outdoor unit stops, goes into the 20-second restart delay mode, and automatically restarts after 20 seconds.
- 2) If the pressure sensor detects a pressure of 3.78 MPa [548 psi] or higher again (second detection) within 30 minutes of the first stoppage of the outdoor unit, the outdoor unit stops, goes into the 20-second restart delay mode, and automatically restarts after 20 seconds.
- 3) If the pressure of 3.87MPa [561psi] or higher is detected by the pressure sensor (the third detection) within 30 minutes of the second stop of the outdoor unit, the outdoor unit will make an error stop, and the error code "1302" will be displayed.
- 4) If the pressure of 3.78MPa [548psi] or higher is detected more than 30 minutes after the stop of the outdoor unit, the detection is regarded as the first detection, and the operation described in step 1 above will start.
- 5) For 30 minutes after the stop of the outdoor unit, preliminary errors will be displayed on the LED display.
- 6) The outdoor unit makes an error stop immediately when not only the pressure sensor but also the pressure switch detects  $4.15^{+0,-0.15}$  MPa [ $601^{+0,-22}$  psi]

## 3. Cause, check method and remedy

Cause	Check method and remedy
(1) Indoor unit LEV2a, b actuation failure -> Cooling Indoor unit LEV actuation failure -> Heating	Perform a cooling or heating operation to check the operation. Cooling: Indoor unit LEV2a, b Heating: Indoor unit LEV Refer to the section on troubleshooting the LEV.(page 167)
(2) Closed refrigerant service valve	Confirm that the refrigerant service valve is fully open.
(3) Short cycle on the indoor unit side	Check the indoor units for problems and correct them, if any.
(4) Clogged filter on the indoor unit	
(5) Reduced air flow due to dirty fan on the indoor unit fan	
(6) Dirty heat exchanger of the indoor unit	
(7) Indoor fan (including fan parts) failure or motor failure Rise in high pressure caused by lowered condensing capacity in heating operation for (2) - (7).	
(8) Short cycle on the outdoor unit	
(9) Dirty heat exchanger of the outdoor unit	
(10) Outdoor fan (including fan parts) failure, motor failure, or fan controller malfunction Rise in discharge temp. by low pressure drawing for (8) - (10).	Check the fan on the outdoor unit. Refer to the section on troubleshooting the outdoor unit fan.(page 166)
(11) Solenoid valve (SV1a) malfunction (The by-pass valve (SV1a) can not control rise in high pressure).	Refer to the section on troubleshooting the solenoid valve.(page 165)
(12) Thermistor failure (TH3, TH7)	Check the thermistor resistor.(page 128)
(13) Pressure sensor failure	Refer to the page on the troubleshooting of the high pressure sensor. (page 163)
(14) Failure of the thermistor input circuit and pressure sensor input circuit on the controller board	Check the temperature and the pressure of the sensor with LED monitor.
(15) Thermistor mounting problem (TH3, TH7)	Check the temperature and the pressure of the sensor with LED monitor.
(16) Disconnected male connector on the pressure switch (63H1) or disconnected wire	

**1. Error Code**

**1302**

**High pressure fault 2 (Outdoor unit)**

**2. Error definition and error detection method**

If the pressure of 0.098MPa [14psi] or lower is registered on the pressure sensor immediately before start-up, it will trigger an abnormal stop, and error code "1302" will be displayed.

**3. Cause, check method and remedy**

	Cause	Check method and remedy
(1)	Inner pressure drop due to a leakage.	Refer to the page on the troubleshooting of the high pressure sensor.(page 163)
(2)	Pressure sensor failure	
(3)	Shorted-circuited pressure sensor cable due to torn outer rubber	
(4)	A pin on the male connector on the pressure sensor is missing or contact failure	
(5)	Disconnected pressure sensor cable	
(6)	Failure of the pressure sensor input circuit on the controller board	

**1. Error Code**

**1500**

**Refrigerant overcharge**

**2. Error definition and error detection method**

An error can be detected by the discharge temperature superheat.

- 1) If the formula " $TdSH \leq 10^{\circ}C [18^{\circ}F]$ " is satisfied during operation (first detection), the outdoor unit stops, goes into the 20-second restart delay mode, and automatically restarts after 20 seconds.
- 2) If the formula " $TdSH \leq 10^{\circ}C [18^{\circ}F]$ " is satisfied again within 20 seconds of the first stoppage of the outdoor unit (second detection), the unit comes to an abnormal stop, and the error code "1500" appears.
- 3) If the formula " $TdSH \leq 10^{\circ}C [18^{\circ}F]$ " is satisfied 30 minutes or more after the first stoppage of the outdoor unit, the same sequence as Item "1 above (first detection) is followed.
- 4) For 30 minutes after the stop of the outdoor unit, preliminary errors will be displayed on the LED display.

**3. Cause, check method and remedy**

	Cause	Check method and remedy
(1)	Overcharged refrigerant	Refer to the page on refrigerant amount evaluation.(page 101)
(2)	Thermistor input circuit failure on the control board	Check the temperature and pressure readings on the sensor that are displayed on the LED monitor.
(3)	Faulty mounting of thermistor (TH4)	Check the temperature and pressure readings on the thermistor that are displayed on the LED monitor.
(4)	Outdoor unit LEV2a, b actuation failure -> Heating	Refer to the section on troubleshooting the LEV. (page 167)

**1. Error Code**

**2503**

**Float switch trip**

**2. Error definition and error detection method**

•This error is detected if the float switch trips during operation and open-circuit (-40°C [-40°F] below) is detected continuously for 30 seconds. (Normal operation will be resumed in 20 seconds if open-circuit is no longer detected before the 20 seconds have elapsed.)

**3. Cause, check method and remedy**

Cause		Check method and remedy	
(1)	Faulty connector (CN31) insertion.	1)	Check for connector connection failure. Reinsert the connector, restart the operation, and check for proper operation.
(2)	Broken or partially broken float switch wire	2)	Check for broken float switch wire.
(3)	Float switch failure	3)	Check the resistance of the float switch. 250mΩ below
(4)	Indoor unit control board (error detection circuit) failure	4)	Operate the unit with pins No. 1 and No. 2 of connector CN31 short-circuited. If the problem recurs, replace the indoor unit control board. If the above item checks out OK, there are no problems with the drain sensor. Turn off the power and turn it back on.

**1. Error Code**

**4102**

**Open phase**

**2. Error definition and error detection method**

- An open phase of the power supply (L1 phase, N phase) was detected at power on.
- The L3 phase current is outside of the specified range.

**Note**

The open phase of the power supply may not always be detected if a power voltage from another circuit is applied.

**3. Cause, check method and remedy**

	Cause	Check method and remedy
(1)	Power supply problem •Open phase voltage of the power supply •Power supply voltage drop	Check the input voltage to the power supply terminal block TB1.
(2)	Noise filter problem •Coil problem •Circuit board failure	•Check the coil connections. •Check for coil burnout. •Confirm that the voltage at the CN3 connector is 198 V or above.
(3)	Wiring failure	Confirm that the voltage at the control board connector CNAC is 198 V or above. If the voltage is below 198V, check the wiring connection between the noise filter board CN3, noise filter board CN2 and control board CNAC. Confirm that the wiring between noise filter TB23 and INV board SC-L3 is put through CT3.
(4)	Blown fuse	Check for a blown fuse (F01) on the control board. ->If a blown fuse is found, check for a short-circuiting or earth fault of the actuator.
(5)	CT3 failure	Replace the inverter if this problem is detected after the compressor has gone into operation.
(6)	Control board failure	Replace the control board if none of the above is causing the problem.

**1. Error Code**

**4106**

**<Transmission power supply fault error detail FF (Outdoor unit)>**

**2. Error definition and error detection method**

Transmission power output failure

**3. Cause**

- 1) Wiring failure
- 2) Transmission power supply cannot output voltage because overcurrent was detected.
- 3) Voltage cannot be output due to transmission power supply problem.
- 4) Transmission voltage detection circuit failure

**4. Check method and remedy**

Check the items in IX [4] -7- (2) on all outdoor units in the same refrigerant circuit.(page 181)

**<Transmission power supply fault other than error detail code FF (Outdoor unit)>**

**2. Error definition and error detection method**

Transmission power reception failure

**3. Cause**

One of the outdoor units stopped supplying power, but no other outdoor units start supplying power.

**4. Check method and remedy**

Check the items in IX [4] -7- (2) on all outdoor units in the same refrigerant circuit.(page 181)



### 1. Error Code

**4109**

#### Fan fault

### 2. Error definition and error detection method

If the auxiliary relay X4 (for fan fault detection) remains unexcited for a certain period of time, the unit will come to an abnormal stop, and the fan output goes off.

Overcurrent breaker trigger value

Model name, motor output		Preset value
PFD	P250 model, 3.7kW	7.5A
	P500 model, 5.5kW	12A

### 3. Cause, check method and remedy

Cause	Check method and remedy
(1) Overcurrent breaker (51F) is tripped.	Check the fan for proper rotation, check for worn bearings, and check the pulley for proper alignment. Check for proper belt tension (esp. overtension). Check the motor for proper operation. 51F malfunction (Test switch is left to ON.)
(2) Blown fuse (F1)	Check for a loose or blown fuse
(3) Auxiliary relay (X4) fault	Loose, broken, or incorrect lead wire wiring Coil fault, contact failure
(4) Broken wire	Check for broken wire.
(5) Loose connector	Check the connector for proper connection.
(6) Indoor unit control board (I.B1, I.B2) fault	If no problems are found with the items above and if the problem persists, circuit board failure is suspected.

### 1. Error Code

**4115**

#### Power supply signal sync error

### 2. Error definition and error detection method

The frequency cannot be determined when the power is switched on.

### 3. Cause, check method and remedy

Cause	Check method and remedy
(1) Power supply error	Check the voltage of the power supply terminal block (TB1).
(2) Noise filter problem •Coil problem •Circuit board failure	•Check the coil connections. •Check for coil burnout. •Confirm that the voltage at the CN3 connector is 198 V or above.
(3) Faulty wiring	Check fuse F01 on the control board.
(4) Wiring failure Between noise filter CN3 and noise filter CN2 and control board CNAC	Confirm that the voltage at the control board connector CNAC is 198 V or above.
(5) Control board failure	If none of the items described above is applicable, and if the trouble reappears even after the power is switched on again, replace the control board.

## 1. Error Code

<b>4220</b> <b>4225</b>
----------------------------

### Abnormal bus voltage drop (Detail code 108)

## 2. Error definition and error detection method

If Vdc 289V or less is detected during Inverter operation. (S/W detection)

## 3. Cause, check method and remedy

### (1) Power supply environment

Check whether the unit makes an instantaneous stop when the detection result is abnormal or a power failure occurs.  
Check whether the power voltage (Between L1 and L2, L2 and L3, and L1 and L3) is 342V or less across all phases.

### (2) Voltage drop detected

#### 4220

•Check the voltage between the FT-P and FT-N terminals on the INV board while the inverter is stopped and if it is 420 V or above, check the following items.

- 1) Confirm on the LED monitor that the bus voltage is above 289V.

Replace the INV board if it is below 289 V.

- 2) Check the voltage at CN72 on the control board. ->Go to (3).
- 3) Check the noise filter coil connections and for coil burnout.
- 4) Check the wiring connections between the following sections

Between the noise filter board and INV board. Between the INV board and DCL.

Replace 72C if no problems are found.

- 5) Check the IGBT module resistance on the INV board (Refer to the Trouble shooting for IGBT module).

•Check the voltage between the FT-P and FT-N terminals on the INV board while the inverter is stopped and if it is less than 420 V, check the following items.

- 1) Check the coil connections and for coil burnout on the noise filter.
- 2) Check the wiring between the noise filter board and INV board.
- 3) Check the connection to SCP1 and SC-P2 on the INV board.
- 4) Check the in-rush current resistor value.
- 5) Check the 72C resistance value.
- 6) Check the DCL resistance value.

Replace the INV board if no problems are found.

#### 4225

•Check the voltage at CNVDC on the Fan board while the inverter is stopped and if it is 420 V or above, check the following items.

- 1) Check the voltage at CN72 on the control board. ->Go to 3).
- 2) Check the noise filter coil connections and for coil burnout.
- 3) Check the wiring connections between the following sections

Between the INV board and the Fan board.

- 4) Check contents 4220

Replace the Fan board if no problems are found.

•Check the voltage at CNVDC on the Fan board while the inverter is stopped and if it is less than 420 V, check the following items.

- 1) Check the state of the wiring connections between the INV board and the Fan board.
- 2) Check contents 4220

Replace the Fan board if no problems are found.

### (3) Control board failure

Confirm that DC12V is applied to the connector CN72 on the control board while the inverter is operating. If not, replace the control board.

#### Note

Refer to section -6- "Inverter" under part [4] Troubleshooting Principal Parts for error codes related to the inverter.(page 173)

**1. Error Code**

<b>4220</b> <b>4225</b>
----------------------------

**Abnormal bus voltage rise (Detail code 109)**

**2. Error definition and error detection method**

If Vdc ≥ 830V is detected during inverter operation.

**3. Cause, check method and remedy**

**(1) Different voltage connection**

Check the power supply voltage on the power supply terminal block (TB1).

**(2) INV board failure**

If the problem recurs, replace the INV board.

In the case of 4220: INV board

In the case of 4225: Fan board

**Note**

Refer to section -6- "Inverter" under part [4] Troubleshooting Principal Parts for error codes related to the inverter.(page 173)

**1. Error Code**

<b>4220</b> <b>4225</b>
----------------------------

**Logic error (Detail code 111)**

**2. Error definition and error detection method**

H/W error

If only the H/W error logic circuit operates, and no identifiable error is detected.

**3. Cause, Check method and remedy**

**In the case of 4220**

Cause	Check method and remedy
(1) External noise	
(2) INV board failure	Refer to IX [4] -6- (2) [1].(page 175)

**In the case of 4225**

Cause	Check method and remedy
(1) External noise	
(2) Fan board failure	Refer to IX [4] -6- (2) [6].(page 176)

**Note**

Refer to section -6- "Inverter" under part [4] Troubleshooting Principal Parts for error codes related to the inverter.(page 173)

**1. Error Code**

<b>4220</b> <b>4225</b>
----------------------------

**Low bus voltage at startup (Detail code 131)**

**2. Error definition and error detection method**

When  $V_{dc} \leq 160$  V is detected just before the inverter operation.

**3. Cause, check method and remedy**

**(1) Inverter main circuit failure**

Same as detail code 108 of 4220 error

**Note**

Refer to section -6- "Inverter" under part [4] Troubleshooting Principal Parts for error codes related to the inverter.(page 173)

**1. Error Code**

<b>4230</b>
-------------

**Heatsink overheat protection**

**2. Error definition and error detection method**

When the heat sink temperature (THHS) remains at or above 100°C [212°F] is detected.

**3. Cause, check method and remedy**

Cause	Check method and remedy
(1) Fan board failure	Refer to IX [4] -6- (2) [6].(page 176)
(2) Outdoor unit fan failure	Check the outdoor unit fan operation. If any problem is found with the fan operation, check the fan motor. ->Refer to IX [4] -6- (2) [5].(page 176)
(3) Air passage blockage	Check that the heat sink cooling air passage is not blocked
(4) THHS failure	1) Check for proper installation of the INV board IGBT. (Check for proper installation of the IGBT heatsink.) 2) Check the THHS sensor reading on the LED monitor. ->If an abnormal value appears, replace the INV board.

**Note**

Refer to section -6- "Inverter" under part [4] Troubleshooting Principal Parts for error codes related to the inverter.(page 173)

**1. Error Code**

**4240**

**Overload protection**

**2. Error definition and error detection method**

If the output current of "(Iac) > I<sub>max</sub> (Arms)" or "THHS > 95°C [203°F]" is continuously detected for 10 minutes or more during inverter operation.

Model	I <sub>max</sub> (Arms)
P250 model	19

**3. Cause, check method and remedy**

Cause	Check method and remedy
(1) Air passage blockage	Check that the heat sink cooling air passage is not blocked
(2) Power supply environment	Power supply voltage is 342 V or above.
(3) Inverter failure	Refer to IX [4] -6-(page 173)
(4) Compressor failure	Check that the compressor has not overheated during operation. -> Check the refrigerant circuit (oil return section). Refer to IX [4] -6- (2) [2].(page 175)

**Note**

Refer to section -6- "Inverter" under part [4] Troubleshooting Principal Parts for error codes related to the inverter.(page 173)

**1. Error Code**

**4250  
4255**

**IPM error (Detail code 101)**

**2. Error definition and error detection method**

**In the case of 4250**

Overcurrent is detected by the overcurrent detection resistor (RSH) on the INV board.

**In the case of 4255**

IPM error signal is detected.

**3. Cause, check method and remedy**

**In the case of 4250**

Cause	Check method and remedy
(1) Inverter output related	Refer to IX [4] -6- (2) [1] - [4].(page 175)  Check the IGBT module resistance value of the INV board, if no problems are found. (Refer to the Trouble shooting for IGBT module)

**In the case of 4255**

Cause	Check method and remedy
(1) Fan motor abnormality	Refer to IX [4] -6- (2) [5].(page 176)
(2) Fan board failure	Refer to IX [4] -6- (2) [6].(page 176)

**Note**

Refer to section -6- "Inverter" under part [4] Troubleshooting Principal Parts for error codes related to the inverter.(page 173)

**1. Error Code**

**4250**

**Instantaneous overcurrent (Detail code 106)  
Overcurrent (Detail code 107)**

**2. Error definition and error detection method**

P250 model  
Overcurrent 94 Apeak or 22 Arms and above is detected by the current sensor.

**3. Cause, check method and remedy**

Cause	Check method and remedy
(1) Inverter output related	Refer to IX [4] -6- (2) [1] - [4].(page 175)  Check the IGBT module resistance value of the INV board, if no problems are found. (Refer to the Trouble shooting for IGBT module)

**Note**

Refer to section -6- "Inverter" under part [4] Troubleshooting Principal Parts for error codes related to the inverter.(page 173)

**1. Error Code**

**4250  
4255**

**Short-circuited IPM/Ground fault (Detail code 104)**

**2. Error definition and error detection method**

When IPM/IGBT short damage or grounding on the load side is detected just before starting the inverter.

**3. Cause, check method and remedy**

**In the case of 4250**

Cause	Check method and remedy
(1) Grounding fault compressor	Refer to IX [4] -6- (2) [2].(page 175)
(2) Inverter output related	Refer to IX [4] -6- (2) [1] - [4].(page 175)

**In the case of 4255**

Cause	Check method and remedy
(1) Grounding fault of fan motor	Refer to IX [4] -6- (2) [5].(page 176)
(2) Fan board failure	Refer to IX [4] -6- (2) [6].(page 176)

**Note**

Refer to section -6- "Inverter" under part [4] Troubleshooting Principal Parts for error codes related to the inverter.(page 173)

**1. Error Code**

<b>4250</b> <b>4255</b>
----------------------------

**Overcurrent error due to short-circuited motor (Detail code 105)**

**2. Error definition and error detection method**

When a short is detected on the load side just before starting the inverter operation.

**3. Cause, Check method and remedy**

**In the case of 4250**

Cause	Check method and remedy
(1) Short - circuited compressor	Refer to IX [4] -6- (2) [2].(page 175)
(2) Output wiring	Check for a short circuit.

**In the case of 4255**

Cause	Check method and remedy
(1) Short - circuited fan motor	Refer to IX [4] -6- (2) [5].(page 176)
(2) Output wiring	Check for a short circuit.

**Note**

Refer to section -6- "Inverter" under part [4] Troubleshooting Principal Parts for error codes related to the inverter.(page 173)

---

**1. Error Code**

<b>4260</b>
-------------

**Heatsink overheat protection at startup**

**2. Error definition and error detection method**

The heatsink temperature (THHS) remains at or above 100°C [212°F] for 10 minutes or more at inverter startup.

**3. Cause, check method and remedy**

Same as 4230 error

### 1. Error Code

**5101**

**Return air temperature sensor (TH21) fault (Indoor unit)**

**5102**

**Pipe temperature sensor (TH22) fault (Indoor unit)**

**5103**

**Gas-side pipe temperature sensor (TH23) fault (Indoor unit)**

**5104**

**Supply air temperature sensor fault (TH24) (Indoor unit)**

### 2. Error definition and error detection method

•If a short- or open-circuit of the sensor is detected during Thermo-ON, the unit goes into the 20-second restart delay mode. If normal operation is not resumed in 20 seconds, the unit will come to an abnormal stop.

Short: detectable at 90°C [194°F] or higher

Open: detectable at -40°C [-40°F] or lower

•Sensor error at gas-side cannot be detected under the following conditions.

\*During heating operation

\*During cooling operation for 3 minutes after the compressor turns on.

### 3. Cause, check method and remedy

Cause	Check method and remedy
(1) Thermistor failure	Check the thermistor resistor. 0°C [32°F]: 15 kohm 10°C [50°F]: 9.7 kohm 20°C [68°F]: 6.4 kohm 30°C [86°F]: 4.3 kohm 40°C [104°F]: 3.1 kohm
(2) Connector contact failure	
(3) Disconnected wire or partial disconnected thermistor wire	
(4) Unattached thermistor or contact failure	
(5) Indoor board (detection circuit) failure	
	Check the connector contact. When no fault is found, the indoor board is a failure.



**1. Error Code**

**5102**

**HIC bypass circuit outlet temperature sensor (TH2) fault (Outdoor unit)**

**5103**

**Heat exchanger outlet temperature sensor (TH3) fault (Outdoor unit)**

**5104**

**Discharge temperature sensor (TH4) fault (Outdoor unit)**

**5105**

**Accumulator inlet temperature sensor (TH5) fault (Outdoor unit)**

**5106**

**HIC circuit outlet temperature sensor (TH6) fault (Outdoor unit)**

**5107**

**Outside temperature sensor (TH7) fault (Outdoor unit)**

**2. Error definition and error detection method**

- If a shorted-circuited (high temperature intake) or an open-circuited thermistor (low temperature intake) is detected (first detection), the outdoor unit stops, goes into the 20-second restart delay mode, and automatically restarts if the thermistor temperature reading is within the normal range at the end of the restart delay mode.
- If a short- or open-circuited thermistor is detected again (second detection) after restart, the outdoor unit stops again, goes into the 20-second restart delay mode, and automatically restarts if the thermistor temperature reading is within the normal range at the end of the restart delay mode.
- When a short or an open is detected again (the third detection) after the previous restart of the outdoor unit, the outdoor unit makes an error stop.
- When a short or an open of the thermistor is detected just before the restart of the outdoor unit, the outdoor unit makes an error stop, and the error code "5102", "5103", "5104", "5105", "5106" or "5107" will appear.
- During 20-second antirestart mode, preliminary errors will be displayed on the LED display.
- A short or an open described above is not detected for 10 minutes after the compressor start, during defrost mode, or for 3 minutes after defrost mode.

**3. Cause, check method and remedy**

Cause		Check method and remedy
(1)	Thermistor failure	Check thermistor resistance.
(2)	Pinched lead wire	Check for pinched lead wire.
(3)	Torn wire coating	Check for wire coating.
(4)	A pin on the male connector is missing or contact failure	Check connector.
(5)	Disconnected wire	Check for wire.
(6)	Thermistor input circuit failure on the control board	Check the intake temperature of the sensor with the LED monitor. When the temperature is far different from the actual temperature, replace the control board.

<Reference>

	Short detection	Open detection
TH2	70 °C [158 °F] and above (0.4 kΩ)	-40 °C [-40 °F] and below (130 kΩ)
TH3	110 °C [230 °F] and above (0.4 kΩ)	-40 °C [-40 °F] and below (130 kΩ)
TH4	240 °C [464 °F] and above (0.57 kΩ)	0 °C [32 °F] and below (698 kΩ)
TH5	70 °C [158 °F] and above (0.4 kΩ)	-40 °C [-40 °F] and below (130 kΩ)
TH6	70 °C [158 °F] and above (1.14 kΩ)	-40 °C [-40 °F] and below (130 kΩ)
TH7	110 °C [230 °F] and above (0.4 kΩ)	-40 °C [-40 °F] and below (130 kΩ)

**1. Error Code**

**5110**

**Heatsink temperature sensor (THHS) fault (Detail code 01)**

**2. Error definition and error detection method**

When a short or an open of THHS is detected just before or during the inverter operation.

**3. Cause, check method and remedy**

Cause	Check method and remedy
(1) INV board failure	If the problem recurs when the unit is put into operation, replace the INV board.

**Note**

Refer to section -6- "Inverter" under part [4] Troubleshooting Principal Parts for error codes related to the inverter.(page 173)

**1. Error Code**

**5201**

**High-pressure sensor fault (63HS1)**

**2. Error definition and error detection method**

- If the high-pressure sensor detects a pressure of 0.098MPa [14psi] or below during operation, the outdoor unit stops, goes into the 20-second restart delay mode, and restarts if the pressure reaches above 0.098MPa [14psi] at the end of the restart delay mode.
- If the high pressure sensor detects 0.098MPa [14psi] or less just before the restart, the outdoor unit makes an error stop, and the error code "5201" will appear.
- When the unit is in the 20-second restart delay mode, a preliminary error code appears on the LED.
- A error is not detected for 3 minutes after the compressor start, during defrost operation, or 3 minutes after defrost operation.

**3. Cause, check method and remedy**

Cause	Check method and remedy
(1) High pressure sensor failure	Refer to the page on the troubleshooting of the high pressure sensor. (IX [4] -1- (page 163))
(2) Pressure drop due to refrigerant leak	
(3) Torn wire coating	
(4) A pin on the male connector is missing or contact failure	
(5) Disconnected wire	
(6) High pressure sensor input circuit failure on the control board	

**1. Error Code**

**5301**

**ACCT sensor fault (Detail code 115)**

**2. Error definition and error detection method**

When the formula "output current < 1.5 Arms" remains satisfied for 10 seconds while the inverter is in operation.

**3. Cause, check method and remedy**

Cause	Check method and remedy
(1) Inverter open output phase	Check the output wiring connections.
(2) Compressor failure	Refer to IX [4] -6- (2) [2].(page 175)
(3) INV board failure	Refer to IX [4] -6- (2) [1],[3],[4].(page 175)

**Note**

Refer to section -6-"Inverter" under part [4] Troubleshooting Principal Parts for error codes related to the inverter.(page 173)

**1. Error Code**

**5301**

**ACCT sensor circuit fault (Detail code 117)**

**2. Error definition and error detection method**

When an error value is detected with the ACCT detection circuit just before the inverter starts

**3. Cause, check method and remedy**

Cause	Check method and remedy
(1) INV board failure	Refer to IX [4] -6- (2) [1],[3],[4].(page 175)
(2) Compressor failure	Refer to IX [4] -6- (2) [2].(page 175)

**Note**

Refer to section -6-"Inverter" under part [4] Troubleshooting Principal Parts for error codes related to the inverter.(page 173)

**1. Error Code**

**5301**

**Open-circuited IPM/Loose ACCT connector (Detail code 119)**

**2. Error definition and error detection method**

Presence of enough current cannot be detected during the self-diagnostic operation immediately before inverter startup.

**3. Cause, check method and remedy**

Cause	Check method and remedy
(1) Inverter output wiring problem	Check output wiring connections. Confirm that the U- and W-phase output cables are put through CT12 and CT22 on the INV board respectively.
(2) Inverter failure	Refer to IX [4] -6- (2) [3], [4].(page 176)
(3) Compressor failure	Refer to IX [4] -6- (2) [2].(page 175)

**Note**

Refer to section -6- "Inverter" under part [4] Troubleshooting Principal Parts for error codes related to the inverter.(page 173)

**1. Error Code**

**5301**

**Faulty ACCT wiring (Detail code 120)**

**2. Error definition and error detection method**

Presence of target current cannot be detected during the self-diagnostic operation immediately before startup. (Detection of improperly mounted ACCT sensor)

**3. Cause, check method and remedy**

Cause	Check method and remedy
(1) Inverter output wiring problem	Check output wiring connections. Confirm that the U- and W-phase output cables are put through CT12 and CT22 on the INV board respectively.
(2) Inverter failure	Refer to IX [4] -6- (2) [3], [4].(page 176)
(3) Compressor failure	Refer to IX [4] -6- (2) [2].(page 175)

**Note**

Refer to section -6- "Inverter" under part [4] Troubleshooting Principal Parts for error codes related to the inverter.(page 173)

1. Error Code

**6600**

**Address overlap**

2. Error definition and error detection method

An error in which signals from more than one indoor units with the same address are received

Note

The address and attribute that appear on the remote controller indicate the controller that detected the error.

3. Cause, check method and remedy

Cause	Check method and remedy
Two or more of the controllers (outdoor unit/indoor unit) have the same address. <Example> 6600 "01" appears on the remote controller Unit #01 detected the error. Two or more units in the system have 01 as their address.	Find the unit that has the same address as that of the error source. <b>If address overlaps are detected, correct the address, turn off the power to both the outdoor and indoor units, keep it turned off simultaneously for at least five minutes, and turn it back on.</b>

1. Error Code

**6601**

**Polarity setting error**

2. Error definition and error detection method

The error detected when transmission processor cannot distinguish the polarities of the M-NET transmission line.

3. Cause, check method and remedy

Cause	Check method and remedy
(1) No voltage is applied to the M-NET transmission line that G(B)-50A is connected to.	Check if power is supplied to the M-NET transmission line of the G(B)-50A, and correct any problem found.
(2) M-NET transmission line to which G(B)-50A is connected is short-circuited.	

1. Error Code

**6602**

**Transmission processor hardware error**

2. Error definition and error detection method

Although "0" was surely transmitted by the transmission processor, "1" is displayed on the transmission line.


Note

The address/attribute appeared on the display on the remote controller indicates the controller where an error occurred.

3. Cause

- 1) When the wiring work of or the polarity of either the indoor or outdoor transmission line is performed or is changed while the power is on, the transmitted data will collide, the wave shape will be changed, and an error will be detected.
- 2) Grounding fault of the transmission line
- 3) When grouping the indoor units that are connected to different outdoor units, the male power supply connectors on the multiple outdoor units are connected to the female power supply switch connector (CN40).
- 4) When the power supply unit for transmission lines is used in the system connected with MELANS, the male power supply connector is connected to the female power supply switch connector (CN40) on the outdoor unit.
- 5) Controller failure of the source of the error
- 6) When the transmission data is changed due to the noise on the transmission line
- 7) Voltage is not applied on the transmission line for centralized control (in case of grouped indoor units connected to different outdoor units or in case of the system connected with MELANS)
- 8) Operation of indoor units was continued with the power to the outdoor unit turned off.

4. Check method and remedy

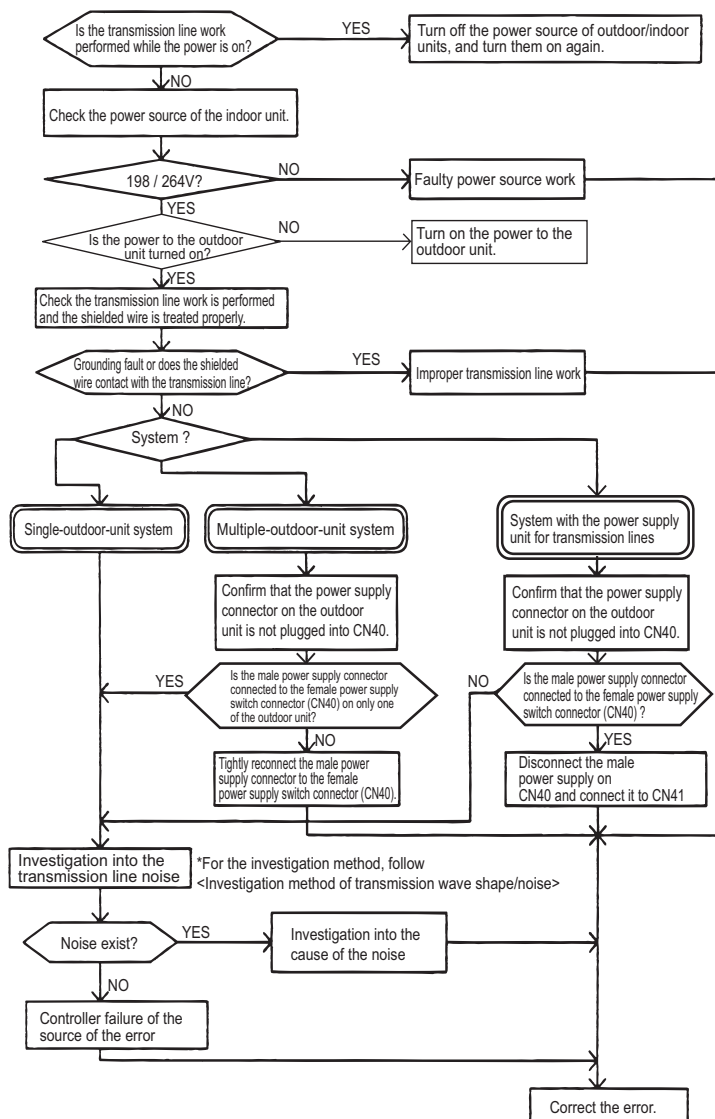

**1. Error Code**

**6603**

**Transmission line bus busy error**

**2. Error definition and error detection method**

- Generated error when the command cannot be transmitted for 4-10 minutes in a row due to bus-busy
- Generated error when the command cannot be transmitted to the transmission line for 4-10 minutes in a row due to noise

**Note**

The address/attribute appeared on the display on the remote controller indicates the controller where an error occurred.

**3. Cause, check method and remedy**

	Cause	Check method and remedy
(1)	The transmission processor cannot be transmitted as the short-wavelength voltage like noise exists consecutively on the transmission line.	No noise indicates that the error source controller is a failure. If noise exists, investigate the noise. -> No noise indicates that the error source controller is a failure. -> If noise exists, investigate the noise.
(2)	Error source controller failure	

**1. Error Code**

**6606**

**Communication error between device and transmission processors**

**2. Error definition and error detection method**

Communication error between the main microcomputer on the indoor unit board and the microcomputer for transmission

**Note**

The address/attribute appeared on the display on the remote controller indicates the controller where an error occurred.

**3. Cause, check method and remedy**

	Cause	Check method and remedy
(1)	Data is not properly transmitted due to accidental erroneous operation of the controller of the error source.	Turn off the power source of the outdoor and the indoor units.(When the power source is turned off separately, the microcomputer will not be reset, and the error will not be corrected.) -> If the same error occurs, the error source controller is a failure.
(2)	Error source controller failure	

1. Error Code

6607

No ACK error

2. Error definition and error detection method

The error is detected when no acknowledgement (ACK signal) is received after the transmission. (eg. When the data is transmitted six times in a row with 30 seconds interval, the error is detected on the transmission side.)

Note

The address/attribute appeared on the display on the remote controller indicates the controller which did not provide the response (ACK).

3. System configuration

(1) System with one outdoor unit

Error source address	Error display	Detection method	Cause	Check method and remedy
Outdoor unit (OC)	System controller(SC) MA remote controller (MA)	No acknowledgement (ACK) at IC transmission to OC	(1) Contact failure of transmission line of OC or IC (2) Decrease of transmission line voltage/signal by exceeding acceptable range of transmission wiring. Farthest:200 m [656ft] or less Remote controller wiring: 10m [32ft] or less (3) Erroneous sizing of transmission line (Not within the range below). Wire diameter: 1.25mm <sup>2</sup> [AWG16] or more (4) Indoor unit control board failure	Turn off the power source of the outdoor unit, and turn it on again. If the error is accidental, it will run normally. If not, check the causes (1) - (4).
Indoor unit (IC)	System controller (SC)	No acknowledgement (ACK) at SC transmission to IC	(1) When IC unit address is changed or modified during operation. (2) Faulty or disconnected IC transmission wiring (3) Disconnected IC connector (CN2M) (4) Indoor unit controller failure	Turn off the outdoor/indoor units for 5 or more minutes, and turn them on again. If the error is accidental, they will run normally. If not, check the causes (1) - (5).



1. Error Code

**6607**

**No ACK error**

2. Error definition and error detection method

The error is detected when no acknowledgement (ACK signal) is received after the transmission. (eg. When the data is transmitted six times in a row with 30 seconds interval, the error is detected on the transmission side.)

Note

The address/attribute appeared on the display on the remote controller indicates the controller which did not provide the response (ACK).

3. System configuration

(2) Grouping of units in a system with multiple outdoor units

Error source address	Error display	Detection method	Cause	Check method and remedy
Outdoor unit (OC)	System controller (SC) MA remote controller (MA)	No acknowledgement (ACK) at IC transmission to OC	Same cause as that for system with one outdoor unit	Same remedy as that for system with one outdoor unit
Indoor unit (IC)	System controller (SC) MA remote controller (MA)	No acknowledgement (ACK) at SC transmission to IC	<p>(1) Same causes as (1) - (5) for system with one outdoor unit</p> <p>(2) Disconnection or short circuit of the transmission line for the outdoor unit on the terminal block for centralized control line connection (TB7)</p> <p>(3) When multiple outdoor units are connected and the power source of one of the outdoor units has been shut off.</p> <p>(4) The male power supply connector of the outdoor unit is not connected to the female power supply switch connector (CN40).</p> <p>(5) The male power supply connectors on 2 or more outdoor units are connected to the female power supply switch connector (CN40) for centralized control.</p> <p>If an error occurs, after the unit runs normally once, the following causes may be considered.</p> <ul style="list-style-type: none"> <li>♦Total capacity error (7100)</li> <li>♦Capacity code error (7101)</li> <li>♦Error in the number of connected units (7102)</li> <li>♦Address setting error (7105)</li> </ul>	<p>1) Turn off the power sources of the outdoor and indoor units for 5 or more minutes, and turn them on again. If the error is accidental, the will run normally.If not, check the cause 2).</p> <p>2) Check the causes of (1) - (5). If the cause is found, correct it. If no cause is found, check 3).</p> <p>3) Check the LED displays for troubleshooting on other remote controllers whether an error occurs.</p> <p>If an error is found, -&gt; If an error is found, check the check code definition, and correct the error. If no error is found, -&gt; Indoor unit board failure</p>

1. Error Code

**6607**

**No ACK error**

2. Error definition and error detection method

The error is detected when no acknowledgement (ACK signal) is received after the transmission. (eg. When the data is transmitted six times in a row with 30 seconds interval, the error is detected on the transmission side.)

Note

The address/attribute appeared on the display on the remote controller indicates the controller which did not provide the response (ACK).

3. System configuration

(3) System connected to the system controllers (MELANS)

Error source address	Error display	Detection method	Cause	Check method and remedy
Outdoor unit (OC)	System controller (SC) MA remote controller (MA)	No acknowledgement (ACK) at IC transmission to OC	Same cause as that for system with one outdoor unit	Same remedy as that for system with one outdoor unit
Indoor unit (IC)	System controller (SC)	No acknowledgement (ACK) at SC transmission to IC	1. Error occurrence on some IC	Same remedy as that for system with one outdoor unit
			(1) Same cause as that for system with one outdoor unit	
			2. Error occurrence on all IC in the system with one outdoor unit	
			(1) Total capacity error (7100)	1) Check the LED display for troubleshooting on the outdoor unit.  ♦If an error is found, check the check code definition, and correct the error. ♦If no error is found, check 2).  2) Check (5) - (7) on the left.
		(2) Capacity code error (7101)		
		(3) Error in the number of connected units (7102)		
		(4) Address setting error (7105)		
		(5) Disconnection or short circuit of the transmission line for the outdoor unit on the terminal block for centralized control line connection (TB7)		
		(6) Turn off the power source of the outdoor unit		
		(7) Malfunction of electrical system for the outdoor unit		
		3. Error occurrence on all IC	Check voltage of the transmission line for centralized control. ♦20V or more: Check (1) and (2) on the left. ♦Less than 20V: Check (3) on the left.	
		(1) Same causes as (1) - (7) described in 2.		
		(2) The male power supply connectors on 2 or more outdoor units are connected to the female power supply switch connector (CN40) for the transmission line for centralized control.		
		(3) Disconnection or shutdown of the power source of the power supply unit for transmission line		
		(4) System controller (MELANS) malfunction		

**1. Error Code**

**6607**

**No ACK error**

**2. Error definition and error detection method**

The error is detected when no acknowledgement (ACK signal) is received after the transmission. (eg. When the data is transmitted six times in a row with 30 seconds interval, the error is detected on the transmission side.)

Note

The address/attribute appeared on the display on the remote controller indicates the controller which did not provide the response (ACK).

**3. System configuration**

**(3) System connected to the system controllers (MELANS)**

Error source address	Error display	Detection method	Cause	Check method and remedy
System controller (SC)	MA remote controller (MA)	No acknowledgement (ACK) at IC transmission to SC	1. Error occurrence on all IC in the system with one outdoor unit	1) Check the LED display for troubleshooting on the outdoor unit.  ♦ If an error is found, check the check code definition, and correct the error. ♦ If no error is found, check the cause 2)
			(1) An error is found by the outdoor unit. Total capacity error (7100) Capacity code error (7101) Error in the number of connected units (7102) Address setting error (7105)	
			(2) Disconnection or short circuit of the transmission line for the outdoor unit on the terminal block for centralized control line connection (TB7)	2) Check (2) - (4) on the left.
			(3) Turn off the power source of the outdoor unit	
			(4) Malfunction of electrical system for the outdoor unit	
			2. Error display on all displays on MA remote controllers	Check (1) - (4) on the left
			(1) Same causes as (1) - (4) described in 2.	
			(2) When the power supply unit for transmission lines is used and the male power supply connector is connected to the female power supply switch connector (CN40) for the transmission line for centralized control	
			(3) Disconnection or shutdown of the power source of the power supply unit for transmission line	
			(4) System controller (MELANS) malfunction	

1. Error Code

**6607**

**No ACK error**

2. Error definition and error detection method

The error is detected when no acknowledgement (ACK signal) is received after the transmission. (eg. When the data is transmitted six times in a row with 30 seconds interval, the error is detected on the transmission side.)

Note

The address/attribute appeared on the display on the remote controller indicates the controller which did not provide the response (ACK).

3. System configuration

(4) Errors that are not limited to a particular system

Error source address	Error display	Detection method	Cause	Check method and remedy
Address which should not be existed	-	-	<p>(1) System controller address was changed after the group setting had been made via the controller, and the old address is still retained by the indoor unit.</p> <p>(2) The address of the LOSSNAY unit was changed after the interlocking setting had been made via the MA remote controller, and the old address is still retained by the indoor unit.</p>	<p>Delete unnecessary information of non-existing address which some indoor units have. Use either of the following two methods for deletion.</p> <p>1) Deleting unnecessary addresses from the system controller Delete unnecessary addresses using the manual address setting function on the system controller. Refer to the Instructions Manual that came with the system controller.</p> <p>2) Deletion of connection information of the outdoor unit by the deleting switch</p> <p><b>Note that the above method will delete all the group settings set via the system controller and all the interlock settings between LOSSNAY unit and indoor units.</b></p> <ul style="list-style-type: none"> <li>♦ Turn off the power source of the outdoor unit, and wait for 5 minutes.</li> <li>♦ Turn on the dip switch (SW2-2) on the outdoor unit control board.</li> <li>♦ Turn on the power source of the outdoor unit, and wait for 5 minutes.</li> <li>♦ Turn off the power source of the outdoor unit, and wait for 5 minutes.</li> <li>♦ Turn off the dip switch (SW2-2) on the outdoor unit control board.</li> <li>♦ Turn on the power source of the outdoor unit.</li> </ul>

### 1. Error Code

**6608**

**No response error**

### 2. Error definition and error detection method

- When no response command is returned although acknowledgement (ACK) is received after transmission, an error is detected.
- When the data is transmitted 10 times in a row with 3 seconds interval, an error is detected on the transmission side.

#### Note

**The address/attribute appeared on the display on the remote controller indicates the controller where an error occurred.**

### 3. Cause

- 1) The transmission line work is performed while the power is on, the transmitted data will collide, and the wave shape will be changed.
- 2) The transmission is sent and received repeatedly due to noise.
- 3) Decrease of transmission line voltage/signal by exceeding acceptable range of transmission wiring.  
Farthest:200m [656ft] or less
- 4) The transmission line voltage/signal is decreased due to erroneous sizing of transmission line.  
Wire diameter: 1.25mm<sup>2</sup>[AWG16] or more

### 4. Check method and remedy

- 1) If this error happens during a test run, turn off the power to the outdoor and indoor units and keep it turned off simultaneously for at least five minutes, and turn it back on.
  - When they return to normal operation, the cause of the error is the transmission line work performed with the power on.
  - If an error occurs again, check the cause 2).
- 2) Check 3) and 4) above.
  - If the cause is found, correct it.
  - If no cause is found, check 3).
- 3) Check transmission wave shape/ noise on trans-mission line by following IX [3] Investigation of Transmission Wave Shape/ Noise(page 160).

**Noise is the most possible cause of the error "6608".**

## 1. Error Code

6831

**MA controller signal reception error (No signal reception)**

## 2. Error definition and error detection method

- Communication between the MA remote controller and the indoor unit is not done properly.
- No proper data has been received for 3 minutes.

## 3. Cause

- 1) Contact failure of the remote controller lines of MA remote controller or the indoor unit.
- 2) All the remote controllers are set to SUB.
- 3) Failure to meet wiring regulations
  - Wire length
  - Wire size
  - Number of remote controllers
  - Number of indoor units
- 4) The remote controller is removed after the installation without turning the power source off.
- 5) Noise interference on the remote controller transmission lines
- 6) Faulty circuit that is on the indoor board and performs transmission/ reception of the signal from the remote controller
- 7) Problems with the circuit on the remote controller that sends or receives the signals from the remote controller

## 4. Check method and remedy

- 1) Check for disconnected or loose transmission lines for the indoor units or MA remote controllers.
- 2) Confirm that the power is supplied to the main power source and the remote controller line.
- 3) Confirm that MA remote controller's capacity limit is not exceeded.
- 4) Check the sub/main setting of the MA remote controllers. One of them must be set to MAIN.
- 5) Diagnose the remote controller (described in the remote controller installation manual).  
[OK]: no problems with the remote controller (check the wiring regulations)  
[NO]: Replace the MA remote controller.  
[6832, 6833, ERC]: Due to noise interference <Go to 6>
- 6) Check wave shape/noise on MA remote controller line by following "IX [3] Investigation of Transmission Wave Shape/ Noise".(page 160)
- 7) When no problems are found with items 1) through 6), replace the indoor unit board or the MA remote controller.  
The following status can be confirmed on LED1 and 2 on the indoor unit board.
  - If LED1 is lit, the main power source of the indoor unit is turned on.
  - If LED2 is lit, the MA remote controller line is being powered.

## 1. Error Code

**6832**

### MA remote controller signal transmission error (Synchronization error)

## 2. Error definition and error detection method

- MA remote controller and the indoor unit is not done properly.
- Failure to detect opening in the transmission path and unable to send signals
  - \*Indoor unit : 3 minutes
  - \*Remote controller : 6 seconds

## 3. Cause

- 1) Contact failure of the remote controller lines of MA remote controller or the indoor unit
- 2) 2 or more remote controllers are set to MAIN
- 3) Overlapped indoor unit address
- 4) Noise interference on the remote controller lines
- 5) Failure to meet wiring regulations
  - Wire length
  - Wire size
  - Number of remote controllers
  - Number of indoor units
- 6) Problems with the circuit on the remote controller that sends or receives the signals from the remote controller

## 4. Check method and remedy

- 1) Check for disconnected or loose transmission lines for the indoor units or MA remote controllers.
- 2) Confirm that the power is supplied to the main power source and the remote controller line.
- 3) Confirm that MA remote controller's capacity limit is not exceeded.
- 4) Check the sub/main setting of the MA remote controllers. One of them must be set to MAIN.
- 5) Diagnose the remote controller (described in the remote controller installation manual).  
[OK]: no problems with the remote controller (check the wiring regulations)  
[NO]: Replace the MA remote controller.  
[6832, 6833, ERC]: Due to noise interference <Go to 6>
- 6) Check wave shape/noise on MA remote controller line by following "IX [3] Investigation of Transmission Wave Shape/ Noise".(page 160)
- 7) When no problems are found with items 1) through 6), replace the indoor unit board or the MA remote controller.  
The following status can be confirmed on LED1 and 2 on the indoor unit board.
  - If LED1 is lit, the main power source of the indoor unit is turned on.
  - If LED2 is lit, the MA remote controller line is being powered.

## 1. Error Code

**6833**

### MA remote controller signal transmission error (Hardware error)

## 2. Error definition and error detection method

- Communication between the MA remote controller and the indoor unit is not done properly.
- An error occurs when the transmitted data and the received data differ for 30 times in a row.

## 3. Cause

- 1) Contact failure of the remote controller lines of MA remote controller or the indoor unit
- 2) 2 or more remote controllers are set to MAIN
- 3) Overlapped indoor unit address
- 4) Noise interference on the remote controller lines
- 5) Failure to meet wiring regulations
  - Wire length
  - Wire size
  - Number of remote controllers
  - Number of indoor units
- 6) Problems with the circuit on the remote controller that sends or receives the signals from the remote controller

## 4. Check method and remedy

- 1) Check for disconnected or loose transmission lines for the indoor units or MA remote controllers.
- 2) Confirm that the power is supplied to the main power source and the remote controller line.
- 3) Confirm that MA remote controller's capacity limit is not exceeded.
- 4) Check the sub/main setting of the MA remote controllers. One of them must be set to MAIN.
- 5) Diagnose the remote controller (described in the remote controller installation manual).  
[OK]: no problems with the remote controller (check the wiring regulations)  
[NO]: Replace the MA remote controller.  
[6832, 6833, ERC]: Due to noise interference <Go to 6>
- 6) Check wave shape/noise on MA remote controller line by following "IX [3] Investigation of Transmission Wave Shape/ Noise".(page 160)
- 7) When no problems are found with items 1) through 6), replace the indoor unit board or the MA remote controller.  
The following status can be confirmed on LED1 and 2 on the indoor unit board.
  - If LED1 is lit, the main power source of the indoor unit is turned on.
  - If LED2 is lit, the MA remote controller line is being powered.



## 1. Error Code

**6834**

**MA controller signal reception error (Start bit detection error)**

## 2. Error definition and error detection method

- Communication between the MA remote controller and the indoor unit is not done properly.
- No proper data has been received for 2 minutes.

## 3. Cause

- 1) Contact failure of the remote controller lines of MA remote controller or the indoor unit.
- 2) All the remote controllers are set to SUB.
- 3) Failure to meet wiring regulations
  - Wire length
  - Wire size
  - Number of remote controllers
  - Number of indoor units
- 4) The remote controller is removed after the installation without turning the power source off.
- 5) Noise interference on the remote controller transmission lines
- 6) Faulty circuit that is on the indoor board and performs transmission/ reception of the signal from the remote controller
- 7) Problems with the circuit on the remote controller that sends or receives the signals from the remote controller

## 4. Check method and remedy

- 1) Check for disconnected or loose transmission lines for the indoor units or MA remote controllers.
- 2) Confirm that the power is supplied to the main power source and the remote controller line.
- 3) Confirm that MA remote controller's capacity limit is not exceeded.
- 4) Check the sub/main setting of the MA remote controllers. One of them must be set to MAIN.
- 5) Diagnose the remote controller (described in the remote controller installation manual).  
[OK]: no problems with the remote controller (check the wiring regulations)  
[NO]: Replace the MA remote controller.  
[6832, 6833, ERC]: Due to noise interference <Go to 6>
- 6) Check wave shape/noise on MA remote controller line by following "IX [3] Investigation of Transmission Wave Shape/ Noise".(page 160)
- 7) When no problems are found with items 1) through 6), replace the indoor unit board or the MA remote controller.  
The following status can be confirmed on LED1 and 2 on the indoor unit board.
  - If LED1 is lit, the main power source of the indoor unit is turned on
  - If LED2 is lit, the MA remote controller line is being powered.

**1. Error Code**

**7100**

**Total capacity error**

**2. Error definition and error detection method**

The model total of indoor units in the system with one outdoor unit exceeds limitations.

**3. Error source, cause, check method and remedy,**

Error source	Cause	Check method and remedy														
Outdoor unit	(1) The model total of indoor units in the system with one outdoor unit exceeds the following table. <table border="1" data-bbox="485 640 802 701" style="margin: 10px auto;"> <thead> <tr> <th>Model</th> <th>Capacity Total</th> </tr> </thead> <tbody> <tr> <td>250 model</td> <td>280</td> </tr> </tbody> </table>	Model	Capacity Total	250 model	280	1) Check the model total (capacity code total) of indoor units connected.  2) Check the model name (capacity code) of the connected indoor unit set by the switch (SW2 on indoor unit board).  When the model name set by the switch is different from that of the unit connected, turn off the power source of the outdoor and the indoor units, and change the setting of the model name (capacity code).										
Model	Capacity Total															
250 model	280															
	(2) The model selection switches (SW5-1 - 5-4) on the outdoor unit are set incorrectly. <table border="1" data-bbox="478 960 809 1061" style="margin: 10px auto;"> <thead> <tr> <th rowspan="2">Model</th> <th colspan="4">SW5</th> </tr> <tr> <th>1</th> <th>2</th> <th>3</th> <th>4</th> </tr> </thead> <tbody> <tr> <td>250 model</td> <td>ON</td> <td>ON</td> <td>OFF</td> <td>OFF</td> </tr> </tbody> </table>	Model	SW5				1	2	3	4	250 model	ON	ON	OFF	OFF	Check the setting for the model selection switch on the outdoor unit (Dipswitches SW5-1 - 5-4 on the outdoor unit control board).
Model	SW5															
	1	2	3	4												
250 model	ON	ON	OFF	OFF												

**1. Error Code**

**7101**

**Capacity code setting error**

**2. Error definition and error detection method**

Connection of incompatible (wrong capacity code) indoor unit or outdoor unit

**3. Error source, cause, check method and remedy**

Error source	Cause	Check method and remedy															
Outdoor unit Indoor unit	(1) The model name (capacity code) set by the switch (SW2) is wrong.  *The capacity of the indoor unit can be confirmed by the self-diagnosis function (SW1 operation) of the outdoor unit.	1) Check the model name (capacity code) of the indoor unit which has the error source address set by the switch (SW2 on indoor unit board). When the model name set by the switch is different from that of the unit connected, turn off the power source of the outdoor and the indoor units, and change the setting of the capacity code.															
Outdoor unit	(2) The model selection switches (SW5-1 - 5-4) on the outdoor unit are set incorrectly.  <table border="1" data-bbox="469 846 799 947" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th data-bbox="469 846 560 882">Model</th> <th colspan="4" data-bbox="560 846 799 882">SW5</th> </tr> <tr> <td data-bbox="469 882 560 913"></td> <th data-bbox="560 882 624 913">1</th> <th data-bbox="624 882 687 913">2</th> <th data-bbox="687 882 751 913">3</th> <th data-bbox="751 882 799 913">4</th> </tr> </thead> <tbody> <tr> <td data-bbox="469 913 560 947">250 model</td> <td data-bbox="560 913 624 947">ON</td> <td data-bbox="624 913 687 947">ON</td> <td data-bbox="687 913 751 947">OFF</td> <td data-bbox="751 913 799 947">OFF</td> </tr> </tbody> </table>	Model	SW5					1	2	3	4	250 model	ON	ON	OFF	OFF	Check the setting for the model selection switch on the outdoor unit (Dipswitches SW5-1 - 5-4 on the outdoor unit control board).
Model	SW5																
	1	2	3	4													
250 model	ON	ON	OFF	OFF													

1. Error Code

**7102**

**Wrong number of connected units**

2. Error definition and error detection method

- The number of connected indoor units is "0" or exceeds the allowable value.
- The address setting for the indoor unit is incorrect.

3. Error source, cause, check method and remedy

Error source	Cause	Check method and remedy						
Outdoor unit	(1) Number of indoor units connected to the outdoor terminal block (TB3) for indoor/ outdoor transmission lines exceeds limitations described below. <table border="1" style="margin: 10px auto; border-collapse: collapse;"> <thead> <tr> <th style="font-size: small;">Number of units</th> <th style="font-size: small;">Restriction on the number of units</th> </tr> </thead> <tbody> <tr> <td style="font-size: small;">Total number of indoor units</td> <td style="text-align: center;">1 : 250 model</td> </tr> <tr> <td style="font-size: small;">Total number of outdoor units</td> <td style="text-align: center;">1</td> </tr> </tbody> </table>	Number of units	Restriction on the number of units	Total number of indoor units	1 : 250 model	Total number of outdoor units	1	1) Check whether the number of units connected to the outdoor terminal block (TB3) for indoor/ outdoor transmission lines does not exceed the limitation. (See (1) and (2) on the left.)
	Number of units	Restriction on the number of units						
	Total number of indoor units	1 : 250 model						
	Total number of outdoor units	1						
(2) Disconnected transmission line of the outdoor unit	2) Check (2) - (3) on the left.							
(3) Short-circuited transmission line When (2) and (3) apply, the following display will appear. <ul style="list-style-type: none"> <li>•MA remote controller "HO" is blinking.</li> </ul>	3) Check whether the transmission line for the terminal block for centralized control (TB7) is not connected to the terminal block for the indoor/outdoor transmission line (TB3).							
(4) The indoor unit address is not set to an address that equals "outdoor unit address minus 50."	4) Check items (4) on the left.							

**1. Error Code**

**7105**

**Address setting error**

**2. Error definition and error detection method**

Erroneous setting of OC unit address

**3. Cause, check method and remedy**

Error source	Cause	Check method and remedy
Outdoor unit	Erroneous setting of OC unit address The address of outdoor unit is not being set to 51 - 100.	Check that the address of OC unit is set to 51-100. Reset the address if it stays out of the range, while shutting the power source off.

**1. Error Code**

**7110**

**Connection information signal transmission/reception error**

**2. Error definition and error detection method**

The given indoor unit is inoperable because it is not properly connected to the outdoor unit in the same system.

**3. Error source, cause, check method and remedy**

Error source	Cause	Check method and remedy
Outdoor unit	(1) Power to the transmission booster is cut off.  (2) Power resetting of the transmission booster and outdoor unit.	1) Confirm that the power to the transmission booster is not cut off by the booster being connected to the switch on the indoor unit. (The unit will not function properly unless the transmission booster is turned on.)  ->Reset the power to the outdoor unit.

**1. Error Code**

**7111**

**Remote controller sensor fault**

**2. Error definition and error detection method**

This error occurs when the temperature data is not sent although the remote controller sensor is specified.

**3. Error source, cause, check method and remedy**

Error source	Cause	Check method and remedy
Indoor unit OA processing unit	The remote controller without the temperature sensor (the wireless remote controller or the M-NET compact remote controller (mounted type)) is used and the remote controller sensor for the indoor unit is specified. (SW1-1 is ON.)	Replace the remote controller with the one with built-in temperature sensor.

**1. Error Code**

**7113**

**Function setting error**

**2. Error source, cause, check method and remedy**

Error source	Cause	Check method and remedy
Outdoor unit	(1) Wiring failure	1) Control board connector Check the CNTYP2,4,5 connector connection.
	(2) Disconnected connector, short circuit, contact failure	2) Check the compatibility of the circuit board, and replace it with a correct one if necessary.
	(3) Incompatibility between the control board and INV board (Replacement of the circuit board with the wrong one)	3) Check the model selection switch on the outdoor unit (Dipswitch SW5-7 on the control board.).

**1. Error Code**

**7117**

**Model setting error**

**2. Error source, cause, check method and remedy**

Error source	Cause	Check method and remedy
Outdoor unit	(1) Wiring failure	1) Control board connector Check the CNTYP2,4,5 connector connection.
	(2) Disconnected connector, short circuit, contact failure	

**1. Error Code**

**7130**

**Incompatible unit combination**

**2. Error definition and error detection method**

The check code will appear when the indoor units with different refrigerant systems are connected.


**3. Error source, cause, check method and remedy**

Error source	Cause	Check method and remedy
Outdoor unit	(1) The connected indoor unit is for use with R22 or R407C.	1) Check the connected indoor unit model.
	(2) Incorrect type of indoor units are connected.	

## **-1- Troubleshooting according to the remote controller malfunction or the external input error**

### **In the case of MA remote controller**

#### **1. Phenomena**

Even if the operation button on the remote controller is pressed, the display remains unlit and the unit does not start running. (Power indicator  does not appear on the screen.)

#### **(1) Cause**

- 1) The power is not supplied to the indoor unit.
  - The main power of the indoor unit is not on.
  - The connector on the indoor unit board has come off.
  - The fuse on the indoor unit board has melted.
  - Transformer failure and disconnected wire of the indoor unit.
- 2) Incorrect wiring for the MA remote controller
  - Disconnected wire for the MA remote controller or disconnected line to the terminal block.
  - Short-circuited MA remote controller wiring
  - Incorrect wiring of the MA remote controller cables
  - Incorrect connection of the MA remote wiring to the terminal block for transmission line (TB5) on the indoor unit
  - Wiring mixup between the MA remote controller cable and 200 VAC power supply cable
  - Reversed connection of the wire for the MA remote controller and the M-NET transmission line on the indoor unit
- 3) The number of the MA remote controllers that are connected to an indoor unit exceeds the allowable range (2 units).
- 4) The length or the diameter of the wire for the MA remote controller are out of specification.
- 5) Short circuit of the wire for the remote display output of the outdoor unit or reversed polarity connection of the relay.
- 6) The indoor unit board failure
- 7) MA remote controller failure

#### **(2) Check method and remedy**

- 1) Measure voltages of the MA remote controller terminal (among 1 to 3).
  - If the voltage is between DC 9 and 12V, the remote controller is a failure.
  - If no voltage is applied, check the causes 1) and 3) and if the cause is found, correct it.
  - If no cause is found, refer to 2).
- 2) Remove the wire for the remote controller from the terminal block (TB13) on the MA remote controller for the indoor unit, and check voltage among 1 to 3.
  - If the voltage is between DC 9 and 12 V, check the causes 2) and 4) and if the cause is found, correct it.
  - If no voltage is applied, check the cause 1) and if the cause is found, correct it.
  - If no cause is found, check the wire for the remote display output (relay polarity).
  - If no further cause is found, replace the indoor unit board.

**In the case of MA remote controller**

**2. Phenomena**


When the remote controller operation SW is turned on, the operation status briefly appears on the display, then it goes off, and the display lights out immediately, and the unit stops.

**(1) Cause**

- 1) The power for the M-NET transmission line is not supplied from the outdoor unit.
- 2) Short circuit of the transmission line.
- 3) Incorrect wiring of the M-NET transmission line on the outdoor unit.
  - Disconnected wire for the MA remote controller or disconnected line to the terminal block.
  - The indoor transmission line is connected incorrectly to the transmission terminal block for centralized controller (TB7).
- 4) Disconnected M-NET transmission line on the indoor unit side.
- 5) Disconnected wire between the terminal block for M-NET line (TB5) of the indoor unit and the indoor unit board (CN2M) or disconnected connector.

**(2) Check method and remedy**

- 1) **When 2) and 3) above apply, check code 7102 will be displayed on the self-diagnosis LED.**

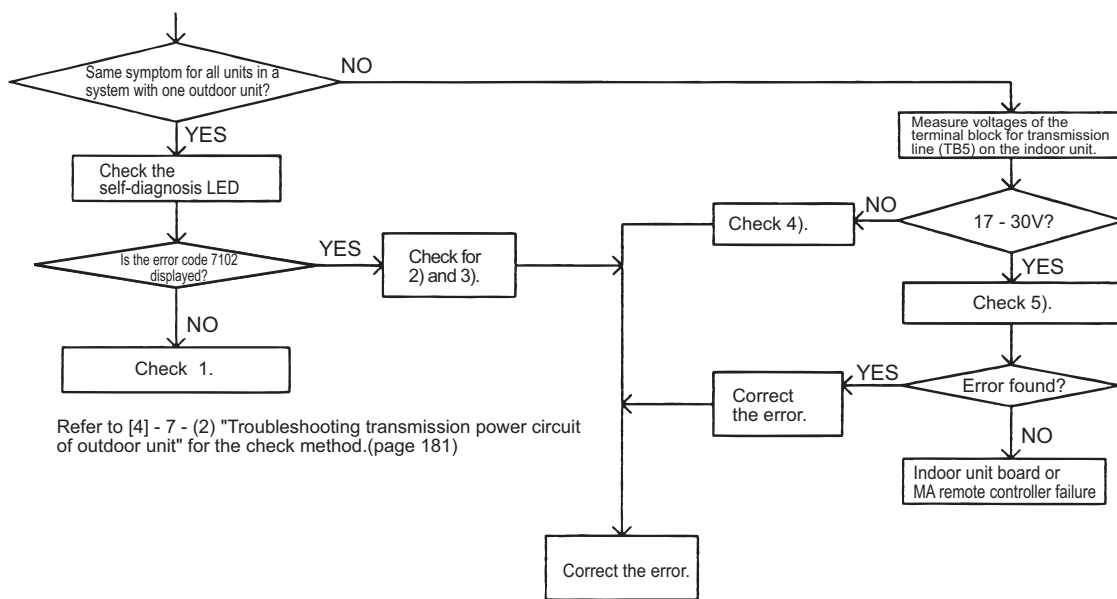



**In the case of MA remote controller**

**3. Phenomena**

"HO" stays lit on the remote controller display, and the buttons do not work. (Normally, "HO" goes off approximately after 5 minutes of power on.)


**(1) Cause**

- 1) The power for the M-NET transmission line is not supplied from the outdoor unit.
- 2) Short-circuited transmission line
- 3) Incorrect wiring of the M-NET transmission line on the outdoor unit.
  - Disconnected wire for the MA remote controller or disconnected line to the terminal block.
  - The indoor transmission line is connected incorrectly to the transmission terminal block for centralized controller (TB7).
  - The male power supply connectors on the multiple outdoor units are connected to the female power supply switch connector (CN40).

In the system to which the power supply unit for transmission lines is connected, the male power supply connector is connected to the female power supply switch connector (CN40) on the outdoor unit
- 4) Disconnected M-NET transmission line on the indoor unit.
- 5) Disconnected wire between the terminal block for M-NET line (TB5) of the indoor unit and the indoor unit board (CN2M) or disconnected connector.
- 6) Incorrect wiring for the MA remote controller
  - Short-circuited wire for the MA remote controller
  - Disconnected wire for the MA remote controller (No.2) and disconnected line to the terminal block.
  - Reversed daisy-chain connection between groups
  - Incorrect wiring for the MA remote controller to the terminal block for transmission line connection (TB5) on the indoor unit
  - The M-NET transmission line is connected incorrectly to the terminal block (TB13) for the MA remote controller.
- 7) The sub/main setting of the MA remote controller is set to sub.
- 8) 2 or more main MA remote controllers are connected.
- 9) Indoor unit board failure (MA remote controller communication circuit)
- 10) Remote controller failure
- 11) Outdoor unit failure (Refer to IX [7] Troubleshooting Using the Outdoor Unit LED Error Display.)(page 185)
- 12) The outdoor unit address is set to an address other than "indoor unit address plus 50."
- 13) The indoor unit address is set to a number 51 or higher.


**(2) Check method and remedy**

- 1) **When 2) and 3) above apply, check code 7102 will be displayed on the self-diagnosis LED.**

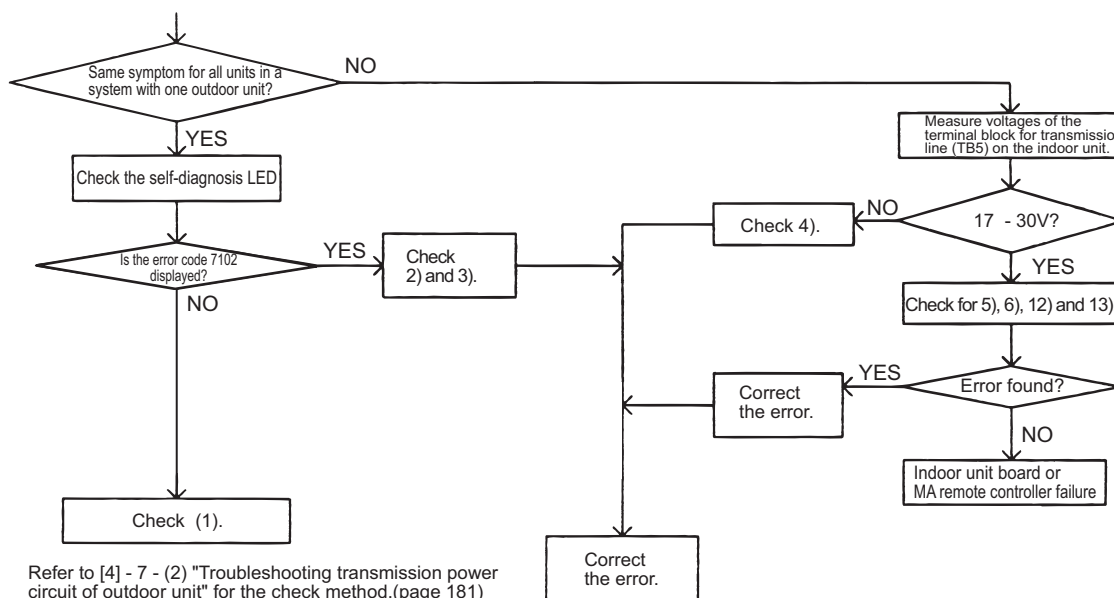

Flow chart

Even if the operation button on the remote controller is pressed, the indoor and the outdoor units do not start running.

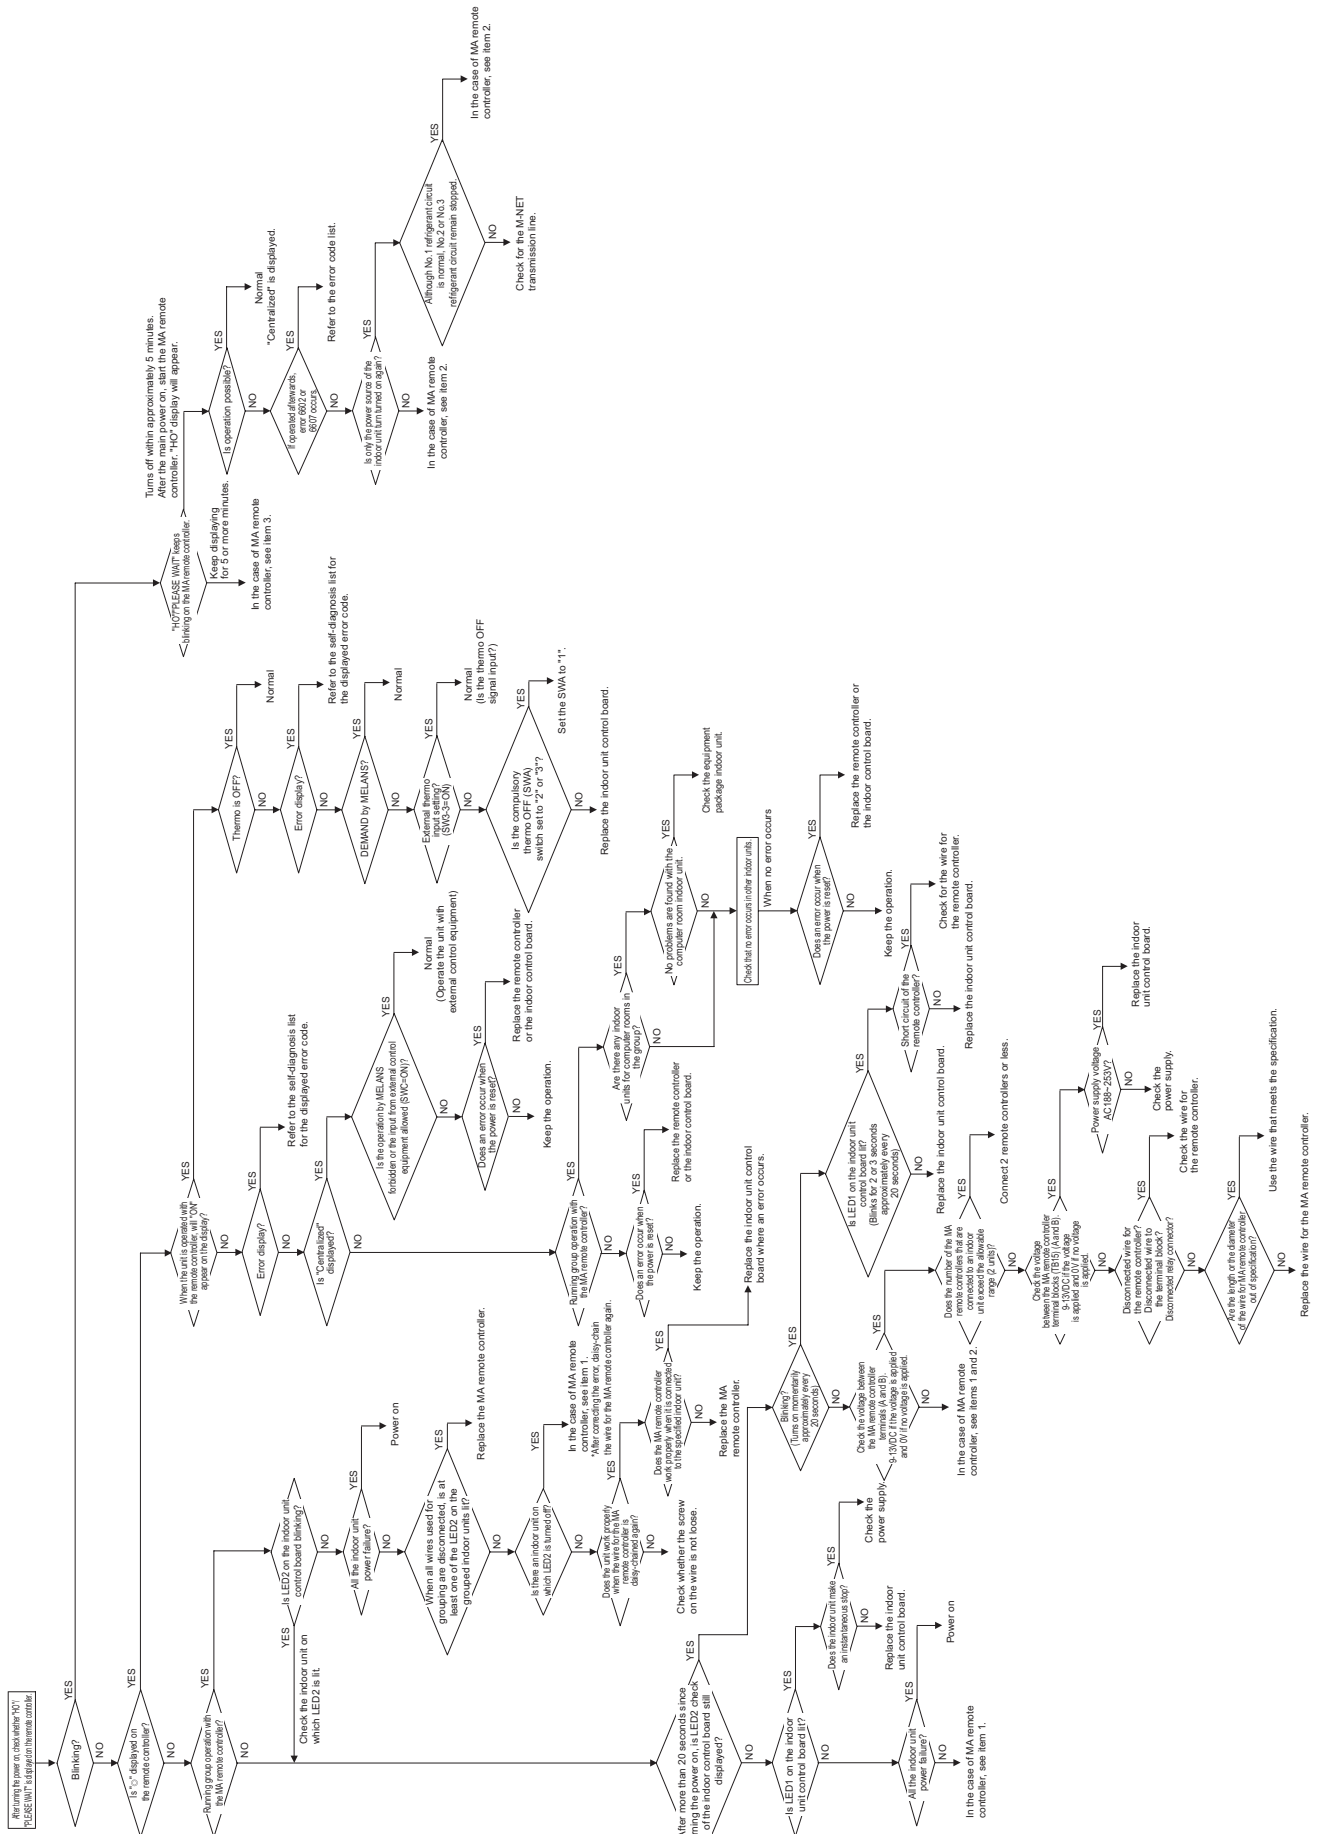



**System controller**

**1. Phenomena**

Although cooling operation starts with the normal remote controller display, the capacity is not enough

**(1) Cause, check method and remedy**





Cause	Check method and remedy
<p>1. Compressor frequency does not rise sufficiently.</p> <ul style="list-style-type: none"> <li>◆Inaccurate TH22 (Te) temperature reading</li> <li>◆Protection works and compressor frequency does not rise due to high discharge temperature</li> <li>◆Protection works and compressor frequency does not rise due to high pressure</li> <li>◆Pressure drops excessively.</li> </ul>	<p>(1) Check the difference between the temperature reading by TH22 on the LED monitor and the actual temperature. -&gt; Check the thermistor if there is a problem with the temperature reading. (Refer to the section that corresponds to error code 5102.)</p> <p>Note: If the TH22 reading is lower than the actual temperature, the units are operating at a lower performance level than it should.</p> <p>(2) Check temperature difference between the evaporating temperature (Te) and the target evaporating temperature (Tem) with self-diagnosis LED.</p> <p>Note: Higher Te than Tem causes insufficient capacity. SW1 setting</p> <p>Evaporating temperature Te</p>  <p>Target evaporating temperature Tem</p>  <p>Note: Protection works and compressor frequency does not rise even at higher Te than Tem due to high discharge temperature and high pressure. At high discharge temperature: Refer to 1102.(page 113) At high pressure: Refer to 1302.(page 115)</p>
<p>2. Indoor unit LEV malfunction</p> <ul style="list-style-type: none"> <li>◆Insufficient refrigerant flows due to LEV malfunction (not enough opening) or protection works and compressor frequency does not rise due to pressure drop.</li> </ul>	<p>Refer to the page of LEV troubleshooting ([4] -5-).(page 167)</p>
<p>3. RPM error of the outdoor unit FAN</p> <ul style="list-style-type: none"> <li>◆Motor failure or board failure, or airflow rate decrease due to clogging of the heat exchanger</li> <li>◆The fan is not properly controlled as the outdoor temperature cannot be precisely detected by the temperature sensor.</li> <li>◆The fan is not properly controlled as the pressure cannot be precisely detected by the pressure sensor.</li> </ul>	<p>Refer to the page on troubleshooting of the outdoor unit fan. Refer to 5106.(page 128) Refer to 1302.(page 115)</p>

Cause	Check method and remedy
4. Long piping length The cooling capacity varies greatly depending on the pressure loss. (When the pressure loss is large, the cooling capacity drops.)	Check the piping length to determine if it is contributing to performance loss. Piping pressure loss can be estimated from the temperature difference between the indoor unit heat exchanger outlet temperature and the saturation temperature (Te) of 63LS. ->Correct the piping.
5. Piping size is not proper (thin)	
6. Insufficient refrigerant amount Protection works and compressor frequency does not rise due to high discharge temperature.	Refer to 1-1. (Compressor frequency does not rise sufficiently.)Refer to the page on refrigerant amount adjustment
7. Clogging by foreign object	Check the temperature difference between in front of and behind the place where the foreign object is clogging the pipe (upstream side and downstream side). When the temperature drops significantly, the foreign object may clog the pipe. -> Remove the foreign object inside the pipe.
8. The indoor unit inlet temperature is excessively. (Less than 11°C [52°F] WB)	Check the inlet air temperature and for short cycling. Change the environment where the indoor unit is used.
9. Compressor failure The amount of circulating refrigerant decreases due to refrigerant leak in the compressor.	Check the discharge temperature to determine if the refrigerant leaks, as it rises if there is a leak.
10. LEV1 malfunction Sufficient liquid refrigerant is not be supplied to the indoor unit as sufficient sub cool cannot be secured due to LEV1 malfunction.	Refer to the page of LEV troubleshooting ([4] -5-).(page 167) It most likely happens when there is little difference or no difference between TH3 and TH6.
11. TH3, TH6 and 63HS1 sensor failure or faulty wiring LEV1 is not controlled normally.	<ul style="list-style-type: none"> <li>•Check the thermistor.</li> <li>•Check wiring.</li> </ul>
12. LEV2 actuation failure A drop in the low pressure that is caused either by a blockage of liquid pipe or by a pressure loss and the resultant slowing of refrigerant flow causes a tendency for the discharge temperature to rise.	Refer to the page on troubleshooting the LEV ([4] -5-).(page 167)
13. Dirty heat exchanger, short cycling	

**2. Phenomena**

Although heating operation starts with the normal remote controller display, the capacity is not enough.

**(1) Cause, check method and remedy**

Cause	Check method and remedy
<p>1. Compressor frequency does not rise sufficiently.</p> <ul style="list-style-type: none"> <li>♦Faulty detection of pressure sensor.</li> <li>♦Protection works and compressor frequency does not rise due to high discharge temperature</li> <li>♦Protection works and compressor frequency does not rise due to high pressure.</li> </ul>	<p>(1) Check pressure difference between the detected pressure by the pressure sensor and the actual pressure with self-diagnosis LED.                      -&gt; If the accurate pressure is not detected, check the pressure sensor.(Refer to the page on Troubleshooting of Pressure Sensor)</p> <p>Note: Higher inlet pressure by the high pressure sensor than the actual pressure causes insufficient capacity.                      SW1 setting</p> <p>High pressure sensor</p>  <p>Low pressure sensor</p>  <p>(2) Check the difference between the condensing temperature (Tc) and the target condensing temperature (Tcm) with self-diagnosis LED.</p> <p>Note: Higher Tc than Tcm causes insufficient capacity.                      SW1 setting</p> <p>Condensing temperature Tc</p>  <p>Target condensing temperature Tcm</p>  <p>Note: Protection works and compressor frequency does not rise even at lower Tc than Tcm due to high discharge temperature and high pressure.                      At high discharge temperature:                      Refer to 1102.(page 113)                      At high pressure:                      Refer to 1302.(page 115)</p>

Cause	Check method and remedy
2. Indoor unit LEV malfunction Insufficient refrigerant flows due to LEV malfunction (not enough opening).	Refer to the page of LEV troubleshooting ([4] -5-).(page 167)
3. Temperature reading error on the indoor unit piping temperature sensor If the temperature reading on the sensor is higher than the actual temperature, it makes the subcool seem smaller than it is, and the LEV opening decreases too much.	Check the thermistor.
4. RPM error of the outdoor unit FAN  •Motor failure or board failure, or airflow rate decrease, pressure drop due to clogging of the heat exchanger leading to high discharge temperature •The fan is not properly controlled as the temperature cannot be precisely detected with the piping sensor.	Refer to the page on outdoor unit fan ([4] -4-).(page 166)
5. Insulation failure of the refrigerant piping	
6. Long piping length Excessively long piping on the high pressure side causes pressure loss leading to increase in the high pressure.	Confirm that the characteristic of capacity drop due to piping length. -> Change the pipe
7. Piping size is not proper (thin)	
8. Clogging by foreign object	Check the temperature difference between the upstream and the downstream of the pipe section that is blocked. Since blockage in the extended section is difficult to locate, operate the unit in the cooling cycle, and follow the same procedures that are used to locate the blockage of pipe during cooling operation. ->Remove the blockage in the pipe.
9. The indoor unit inlet temperature is excessively high.(exceeding 28°C [82°F])	Check the inlet air temperature and for short cycling. Change the environment where the indoor unit is used.
10. Insufficient refrigerant amount Protection works and compressor frequency does not rise due to low discharge temperature Refrigerant recovery operation is likely to start.	Refer to 2 - 1. (Compressor frequency does not rise sufficiently).(page 154) Refer to the page on refrigerant amount adjustment.(page 101)
11. Compressor failure (same as in case of cooling)	Check the discharge temperature.
12. LEV2 actuation failure A drop in the low pressure that is caused either by a blockage of liquid pipe or by a pressure loss and the resultant slowing of refrigerant flow causes a tendency for the discharge temperature to rise.	Refer to the page on troubleshooting the LEV ([4] -5-).(page 167)


### 3. Phenomena

Outdoor unit stops at times during operation.

#### (1) Cause, check method and remedy

Cause	Check method and remedy
<p>The first stop is not considered as an error, as the unit turns to anti-restart mode for 3 minutes as a preliminary error.</p> <p><b>Error mode</b></p> <p>1) Abnormal high pressure</p> <p>2) Abnormal discharge air temperature</p> <p>3) Heatsink thermistor failure</p> <p>4) Thermistor failure</p> <p>5) Pressure sensor failure</p> <p>6) Over-current break</p> <p>7) Refrigerant overcharge</p> <p>Note1: Frost prevention tripping only under cooling mode may be considered in addition to the above. (Freeze protection is detected by one or all indoor units.)</p> <p>Note2: Even the second stop is not considered as an error when some specified errors occur. (eg. The third stop is considered as an error when the thermistor error occurs.)</p>	<p>(1) Check the mode operated in the past by displaying preliminary error history on LED display with SW1.</p> <p>(2) Reoperate the unit to find the mode that stops the unit by displaying preliminary error history on LED display with SW1. Refer to the reference page for each error mode.</p> <p>*Display the indoor piping temperature table with SW1 to check whether the freeze proof operation runs properly, and check the temperature.</p>

**In case of external input (including operation mode)**

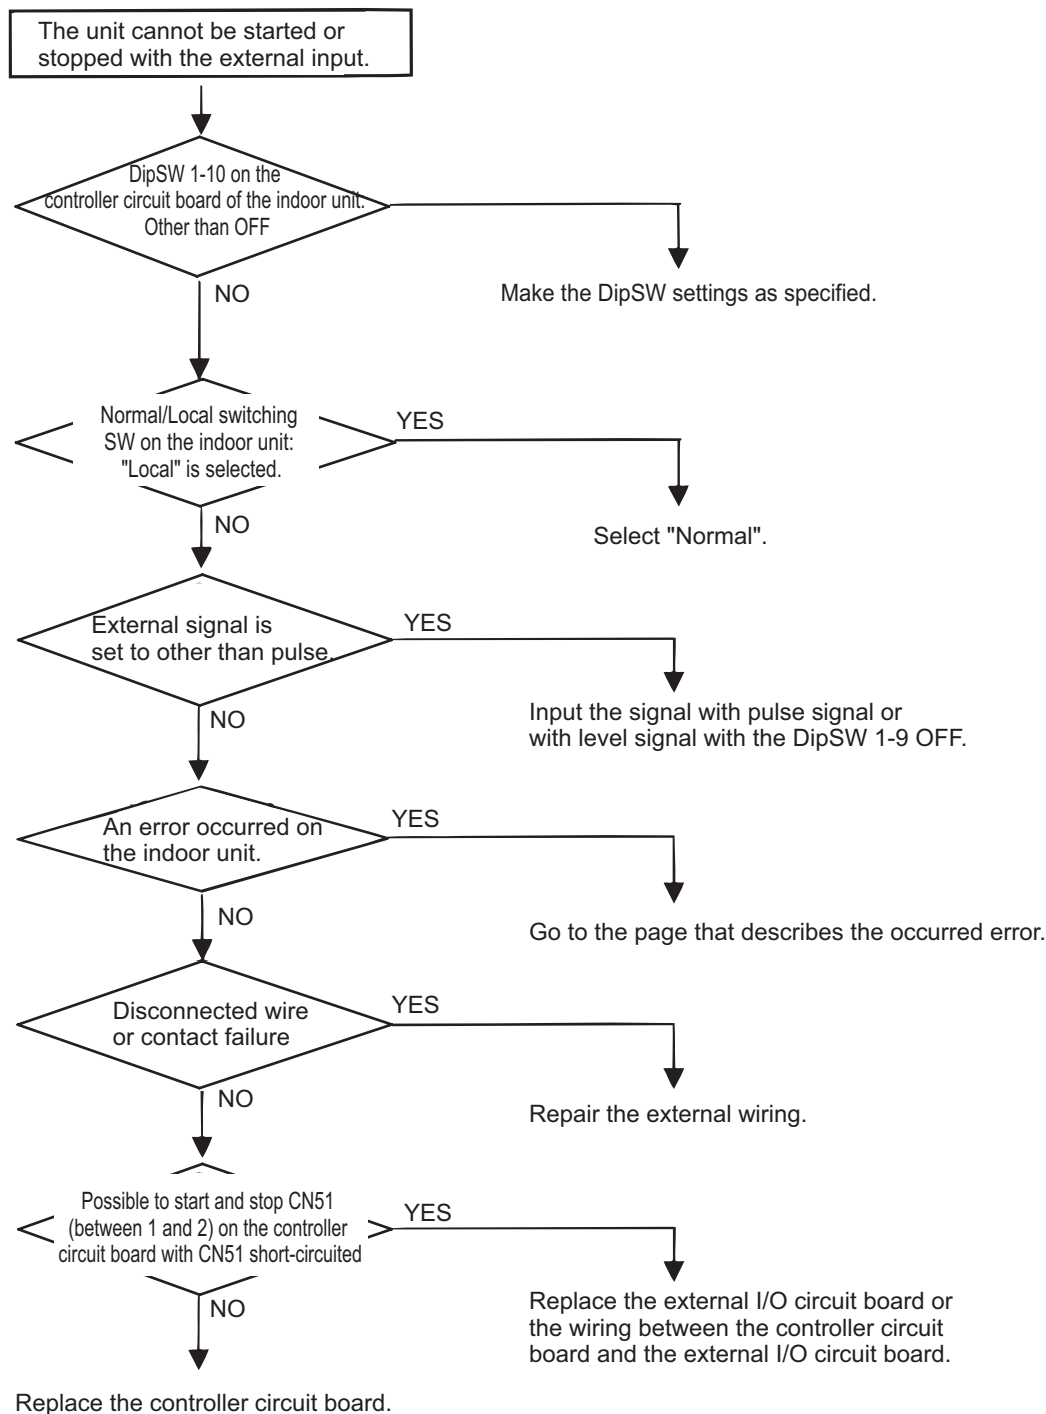



### [3] Investigation of Transmission Wave Shape/Noise


#### 1. M-NET transmission

Control is performed by exchanging signals between the outdoor unit and the indoor unit (M-NET remote controller) through M-NET transmission. Noise interference on the transmission line will interrupt the normal transmission, leading to erroneous operation.

#### (1) Symptoms caused by noise interference on the transmission line

Cause	Erroneous operation	Error code	Error code definition
Noise interference on the transmission line	Signal is transformed and will be misjudged as the signal of another address.	6600	Address overlap
	Transmission wave pattern is transformed due to the noise creating a new signal	6602	Transmission processor hardware error
	Transmission wave pattern is transformed due to the noise, and will not be received normally leading to no acknowledgement (ACK).	6607	No ACK error
	Transmission cannot be performed due to the fine noise.	6603	Transmission line bus busy error
	Transmission is successful; however, the acknowledgement (ACK) or the response cannot be received normally due to the noise.	6607 6608	No ACK error No response error

#### (2) Wave shape check

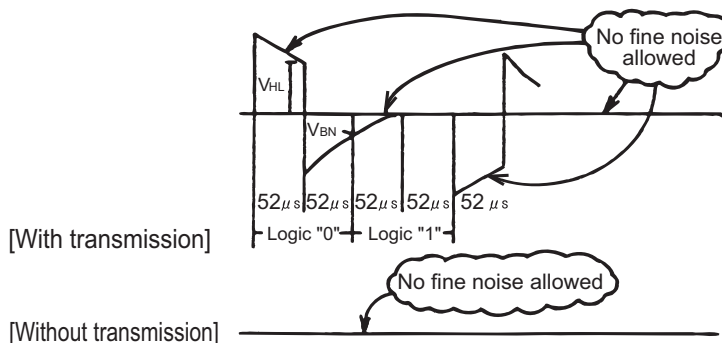

#### Wave shape check

Check the wave pattern of the transmission line with an oscilloscope. The following conditions must be met.

- Small wave pattern (noise) must not exist on the transmission signal. (Minute noise (approximately 1V) can be generated by DC-DC converter or the inverter operation; however, such noise is not a problem when the shield of the transmission line is grounded.)
- The sectional voltage level of transmission signal should be as follows.

Logic	Voltage level of the transmission line
0	V <sub>HL</sub> = 2.5V or higher
1	V <sub>BN</sub> = 1.3V or below

**(3) Check method and remedy**

1) Measures against noise

Check the followings when noise exists on the wave or the errors described in (1) occur.

	Error code definition	Remedy
Check that the wiring work is performed according to wiring specifications.	1. The transmission line and the power line are not wired too closely.	Isolate the transmission line from the power line (5cm [1-31/32"] or more). Do not insert them in the same conduit.
	2. The transmission line is not bundled with that for another systems.	The transmission line must be isolated from another transmission line. When they are bundled, erroneous operation may be caused.
	3. The specified wire is used for the transmission line.	Use the specified transmission line. Type: Shielded wire CVVS/CPEVS/MVVS (For M-NET remote controller) Diameter: 1.25mm <sup>2</sup> [AWG16] or more (Remote controller wire: 0.3 - 1.25mm <sup>2</sup> [AWG22-16])
	4. When the transmission line is daisy-chained on the indoor unit terminals, are the shields daisy-chained on the terminals, too?	The transmission is two-wire daisy-chained. The shielded wire must be also daisy-chained. When the shielded cable is not daisy-chained, the noise cannot be reduced enough.
Check that the grounding work is performed according to grounding specifications.	5. Is the shield of the indoor-outdoor transmission cable grounded to the earth terminal on the outdoor unit?	Connect the shield of the indoor-outdoor transmission cable to the earth terminal (♣) on the outdoor unit. If no grounding is provided, the noise on the transmission line cannot escape leading to change of the transmission signal.
	6. Check the treatment method of the shield of the transmission line (for centralized control).	The transmission cable for centralized control is less subject to noise interference if it is grounded to the outdoor unit whose power jumper cable was moved from CN41 to CN40 or to the power supply unit. The environment against noise varies depending on the distance of the transmission lines, the number of the connected units, the type of the controllers to be connected, or the environment of the installation site. Therefore, the transmission line work for centralized control must be performed as follows.  1. When no grounding is provided: Ground the shield of the transmission cable by connecting to the outdoor unit whose power jumper connector was moved from CN41 to CN40 or to the power supply unit.  2. When an error occurs even though one point grounding is provided: Ground the shield on all outdoor units.

2) Check the followings when the error "6607" occurs, or "HO" appears on the display on the remote controller.

Error code definition	Remedy
7. The farthest distance of transmission line is 200m [656ft] or longer.	Check that the farthest distance from the outdoor unit to the indoor unit and to the remote controller is within 200m [656ft].
8. The types of transmission lines are different.	Use the specified transmission line. Type: Shielded wire CVVS/CPEVS/MVVS (For M-NET remote controller) Diameter: 1.25mm <sup>2</sup> [AWG16] or more (Remote controller wire: 0.3-1.25mm <sup>2</sup> [AWG22-16])
9. Outdoor unit circuit board failure	Replace the outdoor unit control board or the power supply board for the transmission line.
10. Indoor unit circuit board failure or remote controller failure	Replace the indoor unit circuit board or the remote controller.
11. The MA remote controller is connected to the M-NET transmission line.	Connect the MA remote controller to the terminal block for MA remote controller (TB15).



**2. MA remote controller transmission**

The communication between the MA remote controller and the indoor unit is performed with current tone burst.

**(1) Symptoms caused by noise interference on the transmission line**

If noise is generated on the transmission line, and the communication between the MA remote controller and the indoor unit is interrupted for 3 minutes in a row, MA transmission error (6831) will occur.

**(2) Confirmation of transmission specifications and wave pattern**

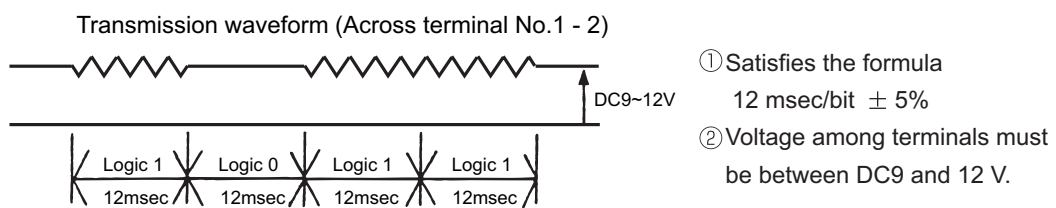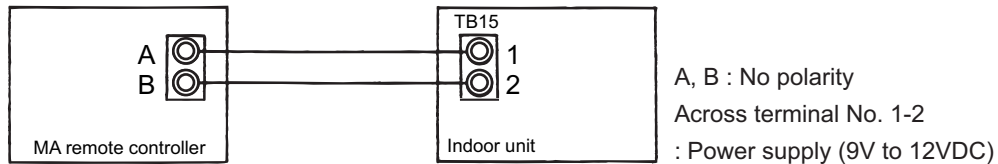


## [4] Troubleshooting Principal Parts

### -1- High-Pressure Sensor (63HS1)

**1. Compare the pressure that is detected by the high pressure sensor, and the high-pressure gauge pressure to check for failure.**

By configuring the digital display setting switch (SW1) as shown in the figure below, the pressure as measured by the high-pressure sensor appears on the LED1 on the control board.



**(1) While the sensor is stopped, compare the gauge pressure and the pressure displayed on self-diagnosis LED1.**

- 1) When the gauge pressure is between 0 and 0.098MPa [14psi], internal pressure is caused due to gas leak.
- 2) When the pressure displayed on self-diagnosis LED1 is between 0 and 0.098MPa [14psi], the connector may be defective or be disconnected. Check the connector and go to (4).
- 3) When the pressure displayed on self-diagnosis LED1 exceeds 4.15MPa [601psi], go to (3).
- 4) If other than 1), 2) or 3), compare the pressures while the sensor is running. Go to (2).

**(2) Compare the gauge pressure and the pressure displayed on self-diagnosis LED1 while the sensor is running. (Compare them by MPa [psi] unit.)**

- 1) When the difference between both pressures is within 0.098MPa [14psi], both the high pressure sensor and the control board are normal.
- 2) When the difference between both pressures exceeds 0.098MPa [14psi], the high pressure sensor has a problem. (performance deterioration)
- 3) When the pressure displayed on self-diagnosis LED1 does not change, the high pressure sensor has a problem.

**(3) Remove the high pressure sensor from the control board to check the pressure on the self-diagnosis LED1.**

- 1) When the pressure displayed on self-diagnosis LED1 is between 0 and 0.098MPa [14psi], the high pressure sensor has a problem.
- 2) When the pressure displayed on self-diagnosis LED1 is approximately 4.15MPa [601psi], the control board has a problem.

**(4) Remove the high pressure sensor from the control board, and short-circuit between the No.2 and 3 connectors (63HS1) to check the pressure with self-diagnosis LED1.**

- 1) When the pressure displayed on the self-diagnosis LED1 exceeds 4.15MPa [601psi], the high pressure sensor has a problem.
- 2) If other than 1), the control board has a problem.



### 2. High-pressure sensor configuration

The high pressure sensor consists of the circuit shown in the figure below. If DC 5V is applied between the red and the black wires, voltage corresponding to the pressure between the white and the black wires will be output, and the value of this voltage will be converted by the microcomputer. The output voltage is 0.071V per 0.098MPa [14psi].

**Note**

The pressure sensor on the body side is designed to connect to the connector. The connector pin number on the body side is different from that on the control board side.


	Body side	Control board side
Vcc	Pin 1	Pin 3
Vout	Pin 2	Pin 2
GND	Pin 3	Pin 1

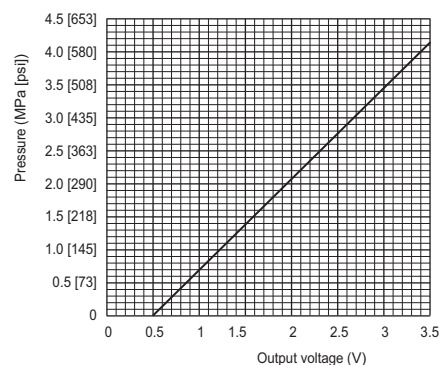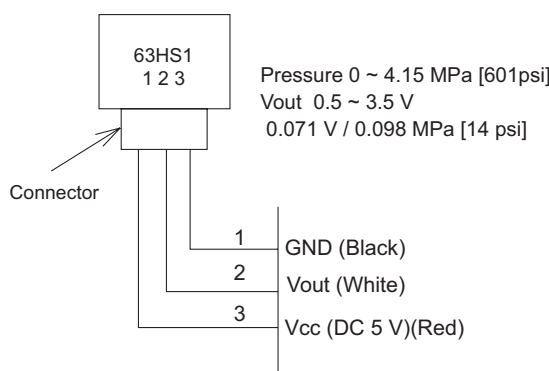

## -2- Low-Pressure Sensor (63LS)

### 1. Compare the pressure that is detected by the low pressure sensor, and the low pressure gauge pressure to check for failure.

By configuring the digital display setting switch (SW1) as shown in the figure below, the pressure as measured by the low-pressure sensor appears on the LED1 on the control board.



#### (1) While the sensor is stopped, compare the gauge pressure and the pressure displayed on self-diagnosis LED1.

- 1) When the gauge pressure is between 0 and 0.098MPa [14psi], internal pressure is caused due to gas leak.
- 2) When the pressure displayed on self-diagnosis LED1 is between 0 and 0.098MPa [14psi], the connector may be defective or be disconnected. Check the connector and go to (4).
- 3) When the pressure displayed on self-diagnosis LED1 exceeds 1.7MPa [247psi], go to (3).
- 4) If other than 1), 2) or 3), compare the pressures while the sensor is running. Go to (2).

#### (2) Compare the gauge pressure and the pressure displayed on self-diagnosis LED1 while the sensor is running.(Compare them by MPa [psi] unit.)

- 1) When the difference between both pressures is within 0.03MPa [4psi], both the low pressure sensor and the control board are normal.
- 2) When the difference between both pressures exceeds 0.03MPa [4psi], the low pressure sensor has a problem. (performance deterioration)
- 3) When the pressure displayed on the self-diagnosis LED1 does not change, the low pressure sensor has a problem.

#### (3) Remove the low pressure sensor from the control board to check the pressure with the self-diagnosis LED1 display.

- 1) When the pressure displayed on the self-diagnosis LED1 is between 0 and 0.098MPa [14psi], the low pressure sensor has a problem.
- 2) When the pressure displayed on self-diagnosis LED1 is approximately 1.7MPa [247psi], the control board has a problem.
  - When the outdoor temperature is 30°C [86°F] or less, the control board has a problem.
  - When the outdoor temperature exceeds 30°C [86°F], go to (5).

#### (4) Remove the low pressure sensor from the control board, and short-circuit between the No.2 and 3 connectors (63LS:CN202) to check the pressure with the self-diagnosis LED1.

- 1) When the pressure displayed on the self-diagnosis LED1 exceeds 1.7MPa [247psi], the low pressure sensor has a problem.
- 2) If other than 1), the control board has a problem.

#### (5) Remove the high pressure sensor (63HS1) from the control board, and insert it into the connector for the low pressure sensor (63LS) to check the pressure with the self-diagnosis LED1.

- 1) When the pressure displayed on the self-diagnosis LED1 exceeds 1.7MPa [247psi], the control board has a problem.
- 2) If other than 1), the control board has a problem.



### 2. Low-pressure sensor configuration

The low pressure sensor consists of the circuit shown in the figure below. If DC5V is applied between the red and the black wires, voltage corresponding to the pressure between the white and the black wires will be output, and the value of this voltage will be converted by the microcomputer. The output voltage is 0.173V per 0.098MPa [14psi].

#### Note

The pressure sensor on the body side is designed to connect to the connector. The connector pin number on the body side is different from that on the control board side.

	Body side	Control board side
Vcc	Pin 1	Pin 3
Vout	Pin 2	Pin 2
GND	Pin 3	Pin 1

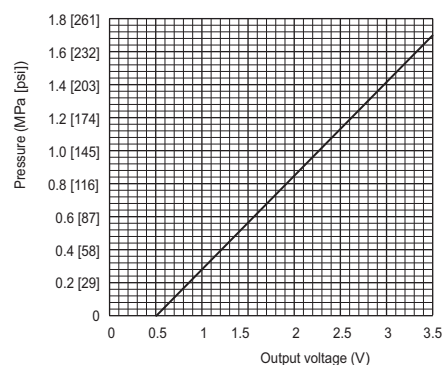
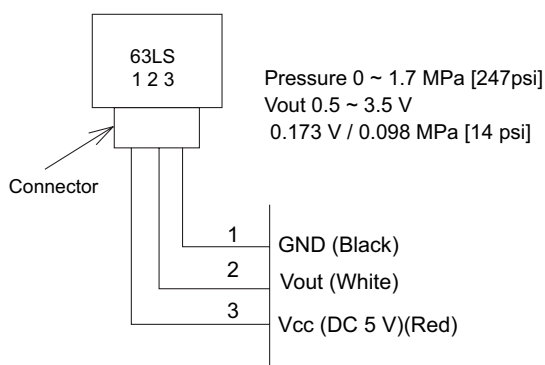


### -3- Solenoid Valve

Check whether the output signal from the control board and the operation of the solenoid valve match. Setting the self-diagnosis switch (SW1) as shown in the figure below causes the ON signal of each relay to be output to the LED's. Each LED shows whether the relays for the following parts are ON or OFF. LEDs light up when relays are ON.

**Note**

The circuits on some parts are closed when the relays are ON. Refer to the following instructions.

SW1		Display							
		LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8
	Upper	21S4a		CH11		SV1a			
	Lower			21S4b	SV5b				
	Upper							SV9	
	Lower								

When a valve malfunctions, check if the wrong solenoid valve coil is not attached the lead wire of the coil is not disconnected, the connector on the board is not inserted wrongly, or the wire for the connector is not disconnected.

**(1) In case of 21S4a (4-way switching valve)**

About this 4-way valve

When not powered:

Conducts electricity between the oil separator outlet and heat exchanger, and between the gas ball valve (BV1) and the accumulator to complete the circuit for the cooling cycle.

When powered:

The electricity runs between the oil separator and the gas ball valve, and between the heat exchanger and the accumulator. This circulation is for heating.

Check the LED display and the intake and the discharge temperature for the 4-way valve to check whether the valve has no faults and the electricity runs between where and where. Do not touch the pipe when checking the temperature, as the pipe on the oil separator side will be hot.

**Note**

Do not give an impact from outside, as the outer hull will be deformed leading to the malfunction of the inner valve.

**(2) In case of 21S4b (4-way switching valve)**

About this 4-way valve

When not powered:

Conducts electricity between the oil separator outlet and the heat exchanger1 (the top heat exchanger) and opens and closes the heat exchanger circuit for the heating and cooling cycles.

When powered:

The electricity runs between the heat exchanger and the accumulator, and the valve opens or closes the heat exchanger circuit when cooling or heating.

Whether the valve has no fault can be checked by checking the LED display and the switching sound; however, it may be difficult to check by the sound, as the switching coincides with 21S4b or 21S4c. In this case, check the intake and the discharge temperature for the 4-way valve to check that the electricity runs between where and where.

**Note**

- Do not touch the valve when checking the temperature, as it will be hot.
- Do not give an impact from outside, as the outer hull will be deformed leading to the malfunction of the inner valve.

**(3) In case of SV1a (Bypass valve)**

This solenoid valve opens when powered (Relay ON).

- 1) At compressor start-up, the SV1a turns on for 4 minutes, and the operation can be checked by the self-diagnosis LED display and the closing sound.
- 2) To check whether the valve is open or closed, check the change of the SV1a downstream piping temperature while the valve is being powered. Even when the valve is closed, high-temperature refrigerant flows inside the capillary next to the valve. (Therefore, temperature of the downstream piping will not be low with the valve closed.)

**(4) In the case of SV5b (Solenoid valve)**

This solenoid valve is a switching valve that opens when energized. Proper operation of this valve can be checked on the LED and by the switching sound. During the cooling mode, SV5b and 21S4b are switched simultaneously, which may make it difficult to check for proper operation of the SV5b by listening for the switching sound. If this is the case, the temperature before and after SV5b can be used to determine if the refrigerant is the pipe.

**(5) In the case of SV9 (Solenoid valve)**


This solenoid valve is a switching valve that opens when energized. Proper operation of this valve can be checked on the LED display and by the switching sound.

**Note**

Do not give an impact from outside, as the outer hull will be deformed leading to the malfunction of the inner valve.

**-4- Outdoor Unit Fan**

- To check the revolution of the fan, check the inverter output state on the self-diagnosis LED, as the inverter on the outdoor fan controls the revolutions of the fan.
- When starting the fan, the fan runs at full speed for 5 seconds.
- When setting the DIP SW1 as shown in the figure below, the inverter output [%] will appear. 100% indicates the full speed and 0% indicates the stopping.



- As the revolution of the fan changes under control, at the interphase or when the indoor unit operation capacity is low, the revolution of the fan may change.
- If the fan does not move or it vibrates, Fan board problem or fan motor problem is suspected. Refer to IX [4] -6- (2) [5] "Check the fan motor ground fault or the winding."(page 176) and IX [4] -6- (2) [6] "Check the Fan board failure."(page 176)

### -5- LEV


#### LEV operation

LEV (Indoor unit: Linear expansion valve), LEV2a, and LEV2b (Outdoor unit: Linear expansion valve) are stepping-motor-driven valves that operate by receiving the pulse signals from the indoor and outdoor unit control boards.

#### (1) Indoor LEV and Outdoor LEV (LEV2a, LEV2b)

The valve opening changes according to the number of pulses.

##### 1) Indoor and outdoor unit control boards and the LEV (Indoor unit: Linear expansion valve)

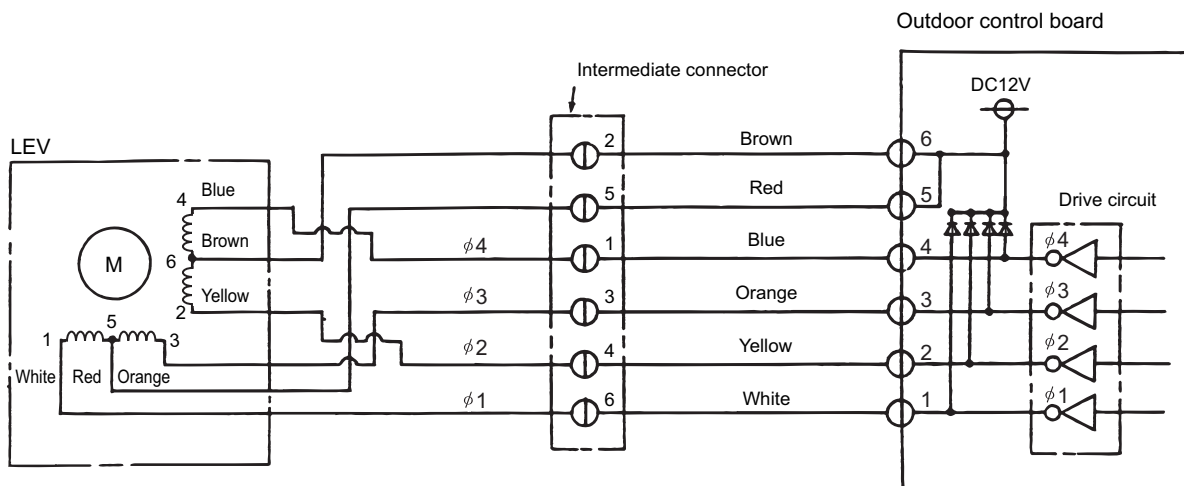

Note. The connector numbers on the intermediate connector and the connector on the control board differ. Check the color of the lead wire to judge the number.


##### 2) Pulse signal output and valve operation

Output (phase) number	Output state			
	1	2	3	4
$\phi 1$	ON	OFF	OFF	ON
$\phi 2$	ON	ON	OFF	OFF
$\phi 3$	OFF	ON	ON	OFF
$\phi 4$	OFF	OFF	ON	ON

Output pulses change in the following orders when the Valve is closed; 1 → 2 → 3 → 4 → 1  
 Valve is open; 4 → 3 → 2 → 1 → 4

- \*1. When the LEV opening angle does not change, all the output phases will be off.
- \*2. When the output is open phase or remains ON, the motor cannot run smoothly, and rattles and vibrates.

##### 3) LEV valve closing and opening operation

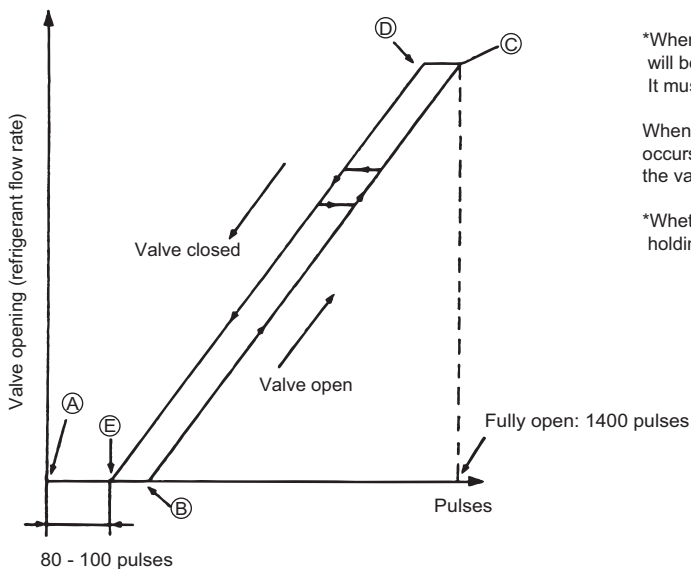

\*When the power is turned on, the valve closing signal of 2200 pulses will be output from the indoor board to LEV to fix the valve position. It must be fixed at point **A**

When the valve operates smoothly, no sound from LEV or no vibration occurs, however, when the pulses change from **E** to **A** in the chart or the valve is locked, a big sound occurs.


\*Whether a sound is generated or not can be determined by holding a screwdriver against it, then placing your ear against the handle.



**(2) Outdoor LEV (LEV1)**

The valve opening changes according to the number of pulses.

1) Connections between the outdoor control board and LEV1 (outdoor expansion valve)

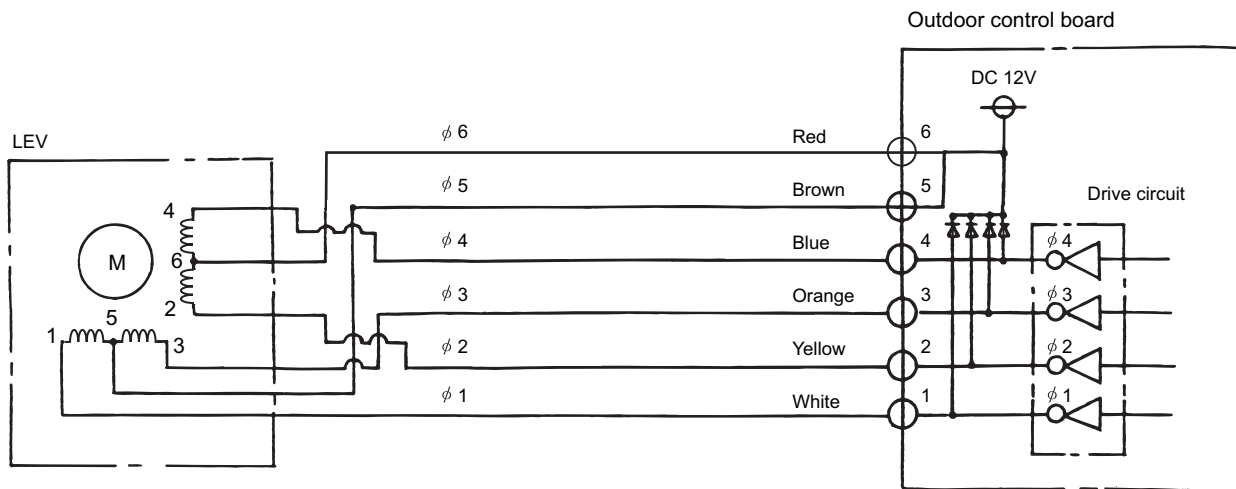


2) Pulse signal output and valve operation

Output (phase) number	Output state							
	1	2	3	4	5	6	7	8
φ 1	ON	OFF	OFF	OFF	OFF	OFF	ON	ON
φ 2	ON	ON	ON	OFF	OFF	OFF	OFF	OFF
φ 3	OFF	OFF	ON	ON	ON	OFF	OFF	OFF
φ 4	OFF	OFF	OFF	OFF	ON	ON	ON	OFF

Output pulses change in the following orders when the  
 Valve is open; 1 → 2 → 3 → 4 → 5 → 6 → 7 → 8 → 1  
 Valve is closed; 8 → 7 → 6 → 5 → 4 → 3 → 2 → 1 → 8

- \*1. When the LEV opening angle does not change, all the output phases will be off.
- \*2. When the output is open phase or remains ON, the motor cannot run smoothly, and rattles and vibrates.

3) LEV valve closing and opening operation

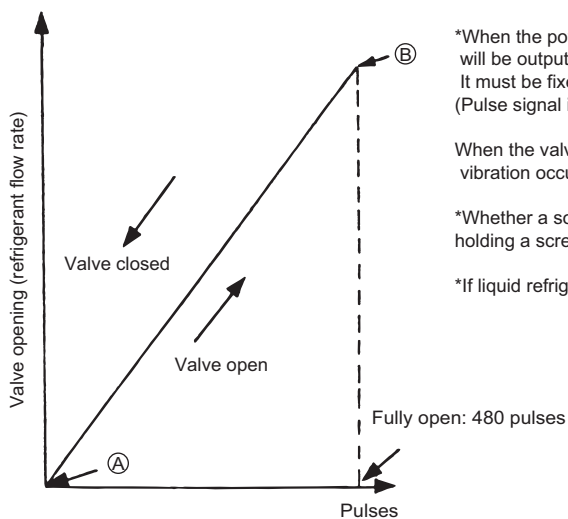

\*When the power is turned on, the valve closing signal of 520 pulses will be output from the indoor board to LEV to fix the valve position. It must be fixed at point (A) (Pulse signal is output for approximately 17 seconds.)

When the valve operates smoothly, there is no sound from the LEV and no vibration occurs, but when the valve is locked, noise is generated.



\*Whether a sound is generated or not can be determined by holding a screwdriver against it, then placing your ear against the handle.

\*If liquid refrigerant flows inside the LEV, the sound may become smaller.

**(3) Judgment methods and possible failure mode**

**Note**


The specifications of the outdoor unit (outdoor LEV) and the indoor unit (indoor LEV) differ. Therefore, remedies for each failure may vary. Check the remedy specified for the appropriate LEV as indicated in the right column.

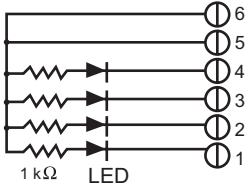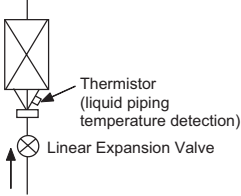Malfunction mode	Judgment method	Remedy	Target LEV
Microcomputer driver circuit failure	<p>Disconnect the control board connector and connect the check LED as shown in the figure below.</p>  <p>resistance : 0.25W 1kΩ LED : DC15V 20mA or more</p> <p>When the main power is turned on, the indoor unit circuit board outputs pulse signals to the indoor unit LEV for 10 seconds, and the outdoor unit circuit board outputs pulse signals to the outdoor unit LEV for 17 seconds.</p> <p>If any of the LED remains lit or unlit, the drive circuit is faulty.</p>	When the drive circuit has a problem, replace the control board.	Indoor Outdoor
LEV mechanism is locked	<p>If the LEV is locked, the drive motor runs idle, and makes a small clicking sound.</p> <p>When the valve makes a closing and opening sound, the valve has a problem.</p>	Replace the LEV.	Indoor Outdoor
Disconnected or short-circuited LEV motor coil	<p>Measure resistance between the coils (red - white, red - orange, brown - yellow, brown - blue) using a tester. They are normal if resistance is 150ohm ± 10%.</p>	Replace the LEV coils.	Indoor Outdoor (LEV2a, LEV2b)
	<p>Measure resistance between the coils (red - white, red - orange, brown - yellow, brown - blue) using a tester. They are normal if resistance is 46ohm ± 3%.</p>	Replace the LEV coils.	Outdoor (LEV1)
Incomplete sealing (leak from the valve)	<p>When checking the refrigerant leak from the indoor LEV, run the target indoor unit in the fan mode, and the other indoor units in the cooling mode. Then, check the liquid temperature (TH22) with the self-diagnosis LED.</p> <p>When the unit is running in the fan mode, the LEV is fully closed, and the temperature detected by the thermistor is not low. If there is a leak, however, the temperature will be low. If the temperature is extremely low compared with the inlet temperature displayed on the remote controller, the LEV is not properly sealed, however, if there is a little leak, it is not necessary to replace the LEV when there are no effects to other parts.</p> 	If there is a large amount of leakage, replace the LEV.	Indoor
Faulty wire connections in the connector or faulty contact	<ol style="list-style-type: none"> <li>1. Check for loose pins on the connector and check the colors of the lead wires visually</li> <li>2. Disconnect the control board's connector and conduct a continuity check using a tester.</li> </ol>	Check the continuity at the points where an error occurs.	Indoor Outdoor

**(4) Outdoor unit LEV (LEV1) coil removal procedure**


1) LEV component

As shown in the figure, the outdoor LEV is made in such a way that the coils and the body can be separated.

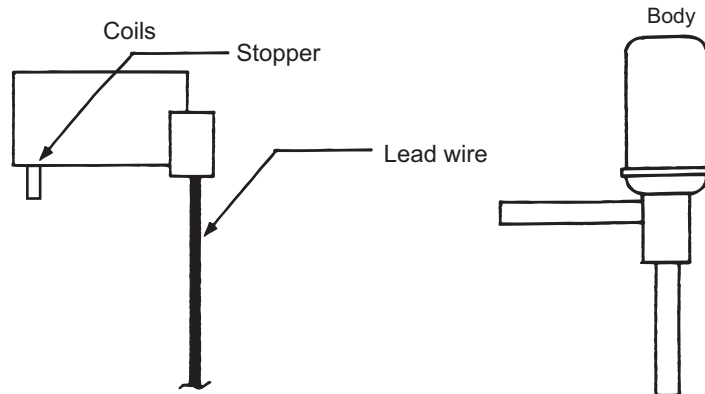

2) Removing the coils


Fasten the body tightly at the bottom (Part A in the figure) so that the body will not move, then pull out the coils toward the top. If the coils are pulled out without the body gripped, undue force will be applied and the pipe will be bent.

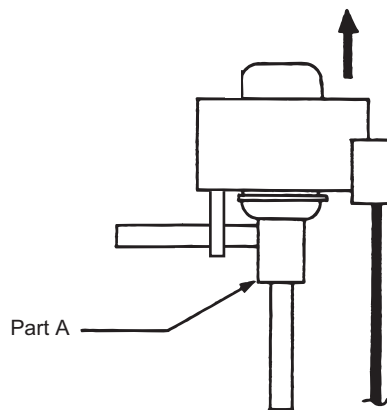


3) Installing the coils

Fix the body tightly at the bottom (Part A in the figure) so that the body will not move, then insert the coils from the top, and insert the coil stopper securely in the pipe on the body. Hold the body when pulling out the coils to prevent so that the pipe will not be bent.

If the coils are pushed without the body gripped, undue force will be applied and the pipe will be bent. Hold the body when pulling out the coils to prevent so that the pipe will not be bent.

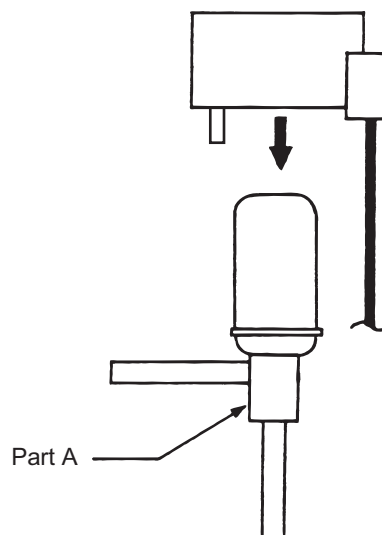


**(5) Outdoor unit LEV (LEV2a,2b) coil removal procedure**

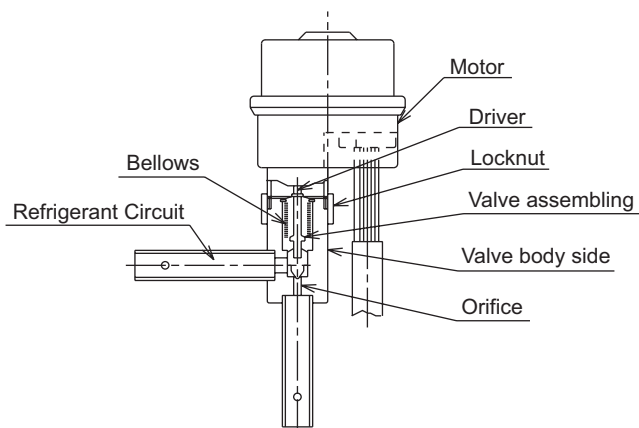

**Notes on the procedure**


- 1) Do not put undue pressure on the motor.
- 2) Do not use motors if dropped.
- 3) Do not remove the cap until immediately before the procedure.
- 4) Do not wipe off any molybdenum.
- 5) Do not remove the packing.
- 6) Do not apply any other than specified liquid such as screw lock agent, grease and etc.

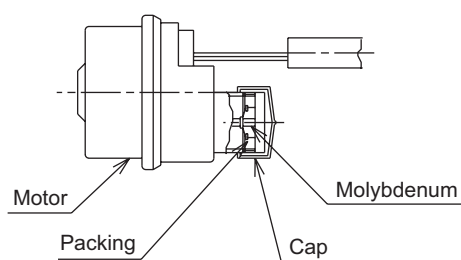

### Replacement procedure

- 1) Stop the air conditioner. After checking that the air conditioner is stopped, turn off the power of the outdoor unit.
- 2) Prepare two spanners. Hold the valve body with one spanner and loosen the locknut with another one.  
Turning the locknut counter-clockwise from motor side view can loosen it.  
Two spanners must be used.  
Do not hold the motor with one hand and loosen the locknut with only one spanner.
- 3) Turning the locknut several times. The locknut will come off and then the motor can be removed.
- 4) Prepare a motor replacement. Use only factory settings, which the head part of the driver does not come out. **Use of other than factory settings may result in malfunction and failure of valve flow rate control.**
- 5) Keep dust, contaminants, and water out of the space between the motor and the valve body during replacement. (The space is the mechanical section of the valve.) Do not damage the junction with tools.  
After removing the motor, **blow N<sub>2</sub> gas or etc. into bellows in order to blow off water from inside.**
- 6) Remove the cap of the motor replacement. Joint the axis of the motor and the one of the valve body with the locknut to stick precisely. **Apply screw lock agent to whole part of the screw. Do not introduce screw lock agent into the motor.**  
Use new motors if problems are found on the motor during the replacement.
- 7) After rotating the locknut 2~3 times by hands, hold the valve body with the spanner, and tighten the locknut with the specified torque with a torque wrench. Apply the tightening torque of 15N · m (150kgf · cm) (administration value 15 ± 1 N · m (150 ± 10kgf · cm)).  
Note that undue tightening may cause breaking a flare nut.
- 8) When tightening the locknut, hold the motor with hands so that undue rotary torque and load can not be applied.
- 9) The differences of relative position after assembling the motor and the valve body do not affect the valve control and the switching function.  
Do not relocate the motor and the valve body after tightening the locknut. Even the relative position is different from before and after assembling.

Difference in rotational direction is acceptable.

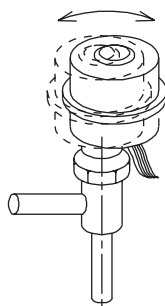

The motor may not be fixed with clamp because of the changing of the motor configuration. However, the fixing is not necessary due to the pipe fixing.

- 10) Connect the connector. Do not pull hard on the lead wire. Make sure that the connector is securely inserted into the specified position, and check that the connector does not come off easily.
- 11) Turn on the indoor unit, and operate the air conditioner. Check that no problems are found.


## -6- Inverter

- Replace only the compressor if only the compressor is found to be defective.
- Replace only the fan motor if only the fan motor is found to be defective.
- Replace the defective components if the inverter is found to be defective.
- If both the compressor and the inverter are found to be defective, replace the defective component(s) of both devices.

### (1) Inverter-related problems: Troubleshooting and remedies

- 1) The INV board has a large-capacity electrolytic capacitor, in which residual voltage remains even after the main power is turned off, posing a risk of electric shock. Before inspecting the inside of the control box, turn off the power, keep the unit off for at least 10 minutes, and confirm that the voltage between FT-P and FT-N on INV Board has dropped to DC20V or less. (It takes about 10 minutes to discharge electricity after the power supply is turn off.)
- 2) The IPM on the inverter becomes damaged if there are loose screws or connectors. If a problem occurs after replacing some of the parts, mixed up wiring is often the cause of the problem. Check for proper connection of the wiring, screws, connectors, and Faston terminals.
- 3) To avoid damage to the circuit board, do not connect or disconnect the inverter-related connectors with the main power turned on.
- 4) Faston terminals have a locking function. Make sure the terminals are securely locked in place after insertion.

Press the tab on the terminals to remove them.

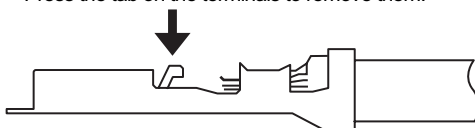

- 5) When the IPM or IGBT is replaced, apply a thin layer of heat radiation grease that is supplied evenly to these parts. Wipe off any grease that may get on the wiring terminal to avoid terminal contact failure.
- 6) Faulty wiring to the compressor damages the compressor. Connect the wiring in the correct phase sequence.

	Error display/failure condition	Measure/inspection item
[1]	Inverter related errors 4250, 4255, 4220, 4225, 4230, 4240,4260, 5301, 0403	Check the details of the inverter error in the error log at 10.[1] Table of LED codes. Take appropriate measures to the error code and the error details in accordance with 9. [2] Self-diagnosis on the basis of Error Display on Remote Controller and Remedy for Error.
[2]	Main power breaker trip	Refer to "(3) Trouble treatment when the main power breaker is tripped".(page 177)
[3]	Main power earth leakage breaker trip	Refer to "(4) Trouble treatment when the main power earth leakage breaker is tripped".(page 177)
[4]	Only the compressor does not operate.	Check the inverter frequency on the LED monitor and proceed to (2) - [4] if the compressor is in operation.(page 176)
[5]	The compressor vibrates violently at all times or makes an abnormal sound.	See (2)-[4].(page 176)
[6]	Only the fan motor does not operate.	Check the inverter frequency on the LED monitor and proceed to (2)-[6] if the fan motor is in operation.(page 176)
[7]	The fan motor shakes violently at all times or makes an abnormal sound.	Check the inverter frequency on the LED monitor and proceed to (2)-[6] if the fan motor is in operation.(page 176)
[8]	Noise is picked up by the peripheral device	<p>&lt;1&gt; Check that power supply wiring of the peripheral device does not run close to the power supply wiring of the outdoor unit.</p> <p>&lt;2&gt; Check if the inverter output wiring is not running parallel to the power supply wiring and the transmission lines.</p> <p>&lt;3&gt; Check that the shielded wire is used as the transmission line when it is required, and check that the grounding work is performed properly on the shielded wire.</p> <p>&lt;4&gt; Meg failure for electrical system other than the inverter</p> <p>&lt;5&gt; Attach a ferrite core to the inverter output wiring. (Contact the factory for details of the service part settings.)</p> <p>&lt;6&gt; Provide separate power supply to the air conditioner and other electric appliances.</p> <p>&lt;7&gt; If the error occurred suddenly, a ground fault of the inverter output can be considered. See (2)-[4].(page 176)</p> <p>*Contact the factory for cases other than those listed above.</p>
[9]	Sudden malfunction (as a result of external noise.)	<p>&lt;1&gt; Check that the grounding work is performed properly.</p> <p>&lt;2&gt;Check that the shielded wire is used as the transmission line when it is required, and check that the grounding work is performed properly on the shielded wire.</p> <p>&lt;3&gt;Check that neither the transmission line nor the external connection wiring does not run close to another power supply system or does not run through the same conduit pipe.</p> <p>* Contact the factory for cases other than those listed above.</p>

**(2) Inverter output related troubles**

	Items to be checked	Phenomena	Remedy
[1] Check the INV board error detection circuit.	(1) Disconnect the inverter output wire from the terminals of the INV board (SC-U, SC-V, SC-W).	1) Overcurrent error (4250 Detail code No. 101, 104, 105, 106, and 107)	Replace the INV board.
	(2) Put the outdoor unit into operation.	2) Logic error (4220 Detail code No. 111)	Replace the INV board.
		3) ACCT sensor circuit failure (5301 Detail code No.117)	Replace the INV board.
		4) IPM open (5301 Detail code No.119)	Normal
[2] Check for compressor ground fault or coil error.	Disconnect the compressor wiring, and check the compressor Meg, and coil resistance.	1) Compressor Meg failure Error if less than 1 Mohm.	Check that there is no liquid refrigerant in the compressor. If there is none, replace the compressor.
		2) Compressor coil resistance failure Coil resistance value of 1 ohm (20°C [68°F]): P250 model	Replace the compressor.



	Items to be checked	Phenomena	Remedy
[3] Check whether the inverter is damaged. (No load)	(1) Disconnect the inverter output wire from the terminals of the INV board (SC-U, SC-V, SC-W).	1) Inverter-related problems are detected.	Connect the short-circuit connector to CN6, and go to section [1].
	(2) Disconnect the short-circuit connector from CN6 on the INV board.	2) Inverter voltage is not output at the terminals (SC-U, SC-V, and SC-W)	Replace the INV board.
	(3) Put the outdoor unit into operation. Check the inverter output voltage after the inverter output frequency has stabilized.	3) There is a voltage imbalance between the wires. Greater than 5% imbalance or 5V	Replace the INV board.
		4) There is no voltage imbalance between the wires.	Normal *Reconnect the short-circuit connector to CN6 after checking the voltage.
[4] Check whether the inverter is damaged. (During compressor operation)	Put the outdoor unit into operation. Check the inverter output voltage after the inverter output frequency has stabilized.	1) There is a voltage imbalance between the wires. Greater than 5% imbalance or 5V	Replace the INV board.
[5] Check the fan motor ground fault or the winding.	Remove the wire for the outdoor fan motor, and check the fan motor megger and the winding resistance.	1) Fan motor megger failure Failure when the megger is 1Mohm or less.	Replace the fan motor.
		2) Fan motor disconnection Standard: The winding resistance is approximately several ohm. (It varies depending on the temperature, or while the inner thermo is operating, it will be ∞ ohm)	
[6] Check the FAN board failure.	(1) Check the fan output wiring.	Connector contact failure ♦Board side (CNINV) ♦Fan motor side	Connect the connector.
	(2) Check the connector CN-VDC connection.	Connector contact failure	Connect the connector.
	(3) Check the FAN board failure.	1) The voltage imbalance among each motor wiring during operation (The voltage imbalance is greater than the larger of the values represented by 5% or 5 V.)	Replace the FAN board.
2) The same error occurs even after the operation is restarted.			

**(3) Trouble treatment when the main power breaker is tripped**

	Items to be checked	Phenomena	Remedy
[1]	Check the breaker capacity.	Use of a non-specified breaker	Replace it with a specified breaker.
[2]	Perform Meg check between the terminals on the power terminal block TB1.	Zero to several ohm, or Meg failure	Check each part and wiring. *Refer to (5) "Simple checking Procedures for individual components of main inverter circuit".(page 178) ♦IGBT module ♦Rush current protection resistor ♦Electromagnetic relay ♦DC reactor
[3]	Turn on the power again and check again.	1) Main power breaker trip 2) No remote control display	
[4]	Turn on the outdoor unit and check that it operates normally.	1) Operates normally without tripping the main breaker. 2) Main power breaker trip	a) The wiring may have been short-circuited. Search for the wire that short-circuited, and repair it. b) If item a) above is not the cause of the problem, refer to (2)-[1]-[6].

**(4) Trouble treatment when the main power earth leakage breaker is tripped**

	Items to be checked	Phenomena	Remedy
[1]	Check the earth leakage breaker capacity and the sensitivity current.	Use of a non-specified earth leakage breaker	Replace with a regulation earth leakage breaker.
[2]	Check the resistance at the power supply terminal block with a megger.	Failure resistance value	Check each part and wiring. *Refer to (5) "Simple checking Procedures for individual components of main inverter circuit".(page 178) ♦IGBT module ♦Rush current protection resistor ♦Electromagnetic relay ♦DC reactor
[3]	Disconnect the compressor wirings and check the resistance of the compressor with a megger.	Failure compressor if the insulating resistance value is not in specified range. Failure when the insulating resistance value is 1 Mohm or less.	Check that there is no liquid refrigerant in the compressor. If there is none, replace the compressor.
[4]	Disconnect the fan motor wirings and check the resistance of the fan motor with a megger.	Failure fan motor if the insulating resistance value is not in specified range. Failure when the insulating resistance value is 1 Mohm or less.	Replace the fan motor.

**Note**

The insulation resistance could go down to close to 1Mohm after installation or when the power is kept off for an extended period of time because of the accumulation of refrigerant in the compressor. If the earth leakage breaker is triggered, please use the following procedure to take care of this.

- ♦Disconnect the wires from the compressor's terminal block.
- ♦If the resistance is less than 1 Mohm, switch on the power for the outdoor unit with the wires still disconnected.
- ♦Leave the power on for at least 12 hours.
- ♦Check that the resistance has recovered to 1 Mohm or greater.


**Earth leakage current measurement method**

- ♦For easy on-site measurement of the earth leakage current, enable the filter with a measurement instrument that has filter functions as below, clamp all the power supply wires, and measure.  
Recommended measurement instrument: CLAMP ON LEAK HiTESTER 3283 made by HIOKI E.E. CORPORATION
- ♦When measuring one device alone, measure near the device's power supply terminal block.

**(5) Simple checking procedure for individual components of main inverter circuit**

**Note**

Before inspecting the inside of the control box, turn off the power, keep the unit off for at least 10 minutes, and confirm that the voltage between FT-P and FT-N on INV Board has dropped to DC20V or less.

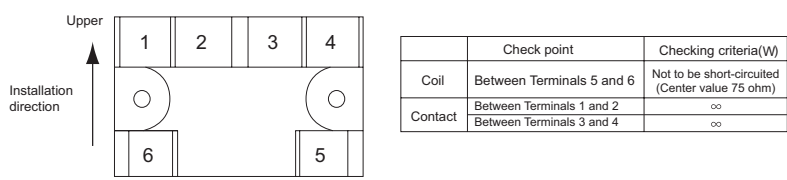Part name	Judgment method											
IGBT module	See "Troubleshooting for IGBT Module ". ( 9 [4] - 6 - (6) )(page 178)											
Rush current protection resistor R1, R5	Measure the resistance between terminals R1 and R5: 22 ohm $\pm$ 10%											
Electromagnetic relay 72C	<p><b>Note</b> This electromagnetic relay is rated at DC12V and is driven by a coil. Check the resistance between terminals</p>  <p>The diagram shows a relay with terminals 1, 2, 3, 4 on the top row and 6, 5 on the bottom row. Terminals 1 and 2 are connected to a coil, and terminals 3 and 4 are connected to a contact. Terminals 5 and 6 are also connected to a coil. An arrow labeled 'Installation direction' points upwards. To the right is a table:</p> <table border="1"> <thead> <tr> <th></th> <th>Check point</th> <th>Checking criteria(W)</th> </tr> </thead> <tbody> <tr> <td>Coil</td> <td>Between Terminals 5 and 6</td> <td>Not to be short-circuited (Center value 75 ohm)</td> </tr> <tr> <td rowspan="2">Contact</td> <td>Between Terminals 1 and 2</td> <td><math>\infty</math></td> </tr> <tr> <td>Between Terminals 3 and 4</td> <td><math>\infty</math></td> </tr> </tbody> </table>		Check point	Checking criteria(W)	Coil	Between Terminals 5 and 6	Not to be short-circuited (Center value 75 ohm)	Contact	Between Terminals 1 and 2	$\infty$	Between Terminals 3 and 4	$\infty$
	Check point	Checking criteria(W)										
Coil	Between Terminals 5 and 6	Not to be short-circuited (Center value 75 ohm)										
Contact	Between Terminals 1 and 2	$\infty$										
	Between Terminals 3 and 4	$\infty$										
DC reactor DCL	Measure the resistance between terminals: 1ohm or lower (almost 0 ohm) Measure the resistance between terminals and the chassis: $\infty$											

**(6) Troubleshooting for IGBT Module**

Measure the resistances between each pair of terminals on the IGBT with a tester, and use the results for troubleshooting. The terminals on the INV board are used for the measurement.

1) Notes on measurement

- Check the polarity before measuring. (On the tester, black normally indicates plus.)
- Check that the resistance is not open ( $\infty$  ohm) or not shorted (to 0 ohm).
- The values are for reference, and the margin of errors is allowed.
- The result that is more than double or half of the result that is measured at the same measurement point is not allowed.
- Disconnect all the wiring connected the INV board, and make the measurement.

2) Tester restriction

- Use the tester whose internal electrical power source is 1.5V or greater
- Use the dry-battery-powered tester.

**Note**

(The accurate diode-specific resistance cannot be measured with the button-battery-powered card tester, as the applied voltage is low.)

- Use a low-range tester if possible. A more accurate resistance can be measured.


Judgment value (reference)

		Black ( + )				
		SC-P1	FT-N	SC-L1	SC-L2	SC-L3
Red (-)	SC-P1	-	-	5 - 200 ohm	5 - 200 ohm	5 - 200 ohm
	FT-N	-	-	∞	∞	∞
	SC-L1	∞	5 - 200 ohm	-	-	-
	SC-L2	∞	5 - 200 ohm	-	-	-
	SC-L3	∞	5 - 200 ohm	-	-	-


		Black ( + )				
		SC-P2	FT-N	SC-U	SC-V	SC-W
Red (-)	SC-P2	-	-	5 - 200 ohm	5 - 200 ohm	5 - 200 ohm
	FT-N	-	-	∞	∞	∞
	SC-U	∞	5 - 200 ohm	-	-	-
	SC-V	∞	5 - 200 ohm	-	-	-
	SC-W	∞	5 - 200 ohm	-	-	-

INV board external diagram

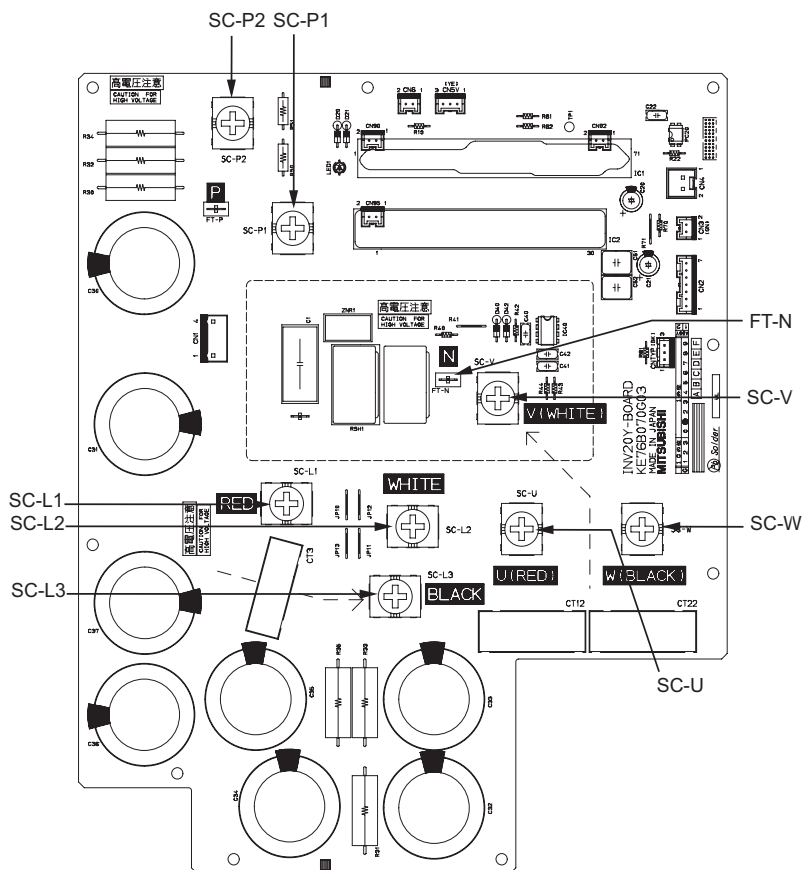


## -7- Control Circuit

### (1) Control power source function block

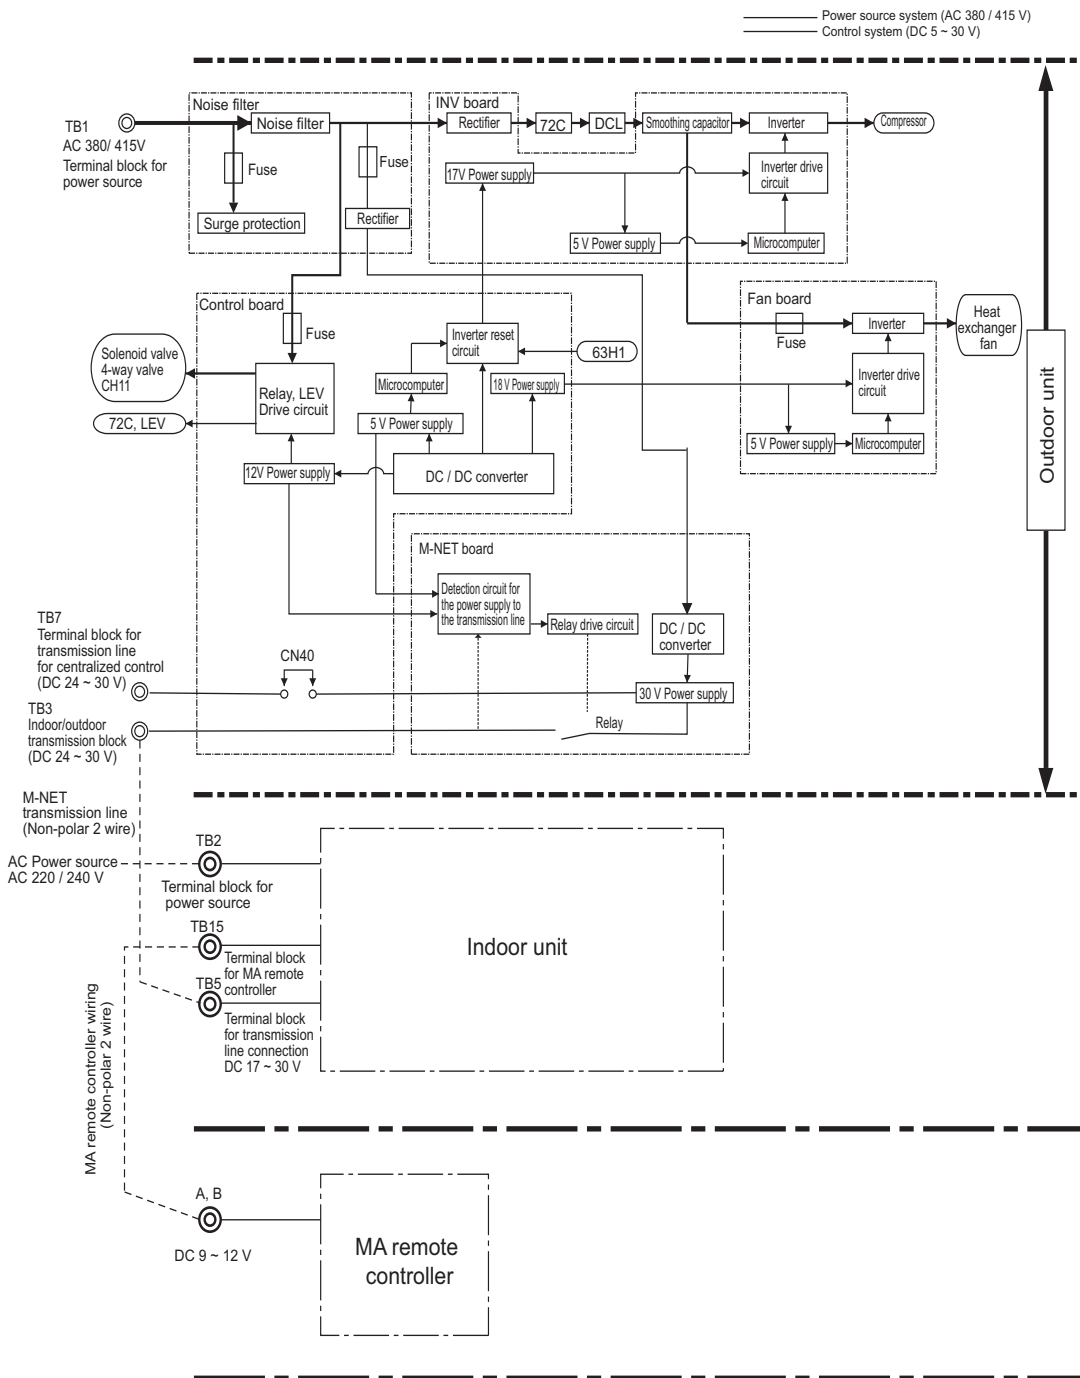

\* MA remote controllers and M-NET remote controllers cannot be used together.  
(Both the M-NET and MA remote controller can be connected to a system with a system controller.)

**(2) Troubleshooting transmission power circuit of outdoor unit**

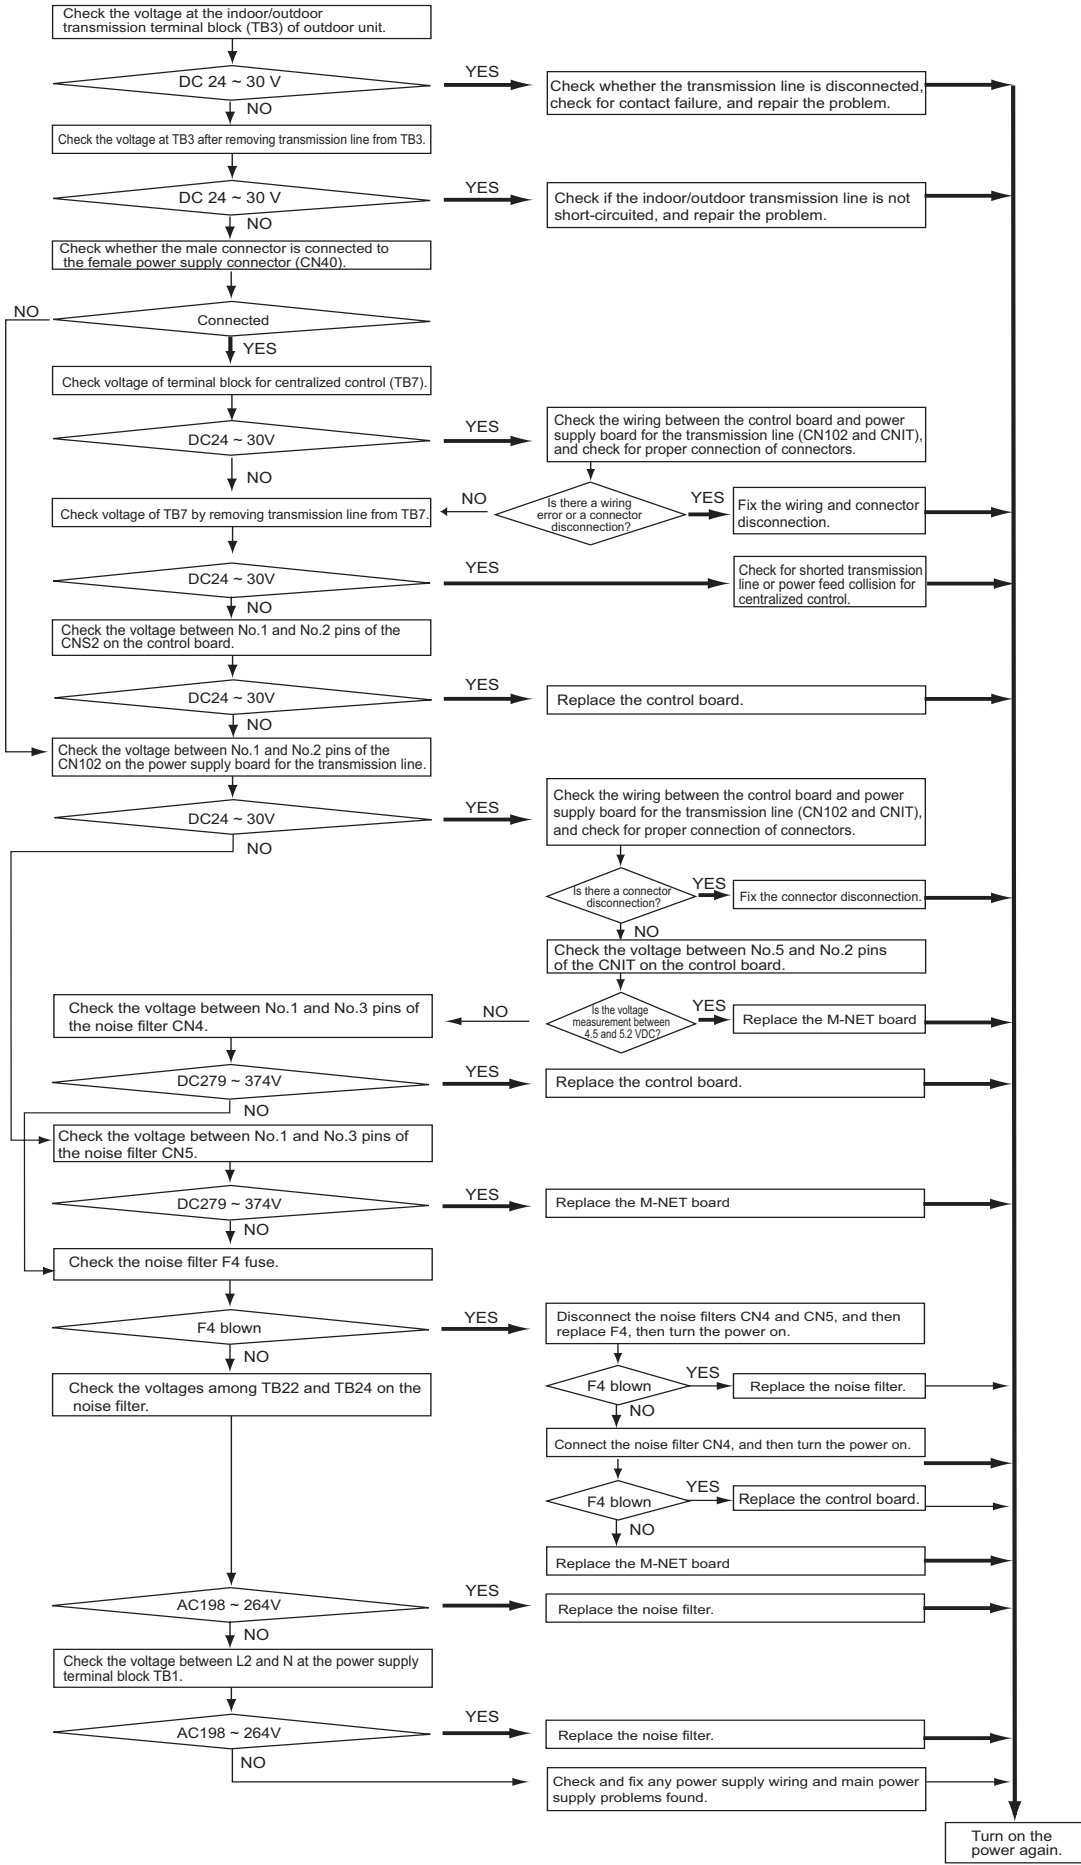

## [5] Refrigerant Leak

### 1. Leak spot: In the case of extension pipe for indoor unit (Cooling season)

- 1) Mount a pressure gauge on the service check joint (CJ2) on the low-pressure side.
- 2) Stop all the indoor units, and close the liquid service valve (BV2) inside the outdoor unit while the compressor is being stopped.
- 3) Stop all the indoor units; turn on SW2-4 on the outdoor unit control board while the compressor is being stopped. (Pump down mode will start, and all the indoor units will run in cooling test run mode.)
- 4) In the pump down mode (SW2-4 is ON), all the indoor units will automatically stop when the low pressure (63LS) reaches 0.383MPa [55psi] or less or 15 minutes have passed after the pump mode started. Stop all the indoor units and compressors when the pressure indicated by the pressure gauge, which is on the check joint (CJ2) for low-pressure service, reaches 0.383MPa [55psi] or 20 minutes pass after the pump down operation is started.
- 5) Close the gas service valve (BV1) inside the outdoor unit.
- 6) Collect the refrigerant that remains in the extended pipe for the indoor unit. Do not discharge refrigerant into the atmosphere when it is collected.
- 7) Repair the leak.
- 8) After repairing the leak, vacuum the extension pipe and the indoor unit.
- 9) To adjust refrigerant amount, open the service valves (BV1 and BV2) inside the outdoor unit and turn off SW2-4.

### 2. Leak spot: In the case of outdoor unit (Cooling season)

#### (1) Run all the indoor units in the cooling test run mode.


- 1) To run the indoor unit in test run mode, turn SW3-2 from ON to OFF when SW3-1 on the outdoor control board is ON.
- 2) Change the setting of the remote controller for all the indoor units to the cooling mode.
- 3) Check that all the indoor units are performing a cooling operation.

#### (2) Check the values of Tc and TH6.


(To display the values on the LED screen, use the self-diagnosis switch (SW1) on the outdoor unit control board.)

- 1) When Tc-TH6 is 10°C [18°F] or more : See the next item (3).
- 2) When Tc-TH6 is less than 10°C [18°F] : After the compressor stops, collect the refrigerant inside the system, repair the leak, perform evacuation, and recharge new refrigerant. (Leak spot: 4. In the case of outdoor unit, handle in the same way as heating season.)

Tc self-diagnosis switch



TH6 self-diagnosis switch



#### (3) Stop all the indoor units, and stop the compressor.

- 1) To stop all the indoor units and the compressors, turn SW3-2 from ON to OFF when SW3-1 on the outdoor control board is ON.
- 2) Check that all the indoor units are being stopped.

#### (4) Close the service valves (BV1 and BV2).

(5) To prevent the liquid seal, extract small amount of refrigerant from the check joint of the liquid service valve (BV2), as the liquid seal may cause a malfunction of the unit.

(6) Collect the refrigerant that remains inside the outdoor unit. Do not discharge refrigerant into air into the atmosphere when it is collected.

(7) Repair the leak.

(8) After repairing the leak, replace the dryer with the new one, and perform evacuation inside the outdoor unit.

(9) To adjust refrigerant amount, open the service valves (BV1 and BV2) inside the outdoor unit.

#### Note

After taking step 4) above, if the power to the outdoor and indoor units needs to be turned off to repair leaks, wait for approximately an hour after the units have stopped before turning off the power supply.

- 1) When 30 minutes have passed after the item 4 above, the indoor unit lev turns from fully closed to slightly open to prevent the refrigerant seal.

LEV2a and LEV2b open when the outdoor unit remains stopped for 15 minutes to allow for the collection of refrigerant in the outdoor unit heat exchanger and to enable the evacuation of the outdoor unit heat exchanger.

If the power is turned of in less than 5 minutes, LEV2a and LEV2b may close, trapping high-pressure refrigerant in the outdoor unit heat exchanger and creating a highly dangerous situation.

- 2) Therefore, if the power source is turned off within 30 minutes, the lev remains fully closed and the refrigerant remains sealed. When only the power for the indoor unit is turned off, the indoor unit LEV turns from faintly open to fully closed.


## [6] Compressor Replacement Instructions

### [Compressor replacement procedures]


Follow the procedures below (Steps 1 through 6) to remove the compressor components and replace the compressor. Reassemble them in the reverse order after replacing the compressor.



1. Remove both the top and bottom service panels (front panels).

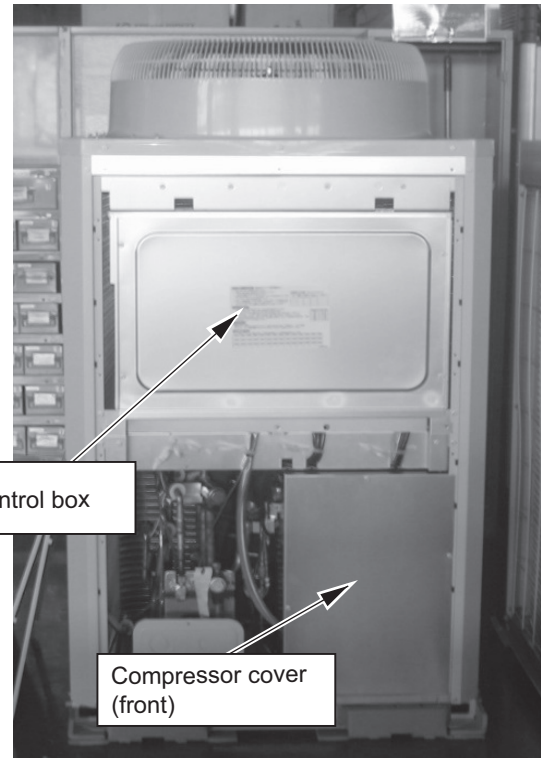

2. Remove the control box and the compressor cover (front).

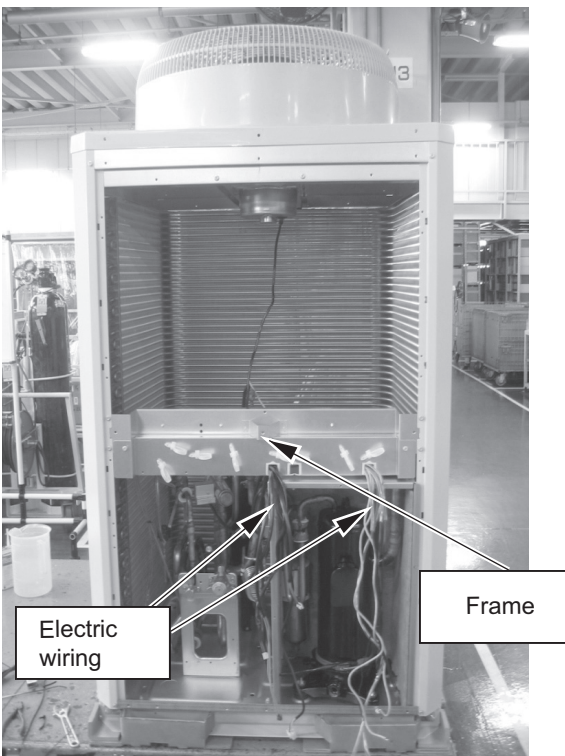


3. Remove the wires that are secured to the frame, and remove the frame.






4. Remove the compressor cover (top).

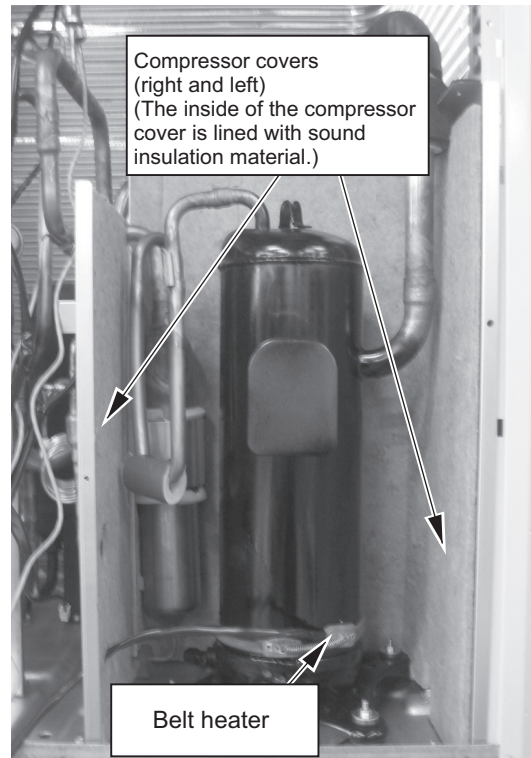

5. Remove the compressor wires, compressor covers (right and left), and belt heater.

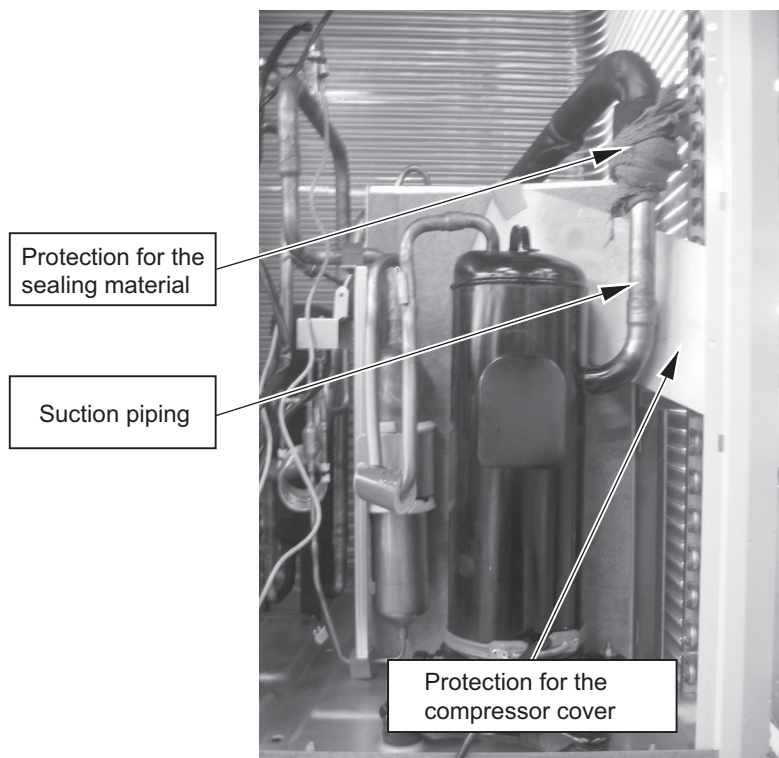

6. Place protective materials on the insulation lining of the compressor cover and on the sealing material on the compressor suction pipe to protect them from the torch flame, debraze the pipe, and replace the compressor.

---

## **[7] Troubleshooting Using the Outdoor Unit LED Error Display**

---

If the LED error display appear as follows while all the SW1 switches are set to OFF, check the items under the applicable item numbers below.

**1. Error code appears on the LED display.**

Refer to IX [2] Responding to Error Display on the Remote Controller.

**2. LED is blank.**

Take the following troubleshooting steps.

- (1) If the voltage between pins 1 and 3 of CNDC on the control board is outside the range between 220 VDC and 380 VDC, refer to IX [4] -7- (2) Troubleshooting transmission power circuit of outdoor unit.**
- (2) If the LED error display becomes lit when the power is turned on with all the connectors on the control board except CNDE disconnected, there is a problem with the wiring to those connectors or with the connectors themselves.**
- (3) If nothing appears on the display under item (2) above AND the voltage between pins 1 and 3 of CNDC is within the range between 220 VDC and 380 VDC, control board failure is suspected.**

**3. Only the software version appears on the LED display.**

**(1) Only the software version appears while the transmission cables to TB3 and TB7 are disconnected.**

- 1) Wiring failure between the control board and the transmission line power supply board.(CN1T, CNS2, CN102)
- 2) If item 1) checks out OK, the transmission line power supply board failure is suspected.
- 3) If items 1) and 2) check out OK, control board failure is suspected.

**(2) If the LED display appears as noted in "X [1] 2. LED display at Initial setting"(page 191) while the transmission cables to TB3 and TB7 are disconnected, failure with the transmission cable or the connected equipment is suspected.**

## [8] Maintenance/Inspection Schedule

Having the units inspected by a specialist on a regular basis, in addition to regular maintenance such as changing the filters, will allow the users to use them safely and in good condition for an extended period of time.

The chart below indicates standard maintenance schedule.

### (1) Approximate Longevity of Various Parts

The chart shows an approximate longevity of parts. It is an estimation of the time when old parts may need to be replaced or repairs need to be made.

It does not mean that the parts must absolutely be replaced (except for the fan belt).

Please note that the figures in the chart do not mean warranty periods.

Unit	Parts	Check every	Replace after	Daily check	Periodically check	Remarks
Indoor	Fan Motor	6 months	40000 hours		Yes	
	Bearing	6 months	40000 hours		Yes	Add lubricant once a year
	Fan Belt	6 months	8000 hours		Yes	Disposable parts
	Air Filter	3 months	5 years	Yes		Maintenance schedule changes depending on the local conditions
	Drain Pan	6 months	8 years		Yes	
	Drain Hose	6 months	8 years		Yes	
	Linear Expansion Valve	1 year	25000 hours		Yes	
	Heat Exchanger	1 year	5 years		Yes	
	Float Switch	6 months	25000 hours		Yes	
	Display Lamp (LED)	1year	25000 hours		Yes	
Outdoor	Compressor	6 months	40000 hours		Yes	
	Fan motor	6 months	40000 hours		Yes	
	Linear Expansion Valve	1 year	25000 hours		Yes	
	4-way valve	1 year	25000 hours		Yes	
	Heat Exchanger	1 year	5 years		Yes	
	Pressure Switch	1 year	25000 hours		Yes	

### (2) Notes

- The above chart shows a maintenance schedule for a unit that is used under the following conditions:
  - A. Less than 6 times per hour of compressor stoppage
  - B. The unit stays on 24 hours a day.
- Shortening the inspection cycle may need to be considered when the following conditions apply:
  - ① When used in high temperature/high humidity area or when used in a place where the temperature and/or humidity fluctuate greatly
  - ② When plugged into an unstable power source (sudden change in voltage, frequency, wave distortions) (Do not exceed the maximum capacity.)
  - ③ When the unit is installed in a place where it receives vibrations or major impacts.
  - ④ When used in a place with poor air quality (containing dust particles, salt, poisonous gas such as sulfuric acid gas and sulfuric hydrogen gas, oil mist).
- Even when the above maintenance schedule is followed, there could be unexpected problems that cannot be predicted.
- Holding of Parts  
We will hold parts for the units for at least 9 years after the termination of the production of the unit, following the standards set by the ministry of economics and industries.

### (3) Details of Maintenance/Inspection

Unit	Parts	Inspection Cycle	Check points	Assessment	What to do
Indoor	Fan motor	6 months	<ul style="list-style-type: none"> <li>Check for unusual noise</li> <li>Measure the insulation resistance</li> </ul>	<ul style="list-style-type: none"> <li>Free of unusual noise</li> <li>Insulation resistance over 1MΩ</li> </ul>	Replace when insulation resistance is under 1MΩ
	Bearing	6 months	<ul style="list-style-type: none"> <li>Check for unusual noise</li> </ul>	<ul style="list-style-type: none"> <li>Free of unusual noise</li> </ul>	If the noise doesn't stop after lubrication, change the oil. Add lubricant once a year.
	Fan belt	6 months	<ul style="list-style-type: none"> <li>Check for excessive slack</li> <li>Check for wear and tear</li> <li>Check for unusual noise</li> </ul>	<ul style="list-style-type: none"> <li>Resistance (30~40N/belt)</li> <li>Adequate amount of slack=5mm</li> <li>Belt length=no longer than 102% of the original length</li> <li>Free of wear and tear</li> <li>Free of unusual noise</li> </ul>	Adjust the belt Replace if the belt length exceeds 2% of the original length, worn, or used over 5000 hours
	Air filter	3 months	<ul style="list-style-type: none"> <li>Check for clogging and tear</li> <li>Clean the filter</li> </ul>	<ul style="list-style-type: none"> <li>Clean, free of damage</li> </ul>	Clean the filter Replace if extremely dirty or damaged
	Drain pan	6 months	<ul style="list-style-type: none"> <li>Check for clogging of the drainage system</li> <li>Check for loosened bolts</li> <li>Check for corrosion</li> </ul>	<ul style="list-style-type: none"> <li>Clean, free of clogging</li> <li>Free of loose screws</li> <li>No major disintegration</li> </ul>	Clean if dirty or clogged Tighten bolts Replace if extremely worn
	Drain hose	6 months	<ul style="list-style-type: none"> <li>Check for clogging of the drainage system</li> <li>Check for corrosion</li> <li>Check the drainage of the drain trap</li> </ul>	<ul style="list-style-type: none"> <li>Clean, free of clogging</li> <li>Free of wear and tear</li> </ul>	Clean if dirty or clogged Replace if extremely worn Pour water into the drain trap
	Linear expansion valve	1 year	<ul style="list-style-type: none"> <li>Perform an operation check using the operation data</li> </ul>	<ul style="list-style-type: none"> <li>Adequately controls the air temperature</li> </ul>	Replace if malfunctioning
	Heat exchanger	1 year	<ul style="list-style-type: none"> <li>Check for clogging, dirt, and damage</li> </ul>	<ul style="list-style-type: none"> <li>Clean, free of clogging or damage</li> </ul>	Clean
	Float switch	6 months	<ul style="list-style-type: none"> <li>Check the outer appearance</li> <li>Make sure its free of foreign objects</li> </ul>	<ul style="list-style-type: none"> <li>Free of frayed or cut wires</li> <li>Free of foreign objects</li> </ul>	Replace if damaged or extremely worn Remove foreign objects
Display lamp (LED)	1 year	<ul style="list-style-type: none"> <li>Make sure the lamp comes on</li> </ul>	<ul style="list-style-type: none"> <li>Comes on when the output is on</li> <li>Rapid drop in brightness</li> </ul>	Replace if the light does not come on when the power is on	
Outdoor	Compressor	6 months	<ul style="list-style-type: none"> <li>Check for unusual noise</li> <li>Check insulation resistance</li> <li>Check for loosened terminals</li> </ul>	<ul style="list-style-type: none"> <li>Free of unusual sound</li> <li>Insulation resistance over 1MΩ</li> <li>Free of loosened terminals</li> </ul>	Replace if insulation resistance goes below 1MΩ (under the condition that the refrigerant is not liquefied) Tighten loosened bolts
	Fan motor	6 months	<ul style="list-style-type: none"> <li>Check for unusual noise</li> <li>Measure insulation resistance</li> </ul>	<ul style="list-style-type: none"> <li>Free of unusual sound</li> <li>Insulation resistance over 1MΩ</li> </ul>	Replace if insulation resistance goes below 1MΩ
	Linear expansion valve	1 year	<ul style="list-style-type: none"> <li>Perform an operation check using the operation data</li> </ul>	<ul style="list-style-type: none"> <li>Adequately controls the air temperature</li> </ul>	Replace if malfunctioning
	4-way valve	1 year	<ul style="list-style-type: none"> <li>Perform an operation check using the operation data</li> </ul>	<ul style="list-style-type: none"> <li>Adequately controls the refrigerant temperature when the valve is switched (Check temperature change when cooling/heating is switched.)</li> </ul>	Replace if malfunctioning
	Heat exchanger	1 year	<ul style="list-style-type: none"> <li>Check for clogging, dirt, and damage</li> </ul>	<ul style="list-style-type: none"> <li>Clean, free of clogging or damage</li> </ul>	Clean
	Pressure switch	1 year	<ul style="list-style-type: none"> <li>Check for torn wire, fraying, and unplugged connectors</li> <li>Check insulation resistance</li> </ul>	<ul style="list-style-type: none"> <li>No frayed or cut wires or unplugged connectors</li> <li>Insulation resistance over 1MΩ</li> </ul>	Replace when cut or shorted, when the insulation resistance goes below 1MΩ, or if there is a history of abnormal operation

#### (4) Check method

- ① Select the "Local" mode using the "Normal/Local" switching switch on the indoor unit.
  - When the "Normal/Local" switch is set to "Local," local operation of the units will be effective, and only the remote ON/OFF operation (external input/system controller) will be ineffective. If there is no external input, local operation of the units will be effective regardless of the "Normal/Local" switch setting. No alarm signals will be sent to the upper-level system such as a building control system, including a system controller. (If an error occurs during inspection, the error history will be stored on the unit only.)
- ② Select the "OFF" mode using the MA remote controller of the indoor unit to stop the unit.
  - Before inspecting the unit, turn off the power to the unit as necessary. (When the power to the outdoor unit is turned off, it is detected by the system controller as a transmission error. This is normal.)
  - \*Normal operation of LEV needs to be confirmed during operation. Check that the pipe temperature after the LEV changes according to the LEV opening on the diagnostic LED on the outdoor unit.
- ③ Check whether an error history remains on the nonvolatile memory on the indoor and outdoor units. If an error history remains, take out the data before an error occurs, and correct the error after analyzing the causes.
- ④ Check each component based on the maintenance/inspection items described on the previous page.
  - If problems are found, repair the component.
- ⑤ At the completion of inspection, delete the error history codes stored in the nonvolatile memory on the unit. (By turning the dipswitch 2-3 on the outdoor unit from OFF to ON while the unit is powered, the history on the outdoor unit will be deleted.) If the power to the outdoor unit is turned off for inspection, the transmission error that was detected by the system controller will be deleted after power restoration. (All histories on the system controller will be deleted. Wait until the inspection of all units is completed to delete the histories. The above step is not necessary if no system controllers are connected.)
  - \*The transmission error (detected by the system controller while the outdoor unit is under power failure conditions) will be automatically reset when normal transmission is restored.
- ⑥ Select the "ON" mode using the MA remote controller of the indoor unit to operate the unit.
- ⑦ Select the "Normal" mode using the using the "Normal/Local" switching switch on the indoor unit.
- ⑧ Completed

---

## **X LED Monitor Display on the Outdoor Unit Board**



[1] How to Read the LED on the Service Monitor .....	191
--	-----



## [1] How to Read the LED on the Service Monitor

### 1. How to read the LED

By setting the DIP SW 1-1 through 1-10 (Switch number 10 is represented by 0), the operating condition of the unit can be monitored on the service monitor. (Refer to the table on the following pages for DIP SW settings.)  
The service monitor uses 4-digit 7-segment LED to display numerical values and other types of information.

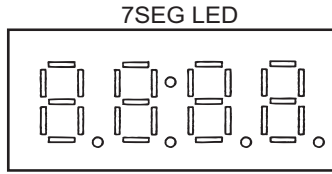

SW1-10 is represented as "0" in the table.


Pressure and temperature are examples of numerical values, and operating conditions and the on-off status of solenoid valve are examples of flag display.

#### 1) Display of numerical values

Example: When the pressure data sensor reads 18.8kg/cm<sup>2</sup> (Item No. 58)


- The unit of pressure is in kg/cm<sup>2</sup>
- Use the following conversion formula to convert the displayed value into a value in SI unit.

$$\text{Value in SI unit (MPa)} = \text{Displayed value (kg/cm}^2\text{)} \times 0.098$$

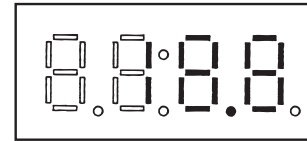


#### 2) Flag display

Example: When 21S4a, 21S4b, SV1a are ON. (Item No. 3)

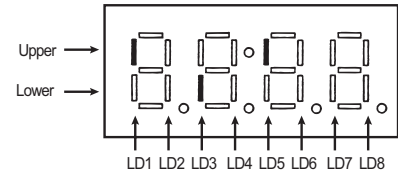

Example: 3-minutes restart mode (Item No. 14)

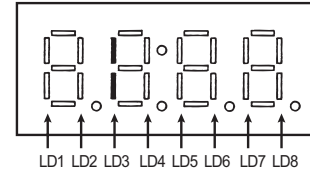

### 2. LED display at initial setting

From power on until the completion of initial settings, the following information will be displayed on the monitor screen. (Displays No. 1 through No. 4 in order repeatedly.)

No	Item	Display	Remarks
1	Software version		[0103] : Version 1.03
2	Refrigerant type		[ 410] : R410A
3	Model and capacity		[H-20] : Cooling/Heating 20 HP For the first few minutes after power on, the capacity of each outdoor unit is displayed. Thereafter, the combined capacity is displayed.
4	Communication address		[ 51] : Address 51

After the initial settings have been completed, the information on these items can be checked by making the switch setting that corresponds to No. 517 in the LED display table.

#### Note

Only item No. 1 "Software Version" appears on the display if there is a wiring failure between the control board and the transmission line power supply board or if the circuit board has failed.



### 3. Time data storage function

The outdoor unit has a simple clock function that enables the unit to calculate the current time with an internal timer by receiving the time set by the system controller, such as G(B)-50A.

If an error (including a preliminary error) occurs, the error history data and the error detection time are stored into the service memory.

The error detection time stored in the service memory and the current time can be seen on the service LED.


**Note**

- 1) Use the time displayed on the service LED as a reference.
- 2) The date and the time are set to "00" by default. If a system controller that sets the time, such as G(B)-50A is not connected, the elapsed time and days since the first power on will be displayed.  
If the time set on a system controller is received, the count will start from the set date and the time.
- 3) The time is not updated while the power of the indoor unit is turned off. When the power is turned off and then on again, the count will resume from the time before the power was turned off. Thus, the time that differs the actual time will be displayed. (This also applies when a power failure occurs.)  
The system controller, such as G(B)-50A, adjusts the time once a day. When the system controller is connected, the time will be automatically updated to the correct current time after the time set by the system controller is received. (The data stored into the memory before the set time is received will not be updated.)

**(1) Reading the time data:**

- 1) Time display

Example: 12 past 9

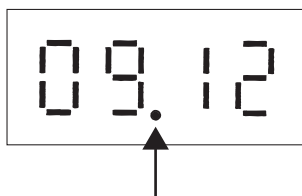


\* Disappears if the time data is deviated due to a power failure, or if a system controller that sets the time is not connected.

- 2) Date display

•When the main controller that can set the time is connected


Example: May 10, 2003

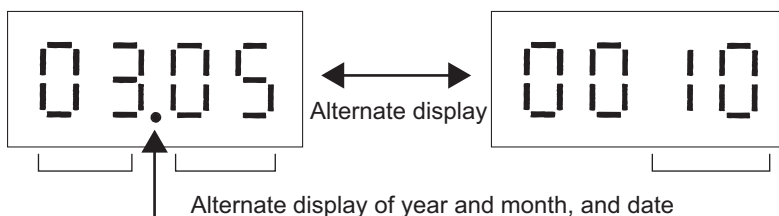

\* Appears between the year and the month, and nothing appears when the date is displayed.

•When the main controller that can set the time is not connected

Example: 52 days after power was turned on

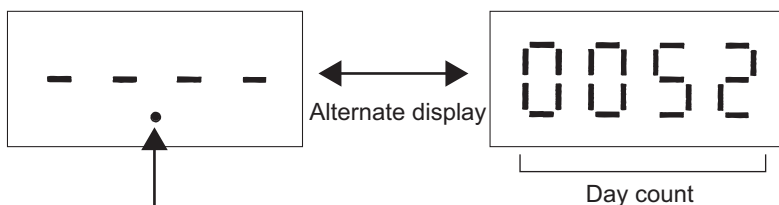

\* Appears between the year and the month, and nothing appears when the date is displayed.

**LED monitor display**  
**Current data**

No.	SW1	Item	Display								Remarks		
			LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8			
0	0000000000	Relay output display 1 Lighting	Comp in operation					72C			OC	CPU in operation	
1	1000000000	Check (error) display 1 OC/OS error	0000 to 9999 (Address and error codes highlighted)										
2	0100000000	Check (error) display 2 OC/OS error	0000 to 9999 (Address and error codes highlighted)										
3	1100000000	Check (error) display 3 (Including IC and BC)	0000 to 9999 (Address and error codes highlighted)										
4	0010000000	Relay output display 2 Top	21S4a		CH11			SV1a					
		Relay output display 2 Bottom			21S4b	SV5b							
5	1010000000	Relay output display 3 Top									SV9	Power supply for indoor transmission line	
		Relay output display 3 Bottom											
6	0110000000	Special control											
7	1110000000	Communication demand capacity						System rotation in progress		Stopped under the system rotation control		Communication error/20-second re-start delay mode	
8	0001000000	Communication demand capacity	0000 to 9999										
9	1001000000	Contact point demand capacity	0000 to 9999										
10	0101000000	Contact point demand capacity	0000 to 9999										

Current data		SW1	Item	Display								Remarks	
				LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8		
11		1101000000	External signal (Open input contact point)	Contact point demand	Low-noise mode (Capacity priority )	Snow sensor	Cooling-heat- ing changeover (Cooling)	Cooling-heat- ing changeover (Heating)					
12		0011000000	External signal (Open input contact point)										Low-noise mode (Quiet priority)
13		1011000000											
14		0111000000	Outdoor unit operation status			20-second re- start delay mode	Compressor in operation	Preliminary error	Error	20-second re- start delay af- ter instanta- neous power failure			Preliminary low pressure error
15		1111000000											
16		0000100000	Indoor unit check	Top Bottom	Unit No. 1								
17		1000100000											
18		0100100000											
19		1100100000											
20		0010100000	Indoor unit Operation mode	Top Bottom	Unit No. 1								
21		1010100000											
22		0110100000											
23		1110100000											
24		0001100000	Indoor unit thermostat	Top Bottom	Unit No. 1								
25		1001100000											
26		0101100000											
27		1101100000											
28		0011100000											

**Current data**

No.	SW1	Item	Display								Remarks	
			LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8		
29	1234567890											
30	1011100000											
31	01111100000											
32	11111100000											
33	0000010000											
34	1000010000											
35	0100010000											
36	1100010000											
37	0010010000											
38	1010010000											
39	1110010000	Outdoor unit Operation mode	Permissible stop	Standby	Cooling		Heating				Dehumidifying operation	
40	0001010000											
41	1001010000											
42	0101010000	Outdoor unit control mode	Stop	Thermo OFF	Abnormal stop	Scheduled control	Initial start up	Defrost	Oil balance	Low frequency oil recovery		
43	1101010000											
44	0011010000											
45	1011010000	TH4					-99.9 to 999.9					The unit is [°C]
46	0111010000	TH3					-99.9 to 999.9					
47	1111010000	TH7					-99.9 to 999.9					
48	0000110000	TH6					-99.9 to 999.9					
49	1000110000	TH2					-99.9 to 999.9					
50	0100110000	TH5					-99.9 to 999.9					
51	1100110000											
52	0010110000											
53	1010110000											
54	0110110000											
55	1110110000											

**Current data**

No.	SW1	Item	Display								Remarks				
			LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8					
56	0001110000	THHS1								-99.9 to 999.9					The unit is [°C]
57	1001110000	THBOX								-99.9 to 999.9					The unit is [kgf/cm <sup>2</sup> ]
58	0101110000	High-pressure sensor data								-99.9 to 999.9					
59	1101110000	Low-pressure sensor data								-99.9 to 999.9					
60	0011110000														
61	1011110000														
62	0111110000														
63	1111110000														
64	0000001000														
65	1000001000														
66	0100001000														
67	1100001000														
68	0010001000														
69	1010001000														
70	0110001000														
71	1110001000														
72	0001001000														
73	1001001000														
74	0101001000														
75	1101001000														
76	0011001000														
77	1011001000														
78	0111001000	Σ Qj													0000 to 9999
79	1111001000	Σ Qjc													0000 to 9999
80	0000101000	Σ Qjh													0000 to 9999

**Current data**

No.	SW1	Item	Display								Remarks	
			LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8		
81	1000101000	Target Tc										The unit is [°C]
82	0100101000	Target Te										
83	1100101000	Tc										
84	0010101000	Te										
85	1010101000											
86	0110101000											
87	1110101000	Total frequency of each unit							0000 to 9999			Control data [ Hz ]
88	0001101000	COMP frequency							0000 to 9999			
89	1001101000											
90	0101101000											
91	1101101000	COMP operating frequency							0000 to 9999			The unit is [pps] Output frequency of the inverter depends on the type of compressor and equals the integer multiples (x1, x2 etc.) of the operating frequency of the compressor
92	0011101000											
93	1011101000											
94	0111101000	AK							0000 to 9999			
95	1111101000	FAN							0000 to 9999			Fan output [ % ]
96	0000011000	Fan inverter output frequency							0000 to 9999			Twice the actual output frequency
97	1000011000											
98	0100011000											
99	1100011000											
100	0010011000											
101	1010011000											
102	0110011000											
103	1110011000	LEV1							0 to 480			Outdoor LEV opening (Fully open: 480)

**Current data**

No.	SW1	Item	Display								Remarks
			LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8	
104	0001011000	LEV2	60 to 1400								Outdoor LEV opening (Fully open: 1400)
105	1001011000										
106	0101011000										
107	1101011000										
108	0011011000										
109	1011011000										
110	0111011000										
111	1111011000	COMP bus voltage	00.0 to 999.9								The unit is [ V ]
112	0000111000										
113	1000111000										
114	0100111000										
115	1100111000										
116	0010111000										
117	1010111000	COMP Operation time Upper 4 digits	0000 to 9999								The unit is [ h ]
118	0110111000	COMP Operation time Lower 4 digits	0000 to 9999								
119	1110111000										
120	0001111000										
121	1001111000	Backup mode	Abnormal pressure rise	High-pres- sure drop	Low-pressure drop	Abnormal Td rise					Stays lit for 90 seconds after the completion of backup control
122	0101111000										
123	1101111000	COMP number of start- stop events Upper 4 digits	0000 to 9999								Count-up at start-up The unit is [Time]
124	0011111000	COMP number of start- stop events Lower 4 digits	0000 to 9999								
125	1011111000										
126	0111111000										

Current data		SW1	Item	Display								Remarks	
				LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8		
127		1234567890											
128		1111111000											
129		0000000100											
130		1000000100											
131		0100000100											
132		1100000100											
133		0010000100											
134		1010000100											
135		0110000100											
136		1110000100											
137		0001000100											
138		1001000100											
139		0101000100											
140		1101000100											
141		0011000100											
142		1011000100											
143		0111000100											
144		1111000100											
145		0000100100											
146		1000100100											
147		0100100100											
148		1100100100											
149		0010100100											
150		1010100100											
151		0110100100											
152		1110100100											
153		0001100100											
154		1001100100											



Current data		SW1	Item	Display								Remarks	
				LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8		
155		1234567890											
156		1101100100											
157		0011100100											
158		1011100100											
159		0111100100											
160		1111100100											
161		0000010100											
162		1000010100											
163		0100010100											
164		1100010100											
165		0010010100											
166		1010010100											
167		0110010100											
168		1110010100											
169		0001010100											
170		1001010100											
171		0101010100											
172		1101010100											
173		0011010100											
174		1011010100											
175		0111010100											
176		1111010100											
177		0000110100											
177		1000110100											

**Current data**

No.	SW1	Item	Display								Remarks	
			LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8		
178	1234567890	Error history 1									0000 to 9999	Address and error codes highlighted If no errors are detected, "----" appears on the display. Preliminary error information of the OS does not appear on the OC. Neither preliminary error information of the OC nor error information of the IC appears on the OS.
179	0100110100	Error details of inverter									Error details of inverter (0001-0120)	
180	1100110100	Error history 2									0000 to 9999	
181	0010110100	Error details of inverter									Error details of inverter (0001-0120)	
182	1010110100	Error history 3									0000 to 9999	
183	0110110100	Error details of inverter									Error details of inverter (0001-0120)	
184	1110110100	Error history 4									0000 to 9999	
185	0001110100	Error details of inverter									Error details of inverter (0001-0120)	
186	1001110100	Error history 5									0000 to 9999	
187	0101110100	Error details of inverter									Error details of inverter (0001-0120)	
188	1101110100	Error history 6									0000 to 9999	
189	0011110100	Error details of inverter									Error details of inverter (0001-0120)	
190	1011110100	Error history 7									0000 to 9999	
191	0111110100	Error details of inverter									Error details of inverter (0001-0120)	
192	1111110100	Error history 8									0000 to 9999	
193	000001100	Error details of inverter									Error details of inverter (0001-0120)	
194	100001100	Error history 9									0000 to 9999	
195	010001100	Error details of inverter									Error details of inverter (0001-0120)	
196	110001100	Error history 10									0000 to 9999	
197	0010001100	Error details of inverter									Error details of inverter (0001-0120)	
198	1010001100	Error history of inverter (At the time of last data backup before error)									0000 to 9999	
199	0110001100	Error details of inverter									Error details of inverter (0001-0120)	
200	1110001100	Error history of inverter									0000 to 9999	

**Error history**

No.	SW1	Item	Display								Remarks
			LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8	
201	1001001100	Outdoor unit operation status			20-seconds restart mode	Compressor in operation	Preliminary error	Error	20-seconds restart after instantaneous power failure	Preliminary low pressure error	
202	0101001100										
203	1101001100										
204	0011001100										
205	1011001100	Outdoor unit Operation mode	Permissible stop	Standby	Cooling			Heating			Dehumidifying operation
206	0111001100										
207	1111001100										
208	0000101100	Outdoor unit control mode	Stop	Thermo OFF	Abnormal stop	Scheduled control		Initial start up	Defrost	Oil balance	Low frequency oil recovery
209	1000101100			Refrigerant recovery							
210	0100101100										
211	1100101100	Relay output display 1 Lighting	Comp in operation					72C		OC	Always lit
212	0010101100	Relay output display 2 Lighting	21S4a		CH11			SV1a			
		Relay output display 3 Lighting			21S4b		SV5b				
213	1010101100	Relay output display 3 Lighting									Lit while power to the indoor units is being supplied
214	0110101100									SV9	
215	1110101100										

**Error history**

No.	SW1	Item	Display								Remarks	
			LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8		
216	0001101100	TH4					-99.9 to 999.9					The unit is [°C]
217	1001101100	TH3					-99.9 to 999.9					
218	0101101100	TH7					-99.9 to 999.9					
219	1101101100	TH6					-99.9 to 999.9					
220	0011101100	TH2					-99.9 to 999.9					
221	1011101100	TH5					-99.9 to 999.9					
222	0111101100											
223	1111101100											
224	0000011100											
225	1000011100											
226	0100011100											
227	1100011100	THHS1					-99.9 to 999.9					The unit is [°C]
228	0010011100	THBOX					-99.9 to 999.9					
229	1010011100	High-pressure sensor data					-99.9 to 999.9					The unit is [kgf/cm <sup>2</sup> ]
230	0110011100	Low-pressure sensor data					-99.9 to 999.9					
231	1110011100											
232	0001011100											
233	1001011100											
234	0101011100											
235	1101011100											
236	0011011100											
237	1011011100											
238	0111011100											
239	1111011100											
240	0000111100											
241	1000111100											
242	0100111100											
243	1100111100											

**Error history**

No.	SW1	Item	Display								Remarks	
			LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8		
244	1234567890											
245	0010111100											
246	1010111100											
247	0110111100											
248	1110111100											
249	0001111100											
249	1001111100	Σ Qj					0000 to 9999					
250	0101111100	Σ Qjc					0000 to 9999					
251	1101111100	Σ Qjh					0000 to 9999					
252	0011111100	Target Tc					-99.9 to 999.9					The unit is [°C]
253	1011111100	Target Te					-99.9 to 999.9					The unit is [°C]
254	0111111100	Tc					-99.9 to 999.9					
255	1111111100	Te					-99.9 to 999.9					
256	0000000010											
257	1000000010											Control data [ Hz ]
258	0100000010	Total frequency of each unit					0000 to 9999					
259	1100000010	COMP frequency					0000 to 9999					
260	0010000010											
261	1010000010											
262	0110000010	COMP operating frequency					0000 to 9999					The unit is [pps]
263	1110000010											
264	0001000010											
265	1001000010	AK					0000 to 9999					
266	0101000010	FAN					0000 to 9999					Fan inverter output [ % ]
267	1101000010	Fan inverter output frequency					0000 to 9999					Twice the actual output frequency
268	0011000010											
269	1011000010											
270	0111000010											

**Error history**

No.	SW1	Item	Display								Remarks	
			LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8		
271	1234567890											
272	1111000010											
273	0000100010											
274	1000100010											
275	0100100010	LEV1					0 to 480					Outdoor unit LEV opening (Fully open: 480)
276	1100100010	LEV2					60 to 1400					Outdoor unit LEV opening (Fully open: 1400)
277	0010100010											
278	1010100010											
279	0110100010											
280	1110100010											
281	0001100010											
282	1001100010	COMP bus voltage					00.0 to 999.9					The unit is [ V ]
283	0101100010											
284	1101100010											
285	0011100010											
286	1011100010											
287	0111100010											
288	1111100010	COMP Operation time Up- per 4 digits					0000 to 9999					The unit is [ h ]
289	0000010010	COMP Operation time Lower 4 digits					0000 to 9999					
290	1000010010											
291	0100010010											
292	1100010010											
293	0010010010											
293	1010010010											

**Error history**

No.	SW1	Item	Display								Remarks
			LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8	
294	0110010010	COMP number of start-stop events Upper 4 digits	0000 to 9999								Count-up at start-up The unit is [Time]
295	1110010010	COMP number of start-stop events Lower 4 digits	0000 to 9999								
296	0001010010										
297	1001010010										
298	0101010010										
299	1101010010										
300	0011010010										

**Current data**

No.	SW1	Item	Display								Remarks
			LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8	
301	1234567890										
302	1011010010										
303	0111010010										
304	1111010010	System rotation composing unit address	51 to 100 (The addresses of units in the group are displayed one by one every second, starting with the main OC address.)								Displayed only on the control unit
305	0000110010	Address of the current backup unit on rotation	51 to 100								Displayed only on the control unit
306	1000110010	Stoppage time of unit on rotation	0000 to 9999								Displayed only on the control unit
307	0100110010										
308	1100110010										
309	0010110010										
310	1010110010										
311	1110110010										
312	0001110010										
313	1001110010										
314	0101110010										
315	1101110010										
316	0011110010										
317	1011110010										
318	0111110010										
319	1111110010										
320	000001010										
321	100001010										
322	010001010										
323	110001010										
324	0010001010										
325	1010001010										
326	0110001010										



Current data		SW1	Item	Display								Remarks	
				LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8		
327		1234567890											
328		1110001010											
329		0001001010											
330		1001001010											
331		0101001010											
332		1101001010											
333		0011001010											
334		1011001010											
335		0111001010											
336		1111001010											
337		0000101010											
338		1000101010											
339		0100101010											
340		1100101010											
341		0010101010											
342		1010101010											
343		0110101010											
344		1110101010											
345		0001101010											
346		1001101010											
347		0101101010											
348		1101101010											
349		0011101010											
350		1011101010											

**Data on indoor unit system**

No.	SW1	Item	Display								Remarks
	1234567890		LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8	
351	1111101010	IC1 Address/capacity code	0000 to 9999				0000 to 9999				Displayed alternately every 5 seconds
352	0000011010										
353	1000011010										
354	0100011010										
355	1100011010										
356	0010011010										
357	1010011010										
358	0110011010										
359	1110011010										
360	0001011010										
361	1001011010										
362	0101011010										
363	1101011010										
364	0011011010										
365	1011011010										
366	0111011010										
367	1111011010										
368	0000111010										
369	1000111010										
370	0100111010										
371	1100111010										
372	0010111010										
373	1010111010										
374	0110111010										
375	1110111010										
376	0001111010										

**Data on indoor unit system**

No.	SW1		Item	Display								Remarks	
	1234567890	1001111010		LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8		
377		1001111010											
378		0101111010											
379		1101111010											
380		0011111010											
381		1011111010											
382		0111111010											
383		1111111010											
384		0000000110											
385		1000000110											
386		0100000110											
387		1100000110											
388		0010000110											
389		1010000110											
390		0110000110											
391		1110000110											
392		0001000110											
393		1001000110											
394		0101000110											
395		1101000110											
396		0011000110											
397		1011000110											
398		0111000110											
399		1111000110											
400		0000100110											
401		1000100110											
402		0100100110											
403		1100100110											
404		0010100110											

**Data on indoor unit system**

No.	SW1		Item	Display								Remarks	
	1234567890			LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8		
405	1010100110												
406	0110100110												
407	1110100110												
408	0001100110		IC1 Suction temperature										The unit is [°C]
409	1001100110												
410	0101100110												
411	1101100110												
412	0011100110												
413	1011100110												
414	0111100110												
415	1111100110												
416	000010110												
417	100010110												
418	0100010110												
419	1100010110												
420	0010010110												
421	1010010110												
422	0110010110												
423	1110010110												
424	0001010110												
425	1001010110												
426	0101010110												
427	1101010110												
428	0011010110												
429	1011010110												
430	0111010110												
431	1111010110												
432	0000110110												

**Data on indoor unit system**

No.	SW1		Item	Display								Remarks	
	1234567890			LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8		
433	1000110110												
434	0100110110												
435	1100110110												
436	0010110110												
437	1010110110												
438	0110110110												
439	1110110110												
440	0001110110												
441	1001110110												
442	0101110110												
443	1101110110												
444	0011110110												
445	1011110110												
446	0111110110												
447	1111110110												
448	0000001110												
449	1000001110												
450	0100001110												
451	1100001110												
452	0010001110												
453	1010001110												
454	0110001110												
455	1110001110												
456	0001001110												
457	1001001110												
458	0101001110		IC1 Liquid pipe temperature										The unit is [°C]
459	1101001110												
460	0011001110												

**Data on indoor unit system**

No.	SW1	Item	Display								Remarks	
			LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8		
461	1234567890											
462	1011001110											
463	0111001110											
464	1111001110											
465	0000101110											
466	1000101110											
467	0100101110											
468	1100101110											
469	0010101110											
470	1010101110											
471	0110101110											
472	1110101110											
473	0001101110											
474	1001101110											
475	0101101110											
476	1101101110											
477	0011101110											
478	1011101110											
479	0111101110											
480	1111101110											
481	0000011110											
482	1000011110											
483	0100011110											
484	1100011110											
485	0010011110											
486	1010011110											
487	0110011110											
488	1110011110											

**Data on indoor unit system**

No.	SW1	Item	Display								Remarks	
	1234567890		LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8		
489	1001011110											
490	0101011110											
491	1101011110											
492	0011011110											
493	1011011110											
494	0111011110											
495	1111011110											
496	0000111110											
497	1000111110											
498	0100111110											
499	1100111110											
500	0010111110											
501	1010111110											
502	0110111110											
503	1110111110											
504	0001111110											
505	1001111110											
506	0101111110											
507	1101111110											
508	0011111110											
509	1011111110											
510	0111111110											
511	1111111110											

**Setting data**

No.	SW1	Item	Display								Remarks
			LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8	
512	0000000001	Self-address	Alternate display of self address and unit model								
513	1000000001	IC address	Count-up display of number of connected units								
514	0100000001										
515	1100000001										
516	0010000001										
517	1010000001	Version/Capacity	SW version -> Refrigerant type -> Model and capacity -> Communication address								
518	0110000001										
519	1110000001										
520	0001000001										
521	1001000001										
522	0101000001										



**Data on indoor unit system**

No.	SW1	Item	Display								Remarks	
			LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8		
523	1101000001	IC1 Gas pipe temperature										The unit is [°C]
524	0011000001											
525	1011000001											
526	0111000001											
527	1111000001											
528	0000100001											
529	1000100001											
530	0100100001											
531	1100100001											
532	0010100001											
533	1010100001											
534	0110100001											
535	1110100001											
536	0001100001											
537	1001100001											
538	0101100001											
539	1101100001											
540	0011100001											
541	1011100001											
542	0111100001											
543	1111100001											
544	0000010001											
545	1000010001											
546	0100010001											
547	1100010001											
548	0010010001											
549	1010010001											

**Data on indoor unit system**

No.	SW1	Item	Display								Remarks	
	1234567890		LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8		
550	0110010001											
551	1110010001											
552	0001010001											
553	1001010001											
554	0101010001											
555	1101010001											
556	0011010001											
557	1011010001											
558	0111010001											
559	1111010001											
560	0000110001											
561	1000110001											
562	0100110001											
563	1100110001											
564	0010110001											
565	1010110001											
566	0110110001											
567	1110110001											
568	0001110001											
569	1001110001											
570	0101110001											
571	1101110001											
572	0011110001											

**Data on indoor unit system**

No.	SW1		Item	Display								Remarks	
	1234567890			LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8		
573	1011110001		IC1SH										The unit is [ °C ]
574	0111110001												
575	1111110001												
576	0000001001												
577	1000001001												
578	0100001001												
579	1100001001												
580	0010001001												
581	1010001001												
582	0110001001												
583	1110001001												
584	0001001001												
585	1001001001												
586	0101001001												
587	1101001001												
588	0011001001												
589	1011001001												
590	0111001001												
591	1111001001												
592	0000101001												
593	1000101001												
594	0100101001												
595	1100101001												
596	0010101001												
597	1010101001												
598	0110101001												
599	1110101001												

**Data on indoor unit system**

No.	SW1	Item								Display								Remarks			
	1234567890	LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8	LD9	LD10	LD11	LD12	LD13	LD14						
600	0001101001																				
601	1001101001																				
602	0101101001																				
603	1101101001																				
604	0011101001																				
605	1011101001																				
606	0111101001																				
607	1111101001																				
608	0000011001																				
609	1000011001																				
610	0100011001																				
611	1100011001																				
612	0010011001																				
613	1010011001																				
614	0110011001																				
615	1110011001																				
616	0001011001																				
617	1001011001																				
618	0101011001																				
619	1101011001																				
620	0011011001																				
621	1011011001																				
622	0111011001																				

**Data on indoor unit system**

No.	SW1	Item	Display								Remarks
	1234567890		LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8	
623	1111011001	IC1SC	-99.9 to 999.9								The unit is [ °C ]
624	0000111001										
625	1000111001										
626	0100111001										
627	1100111001										
628	0010111001										
629	1010111001										
630	0110111001										
631	1110111001										
632	0001111001										
633	1001111001										
634	0101111001										
635	1101111001										
636	0011111001										
637	1011111001										
638	0111111001										
639	1111111001										
640	000000101										
641	100000101										
642	010000101										
643	110000101										
644	001000101										
645	101000101										
646	011000101										
647	111000101										
648	0001000101										
649	1001000101										

**Data on indoor unit system**

No.	SW1	Item								Display								Remarks
	1234567890	LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8	LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8	
650	0101000101																	
651	1101000101																	
652	0011000101																	
653	1011000101																	
654	0111000101																	
655	1111000101																	
656	0000100101																	
657	1000100101																	
658	0100100101																	
659	1100100101																	
660	0010100101																	
661	1010100101																	
662	0110100101																	
663	1110100101																	
664	0001100101																	
665	1001100101																	
666	0101100101																	
667	1101100101																	
668	0011100101																	
669	1011100101																	
670	0111100101																	
671	1111100101																	
672	0000010101																	
673	1000010101																	
674	0100010101																	
675	1100010101																	

**Setting data**

No.	SW1	Item	Display								Remarks
			LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8	
676	0010010101	INV board SW version	0.00 to 99.99								
677	1010010101										
678	0110010101										
679	1110010101	Fan board SW version	0.00 to 99.99								
680	0001010101										
681	1001010101										
682	0101010101										
683	1101010101										
684	0011010101										
685	1011010101										
686	0111010101										
687	1111010101										
688	0000110101	Current time	00:00 to 23:59								Hour: minute
689	1000110101	Current time -2	00.00 to 99.12/1 to 31								Year and month, and date alternate display
690	0100110101	Time of error detection 1	00:00 to 23:59								Hour: minute
691	1100110101	Time of error detection 1-2	00.00 to 99.12/1 to 31								Year and month, and date alternate display
692	0010110101	Time of error detection 2	00:00 to 23:59								Hour: minute
693	1010110101	Time of error detection 2-2	00.00 to 99.12/1 to 31								Year and month, and date alternate display
694	0110110101	Time of error detection 3	00:00 to 23:59								Hour: minute
695	1110110101	Time of error detection 3-2	00.00 to 99.12/1 to 31								Year and month, and date alternate display
696	0001110101	Time of error detection 4	00:00 to 23:59								Hour: minute
697	1001110101	Time of error detection 4-2	00.00 to 99.12/1 to 31								Year and month, and date alternate display
698	0101110101	Time of error detection 5	00:00 to 23:59								Hour: minute
699	1101110101	Time of error detection 5-2	00.00 to 99.12/1 to 31								Year and month, and date alternate display

**Setting data**

No.	SW1	Item	Display								Remarks	
			LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8		
700	1234567890 0011110101	Time of error detection 6									00:00 to 23:59	Hour: minute
701	1011110101	Time of error detection 6-2									00.00 to 99.12/1 to 31	Year and month, and date alternate display
702	0111110101	Time of error detection 7									00:00 to 23:59	Hour: minute
703	1111110101	Time of error detection 7-2									00.00 to 99.12/1 to 31	Year and month, and date alternate display
704	0000001101	Time of error detection 8									00:00 to 23:59	Hour: minute
705	1000001101	Time of error detection 8-2									00.00 to 99.12/1 to 31	Year and month, and date alternate display
706	0100001101	Time of error detection 9									00:00 to 23:59	Hour: minute
707	1100001101	Time of error detection 9-2									00.00 to 99.12/1 to 31	Year and month, and date alternate display
708	00100001101	Time of error detection 10									00:00 to 23:59	Hour: minute
709	10100001101	Time of error detection 10-2									00.00 to 99.12/1 to 31	Year and month, and date alternate display
710	01100001101	Time of last data backup before error									00:00 to 23:59	Hour: minute
711	11100001101	Time of last data backup before error -2									00.00 to 99.12/1 to 31	Year and month, and date alternate display
712	0001001101											
713	1001001101											



**Data on indoor unit system**

No.	SW1	Item	Display								Remarks
	1234567890		LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8	
714	0101001101	IC1 LEV opening	0000 to 9999								Fully open: 2000
715	1101001101										
716	0011001101										
717	1011001101										
718	0111001101										
719	1111001101										
720	0000101101										
721	1000101101										
722	0100101101										
723	1100101101										
724	0010101101										
725	1010101101										
726	0110101101										
727	1110101101										
728	0001101101										
729	1001101101										
730	0101101101										
731	1101101101										
732	0011101101										
733	1011101101										
734	0111101101										
735	1111101101										
736	0000011101										
737	1000011101										
738	0100011101										
739	1100011101										
740	0010011101										

**Data on indoor unit system**

No.	SW1	Item	Display								Remarks	
			LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8		
741	1010011101											
742	0110011101											
743	1110011101											
744	0001011101											
745	1001011101											
746	0101011101											
747	1101011101											
748	0011011101											
749	1011011101											
750	0111011101											
751	1111011101											
752	0000111101											
753	1000111101											
754	0100111101											
755	1100111101											
756	0010111101											
757	1010111101											
758	0110111101											
759	1110111101											
760	0001111101											
761	1001111101											
762	0101111101											
763	1101111101											
764	0011111101	IC1 Operation mode										
765	1011111101											
766	0111111101											
767	1111111101											
768	0000000011											

0000 : Stop 0001 : Ventilation 0002 : Cooling 0003 : Heating

**Data on indoor unit system**

No.	SW1	Item								Display								Remarks			
	1234567890	LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8	LD9	LD10	LD11	LD12	LD13	LD14						
769	1000000011																				
770	0100000011																				
771	1100000011																				
772	0010000011																				
773	1010000011																				
774	0110000011																				
775	1110000011																				
776	0001000011																				
777	1001000011																				
778	0101000011																				
779	1101000011																				
780	0011000011																				
781	1011000011																				
782	0111000011																				
783	1111000011																				
784	0000100011																				
785	1000100011																				
786	0100100011																				
787	1100100011																				
788	0010100011																				
789	1010100011																				
790	0110100011																				
791	1110100011																				
792	0001100011																				
793	1001100011																				
794	0101100011																				
795	1101100011																				

**Data on indoor unit system**

No.	SW1	Item	Display								Remarks	
			LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8		
796	0011100011											
797	1011100011											
798	0111100011											
799	1111100011											
800	0000010011											
801	1000010011											
802	0100010011											
803	1100010011											
804	0010010011											
805	1010010011											
806	0110010011											
807	1110010011											
808	0001010011											
809	1001010011											
810	0101010011											
811	1101010011											
812	0011010011											
813	1011010011											
814	01111010011	IC1 filter							0000 to 9999			Hours since last maintenance [ h ]
815	1111010011											
816	0000110011											
817	1000110011											
818	0100110011											
819	1100110011											
820	0010110011											
821	1010110011											
822	0110110011											

**Data on indoor unit system**

No.	SW1		Item	Display								Remarks	
	1234567890			LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8		
823	1110110011												
824	0001110011												
825	1001110011												
826	0101110011												
827	1101110011												
828	0011110011												
829	1011110011												
830	0111110011												
831	1111110011												
832	0000001011												
833	1000001011												
834	0100001011												
835	1100001011												
836	0010001011												
837	1010001011												
838	0110001011												
839	1110001011												
840	0001001011												
841	1001001011												
842	0101001011												
843	1101001011												
844	0011001011												
845	1011001011												
846	0111001001												
847	1111001011												
848	0000101011												
849	1000101011												
850	0100101011												

**Data on indoor unit system**

No.	SW1	Item	Display								Remarks	
			LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8		
851	1234567890											
852	1100101011											
853	0010101011											
854	1010101011											
855	0110101011											
856	1110101011											
857	0001101011											
858	1001101011											
859	0101101011											
860	1101101011											
861	0011101011											
862	1011101011											
863	0111101011											

Other types of data

No.	SW1	Item	Display								Remarks
			LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8	
864	1234567890										
865	0000011011										
866	1000011011										
867	0100011011										
868	1100011011										
869	0010011011										
870	1010011011										
871	0110011011	U-phase current effective value 1					-99.9 to 999.9				The unit is [ A ]
872	0001011011	W-phase current effective value 1					-99.9 to 999.9				
873	1001011011	Power factor phase angle 1					-99.9 to 999.9				The unit is [ deg ]
874	0101011011										
875	1101011011										
876	0011011011										
877	1011011011										
878	0111011011										
879	1111011011										
880	0000111011	Control board Reset counter					0 to 254				The unit is [ time ]
881	1000111011	INV board Reset counter					0 to 254				
882	0100111011										
883	1100111011										
884	0010111011	Fan board Reset counter					0 to 254				The unit is [ time ]
885	1010111011										
886	0110111011										
887	1110111011										
888	0001111011										

**Other types of data**

No.	SW1	Item	Display								Remarks
			LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8	
889	1234567890										
890	1001111011										
891	0101111011										
892	1101111011										
893	0011111011										
894	1011111011										
895	0111111011										
896	1111111011										
897	0000000111										
898	1000000111										
899	0100000111										
900	1100000111										
901	0010000111										
902	1010000111										
903	0110000111										
904	1110000111										
905	0001000111										
906	1001000111										
907	0101000111										
1020	1101000111										
1021	0011111111										
1022	1011111111										
1023	0111111111										
1023	1111111111										



**Service Handbook PUHY-P250YHM-A  
PFD-P250VM-E  
PFD-P500VM-E**

