

# Hydrobox

Гидромодуль без накопительного бака ГВС

**EHSC series**

**EHSD series**

**EHPX series**

**ERSC series**

**ERSD series**

## INSTALLATION MANUAL

For safe and correct use, read this manual and the outdoor unit installation manual thoroughly before installing the hydrobox. English is the original language. The other language versions are translations of the original.

FOR INSTALLER

## INSTALLATIONSHANDBUCH

Aus Sicherheitsgründen und zur richtigen Verwendung vor der Installation der Hydrobox die vorliegende Bedienungsanleitung und die Installationsanleitung der Außeneinheit gründlich durchlesen. Die Originalsprache ist Englisch. Die anderen Sprachversionen sind vom Original übersetzt.

FÜR INSTALLATEURE

## MANUEL D'INSTALLATION

Pour une utilisation correcte et sûre, lisez soigneusement ce manuel et le manuel d'installation de l'unité extérieure avant d'installer l'ECODAN hydrobox. L'anglais est la langue originale. Les versions fournies dans d'autres langues sont des traductions de l'original.

POUR L'INSTALLATEUR

## INSTALLATIEHANDLEIDING

Lees voor een veilig en juist gebruik deze handleiding en de installatiehandleiding van de buiten-unit aandachtig door voordat u met de installatie van de hydrobox begint. Engels is de oorspronkelijke taal. De andere taalversies zijn vertalingen van het origineel.

VOOR DE INSTALLATEUR

## MANUAL DE INSTALACIÓN

Para un uso correcto y seguro, lea detalladamente este manual y el manual de instalación de la unidad exterior antes de instalar la Hydrobox. El idioma original del documento es el inglés. Las versiones en los demás idiomas son traducciones del original.

PARA EL INSTALADOR

## MANUALE DI INSTALLAZIONE

Per un utilizzo sicuro e corretto, prima di installare l'Hydrobox leggere attentamente questo manuale e quello di installazione dell'unità esterna. Il testo originale è redatto in lingua inglese. Le altre versioni linguistiche rappresentano traduzioni dell'originale.

PER L'INSTALLATORE

## MANUAL DE INSTALAÇÃO

Para uma utilização segura e correcta, leia este manual e o manual de instalação da unidade interior antes de instalar o permutador de calor. O idioma original é o inglês. As versões em outros idiomas são traduções do idioma original.

PARA O INSTALADOR

## INSTALLATIONS MANUAL

Af hensyn til sikker og korrekt brug skal denne vejledning og vejledningen til udendørsenheden læses omhyggeligt, inden hydroboxenheden installeres. Engelsk er det oprindelige sprog. De andre sprogversioner er oversættelser af originalen.

TIL INSTALLATØREN

## INSTALLATIONS MANUAL

För säker och korrekt användning, läs denna manual och utomhusenhetens installationsmanual innan du installerar hydroboxen. Engelska är originalspråket. De övriga språkversionerna är översättningar av originalet.

FÖR INSTALLATÖREN

## INSTALLERINGS HÅNDBOK

For å sikre en trygg og riktig bruk skal du lese denne håndboken og installeringshåndboken for utendørsenheten grundig før du monterer hydroboksen. Engelsk er originalspråket. De andre språkversjonene er oversettelser av originalen.

FOR MONTØREN

## ASENNUSOPAS

Lue turvallisista ja asianmukaista käyttöä varten tämä opas ja ulkoyksikön asennusopas huolellisesti ennen hydroboxin asentamista. Alkuperäiskieli on englanti. Muut kieliversiot ovat alkuperäisen käännöksiä.

ASENTAJALLE

## РУКОВОДСТВО ПО УСТАНОВКЕ

Для безопасного и правильного использования внимательно прочитайте данное руководство и руководство по установке наружного блока перед установкой гидромодуля. Оригинальная версия на английском языке, другие - перевод с оригинала.

ДЛЯ МОНТАЖНИКОВ

## PŘÍRUČKA PRO INSTALACI

Z bezpečnostních důvodů a pro správné použití zásobníkového modulu si před jeho instalací důkladně prostudujte Návod k obsluze a také Příručku pro instalaci venkovní jednotky. Jazyk originálu je angličtina. Jiné jazykové verze jsou překlady z originálu.

PRO TECHNIKY PROVÁDĚJÍCÍ INSTALACI

## INSTRUKCJA MONTAŻU

Należy dokładnie zapoznać się z niniejszą instrukcją obsługi i instrukcją montażu jednostki zewnętrznej, aby następnie bezpiecznie i z dobrym skutkiem użytkować moduł wewnętrzny z wbudowanym zasobnikiem CWU. Original dokumentu jest dostępny w języku angielskim. Inne wersje językowe są tłumaczeniami oryginału.

DLA INSTALATORA

## РЪКОВОДСТВО ЗА МОНТАЖ

С оглед на безопасността и за правилна употреба на Hydrobox прочетете внимателно – преди монтажа – настоящото ръководство за потребителя и ръководството за монтаж на външното тяло. Оригиналният език е английски. Другите езикови варианти са превод от оригинал.

ЗА ИНСТАПАТОРИ

English (EN)

Deutsch (DE)

Français (FR)

Nederlands (NL)

Español (ES)

Italiano (IT)

Português (PT)

Dansk (DA)

Svenska (SV)

Norsk (NO)

Suomi (FI)

Русский (RU)

Česky (CZ)

Polski (PL)

Български (BG)




# Contents

1. Safety Notices .....	2
2. Introduction .....	2
3. Technical Information .....	3
4. Installation .....	9
4.1 Location .....	9
4.2 Water Quality and System Preparation .....	12
4.3 Water Pipe Work .....	12
4.4 Electrical Connection .....	15
5. System Set UP .....	18
5.1 DIP Switch Functions .....	18
5.2 Connecting inputs/outputs .....	19
5.3 Wiring for 2-zone temperature control .....	20
5.4 2-zone valve ON/OFF control .....	21
5.5 Indoor unit only operation .....	21
5.6 Smart grid ready .....	21
5.7 Installation procedure for DHW tank .....	22
5.8 Remote Controller Options .....	24
5.9 Using SD memory card .....	26
5.10 Main remote controller .....	27
6. Service and Maintenance .....	35
7. Supplementary information .....	40

EN

## ■ Heat pumps certification

The mark “NF heat pumps” is an independent certification program proving that heat pumps' performances and production quality of the factory are conformed with the certification reference NF-414. The combinations of indoor units and outdoor units, and their applications allowed to use the NF PAC mark can be consulted on the website [www.marque-nf.com](http://www.marque-nf.com)

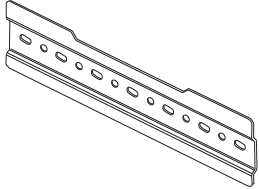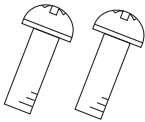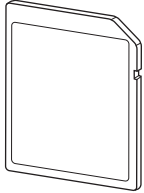Accessories (included)		
Back plate	Screw M5×8	SD memory card
		
1	2	1

## Abbreviations and glossary

No.	Abbreviations/Word	Description
1	Compensation curve mode	Space heating incorporating outdoor ambient temperature compensation
2	COP	Coefficient of Performance the efficiency of the heat pump
3	Cooling mode	Space cooling through fan-coils or underfloor cooling
4	DHW mode	Domestic hot water heating mode for showers, sinks, etc
5	Flow temperature	Temperature at which water is delivered to the primary circuit
6	Freeze stat. function	Heating control routine to prevent water pipes freezing
7	FTC	Flow temperature controller, the circuit board in charge of controlling the system
8	Heating mode	Space heating through radiators or Underfloor heating
9	Hydrobox	Indoor unit housing the component plumbing parts (NO DHW tank)
10	Legionella	Bacteria potentially found in plumbing, showers and water tanks that may cause Legionnaires disease
11	LP mode	Legionella prevention mode – a function on systems with water tanks to prevent the growth of legionella bacterium
12	Packaged model	Plate heat exchanger (Refrigerant - Water) in the outdoor heat pump unit
13	PRV	Pressure relief valve
14	Return temperature	Temperature at which water is delivered from the primary circuit
15	Split model	Plate heat exchanger (Refrigerant - Water) in the indoor unit
16	TRV	Thermostatic radiator valve – a valve on the entrance or exit of the radiator panel to control the heat output

# 1 Safety Notices

Please read the following safety precautions carefully.

**⚠ WARNING:**  
Precautions that must be observed to prevent injuries or death.

**⚠ CAUTION:**  
Precautions that must be observed to prevent damage to unit.

**This installation manual along with the user manual should be left with the product after installation for future reference.**  
**Mitsubishi Electric is not responsible for the failure of locally-supplied parts.**

- Be sure to perform periodical maintenance.
- Be sure to follow your local regulations.
- Be sure to follow the instructions provided in this manual.

## ⚠ WARNING

### Mechanical

- The hydrobox and outdoor units must not be installed, disassembled, relocated, altered or repaired by the user. Ask an authorised installer or technician. If the unit is installed improperly or modified after installation by the user water leakage, electric shock or fire may result.
- The outdoor unit should be securely fixed to a hard level surface capable of bearing its weight.
- The hydrobox should be positioned on a hard vertical surface capable of supporting its filled weight to prevent excessive sound or vibration.
- Do not position furniture or electrical appliances below the outdoor unit or hydrobox.
- The discharge pipework from the emergency/safety devices of the hydrobox should be installed according to local law.
- Only use accessories and replacement parts authorised by Mitsubishi Electric ask a qualified technician to fit the parts.

### Electrical

- All electrical work should be performed by a qualified technician according to local regulations and the instructions given in this manual.
- The units must be powered by a dedicated power supply and the correct voltage and circuit breakers must be used.
- Wiring should be in accordance with national wiring regulations. Connections must be made securely and without tension on the terminals.
- Earth unit correctly.

### General

- Keep children and pets away from both the hydrobox and outdoor units.
- Do not use the hot water produced by the heat pump directly for drinking or cooking. This could cause illness to the user.
- Do not stand on the units.
- Do not touch switches with wet hands.
- Annual maintenance checks on both the hydrobox and the outdoor unit should be conducted by a qualified person.
- Do not place containers with liquids on top of the hydrobox. If they leak or spill onto the hydrobox damage to the unit and/or fire could occur.
- Do not place any heavy items on top of the hydrobox.
- When installing, relocating, or servicing the hydrobox, use only the specified refrigerant (R410A) to charge the refrigerant lines. Do not mix it with any other refrigerant and do not allow air to remain in the lines. If air is mixed with the refrigerant, then it can be the cause of abnormal high pressure in the refrigerant line, and may result in an explosion and other hazards.
- The use of any refrigerant other than that specified for the system will cause mechanical failure or system malfunction or unit breakdown. In the worst case, this could lead to a serious impediment to securing product safety.
- In heating mode, to avoid the heat emitters being damaged by excessively hot water, set the target flow temperature to a minimum of 2°C below the maximum allowable temperature of all the heat emitters. For Zone2, set the target flow temperature to a minimum of 5°C below the maximum allowable flow temperature of all the heat emitters in Zone2 circuit.
- Do not install the unit where combustible gases may leak, be produced, flow, or accumulate. If combustible gas accumulates around the unit, fire or explosion may result.

## ⚠ CAUTION

- Use clean water that meets local quality standards on the primary circuit.
- The outdoor unit should be installed in an area with sufficient airflow according to the diagrams in the outdoor unit installation manual.
- The hydrobox should be located inside to minimise heat loss.
- Water pipe-runs on the primary circuit between outdoor and indoor unit should be kept to a minimum to reduce heat loss.
- Ensure condensate from outdoor unit is piped away from the base to avoid puddles of water.
- Remove as much air as possible from water circuit.
- Refrigerant leakage may cause suffocation. Provide ventilation in accordance with EN378-1.
- Be sure to wrap insulation around the piping. Direct contact with the bare piping may result in burns or frostbite.
- Never put batteries in your mouth for any reason to avoid accidental ingestion.
- Battery ingestion may cause choking and/or poisoning.
- Install the unit on a rigid structure to prevent excessive sound or vibration during operation.
- If power to the hydrobox is to be turned off (or system switched off) for a long time, the water should be drained.
- Preventative measures should be taken against water hammer, such as installing a Water Hammer Arrestor on the primary water circuit, as directed by the manufacturer.
- In order to prevent condensation on emitters, adjust flow temperature appropriately and also set the lower limit of the flow temperature on site.

As for the handling of refrigerant, refer to the outdoor unit installation manual.

# 2 Introduction

The purpose of this installation manual is to instruct competent persons how to safely and efficiently install and commission the hydrobox system. The target readers of this manual are competent plumbers and/or refrigeration engineers

who have attended and passed the requisite Mitsubishi Electric product training and have appropriate qualifications for installation of an unvented hot water hydrobox specific to their country.

## Product specification

Model name	EHSD-MEC	EHSD-MC	EHSD-VM2C	EHSD-VM9C	EHSD-MEC	EHSD-VM2C	EHSD-VM6C	EHSD-VM6EC	EHSD-VM9C	EHSD-VM9EC	EHSC-TM9C	ERSD-VM2C	ERSC-MEC	ERSC-VM2C	EHPX-VM6C	EHPX-VM9C
Overall unit dimensions																
Weight (empty)	38 kg	43 kg	44 kg	45 kg	42 kg	48 kg	49 kg	49 kg	49 kg	44 kg	49 kg	45 kg	43 kg	49 kg	37 kg	38 kg
Weight (full)	44 kg	49 kg	50 kg	51 kg	49 kg	55 kg	56 kg	56 kg	56 kg	51 kg	56 kg	51 kg	50 kg	56 kg	42 kg	43 kg
Water volume of heating circuit in the unit	5.2 kg	5.2 kg	5.2 kg	5.2 kg	6.1 kg	6.1 kg	6.1 kg	6.1 kg	6.1 kg	6.1 kg	6.1 kg	5.5 kg	6.4 kg	6.4 kg	4.5 kg	4.5 kg
Plate heat exchanger (MWA2)	—	—	—	—	✓	✓	✓	✓	✓	✓	✓	—	✓	✓	—	—
Plate heat exchanger (MWA1)	✓	✓	✓	✓	—	—	—	—	—	—	—	✓	—	—	—	—
Cooling mode																
Unvented expansion vessel (Primary heating)	—	10 L	10 L	10 L	—	10 L	—	10 L	10 L	—	10 L	10 L	—	—	10 L	10 L
Charge pressure	—	1 bar	1 bar	1 bar	—	1 bar	—	1 bar	1 bar	—	1 bar	1 bar	—	—	1 bar	1 bar
Control thermostat	NOT available															
Pressure relief valve	1 - 80°C															
Flow sensor	0.3 MPa (3bar)															
Manual reset thermostat	Min. flow 5.0 L/min															
Thermal Cut-out (for dry run prevention)	—	90°C	—	—	—	—	90°C	—	—	—	—	—	—	—	90°C	—
—	—	—	—	—	—	—	121°C	—	—	—	—	—	—	—	121°C	—
Primary circuit circulating Pump																
Water	Grundfos UPM2 15-70 130															
Refrigerant (R410A)	28mm compression (primary circuit)															
Liquid	6.35 mm															
Gas	12.7 mm															
Heating	25 - 60°C															
Cooling	10 - 30 °C															
Heating	—															
Cooling	—															
Room temperature	—															
Ambient *1	0 - 35°C (± 80 %RH)															
Guaranteed operating range																
Heating	See outdoor unit spec table.															
Cooling	See outdoor unit spec table (min. 10°C), *2															
Electrical data																
Power supply (Phase, voltage, frequency)	~N, 230 V, 50 Hz															
Breaker (*when powered from independent source)	10A															
Power supply (Phase, voltage, frequency)	—	—	~N, 230 V, 50 Hz	3~ , 400 V, 50 Hz	—	~N, 230 V, 50 Hz	~N, 230 V, 50 Hz	~N, 230 V, 50 Hz	3~ , 400 V, 50 Hz	3~ , 400 V, 50 Hz	3~ , 230 V, 50 Hz	~N, 230 V, 50 Hz	—	~N, 230 V, 50 Hz	~N, 230 V, 50 Hz	3~ , 400 V, 50 Hz
Capacity	—	—	2kW	3kW +6kW	—	2kW	2kW +4kW	2kW	3kW +6kW	3kW +6kW	3kW +6kW	2kW	—	2kW	2kW +4kW	3kW +6kW
Current	—	—	9 A	13A	—	9 A	26 A	26 A	13A	13A	23A	9 A	—	9 A	26 A	13A
Breaker	—	—	16 A	16A	—	16 A	32 A	32 A	16A	16A	32A	16 A	—	16 A	16 A	16A
Sound pressure level																
Sound power level	28 dB(A) 40 dB(A)															

<Table 3.1>

### Optional extras


- Wireless Remote Controller PAR-WT50R-E
- Wireless Receiver PAR-WR51R-E
- Remote Sensor PAC-SE41TS-E
- Tank thermostat (THW5) (5 m) PAC-TH011TK-E
- Joint pipe (ø15.88 → ø12.7) PAC-SH50RJ-E
- Joint pipe (ø9.52 → ø6.35) PAC-SH30RJ-E
- Tank thermostat (THW5) (30 m) PAC-TH011TKL-E
- Thermostat PAC-TH011-E
- High temperature thermostat PAC-TH011HT-E
- ecodan Wi-Fi Interface PAC-WF010-E
- 2 zone kit PAC-TZ01-E
- Tank thermostat (THW5) (30 m) PAC-TH011TKL-E
- Thermostat PAC-TH011-E
- High temperature thermostat PAC-TH011HT-E
- ecodan Wi-Fi Interface PAC-WF010-E
- 2 zone kit PAC-TZ01-E

\*1 The environment must be frost-free.  
\*2 Cooling mode is not available in low outdoor temperature.


### 3 Technical Information

#### ■ Component Parts

##### <E\*S\*-\*M\*\*C> (Split model system)

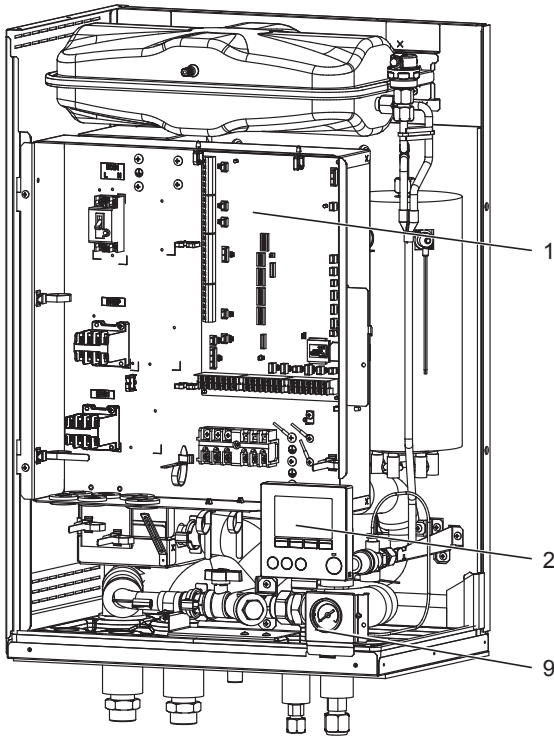


<Figure 3.1>

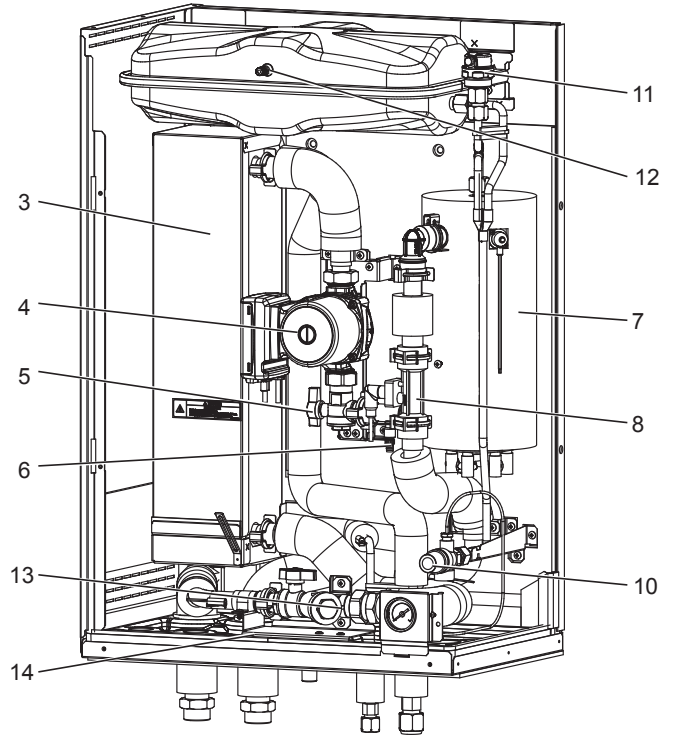

<Figure 3.2>

##### <EHPX-\*M\*C> (Packaged model system)

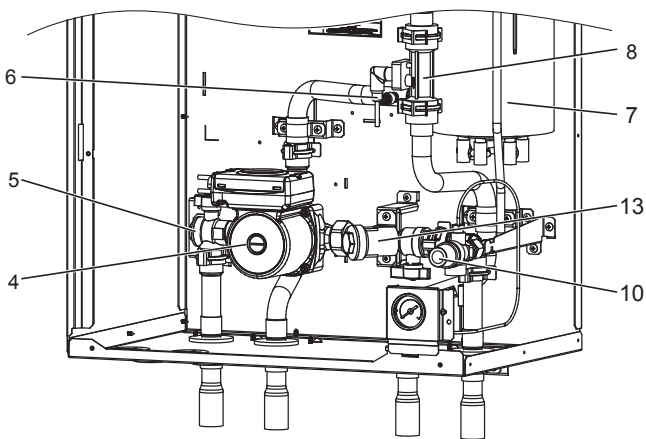

<Figure 3.3>




No.	Part name	EHS*-MEC	EHS*-*M*C	EHSC-*M*EC	ERS*-*VM2C	ERSC-MEC	EHPX-*M*C
1	Control and electrical box	✓	✓	✓	✓	✓	✓
2	Main remote controller	✓	✓	✓	✓	✓	✓
3	Plate heat exchanger (Refrigerant - Water)	✓	✓	✓	✓	✓	-
4	Water circulation pump 1	✓	✓	✓	✓	✓	✓
5	Pump valve	✓	✓	✓	✓	✓	✓
6	Drain cock (Primary circuit)	✓	✓	✓	✓	✓	✓
7	Booster heater 1,2	-	✓	✓	✓	-	✓
8	Flow sensor	✓	✓	✓	✓	✓	✓
9	Manometer	✓	✓	✓	✓	✓	✓
10	Pressure relief valve (3bar)	✓	✓	✓	✓	✓	✓
11	Automatic air vent	✓	✓	✓	✓	✓	✓
12	Expansion vessel	-	✓	-	✓	-	✓
13	Strainer valve	✓	✓	✓	✓	✓	✓
14	Drain pan	-	-	-	✓	✓	-

<Table 3.2>

\*For installation of E\*S\*-\*M\*EC model, make sure to install a primary-side expansion vessel in the field. (See Figure 4.3.4)


# 3 Technical Information

## Technical Drawings

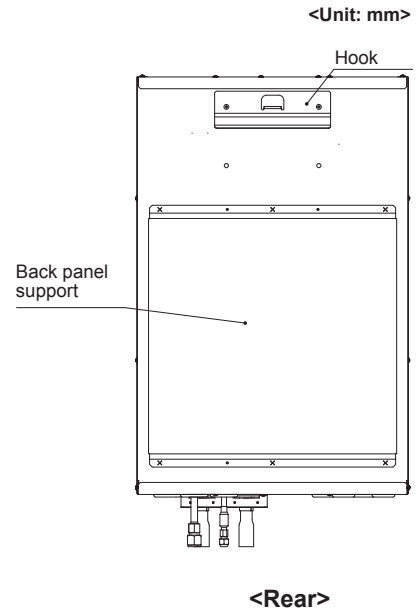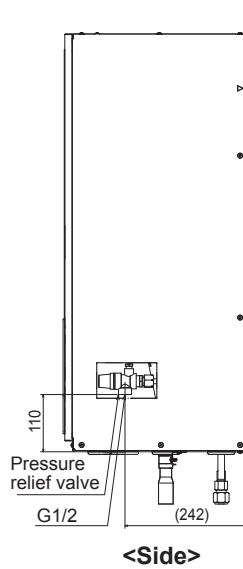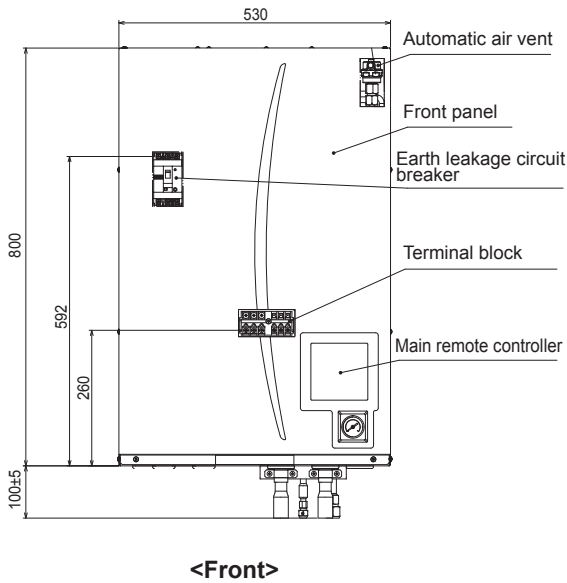


<Unit: mm>

### <EHS\*> (Split model system)

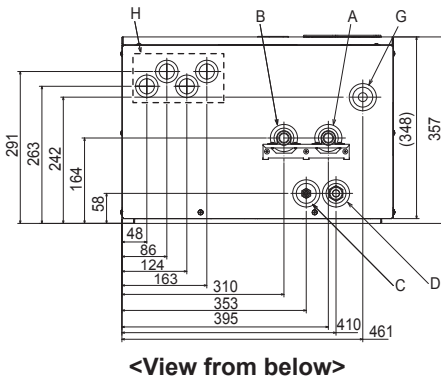


### <ERS\*> (Split model system for heating and cooling)

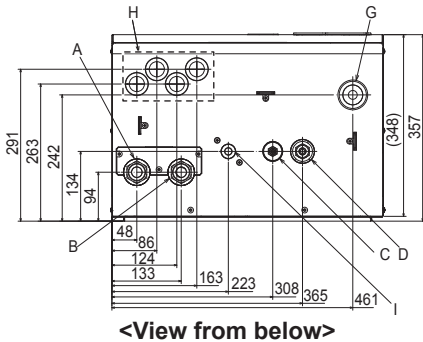

Letter	Pipe description	Connection size/type
A	Space heating/Indirect DHW tank (primary) return connection	28 mm/Compression (EHS*-*and EHPX*-) G1 nut (ERS*-*)
B	Space heating/Indirect DHW tank (primary) flow connection	28 mm/Compression (EHS*-*and EHPX*-) G1 nut (ERS*-*)
C	Refrigerant (Liquid)	6.35 mm/Flare (E*SD*-) 9.52 mm/Flare (E*SC*-)
D	Refrigerant (Gas)	12.7 mm/Flare (E*SD*-) 15.88 mm/Flare (E*SC*-)
E	Flow connection from heat pump	28 mm/Compression (EHPX*-)
F	Return connection to heat pump	28 mm/Compression (EHPX*-)
G	Discharge pipe (by installer) from pressure relief valve	G1/2" female (valve port within hydrobox casing)
H	Electrical cable inlets ① ② ③ ④	For inlets ① and ②, run high-voltage wires including power cable, indoor-outdoor cable, and external output wires. For inlets ③ and ④, run low-voltage wires including external input wires and thermistor wires. For a wireless receiver (option) cable, use inlet ④.
I	Drain socket	O.D. ø20

<Table 3.3>

### <EHPX> (Packaged model system)

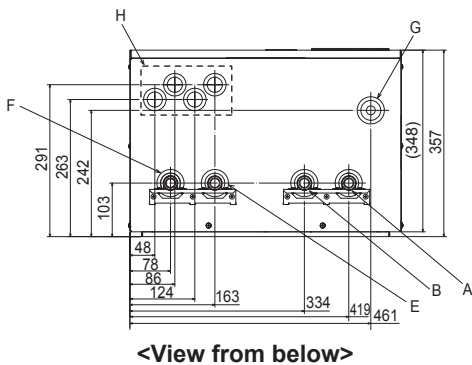

### 3 Technical Information

#### Unit Compatibility


Outdoor unit	Hydrobox	EHSD-MEC	EHSD-MC	EHSD-VM2C	EHSD-VM9C	EHSD-MEC	EHSD-VM2C	EHSD-VM2EC	EHSD-VM6C	EHSD-VM6EC	EHSD-VM9C	EHSD-VM9EC	EHSD-TM9C	ERSD-VM2C	ERSC-MEC	ERSC-VM2C	EHPX-VM2C	EHPX-VM6C	EHPX-VM9C
Packaged-type PUHZ-W50, 85, 112 PUHZ-HW112, 140		—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	✓	✓	✓
Split-type	SUHZ-SW45	✓	✓	✓	✓	—	—	—	—	—	—	—	—	✓	—	—	—	—	—
	PUHZ-SW40, 50, 75 (See below.)	✓	✓	✓	✓	—	—	—	—	—	—	—	—	✓	—	—	—	—	—
	PUHZ-FRP71	—	—	—	—	✓	✓	✓	✓	✓	✓	✓	✓	—	—	—	—	—	—
	PUHZ-SW75, 100, 120 PUHZ-SHW80, 112, 140	—	—	—	—	✓	✓	✓	✓	✓	✓	✓	✓	—	✓	✓	—	—	—
	PUMY-P112, 125, 140*KM*2	—	—	—	—	—	✓	✓	✓	✓	✓	✓	✓	—	—	—	—	—	—

<Table 3.4>

- When connecting E\*SD-\* to PUHZ-SW75, the following refrigerant joint pipes are necessary.  
PAC-SH50RJ-E (ø15.88 → ø12.7 for gas refrigerant pipe)  
PAC-SH30RJ-E (ø9.52 → ø6.35 for liquid refrigerant pipe)

#### Water circuit diagram


\*1 Refer to the following section [Local system].

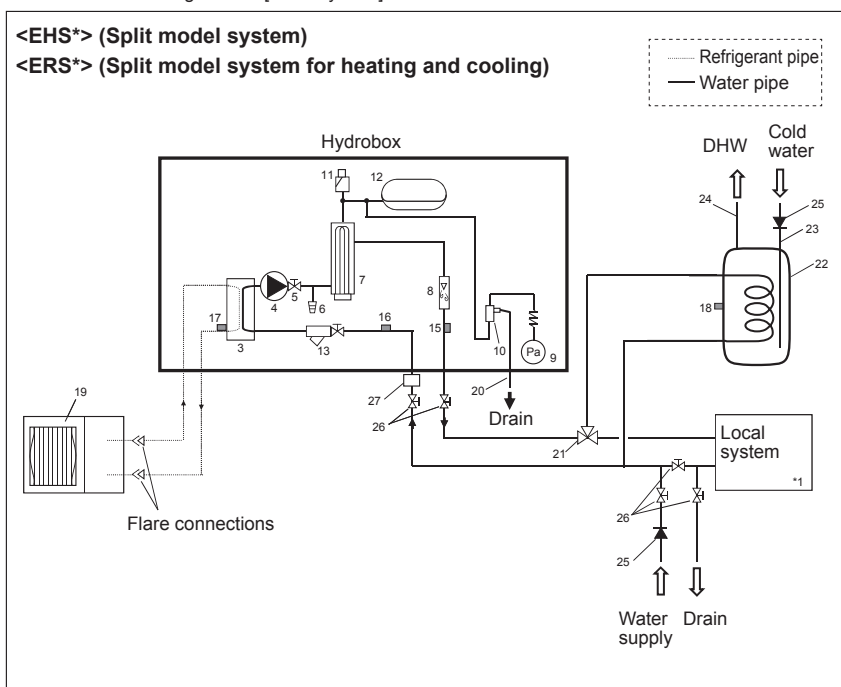

<Figure 3.4>

No.	Part name	EHS*-MEC	EHS*-M°C	EHSC-M°C	ERS*-VM2C	ERSC-MEC	EHPX-M°C
1	Control and electrical box	✓	✓	✓	✓	✓	✓
2	Main remote controller	✓	✓	✓	✓	✓	✓
3	Plate heat exchanger (Refrigerant - Water)	✓	✓	✓	✓	✓	—
4	Water circulation pump 1	✓	✓	✓	✓	✓	✓
5	Pump valve	✓	✓	✓	✓	✓	✓
6	Drain cock (Primary circuit)	✓	✓	✓	✓	✓	✓
7	Booster heater 1, 2	—	✓	✓	✓	—	—
8	Flow sensor	✓	✓	✓	✓	✓	✓
9	Manometer	✓	✓	✓	✓	✓	✓
10	Pressure relief valve (3 bar)	✓	✓	✓	✓	✓	✓
11	Automatic air vent	✓	✓	✓	✓	✓	✓
12	Expansion vessel	—	✓	—	—	—	—
13	Strainer valve	✓	✓	✓	✓	✓	✓
14	Drain pan	—	—	—	✓	✓	—
15	THW1	✓	✓	✓	✓	✓	✓
16	THW2	✓	✓	✓	✓	✓	✓
17	TH2	✓	✓	✓	✓	✓	—
18	THW5 (Optional part PAC-TH011TK-E or PAC-TH011TKL-E)	—	—	—	—	—	—
19	Outdoor unit	—	—	—	—	—	—
20	Drain pipe (Local supply)	—	—	—	—	—	—
21	3-way valve (Local supply)	—	—	—	—	—	—
22	DHW indirect unvented tank (Local supply)	—	—	—	—	—	—
23	Cold water inlet pipe (Local supply)	—	—	—	—	—	—
24	DHW outlet pipe (Local supply)	—	—	—	—	—	—
25	Back flow prevention device (Local supply)	—	—	—	—	—	—
26	Isolating valve (Local supply)	—	—	—	—	—	—
27	Magnetic filter (Local supply) (Recommended)	—	—	—	—	—	—
28	Strainer (Local supply)	—	—	—	—	—	—

<Table 3.5>

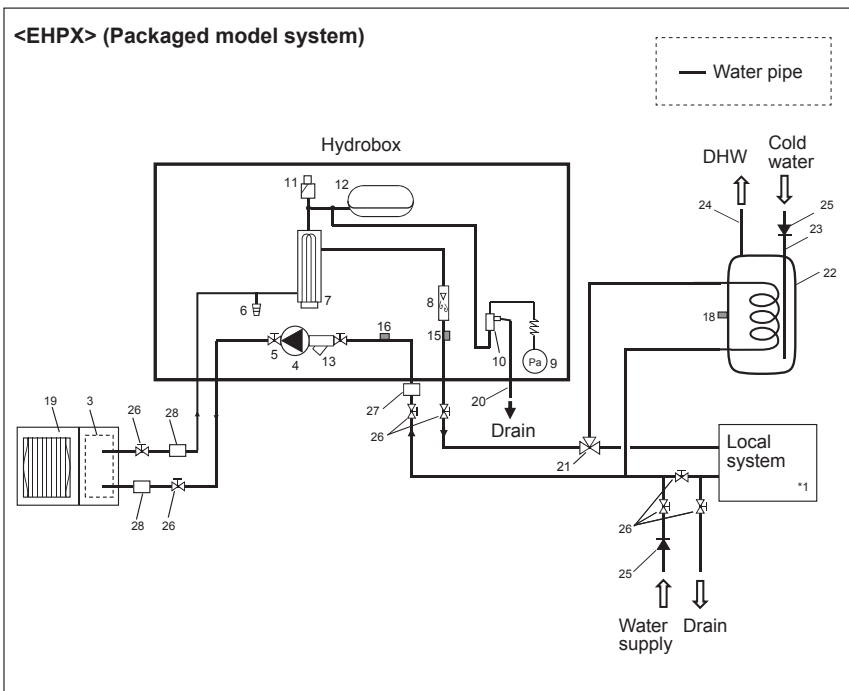



<Figure 3.5>

#### Note


- Be sure to follow your local regulations to perform system configuration of the DHW connections.
- DHW connections are not included in the hydrobox package. All required parts are to be sourced locally.
- To enable draining of the hydrobox an isolating valve should be positioned on both the inlet and outlet pipework.
- Be sure to install a strainer on the inlet pipe work to the hydrobox.
- Suitable drain pipework should be attached to all relief valves in accordance with your country's regulations.
- A backflow prevention device must be installed on water supply pipework (IEC 61770).
- When using components made from different metals or connecting pipes made of different metals insulate the joints to prevent a corrosive reaction taking place which will damage the pipework.

## Local system


### 1-zone temperature control

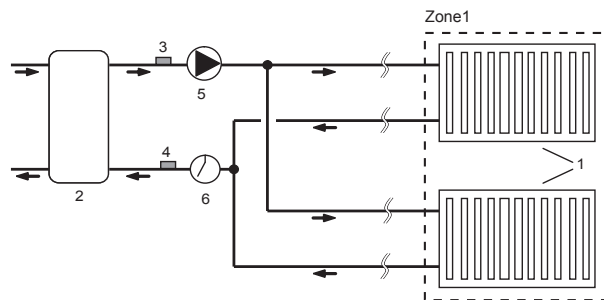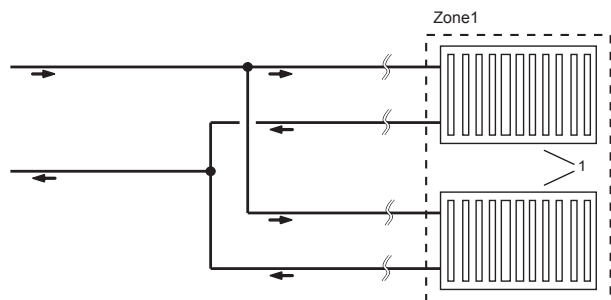


### 2-zone temperature control

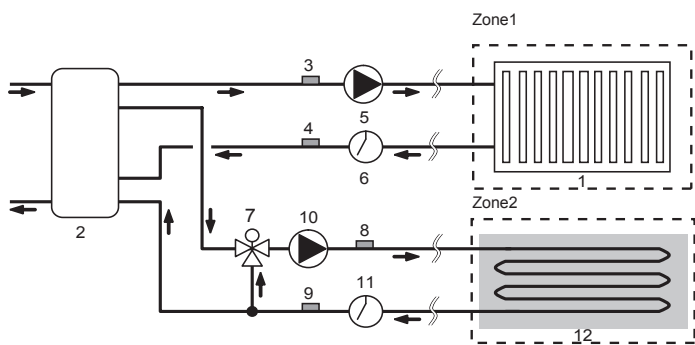


### 1-zone temperature control with boiler

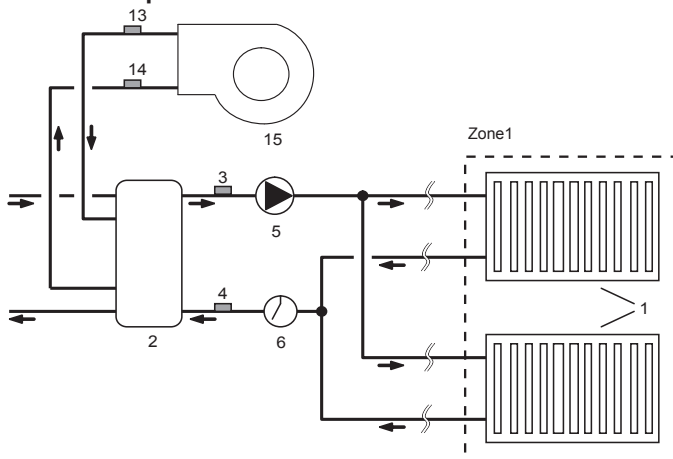

### 2-zone temperature control with boiler

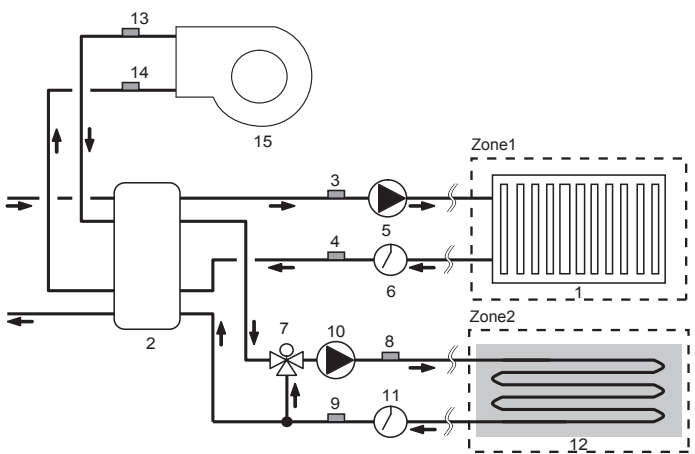

### 1-zone temperature control (2-zone valve ON/OFF control)

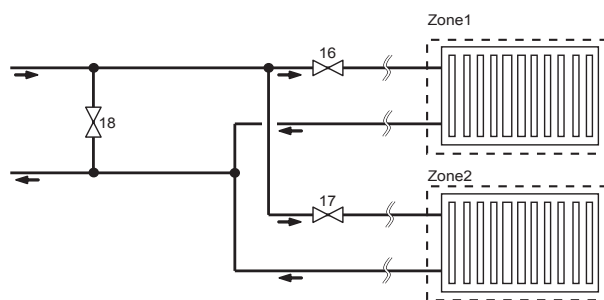

- 1. Zone1 heat emitters (e.g. radiator, fan coil unit) (local supply)
- 2. Mixing tank (local supply)
- 3. Zone1 flow water temp. thermistor (THW6)
- 4. Zone1 return water temp. thermistor (THW7) } Optional part : PAC-TH011-E
- 5. Zone1 water circulation pump (local supply)
- 6. Zone1 flow switch (local supply) \*
- 7. Motorized mixing valve (local supply)
- 8. Zone2 flow water temp. thermistor (THW8)
- 9. Zone2 return water temp. thermistor (THW9) } Optional part : PAC-TH011-E

- 10. Zone2 water circulation pump (local supply)
- 11. Zone2 flow switch (local supply) \*
- 12. Zone2 heat emitters (e.g. underfloor heating) (local supply)
- 13. Boiler flow water temp. thermistor (THWB1)
- 14. Boiler return water temp. thermistor (THWB2) } Optional part : PAC-TH011HT-E
- 15. Boiler (local supply)
- 16. Zone1 2-way valve (local supply)
- 17. Zone2 2-way valve (local supply)
- 18. Bypass valve (local supply)

\* Flow switch specifications: 12V DC / 1 mA / Both normally-open and normally-closed types can be used. (Set DIP switch 3 to select the logics. Refer to "5.1 DIP switch function".)



### 3 Technical Information

#### ■ Energy monitor

End user can monitor accumulated\*1 'Consumed electrical energy' and 'Delivered heat energy' in each operation mode\*2 on the main remote controller.

\*1 Monthly and Year to date

\*2 - DHW operation

- Space heating
- Space cooling

Refer to "5.10 Main remote controller" for how to check the energy, and "5.1 DIP switch functions" for the details on DIP-SW setting.

Either one of the following two method is used for monitoring.

**Note: Method 1 should be used as a guide. If a certain accuracy is required, the 2nd method should be used.**

##### 1. Calculation internally

Electricity consumption is calculated internally based on the energy consumption of outdoor unit, electric heater, water pump(s) and other auxiliaries. (\*3)

Delivered heat is calculated internally by multiplying delta T (Flow and Return temp.) and flow rate measured by the factory fitted sensors.

Set the electric heater capacity and water pump(s) input according to indoor unit model and specs of additional pump(s) supplied locally. (Refer to the menu tree in "5.10 Main remote controller")

	Booster heater1	Booster heater2	Immersion heater*1	Pump1*2	Pump2	Pump3
Default	2kW	4kW	0kW	*** (factory fitted pump)	0kW	0kW
EHSD-MEC	0kW	0kW	0kW *1	***	When additional pumps supplied locally are connected as Pump2/3, change setting according to specs of the pumps.	
EHSD-MC	0kW	0kW	0kW *1	***		
EHSD-VM2C	2kW	0kW	0kW *1	***		
EHSD-YM9C	3kW	6kW	0kW *1	***		
EHSC-MEC	0kW	0kW	0kW *1	***		
EHSC-VM2C	2kW	0kW	0kW *1	***		
EHSC-VM2EC	2kW	0kW	0kW *1	***		
EHSC-VM6C	2kW	4kW	0kW *1	***		
EHSC-VM6EC	2kW	4kW	0kW *1	***		
EHSC-YM9C	3kW	6kW	0kW *1	***		
EHSC-YM9EC	3kW	6kW	0kW *1	***		
EHSC-TM9C	3kW	6kW	0kW *1	***		
ERSD-VM2C	2kW	0kW	0kW *1	***		
ERSC-MEC	0kW	0kW	0kW *1	***		
ERSC-VM2C	2kW	0kW	0kW *1	***		
EHPX-VM2C	2kW	0kW	0kW *1	***		
EHPX-VM6C	2kW	4kW	0kW *1	***		
EHPX-YM9C	3kW	6kW	0kW *1	***		

<Table 3.6>

\*1 Change setting to 3kW when connecting optional immersion heater "PAC-IH03V2-E".

\*2 "\*\*\*\*" displayed in the energy monitor setting mode means the factory fitted pump is connected as Pump 1 so that the input is automatically calculated.

\*3 When the hydrobox is connected with a PUHZ-FRP or PUMY models, electricity consumption is not calculated internally. To display the electricity consumption, conduct the 2nd method.

When anti-freeze solution (propylene glycol) is used for primary water circuit, set the delivered energy adjustment if necessary.

For further detail of above, refer to "5.10 Main remote controller".

##### 2. Actual measurement by external meter (locally supplied)

FTC has external input terminals for 2 'Electric energy meters' and a 'Heat meter'.

If two 'Electric energy meters' are connected, the 2 recorded values will be combined at the FTC and shown on the main remote controller.

(e.g. Meter 1 for H/P power line, Meter 2 for heater power line)

Refer to the [Signal inputs] section in "5.2 Connecting inputs/outputs" for more information on connectable electric energy meter and heat meter.

## 4 Installation

### <Preparation before the installation and service>


- Prepare the proper tools.
- Prepare the proper protection.
- Allow parts to cool before attempting any maintenance.
- Provide adequate ventilation.
- After stopping the operation of the system, turn off the power-supply breaker and remove the power plug.
- Discharge the capacitor before commencing work involving the electric parts.

### <Precautions during service>

- Do not perform work involving electric parts with wet hands.
- Do not pour water or liquid into the electric parts.
- Do not touch the refrigerant.
- Do not touch the hot or cold surfaces in the refrigerant cycle.
- When the repair or the inspection of the circuit needs to be carried out without turning off the power, exercise great caution not to touch any live parts.


## 4.1 Location

### ■ Transportation and Handling

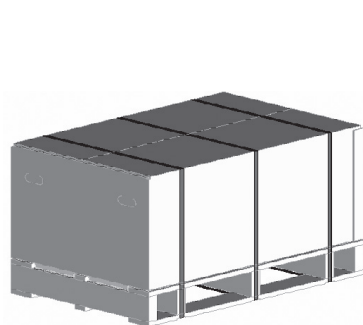

<Figure 4.1.1>

Hydrobox is delivered on a wooden pallet base with cardboard protection.

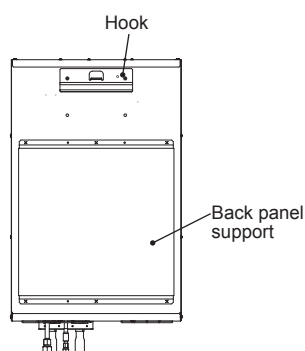

<Figure 4.1.2>

Care should be taken when transporting the hydrobox so that the casing is not damaged by impact. Do not remove the protective packaging until hydrobox has reached its final location. This will help protect the structure and control panel.

#### Note:

- The hydrobox should **ALWAYS** be moved by a minimum of 2 people.
- Do **NOT** hold piping when moving the hydrobox.

### ■ Suitable Location

Before installation the hydrobox should be stored in a frost-free weatherproof location. Units must **NOT** be stacked.


- The hydrobox should be installed indoors in a frost free weather proof location.
- The hydrobox should be positioned on a level wall capable of supporting it's filled weight.
- To find out the weight, refer to "3. Technical Information".
- Care should be taken that minimum distances around and in front of the unit for service access are observed <Figure 4.1.3>.
- Secure the hydrobox to prevent it being knocked over.
- The hook and panel supports should be used to fix the hydrobox to the wall. <Fig. 4.1.2>
- Install the hydrobox where it is not exposed to water/excessive moisture.

### ■ Service access diagrams

Service access	
Parameter	Dimension (mm)
a	200
b	150
c	500
d	500

<Table 4.1.1>

Sufficient space **MUST** be left for the provision of discharge pipework as detailed in National and Local building regulations.

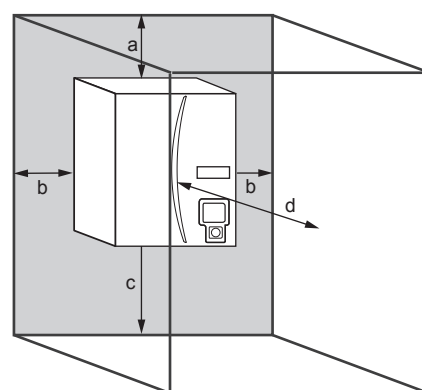

<Figure 4.1.3>

Service access

The hydrobox must be located indoors and in a frost-free environment, for example in a utility room.

### ■ Room Thermostat

If fitting a new room thermostat for this system;

- Position it out of direct sunlight and draughts
- Position it away from internal heat sources
- Position it in a room without a TRV on the radiator/heat emitter
- Position it on an internal wall

Note: Do not position the thermostat excessively close to the external wall. The thermostat may detect the temperature of the wall, which could affect appropriate control of the room temperature.

- Position it approx. 1.5 m above floor level

### ■ Repositioning hydrobox


If you need to move the hydrobox to a new position **FULLY DRAIN** it before moving to avoid damage to the unit.

**Note: Do NOT hold piping when moving the hydrobox.**


# 4 Installation

## ■ Mounting procedure


1. Install the included back plate accessory.
  - \* When installing the back plate, use locally-supplied screws and compatible fixing plugs.

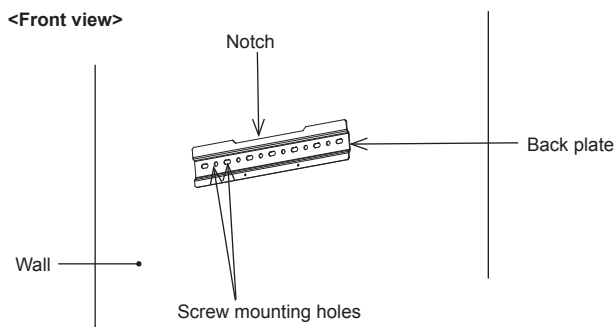


<Figure 4.1.4>

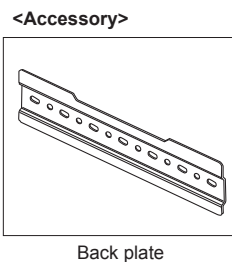

- Ensure that the notch is positioned at the TOP of the back plate. The back plate is provided with screw mounting holes that are round or oval. To prevent the unit from falling off the wall, choose the appropriate number of holes or hole positions and horizontally secure the back plate to the appropriate wall location.

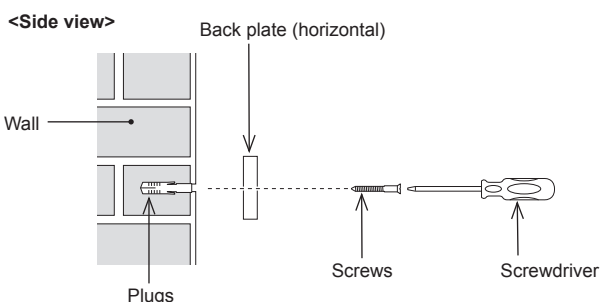

<Figure 4.1.5>

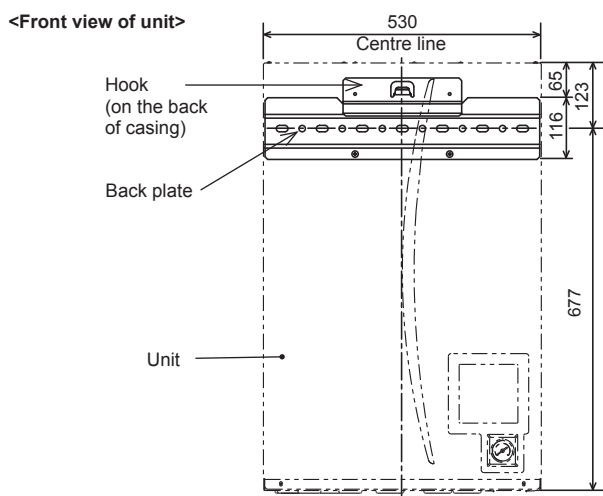


<Figure 4.1.6>


- Figure 4.1.6 shows the relative positions between the unit and the wall secured back plate. Referring to the <Figure 4.1.3> Service access, install the back plate.

2. Insert the hook on the back of the hydrobox behind the notch of the back plate.
  - \*The lifting up of the hydrobox is facilitated by first tilting the unit forward using the included packaging cushioning.


Note: Hold the MAIN BODY of the hydrobox when carrying or mounting the hydrobox to a wall. Holding and supporting the unit by the manometer, water pipe, or refrigerant pipe may result in breakdown of the components and impact on unit's conditions of warranty.

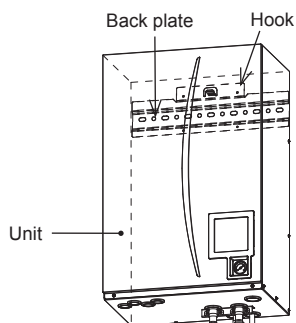

<Figure 4.1.7>

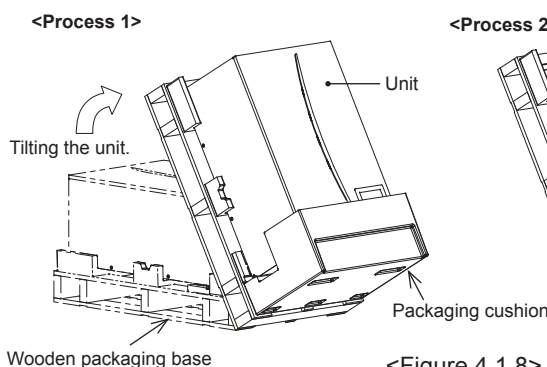

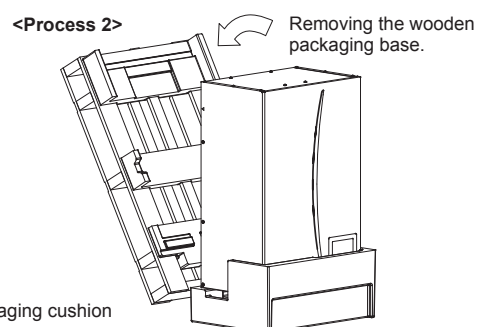

<Figure 4.1.8>




EN

# 4 Installation

- i) Each of the right and left side panels has a  mark indication. Lift up the unit so that the  marks are positioned above the top edge of the back plate as shown below.

<Side view of unit>

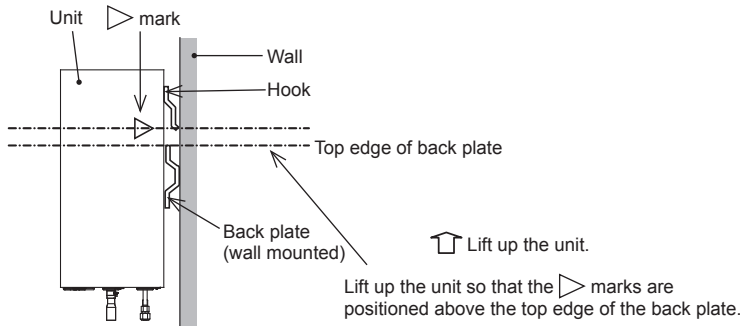


<Figure 4.1.9>


- ii) The back plate and the unit share the same width. When mounting the unit, the centre lines of the back plate and the unit can be aligned by keeping the right and left edges of the back plate within the width of the unit. The hook on the unit can then be attached to the notch on the back plate. (When mounting, the casing's lower panel support should be in contact with the wall surface.)


<Front view of unit>

To assist in fixing the unit's hook on to the notch on the back plate, first line up the centre lines.

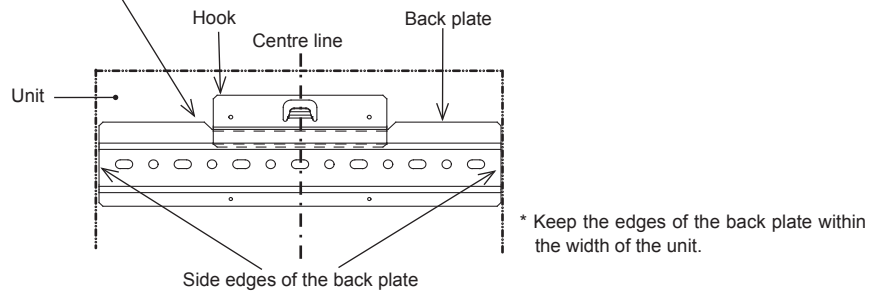


<Figure 4.1.10>

- iii) Check and ensure that the  mark is positioned and properly engaged at the bent section level on the back plate as shown.

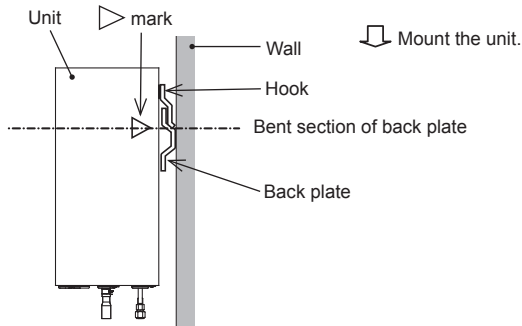


<Figure 4.1.11>

3. Referring to "How to access Internal Components and Control and Electrical Box", fix the unit and the back plate using the included 2 screws (accessory items).

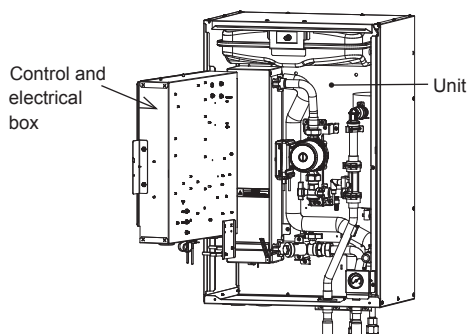


<Figure 4.1.12>

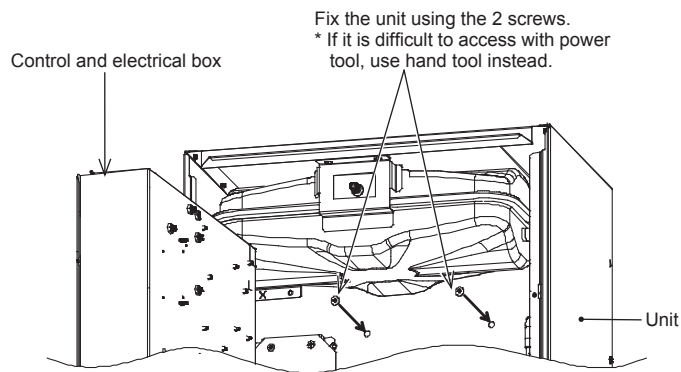

<Figure 4.1.13>

<Accessory>

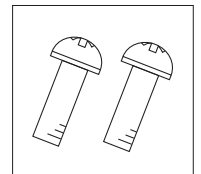

Screw M5x8

Caution) BEFORE performing field piping, be sure to fit and tighten these two screws. Otherwise, the hook could be disengaged, and the unit could fall down.

## 4 Installation

### 4.2 Water Quality and System Preparation

#### ■ General

- The water in both primary and sanitary circuit should be clean and with pH value of 6.5-8.0.
- The followings are the maximum values;
  - Calcium: 100mg/L, Ca hardness: 250mg/L
  - Chlorine: 100mg/L, Copper: 0.3mg/L
  - Iron/Manganese: 0.5mg/L
- Other constituents should be to European Directive 98/83 EC standards.
- In known hard water areas, to prevent/minimise scaling, it is beneficial to restrict the routine stored water temperature (DHW max. temp.) to 55°C.

#### ■ Anti-Freeze

Anti-freeze solutions MUST use propylene glycol with a toxicity rating of Class 1 as listed in Clinical Toxicology of Commercial Products, 5th Edition.

##### Note:

- Ethylene glycol is toxic and must NOT be used in the primary water circuit in case of any cross-contamination of the potable circuit.
- For 2-zone valve ON/OFF control, propylene glycol MUST be used.

#### ■ New Installation (primary water circuit)

- Before connecting outdoor unit, thoroughly cleanse pipework of building debris, solder etc using a suitable chemical cleansing agent.
- Flush the system to remove chemical cleanser.
- For all packaged model systems, and the split model or PUMY system without booster heater, add a combined inhibitor and anti-freeze solution to prevent damage to the pipework and system components.
- For split model systems the responsible installer should decide if anti-freeze solution is necessary for each site's conditions. Corrosion inhibitor however should always be used.

#### ■ Existing Installation (primary water circuit)

- Before connecting outdoor unit the existing heating circuit MUST be chemically cleansed to remove existing debris from the heating circuit.
- Flush the system to remove chemical cleanser.
- For all packaged model systems add a combined inhibitor and anti-freeze solution to prevent damage to the pipework and system components.
- For split model systems the responsible installer should decide if anti-freeze solution is necessary for each site's conditions. Corrosion inhibitor however should always be used.

When using chemical cleansers and inhibitors always follow manufacturer's instructions and ensure the product is appropriate for the materials used in the water circuit

#### ■ How to access Internal Components and Control and Electrical Box

##### <A> Opening the front panel

- Remove the two lower screws.
- Slide front panel upwards slightly and open carefully.
- Disconnect the relay connector connecting main remote controller cable and the control board cable.

##### <B> Accessing the back of the control and electrical box

The control and electrical box has a holding screw on the right and is hinged on the left hand side.

- Remove the holding screws on the control and electrical box.
- The control and electrical box can then be swung forward on the left hand hinges.

##### Note:

- Before accessing back of control and electrical box release cables from the tie straps attached to the cross-support.
- After servicing, re-secure all cables using straps provided. Reconnect main remote controller cable to its relay connector. Replace front panel and re-secure screws at base.


#### ■ Minimum amount of water required in the space heating / cooling circuit

Outdoor heat pump unit		Minimum water quantity [L]
Packaged model	PUHZ-W50	29
	PUHZ-W85	37
	PUHZ-W112	48
	PUHZ-HW112	48
	PUHZ-HW140	60
Split model	SUHZ-SW45	17
	PUHZ-SW40	17
	PUHZ-SW50	22
	PUHZ-FRP71	32
	PUHZ-SW75	32
	PUHZ-SW100	43
	PUHZ-SW120	54
	PUHZ-SHW80	34
	PUHZ-SHW112	48
	PUHZ-SHW140	60
	PUMY-P112	80
	PUMY-P125	80
	PUMY-P140	80

<Table 4.2.1>

##### Note:

For 2-zone temperature control system, the value in the table above excludes the amount of stored water in zone2.

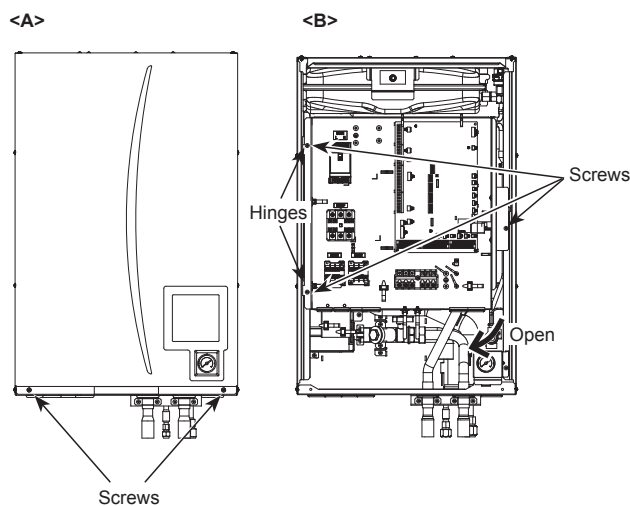

<Figure 4.2.1>

### 4.3 Water Pipe Work

Note: Prevent the field piping from straining the piping on the hydrobox by fixing it to a wall or applying other methods.

#### ■ Hot Water Pipework

The function of the following safety components of the hydrobox should be checked on installation for any abnormalities;

- Pressure relief valve
- Expansion vessel pre-charge (gas charge pressure)

The instruction on the following pages regarding safe discharge of hot water from Safety devices should be followed carefully.

- The pipework will become very hot, so should be insulated to prevent burns.
- When connecting pipework, ensure that no foreign objects such as debris or the like do not enter the pipe.

#### ■ Hydraulic Filter Work (ONLY EHPX series)

Install a hydraulic filter or strainer (local supply) at the water intake ("Pipe E" in Table 3.3, also see associated schematic Fig. 3.5)

#### ■ Pipework Connections

Connections to the hydrobox should be made using the 28 mm compression as appropriate. (except for ERSC series)

Do not over-tighten compression fittings as this will lead to deformation of the olive ring and potential leaks.

Note: To weld the pipes in the field, cool the pipes on the hydrobox using wet towel etc.

ERSC series have G1 (male) thread connections.

#### ■ Insulation of Pipework

- All exposed water pipework should be insulated to prevent unnecessary heat loss and condensation. To prevent condensate entering the hydrobox, the pipework and connections at the top of the hydrobox should be carefully insulated.
- Cold and hot water pipework should not be run close together where possible, to avoid unwanted heat transfer.
- Pipework between outdoor heat pump unit and hydrobox should be insulated with suitable pipe insulation material with a thermal conductivity of  $\leq 0.04$  W/m.K.

## 4 Installation

### ■ Drain Pipework (ONLY ERSC and ERSD series)

The drain pipe should be installed to drain condensing water in Cooling mode.


- Securely install the drain pipe to prevent leakage from the connection.
- Securely insulate the drain pipe to prevent water dripping from the locally supplied drain pipe.
- Install the drain pipe at a down slope of 1/100 or more.
- Do not place the drain pipe in drain channel where sulfuric gas exists.
- After installation, check that the drain pipe drains water properly from the outlet of the pipe.

<Installation>

1. Apply polyvinyl chloride type adhesive over the shaded surfaces inside of the drain pipe and on the exterior of the drain socket as shown.
2. Insert the drain socket deeply into the drain pipe <Figure 4.3.1>.

**Note:** Securely support the locally supplied drain pipe using pipe support to avoid the drain pipe falling from the drain socket.

To prevent dirty water from draining directly onto the floor next to hydrobox, please connect appropriate discharge pipework from the hydrobox.

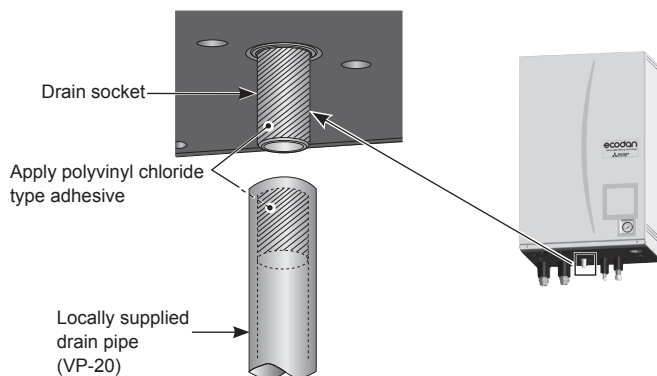

<Figure 4.3.1>


<Checking Drainage>

- Check that the drain pipe drains water properly from the outlet of the pipe.
- Check for no leakage from the connection.

**Note:** Always check drainage at installation regardless of season.

4. Thoroughly clean and flush, system of all debris. (see section 4.2 for instruction.)

**Note:** Pour water slowly into the drain pan so that water does not overflow from the drain pan.

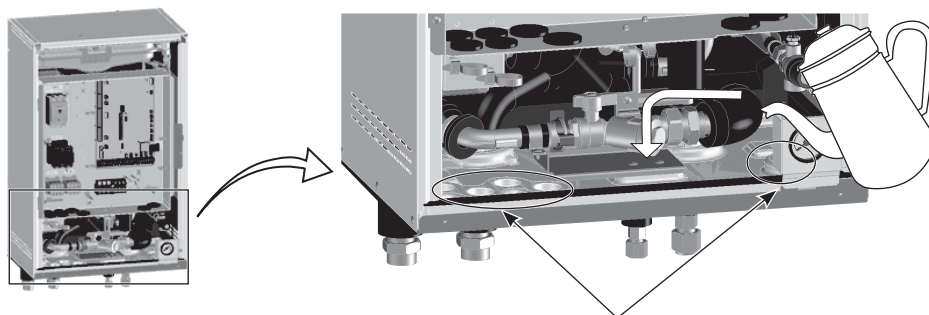

<Figure 4.3.2>

Do not pour water into these openings.

### ■ Filling the System (Primary Circuit)


1. Check and charge expansion vessel.
2. Check all connections including factory fitted ones are tight.
3. Insulate pipework between hydrobox and outdoor unit.
4. Thoroughly clean and flush, system of all debris. (see section 4.2 for instruction.)
5. Fill hydrobox with potable water. Fill primary heating circuit with water and suitable anti-freeze and inhibitor as necessary. **Always use a filling loop with double check valve when filling the primary circuit to avoid back flow contamination of water supply.**

- Anti-freeze should always be used for packaged model systems (see section 4.2 for instruction). It is the responsibility of the installer to decide if anti-freeze solution should be used in split model systems depending on each site's conditions. Corrosion inhibitor should be used in both split model and packaged model systems.

Figure 4.3.3 shows freezing temperature against anti-freeze concentration. This figure is an example for FERNOX ALPHI-11. For other anti-freeze, please refer to relevant manual.

- When connecting metal pipes of different materials insulate the joints to prevent a corrosive reaction taking place which will damage the pipework.

6. Check for leakages. If leakage is found, retighten the screws onto the connections.
7. Pressurise system to 1 bar.
8. Release all trapped air using air vents during and following heating period.
9. Top up with water as necessary. (If pressure is below 1 bar)

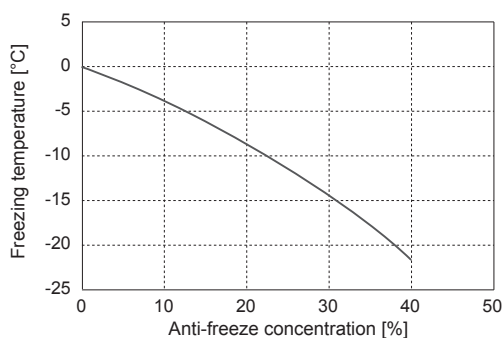

<Figure 4.3.3>

### ■ Sizing Expansion Vessels

Expansion vessel volume must fit the local system water volume.

To size an expansion vessel both for the heating and cooling circuits the following formula and graph can be used.

When the necessary expansion vessel volume exceeds the volume of an built-in expansion vessel, install an additional expansion vessel so that the sum of the volumes of the expansion vessels exceeds the necessary expansion vessel volume.

\* For installation of an E\*S\*-M\*EC model, provide and install an expansion vessel in the field as the model does not come fitted with an expansion vessel.

$$V = \frac{\epsilon \times G}{1 - \frac{P_1 + 0.098}{P_2 + 0.098}}$$

Where;

- V : Necessary expansion vessel volume [L]
- $\epsilon$  : Water expansion coefficient
- G : Total volume of water in the system [L]
- P<sub>1</sub> : Expansion vessel setting pressure [MPa]
- P<sub>2</sub> : Max. pressure during operation [MPa]

Graph to the right is for the following values


$\epsilon$  : at 70 °C = 0.0229

P<sub>1</sub> : 0.1 MPa

P<sub>2</sub> : 0.3 MPa

\*A 30% safety margin has been added.

### Expansion vessel sizing

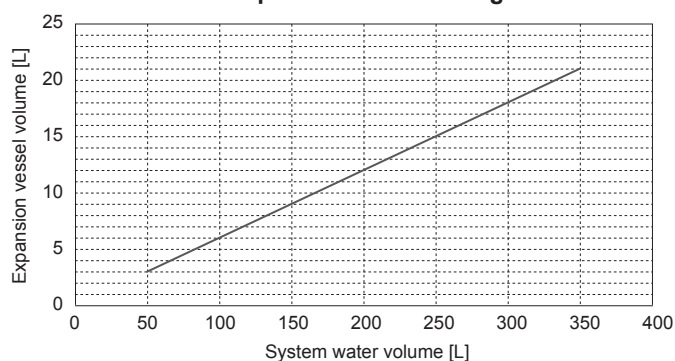

<Figure 4.3.4>

# 4 Installation

## Water Circulation Pump Characteristics

Pump speed can be selected by main remote controller setting (see <Figure 4.3.5 - 4.3.9>).

Adjust the pump speed setting so that the flow rate in the primary circuit is appropriate for the outdoor unit installed (see Table 4.3.1). It may be necessary to add an additional pump to the system depending on the length and lift of the primary circuit.

For outdoor unit model not listed in the <Table 4.3.1>, refer to Water flow rate range in the specification table of outdoor unit Data Book. In such case, make sure that the flow rate is greater than 7.1 L/min and less than 27.7 L/min.

<Second pump >

If a second pump is required for the installation please read the following carefully. If a second pump is used in the system it can be positioned in 2 ways.

The position of the pump influences which terminal of the FTC the signal cable should be wired to. If the additional pump(s) have current greater than 1A please use appropriate relay. Pump signal cable can either be wired to TBO.1 1-2 or CNP1 but not both.

Option 1 (Space heating/cooling only)

If the second pump is being used for the heating circuit only then the signal cable should be wired to TBO.1 terminals 3 and 4 (OUT2). In this position the pump can be run at a different speed to the hydrobox's in-built pump.

Option 2 (Primary circuit DHW and space heating/cooling)

If the second pump is being used in the primary circuit between the hydrobox and the outdoor unit (Package system ONLY) then the signal cable should be wired to TBO.1 terminals 1 and 2 (OUT1). In this position the pump speed **MUST** match the speed of the hydrobox's in-built pump.






**Note: Refer to 5.2 Connecting inputs/outputs.**

Outdoor heat pump unit	Water flow rate range [L/min]	
Packaged model	PUHZ-W50	7.1-14.3
	PUHZ-W85	10.0-25.8
	PUHZ-W112	14.4-27.7
	PUHZ-HW112	14.4-27.7
Split model	PUHZ-HW140	17.9-27.7
	SUHZ-SW45	7.1-12.9
	PUHZ-SW40	7.1-11.8
	PUHZ-SW50	7.1-17.2
	PUHZ-FRP71	11.5-22.9
	PUHZ-SW75	10.2-22.9
	PUHZ-SW100	14.4-27.7
	PUHZ-SW120	20.1-27.7
	PUHZ-SHW80	10.2-22.9
	PUHZ-SHW112	14.4-27.7
PUHZ-SHW140	17.9-27.7	
PUMY-P112	17.9-27.7	
PUMY-P125	17.9-27.7	
PUMY-P140	17.9-27.7	

<Table 4.3.1>

\* If the water flow rate is less than 7.1 L/min, the flow rate error will be activated. If the water flow rate exceeds 27.7 L/min, the flow speed will be greater than 1.5 m/s, which could erode the pipes.

## Water Circulation Pump Characteristics

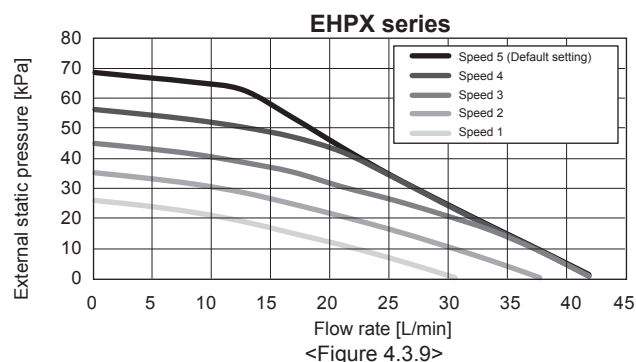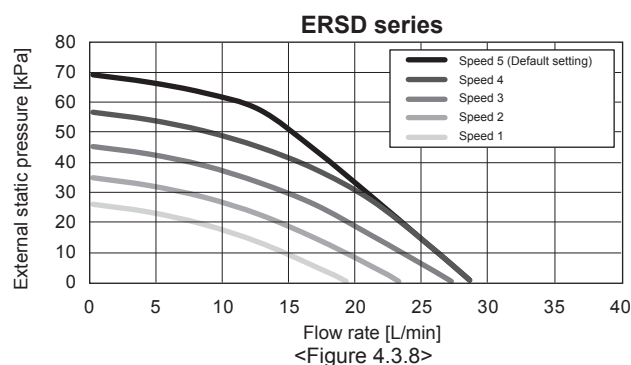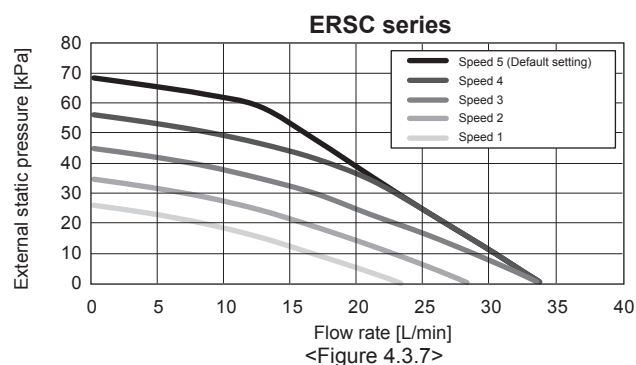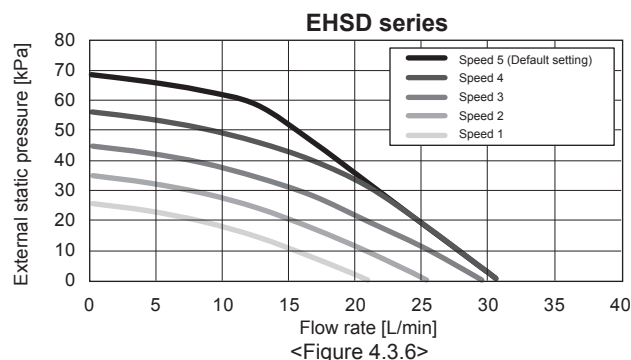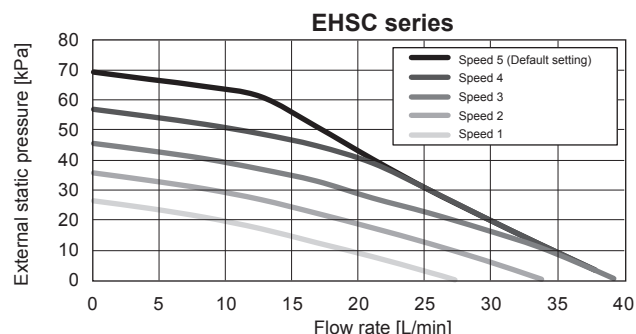

\* For installation of EHPX series, set its pump speed with a pressure drop between the hydrobox and the outdoor unit factored into the external static pressure.

EN


## 4 Installation

### ■ Safety Device Connections

The hydrobox contains a pressure relief valve. (see <Figure 4.3.10>) The connection size is G1/2" female. The installer MUST connect appropriate discharge pipework from this valve in accordance with local and national regulations. Failure to do so will result in discharge from the pressure relief valve directly into the hydrobox and cause serious damage to the product.

All pipework used should be capable of withstanding discharge of hot water. Relief valves should NOT be used for any other purpose, and their discharges should terminate in a safe and appropriate manner in accordance with local regulation requirements.

**Note: Beware that the manometer and the pressure relief valve are NOT strained on its capillary side and on its inlet side respectively. If a pressure relief valve is added, it is essential that no check valve or isolation valve is fitted between the hydrobox connection and the added pressure relief valve (safety matter).**

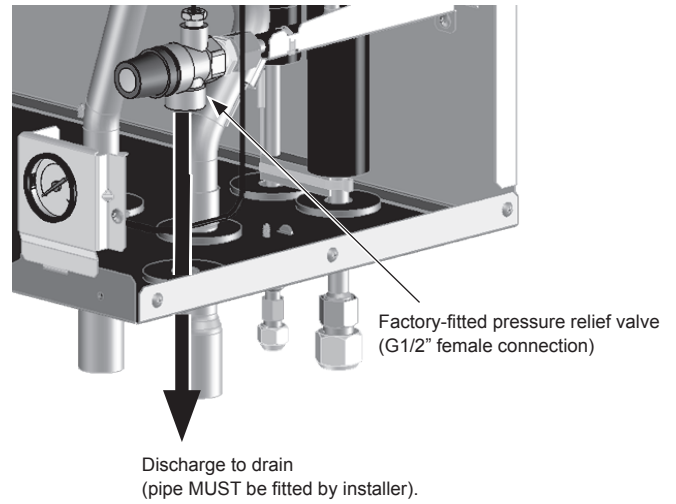

### ■ Piping diagram for 2-zone temperature control

Connect the pipe work and locally supplied parts according to the relevant circuit diagram shown in Section 3. Technical Information, of this manual.

For more details on wiring, refer to "5.3 Wiring for 2-zone temperature controls".

**Note: Do not install the thermistors on the mixing tank. This could affect correct monitoring of flow and return temperatures through each zone. Install the Zone2 flow temp. thermistor (THW8) near the mixing valve.**

### 4.4 Electrical Connection

All electrical work should be carried out by a suitably qualified technician. Failure to comply with this could lead to electrocution, fire, and death. It will also invalidate product warranty. All wiring should be according to national wiring regulations.


The hydrobox can be powered in two ways.

1. Power cable is run from the outdoor unit to the hydrobox.
2. Hydrobox has independent power source.

Connections should be made to the terminals indicated in the figures to the left below depending on the phase.

Booster heater and immersion heater should be connected independently from one another to dedicated power supplies.

Breaker abbreviation	Meaning
ECB1	Earth leakage circuit breaker for booster heater
TB1	Terminal block 1

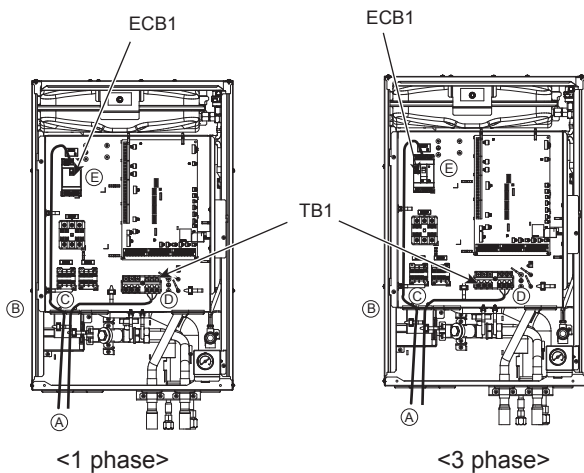

<Figure 4.4.1>

- Ⓐ Locally supplied wiring should be inserted through the inlets situated on the base of the hydrobox. (Refer to <Table 3.3>.)
- Ⓑ Wiring should be fed down the left hand side of the control and electrical box and clamped in place using clips provided.
- Ⓒ The wires should be inserted individually through the cable inlets as below.
  - ① Power line (B.H.)
  - ③ Power line (I.H.) (option)
  - ⑤ Indoor-Outdoor wire
  - ⑥ Output wires
  - ⑦ Signal input wires  
Wireless receiver (option) wire (PAR-WR51R-E)
- Ⓓ Connect the outdoor unit – hydrobox connecting cable to TB1.
- Ⓔ Connect the power cable for the booster heater to ECB1.

• Make sure that ECB1 is ON.




## 4 Installation

### Option 1: Hydrobox powered via outdoor unit

#### <1 phase>

Affix label A that is included with the manuals near each wiring diagram for hydrobox and outdoor units.

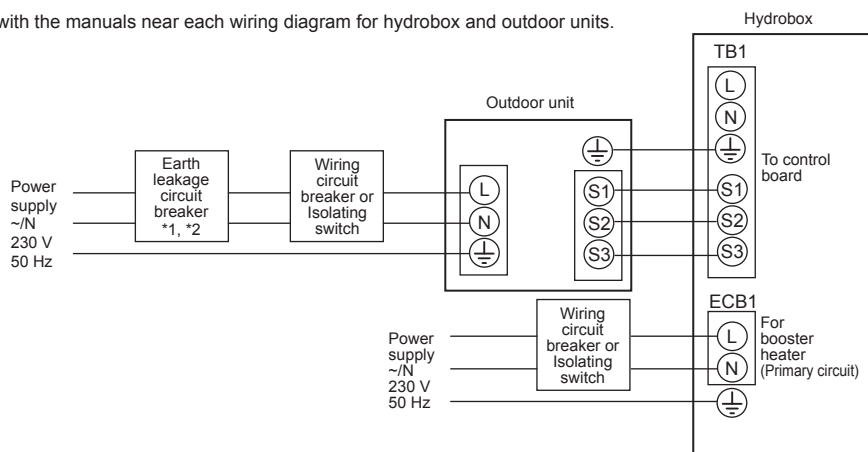


\*1 If the installed earth leakage circuit breaker does not have an over-current protection function, install a breaker with that function along the same power line.

<Figure 4.4.2>  
Electrical connections 1 phase

Description	Power supply	Capacity	Breaker	Wiring
Booster heater (Primary circuit)	~N 230 V 50 Hz	2 kW	16 A *2	2.5 mm <sup>2</sup>
		6 kW	32 A *2	6.0 mm <sup>2</sup>

#### <3 phase>

Affix label A that is included with the manuals near each wiring diagram for hydrobox and outdoor units.

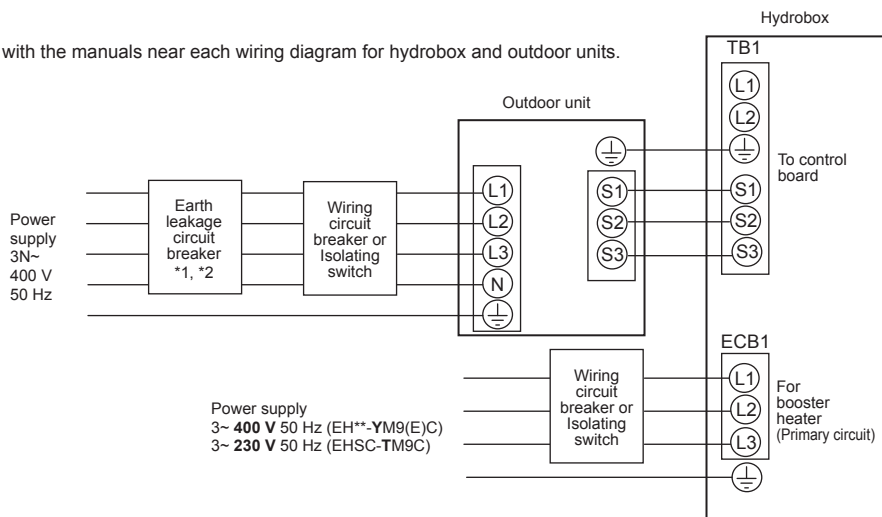

\*1 If the installed earth leakage circuit breaker does not have an over-current protection function, install a breaker with that function along the same power line.

<Figure 4.4.3>  
Electrical connections 3 phase

Description	Power supply	Capacity	Breaker	Wiring
Booster heater (Primary circuit)	3~ 400 V 50 Hz (EH**-YM9(E)C)	9 kW	16 A *2	2.5 mm <sup>2</sup>
	3~ 230 V 50 Hz (EHSC-TM9C)	9 kW	32 A *2	6.0 mm <sup>2</sup>

Wiring No. x size (mm <sup>2</sup> )	Hydrobox - Outdoor unit	
		*3
	*3	1 × Min. 1.5
Circuit rating	*4	230 V AC
	*4	24 V DC

\*2. A breaker with at least 3.0 mm contact separation in each pole shall be provided. Use earth leakage breaker (NV). The breaker shall be provided to ensure disconnection of all active phase conductors of the supply.

\*3. Max. 45 m

If 2.5 mm<sup>2</sup> used, Max. 50 m

If 2.5 mm<sup>2</sup> used and S3 separated, Max. 80 m

\*4. The values given in the table above are not always measured against the ground value.

- Notes:**
1. Wiring size must comply with the applicable local and national codes.
  2. Indoor unit/outdoor unit connecting cords shall not be lighter than polychloroprene sheathed flexible cord. (Design 60245 IEC 57)  
Indoor unit power supply cords shall not be lighter than polychloroprene sheathed flexible cord. (Design 60227 IEC 53)
  3. Install an earth longer than other cables.
  4. Please keep enough output capacity of power supply for each heater. Insufficient power supply capacity might cause chattering.

# 4 Installation


## Option2: Hydrobox powered by independent source

If the hydrobox and outdoor units have separate power supplies, the following requirements MUST be carried out:

- Change connector connections in hydrobox control and electrical box (see Figure 4.4.4).
  - Turn the outdoor unit DIP switch SW8-3 to ON.
  - Turn on the outdoor unit BEFORE the hydrobox.
  - Power by independent source is not available for particular models of outdoor unit model.
- For more detail, refer to the connecting outdoor unit installation manual.

### <1 phase>


Affix label B that is included with the manuals near each wiring diagram for hydrobox and outdoor units.

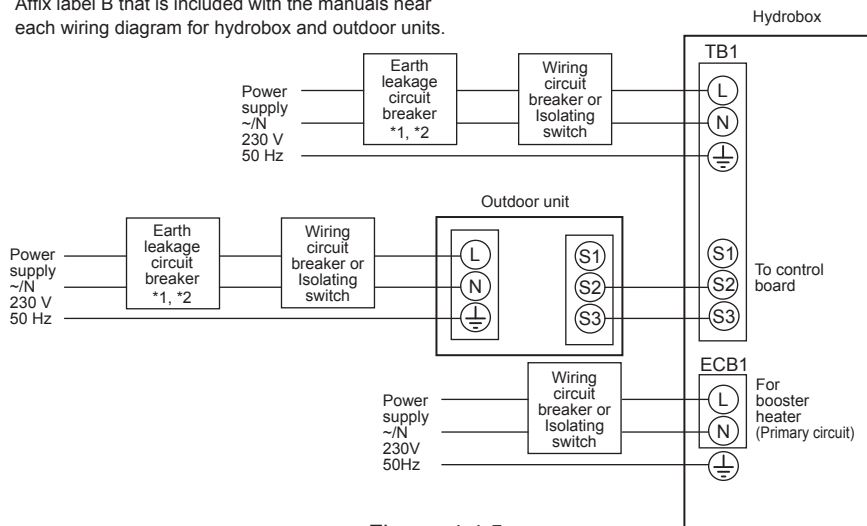

<Figure 4.4.5>  
Electrical connections 1 phase

### <3 phase>


Affix label B that is included with the manuals near each wiring diagram for hydrobox and outdoor units.

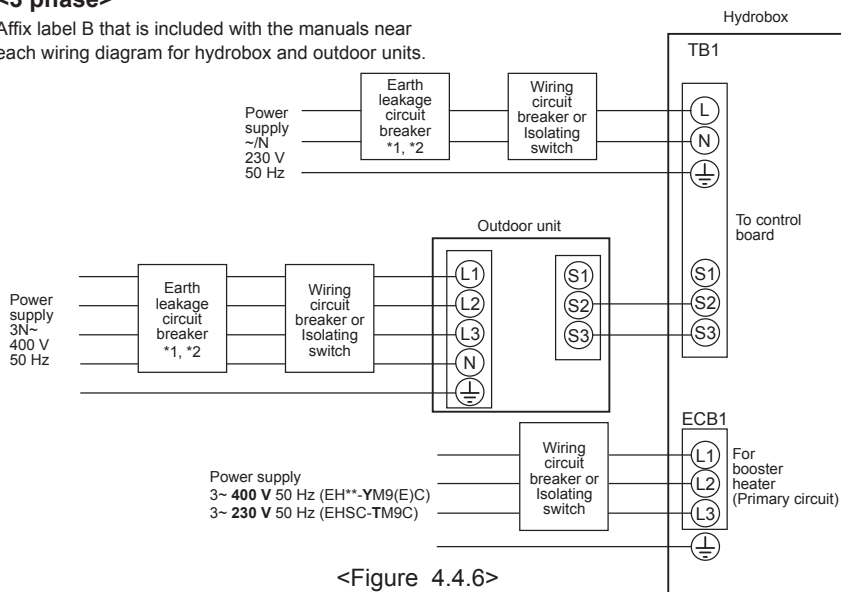

<Figure 4.4.6>  
Electrical connections 3 phase

Hydrobox power supply		~N 230 V 50 Hz
Hydrobox input capacity	*2	16 A
Main switch (Breaker)		
Wiring No. x size (mm <sup>2</sup> )	Hydrobox power supply	2 x Min. 1.5
	Hydrobox power supply earth	1 x Min. 1.5
Circuit rating	Hydrobox - Outdoor unit	*3
	Hydrobox - Outdoor unit earth	—
Circuit rating	Hydrobox L - N	*4
	Hydrobox - Outdoor unit S1 - S2	*4
	Hydrobox - Outdoor unit S2 - S3	*4

- Notes:
1. Wiring size must comply with the applicable local and national codes.
  2. Indoor unit/outdoor unit connecting cords shall not be lighter than polychloroprene sheathed flexible cord. (Design 60245 IEC 57)  
Indoor unit power supply cords shall not be lighter than polychloroprene sheathed flexible cord. (Design 60227 IEC 53)
  3. Install an earth longer than other cables.
  4. Please keep enough output capacity of power supply for each heater. Insufficient power supply capacity might cause chattering.

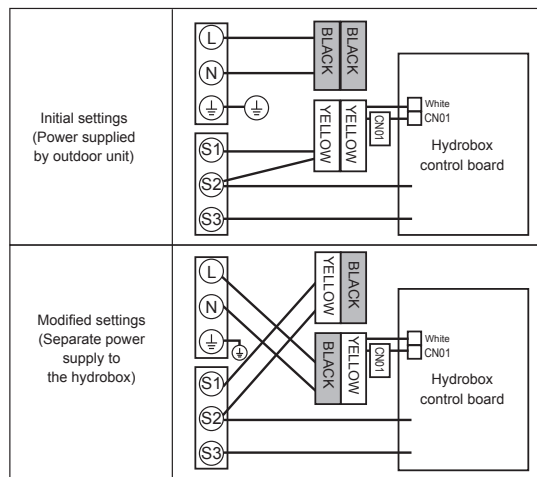

<Figure 4.4.4>

\*1 If the installed earth leakage circuit breaker does not have an over-current protection function, install a breaker with that function along the same power line.

Description	Power supply	Capacity	Breaker	Wiring
Booster heater (Primary circuit)	~N 230 V 50 Hz	2 kW	16 A *2	2.5 mm <sup>2</sup>
		6 kW	32 A *2	6.0 mm <sup>2</sup>

\*1 If the installed earth leakage circuit breaker does not have an over-current protection function, install a breaker with that function along the same power line.

Description	Power supply	Capacity	Breaker	Wiring
Booster heater (Primary circuit)	3~ 400 V 50 Hz	9 kW	16 A *2	2.5 mm <sup>2</sup>
	3~ 230 V 50 Hz	9 kW	32 A *2	6.0 mm <sup>2</sup>

\*2. A breaker with at least 3.0 mm contact separation in each pole shall be provided. Use earth leakage breaker (NV).  
The breaker shall be provided to ensure disconnection of all active phase conductors of the supply.

\*3. Max. 120 m

\*4. The values given in the table above are not always measured against the ground value.

## 5 System Set Up


### 5.1 DIP Switch Functions

Located on the FTC printed circuit board are 5 sets of small white switches known as DIP switches. The DIP switch number is printed on the circuit board next to the relevant switches. The word ON is printed on the circuit board and on the DIP switch block itself. To move the switch you will need to use a pin or the corner of a thin metal ruler or similar.

DIP switch settings are listed below in Table 5.1.1.

Only an authorised installer can change DIP switch setting under one's own responsibility according to the installation condition.

Make sure to turn off both indoor unit and outdoor unit power supplies before changing the switch settings.

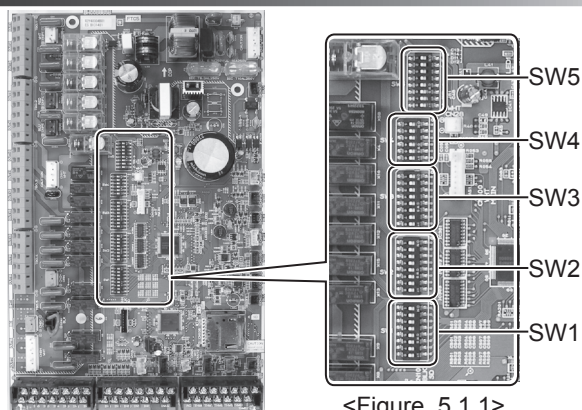


<Figure 5.1.1>

DIP switch	Function	OFF	ON	Default settings: Indoor unit model																									
SW1	SW1-1 Boiler	WITHOUT Boiler	WITH Boiler	OFF																									
	SW1-2 Heat pump maximum outlet water temperature	55°C	60°C	ON *1																									
	SW1-3 DHW tank	WITHOUT DHW tank	WITH DHW tank	OFF																									
	SW1-4 Immersion heater	WITHOUT Immersion heater	WITH Immersion heater	OFF																									
	SW1-5 Booster heater	WITHOUT Booster heater	WITH Booster heater	OFF: E***-M°C ON : E***-M2/6/9C																									
	SW1-6 Booster heater function	For heating only	For heating and DHW	OFF: E***-M°C ON : E***-M2/6/9C																									
	SW1-7 Outdoor unit type	Split type	Packaged type	OFF: E*S*-*M°C ON : EHPX-*M°C																									
	SW1-8 Wireless remote controller	WITHOUT Wireless remote controller	WITH Wireless remote controller	OFF																									
SW2	SW2-1 Room thermostat1 input (IN1) logic change	Zone1 operation stop at thermostat short	Zone1 operation stop at thermostat open	OFF																									
	SW2-2 Flow switch1 input (IN2) logic change	Failure detection at short	Failure detection at open	OFF																									
	SW2-3 Booster heater capacity restriction	Inactive	Active	OFF: Except E***-VM2°C ON : E***-VM2°C																									
	SW2-4 Cooling mode function	Inactive	Active	OFF: Except ERS*-*M**C ON : ERS*-*M**C																									
	SW2-5 Automatic switch to backup heat source operation (When outdoor unit stops by error)	Inactive	Active *2	OFF																									
	SW2-6 Mixing tank	WITHOUT Mixing tank	WITH Mixing tank	OFF																									
	SW2-7 2-zone temperature control	Inactive	Active *6	OFF																									
	SW2-8 Flow sensor	WITHOUT Flow sensor	WITH Flow sensor	ON																									
SW3	SW3-1 Room thermostat 2 input (IN6) logic change	Zone2 operation stop at thermostat short	Zone2 operation stop at thermostat open	OFF																									
	SW3-2 Flow switch 2 input (IN3) logic change	Failure detection at short	Failure detection at open	OFF																									
	SW3-3 Flow switch 3 input (IN7) logic change	Failure detection at short	Failure detection at open	OFF																									
	SW3-4 Electric energy meter	WITHOUT Electric energy meter	WITH Electric energy meter	OFF																									
	SW3-5 Heating mode function *3	Inactive	Active	ON																									
	SW3-6 2-zone valve ON/OFF control	Inactive	Active	OFF																									
	SW3-7 Heat exchanger for DHW	Coil in tank	External plate HEX	OFF																									
	SW3-8 Heat meter	WITHOUT Heat meter	WITH Heat meter	OFF																									
SW4	SW4-1 Multiple outdoor units control	Inactive	Active	OFF																									
	SW4-2 Position of multiple outdoor units control *7	Slave	Master	OFF																									
	SW4-3	—	—	OFF																									
	SW4-4 Indoor unit only operation (during installation work) *4	Inactive	Active	OFF																									
	SW4-5 Emergency mode (Heater only operation)	Normal	Emergency mode (Heater only operation)	OFF *5																									
	SW4-6 Emergency mode (Boiler operation)	Normal	Emergency mode (Boiler operation)	OFF *5																									
SW5	SW5-1	—	—	OFF																									
	SW5-2 Advanced auto adaptation	Inactive	Active	ON																									
	SW5-3	Capacity code																											
	SW5-4	<table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th></th> <th>SW5-3</th> <th>SW5-4</th> <th>SW5-5</th> <th>SW5-6</th> <th>SW5-7</th> </tr> </thead> <tbody> <tr> <td>E*SC-*M°C</td> <td>ON</td> <td>ON</td> <td>ON</td> <td>ON</td> <td>OFF</td> </tr> <tr> <td>E*SD-*M°C</td> <td>ON</td> <td>OFF</td> <td>OFF</td> <td>ON</td> <td>OFF</td> </tr> <tr> <td>EHPX-*M°C</td> <td>OFF</td> <td>OFF</td> <td>OFF</td> <td>OFF</td> <td>OFF</td> </tr> </tbody> </table>					SW5-3	SW5-4	SW5-5	SW5-6	SW5-7	E*SC-*M°C	ON	ON	ON	ON	OFF	E*SD-*M°C	ON	OFF	OFF	ON	OFF	EHPX-*M°C	OFF	OFF	OFF	OFF	OFF
		SW5-3	SW5-4	SW5-5	SW5-6	SW5-7																							
	E*SC-*M°C	ON	ON	ON	ON	OFF																							
	E*SD-*M°C	ON	OFF	OFF	ON	OFF																							
	EHPX-*M°C	OFF	OFF	OFF	OFF	OFF																							
SW5-5																													
SW5-6																													
SW5-7																													
SW5-8	—	—	—	OFF																									

<Table 5.1.1>

- Note:**
- \*1. When the hydrobox is connected with a PUMY-P/SUHZ-SW outdoor unit of which maximum outlet water temperature is 55°C, DIP SW1-2 must be changed to OFF.
  - \*2. OUT11 will be available. For safety reasons, this function is not available for certain errors. (In that case, system operation must be stopped and only the water circulation pump keeps running.)
  - \*3 This switch functions only when the hydrobox is connected with a PUHZ-FRP outdoor unit. When another type of outdoor unit is connected, the heating mode function is active regardless of the fact that this switch is ON or OFF.
  - \*4. Space heating and DHW can be operated only in indoor unit, like an electric boiler. (Refer to “5.5 Indoor unit only operation”.)
  - \*5. If emergency mode is no longer required, return the switch to OFF position.
  - \*6. Active only when SW3-6 is set to OFF.
  - \*7. Active only when SW4-1 is set to ON.

## 5.2 Connecting inputs/outputs

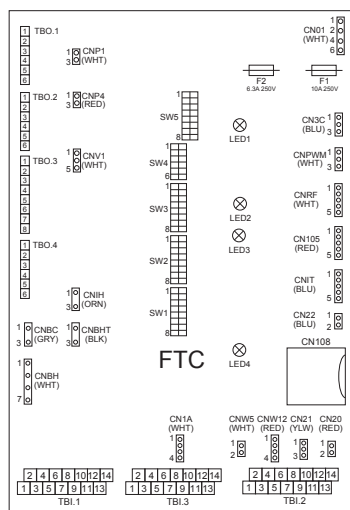

When the wires are wired to adjacent terminals use ring terminals and insulate the wires.

<Figure 5.2.1>

### Signal inputs

Name	Terminal block	Connector	Item	OFF (Open)	ON (Short)
IN1	TBI.1 13-14	—	Room thermostat 1 input *1	Refer to SW2-1 in <5.1 DIP Switch Functions>.	
IN2	TBI.1 11-12	—	Flow switch 1 input	Refer to SW2-2 in <5.1 DIP Switch Functions>.	
IN3	TBI.1 9-10	—	Flow switch 2 input (Zone1)	Refer to SW3-2 in <5.1 DIP Switch Functions>.	
IN4	TBI.1 7-8	—	Demand control input	Normal	Heat source OFF/ Boiler operation *3
IN5	TBI.1 5-6	—	Outdoor thermostat input *2	Standard operation	Heater operation/ Boiler operation *3
IN6	TBI.1 3-4	—	Room thermostat 2 input *1	Refer to SW3-1 in <5.1 DIP Switch Functions>.	
IN7	TBI.1 1-2	—	Flow switch 3 input (Zone2)	Refer to SW3-3 in <5.1 DIP Switch Functions>.	
IN8	TBI.3 1-2	—	Electric energy meter 1	*4	
IN9	TBI.3 3-4	—	Electric energy meter 2		
IN10	TBI.3 5-6	—	Heat meter		
IN11	TBI.3 7-8	—	Smart grid ready input	*5	
IN12	TBI.3 9-10	—			
IN1A	TBI.3 12-14	CN1A	Flow sensor	—	—

\*1. Set the ON/OFF cycle time of the room thermostat for 10 minutes or more; otherwise the compressor may be damaged.

\*2. If using outdoor thermostat for controlling operation of heaters, the lifetime of the heaters and related parts may be reduced.

\*3. To turn on the boiler operation, use the main remote controller to select "Boiler" in "External input setting" screen in the service menu.

\*4. Connectable electric energy meter and heat meter

- Pulse type: Voltage free contact for 12VDC detection by FTC (TBI.3 1, 3 and 5 pins have a positive voltage.)
- Pulse duration: Minimum ON time: 40ms  
Minimum OFF time: 100ms
- Possible unit of pulse: 0.1 pulse/kWh    1 pulse/kWh    10 pulse/kWh  
100 pulse/kWh    1000 pulse/kWh

Those values can be set by the main remote controller. (Refer to the menu tree in "5.10 Main remote controller".)

\*5. As for the smart grid ready, refer to "5.6 Smart grid ready".

### Wiring specification and local supply parts

Item	Name	Model and specifications
Signal input function	Signal input wire	Use sheathed vinyl coated cord or cable. Max. 30 m Wire type: CV, CVS or equivalent Wire size: Stranded wire 0.13 mm <sup>2</sup> to 1.25 mm <sup>2</sup> Solid wire: ø0.4 mm to ø1.2 mm
	Switch	Non-voltage "a" contact signals Remote switch: minimum applicable load 12V DC, 1mA

### Thermistor inputs

Name	Terminal block	Connector	Item	Optional part model
TH1	—	CN20	Thermistor (Room temp.) (Option)	PAC-SE41TS-E
TH2	—	CN21	Thermistor (Ref. liquid temp.)	—
THW1	—	CNW12 1-2	Thermistor (Flow water temp.)	—
THW2	—	CNW12 3-4	Thermistor (Return water temp.)	—
THW5	—	CNW5	Thermistor (DHW tank water temp.) (Option) *1	PAC-TH011TK-E (5 m) / PAC-TH011TKL-E (30 m)
THW6	TBI.2 3-4	—	Thermistor (Zone1 flow water temp.) (Option) *1	PAC-TH011-E
THW7	TBI.2 5-6	—	Thermistor (Zone1 return water temp.) (Option) *1	PAC-TH011-E
THW8	TBI.2 7-8	—	Thermistor (Zone2 flow water temp.) (Option) *1	PAC-TH011-E
THW9	TBI.2 9-10	—	Thermistor (Zone2 return water temp.) (Option) *1	PAC-TH011-E
THWB1	TBI.2 11-12	—	Thermistor (Boiler flow water temp.) (Option) *1	PAC-TH011HT-E
THWB2	TBI.2 13-14	—	Thermistor (Boiler return water temp.) (Option) *1	PAC-TH011HT-E

Ensure to wire thermistor wirings away from the power line and/or OUT1 to 15 wirings.

\*1. The maximum length of the thermistor wiring is 30 m. When the wires are wired to adjacent terminals, use ring terminals and insulate the wires. The length of the optional thermistors are 5 m. If you need to splice and extend the wirings, following points must be carried out.

- 1) Connect the wirings by soldering.
- 2) Insulate each connecting point against dust and water.

# 5 System Set Up


## Outputs

Name	Terminal block	Connector	Item	OFF	ON	Signal/Max. current	Max. total current
OUT1	TBO.1 1-2	CNP1	Water circulation pump 1 output (Space heating/cooling & DHW)	OFF	ON	230V AC 1.0A Max.	4.0A (a)
OUT2	TBO.1 3-4	—	Water circulation pump 2 output (Space heating/cooling for Zone1)	OFF	ON	230V AC 1.0A Max.	
OUT3	TBO.1 5-6	—	Water circulation pump 3 output (Space heating/cooling for Zone2) *1 2-way valve 2b output *2	OFF	ON	230V AC 1.0A Max.	
OUT14	—	CNP4	Water circulation pump 4 output (DHW)	OFF	ON	230V AC 1.0A Max.	3.0A (b)
OUT4	TBO.2 4-6	CNV1	3-way valve (2-way valve 1) output	Heating	DHW	230V AC 0.1A Max.	
OUT5	TBO.2 1-2 TBO.2 2-3	—	Mixing valve output *1	Stop	Close Open	230V AC 0.1A Max.	
OUT6	—	CNBH 1-3	Booster heater 1 output	OFF	ON	230V AC 0.5A Max. (Relay)	
OUT7	—	CNBH 5-7	Booster heater 2 output	OFF	ON	230V AC 0.5A Max. (Relay)	
OUT8	TBO.4 5-6	—	Cooling signal output	OFF	ON	230V AC 0.5A Max.	
OUT9	TBO.4 3-4	CNIH	Immersion heater output	OFF	ON	230V AC 0.5A Max. (Relay)	
OUT11	TBO.3 3-4	—	Error output	Normal	Error	230V AC 0.5A Max.	
OUT12	TBO.3 5-6	—	Defrost output	Normal	Defrost	230V AC 0.5A Max.	
OUT13	TBO.4 1-2	—	2-way valve 2a output *2	OFF	ON	230V AC 0.1A Max.	
OUT15	TBO.3 7-8	—	Comp ON signal	OFF	ON	230V AC 0.5A Max.	
OUT10	TBO.3 1-2	—	Boiler output	OFF	ON	non-voltage contact · 220-240V AC (30V DC) · 0.5A or less · 10mA 5V DC or more	—

Do not connect to the terminals that are indicated as “—” in the “Terminal block” field.

\*1 For 2-zone temperature control.


\*2 For 2-zone valve ON/OFF control.

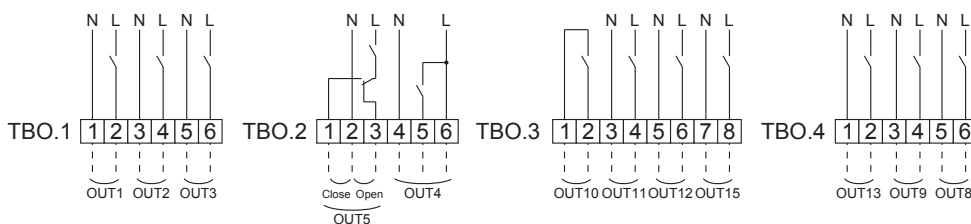

### Wiring specification and local supply parts

Item	Name	Model and specifications
External output function	Outputs wire	Use sheathed vinyl coated cord or cable. Max. 30 m Wire type: CV, CVS or equivalent Wire size: Stranded wire 0.25 mm <sup>2</sup> to 1.5 mm <sup>2</sup> Solid wire: 0.25 mm <sup>2</sup> to 1.5 mm <sup>2</sup>

### How to use TBO.1 to 4

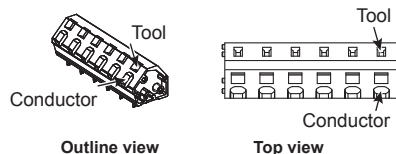

Connect them using either way as shown above.

<Figure 5.2.2>

- Note:**
1. When the hydrobox is powered via outdoor unit, the maximum grand total current of (a)+(b) is 3.0 A.
  2. Do not connect multiple water circulation pumps directly to each output (OUT1, OUT2, and OUT3). In such a case, connect them via (a) relay(s).
  3. Do not connect water circulation pumps to both TBO.1 1-2 and CNP1 at the same time.
  4. Connect an appropriate surge absorber to OUT10 (TBO.3 1-2) depending on the load at site.
  5. Stranded wire should be processed with insulation-covered bar terminal (DIN46228-4 standard compatible type).



## 5.3 Wiring for 2-zone temperature control

1. Water circulation pump 2 (Zone1 water circulation pump) / Water circulation pump 3 (Zone2 water circulation pump)  
Electrically wire water circulation pumps 2 and 3 to the appropriate output terminals. (Refer to “Outputs” in 5.2.)
2. Flow switch 2 (Zone1 flow switch) / Flow switch 3 (Zone2 flow switch)  
Connect flow switches 2 and 3 to the appropriate terminals. (Refer to “Signal inputs” in 5.2.)  
Set DIP switches 3-2 and 3-3 according to the functions of individual flow switches 2 and 3. (Refer to “DIP switch functions” in 5.1.)
3. Thermistor  
Connect the thermistor to monitor the Zone1 flow temperature to the THW6 (TBI. 2-3 and 2-4) terminals.  
Connect the thermistor to monitor the Zone1 return temperature to the THW7 (TBI. 2-5 and 2-6) terminals.  
Connect the thermistor to monitor the Zone2 flow temperature to the THW8 (TBI. 2-7 and 2-8) terminals.  
Connect the thermistor to monitor the Zone2 return temperature to the THW9 (TBI. 2-9 and 2-10) terminals.

The maximum length of the thermistor wiring is 30 m. The length of the optional thermistors are 5 m. If you need to splice and extend the wirings, following points must be carried out.

- 1) Connect the wirings by soldering.
  - 2) Insulate each connecting point against dust and water.
4. Motorized mixing valve  
Connect three wires coming from the motorized mixing valve to the appropriate terminals referring to “Outputs” in 5.2.

**Note:** Connect the signal line to open Port A (hot water inlet port) to TBO. 2-3 (Open), the signal line to open Port B (cold water inlet port) to TBO. 2-1 (Close), and the neutral terminal wire to TBO. 2-2 (N).

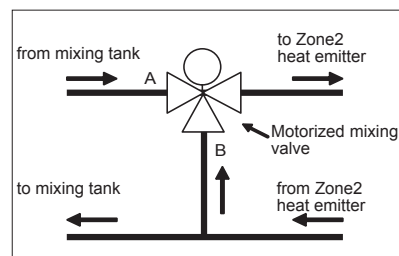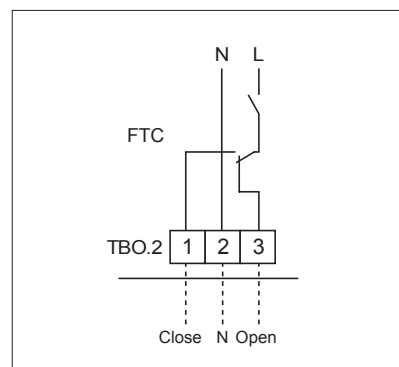


# 5 System Set Up

## 5.4 2-zone valve ON/OFF control

Opening /closing 2-way valve provides a simple 2-Zone control.  
Flow temperature is common for Zone1 and 2.

### 1. Pipe work

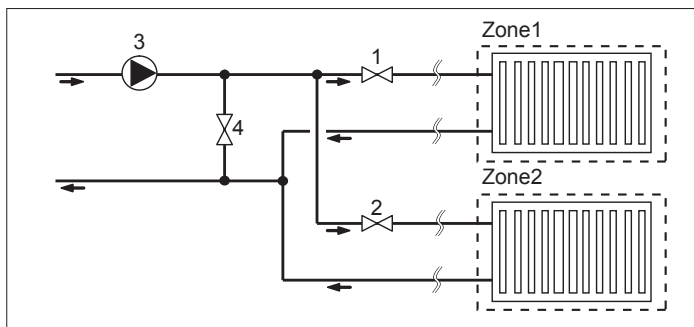

1. Zone1 2-way valve 2a (local supply)
2. Zone2 2-way valve 2b (local supply)
3. Water circulation pump 2 (local supply) \*1
4. By-pass valve (local supply) \*2

\*1 Install according to system in the field.  
\*2 For safety protection, it is recommended to install a by-pass valve.

Note: 1. Freeze stat function is deactivated whilst this control is ON.  
Use anti-freeze solution to avoid freezing, if necessary.  
2. When mixing tank and DHW tank are installed, install a 3-way valve (OUT4) in the primary water circuit.

### 2. DIP switch

Turn DIP switch 3-6 ON.

### 3. 2-way valve 2a (for Zone1) / 2-way valve 2b (for Zone2)

Electrically wire 2-way valve 2a and 2b to the appropriate external output terminals. (Refer to "External outputs" in 5.2)

### 4. Room thermostat connection

Heating operation mode	Zone1	Zone2
Room temp. control (Auto adaptation) *3	<ul style="list-style-type: none"> <li>• Wireless remote controller (option)</li> <li>• Room temperature thermistor (option)</li> <li>• Main remote controller (remote position)</li> </ul>	<ul style="list-style-type: none"> <li>• Wireless remote controller (option)</li> </ul>
Compensation curve or flow temp. control	<ul style="list-style-type: none"> <li>• Wireless remote controller (option) *4</li> <li>• Room temperature thermostat (local supply)</li> </ul>	<ul style="list-style-type: none"> <li>• Wireless remote controller (option) *4</li> <li>• Room temperature thermostat (local supply)</li> </ul>

\*3 Ensure to install the room thermostat for Zone1 in main room since the Room temp. control for Zone1 is prioritized.

\*4 The wireless remote controller can be used as a thermostat.

## 5.5 Indoor unit only operation (during installation work)

In the case when DHW or heating operation is required prior to connection of the outdoor unit; i.e. during installation work, an electric heater in indoor unit (\*1) can be used.  
\*1 Model with electric heater only.

### 1. To start operation

- Check if the indoor unit power supply is OFF, and turn DIP switch 4-4 and 4-5 ON.
- Turn ON the indoor unit power supply.

### 2. To end operation \*2

- Turn OFF the indoor unit power supply.
- Turn DIP switch 4-4 and 4-5 OFF.

\*2 When the indoor unit only operation is ended, ensure to check over the settings after outdoor unit is connected.

### Note:

Prolonged running of the this operation may affect the life of the electric heater.

## 5.6 Smart grid ready

In DHW or heating operation, the commands in the table below can be used.

IN11	IN12	Meaning
OFF (open)	OFF (open)	Normal operation
ON (short)	OFF (open)	Switch-on recommendation*1
OFF (open)	ON (short)	Switch-off command
ON (short)	ON (short)	Switch-on command*2

### Note:

- To activate this function, settings on the main remote controller are required. (Main menu → Service → "Function settings" Ref. add: 0, Unit: 1)
- Heating operation mode (compensation curve or flow temp. control) requires the optional wireless remote controller.

\*1 Switch-on recommendation has following 2 modes:

#### Mode 7 Hot water operation

Additional boost temperature is added onto the usual DHW target temperature.  
(1-Inactive (default) /2-Target temp. +3°C/3-Target temp. +5°C)

#### Mode 8 Heating operation

Heating ON (permitted heating with thermo ON) range is extended.  
(1-Inactive (default) /2-Thermo ON temp. +2°C/3-Thermo ON temp. +3°C)




\*2 Switch-on command has following 2 modes:

#### Hot water operation

With electrical heater or DIP SW 1-2 ON → Target temp. : 60°C  
Without electrical heater and DIP SW 1-2 OFF → Target temp. : 55°C

#### Heating operation

Heating is ALWAYS permitted.

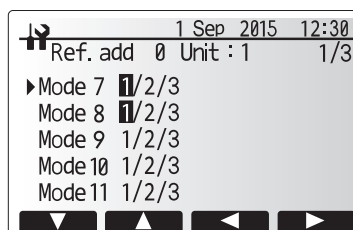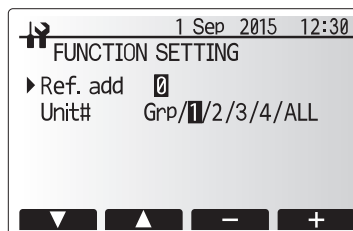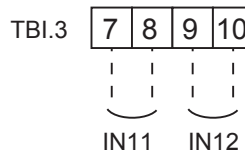

## 5.7 Installation procedure for DHW tank

**Note:**

- Be aware that the respective DHW operations are greatly effected by the selections of the components such as tank, immersion heater, or the like.
- Follow your local regulations to perform system configuration.

1. To enable switching of the water circulation circuit between the DHW mode and the heating mode, install a 3-way valve (local supply). The 3-way valve and the DHW tank should be positioned as shown in the system diagram on the page 6, Figure 3.4 or 3.5 as applicable.  
The use of two 2-way valves can perform the same function as a 3-way valve.
2. Install the optional thermistor THW5 (optional part PAC-TH011TK-E/PAC-TH011TKL-E) on the DHW tank.  
It is recommended to position the thermistor at the mid point of the DHW tank capacity. Insulate thermistor from ambient air. Especially for double (insulated) tank, thermistor should be attached to the inner side (to detect the water temperature).
3. Connect the thermistor lead to the CNW5 connector on the FTC.  
If the thermistor lead is too long bundle it with a strap to adjust the length.
4. The output terminals for the 3-way valve is TBO.2 4-5 (OUT4).  
The TBO.2 4-5 terminals on the FTC are shown in the wiring diagram on Page 20.  
Choose the terminals that the 3-way valve is connected to between TBO.2 4-5, or TBO.2 4-6, according to the rated voltage.  
When the rated current of the 3-way valve exceeds 0.1A, be sure to use a relay with maximum voltage and current ratings of 230V AC / 0.1A when connecting to the FTC. Do not directly connect the 3-way valve cable to the FTC. Connect the relay cable to the TBO.2 4-5 terminals.  
3-way valve must be of SPST type. SPDT type can NOT be used.  
For systems using 2-way valves instead of a 3-way valve please read the following;

**Specification of 2-way valve (local supply)**


- Power supply: 230V AC
- Current: 0.1A Max. (If over 0.1A you must use a relay)
- Type: Normally closed

	Installation position	Electrical connection terminal block	Output signal		
			Heating	DHW	System OFF
2-way valve1	DHW	TBO.2 4-5	OFF (closed)	ON (open)	OFF (closed)
2-way valve2	Heating	TBO.4 1-2	ON (open)	OFF (closed)	OFF (closed)

- Note:** Should the 2-way valve become blocked the water circulation will stop. A by-pass valve or circuit should be installed between pump and 2-way valve for safety.  
The TBO.4 1-2 terminals on the FTC are shown in the wiring diagram. The 2-way valve (local supply) should be installed according to the instructions supplied with it. Follow 2-way valve's manufacturer's instructions as to whether to connect an earth cable or not.
- For the 2-way valve, choose the one that slowly opens and shuts off to prevent water hammer sound.
  - Choose the 2-way valve equipped with manual override, which is necessary for topping up or draining of water.

5. Turn the DIP SW1-3 on the FTC to ON.
6. When using an immersion heater (local supply), connect a contact relay cable for the immersion heater to TBO.4 3-4 (OUT9), and turn the DIP SW1-4 to ON. Do NOT directly connect the power cable to the FTC.

- Note:**
- When an immersion heater is installed, select appropriate breaker capacity and a cable with appropriate diameter on the basis of heater output.
  - When wiring an immersion heater in the field, always install an earth leakage breaker to prevent accidental electric shock.

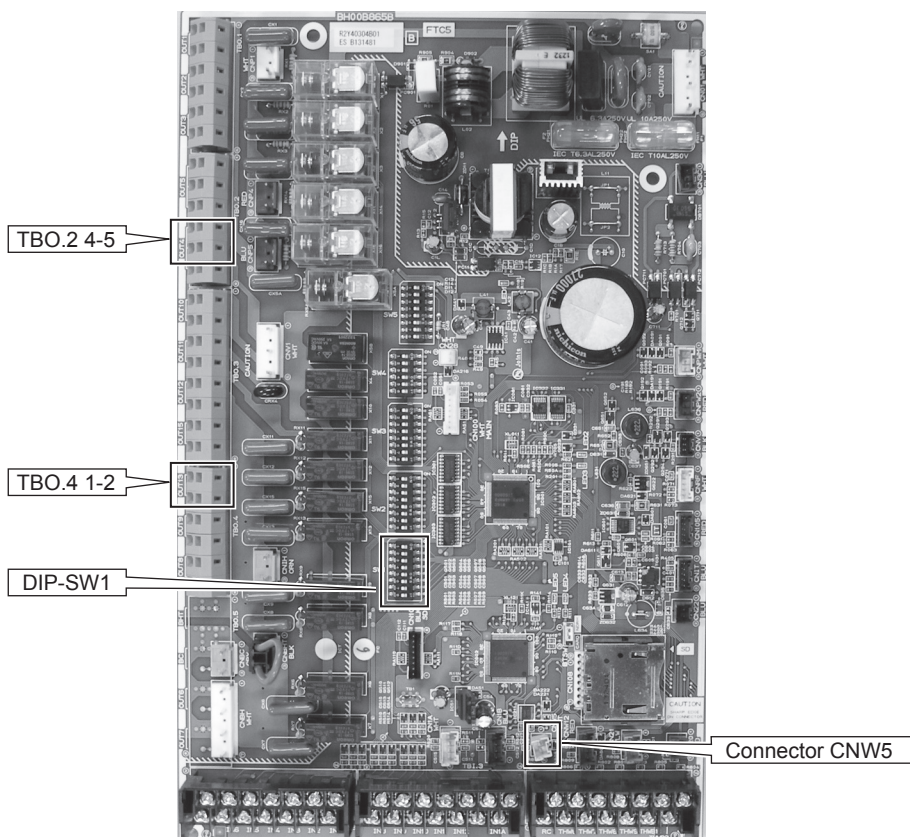

- ⚠ WARNING: When connecting DHW tank**
- (1) Attach the optional thermistor THW5 (PAC-TH011TK-E / PAC-TH011TKL-E).
  - (2) Always use earth leakage breaker when connecting immersion heater.
  - (3) When installing an immersion heater, be sure that the immersion heater has a built-in direct cut-off thermostat.
  - (4) Connect a pressure relief valve on the sanitary water side.
  - (5) It is essential that no check valve or isolating valve is fitted between the hydrobox and the pressure relief valve.

# 5 System Set Up

## Recommended DHW system

Where system involves a DHW tank:

DHW tank	Immersion heater	Booster heater	BH function	System diagram	Thermistor
Present	Absent	Present	For space heating/ cooling and DHW		THW1: Flow water temp. THW2: Return water temp. THW5: Tank water temp. (optional part PAC-TH011TK-E / PAC-TH011TKL-E)
Present	Present	Present	For space heating/ cooling and DHW		THW1: Flow water temp. THW2: Return water temp. THW5: Tank water temp. (optional part PAC-TH011TK-E / PAC-TH011TKL-E)

\*The use of two 2-way valves can perform same function as a 3-way valve.

EN



# 5 System Set Up

## 5.8 Remote Controller Options

The hydrobox comes factory fitted with a main remote controller. This incorporates a thermistor for temperature monitoring and a graphical user interface to enable set-up, view current status and input scheduling functions. The main remote controller is also used for servicing purposes. This facility is accessed via password protected service menus.

To provide the best efficiency Mitsubishi Electric recommends using automatic adaptation function based on room temperature. To use this function a room thermistor needs to be present in a main living area. This can be done in a number of ways the most convenient are detailed below.

**Refer to heating section of this manual for instructions on how to set compensation curve, Flow temp. or Room temp. (Auto adaptation).**

**For instructions on how to set the thermistor input for the FTC please refer to Initial settings section.**

The factory setting for space heating mode is set to Room temp. (auto adaptation). If there is no room sensor present in the system, this setting must be changed to either Compensation curve mode or Flow temp. mode.

**Note: Auto-adaptation is not available in Cooling mode.**


### ■ 1-zone temperature control

#### Control option A

This option features the main remote controller and the Mitsubishi Electric wireless remote controller. The wireless remote controller is used to monitor room temperature and can be used to make changes to the space heating settings, boost DHW (\*1) and switch to holiday mode without having to directly use the main remote controller.

If more than one wireless remote controller is used, the most recently requested temperature setting will commonly be applied to all rooms by the central control system regardless of which wireless remote controller was used. No hierarchy exists across these remote controllers.


Wire the wireless receiver to FTC referring to the wireless remote controller instruction manual. **Turn DIP SW1-8 to ON.** Before operation configure the wireless remote controller to transmit and receive data referring to the wireless remote controller installation manual.

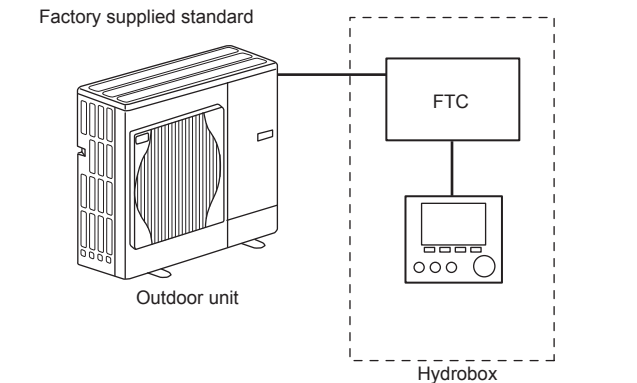

#### Control option B

This option features the main remote controller and the Mitsubishi Electric thermistor wired to FTC. The thermistor is used to monitor room temperature but can not make any changes in control operation. Any changes to DHW (\*1) must be made using the main remote controller mounted on the hydrobox.

Wire the thermistor to the TH1 connector on FTC. The number of room temperature thermistors that can be connected to FTC is always one.

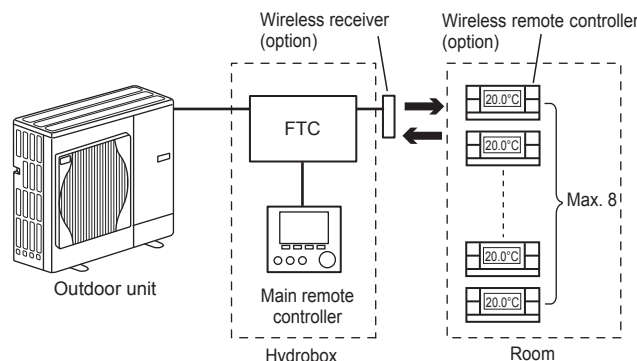

#### Control option C

This option features the main remote controller being removed from the hydrobox and situated in a different room. A thermistor built in the main remote controller can be used for monitoring the room temperature for Auto Adaptation function whilst keeping all its features of the main remote controller available.

The main remote controller and FTC are connected by a 2-core, 0.3 mm<sup>2</sup>, non-polar cable (local supply) with a maximum length of 500 m.

To use the sensor in the main remote controller the main remote controller should come off from the hydrobox. Otherwise it will detect the temperature of the hydrobox instead of room temperature. This will affect the output of the space heating.




**Note:** Wiring for main remote controller cable shall be (5 cm or more) apart from power source wiring so that it is not influenced by electrical noise from power source wiring. (Do NOT insert main remote controller cable and power source wiring in the same conduit.)

#### Control option D (Flow temp. or compensation curve only)

This option features the main remote controller and a locally supplied thermostat wired to FTC. The thermostat is used to set the maximum temperature for heating room. Any changes to DHW (\*1) must be made using main remote controller mounted on the hydrobox.

The thermostat is wired to IN1 in TBI.1 on FTC. The number of thermostats that can be connected to FTC is always one.

★ The wireless remote controller can be also used as a thermostat.

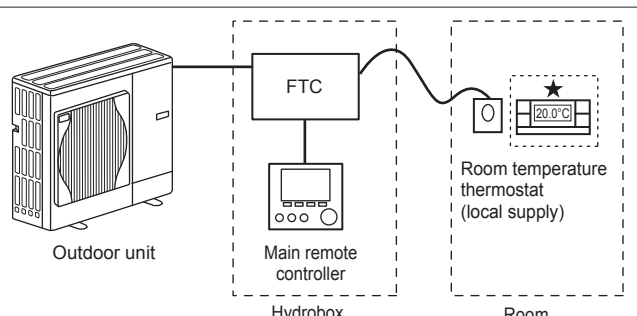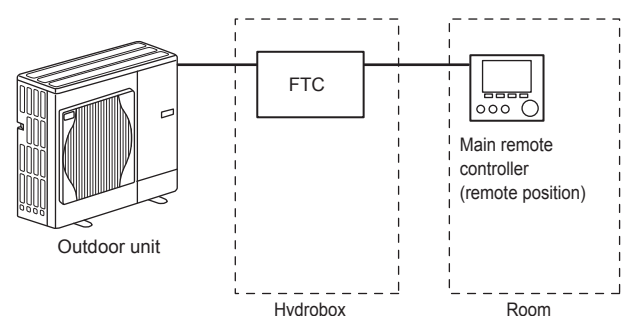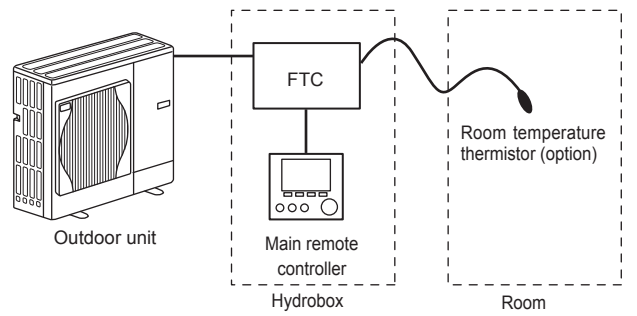

\*1 If applicable

# 5 System Set Up

## 2-zone temperature control

### Control option A

This option features the main remote controller, the Mitsubishi Electric wireless remote controller and a locally supplied thermostat.

The wireless remote controller is used to monitor the Zone1 room temperature and the thermostat is used to monitor the Zone2 room temperature.


The thermostat can be also allocated to Zone1 and the wireless remote controller to Zone2.

The wireless remote controller can be also used to make changes to the space heating settings, boost DHW (\*1) and switch to holiday mode without having to use the main remote controller.

If more than one wireless remote controller is used, the last temperature setting adjustment/demand will be applied to ALL rooms in same zone.

Wire the wireless receiver to FTC referring to the wireless remote controller instruction manual. Turn DIP SW1-8 to ON. Before operation configure the wireless remote controller to transmit and receive data referring to the wireless remote controller installation manual.

The thermostat is used to set the maximum temperature for heating Zone2 room. The thermostat is wired to IN6 on FTC. (If the thermostat is allocated to Zone1, it is wired to IN1 on TBI.1.) (Refer to 5.2.)

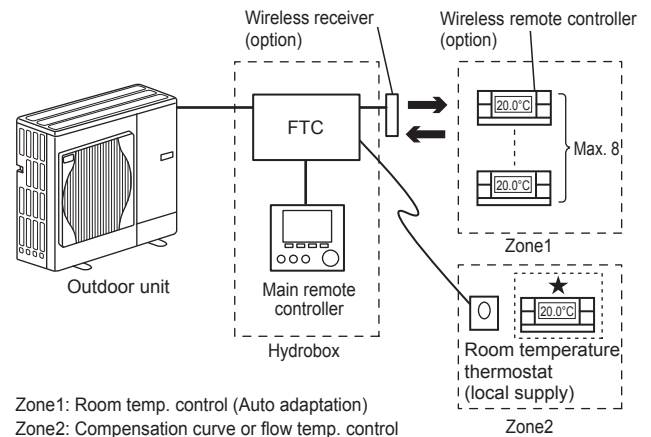

### Control option B

This option features the main remote controller, the Mitsubishi Electric thermistor and a locally supplied thermostat that are wired to FTC.

The thermistor is used to monitor the Zone1 room temperature and the thermostat is used to control the Zone2 room temperature.

The thermostat can be also allocated to Zone1 and the thermistor to Zone2.


The thermistor can not make any changes in control operation. Any changes to DHW (\*1) must be made using the main remote controller mounted on the hydrobox.

Wire the thermistor to the TH1 connector on FTC.

The number of room temperature thermistors that can be connected to FTC is always one.

The thermostat is used to set the maximum temperature for heating Zone2 room.

The thermostat is wired to IN6 on FTC. (If the thermostat is allocated to Zone1, wire it to IN1 on TBI.1.) (Refer to 5.2.)

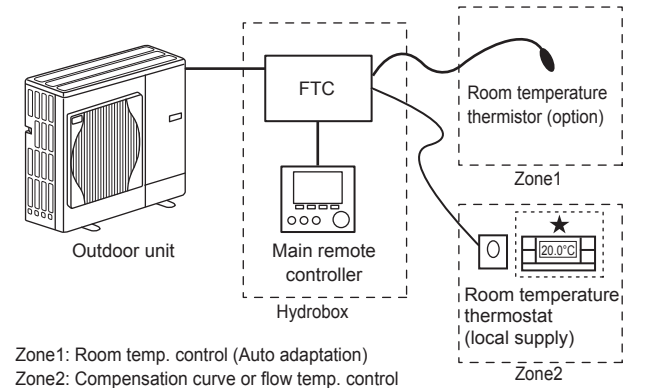

### Control option C

This option features the main remote controller (with in-built thermistor) that is removed from the hydrobox to monitor the Zone1 room temperature and a locally supplied thermostat to monitor the Zone2 room temperature.

The thermostat can be also allocated to Zone1 and the thermistor to Zone2.

A thermistor built into the main remote controller can be used for monitoring the room temperature for Auto Adaptation function whilst keeping all its features of the main remote controller available.


The main remote controller and FTC are connected by a 2-core, 0.3 mm<sup>2</sup>, non-polar cable (local supply) with a maximum length of 500 m.

To use the sensor in the main remote controller the main remote controller should be detached from the hydrobox. Otherwise it will detect the temperature of the hydrobox instead of room temperature. This will affect the output of the space heating.

The thermostat is used to set the maximum temperature for heating Zone2 room.

The thermostat is wired to IN6 on FTC. (If the thermostat is allocated to Zone1, wire it to IN1 on TBI.1.) (Refer to 5.2.)

Note: Wiring for main remote controller cable shall be (5 cm or more) apart from power source wiring so that it is not influenced by electrical noise from power source wiring. (Do NOT insert main remote controller cable and power source wiring in the same conduit.)

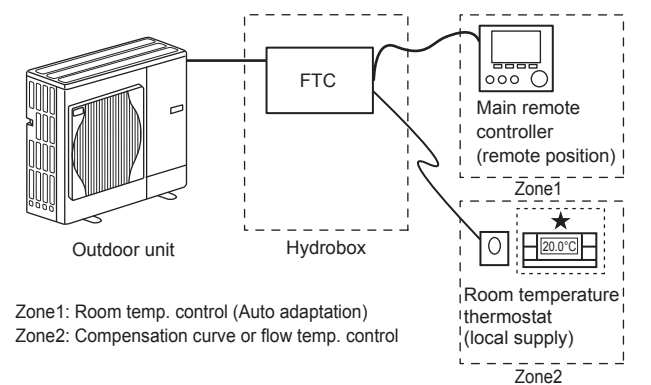


### Control option D

This option features the locally supplied thermostats wired to FTC. The thermostats are individually allocated to Zone1 and Zone2. The thermostats are used to set each maximum temperature for heating Zone1 and Zone2 rooms. Any changes to DHW (\*1) must be made using the main remote controller mounted on the hydrobox.

The thermostat for Zone1 is wired to IN1 in TBI.1 on FTC.

The thermostat for Zone2 is wired to IN6 in TBI.1 on FTC.

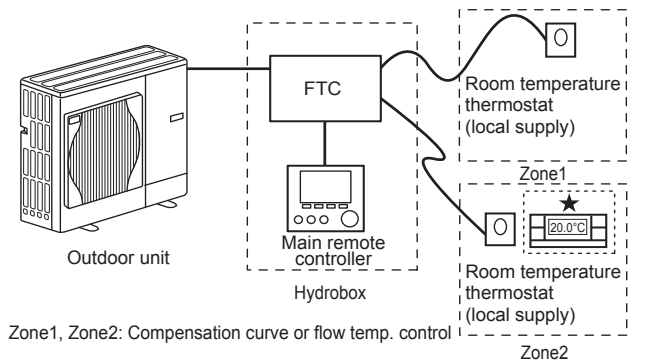

\*1 If applicable

\*2 For the options above, the sensor types can be exchanged between Zone1 and Zone2. (e.g. Wireless remote controller in Zone1 and Room temp. thermostat in Zone2 can be changed to Room temp. thermostat and wireless remote controller, respectively).

★ The wireless remote controller can be also used as a thermostat.

## 5.9 Using SD memory card

The hydrobox is equipped with an SD memory card interface in FTC. Using an SD memory card can simplify main remote controller settings and can store operating logs. \*1

### <Handling precautions>

- (1) Use an SD memory card that complies with the SD standards. Check that the SD memory card has a logo on it of those shown to the right.
- (2) SD memory cards to the SD standards include SD, SDHC, miniSD, micro SD, and microSDHC memory cards. The capacities are available up to 32 GB. Choose that with a maximum allowable temperature of 55°C.
- (3) When the SD memory card is a miniSD, miniSDHC, microSD, or micro SDHC memory card, use an SD memory card converter adapter.
- (4) Before writing to the SD memory card, release the write-protect switch.



- (5) Before inserting or ejecting an SD memory card, make sure to power off the system. If an SD memory card is inserted or ejected with the system powered on, the stored data could be corrupted or the SD memory card be damaged. \*An SD memory card is live for a short duration after the system is powered off. Before insertion or ejection wait until the LED lamps on the FTC control board are all off.
- (6) The read and write operations have been verified using the following SD memory cards, however, these operations are not always guaranteed as the specifications of these SD memory cards could change.

Manufacturer	Model	Tested in
Verbatim	#44015 0912-61	Mar. 2012
SanDisk	SDSDB-002G-B35	Oct. 2011
Panasonic	RP-SDP04GE1K	Oct. 2011
Arvato	2GB PS8032 TSB 24nm MLC	Jun. 2012
Arvato	2GB PS8035 TSB A19nm MLC	Jul. 2014
Lexar	LSD8GBBBEU300 Rev B	Sep. 2015


Before using a new SD memory card (including the card that comes with the unit), always check that the SD memory card can be safely read and written to by the FTC controller.

### <How to check read and write operations>

- a) Check for correct wiring of power supply to the system. For more details, refer to section 4.4.  
(Do not power on the system at this point.)
  - b) Insert an SD memory card.
  - c) Power on the system.
  - d) The LED4 lamp lights if the read and write operations are successfully completed. If the LED4 lamp continues blinking or does not light, the SD memory card cannot be read or written to by the FTC controller.
- (7) Make sure to follow the instruction and the requirement of the SD memory card's manufacturer.
  - (8) Format the SD memory card if determined unreadable in step (6). This could make it readable.  
Download an SD card formatter from the following site.  
SD Association homepage: <https://www.sdcard.org/home/>
  - (9) FTC supports FAT file system but not NTFS file system.
  - (10) Mitsubishi Electric is not liable for any damages, in whole or in part, including failure of writing to an SD memory card, and corruption and loss of the saved data, or the like. Back up saved data as necessary.
  - (11) Do not touch any electronic parts on the FTC control board when inserting or ejecting an SD memory card, or else the control board could fail.

- (a) For insertion, push on the SD memory card until it clicks into place.
- (b) For ejection, push on the SD memory card until it clicks.

**Note:** To avoid cutting fingers, do not touch sharp edges of the SD memory card connector (CN108) on the FTC control board.

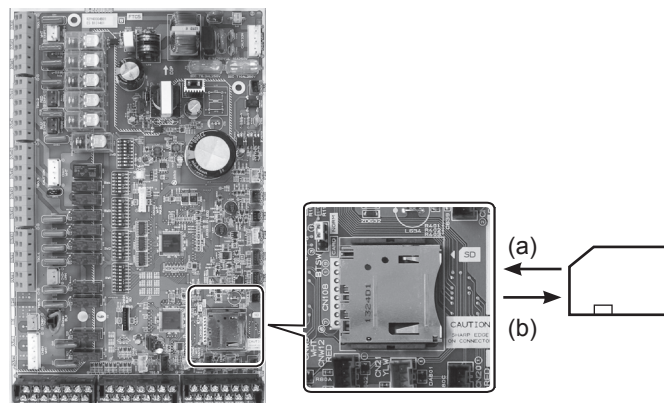

### Logos



### Capacities

2 GB to 32 GB \*2

### SD speed classes

All



- \* The SD Logo is a trademark of SD-3C, LLC.
- The miniSD logo is a trademark of SD-3C, LLC.
- The microSD logo is a trademark of SD-3C, LLC.

\*1 To edit main remote controller settings or to check operating data, an Ecodan service tool (for use with PC) is required.

\*2 A 2-GB SD memory card stores up to 30 days of operation logs.

# 5 System Set Up

## 5.10 Main remote controller

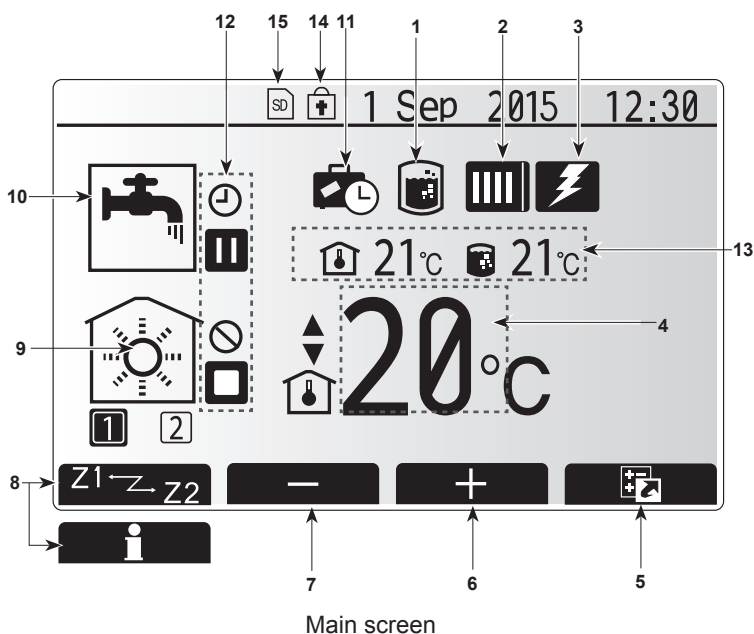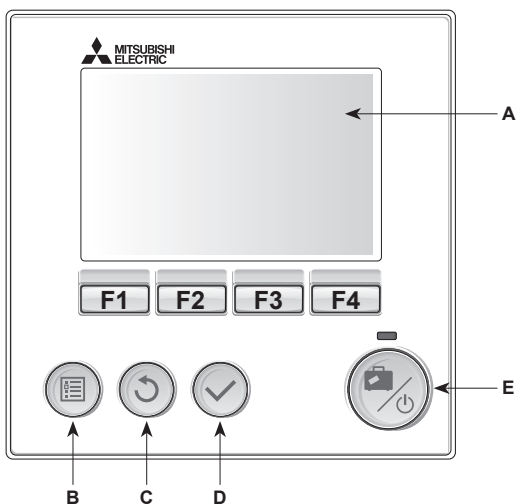

Main screen

### <Main remote controller parts>

Letter	Name	Function
A	Screen	Screen in which all information is displayed
B	Menu	Access to system settings for initial set up and modifications.
C	Back	Return to previous menu.
D	Confirm	Used to select or save. (Enter key)
E	Power/Holiday	If system is switched off pressing once will turn system on. Pressing again when system is switched on will enable Holiday Mode. Holding the button down for 3 seconds will turn the system off. (*1)
F1-4	Function keys	Used to scroll through menu and adjust settings. Function is determined by the menu screen visible on screen A.

\*1

When the system is switched off or the power supply is disconnected, the hydrobox protection functions (e.g. freeze stat. function) will NOT operate. Please beware that without these safety functions enabled the hydrobox may potentially become exposed to damage.

### <Main screen icons>

	Icon	Description
1	Legionella prevention	When this icon is displayed 'Legionella prevention mode' is active.
2	Heat pump	'Heat pump' is running.
		Defrosting
		Emergency heating
3	Electric heater	When this icon is displayed the 'Electric heaters' (booster or immersion heater) are in use.
4	Target temperature	Target flow temperature
		Target room temperature
		Compensation curve
5	OPTION	Pressing the function button below this icon will display the option screen.
6	+	Increase desired temperature.
7	-	Decrease desired temperature.
8	Z1-Z2	Pressing the function button below this icon switches between Zone1 and Zone2.
		Information
9	Space heating/cooling mode	Heating mode Zone1 or Zone2
		Cooling mode Zone1 or Zone2
10	DHW mode	Normal or ECO mode
11	Holiday mode	When this icon is displayed 'Holiday mode' activated.
12	⌚	Timer
	⊘	Prohibited
	🌐	Server control
	⏸	Stand-by
	⏹	Stand-by (*2)
	▶	Operating
13	Current temperature	Current room temperature
		Current water temperature of DHW tank
14	🔒	The Menu button is locked or the switching of the operation modes between DHW and Heating operations are disabled in the Option screen.(*3)
15	SD	SD memory card is inserted. Normal operation.
		SD

\*2 This unit is in Stand-by whilst other indoor unit(s) is in operation by priority.

\*3 To lock or unlock the Menu, press the BACK and CONFIRM keys simultaneously for 3 seconds.

## 5 System Set Up

### ■ Setting the Main remote controller

After the power has been connected to the outdoor and hydrobox (See chapter 4.4) the initial system settings can be entered via the main remote controller.

1. Check all breakers and other safety devices are correctly installed and turn on power to the system.
2. When the main remote controller switched on for the first time, the screen automatically goes to Initial settings menu, Language setting screen and Date/Time setting screen in order.
3. Main remote controller will automatically start up. Wait approximately 6 minutes whilst the control menus load.
4. When the controller is ready a blank screen with a line running across the top will be displayed.
5. Press button E (Power) (refer to page 27) to turn on the system. Before turning on the system, perform initial settings as instructed below.

### ■ Main Settings Menu

The main settings menu can be accessed by pressing the MENU button. To reduce the risk of untrained end users altering the settings accidentally there are two access levels to the main settings; and the service section menu is password protected.

#### **User Level – Short press**

If the MENU button is pressed once for a short time the main settings will be displayed but without the edit function. This will enable the user to view current settings but **NOT** change the parameters.


#### **Installer Level – Long press**

If the MENU button is pressed down for 3 seconds the main settings will be displayed with all functionality available.


The color of ◀▶ buttons is inverted as per right figure.

The following items can be viewed and/or edited (dependent on access level).

- Domestic Hot water (DHW)
- Heating/Cooling
- Schedule timer
- Holiday mode
- Initial settings
- Service (Password protected)

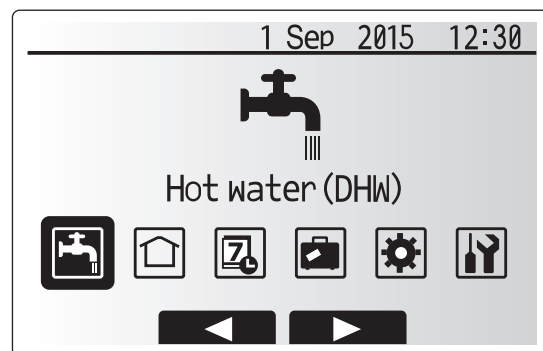

Main menu

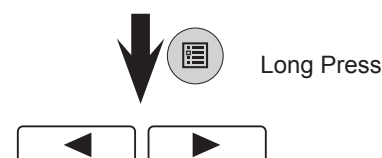


### General Operation

- To find the icon that you wish to set, use the F2 and F3 buttons to move between the icons.
- The highlighted icon will appear as a larger version of the center of the screen.
- Press CONFIRM to select and edit the highlighted mode.
- Follow the <Main remote controller Menu Tree> for further setting, using ◀▶ buttons for scrolling or F1 to F4 for selecting.

# 5 System Set Up

## <Main Controller Menu Tree>

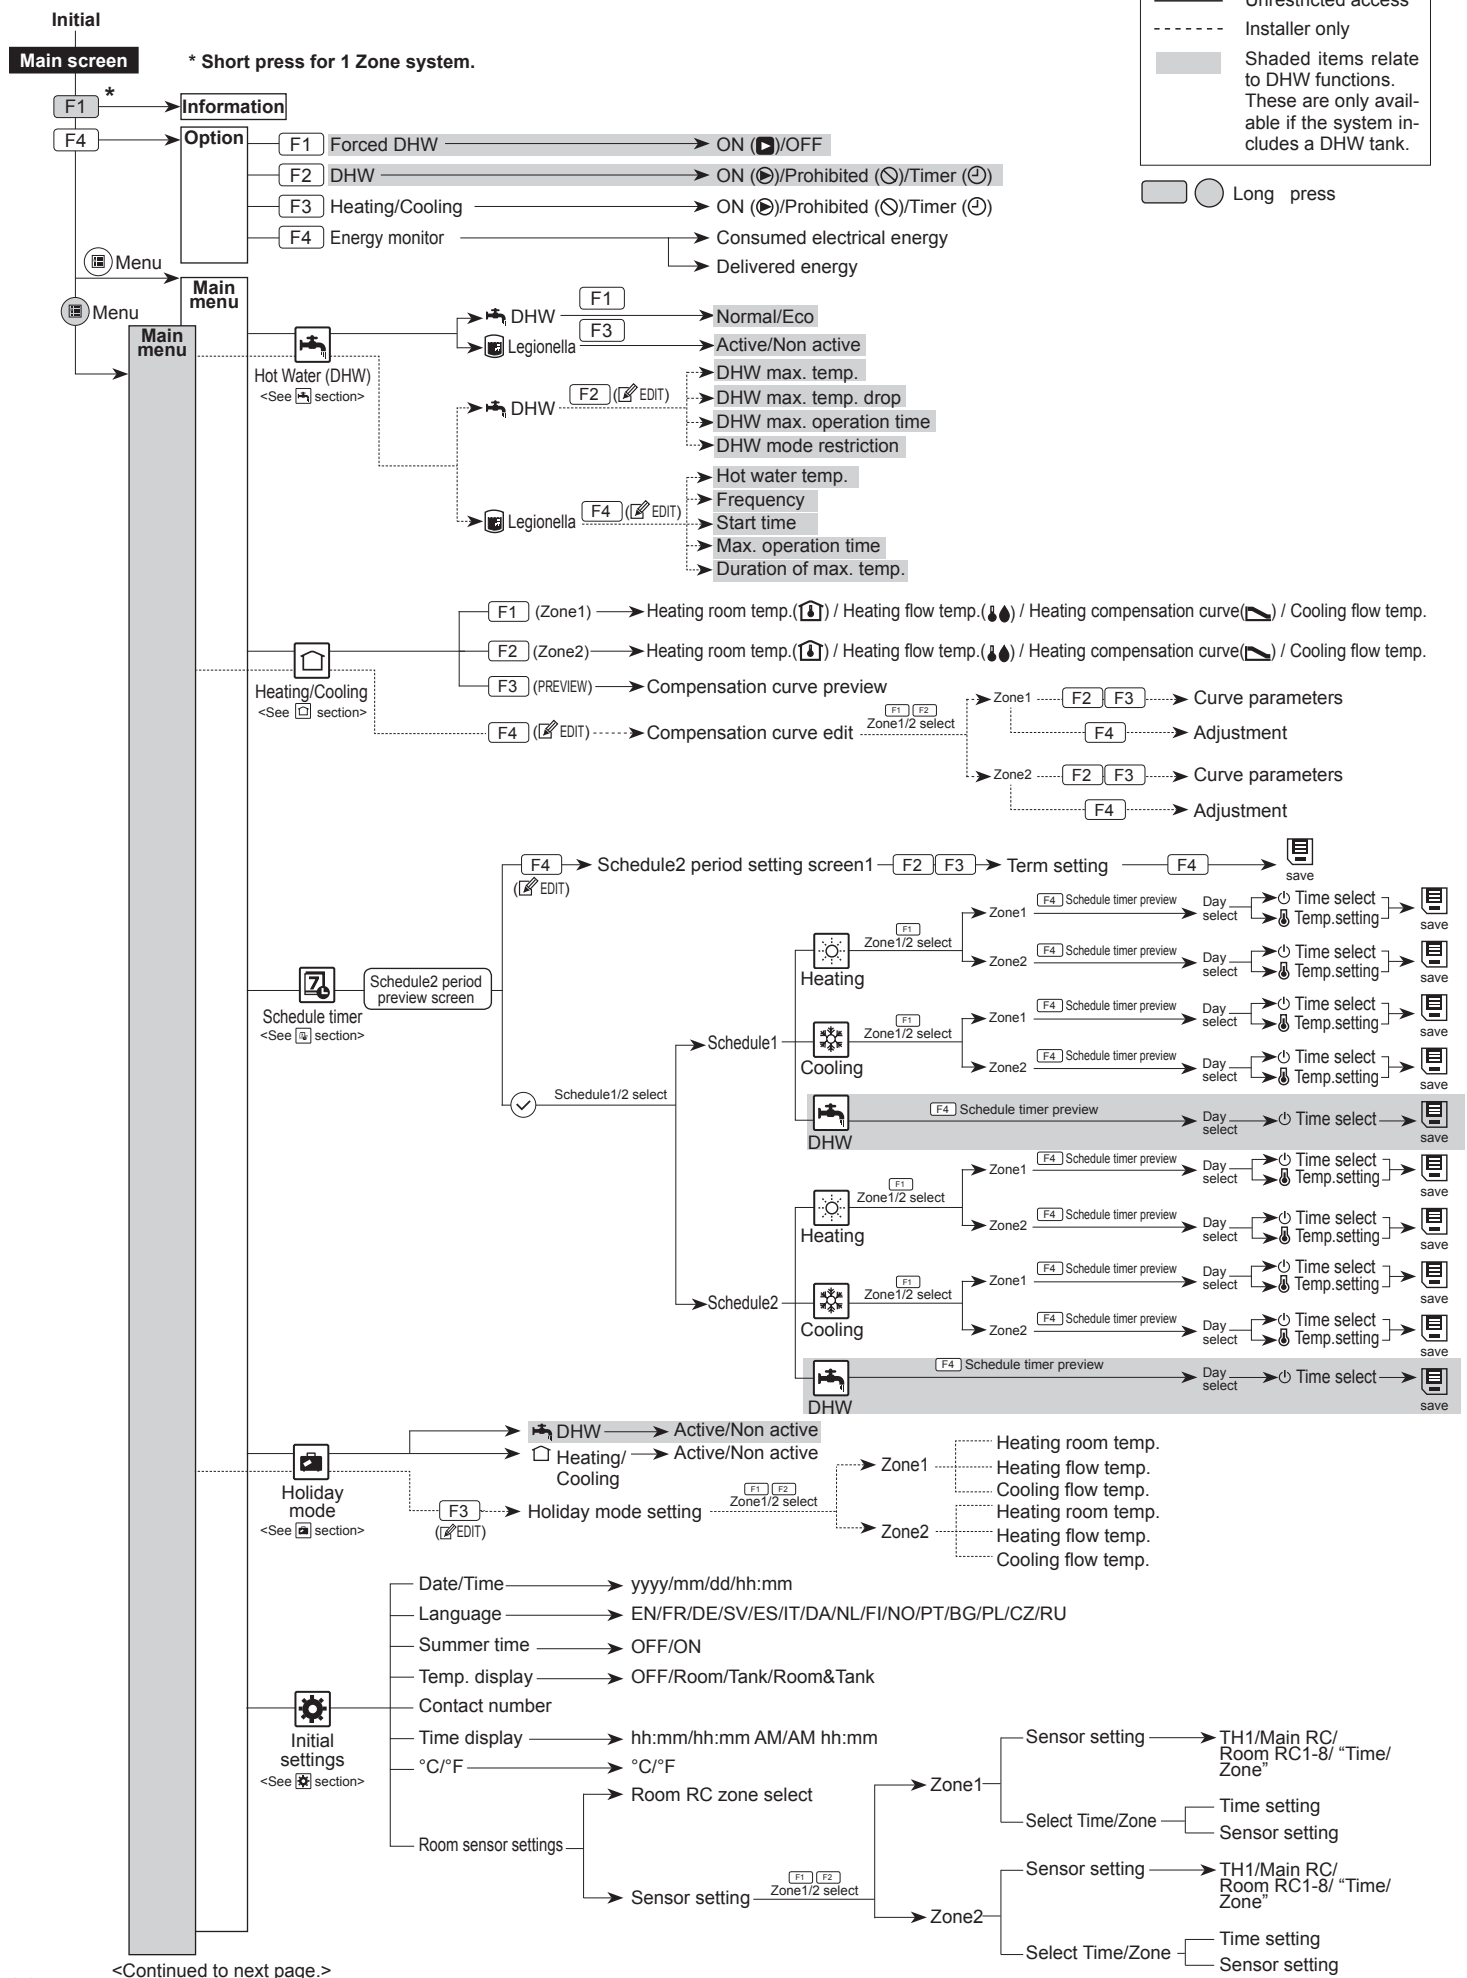


- Unrestricted access
- - - - - Installer only
- Shaded items relate to DHW functions. These are only available if the system includes a DHW tank.
- Long press

EN

# 5 System Set Up

<Continued from the previous page.>

## <Main Controller Menu Tree>

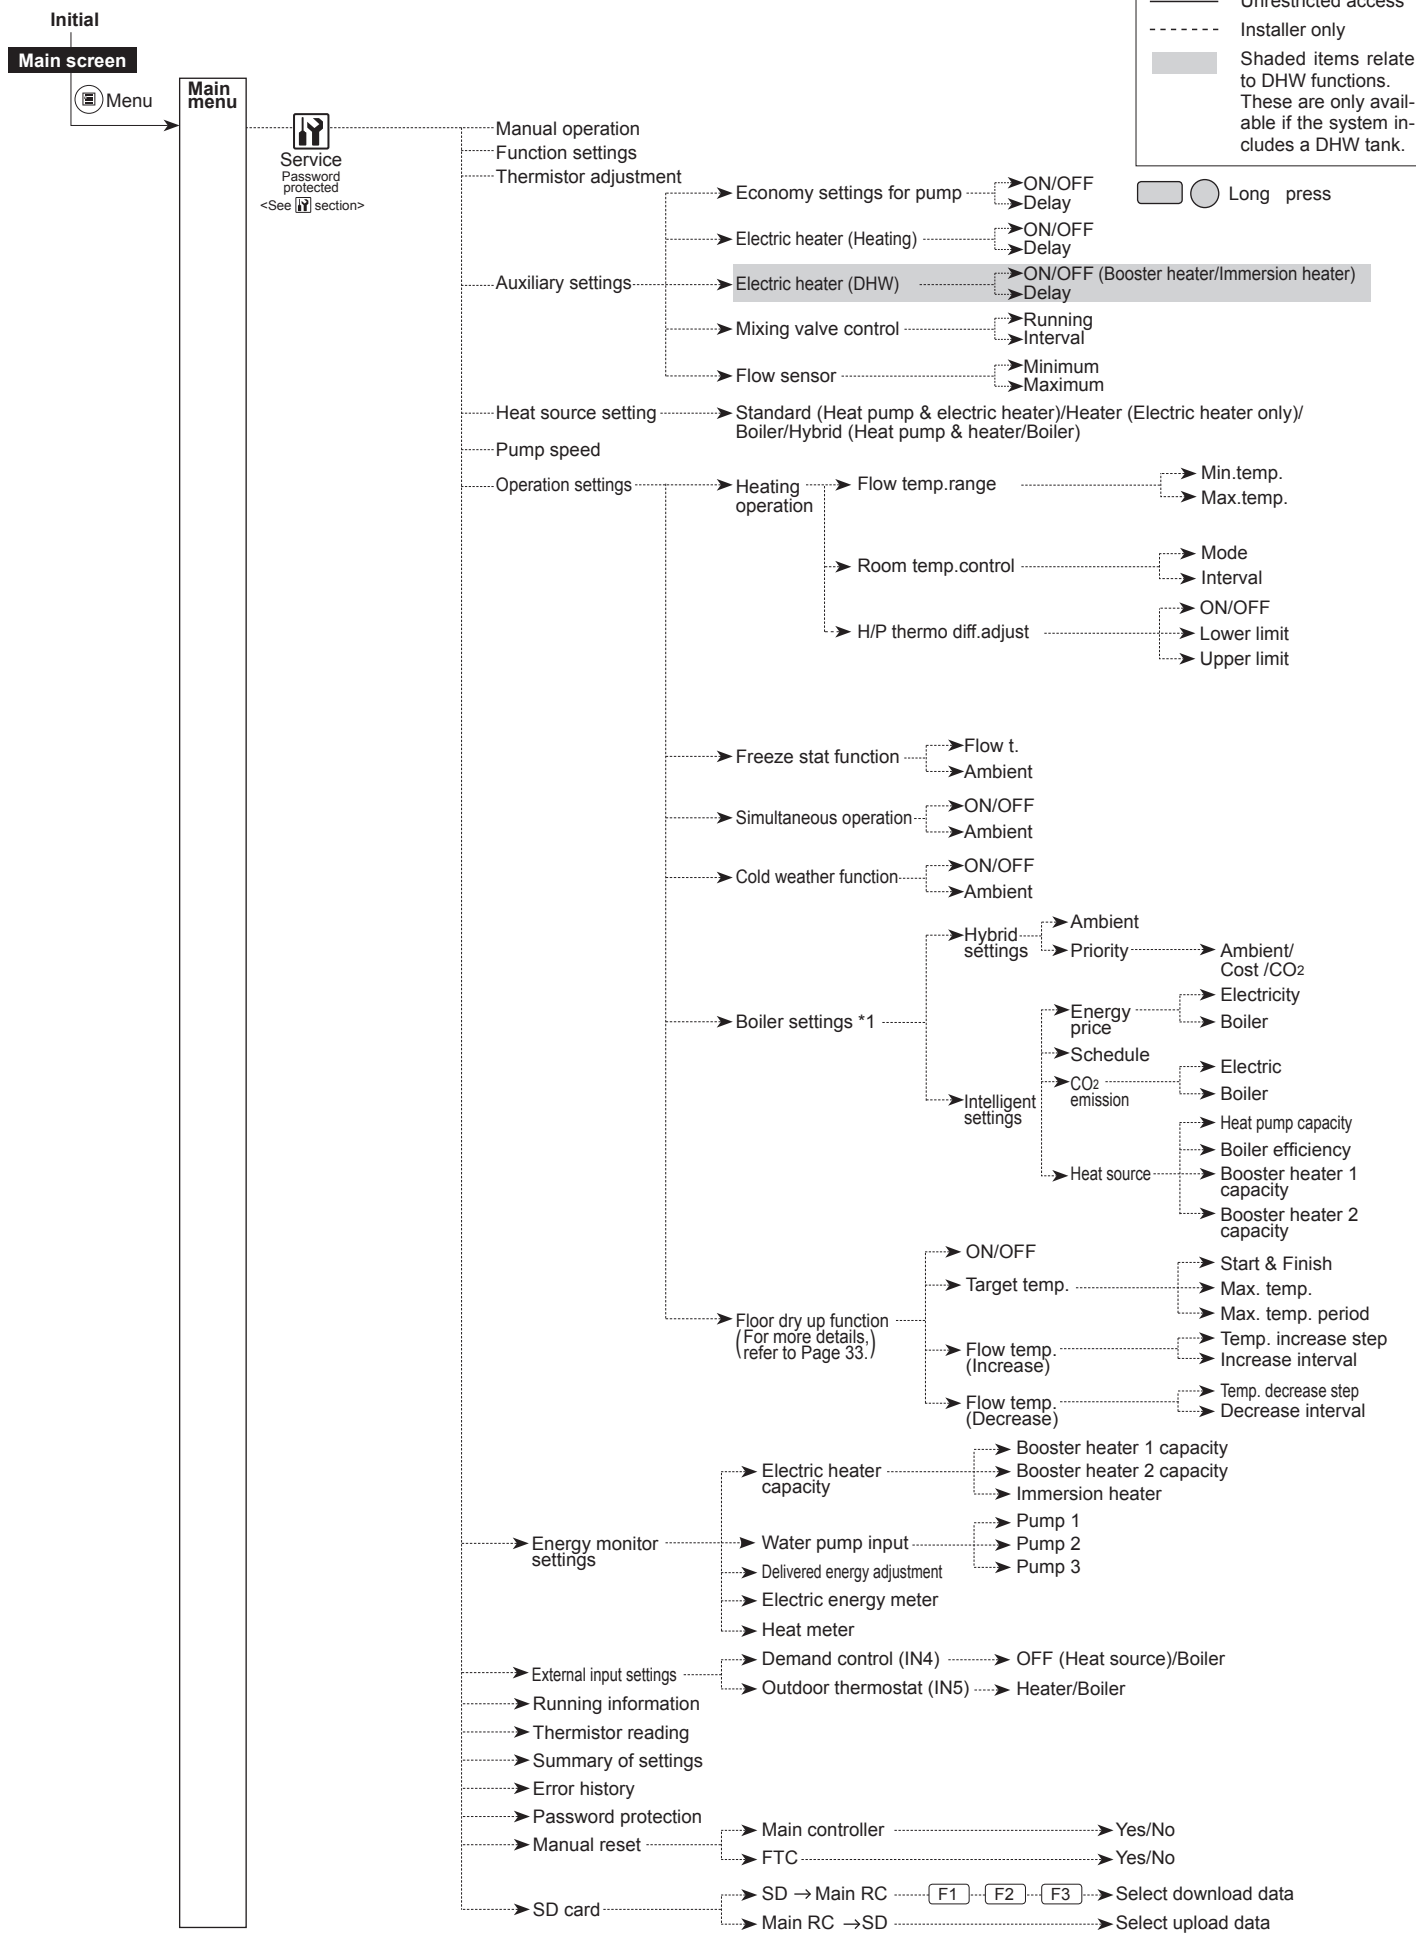

— Unrestricted access  
 - - - - - Installer only  
 ■ Shaded items relate to DHW functions. These are only available if the system includes a DHW tank.

□ Long press  
 ○ Long press

EN

\*1 For more details, refer to the installation manual of PAC-TH011HT-E.

## 5 System Set Up

### Domestic Hot Water (DHW)/Legionella Prevention

► For further detail about operation, refer to Operation manual.

Please note that LP mode uses the assistance of electric heaters (if present) to supplement the energy input of the heat pump. Heating water for long periods of time is not efficient and will increase running costs. The installer should give careful consideration to the necessity of legionella prevention treatment whilst not wasting energy by heating the stored water for excessive time periods. The end user should understand the importance of this feature.

**ALWAYS COMPLY WITH LOCAL AND NATIONAL GUIDANCE FOR YOUR COUNTRY REGARDING LEGIONELLA PREVENTION.**

### Heating/Cooling

► For further detail about operation, refer to Operation manual.

### Schedule timer

Scheduled timer can be set in two ways, for example; one for summer and the other for winter. (Refer to as "Schedule 1" and "Schedule 2" respectively.) Once the term (months) for the Schedule 1 is specified, rest of the term will be specified as Schedule 2. In each Schedule, an operational pattern of modes (Heating / DHW) can be set. If no operational pattern is set for Schedule2, only the pattern for Schedule 1 will be valid. If Schedule 2 is set to full-year (i.e. March to Feb.), only the operational pattern for Schedule 2 will be valid.


Follow the procedure described in General Operation(Page28) for the set up operation.

#### Setting the schedule timer

The preview screen allows you to view the current settings. In 2-zone heating operation, press F1 to switch between Zone1 and Zone2. Days of the week are displayed across the top of the screen. Where day appears underlined the settings are the same for all those days underlined.

Hours of the day and night are represented as a bar across the main part of the screen. Where the bar is solid black, space heating/cooling and DHW (whichever is selected) is allowed.

When scheduling heating, button F1 changes the scheduled variable between time and temperature. This enables a lower temperature to be set for a number of hours e.g. a lower temperature may be required at night when the occupants are sleeping.

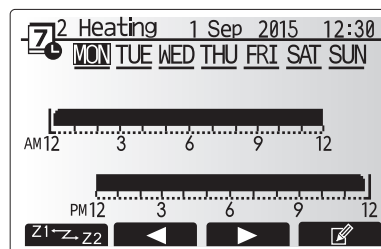

Preview screen

- The schedule timer for space heating/cooling and DHW are set in the same way. However for DHW only time can be used as scheduling variable.
- A small rubbish bin character is also displayed choosing this icon will delete the last unsaved action.
- It is necessary to use the SAVE function F4 button to save settings. CONFIRM does not act as SAVE for this menu.

### Holiday mode

► For further detail about operation, refer to Operation manual.

### Initial Settings


From the Initial settings menu the installer can set the following.

- Date/Time \*Be sure to set it to the local standard time.
- Language
- Summer time
- Temp. display
- Contact number
- Time display
- °C/°F
- Room sensor settings

Follow the procedure described in General Operation for the set up operation.

#### <Room sensor settings>

For room sensor settings it is important to choose the correct room sensor depending on the heating mode the system will operate in.

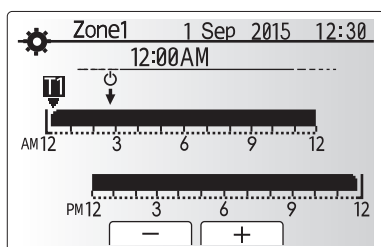

Time/Zone schedule setting screen

Menu subtitle	Description																					
Room RC zone select	When 2-zone temperature control is active and wireless remote controllers are available, from Room RC zone select screen, select zone no. to assign to each remote controller.																					
Sensor setting	From sensor setting screen, select a room sensor to be used for monitoring the room temperature from Zone1 and Zone2 separately. <table border="1" data-bbox="957 1556 1476 1848"> <thead> <tr> <th>Control option (pages 24 - 25)</th> <th colspan="2">Corresponding initial settings room sensor</th> </tr> <tr> <td></td> <th>Zone1</th> <th>Zone2</th> </tr> </thead> <tbody> <tr> <td>A</td> <td>Room RC 1-8 (one each for Zone1 and Zone2)</td> <td>*1</td> </tr> <tr> <td>B</td> <td>TH1</td> <td>*1</td> </tr> <tr> <td>C</td> <td>Main remote controller</td> <td>*1</td> </tr> <tr> <td>D</td> <td>*1</td> <td>*1</td> </tr> <tr> <td>When different room sensors are used according to the time schedule</td> <td>Time/ Zone*2</td> <td>*1</td> </tr> </tbody> </table>	Control option (pages 24 - 25)	Corresponding initial settings room sensor			Zone1	Zone2	A	Room RC 1-8 (one each for Zone1 and Zone2)	*1	B	TH1	*1	C	Main remote controller	*1	D	*1	*1	When different room sensors are used according to the time schedule	Time/ Zone*2	*1
Control option (pages 24 - 25)	Corresponding initial settings room sensor																					
	Zone1	Zone2																				
A	Room RC 1-8 (one each for Zone1 and Zone2)	*1																				
B	TH1	*1																				
C	Main remote controller	*1																				
D	*1	*1																				
When different room sensors are used according to the time schedule	Time/ Zone*2	*1																				
	*1. Not specified (if a locally-supplied room thermostat is used) Room RC 1-8 (one each for Zone1 and Zone2) (if a wireless remote controller is used as a room thermostat)																					
	*2. From sensor setting screen, select Time/Zone to make it possible to use different room sensors according to the time schedule set in the Select Time/ Zone menu. The room sensors can be switched up to 4 times within 24 hours.																					



## 5 System Set Up

### Service Menu

The service menu provides functions for use by installer or service engineer. It is NOT intended the home owner alters settings within this menu. It is for this reason password protection is required to prevent unauthorised access to the service settings.

The factory default password is "0000".

Follow the procedure described in General Operation for the set up operation.

The service menu is navigated using the F1 and F2 buttons to scroll through the functions. The menu is split across two screens and is comprised of the following functions;

1. Manual operation
2. Function settings
3. Thermistor adjustment
4. Auxiliary settings
5. Heat source setting
6. Pump speed
7. Operation settings
8. Energy monitor settings
9. External input settings
10. Running information
11. Thermistor reading
12. Summary of settings
13. Error history
14. Password protection
15. Manual reset
16. SD card

In this Installation Manual, instructions will be given only for the following functions;

1. Manual operation
2. Auxiliary settings
3. Heat source setting
4. Operation settings
5. Energy monitor settings
6. External input settings
7. Password protection
8. Manual reset
9. SD card

Information on the other functions can be found by consulting the service manual.

Many functions can not be set whilst the indoor unit is running. The installer should turn off the unit before trying to set these functions. If the installer attempts to change the settings whilst the unit is running the main remote controller will display a reminder message prompting the installer to stop operation before continuing. By selecting "Yes" the unit will cease operation.

#### <Manual operation>


During the filling of the system the water circulation pump and 3-way valve can be manually overridden using manual operation mode.

When manual operation is selected a small timer icon appears in the screen. The function selected will only remain in manual operation for a maximum of 2 hours. This is to prevent accidental permanent override of the FTC.

#### ► Example

Pressing F3 button will switch manual operation mode ON for the main 3-way valve. When filling of the DHW tank is complete the installer should access this menu again and press F3 to deactivate manual operation of the part. Alternatively after 2 hours manual operation mode will no longer be active and FTC will resume control of the part.

Manual operation and heat source setting can not be selected if the system is running. A screen will be displayed asking the installer to stop the system before these modes can be activated. The system automatically stops 2 hours after last operation.

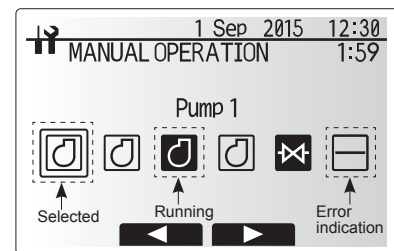

Manual operation menu screen

#### <Auxiliary settings>


This function is used to set the parameters for any auxiliary parts used in the system

Menu subtitle	Function/ Description
Economy settings for pump	Water pump stops automatically in certain period of time from when operation is finished.
Delay	Time before pump switched off*1
Electric heater (Heating)	To select "WITH booster heater (ON)" or "WITHOUT booster heater (OFF)" in Heating mode.
Delay	The minimum time required for the booster heater to turn ON from after Heating mode has started.
Electric heater (DHW)	To select "WITH (ON)" or "WITHOUT (OFF)" booster heater or immersion heater individually in DHW mode.
Delay	The minimum time required for the booster heater or immersion heater to turn ON from after DHW mode has started. (This setting is applied for both booster and immersion heater.)
Mixing valve control *2	Period from valve fully open (at a hot water mixing ratio of 100%) to valve fully closed (at a cold water mixing ratio of 100%)
Interval	Interval (min) to control the Mixing valve.
Flow sensor *3	The minimum flow rate to be detected at Flow sensor.
Minimum	
Maximum	The maximum flow rate to be detected at Flow sensor.

- \*1. Decreasing "time before pump switched off" may increase the duration of stand-by in Heating/Cooling mode.  
 \*2. Set the Running time according to the specifications of the actuators of each mixing valve. It is recommended to set the interval to 2 minutes that is a default value. With the interval set longer, it could take longer to warm up a room.  
 \*3. Do not change the setting since it is set according to the specification of Flow sensor attached to the hydrobox.

#### <Heat source setting>

The default heat source setting is heat pump and all electric heaters present in the system to be operational. This is referred to as Standard operation on the menu.

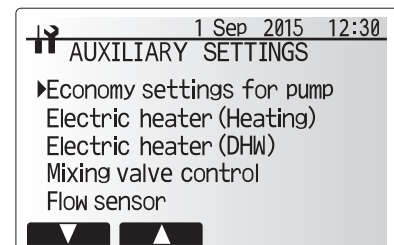

Auxiliary settings menu screen

## <Operation settings>

### Heating operation

This function allows operational setting of flow temperature range from the Ecodan and also the time interval at which the FTC collects and processes data for the auto adaptation mode.

Menu subtitle		Function	Range	Unit	Default
Flow temp. range	Minimum temp.	To minimize the loss by frequent ON and OFF in mild outdoor ambient temperature seasons.	25 - 45	°C	30
	Maximum temp.	To set max. possible flow temperature according to the type of heat emitters.	35 - 60	°C	50
Room temp. control	Mode	Setting for Room temp. control At Fast mode, target outlet water temperature is set higher than the one set at normal mode. This reduces the time to reach the target room temperature when the room temperature is relatively low.*	Normal/ Fast	—	Normal
	Interval	Selectable according to the heat emitter type and the materials of floor (i.e. radiators, floor heating-thick, -thin concrete, wood, etc.)	10 - 60	min	10
Heat pump thermo diff.adjust	On/Off	To minimize the loss by frequent ON and OFF in mild outdoor ambient temperature seasons.	On/Off	—	On
	Lower limit	Prohibits heat pump operation until the flow temperature drops below the target flow temperature plus lower limit value.	-9 - -1	°C	-5
	Upper limit	Allows heat pump operation until the flow temperature rises above the target flow temperature plus upper limit value.	+3 - +5	°C	+5

<Table 5.9.1> Heating operation (Room temp. control table)

#### Note:

1. The minimum flow temperature that prohibits heat pump operation is 20°C.
2. The maximum flow temperature that allows heat pump operation equals to the maximum temperature set in the Flow temp. range menu.

\* Fast mode is not efficient and will increase running cost when compared to normal mode.

### Freeze stat function

Menu subtitle	Function/ Description
Freeze stat function *1	An operational function to prevent the water circuit from freezing when outdoor ambient temperature drops.
Flow t.	The target outlet water temperature at water circuit when operating in Freeze stat function. *2
Outdoor ambient temp.	Minimum outdoor ambient temperature which freeze stat function will begin to operate, (3 - 20°C) or choose**. If asterisk (**) is chosen freeze stat function is deactivated. (i.e. primary water freeze risk)"

\*1. When the system is turned off, freeze stat function is not enabled.

\*2. Flow t. is fixed to 20°C and unchangeable.

### Simultaneous Operation

For periods of very low outside temperature this mode can be used. Simultaneous operation allows both DHW and space heating to run together by using the heat pump and/or booster heater to provide space heating whilst only the immersion heater provides heating for DHW. This operation is only available if BOTH a DHW tank AND immersion heater are present on the system.

- Range of outdoor ambient temperature at which simultaneous operation starts is -30°C to 10°C (default -15°C).
- System shall automatically return to routine operation. This will happen when the outdoor ambient temperature rises above the selected temperature for this specific mode of operation.

### Cold weather function

For extremely low outdoor ambient temperature conditions when the heat pump's capacity is restricted the heating or DHW is provided only by the electric booster heater (and immersion if present). This function is intended for use during extreme cold periods only. Extensive use of direct electrical heaters ONLY will result in higher power consumption and may reduce working life of heaters and related parts.


- Range of outdoor ambient temperature at which cold weather function starts is -30°C to -10°C (default -15°C).
- System shall automatically return to routine operation. This will happen when the outdoor ambient temperature rises above the selected temp for this specific mode of operation.

### Floor dry up function

The Floor dry up function automatically changes the target hot water temperature in stages to gradually dry concrete when this particular type of underfloor heating system is installed.

Upon completion of the operation the system stops all the operations except the Freeze stat. operation.

For Floor dry up function, the target flow temp. of Zone1 is the same as that of Zone2.

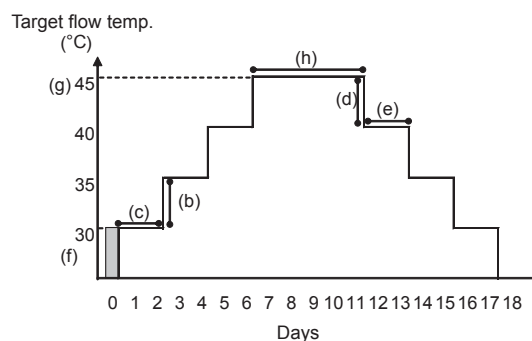

- This function is not available when a PUHZ-FRP outdoor unit is connected.
- Disconnect wiring to external inputs of room thermostat, demand control, and outdoor thermostat, or the target flow temperature may not be maintained.

Functions	Symbol	Description	Option/Range	Unit	Default	
Floor dry up function	a	Set the function to ON and power on the system using the main remote controller, and the dry up heating operation will start.	On/Off	—	Off	
Flow temp. (increase)	Flow temp. increase step	b	Sets the increase step of the target flow temperature.	+1 - +10	°C	+5
	Increase interval	c	Sets the period for which the same target flow temperature is maintained.	1 - 7	day	2
Flow temp. (decrease)	Flow temp. decrease step	d	Sets the decrease step of the target flow temperature.	-1 - -10	°C	-5
	Decrease interval	e	Sets the period for which the same target flow temperature is maintained.	1 - 7	day	2
Target temperature	Start & Finish	f	Sets the target flow temperature at the start and the finish of the operation.	25 - 60	°C	30
	Max. target temp.	g	Sets the maximum target flow temperature.	25 - 60	°C	45
	Max. temp. period	h	Sets the period for which the maximum target flow temperature is maintained.	1 - 20	day	5

## 5 System Set Up

### <Energy monitor settings>

In this menu, all parameters required to record the consumed electrical energy and the delivered heat energy which is displayed on the main remote controller can be set. The parameters are an electric heater capacity, supply power of water pump and heat meter pulse.

Follow the procedure described in General Operation for the set up operation.

For Pump 1, \*\*\* can be also set besides this setting.

In the case \*\*\* is selected, the system acknowledges "factory fitted pump" is selected.

Refer to the section [Energy Monitor] in "3. Technical Information"

### <External input settings>

#### Demand control(IN4)

The selection of "OFF", whilst a signal is being sent to IN4, forcefully stops all the heat source operations and the selection of "Boiler" stops operations of heat pump and electric heater and performs boiler operation.

#### Outdoor thermostat (IN5)

The selection of "Heater", whilst a signal is being sent to IN5, performs electric-heater-only operation and the selection of "Boiler" performs boiler operation.

### <Password protection>

Password protection is available to prevent unauthorised access to the service menu by untrained persons.

#### **Resetting the password**

If you forget the password you entered, or have to service a unit somebody else installed, you can reset the password to the factory default of **0000**.

1. From the main settings menu scroll down the functions until Service Menu is highlighted.
2. Press CONFIRM.
3. You will be prompted to enter a password.
4. Hold down buttons F3 and F4 together for 3 seconds.
5. You will be asked if you wish to continue and reset the password to default setting.
6. To reset press button F3.
7. The password is now reset to **0000**.

#### <Manual reset>

Should you wish to restore the factory settings at any time you should use the manual reset function. Please note this will reset ALL functions to the factory default settings.

#### <SD card>

The use of an SD memory card simplifies the main remote controller settings in the field.

\*Ecodan service tool (for use with PC tool) is necessary for the setting.



Password input screen



Password verify screen

## 6 Service and Maintenance

The indoor hydrobox must be serviced **once a year** by a qualified individual. Servicing and maintenance of the outdoor unit should only be done by a Mitsubishi Electric trained technician with relevant qualifications and experience. Any electrical work should be done by a tradesperson with the appropriate electrical quali-

fications. Any maintenance or 'DIY' fixes done by a non-accredited person could invalidate the Warranty and/or result in damage to the hydrobox and injury to the person.

### Basic Troubleshooting for Hydrobox

The following table is to be used as a guide to possible problems. It is not exhaustive and all problems should be investigated by the installer or another competent person. Users should not attempt to repair the system themselves.

At no time should the system be operating with the safety devices by-passed or plugged.

Fault symptom	Possible cause	Solution
Cold water at taps (systems with DHW tank)	Scheduled control off period	Check schedule settings and change if necessary.
	All hot water from DHW tank used	Ensure DHW mode is operating and wait for DHW tank to re-heat.
	Heat pump or electric heaters not working	Contact installer.
Heating system does not get up to set temperature.	Prohibit, schedule or holiday mode selected	Check settings and change as appropriate.
	Incorrectly sized radiators	Contact installer.
	The room in which the temperature sensor is located is at a different temperature to the rest of the house.	Reposition the temperature sensor to a more suitable room.
	Battery problem *wireless control only	Check the battery power and replace if flat.
The cooling system does not cool down to the set temperature. (ONLY for ERS* models)	When the water in the circulation circuit is unduly hot, Cooling mode starts with a delay for the protection of the outdoor unit.	Normal operation
	When the outdoor ambient temperature is significantly low, Cooling mode does not start running to avoid freezing of the water pipes.	If the freeze stat. function is not necessary, contact installer to change the settings.
Heating emitter is hot in the DHW mode. (The room temperature rises.)	The 3-way valve may have foreign objects in it, or hot water may flow to the heating side due to malfunctions.	Contact installer.
Schedule function inhibits the system from operating but the outdoor unit operates.	Freeze stat. function is active.	Normal operation no action necessary.
Pump runs without reason for short time.	Pump jam prevention mechanism to inhibit the build up of scale.	Normal operation no action necessary.
Mechanical noise heard coming from hydrobox	Heaters switching on/off	Normal operation no action required.
Noisy pipework	Air trapped in the system	Try bleeding radiators (if present) If the symptoms persist contact installer.
	Loose pipework	Contact installer.
Water discharges from one of the relief valves	The system has overheated or overpressurised	Switch off power to the heat pump and any immersion heaters then contact installer.
Small amounts of water drip from one of the relief valves.	Dirt may be preventing a tight seal in the valve	Twist the valve cap in the direction indicated until a click is heard. This will release a small amount of water flushing dirt from the valve. Be very careful the water released will be hot. Should the valve continue to drip contact installer as the rubber seal may be damaged and need replacing.
An error code appears in the main remote controller display.	The indoor or outdoor unit is reporting an abnormal condition	Make a note of the error code number and contact installer.
Heat pump is forced to turn ON and OFF.	Smart grid ready input (IN11 and IN12) is used, and switch-on and off commands are input.	Normal operation no action necessary.

#### <Power failure>

All setting will be saved for 1 week with no power, after 1 week Date/Time ONLY will be saved.

For more details, refer to the service manual.

#### <Draining the hydrobox>

##### WARNING: DRAINED WATER MAY BE VERY HOT

1. Before attempting to drain the hydrobox isolate from the electrical supply to prevent booster heater burning out.
2. Isolate hydrobox from primary water circuit and drain water from hydrobox. Use a suitable heat resistant hose to assist in these operations.
3. Drain any remaining water from booster heater using fitted drain cock and hose to safely drain the unit.
4. After the hydrobox is drained, water remains in the following component parts. Drain water completely by checking the inside of the parts.
  - Strainer (Remove the strainer cover.)
  - Pressure relief valve (Operate the valve.)

## 6 Service and Maintenance

### ■ Error Codes

Code	Error	Action
L3	Circulation water temperature overheat protection	Flow rate may be reduced check for; <ul style="list-style-type: none"> <li>• Water leakage</li> <li>• Strainer blockage</li> <li>• Water circulation pump function (Error code may display during filling of primary circuit, complete filling and reset error code.)</li> </ul>
L4	DHW tank water temperature overheat protection	Check the immersion heater and it's contactor.
L5	Indoor unit temperature thermistor (THW1, THW2, THW5, THW6, THW7, THW8, THW9) failure	Check resistance across the thermistor.
L6	Circulation water freeze protection	See Action for L3.
L8	Heating operation error	Re-attach any thermistors that have become dislodged.
L9	Low primary circuit flow rate detected by flow sensor or flow switch (flow switches 1, 2, 3)	See Action for L3. If the flow sensor or flow switch itself does not work, replace it. <b>Caution: The pump valves may be hot, please take care.</b>
LC	Boiler circulation water temperature overheat protection	Check if the setting temperature of the Boiler for heating exceeds the restriction. (See the manual of the thermistors "PAC-TH011HT-E") Flow rate of the heating circuit from the boiler may be reduced. Check for <ul style="list-style-type: none"> <li>• water leakage</li> <li>• strainer blockage</li> <li>• water circulation pump function</li> </ul>
LD	Boiler temperature thermistor (THWB1, THWB2) failure	Check resistance across the thermistor.
LE	Boiler operation error	See Action for L8. Check the status of the boiler.
LF	Flow sensor failure	Check flow sensor cable for damage or loose connections.
LH	Boiler circulation water freeze protection	Flow rate of the heating circuit from the boiler may be reduced. Check for <ul style="list-style-type: none"> <li>• water leakage</li> <li>• strainer blockage</li> <li>• water circulation pump function</li> </ul>
LJ	DHW operation error (type of external plate HEX)	<ul style="list-style-type: none"> <li>• Check for disconnection of DHW tank water temp. thermistor (THW5).</li> <li>• Flow rate of the sanitary circuit may be reduced.</li> <li>• Check for water circulation pump function.</li> </ul>
LL	Setting errors of DIP switches on FTC control board	For boiler operation, check that DIP SW1-1 is set to ON (With Boiler) and DIP SW2-6 is set to ON (With Mixing Tank). For 2-zone temperature control, check DIP SW2-7 is set to ON (2-zone) and DIP SW2-6 is set to ON (With Mixing Tank).
J0	Communication failure between FTC and wireless receiver	Check connection cable for damage or loose connections.
P1	Thermistor (Room temp.) (TH1) failure	Check resistance across the thermistor.
P2	Thermistor (Ref. liquid temp.) (TH2) failure	Check resistance across the thermistor.
P6	Anti-freeze protection of plate heat exchanger	See Action for L3. Check for correct amount of refrigerant.
J1 - J8	Communication failure between wireless receiver and wireless remote controller	Check wireless remote controller's battery is not flat. Check the pairing between wireless receiver to wireless remote controller. Test the wireless communication. (See the manual of wireless system)
E0 - E5	Communication failure between main remote controller and FTC	Check connection cable for damage or loose connections.
E6 - EF	Communication failure between FTC and outdoor unit	Check that the outdoor unit has not been turned off. Check connection cable for damage or loose connections. Refer to outdoor unit service manual.
E9	Outdoor unit receives no signal from indoor unit.	Check both units are switched on. Check connection cable for damage or loose connections. Refer to outdoor unit service manual.
U*, F*	Outdoor unit failure	Refer to outdoor unit service manual.
A*	M-NET communication error	Refer to outdoor unit service manual.

**Note: To cancel error codes please switch system off (Press button E, on main remote controller, for 3 seconds).**

## 6 Service and Maintenance

### ■ Annual Maintenance

It is essential that the hydrobox is serviced at least once a year by a qualified individual any spare parts required **MUST** be purchased from Mitsubishi Electric (safety matter). **NEVER** bypass safety devices or operate the unit without them being fully operational.

**Note:**

**Within the first couple of months of installation, remove and clean the hydrobox's strainer plus any that are fitted external to the hydrobox. This is especially important when installing on an existing system.**

In addition to annual servicing it is necessary to replace or inspect some parts after a certain period of system operation. Please see tables below for detailed instructions. Replacement and inspection of parts should always be done by a competent person with relevant training and qualifications.

#### Parts which require regular replacement

Parts	Replace every	Possible failures
Pressure relief valve (PRV) Air vent (Auto/Manual) Drain cock (Primary circuit) Manometer	6 years	Water leakage

#### Parts which require regular inspection

Parts	Check every	Possible failures
Immersion heater	2 years	Earth leakage causing circuit breaker to activate (Heater is always OFF)
Water circulation pump	20,000 hrs (3 years)	Water circulation pump failure

#### Parts which must NOT be reused when servicing

- \* O-ring
- \* Gasket

**Note:**

Always replace the gasket for pump with a new one at each regular maintenance (every 20,000 hours of use or every 3 years).

## 6 Service and Maintenance

### ■ Engineers Forms

Should settings be changed from default, please enter and record new setting in 'Field Setting' column. This will ease resetting in the future should the system use change or the circuit board need to be replaced.

#### Commissioning/Field settings record sheet

Main remote controller screen		Parameters	Default setting	Field setting	Notes		
<b>Main</b>	Zone1 heating room temp.	10°C - 30°C	20°C				
	Zone2 heating room temp. *14	10°C - 30°C	20°C				
	Zone1 heating flow temp.	25°C - 60°C	45°C				
	Zone2 heating flow temp. *1	25°C - 60°C	35°C				
	Zone1 cooling flow temp. *12	5°C - 25°C	15°C				
	Zone2 cooling flow temp. *12	5°C - 25°C	20°C				
	Zone1 heating compensation curve	-9°C - + 9°C	0°C				
	Zone2 heating compensation curve *1	-9°C - + 9°C	0°C				
	Holiday mode	Active/Non active/Set time	—				
	<b>Option</b>	Forced DHW operation	On/Off	—			
DHW		On/Off/Timer	On				
Heating/Cooling		On/Off/Timer	On				
Energy monitor		Consumed electrical energy/Delivered energy	—				
<b>Setting</b>	DHW *13	Operation mode	Normal/Eco *16	Normal			
		DHW max. temp.	40°C - 60°C *2	50°C			
		DHW temp. drop	5°C - 30°C	10°C			
		DHW max. operation time	30 - 120 min	60 min			
		DHW mode restriction	30 - 120 min	30 min			
		Legionella prevention *13	Active	Yes/No	Yes		
			Hot water temp.	60°C - 70°C *2	65°C		
	Frequency		1 - 30 days	15 days			
	Start time		00.00 - 23.00	03.00			
	Max. operation time		1 - 5 hours	3 hours			
	Duration of maximum temp.		1 - 120 min	30 min			
	Heating/ Cooling *12		Zone1 operation mode	Heating room temp./ Heating flow temp./ Heating compensation curve/ Cooling flow temp.	Room temp.		
		Zone2 operation mode *1	Heating room temp./ Heating flow temp./ Heating compensation curve/ Cooling flow temp.	Compensation curve			
	Compensation curve	Hi flow temp. set point	Zone1 outdoor ambient temp.	-30°C - +33°C *3	-15°C		
			Zone1 flow temp.	25°C - 60°C	50°C		
			Zone2 outdoor ambient temp. *1	-30°C - +33°C *3	-15°C		
			Zone2 flow temp. *1	25°C - 60°C	40°C		
		Lo flow temp. set point	Zone1 outdoor ambient temp.	-28°C - +35°C *4	35°C		
			Zone1 flow temp.	25°C - 60°C	25°C		
			Zone2 outdoor ambient temp. *1	-28°C - +35°C *4	35°C		
			Zone2 flow temp.	25°C - 60°C	25°C		
		Adjust	Zone1 outdoor ambient temp.	-29°C - +34°C *5	—		
			Zone1 flow temp.	25°C - 60°C	—		
			Zone2 outdoor ambient temp. *1	-29°C - +34°C *5	—		
			Zone2 flow temp. *1	25°C - 60°C	—		
			Holiday	DHW *13	Active/Non active	Non active	
				Heating/ Cooling *12	Active/Non active	Active	
	Zone1 heating room temp.	10°C - 30°C		15°C			
Zone2 heating room temp. *14	10°C - 30°C	15°C					
Zone1 heating flow temp.	25°C - 60°C	35°C					
Zone2 heating flow temp. *1	25°C - 60°C	25°C					
Zone1 cooling flow temp. *12	5°C - 25°C	25°C					
Initial settings	Language	EN/FR/DE/SV/ES/IT/DA/NL/FI/NO/PT/BG/PL/CZ/RU	EN				
	°C/°F	°C/°F	°C				
	Summer time	On/Off	Off				
	Temp. display	Room/DHW tank/Room&DHW tank /Off	Off				
	Time display	hh:mm/hh:mm AM/AM hh:mm	hh:mm				
	Room sensor settings for Zone1	TH1/Main RC/Room RC1-8/"Time/Zone"	TH1				
	Room sensor settings for Zone2 *1	TH1/Main RC/Room RC1-8/"Time/Zone"	TH1				
	Room RC zone select *1	Zone1/Zone2	Zone1				
Service menu	Thermistor adjustment	THW1	-10°C - +10°C	0°C			
		THW2	-10°C - +10°C	0°C			
		THW5	-10°C - +10°C	0°C			
		THW6	-10°C - +10°C	0°C			
		THW7	-10°C - +10°C	0°C			
		THW8	-10°C - +10°C	0°C			
		THW9	-10°C - +10°C	0°C			
		THWB1	-10°C - +10°C	0°C			
		THWB2	-10°C - +10°C	0°C			
		Auxiliary settings	Economy settings for pump.	On/Off *6	On		
	Delay (3 - 60 min)			10 min			
	Electric heater (Heating)		Space heating: On (used)/Off (not used)	On			
	Electric heater delay timer (5 - 180 min)			30 min			
	Electric heater (DHW) *13		Booster heater	DHW: On (used)/Off (not used)	On		
			Immersion heater	DHW: On (used)/Off (not used)	On		
	Electric heater delay timer (15 - 30 min)			15 min			
	Mixing valve control		Running (10 - 240 sec)		120 sec		
		Interval (1 - 30 min)		2 min			
Flow sensor	Minimum(0 - 100L/min)		5 L/min				
	Maximum(0 - 100L/min)		100 L/min				

\*1 The settings related to Zone2 can be switched only when 2 Zone temperature control is enabled (when DIP SW2-6 and SW 2-7 are ON).

\*2 For the model without both booster and immersion heater, it may not reach the set temperature depending on the outside ambient temperature.

\*3 The lower limit is -15°C depending on the connected outdoor unit.

\*4 The lower limit is -13°C depending on the connected outdoor unit.

\*5 The lower limit is -14°C depending on the connected outdoor unit.

## Engineers Forms

Commissioning/Field settings record sheet (continued from the previous page)

Main remote controller screen			Parameters	Default setting	Field setting	Notes		
Service menu	Pump speed		Pump speed(1 - 5)	5				
	Heat source setting		Standard/Heater/Boiler/Hybrid *7	Standard				
	Operation settings	Heating operation *8	Flow temp.range *10	Min.temp.(25 - 45°C)	30°C			
				Max.temp.(35 - 60°C)	50°C			
			Room temp.control *15	Mode(Normal/Fast)	Normal			
		Heat pump thermo diff.adjust	Interval(10 - 60min)	10min				
			On/Off *6	On				
			Lower limit(-9 - -1°C)	-5°C				
		Upper limit(+3 - +5°C)	5°C					
	Freeze stat function *11		Outdoor ambient temp. (3 - 20°C) / **	5°C				
	Simultaneous operation (DHW/Heating)		On/Off *6	Off				
			Outdoor ambient temp. (-30 - +10°C) *4	-15°C				
	Cold weather function		On/Off *6	Off				
			Outdoor ambient temp. (-30 - -10°C) *4	-15°C				
	Boiler operation		Hybrid settings	Outdoor ambient temp. (-30 - +10°C) *4	-15°C			
				Priority mode (Ambient/ Cost/CO2) *17	Ambient			
			Intelligent settings	Energy price *9	Electricity (0.001 - 999 */kWh)	0.5 */kWh		
					Boiler (0.001 - 999 */kWh)	0.5 */kWh		
			CO2 emission		Electricity (0.001 - 999 kg -CO2/kWh)	0.5 kg -CO2/kWh		
					Boiler (0.001 - 999 kg -CO2/kWh)	0.5 kg -CO2/kWh		
			Heat source		Heat pump capacity (1 - 40 kW)	11.2 kW		
					Boiler efficiency (25 - 150%)	80%		
					Booster heater 1 capacity (0 - 30 kW)	2 kW		
					Booster heater 2 capacity (0 - 30 kW)	4 kW		
	Floor dry up function		On/Off *6	Off				
			Target temp.	Start&Finish (25 - 60°C)	30°C			
				Max. temp. (25 - 60°C)	45°C			
				Max. temp. period (1 - 20 days)	5 days			
			Flow temp. (Increase)	Temp. increase step (+1 - +10°C)	+5°C			
				Increase interval (1 - 7 days)	2 days			
			Flow temp. (Decrease)	Temp. decrease step (-1 - -10°C)	-5°C			
				Decrease interval (1 - 7 days)	2 days			
	Energy monitor settings		Electric heater capacity	Booster heater 1 capacity	0 - 30kW	2kW		
Booster heater 2 capacity				0 - 30kW	4kW			
Immersion heater capacity			0 - 30kW	0kW				
		Delivered energy adjustment	-50 - +50%	0%				
Water pump input		Pump 1	0 - 200W or *** (factory fitted pump)	***				
		Pump 2	0 - 200W	0W				
		Pump 3	0 - 200W	0W				
		Electric energy meter	0.1/1/10/100/1000 pulse/kWh	1 pulse/kWh				
		Heat meter	0.1/1/10/100/1000 pulse/kWh	1 pulse/kWh				
External input settings		Demand control (IN4)	Heat source OFF/Boiler operation	Boiler operation				
		Outdoor thermostat (IN5)	Heater operation/Boiler operation	Boiler operation				

\*6 On: the function is active; Off: the function is inactive.

\*7 When DIP SW1-1 is set to OFF "WITHOUT Boiler" or SW2-6 is set to OFF "WITHOUT Mixing tank", neither Boiler nor Hybrid can be selected.

\*8 Valid only when operating in Room temp. control mode.

\*9 "\*" of "\*/kWh" represents currency unit (e.g. € or £ or the like)

\*10 Valid only when operating in Heating room temperature.

\*11 If asterisk (\*\*) is chosen freeze stat function is deactivated. (i.e. primary water freeze risk)

\*12 Cooling mode settings are available for ERS\* model only.

\*13 Only available if DHW tank present in system.

\*14 The settings related to Zone2 can be switched only when 2-zone temperature control or 2-zone valve ON/OFF control is active.

\*15 When DIP SW5-2 is set to OFF, the function is active.

\*16 When the hydrobox is connected with a PUMY-P outdoor unit, the mode is fixed to "Normal".

\*17 When the hydrobox is connected with a PUMY-P outdoor unit, the mode is fixed to "Ambient".



### ■ Refrigerant collecting (pumpdown) for split model systems only

Refer to "Refrigerant collection" in the outdoor unit installation manual or service manual.

### ■ Back-up operation of boiler

Heating operation is backed up by boiler.

For more details, refer to the installation manual of PAC-TH011HT-E.

#### <Installation & System set up>

1. Set DIP-SW 1-1 to ON "With boiler" and SW2-6 to ON "With Mixing tank".
2. Install the thermistors THWB1 (Flow temp.) and THWB2 (Return temp.) \*1 on the boiler circuit.
3. Connect the output wire (OUT10: Boiler operation) to the signal input (room thermostat input) on the boiler. \*2
4. Install one of the following room temp. thermostats. \*3

- Wireless remote controller (option)
- Room temp. thermostat (local supply)
- Main remote controller (remote position)

\*1 The boiler temperature thermistor is an optional part.

\*2 OUT10 has no voltage across it.

\*3 Boiler heating is controlled on/off by the room temp. thermostat.

#### <Main remote controller settings>

1. Go to Service menu > Heat source setting and choose "Boiler" or "Hybrid". \*4
2. Go to Service menu > Operation settings > Boiler settings to make detailed settings for "Hybrid" above .

\*4 The "Hybrid" automatically switches heat sources between Heat pump (and Electric heater) and boiler.

### ■ Multiple outdoor units control

To realize bigger systems by using multiple outdoor units, up to 6 units of the same model can be connected.

The hydrobox can be used as a slave unit for multiple outdoor unit control.

For more details, refer to the installation manual of PAC-IF061/062B-E.

PAC-IF051/052B-E can not be connected to the hydro box.

Check the model name of connecting master unit.

#### <DIP switch setting>

- Set DIP SW4-1 to ON "Active: multiple outdoor unit control".
- Keep DIP SW4-2 OFF (default setting) (master/slave setting: slave).
- Set DIP SW1-3 to ON when the hydrobox is connected to a DHW tank.

Note : PUHZ-FRP/PUMY-P outdoor unit is not available for multiple outdoor units control.

### ■ Product fiche of temperature control

(a) Supplier's name: MITSUBISHI ELECTRIC CORPORATION

(b) Supplier's model identifier: PAR-WT50R-E and PAR-WR51R-E

(c) The class of the temperature control: VI

(d) The contribution of the temperature control to seasonal space heating energy efficiency: 4%

Please be sure to put the contact address/telephone number on this manual before handing it to the customer.



**mitsubishi** **ELECTRIC CORPORATION**

HEAD OFFICE: TOKYO BUILDING, 2-7-3, MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN