

**Air Conditioning Control System  
Centralized Controller  
AE-200A/AE-50A/EW-50A  
AE-200E/AE-50E/EW-50E**



**Instruction Book  
–Web Browser for System Maintenance Engineer–**

## Contents

1. Introduction.....	4
1-1. Terms Used in This Manual .....	4
1-2. PC Requirements .....	4
1-3. Notes on using the integrated centralized control software TG-2000A...	4
2. Setting the Operating Environment .....	5
2-1. Setting the IP Address of the PC .....	5
2-2. Setting the Web Browser .....	7
2-3. Java settings.....	10
3. Logging in to the Web Browser for System Maintenance Engineer .....	12
4. Monitor/Operation.....	16
4-1. Condition List .....	16
4-2. Measurement List .....	25
4-3. Malfunction List.....	26
4-4. Filter Sign List .....	28
4-5. AHC List.....	29
5. Energy Management.....	31
5-1. Energy Use Status .....	31
5-2. Ranking.....	39
5-3. Target Value Setting.....	43
5-4. Peakcut Control Status .....	45
6. Schedule Settings .....	47
6-1. Weekly Schedule .....	49
6-2. Annual Schedule.....	54
6-3. Today's Schedule.....	57
7. Malfunction Log .....	59
7-1. Unit Error/Communication Error .....	59
8. System Settings .....	60
8-1. Date/Time Settings .....	60
8-2. User Registration .....	61
9. Maintenance.....	62
9-1. Send Mail Log.....	62
9-2. Gas Amount Check.....	63
9-3. Outdoor unit status .....	64
9-4. Free Contact List .....	65
9-5. CSV output .....	66
10. License registration for optional functions .....	77
11. Notes on connecting to Web browser .....	78
11-1. Clearing cache .....	78
11-2. Resetting Internet Explorer .....	80

# Contents

1. Introduction .....	4
1-1. Terms Used in This Manual .....	4
1-2. PC Requirements.....	4
1-3. Notes on using the integrated centralized control software TG-2000A.....	4
2. Setting the Operating Environment .....	5
2-1. Setting the IP Address of the PC .....	5
2-2. Setting the Web Browser .....	7
2-2-1. No Internet connection .....	7
2-2-2. Dial-up Internet connection .....	8
2-2-3. Connecting to the Internet via proxy server using an existing LAN.....	8
2-3. Java settings .....	10
2-3-1. How to register exception site list.....	10
2-3-2. How to enable Java content.....	11
3. Logging in to the Web Browser for System Maintenance Engineer .....	12
4. Monitor/Operation .....	16
4-1. Condition List .....	16
4-1-1. Checking the operation conditions of all groups .....	16
4-1-2. Checking the operation conditions of the groups in a given block .....	20
4-1-3. Checking the operation conditions of HWHP (CAHV, CRHV) unit groups .....	21
4-1-4. Operating the units in a given group .....	22
4-1-5. Operating the units in a given block .....	24
4-1-6. Operating the units in all groups .....	24
4-2. Measurement List .....	25
4-3. Malfunction List.....	26
4-4. Filter Sign List .....	28
4-5. AHC List.....	29
5. Energy Management.....	31
5-1. Energy Use Status .....	31
5-2. Ranking.....	39
5-3. Target Value Setting.....	43
5-4. Peakcut Control Status .....	45
6. Schedule Settings .....	47
6-1. Weekly Schedule .....	49
6-2. Annual Schedule .....	54
6-3. Today's Schedule.....	57
7. Malfunction Log .....	59
7-1. Unit Error/Communication Error.....	59

8. System Settings .....	60
8-1. Date/Time Settings .....	60
8-2. User Registration .....	61
9. Maintenance.....	62
9-1. Send Mail Log.....	62
9-2. Gas Amount Check.....	63
9-3. Outdoor unit status.....	64
9-4. Free Contact List.....	65
9-5. CSV output.....	66
9-5-1. Energy Management Data List.....	76
10. License registration for optional functions.....	77
11. Notes on connecting to Web browser .....	78
11-1. Clearing cache .....	78
11-1-1. How to clear Java cache .....	78
11-1-2. How to clear Internet Explorer cache .....	79
11-2. Resetting Internet Explorer .....	80

# 1. Introduction

This Instruction Book explains how to monitor and operate the units connected to the AE-200A/AE-50A/EW-50A and AE-200E/AE-50E/EW-50E using a Web browser.

For initial settings and function settings, refer to the Instruction Book (Web Browser for Initial Settings).

Note: On the AE-200A or AE-200E Web Browser for System Maintenance Engineer, the units under the control of AE-50A/EW-50A or AE-50E/EW-50E that are connected to the AE-200A or AE-200E cannot be monitored or operated. Log in to each Web browser respectively.

## 1-1. Terms Used in This Manual

- “Centralized Controller AE-200A/AE-200E” is referred to as “AE-200.”
- “Centralized Controller AE-50A/AE-50E” is referred to as “AE-50.”
- “Centralized Controller EW-50A/EW-50E” is referred to as “EW-50.”
- “Booster unit” and “Water HEX unit” are referred to as “Air To Water (PWFY) unit.”
- “Advanced HVAC CONTROLLER” is referred to as “AHC.”
- “Hot Water Heat Pump unit” is referred to as “HWHP (CAHV, CRHV) unit.”
- A PI controller that is built-in on AE-200/AE-50/EW-50 is referred to as “Built-in PI controller.”
- Screen images used in this manual are from Windows 7® and Internet Explorer 9.0.

Note: Windows is a registered trademark or trademark of Microsoft Corporation in the United States and other countries.

## 1-2. PC Requirements


Table1-1 PC Requirements

Item	Requirement
CPU	1 GHz or faster
Memory	512 MB or more
Screen resolution	1366 x 768 or higher recommended
Browser	Microsoft® Internet Explorer 8.0 Microsoft® Internet Explorer 9.0 Microsoft® Internet Explorer 10.0 Microsoft® Internet Explorer 11.0 * Java execution environment is required. (Verified to run on Oracle® Java Plug-in Ver. 1.8.0_25) * Install Oracle® Java Plug-in that is appropriate for your operating system. When using a 64-bit OS, install a 32-bit and a 64-bit Java Plug-in. * The version of the Oracle® Java Plug-in can be verified by clicking [Java] in the Control Panel.
On-board LAN port or LAN card	100 BASE-TX
Pointing device	e.g., mouse


Note: Microsoft is a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.

Oracle and Java are trademarks or registered trademarks of Oracle Inc. in the United States and/or other countries.

Note: Although no particular OS is required, the Web browser will not properly operate when it is started up from the Internet Explorer on the Windows 8.1 start screen. If the Web browser was started up on the start screen, close the Web browser and switch the screen to the desktop screen, and then start up the Web browser again. Refer to the help functions of Windows 8.1 for how to switch the screens.

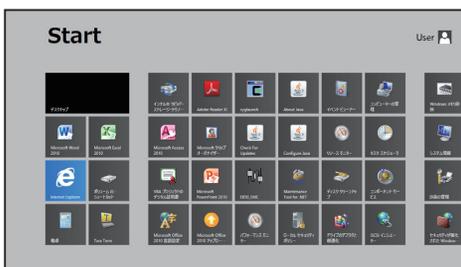

Start screen

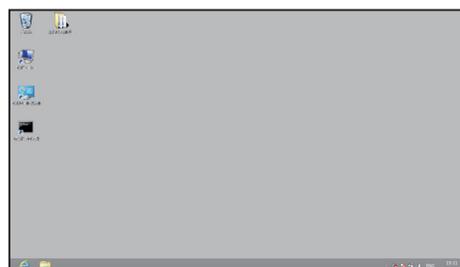

Desktop screen

## 1-3. Notes on using the integrated centralized control software TG-2000A

If the system is connected to a TG-2000A, make or change all settings from the TG-2000A so that the data in the TG-2000A and AE-200/AE-50/EW-50 will match.

Note: Use TG-2000A Ver. 6.60 or later.

## 2. Setting the Operating Environment

This chapter explains how to make PC settings and Web browser settings to monitor and operate the air conditioning units.

### 2-1. Setting the IP Address of the PC

Follow the instructions below to set the PC's IP address for the Web browser to recognize the AE-200/AE-50/EW-50 unit.


The PC's IP address must have the same network address as the AE-200/AE-50/EW-50's IP address.

(i.e., AE-200's IP address: [192.168.1.1], PC's IP address: [192.168.1.101])


When connecting an AE-200/AE-50/EW-50 to an existing LAN, consult the system administrator to decide the IP addresses.

Note: When using an AE-200/AE-50/EW-50-dedicated LAN, it is recommended that the AE-200 unit and the EW-50 unit (only when used alone) be assigned an IP address between the range [192.168.1.1] and [192.168.1.40], the AE-50/EW-50 unit be assigned an IP address between the range [192.168.1.211] and [192.168.1.249], and that the PC connected to the AE-200/AE-50/EW-50 be assigned an IP address between the range [192.168.1.101] and [192.168.1.150].


(1) Click [Control Panel] in the Start menu.

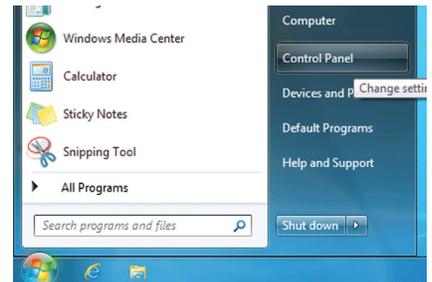

(2) Click [Network and Sharing Center]>[Local Area Setting].  
In the [Local Area Connection Status] window, click [Properties].

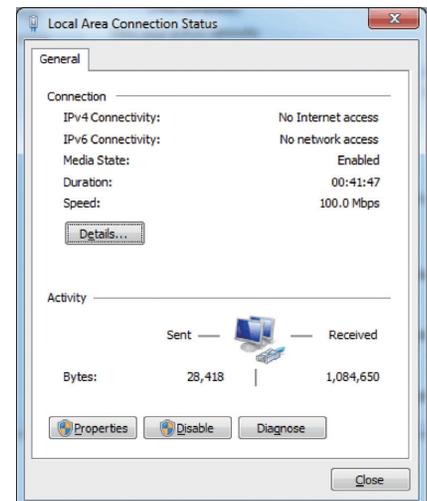


(3) Click [Internet Protocol Version 4 (TCP/IPv4)] to select it, and click [Properties].

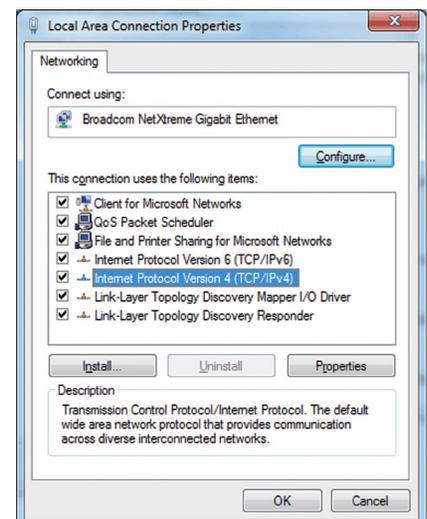

- (4) In the [Internet Protocol Version 4 (TCP/IPv4) Properties] window, check the radio button next to [Use the following IP address]. Enter the PC's IP address (e.g., [192.168.1.101]) in the [IP address] field, and enter the subnet mask [255.255.255.0] (unless otherwise specified) in the [Subnet mask] field. In the [Default gateway] field, enter the gateway address as necessary. Note: Consult the system administrator to decide the IP, subnet mask, and gateway addresses.

- (5) Keep clicking [OK] or [Close] to close all windows.

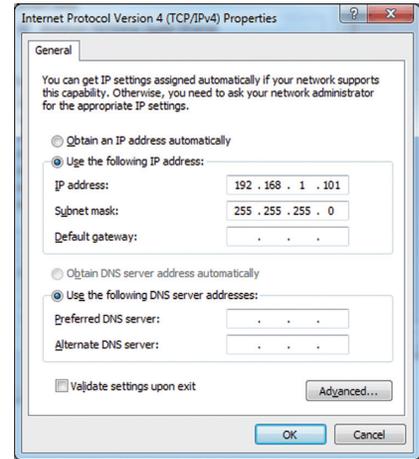

## 2-2. Setting the Web Browser


Web browser setting varies with the Internet connection type. See the sections below for how to make Web browser settings for different types of Internet connection.

**To prevent unauthorized access, always use a security device such as a VPN router when connecting the AE-200/AE-50/EW-50 to the Internet.**


### 2-2-1. No Internet connection

To monitor and operate the air conditioning units from a PC with no Internet connection, follow the instructions below to set the environment for the Web browser.

(1) Click [Tools] in the menu bar, then click [Internet options].

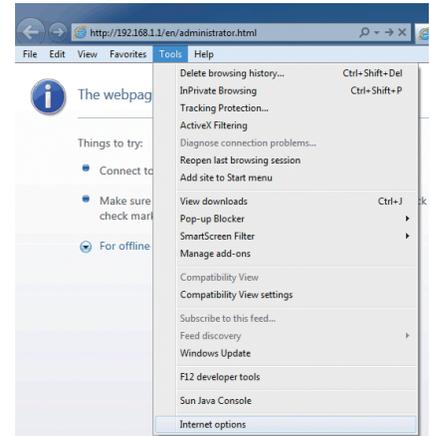

(2) In the [Internet Options] window, click the [Connections] tab.

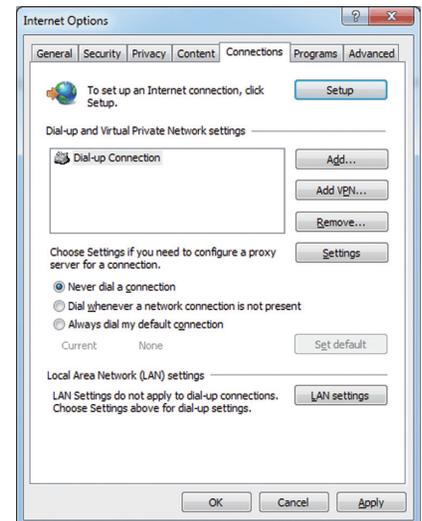


(3) Check the radio button next to [Never dial a connection] in the middle of the window, and click [OK] to close the window.

## 2-2-2. Dial-up Internet connection

To monitor and operate the air conditioning units from a PC that connects to the Internet through a dial-up connection, follow the instructions below to set the environment for the Web browser.


- (1) Click [Tools] in the menu bar, then click [Internet options].

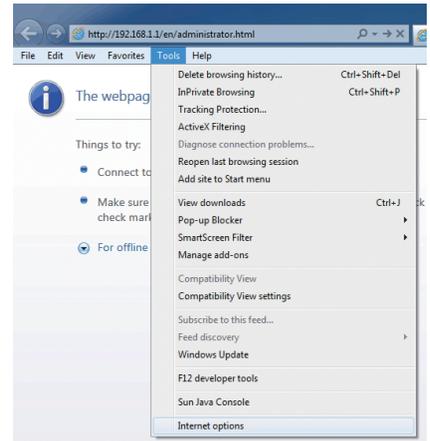

- (2) In the [Internet Options] window, click the [Connections] tab.

- (3) Check the radio button next to [Dial whenever a network connection is not present] in the middle of the window, and click [OK] to close the window.


By making these settings, a message will appear asking whether or not to use a dial-up connection when an Internet connection is necessary. Follow the message to connect to the Internet.

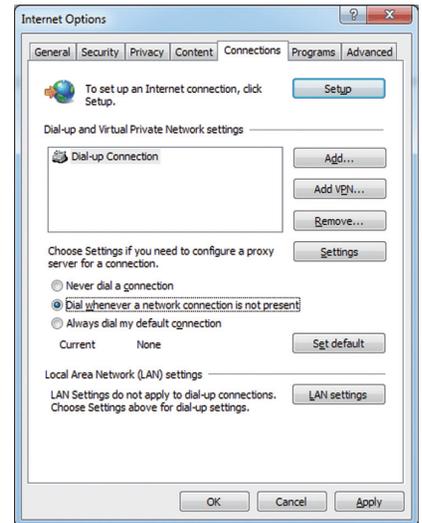


## 2-2-3. Connecting to the Internet via proxy server using an existing LAN

To monitor and operate the air conditioning units from a PC that connects to the Internet through a proxy server by connecting to an existing LAN, such as a LAN within your company, follow the instructions below to set the environment for the Web browser.


- (1) Click [Tools] in the menu bar, then click [Internet options].

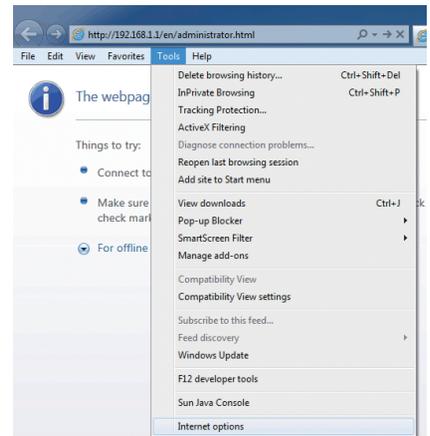

- (2) In the [Internet Options] window, click the [Connections] tab.
- (3) Check the radio button next to [Never dial a connection] in the middle of the window.
- (4) Click [LAN settings] under [Local Area Network (LAN) settings].

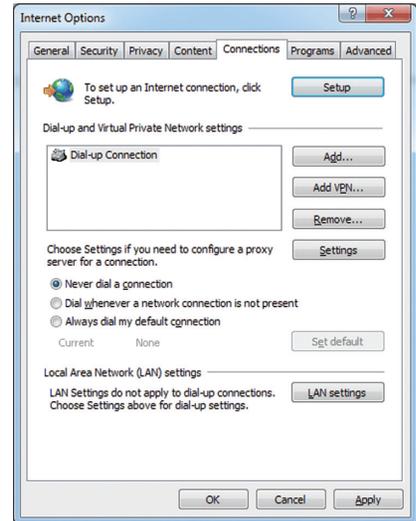


- (5) In the [Local Area Network (LAN) Settings] window, check [Bypass proxy server for local addresses], and click [Advanced].

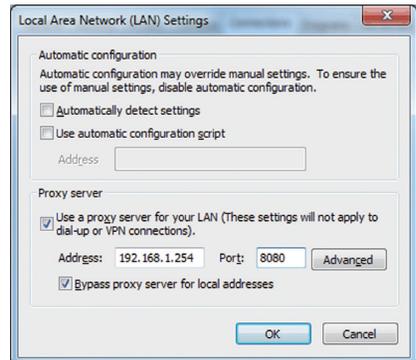

- (6) In the [Proxy Settings] window, enter the AE-200/AE-50/EW-50's IP address (e.g., 192.168.1.1) in the [Exceptions] field. Then, keep clicking [OK] or [Close] to close all windows.

If connecting multiple AE-200/AE-50/EW-50 units, enter their addresses (e.g., [192.168.1.1; 192.168.1.2]). It is also possible to use an asterisk as a wildcard (e.g., [192.168.1.\*]).

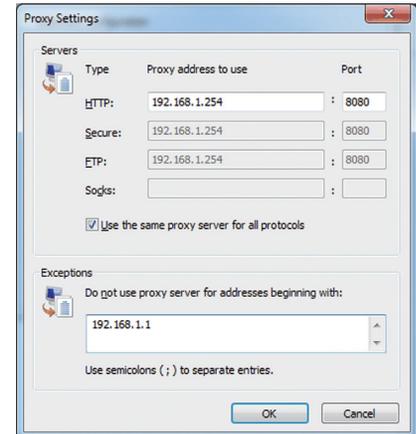


## 2-3. Java settings

### 2-3-1. How to register exception site list


- (1) Click [Control Panel]>[Java].

Note: If [Category] is selected in the top right corner, next to [View by:], change it to [Large icons] or [Small icons].

- (2) Java Control Panel will open.  
Click the [Security] tab.

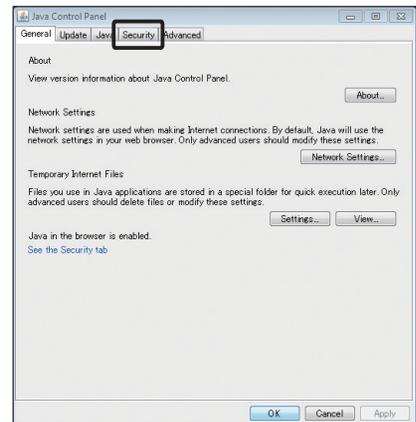

- (3) The security setting window will open.  
Click the [Edit Site List...] button.

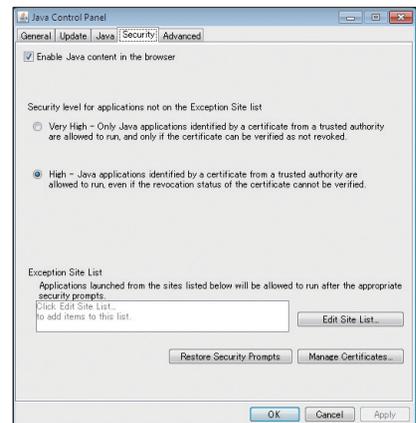

- (4) The [Exception Site List] dialog will appear.  
Click [Add].



- (5) The [Exception Site List] dialog will appear.  
In the white box, enter the following, and then click [OK].  
**http://[IP address of AE-200, AE-50, or EW-50]**

Note: If the IP address of the AE-200 is [192.168.1.1], enter [http://192.168.1.1].

Note: When using HTTPS (SSL) connection, prefix the web address with [https]. (https://[IP address of AE-200, AE-50, or EW-50])




- (6) The security warning screen will appear.  
Click [Continue].

Note: The security warning screen will not appear when HTTPS (SSL) connection is used.




- (7) Add all AE-200/AE-50/EW-50 to the list in the same manner, and click [OK].

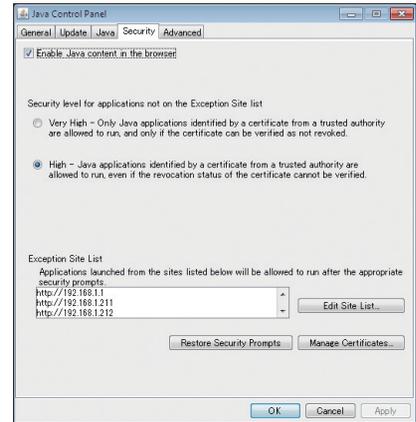

- (8) If a PC with 32-bit OS is used, after completing the settings, close all Internet Explorer windows, and access the Web page again to make sure the appropriate window will appear. If a PC with 64-bit OS is used, go to step (9) below.
- (9) Click [My Computer]>[Local Disk (C:)]>[Program Files (x86)]\*1>[Java]>[jre\*] (The asterisk indicates a version number. (i.e., jre1.80\_25))>[bin] to open the [bin] folder.
- \*1 If a PC with 64-bit OS is used, both [Program Files] and [Program Files (x86)] folders will appear. Make sure to select [Program Files (x86)].
- (10) Double click the “javacpl.exe” file in the [bin] folder.
- (11) Java Control Panel will open. Follow the steps (3) through (8) again.

### 2-3-2. How to enable Java content

- (1) Open the security setting window. (See section 2-3-1 “How to register exception site list”).
- (2) Click on the checkbox next to [Enable Java content in the browser] unless it is already checked. Click [Apply] at the right bottom corner of the screen, and then click [OK].

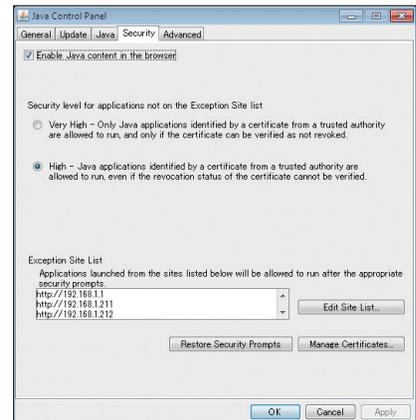

- (3) After completing the settings, close all Internet Explorer windows, and access the Web page again to make sure the appropriate window will appear.

### 3. Logging in to the Web Browser for System Maintenance Engineer

- (1) Enter the web page address in the address field of the Web browser as follows:  
**http://[IP address of each AE-200, AE-50, or EW-50]/administrator.html**  
Press the [Enter] key. A login screen will appear.

Note: If the IP address of the AE-200/AE-50/EW-50 is [192.168.1.1], the web page address is [http://192.168.1.1/administrator.html].

Note: Default IP address of AE-200, AE-50, and EW-50 is [192.168.1.1]. When one or more AE-50/EW-50 controllers are connected, none of their IP addresses should overlap. The recommended IP address ranges are as follows.

AE-200: Between [192.168.1.1] and [192.168.1.40]

AE-50/EW-50 (when used for system expansion):

Between [192.168.1.211] and [192.168.1.249]

EW-50 (when used alone):

Between [192.168.1.1] and [192.168.1.40]


Note: Log in to the AE-200, AE-50, or EW-50 Web browser respectively to monitor or operate the units that are under the control of AE-200, AE-50, or EW-50. The Web browser cannot be switched among the AE-200, AE-50, and EW-50.

Note: If the login screen does not appear then take the steps explained in chapter 11 to delete the temporary files.

Note: The web page will be displayed in the same language as the operating system on the PC. The web page can be displayed in other languages by entering the web page address as follows:

Chinese	http://[IP address of each AE-200, AE-50, or EW-50]/ <b>zh</b> /administrator.html
English	http://[IP address of each AE-200, AE-50, or EW-50]/ <b>en</b> /administrator.html
French	http://[IP address of each AE-200, AE-50, or EW-50]/ <b>fr</b> /administrator.html
German	http://[IP address of each AE-200, AE-50, or EW-50]/ <b>de</b> /administrator.html
Italian	http://[IP address of each AE-200, AE-50, or EW-50]/ <b>it</b> /administrator.html
Japanese	http://[IP address of each AE-200, AE-50, or EW-50]/ <b>ja</b> /administrator.html
Portuguese	http://[IP address of each AE-200, AE-50, or EW-50]/ <b>pt</b> /administrator.html
Russian	http://[IP address of each AE-200, AE-50, or EW-50]/ <b>ru</b> /administrator.html
Spanish	http://[IP address of each AE-200, AE-50, or EW-50]/ <b>es</b> /administrator.html

Note: You can add the web page address to your Favorites on the login screen for easy access in the future.

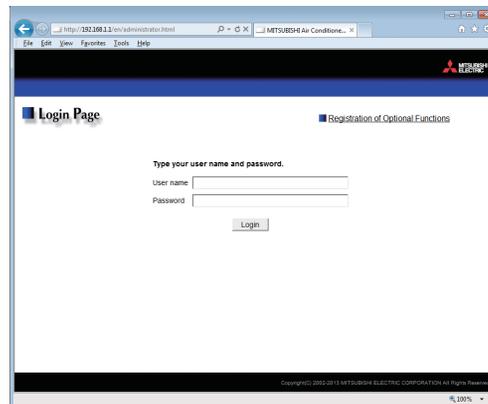

- (2) Enter the user name and the password in the login screen, and click [Login]. A screen for monitoring the operation conditions will appear.

The table below shows the web page addresses for building managers and general users, their respective default user names and passwords, and their accessible functions.

User	Web page address	Default user name	Default password	Available functions	
Building manager	http://[IP address of each AE-200/AE-50/EW-50]/administrator.html	administrator	admin	Monitor/ Operation	Condition List Measurement List Malfunction List Filter Sign List AHC List
				Energy Management	Energy Use Status Ranking Target Value Setting Peakcut Control Status
				Schedule Settings	Today's Schedule Weekly Schedule 1 Weekly Schedule 2 Weekly Schedule 3 Weekly Schedule 4 Weekly Schedule 5 Annual Schedule
				Malfunction Log	Unit Error Communication Error
				System Settings	Date/Time Settings User Registration
				Maintenance	Send Mail Log Gas Amount Check Outdoor unit status Free Contact List CSV output
General user	http://[IP address of each AE-200/AE-50/EW-50]/index.html	guest	guest	Monitor/ Operation	Condition List

Note: The license "Personal Web" is required to register up to 50 general users and to specify the accessible unit groups for each general user. Refer to section 8-2 "User Registration" for details.

Note: It is recommended to change the default user name and password so that the users other than the building managers and general users will not be able to change the settings.

Note: When one or more AE-50/EW-50 controllers are connected, log in to the AE-50 (or the EW-50) Web browser to monitor or operate the units that are under the control of AE-50 (or EW-50) controllers. The Web browser cannot be switched among the AE-200, AE-50, and EW-50.

## Encrypting the communication data and logging in to the Web browser (HTTPS connection)

AE-200/AE-50/EW-50 can encrypt communication data using HTTPS (SSL).

When connecting the AE-200/AE-50/EW-50 to the LAN that is accessible to the general public, it is recommended that the following settings be made so that the units are monitored and controlled on the encrypted web page.

Note: Depending on the operating system or the Java version, HTTPS encrypted communication may not be enabled properly. If this happens, use an HTTP connection as explained in the previous page.

- (1) Prefix the web address with [https], enter the rest of the address, and press the [Enter] key.

**https://[IP address of each AE-200, AE-50, or EW-50]/administrator.html**

Note: If the IP address of the AE-200/AE-50/EW-50 is [192.168.1.1], the web page address is [https://192.168.1.1/administrator.html].


The encrypted data communication will begin, and the Login screen will appear.

When the first time the Web browser is accessed, a security certificate error page appears instead of the Login screen. Go to step (2) below.


- (2) Enter the following web page address in the address field of the Web browser, and press the [Enter] key:

**http://[IP address of each AE-200, AE-50, or EW-50]/cacert.cer**

- (3) A notification bar or a window to confirm about file download will appear.  
Click [Open].

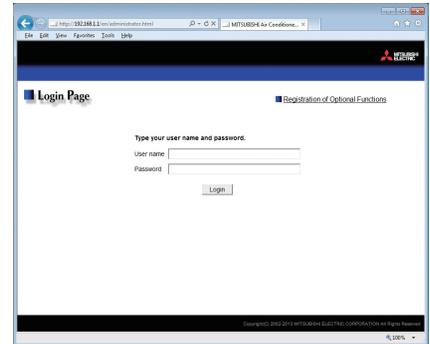


- (4) A certificate dialog will appear.  
Click [Install Certificate...].

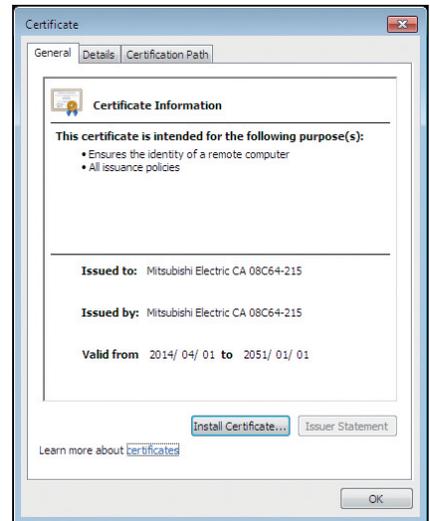


(5) A Certificate Import Wizard window will appear. Click [Next].




(6) Choose [Place all certificates in the following store] and click the [Browse...] button. Select [Trusted Root Certification Authorities], click [OK], and then click [Next].

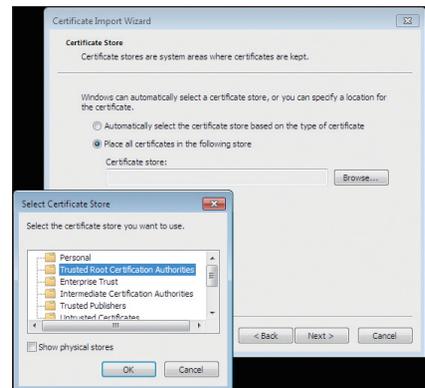

(7) Click [Finish] on completing the Certificate Import Wizard.

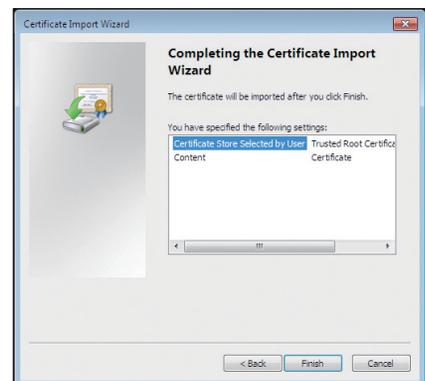


(8) Click [Yes] on the security warning to install the certificate.

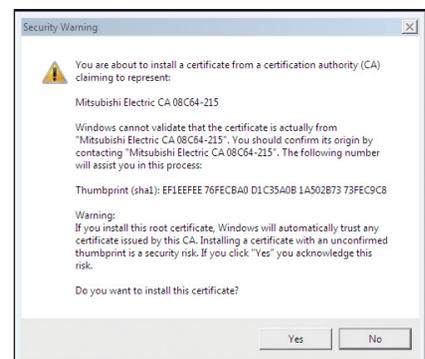

(9) Certificate import process starts. A window will appear when the import completes successfully. Click [OK].

Note: The valid period of the certificate is from April 1st, 2014 to January 1st, 2051. The system date and time of the PC must be within the period.

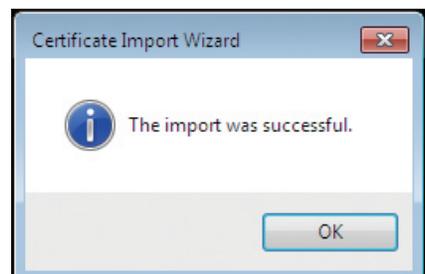

# 4. Monitor/Operation

This chapter explains how to monitor and operate the connected unit groups and to check the measurement data, malfunctioning units, units whose filter sign is triggered, and AHC status.

## 4-1. Condition List

This section explains how to monitor the operation conditions of all groups collectively (see section 4-1-1) or groups per block (see section 4-1-2), how to monitor the operation conditions of HWHP (CAHV, CRHV) unit groups (see section 4-1-3), and also explains how to operate each group (see section 4-1-4), groups per block (see section 4-1-5), or all groups collectively (see section 4-1-6).

After login, the Overview (Floor Layout) display of the Condition List screen will appear, which shows the operation conditions of all air conditioning unit groups, LOSSNAY unit (ventilator) groups, general equipment groups, and Air To Water (PWFY) unit groups.

To access the Condition List screen from the other screen, click [Monitor/Operation] in the menu bar, and then click [Condition List].

### 4-1-1. Checking the operation conditions of all groups

On the Overview (Floor Layout) display of the Condition List screen, the operation conditions of all groups can be monitored. The operator can also check the unit malfunctions on this screen and prevent the units from being left on unintentionally.

Note: Log in to the AE-200, AE-50, or EW-50 Web browser respectively to monitor or operate the units that are under the control of AE-200, AE-50, or EW-50.


The screenshot shows the 'Condition List' web interface. Callouts on the left side include:
 

- Update**: Click to show the most recent operation conditions.
- Floor selection**: Select a floor you want to monitor.
- Batch Operations**: Click to operate the units in all groups at once.

 Callouts on the right side include:
 

- Number of units whose filter sign is turned on**: Points to a filter icon with the number '5'.
- Number of units in error**: Points to a warning icon with the number '4'.
- Block/Overview (Floor Layout)/HWHP**: Points to the navigation tabs at the top right.
- Weekly schedule number**: Indicates the weekly schedule that is currently effective. Points to 'Weekly1 in period'.
- Group icons**: The icons indicate the operation conditions of groups. Click the icon to switch to the operation screen.

Item	Description
Block/Overview (Floor Layout)/HWHP	Click [Block] to display the operation conditions of groups per block, click [Overview (Floor Layout)] to display the operation conditions of all groups, and click [HWHP] to display the operation conditions of HWHP (CAHV, CRHV) unit groups.
Update	Click to show the most recent operation conditions. When [Auto] is selected, the operation conditions are updated automatically every minute.
Batch Operations	Click to operate the units in all groups at once. (See section 4-1-6.)

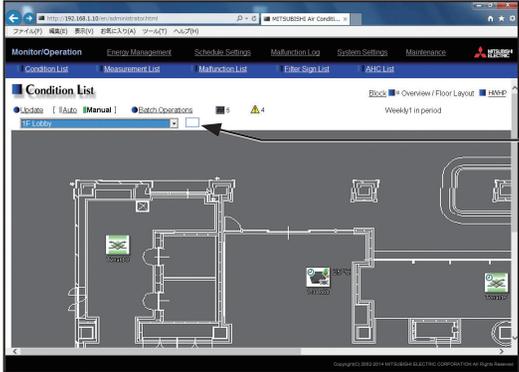Item	Description
Floor selection	<p>If Floor Layout settings have been made on the AE-200/AE-50's LCD, preset floors are available for selection. Select a floor you want to monitor.</p> <p>Note: Floor Layout settings can be made only on the AE-200/AE-50's LCD. Refer to the AE-200 Instruction Book for how to make Floor Layout settings and how to read floor layout plans. If the floor layout is changed on the AE-200/AE-50's LCD, restart the Web browser to update the floor layout.</p> <p>Note: On a high-resolution display, the whole floor can be displayed by increasing the browser display size.</p> <p>Note: After clicking a group icon, the operation settings screen of the group will appear. Scroll up to the left top of the screen to display the operation settings area.</p> 
Number of units whose filter sign is turned on *1	<p>The number of units under the control of AE-200/AE-50/EW-50 whose filter sign is currently turned on will appear. Clicking “” will bring up the Filter Sign List screen. (See section 4-4.)</p> <p>Note: This item will not appear if the [Filter Sign Display] is set to [OFF] on the Basic System settings screen, accessible via the Web Browser for Initial Settings.</p>
Number of units in error *1	<p>The number of units under the control of AE-200/AE-50/EW-50 that are currently in error will appear. Clicking “” will bring up the Malfunction List screen. (See section 4-3.)</p>


\*1 The item will not appear if the number of units is “0.”

Item	Description								
Group icons	<p>Each group icon indicates the operation condition of the group. Move the cursor to the icon to display its group name. Clicking the icon will bring up the operation screen. The icons to indicate the operation conditions are shown below.</p> <p>(1) Air conditioning unit group</p>								
	<table border="1"> <tr> <td data-bbox="423 323 683 362">ON</td> <td data-bbox="683 323 938 362">OFF</td> <td data-bbox="938 323 1192 362">Error</td> <td data-bbox="1192 323 1450 362">Filter sign ON *1</td> </tr> <tr> <td data-bbox="423 362 683 461"></td> <td data-bbox="683 362 938 461"></td> <td data-bbox="938 362 1192 461"></td> <td data-bbox="1192 362 1450 461"></td> </tr> </table>	ON	OFF	Error	Filter sign ON *1				
	ON	OFF	Error	Filter sign ON *1					
									
	<table border="1"> <tr> <td data-bbox="423 484 683 553">Interlocked LOSSNAY ON *2 *7</td> <td data-bbox="683 484 938 553">Interlocked LOSSNAY OFF *7</td> <td data-bbox="938 484 1192 553">Schedule set *3</td> <td data-bbox="1192 484 1450 553">Schedule disabled</td> </tr> <tr> <td data-bbox="423 553 683 656"></td> <td data-bbox="683 553 938 656"></td> <td data-bbox="938 553 1192 656"></td> <td data-bbox="1192 553 1450 656"></td> </tr> </table>	Interlocked LOSSNAY ON *2 *7	Interlocked LOSSNAY OFF *7	Schedule set *3	Schedule disabled				
	Interlocked LOSSNAY ON *2 *7	Interlocked LOSSNAY OFF *7	Schedule set *3	Schedule disabled					
									
	<table border="1"> <tr> <td data-bbox="423 679 683 748">Energy-saving ON *4*13</td> <td data-bbox="683 679 938 748">Setback ON *10</td> <td data-bbox="938 679 1192 748">Starting up *11</td> <td data-bbox="1192 679 1450 748">Occupied/Vacant *5*6*7</td> </tr> <tr> <td data-bbox="423 748 683 840"></td> <td data-bbox="683 748 938 840"></td> <td data-bbox="938 748 1192 840"></td> <td data-bbox="1192 748 1450 840"></td> </tr> </table>	Energy-saving ON *4*13	Setback ON *10	Starting up *11	Occupied/Vacant *5*6*7				
	Energy-saving ON *4*13	Setback ON *10	Starting up *11	Occupied/Vacant *5*6*7					
									
<table border="1"> <tr> <td data-bbox="423 863 683 932">Bright/Dark *8*9*10</td> <td data-bbox="683 863 938 932">HOLD ON *12</td> <td data-bbox="938 863 1192 932">Room temperature display *13*14</td> </tr> <tr> <td data-bbox="423 932 683 1035"></td> <td data-bbox="683 932 938 1035"></td> <td data-bbox="938 932 1192 1035"></td> </tr> </table>	Bright/Dark *8*9*10	HOLD ON *12	Room temperature display *13*14						
Bright/Dark *8*9*10	HOLD ON *12	Room temperature display *13*14							
									
<p>Note: Besides the 4-way airflow unit icons, 2-way airflow or ceiling-suspended unit icons are also available. Icons can be selected on the group settings screen, accessible via the Web Browser for Initial Settings.</p>									
<p>*1 Whether or not to display the filter sign can be set on the Basic System settings screen, accessible via the Web Browser for Initial Settings.</p>									
<p>*2 If the LOSSNAY unit is interlocked with the operation of Mr. Slim units, "Interlocked LOSSNAY ON" icon will appear, even when the LOSSNAY unit is operated individually. (Applicable M-NET adapter model: PAC-SF48/50/60/70/80/81MA-E)</p>									
<p>*3 If any schedule setting is applied to a DIDO controller whose prohibition setting is enabled ([Allow operations] is set to [No operations] on the group settings screen, accessible via the Web Browser for Initial Settings), the "Schedule set" icon will appear, but the scheduled operations will not be performed.</p>									
<p>*4 The "Energy-saving ON" icon will appear while the Peak Cut control is performed on the group or on the outdoor unit that is connected to the group.</p>									
<p>*5 The Occupancy/Vacancy status icon will appear only when [Show occupancy icon], [Show vacancy icon], or [Show both icons] is selected in the [Occupancy sensor display] section under the [Display Format] section of the Basic System settings screen, accessible via the Web Browser for Initial Settings.</p>									
<p>*6 The Occupancy/Vacancy status icon will not appear if the remote controller in the group does not have an occupancy sensor.</p>									
<p>*7 The Occupancy/Vacancy status icon takes priority over the "Interlocked LOSSNAY ON" or "Interlocked LOSSNAY OFF" icon.</p>									
<p>*8 The Brightness/Darkness status icon will appear only when [Show bright symbol], [Show dark symbol], or [Show both symbols] is selected in the [Brightness sensor display] section under the [Display Format] section of the Basic System settings screen, accessible via the Web Browser for Initial Settings.</p>									
<p>*9 The Brightness/Darkness status icon will not appear if the remote controller in the group does not have a brightness sensor.</p>									
<p>*10 The "Setback ON" icon takes priority over the Brightness/Darkness status icon.</p>									
<p>*11 The "Starting up" icon will stay when the unit cannot be recognized after startup. Check for proper connection of the air conditioning unit and proper group settings.</p>									
<p>*12 The Hold function can be used on the AE-200A/AE-50A/EW-50A, but not on the AE-200E/AE-50E/EW-50E.</p>									
<p>*13 The "Energy-saving ON" icon takes priority over the "Room temperature display" icon.</p>									
<p>*14 Whether or not to display the room temperature can be set in the [Room temp. display (except for group list)] section under the [Display Format] section of the Basic System settings screen, accessible via the Web Browser for Initial Settings.</p>									

Item	Description																
Group icons	<p>(2) LOSSNAY unit (ventilator) group</p> <table border="1" data-bbox="425 225 1450 365"> <tr> <td>ON</td> <td>OFF</td> <td>Error</td> <td>Filter sign ON *1</td> </tr> <tr> <td></td> <td></td> <td></td> <td></td> </tr> </table> <table border="1" data-bbox="425 390 1450 528"> <tr> <td>Schedule set</td> <td>Energy-saving ON *2</td> <td>Schedule disabled</td> <td>HOLD ON</td> </tr> <tr> <td></td> <td></td> <td></td> <td></td> </tr> </table> <p>*1 Whether or not to display the filter sign can be set on the Basic System settings screen, accessible via the Web Browser for Initial Settings.</p> <p>*2 The "Energy-saving ON" icon will appear while the Peak Cut control is performed on the LOSSNAY unit group.</p>	ON	OFF	Error	Filter sign ON *1					Schedule set	Energy-saving ON *2	Schedule disabled	HOLD ON				
	ON	OFF	Error	Filter sign ON *1													
																	
	Schedule set	Energy-saving ON *2	Schedule disabled	HOLD ON													
																	
<p>(3) Air To Water (PWFY) unit group and HWHP (CAHV, CRHV) unit group</p> <table border="1" data-bbox="425 707 1450 847"> <tr> <td>ON</td> <td>OFF</td> <td>Error</td> <td>Schedule set</td> </tr> <tr> <td></td> <td></td> <td></td> <td></td> </tr> </table> <table border="1" data-bbox="425 872 1450 1044"> <tr> <td>Schedule disabled</td> <td>Energy-saving ON *1</td> <td>Water temperature display *2</td> <td>HOLD ON</td> </tr> <tr> <td></td> <td></td> <td></td> <td></td> </tr> </table> <p>*1 The "Energy-saving ON" icon will appear while the Peak Cut control is performed on the Air To Water (PWFY) unit group. This icon will not appear for the HWHP (CAHV, CRHV) unit groups.</p> <p>*2 The "Water temperature display" icon will not appear for the HWHP (CAHV, CRHV) unit groups.</p>	ON	OFF	Error	Schedule set					Schedule disabled	Energy-saving ON *1	Water temperature display *2	HOLD ON					
ON	OFF	Error	Schedule set														
																	
Schedule disabled	Energy-saving ON *1	Water temperature display *2	HOLD ON														
																	
<p>(4) General equipment group</p> <table border="1" data-bbox="425 1193 1450 1333"> <tr> <td>ON</td> <td>OFF</td> <td>Error</td> <td>Schedule set</td> </tr> <tr> <td></td> <td></td> <td></td> <td></td> </tr> </table> <table border="1" data-bbox="425 1359 937 1499"> <tr> <td>Schedule disabled</td> <td>HOLD ON</td> </tr> <tr> <td></td> <td></td> </tr> </table> <p>Note: Besides the lighting icons, pump or card key icons are also available. The icon can be selected on the group settings screen, accessible via the Web Browser for Initial Settings.</p>	ON	OFF	Error	Schedule set					Schedule disabled	HOLD ON							
ON	OFF	Error	Schedule set														
																	
Schedule disabled	HOLD ON																
																	
Group name	<p>Only the first 8 characters will be visible under the icons. To display all characters, move the cursor to the icon.</p> <p>Note: Whether or not to display the group names can be set on the Basic System settings screen, accessible via the Web Browser for Initial Settings.</p> <div style="display: flex; justify-content: space-around;"> <div data-bbox="406 1710 820 1986">  <p>Icons with group names</p> </div> <div data-bbox="860 1710 1274 1986">  <p>Icons without group names</p> </div> </div>																

## 4-1-2. Checking the operation conditions of the groups in a given block

In the Block display of the Condition List screen, select a block to display the operation conditions (such as operation mode, set temperature, and room temperature) of the air conditioning unit groups, LOSSNAY unit (ventilator) groups, Air To Water (PWFY) unit groups, and general equipment groups in the block.

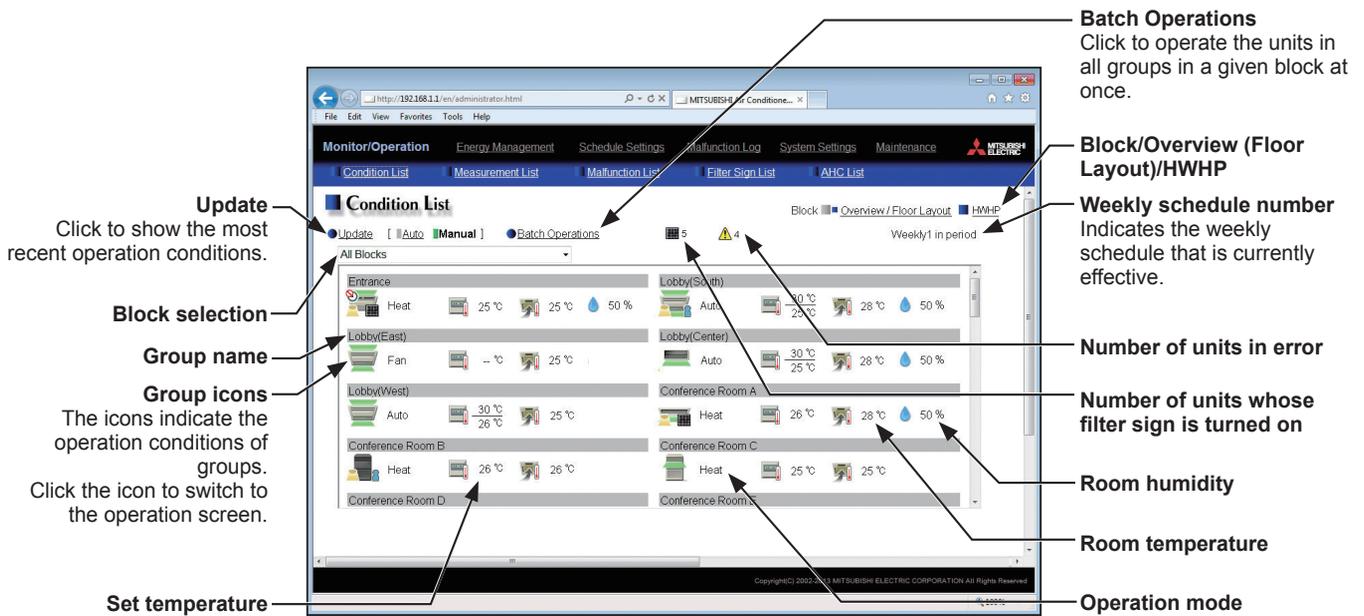

Item	Description
Block/Overview (Floor Layout)/HWHP	Click [Block] to display the operation conditions of groups per block, click [Overview (Floor Layout)] to display the operation conditions of all groups, and click [HWHP] to display the operation conditions of HWHP (CAHV, CRHV) unit groups.
Update	Click to show the most recent operation conditions. When [Auto] is selected, the operation conditions are updated automatically every minute.
Batch Operations	Click to operate the units in all groups in a given block at once. (See section 4-1-5.)
Block selection	Select a block you want to monitor.
Group icons	Each group icon indicates the operation condition of the group. Clicking the icon will bring up the operation screen.
Group name	The name of the group will appear.
Operation mode	The operation mode of the group will appear.
Set temperature	The set temperature of the group will appear. Note: For Air To Water (PWFY) unit groups, the set water temperature will appear. Note: The temperature unit (°C or °F) can be selected on the Basic System settings screen, accessible via the Web Browser for Initial Settings.
Room temperature	Indoor unit return air temperature will appear. Note: The temperature shown may be different from the actual room temperature. Note: The temperature shown may be higher than the actual temperature especially when the unit is stopped during the Heat mode. Note: Whether to show or hide the room temperature can be set on the Basic System settings screen, accessible via the Web Browser for Initial Settings. Note: For Air To Water (PWFY) unit groups, the current water temperature will appear. Note: The temperature unit (°C or °F) can be selected on the Basic System settings screen, accessible via the Web Browser for Initial Settings.
Room humidity	The reading of the humidity sensor on the ME remote controller (North America: PAR-U01MEDU, Europe: PAR-U02MEDA) will appear. Note: If an ME remote controller (North America: PAR-U01MEDU, Europe: PAR-U02MEDA) is connected to the group and the built-in humidity sensor is enabled, the reading of the sensor will appear. Note: Whether to show or hide the room humidity can be set on the Basic System settings screen, accessible via the Web Browser for Initial Settings.


Item	Description
Number of units whose filter sign is turned on *1	The number of units under the control of AE-200/AE-50/EW-50 whose filter sign is currently turned on will appear. Clicking “  ” will bring up the Filter Sign List screen. (See section 4-4.) Note: This item will not appear if the [Filter Sign Display] is set to [OFF] on the Basic System settings screen, accessible via the Web Browser for Initial Settings.
Number of units in error *1	The number of units under the control of AE-200/AE-50/EW-50 that are currently in error will appear. Clicking “  ” will bring up the Malfunction List screen. (See section 4-3.)

\*1 The item will not appear if the number of units is “0.”

### 4-1-3. Checking the operation conditions of HWHP (CAHV, CRHV) unit groups

On the Condition List screen, click the [HWHP] button to display the operation conditions of the HWHP (CAHV, CRHV) unit groups.

Note: The [HWHP] button will not appear if no HWHP (CAHV, CRHV) units have been registered to any group.

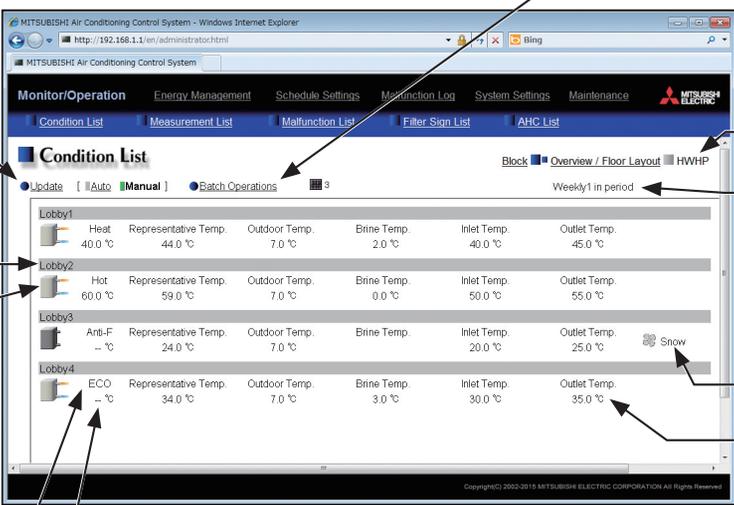

**Update**  
Click to show the most recent operation conditions.

**Batch Operations**  
Click to operate the units in all HWHP (CAHV, CRHV) unit groups at once.

**Block/Overview (Floor Layout)/HWHP**  
Block Overview / Floor Layout HWHP

**Weekly schedule number**  
Indicates the weekly schedule that is currently effective.

**Group name**  
The name of the group will appear.

**HWHP (CAHV, CRHV) unit group icons**  
The icons indicate the operation conditions of groups. Click the icon to switch to the operation screen.

**Operation mode**  
The operation mode of the group will appear.

**Set temperature**  
The set temperature of the group will appear.  
Note: The temperature unit (°C or °F) can be selected on the Basic System settings screen, accessible via the Web Browser for Initial Settings.

**Fan mode**  
The fan mode of the group will appear. (CAHV model only)

**Temperature**  
The representative water temperature, outdoor temperature, brine temperature, inlet water temperature, and outlet water temperature will appear.  
Note: When there is a communication error, the temperature value will be “--.”  
Note: The brine temperature will not appear for HWHP (CAHV) unit groups.  
Note: The temperature unit (°C or °F) can be selected on the Basic System settings screen, accessible via the Web Browser for Initial Settings.


Item	Description
Block/Overview (Floor Layout)/HWHP	Click [Block] to display the operation conditions of groups per block, click [Overview (Floor Layout)] to display the operation conditions of all groups, and click [HWHP] to display the operation conditions of HWHP (CAHV, CRHV) unit groups.
Update	Click to show the most recent operation conditions. When [Auto] is selected, the operation conditions are updated automatically every minute.
Batch Operations	Click to operate the units in all HWHP (CAHV, CRHV) unit groups at once.
HWHP (CAHV, CRHV) unit group icons	Each group icon indicates the operation condition of the group. Clicking the icon will bring up the operation screen.
Group name	The name of the group will appear.
Operation mode	The operation mode of the group will appear.
Set temperature	The set temperature of the group will appear. Note: The temperature unit (°C or °F) can be selected on the Basic System settings screen, accessible via the Web Browser for Initial Settings.
Temperature	The representative water temperature, outdoor temperature, brine temperature, inlet water temperature, and outlet water temperature will appear. Note: When there is a communication error, the temperature value will be “--.” Note: The brine temperature will not appear for HWHP (CAHV) unit groups. Note: The temperature unit (°C or °F) can be selected on the Basic System settings screen, accessible via the Web Browser for Initial Settings.
Fan mode	The fan mode of the group will appear. (CAHV model only)

#### 4-1-4. Operating the units in a given group


In the Overview (Floor Layout) display of the Condition List screen, click one of the group icons to display its operation settings screen, which shows the current operation conditions. Change the desired settings and click [OK] to reflect the changes. Click [Cancel] to return to the previous screen without making any changes.

Note: Only the ON/OFF operation and the “Schedule” setting are possible for general equipment groups. The general equipment whose prohibition setting is enabled ([Allow operations] is set to [No operations] on the group settings screen, accessible via the Web Browser for Initial Settings) cannot be operated.

Note: To operate an HWHP (CAHV, CRHV) unit group, click the icon of the group on the HWHP display of the Condition List screen.

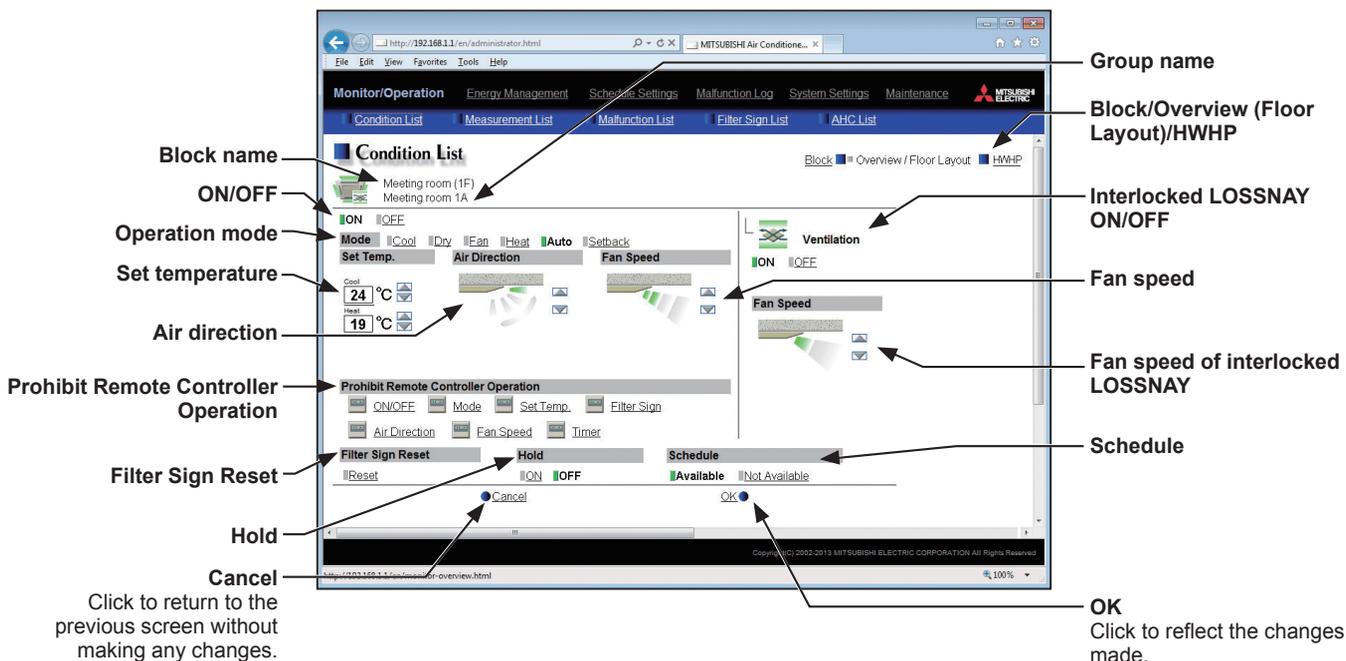


Item	Description
ON/OFF	Click [ON] or [OFF] to turn on or off the units in a given group. Note: Switching this switch will turn on or off the LOSSNAY unit as well that is interlocked with the operation of indoor units in the group. To turn on or off the LOSSNAY unit only, use the “Interlocked LOSSNAY ON/OFF” switch.
Operation mode *1	Click the desired operation mode. Air conditioning unit: Cool, Dry, Fan, Heat, Auto, Setback LOSSNAY unit: Heat Recovery, Bypass, Auto Air To Water (PWFY) unit: Heating, Heating ECO, Hot Water, Anti-freeze, Cooling HWHP (CAHV, CRHV) unit: Heating, Heating ECO, Hot Water, Anti-freeze Note: Only the operation modes available for the unit model will appear. Note: The Setback mode can be selected on the AE-200A/AE-50A/EW-50A, but not on the AE-200E/AE-50E/EW-50E.
Set temperature *1	Click  or  to adjust the set temperature of the air conditioning unit or the Air To Water (PWFY) unit. Note: The settable temperature ranges depend on the unit model. Note: If the indoor unit supports the dual set point function in the AUTO mode and when the operation mode above is set to Auto or Setback, two set temperatures for Cool mode and Heat mode can be set. Note: When the indoor units that support the dual set point function and the indoor units that do not support the dual set point function exist in the same group, only one set temperature can be set in the AUTO mode. Note: The temperature unit (°C or °F) can be selected on the Basic System settings screen, accessible via the Web Browser for Initial Settings.
Air Direction *1	Click  or  to adjust the air direction.  <div style="display: flex; justify-content: space-around; text-align: center;"> <div>(Mid 3) </div> <div>(Mid 2) </div> <div>(Mid 1) </div> <div>(Mid 0) </div> <div>(Horizontal) </div> <div>(Swing) </div> <div>(Auto) </div> </div> Note: Available air directions depend on the unit model.

Item	Description
Fan Speed *1	<p>Click  or  to adjust the fan speed.</p> <p>(Low) (Mid 2) (Mid 1) (High) (Auto)</p>  <p>Note: Available fan speeds depend on the unit model.</p>
Fan Mode *1	<p>This item will appear only on the operation settings screen for HWHP (CAHV) unit groups. The fan can be set to keep rotating even while the unit is stopped to avoid snow accumulation on the fan guard during the winter. Select [Normal] to stop the fan while the unit is stopped. Select [Snow] to operate the fan even while the unit is stopped.</p>
Prohibit Remote Controller Operation	<p>The following operations or setting change from the local remote controllers and the Web Browser for User can be prohibited: ON/OFF, Operation mode, Set temperature, Filter sign reset, Air Direction, Fan Speed, and Timer. Click the operation item [ON/OFF], [Mode], [Set Temp.], [Filter Sign], [Air Direction], [Fan Speed], or [Timer] to switch the setting between  (Prohibit) or  (Permit).</p> <p>Note: For LOSSNAY unit, PWFY unit, and HWHP unit groups, the item [Mode] or [Set Temp.] will not appear.</p> <p>Note: [Air Direction], [Fan Speed], and [Timer] may not be displayed, depending on the unit model.</p> <p>Note: When the [ON/OFF] operation is prohibited and the “Automatic recovery after power failure” switch on the indoor unit is set to “Turn off the power, or restore operation regardless of the operation status immediately before power failure,” the operation of the indoor unit will not be restored, even when turned on after power restoration. When the switch is set to “Turn off the power, or restore operation if the unit was in operation immediately before power failure,” the operation of the indoor unit will be restored regardless of whether the [ON/OFF] operation is prohibited or not. Refer to the indoor unit Installation Manual for details about switch settings.</p>
Filter Sign Reset	<p>Click [Reset] to switch between resetting and not resetting the filter sign. The rectangular icon next to Reset will appear in yellow-green when it is set to Reset (  ).</p> <p>Note: If a filter sign in the group has not been triggered, then the item [Filter Sign Reset] will not appear.</p> <p>Note: Filter sign of LOSSNAY units will not be reset.</p> <p>Note: After the filter sign is reset, it takes up to an hour to clear the filter sign display on the local remote controllers.</p>
Schedule	<p>Click [Available] or [Not Available] to enable/disable the scheduled operations. When the Schedule is enabled, the scheduled operations are disabled.</p> <p>Note: The operations that have been scheduled on the remote controller will not be disabled.</p>
Hold	<p>Click [ON] or [OFF] to enable/disable the Hold function. When the Hold function is enabled, the scheduled operations are disabled.</p> <p>Note: The operations that have been scheduled on the remote controller will also be disabled.</p> <p>Note: [Hold type] can be specified on the Basic System settings screen, accessible via the Web Browser for Initial Settings.</p> <p>Note: The Hold function can be used on the AE-200A/AE-50A/EW-50A, but not on the AE-200E/AE-50E/EW-50E.</p>
Interlocked LOSSNAY ON/OFF	<p>Click [ON] or [OFF] to turn on or off the interlocked LOSSNAY unit.</p> <p>Note: For a group that is not connected to an interlocked LOSSNAY unit (ventilator), the item [Interlocked LOSSNAY ON/OFF] will not appear.</p>
Fan speed of interlocked LOSSNAY	<p>Click  or  to adjust the fan speed of the interlocked LOSSNAY unit (ventilator).</p> <p>Note: For a group that is not connected to an interlocked LOSSNAY unit, the item [Fan speed of interlocked LOSSNAY] will not appear.</p>

\*1 The item may not be displayed, depending on the unit model.


#### 4-1-5. Operating the units in a given block

- (1) In the Block display of the Condition List screen, select a block to operate, and click [Batch Operations].  
If air conditioner group, LOSSNAY unit (ventilator) group, Air To Water (PWFY) unit group, and general equipment group exist together in the same block, a screen to select a group type will appear. Click one of the group types to change its settings.

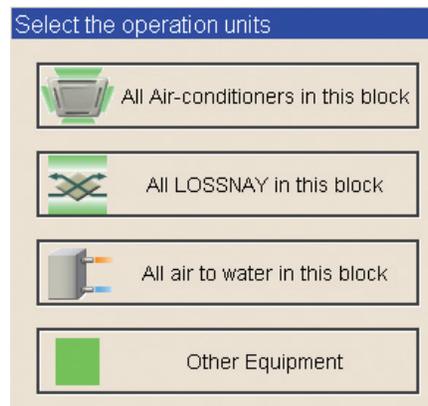

- (2) On the operation settings screen, change the desired settings and click [OK] to reflect the changes.  
Click [Cancel] to return to the previous screen without making any changes.


Note: When the filter sign is reset on this screen, the cumulative operation time of all units will be reset, irrespective of whether or not the filter sign was triggered. Reset the filter sign on this screen when the filters of all units were cleaned at once.

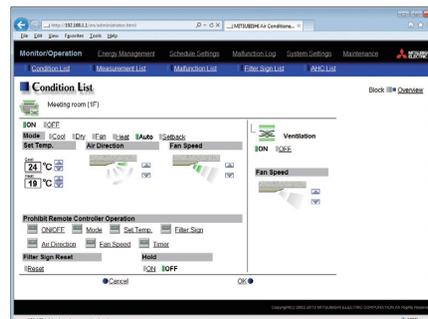

#### 4-1-6. Operating the units in all groups


- (1) In the Overview (Floor Layout) display of the Condition List screen, click [Batch Operations]. If air conditioner group, LOSSNAY unit (ventilator) group, Air To Water (PWFY) unit group, and general equipment group exist together in the same system, a screen to select a group type will appear. Click one of the group types to change its settings.

Note: To operate all HWHP (CAHV, CRHV) unit groups, click [Batch Operations] in the HWHP display of the Condition List screen.

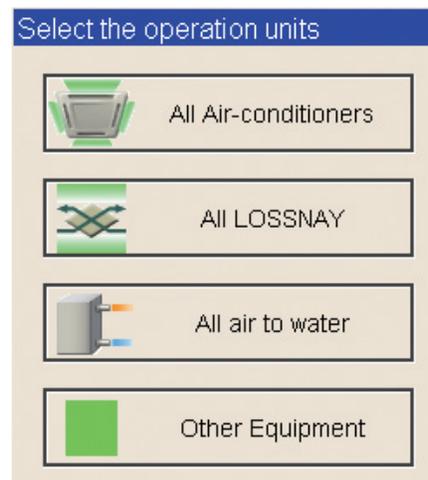

- (2) On the operation settings screen, change the desired settings and click [OK] to reflect the changes.  
Click [Cancel] to return to the previous screen without making any changes.

Note: When the filter sign is reset on this screen, the cumulative operation time of all units will be reset, irrespective of whether or not the filter sign was triggered. Reset the filter sign on this screen when the filters of all units were cleaned at once.

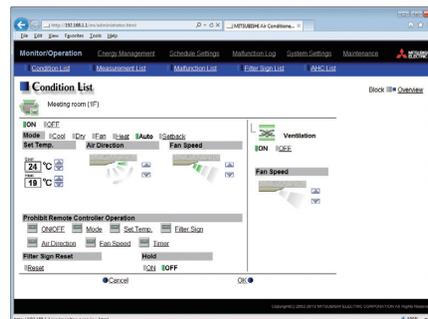

## 4-2. Measurement List


This section explains how to check the measurement data of the temperature sensors, humidity sensors, and metering devices.

Click [Monitor/Operation] in the menu bar, and then click [Measurement List] to access the Measurement List screen.

Note: An AI controller (PAC-YG63MCA), a commercially available temperature sensor, and a humidity sensor are required to measure the temperature and humidity.

Note: A commercially available pulse-output metering device is required to measure the electric, water, heat, and gas consumptions using a built-in PI controller or PI controller (PAC-YG60MCA).

Note: A PI controller (PAC-YG60MCA) is not required when the built-in PI controller is used.

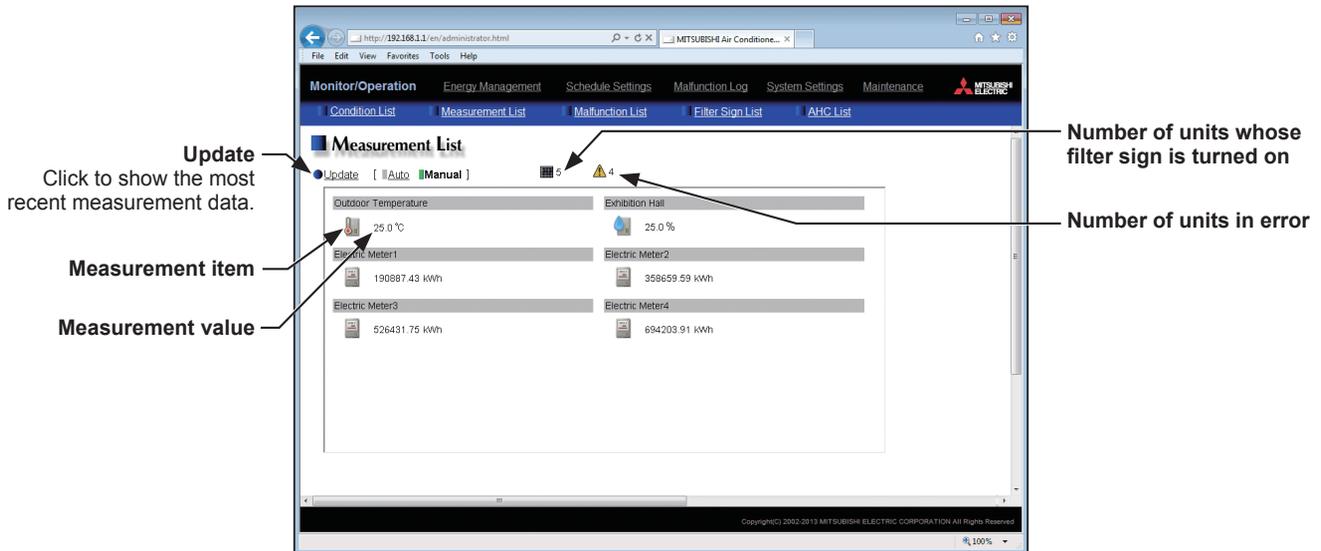



Item	Description																
Update	Click to show the most recent measurement data. When [Auto] is selected, the measurement data is updated automatically every minute.																
Measurement value	<p>The current measurement values will appear.</p> <p>Note: The following icons are used to indicate the measuring devices. Icons will appear in orange when the measurement value reaches the upper or lower alarm threshold value that has been set on the Measurement screen, accessible via the Web Browser for Initial Settings.</p> <table border="1"> <thead> <tr> <th></th> <th>Normal</th> <th>Upper/lower alarm threshold value is reached.</th> <th>Communication error/sensor error</th> </tr> </thead> <tbody> <tr> <td>Temperature sensor</td> <td></td> <td></td> <td> *1</td> </tr> <tr> <td>Humidity sensor</td> <td></td> <td></td> <td> *1</td> </tr> <tr> <td>Metering device</td> <td></td> <td></td> <td> *2</td> </tr> </tbody> </table> <p>*1 When there is a communication error, the measurement value of the temperature or humidity sensor will be "--."</p> <p>*2 When there is a communication error, the measurement value of the metering device will be the measured value immediately before the error detection.</p>		Normal	Upper/lower alarm threshold value is reached.	Communication error/sensor error	Temperature sensor			*1	Humidity sensor			*1	Metering device			*2
	Normal	Upper/lower alarm threshold value is reached.	Communication error/sensor error														
Temperature sensor			*1														
Humidity sensor			*1														
Metering device			*2														
Number of units whose filter sign is turned on *1	<p>The number of units under the control of AE-200/AE-50/EW-50 whose filter sign is currently turned on will appear. Clicking "5" will bring up the Filter Sign List screen. (See section 4-4.)</p> <p>Note: This item will not appear if the [Filter Sign Display] is set to [OFF] on the Basic System settings screen, accessible via the Web Browser for Initial Settings.</p>																
Number of units in error *1	<p>The number of units under the control of AE-200/AE-50/EW-50 that are currently in error will appear.</p> <p>Clicking "4" will bring up the Malfunction List screen. (See section 4-3.)</p>																

\*1 The item will not appear if the number of units is "0."

### 4-3. Malfunction List

Click [Monitor/Operation] in the menu bar, and then click [Malfunction List] to access the Malfunction List screen. A list of units that are currently malfunctioning will appear.

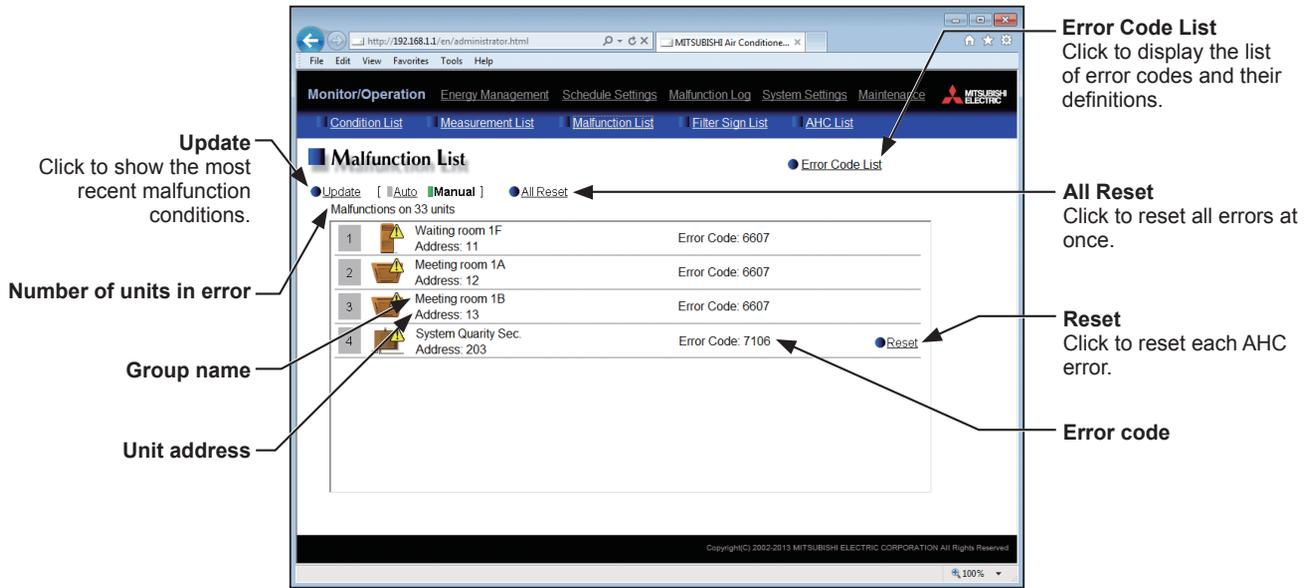

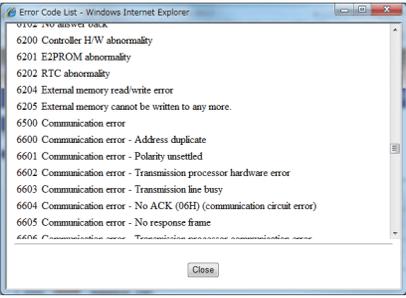
Item	Description
Update	Click to show the most recent malfunction conditions. When [Auto] is selected, the malfunction conditions are updated automatically every minute.
All Reset	Click to reset all errors at once. Note: The units in error will stop when the errors are reset.
Error Code List	Click to display the list of error codes and their definitions. 
Number of units in error	The number of malfunctioning units will appear.
Group name	The name of the group that the unit in error belongs to will appear. Note: The group name will be blank if the unit in error is an unit that does not belong to any group, such as an outdoor unit or a system controller.
Unit address	The address of the unit in error will appear.
Error code	The error code that corresponds to the error will appear.
Reset	Click to reset each AHC error.

## Types of units in error and the units that will stop when errors are reset

Types of units in error and the units that will stop

Units in error	Units that will stop
AE-200 (AE-50, EW-50)	None
Outdoor unit	All indoor units that are connected to the outdoor unit in error
Indoor unit	Indoor unit in error and all other indoor units in the same group
ME remote controller	All indoor units that are connected to the remote controller in error
System controller	All indoor units that are connected to the system controller in error
Advanced HVAC CONTROLLER	None
Interlocked LOSSNAY unit	Indoor units with which the LOSSNAY unit in error is interlocked
Air To Water (PWFY) unit	Air To Water (PWFY) unit in error and all other Air To Water (PWFY) units in the same group
DIDO controller (PAC-YG66DCA)	None
HWHP (CAHV, CRHV) unit	None
AI/PI controller (PAC-YG60MCA/63MCA)	None

Example of units in error and the units that will stop

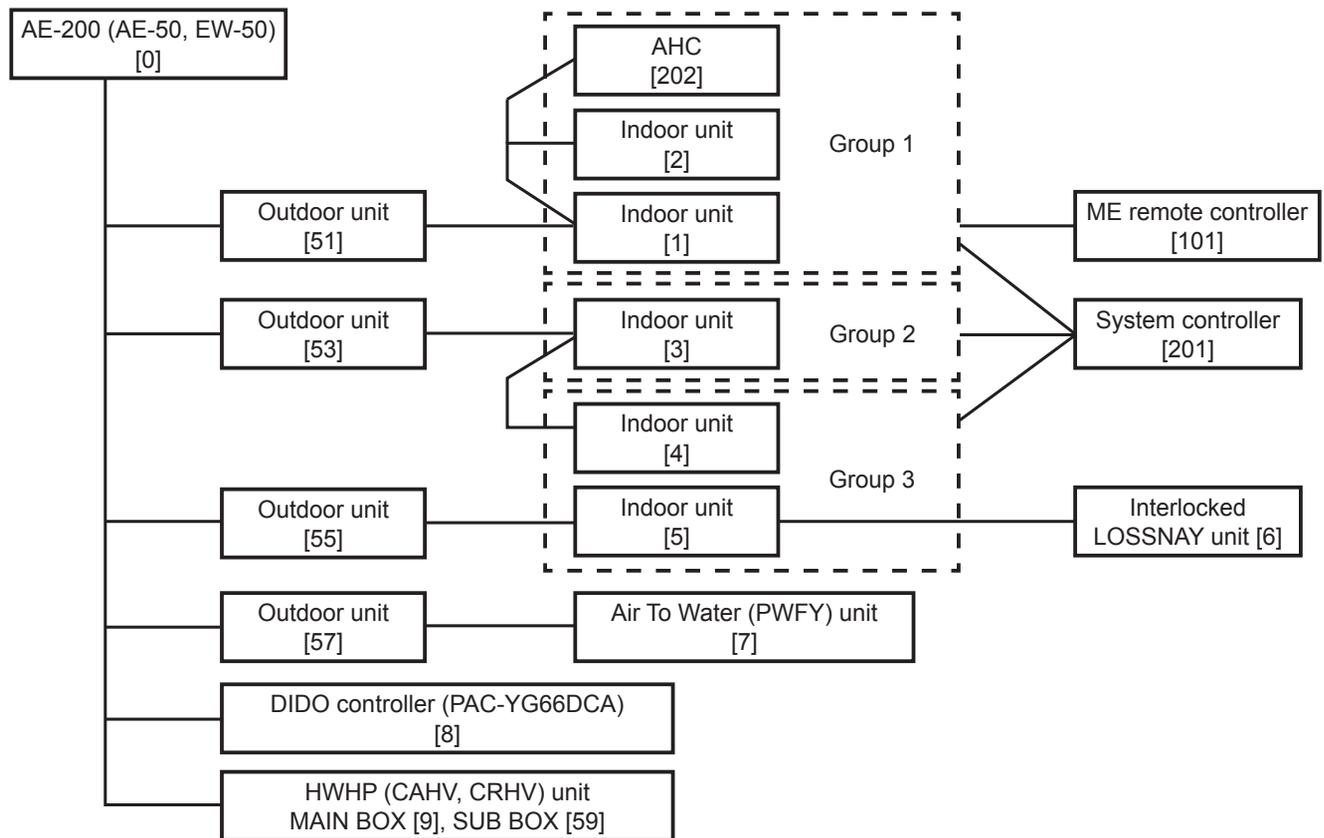


Units in error	Units that will stop
AE-200 (AE-50, EW-50)	None
Outdoor unit [51]	Indoor unit [1], Indoor unit [2]
Outdoor unit [53]	Indoor unit [3], Indoor unit [4], Indoor unit [5]
Outdoor unit [57]	Air To Water (PWFY) unit [7]
Indoor unit [1]	Indoor unit [1], Indoor unit [2]
Indoor unit [3]	Indoor unit [3]
Indoor unit [5]	Indoor unit [4], Indoor unit [5], LOSSNAY unit [6]
Interlocked LOSSNAY unit [6]	Indoor unit [5]
Air To Water (PWFY) unit [7]	Air To Water (PWFY) unit [7]
ME remote controller [101]	Indoor unit [1], Indoor unit [2]
System controller [201]	Indoor unit [1], Indoor unit [2], Indoor unit [3], Indoor unit [4], Indoor unit [5], LOSSNAY unit [6]
Advanced HVAC CONTROLLER [202]	None
DIDO controller (PAC-YG66DCA) [8]	None
HWHP (CAHV, CRHV) unit [9] [59]	None

## 4-4. Filter Sign List

A list of units whose filter sign is turned on can be displayed.

Click [Monitor/Operation] in the menu bar, and then click [Filter Sign List] to access the Filter Sign List screen.

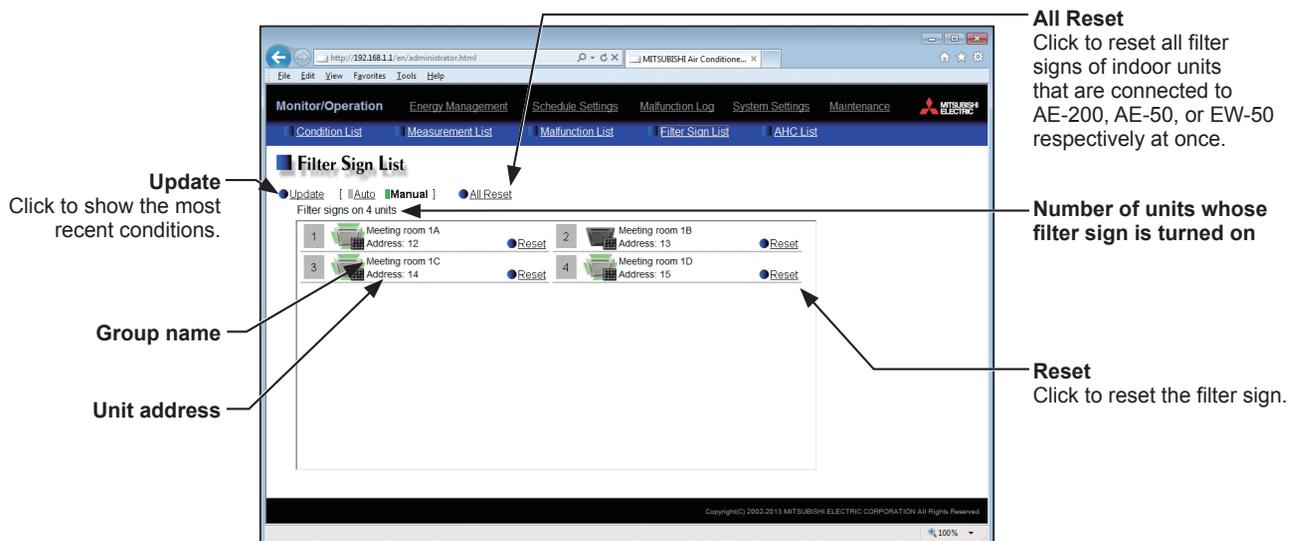


Item	Description
Update	Click to show the most recent conditions. When [Auto] is selected, the conditions are updated automatically every minute.
All Reset	Click to reset all filter signs of indoor units that are connected to AE-200, AE-50, or EW-50 respectively at once. Note: Reset the filter signs after cleaning the filters. Note: After the filter signs are reset, it takes up to an hour to clear the filter sign display on the local remote controllers.
Number of units whose filter sign is turned on	The number of units whose filter sign is currently turned on will appear.
Group name	The name of the group that the unit belongs to will appear.
Unit address	The address of the unit whose filter sign is turned on will appear.
Reset	Click to reset each filter sign. Note: Reset the filter sign after cleaning the filter. Note: After the filter sign is reset, it takes up to an hour to clear the filter sign display on the local remote controllers.

## 4-5. AHC List

On the AHC List screen, the status of input and output ports of each Advanced HVAC CONTROLLER (AHC) can be monitored.

Click [Monitor/Operation] in the menu bar, and then click [AHC List] to access the AHC List screen.

The port names and their status of each AHC will appear.

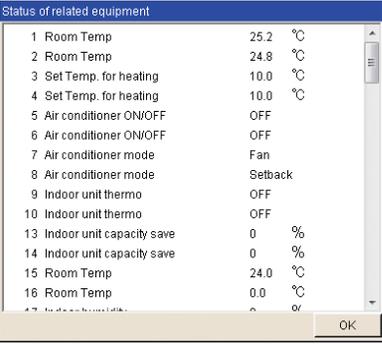Item	Description
Update	Click to show the most recent conditions. When [Auto] is selected, the conditions are updated automatically every minute.
AHC icon	The following icons indicate the AHC status.  : Normal  : A communication error is occurring or an error signal has been input to the AHC.
AHC address	The address of the connected AHC will appear.
Input status	[Input port code * + Input port name + Input status] will appear. * DI1–DI15 (Digital input), E11–E14 (Extended digital input), AI1–AI8 (Analog input) Note: The status of the unused ports will not appear. Note: If a communication error occurs with AHC, no port information will appear.
Output status	[Output port code * + Output port name + Output status] will appear. * DO1–DO9 (Digital output), EO1–EO4 (Extended digital output), AO1–AO2 (Analog output) Note: The status of the unused ports will not appear. Note: If a communication error occurs with AHC, no port information will appear.
Status of related equipment	Click to display the status of the equipment that are used to control the equipments that are connected to the AHC. 

Item	Description
Number of units whose filter sign is turned on *1	<p>The number of units under the control of AE-200/AE-50/EW-50 whose filter sign is currently turned on will appear. Clicking “” will bring up the Filter Sign List screen. (See section 4-4.)</p> <p>Note: This item will not appear if the [Filter Sign Display] is set to [OFF] on the Basic System settings screen, accessible via the Web Browser for Initial Settings.</p>
Number of units in error *1	<p>The number of units under the control of AE-200/AE-50/EW-50 that are currently in error will appear.</p> <p>Clicking “” will bring up the Malfunction List screen. (See section 4-3.)</p>

\*1 The item will not appear if the number of units is “0.”

# 5. Energy Management

## 5-1. Energy Use Status

On the Energy Use Status screen, the energy-control-related status, such as electric energy consumption, operation time, and outdoor temperature, can be displayed in a graph. Operators can check the detailed status of given indoor units by specifying the date to display the data per group, block, or unit address. Also, the status of other indoor units can be displayed at the same time for comparison.

Displaying energy-control-related status of each hour, day, and month in a graph visualizes the energy-saving status.

Click [Energy Management] in the menu bar, and then click [Energy Use Status] to access the Energy Use Status screen.

**Important:**The following settings are required beforehand to display a graph.

- Energy Management Settings (via the Web Browser for Initial Settings)
- Measurement (via the Web Browser for Initial Settings)

- Note: A separate license is required, depending on the selected date range, display range, and display item.
- Note: Comparison data between the AE-200 and the AE-50/EW-50, as well as between different AE-50/EW-50 controllers, can be displayed in a graph on the AE-200/AE-50's LCD, but cannot be displayed on this screen on the Web browser.
- Note: In case the AE-200/AE-50/EW-50 malfunctions, it is recommended to periodically save the file in the CSV format by clicking [Download] on this screen or by clicking [Output as CSV file] on the CSV output screen (see section 9-5).



Item	Description
Date range	<p>Select [Day], [Month], or [Year].</p> <p>Note: When [Day] is selected, the data for each hour between 0:00 and 24:00 of the specified date will appear in the graph.</p> <p>When [Month] is selected, the data for each day between the 1st and 31st of the specified month will appear in the graph.</p> <p>When [Year] is selected, the data for each month between January and December of the specified year will appear in the graph.</p> <p>Note: All selected items in the [Display range], [Display target], [Date to display the data], [Comparison target], [Comparison date], and [Display item] fields will be cleared when the Date range is changed.</p> <p>Note: Only the data for the period during which the AE-200/AE-50/EW-50 was powered on will appear in the graph. The data for the period during which the AE-200/AE-50/EW-50 was powered off will not appear in the graph.</p>
Display range	Select [Block], [Group], or [Address] to display its data. (Clicking on this area shows a pull-down menu.)

Item	Description
Display target	<p>Select a block name, group name, or address number to display its data.</p> <p>&lt;Display range: Block&gt; Clicking on this area shows block names in a pulldown menu. [All Blocks], block names in the order of block numbers, and [Unregistered Blocks] are shown from the top. Blocks of general equipment (connected via DIDO controller PAC-YG66DCA) groups are excluded.</p> <p>&lt;Display range: Group&gt; Clicking on this area shows group names in a pulldown menu. Group names are shown in the order of group numbers from the top. General equipment (connected via DIDO controller PAC-YG66DCA) groups are excluded.</p> <p>&lt;Display range: Address&gt; Clicking on this area shows address numbers in a pulldown menu. Address numbers are shown in the ascending order from the top.</p> <p>Note: To display input values of a built-in PI controller, select the first option [Built-in PI Controller] in a pulldown menu.</p> 
Date to display the data	<p>Specify a date to display the data. (Select year, month, or date in a pulldown menu.)</p> <p>Note: When [Day] is selected as a Date range, specify “yyyy/mm/dd” from the current month or the last 24 months. When [Month] is selected as a Date range, specify “yyyy/mm” from the current month or the last 24 months. When [Year] is selected as a Date range, specify “yyyy” from the current year or the last 2 years.</p> <p>Note: The date will appear in the format that has been set on the Basic System settings screen, accessible via the Web Browser for Initial Settings.</p>
Comparison target	<p>Select a block name, group name, or address to display the comparison data.</p> <p>Note: Only the item selected in the [Display range] field can be selected.</p>
Comparison date	<p>Specify a date to display the comparison data.</p> <p>Note: The same rule as for the “Date to display the data” apply.</p> <p>Note: The date will appear in the format that has been set on the Basic System settings screen, accessible via the Web Browser for Initial Settings.</p>
Refresh screen	<p>Click to show the graph created based on the specified criteria.</p> <p>Note: No graph will appear if no data that meet the specified criteria exist.</p>

Item	Description																																																															
Display item	<p>Select an item in the top row to display its data in the bar graph, and select an item in the bottom row to display its data in the line graph.</p> <p>Note: The selectable items vary, depending on the items selected in the [Display range] and [Display target] fields.</p>																																																															
	 <p>Display items for bar graph</p>																																																															
	<table border="1"> <thead> <tr> <th data-bbox="505 392 691 461" rowspan="2">Display target</th> <th data-bbox="691 392 1000 461" rowspan="2">Display item</th> <th colspan="3" data-bbox="1000 392 1406 427">Display range</th> </tr> <tr> <th data-bbox="1000 427 1138 461">Address</th> <th data-bbox="1138 427 1268 461">Group</th> <th data-bbox="1268 427 1406 461">Block</th> </tr> </thead> <tbody> <tr> <td data-bbox="505 461 691 645" rowspan="5">Indoor unit</td> <td data-bbox="691 461 1000 495">Electric Energy *3</td> <td data-bbox="1000 461 1138 495">V *1</td> <td data-bbox="1138 461 1268 495">V *1</td> <td data-bbox="1268 461 1406 495">V *1</td> </tr> <tr> <td data-bbox="691 495 1000 530">Fan operation time *4</td> <td data-bbox="1000 495 1138 530">V *1</td> <td data-bbox="1138 495 1268 530">V *1</td> <td data-bbox="1268 495 1406 530">-</td> </tr> <tr> <td data-bbox="691 530 1000 564">Thermo-ON time (Total) *4</td> <td data-bbox="1000 530 1138 564">V *1</td> <td data-bbox="1138 530 1268 564">V *1</td> <td data-bbox="1268 530 1406 564">-</td> </tr> <tr> <td data-bbox="691 564 1000 599">Thermo-ON time (Cool) *4</td> <td data-bbox="1000 564 1138 599">V *1</td> <td data-bbox="1138 564 1268 599">V *1</td> <td data-bbox="1268 564 1406 599">-</td> </tr> <tr> <td data-bbox="691 599 1000 645">Thermo-ON time (Heat) *4</td> <td data-bbox="1000 599 1138 645">V *1</td> <td data-bbox="1138 599 1268 645">V *1</td> <td data-bbox="1268 599 1406 645">-</td> </tr> <tr> <td data-bbox="505 645 691 897" rowspan="4">MCP (PI controller)</td> <td data-bbox="691 645 1000 702">Name of the metering device 1</td> <td data-bbox="1000 645 1138 702">V *2</td> <td data-bbox="1138 645 1268 702">-</td> <td data-bbox="1268 645 1406 702">-</td> </tr> <tr> <td data-bbox="691 702 1000 759">Name of the metering device 2</td> <td data-bbox="1000 702 1138 759">V *2</td> <td data-bbox="1138 702 1268 759">-</td> <td data-bbox="1268 702 1406 759">-</td> </tr> <tr> <td data-bbox="691 759 1000 817">Name of the metering device 3</td> <td data-bbox="1000 759 1138 817">V *2</td> <td data-bbox="1138 759 1268 817">-</td> <td data-bbox="1268 759 1406 817">-</td> </tr> <tr> <td data-bbox="691 817 1000 897">Name of the metering device 4</td> <td data-bbox="1000 817 1138 897">V *2</td> <td data-bbox="1138 817 1268 897">-</td> <td data-bbox="1268 817 1406 897">-</td> </tr> <tr> <td data-bbox="505 897 691 1166" rowspan="4">MCP (Built-in PI controller) *5</td> <td data-bbox="691 897 1000 955">Name of the metering device 1</td> <td data-bbox="1000 897 1138 955">V *2</td> <td data-bbox="1138 897 1268 955">-</td> <td data-bbox="1268 897 1406 955">-</td> </tr> <tr> <td data-bbox="691 955 1000 1012">Name of the metering device 2</td> <td data-bbox="1000 955 1138 1012">V *2</td> <td data-bbox="1138 955 1268 1012">-</td> <td data-bbox="1268 955 1406 1012">-</td> </tr> <tr> <td data-bbox="691 1012 1000 1069">Name of the metering device 3</td> <td data-bbox="1000 1012 1138 1069">V *2</td> <td data-bbox="1138 1012 1268 1069">-</td> <td data-bbox="1268 1012 1406 1069">-</td> </tr> <tr> <td data-bbox="691 1069 1000 1166">Name of the metering device 4</td> <td data-bbox="1000 1069 1138 1166">V *2</td> <td data-bbox="1138 1069 1268 1166">-</td> <td data-bbox="1268 1069 1406 1166">-</td> </tr> </tbody> </table>	Display target	Display item	Display range			Address	Group	Block	Indoor unit	Electric Energy *3	V *1	V *1	V *1	Fan operation time *4	V *1	V *1	-	Thermo-ON time (Total) *4	V *1	V *1	-	Thermo-ON time (Cool) *4	V *1	V *1	-	Thermo-ON time (Heat) *4	V *1	V *1	-	MCP (PI controller)	Name of the metering device 1	V *2	-	-	Name of the metering device 2	V *2	-	-	Name of the metering device 3	V *2	-	-	Name of the metering device 4	V *2	-	-	MCP (Built-in PI controller) *5	Name of the metering device 1	V *2	-	-	Name of the metering device 2	V *2	-	-	Name of the metering device 3	V *2	-	-	Name of the metering device 4	V *2	-	-
	Display target			Display item	Display range																																																											
		Address	Group		Block																																																											
	Indoor unit	Electric Energy *3	V *1	V *1	V *1																																																											
		Fan operation time *4	V *1	V *1	-																																																											
		Thermo-ON time (Total) *4	V *1	V *1	-																																																											
		Thermo-ON time (Cool) *4	V *1	V *1	-																																																											
		Thermo-ON time (Heat) *4	V *1	V *1	-																																																											
	MCP (PI controller)	Name of the metering device 1	V *2	-	-																																																											
		Name of the metering device 2	V *2	-	-																																																											
		Name of the metering device 3	V *2	-	-																																																											
		Name of the metering device 4	V *2	-	-																																																											
	MCP (Built-in PI controller) *5	Name of the metering device 1	V *2	-	-																																																											
Name of the metering device 2		V *2	-	-																																																												
Name of the metering device 3		V *2	-	-																																																												
Name of the metering device 4		V *2	-	-																																																												
<p>V: Item that can be displayed in the graph</p>																																																																
<p>*1 "Energy Management License Pack" is required. (AE-200E/AE-50E/EW-50E only)</p>																																																																
<p>*2 If "Energy Management License Pack" has not been registered, only [Day] is available for selection as a Date range. To select [Month] or [Year], "Energy Management License Pack" is required.</p>																																																																
<p>*3 The electric energy consumed by indoor units will appear in the graph. The values are apportioned based on the setting for [Indoor unit operation apportioning mode] that has been made on the Energy Management Settings screen, accessible via the Web Browser for Initial Settings.</p>																																																																
<p>*4 The indoor unit's cumulative operation time for the selected item will appear in the graph.</p> <ul style="list-style-type: none"> <li>• [FAN operation time] is the cumulative duration of time in which the indoor unit is ON.</li> <li>• [Thermo-ON time (Total/Cool/Heat)] is the cumulative duration of time in which the indoor unit and the compressor are ON. (Cool: when the Cool mode is selected; Heat: when the Heat mode is selected; Total: when either mode is selected)</li> </ul>																																																																
<p>*5 To display input values of a built-in PI controller, select [Address] in the [Display range] field and [Built-in PI Controller] in the [Display target] field.</p>																																																																

Item	Description																																												
Display item	<p style="text-align: center;"> <u>Display items for line graph</u></p> <table border="1" data-bbox="513 264 1395 741"> <thead> <tr> <th rowspan="2">Display target</th> <th rowspan="2">Display item</th> <th colspan="3">Display range</th> </tr> <tr> <th>Address</th> <th>Group</th> <th>Block</th> </tr> </thead> <tbody> <tr> <td>-</td> <td>Outdoor Temp. *4</td> <td>V *1</td> <td>V *1</td> <td>V *1</td> </tr> <tr> <td rowspan="3">Indoor unit</td> <td>Set Temp. for cool *4*5</td> <td>V *2</td> <td>V *2</td> <td>-</td> </tr> <tr> <td>Set Temp. for heat *4*5</td> <td>V *2</td> <td>V *2</td> <td>-</td> </tr> <tr> <td>Room Temp. *4</td> <td>V *2</td> <td>V *2</td> <td>-</td> </tr> <tr> <td rowspan="2">MCT (AI controller) *4</td> <td>Name of the temperature sensor 1 or humidity sensor 1</td> <td>V *3</td> <td>-</td> <td>-</td> </tr> <tr> <td>Name of the temperature sensor 2 or humidity sensor 2</td> <td>V *3</td> <td>-</td> <td>-</td> </tr> <tr> <td rowspan="2">AHC *4</td> <td>Name of the temperature sensor 1</td> <td>V *2</td> <td>-</td> <td>-</td> </tr> <tr> <td>Name of the temperature sensor 2</td> <td>V *2</td> <td>-</td> <td>-</td> </tr> </tbody> </table> <p style="text-align: right;">V: Item that can be displayed in the graph</p> <p>*1 Selectable only when the outdoor temperature sensor is selected in the [External Temperature Sensor] section on the Energy Management Settings screen, accessible via the Web Browser for Initial Settings.</p> <p>*2 “Energy Management License Pack” is required. (AE-200E/AE-50E/EW-50E only)</p> <p>*3 If the “Energy Management License Pack” has not been registered, only [Day] is available for selection as a Date range. To select [Month] or [Year], “Energy Management License Pack” is required.</p> <p>*4 When [Day] is selected as a Date range, the temperature values obtained every hour will appear. When [Month] is selected, the average daily temperature values will appear. When [Year] is selected, the average monthly temperature values will appear.</p> <p>*5 If the indoor unit supports the dual set point function in the AUTO mode, only the set temperature for the current operation mode (Cool or Heat mode) can be displayed in a graph.</p>	Display target	Display item	Display range			Address	Group	Block	-	Outdoor Temp. *4	V *1	V *1	V *1	Indoor unit	Set Temp. for cool *4*5	V *2	V *2	-	Set Temp. for heat *4*5	V *2	V *2	-	Room Temp. *4	V *2	V *2	-	MCT (AI controller) *4	Name of the temperature sensor 1 or humidity sensor 1	V *3	-	-	Name of the temperature sensor 2 or humidity sensor 2	V *3	-	-	AHC *4	Name of the temperature sensor 1	V *2	-	-	Name of the temperature sensor 2	V *2	-	-
Display target	Display item			Display range																																									
		Address	Group	Block																																									
-	Outdoor Temp. *4	V *1	V *1	V *1																																									
Indoor unit	Set Temp. for cool *4*5	V *2	V *2	-																																									
	Set Temp. for heat *4*5	V *2	V *2	-																																									
	Room Temp. *4	V *2	V *2	-																																									
MCT (AI controller) *4	Name of the temperature sensor 1 or humidity sensor 1	V *3	-	-																																									
	Name of the temperature sensor 2 or humidity sensor 2	V *3	-	-																																									
AHC *4	Name of the temperature sensor 1	V *2	-	-																																									
	Name of the temperature sensor 2	V *2	-	-																																									
Graph region	<p>The display target's data and the comparison target's data will appear in a bar graph and a line graph.</p> <table border="1" data-bbox="469 1166 1359 1356"> <thead> <tr> <th></th> <th>Display target</th> <th>Comparison target</th> <th>Target value</th> </tr> </thead> <tbody> <tr> <td> Bar graph</td> <td> (Yellow)</td> <td> (Brown)</td> <td></td> </tr> <tr> <td> Line graph</td> <td> (Orange)</td> <td> (Blue)</td> <td> (Red)</td> </tr> </tbody> </table> <p>Note: If no item is selected in the [Comparison target] field, only the data of the item selected in the [Display target] field will appear in the graph.</p> <p>Note: The data for a certain period of time may not appear if it does not exist due to the changes of the daylight saving time setting or current time setting. If the data overlap for a certain period of time due to the time overlap that was occurred when daylight saving ended or the current time setting was changed, the newer data will appear in the graph.</p>		Display target	Comparison target	Target value	 Bar graph	 (Yellow)	 (Brown)		 Line graph	 (Orange)	 (Blue)	 (Red)																																
	Display target	Comparison target	Target value																																										
 Bar graph	 (Yellow)	 (Brown)																																											
 Line graph	 (Orange)	 (Blue)	 (Red)																																										

Item	Description
Download	<p>Click [Download] to export the displayed measurement data in the CSV format. The CSV file name and file format will vary as shown below, depending on the selected date range.</p> <p>■ <u>File name</u></p> <p>&lt;When any item in the [Comparison target] field is selected&gt;</p> <p>Date range: Day  "EM"_"DailyTrend"_[yyyy]-[mm]-[dd]_[Display target]_[YYYY]-[MM]-[DD]_[Comparison target]_[Bar graph type]_[Line graph type].csv</p> <p>Date range: Month  "EM"_"MonthlyTrend"_[yyyy]-[mm]_[Display target]_[YYYY]-[MM]_[Comparison target]_[Bar graph type]_[Line graph type].csv</p> <p>Date range: Year  "EM"_"AnnualTrend"_[yyyy]_[Display target]_[YYYY]_[Comparison target]_[Bar graph type]_[Line graph type].csv</p> <p>&lt;When no item in the [Comparison target] field is selected&gt;</p> <p>Date range: Day  "EM"_"DailyTrend"_[yyyy]-[mm]-[dd]_[Display target]_[Bar graph type]_[Line graph type].csv</p> <p>Date range: Month  "EM"_"MonthlyTrend"_[yyyy]-[mm]_[Display target]_[Bar graph type]_[Line graph type].csv</p> <p>Date range: Year  "EM"_"AnnualTrend"_[yyyy]_[Display target]_[Bar graph type]_[Line graph type].csv</p>

Item	Description		
Download	File-name contents	Format	
	[yyyy]	The year specified in the [Date to display the data] field	
	[mm]	The month specified in the [Date to display the data] field	
	[dd]	The date specified in the [Date to display the data] field	
	[Display target]	Address	<Indoor unit> "A" + M-NET address (001-050) + "_" + "00" <PI controller> "A" + M-NET address (001-050) + "_" + Metering device No. <Built-in PI controller> "A" + "_" + Channel No. (01-04) <AI controller or AHC> "A" + M-NET address (001-050) + "_" + Sensor No. (01-04)
		Group	"G" + Group No. (001-050) + "_" + "00"
		Block	"B" + Block No. (001-050, 999 *1) + "_" + "00"
	[YYYY]	The year specified in the [Comparison date] field	
	[MM]	The month specified in the [Comparison date] field	
	[DD]	The date specified in the [Comparison date] field	
	[Comparison target]	Address	The same output format as for [Display target] apply.
		Group	
		Block	
	[Bar graph type]	B01: Electric energy (Indoor unit)	
		B02: Fan operation time	
		B03: Thermo-ON time (Total)	
		B04: Thermo-ON time (Cool)	
		B05: Thermo-ON time (Heat)	
		B06: PI controller/Built-in PI controller electric energy	
		B08: PI controller/Built-in PI controller water quantity	
		B09: PI controller/Built-in PI controller heat quantity	
		B00: No selection	
		B000: Unregistered blocks	
[Line graph type]	L00: No selection		
	L01: Set temperature (Cool)		
	L02: Set temperature (Heat)		
	L03: Room temperature		
	L04: AI controller temperature		
	L05: AHC temperature		
	L06: Outdoor temperature		
	L08: AI controller humidity		
*1 "B999" = Total of all blocks			

Item	Description				
Download	■ File format				
	Row	Item	Date range	Format	
	1st	File Type	Day	401	
			Month	402	
			Year	403	
	2nd	Date	Day	dd/mm/yyyy:DD/MM/YYYY *1	
			Month	mm/yyyy:MM/YYYY *1	
			Year	yyyy:YYYY	
	3rd	Target	"Block" + Block number (Display target)/ "Block" + Block number (Comparison target)		
	4th	Measurement item	Day	"Time",	<Display range: Address> "Address" + Address number (Display target) (Bar) + "-" + Display item (Bar), "Address" + Address number (Comparison target) (Bar) + "-" + Display item (Bar), "Address" + Address number (Display target) (Line) + "-" + Display item (Line), "Address" + Address number (Comparison target) (Line) + "-" + Display item (Line)
			Month	"Day",	<Display range: Group> Group name*3 (Display target) (Bar) + "-" + Display item (Bar), Group name*3 (Comparison target) (Bar) + "-" + Display item (Bar), Group name*3 (Display target) (Line) + "-" + Display item (Line), Group name*3 (Comparison target) (Line) + "-" + Display item (Line)
			Year	"Month",	<Display range: Block> Block name*3 (Display target) (Bar) + "-" + Display item (Bar), Block name*3 (Comparison target) (Bar) + "-" + Display item (Bar), "Target electric energy(kWh)"*2, Block name*3 (Display target) (Line) + "-" + Display item (Line), Block name*3 (Comparison target) (Line) + "-" + Display item (Line)
	5th- *5	Data *4	Day	hh:mm,	Data value (Bar), Comparison data value (Bar), Target electric energy value*2, Data value (Line), Comparison data value (Line)
			Month	dd,	
			Year	mm,	
	<p>*1 The date will appear in the format that has been set on the Basic System settings screen, accessible via the Web Browser for Initial Settings.</p> <p>*2 "Target electric energy(kWh)" and the target electric energy value will appear only when the data is displayed in the graph.</p> <p>*3 If the group name has not been registered, ["Group" + group number] will appear. If the block name has not been registered, ["Block" + block number] will appear.</p> <p>*4 The separator character and decimal point character selected on the Measurement screen (accessible via the Web Browser for Initial Settings) will be used to the data.</p> <p>*5 The number of rows varies with the selected date range. (Day: 5th–28th; Month: 5th–35th; Year: 5th–16th)</p>				

Item	Description
Download	<p>■ <u>File sample</u></p> <p>Date range: Day</p> <pre> 401 2014/08/19:2013/06/01 Block1/Block5 Time,Block1 - Indoor Unit Electric Energy,Block5 - Indoor Unit Electric Energy,Block1 - Outdoor Temp.,Block5 - Outdoor Temp. 00:00,0.61,0.25,23.2,17.8 01:00,0.65,0.51,23.1,17.6 02:00,0.66,0.48,22.1,18.1 03:00,0.66,0.58,23.3,18.2 04:00,0.63,0.47,24.5,17.5 05:00,0.59,0.39,26.8,19.1 06:00,0.52,0.52,28.1,22.1 : 23:00,0.59,0.23,23.4,17.1 </pre>
	<p>Date range: Month</p> <pre> 402 2014/04:2013/04 Block1/Block5 Day,Block1 - Indoor Unit Electric Energy,Block5 - Indoor Unit Electric Energy,Target electric energy (kWh),Block1 - Outdoor Temp.,Block5 - Outdoor Temp. 01,24.69,8.74,22,26.2,17.9 02,25.31,8.22,22,27,17.4 03,12.36,22.33,10,25.2,16.6 04,10.37,21.36,10,25.1,19.3 05,27.02,17.55,22,27.7,20.5 06,24.55,16.58,22,26.3,19 07,24.69,17.96,22,24.9,18.9 : 31,13.2,20.22,10,27.3,20.2 </pre>
	<p>Date range: Year</p> <pre> 403 2014:2013 Block1/Block5 Month,Block1 - Indoor Unit Electric Energy,Block5 - Indoor Unit Electric Energy,Target electric energy (kWh),Block1 - Outdoor Temp.,Block5 - Outdoor Temp. 01,675.17,661.93,600,0.4,0.5 02,697.38,683.71,700,0.3,3.2 03,528.63,518.26,400,4.5,3.8 04,403.67,395.75,500,9.8,10 05,420.28,412.04,500,15.9,15.6 06,450.33,477.88,500,18.2,20.6 07,594.13,582.48,550,22.8,24.8 : 12,602.58,590.76,550,3.3,3.4 </pre>

## 5-2. Ranking

On the Ranking screen, the rankings in electric energy consumption, fan operation time, and Thermo-ON time (Total/Cool/Heat) of given indoor units can be displayed per block, group, and unit address in descending order in the bar graph.


Click [Energy Management] in the menu bar, and then click [Ranking] to access the Ranking screen.

Important: The following settings are required beforehand to display a graph.

- Energy Management Settings (via the Web Browser for Initial Settings)
- Measurement (via the Web Browser for Initial Settings)

Note: "Energy Management License Pack" is required to access the Ranking screen. (AE-200E/AE-50E/EW-50E only)

Note: In case the AE-200/AE-50/EW-50 malfunctions, it is recommended to periodically save the file in the CSV format by clicking [Download] on this screen or by clicking [Output as CSV file] on the CSV output screen (see section 9-5).

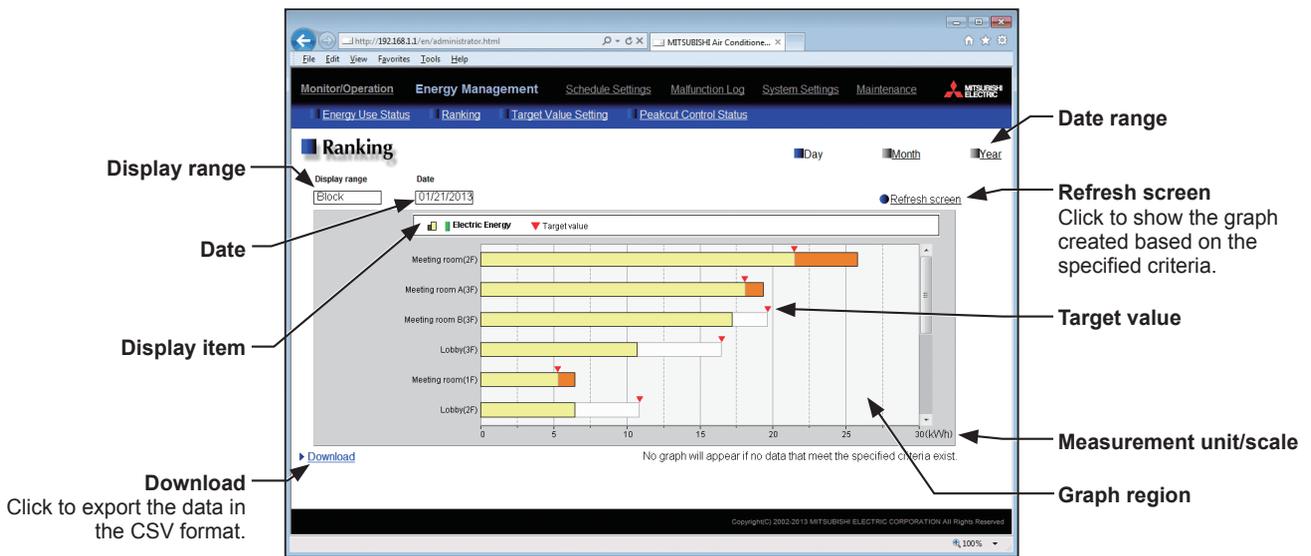

Item	Description
Date range	<p>Select [Day], [Month], or [Year].</p> <p>Note: When [Day] is selected, the data for each hour between 0:00 and 24:00 of the specified date will appear in the graph.</p> <p>When [Month] is selected, the data for each day between the 1st and 31st of the specified month will appear in the graph.</p> <p>When [Year] is selected, the data for each month between January and December of the specified year will appear in the graph.</p> <p>Note: All selected items in the [Display range], [Date], and [Display item] fields will be cleared when the Date range is changed.</p> <p>Note: Only the data for the period during which the AE-200/AE-50/EW-50 was powered on will appear in the graph. The data for the period during which the AE-200/AE-50/EW-50 was powered off will not appear in the graph.</p>
Display range	<p>Select [Block], [Group], or [Address] to display its data in the ranking graph. (Clicking on this area shows a pulldown menu.)</p>
Date	<p>Specify a date to display the data in the ranking graph. (Select year, month, or date in a pulldown menu.)</p> <p>Note: When [Day] is selected as a Date range, specify "yyyy/mm/dd" from the current month or the last 24 months.</p> <p>When [Month] is selected as a Date range, specify "yyyy/mm" from the current month or the last 24 months.</p> <p>When [Year] is selected as a Date range, specify "yyyy" from the current year or the last 5 years.</p> <p>Note: The date will appear in the format that has been set on the Basic System settings screen, accessible via the Web Browser for Initial Settings.</p>

Item	Description																											
Display item	<p>Select an item to display its data in the ranking graph.            Note: The selectable items vary, depending on the items selected in the [Display range] field.</p> <p style="text-align: center;"><u>Display items</u></p> <table border="1" data-bbox="574 328 1334 587"> <thead> <tr> <th data-bbox="574 328 927 399" rowspan="2">Display item</th> <th colspan="3" data-bbox="927 328 1334 362">Display range</th> </tr> <tr> <th data-bbox="927 362 1062 399">Address</th> <th data-bbox="1062 362 1196 399">Group</th> <th data-bbox="1196 362 1334 399">Block</th> </tr> </thead> <tbody> <tr> <td data-bbox="574 399 927 438">Electric Energy (kWh)</td> <td data-bbox="927 399 1062 438">V</td> <td data-bbox="1062 399 1196 438">V</td> <td data-bbox="1196 399 1334 438">V</td> </tr> <tr> <td data-bbox="574 438 927 477">Fan operation time (min)</td> <td data-bbox="927 438 1062 477">V</td> <td data-bbox="1062 438 1196 477">V</td> <td data-bbox="1196 438 1334 477">-</td> </tr> <tr> <td data-bbox="574 477 927 516">Thermo-ON time (Total) (min)</td> <td data-bbox="927 477 1062 516">V</td> <td data-bbox="1062 477 1196 516">V</td> <td data-bbox="1196 477 1334 516">-</td> </tr> <tr> <td data-bbox="574 516 927 555">Thermo-ON time (Cool) (min)</td> <td data-bbox="927 516 1062 555">V</td> <td data-bbox="1062 516 1196 555">V</td> <td data-bbox="1196 516 1334 555">-</td> </tr> <tr> <td data-bbox="574 555 927 587">Thermo-ON time (Heat) (min)</td> <td data-bbox="927 555 1062 587">V</td> <td data-bbox="1062 555 1196 587">V</td> <td data-bbox="1196 555 1334 587">-</td> </tr> </tbody> </table> <p style="text-align: right; margin-right: 20px;">V: Item that can be displayed in the graph</p>	Display item	Display range			Address	Group	Block	Electric Energy (kWh)	V	V	V	Fan operation time (min)	V	V	-	Thermo-ON time (Total) (min)	V	V	-	Thermo-ON time (Cool) (min)	V	V	-	Thermo-ON time (Heat) (min)	V	V	-
Display item	Display range																											
	Address	Group	Block																									
Electric Energy (kWh)	V	V	V																									
Fan operation time (min)	V	V	-																									
Thermo-ON time (Total) (min)	V	V	-																									
Thermo-ON time (Cool) (min)	V	V	-																									
Thermo-ON time (Heat) (min)	V	V	-																									
Refresh screen	<p>Click to show the graph created based on the specified criteria.            Note: No graph will appear if no data that meet the specified criteria exist.</p>																											
Graph region	<p>Ranking graph will appear in descending order of the value of the selected display item.</p> <table border="1" data-bbox="500 737 1409 874"> <thead> <tr> <th data-bbox="500 737 769 799">Cumulative value</th> <th data-bbox="769 737 1114 799">Cumulative value (value exceeded the target value)</th> <th data-bbox="1114 737 1409 799">Target value</th> </tr> </thead> <tbody> <tr> <td data-bbox="500 799 769 874">  (Yellow)         </td> <td data-bbox="769 799 1114 874">  (Orange)         </td> <td data-bbox="1114 799 1409 874">  (Gray frame + red triangle)         </td> </tr> </tbody> </table> <p>Note: "Cumulative value (value exceeded the target value)" will appear when [Electric Energy] is selected in the [Display item] field.</p>	Cumulative value	Cumulative value (value exceeded the target value)	Target value	 (Yellow)	 (Orange)	 (Gray frame + red triangle)																					
Cumulative value	Cumulative value (value exceeded the target value)	Target value																										
 (Yellow)	 (Orange)	 (Gray frame + red triangle)																										
Target value	<p>A red triangle mark will appear to indicate a target value.            Note: Target value will appear only when [Block] is selected in the [Display range] field and [Electric Energy] is selected in the [Display item] field.            Note: Target value will not appear when the target value is not set or set to "0".</p>																											
Measurement unit/ scale	<p>The graph shows the measurement unit that is suitable for the selected Display item, and scale that is automatically adjusted to show the full range of data.</p>																											

Item	Description																																											
Download	<p>Click [Download] to export the displayed measurement data in the CSV format. The CSV file name and file format will vary as shown below, depending on the selected date range.</p> <p><b>■ File name</b></p> <p>Date range: Day  "EM"_"DailyRanking"_[yyyy]-[mm]-[dd]_[Display range]_[Ranking graph type].csv</p> <p>Date range: Month  "EM"_"MonthlyRanking"_[yyyy]-[mm]_[Display range]_[Ranking graph type].csv</p> <p>Date range: Year  "EM"_"AnnualRanking"_[yyyy]_[Display range]_[Ranking graph type].csv</p> <table border="1" data-bbox="440 615 1455 1051"> <thead> <tr> <th>File-name contents</th> <th colspan="2">Format</th> </tr> </thead> <tbody> <tr> <td>[yyyy]</td> <td colspan="2">The year specified in the [Date] field</td> </tr> <tr> <td>[mm]</td> <td colspan="2">The month specified in the [Date] field</td> </tr> <tr> <td>[dd]</td> <td colspan="2">The date specified in the [Date] field</td> </tr> <tr> <td rowspan="3">[Display range]</td> <td>Address</td> <td>"A999"</td> </tr> <tr> <td>Group</td> <td>"G999"</td> </tr> <tr> <td>Block</td> <td>"B999"</td> </tr> <tr> <td rowspan="5">[Ranking graph type]</td> <td colspan="2">B01: Electric energy (Indoor unit)</td> </tr> <tr> <td colspan="2">B02: Fan operation time</td> </tr> <tr> <td colspan="2">B03: Thermo-ON time (Total)</td> </tr> <tr> <td colspan="2">B04: Thermo-ON time (Cool)</td> </tr> <tr> <td colspan="2">B05: Thermo-ON time (Heat)</td> </tr> </tbody> </table>	File-name contents	Format		[yyyy]	The year specified in the [Date] field		[mm]	The month specified in the [Date] field		[dd]	The date specified in the [Date] field		[Display range]	Address	"A999"	Group	"G999"	Block	"B999"	[Ranking graph type]	B01: Electric energy (Indoor unit)		B02: Fan operation time		B03: Thermo-ON time (Total)		B04: Thermo-ON time (Cool)		B05: Thermo-ON time (Heat)														
	File-name contents	Format																																										
	[yyyy]	The year specified in the [Date] field																																										
	[mm]	The month specified in the [Date] field																																										
	[dd]	The date specified in the [Date] field																																										
	[Display range]	Address	"A999"																																									
		Group	"G999"																																									
		Block	"B999"																																									
	[Ranking graph type]	B01: Electric energy (Indoor unit)																																										
		B02: Fan operation time																																										
B03: Thermo-ON time (Total)																																												
B04: Thermo-ON time (Cool)																																												
B05: Thermo-ON time (Heat)																																												
<p><b>■ File format</b></p> <table border="1" data-bbox="440 1150 1455 1774"> <thead> <tr> <th>Row</th> <th>Item</th> <th>Date range</th> <th>Format</th> </tr> </thead> <tbody> <tr> <td rowspan="3">1st</td> <td rowspan="3">File Type</td> <td>Day</td> <td>404</td> </tr> <tr> <td>Month</td> <td>405</td> </tr> <tr> <td>Year</td> <td>406</td> </tr> <tr> <td rowspan="3">2nd</td> <td rowspan="3">Date</td> <td>Day</td> <td>dd/mm/yyyy *1</td> </tr> <tr> <td>Month</td> <td>mm/yyyy *1</td> </tr> <tr> <td>Year</td> <td>yyyy</td> </tr> <tr> <td rowspan="3">3rd</td> <td rowspan="3">Display range</td> <td>Address</td> <td>"All addresses"</td> </tr> <tr> <td>Group</td> <td>"All groups"</td> </tr> <tr> <td>Block</td> <td>"All blocks"</td> </tr> <tr> <td rowspan="3">4th</td> <td rowspan="3">Measurement item</td> <td>Address</td> <td>"Address number", Display item</td> </tr> <tr> <td>Group</td> <td>"Group name", Display item</td> </tr> <tr> <td>Block</td> <td>"Block name", Display item, "Target electric energy(kWh)"*3</td> </tr> <tr> <td rowspan="3">5th–28th</td> <td rowspan="3">Data *4</td> <td>Address</td> <td>Address number, Data value</td> </tr> <tr> <td>Group</td> <td>Group name*2, Data value</td> </tr> <tr> <td>Block</td> <td>Block name*2, Data value, Target electric energy value*3</td> </tr> </tbody> </table> <p>*1 The date will appear in the format that has been set on the Basic System settings screen, accessible via the Web Browser for Initial Settings.</p> <p>*2 If the group name has not been registered, ["Group" + group number] will appear. If the block name has not been registered, ["Block" + block number] will appear.</p> <p>*3 "Target electric energy(kWh)" and the target electric energy value will appear only when the data is displayed in the graph.</p> <p>*4 The separator character and decimal point character selected on the Measurement screen (accessible via the Web Browser for Initial Settings) will be used to the data.</p>	Row	Item	Date range	Format	1st	File Type	Day	404	Month	405	Year	406	2nd	Date	Day	dd/mm/yyyy *1	Month	mm/yyyy *1	Year	yyyy	3rd	Display range	Address	"All addresses"	Group	"All groups"	Block	"All blocks"	4th	Measurement item	Address	"Address number", Display item	Group	"Group name", Display item	Block	"Block name", Display item, "Target electric energy(kWh)"*3	5th–28th	Data *4	Address	Address number, Data value	Group	Group name*2, Data value	Block	Block name*2, Data value, Target electric energy value*3
Row	Item	Date range	Format																																									
1st	File Type	Day	404																																									
		Month	405																																									
		Year	406																																									
2nd	Date	Day	dd/mm/yyyy *1																																									
		Month	mm/yyyy *1																																									
		Year	yyyy																																									
3rd	Display range	Address	"All addresses"																																									
		Group	"All groups"																																									
		Block	"All blocks"																																									
4th	Measurement item	Address	"Address number", Display item																																									
		Group	"Group name", Display item																																									
		Block	"Block name", Display item, "Target electric energy(kWh)"*3																																									
5th–28th	Data *4	Address	Address number, Data value																																									
		Group	Group name*2, Data value																																									
		Block	Block name*2, Data value, Target electric energy value*3																																									

Item	Description
Download	<p>■ <u>File sample</u></p> <p>Date range: Day</p> <div style="border: 1px solid black; padding: 5px;"> <p>404 03/13/2014 All blocks Block name,Indoor Unit Electric Energy,Target electric energy (kWh) Block1,25.19,21.2 Block5,19.58,18.13 Unregistered Blocks,17.01,19.73 Block3,11.2,16.9 Block6,6.19.5.24 Block2,5.98,10.96</p> </div>
	<p>Date range: Month</p> <div style="border: 1px solid black; padding: 5px;"> <p>405 04/2014 All blocks Block name,Indoor Unit Electric Energy,Target electric energy (kWh) Block1,780.89,657.2 Block5,606.98,562.03 Unregistered Blocks,527.31,611.63 Block3,347.2,523.9 Block6,191.89,162.44 Block2,185.38,339.76</p> </div>
	<p>Date range: Year</p> <div style="border: 1px solid black; padding: 5px;"> <p>406 2014 All blocks Block name,Indoor Unit Electric Energy,Target electric energy (kWh) Block1,9370.68,7886.4 Block5,7283.76,6744.36 Unregistered Blocks,6327.72,7339.56 Block3,4166.4,6286.8 Block6,2302.68,1949.28 Block2,2224.56,4077.12</p> </div>

### 5-3. Target Value Setting

This section explains how to set the target electric energy consumption values for the entire system for the current year, each month, each day of the week, and each block. The set values will be displayed in the graph on the Energy Use Status screen (see section 5-1) and the Ranking screen (see section 5-2).

Click [Energy Management] in the menu bar, and then click [Target Value Setting] to access the Target Value Setting screen.



Under the [Total target value] section, the items [Annual target], [Monthly target], and [Usage ratio for each day of the week] will appear. Set the annual target electric energy, usage ratio for each month, and usage ratio for each day of the week to automatically calculate the monthly target electric energy.

Under the [Target value for each block] section, set the usage ratio for each block to automatically calculate the annual target electric energy for each block.

Important: The target value settings must be made after all units have been started up. If the settings are made while one or more units are starting up, the calculation result will be inaccurate. The settings that have been saved while one or more units are starting up may be lost.

The screenshot shows the 'Target Value Setting' page. On the left, under 'Total target value', there are fields for 'Annual target' (19999 kWh), 'Comparison with previous year' (0.0%), and 'Monthly target' (1200 kWh for Jan). Below this is a table for 'Usage ratio for each day of the week' with values for Sun through Sat. On the right, under 'Target value for each block', there is a table with columns for 'Block Name', 'Usage ratio', 'Auto calc.', and 'Annual target'. The table lists blocks like 'Lobby (1F)', 'Meeting room (1F)', etc. Callouts point to various elements: 'Annual target electric energy' points to the Annual target field; 'Comparison with previous year' points to the comparison field; 'Monthly target electric energy' points to the Monthly target field; 'Usage ratio for each month' points to the usage ratio table; 'Usage ratio for each day of the week' points to the weekly usage ratio table; 'Refresh' points to the Refresh button; 'Block name' points to the Block Name column; 'Annual target electric energy for each block' points to the Annual target column; 'Auto calc.' points to the Auto calc. checkbox; 'Usage ratio for each block' points to the Usage ratio column; 'Save Settings' points to the Save Settings button; and 'Click to save the changes made.' points to the Save Settings button.

Item	Description
Annual target electric energy	Enter the annual target electric energy consumption value. Note: The value must be between 0 and 4294967 kWh. Note: If the ratio is entered in the [Comparison with previous year] field, the annual target electric energy will be calculated automatically, based on the electric energy consumption data of the previous year.
Comparison with previous year	Enter the ratio of the annual target electric energy of the current year to the electric energy consumed in the previous year. Note: The ratio must be between 0.0 and 999.9%. Note: If the value is entered in the [Annual target electric energy] field, the ratio will be calculated automatically based on the electric energy consumption data of the previous year. Note: When no data of the previous year exists, "--" will appear.
Monthly target electric energy	The target electric energy value for each month will appear. Note: The values cannot be entered. The values will be calculated automatically, based on the values entered in the [Annual target electric energy] and [Usage ratio for each month] fields.

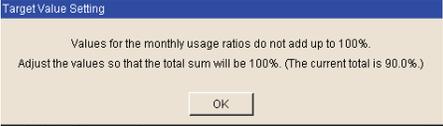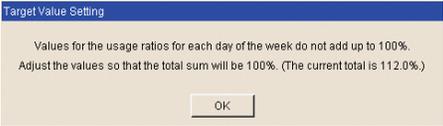
Item	Description
Usage ratio for each month	<p>Enter the target usage ratios of the annual electric energy for each month.</p> <p>Note: Each ratio must be between 0.0 and 100.0%.</p> <p>Note: The total of the ratios must be 100%. If the total is not 100%, a window that shows the current total value as shown below will appear and the setting will not be saved.</p>  <p>Note: When the ratios are entered, the values in the [Monthly target electric energy] field will be calculated automatically, based on the value in the [Annual target electric energy] field.</p>
Usage ratio for each day of the week	<p>Enter the target usage ratios of the electric energy for each day of the week.</p> <p>Note: The total of the ratios must be 100%. If the total is not 100%, a window that shows the current total value as shown below will appear and the setting will not be saved.</p>  <p>Note: When the ratios are entered, the values in the [Monthly target electric energy] field may change after being recalculated.</p>
Block name	<p>The names of all the registered blocks will appear in the order of the block number.</p> <p>Note: If the block name has not been registered, ["Block" + block number] will appear.</p>
Usage ratio for each block	<p>Enter the target usage ratios of the electric energy for each block.</p> <p>Note: The ratios cannot be entered if the [Auto calc.] checkbox is checked. To enter the desired ratios, uncheck the checkbox.</p> <p>Note: The total of the ratios must be 100%. If the total is not 100%, a window that shows the current total value as shown below will appear and the setting will not be saved.</p> 
Auto calc.	<p>Check the checkbox to automatically calculate the usage ratio for each block based on the indoor unit capacity.</p> <p>Note: This function is useful when it is hard to determine the target electric energy, such as when no data of the previous year exists and it is unknown how much electric energy is consumed by each block.</p>
Annual target electric energy for each block	<p>The annual target electric energy for each block will appear after being calculated based on the ratios in the [Usage ratio for each block] field and the value entered in the [Annual target electric energy] field.</p>

## 5-4. Peakcut Control Status

This section explains how to check the Peakcut control status.

Click [Energy Management] in the menu bar, and then click [Peakcut Control Status] to access the Peakcut Control Status screen.

The average electric power consumption (kW) and the control level will appear in the graph. The measurement data can be exported in a CSV format from the screen.

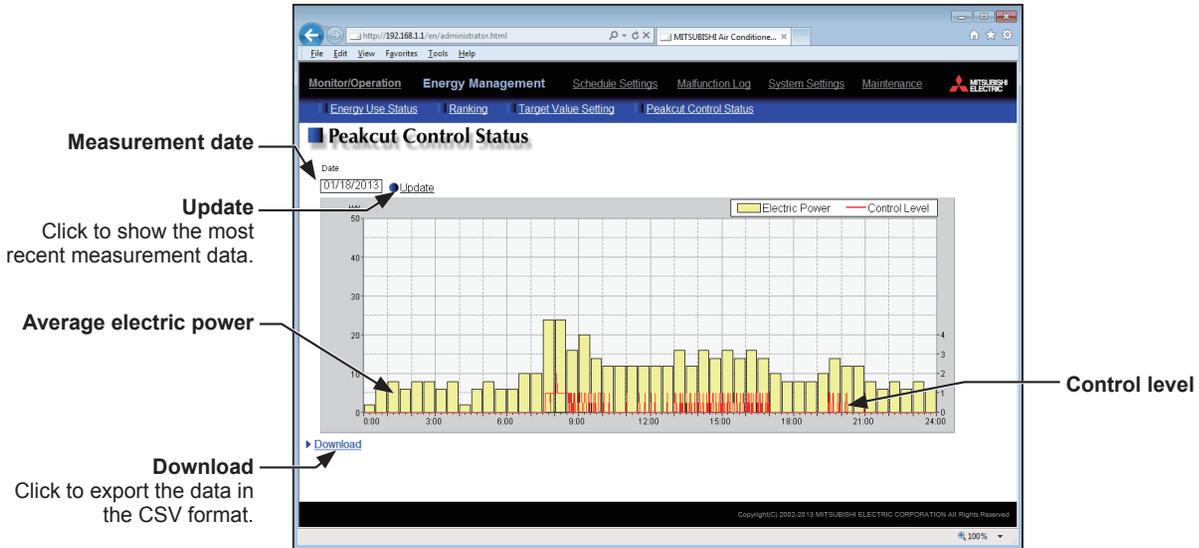



Item	Description								
Update	Click to show the most recent measurement data.								
Measurement date	Select the measurement date. Note: The data of the past three days including the current day can be displayed.								
Average electric power	Average electric power consumption (kW) will appear in 30-minute increments. Note: Average electric power consumption data are stored every hour and half hour. If a power failure occurs, up to 30-minute worth of data will be lost. Note: The graph can be displayed only when the Peak Cut method is set to [Electric Amount Count PLC] or [PI Controller] on the Peak Cut settings screen, accessible via the Web Browser for Initial Settings.								
Control level	Peak Cut control level will appear.								
Download	Click [Download] to export the measurement data in the CSV format as shown below.  <div style="border: 1px solid black; padding: 5px;"> <p>■ File name</p> <p>Peakcut_[yyyy]-[mm]-[dd].csv</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 40%;">File-name contents</th> <th>Format</th> </tr> </thead> <tbody> <tr> <td>[yyyy]</td> <td>The year specified in the [Measurement date] field</td> </tr> <tr> <td>[mm]</td> <td>The month specified in the [Measurement date] field</td> </tr> <tr> <td>[dd]</td> <td>The date specified in the [Measurement date] field</td> </tr> </tbody> </table> </div>	File-name contents	Format	[yyyy]	The year specified in the [Measurement date] field	[mm]	The month specified in the [Measurement date] field	[dd]	The date specified in the [Measurement date] field
File-name contents	Format								
[yyyy]	The year specified in the [Measurement date] field								
[mm]	The month specified in the [Measurement date] field								
[dd]	The date specified in the [Measurement date] field								

Item	Description													
Download	<b>■ File format</b>													
	Row	Item	Format											
	1st	File Type	123											
	2nd	Date	yyyy/mm/dd *1											
	3rd	Target	"Peakcut energy"											
	4th	Measurement item	"Time,Power(kW),Control level"											
5th-	Data	hh:mm (1-minute intervals), average electric power consumption, control level Note: Average electric power consumption (kW) in 30-minute period will appear in 30-minute increments.												
*1 The date will appear in the format that has been set on the Basic System settings screen, accessible via the Web Browser for Initial Settings.														
<b>■ File sample</b>														
<table border="1" data-bbox="440 702 816 929"> <tr><td>123</td></tr> <tr><td>03/13/2015</td></tr> <tr><td>Peakcut energy</td></tr> <tr><td>Time,Power(kW),Control level</td></tr> <tr><td>00:00,8,1</td></tr> <tr><td>00:01,8,1</td></tr> <tr><td>00:02,8,1</td></tr> <tr><td>:</td></tr> <tr><td>:</td></tr> <tr><td>23:58,6,0</td></tr> <tr><td>23:59,6,0</td></tr> </table>				123	03/13/2015	Peakcut energy	Time,Power(kW),Control level	00:00,8,1	00:01,8,1	00:02,8,1	:	:	23:58,6,0	23:59,6,0
123														
03/13/2015														
Peakcut energy														
Time,Power(kW),Control level														
00:00,8,1														
00:01,8,1														
00:02,8,1														
:														
:														
23:58,6,0														
23:59,6,0														

# 6. Schedule Settings

Weekly (5 types), annual (5 types), and current day scheduling are available. Schedules can be set for each group, each block, or all groups.

## Schedule setting example

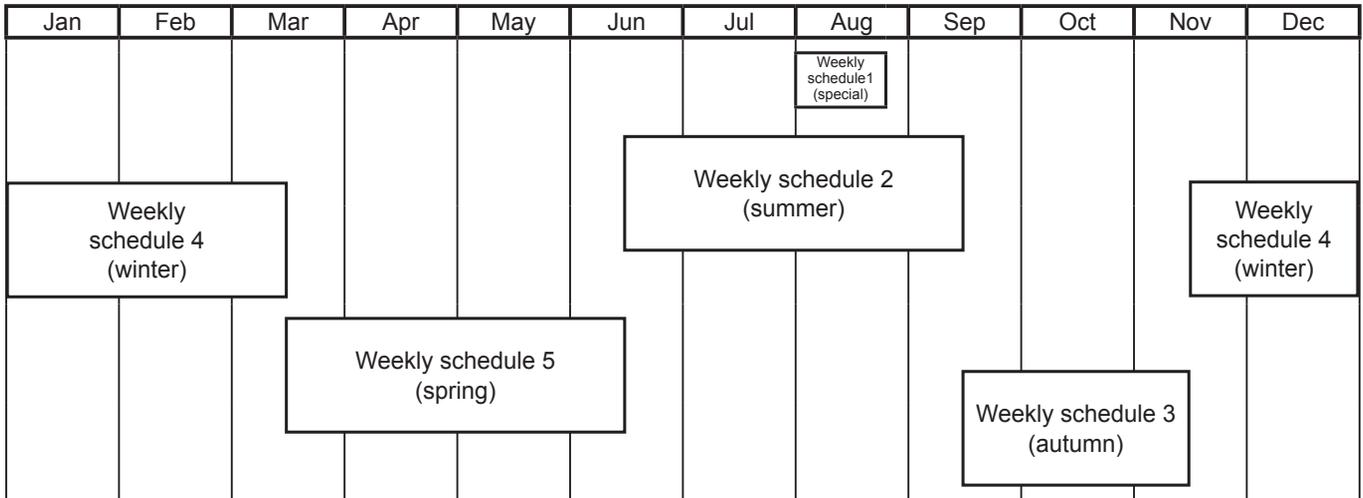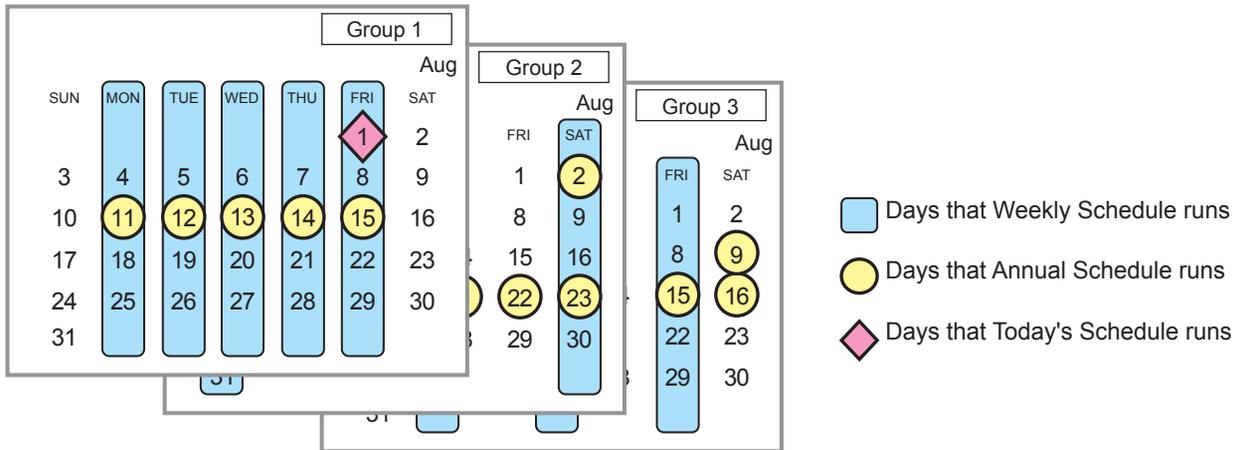


Note: The figure above shows the setting example of weekly schedules where the date period for each Weekly Schedule is set to the followings.

- Weekly Schedule 1: Aug 1 - Aug 20
- Weekly Schedule 2: Jun 16 - Sep 15
- Weekly Schedule 3: Sep 16 - Nov 15
- Weekly Schedule 4: Nov 16 - Mar 15
- Weekly Schedule 5: Mar 16 - Jun 15

Note: When any of the Weekly Schedules 1, 2, 3, 4, and 5 overlap, the schedule with the lower number takes priority. For example, Weekly Schedule 1 takes precedence over Weekly Schedule 2.

Note: When the schedules overlap, schedule with the highest priority will run as shown below.

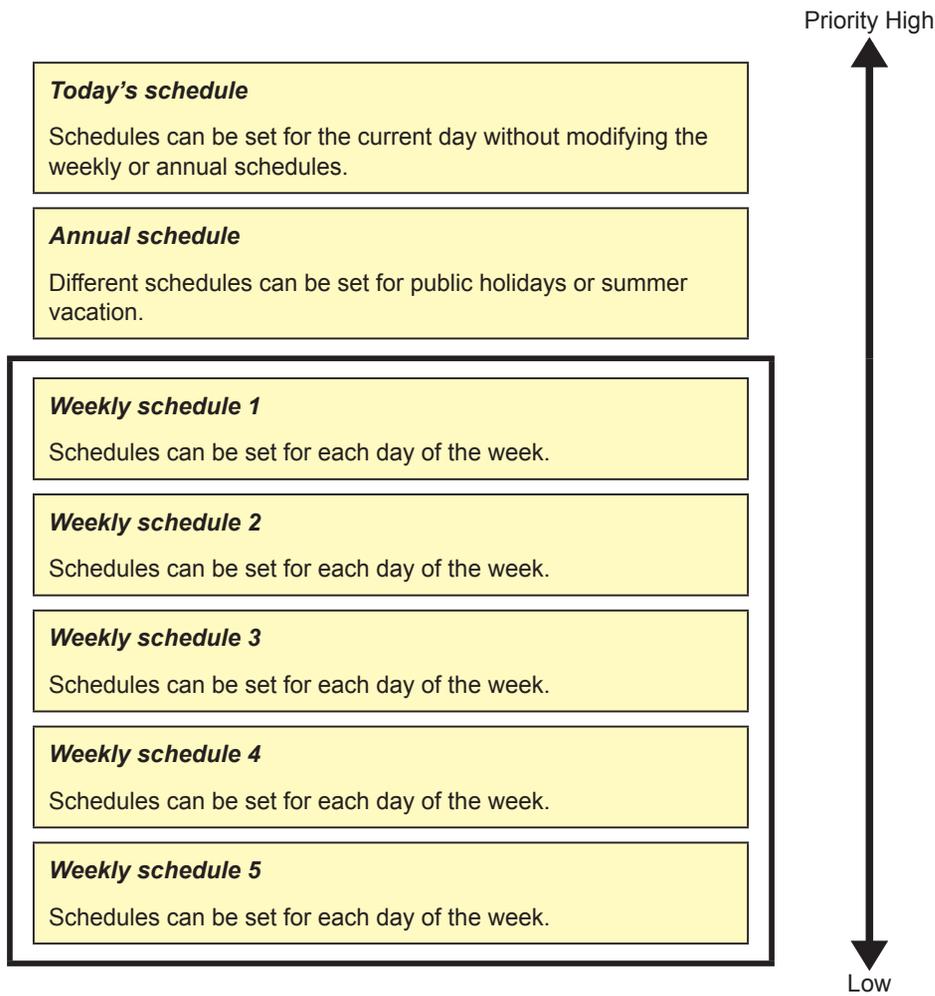

## 6-1. Weekly Schedule

Click [Schedule Settings] in the menu bar, and then click [Weekly 1], [Weekly 2], [Weekly 3], [Weekly 4], or [Weekly 5] to access the Weekly Schedule settings screen.

On the Weekly Schedule settings screen, schedules can be set for each day of the week.

Note: When today's schedule and weekly schedule are set for the same day, today's schedule settings take precedence over weekly schedule settings.

Note: Set the [Schedule] setting on the operation settings screen to [Available] to enable the scheduled events.

Note: If the [Schedule: Season setting] setting is set to [Not Available], only the [Weekly 1] setting is enabled and the scheduled events for [Weekly 2] through [Weekly 5] will not be performed. The [Schedule: Season setting] setting can be set on the Basic System settings screen, accessible via the Web Browser for Initial Settings.

**Seasonal settings**  
Set the period in which the weekly schedule will be effective.

**Setting Range**  
Select a target to which the weekly schedule will be applied.

**Block Name**

**Group Name**

**Group Number**

**Copy (Group)/Paste**  
Click to copy or paste a schedule among groups.

**Undo**  
Click to undo changes.

**Day of the week selection**

**Air-conditioners/HWHP**

**Copy (Day of the week)/Paste**  
Click to copy or paste a schedule among the days of the week.

**Edit**  
Click to display a schedule settings screen.

**Delete**  
Click to delete a schedule.

**Contents of Schedule**

**Save Settings**  
Click to save the settings.

### (1) Selecting a target to which the schedule will be applied

#### (1-1) Selecting an equipment type

In the "Air-conditioners/HWHP" section, select [HWHP] to set the schedule for HWHP (CAHV, CRHV) units, or select [Air-conditioners] to set the schedule for other equipment.

#### (1-2) Selecting a group as a target

Select [Group] in the Setting Range section.

Select the name of the block that the group belongs to and either the group name or the group number, OR just select the group name or the group number.

The contents of the schedule for the group will appear in the Contents of Schedule section, if any.

Note: Only one group can be selected. To copy the existing schedule settings of a group to the settings for another group, select the number of the group whose schedule settings are to be copied, click [Copy (Group)], select the number of the group to which the copied schedule settings are to be pasted, and click [Paste].

**Setting Range**

Group  Block  All Groups

**Setting Object**

Block Name  
Lobby (1F)

Group Name  
Lobby(South)

Group Number


Copy (Group)  Paste

1	2	3	4	5	6	7	8	9	10
11	12	13	14	15	16	17	18	19	20
21	22	23	24	25	26	27	28	29	30
31	32	33	34	35	36	37	38	39	40


**(1-3) Selecting a block as a target**

Select [Block] in the Setting Range section.

Select a block name, or select one of the group numbers in the block to display the block name automatically. (If the selected group does not belong to a block, the block name will not be displayed automatically.)




The Setting Range dialog box has a title bar 'Setting Range' and three radio buttons: 'Group', 'Block' (which is selected), and 'All Groups'.

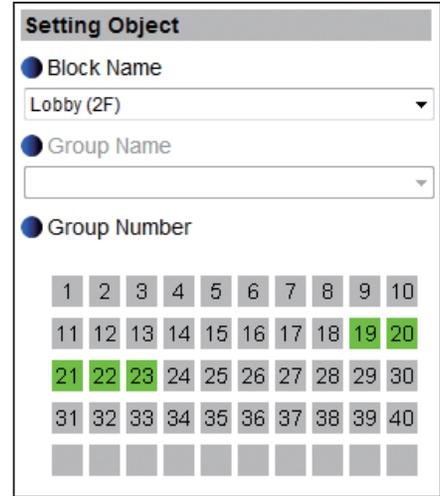

The Setting Object dialog box has a title bar 'Setting Object' and three radio buttons: 'Block Name', 'Group Name', and 'Group Number' (which is selected). Under 'Block Name' is a dropdown menu showing 'Lobby (2F)'. Under 'Group Name' is an empty dropdown menu. Under 'Group Number' is a 4x10 grid of numbers from 1 to 40. The numbers 19 and 20 are highlighted in green.

If different equipment types exist together in the same block, a screen to select an equipment type will appear. Click one of the equipment types to set the schedule.

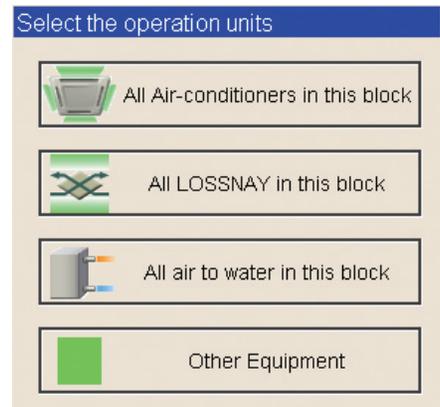

The 'Select the operation units' dialog box has a blue title bar and four buttons with icons: 'All Air-conditioners in this block', 'All LOSSNAY in this block', 'All air to water in this block', and 'Other Equipment'.


A Schedule Settings screen will appear. To create a schedule for the given block from scratch, click the radio button next to [New settings] and click [OK]. To create a schedule based on the existing setting of another group, click the radio button next to [Based on the following group settings], select the name of the group whose schedule is to be based on, and click [OK]. The contents of the schedule that have been set for the selected group will appear in the Contents of Schedule section.



The Schedule Settings dialog box has a blue title bar and two radio buttons: 'New settings' and 'Based on the following group settings' (which is selected). Below the radio buttons is a dropdown menu showing 'Tenant 1'. At the bottom are 'Cancel' and 'OK' buttons.

**(1-4) Selecting all groups as a target**

Select [All Groups] in the Setting Range section.



If different equipment types exist together in the same system, a screen to select an equipment type will appear.

Click one of the equipment types to set the schedule.



A Schedule Settings screen will appear.

To create a schedule for the given groups from scratch, click the radio button next to [New settings] and click [OK].

To create a schedule based on the existing setting of another group, click the radio button next to [Based on the following group settings], select the name of the group whose schedule is to be based on, and click [OK]. The contents of the schedule that have been set for the selected group will appear in the Contents of Schedule section.



**(2) Setting the date periods**


Click [Edit] in the Seasonal settings section.

Enter the date periods in which each weekly schedule will be effective.

Check the checkboxes on the left side to enable each weekly schedule.

Note: When any of the Weekly Schedules 1, 2, 3, 4, and 5 overlap, the schedule with the lower number takes priority. For example, Weekly Schedule 1 takes precedence over Weekly Schedule 5.

Note: The date period over the next year (such as 11/01 - 03/31) can be set.

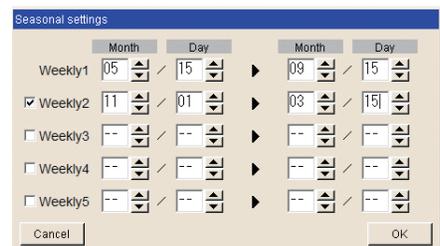


**(3) Selecting a day of the week**

In the Contents of Weekly Schedule section, select a day to set the schedule.



#### (4) Setting the contents of the schedule

Click [Edit] in the Contents of Schedule section to display the schedule settings screen.

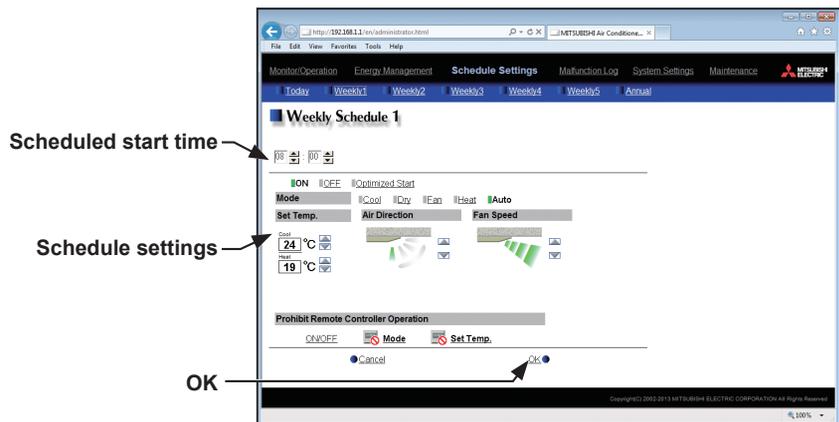

Set the start time to apply to the schedule, set the operations to be scheduled, and then press [OK].  
The operations that can be scheduled for air conditioning unit groups are as follows: ON/OFF/Optimized Start, Mode, Set Temp, Air Direction, Fan Speed, and Prohibit Remote Controller Operation.  
Up to 24 events can be scheduled per day.

Note: The operation items that will appear on the screen vary, depending on the group type.

Note: [Optimized Start] can be selected only for the air conditioning unit groups.

Note: If [Optimized Start] is selected, the operation mode and the set temperature need to be set as well. The Optimized Start function will start the units 5 to 60 minutes prior to the scheduled start time to reach the set temperature at the scheduled start time, based on the operation data in the past. (When the units start the first time after a power reset, the units will start operation 30 minutes before the scheduled start time.)

If the room temperature is measured by the return air temperature sensor on the air conditioning unit, the measured value may not be an accurate representation of the temperature in the room, especially when the air conditioning unit is stopped and the room air is stagnant. When this is the case, use an external temperature sensor (PAC-SE40TSA) or remote controller sensor to measure the room temperature.

Note: If [Optimized Start] is selected and the [Prohibit Remote Controller Operation] setting is set to Prohibit or Permit at the same time, the operations from the remote controllers will be prohibited or permitted at the scheduled start time.

Note: When setting a schedule for a block or all groups, all operation modes are available for selection, but the available operation modes depend on the unit model. The units will not operate in the selected mode not supported by the units.

Note: For LOSSNAY unit groups, the item [Set Temp.] or [Air Direction] will not appear, and only ON/OFF setting under the Prohibit Remote Controller Operation can be made.

Note: For general equipment groups, only the operation ON/OFF settings can be made.


## (5) Copying a schedule

To copy the schedule settings of a day to the schedule settings for another day of the week, select the day whose schedule settings are to be copied, click [Copy (Day of the week)], select the day to which the copied schedule settings are to be pasted, and click [Paste]. The rectangular icon next to the selected button will appear in yellow-green.

Note: Schedules of a group cannot be copied to a different type of group. For example, the schedules of an air conditioning unit group cannot be copied to the schedules for a LOSSNAY unit group.


Note: The operation mode and set temperature may not be copied because the available operation modes or operable set temperature range differ among the units.

Copy (Day of the week)/Paste

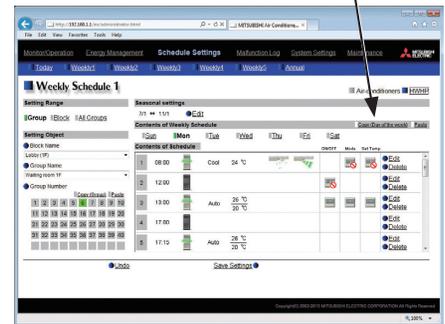

## (6) Saving the schedules

To undo the changes made, click [Undo] before saving the schedules. After completing the settings, click [Save Settings] to save the schedules.

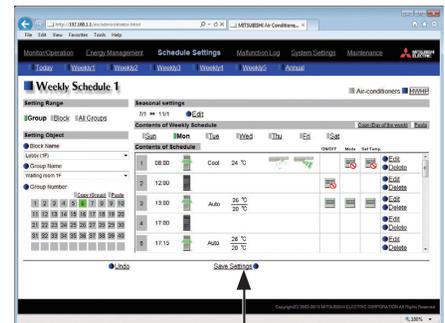

Save Settings

## 6-2. Annual Schedule

Click [Schedule Settings] in the menu bar, and then click [Annual Schedule] to access the Annual Schedule settings screen.

On the Annual Schedule settings screen, schedules can be set for public holidays or summer vacation.

Up to five operation patterns (Pattern 1 through 5) can be set for the 24 months including the current month, and total of 50 days can be allocated to the patterns.

Note: When today's schedule and annual schedule are set for the same day, today's schedule settings take precedence over annual schedule settings.

Note: Set the [Schedule] setting on the operation settings screen to [Available] to enable the scheduled events.

The screenshot shows the 'Annual Schedule' configuration interface. On the left, there are sections for 'Setting Range' (with a calendar grid for selecting days), 'Setting Object' (for Block Name and Group Name), and 'Group Number' (with a grid for selecting groups). The main area displays 'Contents of Annual Schedule' with a list of patterns (Pattern 1 to 5) and their details, including time slots and modes. A 'Schedule Pattern Settings' calendar is also visible. At the bottom, there are 'Undo' and 'Save Settings' buttons. Arrows point from descriptive text labels to these specific UI elements.

**Setting Range**  
Select a target to which the annual schedule will be applied.

**Block Name**

**Group Name**

**Group Number**

**Copy (Group)/Paste**  
Click to copy or paste a schedule among groups.

**Undo**  
Click to undo changes.

**Schedule pattern selection**

**Contents of Schedule**

**Air Conditioners/HWHP**

**Copy (Pattern)/Paste**  
Click to copy or paste a schedule among the patterns.

**Edit**  
Click to display a schedule settings screen.

**Delete**  
Click to delete a schedule.

**Calendar**

**Save Settings**  
Click to save the settings.

### (1) Selecting a target to which the schedule will be applied

In the Setting Range and Setting Object sections, select the target to which the schedule will be applied, referring to section 6-1.


### (2) Selecting a schedule pattern

In the Contents of Annual Schedule section, select a schedule pattern to set the schedule.



### (3) Setting the contents of the schedule

Click [Edit] in the Contents of Schedule section to display the schedule settings screen.

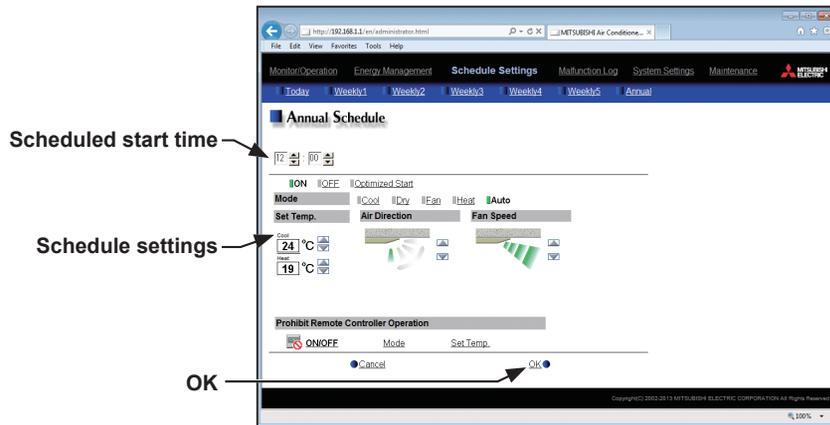

Set the start time to apply to the schedule, set the operations to be scheduled, and then press [OK]. The operations that can be scheduled for air conditioning unit groups are as follows: ON/OFF/Optimized Start, Mode, Set Temp, Air Direction, Fan Speed, and Prohibit Remote Controller Operation.

Note: The operation items that will appear on the screen vary, depending on the group type.

Note: [Optimized Start] can be selected only for the air conditioning unit groups.

Note: If [Optimized Start] is selected, the operation mode and the set temperature need to be set as well. The Optimized Start function will start the units 5 to 60 minutes prior to the scheduled start time to reach the set temperature at the scheduled start time, based on the operation data in the past. (When the units start the first time after a power reset, the units will start operation 30 minutes before the scheduled start time.)

If the room temperature is measured by the return air temperature sensor on the air conditioning unit, the measured value may not be an accurate representation of the temperature in the room, especially when the air conditioning unit is stopped and the room air is stagnant. When this is the case, use an external temperature sensor (PAC-SE40TSA) or remote controller sensor to measure the room temperature.

Note: If [Optimized Start] is selected and the [Prohibit Remote Controller Operation] setting is set to Prohibit or Permit at the same time, the operations from the remote controllers will be prohibited or permitted at the scheduled start time.

Note: When setting a schedule for a block or all groups, all operation modes are available for selection, but the available operation modes depend on the unit model. The units will not operate in the selected mode not supported by the units.

Note: For LOSSNAY unit groups, the item [Set Temp.] or [Air Direction] will not appear, and only ON/OFF setting under the Prohibit Remote Controller Operation can be made.


Note: For general equipment groups, only the operation ON/OFF settings can be made.

### (4) Assigning schedule patterns to special dates

Each schedule pattern can be assigned to the specified dates.

Click a pattern from Pattern 1 through 5, and then select the days in the calendar by clicking on the rectangles corresponding to the days. When selected, the rectangles will appear with the number of the pattern that has been assigned.

To cancel the pattern assignment, select [Pattern Cancel], and then click on the rectangle corresponding to the day.

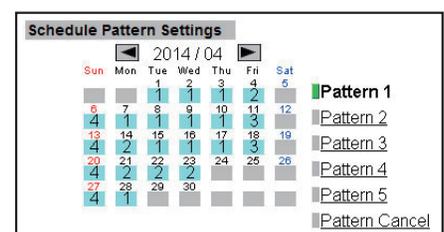


## (5) Copying a schedule

To copy the schedule settings of a pattern to the schedule settings for another pattern, select the pattern whose schedule settings are to be copied, click [Copy (Pattern)], select the pattern to which the copied schedule settings are to be pasted, and click [Paste]. The rectangular icon next to the selected button will appear in yellow-green.

Note: Schedules of a group cannot be copied to a different type of group. For example, the schedules of an air conditioning unit group cannot be copied to the schedules for a LOSSNAY unit group.


Note: The operation mode and set temperature may not be copied because the available operation modes or operable set temperature range differ among the units.

Copy (Pattern)/Paste

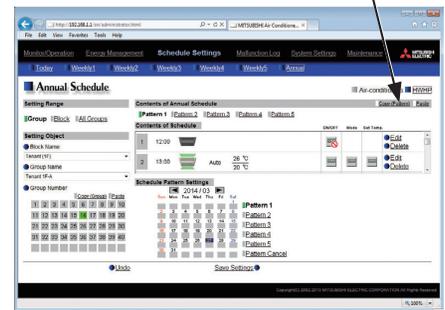

## (6) Saving the schedules

To undo the changes made, click [Undo] before saving the schedules. After completing the settings, click [Save Settings] to save the schedules. The settings of the days that have passed will be deleted automatically.

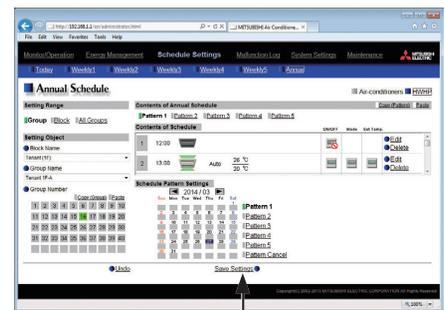

Save Settings


### 6-3. Today's Schedule

Click [Schedule Settings] in the menu bar, and then click [Today's Schedule] to access the Today's Schedule settings screen.

On the Today's Schedule settings screen, schedules can be set for the current day without modifying the weekly or annual schedules.

Note: Set the [Schedule] setting on the operation settings screen to [Available] to enable the scheduled events.

Note: Be sure to set the contents of schedule in a way that will not impact on the next day's operation. For example, if Prohibit setting of remote controller operation is made for any time such as 17:00, Permit setting needs to be made for any time before the date changes such as 23:59.

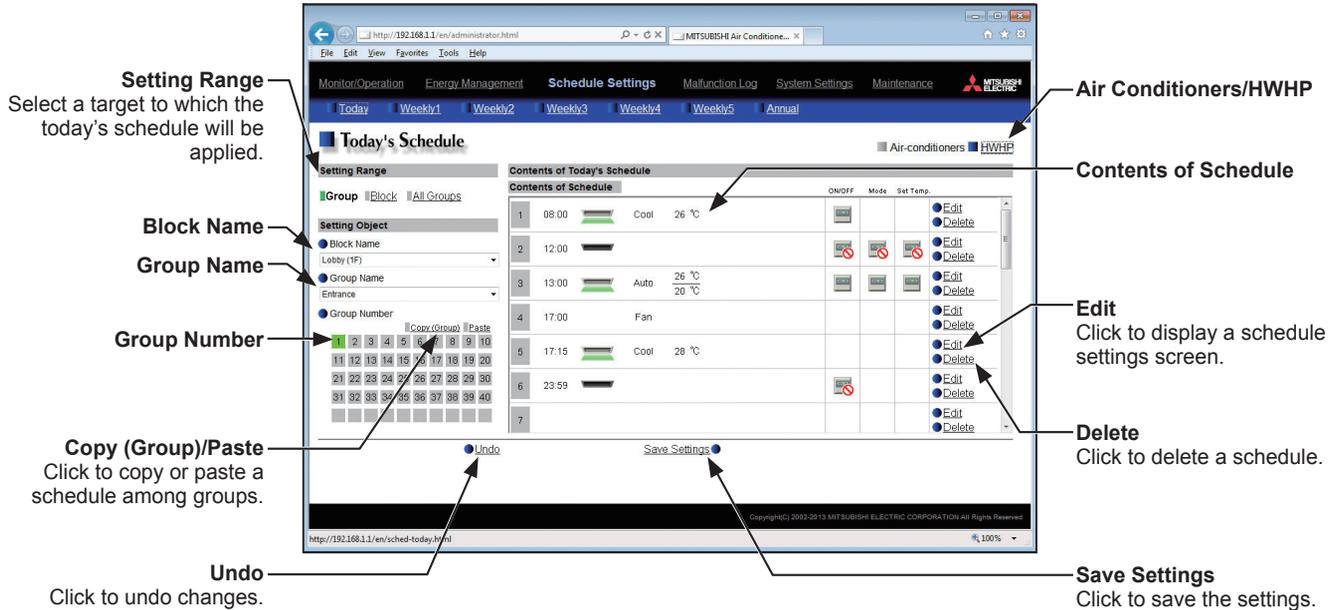


#### (1) Selecting a target to which the schedule will be applied

In the Setting Range and Setting Object sections, select the target to which the schedule will be applied, referring to section 6-1.

#### (2) Setting the contents of the schedule

Click [Edit] in the Contents of Schedule section to display the schedule settings screen.

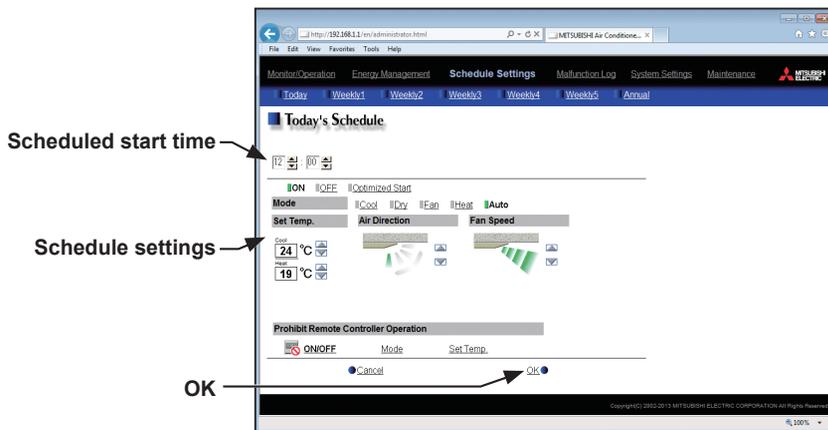

Set the start time to apply to the schedule, set the operations to be scheduled, and then press [OK]. The operations that can be scheduled for air conditioning unit groups are as follows: ON/OFF/Optimized Start, Mode, Set Temp, Air Direction, Fan Speed, and Prohibit Remote Controller Operation.

Up to 24 events can be scheduled per day.

Note: The operation items that will appear on the screen vary, depending on the group type.

Note: [Optimized Start] can be selected only for the air conditioning unit groups.

Note: If [Optimized Start] is selected, the operation mode and the set temperature need to be set as well. The Optimized Start





# 7. Malfunction Log

## 7-1. Unit Error/Communication Error

Click [Malfunction Log] in the menu bar, and then click [Unit Error] to display the last 64 unit errors, or click [Communication Error] to display the last 64 M-NET communication errors.

Note: If there is no error occurred, no error log will appear.

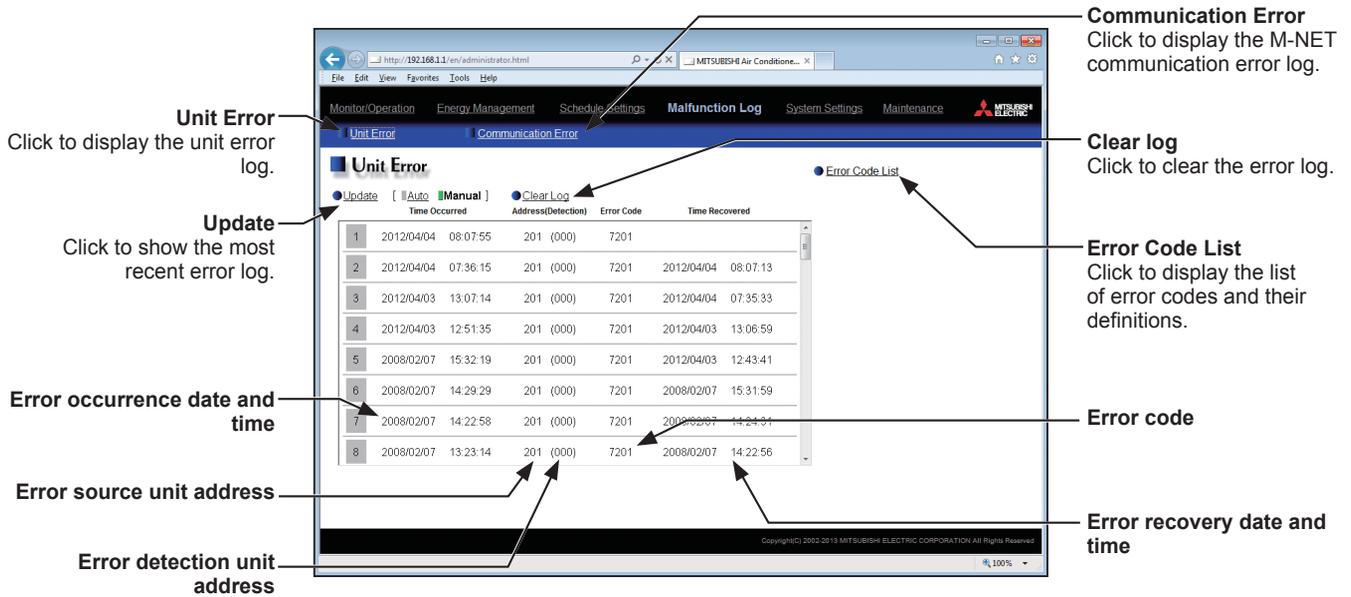

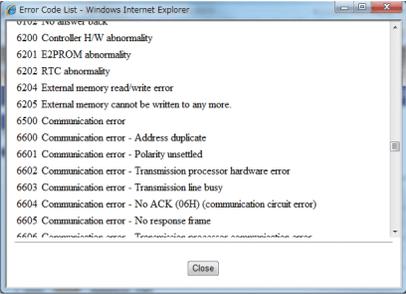Item	Description
Unit Error	Click to display the unit error log. Note: The latest 64 unit errors will appear on each AE-200/AE-50/EW-50 Web browser.
Communication Error	Click to display the M-NET communication error log. Note: The latest 64 unit errors will appear on each AE-200/AE-50/EW-50 Web browser.
Update	Click to show the most recent error log. When [Auto] is selected, the error log is updated automatically every minute.
Clear Log	Click to clear the error log.
Error Code List	Click to display the list of error codes and their definitions. 
Error occurrence date and time	The date and time when the error occurred will appear.
Error source unit address	The address of the unit in error will appear.
Error detection unit address	The address of the unit that detected the error will appear.
Error code	The error code that corresponds to the error will appear.
Error recovery date and time	The date and time when the error was resolved will appear.

# 8. System Settings

## 8-1. Date/Time Settings

Click [System Settings] in the menu bar, and then click [Date/Time Settings] to access the date and time settings screen.

Set the current date and time, and then click [Save Settings] to save the settings.

Note: The date and time settings may not be accessible if logged in as a building manager.

Note: The date and time settings made on this screen will be reflected on all the units in the M-NET system, all connected AE-50/EW-50 units, and the AE-200 units whose [Time Master] setting is set to [Sub].

Note: The date and time cannot be set on this screen if the [Time Master] setting is set to [Sub].

Note: The daylight saving time setting is required only on the AE-200/EW-50.

Note: If the current time is moved forward while the scheduled operation is performed, the operation that was scheduled to take place during the time that was skipped will not be performed.

Note: Changing the date and/or time when the charging function is in use can affect the calculation of the charges.

Note: When AE-50 controller, DIDO controller (PAC-YG66DCA), AI controller (PAC-YG63MCA), or PI controller (PAC-YG60MCA) is added to the system, set the current date and time on this screen to synchronize the date and time on the added controller.

Note: Although date and time settings can be made on each AE-50/EW-50, the date and time synchronization from AE-200 is performed once a day. Make the date and time settings on the AE-50/EW-50 only after the AE-50/EW-50 is replaced.

The screenshot shows the 'Date/Time Settings' page in a web browser. The page has a navigation bar with 'System Settings' selected. Below the navigation bar, there are tabs for 'Date/Time Settings' and 'User Registration'. The main content area is titled 'Date/Time Settings' and contains several input fields: 'Year' (2012), 'Month' (01), 'Day' (05), 'Hour' (14), 'Minute' (10), and 'Second' (00). There is a checkbox for 'Automatically adjust clock for daylight saving changes' which is checked, and a dropdown menu for 'UK'. Below these fields is a note: 'Note: If you are using the charge-function, changing the current date may affect the charges for some air-conditioners.' At the bottom of the form are two buttons: 'Refresh' and 'Save Settings'. Callouts with arrows point to these elements: 'Daylight saving time setting' points to the checkbox, 'Refresh' points to the 'Refresh' button, 'Current date and time' points to the date and time input fields, and 'Save Settings' points to the 'Save Settings' button.

- (1) Enter the current date and time.
- (2) To adjust the daylight saving time automatically, check the [Automatically adjust clock for daylight saving changes] checkbox, and select the applicable country in the pulldown menu.

If the applicable country is not in the pulldown menu, select [Custom Settings] instead. A [Custom Settings] button will appear on the right of the pulldown menu.

Click the [Custom Settings] button to open the Custom Settings screen, and configure the daylight saving time setting.

The 'Custom Settings' dialog box has a title bar 'Custom Settings'. It contains three main sections: 'Day', 'Month', and 'Time'. The 'Day' section has two dropdown menus with values '01' and '04'. The 'Month' section has two dropdown menus with values '02' and '00'. The 'Time' section has two dropdown menus with values '03' and '00', followed by a right-pointing arrow and another two dropdown menus with values '02' and '00'. At the bottom left is a 'Cancel' button and at the bottom right is an 'OK' button.

Custom Settings screen

## 8-2. User Registration

On the User Registration screen, the building manager's user name and password can be changed. If the "Personal Web" license is registered, up to 50 general users can be registered, and the groups that each general user is granted access to can be determined.

Click [System Settings] in the menu bar, and then click [User Registration] to access the User Registration screen.

Note: The building manager's user name and password for Web Browser for System Maintenance Engineer is the same as those for Web Browser for Initial Settings.

Note: The user registration is required for each AE-200/AE-50/EW-50.

**Building manager's user name and accessible unit group icons**

**General user name and accessible unit group icons**

**Undo**  
Click to undo changes.

**Edit**  
Click to edit the user information.

**Delete**  
Click to delete the user information.

**Save Settings**  
Click to save the settings.



\* To show the group name, move the cursor to the group icon.

- To edit the user settings, click the [Edit] button in the row of the user to be changed. To change the user name or password, type new information in the [User Name], [New Password], and [Retype Password] fields. Check the checkboxes next to the unit groups to be made accessible for each general user. Each general user will be able to monitor and operate the unit groups that are specified on this screen. Click [OK].

Note: User names and passwords are case-sensitive.

Note: The accessible unit groups for building managers cannot be specified because building managers can monitor and operate all unit groups.

- To undo changes made, click [Undo] before saving the settings. After completing the settings, click [Save Settings] to save the settings. Note that the changes will NOT be saved unless the [Save Settings] button is pressed.

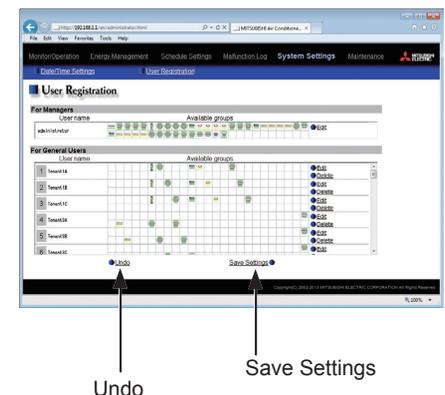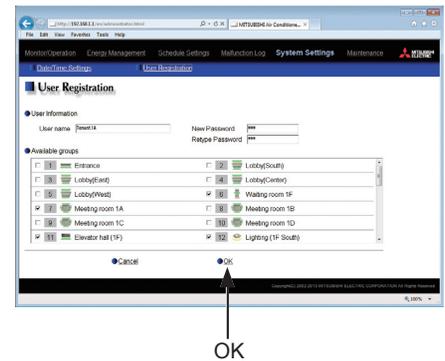

# 9. Maintenance

## 9-1. Send Mail Log

Click [Maintenance] in the menu bar, and then click [Send Mail Log] to access the Send Mail Log screen. A list of error notification e-mail that have been sent will appear.

Error notification e-mail function is the function to send the error information to the specified e-mail addresses. To use this function, e-mail settings must be configured on the Web Browser for Initial Settings.

**Update**  
Click to show the most recent log.

**Clear Log**  
Click to clear the e-mail log.

**Error Code**

**Error Status**

**Sent Mail Status**

**Sent date and time**

**Error source unit address**

	Date/Time	Unit Address	Error Code	Error Status	Sent Mail Status
1	01/23/2013 09:39:17	246	6607	Occurred	Failed
2	01/23/2013 09:39:17	245	6607	Occurred	Failed
3	01/23/2013 09:39:17	000	6600	Occurred	Failed
4	01/23/2013 09:39:17	000	6601	Occurred	Failed
5	01/23/2013 10:45:20	201	7201	Occurred	Sent
6	01/23/2013 10:45:26	201	7201	Resolved	Sent
7	01/23/2013 10:45:30	201	7201	Occurred	Sent
8	01/23/2013 10:45:37	201	7201	Resolved	Sent

Item	Description
Update	Click to show the most recent e-mail log. When [Auto] is selected, the e-mail log is updated automatically every minute.
Clear Log	Click to clear the e-mail log.
Sent date and time	The date and time when the e-mail was sent will appear.
Error source unit address	The address of the unit in error will appear. Note: When an error occurs on a general equipment connected to PLC Software for General Equipment, PLC number* (1 to 20) and connection number of the general equipment (1 to 32) will appear. (Example:PLC1-32) * PLC number indicates the row number on the [PLC Connection] screen, accessible from the [E-mail] screen on the Web Browser for Initial Settings. Note: When an error occurs on the general equipment connected via DIDO controller, M-NET address of the DIDO controller will appear. (The recipients will know that an error has occurred on one of the general equipment that is connected to the DIDO controller.)
Error Code	The error code that corresponds to the error will appear.
Error Status	Occurred: The e-mail was sent when an error occurred. Resolved: The e-mail was sent when the error was resolved.
Sent Mail Status	Sent: The e-mail was successfully sent. Failed: The e-mail failed to be sent.

## 9-2. Gas Amount Check

On the Gas Amount Check screen, operators can check the outdoor units for proper gas refrigerant charge. Click [Maintenance] in the menu bar, and then click [Gas Amount Check] to access the Gas Amount Check screen.

Note: Only the outdoor units that support the Gas Amount Check function will appear on the screen.

Note: During the Gas Amount Check, outdoor units will operate in a specific mode. The check will take between 30 minutes and 1 hour.

The screenshot shows a web browser window displaying the 'Gas Amount Check' screen. The interface includes a navigation menu at the top with options like 'Monitor/Operation', 'Energy Management', 'Schedule Settings', 'Malfunction Log', 'System Settings', and 'Maintenance'. Below the menu, there are several buttons: 'Send Mail Log', 'Gas Amount Check', 'Outdoor unit status', 'Free Contact List', and 'CSV output'. The main content area is titled 'Gas Amount Check' and features a 'Check all outdoor units' button. Below this, there is a table with columns for 'Address', 'Check Result', and 'Log'. The table lists two outdoor units: one with address 51 (Normal) and one with address 76 (Lo). Each unit has a 'Check Start' button. The 'Log' column shows a list of check results with dates and times. Callouts point to various elements: 'Check all outdoor units' (button), 'M-NET address of the outdoor unit' (address 51), 'Check Result' (Normal/Lo), 'Check Start' (button), and 'Log' (table).

**Check all outdoor units**  
Click to start checking the gas refrigerant charge on all outdoor units.

**M-NET address of the outdoor unit**

**Check Result**  
Normal: Gas refrigerant charge is appropriate.  
Lo: Gas refrigerant charge is low.

**Check Start**  
Click to start checking the gas refrigerant charge for a given outdoor unit.

**Log**  
Up to the last 10 check logs will appear. The date and time when each check ended and its check result will appear.

Address	Check Result	Log
51	Normal	2013/04/15 17:16 Normal 2013/03/15 19:21 Normal 2013/02/16 16:38 Normal 2013/01/15 20:36 Normal 2013/12/15 16:39 Normal 2013/11/15 17:26 Normal 2013/10/15 13:16 Normal 2013/09/16 19:06 Normal 2013/08/15 17:37 Normal 2013/07/16 16:32 Normal
76	Lo	2013/04/15 17:16 Lo 2013/03/15 19:22 Normal 2013/02/16 16:38 Normal 2013/01/15 20:36 Normal

(1) To start a check for all outdoor units, click [Check all outdoor units]. To start a check for a given outdoor unit, click [Check Start] in the row of the outdoor unit to be checked. The [Check Start] button will change to [Check Cancel] button when clicked. To stop the check, click [Check Cancel].

(2) The check will take between 30 minutes and 1 hour. Upon completion, check result “Normal” or “Lo” will appear. “Normal” indicates that the gas refrigerant charge is appropriate, and “Lo” indicates that the gas refrigerant charge is low.


Note: The screen can be closed before a check is completed. The check results will be displayed next time this screen is opened.

### 9-3. Outdoor unit status

On the Outdoor Unit Status screen, operators can check the capacity value, high pressure, and low pressure of each outdoor unit.

Click [Maintenance] in the menu bar, and then click [Outdoor unit status] to access the Outdoor Unit Status screen.

Note: The outdoor unit status may not appear if the AE-200/AE-50/EW-50 was started up while the outdoor unit was powered off. If this is the case, restart the AE-200/AE-50/EW-50.

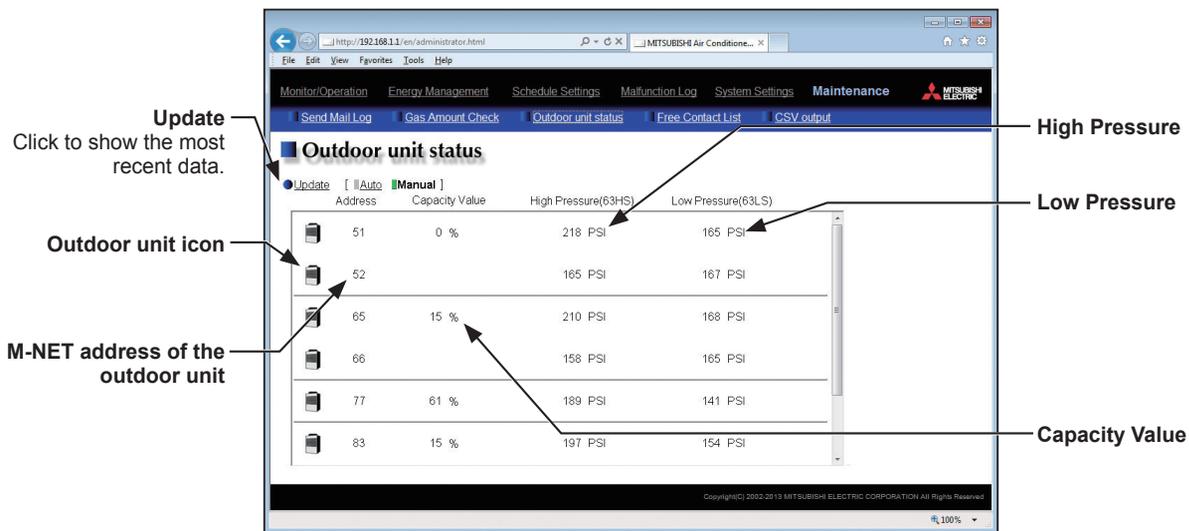

Item	Description
Update	Click to show the most recent data. When [Auto] is selected, the data is updated automatically every minute.
Capacity Value	The capacity value of the compressor on a given outdoor unit will appear. Note: The capacity value of a sub outdoor unit will not appear.
High Pressure	Refrigerant discharge pressure of the compressor on a given outdoor unit will appear.
Low Pressure	Refrigerant suction pressure of the compressor on a given outdoor unit will appear.
Outdoor unit icon	 : Normal  : Communication error or unit error

\* When a communication error occurs, "--" will appear in the Capacity Value, High Pressure, and Low Pressure value fields.


\* If the outdoor unit is a PUMY model of City Multi S-series, "--" will appear in the Capacity Value, High Pressure, and Low Pressure value fields.

## 9-4. Free Contact List

This chapter explains how to check the input/output status of the free contacts on the indoor units.

Click [Maintenance] in the menu bar, and then click [Free Contact List] to access the Free Contact List screen.

Note: The free contact settings must be made on the indoor unit.

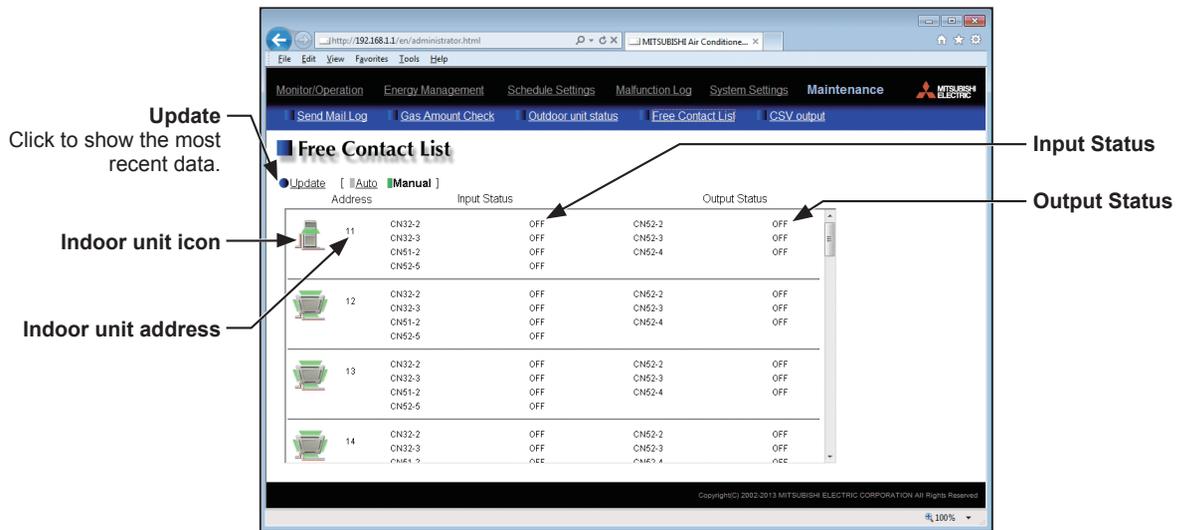

Item	Description
Update	Click to show the most recent data. When [Auto] is selected, the data is updated automatically every minute.
Input Status	The input status (ON or OFF) of the free contacts CN32-2, CN32-3, CN51-2, and CN52-5 on the indoor unit will appear.
Output Status	The output status (ON or OFF) of the free contacts CN52-2, CN52-3, and CN52-4 on the indoor unit will appear.
Indoor unit icon	 : Normal  : Communication error or unit error


## 9-5. CSV output

The operation data, such as apportioning parameters, power consumption, and energy management data, can be output in a CSV format from the CSV Output screen.

Click [Maintenance] in the menu bar, and then click [CSV output] to access the CSV Output screen.

Note: A separate license may be required to use the CSV output function. Only valid buttons can be selected on the CSV File Download Tool screen.

Note: Use Excel 2007 or later if the output CSV file will need to be read to a PC. If Excel 2003 or earlier is used, the file cannot be read.

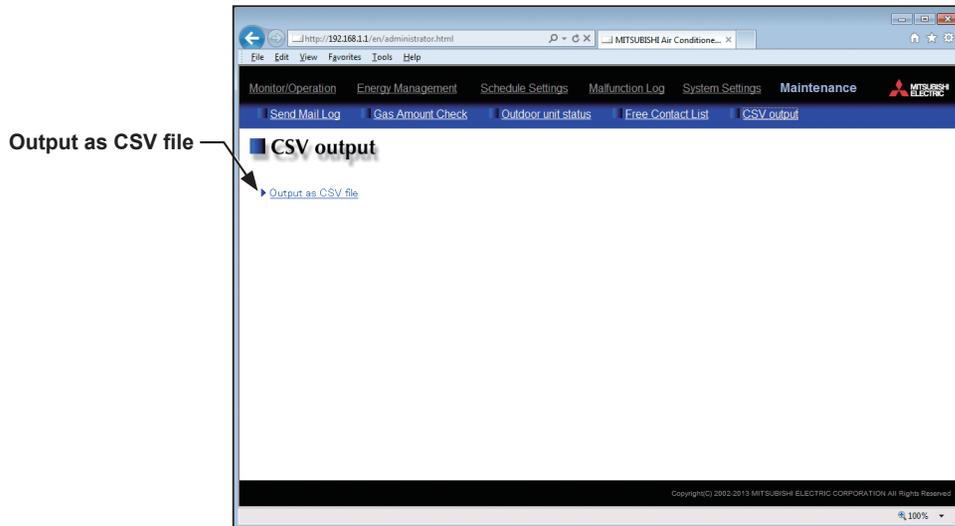


(1) Click [Output as CSV file] to display the Window's standard file download dialog.

(2) Click [Open] to start the CSV File Download Tool.

Note: If the "AECsvdl.jar" file is associated with other applications, the CSV File Download Tool will not start up. Remove the association.

Note: If [Save] is clicked, the "AECsvdl.jar" file will be saved in the specified folder. In this case, double clicking the file will also start the CSV File Download Tool.


### CSV File Download Tool

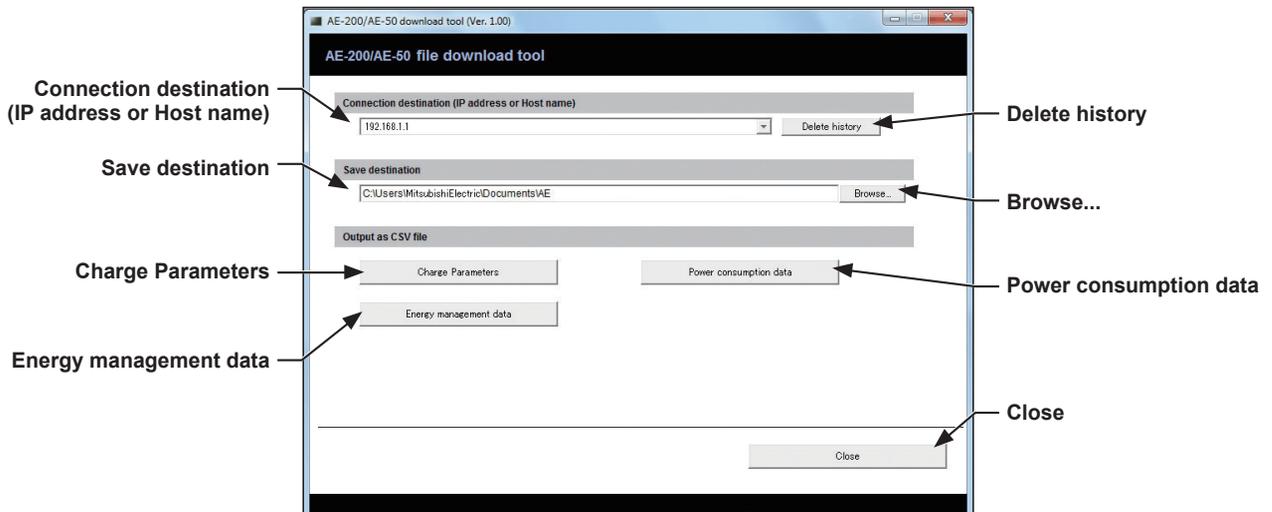

- (3) Specify the connection destination and the save destination, and click [Charge Parameters], [Power consumption data], or [Energy management data], referring to the table below. A login screen will appear. Enter the user name and the password, and click [Login].
- Note: The building manager or maintenance user can login.



- (4) The selected data will be output in a CSV format to the specified save destination. Percentages of process completion will appear.
- Note: Once you have successfully logged in, there is no need to login again every time you download data as long as the CSV File Download Tool remains open.
- Note: It may take a few minutes to complete the download, depending on the data volume.

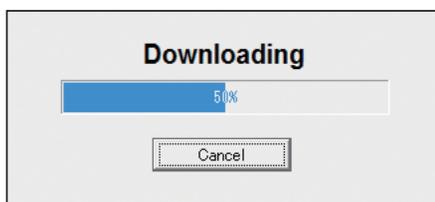

Item	Description
Connection destination	Enter the IP address or host name of the AE-200/AE-50/EW-50 as a destination. The last input value will appear every time the CSV File Download Tool is started up. The last 20 input values will appear in the pulldown menu. Note: If there is no history, "192.168.1.1" will appear.
Delete history	Deletes all history in the pulldown menu.
Save destination	Specify the destination to save the CSV file. Note: The default destination will be "My Documents" folder in the login user folder.
Browse...	Click to display a dialog to select a folder where the CSV file will be saved.

Item	Description																		
Charge Parameters	<p>Click to download a CSV file of the charge parameters.</p> <p>■ <u>File name</u>            “ChargeParameter”_[yyyy]-[mm]-[dd]“A”[Indoor unit address]-[Time period (1–5)].csv            Note: The date will appear in the format that has been set on the Basic System settings screen, accessible via the Web Browser for Initial Settings.            Note: Time periods 1 through 5 can only be set from TG-2000A or Initial Setting Tool. When shipped from the factory, only Time period 1 is settable.</p> <p>■ <u>File output destination</u>            [Save destination][Serial No.]“OperationalData”“ChargeParameters”\[Date]            Note: The date will appear in the format that has been set on the Basic System settings screen, accessible via the Web Browser for Initial Settings.</p> <p>■ <u>File format</u></p> <table border="1" data-bbox="440 675 1398 955"> <thead> <tr> <th>Row</th> <th>Item</th> <th>Format</th> </tr> </thead> <tbody> <tr> <td>1st</td> <td>File Type</td> <td>201</td> </tr> <tr> <td>2nd</td> <td>Data range *1</td> <td>Start date + “-” + End date</td> </tr> <tr> <td>3rd</td> <td>Indoor unit address</td> <td>“Address” + M-NET address</td> </tr> <tr> <td>4th</td> <td>Item</td> <td>“Date,SaveValue,ThermoTime,FanTime,SubHeaterTime”</td> </tr> <tr> <td>5th–66th</td> <td>Data *2*3*4*5</td> <td>Date *1, Capacity-save value (min), Thermo-ON time (min), Fan operation time (min), Sub-heater-ON time (min) *6</td> </tr> </tbody> </table> <p>*1 The date will appear in the format that has been set on the Basic System settings screen, accessible via the Web Browser for Initial Settings.            *2 The separator character and decimal point character selected on the Measurement screen (accessible via the Web Browser for Initial Settings) will be used to the data.            *3 Each value is the cumulative value between the start date and the end date.            *4 The value will not appear if the data does not exist.            *5 Each file contains the data of up to 62 days.            *6 Even if the indoor unit is not equipped with a sub heater, “Sub-heater-ON time” is counted when the sub-heater-ON conditions are met, not when the sub heater actually turns on.</p> <p>■ <u>File sample</u></p> <pre data-bbox="440 1311 1268 1533"> 201 12/19/2014-1/10/2015 Address 31 Date,SaveValue,ThermoTime,FanTime,SubHeaterTime 12/19/2014,1258,0,465,0 12/20/2014,1260,0,468,0 12/21/2014,1262,0,472,0 12/22/2014,1264,0,477,0 12/23/2014,1266,0,490,0 . 01/10/2015,2058,0,1013,0           </pre>	Row	Item	Format	1st	File Type	201	2nd	Data range *1	Start date + “-” + End date	3rd	Indoor unit address	“Address” + M-NET address	4th	Item	“Date,SaveValue,ThermoTime,FanTime,SubHeaterTime”	5th–66th	Data *2*3*4*5	Date *1, Capacity-save value (min), Thermo-ON time (min), Fan operation time (min), Sub-heater-ON time (min) *6
Row	Item	Format																	
1st	File Type	201																	
2nd	Data range *1	Start date + “-” + End date																	
3rd	Indoor unit address	“Address” + M-NET address																	
4th	Item	“Date,SaveValue,ThermoTime,FanTime,SubHeaterTime”																	
5th–66th	Data *2*3*4*5	Date *1, Capacity-save value (min), Thermo-ON time (min), Fan operation time (min), Sub-heater-ON time (min) *6																	

Item	Description																	
Power consumption data	<p>Click to download a CSV file of the power consumption data.</p> <p>■ <u>File name</u></p> <p>&lt;When a PI controller (PAC-YG60MCA) is used&gt;            "ChargeParameter"_[yyyy]-[mm]-[dd]"MCPA"[PI controller address]-            [Time period (1-5)].csv</p> <p>&lt;When a built-in PI controller is used&gt;            "ChargeParameter"_[yyyy]-[mm]-[dd]"MCP"-[Time period (1-5)].csv</p> <p>Note: The date will appear in the format that has been set on the Basic System settings screen, accessible via the Web Browser for Initial Settings.</p> <p>Note: Time periods 1 through 5 can only be set from TG-2000A or Initial Setting Tool. When shipped from the factory, only Time period 1 is settable.</p>																	
	<p>■ <u>File output destination</u></p> <p>[Save destination][Serial No.]\OperationalData\ChargeParameters\[Date]</p> <p>Note: The date will appear in the format that has been set on the Basic System settings screen, accessible via the Web Browser for Initial Settings.</p> <p>■ <u>File format</u></p> <table border="1" data-bbox="440 810 1414 1258"> <thead> <tr> <th>Row</th> <th>Item</th> <th>Format</th> </tr> </thead> <tbody> <tr> <td>1st</td> <td>File Type</td> <td>202</td> </tr> <tr> <td>2nd</td> <td>Data range *1</td> <td>Start date + "-" + End date</td> </tr> <tr> <td>3rd</td> <td>MCP</td> <td>&lt;When a PI controller (PAC-YG60MCA) is used&gt;            "MCP" + M-NET address + "-" + Time period (1-5)             &lt;When a built-in PI controller is used&gt;            "MCP" + "-" + Time period (1-5)</td> </tr> <tr> <td>4th</td> <td>Item</td> <td>"No.,Date,Count value(Ch1),Count value(Ch2),Count value(Ch3),Count value(Ch4)"</td> </tr> <tr> <td>5th-66th</td> <td>Data *2*3*4*5*6</td> <td>&lt;When a PI controller (PAC-YG60MCA) is used&gt;            MCP address + Time period, Date *1, MCP 1, MCP 2, MCP 3, MCP 4             &lt;When a built-in PI controller is used&gt;            Time period, Date *1, MCP 1, MCP 2, MCP 3, MCP 4</td> </tr> </tbody> </table> <p>*1 The date will appear in the format that has been set on the Basic System settings screen, accessible via the Web Browser for Initial Settings.</p> <p>*2 The separator character and decimal point character selected on the Measurement screen (accessible via the Web Browser for Initial Settings) will be used to the data.</p> <p>*3 Each value is the cumulative value between the start date and the end date.</p> <p>*4 Each value is between 0.00 and 999999.99. If the value exceeds the maximum value, it will wrap around to zero.</p> <p>*5 The value will not appear if the data does not exist.</p> <p>*6 Each file contains the data of up to 62 days.</p>	Row	Item	Format	1st	File Type	202	2nd	Data range *1	Start date + "-" + End date	3rd	MCP	<When a PI controller (PAC-YG60MCA) is used> "MCP" + M-NET address + "-" + Time period (1-5)  <When a built-in PI controller is used> "MCP" + "-" + Time period (1-5)	4th	Item	"No.,Date,Count value(Ch1),Count value(Ch2),Count value(Ch3),Count value(Ch4)"	5th-66th	Data *2*3*4*5*6
Row	Item	Format																
1st	File Type	202																
2nd	Data range *1	Start date + "-" + End date																
3rd	MCP	<When a PI controller (PAC-YG60MCA) is used> "MCP" + M-NET address + "-" + Time period (1-5)  <When a built-in PI controller is used> "MCP" + "-" + Time period (1-5)																
4th	Item	"No.,Date,Count value(Ch1),Count value(Ch2),Count value(Ch3),Count value(Ch4)"																
5th-66th	Data *2*3*4*5*6	<When a PI controller (PAC-YG60MCA) is used> MCP address + Time period, Date *1, MCP 1, MCP 2, MCP 3, MCP 4  <When a built-in PI controller is used> Time period, Date *1, MCP 1, MCP 2, MCP 3, MCP 4																
	<p>■ <u>File sample</u></p> <div data-bbox="440 1616 1268 1823" style="border: 1px solid black; padding: 5px;"> <pre> 202 12/19/2013-1/10/2014 MCP 50-1 No.,Date,Count value(Ch1),Count value(Ch2),Count value(Ch3),Count value(Ch4) 501,12/19/2013,190887.43,872411.43,227424.88,55515.50 501,12/20/2013,190899.16,872420.12,227428.63,55526.70 501,12/21/2013,190905.22,872442.23,227435.74,55537.90 501,12/22/2013,190910.38,878449.77,227448.19,55549.84 . 501,01/10/2014,200014.38,87950.36,227925.19,60111.63           </pre> </div>																	

Item	Description														
Energy management data	<p>Click to download a CSV file of the energy management data. The “Select energy management data source” window will pop up. Select a data type and specify the data-acquisition period to acquire the data. Refer to section 9-5-1 “Energy Management Data List” for details about the data that can be output in a CSV format.</p> <div data-bbox="451 351 1372 615" style="text-align: center;"> </div>														
	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;">Data type</td> <td>Select [5-minute intervals], [30-minute intervals], [1-month intervals], [1-day intervals], or [1-year intervals].</td> </tr> <tr> <td>Data-acquisition period</td> <td> <p>Specify the date period to acquire the data.</p> <p>Note: The date will appear in the format that has been set on the Basic System settings screen, accessible via the Web Browser for Initial Settings.</p> <p>Note: The date range that can be specified will vary, depending on the item selected in the [Data type] field.</p> <p>Note: If [1-month intervals] or [1-year intervals] is selected in the [Data type] field, the data-acquisition period cannot be specified.</p> <p>Note: Only the data for the period during which the AE-200/AE-50/EW-50 was powered on will be output. The data for the period during which the AE-200/AE-50/EW-50 was powered off will not be output.</p> </td> </tr> <tr> <td>Acquire data</td> <td>Click to output the CSV file based on the selected criteria.</td> </tr> </table>	Data type	Select [5-minute intervals], [30-minute intervals], [1-month intervals], [1-day intervals], or [1-year intervals].	Data-acquisition period	<p>Specify the date period to acquire the data.</p> <p>Note: The date will appear in the format that has been set on the Basic System settings screen, accessible via the Web Browser for Initial Settings.</p> <p>Note: The date range that can be specified will vary, depending on the item selected in the [Data type] field.</p> <p>Note: If [1-month intervals] or [1-year intervals] is selected in the [Data type] field, the data-acquisition period cannot be specified.</p> <p>Note: Only the data for the period during which the AE-200/AE-50/EW-50 was powered on will be output. The data for the period during which the AE-200/AE-50/EW-50 was powered off will not be output.</p>	Acquire data	Click to output the CSV file based on the selected criteria.								
Data type	Select [5-minute intervals], [30-minute intervals], [1-month intervals], [1-day intervals], or [1-year intervals].														
Data-acquisition period	<p>Specify the date period to acquire the data.</p> <p>Note: The date will appear in the format that has been set on the Basic System settings screen, accessible via the Web Browser for Initial Settings.</p> <p>Note: The date range that can be specified will vary, depending on the item selected in the [Data type] field.</p> <p>Note: If [1-month intervals] or [1-year intervals] is selected in the [Data type] field, the data-acquisition period cannot be specified.</p> <p>Note: Only the data for the period during which the AE-200/AE-50/EW-50 was powered on will be output. The data for the period during which the AE-200/AE-50/EW-50 was powered off will not be output.</p>														
Acquire data	Click to output the CSV file based on the selected criteria.														
	<p>■ <b>File name</b></p> <p>Data type: 5-minute intervals  “EnergyManagement”_“5MIN”_[YYYY]-[MM]-[DD]_[yyyy]-[mm]-[dd].csv</p> <p>Data type: 30-minute intervals  “EnergyManagement”_“30MIN”_[YYYY]-[MM]-[DD]_[yyyy]-[mm]-[dd].csv</p> <p>Data type: 1-day intervals  “EnergyManagement”_“1DAY”_[YYYY]-[MM]-[DD]_[yyyy]-[mm]-[dd].csv</p> <p>Data type: 1-month intervals  “EnergyManagement”_“1MONTH”_[YYYY]-[MM]_[yyyy]-[mm].csv</p> <p>Data type: 1-year intervals  “EnergyManagement”_“1YEAR”_[YYYY]-[yyyy].csv</p> <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <thead> <tr> <th style="width: 50%;">File-name contents</th> <th style="width: 50%;">Format</th> </tr> </thead> <tbody> <tr> <td>[YYYY]</td> <td>Start year</td> </tr> <tr> <td>[MM]</td> <td>Start month</td> </tr> <tr> <td>[DD]</td> <td>Start date</td> </tr> <tr> <td>[yyyy]</td> <td>End year</td> </tr> <tr> <td>[mm]</td> <td>End month</td> </tr> <tr> <td>[dd]</td> <td>End date</td> </tr> </tbody> </table> <p>Note: The date will appear in the format that has been set on the Basic System settings screen, accessible via the Web Browser for Initial Settings.</p>	File-name contents	Format	[YYYY]	Start year	[MM]	Start month	[DD]	Start date	[yyyy]	End year	[mm]	End month	[dd]	End date
File-name contents	Format														
[YYYY]	Start year														
[MM]	Start month														
[DD]	Start date														
[yyyy]	End year														
[mm]	End month														
[dd]	End date														

Item	Description																																
Energy management data	<p>■ <b>File output destination</b></p> <p>[Save destination][Serial No.]\“OperationalData”\“EnergyManagement2”\[Date]</p> <p>Note: The date will appear in the format that has been set on the Basic System settings screen, accessible via the Web Browser for Initial Settings.</p> <p>Note: If the AE-200/AE-50/EW-50 software version is before Ver. 7.2, the file output destination is [Save destination][Serial No.]\“OperationalData”\“EnergyManagement”\[Date].</p> <p>■ <b>File format</b></p> <p>[Data type: 5-minute intervals]</p>																																
	<table border="1"> <thead> <tr> <th data-bbox="440 530 545 562">Row</th> <th data-bbox="545 530 708 562">Item</th> <th data-bbox="708 530 1406 562">Format</th> </tr> </thead> <tbody> <tr> <td data-bbox="440 562 545 599">1st</td> <td data-bbox="545 562 708 599">File Type</td> <td data-bbox="708 562 1406 599">501</td> </tr> <tr> <td data-bbox="440 599 545 635">2nd</td> <td data-bbox="545 599 708 635">Data range *1</td> <td data-bbox="708 599 1406 635">Start date + “-” + End date</td> </tr> <tr> <td data-bbox="440 635 545 828">3rd</td> <td data-bbox="545 635 708 828">Item *2*3*4</td> <td data-bbox="708 635 1406 828">“DateTime,Data1(51),...Data1(100),Data2(51),...Data2(100),Data3(51),...Data3(100),OutdoorTemp(51),...OutdoorTemp(100),CoolSetTemp(1),...CoolSetTemp(50),HeatSetTemp(1),...HeatSetTemp(50),RoomTemp(1),...RoomTemp(50),MCP1(0),...MCP1(50),MCP2(0),...MCP2(50),MCP3(0),...MCP3(50),MCP4(0),...MCP4(50),MCT1(1),...MCT1(50),MCT2(1),...MCT2(50),AHC1(201),...AHC1(250),AHC2(201),...AHC2(250),MCP1,MCP2,MCP3,MCP4*5”</td> </tr> <tr> <td data-bbox="440 828 545 1092">4th</td> <td data-bbox="545 828 708 1092">Measurement unit *2*6*7*8</td> <td data-bbox="708 828 1406 1092"> <table border="1"> <thead> <tr> <th data-bbox="737 844 1208 877">Item</th> <th data-bbox="1208 844 1377 877">Unit</th> </tr> </thead> <tbody> <tr> <td data-bbox="737 877 1208 913">Data1, Data2, Data3</td> <td data-bbox="1208 877 1377 913">-</td> </tr> <tr> <td data-bbox="737 913 1208 973">OutdoorTemp, CoolSetTemp, HeatSetTemp, RoomTemp</td> <td data-bbox="1208 913 1377 973">°C, °F</td> </tr> <tr> <td data-bbox="737 973 1208 1010">MCP (PI controller/Built-in PI controller)</td> <td data-bbox="1208 973 1377 1010">kWh, m3, MJ</td> </tr> <tr> <td data-bbox="737 1010 1208 1046">MCT (AI controller)</td> <td data-bbox="1208 1010 1377 1046">°C, °F, %</td> </tr> <tr> <td data-bbox="737 1046 1208 1083">AHC (Advanced HVAC CONTROLLER)</td> <td data-bbox="1208 1046 1377 1083">°C, °F</td> </tr> </tbody> </table> </td> </tr> <tr> <td data-bbox="440 1092 545 1242">5th–17860th</td> <td data-bbox="545 1092 708 1242">Data *2*3*4*9*10</td> <td data-bbox="708 1092 1406 1242">Date *1 and time, Data 1 (51), ... (100), Data 2 (51), ... (100), Data 3 (51), ... (100), Outdoor temperature (51), ... (100),Cooling set temperature (1), ... (50), Heating set temperature (1) , ... (50),Room temperature (1), ... (50), MCP 1 (1), ... (50), MCP 2 (1), ... (50), MCP 3 (1), ... (50), MCP 4 (1), ... (50), MCT 1 (1), ... (50), MCT 2 (1), ... (50),AHC temperature 1 (201), ... (250), AHC temperature 2 (201), ... (250), MCP 1, MCP 2, MCP 3, MCP 4</td> </tr> <tr> <td data-bbox="428 1242 1424 1705"></td> <td data-bbox="428 1242 1424 1705"> <p>*1 The date will appear in the format that has been set on the Basic System settings screen, accessible via the Web Browser for Initial Settings.</p> <p>*2 The separator character and decimal point character selected on the Measurement screen (accessible via the Web Browser for Initial Settings) will be used to the data.</p> <p>*3 The numbers shown after “MCP” and “MCT” indicate channel No.</p> <p>*4 The numbers in the parentheses indicate M-NET addresses.</p> <p>*5 The M-NET address indicated in the parentheses will not appear for the measurement data of the built-in PI controller.</p> <p>*6 The temperature unit °C or °F will appear, depending on the temperature unit that has been selected on the Basic System settings screen, accessible via the Web Browser for Initial Settings.</p> <p>*7 The measurement unit for MCP (PI controller) will be the measurement unit that has been set on the Measurement screen, accessible via the Web Browser for Initial Settings.</p> <p>*8 The measurement item for MCT (AI controller) will be temperature or humidity, which has been set on the Measurement screen, accessible via the Web Browser for Initial Settings.</p> <p>*9 The value will not appear if the data does not exist.</p> <p>*10 Each file contains up to 17856 data (2-month worth of data).</p> </td> </tr> </tbody> </table>	Row	Item	Format	1st	File Type	501	2nd	Data range *1	Start date + “-” + End date	3rd	Item *2*3*4	“DateTime,Data1(51),...Data1(100),Data2(51),...Data2(100),Data3(51),...Data3(100),OutdoorTemp(51),...OutdoorTemp(100),CoolSetTemp(1),...CoolSetTemp(50),HeatSetTemp(1),...HeatSetTemp(50),RoomTemp(1),...RoomTemp(50),MCP1(0),...MCP1(50),MCP2(0),...MCP2(50),MCP3(0),...MCP3(50),MCP4(0),...MCP4(50),MCT1(1),...MCT1(50),MCT2(1),...MCT2(50),AHC1(201),...AHC1(250),AHC2(201),...AHC2(250),MCP1,MCP2,MCP3,MCP4*5”	4th	Measurement unit *2*6*7*8	<table border="1"> <thead> <tr> <th data-bbox="737 844 1208 877">Item</th> <th data-bbox="1208 844 1377 877">Unit</th> </tr> </thead> <tbody> <tr> <td data-bbox="737 877 1208 913">Data1, Data2, Data3</td> <td data-bbox="1208 877 1377 913">-</td> </tr> <tr> <td data-bbox="737 913 1208 973">OutdoorTemp, CoolSetTemp, HeatSetTemp, RoomTemp</td> <td data-bbox="1208 913 1377 973">°C, °F</td> </tr> <tr> <td data-bbox="737 973 1208 1010">MCP (PI controller/Built-in PI controller)</td> <td data-bbox="1208 973 1377 1010">kWh, m3, MJ</td> </tr> <tr> <td data-bbox="737 1010 1208 1046">MCT (AI controller)</td> <td data-bbox="1208 1010 1377 1046">°C, °F, %</td> </tr> <tr> <td data-bbox="737 1046 1208 1083">AHC (Advanced HVAC CONTROLLER)</td> <td data-bbox="1208 1046 1377 1083">°C, °F</td> </tr> </tbody> </table>	Item	Unit	Data1, Data2, Data3	-	OutdoorTemp, CoolSetTemp, HeatSetTemp, RoomTemp	°C, °F	MCP (PI controller/Built-in PI controller)	kWh, m3, MJ	MCT (AI controller)	°C, °F, %	AHC (Advanced HVAC CONTROLLER)	°C, °F	5th–17860th	Data *2*3*4*9*10	Date *1 and time, Data 1 (51), ... (100), Data 2 (51), ... (100), Data 3 (51), ... (100), Outdoor temperature (51), ... (100),Cooling set temperature (1), ... (50), Heating set temperature (1) , ... (50),Room temperature (1), ... (50), MCP 1 (1), ... (50), MCP 2 (1), ... (50), MCP 3 (1), ... (50), MCP 4 (1), ... (50), MCT 1 (1), ... (50), MCT 2 (1), ... (50),AHC temperature 1 (201), ... (250), AHC temperature 2 (201), ... (250), MCP 1, MCP 2, MCP 3, MCP 4		<p>*1 The date will appear in the format that has been set on the Basic System settings screen, accessible via the Web Browser for Initial Settings.</p> <p>*2 The separator character and decimal point character selected on the Measurement screen (accessible via the Web Browser for Initial Settings) will be used to the data.</p> <p>*3 The numbers shown after “MCP” and “MCT” indicate channel No.</p> <p>*4 The numbers in the parentheses indicate M-NET addresses.</p> <p>*5 The M-NET address indicated in the parentheses will not appear for the measurement data of the built-in PI controller.</p> <p>*6 The temperature unit °C or °F will appear, depending on the temperature unit that has been selected on the Basic System settings screen, accessible via the Web Browser for Initial Settings.</p> <p>*7 The measurement unit for MCP (PI controller) will be the measurement unit that has been set on the Measurement screen, accessible via the Web Browser for Initial Settings.</p> <p>*8 The measurement item for MCT (AI controller) will be temperature or humidity, which has been set on the Measurement screen, accessible via the Web Browser for Initial Settings.</p> <p>*9 The value will not appear if the data does not exist.</p> <p>*10 Each file contains up to 17856 data (2-month worth of data).</p>
	Row	Item	Format																														
	1st	File Type	501																														
	2nd	Data range *1	Start date + “-” + End date																														
	3rd	Item *2*3*4	“DateTime,Data1(51),...Data1(100),Data2(51),...Data2(100),Data3(51),...Data3(100),OutdoorTemp(51),...OutdoorTemp(100),CoolSetTemp(1),...CoolSetTemp(50),HeatSetTemp(1),...HeatSetTemp(50),RoomTemp(1),...RoomTemp(50),MCP1(0),...MCP1(50),MCP2(0),...MCP2(50),MCP3(0),...MCP3(50),MCP4(0),...MCP4(50),MCT1(1),...MCT1(50),MCT2(1),...MCT2(50),AHC1(201),...AHC1(250),AHC2(201),...AHC2(250),MCP1,MCP2,MCP3,MCP4*5”																														
4th	Measurement unit *2*6*7*8	<table border="1"> <thead> <tr> <th data-bbox="737 844 1208 877">Item</th> <th data-bbox="1208 844 1377 877">Unit</th> </tr> </thead> <tbody> <tr> <td data-bbox="737 877 1208 913">Data1, Data2, Data3</td> <td data-bbox="1208 877 1377 913">-</td> </tr> <tr> <td data-bbox="737 913 1208 973">OutdoorTemp, CoolSetTemp, HeatSetTemp, RoomTemp</td> <td data-bbox="1208 913 1377 973">°C, °F</td> </tr> <tr> <td data-bbox="737 973 1208 1010">MCP (PI controller/Built-in PI controller)</td> <td data-bbox="1208 973 1377 1010">kWh, m3, MJ</td> </tr> <tr> <td data-bbox="737 1010 1208 1046">MCT (AI controller)</td> <td data-bbox="1208 1010 1377 1046">°C, °F, %</td> </tr> <tr> <td data-bbox="737 1046 1208 1083">AHC (Advanced HVAC CONTROLLER)</td> <td data-bbox="1208 1046 1377 1083">°C, °F</td> </tr> </tbody> </table>	Item	Unit	Data1, Data2, Data3	-	OutdoorTemp, CoolSetTemp, HeatSetTemp, RoomTemp	°C, °F	MCP (PI controller/Built-in PI controller)	kWh, m3, MJ	MCT (AI controller)	°C, °F, %	AHC (Advanced HVAC CONTROLLER)	°C, °F																			
Item	Unit																																
Data1, Data2, Data3	-																																
OutdoorTemp, CoolSetTemp, HeatSetTemp, RoomTemp	°C, °F																																
MCP (PI controller/Built-in PI controller)	kWh, m3, MJ																																
MCT (AI controller)	°C, °F, %																																
AHC (Advanced HVAC CONTROLLER)	°C, °F																																
5th–17860th	Data *2*3*4*9*10	Date *1 and time, Data 1 (51), ... (100), Data 2 (51), ... (100), Data 3 (51), ... (100), Outdoor temperature (51), ... (100),Cooling set temperature (1), ... (50), Heating set temperature (1) , ... (50),Room temperature (1), ... (50), MCP 1 (1), ... (50), MCP 2 (1), ... (50), MCP 3 (1), ... (50), MCP 4 (1), ... (50), MCT 1 (1), ... (50), MCT 2 (1), ... (50),AHC temperature 1 (201), ... (250), AHC temperature 2 (201), ... (250), MCP 1, MCP 2, MCP 3, MCP 4																															
	<p>*1 The date will appear in the format that has been set on the Basic System settings screen, accessible via the Web Browser for Initial Settings.</p> <p>*2 The separator character and decimal point character selected on the Measurement screen (accessible via the Web Browser for Initial Settings) will be used to the data.</p> <p>*3 The numbers shown after “MCP” and “MCT” indicate channel No.</p> <p>*4 The numbers in the parentheses indicate M-NET addresses.</p> <p>*5 The M-NET address indicated in the parentheses will not appear for the measurement data of the built-in PI controller.</p> <p>*6 The temperature unit °C or °F will appear, depending on the temperature unit that has been selected on the Basic System settings screen, accessible via the Web Browser for Initial Settings.</p> <p>*7 The measurement unit for MCP (PI controller) will be the measurement unit that has been set on the Measurement screen, accessible via the Web Browser for Initial Settings.</p> <p>*8 The measurement item for MCT (AI controller) will be temperature or humidity, which has been set on the Measurement screen, accessible via the Web Browser for Initial Settings.</p> <p>*9 The value will not appear if the data does not exist.</p> <p>*10 Each file contains up to 17856 data (2-month worth of data).</p>																																

Item	Description																	
Energy management data	[Data type: 30-minute intervals]																	
	Row	Item	Format															
	1st	File Type	502															
	2nd	Data range *1	Start date + “-” + End date															
	3rd	Item *2*3*4	“DateTime,Data1(51),...Data1(100),Data2(51),...Data2(100), Data3(51),...Data3(100),OutdoorTemp(51),...OutdoorTemp(100), CoolSetTemp(1),...CoolSetTemp(50),HeatSetTemp(1),...HeatSetTemp(50), RoomTemp(1),...RoomTemp(50),FanTime(1),...FanTime(50), CoolTime(1),...CoolTime(50),HeatTime(1),...HeatTime(50), ThermoTime(1),...ThermoTime(50),CoolThermoTime(1),...CoolThermoTime(50), HeatThermoTime(1),...HeatThermoTime(50), ThermoCount(1),...ThermoCount(50), SaveValue(1),...SaveValue(50),CoolSaveValue(1),...CoolSaveValue(50), HeatSaveValue(1),...HeatSaveValue(50), ApporionedElectricEnergy(1),...ApporionedElectricEnergy(50), MCP1(0),...MCP1(50),MCP2(0),...MCP2(50),MCP3(0),...MCP3(50), MCP4(0),...MCP4(50),MCT1(1),...MCT1(50),MCT2(1),...MCT2(50), AHC1(201),...AHC1(250),AHC2(201),...AHC2(250), MCP1,MCP2,MCP3,MCP4*5”															
	4th	Measurement unit *2*6*7*8	<table border="1" data-bbox="738 707 1388 1051"> <thead> <tr> <th data-bbox="738 707 1209 739">Item</th> <th data-bbox="1209 707 1388 739">Unit</th> </tr> </thead> <tbody> <tr> <td data-bbox="738 739 1209 771">ApporionedElectricEnergy</td> <td data-bbox="1209 739 1388 771">kWh</td> </tr> <tr> <td data-bbox="738 771 1209 803">ThermoCount, Data1, Data2, Data3</td> <td data-bbox="1209 771 1388 803">-</td> </tr> <tr> <td data-bbox="738 803 1209 867">OutdoorTemp, CoolSetTemp, HeatSetTemp, RoomTemp</td> <td data-bbox="1209 803 1388 867">°C, °F</td> </tr> <tr> <td data-bbox="738 867 1209 941">FanTime, CoolTime, HeatTime, ThermoTime, CoolThermoTime, HeatThermoTime, SaveValue, CoolSaveValue, HeatSaveValue</td> <td data-bbox="1209 867 1388 941">Minute</td> </tr> <tr> <td data-bbox="738 941 1209 973">MCP (PI controller/Built-in PI controller)</td> <td data-bbox="1209 941 1388 973">kWh, m3, MJ</td> </tr> <tr> <td data-bbox="738 973 1209 1005">MCT (AI controller)</td> <td data-bbox="1209 973 1388 1005">°C, °F, %</td> </tr> <tr> <td data-bbox="738 1005 1209 1037">AHC (Advanced HVAC CONTROLLER)</td> <td data-bbox="1209 1005 1388 1037">°C, °F</td> </tr> </tbody> </table>	Item	Unit	ApporionedElectricEnergy	kWh	ThermoCount, Data1, Data2, Data3	-	OutdoorTemp, CoolSetTemp, HeatSetTemp, RoomTemp	°C, °F	FanTime, CoolTime, HeatTime, ThermoTime, CoolThermoTime, HeatThermoTime, SaveValue, CoolSaveValue, HeatSaveValue	Minute	MCP (PI controller/Built-in PI controller)	kWh, m3, MJ	MCT (AI controller)	°C, °F, %	AHC (Advanced HVAC CONTROLLER)
Item	Unit																	
ApporionedElectricEnergy	kWh																	
ThermoCount, Data1, Data2, Data3	-																	
OutdoorTemp, CoolSetTemp, HeatSetTemp, RoomTemp	°C, °F																	
FanTime, CoolTime, HeatTime, ThermoTime, CoolThermoTime, HeatThermoTime, SaveValue, CoolSaveValue, HeatSaveValue	Minute																	
MCP (PI controller/Built-in PI controller)	kWh, m3, MJ																	
MCT (AI controller)	°C, °F, %																	
AHC (Advanced HVAC CONTROLLER)	°C, °F																	
5th–37204th	Data *2*3*4*9*10*11*12	Date *1 and time, Data 1 (51), ... (100), Data 2 (51), ... (100), Data 3 (51), ... (100), Outdoor temperature (51), ... (100), Cooling set temperature (1), ... (50), Heating set temperature (1), ... (50), Room temperature (1), ... (50), Fan operation time (1), ... (50), Cooling operation time (1),... (50), Heating operation time (1), ... (50), Thermo-ON time (1), ... (50), Cooling Thermo-ON time (1), ... (50), Heating Thermo-ON time (1), ... (50), Number of Thermo-ON/OFF (1), ... (50), Capacity-save value (1), ... (50), Cooling capacity-save value (1), ... (50), Heating capacity-save value (1), ... (50), Apporioned electric energy (1), ... (50), MCP 1 (1), ... (50), MCP 2 (1), ... (50), MCP 3 (1), ... (50), MCP 4 (1), ... (50), MCT 1 (1), ... (50), MCT 2 (1), ... (50), AHC temperature 1 (201), ... (250), AHC temperature 2 (201), ... (250), MCP 1, MCP 2, MCP 3, MCP 4																
<p>*1 The date will appear in the format that has been set on the Basic System settings screen, accessible via the Web Browser for Initial Settings.</p> <p>*2 The separator character and decimal point character selected on the Measurement screen (accessible via the Web Browser for Initial Settings) will be used to the data.</p> <p>*3 The numbers shown after “MCP” and “MCT” indicate channel No.</p> <p>*4 The numbers in the parentheses indicate M-NET addresses.</p> <p>*5 The M-NET address indicated in the parentheses will not appear for the measurement data of the built-in PI controller.</p> <p>*6 The temperature unit °C or °F will appear, depending on the temperature unit that has been selected on the Basic System settings screen, accessible via the Web Browser for Initial Settings.</p> <p>*7 The measurement unit for MCP (PI controller) will be the measurement unit that has been set on the Measurement screen, accessible via the Web Browser for Initial Settings.</p> <p>*8 The measurement item for MCT (AI controller) will be temperature or humidity, which has been set on the Measurement screen, accessible via the Web Browser for Initial Settings.</p> <p>*9 “Outdoor temperature,” “Cooling set temperature,” “Heating set temperature,” and “Room temperature” in the data are the temperature values obtained every hour and half hour.</p> <p>*10 “MCT 1” and “MCT 2” in the data are the temperature or humidity values obtained every hour and half hour.</p> <p>*11 The value will not appear if the data does not exist.</p> <p>*12 Each file contains up to 37200 data (25-month worth of data).</p>																		

Item	Description																	
Energy management data	[Data type: 1-day intervals]																	
	Row	Item	Format															
	1st	File Type	503															
	2nd	Data range *1	Start date + “-” + End date															
	3rd	Item *2*3*4	“Date,Data1(51),...Data1(100),Data3(51),...Data3(100), OutdoorTemp(51),...OutdoorTemp(100),CoolSetTemp(1),...CoolSetTemp(50), HeatSetTemp(1),...HeatSetTemp(50),RoomTemp(1),...RoomTemp(50), FanTime(1),...FanTime(50),CoolTime(1),...CoolTime(50), HeatTime(1),...HeatTime(50),ThermoTime(1),...ThermoTime(50), CoolThermoTime(1),...CoolThermoTime(50), HeatThermoTime(1),...HeatThermoTime(50), SaveValue(1),...SaveValue(50),CoolSaveValue(1),...CoolSaveValue(50), HeatSaveValue(1),...HeatSaveValue(50), ApporionedElectricEnergy(1),...ApporionedElectricEnergy(50), TargetElectricEnergy(1),...TargetElectricEnergy(50), MCP1(0),...MCP1(50),MCP2(0),...MCP2(50),MCP3(0),...MCP3(50), MCP4(0),...MCP4(50),MCT1(1),...MCT1(50),MCT2(1),...MCT2(50), AHC1(201),...AHC1(250),AHC2(201),...AHC2(250), MCP1,MCP2,MCP3,MCP4*5”															
	4th	Measurement unit *2*6*7*8	<table border="1" data-bbox="737 707 1380 1051"> <thead> <tr> <th data-bbox="737 707 1203 746">Item</th> <th data-bbox="1203 707 1380 746">Unit</th> </tr> </thead> <tbody> <tr> <td data-bbox="737 746 1203 785">ApporionedElectricEnergy, TargetElectricEnergy</td> <td data-bbox="1203 746 1380 785">kWh</td> </tr> <tr> <td data-bbox="737 785 1203 824">Data1, Data3</td> <td data-bbox="1203 785 1380 824">-</td> </tr> <tr> <td data-bbox="737 824 1203 874">OutdoorTemp, CoolSetTemp, HeatSetTemp, RoomTemp</td> <td data-bbox="1203 824 1380 874">°C, °F</td> </tr> <tr> <td data-bbox="737 874 1203 950">FanTime, CoolTime, HeatTime, ThermoTime, CoolThermoTime, HeatThermoTime, SaveValue, CoolSaveValue, HeatSaveValue</td> <td data-bbox="1203 874 1380 950">Minute</td> </tr> <tr> <td data-bbox="737 950 1203 989">MCP (PI controller/Built-in PI controller)</td> <td data-bbox="1203 950 1380 989">kWh, m3, MJ</td> </tr> <tr> <td data-bbox="737 989 1203 1028">MCT (AI controller)</td> <td data-bbox="1203 989 1380 1028">°C, °F, %</td> </tr> <tr> <td data-bbox="737 1028 1203 1051">AHC (Advanced HVAC CONTROLLER)</td> <td data-bbox="1203 1028 1380 1051">°C, °F</td> </tr> </tbody> </table>	Item	Unit	ApporionedElectricEnergy, TargetElectricEnergy	kWh	Data1, Data3	-	OutdoorTemp, CoolSetTemp, HeatSetTemp, RoomTemp	°C, °F	FanTime, CoolTime, HeatTime, ThermoTime, CoolThermoTime, HeatThermoTime, SaveValue, CoolSaveValue, HeatSaveValue	Minute	MCP (PI controller/Built-in PI controller)	kWh, m3, MJ	MCT (AI controller)	°C, °F, %	AHC (Advanced HVAC CONTROLLER)
Item	Unit																	
ApporionedElectricEnergy, TargetElectricEnergy	kWh																	
Data1, Data3	-																	
OutdoorTemp, CoolSetTemp, HeatSetTemp, RoomTemp	°C, °F																	
FanTime, CoolTime, HeatTime, ThermoTime, CoolThermoTime, HeatThermoTime, SaveValue, CoolSaveValue, HeatSaveValue	Minute																	
MCP (PI controller/Built-in PI controller)	kWh, m3, MJ																	
MCT (AI controller)	°C, °F, %																	
AHC (Advanced HVAC CONTROLLER)	°C, °F																	
5th–779th	Data *2*3*4*9*10*11*12	Date *1, Data 1 (51), ... (100), Data 3 (51), ... (100), Outdoor temperature (51), ... (100), Cooling set temperature (1), ... (50), Heating set temperature (1), ... (50), Room temperature (1), ... (50), Fan operation time (1), ... (50), Cooling operation time (1), ... (50), Heating operation time (1), ... (50), Thermo-ON time (1), ... (50), Cooling Thermo-ON time (1), ... (50), Heating Thermo-ON time (1), ... (50), Capacity-save value (1), ... (50), Cooling capacity-save value (1), ... (50), Heating capacity-save value (1), ... (50), Apporioned electric energy (1), ... (50), Target electric energy (1), ... (50), MCP 1 (1), ... (50), MCP 2 (1), ... (50), MCP 3 (1), ... (50), MCP 4 (1), ... (50), MCT 1 (1), ... (50), MCT 2 (1), ... (50), AHC temperature 1 (201), ... (250), AHC temperature 2 (201), ... (250), MCP 1, MCP 2, MCP 3, MCP 4																
<p>*1 The date will appear in the format that has been set on the Basic System settings screen, accessible via the Web Browser for Initial Settings.</p> <p>*2 The separator character and decimal point character selected on the Measurement screen (accessible via the Web Browser for Initial Settings) will be used to the data.</p> <p>*3 The numbers shown after “MCP” and “MCT” indicate channel No.</p> <p>*4 The numbers in the parentheses indicate M-NET addresses.</p> <p>*5 The M-NET address indicated in the parentheses will not appear for the measurement data of the built-in PI controller.</p> <p>*6 The temperature unit °C or °F will appear, depending on the temperature unit that has been selected on the Basic System settings screen, accessible via the Web Browser for Initial Settings.</p> <p>*7 The measurement unit for MCP (PI controller) will be the measurement unit that has been set on the Measurement screen, accessible via the Web Browser for Initial Settings.</p> <p>*8 The measurement item for MCT (AI controller) will be temperature or humidity, which has been set on the Measurement screen, accessible via the Web Browser for Initial Settings.</p> <p>*9 “Outdoor temperature,” “Cooling set temperature,” “Heating set temperature,” and “Room temperature” in the data are the average daily values of the temperature values obtained every hour.</p> <p>*10 “MCT 1” and “MCT 2” in the data are the average daily temperature or humidity values obtained every hour.</p> <p>*11 The value will not appear if the data does not exist.</p> <p>*12 Each file contains up to 775 data (25-month worth of data).</p>																		

Item	Description																	
Energy management data	[Data type: 1-month intervals]																	
	Row	Item	Format															
	1st	File Type	504															
	2nd	Data range *1	Start year and month + “-” + End year and month															
	3rd	Item *2*3*4	“Month,Data1(51),...Data1(100),Data3(51),...Data3(100), OutdoorTemp(51),...OutdoorTemp(100),CoolSetTemp(1),...CoolSetTemp(50), HeatSetTemp(1),...HeatSetTemp(50),RoomTemp(1),...RoomTemp(50), FanTime(1),...FanTime(50),CoolTime(1),...CoolTime(50), HeatTime(1),...HeatTime(50),ThermoTime(1),...ThermoTime(50), CoolThermoTime(1),...CoolThermoTime(50), HeatThermoTime(1),...HeatThermoTime(50), SaveValue(1),...SaveValue(50),CoolSaveValue(1),...CoolSaveValue(50), HeatSaveValue(1),...HeatSaveValue(50), ApporionedElectricEnergy(1),...ApporionedElectricEnergy(50). TargetElectricEnergy(1),...TargetElectricEnergy(50), MCP1(0),...MCP1(50),MCP2(0),...MCP2(50),MCP3(0),...MCP3(50), MCP4(0),...MCP4(50),MCT1(1),...MCT1(50),MCT2(1),...MCT2(50), AHC1(201),...AHC1(250),AHC2(201),...AHC2(250), MCP1,MCP2,MCP3,MCP4*5”															
4th	Measurement unit *2*6*7*8	<table border="1" data-bbox="737 707 1380 1051"> <thead> <tr> <th data-bbox="737 707 1203 746">Item</th> <th data-bbox="1203 707 1380 746">Unit</th> </tr> </thead> <tbody> <tr> <td data-bbox="737 746 1203 785">ApporionedElectricEnergy, TargetElectricEnergy</td> <td data-bbox="1203 746 1380 785">kWh</td> </tr> <tr> <td data-bbox="737 785 1203 824">Data1, Data3</td> <td data-bbox="1203 785 1380 824">-</td> </tr> <tr> <td data-bbox="737 824 1203 874">OutdoorTemp, CoolSetTemp, HeatSetTemp, RoomTemp</td> <td data-bbox="1203 824 1380 874">°C, °F</td> </tr> <tr> <td data-bbox="737 874 1203 950">FanTime, CoolTime, HeatTime, ThermoTime, CoolThermoTime, HeatThermoTime, SaveValue, CoolSaveValue, HeatSaveValue</td> <td data-bbox="1203 874 1380 950">Minute</td> </tr> <tr> <td data-bbox="737 950 1203 989">MCP (PI controller/Built-in PI controller)</td> <td data-bbox="1203 950 1380 989">kWh, m3, MJ</td> </tr> <tr> <td data-bbox="737 989 1203 1028">MCT (AI controller)</td> <td data-bbox="1203 989 1380 1028">°C, °F, %</td> </tr> <tr> <td data-bbox="737 1028 1203 1051">AHC (Advanced HVAC CONTROLLER)</td> <td data-bbox="1203 1028 1380 1051">°C, °F</td> </tr> </tbody> </table>	Item	Unit	ApporionedElectricEnergy, TargetElectricEnergy	kWh	Data1, Data3	-	OutdoorTemp, CoolSetTemp, HeatSetTemp, RoomTemp	°C, °F	FanTime, CoolTime, HeatTime, ThermoTime, CoolThermoTime, HeatThermoTime, SaveValue, CoolSaveValue, HeatSaveValue	Minute	MCP (PI controller/Built-in PI controller)	kWh, m3, MJ	MCT (AI controller)	°C, °F, %	AHC (Advanced HVAC CONTROLLER)	°C, °F
Item	Unit																	
ApporionedElectricEnergy, TargetElectricEnergy	kWh																	
Data1, Data3	-																	
OutdoorTemp, CoolSetTemp, HeatSetTemp, RoomTemp	°C, °F																	
FanTime, CoolTime, HeatTime, ThermoTime, CoolThermoTime, HeatThermoTime, SaveValue, CoolSaveValue, HeatSaveValue	Minute																	
MCP (PI controller/Built-in PI controller)	kWh, m3, MJ																	
MCT (AI controller)	°C, °F, %																	
AHC (Advanced HVAC CONTROLLER)	°C, °F																	
5th–29th	Data *2*3*4*9*10*11*12	yyyy/mm *1, Data 1 (51), ... (100), Data 3 (51), ... (100), Outdoor temperature (51), ... (100), Cooling set temperature (1), ... (50), Heating set temperature (1), ... (50), Room temperature (1), ... (50), Fan operation time (1), ... (50), Cooling operation time (1), ... (50), Heating operation time (1), ... (50), Thermo-ON time (1), ... (50), Cooling Thermo-ON time (1), ... (50), Heating Thermo-ON time (1), ... (50), Capacity-save value (1), ... (50), Cooling capacity-save value (1), ... (50), Heating capacity-save value (1), ... (50), Apporioned electric energy (1), ... (50), Target electric energy (1), ... (50), MCP 1 (1), ... (50), MCP 2 (1), ... (50), MCP 3 (1), ... (50), MCP 4 (1), ... (50), MCT 1 (1), ... (50), MCT 2 (1), ... (50), AHC temperature 1 (201), ... (250), AHC temperature 2 (201), ... (250), MCP 1, MCP 2, MCP 3, MCP 4																
<p>*1 The date will appear in the format that has been set on the Basic System settings screen, accessible via the Web Browser for Initial Settings.</p> <p>*2 The separator character and decimal point character selected on the Measurement screen (accessible via the Web Browser for Initial Settings) will be used to the data.</p> <p>*3 The numbers shown after “MCP” and “MCT” indicate channel No.</p> <p>*4 The numbers in the parentheses indicate M-NET addresses.</p> <p>*5 The M-NET address indicated in the parentheses will not appear for the measurement data of the built-in PI controller.</p> <p>*6 The temperature unit °C or °F will appear, depending on the temperature unit that has been selected on the Basic System settings screen, accessible via the Web Browser for Initial Settings.</p> <p>*7 The measurement unit for MCP (PI controller) will be the measurement unit that has been set on the Measurement screen, accessible via the Web Browser for Initial Settings.</p> <p>*8 The measurement item for MCT (AI controller) will be temperature or humidity, which has been set on the Measurement screen, accessible via the Web Browser for Initial Settings.</p> <p>*9 “Outdoor temperature,” “Cooling set temperature,” “Heating set temperature,” and “Room temperature” in the data are the average monthly values of the average temperature values obtained every day.</p> <p>*10 “MCT 1” and “MCT 2” in the data are the average monthly values of the average temperature or humidity values obtained every day.</p> <p>*11 The value will not appear if the data does not exist.</p> <p>*12 Each file contains up to 25 data (25-month worth of data).</p>																		

Item	Description											
Energy management data	[Data type: 1-year intervals]											
	Row	Item	Format									
	1st	File Type	505									
	2nd	Date range	Start year + “-” + End year									
	3rd	Item *1*2*3	“Year,Data1(51),...Data1(100),Data3(51),...Data3(100), FanTime(1),...FanTime(50),CoolTime(1),...CoolTime(50), HeatTime(1),...HeatTime(50),ThermoTime(1),...ThermoTime(50), CoolThermoTime(1),...CoolThermoTime(50), HeatThermoTime(1),...HeatThermoTime(50),SaveValue(1),...SaveValue(50), CoolSaveValue(1),...CoolSaveValue(50), HeatSaveValue(1),...HeatSaveValue(50), ApporionedElectricEnergy(1),...ApporionedElectricEnergy(50) TargetElectricEnergy(1),...TargetElectricEnergy(50), MCP1(0),...MCP1(50),MCP2(0),...MCP2(50),MCP3(0),...MCP3(50), MCP4(0),...MCP4(50), MCP1,MCP2,MCP3,MCP4*4”									
4th	Measurement unit *1*5	<table border="1" data-bbox="737 638 1382 858"> <thead> <tr> <th data-bbox="737 638 1203 677">Item</th> <th data-bbox="1203 638 1382 677">Unit</th> </tr> </thead> <tbody> <tr> <td data-bbox="737 677 1203 716">ApporionedElectricEnergy, TargetElectricEnergy</td> <td data-bbox="1203 677 1382 716">kWh</td> </tr> <tr> <td data-bbox="737 716 1203 755">Data1, Data3</td> <td data-bbox="1203 716 1382 755">-</td> </tr> <tr> <td data-bbox="737 755 1203 828">FanTime, CoolTime, HeatTime, ThermoTime, CoolThermoTime, HeatThermoTime, SaveValue, CoolSaveValue, HeatSaveValue</td> <td data-bbox="1203 755 1382 828">Minute</td> </tr> <tr> <td data-bbox="737 828 1203 858">MCP (PI controller/Built-in PI controller)</td> <td data-bbox="1203 828 1382 858">kWh, m3, MJ</td> </tr> </tbody> </table>	Item	Unit	ApporionedElectricEnergy, TargetElectricEnergy	kWh	Data1, Data3	-	FanTime, CoolTime, HeatTime, ThermoTime, CoolThermoTime, HeatThermoTime, SaveValue, CoolSaveValue, HeatSaveValue	Minute	MCP (PI controller/Built-in PI controller)	kWh, m3, MJ
Item	Unit											
ApporionedElectricEnergy, TargetElectricEnergy	kWh											
Data1, Data3	-											
FanTime, CoolTime, HeatTime, ThermoTime, CoolThermoTime, HeatThermoTime, SaveValue, CoolSaveValue, HeatSaveValue	Minute											
MCP (PI controller/Built-in PI controller)	kWh, m3, MJ											
5th–9th	Data *1*2*3*6*7	yyyy, Data 1 (51), ... (100), Data 3 (51), ... (100), Fan operation time (1), ... (50), Cooling operation time (1), ... (50), Heating operation time (1), ... (50), Thermo-ON time (1), ... (50), Cooling Thermo-ON time (1), ... (50), Heating Thermo-ON time (1), ... (50), Capacity-save value (1), ... (50), Cooling capacity-save value (1), ... (50), Heating capacity-save value (1), ... (50), Apporioned electric energy (1), ... (50), Target electric energy (1), ... (50), MCP 1 (1), ... (50), MCP 2 (1), ... (50), MCP 3 (1), ... (50), MCP 4 (1), ... (50), MCP 1, MCP 2, MCP 3, MCP 4										
<p>*1 The separator character and decimal point character selected on the Measurement screen (accessible via the Web Browser for Initial Settings) will be used to the data.</p> <p>*2 The numbers shown after “MCP” and “MCT” indicate channel No.</p> <p>*3 The numbers in the parentheses indicate M-NET addresses.</p> <p>*4 The M-NET address indicated in the parentheses will not appear for the measurement data of the built-in PI controller.</p> <p>*5 The measurement unit for MCP (PI controller) will be the measurement unit that has been set on the Measurement screen, accessible via the Web Browser for Initial Settings.</p> <p>*6 The value will not appear if the data does not exist.</p> <p>*7 Each file contains up to 5 data (5-year worth of data).</p>												
Close	Click to close the CSV File Download Tool.											

### 9-5-1. Energy Management Data List

Table 9-1 below summarizes the energy-control-related items that can be output in a CSV format, their measurement units, and their data ranges for each data type.

Table 9-2 below summarizes how many months/years worth of data each CSV file can contain.

**Table 9-1 Data items**

Unit type	Item	Data type (intervals)					Measurement unit	Data range *11
		5-minute	30-minute	1-day *6	1-month *7	1-year *8		
Outdoor unit	Data 1 *1	V	V	V	V	V	–	0–999999.99
	Data 2 *1	V	V				–	0–9999.99
	Data 3 *1	V	V	V	V	V	–	0–99.99
	Outdoor temperature	V	V *2	V *3	V *4		°C, °F	-100.0–1000.0
Indoor unit	Cooling set temperature	V	V *2	V *3	V *4		°C, °F	-100.0–1000.0
	Heating set temperature	V	V *2	V *3	V *4		°C, °F	-100.0–1000.0
	Room temperature	V	V *2	V *3	V *4		°C, °F	-100.0–1000.0
	Fan operation time		V *9	V *10	V *10	V *10	Minute	0–2147483647
	Cooling operation time		V *9	V *10	V *10	V *10	Minute	0–2147483647
	Heating operation time		V *9	V *10	V *10	V *10	Minute	0–2147483647
	Thermo-ON time		V *9	V *10	V *10	V *10	Minute	0–2147483647
	Cooling Thermo-ON time		V *9	V *10	V *10	V *10	Minute	0–2147483647
	Heating Thermo-ON time		V *9	V *10	V *10	V *10	Minute	0–2147483647
	Number of Thermo-ON/OFF *5		V *9				–	0–2147483647
	Capacity-save value		V *9	V *10	V *10	V *10	Minute	0–21474836.47
	Cooling capacity-save value		V *9	V *10	V *10	V *10	Minute	0–21474836.47
	Heating capacity-save value		V *9	V *10	V *10	V *10	Minute	0–21474836.47
	Apportioned electric energy		V *9	V *10	V *10	V *10	kWh	0–999999.9999
Target electric energy			V *10	V *10	V *10	kWh	0–214748.3647	
MCP (PI controller/ Built-in PI controller)	MCP 1	V *9	V *9	V *10	V *10	V *10	kWh, m3, MJ, Blank	0–999999.99
	MCP 2	V *9	V *9	V *10	V *10	V *10	kWh, m3, MJ, Blank	0–999999.99
	MCP 3	V *9	V *9	V *10	V *10	V *10	kWh, m3, MJ, Blank	0–999999.99
	MCP 4	V *9	V *9	V *10	V *10	V *10	kWh, m3, MJ, Blank	0–999999.99
MCT (AI controller)	MCT 1	V	V *2	V *3	V *4		°C, °F, %	-100.0–1000.0
	MCT 2	V	V *2	V *3	V *4		°C, °F, %	-100.0–1000.0
AHC	AHC temperature 1	V	V *2	V *3	V *4		°C, °F	-100.0–1000.0
	AHC temperature 2	V	V *2	V *3	V *4		°C, °F	-100.0–1000.0

- \*1 The values are only for factory use. Do not use the values as reference.
- \*2 The values are the temperature or humidity values obtained every hour and half hour.
- \*3 The values are the average daily values of the temperature or humidity values obtained every hour.
- \*4 The values are the average monthly values of the average temperature or humidity values obtained every day \*3.
- \*5 "Number of Thermo-ON/OFF" is the number of times the unit has gone from Thermo-OFF to Thermo-ON.
- \*6 If the data contains the data for the current day, the data will be output that were collected up to the point of time when the CSV file was downloaded.
- \*7 The data for the current month will contain the data that were collected up to the point of time when the CSV file was downloaded.
- \*8 The data for the current year will contain the data that were collected up to the point of time when the CSV file was downloaded.
- \*9 Each value is a cumulative value after the start of operation. If the value exceeds the maximum value, it will wrap around to zero.
- \*10 Each value is a total value for each time period (1-day, 1-month, or 1-year).
- \*11 The number of digits that will be shown after the decimal point varies with the data item. For example, if the data range is "0–99.99," two digits after the decimal point will be shown.

**Table 9-2 Data period**

Data type (intervals)	Data period
5-minute	Last 2 months
30-minute	Last 25 months
1-day	Last 25 months
1-month	Last 25 months
1-year	Last 5 years

# 10. License registration for optional functions


This chapter explains how to register a license for optional functions.

Please ask your dealer for more details on the optional functions and how to purchase a license number.


Note: The current date and time settings are required for license registration. Refer to section 8-1 for date and time settings.

Note: The license registration is required for each AE-200/AE-50/EW-50.


- (1) On the login screen, click [Registration of Optional Functions].

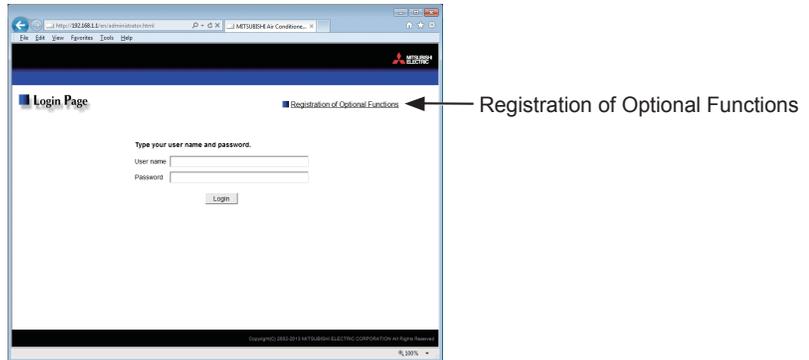


The [Registration of Optional Functions] screen will appear.

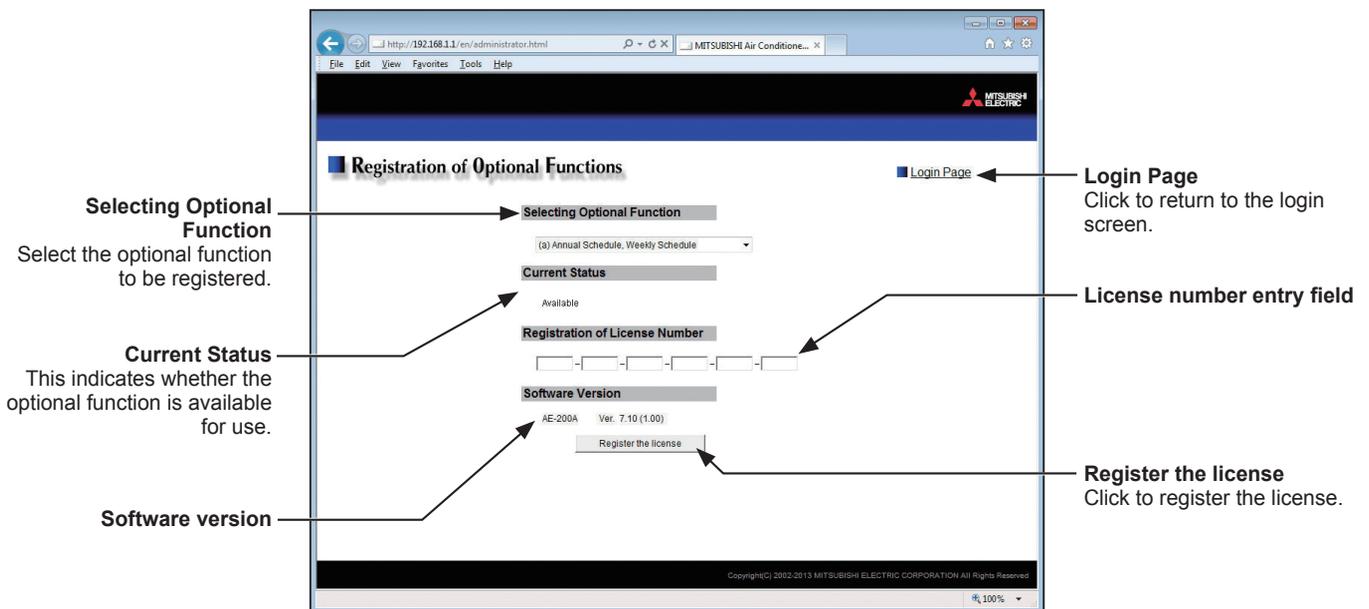

- (2) In the [Selecting Optional Function] section, select the optional function to be registered. The current availability will appear in the [Current Status] section.



- (3) In the [License number entry] field, enter the license number and click [Register the license]. In the [Current Status] section, a word "Available" will appear. If the registration is unsuccessful, verify that the selected optional function and the license number are correct.



Note: Alphabet "O" and "I" are not used for license number.

# 11. Notes on connecting to Web browser

Follow the instructions below to change settings if the message “If you see this you don’t have a Java-enabled Web browser. Here’s a picture of what you are missing.” or “Error. Click for details.” appears, and no login window appears when the Web page is accessed.

Note: To remedy the above-mentioned problem, go to section 11-1 “Clearing cache” first, and if the problem still persists, go to section 11-2 “Resetting Internet Explorer”. Resetting Internet Explorer will reset Internet Explorer’s settings to their default condition.

## 11-1. Clearing cache


### 11-1-1. How to clear Java cache

- (1) Click [Control Panel]>[Java].


Note: If [Category] is selected in the top right corner, next to [View by:], change it to [Large icons] or [Small icons].

- (2) Java Control Panel will open.


- (3) Click [Settings...] under [Temporary Internet Files].

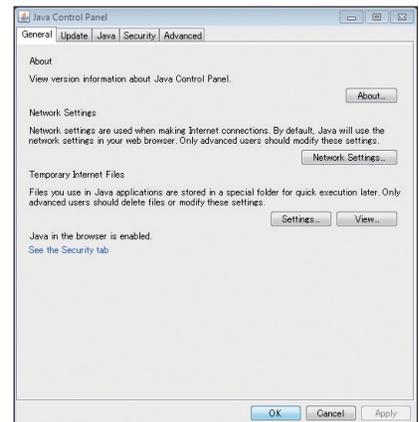

- (4) The [Temporary Files Settings] dialog will appear. Click [Delete Files...].

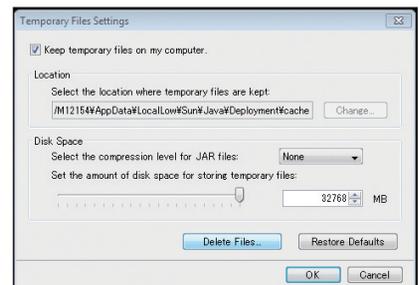


- (5) The [Delete Files and Applications] dialog will appear. Make sure that the checkboxes next to [Trace and Log Files] and [Cached Applications and Applets] are both checked, and then click [OK].

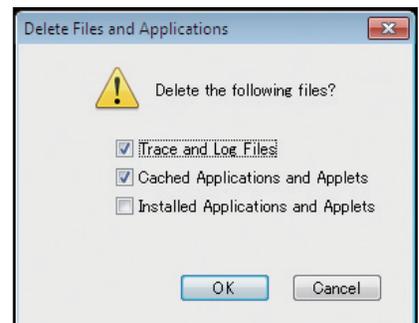

## 11-1-2. How to clear Internet Explorer cache

- (1) Open the Internet Explorer, click [Tools] in the menu bar, and then click [Internet options].
- (2) The [Internet Options] dialog will appear. Click [Delete...] under [Browsing history].

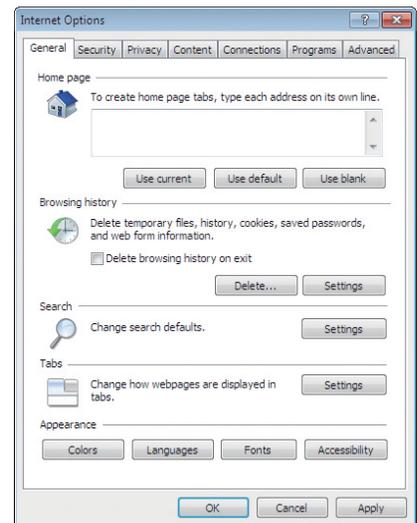

- (3) Make sure that the checkbox next to [Temporary Internet files] is checked, and then click [Delete].




## 11-2. Resetting Internet Explorer

If the problem persists after section 11-1 “Clearing cache”, reset Internet Explorer settings.

Note: Resetting Internet Explorer’s settings will impact the following. Before you make any changes, write down the current settings if necessary.

- Disable toolbars and add-ons
- Advanced options
- Default web browser settings
- Tabbed browsing settings
- Privacy settings
- Pop-up settings
- Security settings

- (1) Open the Internet Explorer, click [Tools] in the menu bar, and then click [Internet options].
- (2) The [Internet Options] dialog will appear.  
Click the [Advanced] tab, and then click [Reset...] under [Reset Internet Explorer settings].

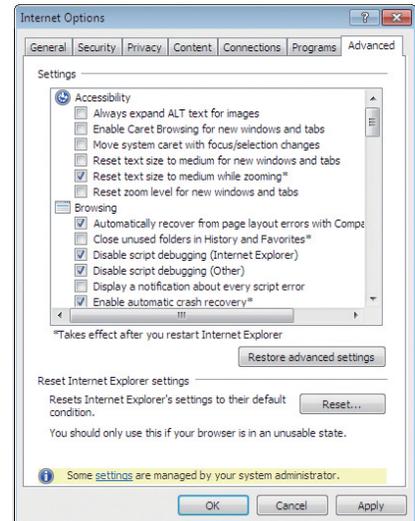







---

This product is designed and intended for use in the residential, commercial and light-industrial environment.

The product at hand is based on the following EU regulations:

- Low Voltage Directive 2006/95/EC
- Electromagnetic Compatibility Directive 2004/108/EC
- Restriction of Hazardous Substances 2011/65/EU

Please be sure to put the contact address/telephone number on this manual before handing it to the customer.

**mitsubishi** **ELECTRIC CORPORATION**

HEAD OFFICE: TOKYO BLDG., 2-7-3, MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN