



#### PAR-30MAA Back Up and Rotate




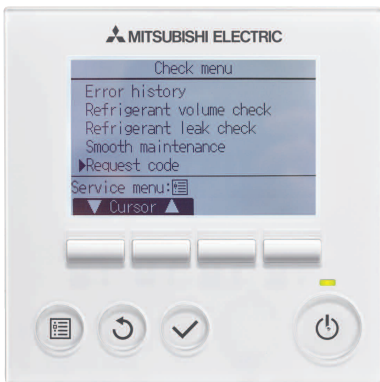
- 1.** Select the **Main menu** by pressing . In the main menu screen move the cursor using **F1/F2** to **Service** option and press .




- 2.** Enter **maintenance password** (default is 9999)



- 3.** Move the cursor next to the **Check** option and press .



- 4.** Then select **Request code** and press .



- 5.** In the Request code screen enter the **outdoor unit address** and the appropriate **rotation setting** - see list on reverse. Outdoor unit address is the same as the refrigerant address.

**Repeat step 5** for the slave unit as both ref addresses (both outdoor units) need a code request in order for back up and rotate to operate.



#### Request Code List

Rotation Setting		
Setting No. (Request Code)	Setting Contents	Initial Setting
No.1 (310)	Monitoring the request code of current setting	
No.2 (311)	Rotation and Back-up off (Normal group control operation)	○
No.3 (312)	Back-up function only	
No.4 (313)	Rotation ON (Alternating interval = 1 day) and back up function	
No.5 (314)	Rotation ON (Alternating interval = 3 day) and back up function	
No.6 (315)	Rotation ON (Alternating interval = 5 day) and back up function	
No.7 (316)	Rotation ON (Alternating interval = 7 day) and back up function	
No.8 (317)	Rotation ON (Alternating interval = 14 day) and back up function	
No.9 (318)	Rotation ON (Alternating interval = 28 day) and back up function	

2nd Stage Cut-in Setting		
Setting No. (Request Code)	Setting Contents	Initial Setting
No.1 (320)	Monitoring the request code of current setting	
No.2 (321)	Cut-in Function OFF	○
No.3 (322)	Cut-in Function ON (Set point = Set temp. +4°C(7.2°F))	
No.4 (323)	Cut-in Function ON (Set point = Set temp. +6°C(10.8°F))	
No.5 (324)	Cut-in Function ON (Set point = Set temp. +8°C(14.4°F))	



Telephone: 01707 282880  
email: [airconditioning@meuk.mee.com](mailto:airconditioning@meuk.mee.com) web: [www.airconditioning.mitsubishielectric.co.uk](http://www.airconditioning.mitsubishielectric.co.uk)

UNITED KINGDOM Mitsubishi Electric Europe Living Environmental Systems Division  
Travellers Lane, Hatfield, Hertfordshire, AL10 8XB, England General Enquiries Telephone: 01707 282880 Fax: 01707 278881  
IRELAND Mitsubishi Electric Europe Westgate Business Park, Ballymount, Dublin 24, Ireland  
Telephone: Dublin (01) 419 8800 Fax: Dublin (01) 419 8890 International code: (003531)



[www.greengateway.mitsubishielectric.co.uk](http://www.greengateway.mitsubishielectric.co.uk)  
Mitsubishi Electric's commitment  
to the environment

