

AIR CONDITIONING SYSTEMS

CITY MULTI



DATA BOOK

MODEL

PUMY-P112-140VKM5 (-BS)

PUMY-P112-140YKM4 (-BS)


PUMY-P112-140YKME4 (-BS)

PUMY-P200YKM2 (-BS)

PUMY-P250-300YBM (-BS)





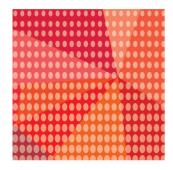

GENERAL LINE-UP

Line-up of Outdoor Units of R410A CITY MULTI

Heat Pump S Series



PUMY-P112VKM5(-BS) PUMY-P125VKM5(-BS) PUMY-P140VKM5(-BS) PUMY-P112YKM(E)4(-BS) PUMY-P125YKM(E)4(-BS) PUMY-P140YKM(E)4(-BS) PUMY-P200YKM2(-BS)

4.5, 5, 6, 8HP



PUMY-P250YBM(-BS) PUMY-P300YBM(-BS)

10, 12HP

PUMY-P-VKM5, PUMY-P-YKM(E)4, PUMY-P-YKM2, PUMY-P-YBM

1. SPECIFICATIONS	2
2. EXTERNAL DIMENSIONS	7
3. CENTER OF GRAVITY	11
4. ELECTRICAL WIRING DIAGRAMS	14
5. SOUND LEVELS	19
6. OPERATION TEMPERATURE RANGE	21
7. CAPACITY TABLES	22
7-1. Selection of Cooling/Heating Units	
7-2. Correction by temperature	
7-3. Correction by total indoor	
7-4. Correction by refrigerant piping length	
7-5. Correction at frost and defrost	
8. OPTIONAL PARTS	
8-1. JOINT	
8-2. HEADER 8-3. BRANCH BOX	
9. ELECTRICAL WORK	
9-1. General cautions9-2. Power supply for Outdoor unit	
9-3. Power cable specifications	
9-4. Power supply examples	
10.M-NET CONTROL	
10-1.Transmission cable length limitation	
10-2.Transmission cable specifications	
10-3.System configuration restrictions	
10-4.Address setting	60
11.PIPING DESIGN	70
11-1.R410A Piping material	
11-2.Piping Design	
11-3.Refrigerant charging calculation	
12.OUTDOOR INSTALLATION	
12-1.Requirement on installation site	
12-2.Spacing	
12-3.FIPING UNECTION	97

Model					PUMY-P112VKM5(-BS)	PUMY-P125VKM5(-BS)	PUMY-P140V	/KM5(-BS)		
Power source					1-phase 220	 -230-240 V, 50 Hz; 1-phase 220-	 230 V. 60 Hz			
Cooling capacity		kW*1			12.5	14.0	15.5	 5		
(Nominal)		kcal/h*1			10,750	12,040	13,33	30		
		Btu/h*1			42,650	47,768	52,88	36		
	Power input	kW			2.79	3.46	4.52			
	Current input	Α			,	15.97-15.27-14.64, 15.97-15.27				
	COP	kW/kW			4.48	4.05	3.43	3		
Temp. range of cooling	Indoor temp. Outdoor temp.	W.B.				15 to 24°C 5 to 52°C *3, *4				
Heating capacity		kW* ²			14.0	16.0	18.0)		
(Nominal)		kcal/h*2			12,040	13,760	15,48			
,		Btu/h*2			47.768	54,592	61.41			
	Power input	kW			3.04	3.74	4.47			
	Current input	Α			14.03-13.42-12.86,14.03-13.42	17.26-16.51-15.82,17.26-16.51	20.63-19.73-18.9	1,20.63-19.73		
	COP	kW/kW			4.61	4.28	4.03	3		
Temp. range of	Indoor temp.	D.B.				15 to 27°C				
heating	Outdoor temp.	. W.B.				−20 to 15°C				
Indoor unit	Total capacity					0 to 130% of outdoor unit capaci	,			
connectable	Model/	CITY MI			P10 - P140 / 9	P10 - P140 / 10	P10 - P14			
	Quantity	Branch I		1	P15 - P100 / 8	P15 - P100 / 8	P15 - P1			
		Mixed	Branch box 1unit* ⁶	CITY MULTI	P15 - P140 / 5	P15 - P140 / 5	P15 - P1			
		system		Branch box	P15 - P100 / 5	P15 - P100 / 5	P15 - P1			
			Branch box 2unit* ⁶	CITY MULTI	P15 - P140 / 3 or 2*5	P15 - P140 / 3	P15 - P1			
0	II (ODI)	dD 4As	Zuriit	Branch box	P15 - P100 / 7 or 8* ⁵	P15 - P100 / 8	P15 - P1	00 / 8		
Sound pressure (measured in ar Sound power lev	nechoic room)	dB <a>			49/51	50/52	51/5			
(measured in an	echoic róom)				69/71	70/72	71/7:	3		
Refrigerant piping diameter	Liquid pipe	mm (inc				9.52 (3/8)				
	Gas pipe	mm (inc	h)			15.88 (5/8)				
FAN *2	Type × Quanti Airflow rate	m³/min				Propeller Fan x 2 110				
	Allilow rate	L/s				1,833				
		cfm				3,884				
	Control, Drivin		nism			DC control				
	Motor output	kW				0.074+0.074				
	External static				0					
Compressor	Type × Quanti	ty			Scroll hermetic compressor x 1					
	Manufacture					Mitsubishi Electric Corporation				
	Starting metho	od				Inverter				
	Capacity	%			Cooling 26 to 100	Cooling 24 to 100	Cooling 21	1 to 100		
	control Motor output	kW			Heating 20 to 100 2.9	Heating 18 to 100 3.5	Heating 17			
	Case heater	kW			2.9	0	3.9			
	Lubricant	KVV				FV50S (2.3litter)				
External finish	Labricant				Galvan	nized Steel Sheet Munsell No. 3Y	7 8/1 1			
External dimensi	ion H × W × D	mm			Salvan	1,338×1,050×330(+40)	110,111			
		inch			Ę	52-11/16 × 41-11/32 × 13(+1-9/16)			
Protection	High pressure	protectio	n			High pressure Switch	<u>, </u>			
devices	Inverter circuit				Overcurrent de	tection, Overheat detection(Heat	sink thermistor)			
	Compressor				Compi	ressor thermistor, Overcurrent de	tection			
	Fan motor				·	ng, Voltage protection, Overcurrer				
Refrigerant	Type × origina	charge				R410A 4.8 kg				
	Control					Linear expansion valve				
Net weight		kg (lb)				123 (271)				
Heat exchanger						Cross Fin and Copper tube				
HIC circuit (HIC:		inger)				Double pipe heat exchanger				
Defrosting metho					Reversed refrigerant circuit					
Standard attachment	Document			Installation Manual						
Optional parts	Accessory				Inint: CMV V62 G E U	Grounded lead wire ×1 leader: CMY-Y64/68-G-E, Branch	POX. BVC-MK3411	54BC		
	*1 Nominal cooli	ina conditi	nns	*2 N	Iominal heating conditions	IOGGEL OWER TOWNOUTS E, DIGNER		converter		
Indoor : Outdoor : Pipe length :	27°C D.B./19 35°C D.B. [95 7.5 m [24-9/1	°Č W.B. [8 5°F D.B.]		F W.B.] 2 7 7	0°C D.B. [68°F D.B.] ′°C DB/6°C W.B. [45°F D.B./43°F W ′.5 m [24-9/16 ft]	/.B.]				
					M, PEFY-P25/32/40VMA3; and M series, S series, and P series type indoor unit. orotect guide [PAC-SH95AG-E]. However, this condition does not apply to the lb = kg/0.4536					
*5 When connecting 7 indoor units via branch box, connectable CITY MULTI indoor units are 3; connecting 8 indoor units via branch box CITY MULTI indoor units are 2. *6 At least two indoor unit must be connected when using branch box. Notes: 1. Nominal conditions *1, *2 are subject to ISO 15042.					g 8 indoor units via branch box, con		ecification data to rounding			
2. Due to	continuing impro	ovement, a	bove specific	ations may be	e subject to change without notice.					

Model					PUMY-P112YKM4(-BS) PUMY-P125YKM4(-BS) PUMY-P140YKM4(-BS)						
Power source					3-phase 3	80-400-415 V, 50 Hz; 3-phase 380 V, 6) Hz				
Cooling capacity		kW *1			12.5	14.0	15.5				
(Nominal)		kcal/h *	1		10,750	12,040	13,330				
		Btu/h *1			42,650	47,768	52,886				
	Power input	kW			2.79	4.52					
	Current input	Α			4.99-4.74-4.57, 4.99	5.84-5.55-5.35, 5.84	7.23-6.87-6.62, 7.23				
	COP	kW/kW			4.48	4.05	3.43				
Temp. range of	Indoor temp.	W.B.									
cooling	Outdoor temp.	D.B.				-5 to 52°C *3, *4					
Heating capacity	<u>'</u>	kW *2			14.0	16.0	18.0				
(Nominal)		kcal/h *	2		12,040	13,760	15,480				
		Btu/h *2			47.768	54,592	61,416				
	Power input	kW			3.04	3.74	4.47				
	Current input	A			5.43-5.16-4.98, 5.43		7.15-6.79-6.55, 7.15				
	COP	kW/kW			4.61	4.28	4.03				
Temp. range of	Indoor temp.	D.B.			1.01	15 to 27°C	1.00				
heating	Outdoor temp.	_				-20 to 15°C					
Indoor unit	Total capacity	VV.D.			F	50 to 130% of outdoor unit capacity					
connectable	Model/	CITY M	LILTI		P10 - P140 / 9	P10 - P140 / 10	P10 - P140 / 12				
	Quantity	Branch			P15 - P100 / 8	P15 - P100 / 8	P15 - P100 / 8				
				CITY MULTI	P15 - P100 / 6	P15 - P100 / 6	P15 - P140 / 5				
		system	ancii DOX (1unit*6		P15 - P140 / 5 P15 - P100 / 5		P15 - P140 / 5 P15 - P100 / 5				
		3,510111		Branch box	P15 - P100 / 5 P15 - P140 / 3 or 2*5	P15 - P100 / 5	P15 - P100 / 5 P15 - P140 / 3				
			Branch box 2unit* ⁶	CITY MULTI		P15 - P140 / 3					
0	Invest (ODL)	-ID - 1	Luint	Branch box	P15 - P100 / 7 or 8*5	P15 - P100 / 8	P15 - P100 / 8				
Sound pressure I (measured in an		dB <a>			49/51	50/52	51/53				
Sound power lev		dB <a>									
(measured in and		ab M			69/71	70/72	71/73				
Refrigerant	Liquid pipe	mm (inc	:h)			9.52 (3/8)					
piping diameter	Gas pipe	mm (inc				15.88 (5/8)					
FAN *2	Type × Quantit		,			Propeller Fan × 2					
	Airflow rate	m³/min				110					
	, amon rate	L/s				1,833					
		cfm				3,884					
	Control, Driving		niem			DC control					
		kW	1113111			0.074+0.074					
	External static					0.074+0.074					
Camanaaaa		•				Scroll hermetic compressor × 1					
Compressor	Type x Quantit	.y			Mitsubishi Electric Corporation						
	Manufacture				Mitsubishi Electric Corporation Inverter						
	Starting metho										
	Capacity	%			Cooling 26 to 100 Heating 20 to 100	Cooling 24 to 100 Heating 18 to 100	Cooling 21 to 100 Heating 17 to 100				
		kW			2.9	3.5	3.9				
	Case heater	kW			2.9	0	3.9				
		KVV				<u> </u>					
External first-t-	Lubricant				0-1	FV50S(2.3litter) nized Steel Sheet Munsell No. 3Y 7.8/1.	1				
External finish	on II W D	ma :			Galvar		I				
External dimensi	OII H × W × D	mm				1338 × 1050 × 330(+40)					
Desta eti.	I that are	inch	_			52-11/16 × 41-11/32 × 13 (+1-9/16)					
Protection devices	High pressure					High pressure Switch					
4641069	Inverter circuit	(COMP.	ran)			tection, Overheat detection(Heat sink th					
	Compressor	-			·	ressor thermistor, Over current detection					
D (1)	Fan motor				Overheatin	ng, Voltage protection, Over current dete	ction				
Refrigerant	Type × original	charge				R410A 4.8 kg					
	Control					Linear expansion valve					
Net weight		kg (lb)				125 (276)					
Heat exchanger						Cross Fin and Copper tube					
HIC circuit (HIC:		nger)				Double pipe heat exchanger					
Defrosting metho						Reversed refrigerant circuit					
Standard	Document					Installation Manual					
attachment Accessory						Grounded lead wire x1					
Optional parts					Joint: CMY-Y62-G-E, Header: CMY-Y64/68-G-E, Branch box: PAC-MK34/54BC						
P20/25/32VLF	50 to 126_F D.B. RM(M), PFFY-P20	C W.B. [8 PF D.B.] ft] .], when c 0/25/32VI	:1°F D.B/66°l connecting fo KM, PFFY-P:	W.B.] 20 7' 7. 0 Ilowing models 20/25/32VCM,		•	Unit converter kcal/h = kW × 860 Btu/h = kW × 3,412 cfm = m³/min × 35.3° Ib = kg/0.4536				
unit listed in *3. *5 When connecti connectable CI *6 At least two inc Notes: 1. Nomina	ing 7 indoor units ITY MULTI indoo door unit must be al conditions *1,	s via bran r units are connecte *2 are s	ch box, conr e 2. ed when usir ubject to IS0	ectable CITY Nong branch box. O 15042.	AULTI indoor units are 3; connecting the subject to change without its subject with the change with the change with the change with the change with the chan	g 8 indoor units via branch box,	Above specification dat is subject to rounding variation.				


Model					PUMY-P112YKME4(-BS)	PUMY-P125YKME4(-BS)	PUMY-P140YKME4(-BS)		
Power source					,	3-phase 380-400-415 V, 50 Hz			
Cooling capacity		kW*1			12.5	14.0	15.5		
(Nominal)		kcal/h*1			10,750	12.040	13,330		
		Btu/h*1			42,650	47,768	52,886		
	Power input	kW			2.79	3.46	4.52		
	Current input	Α			4.99-4.74-4.57	7.23-6.87-6.62			
	COP	kW/kW			4.48	4.05	3.43		
Temp. range of	Indoor temp.	W.B.				15 to 24°C			
cooling	Outdoor temp.	D.B.				−5 to 52°C *3, *4			
Heating capacity		kW* ²			14.0	16.0	18.0		
(Nominal)		kcal/h*2			12,040	15,480			
		Btu/h*2			47,768	54,592	61,416		
	Power input	kW			3.04	3.74	4.47		
	Current input	Α			5.43-5.16-4.98	6.31-6.00-5.78	7.15-6.79-6.55		
	COP	kW/kW			4.61	4.28	4.03		
Temp. range of	Indoor temp.	D.B.				15 to 27°C			
heating	Outdoor temp.	W.B.				−20 to 15°C			
Indoor unit	Total capacity					50 to 130% of outdoor unit capacity	 у		
connectable	Model/	CITY M			P10 - P140 / 9	P10 - P140 / 10	P10 - P140 / 12		
	Quantity	Branch	box* ⁶		P15 - P100 / 8	P15 - P100 / 8	P15 - P100 / 8		
			Branch box		P15 - P140 / 5	P15 - P140 / 5	P15 - P140 / 5		
		system	1unit* ⁶	Branch box	P15 - P100 / 5	P15 - P100 / 5	P15 - P100 / 5		
				CITY MULTI	P15 - P140 / 3 or 2*5	P15 - P140 / 3	P15 - P140 / 3		
			2unit*6	Branch box	P15 - P100 / 7 or 8* ⁵	P15 - P100 / 8	P15 - P100 / 8		
Sound pressure (measured in an	level (SPL)	dB <a>			49/51	50/52	51/53		
Sound power lev		dB <a>							
(measured in and	echoic room)	ub \A>			69/71	70/72	71/73		
Refrigerant	Liquid pipe	mm (inc	h)			9.52 (3/8)			
piping diameter	Gas pipe	mm (inc	h)			15.88 (5/8)			
FAN *2	Type × Quantit	y .	•			Propeller Fan x 2			
	Airflow rate	m³/min				110			
		L/s				1,833			
		cfm				3,884			
	Control, Driving	g mechai	nism			DC control			
	Motor output	kW				0.074+0.074			
	External static	press.				0			
Compressor	Type × Quantit	y				Scroll hermetic compressor x 1			
	Manufacture					Mitsubishi Electric Corporation			
	Starting metho	d				Inverter			
	Capacity	%			Cooling 26 to 100	Cooling 24 to 100	Cooling 21 to 100		
	control				Heating 20 to 100	Heating 18 to 100	Heating 17 to 100		
	Motor output	kW			2.9	3.5	3.9		
	Case heater	kW	-			0			
	Lubricant					FV50S (2.3litter)	7.0/4.4		
External finish		1			Galva	nized Steel Sheet Munsell No. 3Y 7	<u>′.8/1.1</u>		
External dimensi	on H × W × D	mm	-			1,338×1,050×330(+40)			
Doots "	11:-1-	inch				52-11/16 × 41-11/32 × 13(+1-9/16)			
Protection devices	High pressure				•	High pressure Switch	de la disconside () N		
4641063	Inverter circuit	(COMP./	ran)			etection, Overheat detection(Heat s	· · · · · · · · · · · · · · · · · · ·		
	Compressor					pressor thermistor, Overcurrent dete			
Defeie	Fan motor				Overheat	ing, Voltage protection, Overcurrent	. detection		
Refrigerant	Type × original	cnarge				R410A 4.8kg			
Not weight	Control	lea /II- \				Linear expansion valve			
Net weight		kg (lb)				136 (300)			
Heat exchanger	Hoot Into: Oh	2021				Cross Fin and Copper tube			
HIC circuit (HIC:		iger)				Double pipe heat exchanger			
Defrosting methor Standard	Document					Reversed refrigerant circuit Installation Manual			
attachment	Accessory					Grounded lead wire ×1			
Optional parts					Joint: CMV-V62-C E	Header: CMY-Y64/68-G-E, Branch	hox: PAC-MK3//5/RC		
	*1 Nominal cooli	na conditi	ons	*2 N	ominal heating conditions	House. Own-104/00-G-E, Dialicil	Unit converter		
Outdoor: 35°C D.B. [95°F D.B.] 7 Pipe length: 7.5 m [24-9/16 ft] 7 Level difference: 0 m [0 ft] 0 *3 10 to 52°C D.B. [50 to 126°F D.B.], when connecting following mode P20/25/32VLRM(M), PFFY-P20/25/32VKM, PFFY-P20/25/32VCM,					20°C D.B. [68°F D.B.] 7.5 m [24-9/16 ft] 0 m [0 ft] kcal/h = kW ×				
unit listed in *3 *5 When connecti CITY MULTI in *6 At least two inc Notes: 1. Nomina	3. ing 7 indoor units door units are 2. door unit must be Il conditions *1, *	s via brand connecte 2 are sub	ch box, conne ed when using ject to ISO 15	ctable CITY Notes that the contract of the con		ng 8 indoor units via branch box, conn			


Model	PUMY-P200YKM2, PUMY-P200YKM2-BS										
Power source					3-phase 380-400-415 V, 50 Hz						
Cooling capacity				kW *1	22.4	22.4					
(Nominal)				kcal/h *1	19,300						
				Btu/h *1	76,400						
	Powe	er inp	ut	kW	6.05						
		ent in		A	9.88- 9.39- 9.05						
	EER		put	kW/kW	9.88- 9.39- 9.05 3.70						
T	+			W.B.							
Temp. range of cooling		or ten			-5 to 52°C *3,*4						
-	Outa	oor te	emp.	D.B.							
Heating capacity				kW *2	25.0						
(Nominal)				kcal/h *2	21,500						
				Btu/h *2	85,300						
	_	er inp		kW	5.84						
		ent in	put	Α	9.54- 9.06- 8.74						
	COP			kW/kW	4.28						
Temp. range of	Indoo	or ten	np.	D.B.	15 to 27°C						
heating	Outd	oor te	emp.	W.B.	−20 to 15°C *3,*4						
Indoor unit	Total	capa	city		50 to 130% of outdoor unit capacity						
connectable	_	CIT	Y MULTI		P10-P200/12						
	# <u></u>	Brar	nch box		kW type: P15-P100/8						
	na	Ε	Branch box	CITY MULTI	P10-P200/5						
	<u>S</u>	ste	1 unit	Branch box	kW type: P15-P100/5						
	Model/Quantity	g S	Branch box	CITY MULTI	P10-P200/3						
	ž		2 units	Branch box	kW type: P15–P100/8						
Sound pressure level (SPL)	(meacu				56/61						
Power pressure level (PWL)					75/80						
Refrigerant	Liqui				9.52 (3/8)* ⁵						
piping diameter	_		Е	mm (inch)							
	Gas	<u> </u>		mm (inch)	19.05 (3/4)						
FAN			uantity		Propeller Fan × 2						
	Airflo	w rat	e	m³/min	139/141						
				L/s	2,317/2,350	_					
				cfm	4,909/4,979	_					
			riving mecha		DC control						
	Moto	r out	put	kW	0.20 + 0.20						
	Exter	rnal s	tatic pressur	е	0						
Compressor	Туре	× Qı	uantity		Scroll hermetic compressor × 1						
	Manu	ufactu	ırer		Siam Compressor Industry Co., Ltd.						
	Start	ing m	ethod		Inverter						
	Capa	acity o	control	%	Cooling 25 to 100						
					Heating 17 to 100	Heating 17 to 100					
	Moto	r out	put	kW	5.3						
	Case	heat	ter	kW	0						
	Lubri	icant			FVC68D (2.3litter)						
External finish	•				Galvanized Steel Sheet						
					Munsell No. 3Y 7.8/1.1						
External dimension H	xWxD			mm	1,338×1,050×330(+40)						
				inch	52-11/16 × 41-11/32 × 13(+1-10/16)						
Protection devices	High	pres	sure protecti	on	High pressure Switch						
		<u> </u>	rcuit (COMP		Overcurrent detection, Overheat detection(Heat sink the	ermistor)					
		press			Compressor thermistor, Over current detection	· · · · · · · · · · · · · · · · · · ·					
		motor			Overheating, Voltage protection						
Refrigerant	+		ginal charge		R410A 7.3 kg						
	Cont		J S. 101 90		Linear Expansion Valve						
Net weight	100110			kg (lb)	141 (311)						
Heat exchanger				וייש (ייט)	Cross Fin and Copper tube						
HIC circuit (HIC: Heat	Intor (Char	ner)		Double pipe heat exchanger						
Defrosting method	inter-	Unall	yci <i>)</i>		Reversed refrigerant circuit						
Standard attachment	Docu	ımor	<u> </u>		Reversed reinigerant circuit Installation Manual						
otanuaru attachment											
Accessory Ontional parts			/		Grounded lead wire ×1						
Optional parts					Joint: CMY-Y62-G-E Header: CMY-Y64/68-G-E						
						11.9					
			-		Nominal heating conditions	Unit converter					
Indoor :			C W.B. [81°F D.	3/66°F W.B.]	20°C D.B. [68°F D.B.]						
Outdoor :			[95°F D.B.]		7°C DB/6°C W.B. [45°F D.B./43°F W.B.]	kcal/h = kW × 860					
Pipe length:		-	9/16 ft]		7.5 m [24-9/16 ft]	$Btu/h = kW \times 3,412$					
Level difference :	0 m [0 ft]			0 m [0 ft]	cfm = m3/min × 35.31					
PFFY-P20/25/32V	KM. P	FFŸ-I	P20/25/32V0	CM. PEFY-P4	10/15/20/25/32VLM, PFFY-P20/25/32VLEM, PFFY-P20/25/32VLRM(M), 0/63VMA3-E and M series, S series, and P series type indoor unit.	Ib = kg/0.4536					
*5 Liquid pipe diame! Note: 1. Nominal co	ter: 12 ndition	.7 mr ns *1,	n, when furth * ² are subje	ner piping leng ct to ISO 150	H95AG-E]. However, this condition does not apply to the indoor unit listed in *3. yth is longer than 60 m. 12. tions may be subject to change without notice.	Above specification data is subject to rounding variation					
2. Due to com	arianig	mpi	o vomoni, ab	ото оробінов	asio may be employed to enumber without fields.	<u> </u>					


Model					PUMY-P250YBM (-BS)	PUMY-P:	300YBM (-BS)		
Power source	-				3-phase, 380-400		(/		
Cooling capacity				kW *1	28.0	· · · · ·	33.5		
(Nominal)				kcal/h *1	24,100	2	28,800		
				Btu/h *1	95,500	1	14,300		
	Powe	er inp	out	kW	8.21		10.12		
	Curre	ent in	put	A	13.35 - 12.68 - 12.22	16.36 -	15.54 - 14.98		
	EER			kW/kW	3.41		3.31		
Temp. range of	Indoo	or ter	np.	W.B.	15 to 24	l _c C			
cooling	Outd	oor t	emp.	D.B.	-5 to 52°0	C *3,*4			
Heating capacity				kW *2	31.5		37.5		
(Nominal)				kcal/h *2	27,100	3	32,200		
				Btu/h *2	107,500	1:	28,000		
	Powe	er inp	out	kW	7.41		9.12		
	Curre			A	12.11 - 11.51 - 11.09	14.74 -	14.01 - 13.50		
	COP	,		kW/kW	4.25		4.11		
Temp. range of	Indoo	or ter	np.	D.B.	15 to 27	7°C			
heating	Outd	oor t	emp.	W.B.	-20 to 1	5°C			
Indoor unit	Total				50 to 130% of outdo	or unit capacity			
connectable		$\overline{}$	Y MULTI		P10 - P25				
		Brai	nch box		kW type: P15	- P50/ 12			
	_≥		Branch box	CITY MULTI	P10-P250/ 25		-P250/ 25		
	ıntii		1 unit	Branch box	kW type: P15-P50/ 5	kW type	e: P15-P50/ 5		
	Jus	_		Total (Quantity)	30	,,,	30		
) XE	sterr		CITY MULTI	P10-P250/ 23	P10-	-P250/ 23		
	Model/Max Quantity		2 units	Branch box	kW type: P15-P50/ 10		: P15-P50/ 10		
	ge	ixec		Total (Quantity)	30		30		
	ĭ	≥	Branch box	CITY MULTI	P10-P250/ 22	P10-	-P250/ 22		
			3 units	Branch box	kW type: P15-P50/ 12	kW type	: P15-P50/ 12		
				Total (Quantity)	30	71	30		
Sound pressure level (SPL)	(measu	red in	anechoic room)		55 / 61	5	57 / 62		
Power pressure level (PWL)					73 / 79	7	'5 / 79		
Refrigerant	Liqui			mm (inch)	ø9.52 (3/8) *5	ø1:	2.7 (1/2)		
piping diameter	Gas	pipe		mm (inch)	ø22.4 (7/8)	ø2	25.4 (1)		
FAN	_		uantity	, ,	Propeller F				
	Airflo	w ra	te	m³/min	165/183	1	65/183		
				L/s	2750/3050	27	50/3050		
				cfm	5826/6462	58:	26/6462		
	Cont	rol, E	Driving mecha	anism	DC con	trol			
	Moto	r out	put	kW	0.375 × 2				
	Exte	rnal s	tatic pressur	е	0Pa / 30Pa *6				
Compressor	Туре	× Q	uantity		Scroll hermetic compressor × 1				
	Manu	ufact	urer		Siam Compressor In	dustry Co., Ltd.			
	Start	ing n	nethod		Inverte	er			
	Moto	r out	put	kW	5.7		6.9		
	Case	hea	ter	kW	-				
	Lubri	icant			FVC68D (3.	0 litter)			
External finish					Galvanized St				
					Munsell No. 3				
External dimension H	xWxD			mm	1,662 × 1,050 ×	. ,			
	I ·			inch	65-7/16 × 41-11/32 × 1				
Protection devices	_	•	sure protecti		High pressur				
	_		ircuit (COMP	./FAN)	Overcurrent detection, Overheat d	· · · · · · · · · · · · · · · · · · ·			
	Com	•			Compressor thermistor, C		n		
D (1)	Fanı				Overheating, Volta	 			
Refrigerant			iginal charge		R410A 9.				
	Cont	rol			Linear Expans				
Net weight				kg (lb) [-BS kg (lbs)]	196 (432) [19	· /•			
Heat exchanger					Cross Fin and C				
HC circuit (HIC: Heat Inter-Changer)					Double pipe hea				
Defrosting method	le.				Reversed refrige				
Standard attachment					Installation				
	Acce	ssor	У		Grounded lead wire ×1		Grounding lead wire ×1		
Optional parts					Joint: CMY-Y				
*1. Nominal cooling cond	litions (s	subied	et to ISO 15042	2)	Header: CMY-Y	64/68-G-E	Unit convertor		
Indoor: 27°CD.B./19°C *2. Nominal heating cond Indoor: 20°CD.B. [68° *3. 10 to 52°C, when con	CW.B. [litions (FD.B.], necting	[81°F[subje , Outd , follov	D.B./66°FW.B.] ct to ISO 15042 loor: 7°CD.B./6 wing models: P	, Outdoor: 35°CD.B. [95°F 2) °CW.B. [45°FD.B./43°FW. KFY-P10/15/20/25/32VLM	D.B.], Pipe length: 7.5 m [24-9/16 ft.], Level difference: 0 m B.], Pipe length: 7.5 m [24-9/16 ft.], Level difference: 0 m [0 I, PFFY-P20/25/32VKM, PFFY-P20/25/32VCM, PFFY-P20/2	ft.]	kcal/h = kW × 860 Btu/h = kW × 3,412		
	sing an 12.7mm	optio n, wh	nal air protect o en further pipin	guide [PAC-SK21AG-E]. H g length is longer than 90i	lowever, this condition does not apply to the indoor unit liste m, and when PEFY-P200 or P250 is connected.	d in *3.	cfm = m3/min × 35.31 lb = kg/0.4536 Above specification data		


S. Liquid pipe diameter: 12.7/min, when harder piping length is longer than 90ff, and when PEP*
 6. It is possible to set the External static pressure to 30 Pa by Dip Switch.
 Notes:
 Nominal conditions *1, *2 are subject to ISO15042
 Due to continuing improvement, above specifications may be subject to change without notice.

Above specification data is subject to rounding variation.

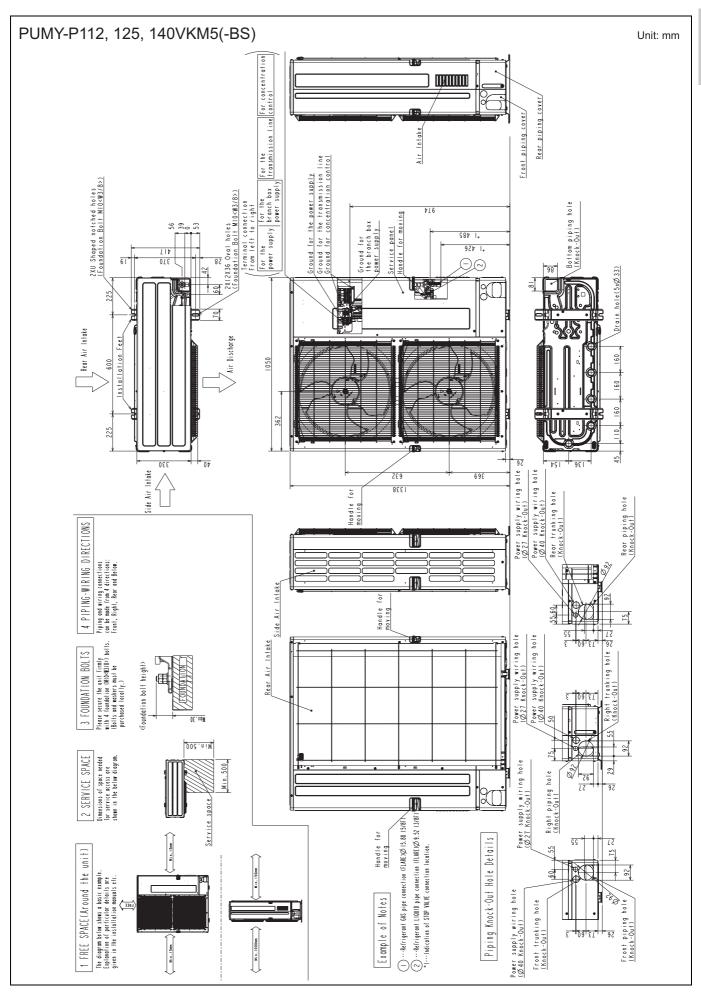

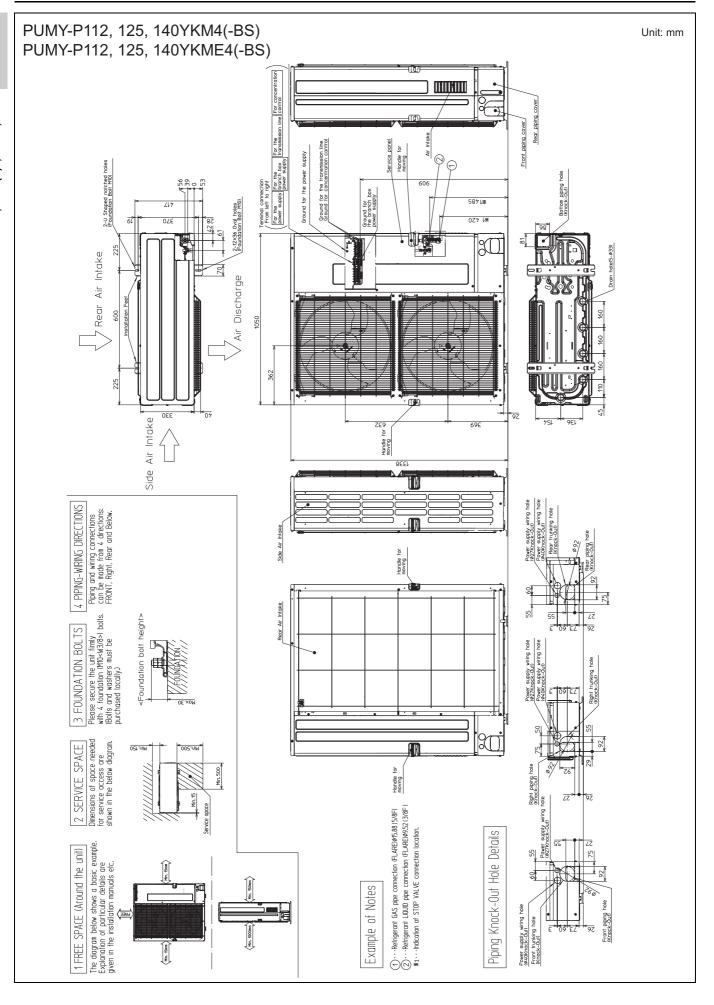


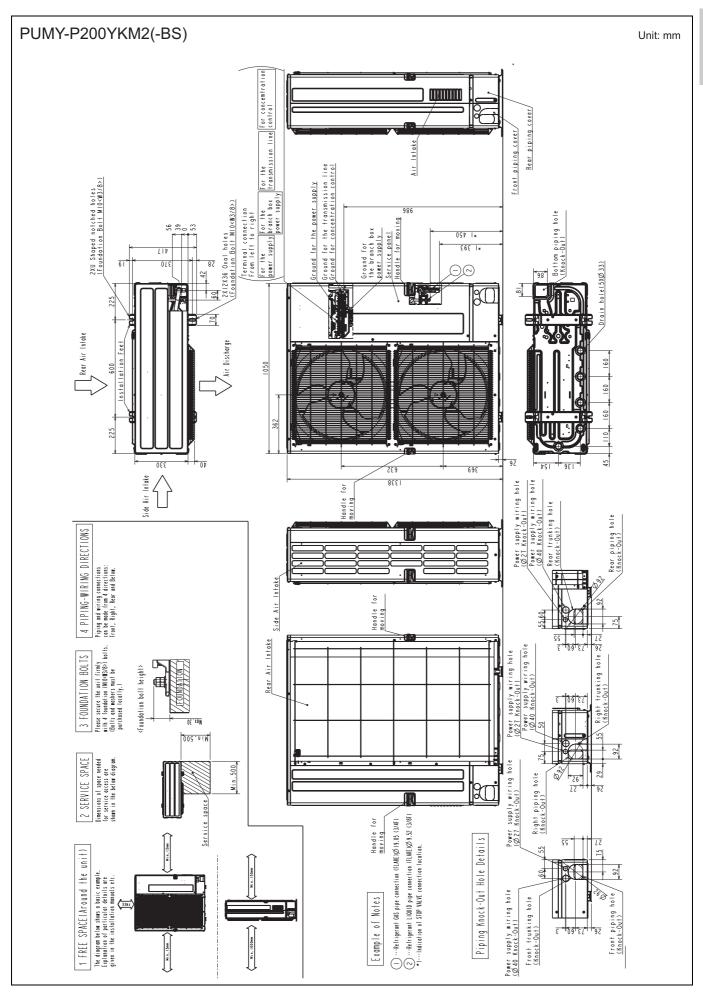


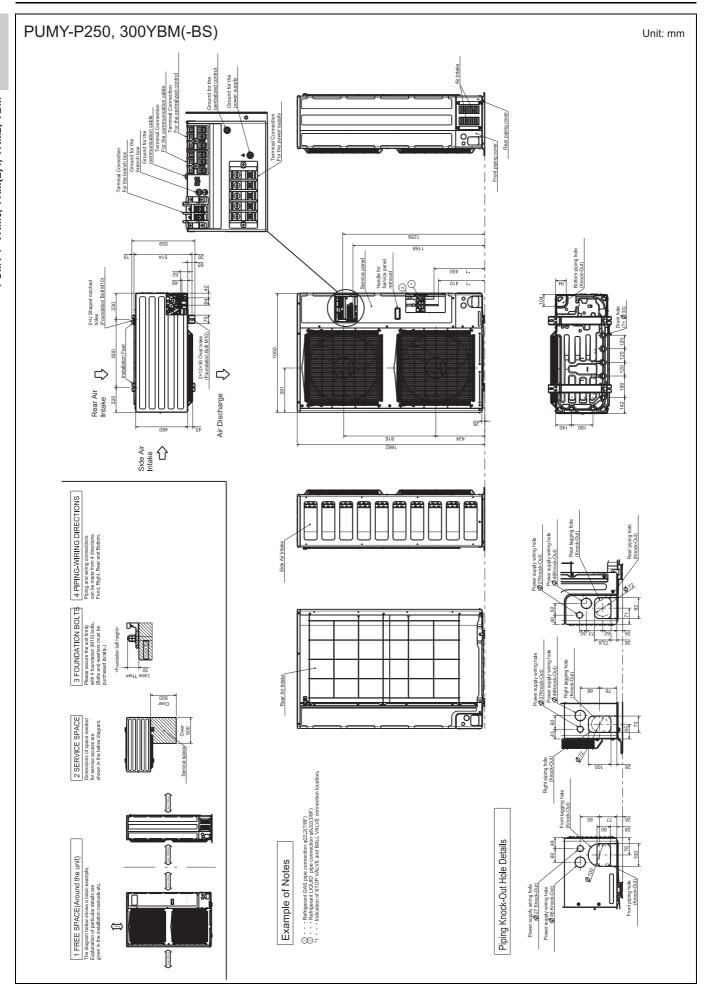

PUMY-P112, 125, 140VKM5(-BS) PUMY-P112, 125, 140YKM4(-BS) PUMY-P112, 125, 140YKME4(-BS)

Unit: mm

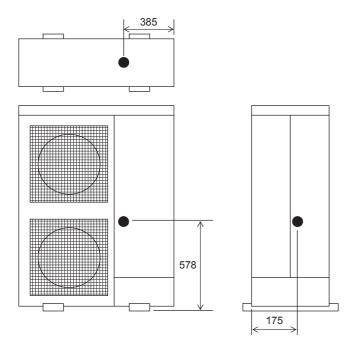


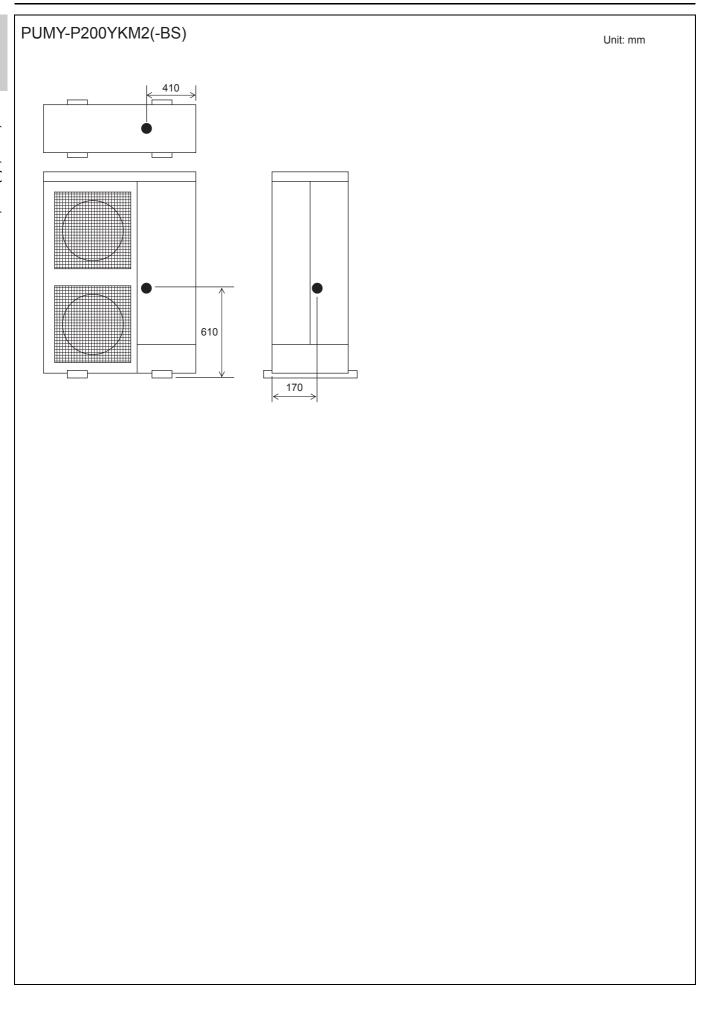






380


Unit: mm

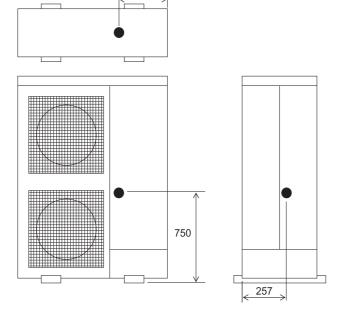


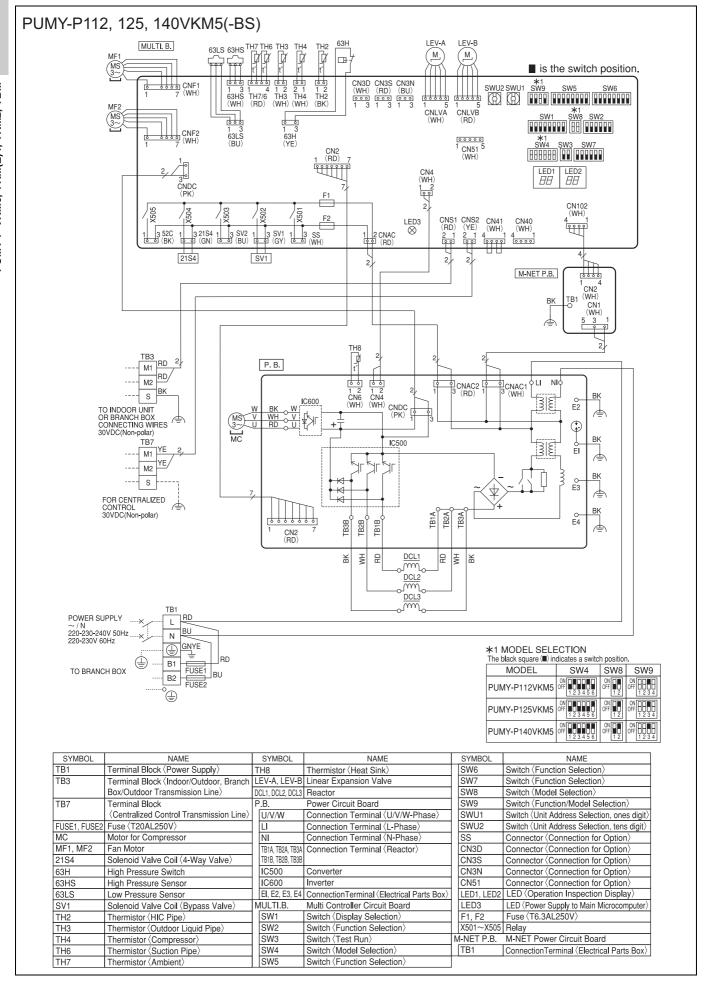


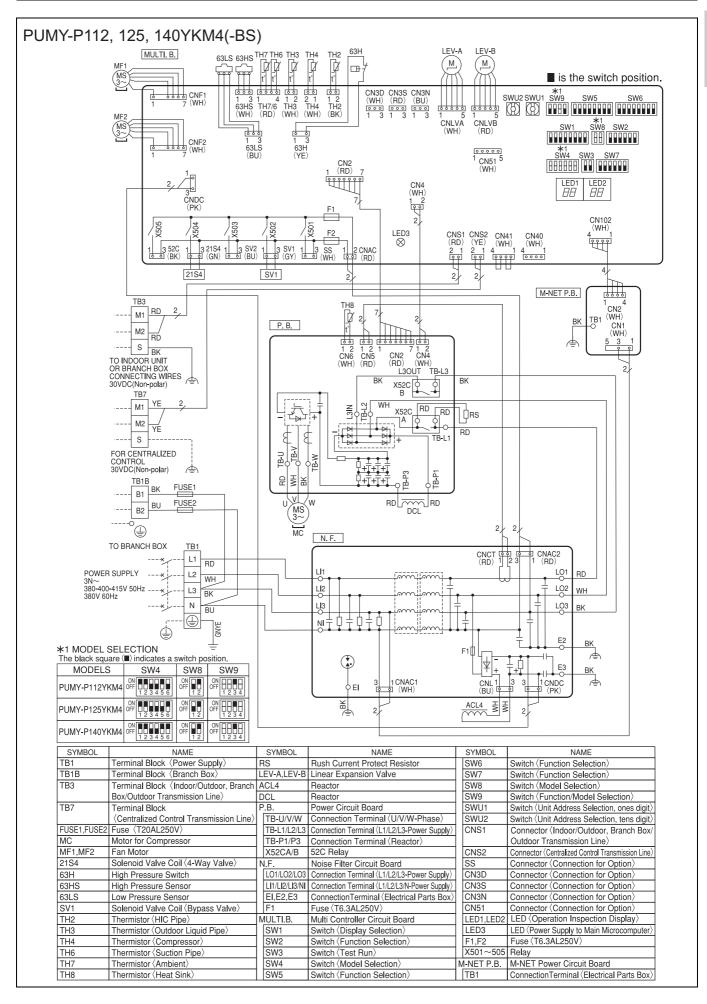


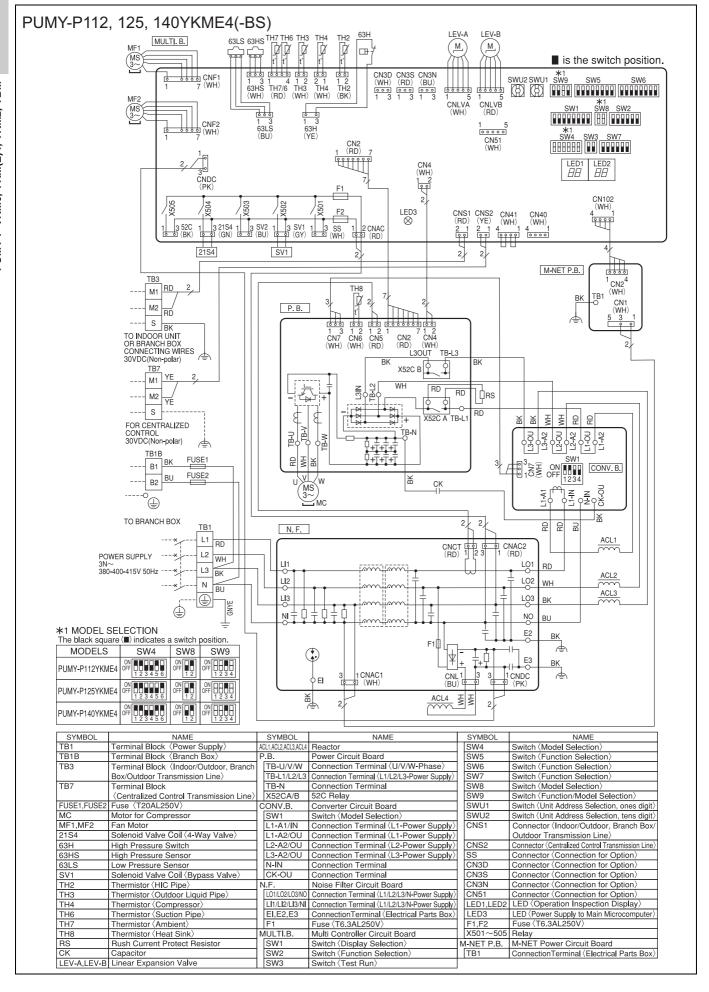

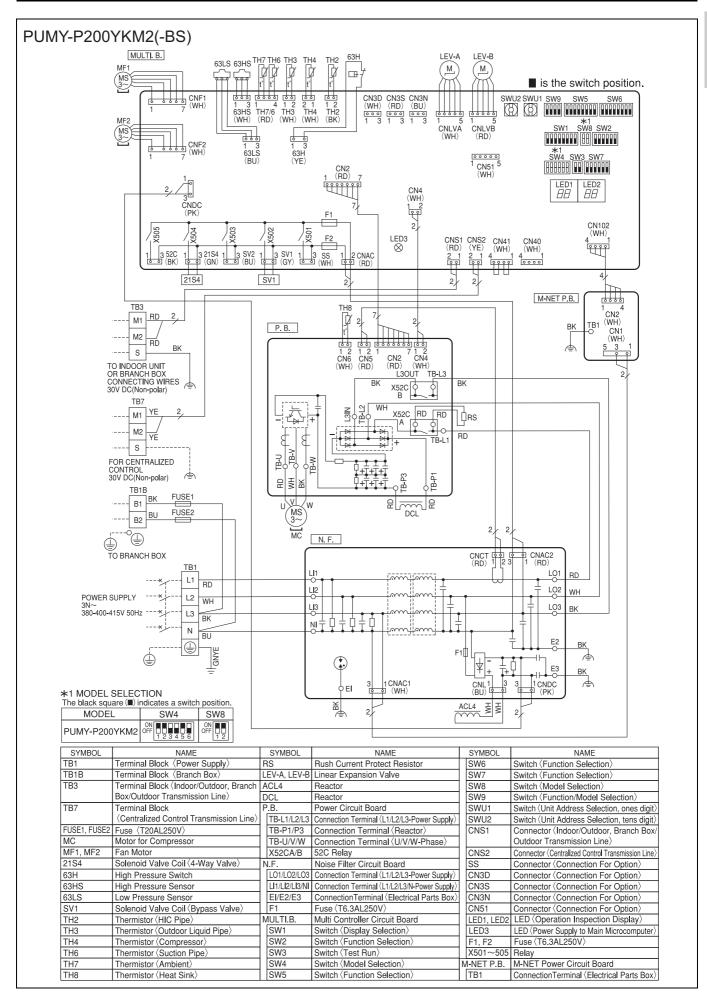

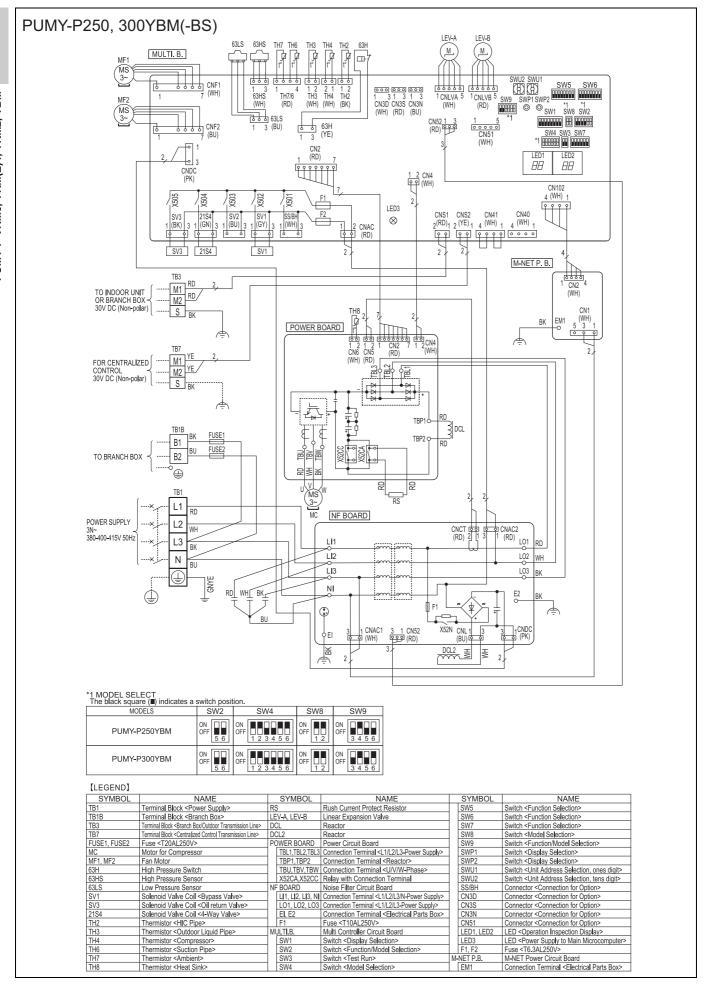

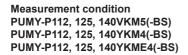


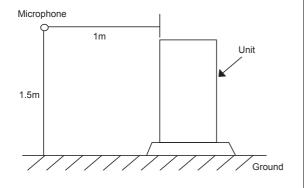

Sound level of PUMY-P140VKM5/PUMY-P140YKM(E)4 - Cool 50/60Hz ---- Low 50/60Hz ----- Heat 50/60Hz 80 Octave band sound level (dB) 70 NC-70 60 NC-60 50 NC-50 40 NC-40 30 NC-30 Approximate minimum audible limit on continuous noise 20 NC-20 10 63 125 8k Octave band central frequency (Hz)


		63	125	250	500	1k	2k	4k	8k	dB(A)	
Standard Cooling	50/60Hz	64.0	52.8	51.3	50.0	45.4	39.7	33.5	28.2	51.0	
Standard Heating	50/60Hz	59.2	59.7	51.1	52.4	46.8	41.7	36.7	31.2	53.0	
Low noise mode	50/60Hz	63.2	49.2	47.0	47.1	41.6	36.5	32.8	30.6	48.0	
When Low noise mo from Low noise mod									normal	operation	

Sound level of PUMY-P112VKM5/PUMY-P112YKM(E)4

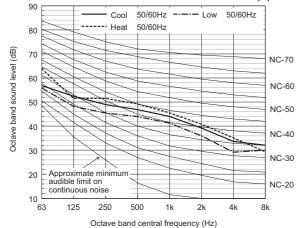


		63	125	250	500	1k	2k	4k	8k	dB(A)
Standard Cooling	50/60Hz	56.9	52.4	49.0	46.9	44.0	39.2	33.7	32.1	49.0
Standard Heating	50/60Hz	63.9	51.6	51.6	49.2	45.5	40.8	35.1	29.3	51.0
Low noise mode	50/60Hz	55.8	48.1	45.5	44.0	41.2	36.0	29.2	30.0	46.0
When Low noise mode is set, the A/C system's capacity is limited. The system could return to normal operation										
from Low noise mod									i iloiiilai c	peration


Sound level of PUMY-P125VKM5/PUMY-P125YKM(E)4

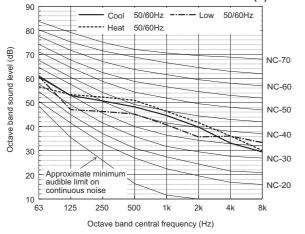

		63	125	250	500	1k	2k	4k	8k	dB(A)
Standard Cooling	50/60Hz	60.8	52.8	50.6	48.2	44.7	39.9	33.2	29.5	50.0
Standard Heating	50/60Hz	56.6	53.3	52.2	50.9	46.4	41.7	36.2	30.1	52.0
Low noise mode	50/60Hz	60.9	47.1	46.3	45.2	40.7	35.7	36.1	33.4	47.0
When Low noise mode is set, the A/C system's capacity is limited. The system could return to normal operation from Low noise mode automatically in the case that the operation condition is severe.										




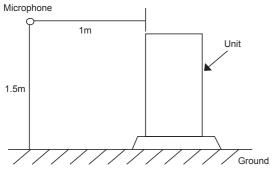

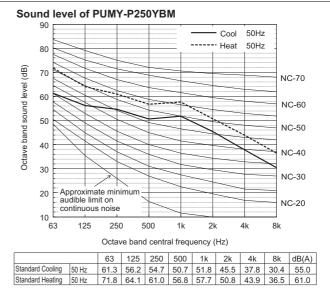


When Low noise mode is set, the A/C system's capacity is limited. The system could return to normal operation from Low noise mode automatically in the case that the operation condition is severe.

Sound level of PUMY-P200YKM2

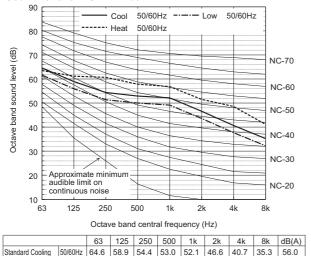

Standard Heating	50/60Hz	63.4	61.2	60.7	57.8	56.9	51.6	48.6	41.1	61.0
Low noise mode	50/60Hz	61.6	55.9	51.4	50.0	49.1	43.6	37.7	32.3	53.0
When Low noise mode is set, the A/C system's capacity is limited. The system could return to normal operation from Low noise mode automatically in the case that the operation condition is severe.										

Sound level of PUMY-P300YBM

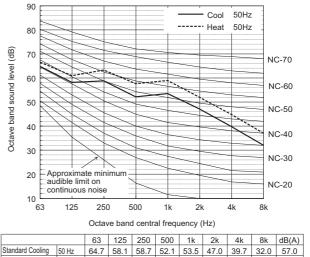


Standard Heating 50 Hz 66.5 60.9 63.2 57.5 58.9 51.9 44.8 37.0 62.0 When Low noise mode is set,the A/C system's capacity is limited. The system could return to normal operation from Low noise mode automatically in the case that the operation condition is severe.

Cooling

PUMY-P-VKM5/YKM4/YKME4 PUMY-P-YKM2

PUMY-P-YBM

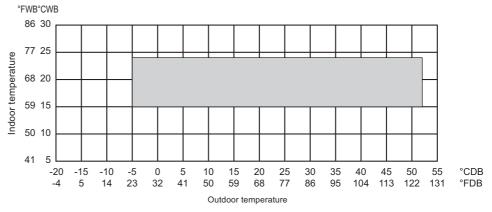

* [PUMY-P-VKM5/YKM4/YKME4]


10 to 52°CDB (50 to 126°FDB), when connecting following models: PKFY-P10/15/20/25/32VLM, PFFY-P20/25/32VLEM, PFFY-P20/25/32VLRM(M), PFFY-P20/25/32VKM, PFFY-P20/25/32VCM, PEFY-P25/32/40VMA3; and M-Series, S-Series, and P-Series type indoor unit. [PUMY-P-YKM2]

10 to 52°CDB (50 to 126°FDB), when connecting following models: PKFY-P10/15/20/25/32VLM, PFFY-P20/25/32VLEM, PFFY-P20/25/32VLRM(M), PFFY-P20/25/32VKM, PFFY-P20/25/32VCM, PEFY-P40/63VMA3; and M-Series, S-Series, and P-Series type indoor unit. [PUMY-P-VBM]

10 to 52°CDB (50 to 126°FDB), when connecting following models: PKFY-P10/15/20/25/32VLM, PFFY-P20/25/32VKM, PFFY-P20/25/32VLEM, PEFY-P63/71/80VMA3-E; and M-Series type indoor unit.

Heating


PUMY-P-VKM5/YKM4/YKME4 PUMY-P-YKM2 PUMY-P-YBM

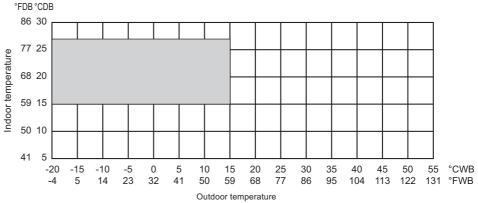

7-1. Selection of Cooling/Heating Units

How to determine the capacity when less than or equal 100% indoor model size units are connected in total:


The purpose of this flow chart is to select the indoor and outdoor units. For other purposes, this flow chart is intended only for reference.

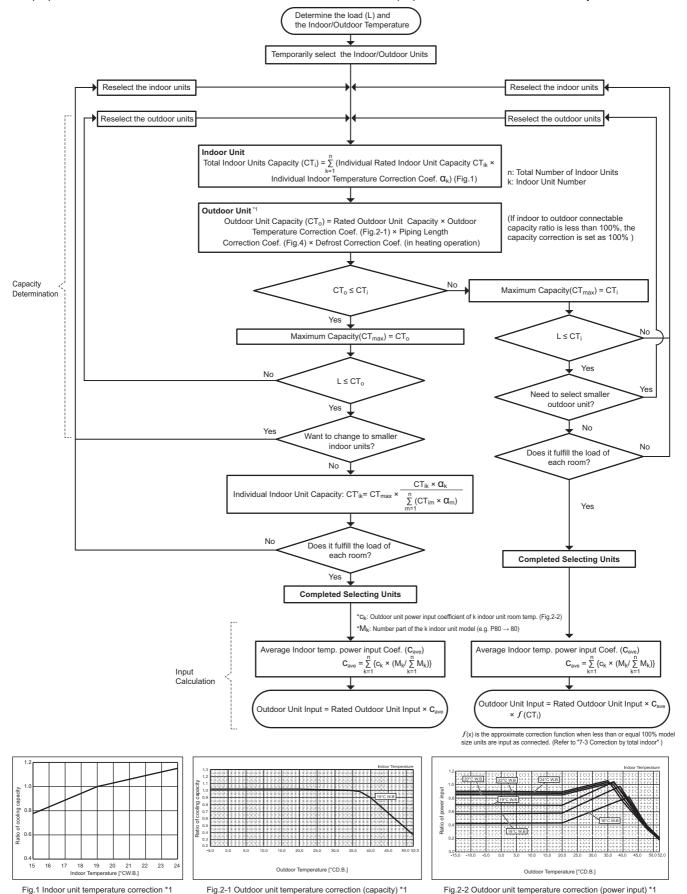

^{*1} This figure shows the characteristic of PUMY-P112/125/140VKM5 (-BS) and PUMY-P112/125/140YKM4 (-BS).

How to determine the capacity when greater than 100% indoor model size units are connected in total:

The purpose of this flow chart is to select the indoor and outdoor units. For other purposes, this flow chart is intended only for reference.

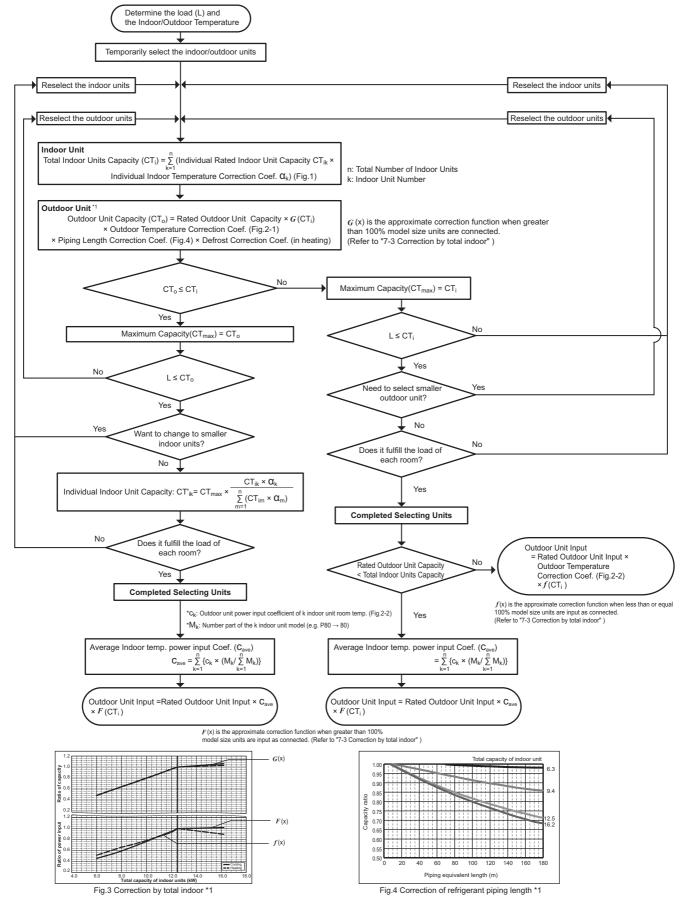

^{*1} This figure shows the characteristic of PUMY-P112VKM5 (-BS) and PUMY-P112YKM4 (-BS).

<Cooling>

Design Condition	
Outdoor Design Dry Bulb Temperature Total Cooling Load	40.5°C 8.5 kW
Room1 Indoor Design Dry Bulb Temperature Indoor Design Wet Bulb Temperature Cooling Load	27°C 20°C 4.0 kW
Room2 Indoor Design Dry Bulb Temperature Indoor Design Wet Bulb Temperature Cooling Load	32°C 22°C 4.5 kW
<other> Indoor/Outdoor Equivalent Piping Length</other>	60 m

1. Cooling Calculation

(1) Temporary Selection of Indoor Units

Room1

PEFY-P40 **4.5 kW (Rated)**

Room2

PEFY-P50 5.6 kW (Rated)

(2) Total Indoor Units Capacity

P40 + P50 = P90

(3) Selection of Outdoor Unit

The P112 outdoor unit is selected as total indoor units capacity is P90

PUMY-P112 12.5 kW

(4) Total Indoor Units Capacity Correction Calculation

Room1

Indoor Design Wet Bulb Temperature Correction (20°C) 1.03 (Refer to Figure 1)

Room2

Indoor Design Wet Bulb Temperature Correction (22°C) 1.09 (Refer to Figure 1)

Total Indoor Units Capacity (CTi)

CT_i = Σ (Indoor Unit Rating × Indoor Design Temperature Correction)

 $= 4.5 \times 1.03 + 5.6 \times 1.09$

= 10.7 kW

(5) Outdoor Unit Correction Calculation

Outdoor Design Dry Bulb Temperature Correction (40.5°C) 0.88 (Refer to Figure 2)

Piping Length Correction (60 m) 0.94 (Refer to Figure 3)

Total Outdoor Unit Capacity (CT_o)

CT₀ = Outdoor Rating × Outdoor Design Temperature Correction × Piping Length Correction

 $= 12.5 \times 0.88 \times 0.94$

= 10.3 kW

(6) Determination of Maximum System Capacity

Comparison of Capacity between Total Indoor Units Capacity (CT₀) and Total Outdoor Unit Capacity (CT₀)

 CT_{i} = 10.7 > CT_{o} = 10.3, thus, select $CT_{\text{o}}.$

 $CT_{max} = CT_o = 10.3 \text{ kW}$

(7) Comparison with Essential Load

Against the essential load 8.5 kW, the maximum system capacity is 10.3 kW: Proper outdoor units have been selected.

(8) Calculation of Maximum Indoor Unit Capacity of Each Room

CT_{max} = CT_o, thus, calculate by the calculation below

Room1

Maximum Capacity × Room1 Capacity after the Temperature Correction/(Room1,2 Total Capacity after the Temperature Correction

 $= 10.3 \times (4.5 \times 1.03)/(4.5 \times 1.03 + 5.6 \times 1.09)$

= 4.4 kW OK: fulfills the load 4.0 kW

Room2

 $Maximum\ Capacity\ \times\ Room 2\ Capacity\ after\ the\ Temperature\ Correction/(Room 1, 2\ Total\ Capacity\ after\ the\ Temperature\ Correction)$

 $= 10.3 \times (5.6 \times 1.09)/(4.5 \times 1.03 + 5.6 \times 1.09)$

= 5.9 kW OK: fulfills the load 4.5 kW

Note: If CT_{max} = CT_i, please refer to the <Heating> section to calculate the Maximum Indoor Unit Capacity of Each Room.

Go on to the heating trial calculation since the selected units fulfill the cooling loads of Room 1, 2.

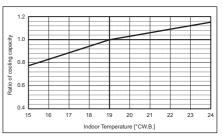


Figure 1 Indoor unit temperature correction

To be used to correct indoor unit only

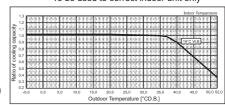


Figure 2 Outdoor unit temperature correction
To be used to correct outdoor unit only

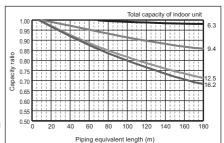


Figure 3 Correction of refrigerant piping length

Design Condition						
Outdoor Design Wet Bulb Temperature	2°C					
Total Heating Load Room1	10.3 kW					
Indoor Design Dry Bulb Temperature	21°C					
Heating Load	4.8 kW					
Room2						
Indoor Design Dry Bulb Temperature	23°C					
Heating Load	5.5 kW					
<other></other>						
Indoor/Outdoor Equivalent Piping Length	90 m					

2. Heating Calculation

(1) Temporary Selection of Indoor Units

Room1

PEFY-P40 5.0 kW (Rated)

Room2

PFFY-P50 6.3 kW (Rated)

(2) Total Indoor Units Capacity

P40 + P50 = P90

(3) Selection of Outdoor Unit

The P112 outdoor unit is selected as total indoor units capacity is P90

PUMY-P112 14.0 kW

(4) Total Indoor Units Capacity Correction Calculation

Room1

Indoor Design Dry Bulb Temperature Correction (21°C) 0.96 (Refer to Figure 4)

Room2

Indoor Design Dry Bulb Temperature Correction (23°C) 0.88 (Refer to Figure 4)

Total Indoor Units Capacity (CTi)

CT_i = Σ (Indoor Unit Rating × Indoor Design Temperature Correction)

 $= 5.0 \times 0.96 + 6.3 \times 0.88$

= 10.3 kW

(5) Outdoor Unit Correction Calculation

Outdoor Design Wet Bulb Temperature Correction (2°C) 1.0 (Refer to Figure 5) Piping Length Correction (90 m) 0.95 (Refer to Figure 6) **Defrost Correction** 0.89 (Refer to Table 1)

Total Outdoor Unit Capacity (CT_o)

CT₀ = Outdoor Unit Rating × Outdoor Design Temperature Correction × Piping Length Correction × Defrost Correction

 $= 14.0 \times 1.0 \times 0.95 \times 0.89$

= 11.8 kW

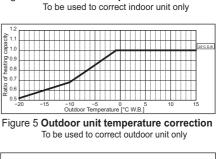


Figure 4 Indoor unit temperature correction

erature [°CD.B.]

0.9

0.8

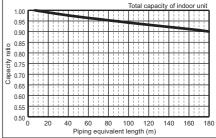


Figure 6 Correction of refrigerant piping length

(6) Determination of Maximum System Capacity

Comparison of Capacity between Total Indoor Units Capacity (CT_i) and Total Outdoor Unit Capacity (CT_o)

 CT_i = 10.3 < CT_o = 11.8, thus, select CT_i .

 $CT_{max} = CT_i = 10.3 \text{ kW}$

(7) Comparison with Essential Load

Against the essential load 10.3 kW, the maximum system capacity is 10.3 kW: Proper indoor units have been selected.

(8) Calculation of Maximum Indoor Unit Capacity of Each Room

CT_{max} = CT_i, thus, calculate by the calculation below

Room1

Indoor Unit Rating × Indoor Design Temperature Correction

 $= 5.0 \times 0.96$

OK: fulfills the load 4.8 kW = 4.8 kW

	rable i Table of correction factor at frost and defrost											
ı	Outdoor inlet air temp. °C W.B.	6	4	2	0	-2	-4	-6	-8	-10	-15	-20
	PUMY-P112,125,140VKM5	1.0	0.98	0.89	0.88	0.89	0.90	0.95	0.95	0.95	0.95	0.95
,	PUMY-P112,125,140YKM(E)4	1.0	0.98	0.89	0.88	0.89	0.90	0.95	0.95	0.95	0.95	0.95

Room2

Indoor Unit Rating × Indoor Design Temperature Correction

 $= 6.3 \times 0.88$

= 5.5 kW

OK: fulfills the load 5.5 kW

Note: If CT_{max} = CT_o, please refer to the <Cooling> section to calculate the Maximum Indoor Unit Capacity of Each Room. Completed selecting units since the selected units fulfill the heating loads of Room 1, 2.

3. Power input of outdoor unit

<Cooling>

(1) Rated power input of outdoor unit

2.79 kW

(2) Calculation of the average indoor temperature power input coefficient

Coefficient of the outdoor unit for indoor unit 1 (Outdoor temp. 40.5 °CD.B., Indoor temp. 20 °CW.B.)

0.82

Coefficient of the outdoor unit for indoor unit 2 (Outdoor temp. 40.5 °CD.B., Indoor temp. 22 °CW.B.)

0.76

Average indoor temp. power input coefficient $(C_{ave}) = \sum_{k=1}^{n} \{c_k \times (M_k / \sum_{k=1}^{n} M_k)\}$

n: Total number of the indoor units

k: Number of the indoor unit

 c_k : Outdoor unit power input coefficient of k indoor unit room temp.

 $M_k\!\!:$ Number part of the k indoor unit model (e.g. $P80\to80)$

$$= 0.82 \times 40/(40 + 50) + 0.76 \times 50/(40 + 50)$$
$$= 0.79$$

- (3) No need to consider Coefficient of the partial load $f(CT_i)$
- (4) Outdoor power input (PI_o)

Maximum System Capacity (CT_{max}) = Total Outdoor unit Capacity (CT_{\circ}), so use the following formula Pl_{\circ} = Outdoor unit Cooling Rated Power Input × C_{ave}

 $= 2.79 \times 0.79$

= 2.20 kW

(1) Rated power input of outdoor unit

3.04 kW

(2) Calculation of the average indoor temperature power input coefficient

Coefficient of the outdoor unit for indoor unit 1 (Outdoor temp. 2 °CW.B., Indoor temp. 21 °CD.B.)

1.12

Coefficient of the outdoor unit for indoor unit 2 (Outdoor temp. 2 °CW.B., Indoor temp. 22 °CD.B.)

1.0

Average indoor temp. power input coefficient $(C_{ave}) = \sum_{k=1}^{n} \{c_k \times (M_k / \sum_{k=1}^{n} M_k)\}$

n: Total number of the indoor units

k: Number of the indoor unit

c_k: Outdoor unit power input coefficient of k indoor unit room temp.

 M_k : Number part of the k indoor unit model (e.g. $P80 \rightarrow 80$)

=
$$1.12 \times 40/(40 + 50) + 1.0 \times 50/(40 + 50)$$

= 1.05

(3) Coefficient of the partial load $f(CT_i)$

0.89

(4) Outdoor power input (PI_o)

Maximum System Capacity (CT_{max}) = Total Indoor unit Capacity (CT_i), so use the following formula PI_0 = Outdoor unit Heating Rated Power Input × C_{ave} × $f(CT_i)$

 $= 3.04 \times 1.05 \times 0.89$

= 2.84 kW

7-2. Correction by temperature


CITY MULTI could have varied capacity at different designing temperature. Using the nominal cooling/heating capacity value and the ratio below, the capacity can be observed at various temperature.

<Cooling>

PUMY-		P112VKM5	P125VKM5	P140VKM5	
Nominal Cooling	kW	12.5	14.0	15.5	
Capacity	BTU/h	42,650	47,768	52,886	
Input	kW	2.79	3.46	4.52	
PUM	Y-	P112YKM(E)4	P125YKM(E)4	P140YKM(E)4	
Nominal	Y-	P112YKM(E)4 12.5	P125YKM(E)4 14.0	P140YKM(E)4 15.5	
		· ,	· · · · ·	· ,	

Indoor unit temperature correction


To be used to correct indoor unit capacity only

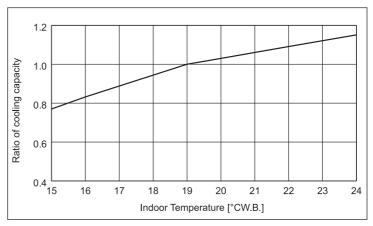

Outdoor unit temperature correction

To be used to correct outdoor unit only


Outdoor unit capacity is NOT affected by the indoor temperature.

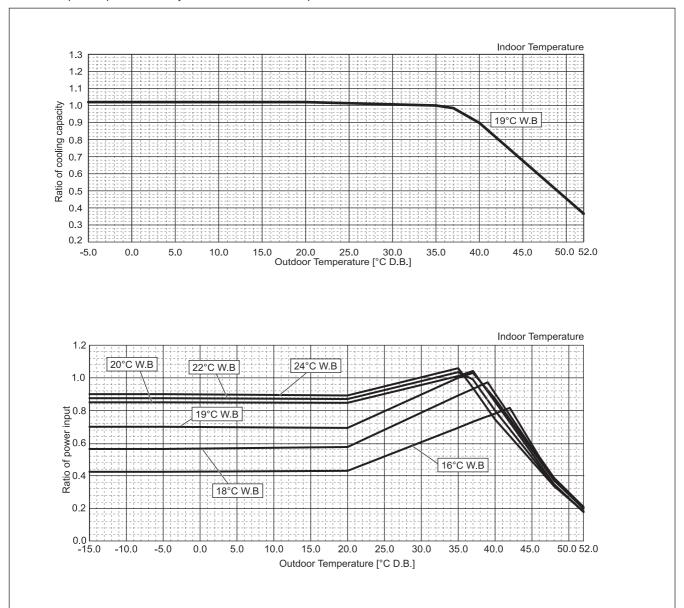

,	_				
PUMY-		P112VKM5	P125VKM5	P140VKM5	
Nominal kW		14.0	16.0	18.0	
Heating Capacity	BTU/h	47,768	54,592	61,416	
Input	kW	3.04	3.74	4.47	
PUMY-		P112YKM(E)4	P125YKM(E)4	P140YKM(E)4	
Nominal Heating	kW	14.0	16.0	18.0	
Capacity	BTU/h	47,768	54,592	61,416	
Input		3.04	3.74	4.47	

Indoor unit temperature correction


To be used to correct indoor unit capacity only

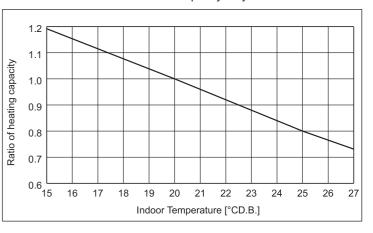

Outdoor unit temperature correction

To be used to correct outdoor unit only

Outdoor unit capacity is NOT affected by the indoor temperature.

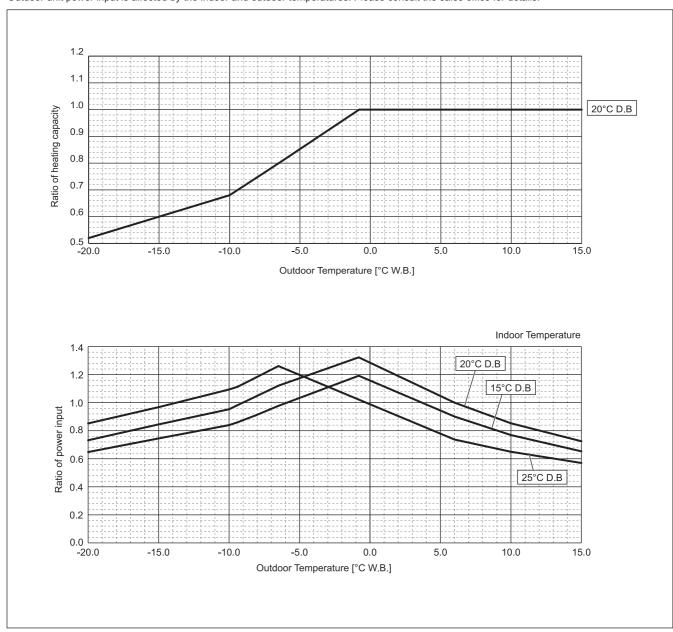


<Cooling>

PUM	Υ-	P200YKM2
Nominal	kW	22.4
Cooling Capacity	BTU/h	76,400
Input	kW	6.05

Indoor unit temperature correction


To be used to correct indoor unit capacity only

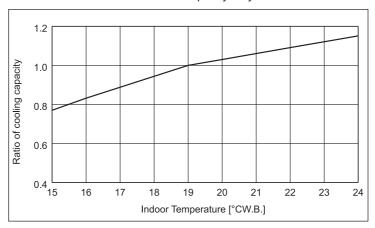

Outdoor unit temperature correction

To be used to correct outdoor unit only


Outdoor unit capacity is NOT affected by the indoor temperature.

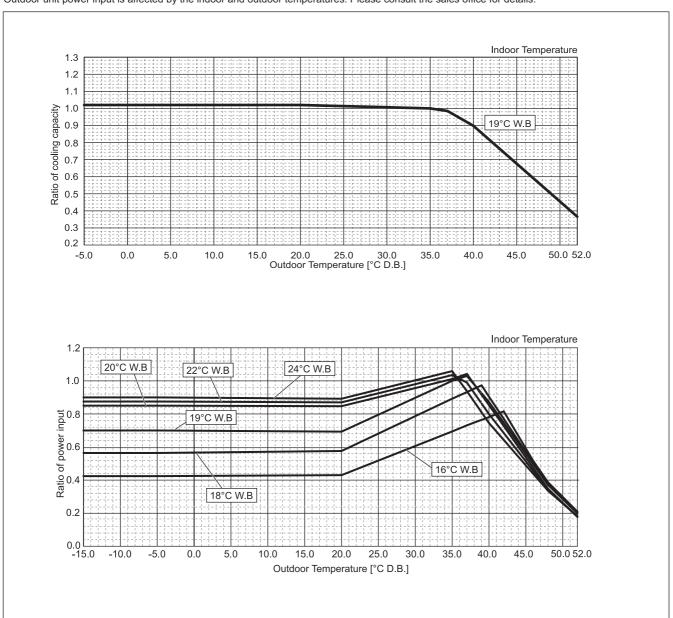

PUM	Y-	P200YKM2
Nominal Heating Capacity	kW	25.0
	BTU/h	85,300
Input	kW	5.84

Indoor unit temperature correction


To be used to correct indoor unit capacity only

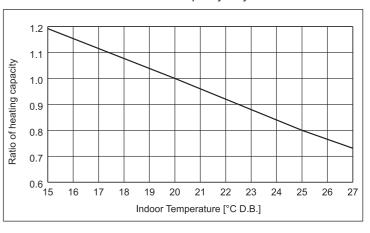

Outdoor unit temperature correction

To be used to correct outdoor unit only

Outdoor unit capacity is NOT affected by the indoor temperature.

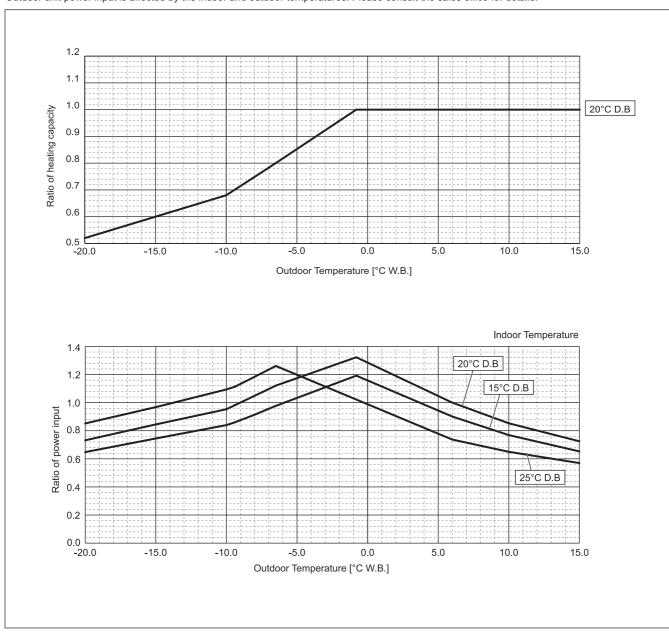


<Cooling>

PUM	Y-	P250YBM	P300YBM
Nominal	kW	28.0	33.5
Cooling Capacity	BTU/h	95,500	114,300
Input	kW	8.21	10.12

Indoor unit temperature correction


To be used to correct indoor unit capacity only

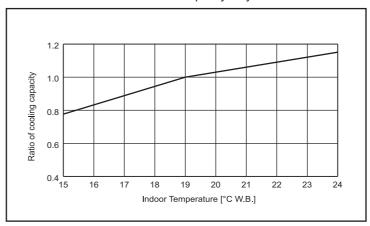

Outdoor unit temperature correction

To be used to correct outdoor unit only


Outdoor unit capacity is NOT affected by the indoor temperature.

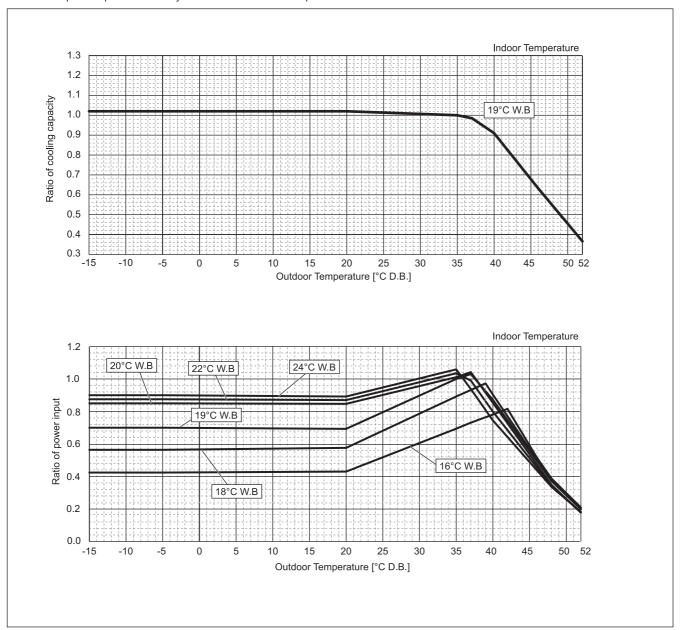

PUMY-		P250YBM	P300YBM	
Nominal Heating	kW	31.5	37.5	
Capacity	BTU/h	107,500	128,000	
Input	kW	7.41	9.12	

Indoor unit temperature correction

To be used to correct indoor unit capacity only

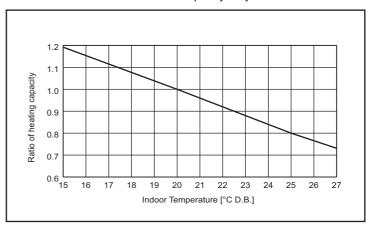


Outdoor unit temperature correction

To be used to correct outdoor unit only

Outdoor unit capacity is NOT affected by the indoor temperature.

Outdoor unit power input is affected by the indoor and outdoor temperatures. Please consult the sales office for details.

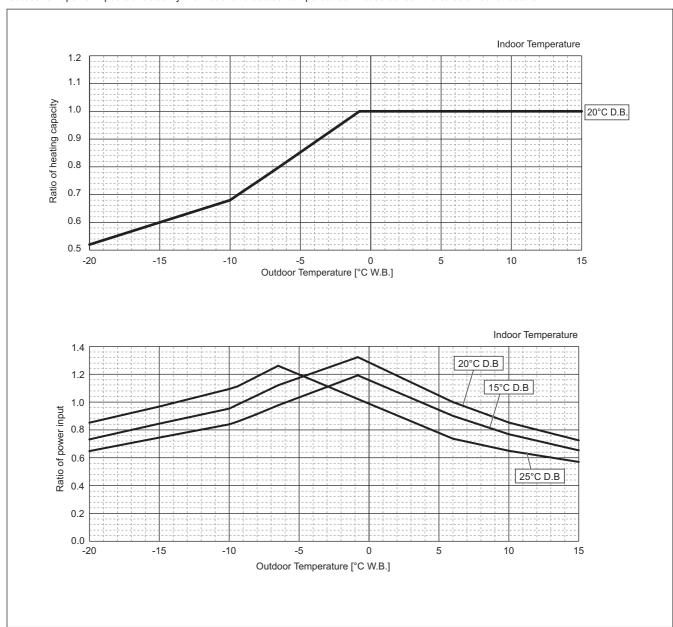


7-3. Correction by total indoor

CITY MULTI system has different capacities and inputs when many combinations of indoor units with different total capacities are connected. Using following tables, the maximum capacity can be found to ensure the system is installed with enough capacity for a particular application.


PUMY-P112VKM5/YKM(E)4				
Nominal	kW	12.5		
Cooling Capacity	BTU/h	42,650		
Input	kW	2.79		

PUMY-P112VKM5/YKM(E)4				
Nominal Heating	kW	14.0		
Capacity	BTU/h	47,768		
Input	kW	3.04		

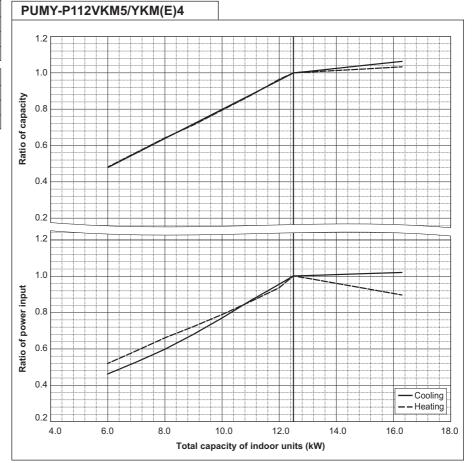


PUMY-P125VKM5/YKM(E)4				
Nominal Cooling Capacity	kW	14.0		
	BTU/h	47,768		
Input	kW	3.46		

PUMY-P125VKM5/YKM(E)4				
Nominal Heating Capacity	kW	16.0		
	BTU/h	54,592		
Input	I-\A/	2.74		

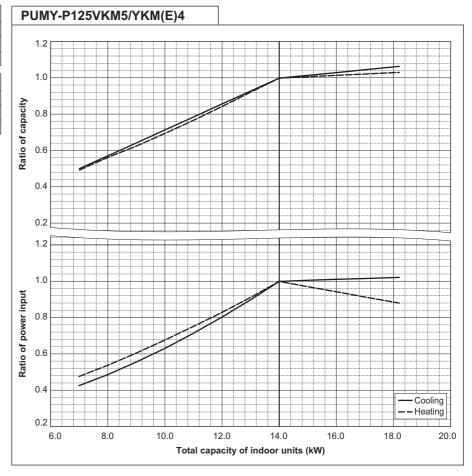


PUMY-P140VKM5/YKM(E)4							
Nominal Cooling Capacity	kW	15.5					
	BTU/h	52,886					
Input	kW	4.52					

PUM	Y-P140	VKM5/YKM(E)4
Nominal Heating	kW	18.0
Capacity	BTU/h	61,416
Input	kW	4.47

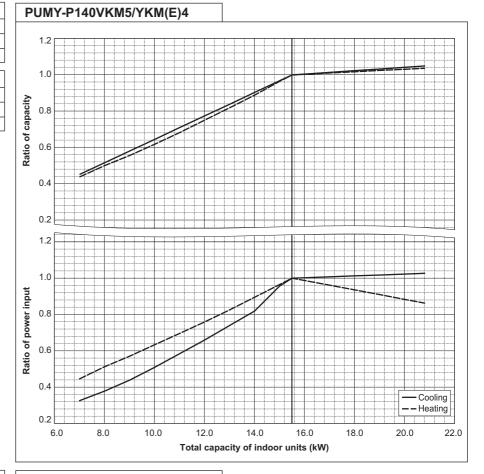


PUMY-P200YKM2						
Nominal Cooling Capacity	kW	22.4				
	BTU/h	76,400				
Input	kW	6.05				

PUMY-P200YKM2						
Nominal Heating Capacity	kW	25.0				
	BTU/h	85,300				
Input	k\//	5.84				

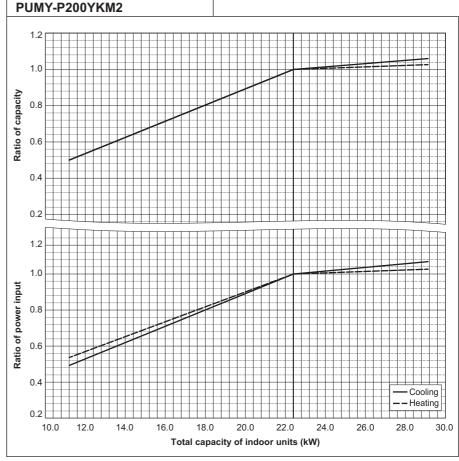


PUMY-P250YBM (-BS)						
Nominal Cooling	kW	28.0				
Capacity	BTU/h	95,500				
Input	kW	8.21				

PUMY-P250YBM (-BS)						
Nominal Heating Capacity	kW	31.5				
	BTU/h	107,500				
Input	kW	7.41				

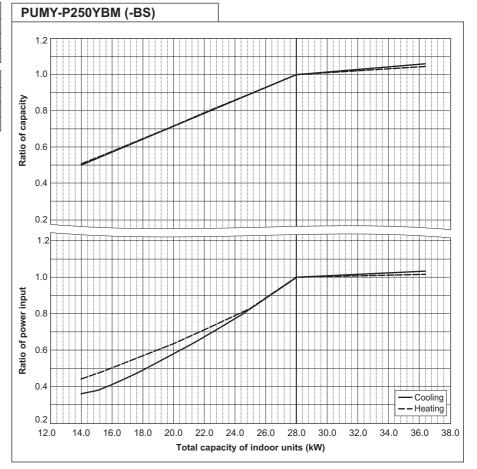

PUMY-P300YBM (-BS)							
Nominal Cooling	kW	33.5					
Capacity	BTU/h	114,300					
Input	kW	10.12					


PUMY-P300YBM (-BS)						
Nominal Heating Capacity	kW	37.5				
	BTU/h	128,000				
Input	kW	9.12				

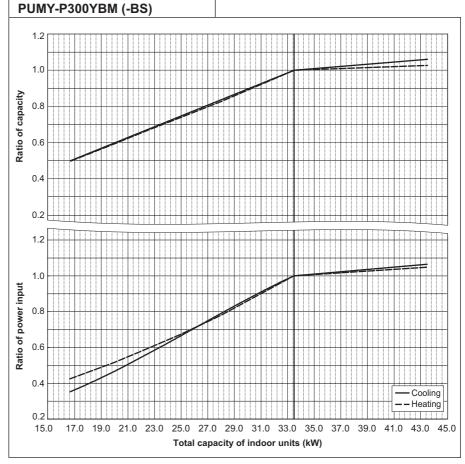


7-4. Correction by refrigerant piping length

CITY MULTI systems can have extended piping lengths if certain limitations are followed, but cooling/heating capacity could be reduced. Using following correction factor by equivalent piping length shown at 7-4-1 and 7-4-2, capacity can be found. 7-4-3 shows how to obtain the equivalent piping length.

7-4-1. Cooling capacity correction

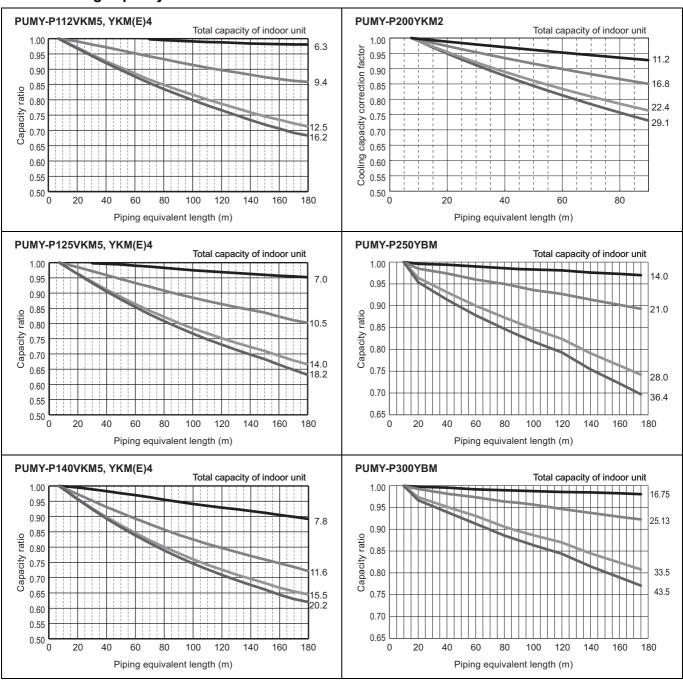

7-4-2. Heating capacity correction

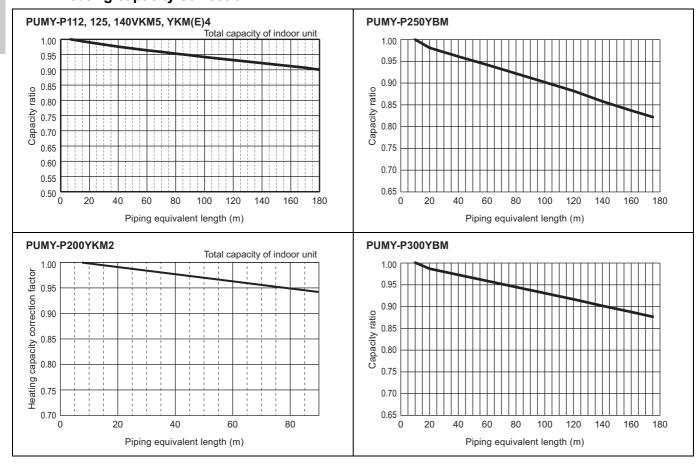

7-4-3. How to obtain the equivalent piping length

Equivalent length = (Actual piping length to the farthest indoor unit) + (0.30 x number of bends on the piping) m

7-5. Correction at frost and defrost

Due to frost at the outdoor heat exchanger and the automatical defrosting operation, the heating capacity of the outdoor unit should be considered by multiplying the correction factor which shown in the table below.


Table of correction factor at frosting and defrosting

Outdoor inlet air temp. °C W.B.	6	4	2	0	-2	-4	-6	-8	-10	-15	-20
Outdoor inlet air temp. °F W.B.	43	39	36	32	28	25	21	18	14	-5	-4
PUMY-P112,125,140VKM5	1.0	0.98	0.89	0.88	0.89	0.90	0.95	0.95	0.95	0.95	0.95
PUMY-P112,125,140YKM(E)4	1.0	0.98	0.89	0.88	0.89	0.90	0.95	0.95	0.95	0.95	0.95
PUMY-P200YKM2	1.0	0.98	0.89	0.88	0.89	0.90	0.95	0.95	0.95	0.95	0.95
PUMY-P250, 300YBM	1.0	0.98	0.89	0.88	0.89	0.90	0.95	0.95	0.95	0.95	0.95

8-1. JOINT

CITY MULTI units can be easily connected by using Joint sets and Header sets provided by Mitsubishi Electric.


Refer to section "Piping Design" or the Installation Manual that comes with the Joint set for how to install the Joint set.

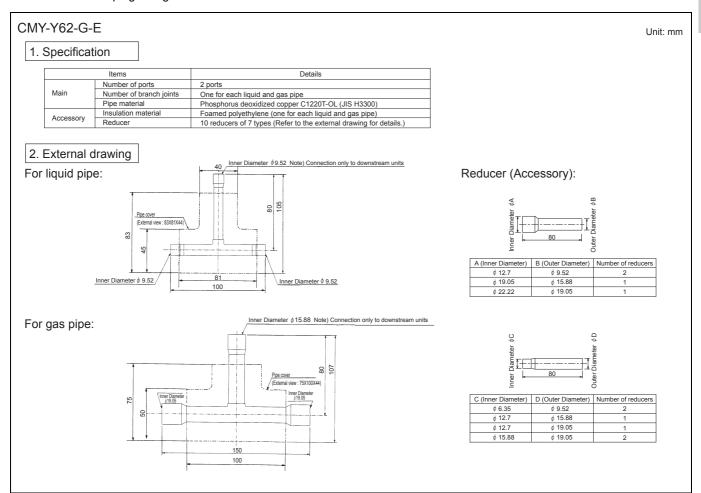


8-2. HEADER

CITY MULTI units can be easily connected by using Joint sets and Header sets provided by Mitsubishi Electric.

Refer to section "Piping Design" or the Installation Manual that comes with the Header set for how to install the Header set.

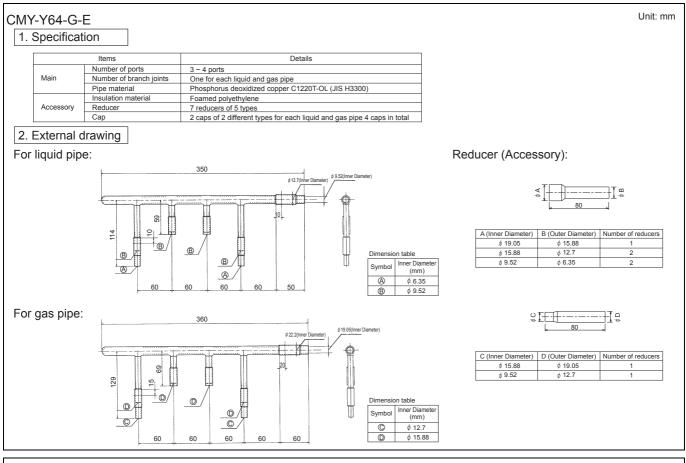


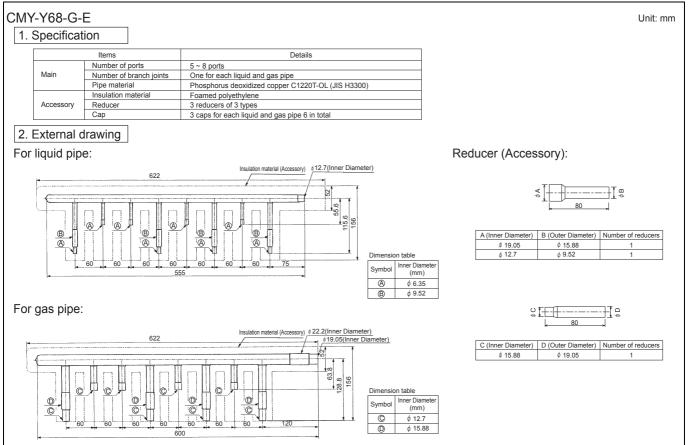


8-3. BRANCH BOX

PUMY-P112/125/140VKM5, PUMY-P112/125/140YKM(E)4 and PUMY-P200YKM2 units can be connected to M, S, P series indoor units and PUMY-P250/300 YBM units can be connected only to M series indoor units easily by using Branch box provided by Mitsubishi Electric. Refer to section "Piping Design" or the Installation Manual that comes with the Branch box for how to install the Branch box. (1) PAC-MK34/54BC

These can connect to PUMY-P112/125/140VKM5, PUMY-P112/125/140YKM(E)4, PUMY-P200YKM2 and PUMY-P250/300YBM.

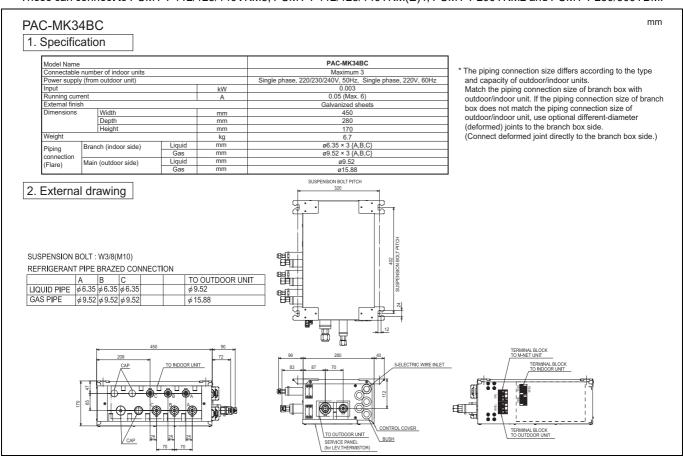


mm PAC-MK54BC 1. Specification PAC-MK54BC Model Name The piping connection size differs according to the type

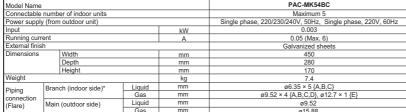


and capacity of outdoor/indoor units.


Match the piping connection size of branch box with outdoor/indoor unit. If the piping connection size of branch box does not match the piping connection size of outdoor/indoor unit, use optional different-diameter (deformed) joints to the branch box side.

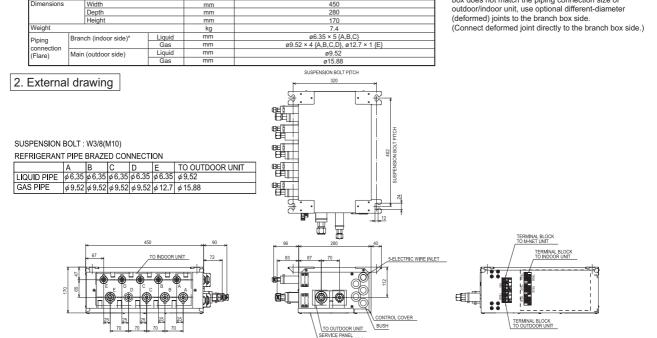

9-1. General cautions

- ① Follow ordinance of your governmental organization for technical standard related to electrical equipment, wiring regulations, and guidance of each electric power company.
- Wiring for control (hereinafter referred to as transmission cable) shall be (50mm[1-5/8in.] or more) apart from power source wiring so that it is not influenced by electric noise from power source wiring. (Do not insert transmission cable and power source wire in the same conduit.)
- ③ Be sure to provide designated grounding work to outdoor unit.
- ④ Give some allowance to wiring for electrical part box of indoor and outdoor units, because the box is sometimes removed at the time of service work.
- Never connect 380~415V(220~240V) power source to terminal block of transmission cable. If connected, electrical parts will be damaged.
- © Use 2-core shield cable for transmission cable. If transmission cables of different systems are wired with the same multiple-core cable, the resultant poor transmitting and receiving will cause erroneous operations.
- When extending the transmission line, make sure to extend the shield cable as well.

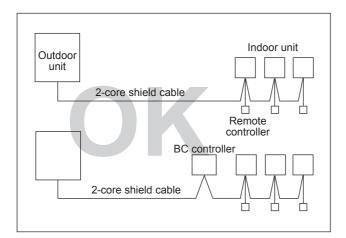

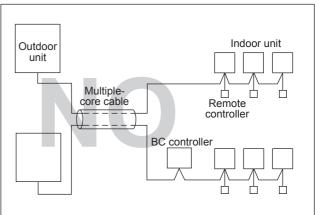

9-2. Power supply for Outdoor unit

9-2-1. Electrical characteristics of Outdoor unit at cooling mode

Symbols: MCA Max Circuit Amps

RLA (Rated Load Amps), SC (Starting Current)

PUMY-P-VKM	Units		Power supply	Compressor		FAN	RLA (A)	
FOWIT-F-VICINI	Hz	Volts	Voltage Range	MCA (A)	Output (kW)	SC (A)	Output (kW)	KLA (A)
PUMY-P112VKM5		220	Max.: 264V Min.: 198V	29.5	2.9	14	0.074+0.074	12.87/12.32/11.80
PUMY-P125VKM5	50	230		29.5	3.5	14	0.074+0.074	15.97/15.27/14.64
PUMY-P140VKM5		240	WIIII 130V	29.5	3.9	14	0.074+0.074	20.86/19.95/19.12

PUMY-P-VKM	Units		Power supply	Compressor		FAN	RLA (A)	
F OWIT -F - V KWI	Hz	Volts	Voltage Range	MCA (A)	Output (kW) SC (A		Output (kW)	KLA (A)
PUMY-P112VKM5		000	Max + OFOV	29.5	2.9	14	0.074+0.074	12.87/12.32
PUMY-P125VKM5	60	220 230	Max.: 253V Min.: 198V	29.5	3.5	14	0.074+0.074	15.97/15.27
PUMY-P140VKM5		200	IVIIII 130V	29.5	3.9	14	0.074+0.074	20.86/19.95

PUMY-P-YKM	Units Hz Volts Voltage Range		Power supply Compressor		FAN	RLA (A)						
FOWIT-F-TRIVI			Voltage Range	MCA (A)	Output (kW)	SC (A)	Output (kW)	KLA (A)				
PUMY-P112YKM4		380 400 415						13.0	2.9	7	0.074+0.074	4.99/4.74/4.57
PUMY-P125YKM4	50		Max.: 456V Min.: 342V	13.0	3.5	7	0.074+0.074	5.84/5.55/5.35				
PUMY-P140YKM4	50			13.0	3.9	7	0.074+0.074	7.23/6.87/6.62				
PUMY-P200YKM2				19.0	5.3	7	0.20+0.20	9.88/9.39/9/05				

PUMY-P-YBM			Units	Power supply	Compres	sor	FAN	RLA (A)
POWIT-P-TBW	Hz	Volts	Voltage Range	MCA (A)	Output (kW)	SC (A)	Output (kW)	NLA (A)
PUMY-P250YBM	50	380 400	Max.: 456V	28.24	5.7	7	0.375+0.375	13.35/12.68/12.22
PUMY-P300YBM	30	415	Min.: 342V	31.74	6.9	7	0.375+0.375	16.36/15.54/14.98

PUMY-P-YKM	Units			Power supply	Compressor		FAN	RLA (A)		
POWIT-P-TRIVI	Hz	Volts	Voltage Range	MCA (A)	Output (kW)	SC (A)	Output (kW)	KLA (A)		
PUMY-P112YKM4		380	380	380	M 440)/	13.0	2.9	7	0.074+0.074	4.99
PUMY-P125YKM4	60				Max.: 418V Min.: 342V	13.0	3.5	7	0.074+0.074	5.84
PUMY-P140YKM4			WIII1 542 V	13.0	3.9	7	0.074+0.074	7.23		

PUMY-P-YKME			Units	Power supply	Compres	sor	FAN	RLA (A)	
FOWIT-F-TRIVIL	Hz Volts		Voltage Range	MCA (A) Output (kW)		SC (A)	Output (kW)	NLA (A)	
PUMY-P112YKME4		380	M 450\/	13.0	2.9	7	0.074+0.074	4.99/4.74/4.57	
PUMY-P125YKME4	50	400	Max.: 456V Min.: 342V	13.0	3.5	7	0.074+0.074	5.84/5.55/5.35	
PUMY-P140YKME4		415	WIIII 342V	13.0	3.9	7	0.074+0.074	7.23/6.87/6.62	

9-3. Power cable specifications

Thickness of wire for main power supply, capacities of the switch and system impedance

■ PUMY-P-VKM5/PUMY-P-YKM4/PUMY-P-YKME4

< Outdoor unit > When power is supplied to outdoor unit and branch box separately

	Model	Minimum wire th	nickness (mm²)	Ground-fault interrupter *1	Local sv	vitch (A)	Breaker for wiring (A)	Max. Permissive
	iviodei	Main cable	Main cable Ground Cap		Capacity	Fuse	(Non-fuse breaker)	System Impedance
	PUMY-P112VKM5	6.0	6.0	32A 30mA 0.1sec. or less	32	32	32	-
	PUMY-P125VKM5	6.0	6.0	32A 30mA 0.1sec. or less	32	32	32	-
	PUMY-P140VKM5	6.0	6.0	32A 30mA 0.1sec. or less	32	32	32	-
	PUMY-P112YKM4	1.5	1.5	16A 30mA 0.1sec. or less	16	16	16	-
Outdoor unit	PUMY-P125YKM4	1.5	1.5	16A 30mA 0.1sec. or less	16	16	16	-
	PUMY-P140YKM4	1.5	1.5	16A 30mA 0.1sec. or less	16	16	16	-
	PUMY-P112YKME4	1.5	1.5	16A 30mA 0.1sec. or less	16	16	16	-
	PUMY-P125YKME4	1.5	1.5	16A 30mA 0.1sec. or less	16	16	16	-
	PUMY-P140YKME4	1.5	1.5	16A 30mA 0.1sec. or less	16	16	16	-

<Outdoor unit> When power is supplied to branch box from the outdoor unit

	Model	Minimum wire thickness (mm ²)		Craying facilit intermental \$4	Local switch (A)		Breaker for wiring (A)	Max. Permissive
	Model	Main cable	Ground	Ground-fault interrupter *1	Capacity	Fuse	(Non-fuse breaker)	System Impedance
	PUMY-P112VKM5	6.0	6.0	40A 30mA 0.1sec. or less	40	40	40	-
	PUMY-P125VKM5	6.0	6.0	40A 30mA 0.1sec. or less	40	40	40	-
	PUMY-P140VKM5	6.0	6.0	40A 30mA 0.1sec. or less	40	40	40	-
	PUMY-P112YKM4	2.5	2.5	32A 30mA 0.1sec. or less	20	20	20	-
Outdoor unit	PUMY-P125YKM4	2.5	2.5	32A 30mA 0.1sec. or less	20	20	20	-
	PUMY-P140YKM4	2.5	2.5	32A 30mA 0.1sec. or less	20	20	20	-
	PUMY-P112YKME4	2.5	2.5	32A 30mA 0.1sec. or less	20	20	20	-
	PUMY-P125YKME4	2.5	2.5	32A 30mA 0.1sec. or less	20	20	20	-
	PUMY-P140YKME4	2.5	2.5	32A 30mA 0.1sec. or less	20	20	20	-

<Indoor units> When power is supplied to indoor unit and outdoor unit separately

	Model	Minimum	wire thickne	ss (mm ²)	Ground-fault interrupter *1	Local sv	vitch (A)	Breaker for wiring (A)	Max. Permissive
	iviodei	Main cable	Branch	Ground	Ground-lauit interrupter	Capacity	Fuse	(Non-fuse breaker)	System Impedance
Total operating	F0 = 16A or less *2	1.5	1.5	1.5	20A current sensitivity *4	16	16	20	-
current of	F0 = 25A or less *2	2.5	2.5	2.5	30A current sensitivity *4	25	25	30	-
the indoor unit	F0 = 32A or less *2	4.0	4.0	4.0	40A current sensitivity *4	32	32	40	-

^{*1} The Ground-fault interrupter should support Inverter circuit.

The Ground-fault interrupter should combine using of local switch or wiring breaker.

 $^{*}2$ Please take the larger of F1 or F2 as the value for F0.

F1 = Total operating maximum current of the indoor units \times 1.2

 $F2 = \{V1 \times (Quantity \ of \ Type1)/C\} + \{V1 \times (Quantity \ of \ Type2)/C\} + \{V1 \times (Quantity \ of \ Type3)/C\} + \cdots + \{V1 \times (Quantity \ of \ Type16)/C\} + (V1 \times (Quantity \ of \ Type10)/C\} + (V1 \times (Quantity \ of \ Type10)/C\} + (V1 \times (Quantity \ of \ Type10)/C) + (V1 \times (Quantity \ of \$

Connect to Branch box (PAC-MK·BC(B))

Indoor unit		V1	V2
Type1	PEAD-RP·JA(L)Q, PEAD-M·JA(L), PEY-(S)P·JA	26.9	
Type2	SEZ-KD·VAQ(L), SEZ-M·DA(L), PCA-RP·KAQ, PCA-M·KA, PLA-RP·BA, PLA-RP·EA, SLZ-KF·VA2, SLZ-M·FA, PLY-(S)P·BA, SEZ-KH·VALT, PCY-(S)P·KA, PLA-M·EA	19.8	
Type3	MLZ-KA·VA, MLZ-KP·VF	9.9	
Type4	MFZ-KJ·VE2, MSXY-FJ·VE, MSZ-LN·VG, MSZ-AP·VG(D), MSZ-AP·VF, MSZ-EF·VG-E2, MSZ-EF·VGK-E1, MSZ-AP·VGK, MFZ-KT·VG, MSZ-LN·VG2	7.4	2.4
Type5	MSZ-FH·VE, MSZ-SF·VE, MSZ-EF·VE, MSZ-SF·VA, MSZ-GF·VE, MSZ-GE·VA, MSZ-EF·VA, MSY-GE·VA, MSY-EF·VA, MSZ-FH·VA, MSY-GH·VA, MSZ-FK·VA, MSZ-GC·NA, MSZ-EF·VG-E1	6.8	
Type6	Branch box (PAC-MK·BC)	5.1	3.0
Type7	ecodan (Cylinder unit, Hydrobox)	5.1	5.0 *3

³ This value may increase due to a locally connected actuator

Connect to Connection kit (PAC-LV11M-J)

Connect to C	Commod to Commodian Mr. (1710 EV 11111 0)						
Indoor unit	ndoor unit						
Type8	MFZ-KJ·VE2, MSZ-LN·VG, MSZ-AP·VG(D), MSZ-AP·VF, MSZ-EF·VG-E2, MSZ-EF·VGK-E1, MSZ-AP·VGK, MFZ-KT·VG, MSZ-LN·VG2	7.4					
Туре9	MSZ-GE·VA(D), MSZ-SF·VA, MSZ-SF·VE, MSZ-EF·VE, MSZ-FH·VE, MSY-GE·VA, MSY-GH·VA, MSZ-EF·VG-E1	6.8	2.4				
Type10	Connection kit (PAC-LV11M-J)	3.5					

Connect to City Multi

Indoor unit		V1	V2
Type11	PEFY-P·VMA(L)-E(2), PEFY-P·VMA3-E	38.0	1.6
Type12	PEFY-VMHS-E-F, PEFY-P10-140VMHS-E	26.8	1.6
Type13	PMFY-VBM-E, PLFY-VBM-E, PLFY-VEM-E, PLFY-VFM-E1, PEFY-VMS1(L)-E, PCFY-VKM-E, PKFY-VHM-E, PKFY-VKM-E, PFFY-VKM-E2, PFFY-VLRMM-E, PLFY-EP-VEM-E, PMFY-P-VFM-D, PKFY-VLM-E, PFFY-VCM-E	19.8	2.4
Type14	PEFY-P·VMA(L)-E3, PEFY-M·VMA(L)-A	18.6	3.0
Type15	PKFY·VBM-E	3.5	2.4
Type16	PLFY-VLMD-E, PEFY-VMR-E-L/R, PFFY-VLEM-E, PFFY-VLRM-E, PWFY-VM-E1(2)-AU, PEFY-P-VMH-E-F, GUF-RD(H)4	0.0	0.0

C: Multiple of tripping current at tripping time 0.01s

Please pick up "C" from the tripping characteristic of the breaker.

<Example of "F2" calculation>


Condition PEFY-VMS \times 4 + PEFY-VMA \times 1, C = 8 (refer to right sample chart)

F2 = 19.8 × 4/8 + 38 × 1/8

= 14.65

ightarrow16 A breaker (Tripping current = 8 × 16 A at 0.01s)

Sample chart

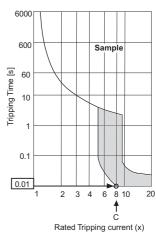

*4 Current sensitivity is calculated using the following formula.

 $G1 = V2 \times (Quantity \ of \ Type1) + V2 \times (Quantity \ of \ Type2) + V2 \times (Quantity \ of \ Type3) + \cdots + V2 \times (Quantity \ of \ Type16) + V3 \times (Wire \ length \ [km])$

G1	Current sensitivity
30 or less	30 mA 0.1sec or less
100 or less	100 mA 0.1sec or less

Wire thickness	V3
1.5 mm ²	48
2.5 mm ²	56
4.0 mm ²	66

- 1. Bear in mind ambient conditions (ambient temperature, direct sunlight, rain water, etc.) when proceeding with the wiring and connections.
- 2. The wire size is the minimum value for metal conduit wiring. The power cord size should be 1 rank thicker consideration of voltage drops. Make sure the power-supply voltage does not drop more than 10%.
- 3. Specific wiring requirements should adhere to the wiring regulations of the region.
- 4. Power supply cords of parts of appliances for outdoor use shall not be lighter than polychloroprene sheathed flexible cord (design 60245 IEC57). For example, use wiring such as YZW.
- 5. Install an earth line longer than power cables.

∆WARNING

- Be sure to use specified wires for connections and ensure no external force is imparted to terminal connections. If connections are not fixed firmly, heating or fire may result.
- Be sure to use the appropriate type of overcurrent protection switch. Note that generated overcurrent may include some amount of direct current.

ACAUTION

- The breakers for current leakage should support Inverter circuit. (e.g. Mitsubishi Electric's NV-S-Series or equivalent). If no earth leakage breaker is installed, it may cause an electric shock.
- Breakers for current leakage should combine using of switch.
- Do not use anything other than a breaker with the correct capacity. Using a breaker of too large capacity may cause malfunction or fire.
- If a large electric current flows due to malfunction or faulty wiring, earth-leakage breakers on the unit side and on the upstream side of the power supply system may both operate. Depending on the importance of the system, separate the power supply system or take protective coordination of breakers.

Note

- ◆ This device is intended for the connection to a power supply system with a maximum permissible system impedance shown in the above table at the interface point (power service box) of the user's supply.
- The user must ensure that this device is connected only to a power supply system which fulfils the requirement above. If necessary, the user can ask the public power supply company for the system impedance at the interface point.

Thickness of wire for main power supply, capacities of the switch and system impedance

<Outdoor unit> <When power is supplied to outdoor unit and branch box separately>

	Model	Minimum wire t	hickness (mm ²)	Ground-fault interrupter *1	Local switch (A)		Breaker for wiring (A)	Max. Permissive	
	Model	Main cable	Ground	Ground-lauk interrupter	Capacity	Fuse	(Non-fuse breaker)	System Impedance	
Outdoor unit	PUMY-P200YKM2	2.5	2.5	25A 30mA 0.1sec. or less	25	25	25	-	

<Outdoor unit> <When power is supplied to branch box from the outdoor unit>

ſ		Minimum wire thickness (mm²) Ground-fault interrupter *1		Cravinal facilit intermentary *4	Local switch (A)		Breaker for wiring (A)	Max. Permissive	
		Model	Main cable	Ground	Ground-Tault Interrupter "1	Capacity	Fuse	(Non-fuse breaker)	System Impedance
ſ	Outdoor unit	PUMY-P200YKM2	4.0	4.0	32A 30mA 0.1sec. or less	32	32	32	-

<Indoor units> <When power is supplied to indoor unit and outdoor unit separately>

	Model	Minimum wire thickness (mm ²)		Ground-fault interrupter *1	Local switch (A)		Breaker for wiring (A)	Max. Permissive	
	Model	Main cable	Branch	Ground	Ground-radit interrupter	Capacity	Fuse	(Non-fuse breaker)	System Impedance
Total operating	F0 = 16A or less *2	1.5	1.5	1.5	20A current sensitivity *3	16	16	20	-
current of	F0 = 25A or less *2	2.5	2.5	2.5	30A current sensitivity *3	25	25	30	-
the indoor unit	F0 = 32A or less *2	4.0	4.0	4.0	40A current sensitivity *3	32	32	40	-

^{*1} The Ground-fault interrupter should support Inverter circuit.

The Ground-fault interrupter should combine using of local switch or wiring breaker.

*2 Please take the larger of F1 or F2 as the value for F0.

F1 = Total operating maximum current of the indoor units × 1.2

 $F2 = \{V1 \times (Quantity \ of \ Type1)/C\} + \{V1 \times (Quantity \ of \ Type2)/C\} + \{V1 \times (Quantity \ of \ Type3)/C\} + \cdots + \{V1 \times (Quantity \ of \ Type1)/C\} + \{V1 \times$

Connect to Branch box (PAC-MK·BC)

Indoor unit		V1	V2
Type1	SEZ-KD·VAQ(L), SEZ-M·DA(L), PCA-RP·KAQ, PCA-M·KA, SLZ-KF·VA, SLZ-M·FA, PLA-RP·EA, PLA-M·EA	19.8	
Type2	PEAD-RP·JAQ(L), PEAD-M·JA(L)	26.9	
Type3	MLZ-KA·VA, MLZ-KP·VF	9.9	2.4
Type4	MSZ-FH·VE, MSZ-GF·VE, MSZ-SF·VE, MSZ-EF·VE, MSZ-SF·VA, MSZ-EF·VG-E1	6.8	
Type5	MFZ-KJ·VE2, MSZ-LN·VG, MSZ-AP·VG, MSZ-AP·VF, MSZ-EF·VG-E2, MSZ-EF·VGK-E1, MSZ-AP·VGK, MFZ-KT·VG, MSZ-LN·VG2	7.4	
Type6	Branch box	5.1	3.0

Connect to Connection kit (PAC-LV11M)

Indoor unit		V1	V2
Type7	MSZ-EF·VE, MSZ-SF·VA, MSZ-SF·VE, MSZ-FH·VE, MSZ-EF·VG-E1	6.8	
	MFZ-KJ·VE2, MSZ-LN·VG, MSZ-AP·VG, MSZ-AP·VF, MSZ-EF·VG-E2, MSZ-EF·VGK-E1, MSZ-AP·VGK, MFZ-KT·VG, MSZ-LN·VG2	7.4	2.4
Type9	Connection kit (PAC-LV11M)	3.5	

Connect to CITY MULTI

Indoor unit		V1	V2
Type10	PEFY-P·VMA(L)-E(2), PEFY-P·VMA3-E	38.0	1.6
Type11	PEFY-VMHS-E-F, PEFY-P40-140VMHS-E	26.8	1.6
Type12	PMFY-P·VBM-E, PLFY-P·VBM-E, PEFY-P·VMS1-E, PCFY-P·VKM-E, PKFY-P·VKM-E, PLFY-P·VEM-E, PLFY-P·VFM-E, PFFY-VKM-E2, PFFY-VLRMM-E, PKFY-VLM-E, PFFY-VCM-E, PLFY-M·VEM-E	19.8	2.4
Type13	PEFY-VMA(L)-E3, PEFY-M·VMA(L)-A	18.6	3.0
Type14	PEFY-P200VMHS-E	13.8	4.8
Type15	-	-	-
Type16	PLFY-P·VLMD-E, PEFY-P·VMR-E-L/R, PEFY-P·VMH-E-F, PFFY-P·VLEM-E, GUF-RD(H)4, PFFY-VLRM-E	0.0	0.0

C: Multiple of tripping current at tripping time 0.01s

Please pick up "C" from the tripping characteristic of the breaker.

<Example of "F2" calculation>

*Condition PLFY-P·VBM-E \times 4 + PEFY-VMA-E \times 1, C = 8 (refer to right sample chart)

F2 = 19.8 × 4/8 + 38 × 1/8

= 14.65

 \rightarrow 16 A breaker (Tripping current = 8 × 16 A at 0.01s)


*3 Current sensitivity is calculated using the following formula.

 $\text{G1 = V2} \times (\text{Quantity of Type1}) + \text{V2} \times (\text{Quantity of Type2}) + \text{V2} \times (\text{Quantity of Type3}) + \cdots + \text{V2} \times (\text{Quantity of Type16}) + \text{V3} \times (\text{Wire length [km]})$

G1	Current sensitivity
30 or less	30 mA 0.1sec or less
100 or less	100 mA 0.1sec or less

Wire thickness	V3
1.5 mm ²	48
2.5 mm ²	56
4.0 mm ²	66

Sample chart

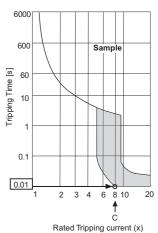

- 1. Bear in mind ambient conditions (ambient temperature, direct sunlight, rain water, etc.) when proceeding with the wiring and connections.
- 2. The wire size is the minimum value for metal conduit wiring. The power cord size should be 1 rank thicker consideration of voltage drops. Make sure the power-supply voltage does not drop more than 10%.
- 3. Specific wiring requirements should adhere to the wiring regulations of the region.
- 4. Power supply cords of parts of appliances for outdoor use shall not be lighter than polychloroprene sheathed flexible cord (design 60245 IEC57). For example, use wiring such as YZW.
- 5. Install an earth line longer than power cables.

⚠WARNING

- Be sure to use specified wires for connections and ensure no external force is imparted to terminal connections. If connections are not fixed firmly, heating or fire may result.
- Be sure to use the appropriate type of overcurrent protection switch. Note that generated overcurrent may include some amount of direct current.

↑ CAUTION

- The breakers for current leakage should support Inverter circuit. (e.g. Mitsubishi Electric's NV-S-Series or equivalent). If no earth leakage breaker is installed, it may cause an electric shock.
- Breakers for current leakage should combine using of switch.
- Do not use anything other than a breaker with the correct capacity. Using a breaker of too large capacity may cause malfunction or fire.
- If a large electric current flows due to malfunction or faulty wiring, earth-leakage breakers on the unit side and on the upstream side of the power supply system may both operate. Depending on the importance of the system, separate the power supply system or take protective coordination of breakers.

Note

- ◆ This device is intended for the connection to a power supply system with a maximum permissible system impedance shown in the above table at the interface point (power service box) of the user's supply.
- The user must ensure that this device is connected only to a power supply system which fulfils the requirement above. If necessary, the user can ask the public power supply company for the system impedance at the interface point.

Thickness of wire for main power supply, capacities of the switch and system impedance

■ PUMY-P-YBM

<Outdoor unit> When power is supplied to outdoor unit and branch box separately

	Model	Minimum wire thickness (mm ²)		Ground-fault interrupter *1	Local switch (A)		Breaker for wiring (A)	Max. Permissive
	iviodei	Main cable	Ground	Ground-lauit interrupter	Capacity	Fuse	(Non-fuse breaker)	System Impedance
Outdoor unit	PUMY-P250YBM	4.0	4.0	32A 30mA 0.1sec. or less	32	32	32	-
Outdoor unit	PUMY-P300YBM	6.0	6.0	40A 30mA 0.1sec. or less	40	40	40	-

<Outdoor unit> When power is supplied to branch box from the outdoor unit

	Model	Minimum wire thickness (mm ²)		Ground-fault interrupter *1	Local switch (A)		Breaker for wiring (A)	Max. Permissive
	iviouei	Main cable	Ground	Ground-rault Interrupter	Capacity	Fuse	(Non-fuse breaker)	System Impedance
Outdoor unit	PUMY-P250YBM	6.0	6.0	40A 30mA 0.1sec. or less	40	40	40	-
Outdoor unit	PUMY-P300YBM	6.0	6.0	40A 30mA 0.1sec. or less	40	40	40	-

^{*1} A breaker with at least 3.0 mm contact separation in each poles shall be provided. Use non-fuse breaker (NF) or earth leakage breaker (NV).

< Outdoor unit > When power is supplied to indoor unit and outdoor unit separately

	Model	Minimum wire thickness (mm ²)		Ground-fault interrupter *1	Local switch (A)		Breaker for wiring		
	iviodei	Main cable	Branch	Ground	Capacity Fuse		Fuse	(NFB)	
Total operating	F0 = 16A or less *2	1.5	1.5	1.5	20A current sensitivity *3	16	16	20	
current of	F0 = 25A or less *2	2.5	2.5	2.5	30A current sensitivity *3	25	25	30	
the indoor unit	F0 = 32A or less *2	4.0	4.0	4.0	40A current sensitivity *3	32	32	40	

Apply to IEC61000-3-3 about max. permissive system impedance.

The Ground-fault interrupter should combine using of local switch or wiring breaker.

*2 Please take the larger of F1 or F2 as the value for F0.

F1 = Total operating maximum current of the indoor units × 1.2

 $F2 = \{V1 \times (Quantity \ of \ Type1)/C\} + \{V1 \times (Quantity \ of \ Type2)/C\} + \{V1 \times (Quantity \ of \ Type3)/C\} + \cdots + \{V1 \times (Quantity \ of \ Type14)/C\} + \cdots + \{V1 \times (Quantity \ of \ Type14)/C\} + \cdots + \{V1 \times (Quantity \ of \ Type14)/C\} + \cdots + \{V1 \times (Quantity \ of \ Type14)/C\} + \cdots + \{V1 \times (Quantity \ of \ Type14)/C\} + \cdots + \{V1 \times (Quantity \ of \ Type14)/C\} + \cdots + \{V1 \times (Quantity \ of \ Type14)/C\} + \cdots + \{V1 \times (Quantity \ of \ Type14)/C\} + \cdots + \{V1 \times (Quantity \ of \ Type14)/C\} + \cdots + \{V1 \times (Quantity \ of \ Type14)/C\} + \cdots + \{V1 \times (Quantity \ of \ Type14)/C\} + \cdots + (Quantity \ of \ Type14)/C$

Connect to Branch box (PAC-MK·BC)

Indoor unit		V1	V2
Type1	MSZ-AP·VG, MSZ-EF·VG-E2/ER2/ET2, MSZ-EF·VGK-E1/ER1/ET1, MSZ-AP·VGK, MFZ-KT·VG, MSZ-LN·VG2	7.4	2.4
Type2	MSZ-FH·VE2	6.8	
Type3	Branch box (PAC-MK·BC)	5.1	3.0

Connect to Connection kit (PAC-LV11M)

Connect to Connection Kit (1 AC-EV 11M)									
Indoor unit	V1	V2							
	MSZ-AP·VG, MSZ-EF·VG-E2/ER2/ET2, MSZ-EF·VGK-E1/ER1/ET1, MSZ-AP·VGK, MFZ-KT·VG, MSZ-LN·VG2	7.4							
Type5	MSZ-FH·VE2	6.8	2.4						
Type6	Connection kit (PAC-LV11M)	3.5							

Connect to CITY MULTI

Indoor unit	ndoor unit			
Type7	PEFY-P·VMA3-E, PEFY-P·VMA(L)-E1	38.0	4.0	
Type8	PEFY-P·VMHS-E-F, PEFY-P40-140VMHS-E	26.8	1.6	
Type9	PEFY-M·VMA(2)(L)-A, PEFY-P·VMA(L)-E3	18.6	3.0	
Type10	PMFY-P·VBM-E, PLFY-EP·VEM-E, PLFY-P·VFM-E, PEFY-P·VMS1(L)-E, PCFY-P·VKM-E, PKFY-P·VKM-E, PFFY-P·VCM-E, PKFY-P·VLM-E/ET, PLFY-M·VEM-E/ET, PLFY-P·VEM-E	19.8	2.4	
Type11	PLFY-P·VEM-PA	17.1	Ī	
Type12	PLFY-P·VLMD-E, PEFY-P·VMR-E-L/R, PFFY-P·VKM-E2, PFFY-P·VLEM-E, GUF-RD(H)4, PEFY-P·VMH-E/E2	0	0	
Type13	PEFY-P200/250VMHS-E	13.8	4.8	
Type14	PEFY-P·VMX(L)-E(1)	38.0	2.4	

C: Multiple of tripping current at tripping time 0.01s

Please pick up "C" from the tripping characteristic of the breaker.

<Example of "F2" calculation>

*Condition PLFY-VBM × 4 + PEFY-VMA × 1, C = 8 (refer to right sample chart)

F2 = 19.8 × 4/8 + 38 × 1/8

= 14.65

→16 A breaker (Tripping current = 8 × 16 A at 0.01s)


*3 Current sensitivity is calculated using the following formula.

 $G1 = V2 \times (Quantity \ of \ Type1) + V2 \times (Quantity \ of \ Type2) + V3 \times (Quantity \ of \ Type3) + \cdots + V2 \times (Quantity \ of \ Type14) + V3 \times (Wire \ length \ [km])$

G1	Current sensitivity
30 or less	30 mA 0.1sec or less
100 or less	100 mA 0.1sec or less

Wire thickness	V3
1.5 mm ²	48
2.5 mm ²	56
4.0 mm ²	66

Sample chart

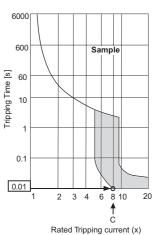

^{*1} The Ground-fault interrupter should support Inverter circuit.

- 1. Bear in mind ambient conditions (ambient temperature, direct sunlight, rain water, etc.) when proceeding with the wiring and connections.
- 2. The wire size is the minimum value for metal conduit wiring. The power cord size should be 1 rank thicker consideration of voltage drops. Make sure the power-supply voltage does not drop more than 10%.
- 3. Specific wiring requirements should adhere to the wiring regulations of the region.
- 4. Power supply cords of parts of appliances for outdoor use shall not be lighter than polychloroprene sheathed flexible cord (design 60245 IEC57). For example, use wiring such as YZW.
- 5. Install an earth line longer than power cables.

⚠WARNING

- Be sure to use specified wires for connections and ensure no external force is imparted to terminal connections. If connections are not fixed firmly, heating or fire may result.
- Be sure to use the appropriate type of overcurrent protection switch. Note that generated overcurrent may include some amount of direct current.

ACAUTION

- The breakers for current leakage should support Inverter circuit. (e.g. Mitsubishi Electric's NV-S-Series or equivalent). If no earth leakage breaker is installed, it may cause an electric shock.
- Breakers for current leakage should combine using of switch.
- Do not use anything other than a breaker with the correct capacity. Using a breaker of too large capacity may cause malfunction or fire.
- If a large electric current flows due to malfunction or faulty wiring, earth-leakage breakers on the unit side and on the upstream side of the power supply system may both operate. Depending on the importance of the system, separate the power supply system or take protective coordination of breakers.


Note

- ◆ This device is intended for the connection to a power supply system with a maximum permissible system impedance shown in the above table at the interface point (power service box) of the user's supply.
- The user must ensure that this device is connected only to a power supply system which fulfils the requirement above. If necessary, the user can ask the public power supply company for the system impedance at the interface point.

9-4. Power supply examples


The local standards and/or regulations is applicable at a higher priority.

9-4-1. PUMY-P112, 125, 140VKM5

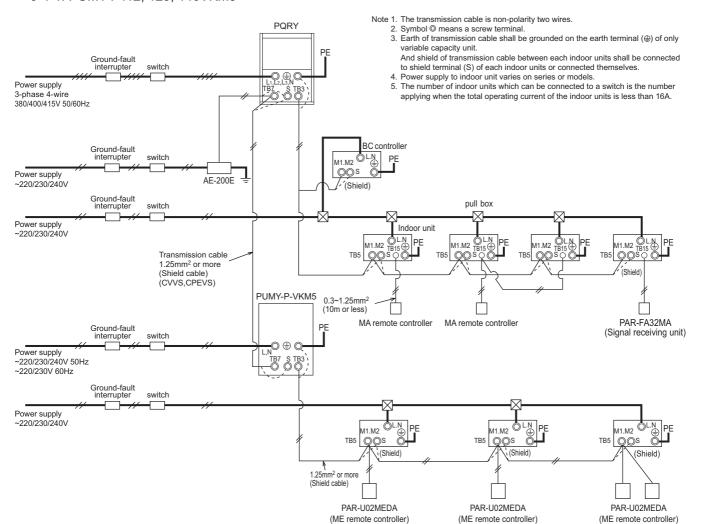


The local standards and/or regulations is applicable at a higher priority.

9-4-2. PUMY-P112, 125, 140YKM(E)4 PUMY-P200YKM2

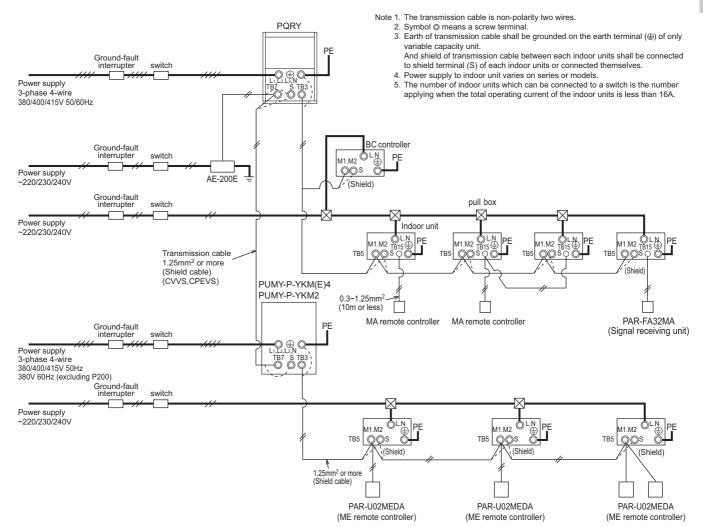

The local standards and/or regulations is applicable at a higher priority.

9-4-3. PUMY-P250, 300YBM

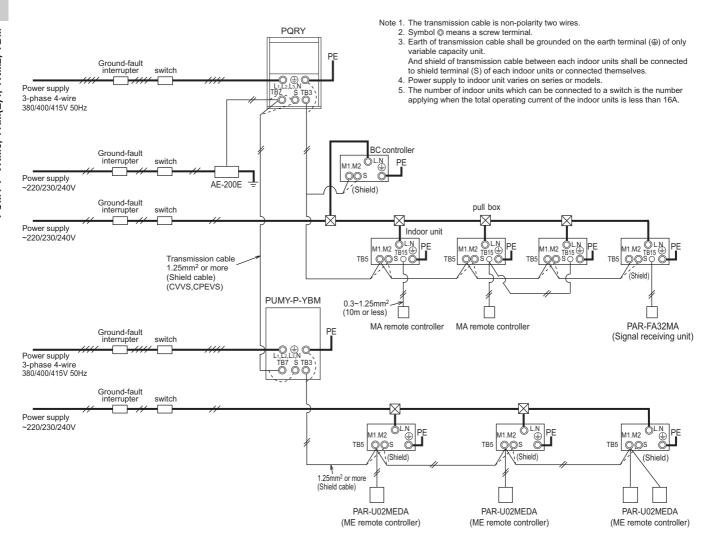

10-1. Transmission cable length limitation

10-1-1. Using MA Remote controller


Long transmission cable causes voltage down, therefore, the length limitation should be obeyed to secure proper transmission.

 Max. length via Outdoor (M-NET cable)
 L1+L2+L3, L1+L2+L4+L5, L3+L4+L5
 <=500m[1640ft]</td>
 1.25mm² [AWG16] or thicker

 Max. length to Outdoor (M-NET cable)
 L1, L3, L2+L4, L5
 <=200m[656ft]</td>
 1.25mm² [AWG16] or thicker

 Max. length from MA to Indoor for each group
 a1+a2, a1+a2+a3+a4
 <=200m[656ft]</td>
 0.3-1.25mm² [AWG22-16]

 24VDC to AG-150A
 n
 <=50m[164ft.]</td>
 0.75-2.0 mm² [AWG18-14]

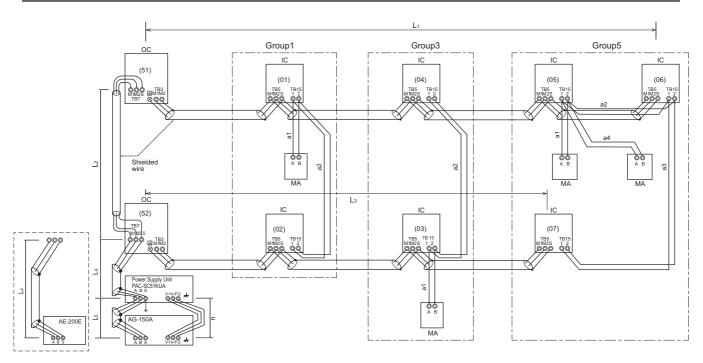

OC: Outdoor unit; IC: Indoor unit; MA: MA remote controller

10-1-2. Using ME Remote controller

Long transmission cable causes voltage down, therefore, the length limitation should be obeyed to secure proper transmission.


 Max. length via Outdoor (M-NET cable)
 L1+L2+L3+L4, L1+L2+L6+L7,L1+L2+L3+L5, L3+L4+L6+L7, L3+L5+L6+L7, L4+L5
 <=500m[640ft]</td>
 1.25mm² [AWG16] or thicker

 Max. length to Outdoor (M-NET cable)
 L1, L3+L4, L2+L6, L7, L3+L5
 <=200m[656ft]</td>
 1.25mm² [AWG16] or thicker

 Max. length from ME to Indoor
 e1, e2, e3, e4
 <=10m[32ft] *1</td>
 0.3-1.25mm² [AWG22-16] *1

 24VDC to AG-150A
 n
 <=50m[164ft.]</td>
 0.75-2.0 mm² [AWG18-14]

^{*1.} If the length from ME to Indoor exceed 10m, use 1.25 mm²[AWG16] shielded cable, but the total length should be counted into Max. length via Outdoor.

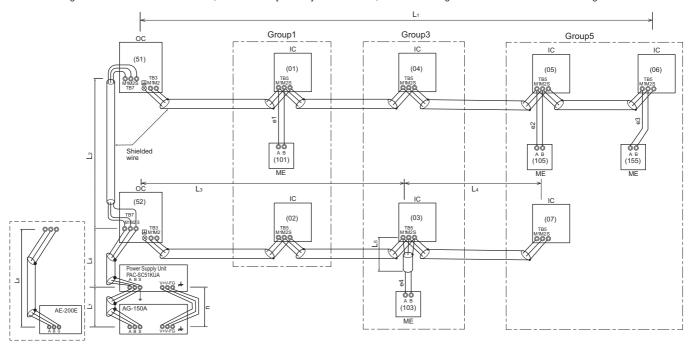


OC: Outdoor unit: IC: Indoor unit: ME: ME remote controller

10-1-3. Using a Branch Box

Long transmission cable causes voltage down, therefore, the length limitation should be obeyed to secure proper transmission.

Max length via outdoor units (M-NET cable): $L_1 + L_2 + L_3 + L_4 + L_5$ <= 500m[1640ft] 1.25mm² [AWG16] or thicker Max transmission cable length (M-NET cable): $L_1 + L_2$, $L_3 + L_4$, L_5 <= 200m[656ft] 1.25mm² [AWG16] or thicker

<Example of Transmission Cable Wiring: When Using a Branch Box>

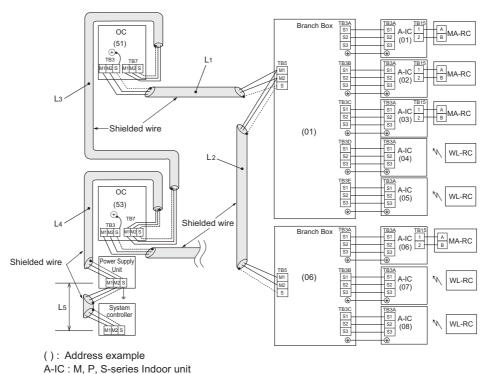


10-1-4. Mixing system

Long transmission cable causes voltage down, therefore, the length limitation should be obeyed to secure proper transmission.

Max length via outdoor units: $L_1 + L_2 + L_3 + L_4 + L_5 + L_6 + L_7$ <=500m[1640ft] 1.25mm² [AWG16] or thicker Max transmission cable length: $L_1 + L_2 + L_3 + L_4$, $L_5 + L_6$, L_7 <=200m[656ft] 1.25mm² [AWG16] or thicker



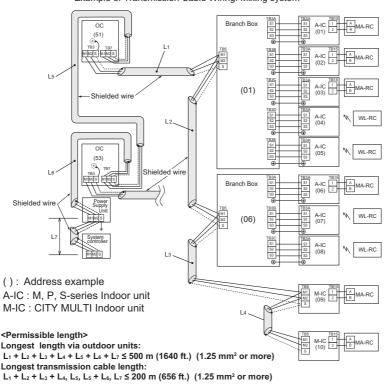

10-2. Transmission cable specifications

	Transmission cables (Li)	M-NET remote controller cables (ei)	MA Remote controller cables (ai)
Type of cable	Shielding wire (2-core) CVVS, CPEVS or MVVS	Sheathed 2-core cable (unshielded) CVV	
Cable size	More than 1.25 mm² [AWG16]	0.3~1.25 mm ² [AWG22~16]	0.3~1.25 mm² [AWG22~16]*1
Remarks	Max length: within 200 m	When 10 m [32ft] is exceeded, use cables with the same specification as transmission cables.	Max length: 200 m [656ft]

^{*1} To wire PAR-CT01MA, PAR-4XMAA ("X" represents 0 or later), and Simple MA remote controller, use a wire with a diameter of 0.3 mm² [AWG22].

CVVS, MVVS: PVC insulated PVC sheathed shielded control cable CPEVS: PE insulated PVC sheathed shielded communication cable CVV: PVC insulated PVC sheathed control cable

10-3. System configuration restrictions

10-3-1. Common restrictions for the CITY MULTI system

For each Outdoor/Heat source unit, the maximum connectable quantity of Indoor unit is specified at its Specifications table.

- A) 1 Group of Indoor units can have 1-16 Indoor units;
 - *OA processing unit GUF-RD(H) is considered as Indoor unit.
- B) Maximum 2 remote controllers for 1 group;
 - *MA/ME remote controllers cannot be present together in 1group.
 - *When a PAR-CT01MA or PAR-4XMAA ("X" represents 0 or later) is connected to a group, no other MA remote controllers can be connected to the same group.
- C) 1 Lossnay unit can interlock maximum 16 Indoor units; 1 Indoor unit can interlock only 1 Lossnay unit.
- D) Maximum 3 System controllers are connectable when connecting to TB3 of the Outdoor/Heat source unit.
- E) A maximum of 6 system controller are connectable to TB3 and TB7 of Outdoor/Heat source unit.
- F) 4 System controllers or more are connectable when connecting to TB7 of the Outdoor/Heat source unit, if the transmission power is supplied by the power supply unit PAC-SC51KUA.
 - *System controller connected as described in D) would have a risk that the failure of connected Outdoor/Heat source unit would stop power supply to the System controller.

10-3-2. Ensuring proper communication power and the number of connected units for M-NET

In order to ensure proper communication among Outdoor/Heat source unit, Indoor unit, Lossnay, OA processing unit GUF-RD(H), and Controllers, the transmission power situation for the M-NET should be observed. In some cases, Transmission booster should be used. Taking the power consumption of Indoor unit as 1, the equivalent power consumption or supply of others are listed at Table 1 and Table 2.

Both the transmission line for centralized controller and indoor-outdoor transmission line must meet the conditions listed below. (Both conditions a) and b) must be met.)

- a) [Total equivalent power consumption] ≤ [The equivalent power supply]
- b) [Total equivalent number of units (Table 1)] ≤ [40]

Table 1 The equivalent power consumption and the equivalent number of units

Category	Model	The equivalent power consumption	The equivalent number of units	
CITY MULTI indoor unit OA unit CITY MULTI connection kit Air handling unit controller	Except for the models indicated by *2 PEFY-AF2500, 3000, 4000, 5000, 6000MH GUF-50, 100 PAC-LV11M-J PAC-AH125, 140, 250, 500M-J	1	1	
CITY MULTI indoor unit *2	MULTI indoor unit *2 PDFY-P100VM-E-RE		2	
BC controller CMB		2	1	
	P100VM-E-BU	6	1	
	P200VM-E1-AU P200VM-E2-AU	5	1	
PWFY *1	(E)P100VM-E1-AU (E)P100VM-E2-AU P140VM-E1-AU P140VM-E2-AU	1	1	
PFAV	P250, 300, 500, 600VM-E(-F)	1	1	
PFAV	P750, 900VM-E(-F)	2	2	
PFV, PEV	P200, 250, 400, 500YM-A	1	1	
MA remote controller/Lossnay	PAR-CT01MA PAR-21MA PAR-31, 32, 33MA PAR-40, 41MA PAC-YT52CRA PAR-FA32MA LGH PZ-60, 61, 62DR-E PZ-43SMF-E	0	0	
ME remote controller	PAR-U02MEDA	0.5	1	
ME remote controller	PZ-52SF	0.25	1	
	AE-200E AE-50E EW-50E LM-AP	0	0	
System controller	AG-150A EB-50GU-J PAC-IF01AHC-J	0.5	1	
	AT-50B	1.5	5	
	PAC-YG60MCA PAC-YG66DCA PAC-YG63MCA	0.25	1	
ON/OFF controller	PAC-YT40ANRA	1	1	
MN converter	CMS-MNG-E	2	1	
Outdoor/Heat source unit	TB7 power consumption	0	0	
System control interface	MAC-333IF-E	0	0	
A-M converter PAC-SF83MA-E		0	0	

^{*1} PWFY cannot be connected to PUMY model.

Table 2 The equivalent power supply

Category	Model	The equivalent power supply		
Transmission Booster	ransmission Booster PAC-SF46EPA-G 25 *1			
Power supply unit	PAC-SC51KUA	5		
Expansion controller	PAC-YG50ECA	6		
BM ADAPTER	BAC-HD150	6		
	AE-200E/AE-50E	0.75		
System controller	EW-50E	1.5		
	LM-AP	0		
		TB3 and TB7 total	TB7 only	TB3 only
Outdoor/Heat source unit	Outdoor unit except S-Series and TKA *2	32 *1	6	32 *1-equivalent power supplied to TB7
Outdoor/Heat source unit	S-Series outdoor unit	12 *1	0	12 *1
	TKA outdoor unit	32 *1	- *3	32 *1

^{*1} When one or more indoor units listed below is connected, subtract 3 from the equivalent power supply.

Table 3


Table 3	
Category	Model
	Sized P200/P250
Indoor unit	PEFY-AF4000/5000/6000MH, PFFY-P400/500YM-E, PFFY-P400/500YMH-C
	PFFY-P300/600YM-E-F, PFFY-P300/600YM-C-F, PDFY-P100VM-E-RE
Air handling unit controller	PAC-AH250/500M-J
PFAV	PFAV-P500/600/750/900VM-E(-F)
PFV	PFV-P400/500YM-A
PEV	PEV-P400/500YM-A

^{*2} If PAC-SC51KUA is used to supply power at TB7 side, no power supply need from Outdoor/Heat source unit at TB7, Connector TB3 itself will therefore have 32.

With the equivalent power consumption values and the equivalent number of units in Table 1 and Table 2, PAC-SF46EPA-G can be designed into the air-conditioner system to ensure proper system communication according to (A), (B), (C).

- (A) Firstly, count from TB3 at TB3 side the total equivalent number of units of Indoor units, OA processing units, ME remote controller, and System controllers. If the total equivalent number of units reaches 40, a PAC-SF46EPA-G should be set.
- (B) Secondly, count from TB7 side to TB3 side the total transmission power consumption. If the total equivalent power supply reaches 32, a PAC-SF46EPA-G should be set. Yet, if a PAC-SC51KUA or another controller with a built-in power supply, such as PAC-YG50ECA, is used to supply power at TB7 side, count from TB3 side only.
- (C) Thirdly, count from TB7 at TB7 side the total transmission power consumption, If the total equivalent power supply for only TB7 reaches 6, a PAC-SF46EPA-G should be set. Also, count from TB7 at TB7 side the total equivalent number of units of System controllers, and so on. If the total equivalent number of units reaches 40, a PAC-SF46EPA-G should be set.
- * The equivalent power supply of S-Series outdoor unit is 12.
- * When one or more indoor units listed in Table 3 is connected, subtract 3 from the equivalent power supply.

■ System example

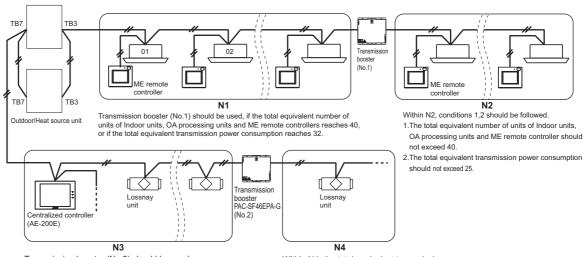

Transmission booster (No.2) should be used, if the total equivalent transmission power consumption reaches 5.

Within N4, the total equivalent transmission power consumption should not exceed 25.

^{*3} Do not supply power to TB7 from TKA outdoor units.

Use PAC-SC51KUA or PAC-SF46EPA-G when connecting an M-NET device to TB7.

10-3-3. Ensuring proper power supply to System controller


The power to System controller (excluding AE-200E, AE-50E, EW-50E, BAC-HD150, LM-AP) is supplied via M-NET transmission line at TB7 side is called Centralized control transmission line while one at TB3 side is called Indoor-Outdoor/Heat source transmission line. There are 3 ways to supply power to the System controller.

- A) Connecting to TB3 of the Outdoor/Heat source unit and receiving power from the Outdoor/Heat source unit.
- B) Connecting to TB7 of the Outdoor/Heat source unit and receiving power from the Outdoor/Heat source unit. (Not applicable to the PUMY model)
- C) Connecting to TB7 of the Outdoor/Heat source unit but receiving power from power supply unit PAC-SC51KUA.

 * System controllers (AE-200E, AE-50E, EW-50E, BAC-HD150, LM-AP) have a built-in function to supply power to the M-NET transmission lines, so no power needs to be supplied to the M-NET transmission lines from the Outdoor/Heat source units or from PAC-SC51KUA.


10-3-3-A. When connecting to TB3 of the Outdoor/Heat source unit and receiving power from the Outdoor/Heat source unit.

Maximum 3 System controllers can be connected to TB3. If there is more than 1 Outdoor/Heat source unit, it is necessary to replace power supply switch connector CN41 with CN40 on one Outdoor/Heat source unit.

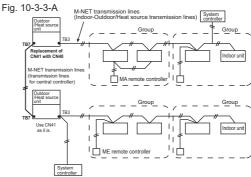

10-3-3-B. When connecting to TB7 of the Outdoor/Heat source unit and receiving power from the Outdoor/Heat source unit. (Not applicable to the PUMY model)

A maximum of 6 system controller are connectable to TB3 and TB7 of Outdoor/Heat source unit. (Not applicable to the PUMY model) It is necessary to replace power supply switch connector CN41 with CN40 on one Outdoor/Heat source unit.

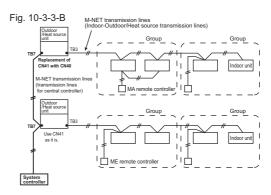

10-3-3-C. When connecting to TB7 of the Outdoor/Heat source unit but receiving power from PAC-SC51KUA.

When using PAC-SC51KUA to supply transmission power, the power supply connector CN41 on the Outdoor/Heat source units should be kept as it is. It is also a factory setting.

1 PAC-SC51KUA supports maximum 1 AG-150A or

1 EB-50GU-J unit due to the limited power 24VDC at its TB3. However, 1 PAC-SC51KUA supplies transmission power at its TB2 equal to 5 Indoor units, which is referable at Table 2. If System controller, ON/OFF controller connected to TB7 consume transmission power more than 5 (Indoor units), Transmission booster PAC-SF46EPA-G is needed. PAC-SF46EPA-G supplies transmission power equal to 25 Indoor units.

⚠ CAUTION

■How to connect system controllers (AE-200E, AE-50E, EW-50E, BAC-HD150, LM-AP) to a given system System controllers (AE-200E, AE-50E, EW-50E, BAC-HD150, LM-AP) have a built-in function to supply power to the M-NET transmission lines, so no power needs to be supplied to the M-NET transmission lines from the Outdoor/Heat source units or from PAC-SC51KUA.

Leave the power supply connector on the Outdoor/Heat source unit connected to CN41 as it is

Leave the power supply connector on the Outdoor/Heat source unit connected to CN41 as it is. Refer to 10-3-2 for information about the power-supply capacity of each system controller (EW-50E, BAC-HD150, LM-AP) to the low-level system controllers.


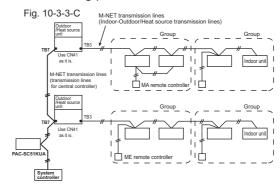


Fig. 10-3-3-D

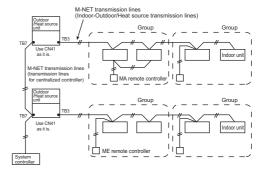

10-3-4. Power supply to LM-AP

1-phase 220-240VAC power supply is needed.

The power supply unit PAC-SC51KUA is not necessary when connecting only the LM-AP. Yet, make sure to change the power supply changeover connector CN41 to CN40 on the LM-AP.

10-3-5. Power supply to expansion controller

1-phase 100-240VAC power supply is needed.

The power supply unit PAC-SC51KUA is not necessary.

The expansion controller supplies power through TB3, which equals 6 indoor units. (refer to Table 2)

10-3-6. Power supply to BM ADAPTER

1-phase 100-240VAC power supply is needed.

The power supply unit PAC-SC51KUA is not necessary when only BM ADAPTER is connected.

Yet, make sure to move the power jumper from CN41 to CN40 on the BM ADAPTER.

10-3-7. Power supply to AE-200E/AE-50E/EW-50E

1-phase 100-240VAC power supply is needed.

The power supply unit PAC-SC51KUA is not necessary when connecting only the AE-200E/AE-50E/EW-50E.

10-4. Address setting

10-4-1. Switch operation

In order to constitute CITY MULTI in a complete system, switch operation for setting the unit address No. and connection No. is required.

① Address No. of outdoor unit, indoor unit and remote controller. The address No. is set at the address setting board. In the case of R2 system, it is necessary to set the same No. at the branch No. switch of indoor unit as that of the BC controller connected. (When connecting two or more branches, use the lowest branch No.)

Rotary switch					
Branch No. setting	Unit address No. setting				
072345 QQAD68L	9 0 7 8 1 0 5 4 0 0 7 0 0 7 0 0 7 0 0 7 0 0 7 0 0 7				

- 2 Caution for switch operations
 - * Be sure to shut off power source before switch setting. If operated with power source on, switch can not operate properly.
 - No units with identical unit address shall exist in one whole air conditioner system. If set erroneously, the system can not operate.

3 MA remote controller

- When connecting only one remote controller to one group, it is always the main remote controller.
 When connecting two remote controllers to one group, set one remote controller as the main remote controller and the other as the sub remote controller.
- . The factory setting is "Main".

PAR-4XMAA ("X" represents 0 or later), PAR-CT01MA
The MA remote controller does not have the switches listed above.
Refer to the installation manual for the function setting.

PAC-YT52CRA

Setting the dip switches

There are switches on the back of the top case. Remote controller Main/Sub and other function settings are performed using these switches. Ordinarily, only change the Main/Sub setting of SW1. (The factory settings are ON for SW1, 2, and 3 and OFF for SW4.)

SW No.	SW contents Main	ON	OFF	Comment
1	Remote controller Main/Sub setting	Main	Sub	Set one of the two remote controllers at one group to "ON".
2	Temperature display units setting	Celsius	Fahrenheit	When the temperature is displayed in [Fahrenheit], set to "OFF".
3	Cooling/heating display in AUTO mode	Yes	No	When you do not want to display "Cooling" and "Heating" in the AUTO mode, set to "OFF".
4	Indoor temperature display	Yes	No	When you want to display the indoor temperature, set to "ON".

10-4-2. Rule of setting address

	Unit	Address setting	Example	Note
Indoor unit		01 ~ 50		Use the most recent address within the same group of indoor units. Make the indoor units address connected to the BC controller (Sub) larger than the indoor units address connected to the BC controller (Main). If applicable, set the sub BC controllers in an PURY/PQRY system in the following order: (1) Indoor unit to be connected to the BC controller (Main) (2) Indoor unit to be connected to the BC controller (No.1 Sub) (3) Indoor unit to be connected to the BC controller (No.2 Sub) Set the address so that (1)<(2)<(3)
Branch Box		01 ~ 50		Use a number within the range 01~ 50, but it should not make the highest address of connected A-IC exceed 50. • Specify whether indoor units are connected to each port (A, B, C, D, and E). SW1 1 2 3 4 5 (6) Port A B C D E not use indoor units are connected ON indoor units are not connected OFF
	Outdoor unit	51 ~ 99, 100	10 10 10 10 10 10 10 10 10 10 10 10 10 1	The smallest address of indoor unit in same refrigerant system + 50 *The address automatically becomes "100" if it is set as "01~50"
BC controller (Main)		52 ~ 99, 100		The address of outdoor unit + 1 *Please reset another address between 51 and 99 when two addresses overlap. *The address automatically becomes "100" if it is set as "01~50"
	BC controller (Sub)	53 ~ 99, 100	$ \begin{array}{c c} & 0 \\ & 0 \\ & 0 \\ & 0 \end{array} $ $ \begin{array}{c c} & 0 \\ & 0 \\ & 0 \\ & 0 \end{array} $ $ \begin{array}{c c} & 0 \\ & 0 \\ & 0 \\ & 0 \\ & 0 \end{array} $ $ \begin{array}{c c} & 0 \\ & 0 \\ & 0 \\ & 0 \\ & 0 \end{array} $ $ \begin{array}{c c} & 0 \\ & 0 \\ & 0 \\ & 0 \\ & 0 \\ & 0 \\ & 0 \end{array} $ $ \begin{array}{c c} & 0 \\ & 0 \\ & 0 \\ & 0 \\ & 0 \\ & 0 \\ & 0 \\ & 0 \\ & 0 \end{array} $ $ \begin{array}{c c} & 0 \\ & $	Lowest address within the indoor units connected to the BC controller (Sub) plus 50.
Local remote controller	ME Remote controller (Main)	101 ~ 150	$ \begin{array}{cccccccccccccccccccccccccccccccccccc$	The smallest address of indoor unit in the group + 100 *The place of "100" is fixed to "1"
Local remo	ME Remote controller (Sub)	151 ~ 199, 200	$ \begin{array}{ccc} 1 & & & \\$	The address of main remote controller + 50 * The address automatically becomes "200" if it is set as "00"
	ON/OFF remote controller	201 ~ 250	$ \begin{array}{c c} & 0 & 0 & 0 \\ & 0 & $	The smallest group No. to be managed + 200 * The smallest group No. to be managed is changeable.
ontroller	AE-200E/AE-50E AG-150A EB-50GU-J EW-50E AT-50B	000, 201 ~ 250	0 0 0	* AT-50B cannot be set to "000".
System controller	PAC-YG50ECA	000, 201 ~ 250	0 0 0	* Settings are made on the initial screen of AG-150A.
	BAC-HD150	000, 201 ~ 250	0 0 0	* Settings are made with setting tool of BM ADAPTER.
	LMAP04-E	201 ~ 250	2 Fixed 0 0 0 0 0 0 0 0 0	
0(PAC-YG60MCA	01 ~ 50		
PI, AI, DIDO	PAC-YG63MCA	01 ~ 50		
1	PAC-YG66DCA	01 ~ 50		
	ossnay, OA rocessing unit	01 ~ 50		After setting the addresses of all the indoor units, assign an arbitrary address.
P	AC-IF01AHC	201 ~ 250	$ \begin{array}{cccccccccccccccccccccccccccccccccccc$	

10-4-3. System example

Factory setting


Original switch setting of the outdoors, indoors, controllers, LM-AP and BM ADAPTER at shipment is as follows.


• Outdoor unit : Address: 00, CN41: ON (Jumper), DipSW2-1: OFF


Indoor unit : Address: 00ME Remote controller : Address: 101

• LM-AP : Address: 247, CN41: ON (Jumper), DipSW1-2: OFF

• BM ADAPTER : Address: 000, CN41: ON (Jumper) • AE-200E/AE-50E/EW-50E : Address: 000, CN21: ON (Jumper)

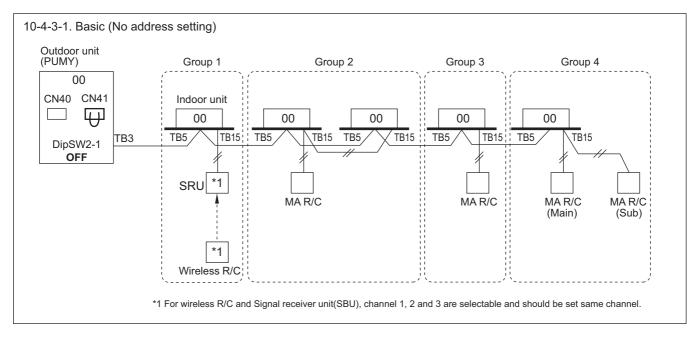


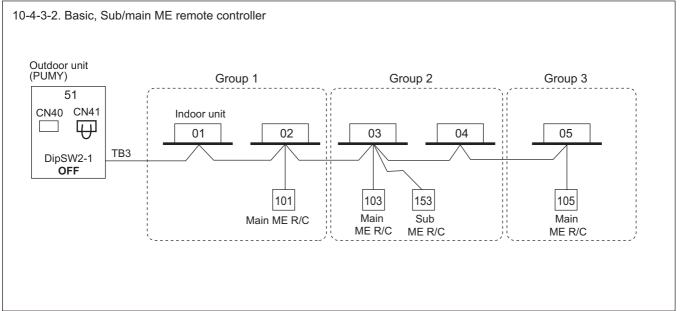


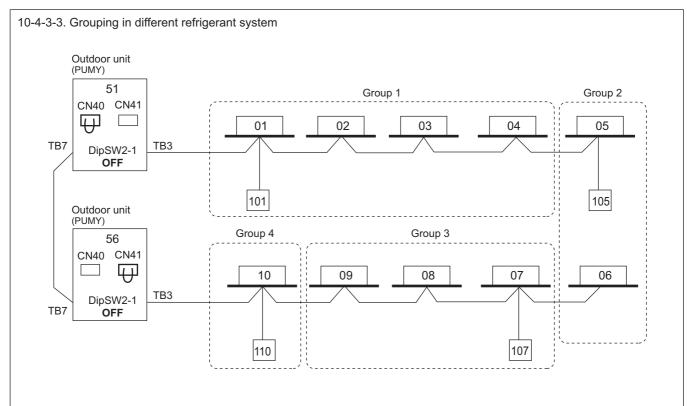



NOTE

- It is necessary to change the connecter to CN40 on the outdoor unit (Heat source unit) control board (only one outdoor unit (Heat source unit)) when the group is set between other refrigerant systems.
- It is necessary to set on the remote controller by manual when group sets on the different refrigerant system. Please refer to remote controller installation manual.

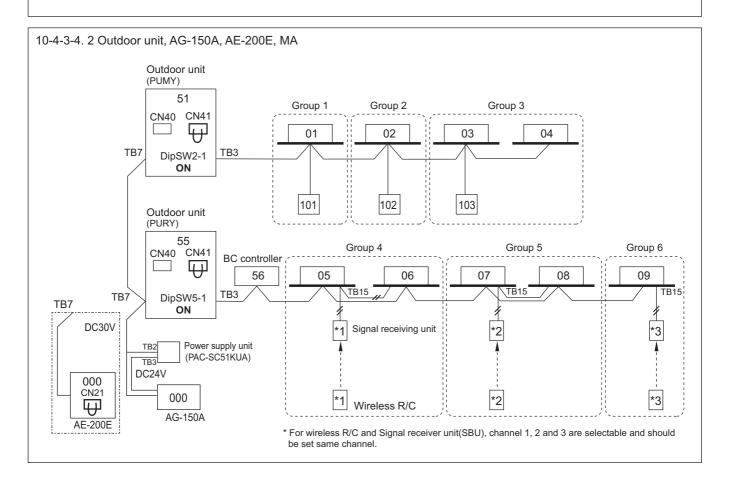


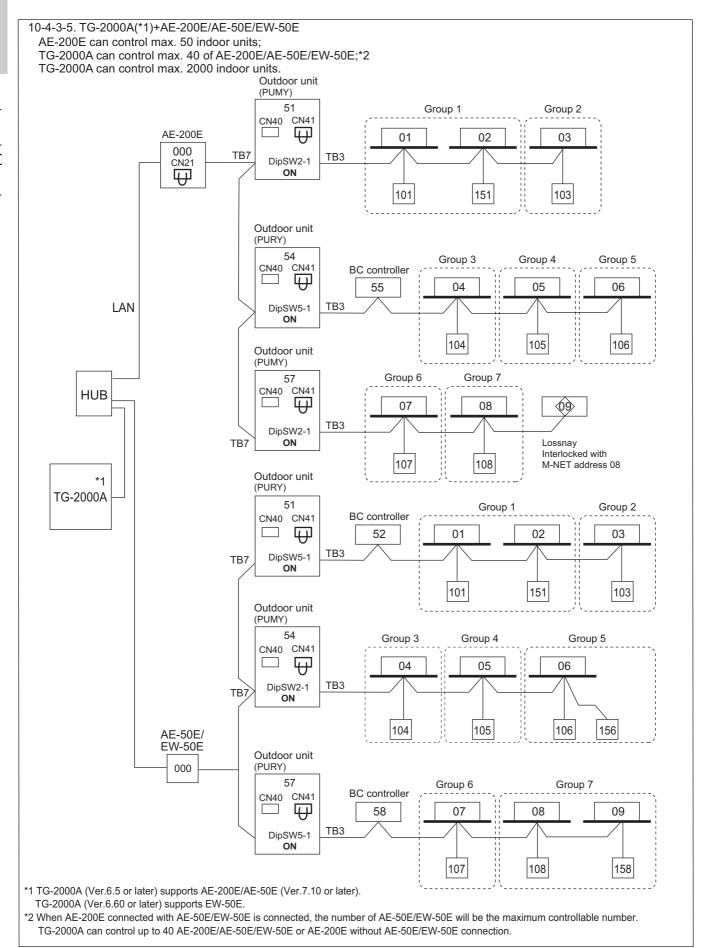


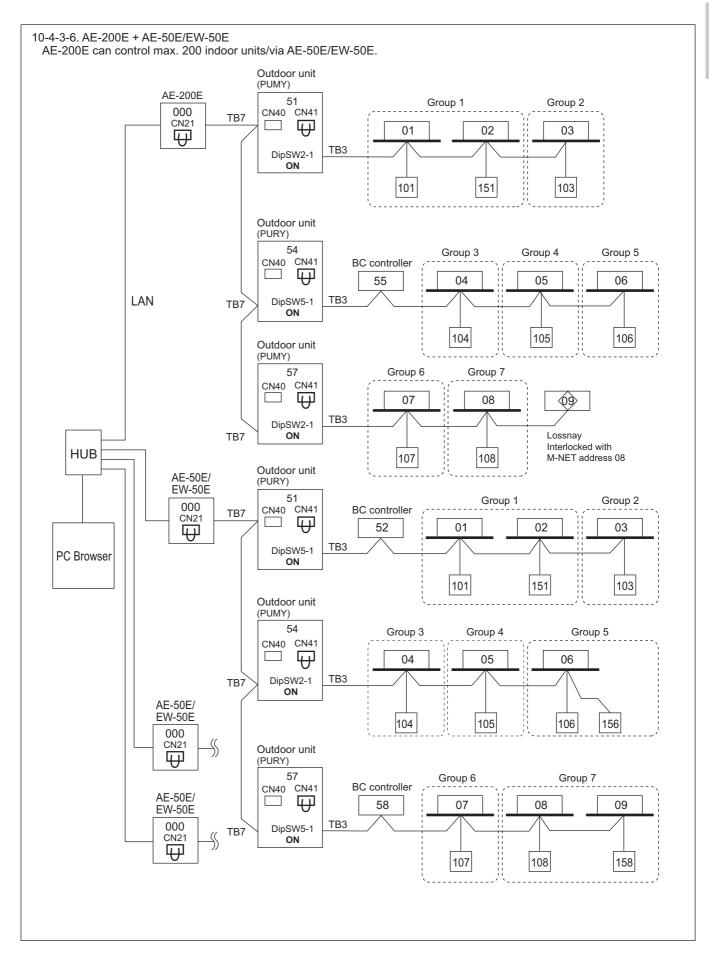


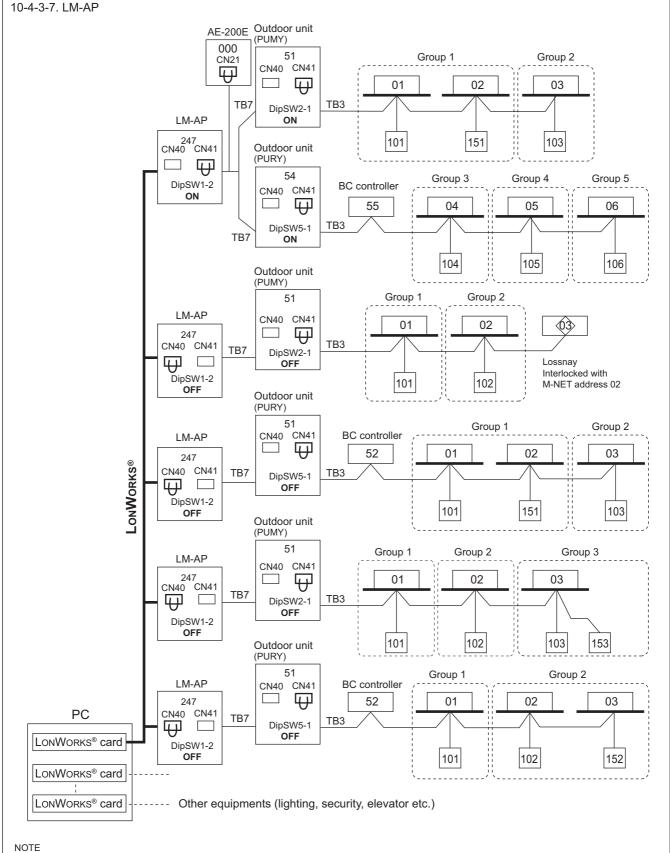

- · LM-AP can control 50 indoor units.
- It is necessary to turn on the DipSW1-2 on the LM-AP control board and the DipSW2-1 on the outdoor unit (heat source unit) control board with centralized controller (Power supply unit).
- It is necessary to change the connector to CN40 on the LM-AP control board without centralized controllers (Power supply unit).

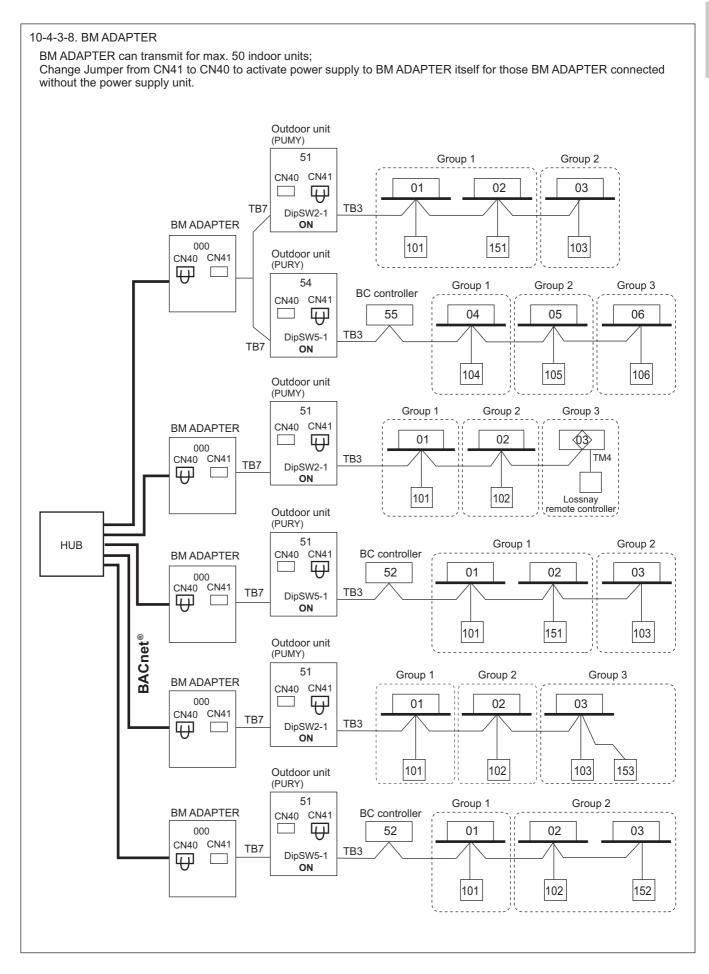

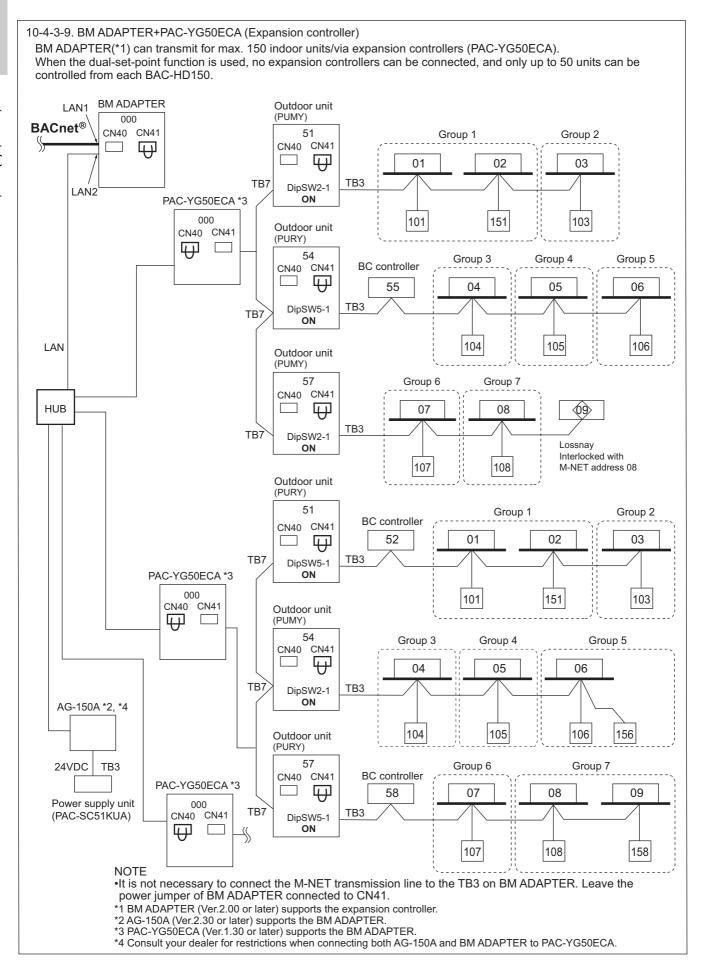

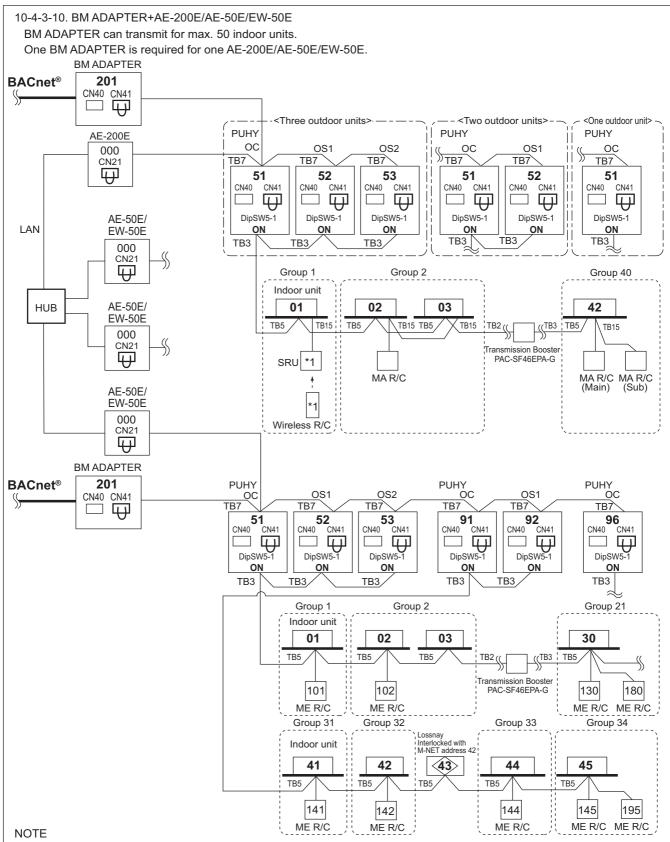

- •It is not necessary to connect the M-NET transmission line to the TB3 on BM ADAPTER. Leave the power jumper of BM ADAPTER connected to CN41.
- *1 For Wireless R/C and Signal receiver unit (SRU), channel 1, 2 and 3 are selectable and should be set to same channel.
- *2 Consult your dealer for restrictions when connecting both AE-200E/AE-50E/EW-50E and BM ADAPTER.
- *3 When a PAR-CT01MA or PAR-3X MA-Series (X indicates 1, 2...) is connected to a group, no other MA remote controllers can be connected to the same group
- *4 In a system that uses AE-200E and/or AE-50E/EW-50E, each BM-ADAPTER must be connected to the M-NET line.

11-1. R410A Piping material

Refrigerant pipe for CITY MULTI shall be made of phosphorus deoxidized copper, and has two types.

A. Type-O: Soft copper pipe (annealed copper pipe), can be easily bent with human's hand.

B. Type-1/2H pipe: Hard copper pipe (Straight pipe), being stronger than Type-O pipe of the same radical thickness.

The maximum operation pressure of R410A air conditioner is 4.30 MPa [623psi]. The refrigerant piping should ensure the safety under the maximum operation pressure. MITSUBISHI ELECTRIC recommends pipe size as Table1, or You shall follow the local industrial standard. Pipes of radical thickness 0.7mm or less shall not be used.

Table 1. Copper pipe size and radial thickness for R410A CITY MULTI.

Size (mm)	Size (inch)	Radial thickness (mm)	Radial thickness (mil)	Pipe type
ø6.35	ø1/4"	0.8	[32]	Type-O
ø9.52	ø3/8"	0.8	[32]	Type-O
ø12.7	ø1/2"	0.8	[32]	Type-O
ø15.88	ø5/8"	1.0	[40]	Type-O
ø19.05	ø3/4"	1.2	[48]	Type-O
ø19.05	ø3/4"	1.0	[40]	Type-1/2H or H
ø22.2	ø7/8"	1.0	[40]	Type-1/2H or H
ø25.4	ø1"	1.0	[40]	Type-1/2H or H
ø28.58	ø1-1/8"	1.0	[40]	Type-1/2H or H
ø31.75	ø1-1/4"	1.1	[44]	Type-1/2H or H
ø34.93	ø1-3/8"	1.2	[48]	Type-1/2H or H
ø41.28	ø1-5/8"	1.4	[56]	Type-1/2H or H

 $^{^{\}star}$ For pipe sized ø19.05 (3/4") for R410A air conditioner, choice of pipe type is up to you.

Flare

Due to the relative higher operation pressure of R410A compared to R22, the flare connection should follow dimensions mentioned below so as to achieve enough the air-tightness.

Flare pipe	Pipe size	A (For R410A)	(mm[in.])
-	ø6.35 [1/4"] ø9.52 [3/8"] ø12.70 [1/2"] ø15.88 [5/8"] ø19.05 [3/4"]	9.1 13.2 16.6 19.7 24.0	

Flare nut	Pipe size	B (For R410A)	(mm[in.])
	ø6.35 [1/4"] ø9.52 [3/8"] ø12.70 [1/2"] ø15.88 [5/8"] ø19.05 [3/4"]	17.0 22.0 26.0 29.0 36.0	
	Ø 10.00 [0/ +]	30.0	

^{*} The figures in the radial thickness column are based on the Japanese standards and provided only as a reference. Use pipes that meet the local standards.


11-2. Piping Design

11-2-1. Use of the existing refrigerant piping

<u>∧</u> WARNING

Before operating the compressor, make sure the refrigerant pipes are properly installed.

- Operating the compressor without the refrigerant pipes properly being connected and with the stop (ball) valve open, the compressor may suck in air, raising the pressure inside the refrigerant cycle abnormally high and resulting in pipe bursting and personal injury.
- · Adequately insulate the liquid and gas refrigerant pipes to keep condensation from dripping.
- Provide additional insulation on the refrigerant pipes as necessary to keep condensation from forming on the insulation surface. (Insulating material···Heat-resistance temperature: 120°C; Thickness: 15 mm or greater)
- * Installation of the unit in high-temperature high-humidity conditions, such as in the ceiling of the top floor, may require additional insulation.
- Insulate refrigerant pipes with heat-resistant polyethylene foam and without leaving any gap between indoor unit and insulating material or between insulating materials. (Exposed pipes may cause condensation and pose burn hazard.)
- Keep the piping length within the limits, and charge the required amount of refrigerant (R410A).
- * Before charging refrigerant, evacuate the extended piping and the indoor units, and charge refrigerant through the stop valve (applicable when the unit is stopped). When charging refrigerant through the check valve on the suction side, use a safety charger to prevent liquid refrigerant from being inhaled (applicable when the unit is operated).
- * When charging refrigerant, record the amount of refrigerant charged in the relevant section of the maintenance manual (attached to the product).
- Determine the reusability of the existing piping, using the flowchart below.
- If the diameter of the existing piping differs from the standard diameter, check the reusability of the piping and restrictive conditions for reuse.

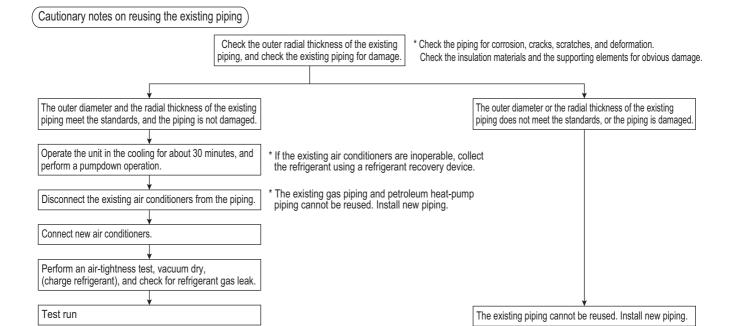

Connecting non-standard diameter pipes

• The following restrictions apply when using pipes with a diameter different from the standard recommended size.

Usability of pipes with non-standard diameters

Main pipe size

	Outside diameter(mm)	Radial thickness	P112	P125	P140	P200	P250	P300
	ø12.7	t 0.8	NA	NA	NA	NA	NA	NA
	ø15.88	t 1.0	Α	Α	Α	NA	NA	NA
	ø19.05	t 1.0 Type-O	C C		С	С	NIA	NIA
Gas pipe	Ø19.05	t 1.2 Type-O or t1.0 Type-1/2H or H	В	В	В	Α	NA	NA
	ø22.2	t 1.0	NA	NA	NA	В	Α	Е
	ø25.4	t 1.0	NA	NA	NA	NA	В	Α
	ø28.58 or greater	t 1.0 or greater	NA	NA	NA	NA	NA	NA
	ø9.52	t 0.8	Α	Α	Α	Α	Α	NA
Liquid pipe	ø12.7	t 0.8	D	D	D	D	D	Α
Liquiu pipe	ø15.88	t 1.0	D	D	D	D	D	D
	ø19.05 or greater	t 1.0 or greater	NA	NA	NA	NA	NA	NA

- A: Standard piping
- B: Usable (with no loss of performance)
- C: Usable (with loss of performance), Set the SW6-1 from OFF to ON.
- D: Usable (Restrictions on refrigerant charge apply.)
- E: Usable (with loss of performance)
- NA: Unusable

· Size of the piping after branching and up to indoor units

	Outside diameter(mm)	Radial thickness	P10	P15	P20	P25	P32	P40	P50	P63	P71	P80	P100	P125	P140	P200	P250
	ø12.7	t 0.8	Α	Α	Α	Α	Α	Α	Α	Е	Е	Е	Е	Е	Е	NA	NA
	ø15.88	t 1.0	NA	NA	NA	NA	NA	В	В	Α	Α	Α	Α	Α	Α	NA	NA
	ø19.05	t 1.0 Type-O	NA	С	С	С	С	С	С	NA							
Gas pipe	Ø 19.05	t 1.2 Type-O or t1.0 Type-1/2H or H	NA	В	В	В	В	В	Α	NA							
	ø22.2	t 1.0	NA	NA	NA	NA	NA	NA	В	Α							
	ø25.4	t 1.0	NA	NA	NA	NA	NA	NA	NA	В							
	ø28.58	t 1.0	NA	NA	NA	NA	NA	NA	NA	NA							
	ø6.35	t 0.8	Α	Α	Α	Α	Α	Α	Α	15 m or less	NA	NA	NA	NA	NA	NA	NA
	ø9.52	t 0.8	D	D	D	D	D	D	D	Α	Α	Α	Α	Α	Α	Α	Α
Liquid pipe	ø12.7	t 0.8	NA	D	D	D	D	D	D	D	D						
	ø15.88	t 1.0	NA	NA	NA	NA	NA	NA	NA	NA							
	ø19.05 or greater	t 1.0	NA	NA	NA	NA	NA	NA	NA	NA							

Pipe diameter and radial thickness

Note: For pipes with a diameter of ø22.2 and up, use 1/2-H or H-material.

Outside diameter (mm)	ø6.35	ø9.52	ø12.7	ø15.88	ø19.05	ø22.2	ø25.4	ø28.58
Radial thickness (mm)	0.8	0.8	0.8	1.0	1.0	1.0	1.0	1.0

Restrictions on extending piping/Amount of refrigerant to be charged (REPLACE units)

When reusing the existing piping, calculate the amount of refrigerant to be charged using the formula below. The existing piping is usable if the result of the calculation below is less than 10 kg. If the calculation result is at or above 10 kg, use new piping. When reusing the existing piping, charge the amount of refrigerant required for the piping and for the indoor units.

• Calculating the amount of refrigerant to be charged based on pipe size and length

Total length of ø15.88 liquid pipes × 0.20
(m) × 0.20 (kg/m)

Total capacity index of the connected indoor units

8.1kW - 16.0kW

- 8.0kW

Total length of ø12.7 liquid pipes × 0.092 $(m) \times 0.092 (kg/m)$ Total length of ø9.52 liquid pipes × 0.05 $(m) \times 0.05 (kg/m)$ Total length of ø6.35 liquid pipes × 0.019 $(m) \times 0.019 (kg/m)$ Amount of additional refrigerant to be charged (REPLACE units) (kg)

· Calculating the amount of refrigerant to be charged based on indoor unit capacity

1.5kg

2.5kg

3.0kg

PUMY-P112-140

Amount of refrigerant to be charged

PUMY-P200	
Total capacity index of the connected indoor units	Amount of refrigeran to be charged
- 16.0kW	2.5kg
16.1kW – 25.0kW	3.0kg
25 1kW –	3.5kg


PUMY-P250/300


16.1kW -


Total capacity index of the connected indoor units	Amount of refrigerant to be charged
- 16.0kW	2.5kg
16.1kW – 27.0kW	3.0kg
27.1kW – 31.0kW	3.5kg
31.1kW – 34.0kW	4.0kg

Total capacity index of the connected indoor units	Amount of refrigerant to be charged
34.1kW - 36.5kW	4.5kg
36.6kW - 39.0kW	5.0kg
39.1kW - 41.0kW	5.5kg
41 1L/M	6.1kg


11-2-2. PUMY-P112, 125, 140VKM5/YKM(E)4 Piping

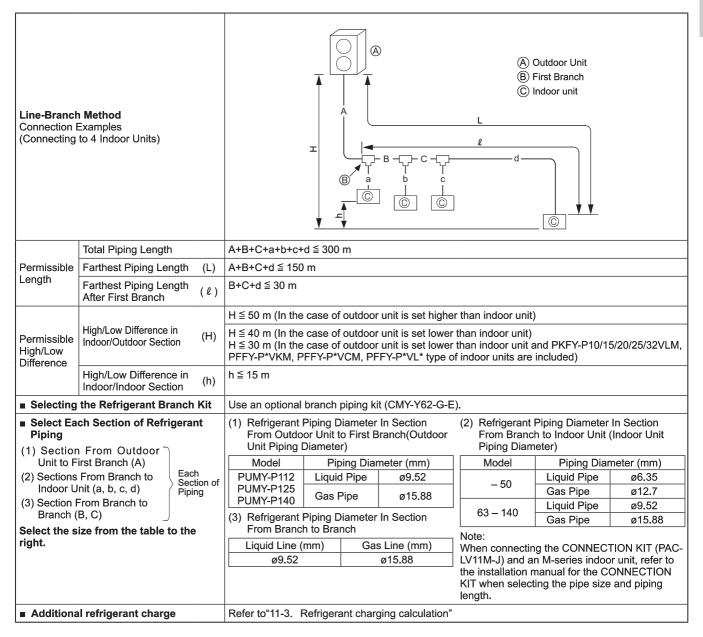


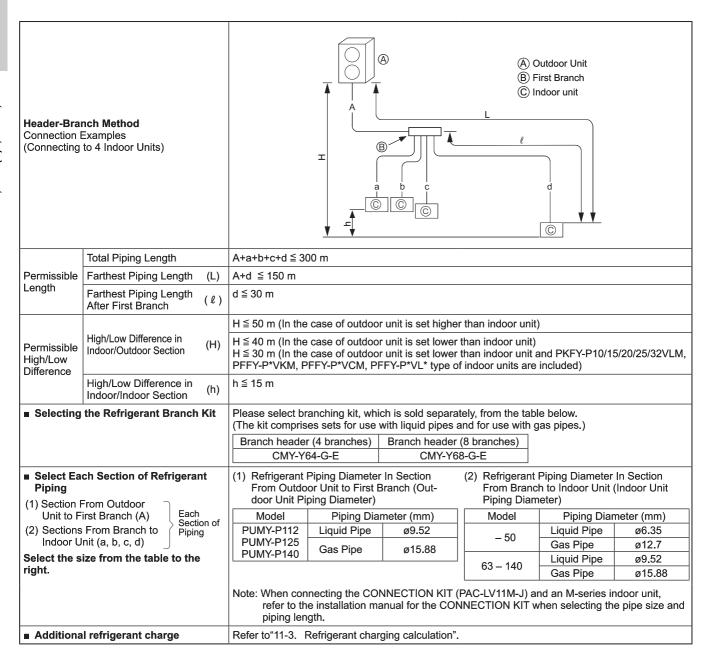


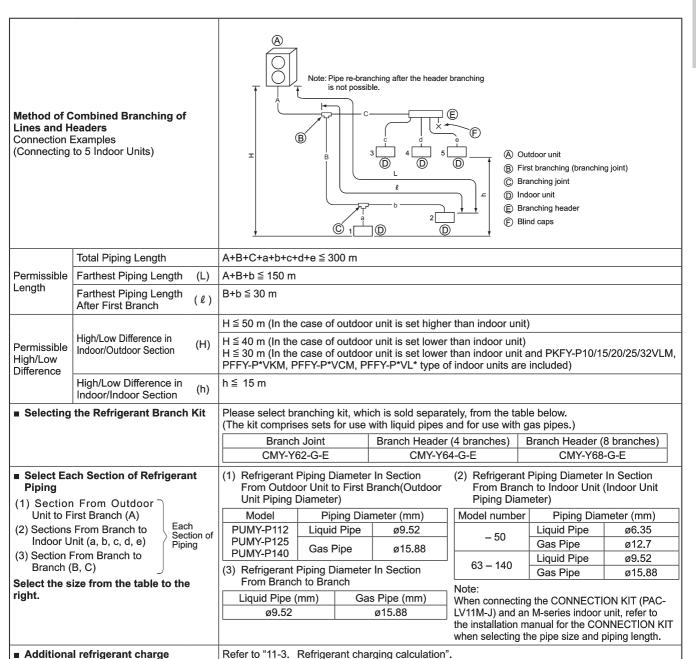


11-2-3. PUMY-P200YKM2 Piping

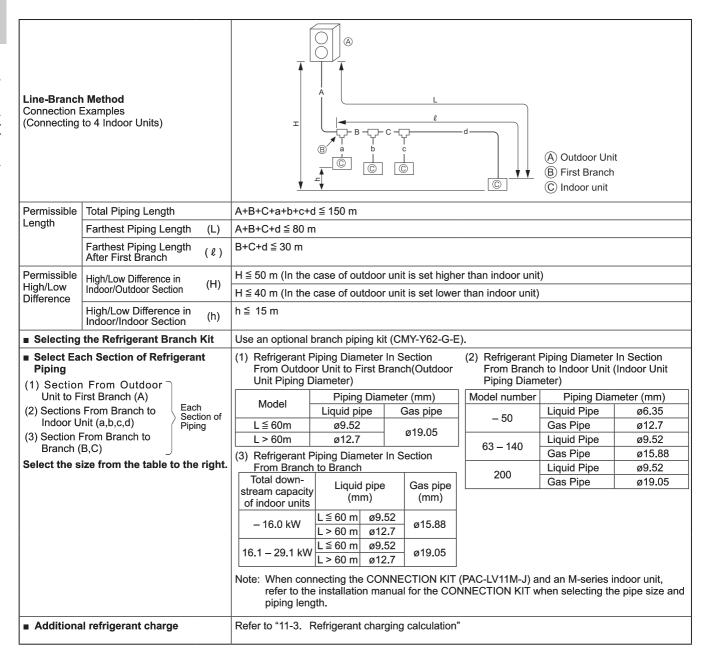


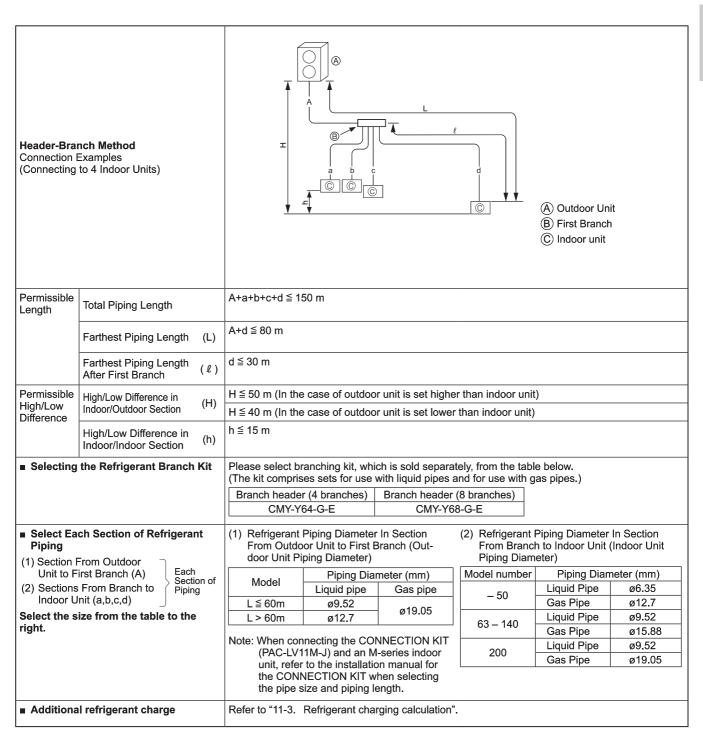


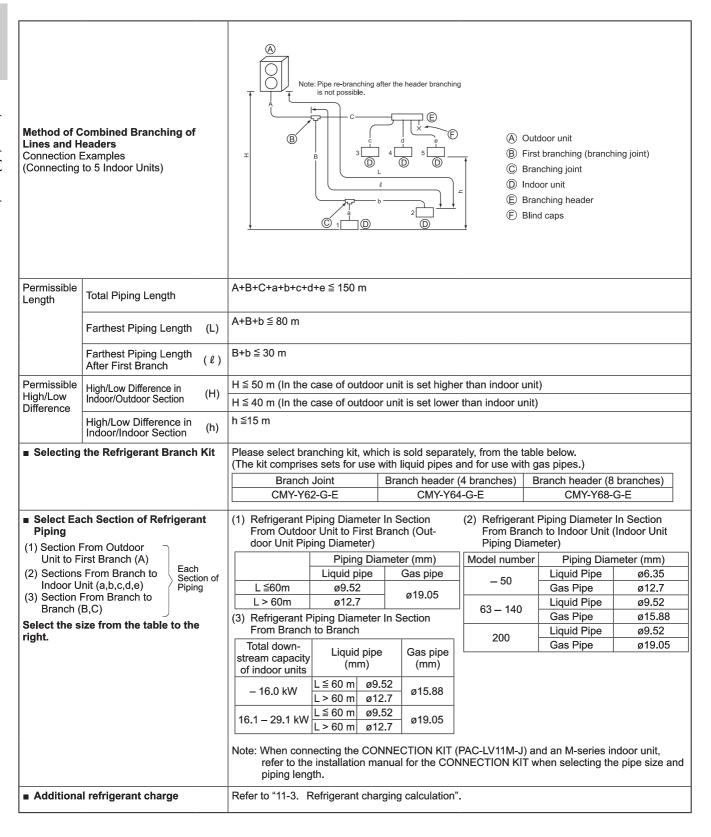


11-2-4. PUMY-P250, 300YBM Piping

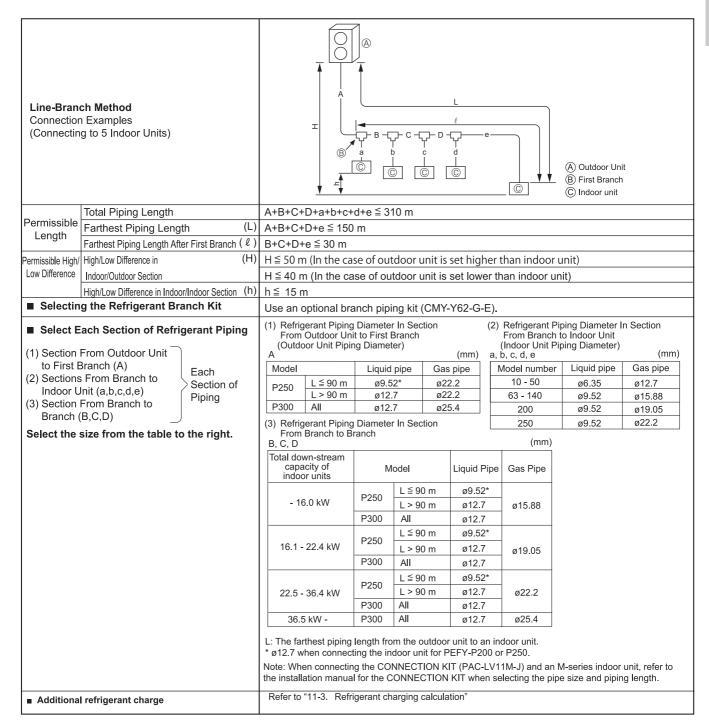

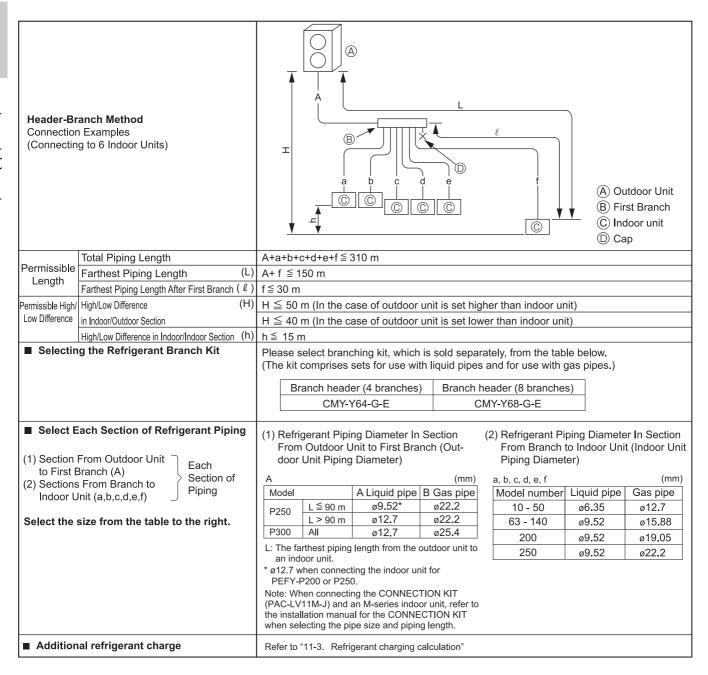

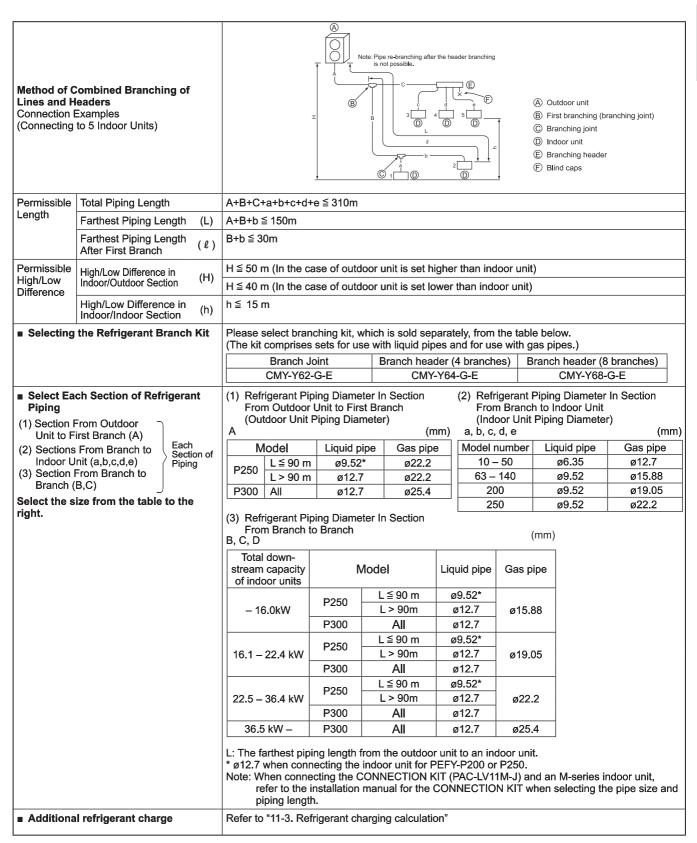

11-2-5. PUMY-P112, 125, 140VKM5/YKM(E)4 (WHEN USING BRANCH BOX)

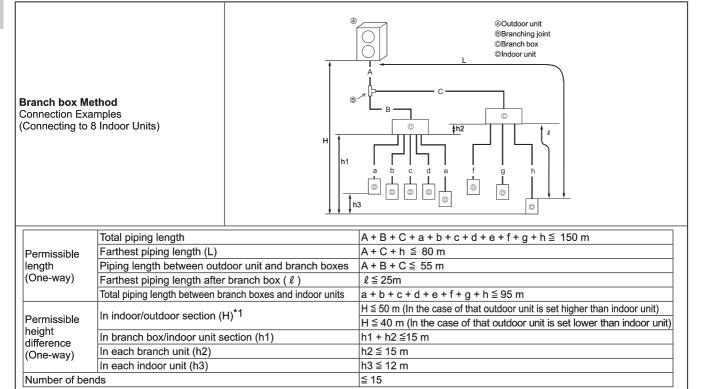

^{*1} Branch box should be placed within the level between the outdoor unit and indoor units.

Fach

- Select Each Section of Refrigerant Piping
- (1) Section From Outdoor Unit to Branch box (A, B, C)
- (2) Sections From Branch box

right.

Piping to Indoor Unit (a to h) Select the size from the table to the


(1) Refrigerant Piping Diameter In Section From Outdoor Unit to Branch box (Outdoor Unit Piping Diameter)

Model	Piping Diameter (mm)			
PUMY-P112	Liquid Line	ø9.52		
PUMY-P125 PUMY-P140	Gas Line	ø15.88		

(2) Refrigerant Piping Diameter In Section From Branch box to Indoor Unit (Indoor Unit Piping Diameter)

indoor unit series	Model number	A Liquia pipe (mm)	B Gas pipe (mm)
	15 –42	ø6.35	ø9.52
M series or	50	ø6.35	ø12.7
S series	60	ø6.35	ø15.88
	71	ø9.52	ø15.88
P series	35,50	ø6.35	ø12.7
P Selles	60 – 100	ø9.52	ø15.88

■ Additional refrigerant charge

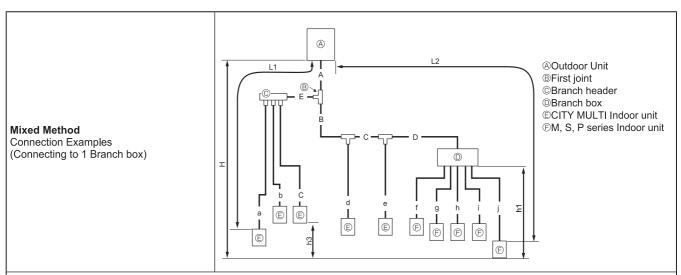

	Total piping length	A+B+C+D+E+a+b+c+d+e+f+g+h+i+j ≤ 300 m *2
	Farthest piping length (L1)	A+E+a or A+B+C+e ≤ 85 m
Permissible	Farthest piping length. Via Branch box (L2)	A+B+C+D+j ≦ 80 m
length	Piping length between outdoor unit and branch box	A+B+C+D ≦ 55 m
(One-way)	Farthest piping length from the first joint	B+C+D or B+C+e ≤ 30 m
	Farthest piping length after branch box	j ≦ 25 m
	Total piping length between branch boxes and indoor units	f+g+h+i+j ≦ 95 m
Permissible	In indoor/outdoor section (H) *1	$H \le 50$ m (In the case of outdoor unit is set higher than indoor unit)
height		H ≤ 40 m (In the case of outdoor unit is set lower than indoor unit)
difference	In branch box/indoor unit section (h1)	h1 ≦ 15 m
(One-way)	In each indoor unit (h3)	h3 ≦ 12 m
Number of be	nds	≦ 15

^{*1} Branch box should be placed within the level between the outdoor unit and indoor units.

Please select branching kit, which is sold separately, from the table below. (The kit comprises sets for use with liquid pipes and for use with gas pipes.)

Branch header (4 branches)	Branch header (8 branches)
CMY-Y64-G-E	CMY-Y68-G-E

■ Select Each Section of Refrigerant Piping

(1) Section From Outdoor Unit to Branch box or Branch header (A to E)(2) Sections From Branch

Each Section of Piping

box or Branch header to Indoor Unit (a to j)

Select the size from the table to the right.

(1) Refrigerant Piping Diameter In Section From Outdoor Unit to Branch box or Branch header (Outdoor Unit Piping Diameter)

	Piping Diameter (mm)			
PUMY-P112	Liquid Line	ø9.52		
PUMY-P125 PUMY-P140	Gas Line	ø15.88		

(2) Refrigerant Piping Diameter In Section From Branch box or Branch header to Indoor Unit (Indoor Unit Piping Diameter)

Indoor unit series	Model number	A Liquid pipe (mm)	B Gas pipe (mm)
CITY MULTI	10 – 50	ø6.35	ø12.7
CITTIVIOLII	63 – 140	ø9.52	ø15.88
	15 – 42	ø6.35	ø9.52
M series or	50	ø6.35	ø12.7
S series	60	ø6.35	ø15.88
	71	ø9.52	ø15.88
Danning	35,50	ø6.35	ø12.7
P series	60 – 100	ø9.52	ø15.88


Note:

When connecting the CONNECTION KIT (PAC-LV11M-J) and an M-series indoor unit, refer to the installation manual for the CONNECTION KIT when selecting the pipe size and piping length.

■ Additional refrigerant charge

^{*2} When a cylinder unit or hydrobox is connected, the maximum piping length is 150 m.



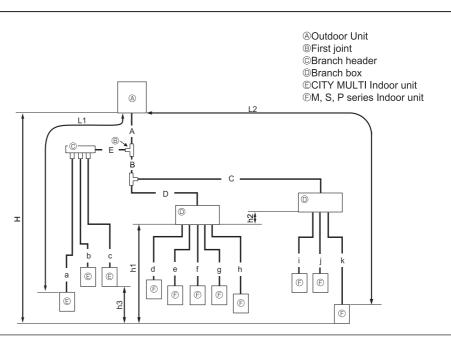

	Total piping length	A+B+C+D+E+a+b+c+d+e+f+g+h+i+j+k ≤ 240 m *2
	Farthest piping length (L1)	A+E+a ≦ 85 m
	Farthest piping length. Via Branch box (L2)	A+B+C+k ≤ 80 m
Permissible	Piping length between outdoor unit and branch boxes	A+B+C+D ≦ 55 m
length (One-way)	Farthest piping length from the first joint	B+C or E+a ≤ 30 m
(One way)	Farthest piping length after branch box	k ≦ 25m
	Farthest branch box form outdoor unit	A+B+C ≦ 55m
	Total piping length between branch boxes and indoor units	d+e+f+g+h+i+j+k ≤ 95 m
	In indoor/outdoor section (H) *1	H ≤ 50 m (In the case of outdoor unit is set higher than indoor unit)
Permissible		H ≤ 40 m (In the case of outdoor unit is set lower than indoor unit)
height difference	In branch box/indoor unit section (h1)	h1+h2 ≦ 15 m
(One-way)	In each branch unit (h2)	h2 ≦ 15 m
(In each indoor unit (h3)	h3 ≦ 12 m
Number of ben	ds	≦ 15

Branch box should be placed within the level between the outdoor unit and indoor units.

Please select branching kit, which is sold separately, from the table below. (The kit comprises sets for use with liquid pipes and for use with gas pipes.)

Branch header (4 branches)	Branch header (8 branches)	
CMY-Y64-G-E	CMY-Y68-G-E	

■ Select Each Section of Refrigerant Piping

(1) Section From Outdoor Unit to Branch box or Branch header (A to E)

Each Section of Piping

(2) Sections From Branch box or Branch header to Indoor Unit (a to k)

Select the size from the table to the right.

(1) Refrigerant Piping Diameter In Section From Outdoor Unit to Branch box or Branch header (Out-door Unit Piping Diameter)

Model	Piping Diameter (mm)	
PUMY-P112	Liquid Line	ø9.52
PUMY-P125 PUMY-P140	Gas Line	ø15.88

(2) Refrigerant Piping Diameter In Section From Branch box or Branch header to Indoor Unit (Indoor Unit Piping Diameter)

Indoor unit series	Model number	A Liquid pipe (mm)	B Gas pipe (mm)
CITY MULTI	10 – 50	ø6.35	ø12.7
CITTWOLI	63 – 140	ø9.52	ø15.88
	15 – 42	ø6.35	ø9.52
M series or	50	ø6.35	ø12.7
S series	60	ø6.35	ø15.88
	71	ø9.52	ø15.88
P series	35, 50	ø6.35	ø12.7
	60 – 100	ø9.52	ø15,88


Note:

When connecting the CONNECTION KIT (PAC-LV11M-J) and an M-series indoor unit, refer to the installation manual for the CONNECTION KIT when selecting the pipe size and piping length.

Additional refrigerant charge

When a cylinder unit or hydrobox is connected, the maximum piping length is 150 m.

11-2-6. PUMY-P200YKM2 Piping (WHEN USING BRANCH BOX)

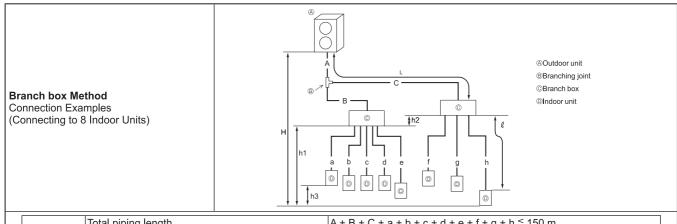

	Total piping length	A + B + C + a + b + c + d + e + f + g + h ≤ 150 m
Permissible	Farthest piping length (L)	A + C + h ≦ 80 m
length	Piping length between outdoor unit and branch boxes	A + B + C ≦55 m
(One-way)	Farthest piping length after branch box (\ell)	ℓ ≦ 25 m
	Total piping length between branch boxes and indoor units	a + b + c + d + e + f + g + h ≦ 95 m
	Permissible In indoor/outdoor section (H)*1	H ≤ 50 m (In the case of that outdoor unit is set higher than indoor unit)
		H ≤ 40 m (In the case of that outdoor unit is set lower than indoor unit)
height difference	In branch box/indoor unit section (h1)	h1 + h2 ≦15 m
(One-way)	In each branch unit (h2)	h2 ≦ 15 m
	In each indoor unit (h3)	h3 ≤ 12 m
Number of be	ends	≦ 15

^{*1} Branch box should be placed within the level between the outdoor unit and indoor units.

Select Each Section of Refrigerant Piping

(1) Section From Outdoor Unit to Branch box (A, B, C)

(2) Sections From Branch box to Indoor Unit (a to h)

Each Section of Piping (1) Refrigerant Piping Diameter In Section From Outdoor Unit to First Branch (Out-door Unit Piping Diameter)

	Piping Diameter (mm)		
	Liquid pipe	Gas pipe	
L ≦ 20m	ø9.52	ø19.05	
L > 20m	ø12.7	019.05	
The forthest pining length from the outdoor unit to an indeer un			

Total down- stream capacity of indoor units	Liquid pipe (mm)		Gas pipe (mm)
- 16.0kW	L ≦ 20m	ø9.52	ø15.88
	L > 20m	ø12.7	
16.1 – 29.1kW	L ≦ 20m	ø9.52	ø19.05
10.1 – 29.1KVV	L > 20m	ø12.7	619.05

Select the size from the table to the right.


(2) Refrigerant Piping Diameter In Section From Branch box to Indoor Unit (Indoor Unit Piping Diameter)

Indoor unit series	Model number	Liquid pipe (mm)	B Gas pipe (mm)
	- 42	ø6.35 mm	ø9.52 mm
M series or	50	ø6.35 mm	ø12.7 mm
S series	60	ø6.35 mm	ø15.88 mm
	71—	ø9.52 mm	ø15.88 mm
P series	– 50	ø6.35 mm	ø12.77 mm
P series	60 —	ø9.52 mm	ø15.88 mm

■ Additional refrigerant charge

Mixed Method

Connection Examples (Connecting to 1 Branch box)

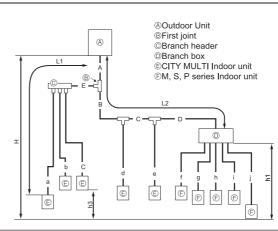

	Total piping length	$A+B+C+D+E+a+b+c+d+e+f+g+h+i+j \le 150 \text{ m}$
	Farthest piping length (L1)	A+E+a or A+B+C+e ≦ 80 m
Permissible	Farthest piping length. Via Branch box	$A+B+C+D+j \le 80 \text{ m}$
length	Piping length between outdoor unit and branch box	A+B+C+D ≦ 55 m
(One-way)	Farthest piping length from the first joint	B+C+D or B+C+e ≤ 30 m
	Farthest piping length after branch box	j ≦ 25 m
Total piping length between branch boxes and indoor units f		f+g+h+i+j ≦ 95 m
Permissible	In indoor/outdoor section (H)*1	H ≦ 50 m (In the case of outdoor unit is set higher than indoor unit)
height	In indoor/outdoor section (n)	H ≦ 40 m (In the case of outdoor unit is set lower than indoor unit)
difference	In branch box/indoor unit section (h1)	h1 ≦ 15 m
(One-way)	In each indoor unit (h3)	h3 ≦ 12 m
Number of be	ends	≦ 15

^{*1} Branch box should be placed within the level between the outdoor unit and indoor units.

■ Selecting the Refrigerant Branch Kit

Please select branching kit, which is sold separately, from the table below.

(The kit comprises sets for use with liquid pipes and for use with gas pipes.)

Branch header (4 branches)	Branch header (8 branches)
CMY-Y64-G-E	CMY-Y68-G-E

■ Select Each Section of Refrigerant

- (1) Section From Outdoor Unit to Branch box or Branch header (A to E)
- (2) Sections From Branch box or Branch header to Indoor Unit (a to j)

Each Section of Piping

Select the size from the table to the right.

Refrigerant Piping Diameter In Section From Outdoor Unit to Branch box or Branch header (Outdoor Unit Piping Diameter)

Piping Diameter (mm)	
Liquid pipe	Gas pipe
ø9.52	ø19.05
ø12.7	Ø 19.05
	Liquid pipe ø9.52

B to E


Total down-stream capacity of indoor units	Liquid pipe (mm)		Gas pipe (mm)
- 16.0kW	L1 ≦ 60m or L2 ≦ 20m	ø9.52	ø15.88
_ 10.0KVV	L1 > 60m or L2 > 20m	ø12.7	Ø 13.00
16.1 – 29.1kW	L1 ≦ 60m or L2 ≦ 20m	ø9.52	ø19.05
10.1 - 29.1KVV	L1 > 60m or L2 > 20m	ø12.7	פט.פוש

- L1: The farthest piping length from the outdoor unit to an indoor unit.
 L2: The farthest piping length for the main pipes from the outdoor unit to the branch box.
- (2) Refrigerant Piping Diameter In Section From Branch box or Branch header to Indoor Unit (Indoor Unit Piping Diameter)

Indoor unit series	Model number	Liquid pipe (mm)	Gas pipe (mm)
	- 50	ø6.35 mm	ø12.7 mm
CITY MULTI	63 – 140	ø9 . 52 mm	ø15.88 mm
	200 —	ø9.52 mm	ø19.05 mm
M series or S series	– 42	ø6.35 mm	ø9.52 mm
	50	ø6.35 mm	ø12.7 mm
	60	ø6.35 mm	ø15.88 mm
	71 —	ø9.52 mm	ø15.88 mm
P series	– 50	ø6.35 mm	ø12.7 mm
r selles	60 —	ø9.52 mm	ø15.88 mm

When connecting the CONNECTION KIT (PAC-LV11M-J) and an M-series indoor unit, refer to the installation manual for the CONNECTION KIT when selecting the pipe size and piping length.

Additional refrigerant charge

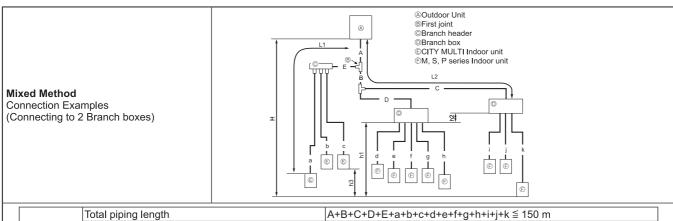

		<u> </u>	
	Total piping length		$A+B+C+D+E+a+b+c+d+e+f+g+h+i+j+k \le 150 \text{ m}$
	Farthest piping length (L1)		A+E+a ≦ 80 m
Farthest piping length. Via Piping length between our boxes		Branch box	A+B+C+k ≤ 80 m
		oor unit and branch	A+B+C+D ≦ 55 m
length (One-way)	Farthest piping length from	the first joint	B+C or E+a ≤ 30 m
(One way)	Farthest piping length after	branch box	k ≦ 25 m
	Farthest branch box from or	utdoor unit	A+B+C ≦ 55 m
Total piping length between branch box indoor units		branch boxes and	d+e+f+g+h+i+j+k ≦ 95m
	In indeer/outdeer cection (L	1*1	H ≦ 50 m (In the case of outdoor unit is set higher than indoor unit)
Permissible	In indoor/outdoor section (H)*1		H ≦ 40 m (In the case of outdoor unit is set lower than indoor unit)
height difference	In branch box/indoor unit se	ection (h1)	h1+h2 ≦ 15 m
(One-way) In each branch unit (h2)			h2 ≦ 15 m
(,	In each indoor unit (h3)		h3 ≦ 12 m
Number of be	ends		≦ 15

^{*1} Branch box should be placed within the level between the outdoor unit and indoor units.

Please select branching kit, which is sold separately, from the table below.

(The kit comprises sets for use with liquid pipes and for use with gas pipes.)

Branch header (4 branches)	Branch header (8 branches)	
CMY-Y64-G-E	CMY-Y68-G-E	

■ Select Each Section of Refrigerant **Piping**

(1) Section From Outdoor Unit to Branch box or Branch header (A to E)

(2) Sections From Branch box or Branch header to Indoor Unit (a to k)

Fach Section of Piping

Select the size from the table to the right.

Refrigerant Piping Diameter In Section From Outdoor Unit to Branch box or Branch header (Outdoor Unit Piping Diameter)

	Piping Diameter (mm)		
	Liquid pipe Gas pipe		
L1 ≦ 60m and L2 ≦ 20m	n ø9.52 ø19.05		
L1 > 60m or L2 > 20m	ø12.7	Ø19.05	
D.4- E			

B to E

Total down-stream capacity of indoor units	Liquid pipe (mm)		Gas pipe (mm)
- 16.0kW	L1 ≦ 60m or L2 ≦ 20m	ø9.52	ø15.88
— 10.0KVV	L1 > 60m or L2 > 20m	ø12.7	013.00
16.1 – 29.1kW	L1 ≦ 60m or L2 ≦ 20m	ø9.52	ø19.05
10.1 - 29.1KVV	L1 > 60m or L2 > 20m	ø12.7	0 19.05

(2) Refrigerant Piping Diameter In Section From Branch box or Branch header to Indoor Unit (Indoor Unit Piping Diameter)


Indoor unit series	Model number	Liquid pipe (mm)	Gas pipe (mm)
	– 50	ø6.35 mm	ø12.7 mm
CITY MULTI	63 – 140	ø9.52 mm	ø15.88 mm
	200 –	ø9.52 mm	ø19.05 mm
M series or S series	- 42	ø6.35 mm	ø9.52 mm
	50	ø6.35 mm	ø12.7 mm
	60	ø6.35 mm	ø15.88 mm
	71 –	ø9.52 mm	ø15.88 mm
P series	– 50	ø6.35 mm	ø12.7 mm
r selles	60 –	ø9.52 mm	ø15.88 mm


When connecting the CONNECTION KIT (PAC-LV11M-J) and an M-series indoor unit, refer to the installation manual for the CONNECTION KIT when selecting the pipe size and piping length.

Additional refrigerant charge

L1: The farthest piping length from the outdoor unit to an indoor unit.
L2: The farthest piping length for the main pipes from the outdoor unit to the branch box.

11-2-7. PUMY-P250, 300YBM Piping (WHEN USING BRANCH BOX)

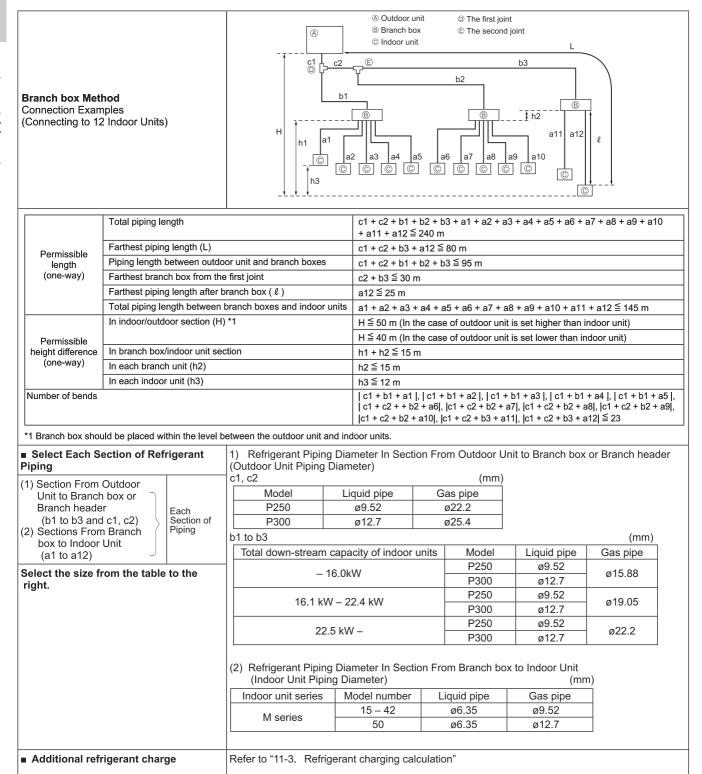

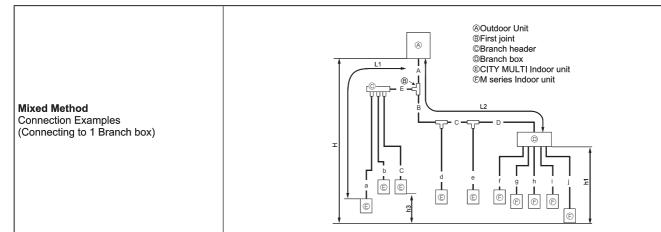

	Total piping length	A+B+C+D+E+a+b+c+d+e+f+g+h+i+j ≦ 310 m
	Farthest piping length (L1)	A+E+a or A+B+C+e ≦ 85 m
Permissible	Farthest piping length. Via Branch box	$A+B+C+D+j \le 80 \text{ m}$
length	Piping length between outdoor unit and branch box	A+B+C+D ≦ 80 m
(One-way)	Farthest piping length from the first joint	B+C+D or B+C+e ≤ 30 m
	Farthest piping length after branch box	j ≦ 25 m
	Total piping length between branch boxes and indoor units	f+g+h+i+j ≦ 145 m
Permissible	In indoor/outdoor section (H)*1	H ≦ 50 m (In the case of outdoor unit is set higher than indoor unit)
height	III indoor/outdoor section (n)	H ≦ 40 m (In the case of outdoor unit is set lower than indoor unit)
difference	In branch box/indoor unit section (h1)	h1 ≦ 15 m
(One-way)	In each indoor unit (h3)	h3 ≦ 12 m
Number of be	ends	≦ 23

^{*1} Branch box should be placed within the level between the outdoor unit and indoor units.

Please select branching kit, which is sold separately, from the table below. (The kit comprises sets for use with liquid pipes and for use with gas pipes.)

Branch joint	Branch header (4 branches)	Branch header (8 branches)
CMY-Y62-G-E	CMY-Y64-G-E	CMY-Y68-G-E

Select Each Section of Refrigerant Piping

(1) Section From Outdoor Unit to Branch box or Branch header (A to E)

(2) Sections From Branch box or Branch header to Indoor Unit (a to j) Each Section of Piping

Select the size from the table to the right.

(1) Refrigerant Piping Diameter In Section From Outdoor Unit to Branch box or Branch header (Outdoor Unit Piping Diameter)

Α		(mm)
Model	Liquid pipe	Gas pipe
P250	ø9.52*	ø22.2
P300	ø12.7	ø25.4

B to E (mm)

Total down-stream capacity of indoor units	Model	Liquid pipe	Gas pipe	
– 16.0kW	P250	ø9.52*	ø15.88	
- 10.0kvv	P300	ø12.7	013.00	
16.1 kW – 22.4 kW	P250	ø9.52*	ø19.05	
10.1 KVV – 22.4 KVV	P300	ø12.7		
22.5 kW – 36.4 kW	P250	ø9.52*	ø22.2	
22.5 KVV – 36.4 KVV	P300	ø12.7	022.2	
36.5 kW –	P300	ø12.7	ø25.4	

^{*} ø12.7 when connecting the indoor unit for PEFY-P200 or P250.


(2) Refrigerant Piping Diameter In Section From Branch box or Branch header to Indoor Unit (Indoor Unit Piping Diameter) (mm)

Indoor unit series	Model number	Liquid pipe	Gas pipe
	10 – 50	ø6.35	ø12.7
CITY MULTI	63 – 140	ø9.52	ø15.88
CITY MULTI	200	ø9.52	ø19.05
	250	ø9.52	ø22.2
M series	15 – 42	ø6.35	ø9.52
ivi series	50	ø6.35	ø12.7

Note:

When connecting the CONNECTION KIT (PAC-LV11M-J) and an M-series indoor unit, refer to the installation manual for the CONNECTION KIT when selecting the pipe size and piping length.

■ Additional refrigerant charge

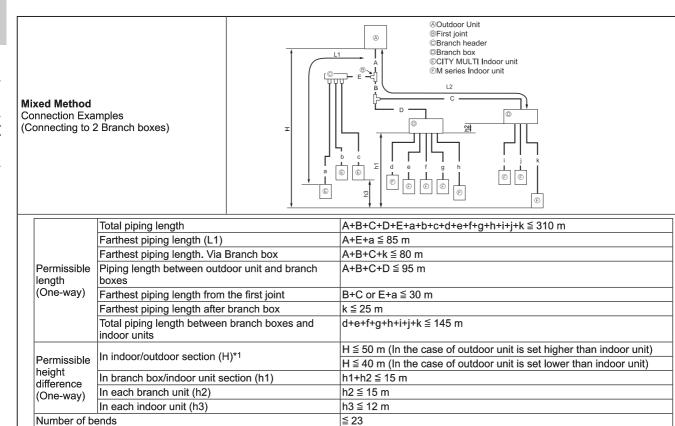

^{*1} Branch box should be placed within the level between the outdoor unit and indoor units.

Please select branching kit, which is sold separately, from the table below. (The kit comprises sets for use with liquid pipes and for use with gas pipes.)

Branch joint	Branch header (4 branches)	Branch header (8 branches)
CMY-Y62-G-E	CMY-Y64-G-E	CMY-Y68-G-E

Select Each Section of Refrigerant Piping

- (1) Section From Outdoor Unit to Branch box or Branch header (A to E)
- (2) Sections From Branch box or Branch header to Indoor Unit (a to k)

Each Section of Piping

Select the size from the table to the right.

 Refrigerant Piping Diameter In Section From Outdoor Unit to Branch box or Branch header (Outdoor Unit Piping Diameter)

		(111111)
Model	Liquid pipe	Gas pipe
P250	ø9.52*	ø22.2
P300	ø12.7	ø25.4

B to E (mm)

Total down-stream capacity of indoor units	Model	Liquid pipe	Gas pipe	
– 16.0kW	P250	ø9.52*	ø15.88	
- 10.0KVV	P300	ø12.7	00.00	
16.1 kW – 22.4 kW	P250	ø9.52*	ø19.05	
10.1 KVV – 22.4 KVV	P300	ø12.7		
22.5 kW – 36.4 kW	P250	ø9.52*	ø22.2	
22.5 KVV – 30.4 KVV	P300	ø12.7	WZZ.Z	
36.5 kW –	P300	ø12.7	ø25.4	

^{*} ø12.7 when connecting the indoor unit for PEFY-P200 or P250.


(2) Refrigerant Piping Diameter In Section From Branch box or Branch header to Indoor Unit (Indoor Unit Piping Diameter) (mm)

Indoor unit series	Model number	Liquid pipe	Gas pipe
CITY MULTI	10 – 50	ø6.35	ø12.7
	63 – 140	ø9.52	ø15.88
	200	ø9.52	ø19.05
	250	ø9.52	ø22.2
M series	15 – 42	ø6.35	ø9.52
	50	ø6 35	ø12 7

Note:

When connecting the CONNECTION KIT (PAC-LV11M-J) and an M-series indoor unit, refer to the installation manual for the CONNECTION KIT when selecting the pipe size and piping length.

■ Additional refrigerant charge

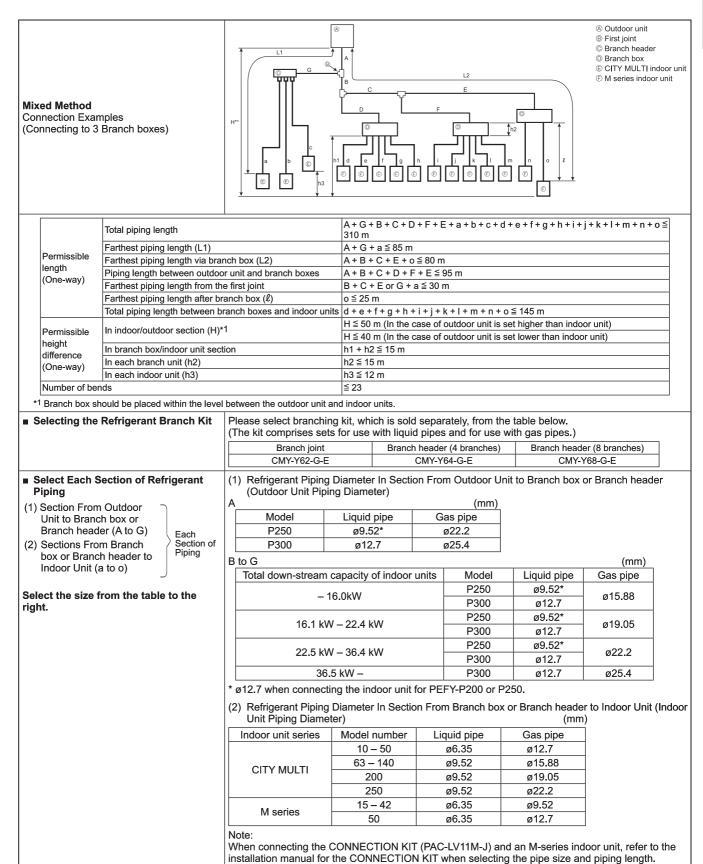

■ Additional refrigerant charge

11-3. Refrigerant charging calculation

Additional refrigerant charge

Refrigerant for the extended piping is not included in the outdoor unit when the unit is shipped from the factory. Therefore, charge each refrigerant piping system with additional refrigerant at the installation site. In addition, in order to carry out service, enter the size and length of each liquid pipe and additional refrigerant charge amounts in the spaces provided on the "Refrigerant amount" plate on the outdoor unit.

Calculation of additional refrigerant charge

- Calculate the additional charge using the liquid pipe size and length of the extended piping and total capacity of connected indoor units.
- Calculate the additional refrigerant charge using the procedure below, and charge with the additional refrigerant.
- For amounts less than 0.1 kg, round up the calculated additional refrigerant charge. (For example, if the calculated charge is 6.01 kg, round up the charge to 6.1 kg.)

PUMY-P112, 125, 140

Calculation of additional refrigerant charge

Pipe size Liquid pipe ø6.35		P Li
(m) x 19.0 (g/m)		

٠	Pipe size Liquid pipe ø9.52
	(m) x 50.0 (g/m)

Total capacity of connected indoor units	Amount for the indoor units
- 8.0kW	1.5kg
8.1 – 16.0kW	2.5kg
16.1kW –	3.0kg

PUMY-P200

Calculation of additional refrigerant charge

Pipe size Liquid pipe ø6.35	+
(m) x 19.0 (g/m)	



-	Pipe size Liquid pipe ø12.7
	(m) x 92.0 (g/m)


+	Total capacity of connected indoor units	Amount for the indoor units
	– 16.0kW	2.5kg
	16.1 – 25.0kW	3.0kg
	25.1kW –	3.5kg

When connecting 4 PEFY-P·VMA3 indoor units, use 3.5kg regardless of the amount indicated in the preceding table according to the total capacity.

PUMY-P250/300


Calculation of additional refrigerant charge

Pipe size
Liquid pipe
ø6.35
(m) x 19.0 (g/m)
. , ,

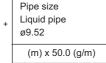

Total capacity of connected indoor units	Amount for the indoor units
- 16.0kW	2.5kg
16.1kW – 27.0kW	3.0kg
27.1kW – 31.0kW	3.5kg
31.1kW – 34.0kW	4.0kg
34.1kW – 36.5kW	4.5kg
36.6kW – 39.0kW	5.0kg
39.1kW – 41.0kW	5.5kg
41.1kW –	6.1kg

Example of refrigerant charge

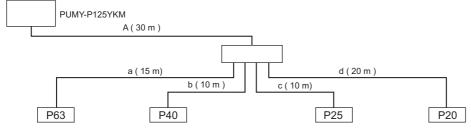

b: ø6.35 10 m

<Example>

Outdoor model: P125

Indoor 1: P63 (7.1kW) A: ø9.52 30 m a: ø9.52 15 m

2: P40 (4.5kW) 3: P25 (2.8kW)

c: ø6.35 10 m d: ø6.35 20 m

4: P20 (2.2kW)

<Calculation example> Additional refrigerant charge

50.0 19.0

+ 45 × -+ 3.0 = 6.1kg (rounded up) 1000

The total length of each liquid line is as follows:

ø9.52: A + a = 30 + 15 = 45 m

 \emptyset 6.35: b + c + d = 10 + 10 + 20 = 40 m

The total capacity of connected indoor unit is as follows: 7.1 + 4.5 + 2.8 + 2.2 = 16.6

■Maximum refrigerant charge

There is a limit to the amount of refrigerant that can be charged into a unit.

Regardless of the amount yielded by the formula above, observe the maximum refrigerant charge in the table below. For P250/300, the amount of additional refrigerant which is calculated from the total capacity of indoor units and the combination of extended pipes must not be over 22.8 kg.

Total index of the outdoor units		P112VKM5	P125VKM5	P140VKM5	P112YKM(E)4	P125YKM(E)4	P140YKM(E)4	P200YKM2	P250YBM	P300YBM	
Maximum refrigerant charge	Factory charge	kg	4.8	4.8	4.8	4.8	4.8	4.8	7.3	9.3	9.3
	Charged on site	kg	13.8	13.8	13.8	13.8	13.8	13.8	13.1	22.8	22.8
	Total for system	kg	18.6	18.6	18.6	18.6	18.6	18.6	20.4	32.1	32.1

12-1. Requirement on installation site

12-1-1. General caution

- A. Avoid locations exposed to direct sunlight or other sources of heat.
- B. Select a location from which noise emitted by the unit will not inconvenience the neighbors.
- C. Select a location permitting easy wiring and pipe access to the power source and indoor unit.
- D. Avoid locations where combustible gases may leak, be produced, flow, or accumulate.
- E. Note that water may drain from the unit during operation.
- F. Select a level location that can bear the weight and vibration of the unit.
- G. Avoid locations where the unit can be covered by snow. In areas where heavy snow fall is anticipated, special precautions such as raising the installation location or installing a hood on the air intake must be taken to prevent the snow from blocking the air intake or blowing directly against it. This can reduce the airflow and a malfunction may result.
- H. Avoid locations exposed to oil, steam, or sulfuric gas.
- I . Use the transportation handles of the outdoor unit to transport the unit. If the unit is carried from the bottom, hands or fingers may be pinched.

12-1-2. Installation at windy location.

When installing the outdoor unit on a rooftop or other location unprotected from the wind, situate the air outlet of the unit so that it is not directly exposed to strong winds. Strong wind entering the air outlet may impede the normal airflow and a malfunction may result.

The following shows two examples of precautions against strong winds.

- ① Install an optional air protect guide if the unit is installed in a location where strong winds from a typhoon, etc. may directly enter the air outlet. (Fig. 12-1-2a, c)
 - Air protect guide
- ② Position the unit so that the air outlet blows perpendicularly to the seasonal wind direction, if possible. (Fig. 12-1-2b, d)
 - ® Wind direction

■PUMY-P112, 125, 140VKM5/YKM(E)4 PUMY-P200YKM2

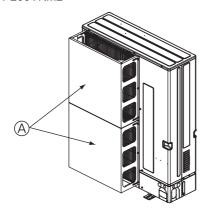


Fig. 12-1-2a

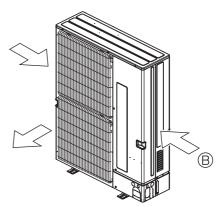


Fig. 12-1-2b

■PUMY-P250, 300YBM

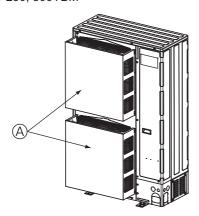


Fig. 12-1-2c

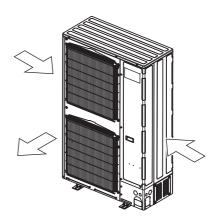


Fig. 12-1-2d

12-1-3. Foundation

A. Be sure to install the unit in a sturdy, level surface to prevent rattling noises during operation. (see Fig. 12-1-3a)

B. Foundation specifications are as follows.

			mm [in.]
Thickness of concrete	Weight-bearing capacity	Foundation bolt	Bolt length
120 [4-3/4"]	320 kg [706lbs]	M10 [3/8"]	70 [2-25/32"]

- C. Make sure that the length of the foundation bolt is within 30 mm [1-3/16"] of the bottom surface of the base.
- D. Secure the base of the unit firmly with four-M10 [3/8"] foundation bolts in sturdy locations.

⚠ Warning:

- A. The foundation base should be strong enough to support the outdoor unit, otherwise, it may fall down and cause damage or injures.
- B. The unit must be installed according to the instructions in order to minimize the risk of damage from earthquakes, typhoons, or strong winds.


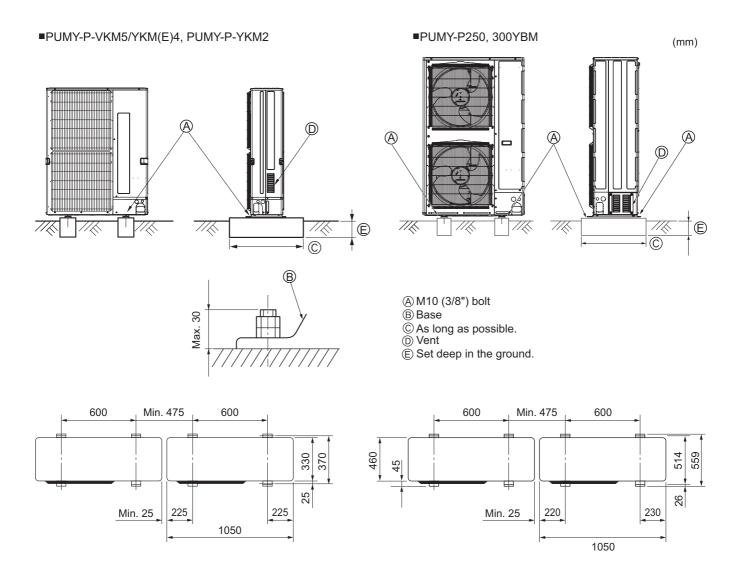


Fig. 12-1-3a

12-2. Spacing

12-2-1. PUMY-P112, 125, 140VKM5/YKM(E)4

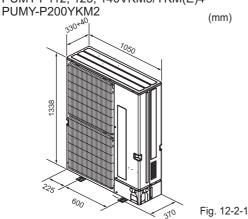

12-2-1-1. Spacing individual PUMY-P-VKM5/YKM4(2)/YKME4 Follow Fig. 12-2-2~7 to space individual PUMY-P-VKM5/

YKM4(2)/YKME4 at the installation site.

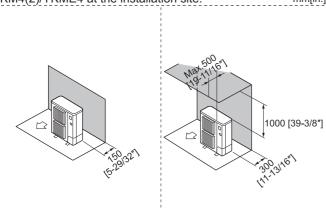


Fig. 12-2-2 Obstacles at rear only

Fig. 12-2-3 Obstacles at rear and above only



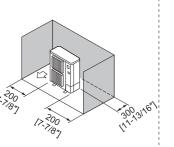



Fig. 12-2-4

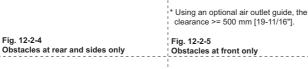

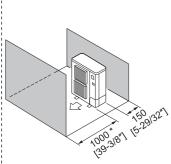

* Using an optional air outlet guide, the clearance >= 500 mm [19-11/16"].

Fig. 12-2-6 Obstacles at front and rear only

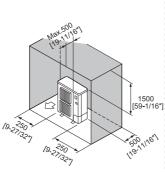


NO upward airflow outlet guide.

Fig. 12-2-7 Obstacles at rear, sides and above only


12-2-1-2. Spacing grouped PUMY-P-VKM5/YKM4(2)/YKME4

Follow Fig. 4-2-8~13 to space grouped PUMY-P-VKM5/ YKM4(2)/YKME4 at the installation site. Leave 25 mm space or more between PUMY-P-VKM5/YKM4(2)/YKME4 units. mm[in.]

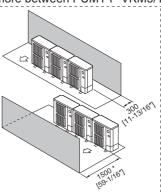

When using an optional air outlet guide, the clearance is 1000 mm [39-3/8"] or more


Fig. 12-2-8

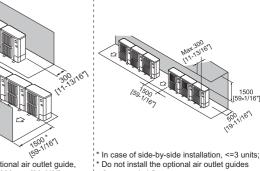

Do not install the optional air outlet guides for upward airflow.


Obstacles at rear or front only

Fig. 12-2-9 Obstacles at rear and above only

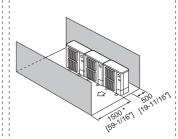


Using an optional air outlet guide, the clearance >= 1000 mm [39-3/8"].

Fig. 12-2-10 Obstacles at front and rear only

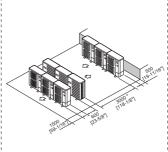


Using an optional air outlet guide for upward airflow, the clearance >= 1500 mm [59-1/16"].

Fig. 12-2-12 Parallel groups arrangement

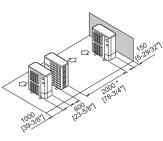

Using an optional air outlet guide, the clearance >= 1000 mm [39-3/8"].

Fig. 12-2-11 Parallel individuals arrangement

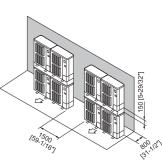


* Stacked layer <= 2 units;

* Side-by-side stacked groups <= 2 groups;

Stacked groups arrangement

Fig. 12-2-13

12-2-14. PUMY-P250, 300YBM

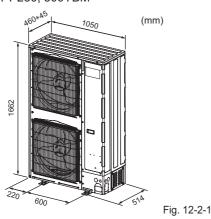

12-2-14-1. Spacing individual PUMY-P-YBM

Follow Fig. 12-2-15~20 to space individual PUMY-P-YBM at the installation site.

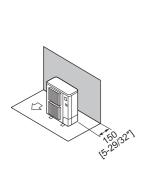


Fig. 12-2-15 Obstacles at rear only

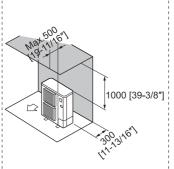


Fig. 12-2-16 Obstacles at rear and above only


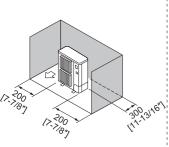



Fig. 12-2-17 Obstacles at rear and sides only

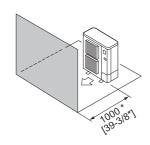

Using an optional air outlet guide, the clearance >= 500 mm [19-11/16"].


Fig. 12-2-18

Obstacles at front only

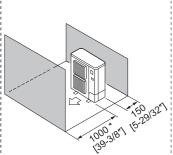

* Using an optional air outlet guide, the clearance >= 500 mm [19-11/16"].

Obstacles at front and rear only

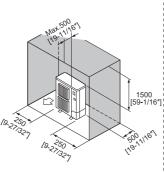


NO upward airflow outlet guide


Obstacles at rear, sides and above only

12-2-14-2. Spacing grouped PUMY-P-YBM

Follow Fig. 4-2-21~26 to space grouped PUMY-P-YBM at the installation site. Leave 25 mm space or more between PUMY-P-YBM units. mm[in.]

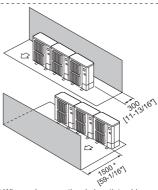


When using an optional air outlet guide, the clearance is 1000 mm [39-3/8"] or more.

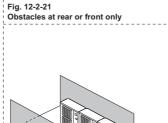


Using an optional air outlet guide, the clearance >= 1000 mm [39-3/8"].


Obstacles at front and rear only

Fig. 12-2-23

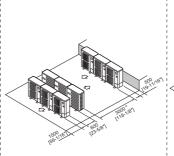


Using an optional air outlet guide for upward | * Stacked layer <= 2 units; airflow, the clearance >= 1500 mm [59-1/16"]. | * Side-by-side stacked groups <= 2 groups;

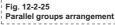

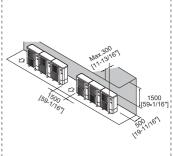


In case of side-by-side installation, <=3 units; Do not install the optional air outlet guides for upward airflow

Fig. 12-2-22 Obstacles at rear and above only

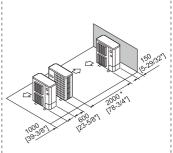

Using an optional air outlet guide, the clearance >= 1000 mm [39-3/8"].


Fig. 12-2-24 Parallel individuals arrangement

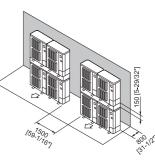


Stacked groups arrangement

12-3. Piping direction


PUMY-P112, 125, 140VKM5/YKM(E)4 PUMY-P200YKM2

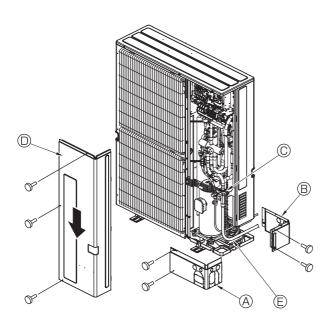

- A Front piping cover
- ® Piping cover
- © Stop valve
- Service panel
- E Bend radius: 100 mm 150 mm

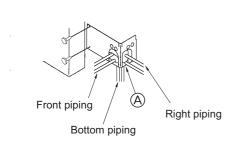

PUMY-P250, 300YBM

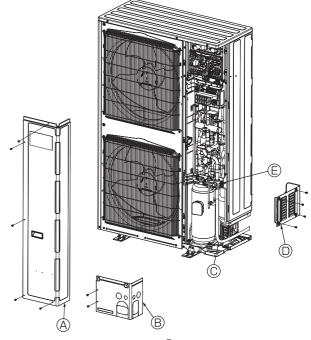

- A Service panel
- ® Front piping cover
- © Bend radius : 100 mm or more
- Rear piping cover

⚠ Warning

- \blacksquare Do not use refrigerant other than the type indicated in the manuals provided with the unit and on the nameplate.
- Doing so may cause the unit or pipes to burst, or result in explosion or fire during use, repair, or at the time of disposal of the unit.
- It may also be in violation of applicable laws.
- MITSUBISHI ELECTRIC CORPORATION cannot be held responsible for malfunctions or accidents resulting from the use of the wrong type of refrigerant.
- Our air conditioning equipment and heat pumps contain a fluorinated greenhouse gas, R410A.

MITSUBISHI ELECTRIC CORPORATION

www.MitsubishiElectric.com