

SYSTEM MASTER BOARD 1*				
	SW1	SW2	SW3	SW4
1	OFF	See Control*	OFF	ON
2	ON	OFF	OFF	ON
3	OFF	OFF	OFF	OFF
4	OFF	OFF	OFF	OFF
5	OFF	OFF	ON	OFF
6	OFF	OFF	OFF	OFF
7	OFF	OFF	OFF	OFF
8	See Control*	OFF	OFF	

BOARD 2*				
	SW1	SW2	SW3	SW4
1	OFF	OFF	OFF	ON
2	ON	OFF	OFF	OFF
3	OFF	OFF	OFF	OFF
4	OFF	OFF	OFF	OFF
5	OFF	OFF	OFF	OFF
6	OFF	OFF	OFF	OFF
7	ON	OFF	OFF	
8	OFF	ON	OFF	

BOARD 3*				
	SW1	SW2	SW3	SW4
1	OFF	OFF	OFF	ON
2	ON	OFF	OFF	OFF
3	OFF	OFF	OFF	OFF
4	OFF	OFF	OFF	OFF
5	OFF	OFF	OFF	OFF
6	OFF	OFF	OFF	OFF
7	ON	OFF	OFF	
8	OFF	ON	OFF	

SW1-3 (OUTDOOR)-ON \* SW1-4 (OUTDOOR)-ON \*  
 \*Please see system control section of the outdoor installation manual for 3 or more units.  
 SW5-5 & SW8-3 (OUTDOOR)-ON SW5-5 & SW8-3 (OUTDOOR)-ON


Wiring Connections (Outputs)	
EQUIPMENT	TERMINAL / FTC7 BOARD
P1	OUT1 TB0.1 1-2 / 2*
P2	OUT1 TB0.1 1-2 / 3*
P3	OUT2 TB0.1 3-4 / 1*

Wiring Connections (Inputs)	
EQUIPMENT	TERMINAL / FTC7 BOARD
T1	THW1 CNW12 1-2 / 2*
T2	THW2 CNW12 3-4 / 2*
T3	THW1 CNW12 1-2 / 3*
T4	THW2 CNW12 3-4 / 3*
T5	THW1 CNW12 1-2 / 1*
T6	THW2 CNW12 3-4 / 1*
FS1	INA1 TBI.6 3-5 (CN1A) / 2*
FS2	INA1 TBI.6 3-5 (CN1A) / 3*

Power Supply				
EQUIPMENT	STARTING CURRENT	MAX CURRENT	MCB	MIN. CABLE
PUZ-WZ50VAA (-BS)	2A	13A	16A	3x1.5mm <sup>2</sup>
PUZ-WZ60VAA (-BS)	2A	13A	16A	3x2.5mm <sup>2</sup>
PUZ-WZ80VAA (-BS)	2A	22A	25A	3x2.5mm <sup>2</sup>
PAC-IF082B-E		10A	16A	3x1.5mm <sup>2</sup>

Copyright in this drawing is the property of Mitsubishi Electric. It must not be reproduced nor amended nor used for the execution of any works whether in connection with the proposed works for which it is prepared or otherwise without the express consent in writing of Mitsubishi Electric.  
 All dimensions are in mm unless otherwise stated.  
 For information only, DO NOT SCALE drawing.  
 All works shall be carried out in accordance with the Specification.  
 Contractor must verify all dimensions on site before commencing any work or shop drawings.

LEGEND	
	AAV AUTOMATIC AIR VENT (After removing the air, automatic air vent(s) must be closed)
	IV ISOLATING VALVE
	DOC DRAIN OFF COCK
	NRV NON RETURN VALVE
	PRV/SV PRESSURE RELIEF VALVE/SAFETY VALVE
	STR STRAINER
	FC FLEXIBLE CONNECTION
	PRV PRESSURE REDUCING VALVE
	P PUMP
	T TEMPERATURE SENSOR
	TF1 FILTER/STRAINER
	FS FLOW SENSOR
	BFPD BACK FLOW PREVENTION DEVICE (if fitted)
	TPRV/SV TEMPERATURE PRESSURE RELIEF VALVE/SAFETY VALVE
	FLOW SETTER

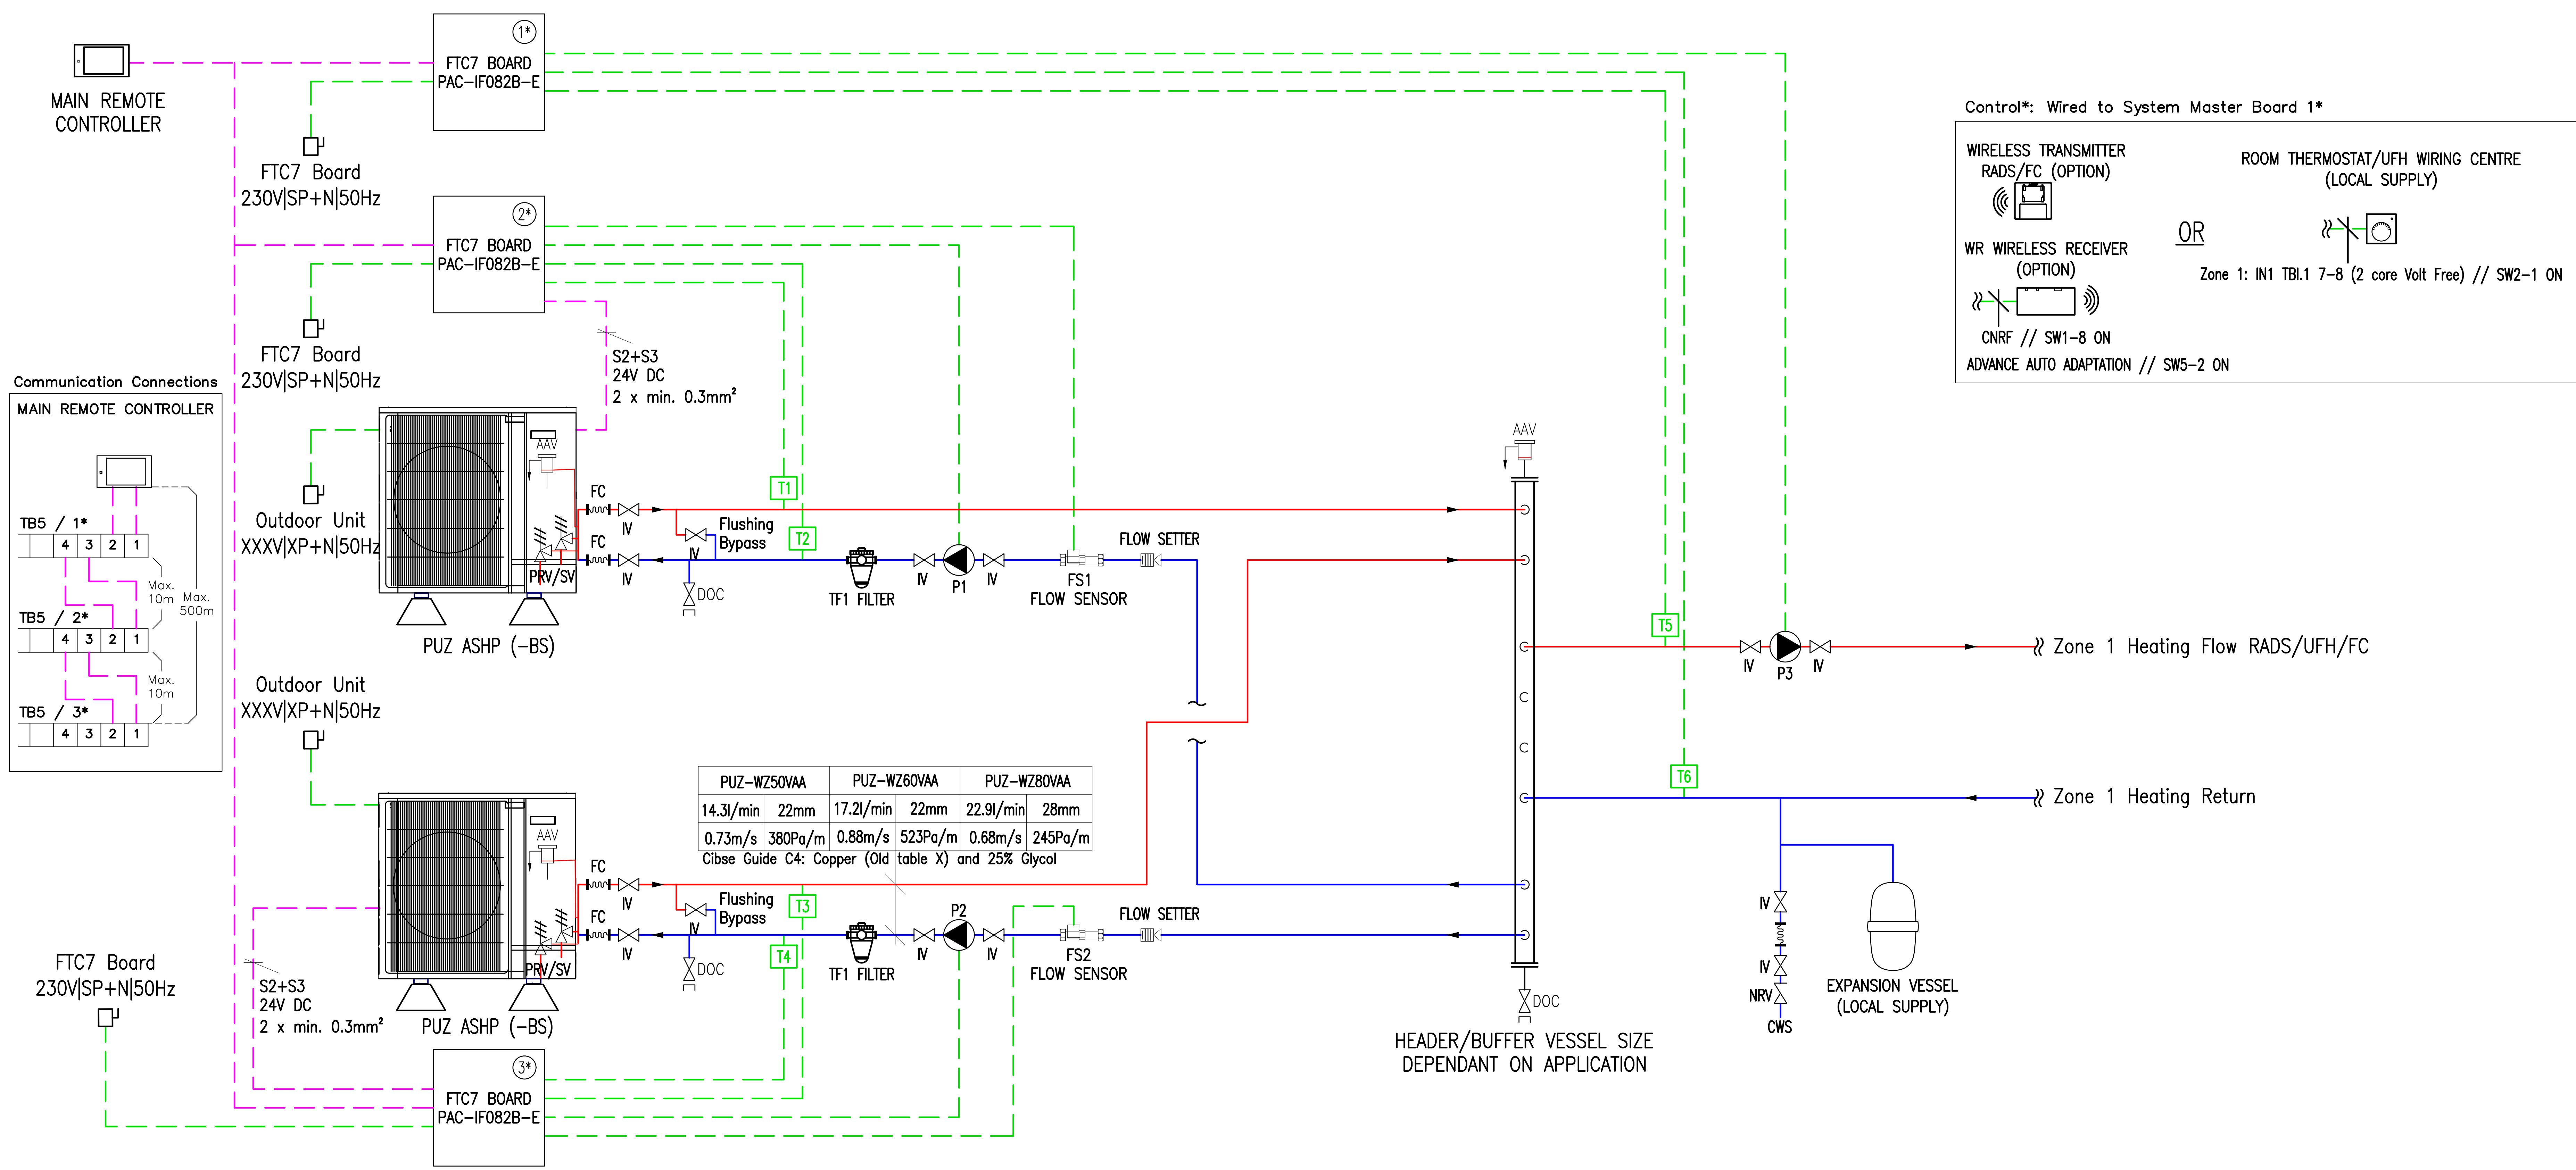

PUZ-WZ50VAA	PUZ-WZ60VAA	PUZ-WZ80VAA
14.3l/min 22mm	17.2l/min 22mm	22.9l/min 28mm
0.73m/s 380Pa/m	0.88m/s 523Pa/m	0.68m/s 245Pa/m

Gibse Guide C4: Copper (Old table X) and 25% Glycol

**NOTES**

- After removing the air, automatic air vent(s) must be closed.
- Flexible hoses shall be used to connect the Ecodan unit to the primary pipe work.
- Refer to 'Installation Manual' and 'Instruction Book' for further 'Technical Information'.
- The Ecodan outdoor unit must be installed on anti-vibration mounts. Rubber mounting blocks are recommended.
- This schematic must be used in conjunction with the corresponding technical submission document issued by Mitsubishi Electric.
- Adequate provision should be made to prevent condensate from collecting around the outdoor units. A soak away or drip tray can be used.
- Isolation valves and flushing bypass circuit are recommended for the outdoor unit. This is best practice and not required for warranty purposes.
- A flow sensor PAC-FS01-E is required to be installed in the return pipe work to each unit. Flow setters are optional and they have the ability to change the flow rates if needed.
- Adequate filtration must be used on the return pipework to each Ecodan outdoor unit. This can be either; Magnetic filter (TF1 supplied by MEUK) or strainer with air dirt separator.
- The contractor should make the necessary arrangements to ensure the design of the system meet the requirement of the application and where possible follow industry guidelines and best practice.
- It is the responsibility of the installing contractor to provide adequate protection against freezing of pipe work. MEUK recommend 25% glycol dosage of the primary circuit. If the water circuit freezes and damages the equipment the warranty will become void.
- All water systems should be designed, installed and commissioned in accordance with industry good practice guidelines; such as, but not limited to: BSRIA Guide BG2/2010 - Water System Commissioning, BSRIA Guide BG50/2013 - Water Treatment for Closed Heating & Cooling Systems, CIBSE Commissioning Code W - Water distribution systems.

MEU-UK/FTC7/WZXXX/1Z

HYDRAULIC COMPONENTS SUPPLIED BY MEUK:				
FLEXIBLE PIPES				
FLOW SENSOR				
OPTIONAL HYDRAULIC COMPONENTS SUPPLIED BY MEUK:				
TF1 FILTER				
FLOW SETTER				
REV	DESCRIPTION	DESN	CHKD	DATE
CLIENT				
PROJECT				
PUZ-OUTDOOR UNITS				
STANDARD SCHEMATIC ECODAN CASCADE				
TITLE				
MECHANICAL SERVICES				
MITSUBISHI 2X FTC7 ECODAN UNITS				
TO LOW LOSS HEADER/BUFFER VESSEL				
1 HEATING ZONE				
SCALE	ORIGINAL SIZE	DATE		
NTS	A0	OCT 2023		
DRAWN	DESIGNED	INIT	CHECKED	INIT
Y. M.	Y. M.		A.S.	
DRAWING NUMBER				REVISION
MEU-UK/FTC7/WZXXX/1Z				0