

Service Handbook PQRV-P200YEM-A, P250YEM-A  
CMB-P104, P105, P106, P108, P1010, P1013, P1016V-F  
PQHY-P200YEM-A, P250YEM-A

Service Handbook WR2WV YEM-A(R407C)



AIR CONDITIONERS CITY MULTI

# Service Handbook

Models PQRV-P200YEM-A, P250YEM-A  
CMB-P104, P105, P106, P108, P1010, P1013, P1016V-F  
PQHY-P200YEM-A, P250YEM-A



HEAD OFFICE MITSUBISHI DENKI BLDG. MARUNOUCHI TOKYO 100-0005 TELEX J24532 CABLE MELCO TOKYO

# CITY MULTI

## Contents

1	PRECAUTIONS FOR DEVICES THAT USE R407C REFRIGERANT ....	3
	[1] Storage of Piping Material .....	4
	[2] Piping Machining .....	5
	[3] Necessary Apparatus and Materials and Notes on Their Handling ..	6
	[4] Brazing .....	7
	[5] Airtightness Test .....	8
	[6] Vacuuming .....	8
	[7] Charging of Refrigerant .....	9
	[8] Dryer .....	9
2	COMPONENT OF EQUIPMENT .....	10
	[1] Appearance of Components .....	10
	[2] Refrigerant Circuit Diagram and Thermal Sensor .....	18
	[3] Electrical Wiring Diagram .....	20
	[4] Standard Operation Data .....	26
	[5] Function of Dip SW and Rotary SW .....	30
	[6] External Input/Output Specifications .....	33
3	TEST RUN .....	34
	[1] Before Test Run .....	34
	[2] Address Setting .....	38
	[3] Test Run Method .....	43
4	GROUPING REGISTRATION OF INDOOR UNITS WITH M-NET REMOTE CONTROLLER .....	44
5	CONTROL .....	50
	[1] Control of Heat Source Unit .....	50
	[2] Control Box Cooling System.....	54
	[3] Control of BC Controller .....	57
	[4] Operation Flow Chart .....	58
	[5] List of Major Component Functions .....	64
	[6] Resistance of Temperature Sensor .....	67
6	REFRIGERANT AMOUNT ADJUSTMENT .....	68
	[1] Refrigerant Amount and Operating Characteristics .....	68
	[2] Adjustment and Judgement of Refrigerant Amount .....	68
7	TROUBLESHOOTING .....	72
	[1] Principal Parts .....	72
	[2] BC Controller Disassembly Procedure .....	81
	[3] Inverter and Compressor .....	96
	[4] Trouble and Remedy of Remote Controller .....	101
	[5] Self-diagnosis and Countermeasures Depending on the Check Code Displayed .....	109
	[6] LED Monitor Display .....	132
8	PREPARATION, REPAIRS AND REFRIGERANT REFILLING WHEN REPAIRING LEAKS .....	151
	[1] Location of Leaks: Extension Piping or Indoor Units (When Cooling) ...	151
	[2] Location of Leaks: Heat Source Unit (Cooling Mode) .....	151
	[3] Location of Leaks: Extension Piping or Indoor Units (Heating Mode) .....	152
	[4] Location of Leaks: Heat Source Unit (When Heating).....	152
9	CHECK THE COMPOSITION OF THE REFRIGERANT .....	153
10	DIFFERENCES BETWEEN THE PREVIOUS REFRIGERANT AND THE NEW REFRIGERANT .....	155
	[1] Chemical Characteristics .....	155
	[2] Changes in Composition .....	155
	[3] Pressure Characteristics .....	156
11	REFRIGERATOR OIL .....	157
	[1] Refrigerator Oil with HFC Based Refrigerants .....	157
	[2] Influence of Contaminants .....	157

# Safety precautions

## Before installation and electric work

- ▶ Before installing the unit, make sure you read all the “Safety precautions”.
- ▶ The “Safety precautions” provide very important points regarding safety. Make sure you follow them.
- ▶ This equipment may not be applicable to EN61000-3-2: 1995 and EN61000-3-3: 1995.
- ▶ This equipment may have an adverse effect on equipment on the same electrical supply system. Please report to or take consent by the supply authority before connection to the system.

## Symbols used in the text

### **Warning:**

Describes precautions that should be observed to prevent danger of injury or death to the user.

### **Caution:**

Describes precautions that should be observed to prevent damage to the unit.

## Symbols used in the illustrations

-  : Indicates an action that must be avoided.
-  : Indicates that important instructions must be followed.
-  : Indicates a part which must be grounded.
-  : Indicates that caution should be taken with rotating parts. (This symbol is displayed on the main unit label.)  
<Color: Yellow>
-  : Indicates that the main switch must be turned off before servicing. (This symbol is displayed on the main unit label.)  
<Color: Blue>
-  : Beware of electric shock (This symbol is displayed on the main unit label.) <Color: Yellow>
-  : Beware of hot surface (This symbol is displayed on the main unit label.) <Color: Yellow>
-  **ELV** : Please pay attention to electric shock fully because this is not Safety Extra Low-Voltage (SELV) circuit. And at servicing, please shut down the power supply for both of Indoor Unit and Heat Source Unit.

### **Warning:**

Carefully read the labels affixed to the main unit.

### **Warning:**

- **Ask the dealer or an authorized technician to install the air conditioner.**
  - Improper installation by the user may result in water leakage, electric shock, or fire.
- **Install the air unit at a place that can withstand its weight.**
  - Inadequate strength may cause the unit to fall down, resulting in injuries.

- **Use the specified cables for wiring. Make the connections securely so that the outside force of the cable is not applied to the terminals.**
  - Inadequate connection and fastening may generate heat and cause a fire.
- **Prepare for typhoons and other strong winds and earthquakes and install the unit at the specified place.**
  - Improper installation may cause the unit to topple and result in injury.
- **Always use an air cleaner, humidifier, electric heater, and other accessories specified by Mitsubishi Electric.**
  - Ask an authorized technician to install the accessories. Improper installation by the user may result in water leakage, electric shock, or fire.
- **Never repair the unit. If the air conditioner must be repaired, consult the dealer.**
  - If the unit is repaired improperly, water leakage, electric shock, or fire may result.
- **Do not touch the heat exchanger fins.**
  - Improper handling may result in injury.
- **If refrigerant gas leaks during installation work, ventilate the room.**
  - If the refrigerant gas comes into contact with a flame, poisonous gases will be released.
- **Install the air conditioner according to this Installation Manual.**
  - If the unit is installed improperly, water leakage, electric shock, or fire may result.
- **Have all electric work done by a licensed electrician according to “Electric Facility Engineering Standard” and “Interior Wire Regulations” and the instructions given in this manual and always use a special circuit.**
  - If the power source capacity is inadequate or electric work is performed improperly, electric shock and fire may result.
- **Securely install the cover of control box and the panel.**
  - If the cover and panel are not installed properly, dust or water may enter the heat source unit and fire or electric shock may result.
- **When installing and moving the air conditioner to another site, do not charge the it with a refrigerant different from the refrigerant (R407C) specified on the unit.**
  - If a different refrigerant or air is mixed with the original refrigerant, the refrigerant cycle may malfunction and the unit may be damaged.
- **If the air conditioner is installed in a small room, measures must be taken to prevent the refrigerant concentration from exceeding the safety limit even if the refrigerant should leak.**
  - Consult the dealer regarding the appropriate measures to prevent the safety limit from being exceeded. Should the refrigerant leak and cause the safety limit to be exceeded, hazards due to lack of oxygen in the room could result.
- **When moving and reinstalling the air conditioner, consult the dealer or an authorized technician.**
  - If the air conditioner is installed improperly, water leakage, electric shock, or fire may result.
- **After completing installation work, make sure that refrigerant gas is not leaking.**
  - If the refrigerant gas leaks and is exposed to a fan heater, stove, oven, or other heat source, it may generate noxious gases.
- **Do not reconstruct or change the settings of the protection devices.**
  - If the pressure switch, thermal switch, or other protection device is shorted and operated forcibly, or parts other than those specified by Mitsubishi Electric are used, fire or explosion may result.
- **To dispose of this product, consult your dealer.**
- **The installer and system specialist shall secure safety against leakage according to local regulation or standards.**
  - Following standards may be applicable if local regulation are not available.
- **Pay a special attention to the place, such as a basement, etc. where refrigeration gas can stay, since refrigerant is heavier than the air.**

## 1 PRECAUTIONS FOR DEVICES THAT USE R407C REFRIGERANT

### Caution

#### Do not use the existing refrigerant piping.

- The old refrigerant and refrigerator oil in the existing piping contains a large amount of chlorine which may cause the refrigerator oil of the new unit to deteriorate.

Use refrigerant piping made of **※※C1220T phosphorus deoxidized copper as specified in the ※JIS H3300 "Copper and copper alloy seamless pipes and tubes". In addition, be sure that the inner and outer surfaces of the pipes are clean and free of hazardous sulphur, oxides, dust/dirt, shaving particles, oils, moisture, or any other contaminant.**

- Contaminants on the inside of the refrigerant piping may cause the refrigerant residual oil to deteriorate.

※JIS : Japanese Industrial Standard

※※: Comparable to CU-DHP (CUPROCLIMA), Cu-bI (AFNOR), C12200 (ASTN), SF-Cu (DIN)

**Store the piping to be used during installation indoors and keep both ends of the piping sealed until just before brazing. (Store elbows and other joints in a plastic bag.)**

- If dust, dirt, or water enters the refrigerant cycle, deterioration of the oil and compressor trouble may result.

**Use ester oil, ether oil or alkylbenzene (small amount) as the refrigerator oil to coat flares and flange connections.**

- The refrigerator oil will degrade if it is mixed with a large amount of mineral oil.

**Use liquid refrigerant to seal the system.**

- If gas refrigerant is used to seal the system, the composition of the refrigerant in the cylinder will change and performance may drop.

**Do not use a refrigerant other than R407C.**

- If another refrigerant (R22, etc.) is used, the chlorine in the refrigerant may cause the refrigerator oil to deteriorate.

**Use a vacuum pump with a reverse flow check valve.**

- The vacuum pump oil may flow back into the refrigerant cycle and cause the refrigerator oil to deteriorate.

**Do not use the following tools that have been used with conventional refrigerants.**

**(Gauge manifold, charge hose, gas leak detector, reverse flow check valve, refrigerant charge base, vacuum gauge, refrigerant recovery equipment.)**

- If the conventional refrigerant and refrigerator oil are mixed in the R407C, the refrigerant may deteriorate.
- If water is mixed in the R407C, the refrigerator oil may deteriorate.
- Since R407C does not contain any chlorine, gas leak detectors for conventional refrigerants will not react to it.

**Do not use a charging cylinder.**

- Using a charging cylinder may cause the refrigerant to deteriorate.

**Be especially careful when managing the tools.**

- If dust, dirt, or water gets in the refrigerant cycle, the refrigerant may deteriorate.

**If the refrigerant leaks, recover the refrigerant in the refrigerant cycle, then recharge the cycle with the specified amount of the liquid refrigerant indicated on the air conditioner.**

- Since R407C is a nonazeotropic refrigerant, if additionally charged when the refrigerant leaked, the composition of the refrigerant in the refrigerant cycle will change and result in a drop in performance or abnormal stopping.


## [1] Storage of Piping Material

### (1) Storage location



Store the pipes to be used indoors. (Warehouse at site or owner's warehouse)  
Storing them outdoors may cause dirt, waste, or water to infiltrate.

### (2) Pipe sealing before storage

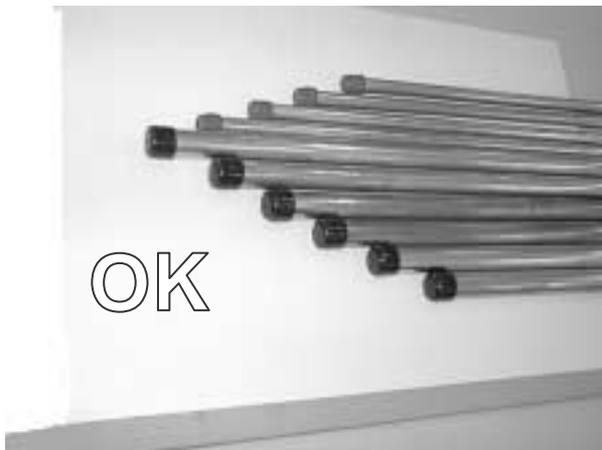

Both ends of the pipes should be sealed until immediately before brazing.  
Wrap elbows and T's in plastic bags for storage.

\* The new refrigerator oil is 10 times more hygroscopic than the conventional refrigerator oil (such as Suniso). Water infiltration in the refrigerant circuit may deteriorate the oil or cause a compressor failure. Piping materials must be stored with more care than with the conventional refrigerant pipes.

## [2] Piping Machining

Use ester oil, ether oil or alkylbenzene (small amount) as the refrigerator oil to coat flares and flange connections.



Use only the necessary minimum quantity of oil.

### Reason :

1. The refrigerator oil used for the equipment is highly hygroscopic and may introduce water inside.

### Notes :

- Introducing a great quantity of mineral oil into the refrigerant circuit may also cause a compressor failure.
- Do not use oils other than ester oil, ether oil or alkylbenzene.

### [3] Necessary Apparatus and Materials and Notes on Their Handling

The following tools should be marked as dedicated tools for R407C.

<<Comparison of apparatus and materials used for R407C and for R22>>

Apparatus Used	Use	R22	R407C
Gauge manifold	Evacuating, refrigerant filling	Current product	⊙
Charging hose	Operation check	Current product	⊙
Charging cylinder	Refrigerant charging	Current product	⊙ Do not use.
Gas leakage detector	Gas leakage check	Current product	⊙ Shared with R134a
Refrigerant collector	Refrigerant collection	R22	⊙ For R407C use only
Refrigerant cylinder	Refrigerant filling	R22	⊙ Identification of dedicated use for R407C : Record refrigerant name and put brown belt on upper part of cylinder.
Vacuum pump	Vacuum drying	Current product	△ Can be used by attaching an adapter with a check valve.
Vacuum pump with a check valve		Current product	△
Flare tool	Flaring of pipes	Current product	△
Bender	Bending of pipes	Current product	△
Application oil	Applied to flared parts	Current product	⊙ Ester oil or Ether oil or Alkybenzene (Small amount)
Torque wrench	Tightening of flare nuts	Current product	△
Pipe cutter	Cutting of pipes	Current product	△
Welder and nitrogen cylinder	Welding of pipes	Current product	△
Refrigerant charging meter	Refrigerant charging	Current product	△
Vacuum gauge	Checking the vacuum degree	Current product	△

Symbols : ⊙ To be used for R407C only.

△ Can also be used for conventional refrigerants.


Tools for R407C must be handled with more care than those for conventional refrigerants. They must not come into contact with any water or dirt.

## [4] Brazing


No changes from the conventional method, but special care is required so that foreign matter (ie. oxide scale, water, dirt, etc.) does not enter the refrigerant circuit.

Example : Inner state of brazed section

When non-oxide brazing was not used

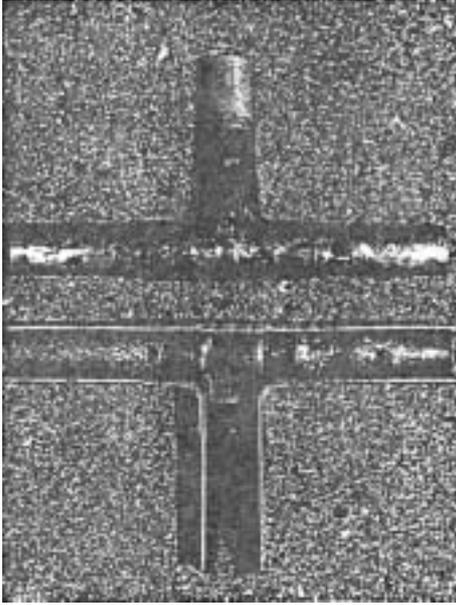

When non-oxide brazing was used

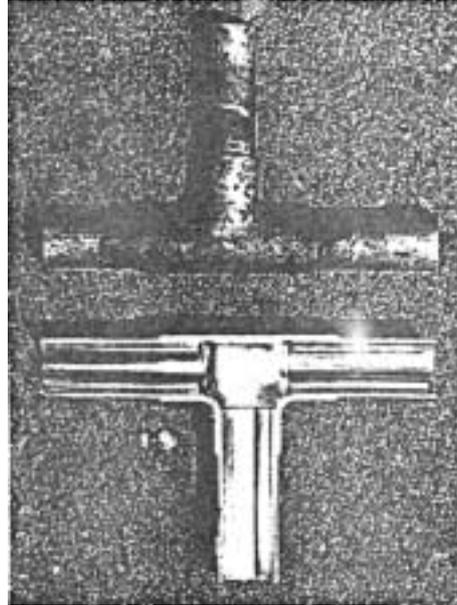

### Items to be strictly observed :

1. Do not conduct refrigerant piping work outdoors on a rainy day.
2. Apply non-oxide brazing.
3. Use a brazing material (BCuP-3) which requires no flux when brazing between copper pipes or between a copper pipe and copper coupling.
4. If installed refrigerant pipes are not immediately connected to the equipment, then braze and seal both ends of them.

### Reasons :


1. The new refrigerant oil is 10 times more hygroscopic than the conventional oil. The probability of a machine failure if water infiltrates is higher than with conventional refrigerant oil.
2. A flux generally contains chlorine. A residual flux in the refrigerant circuit may generate sludge.

### Note :


- Commercially available antioxidants may have adverse effects on the equipment due to its residue, etc. When applying non-oxide brazing, use nitrogen.

## [5] Airtightness Test

No changes from the conventional method. Note that a refrigerant leakage detector for R22 cannot detect R407C leakage.

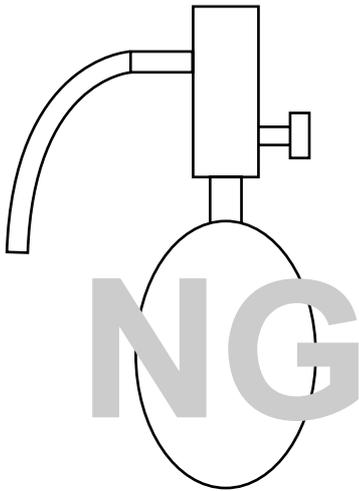

Halide torch

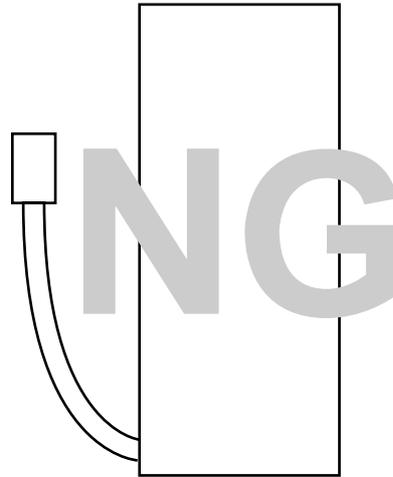

R22 leakage detector

### Items to be strictly observed :

1. Pressurize the equipment with nitrogen up to the design pressure and then judge the equipment's airtightness, taking temperature variations into account.
2. When investigating leakage locations using a refrigerant, be sure to use R407C.
3. Ensure that R407C is in a liquid state when charging.

### Reasons :

1. Use of oxygen as the pressurized gas may cause an explosion.
2. Charging with R407C gas will lead the composition of the remaining refrigerant in the cylinder to change and this refrigerant can then not be used.

### Note :

- A leakage detector for R407C is sold commercially and it should be purchased.

## [6] Vacuuming

1. Vacuum pump with check valve

A vacuum pump with a check valve is required to prevent the vacuum pump oil from flowing back into the refrigerant circuit when the vacuum pump power is turned off (power failure).

It is also possible to attach a check valve to the actual vacuum pump afterwards.

2. Standard degree of vacuum for the vacuum pump

Use a pump which reaches 65Pa or below after 5 minutes of operation.

In addition, be sure to use a vacuum pump that has been properly maintained and oiled using the specified oil. If the vacuum pump is not properly maintained, the degree of vacuum may be too low.

3. Required accuracy of the vacuum gauge

Use a vacuum gauge that can measure up to 65Pa. Do not use a general gauge manifold since it cannot measure a vacuum of 65Pa.

4. Evacuating time

- Evacuate the equipment for 1 hour after 650Pa has been reached.
- After evacuating, leave the equipment for 1 hour and make sure the that vacuum is not lost.

5. Operating procedure when the vacuum pump is stopped


In order to prevent a backflow of the vacuum pump oil, open the relief valve on the vacuum pump side or loosen the charge hose to drawn in air before stopping operation.

The same operating procedure should be used when using a vacuum pump with a check valve.

## [7] Charging of Refrigerant


R407C must be in a liquid state when charging, because it is a non-azeotropic refrigerant.

For a cylinder with a syphon attached


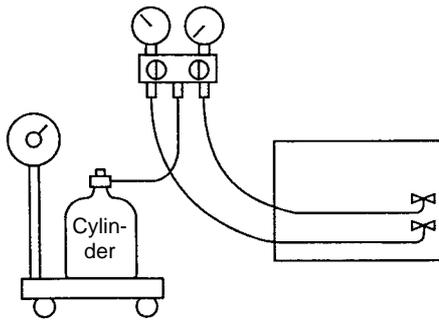


Cylinder color identification R407C-brown

For a cylinder without a syphon attached

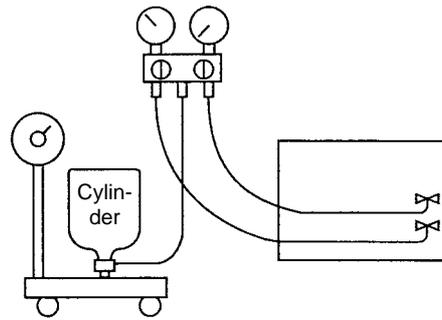

Charged with liquid refrigerant

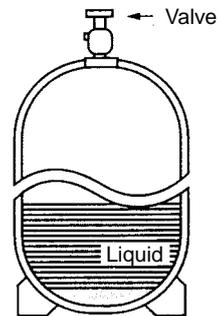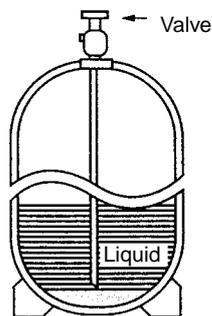

### Reasons :

1. R407C is a mixture of 3 refrigerants, each with a different evaporation temperature. Therefore, if the equipment is charged with R407C gas, then the refrigerant whose evaporation temperature is closest to the outside temperature is charged first while the rest of refrigerants remain in the cylinder.

### Note :

- In the case of a cylinder with a syphon, liquid R407C is charged without turning the cylinder up side down. Check the type of cylinder before charging.

## [8] Dryer

1. Replace the dryer when the refrigerant circuit is opened (Ex. Change the compressor, full gas leakage). Be sure to replace the dryer with a CITY MULTI Series WR2 (PQRY) (For use with R407C).

If any other product is used, the unit will be damaged.


2. Opening the refrigerant circuit after changing to a new dryer is less than 1 hour. The replacement of the dryer should be the last operation performed.

## 2 COMPONENT OF EQUIPMENT


### [1] Appearance of Components

Heat source unit

• PQR Y

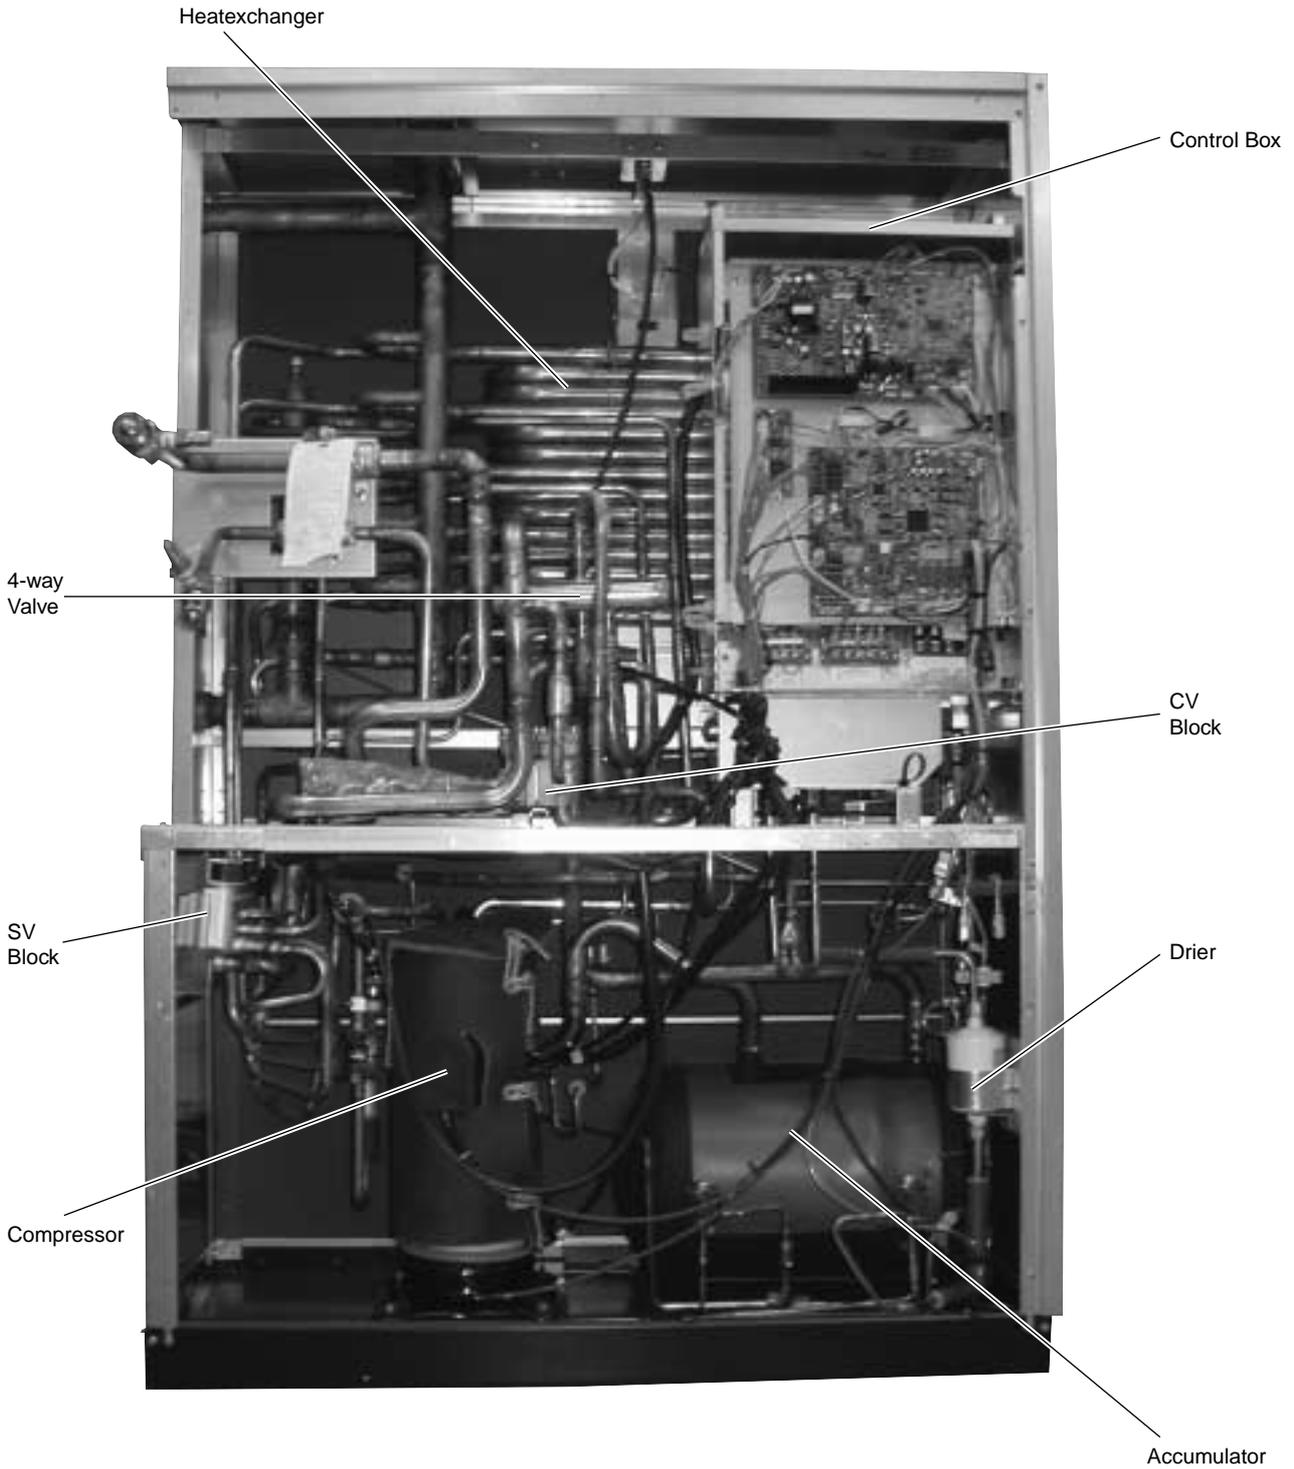


• PQHY

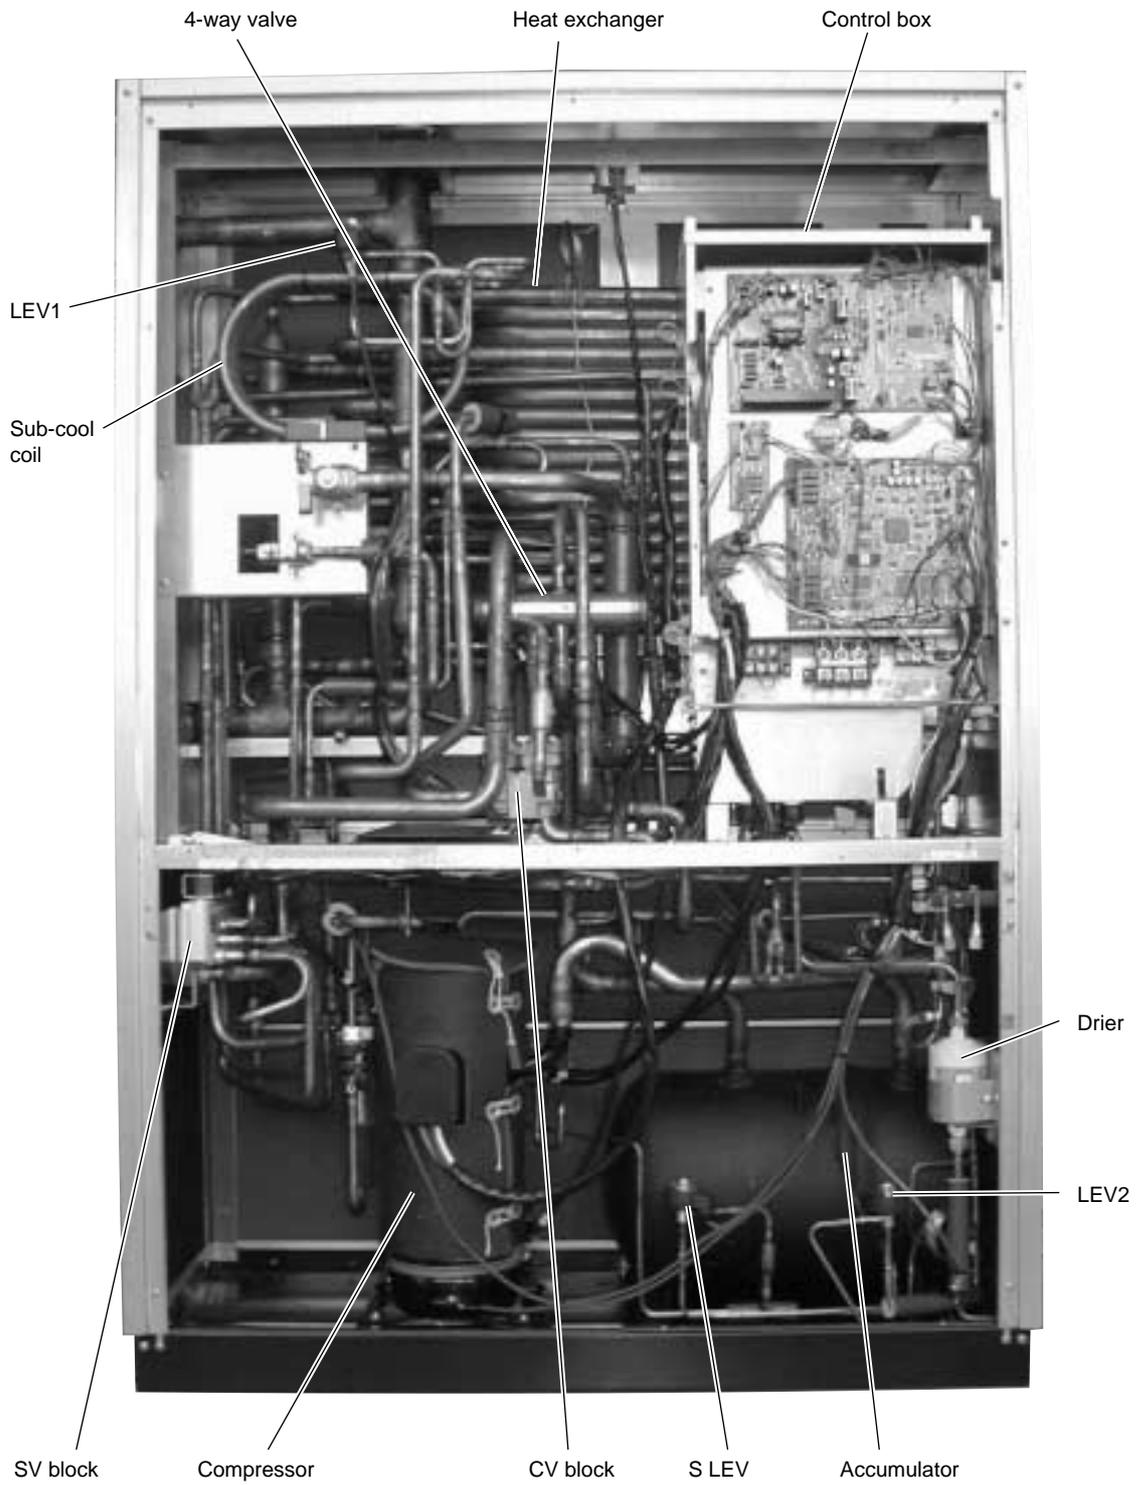


Control Box


Front View

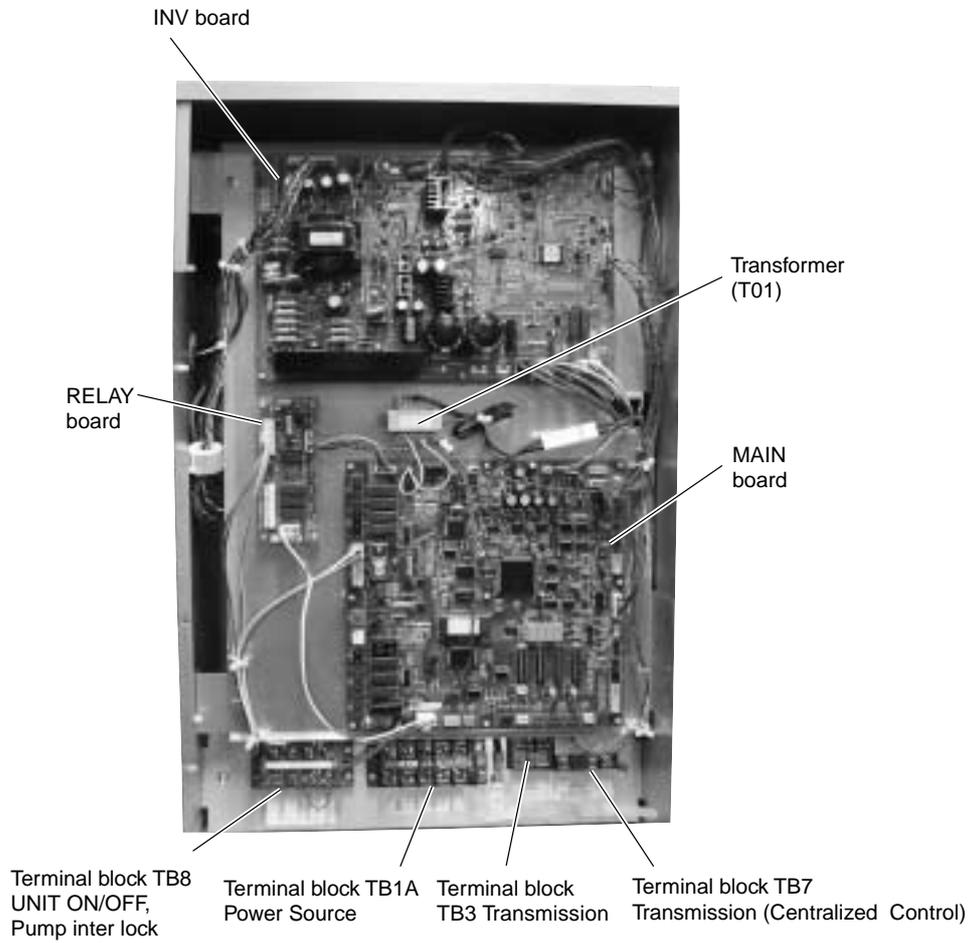


Inner View

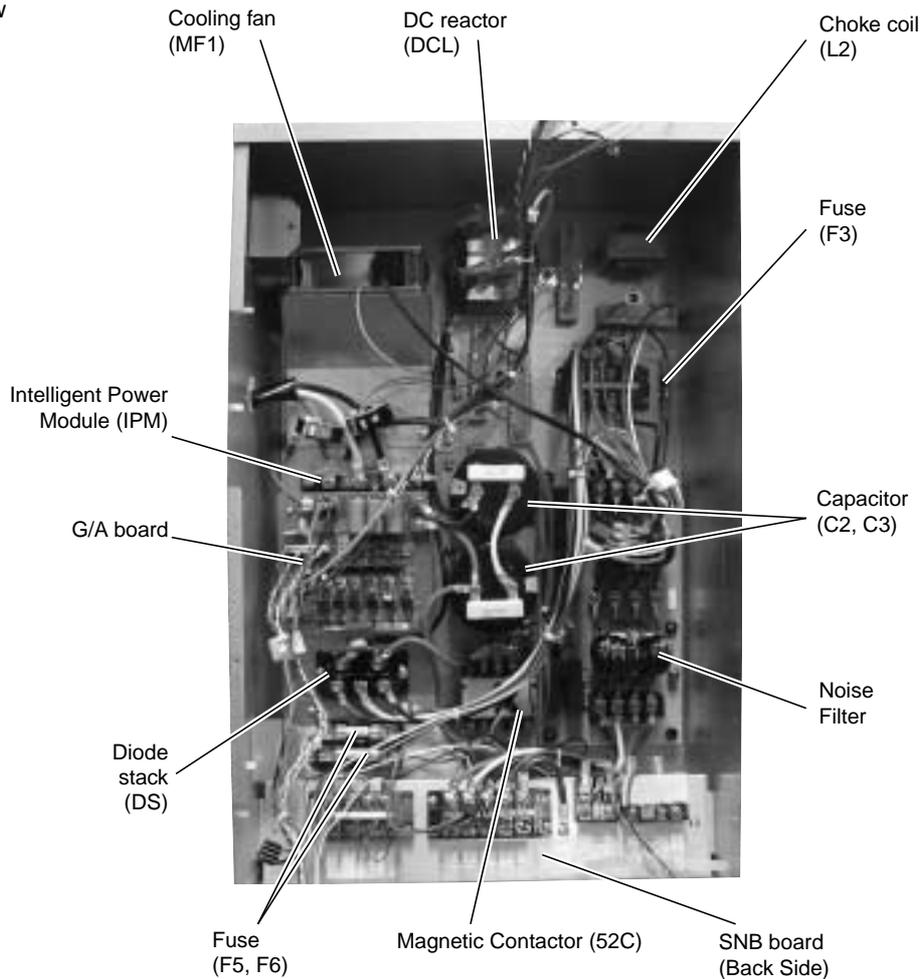

MAIN board

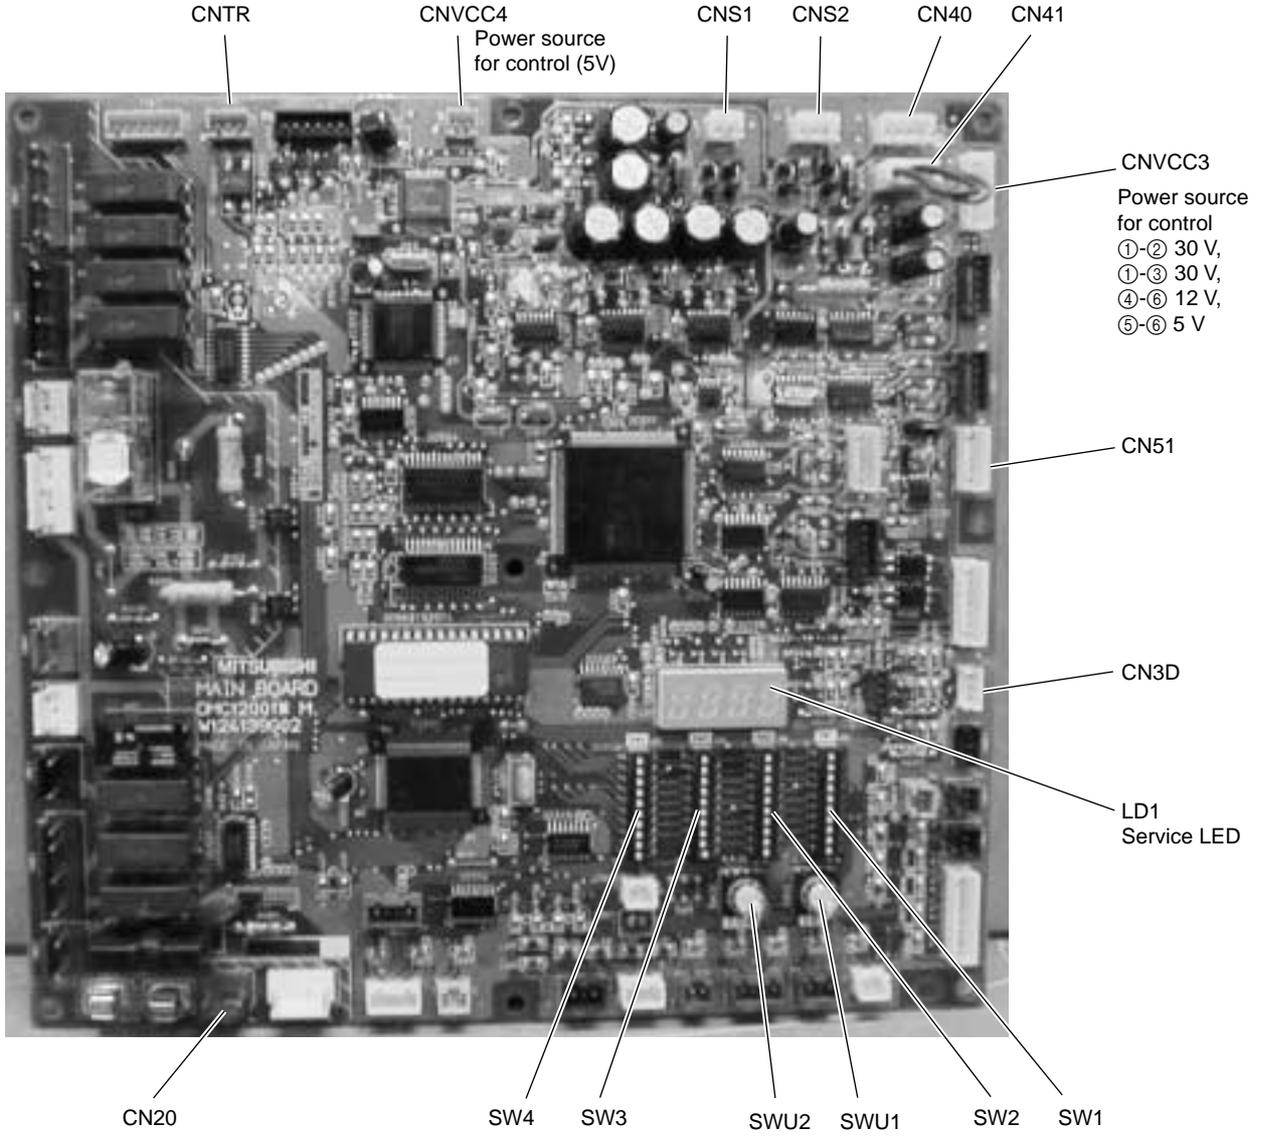


INV board

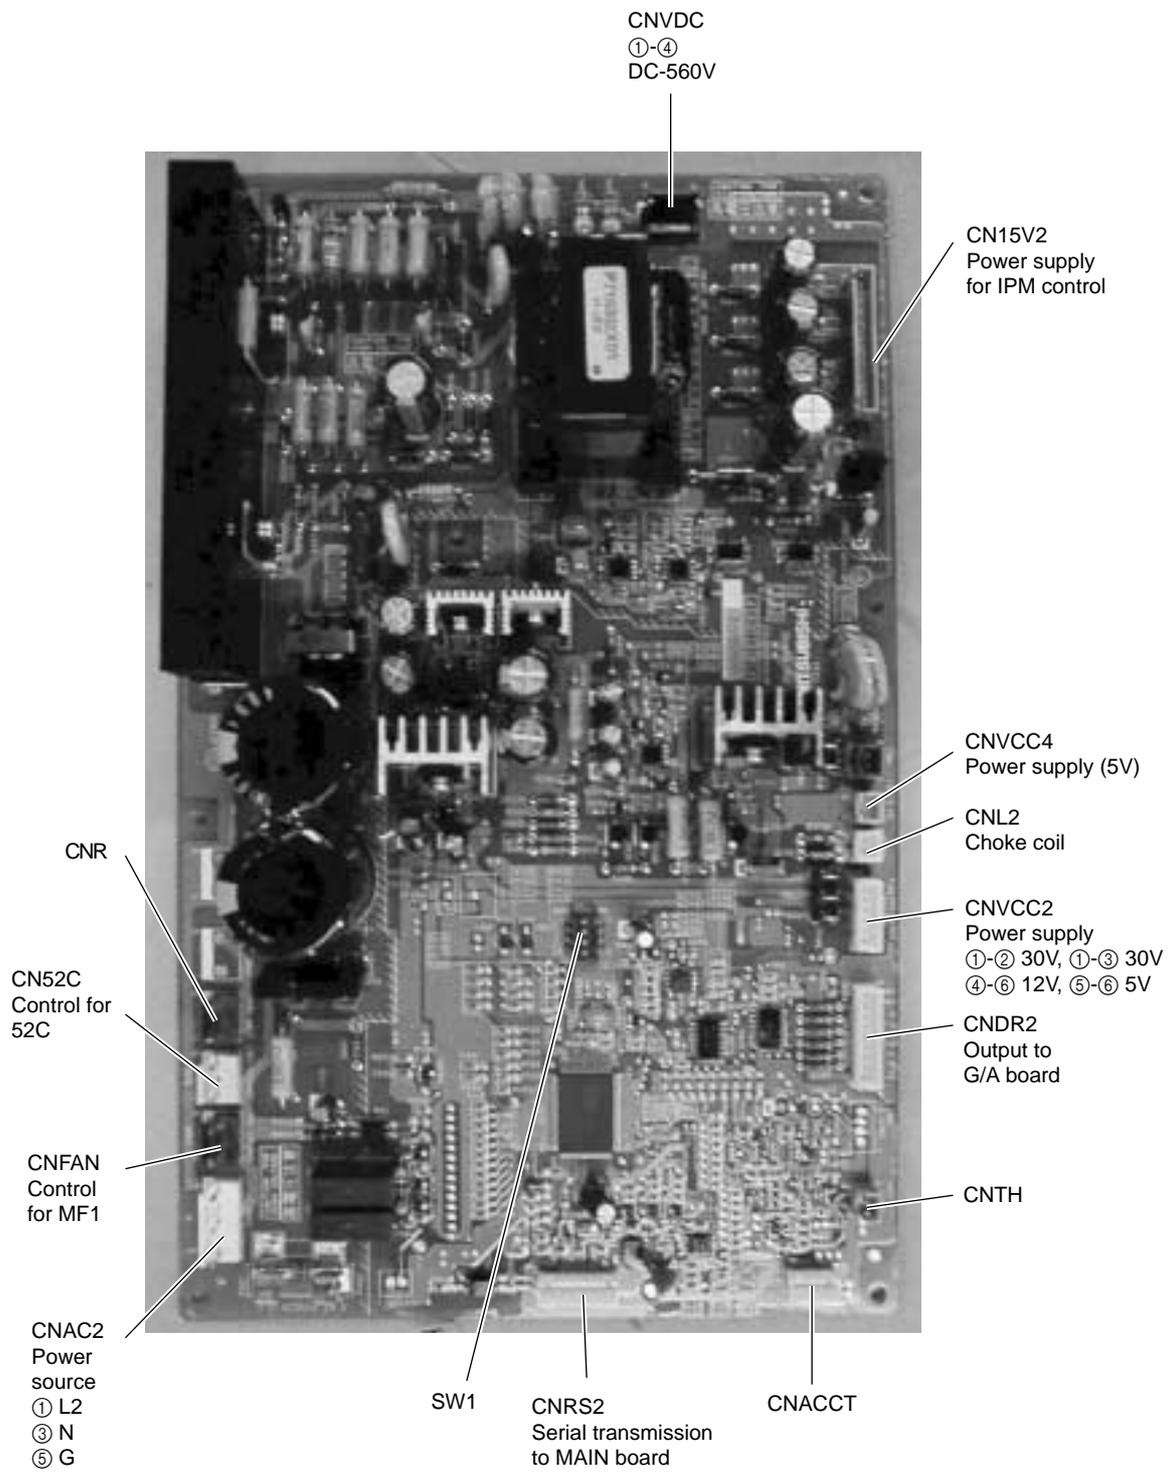




BC controller


BC board

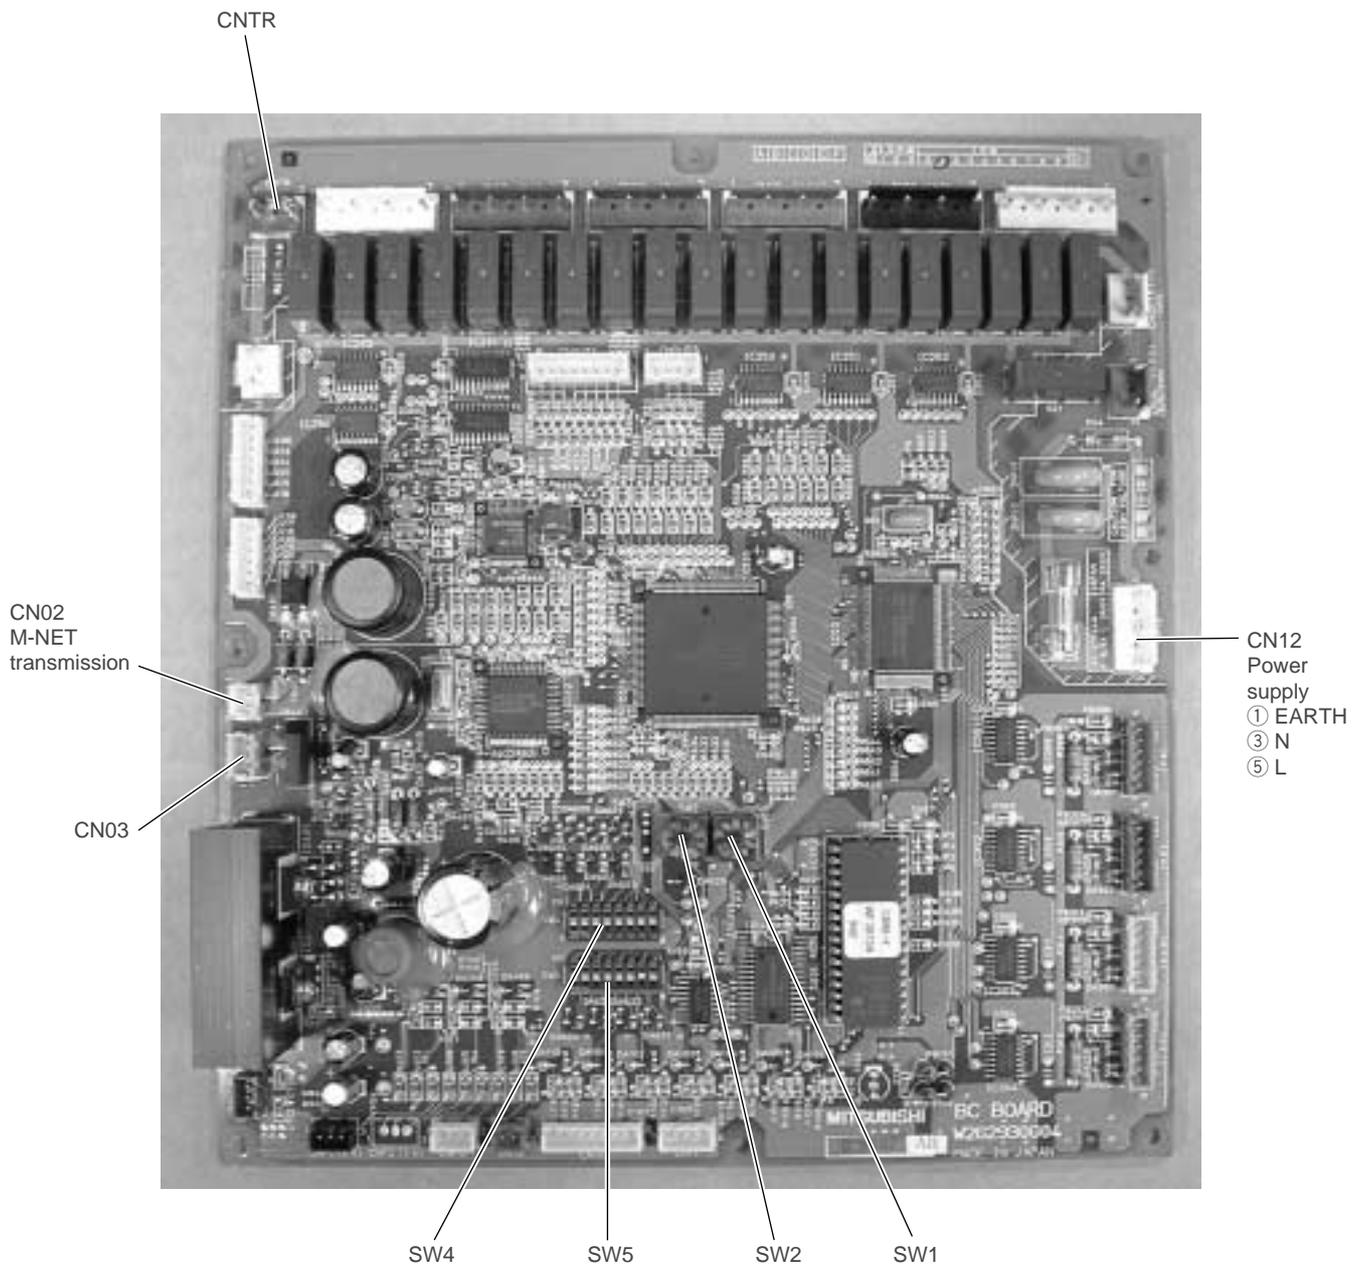

RELAY 10 board

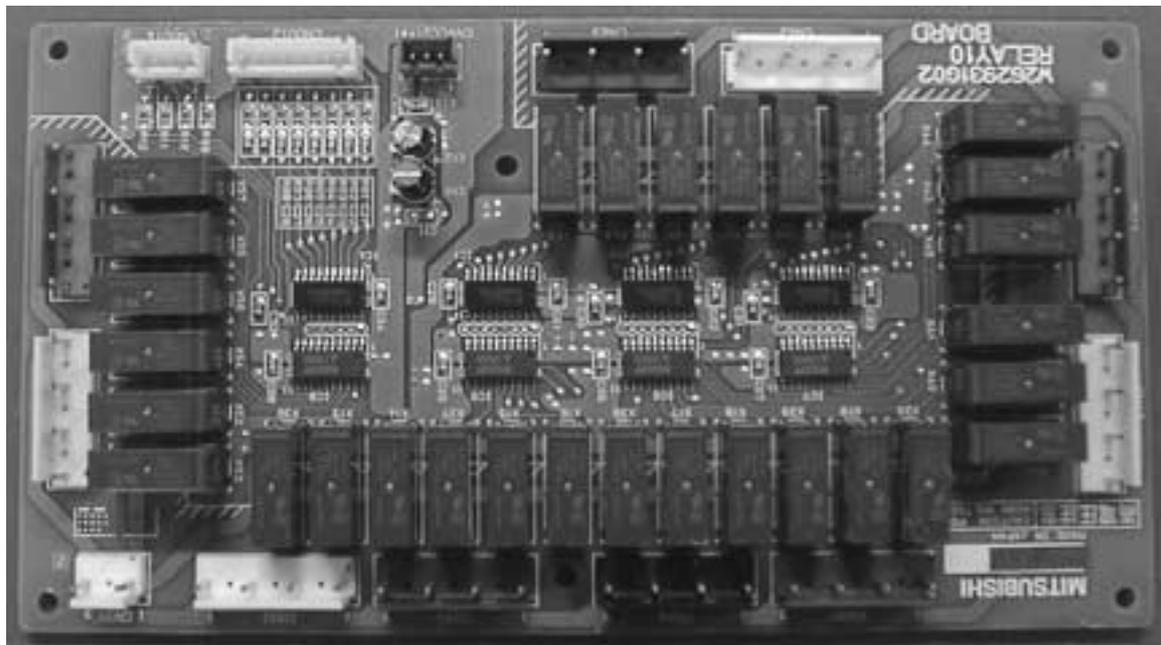



RELAY 4 board

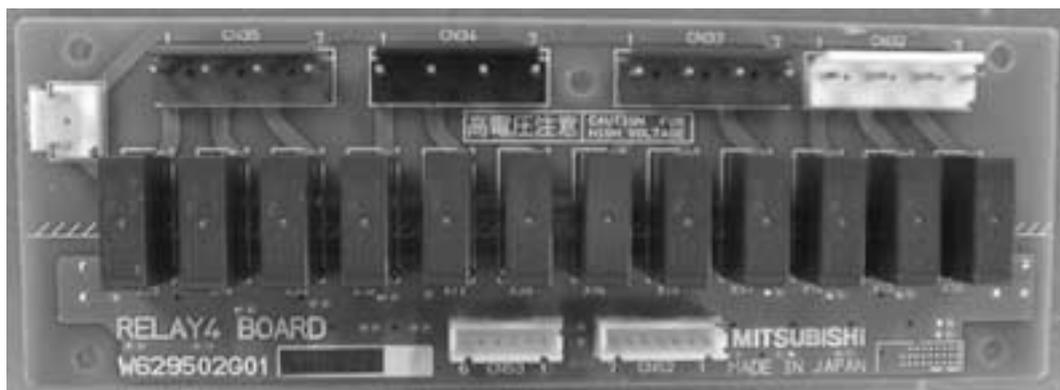

## [2] Refrigerant Circuit Diagram and Thermal Sensor


Heat source unit

• PQR

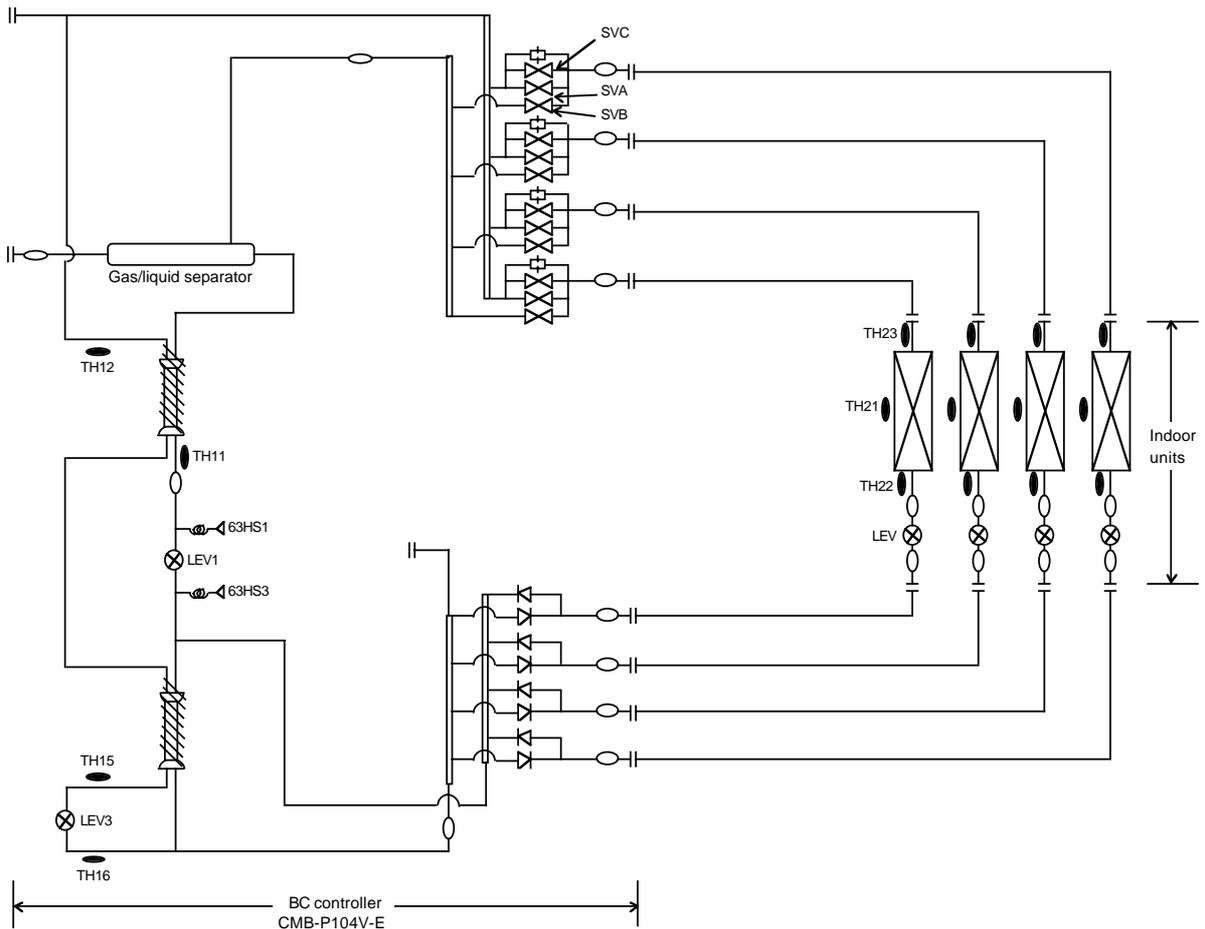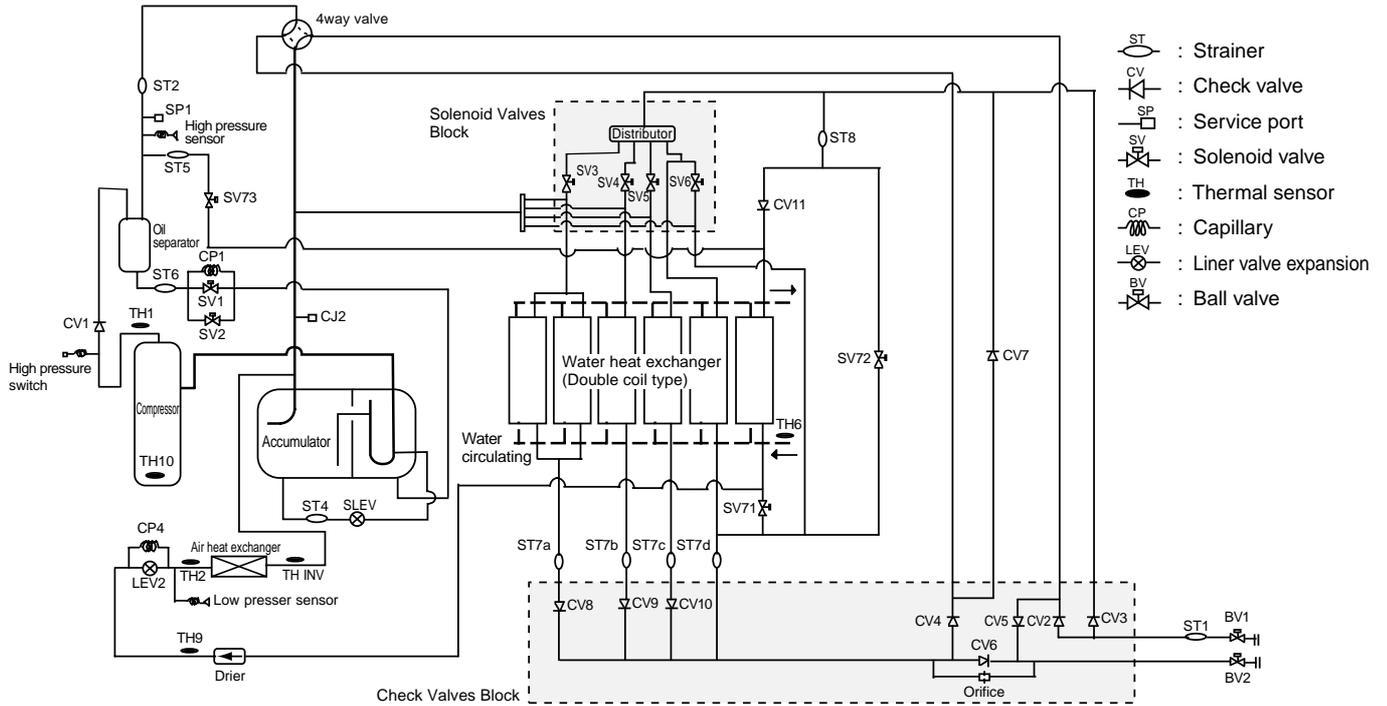


Heat source unit

• PQHY

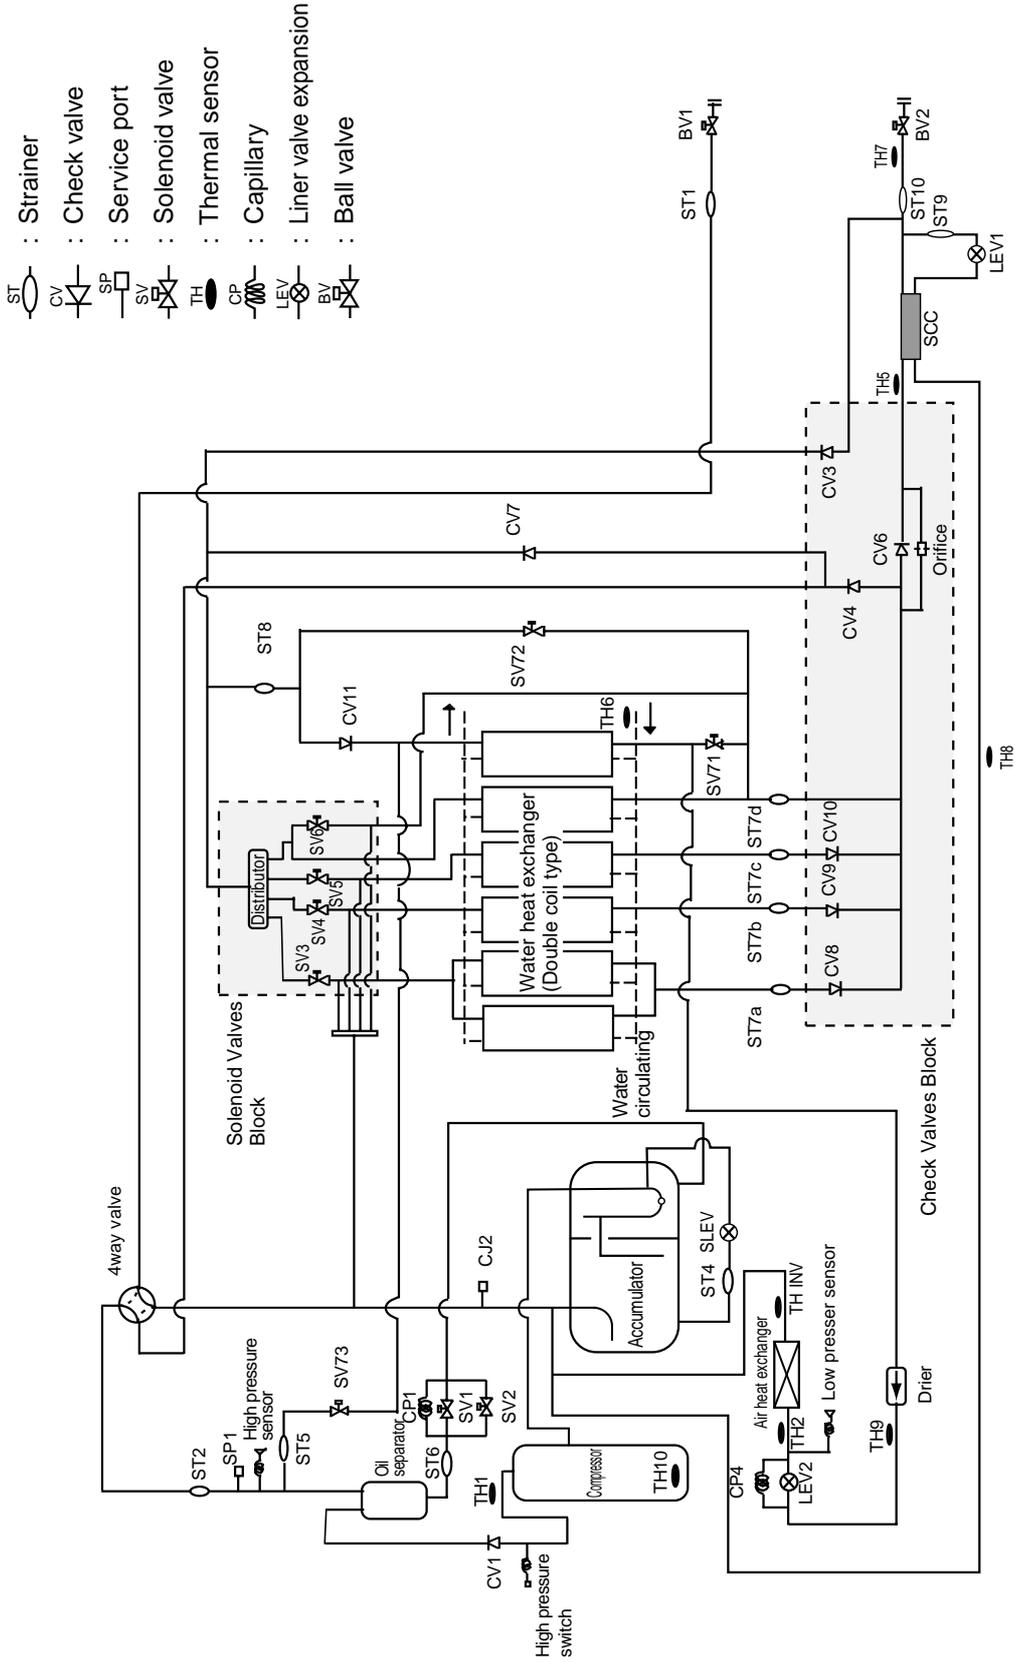

### [3] Electrical Wiring Diagram

• PQR

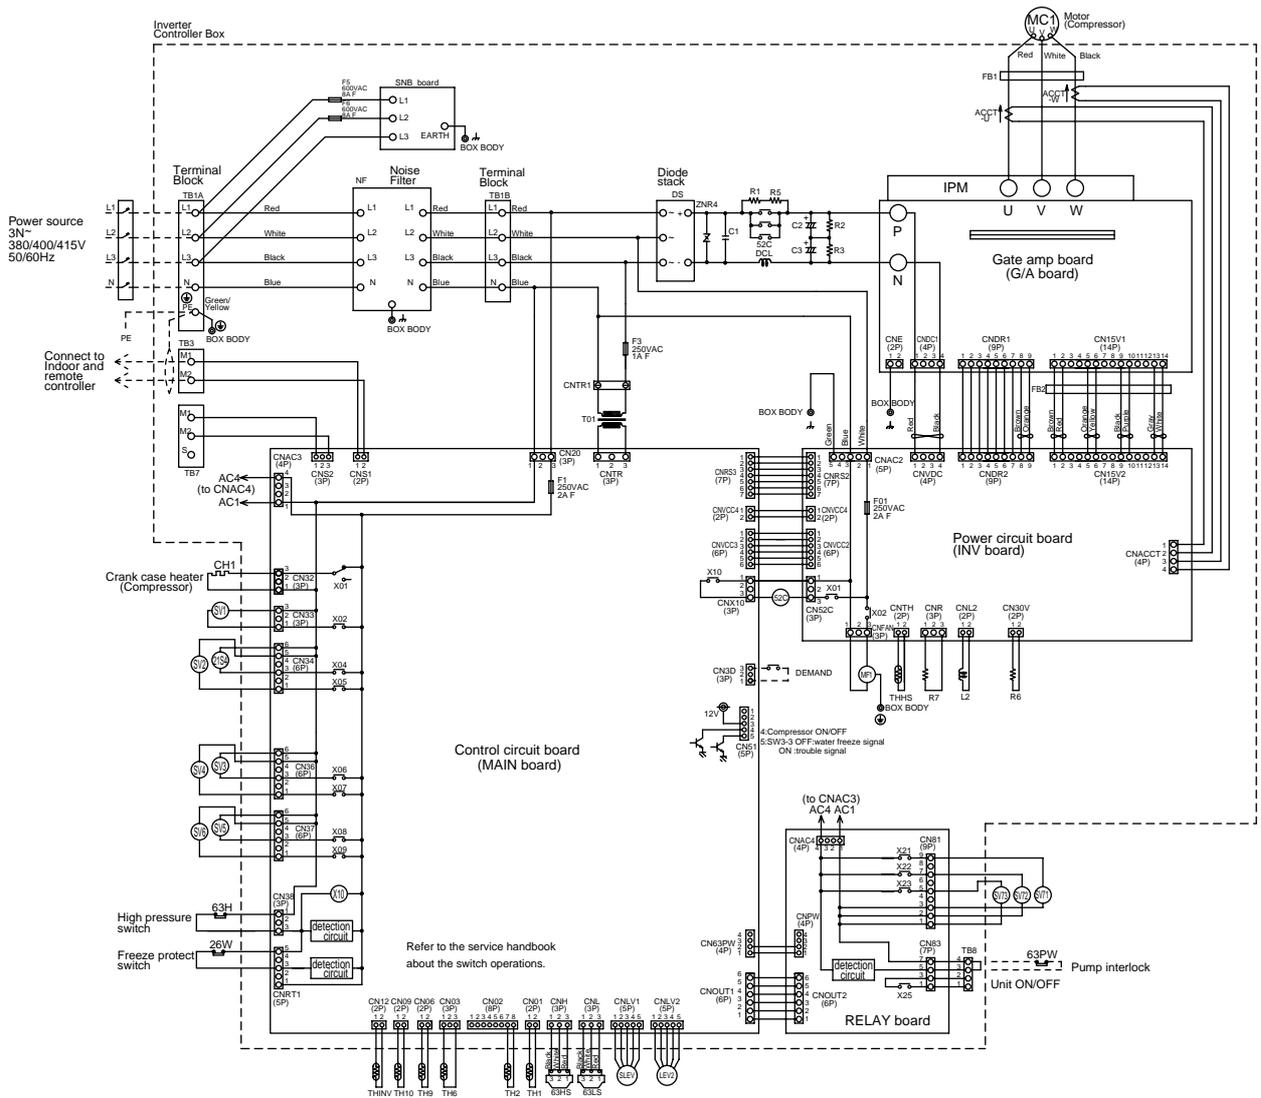

#### <SYMBOL EXPLANATION>

Symbol	Name	Symbol	Name	Symbol	Name	Symbol	Name
DCL	DC reactor (Power factor improvement)	SV3-6	Solenoid valve (Heat exchanger capacity control)	63LS	Low pressure sensor	THINV	Thermistor Outlet temp. detect of heat exchanger for inverter
ACCT-U,W	Current Sensor	SV71-73	Solenoid valve (Heat exchanger capacity control)	L2	Choke coil (Transmission)	THHS	Radiator panel temp. detect
ZNR4	Varistor	LEV2	Electric expansion valve (Heat exchanger for inverter)	IPM	Intelligent power module	X1-10	Aux. relay
52C	Magnetic contactor (Inverter main circuit)	SLEV	Electronic expansion valve(Oil return)	TH1	Thermistor Discharge pipe temp. detect	X21-25	Ferrite core
MF1	Fan motor (Radiator panel)	63HS	High pressure sensor	TH2	Saturation evapo. temp. detect	FB1-2	Earth terminal
21S4	4-way valve			TH6	OA temp. detect		
SV1,SV2	Solenoid valve (Discharge-suction bypass)			TH9	High pressure liquid temp.		
				TH10	Compressor shell temp.		




① CMB-P104, P105, P106V-F

Symbol explanation

Symbol	Name
TR	Transformer
TH11,12,15,16	Thermister sensor
LEV1,3	Expansion valve
PS1,3	Pressure sensor
TB0	Terminal block (for power source)
TB02	Terminal block (for Transmission)
SV1~6A	Solenoid valve
SV1~6B	Solenoid valve
SV1~6C	Solenoid valve
T1~6	Terminal
F01	Fuse AC250V 6.3A F

Note: TB02 is terminal block for transmission.  
Never connect power line to it.

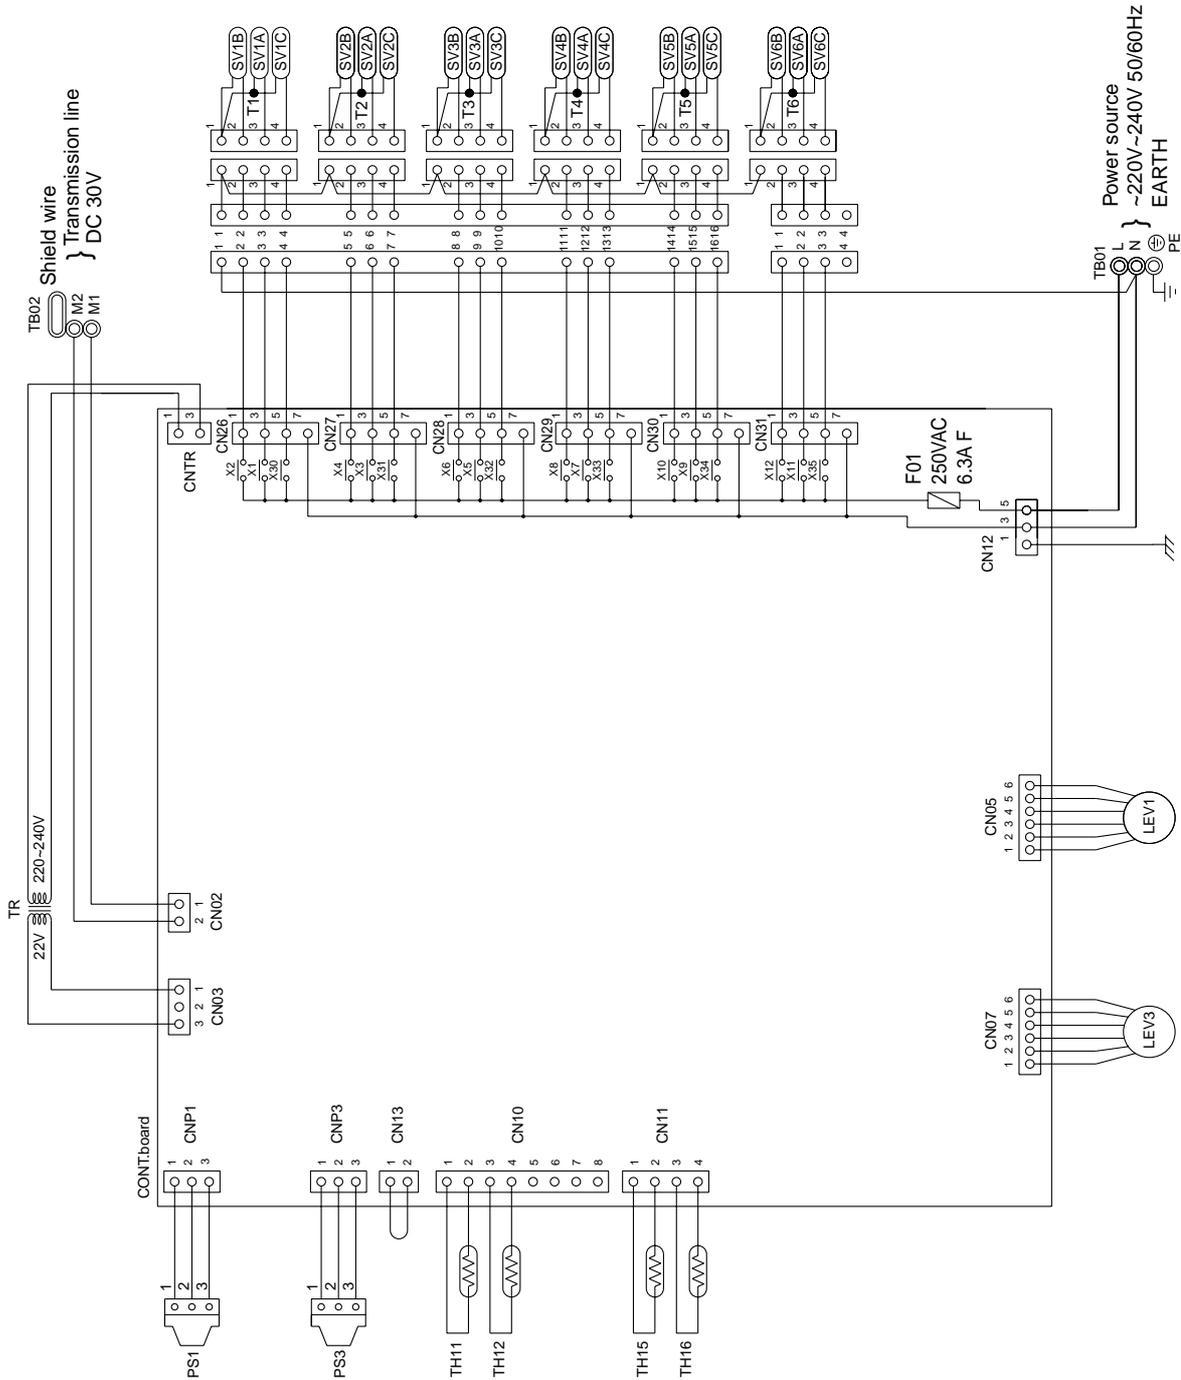


② CMB-P108, P1010V-F


Symbol explanation

Symbol	Name
TR	Transformer
TH11, 12, 15, 16	Thermostat sensor
LEV1, 3	Expansion valve
PS1, 3	Pressure sensor
TB0	Terminal block (for power source)
TB0	Terminal block (for Transmission)
SV1~10	Solenoid valve
SV1~10B	Solenoid valve
SV1~10C	Solenoid valve
T1~10	Terminal
F01	Fuse AC250V 6.3A F

Note: TB02 is terminal block for transmission.  
Never connect power line to it.

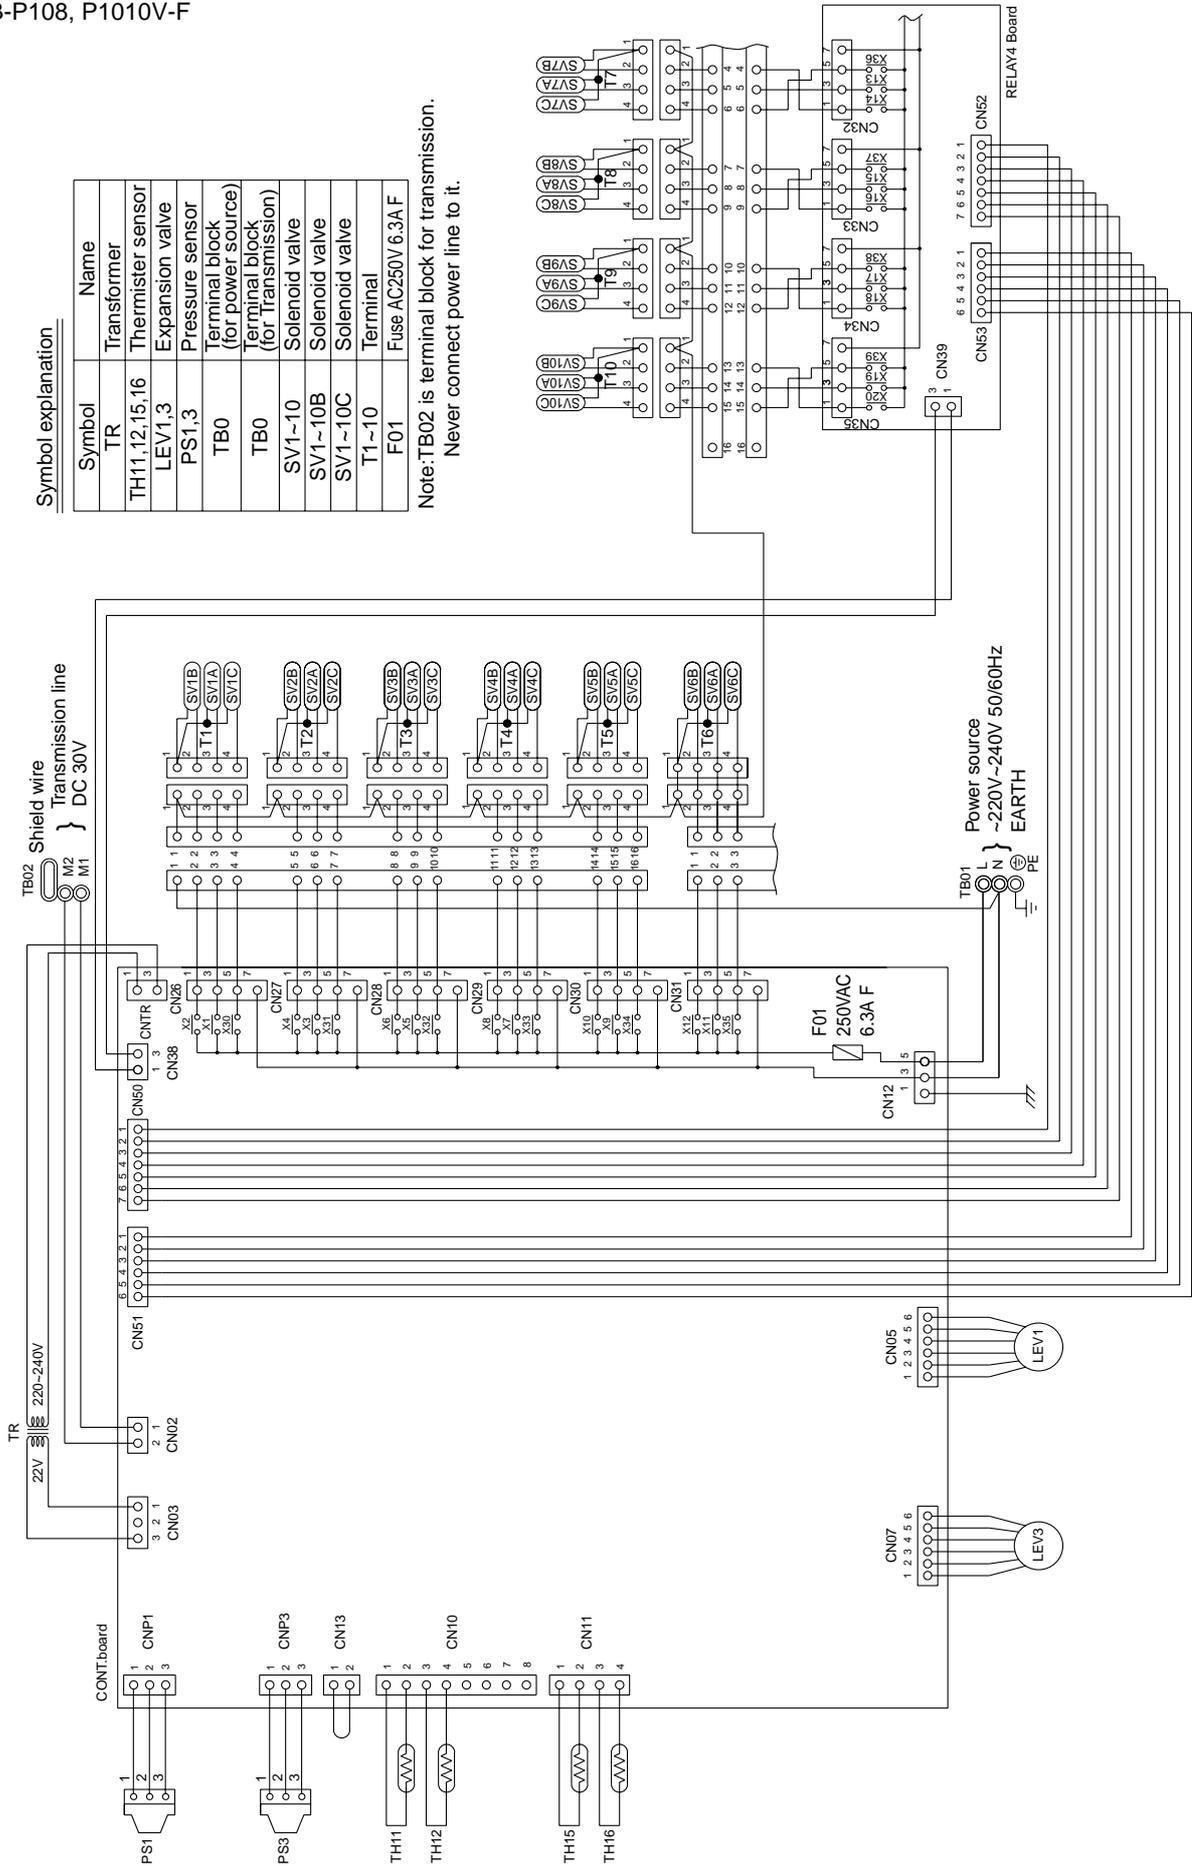

③ CMB-P1013, P1016V-F

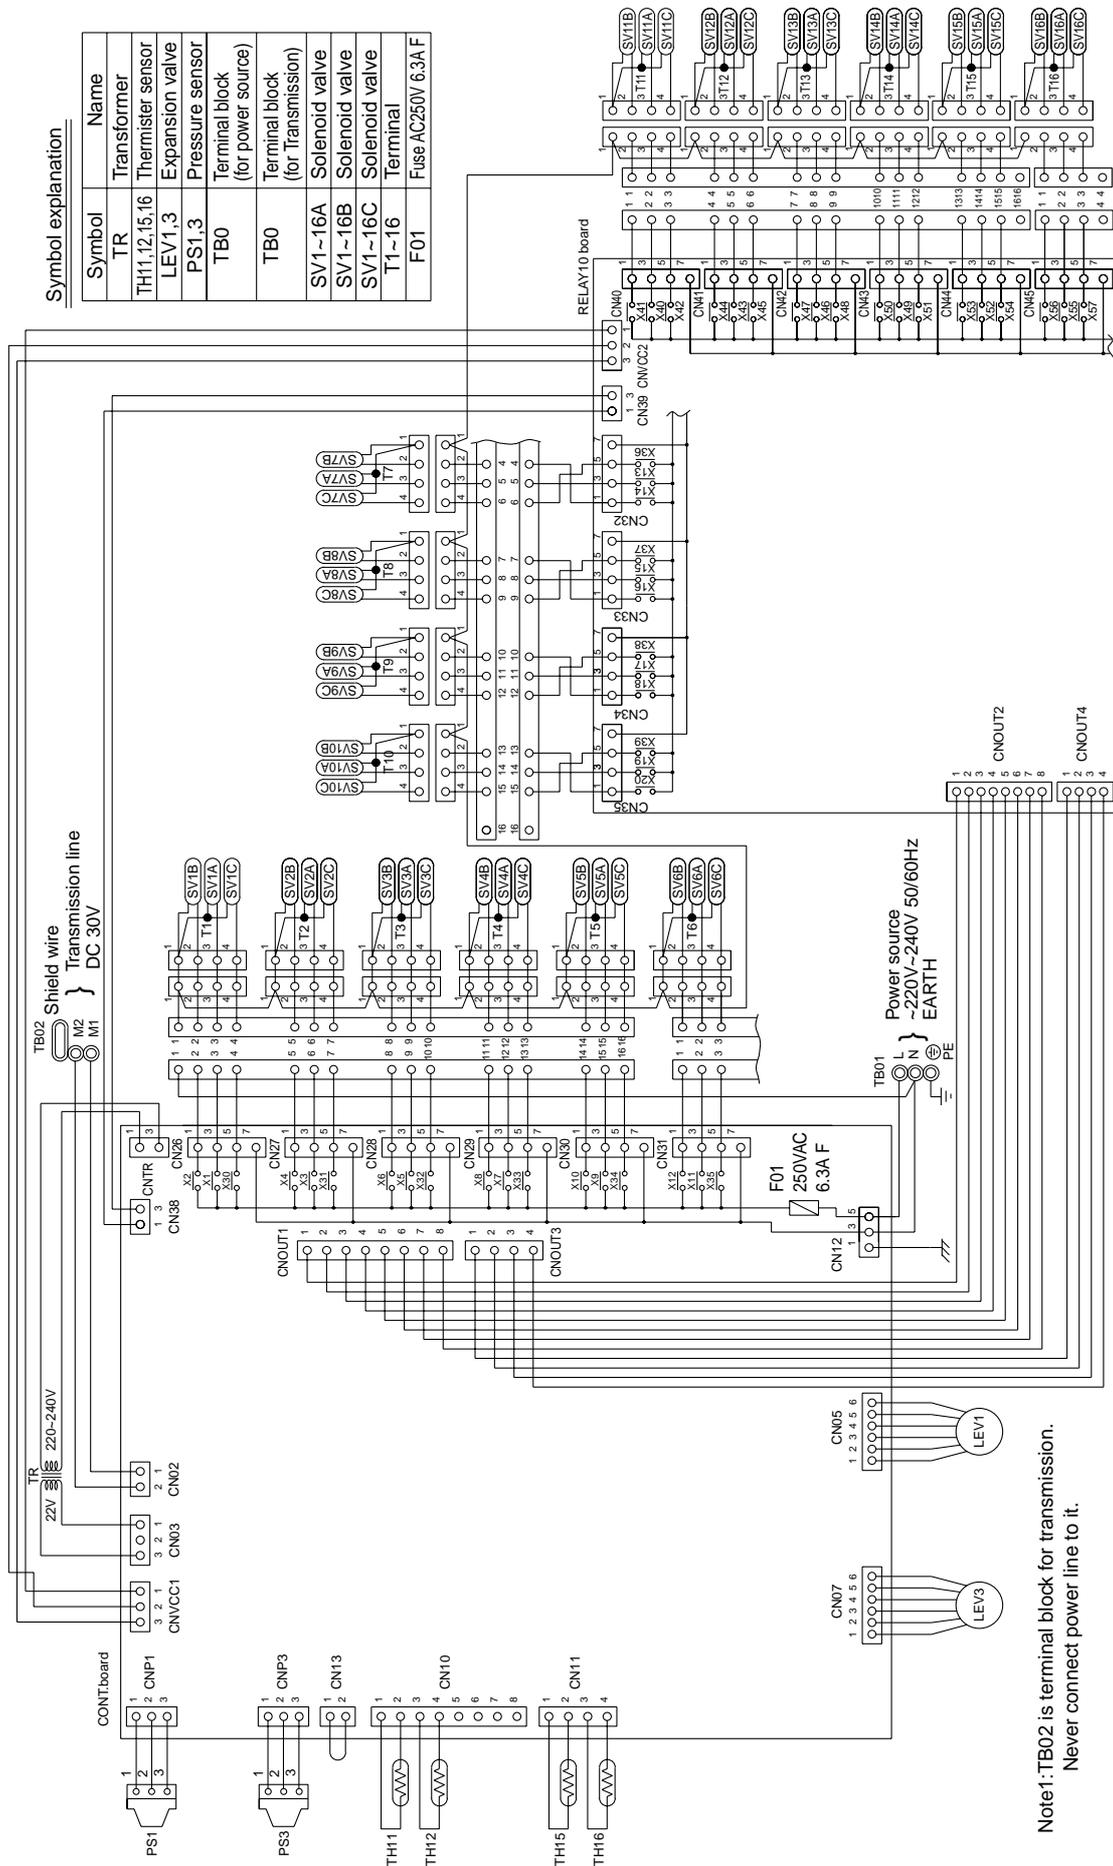


Symbol explanation


Symbol	Name
TR	Transformer
TH11,12,15,16	Thermister sensor
LEV1,3	Expansion valve
PS1,3	Pressure sensor
TB0	Terminal block (for power source)
TB0	Terminal block (for Transmission)
SV1~16A	Solenoid valve
SV1~16B	Solenoid valve
SV1~16C	Solenoid valve
T1~16	Terminal
F01	Fuse AC250V 6.3A F

Note1: TB02 is terminal block for transmission.  
Never connect power line to it.

• PQHY

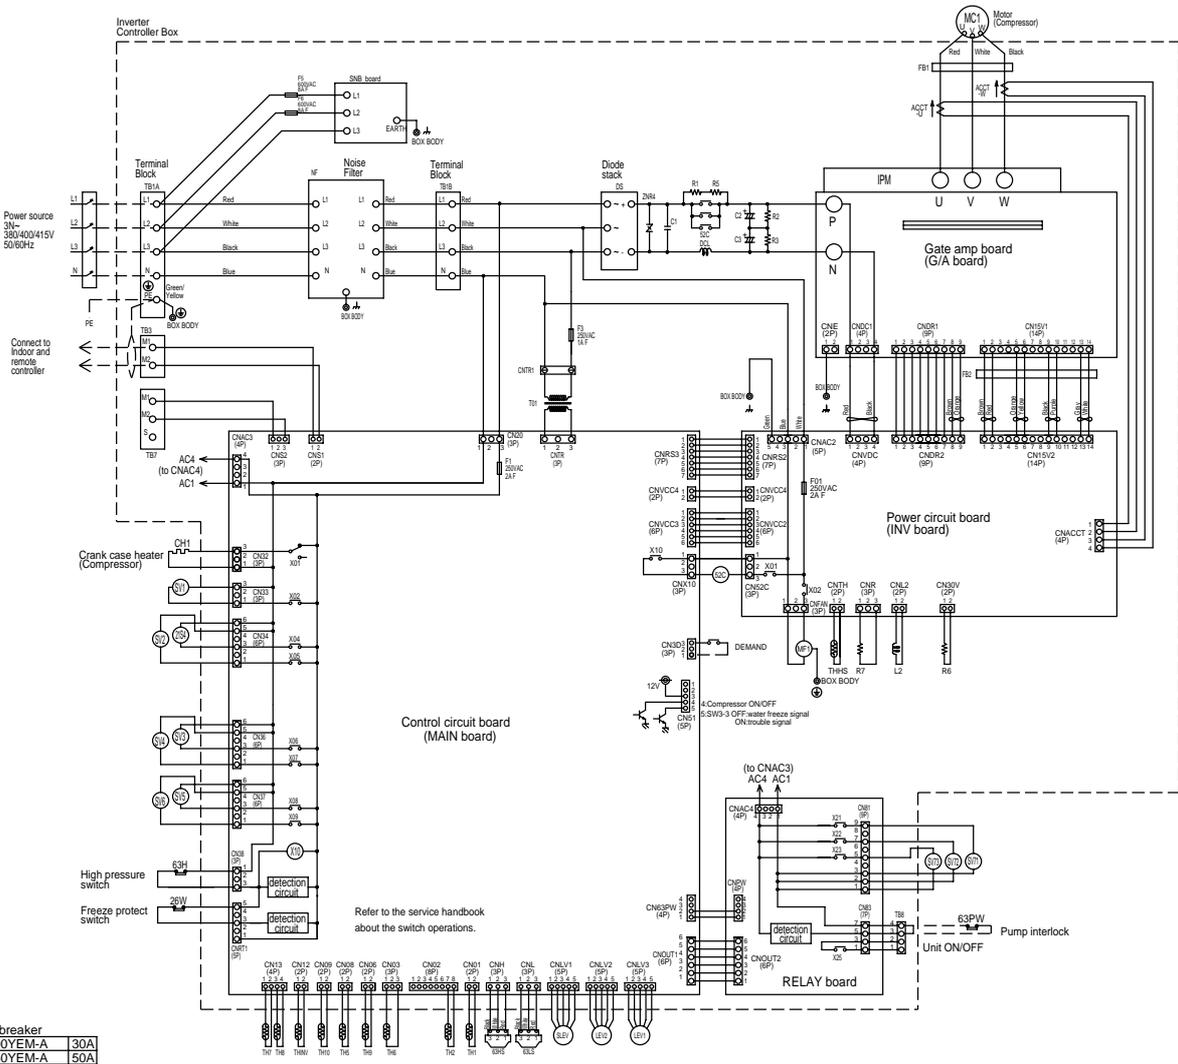


<Operation of self-diagnosis switch(SW1)and LED display>

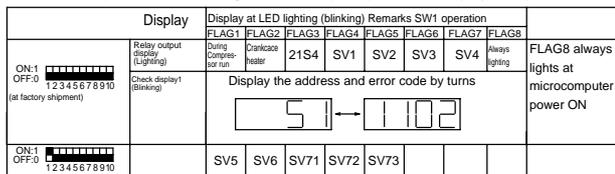

\*Please refer to the service handbook about other switch settings of LED display.


<LED display>




<Symbol explanation>

Symbol	Name
DCL	DC reactor (Power factor improvement)
ACCT-U,W	Current Sensor
ZNR4	Varistor
52C	Magnetic contactor (Inverter main circuit)
MF1	Fan motor (Radiator panel)
21S4	4-way valve
SV1,SV2	Solenoid valve (Discharge-suction bypass)
SV3-6	Solenoid valve (Heat exchanger capacity control)
SV71-73	Solenoid valve (Heat exchanger capacity control)
LEV1	Electronic expansion valve (Sub-cool coil bypass)
LEV2	Electronic expansion valve (Heat exchanger for inverter)
SLEV	Electronic expansion valve(Oil return)
63HS	High pressure sensor
63LS	Low pressure sensor
L2	Choke coil(Transmission)
IPM	Intelligent power module
TH1	Thermistor Discharge pipe temp. detect
TH2	Saturation evapo. temp. detect
TH5	Pipe temp. detect
TH6	OA temp. detect
TH7	liquid outlet temp. detect at Sub-cool coil
TH8	bypass outlet temp. detect at Sub-cool coil
TH9	High pressure liquid temp.
TH10	Compressor shell temp.
THINV	Outlet temp. detect of heat exchanger for inverter
THHS	Radiator panel temp. detect
X1-10	Aux. relay
X21-25	Ferrite core
FB1-2	Ferrite core
⊕	Earth terminal


<Controller box internal layout> (Upside)

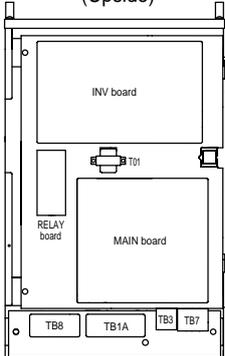


(Underside)

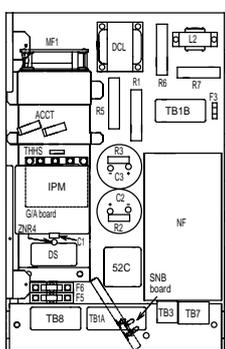

<Unit internal layout> (Upside)

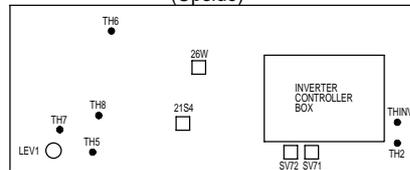

(Underside)

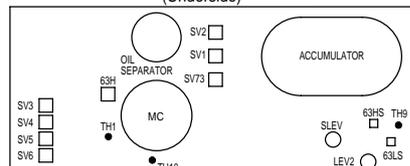

#### [4] Standard Operation Data

① Cooling operation

Items			Heat source unit	PQRY-P200				PQRY-P250				
Condition	Power source		V/Hz	380-415V/50Hz • 60Hz				380-415V/50Hz • 60Hz				
	Ambient temp.	Indoor	DB/WB	27.0/19.0				27.0/19.0				
	Circulated water temp. (Intet)		°C	30				30				
	Indoor unit	Quantity		Q'ty	4				4			
		Quantity in operation			4				4			
		Model		–	63	63	50	25	125	40	63	25
	Piping	Main pipe		m	5				5			
		Branch pipe			5	5	5	5	5	5	5	5
		Total piping length			25				25			
	Indoor unit fan notch			–	Hi	Hi	Hi	Hi	Hi	Hi	Hi	Hi
	Refrigerant volume			kg	11.4				12.2			
	Compressor volts / Frequency			V	380		415		380		415	
V/Hz				270/77		270/77		340/95		340/95		
Heat source unit			A	14.0		12.8		18.8		17.2		
LEV opening	Indoor unit		Pulse	330	460	430	300	410	330	460	300	
	BC controller (1, 3)			2000		240		2000		260		
	Oil return			180				330				
Pressure	High pressure/Low pressure		MPa	2.20/0.52				2.15/0.50				
	BC controller liquid/Intermediate			2.09/2.09				2.04/2.04				
Sectional temperature	Heat source unit	Discharge (TH1)		°C	101				99.0			
		Accumulator	Inlet		7				7			
			Outlet		10				10			
		Suction (Comp)			12				12			
		CS circuit (TH2)			4.9				4.3			
		Shell bottom (Comp)			70				78			
	Indoor unit	LEV inlet			26				30			
		Heat exchanger outlet			15				15			
αOC				0.23				0.23				

② Heating operation

Items			Heat source unit		PQRY-P200				PQRY-P250			
Condition	Power source		V/Hz	380-415V/50Hz • 60Hz				380-415V/50Hz • 60Hz				
	Ambient temp.	Indoor	DB/WB	20.0/–				20.0/–				
	Circulated water temp.		°C	20				20				
	Indoor unit	Quantity		Q'ty	4				4			
		Quantity in operation			4				4			
		Model		–	63	63	50	25	125	40	63	25
	Piping	Main pipe		m	5				5			
		Branch pipe			5	5	5	5	5	5	5	5
		Total piping length			25				25			
	Indoor unit fan notch		–	Hi	Hi	Hi	Hi	Hi	Hi	Hi	Hi	
	Refrigerant volume		kg	11.4				12.2				
	Compressor volts/Frequency		V	380		415		380		415		
			V/Hz	250/75		250/75		330/93		330/93		
Heat source unit total current		A	13.1		12.0		16.1		14.8			
LEV opening	Indoor unit		Pulse	600	950	750	400	750	600	950	400	
	BC controller (1, 3)			60		600		60		850		
	Oil return			115				115				
Pressure	High pressure/Low pressure		MPa	2.20/0.56				2.20/0.54				
	BC controller liquid/Intermediate			2.10/1.80				2.10/1.80				
Sectional temperature	Heat source unit	Discharge (TH1)		°C	75				79			
		Accumulator	Inlet		–1				–1			
			Outlet		–4				–2			
		Suction (Comp)			–1				–1			
		CS circuit	(TH2)		7				5			
		Shell bottom (Comp)			55				60			
	Indoor unit	LEV inlet			38				40			
		Heat exchanger outlet			80				85			
αOC			0.28				0.28					

① Cooling operation

Items			Heat source unit				PQHY-P200				PQHY-P250			
Condition	Power source		V/Hz		380-415V/50Hz • 60Hz				380-415V/50Hz • 60Hz					
	Ambient temp.	Indoor	DB/WB		27.0/19.0				27.0/19.0					
	Circulated water temp. (Intet)		°C		30				30					
	Indoor unit	Quantity		Q'ty		4				4				
		Quantity in operation				4				4				
		Model		-		63	63	50	25	125	40	63	25	
	Piping	Main pipe		m		5				5				
		Branch pipe				5	5	5	5	5	5	5	5	
		Total piping length				25				25				
	Indoor unit fan notch		-		Hi	Hi	Hi	Hi	Hi	Hi	Hi	Hi		
Refrigerant volume		kg		11.4				12.2						
Compressor volts / Frequency		V		380		415		380		415				
		V/Hz		270/77		270/77		340/95		340/95				
Heat source unit		A		14.0		12.8		18.8		17.2				
LEV opening	Indoor unit		Pulse		330	460	430	300	410	330	460	300		
	BC controller (1, 3)				2000		240		2000		260			
	Oil return				180				330					
Pressure	High pressure/Low pressure		MPa		2.20/0.52				2.15/0.50					
Sectional temperature	Heat source unit	Discharge (TH1)		°C		101				99.0				
		Accumulator	Inlet		7				7					
			Outlet		10				10					
		Suction (Comp)				12				12				
		CS circuit (TH2)				4.9				4.3				
		Shell bottom (Comp)				70				78				
	Indoor unit	LEV inlet				26				30				
		Heat exchanger outlet				15				15				
αOC				0.23				0.23						

② Heating operation

Items			Heat source unit				PQHY-P200				PQHY-P250			
Condition	Power source		V/Hz		380-415V/50Hz • 60Hz				380-415V/50Hz • 60Hz					
	Ambient temp.	Indoor	DB/WB		20.0/–				20.0/–					
	Circulated water temp.		°C		20				20					
	Indoor unit	Quantity		Q'ty		4				4				
		Quantity in operation				4				4				
		Model		–		63	63	50	25	125	40	63	25	
	Piping	Main pipe		m		5				5				
		Branch pipe				5	5	5	5	5	5	5	5	
		Total piping length				25				25				
	Indoor unit fan notch		–		Hi	Hi	Hi	Hi	Hi	Hi	Hi	Hi		
	Refrigerant volume		kg		11.4				12.2					
	Compressor volts/Frequency		V		380		415		380		415			
V/Hz			250/75		250/75		330/93		330/93					
Heat source unit total current		A		13.1		12.0		16.1		14.8				
LEV opening	Indoor unit		Pulse		600	950	750	400	750	600	950	400		
	BC controller (1, 3)				60		600		60		850			
	Oil return				115				115					
Pressure	High pressure/Low pressure		MPa		2.20/0.56				2.20/0.54					
Sectional temperature	Heat source unit	Discharge (TH1)		°C		75				79				
		Accumulator	Inlet		–1				–1					
			Outlet		–4				–2					
		Suction (Comp)				–1				–1				
		CS circuit	(TH2)		7				5					
		Shell bottom (Comp)				55				60				
	Indoor unit	LEV inlet				38				40				
		Heat exchanger outlet				80				85				
αOC				0.28				0.28						

## [5] Function of Dip SW and Rotary SW

### (1) Heat source unit

#### • PQR, PQHY

Switch	Function	Function according to switch operation		Switch set timing	
		When off	When on	When off	When on
SWU	1~2	Unit address setting		Set on 51~100 with the dial switch.	
SW1	1~8	For self diagnosis/operation monitoring		LED monitoring display	
	9~10	-		-	
SW2	1	Centralized control switch	Centralized control not connected.	Centralized control connected.	Before power is turned on.
	2	Deletion of connection information.	Storing of refrigeration system connection information.	Deletion of refrigeration system connection information.	Before power is turned on.
	3	Deletion of error history.	-	Deletion	During normal operation when power is on.
	4	Adjustment of refrigerant Volume	Ordinary control	Refrigerant volume adjustment operation.	During normal operation when power is on.
	5	-	-	-	-
	6	-	-	-	-
	7	Operation ON signal output switching Relay contact output TB8-1,2	The relay closes during compressor operation.	The relay closes during reception of the cooling or the heating operation signal from the controller. (Note: It is output even if the thermostat is OFF (when the compressor is stopped).)	At all times
	8	Disregard pump interlock trouble.	Normal	Disregard trouble	At all times
	9	-	-	-	-
	10	-	-	-	-
SW3	1	SW3-2 Function valid/invalid	SW3-2 Function invalid	SW3-2 Function valid	During normal operation when power is on.
	2	Indoor unit test operation	Stop all indoor units.	All indoor units test operation ON.	When SW3-1 is ON after power is turned on.
	3	CN51-3,5 Output switching	Water heat exchanger freeze prevention signal	Heat source unit abnormal output	At all times
	4	Freeze prevention operation	Normal	Freeze prevention operation*	At all times
	5	Target Te (α) in cooling-mode	-2°C	-5°C	At all times
	6	Pump down operation	Invalid	Valid	During Comp stop (only when power changes from OFF → ON)
	7	Target Tc (High pressure) in heating mode	50°C	53°C	During normal operation when power is on.
	8	-	-	-	-
	9	-	-	-	-
	10	Models	Model P200	Model P250	When switching on the power.
SW4	1	SW4-2 function valid/Invalid	Invalid	Valid	During normal operation when power is on.
	2	Configuration compensation value	Changes as shown below by on → off change 0% → 3% → 6% → 9% → 12% → -6% → -3% → 0%		When SW4-1 in ON.
	3	-	-	-	-

#### Note:

- SWU1~2=00 when shipped from the factory. Other factory settings are indicated by shaded portions.
- If the address is set from 01 to 50, it automatically becomes 100.

#### \* Freeze prevention operation

When the water temp. (TH6) below less 5°C during compressor is stopping, the compressor starts to run with cooling mode to prevent the water freeze.

**(2) Indoor unit**

DIP SW1, 3

Switch	SW name	Operation by SW		Switch set timing		Remarks
		OFF	ON	OFF	ON	
SW1	1	Room temp. sensor position	Indoor unit inlet	Built in remote controller		
	2	Clogged filter detect.	None	Provided		
	3	Filter duration	100h	2500h		
	4	OA intake	Ineffective	Effective		Always ineffective for PKFY-P.VAM
	5	Remote display select.	Fan output display	Thermo. ON signal display		
	6	Humidifier control	At stationary heating	Always at heat.		
	7	Heating thermo. OFF airflow	Very low speed	Low speed		
	8	Heating thermo. OFF airflow	SW1-7 setting	Set airflow		
	9	Power failure automatic return	Ineffective	Effective		
	10	Power source start/stop	Ineffective	Effective		
SW3	1	Model selection	Heat pump	Cool.only	At unit stopping (at remote controller OFF)	
	2	Louver <small>(Cooling capacity saving for PKFY-P.VAM, effective/ineffective)</small>	None	Provided		
	3	Vane	None	Provided		
	4	Vane swing function	None	Provided		Not provided for PKFY-P.VAM Provided for PLFY-P.VGM (ON) setting
	5	Vane horizontal angle	1st setting	2nd setting		
	6	Vane angle set for cooling	Down blow B, C	Horizontal		Always down blow B,C for PKFY-P.VAM Horizontal (ON) setting for PLFY-P.VLMD-A
		Vane first angle	Effective	Ineffective		PLFY-VLMD-B only
	7	-	-	-		
	8	Heating 4deg up	Effective	Ineffective		Ineffective (ON) setting for floor standing
	9	-	-	-		
10	-	-	-			

Note 1: The shaded part  indicates the setting at factory shipment. (For the SW not being shaded, refer to the table below.)

2: When both SW1-7 and SW1-8 are being set to ON, the fan stops at the heating thermostat of OFF.

Model Switch	PLFY-P			PEFY-P				PDFY-P	PFFY-P	PCFY-P	PKFY-P		PMFY-P
	VAM-A(2)	VLMD-B	VKM-A	VML-A	VMH-A	20-80VMM-A	100-140VMM-A	VM-A	VLRM-A, VLEM-A	VGM-A	VAM-A	VGM-A	VBM-A
SW1	3	OFF	ON	OFF	ON	OFF	OFF	ON	OFF	ON	OFF	OFF	OFF
	6	OFF				ON					OFF		OFF
	7		OFF		ON	OFF	ON			OFF			OFF
SW3	3		ON			OFF					ON		ON
	4	ON	ON	ON		OFF				ON	OFF	ON	ON
	6	OFF	ON			OFF							OFF
	8					OFF			ON		OFF		OFF

Note 3: The DipSW setting is only effective during unit stopping (remote controller OFF) for SW1,2,3 and 4 commonly and the power source is not required reset.)

Setting of DIP SW2

Model	P20	P25	P32	P40	P50	P63
Capacity (model name) code	4	5	6	8	10	13
SW2 setting	ON OFF					



Model	P71	P80	P100	P125	P140	P200	P250
Capacity (model name) code	14	16	20	25	28	40	50
SW2 setting	ON OFF						

Setting of DIP SW4

Setting of DIP SW5

Model	Circuit board used	SW4				
		1	2	3	4	5
PMFY-P-VBM-A	Phase control	ON	OFF	ON	OFF	-
PLFY-P125VLMD-B		OFF	ON	OFF	ON	OFF
PDFY-P20 ~ 80VM-A		ON	OFF	ON	OFF	-
PLFY-P40 ~ 63VKM-A		OFF	OFF	OFF	ON	-
PLFY-P80 ~ 125VAM-A(2)		ON	OFF	OFF	ON	-
PCFY-P-VGM-A		OFF	ON	OFF	ON	-
PKFY-P-VGM-A		OFF	OFF	ON	ON	-
PKFY-P-VAM-A		-	-	-	-	-
PEFY-P20 ~ 80VMM-A		ON	ON	OFF	OFF	-
PLFY-P20~100VLMD-B		OFF	ON	OFF	ON	OFF
PFFY-P-VLEM-A, P-VLRM-A	Relay selection	OFF	OFF	OFF	-	-
PEFY-P20 ~ 32VML-A		ON	ON	ON	-	-
PEFY-P40 ~ 140VMH-A		OFF	OFF	OFF	-	-
PEHY-P200-250VMH-A		ON	OFF	OFF	-	-
PDFY-P100-125VM-A		OFF	OFF	ON	-	-
PEFY-P100 ~ 140VMM-A		ON	ON	ON	OFF	-



Switch	Function	Operation by switch	Switch set timing																
SWA	Ceiling height setting	(PLFY-P-VKM-A) (PCFY-P-VGM-A)  *The ceiling height is changed by SWB setting. <table border="1"> <thead> <tr> <th colspan="2">Ceiling height</th> </tr> </thead> <tbody> <tr> <td>3</td> <td>3.5 m</td> </tr> <tr> <td>2</td> <td>2.8 m</td> </tr> <tr> <td>1</td> <td>2.3 m</td> </tr> </tbody> </table>	Ceiling height		3	3.5 m	2	2.8 m	1	2.3 m	Always after powering								
Ceiling height																			
3	3.5 m																		
2	2.8 m																		
1	2.3 m																		
SWA	External static pressure setting	(PDFY-P20 ~ 80VM-A, PEFY-P20 ~ 80VMM-A)  100Pa 50Pa 30Pa *For other models, change the setting of static pressure by replacing the connector.	Always after powering																
SWA	For options	(PLFY-P125VLMD-B)  *As this switch is used by interlocking with SWC, refer to the item of SWC for detail.	Always after powering																
SWB	Setting of air outlet opening	(PLFY-P-VKM-A)  <table border="1"> <thead> <tr> <th>SWA \ SWB</th> <th>1</th> <th>2</th> <th>3</th> </tr> </thead> <tbody> <tr> <td>2-way</td> <td>3.5 m</td> <td>3.8 m</td> <td>3.8 m</td> </tr> <tr> <td>3-way</td> <td>3.0 m</td> <td>3.3 m</td> <td>3.5 m</td> </tr> <tr> <td>4-way</td> <td>2.7 m</td> <td>3.0 m</td> <td>3.5 m</td> </tr> </tbody> </table>	SWA \ SWB	1	2	3	2-way	3.5 m	3.8 m	3.8 m	3-way	3.0 m	3.3 m	3.5 m	4-way	2.7 m	3.0 m	3.5 m	Always after powering
SWA \ SWB	1	2	3																
2-way	3.5 m	3.8 m	3.8 m																
3-way	3.0 m	3.3 m	3.5 m																
4-way	2.7 m	3.0 m	3.5 m																
SWC	Airflow control	(PLFY-P-VKM-A, PCFY-P-VGM-A, PKFY-P-VGM-A, PDFY-P-VM-A)  Option Standard *Set to the option to install the high efficiency filter	Always after powering																

**(3) BC controller unit**  
DIP SW4

Switch	Function	Function according to switch operation	
		When off	When on
SW4	1	Models	V-E type
	2-8	-	-

\*If the EPROM for the BC controller is WF30334, the controller is exclusively V-D type.

## [6] External Input/Output Specifications

### (1) Output

#### ① Operation ON signal

Terminal No.	TB8-1, 2
Output	Relay contacts output    Rated voltage: L1 - N: 220 ~ 240 V Rated load: 1 A
Operation	<ul style="list-style-type: none"> <li>When DIP switch 2-7 is OFF The relay closes during compressor operation.</li> <li>When DIP switch 2-7 is ON The relay closes during reception of the cooling or the heating operation signal from the controller. (Note: It is output even if the thermostat is OFF (when the compressor is stopped).)</li> </ul>

#### ② COMP ON/OFF signal

Connector No.	CN51-3, 4                      Connector : B5B-XH-A (JST)
Output	DC 12 V
Operation	DC 12 V is output during compressor operation.

#### ③ Water freeze / trouble signal

Connector No.	CN51-3, 5                      Connector : B5B-XH-A (JST)
Output	DC 12 V
Operation	<ul style="list-style-type: none"> <li>When DIP switch 3-3 is OFF If the water temperature (TH 6) drops below 5°C while the unit is stopped, DC 12 V is output.</li> <li>When DIP switch 3-3 is ON DC 12 V is output when the heat source unit is stopped abnormally.</li> </ul>

### (2) Input

#### ① Pump Interlock

Terminal No.	TB8-3, 4
Input	Level signal
Operation	If the circuit between TB8-3 and TB8-4 is open, compressor operation is prohibited.

#### ② Demand

Connector No.	CN3D-1, 3                      Connector : B3B-EH (JST)
Input	Level signal
Operation	If the circuit between CN3D-1 and CN3D-3 is opened, compressor operation is prohibited.

### 3 TEST RUN

#### 1 Before Test Run

##### (1) Check points before test run

1	Neither refrigerant leak nor loose power source/ transmission lines should be found.
2	Confirm that the resistance between the power source terminal block and the ground exceeds 2MΩ by measuring it with a DC500V megger. Do not run if it is lower than 2MΩ. Note) Never apply the megger to the MAIN board. If applied, the MAIN board will be broken.
3	Confirm that the Ball valve at both gas and liquid sides is being fully opened. Note) Certainly close the cap.
4	Be sure that the crankcase heater has been powered by turning the main power source on at least 12 hours before starting the test run. The shorter powering time causes compressor trouble.

##### (2) Caution at inverter check


Because the inverter power portion in heat source unit electrical part box have a lot of high voltage portion, be sure to follow the instructions shown below.

1	During energizing power source, never touch inverter power portion because high voltage (approx. 580V) is applied to inverter power portion.
2	When checking,
	1 Shut off main power source, and check it with tester, etc.
	2 Allow 10 minutes after shutting off main power source.
	3 Open the MAIN board mounting panel, and check whether voltage of both ends of electrolytic capacitor is 20V or less.

**(3) Check points for test run when mounting options**


Built-in optional parts	Content of test run	Check point	Result
Mounting of drain water lifting-up mechanism	1 Release connector of pump circuit, check error detection by pouring water into drain pan water inlet.	Local remote controller displays code No. "2503", and the mechanism stops.	
		No overflow from drain pan.	
	2 After that, connect connector of circuit.	Drain water comes out by operations of drain pump.	
	3 Check pump operations and drainage status in cooling (test run) mode.	Sound of pump operations is heard, and drain water comes out.	
Mounting of permeable film humidifier	Check humidifier operations and water supply status in heating (test run) mode.	No water leak from connecting portions of each water piping.	
		Water is supplied to water supply tank, and float switch is operating.	

**(4) Attention for mounting drain water lifting-up mechanism**

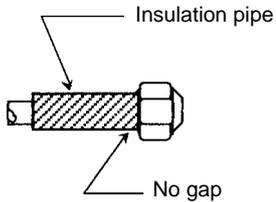
Work	Content of test run	Check point	Result
Disassembling and assembling of drain water lifting-up mechanism	1 Lead wire from control box not damaged.		
	2 Rubber cap properly inserted to drain water outlet of drain pan?		
	3 Insulation pipe of gas and liquid pipes dealt with as shown in the right figure?		
	4 Drain pan and piping cover mounted without gap?		
	5 Drain pan hooked on cut projection of the mechanism?		
Mounting of float switch	Float switch installed without contacting with drain pan?	1 Float switch moves smoothly.	
		2 Float switch is mounted on mounting board straightly without deformation.	
		3 Float switch does not contact with copper pipe.	
Electric wiring	1 No mistakes in wiring?	Wiring procedure is exactly followed.	
	2 Connectors connected surely and tightly?	Connector portion is tightly hooked.	
	3 No tension on lead wire when sliding control box?		

### (5) Check points for system structure

Check points from installation work to test run.

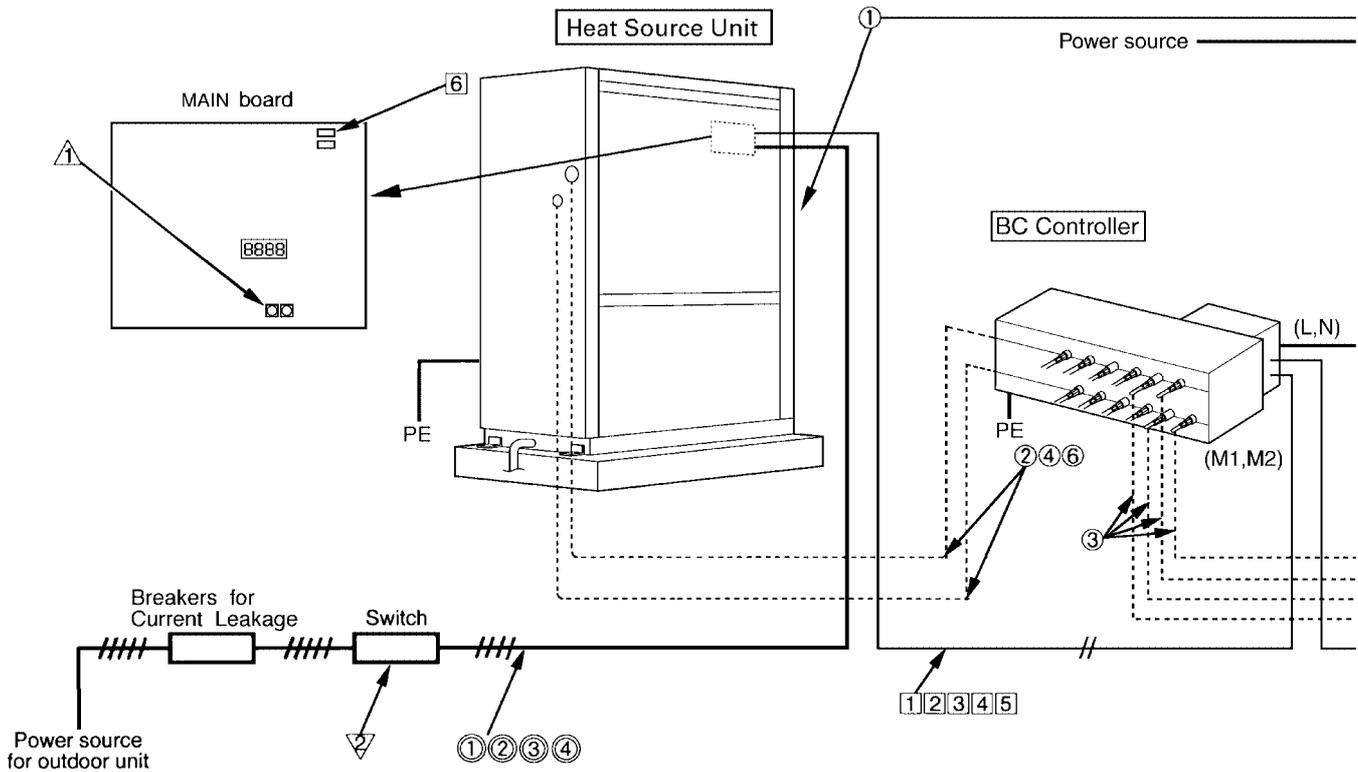

Classification	Portion	Check item	Trouble
Installation and piping	①	Instruction for selecting combination of heat source unit, and indoor unit followed? (Maximum number of indoor units which can be connected, connecting model name, and total capacity.)	Not operate.
	②	Follow limitation of refrigerant piping length? For example, 70m or less (total length : 220m) at the farthest.	Not cool (at cooling). Not heat (at heating).
	③	Connecting piping size of branch piping correct?	
	④	Refrigerant piping diameter correct?	
	⑤	Refrigerant leak generated at connection?	Not cool, not heat, error stop.
	⑥	Insulation work for piping properly done?	Condensation drip in piping.
	⑦	Specified amount of refrigerant replenished?	Not cool, not heat, error stop.
	⑧	Pitch and insulation work for drain piping properly done?	Water leak, condensation drip in drain piping.
Power source wiring	①	Specified switch capacity and wiring diameter of main power source used?	Error stop, not operate.
	②	Proper grounding work done on heat source unit?	Electric shock.
	③	The phases of the L line (L1, L2, L3) correct?	Error stop, not operate.
	④	L line and N line connected correct?	The some electric pars should be damaged.

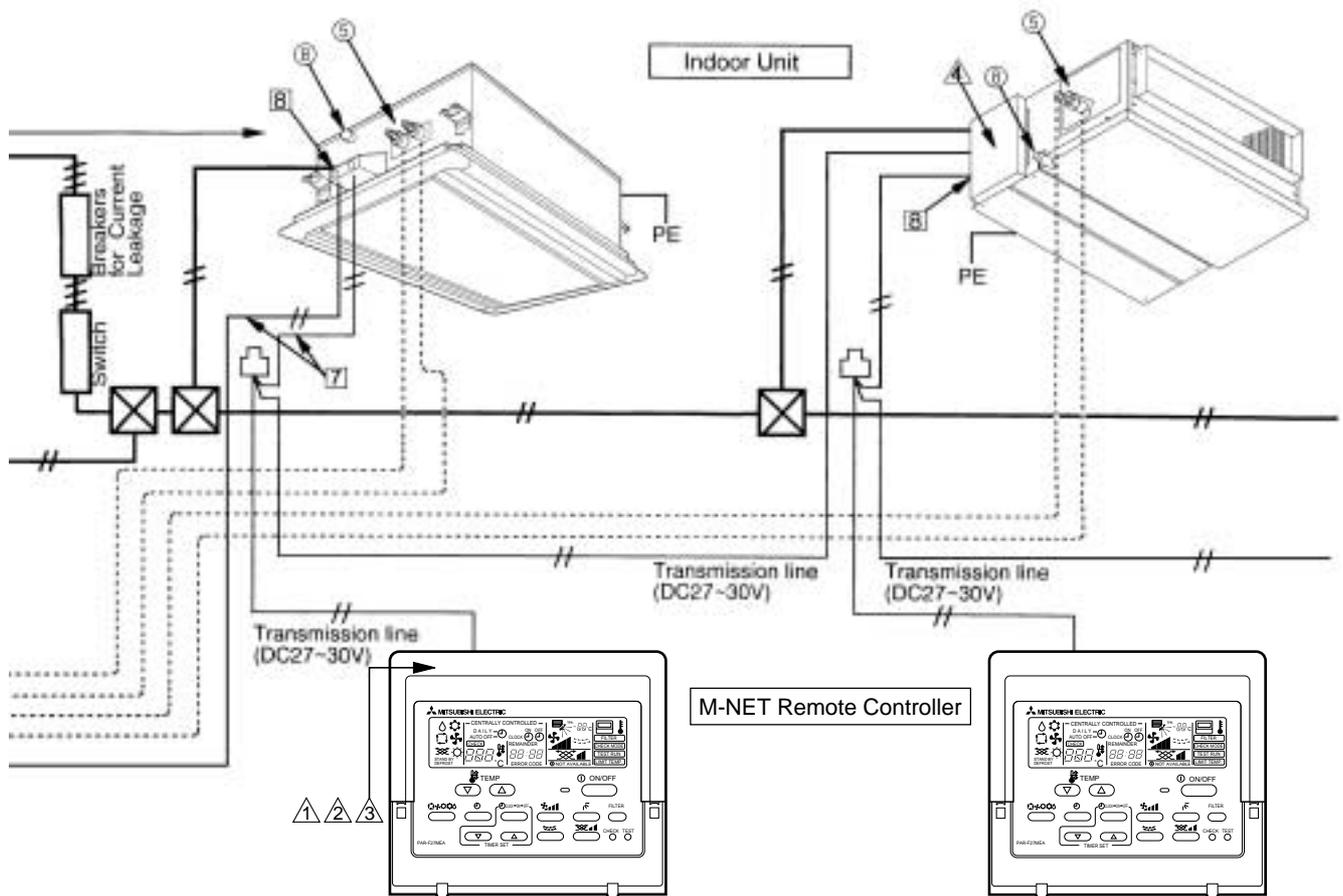


Classification	Portion	Check item	Trouble
Transmission line	①	Limitation of transmission line length followed? For example, 200m or less (total length : 500m) at the farthest.	Erroneous operation, error stop.
	②	1.25mm <sup>2</sup> or more transmission line used? (Remote controller 10m or less 0.75mm <sup>2</sup> )	Erroneous operation, error stop.
	③	2-core cable used for transmission line?	Error stop in case multiple-core cable is used.
	④	Transmission line apart from power source line by 5cm or more?	Erroneous operation, error stop.
	⑤	One refrigerant system per transmission line?	Not operate.
	⑥	The short circuit connector is changed form CN41 to CN40 on the MAIN board when the system is centralized control? (Just one outdoor unit. Not all outdoor units.)	Not operate.
	⑦	• No connection trouble in transmission line?	Error stop or not operate.
	⑧	Connection of wrong remote controller line terminals? • MA Remote controller : TB15 • M-NET Remote controller : TB5	Never finish the initial mode.
System set	①	Address setting properly done? (M-NET Remote controller, indoor unit and outdoor unit.)	Error stop or not operate.
	②	Setting of address No. done when shutting off power source?	Can not be properly set with power source turned on.
	③	Address numbers not duplicated?	Not operate.
	④	Turned on SW3-8 on indoor unit circuit board when mounting room thermistor sensor?	Set temperature not obtained at heating operations (Thermostat stop is difficult)
Before starting	①	Refrigerant piping ball valve (Liquid pressure pipe, gas pressure pipe) opened?	Error stop.
	②	Turn on power source 12 hours before starting operations?	Error stop, compressor trouble.

## [2] Address Setting

### (1) Switch operation

In order to constitute CITY MULTI in a complete system, switch operation for setting the unit address No. and connection No. is required.

- ① Unit address No. group No. and connection No.  
The unit address No. is determined by the address setting switch of the heat source unit, indoor unit and remote controller.

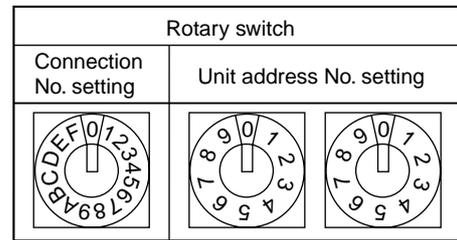

### ② Caution for switch operations

1	Be sure to shut off power source before switch setting. If operated with power source on, switch can not operate properly.															
2	<p>Address switch shall follow decimal system with 2 digits. Set 000 ~ 250</p> <table style="width: 100%; border: none;"> <tr> <td style="width: 33%; text-align: center;"> <p>Heat source unit Indoor unit</p> </td> <td style="width: 33%; text-align: center;"> <p>Remote controller</p> </td> <td style="width: 33%; border: 1px solid black;"> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td>Indoor unit</td><td>01~50</td></tr> <tr><td>Heat source unit</td><td>51~99, 100</td></tr> <tr><td>BC controller</td><td>51~99, 100</td></tr> <tr><td>Remote controller (Main)</td><td>101~150</td></tr> <tr><td>Pair remote controller (Sub)</td><td>151~199, 200</td></tr> <tr><td>MJ-103</td><td>000, 201~250</td></tr> </table> </td> </tr> </table>	<p>Heat source unit Indoor unit</p>	<p>Remote controller</p>	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td>Indoor unit</td><td>01~50</td></tr> <tr><td>Heat source unit</td><td>51~99, 100</td></tr> <tr><td>BC controller</td><td>51~99, 100</td></tr> <tr><td>Remote controller (Main)</td><td>101~150</td></tr> <tr><td>Pair remote controller (Sub)</td><td>151~199, 200</td></tr> <tr><td>MJ-103</td><td>000, 201~250</td></tr> </table>	Indoor unit	01~50	Heat source unit	51~99, 100	BC controller	51~99, 100	Remote controller (Main)	101~150	Pair remote controller (Sub)	151~199, 200	MJ-103	000, 201~250
<p>Heat source unit Indoor unit</p>	<p>Remote controller</p>	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td>Indoor unit</td><td>01~50</td></tr> <tr><td>Heat source unit</td><td>51~99, 100</td></tr> <tr><td>BC controller</td><td>51~99, 100</td></tr> <tr><td>Remote controller (Main)</td><td>101~150</td></tr> <tr><td>Pair remote controller (Sub)</td><td>151~199, 200</td></tr> <tr><td>MJ-103</td><td>000, 201~250</td></tr> </table>	Indoor unit	01~50	Heat source unit	51~99, 100	BC controller	51~99, 100	Remote controller (Main)	101~150	Pair remote controller (Sub)	151~199, 200	MJ-103	000, 201~250		
Indoor unit	01~50															
Heat source unit	51~99, 100															
BC controller	51~99, 100															
Remote controller (Main)	101~150															
Pair remote controller (Sub)	151~199, 200															
MJ-103	000, 201~250															
3	No units with identical unit address shall exist in one system. If set erroneously, system can not operate.															

### (2) Address setting and switch operations

- ① In case of system with a single system  
(In case higher rank controller such as remote controller for centralized control is not connected)

Unit	Address setting	Example	Note
Indoor unit	01~50		
Heat source unit	51~99, 100		The smallest address of indoor unit in same refrigerant system + 50 *If the address is to be 100, use "50."
BC controller	51~99, 100		The address of Heat source unit + 1 *If the address is to be 100, use "50."
Remote controller	Remote controller (Main)	1 Fixed 	The smallest address of indoor unit in the group + 100 *The place of "100" is fixed to "1"
	Remote controller (Sub)	1 Fixed 	The address of main remote controller + 50 *The address automatically becomes "200" if it is set as "00"
	MJ-103	000, 201~250 	
Fresh Master	1~50		<ul style="list-style-type: none"> <li>The Fresh Master system allows you to select operations using the remote controller or using the indoor unit. Use the dip switch (SW3-1) to make this selection. See the section "Fresh Master operation/Remote controller switching" for settings.</li> <li>For operations using the remote controller, use the same setting method as for the indoor unit.</li> <li>For operations using the indoor unit, settings should be within the range 01 – 50, without respect to the group.</li> </ul>
Lossnay unit	1~50		Set within the range 01 – 50 with no duplications.


② Branch number switch (Indoor Units and Fresh Master)

Match the indoor unit's refrigerant pipe with the BC controller's end connection number.

When combining branches, choose the smallest connection number in the series.

The indoor unit capacity limit for connecting to a branch is 80. Max. 3sets for 1 connection.

When selecting connection number 16, choose 0 as the setting for the branch number switch.

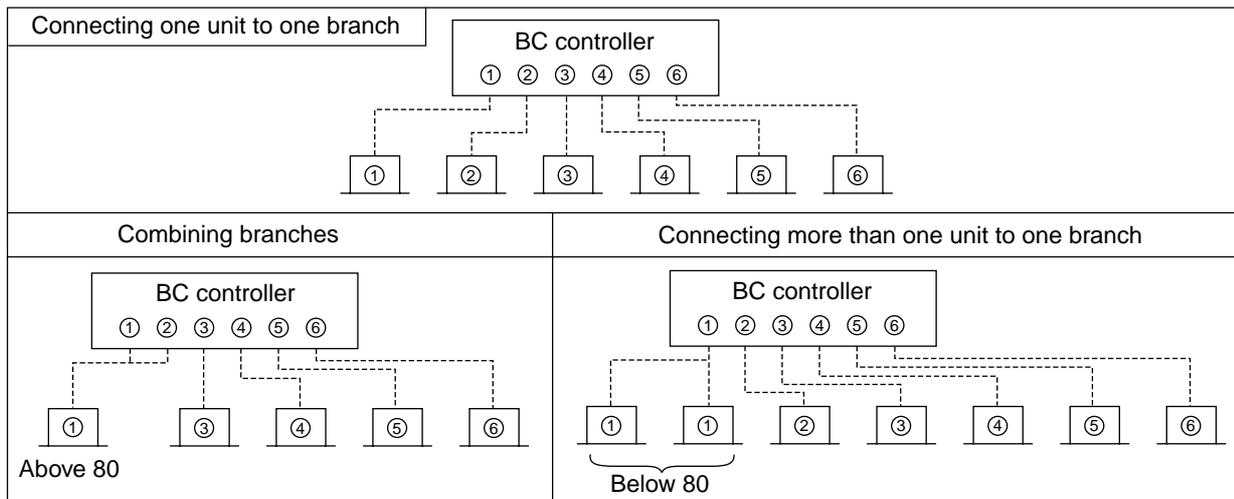

③ In the case of group operations of indoor units of different refrigerant system



(Including the case of connecting with higher rank controller such as remote controller for centralized controller).

Group setting shall be done with remote controller. ( When the centralized remote controller is connected, the setting should be done with the centralized remote controller.) Address setting can be done on each unit freely.

Regarding transmission wiring, provide 2-wire jumper system (Centralized system transmission line) to outdoor units to be connected to indoor unit in the same group, and mount short circuit connector on CN41 to CN40 for replacement for one of the outdoor units. (However, when the higher rank controller like that for centralized controller is connected, do not replace the short circuit connector to CN40.)

### (3) Examples of switch settings


System diagram	Description																					
<p>① Individual operation</p> <p>Heat source unit 51, TB3, BC controller 52, Indoor unit 01, 02, 03, Remote controller 101, 102, 103.</p>	<p>[Switch settings]</p> <p>(1) Address switch</p> <table border="1" data-bbox="890 383 1442 613"> <thead> <tr> <th>Unit</th> <th>Range</th> <th>Setting</th> </tr> </thead> <tbody> <tr> <td>Indoor unit</td> <td>01~50</td> <td>–</td> </tr> <tr> <td>Remote controller</td> <td>101~150 <small>Note 1</small></td> <td>Indoor unit setting + 100</td> </tr> <tr> <td>Heat source unit</td> <td>51~100 <small>Note 2</small></td> <td>Smallest address among indoor units + 50</td> </tr> <tr> <td>BC controller</td> <td>51~100 <small>Note 2</small></td> <td>Heat source unit + 1</td> </tr> </tbody> </table> <p>Note 1. For remote controllers, it is not necessary to set digits in the hundreds column.            Note 2. When setting heat source unit address or BC controller address to 100, set the address setting switch to 50.</p> <p>(2) Branch number switch            Match the indoor unit's refrigerant pipe with the BC controller's end connection number.</p>	Unit	Range	Setting	Indoor unit	01~50	–	Remote controller	101~150 <small>Note 1</small>	Indoor unit setting + 100	Heat source unit	51~100 <small>Note 2</small>	Smallest address among indoor units + 50	BC controller	51~100 <small>Note 2</small>	Heat source unit + 1						
Unit	Range	Setting																				
Indoor unit	01~50	–																				
Remote controller	101~150 <small>Note 1</small>	Indoor unit setting + 100																				
Heat source unit	51~100 <small>Note 2</small>	Smallest address among indoor units + 50																				
BC controller	51~100 <small>Note 2</small>	Heat source unit + 1																				
<p>② Group operation</p> <p>Heat source unit 51, TB3, BC controller 52, Indoor unit 01, 02, 03, Remote controller 101, 103, 153.</p>	<p>[Switch settings]</p> <p>(1) Address switch</p> <table border="1" data-bbox="890 949 1442 1525"> <thead> <tr> <th>Unit</th> <th>Range</th> <th>Setting</th> </tr> </thead> <tbody> <tr> <td>IC (Main)</td> <td>01~50</td> <td>Smallest address among several indoor units that form a single group.</td> </tr> <tr> <td>IC (Sub)</td> <td>01~50</td> <td>Address other than the IC (Main) among several indoor units that form a single group. Use numerical order starting after the IC (Main).</td> </tr> <tr> <td>Remote controller (Main)</td> <td>101~150 <small>Note 1</small></td> <td>Address of IC (Main) within the same group + 100</td> </tr> <tr> <td>Remote controller (Sub)</td> <td>151~200 <small>Note 1</small></td> <td>Address of IC (Main) within the same group + 150</td> </tr> <tr> <td>Heat source unit</td> <td>51~100 <small>Note 2</small></td> <td>Smallest address among indoor units + 50</td> </tr> <tr> <td>BC controller</td> <td>51~100 <small>Note 2</small></td> <td>Heat source unit + 1</td> </tr> </tbody> </table> <p>Notes 1 and 2 : same as above.</p> <p>(2) Branch number switch            Same as ① Individual operation.</p>	Unit	Range	Setting	IC (Main)	01~50	Smallest address among several indoor units that form a single group.	IC (Sub)	01~50	Address other than the IC (Main) among several indoor units that form a single group. Use numerical order starting after the IC (Main).	Remote controller (Main)	101~150 <small>Note 1</small>	Address of IC (Main) within the same group + 100	Remote controller (Sub)	151~200 <small>Note 1</small>	Address of IC (Main) within the same group + 150	Heat source unit	51~100 <small>Note 2</small>	Smallest address among indoor units + 50	BC controller	51~100 <small>Note 2</small>	Heat source unit + 1
Unit	Range	Setting																				
IC (Main)	01~50	Smallest address among several indoor units that form a single group.																				
IC (Sub)	01~50	Address other than the IC (Main) among several indoor units that form a single group. Use numerical order starting after the IC (Main).																				
Remote controller (Main)	101~150 <small>Note 1</small>	Address of IC (Main) within the same group + 100																				
Remote controller (Sub)	151~200 <small>Note 1</small>	Address of IC (Main) within the same group + 150																				
Heat source unit	51~100 <small>Note 2</small>	Smallest address among indoor units + 50																				
BC controller	51~100 <small>Note 2</small>	Heat source unit + 1																				

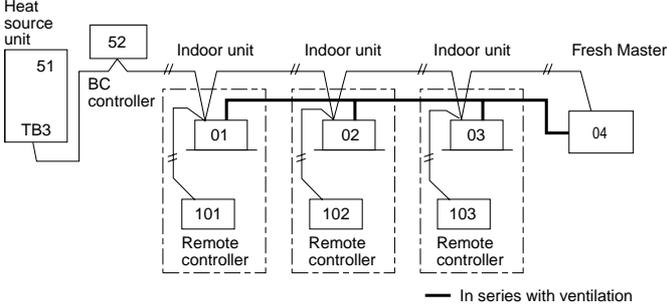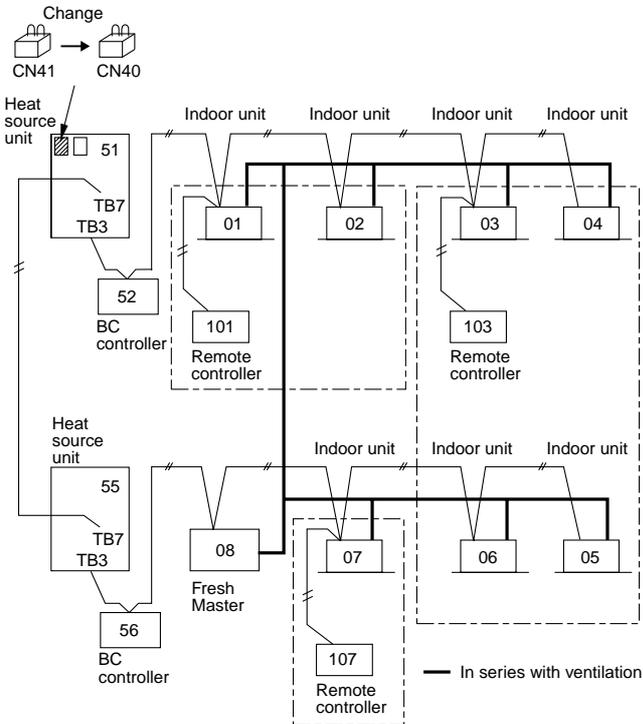System diagram	Description																											
<p>③ System for operating with OA processing unit (Lossnay)</p> 	<p>[Switch settings] This is the same as ① Individual operation. However, keep the Fresh Master address within the 1 ~50 range to avoid duplication with other indoor units.</p> <p>[Registering with a remote controller] Registers operation of Fresh Master and indoor units using the remote controller.</p> <table border="0" data-bbox="986 510 1378 568"> <tr> <td>Indoor unit</td> <td></td> <td>OA processing unit</td> </tr> <tr> <td>01, 02, 03</td> <td>← →</td> <td>04</td> </tr> </table>	Indoor unit		OA processing unit	01, 02, 03	← →	04																					
Indoor unit		OA processing unit																										
01, 02, 03	← →	04																										
<p>④ System for operating multiple-refrigerant + OA processing unit (Lossnay)</p> 	<p>[Switch settings] Same as ① Individual operation.</p> <div style="border: 1px solid black; border-radius: 15px; padding: 10px; margin: 10px 0;"> <p>*Remote controllers for groups using different refrigerants connect to transfer line of the latest indoor unit in the group.</p> </div> <p>[Managing electrical supply connector CN40] Changes the single electrical supply connector of an outdoor unit group from CN41 to CN40.</p> <p>[Registration using a remote controller]</p> <p>① Group setting After power is turned on, this changes indoor units and network remote controllers to group setting.</p> <table border="0" data-bbox="963 1308 1369 1473"> <tr> <td>Remote controller</td> <td></td> <td>Indoor unit</td> </tr> <tr> <td>101</td> <td>← →</td> <td>01, 02</td> </tr> <tr> <td>103</td> <td>← →</td> <td>03, 04</td> </tr> <tr> <td></td> <td></td> <td>05, 06</td> </tr> <tr> <td>107</td> <td>← →</td> <td>07</td> </tr> </table> <p>② Operation registration After power is turned on, this activates operation registration for Fresh Master and indoor units using remote controllers.</p> <table border="0" data-bbox="948 1639 1378 1765"> <tr> <td>Indoor unit</td> <td></td> <td>OA processing unit</td> </tr> <tr> <td>01, 02, 03</td> <td></td> <td></td> </tr> <tr> <td>04, 05, 06</td> <td>← →</td> <td>08</td> </tr> <tr> <td>07</td> <td></td> <td></td> </tr> </table>	Remote controller		Indoor unit	101	← →	01, 02	103	← →	03, 04			05, 06	107	← →	07	Indoor unit		OA processing unit	01, 02, 03			04, 05, 06	← →	08	07		
Remote controller		Indoor unit																										
101	← →	01, 02																										
103	← →	03, 04																										
		05, 06																										
107	← →	07																										
Indoor unit		OA processing unit																										
01, 02, 03																												
04, 05, 06	← →	08																										
07																												

### System diagram

### Description

#### ⑤ PAC-SC30GR connection

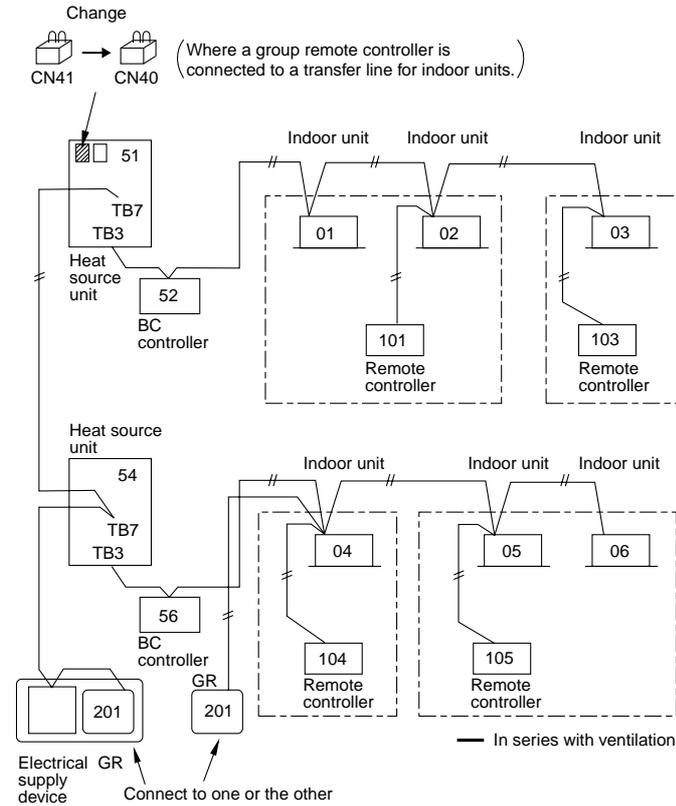

#### [Switch settings]

Address switch settings are the same as ① Individual operation.

This turns on the central manager switch (SW2-1) of the outdoor unit.

\*Remote controllers for groups using different refrigerants connect to transfer line of the latest indoor unit in the group.

#### [Managing electrical supply connector CN40]

When a group remote controller (GR) is connected to a transfer line for indoor units, this changes the single electrical supply connector in an outdoor unit group from CN41 to CN40.

When connected to a transfer line for central managers, leave it as is (on CN41).  
(receiving electrical power from an electrical supply device)


#### [Registration using a group remote controller]

- ① After power is turned on, this changes indoor units to group setting with a group remote controller
- ② This sets the relations between indoor units and remote controllers using a group remote controller.

Indoor unit		Remote controller
101	← →	01, 02
103	← →	03
104	← →	04
107	← →	05, 06

Group remote controllers can be connected to both indoor/outdoor unit transfer lines and central manager transfer lines.

#### ⑥ MJ-103 MTR connection

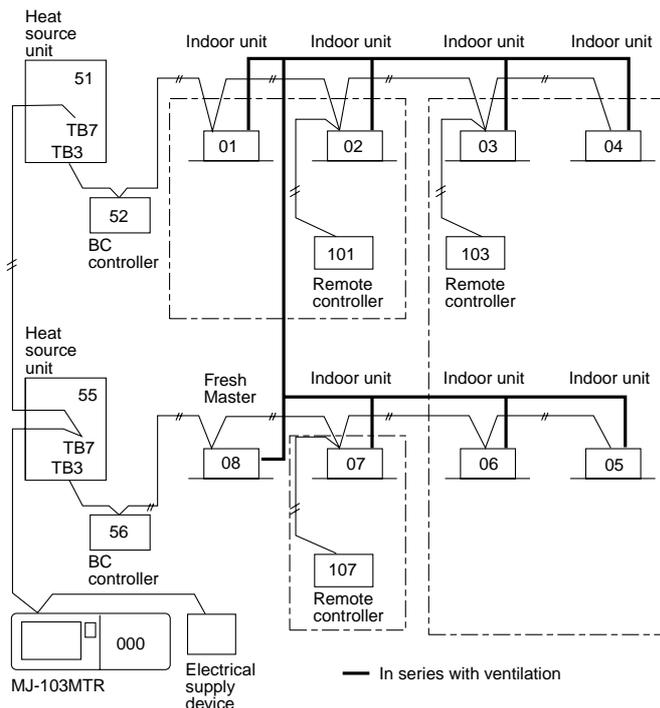

#### [Switch settings]

Address switch settings are the same as ① Individual operation

This turns on the central manager switch (SW2-1) of the outdoor unit.

#### [Registration using a central controller]

##### ① Group setting

- After turning on the power, this activates group setting for indoor units using a central controller.
- This activates settings for indoor units and remote controllers using a central controller.

Remote controller		Indoor unit
101	← →	01, 02
103	← →	03, 04
107	← →	05, 06
		07

##### ② Settings for Lossnay and indoor units are made using a central controller.

Indoor unit		Fresh Master
01-07	← →	08


### [3] Test Run Method

Operation procedure	
①	Turn on universal power supply at least 12 hours before getting started → Displaying “HO” on display panel for about two minutes
②	Press <b>TEST RUN</b> button twice → Displaying “TEST RUN” on display panel
③	Press  selection button → Make sure that air is blowing out
④	Press  select button to change from cooling to heating operation, and vice versa → Make sure that warm or cold air is blowing out
⑤	Press  adjust button → Make sure that air blow is changed
⑥	Press  or  button to change wind → Make sure that horizontal or downward blow is adjustable.
⑦	Make sure that indoor unit fans operate normally
⑧	Make sure that interlocking devices such as ventilator operate normally if any
⑨	Press <b>ON/OFF</b> button to cancel test run → Stop operation
<p>Note 1: If check code is displayed on remote controller or remote controller does not operate normally.</p> <p>2: Test run automatically stops operating after two hours by activation of timer set to two hours.</p> <p>3: During test run, test run remaining time is displayed on time display section.</p> <p>4: During test run, temperature of liquid pipe in indoor unit is displayed on remote controller room temperature display section.</p> <p>5: When pressing  adjust button, depending on the model, “NOT AVAILABLE” may be displayed on remote controller. However, it is not a malfunction.</p> <p>6: When pressing  or  button, depending on the model, “NOT AVAILABLE” may be displayed on remote controller. However, it is not a malfunction.</p>	

## 4 GROUPING REGISTRATION OF INDOOR UNITS WITH M-NET REMOTE CONTROLLER

### (1) Switch function

- The switch operation to register with the remote controller is shown below:

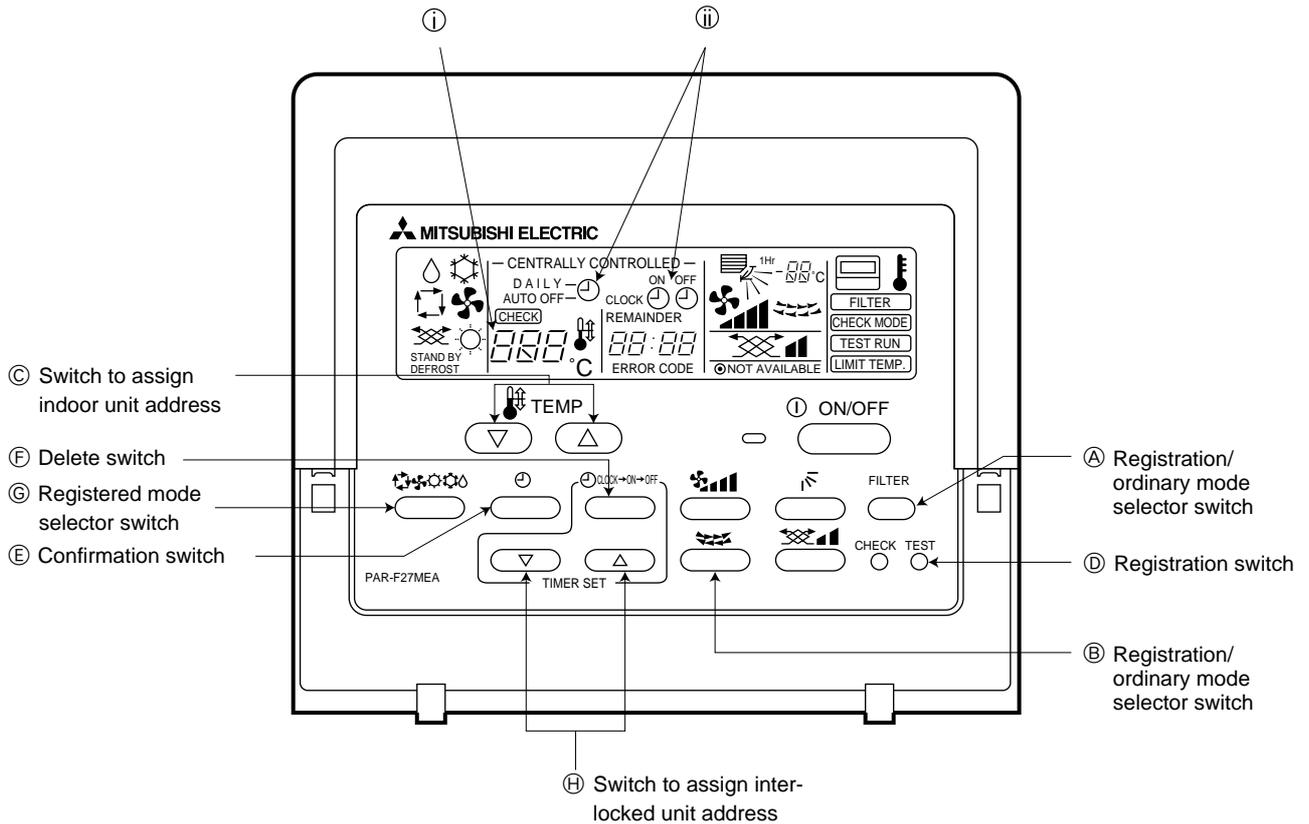

Name	Symbol of switch	Name of actual switch	Description
Registration/ordinary mode selection switch	Ⓐ + Ⓑ	(FILTER) +	This switch selects the ordinary mode or registered mode (ordinary mode represents that to operate indoor units). * To select the registered mode, press the (FILTER) +  switch continuously for over 2 seconds under stopping state. [Note] The registered mode can not be obtained for a while after powering. Pressing the (FILTER) +  switch displays "CENTRALLY CONTROLLED".
Switch to assign indoor unit address	Ⓒ	of TEMP	This switch assigns the unit address for "INDOOR UNIT ADDRESS NO."
Registration switch	Ⓓ	(TEST RUN)	This switch is used for group/interlocked registration.
Confirmation switch	Ⓔ		This switch is used to retrieve/identify the content of group and interlocked (connection information) registered.
Delete switch	Ⓕ	CLOCK → ON → OFF	This switch is used to retrieve/identify the content of group and interlocked (connection information) registered.
Registered mode selector switch	Ⓖ		This switch selects the case to register indoor units as group (group setting mode) or that as interlocked (interlocked setting mode). * The unit address is shown at one spot ① for the group setting mode while at two spots ② for the interlocked setting mode.
Switch to assign interlocked unit address	Ⓗ	of TIMER SET	This switch assigns the unit address of "OA UNIT ADDRESS NO."

## (2) Attribute display of unit

- At the group registration and the confirmation/deletion of registration/connection information, the type (attribute) of the unit is displayed with two English characters.

Display	Type (Attribute) of unit/controller
IC	Indoor unit connectable to remote controller
OC	Outdoor unit
RC	Local remote controller
SC	System controller (MJ)

### [Description of registration/deletion/retrieval]

- The items of operation to be performed by the remote controller are given below. Please see the relating paragraph for detail.

#### ① Group registration of indoor unit

- The group of the indoor units and operating remote controller is registered.
- It is usually used for the group operation of indoor units with different refrigerant system.

#### ② Retrieval/identification of group registration information of indoor units

- The address of the registered indoor units in group is retrieved (identified).

#### ③ Retrieval/identification of registration information

- The connection information of any unit (indoor/outdoor units, remote controller or the like) is retrieved (identified).

#### ④ Deletion of group registration information of indoor units

- The registration of the indoor units under group registration is released (deleted).

#### ⑤ Deletion of the address not existing

- This operation is to be conducted when "6607" error (No ACK error) is displayed on the remote controller caused by the miss setting at test run, or due to the old memory remained at the alteration/modification of the group composition.

#### **Caution:**

When MELANS (MJ-103MTRA for example) is being connected, do not conduct the group/pair registration using the remote controller. The group/pair registration should be conducted by MELANS. (For detail, refer to the instruction exclusively prepared for MELANS.)

### (3) Group registration of indoor unit



#### 1) Registration method

- Group registration of indoor unit ..... ①

The indoor unit to be controlled by a remote controller is registered on the remote controller.

#### [Registration procedure]

- ① With the remote controller under stopping or at the display of "HO", continuously press the (FILTER) + (A + B) switch at the same time for 2 seconds to change to the registration mode. (See the figure below.)
- ② Assign the indoor unit address to "INDOOR UNIT ADDRESS NO." by operating the (▲) (▼) (Room temperature adjustment) (C).  
Then press the (TEST RUN) switch (D) to register. In the figure below, the "INDOOR UNIT ADDRESS NO." is being set to 001.
- ③ After completing the registration, press the (FILTER) + (A + B) switch at the same time for 2 seconds to change to the original ordinary mode (with the remote controller under stopping).

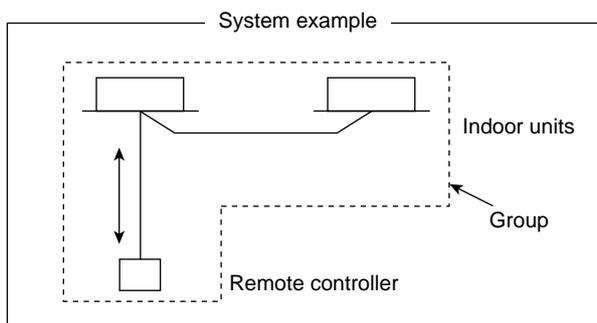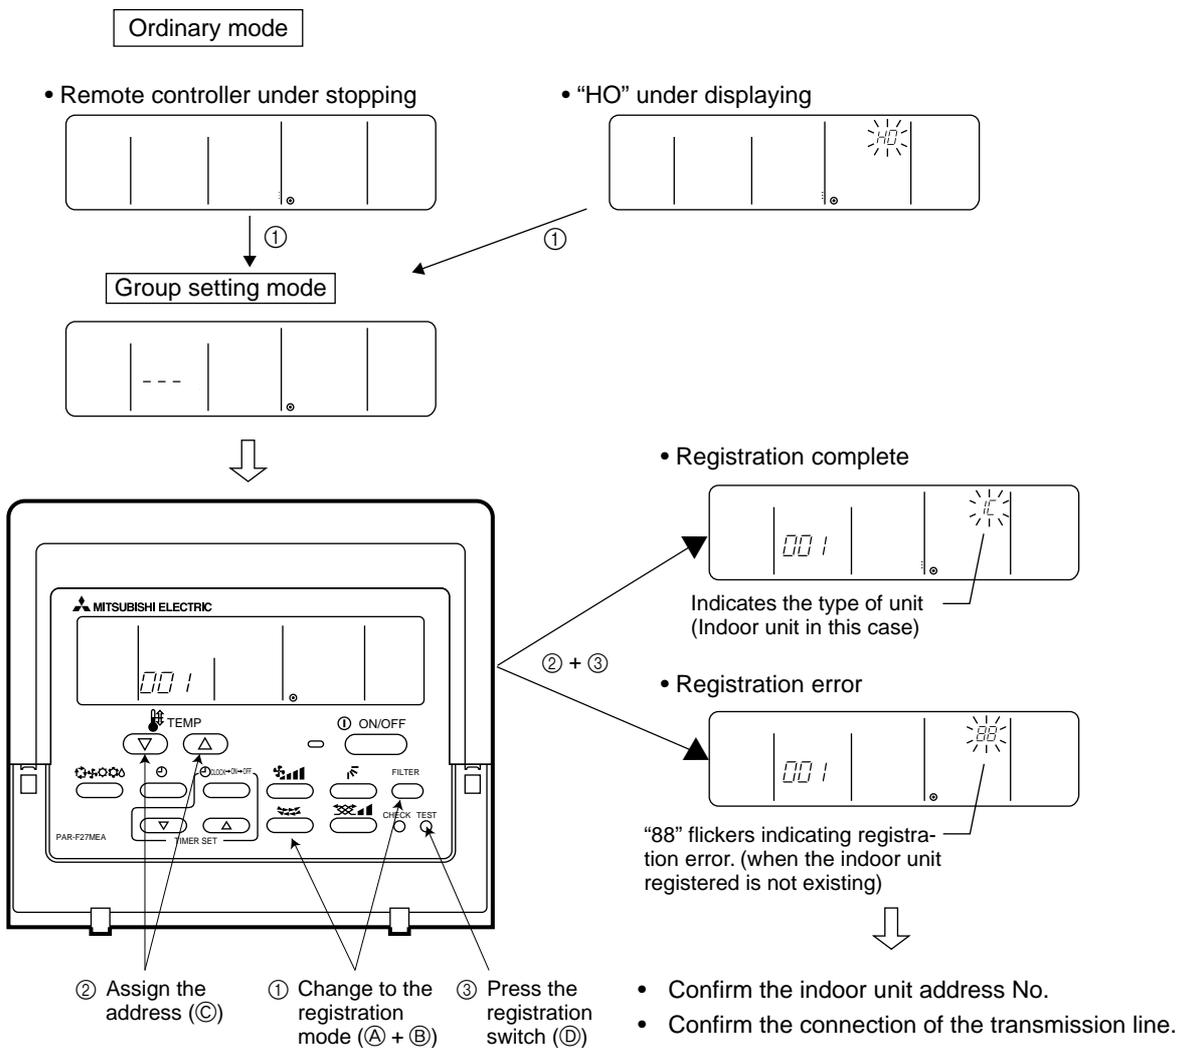


2) Method of retrieval/confirmation

- Retrieval/confirmation of group registration information on indoor unit ..... 2

The address of the indoor unit being registered on the remote controller is displayed.

**[Operation procedure]**

- ① With the remote controller under stopping or at the display of “HO”, continuously press the (FILTER) + [switch] (A + B) at the same time for 2 seconds to change to the registration mode.
- ② In order to confirm the indoor unit address already registered, press [switch] (E). (See figure below.) When the group of plural sets is registered, the addresses will be displayed in order at each pressing of [switch] (E).
- ③ After completing the registration, continuously press the (FILTER) + [switch] (A + B) at the same time for 2 seconds to change to the original ordinary mode (with the remote controller under stopping).

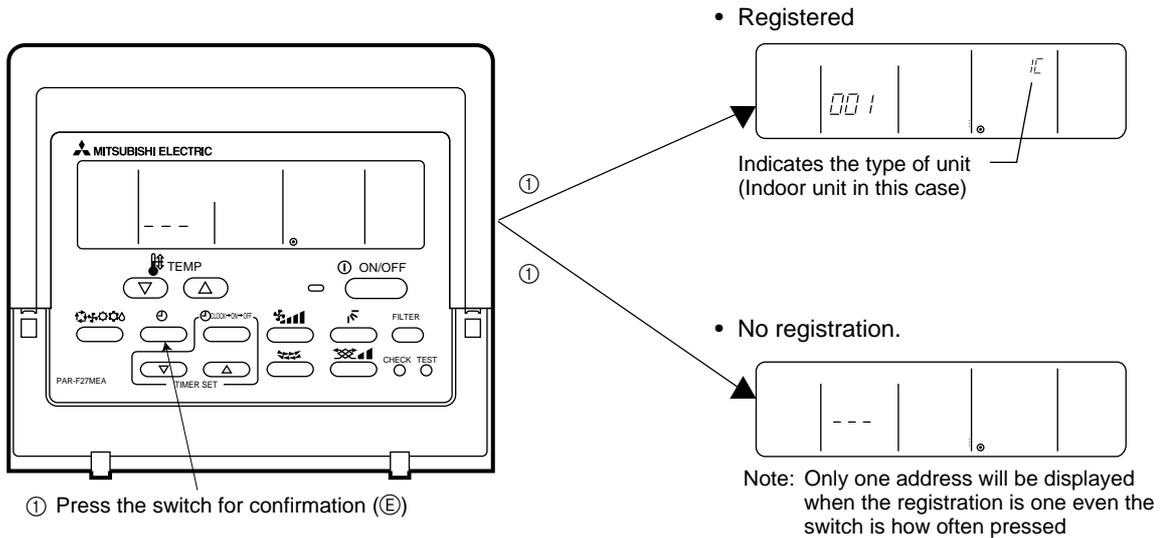


- Retrieval/confirmation of registration information ..... 3

The registered information on a certain unit (indoor unit, outdoor unit, remote controller or the like) is displayed.

**[Operation procedure]**

- ① With the remote controller under stopping or at the display of “HO”, continuously press the (FILTER) + [switch] (A + B) at the same time for 2 seconds to change to the registration mode.
- ② Operate [switch] (C) for the interlocked setting mode. (See figure below.)
- ③ Assign the unit address of which registration information is desired to confirm with the [switch] (H) (TIMER SET) switch (H). Then press the [switch] (E) to display it on the remote controller. (See figure below.) Each pressing of [switch] (E) changes the display of registered content. (See figure below.)
- ④ After completing the retrieval/confirmation, continuously press the (FILTER) + [switch] (A + B) at the same time for 2 seconds to change to the original ordinary mode (with the remote controller under stopping).

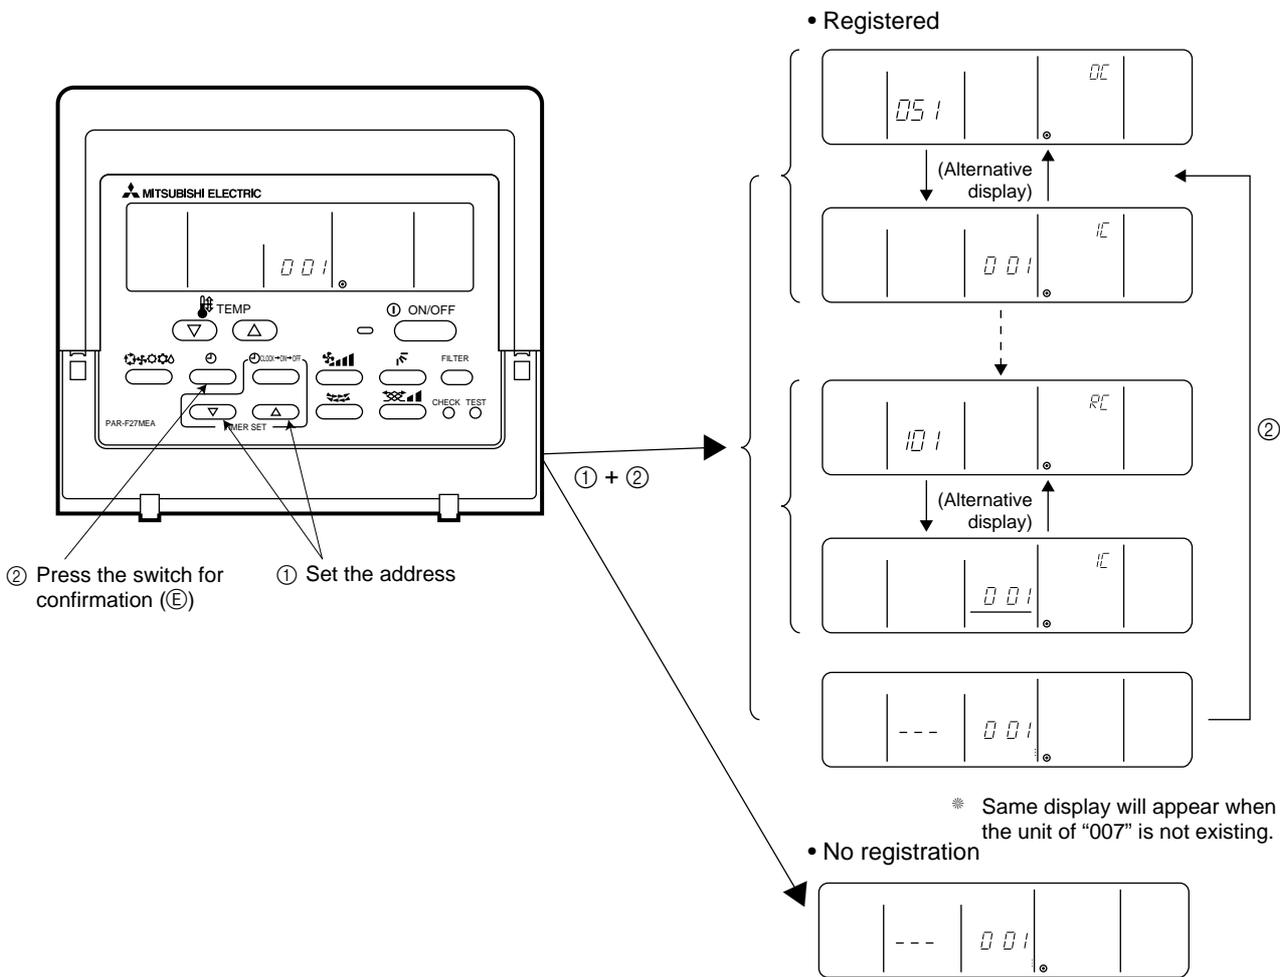

3) Method of deletion


- Deletion of group registration information of indoor unit ..... ④

**[Operation procedure]**

- ① With the remote controller under stopping or at the display of "HO", continuously press the (FILTER) + switch (A + B) at the same time for 2 seconds to change to the registration mode.
- ② Press the switch (E) to display the indoor unit address registered. (As same as ②)
- ③ In order to delete the registered indoor unit being displayed on the remote controller, press the (F) switch two times continuously. At completion of the deletion, the attribute display section will be shown as "--". (See figure below.)

Note: Completing the deletion of all indoor units registered on the remote controller returns to "HO" display.

- ④ After completing the registration, continuously press the (FILTER) + switch (A + B) at the same time for 2 seconds to change to the original ordinary mode (with the remote controller under stopping).

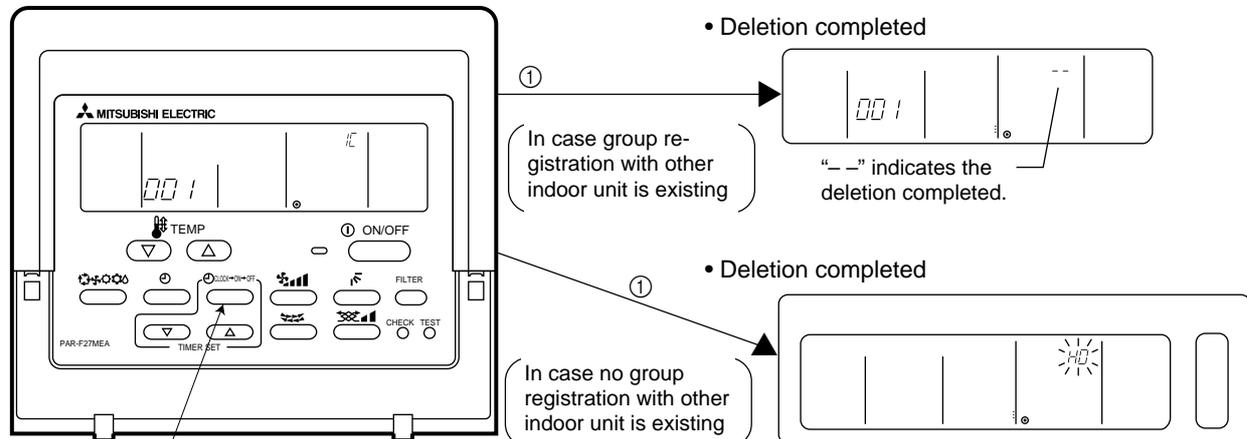

- ① Press the switch for confirmation (E) twice continuously.

4) Deletion of information on address not existing

- Deletion of information on address not existing ..... ⑤


This operation is to be conducted when “6607” error (No ACK error) is displayed on the remote controller caused by the miss setting at test run, or due to the old memory remained at the alteration/modification of group composition, and the address not existing will be deleted.

Note: The connection information (connection between indoor unit and outdoor unit) on the refrigerant system can not be deleted.

An example to delete the system controller of “250” from the indoor unit of “007” is shown below.

**[Operation procedure]**

- ① With the remote controller under stopping or at the display of “HO”, continuously press the (FILTER) + switch (A) + (B) at the same time for 2 seconds to change to the registration mode.
- ② Operate switch (C) for the interlocked setting mode (ii). (See the figure below.)
- ③ Assign the unit address existing to “OA UNIT ADDRESS No.” with the (TIMER SET) switch (H), and press switch (E) to call the address to be deleted. (See the figure below.) As the error display on the remote controller is usually transmitted from the indoor unit, “OA UNIT ADDRESS No.” is used as the address of the indoor unit.
- ④ Press the switch (F) twice. (See the figure below.)
- ⑤ After completing the deletion, continuously press the (FILTER) + switch (A) + (B) at the same time for 2 seconds to return to the original ordinary mode (with the remote controller under stopping).

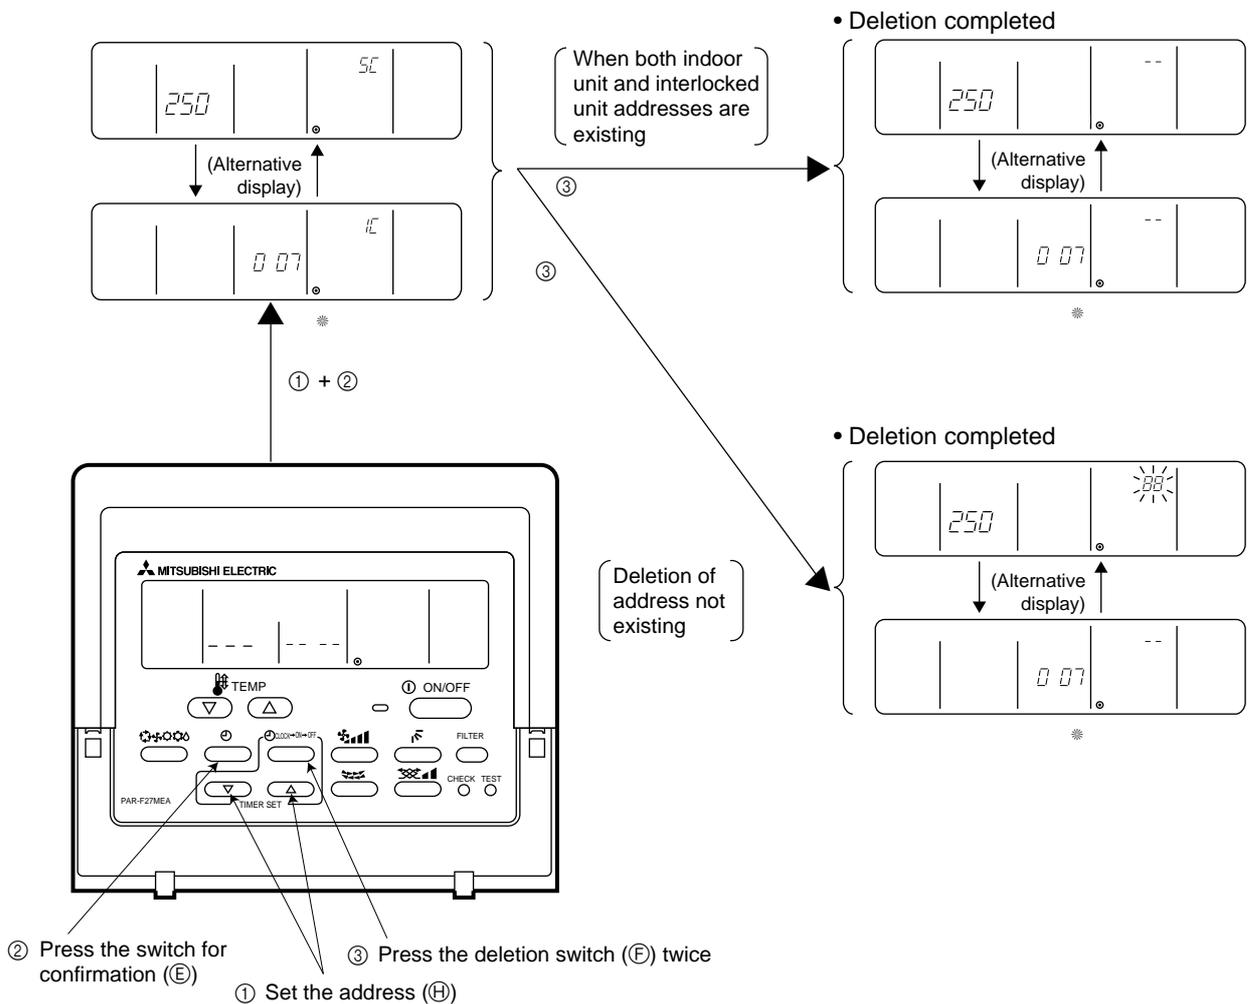

## 5 CONTROL

### [1] Control of Heat Source Unit

#### (1) Initial processing

- When turning on power source, initial processing of microcomputer is given top priority.
- During initial processing, control processing corresponding to operation signal is suspended. The control processing is resumed after initial processing is completed. (Initial processing : Data processing in microcomputer and initial setting of each LEV opening, requiring approx. 2 minutes at the maximum.)

#### (2) Control at starting


- In case unit is started within 2 hours after turning on power source at low ambient temperature (+5°C or less), the unit does not start operating for 30 minutes at the maximum.

#### (3) Bypass, capacity control

- Solenoid valve consists of bypass solenoid valve (SV1, SV2) bypassing between high pressure side and low pressure sider. The following operation will be provided.

##### 1) Bypass solenoid valves SV1 and SV2 (both "open" when turned on)

Item	SV1		SV2	
	ON (Open)	OFF (Close)	ON (Open)	OFF (Close)
When starting compressor	Turned on for 4 minutes		-	
After thermost "ON is returned and after 3 minutes restart	Turned on for 4 minutes		-	
When compressor stops in cooling or heating mode	Always turned on		-	
After operation stops	Turned on for 3 minutes		-	
During oil recovery operations	Always turned on.		Always turned on.	
During 20Hz operations, at fall in low pressure	-		When Ps is 0.15MPa or less	When Ps is 0.25MPa or more
When high pressure rises (Pd)	When Pd reaches 2.70MPa	When Pd is under 2.35MPa and 30 seconds	When Pd reaches 2.60MPa	When Pd is under 2.30MPa and 30 seconds
When high pressure (Pd) rises during 20Hz operations (3 minutes after starting)	-		Turned on when high pressure (Pd) exceeds pressure limit	When high pressure (Pd) is 1.96MPa or less
When discharge temperature rises (3 minutes after starting)			When temp. exceeds 130°C	When discharge temp. is 115°C

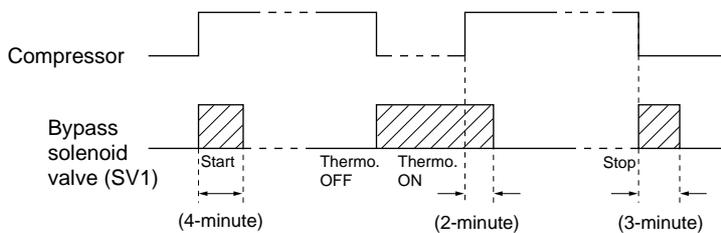

#### (4) Frequency control

- Depending on capacity required, capacity control change and frequency change are performed to keep constant evaporation temperature in cooling operations, and high pressure saturation temperature in heating operation.
- Frequency change is performed at the rate of 2Hz/second across 20 ~ 105Hz range.

##### 1) Frequency control starting



- 60Hz is the upper limit for 3 minutes after starting.
- 75Hz is the upper limit within 30 minutes at the first starting compressor after turning on power source.

2) Pressure limit

The upper limit of high pressure (Pd) is set for each frequency.

When the limit is exceeded, frequency is reduced every 10 seconds.

(Frequency decrease rate (Hz) : 22% of the present value)

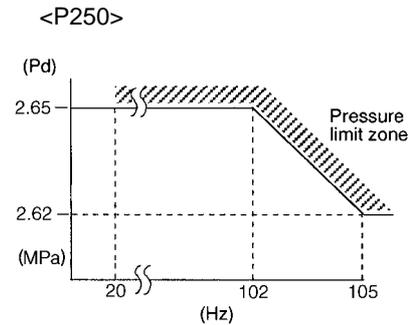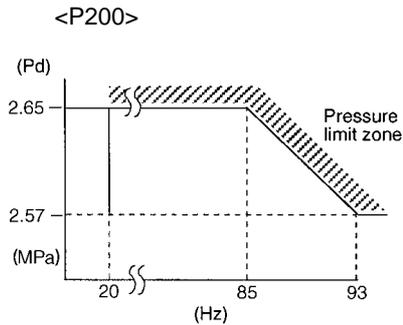

3) Discharge temperature limit

Discharge temperature (Td) of compressor is detected during operation. If the upper limit is exceeded, the frequency is reduced. (Change rate : 5% of the present value)

- 30 seconds after starting compressor, control is performed every minute.
- Operation temperature is 130°C.

4) Periodical frequency control

Frequency control is periodically performed except for the frequency controls at operation start, status change, and protection.

① Cycle of periodical frequency control

Periodical frequency control is performed every minute after the time specified below has passed.

- 20 sec after starting compressor
- 20 sec after frequency control by discharge temperature or pressure limit

② Amount of frequency change

The amount of frequency change is controlled corresponding to evaporation temperature and high pressure saturation temperature.

③ Back up of frequency control by bypass valve



During 20Hz operations, frequency is backed up by turning on (opening) bypass valve (SV2).

• Cooling

During 20Hz operations 3 minutes after starting compressor, bypass valve is turned on when, Ps is 0.15MPa or less and turned off when Ps is 0.25MPa or more.

• Heating

During 20Hz operations 3 minutes after starting compressor, SV2 turned on when high pressure (Pd) exceeds pressure limit and turned off when Pd falls to 20kg/cm<sup>2</sup>G (1.96MPa) or less.





(5) Oil return control (Electronic expansion valve <SLEV>)

- Oil return LEV (SLEV) opening is dependent on compressor frequency and ambient temperature.
- SLEV is closed (0) when compressor stops, and SLEV is set (50) for 10 minutes after starting compressor.

(6) Sub cool coil control (LEV1) : PQHY

- The amount of super heat detected from the bypass outlet temperature of subcool coil (TH8) is controlled to be within a certain range for each 30 seconds.
- The opening angle is corrected and controlled depending on the outlet/inlet temperature of subcool coil (TH5, TH7) and the discharge temperature.
- However, the valve will be closed (0) at heating and compressor stopping.
- It will fully open during defrosting.

(7) Judgement of refrigerant amount

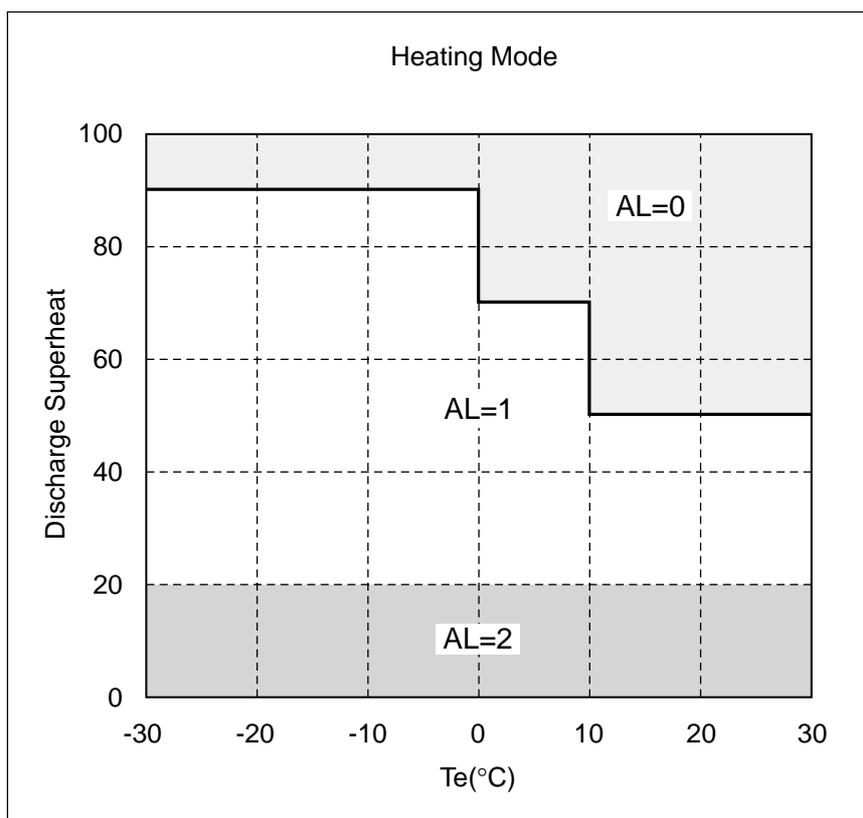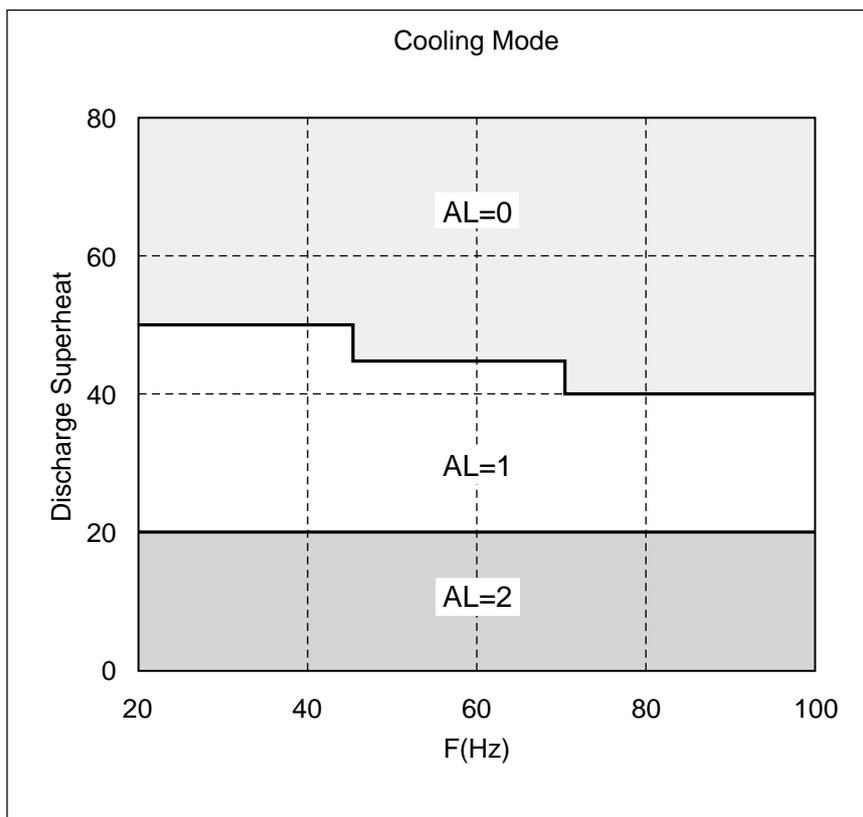

**(8) Control of heat source unit fan and heat source unit heat exchanger capacity**

1) Control system

Depending on capacity required, control SV3~6, SV71~73, for maintaining evaporation temperature (0°C) in cooling operations, and high pressure saturated temperature (52°C) in heating operations.

2) Heat exchanger pattern

Mode	Heat Exchanger Switching							Remarks
	SV3	SV4	SV5	SV6	SV71	SV72	SV73	
Cooling-only	○	○	○	×	○	×	×	
	○	○	○	×	×	×	×	
	○	○	×	×	×	×	×	
	○	×	×	×	×	×	×	
	○	×	×	×	×	○	×	8 HP only
	×	○	×	×	×	×	×	10 HP only
	×	○	×	×	×	○	×	10 HP only
	×	×	×	×	×	×	×	
Cooling-main	○	○	○	×	○	×	×	
	○	○	○	×	○	○	×	
	○	○	○	×	×	○	×	
	○	○	×	×	×	×	×	8 HP only
	○	○	×	×	×	○	×	
	○	×	×	×	×	×	×	
	○	×	×	×	×	○	×	8 HP only
	×	○	×	×	×	×	×	10 HP only
	×	○	×	×	×	○	×	10 HP only
	×	○	×	○	×	×	×	10 HP only
	×	×	×	×	×	×	×	
	×	×	×	×	×	○	×	
	×	×	×	○	×	×	×	
	×	×	×	○	×	○	×	
Heating-only	○	○	○	×	×	×	○	
	○	○	×	×	×	×	○	10 HP only
	○	○	○	×	×	○	○	
	○	○	×	×	×	○	○	
	○	○	○	○	×	○	○	
	○	×	×	○	×	○	○	
	×	×	×	○	×	○	○	
Heating-main	○	○	○	×	×	×	○	
	○	○	×	×	×	×	○	10 HP only
	○	○	○	×	×	○	○	
	○	○	×	×	×	○	○	
	○	○	○	○	×	○	○	
	○	×	×	○	×	○	○	
	×	×	×	○	×	○	○	

## [2] Control Box Cooling System

In PQRY, in order to cool the parts in the control box which emit heat, a refrigerant evaporator has been placed in the bottom of the control box (unit frame side). (See the figure.)

The control box is also mounted in the frame and when the inverter operates, it operates the control box internal cooling fan as well as supplying refrigerant to the evaporator, thus creating air passages in the direction shown by the arrows.

### (1) Cooling fan control

(a) If the temperature of fin is over 80°C when the inverter is just turned on, run the fan until the temperature drops below 80°C. During this operation, turning on the inverter is prohibited.

(b) When the inverter is operating Always ON

(c) Once the fan goes on, it forcibly remains ON for 5 minutes.

Note: By mounting the control box in the frame, a structure is created where air passages are formed, so when mounting the control box, be sure to push it in to the back.

Also, at that time, be careful of tearing of the seal material affixed to the frame.


### (2) LEV 2 control

(a) LEV2 control range.


$$0 \leq \text{LEV 2} \leq 150 \text{ pulses}$$

(b) LEV2 Control method

SHB=THINV-TH2	THHS	TH10	LEV2
$6 \leq \text{SHB}$	–	–	UP
SHB < 6	$\text{THHS} \geq 55^\circ\text{C}$	–	UP
	$\text{THHS} < 55^\circ\text{C}$	$\text{TH10} > 80$	UP
		$\text{TH10} \leq 80$	DOWN

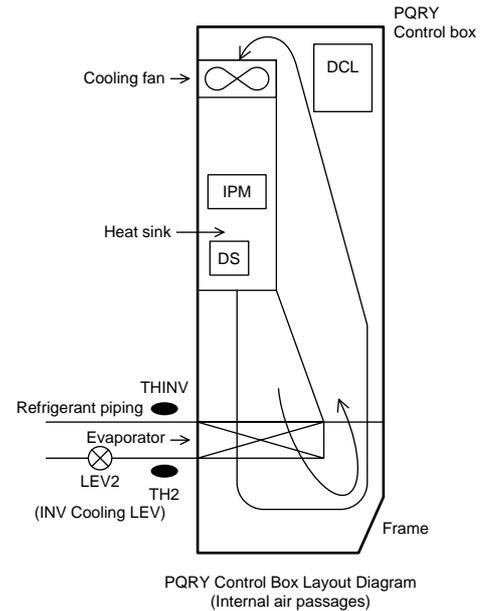


**(3) Heating operation**

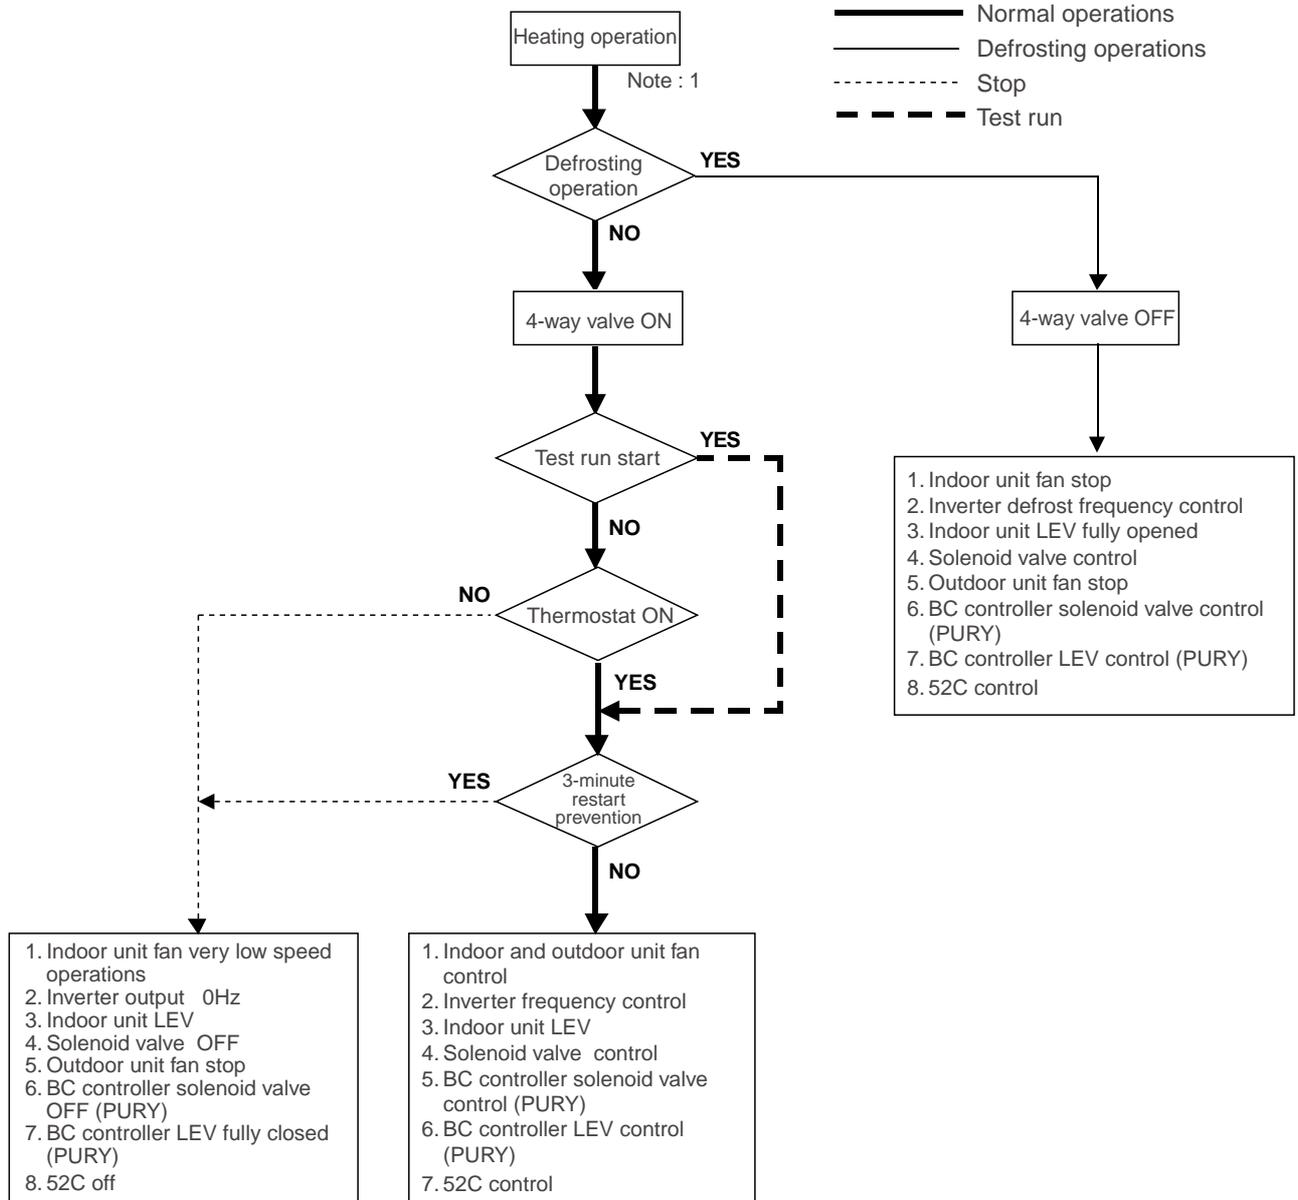

Note : 1 When outdoor unit starts defrosting, it transmits defrost operations command to (BC controller and) indoor unit, and the indoor unit starts defrosting operations. Similarly when defrosting operation stops, indoor unit returns to heating operation after receiving defrost end command of outdoor unit.

**(4) Dry operation**

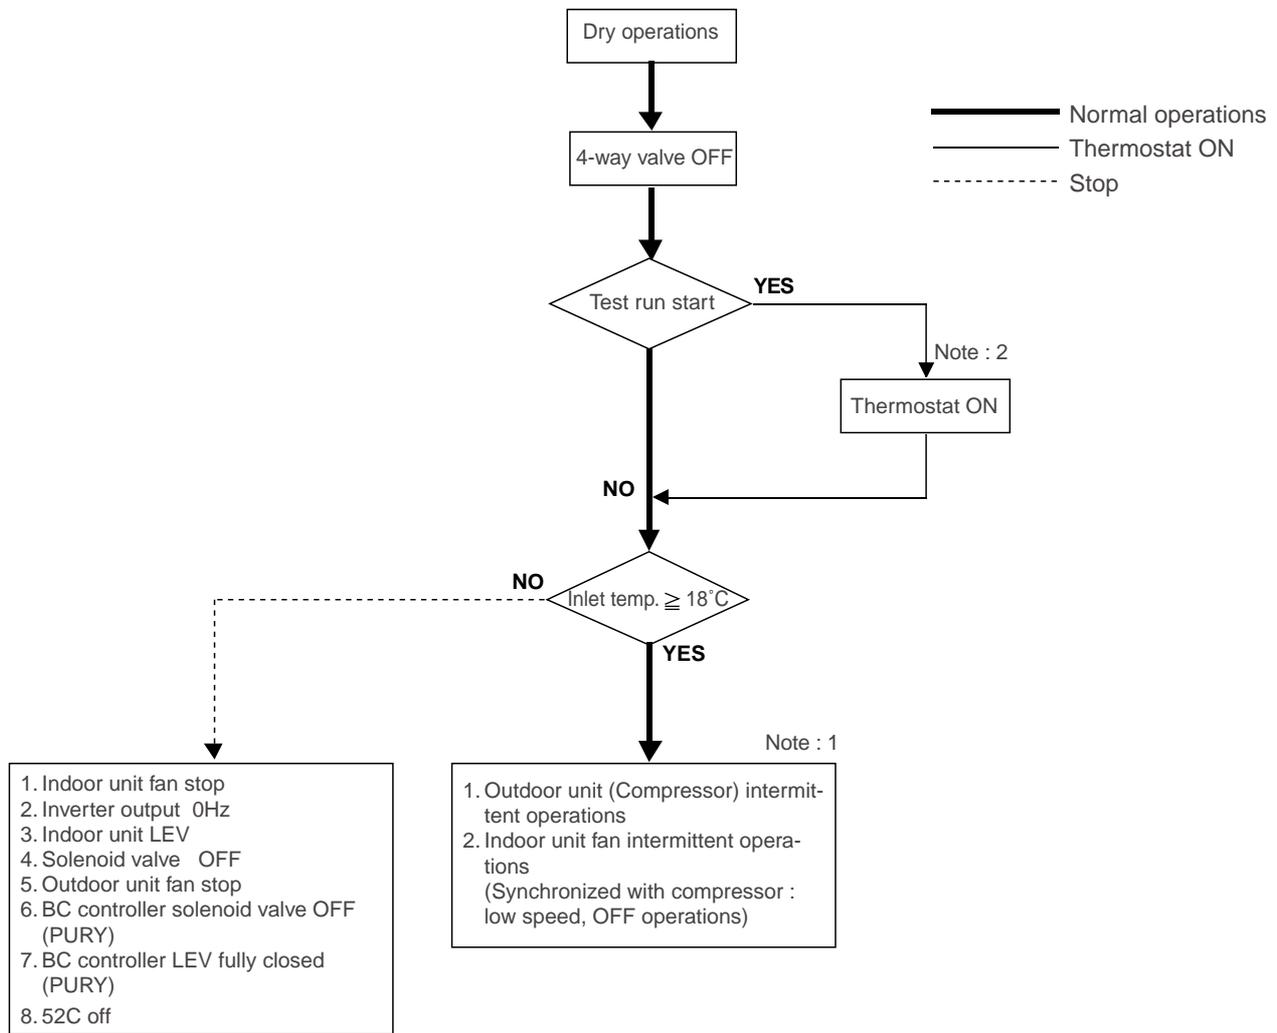

Note : 1	When indoor unit inlet temperature exceeds 18°C, outdoor unit (compressor) and indoor unit fan start intermittent operations synchronously. Operations of outdoor unit, BC controller (PURY), indoor unit LEV and solenoid valve accompanying compressor are the same as those in cooling operations.
Note : 2	Thermostat is always kept on in test run, and indoor and outdoor unit intermittent operation (ON) time is a little longer than normal operations.

### [3] Control of BC Controller

#### (1) Control of SVA, SVB and SVC

SVA, SVB and SVC are turned on and off depending on connection mode.

Connection \ Mode	Cooling	Heating	Stop	Defrost
SVA	ON	OFF	OFF	OFF
SVB	OFF	ON	OFF	OFF
SVC	ON	OFF	OFF	OFF

#### (2) Control of LEV

LEV opening (sj) is controlled corresponding to operation mode as follows:

(Number of pulse)


Operation mode	Cooling-only	Heating-only	Cooling-main	Heating-main	Stop
LEV1	2000	60	<ul style="list-style-type: none"> <li>• Liquid level control *3</li> <li>• Differential pressure control *2</li> </ul>	60	1000
LEV3	Superheat control *1	Differential Pressure control *2		Differential pressure control *2	60

*1	Superheat control	Control every minute so that superheat amount detected by bypass inlet and outlet temperatures (TH12, TH15) stay in the specified range.
*2	Differential pressure control	Control every minute so that detected differential pressure (PS1, PS3) stay in the specified range.
*3	–	60 or more pulses are sometimes detected because of rise in liquid side pressure (PS1).

\* Please confirm that the above parts of BC controllers are being color-coded and shown with the name plate inside the BC controller unit.


## [4] Operation Flow Chart

### (1) Heat source unit

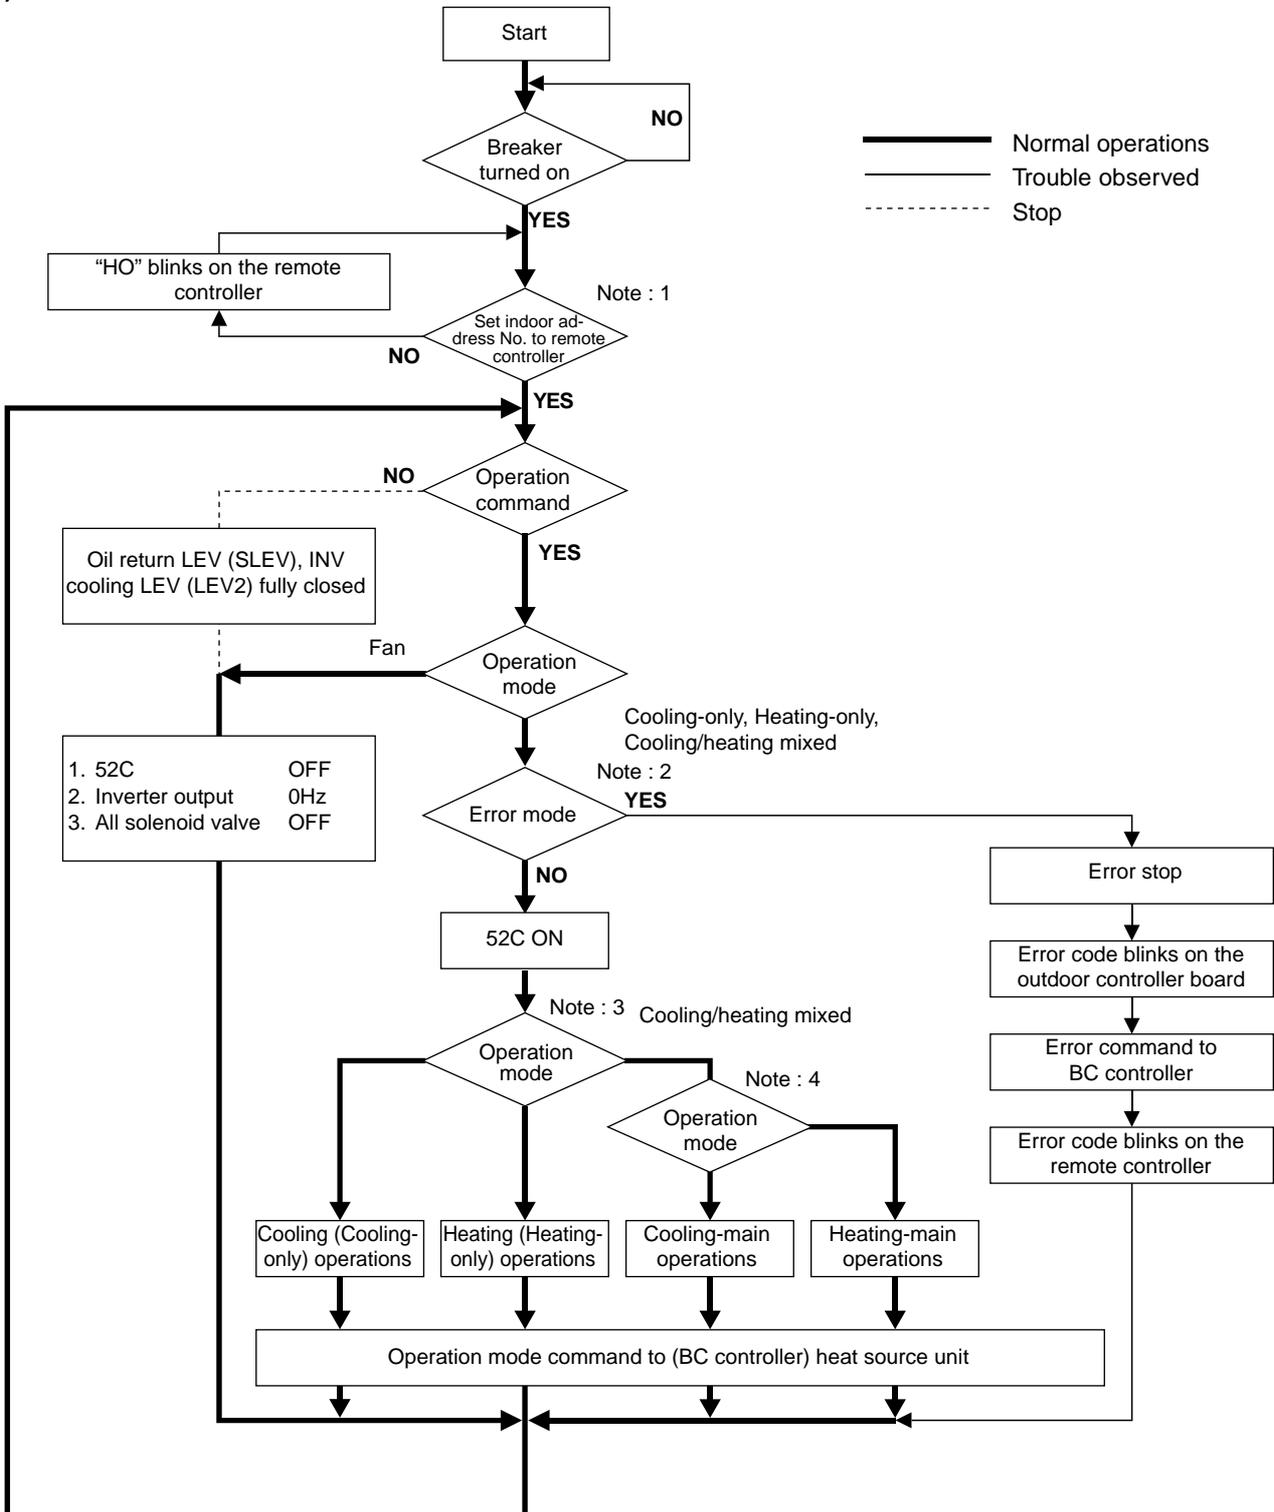


Note : 1	For about 3 minutes after turning on power source, address and group information of heat source unit, BC, controller indoor unit, and remote controller are retrieved by remote controller, during which "HO" blinks on and off on remote controller. In case indoor unit is not grouped to remote controller, "HO" display on remote controller continues blinking even after 3 minutes after turning on power source.
Note : 2	Two trouble modes included indoor unit side trouble, (BC controller trouble) and heat source unit side trouble. In the case of indoor unit side trouble, error stop is observed in heat source unit only when all the indoor units are in trouble. However, if one or more indoor units are operating normally, heat source unit shows only LED display without undergoing stop.
Note : 3	On PUHY system, operation mode conforms to mode command by indoor unit. However, when heat source unit is being under cooling operation, the operation of indoor unit will be prohibited even by setting a part of indoor units under operation, or indoor unit under stopping or fan mode to heating mode. Reversely when heat source unit is being heating operation, the same condition will be commenced. On PURY system, operation mode conforms to mode command by BC controller.
Note : 4	In case BC controller issues cooling/heating mixed operation mode, heat source unit decides operation mode of cooling-main operation or heating-main operation.

(2) BC controller

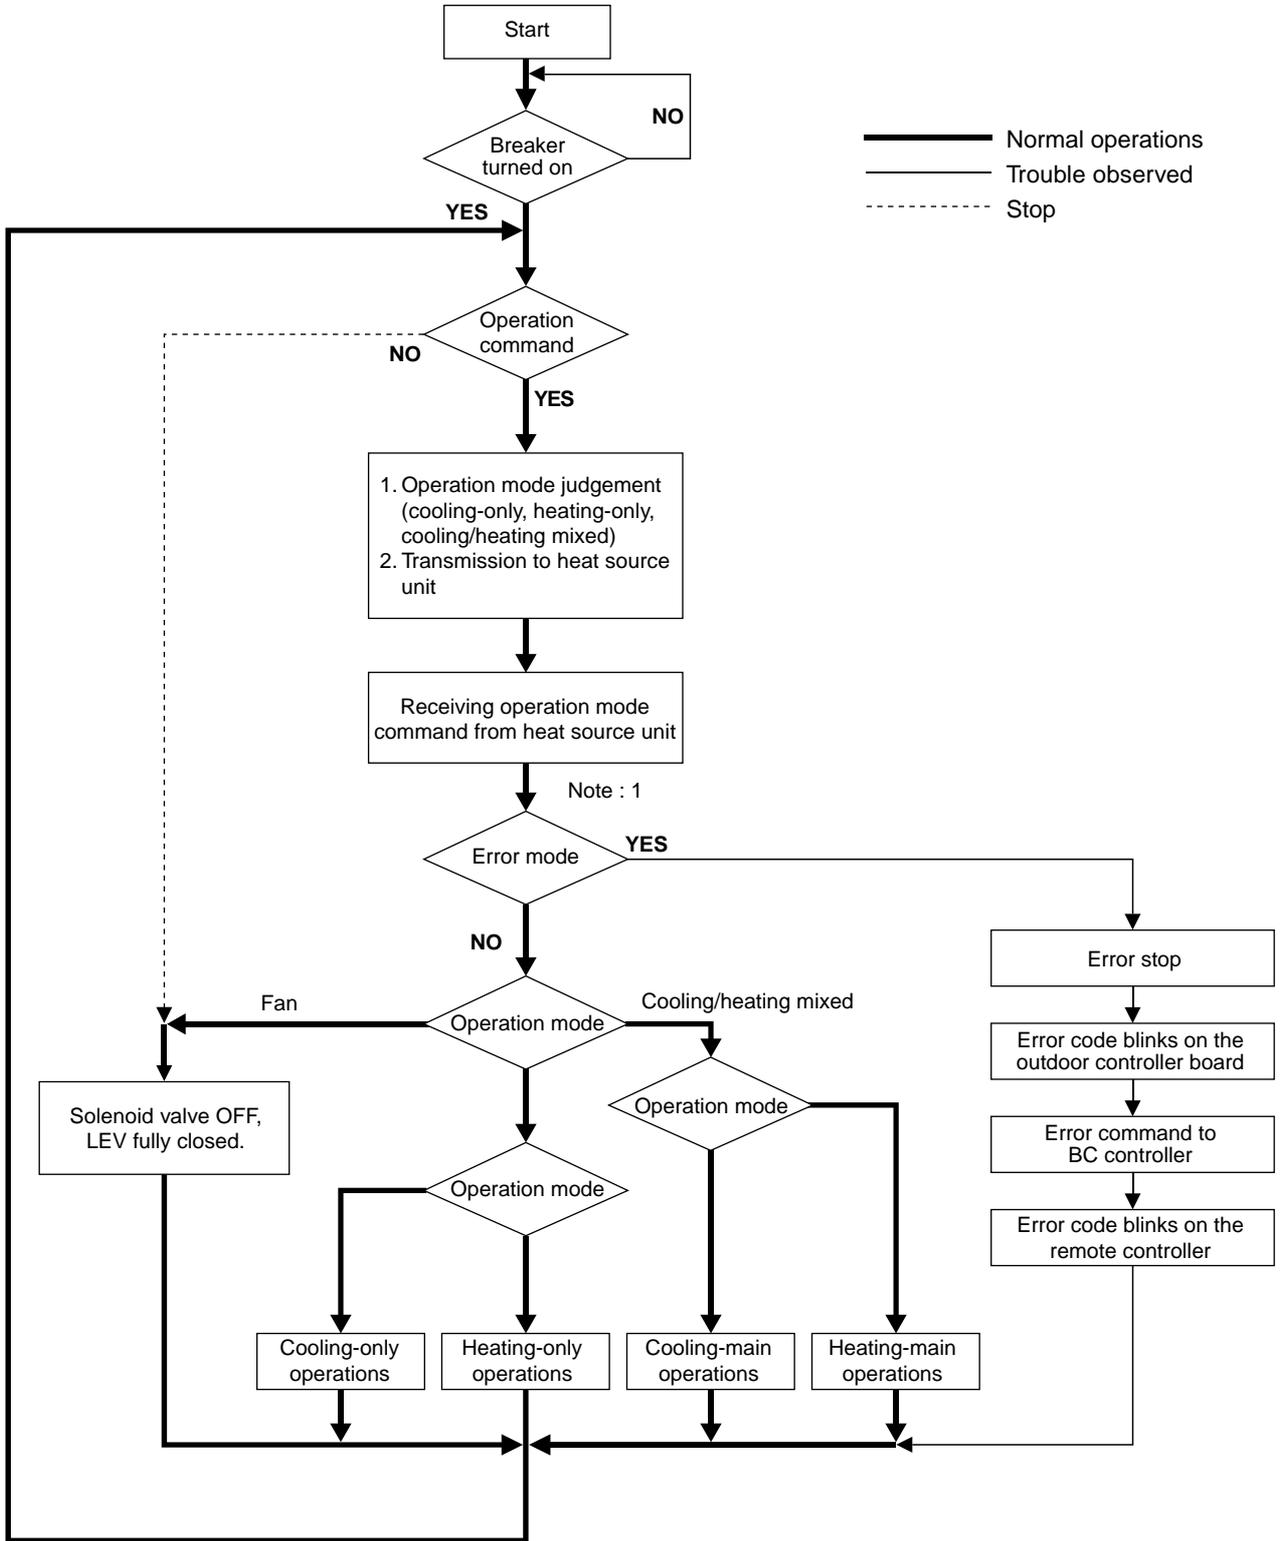


Note : 1 Two error modes include indoor unit side trouble, BC controller trouble, and heat source unit side trouble. In the case of indoor unit side trouble, error stop is observed in the concerned indoor unit only, and in the cases of BC controller and heat source unit side troubles, error stop is observed in all the indoor units, BC controller, and heat source unit.

(3) Indoor unit

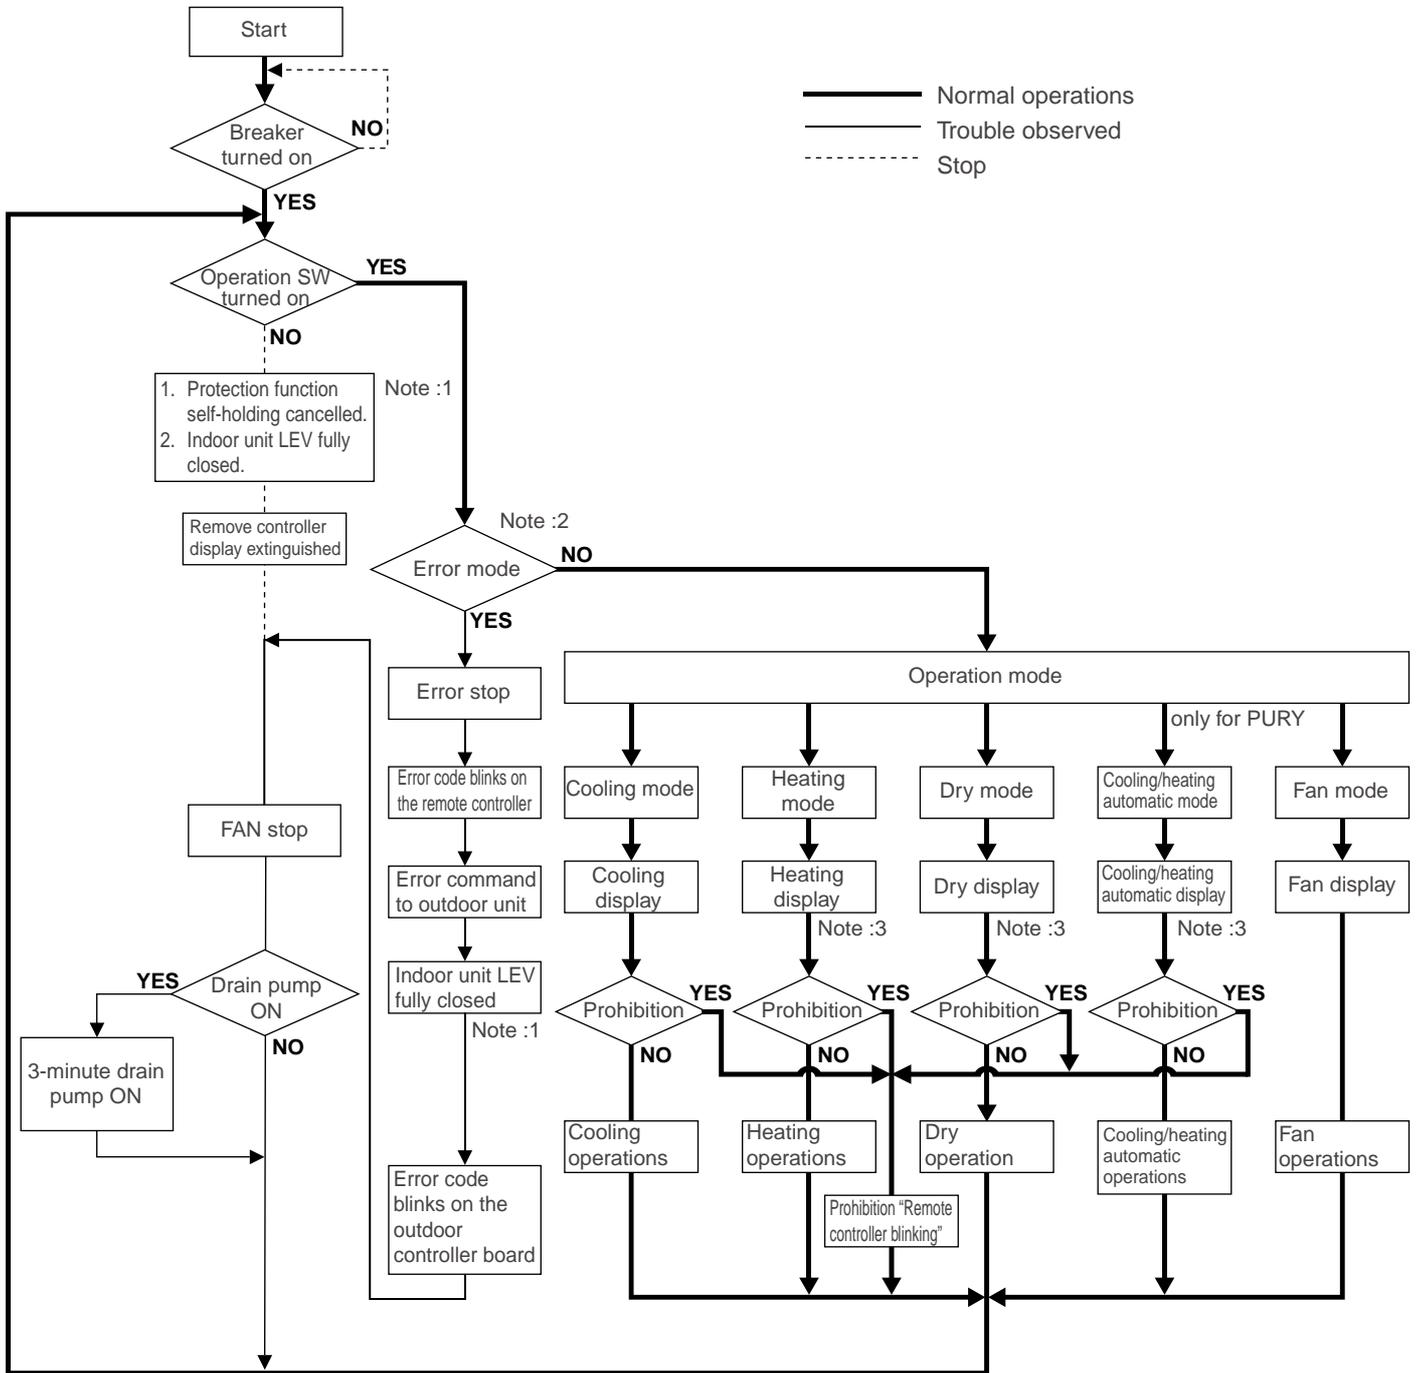


Note : 1	Indoor unit LEV fully closed : Opening 60 (41)
Note : 2	Two error codes include indoor unit trouble (BC controller trouble) and outdoor unit side trouble. In the case of indoor unit trouble, error stop is observed in the concerned indoor unit only, and in the cases of (BC controller and) outdoor unit side troubles, error stop is observed in all the indoor units connected.
Note : 3	“Prohibition” status is observed (when several indoor units are connected to one connection, of BC controller and) when connection mode is different from indoor unit operation mode. (Operation mode display on the remote controller blinks on and off, fan stops, and indoor unit LEV is fully closed.)


**(4) Cooling operation**

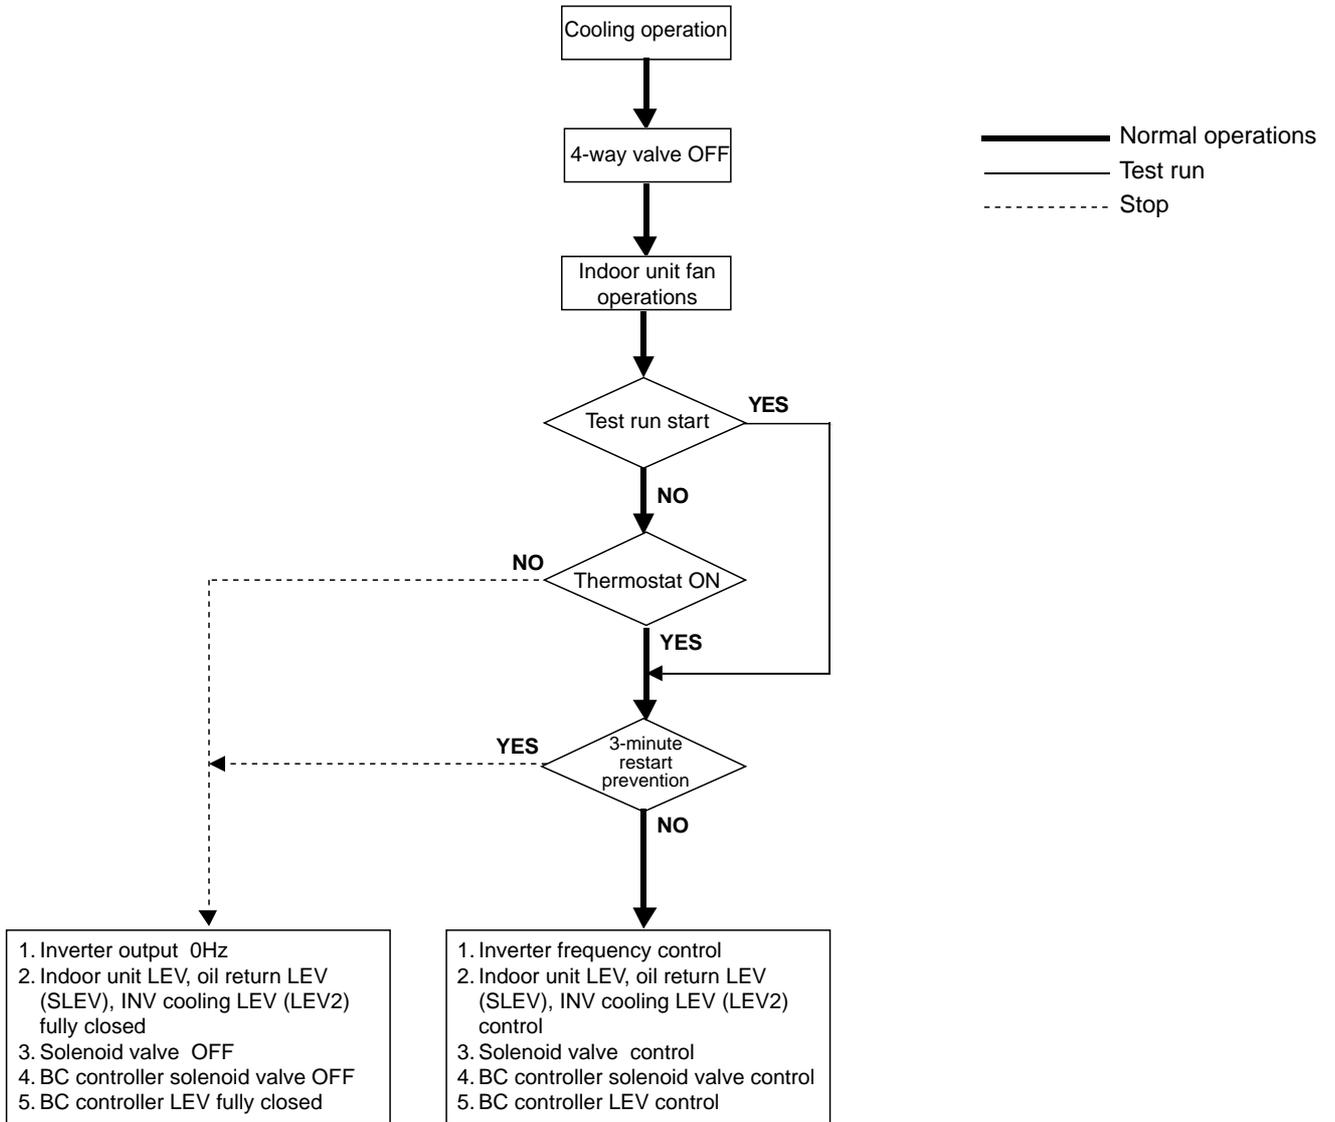

**(5) Heating operation**


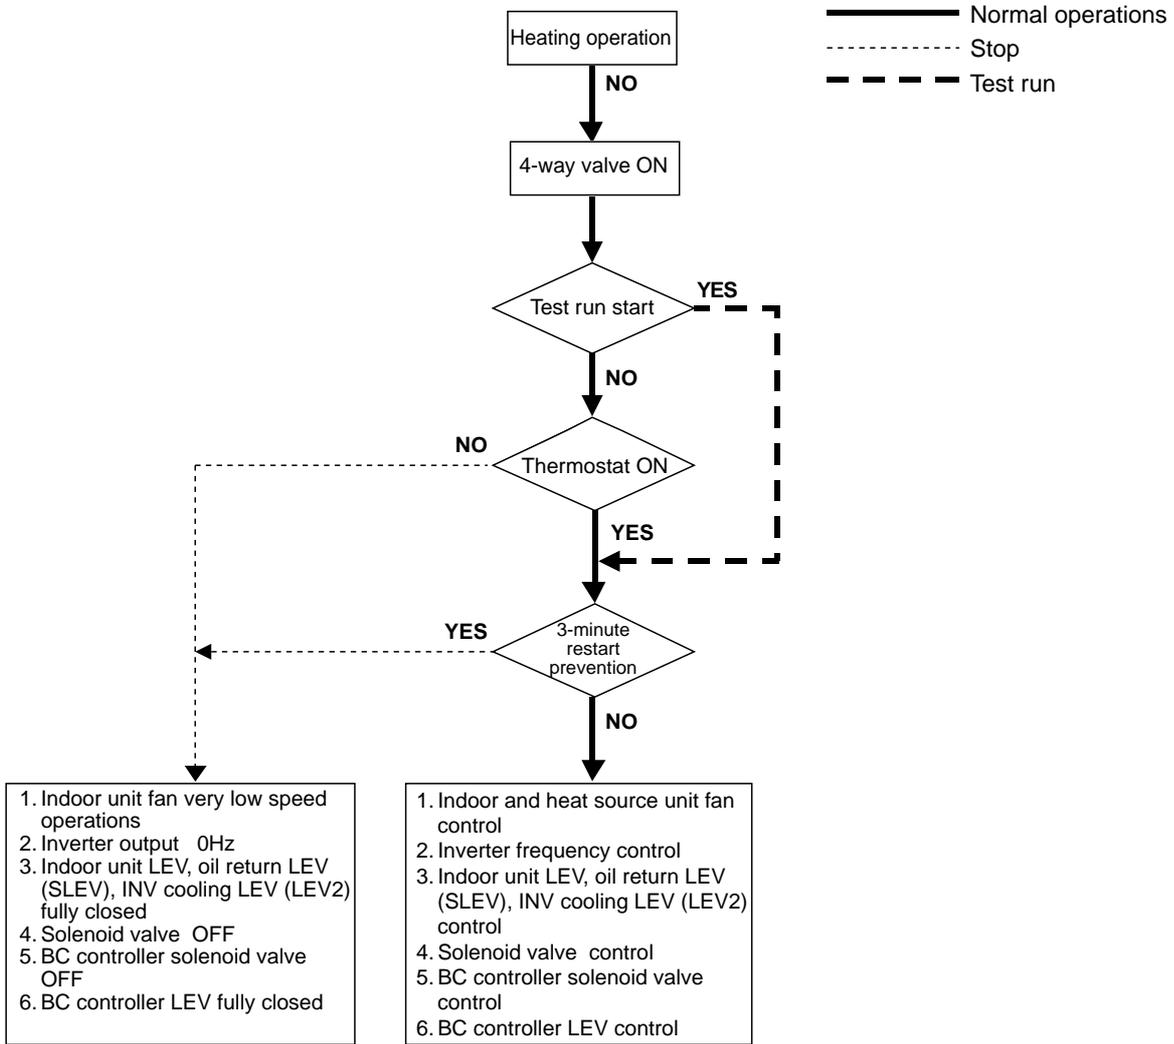


**(6) Dry operation**

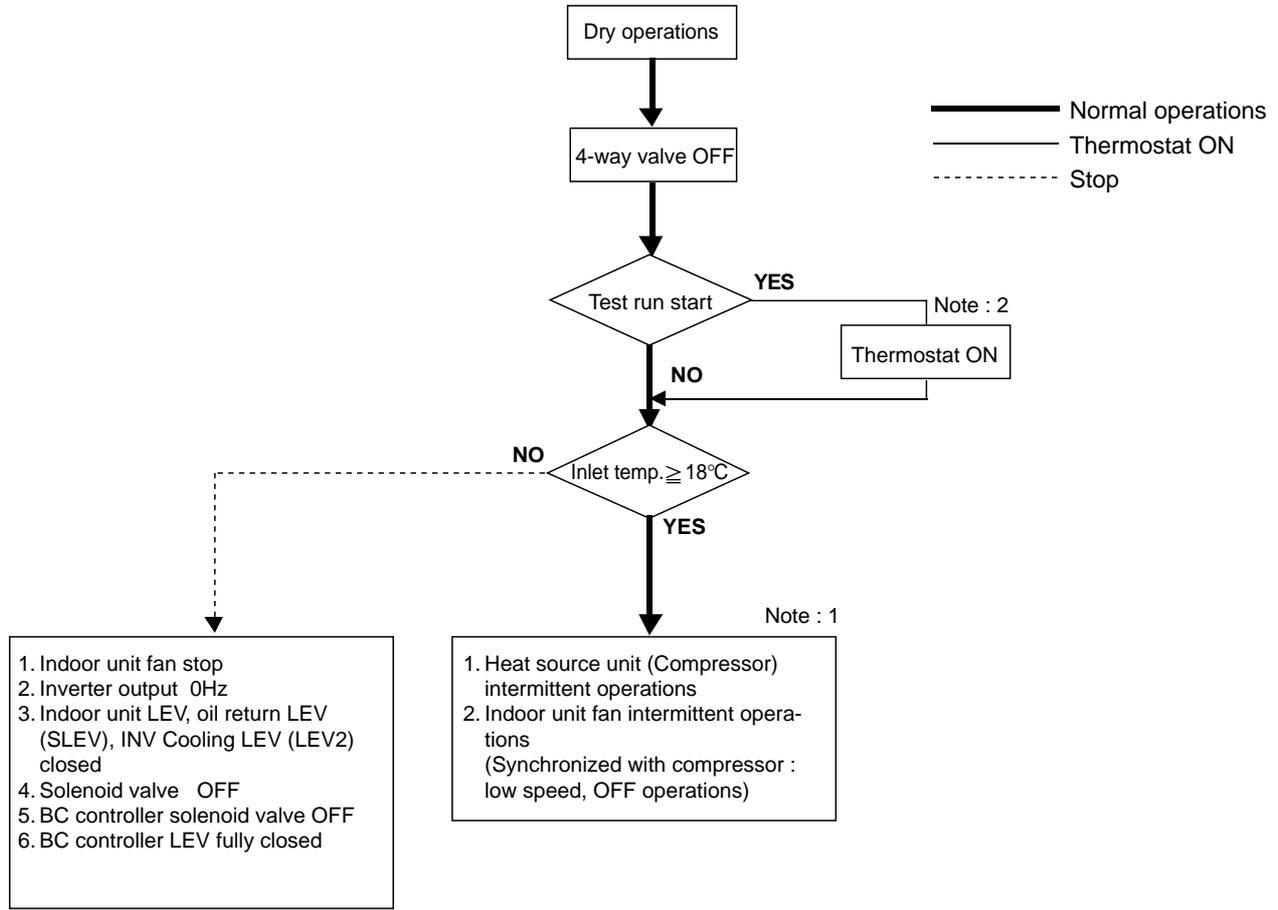


Note : 1	When indoor unit inlet temperature exceeds 18°C, heat source unit (compressor) and indoor unit fan start intermittent operations synchronously. Operations of heat source unit, BC controller, indoor unit LEV and solenoid valve accompanying compressor are the same as those in cooling operations.
Note : 2	Thermostat is always kept on in test run, and indoor and heat source unit intermittent operation (ON) time is a little longer than normal operations.

[5] List of Major Component Functions

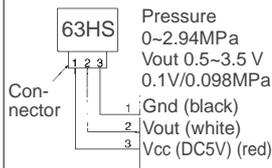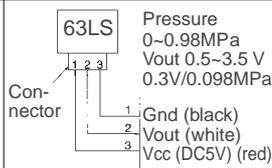	Name	Symbol (function)	Application	Specification	Check method	Object	
Heat source unit	Compressor	MC	Adjust refrigerant circulation by controlling operating frequency and capacity control valve with operating pressure.	Low pressure shell scroll type with capacity control mechanism Winding resistance: Each phase 0.583Ω (20°C)		<ul style="list-style-type: none"> <li>• PQRY</li> <li>• PQHY</li> </ul>	
	High pressure sensor	63HS	<ol style="list-style-type: none"> <li>1) High press. detection.</li> <li>2) Frequency control and high pressure protection</li> </ol>	 <p>Pressure 0~2.94MPa Vout 0.5~3.5 V 0.1V/0.098MPa</p>			
	Low pressure sensor	63LS	<ol style="list-style-type: none"> <li>1) Detects low pressure</li> <li>2) Calculates the refrigerant circulation configuration.</li> <li>3) Protects the low pressure</li> </ol>	 <p>Pressure 0~0.98MPa Vout 0.5~3.5 V 0.3V/0.098MPa</p>		<ul style="list-style-type: none"> <li>• PQRY</li> <li>• PQHY</li> </ul>	
	Pressure switch	63H	<ol style="list-style-type: none"> <li>1) High pressure detection</li> <li>2) High pressure protection</li> </ol>	Setting 2.94MPa OFF	Continuity check	<ul style="list-style-type: none"> <li>• PQRY</li> <li>• PQHY</li> </ul>	
	Thermistor	TH1 (discharge)	<ol style="list-style-type: none"> <li>1) Discharge temperature detection</li> <li>2) High pressure protection</li> </ol>	$R_{120}=7.465k\Omega$ $B_{25/120}=4057$ $R_t = 7.465 \exp \left\{ 4057 \left( \frac{1}{273+t} - \frac{1}{273+120} \right) \right\}$ 20°C : 250kΩ    70°C : 34kΩ 30°C : 160kΩ    80°C : 24kΩ 40°C : 104kΩ    90°C : 17.5kΩ 50°C : 70kΩ      100°C : 13.0kΩ 60°C : 48kΩ      110°C : 9.8kΩ	Resistance value check		
		TH2 (low pressure saturation temperature)	<ol style="list-style-type: none"> <li>1) Detects the saturated vapor temperature.</li> <li>2) Calculates the refrigerant circulation configuration.</li> <li>3) Controls the compressor frequency.</li> <li>4) Controls the outdoor unit's fan air volume.</li> </ol>	$R_0=33k\Omega$ $B_{0/100}=3965$ $R_t = 33 \exp \left\{ 3965 \left( \frac{1}{273+t} - \frac{1}{273+0} \right) \right\}$ -20°C : 92kΩ -10°C : 55kΩ 0°C : 33kΩ 10°C : 20kΩ 20°C : 13kΩ 30°C : 8.2kΩ	Resistance value check		
		TH5 (piping temperature)	<ol style="list-style-type: none"> <li>1) Frequency control</li> <li>2) Defrost control and liquid level detection at heating</li> </ol>	$R_0=15k\Omega$ $B_{0/100}=3460$ $R_t = 15 \exp \left\{ 3460 \left( \frac{1}{273+t} - \frac{1}{273+0} \right) \right\}$ 0°C : 15kΩ 10°C : 9.7kΩ 20°C : 6.4kΩ 25°C : 5.3kΩ 30°C : 4.3kΩ 40°C : 3.1kΩ			• PQHY
		TH6 (Inlet water temperature)	<ol style="list-style-type: none"> <li>1) Inlet water temperature detection</li> <li>2) Liquid level heater, and opening setting for oil return</li> </ol>				
		TH7	Subcool coil bypass LEV (LEV1) control (subcool coil outlet temperature)				• PQHY
		TH8 (subcool coil bypass outlet temperature)	Subcool coil bypass LEV (LEV1) control				• PQHY
TH9		<ol style="list-style-type: none"> <li>1) Detects the CS circuit fluid temperature.</li> <li>2) Calculates the refrigerant circulation configuration.</li> </ol>	$R_0=15k\Omega$ $B_{0/100}=3460$ $R_t = 15 \exp \left\{ 3460 \left( \frac{1}{273+t} - \frac{1}{273+0} \right) \right\}$ 0°C : 15kΩ 10°C : 9.7kΩ 20°C : 6.4kΩ 25°C : 5.3kΩ 30°C : 4.3kΩ 40°C : 3.1kΩ			<ul style="list-style-type: none"> <li>• PQRY</li> <li>• PQHY</li> </ul>	
THINV		<ol style="list-style-type: none"> <li>1) Detects the temperature at the inverter cooler's heat exchanger outlet.</li> <li>2) Controls the LEV2 opening angle.</li> </ol>					

	Name	Symbol (function)	Application	Specification	Check method	Object
Heat source unit	Thermistor	TH10	1) Detects the compressor shell temperature. 2) Provides compressor shell overheating protection.	R <sub>120</sub> =7.465kΩ B <sub>25/120</sub> =4057 R <sub>t</sub> = 7.465exp {4057( $\frac{1}{273+t} - \frac{1}{273+120}$ )}		• PQR • PQHY
		THHS	1) Detects the inverter cooling fin temperature. 2) Provides inverter overheating protection. 3) Controls the control box cooling fan.	R <sub>50</sub> =17kΩ B <sub>25/50</sub> =4170 R <sub>t</sub> = 17exp{4170( $\frac{1}{273+t} - \frac{1}{273+50}$ )}		• PQR • PQHY
	Solenoid valve	SV1, 2 (discharge - suction bypass)	1) High/low press. bypass at starting/stopping and capacity control at low load 2) Discharge press. rise suppression 3) Capacity control and high press rise suppression (backup for frequency control)	AC 220~240V Open at energizing and close at deenergizing	• Continuity check by tester • Temperature of inlet and outlet.	
		SV3 ~ 6 SV71 ~ 73	Control of heat exchanger capacity.			• PQR • PQHY
	Linear expansion valve	LEV1 (SC coil)	Adjustment bypass flow rate from outdoor unit liquid line at cooling.	0~480 pulses		• PQHY
		SLEV	Adjustment of liquid refrigerant (oil) return foam accumulator	DC12V stepping motor drive Valve opening 0~450 pulse (SLEV), 0~150 pulse (LEV2)		• PQR • PQHY
		LEV2	Controls the volume of refrigerant flowing to the inverter cooler's heat exchanger.			
	21S4a	4-way valve	Changes for cooling and heating	AC220~240V on cooling off heating	Continuity check with tester	• PQR • PQHY
	CH1	Crank case heater	Heating of compressor refrigerant	Cord heater AC 220~240V MC.....1280Ω .....45W		• PQR • PQHY
	Indoor unit	Linear expansion valve	LEV	1) Adjust superheat of outdoor unit heat exchanger outlet at cooling. 2) Adjust subcool of indoor unit heat exchanger at heating.	DC12V Opening of stepping motor driving valve 0~2,000 pulses	Continuity check with tester for white-red-orange yellow-brown-blue
Thermistor		TH21 (inlet air temperature)	Indoor unit control (thermostat)	R <sub>0</sub> = 15kΩ B <sub>0/100</sub> = 3460	Resistance value check	
		TH22 (piping temperature)	1) Indoor unit control (freeze prevention, hot adjust, etc.) 2) LEV control in heating operation (Subcool detection)	R <sub>t</sub> = 15exp {3460 ( $\frac{1}{273+t} - \frac{1}{273+0}$ )}		
		TH23 (gas side piping temperature)	LEV control in cooling operation (Superheat detector)	0°C : 15kΩ 10°C : 9.7kΩ 20°C : 6.4kΩ 25°C : 5.3kΩ 30°C : 4.3kΩ 40°C : 3.1kΩ		

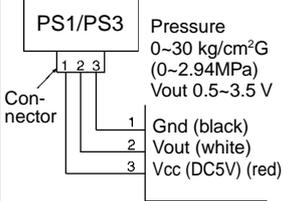
	Name	Symbol (function)	Application	Specification	Check method
BC controller	Pressure sensor	PS1	1) Liquid pressure (high-pressure) detection 2) LEV control	 <p>PS1/PS3 Pressure 0~30 kg/cm<sup>2</sup>G (0~2.94MPa) Vout 0.5~3.5 V 1 Gnd (black) 2 Vout (white) 3 Vcc (DC5V) (red)</p>	
		PS3	1) Intermediate pressure detection 2) LEV control		
	Thermistor	TH11 (liquid inlet temperature)	LEV control (liquid refrigerant control)	$R_0=15k\Omega$ $B_{0/100}=3460$ $R_t = 15 \exp\{3460(\frac{1}{273+t} - \frac{1}{273+0})\}$ 0°C : 15kΩ 10°C : 9.7kΩ 20°C : 6.4kΩ 25°C : 5.3kΩ 30°C : 4.3kΩ 40°C : 3.1kΩ	
		TH12 (bypass outlet pressure)	LEV control (superheat control)		
		TH15 (bypass outlet temperature)	LEV control (superheat control)		
		TH16 (bypass inlet temperature)	LEV control (subcool control)		
	Solenoid valve	SVA	Supplies refrigerant to cooling indoor unit.	AC 220~240V Open when energized Closed when de-energized	Continuity check by a tester
		SVB	Supplies refrigerant to heating indoor unit.		
		SVC	Supplies refrigerant to cooling indoor unit.		
	Electronic expansion valve	LEV1	Liquid level control Pressure control	12V DC stepping motor drive 0 to 2000 valve opening pulse	Same as LEV of indoor unit.
LEV3		Liquid level control Pressure control			

**[6] Resistance of Temperature Sensor**

Thermistor for low temperature


Thermistor  $R_0 = 15\text{k}\Omega \pm 3\%$  (TH3 ~ 9, TH1NV)

$$R_t = 15 \exp \left\{ 3460 \left( \frac{1}{273+t} - \frac{1}{273+0} \right) \right\}$$

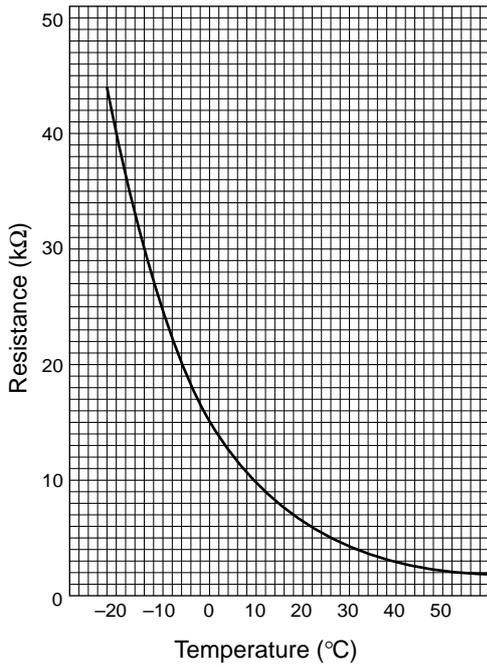


Thermistor  $R_{120} = 7.465\text{k}\Omega \pm 2\%$  (TH1, 10)

$$R_t = 7.465 \exp \left\{ 4057 \left( \frac{1}{273+t} - \frac{1}{273+120} \right) \right\}$$

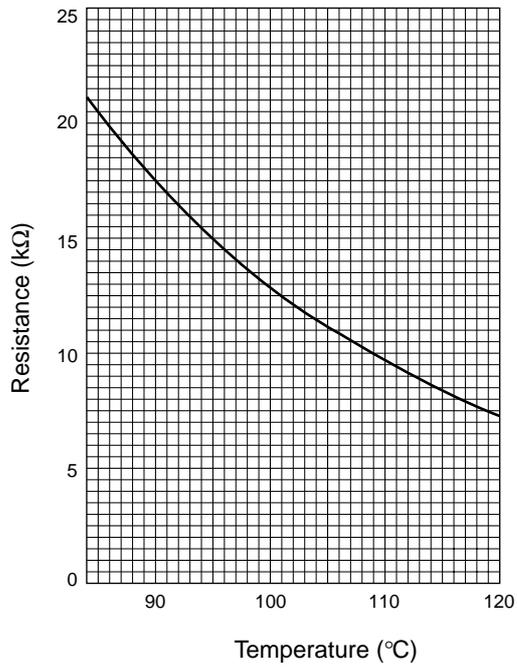


Thermistor  $R_0 = 33\text{k}\Omega \pm 1\%$  (TH2)

$$R_t = 33 \exp \left\{ 3965 \left( \frac{1}{273+t} - \frac{1}{273+0} \right) \right\}$$

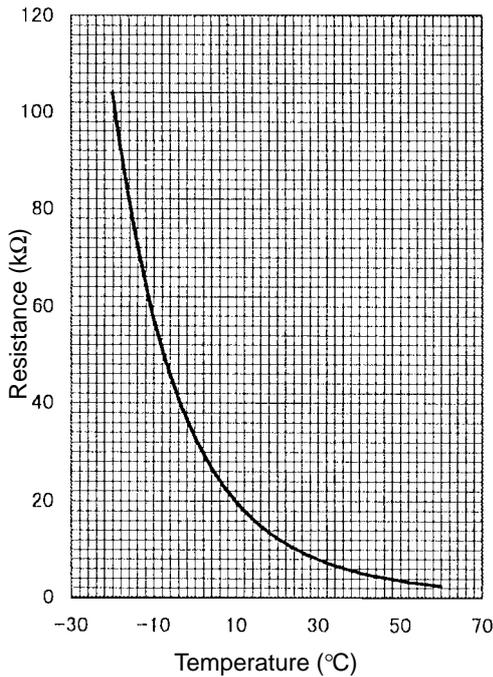

Thermistor  $R_{50} = 17\text{k}\Omega \pm 2\%$  (THHS)

$$R_t = 17 \exp \left\{ 4170 \left( \frac{1}{273+t} - \frac{1}{273+50} \right) \right\}$$

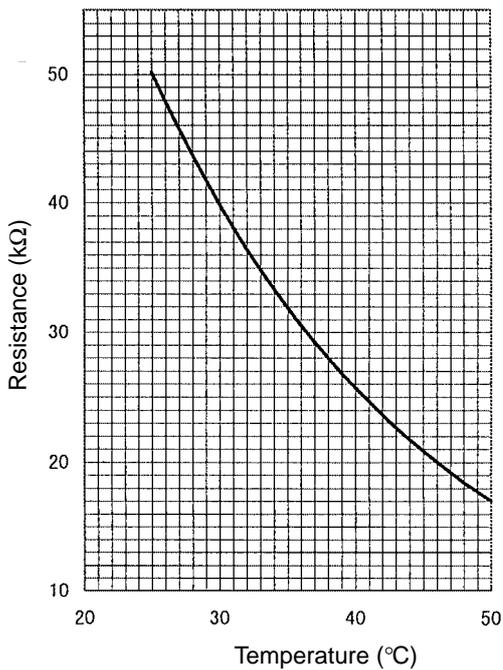

## 6 REFRIGERANT AMOUNT ADJUSTMENT

Clarify relationship between the refrigerant amount and operating characteristics of CITY MULTI, and perform service activities such as decision and adjustment of refrigerant amount on the market.

### [1] Refrigerant Amount and Operating Characteristics

The followings are refrigerant amount and operating characteristics which draw special attention.

1	During cooling operations, required refrigerant amount tends to increase (refrigerant in accumulator decreases) in proportion to increase in the number of operating indoor units. However, the change of increase rate is small.		
2	During heating operations, liquid level of accumulator is the highest when all the indoor units are operating.		
3	Discharge temperature hardly changes when increasing or decreasing refrigerant amount with accumulator filled with refrigerant.		
4	Tendency of discharge temperature	<p>During cooling operations, discharge temperature tends to rise at overload than low temperature.</p> <p>During heating operations, discharge temperature tends to rise at low temperature than overload.</p> <p>The lower operating frequency is, the higher discharge temperature tends to become of deteriorated compressor efficiency.</p>	Comparison including control system
5	Compressor shell temperature is 20~70 degrees higher than low pressure saturation temperature ( $T_e$ ) when refrigerant amount is appropriate. → Judged as over replenishment when temperature difference from low pressure saturation temperature ( $T_e$ ) is 10 degrees or less.		

### [2] Adjustment and Judgement of Refrigerant Amount

#### (1) Symptom

The symptoms shown in the table below are the signs of excess or lack of refrigerant amount. Be sure to adjust refrigerant amount in refrigerant amount adjustment mode, by checking operation status, judging refrigerant amount, and performing selfdiagnosis with LED, for overall judgement of excess or lack of refrigerant amount.

1	Emergency stop at 1500 remote controller display (excessive refrigerant replenishment)	Excessive refrigerant replenishment
2	Operating frequency does not fully increase, thus resulting in insufficient capacity	Insufficient refrigerant replenishment
3	Emergency stop at 1102 remote controller display (discharge temperature trouble)	
4	Emergency stop occurs when the remote control display is at 1501. (insufficient refrigerant)	Insufficient refrigerant

## (2) Refrigerant amount

### ① Checking the operating condition

Operate all the indoor units on cooling or on heating, checking the discharge temperature, sub-cooling (BC controller), low pressure saturation temperature, inlet temperature, shell bottom temperature, liquid level, liquid step, etc. and rendering an overall judgment.


#### Note :

Depending on the operating state, AL = 0 has the meaning does not mean that there is insufficient refrigerant.

Condition		Judgment
1	Outlet temperature is high. (110;C or higher)	Refrigerant volume tends toward insufficient.
2	Low pressure saturation temperature is extremely low.	
3	Inlet superheating is high (if normal, SH = 20 deg or lower).	
4	Shell bottom temperature is high (the difference with the low pressure saturation temperature is 70 deg. or greater)	
5	Shell temperature is low (the difference with the low pressure saturation temperature is 10 deg. or lower).	Rifrigerant volume tends toward overcharge.
6	Liquid level AL = 2	

### ② Check the refrigerant volume by self-diagnosis using the LED.

Set the self-diagnosis switch (SW1) as shown below and check the past information (history) concerning the refrigerant volume.



If LD8 lights up, it indicates the refrigerant charge abnormal delay state just before emergency stop due to refrigerant overcharge (1500).

### ③ Additional refrigerant charge volume

At the time of shipping from the factory, the heat source unit is charged with the amount of coolant shown in the following table, but since no extension piping is included, please carry out additional charging on-site.

Heat source unit model name	PQRY-P200	PQRY-P250	PQHY-P200	PQHY-P250
Refrigerant charge volume	7.5kg	8.5 kg	7.0 kg	8.0 kg

#### Calculation formula

Calculate the additional refrigerant volume by calculating the size of the extension liquid piping and its length (units: m).

$$\text{Additional refrigerant volume (kg)} = (0.12 \times L1) + (0.06 \times L2) + (0.024 \times L3) + \alpha$$

L1: Length of  $\phi$ 12.7 liquid pipe (m)

L2: Length of  $\phi$ 9.52 liquid pipe (m)

L3: Length of  $\phi$ 6.35 liquid pipe (m)

$\alpha$ : Refer to the calculation table.

In the calculation results, round up fractions smaller than 0.01 kg. (Example: 18.54 kg  $\rightarrow$  18.6 kg)


( $\alpha$  Calculation Table)

Total capacity of connected indoor units	$\alpha$
~ 160	1.5
161 ~	2.0

#### Caution :

When charging with refrigerant, be sure to charge from the liquid side. If charging from the gas side, it will cause the refrigerant composition to change inside the unit and the composition of the refrigerant remaining in the canister will also change.

### (3) Refrigerant amount adjustment

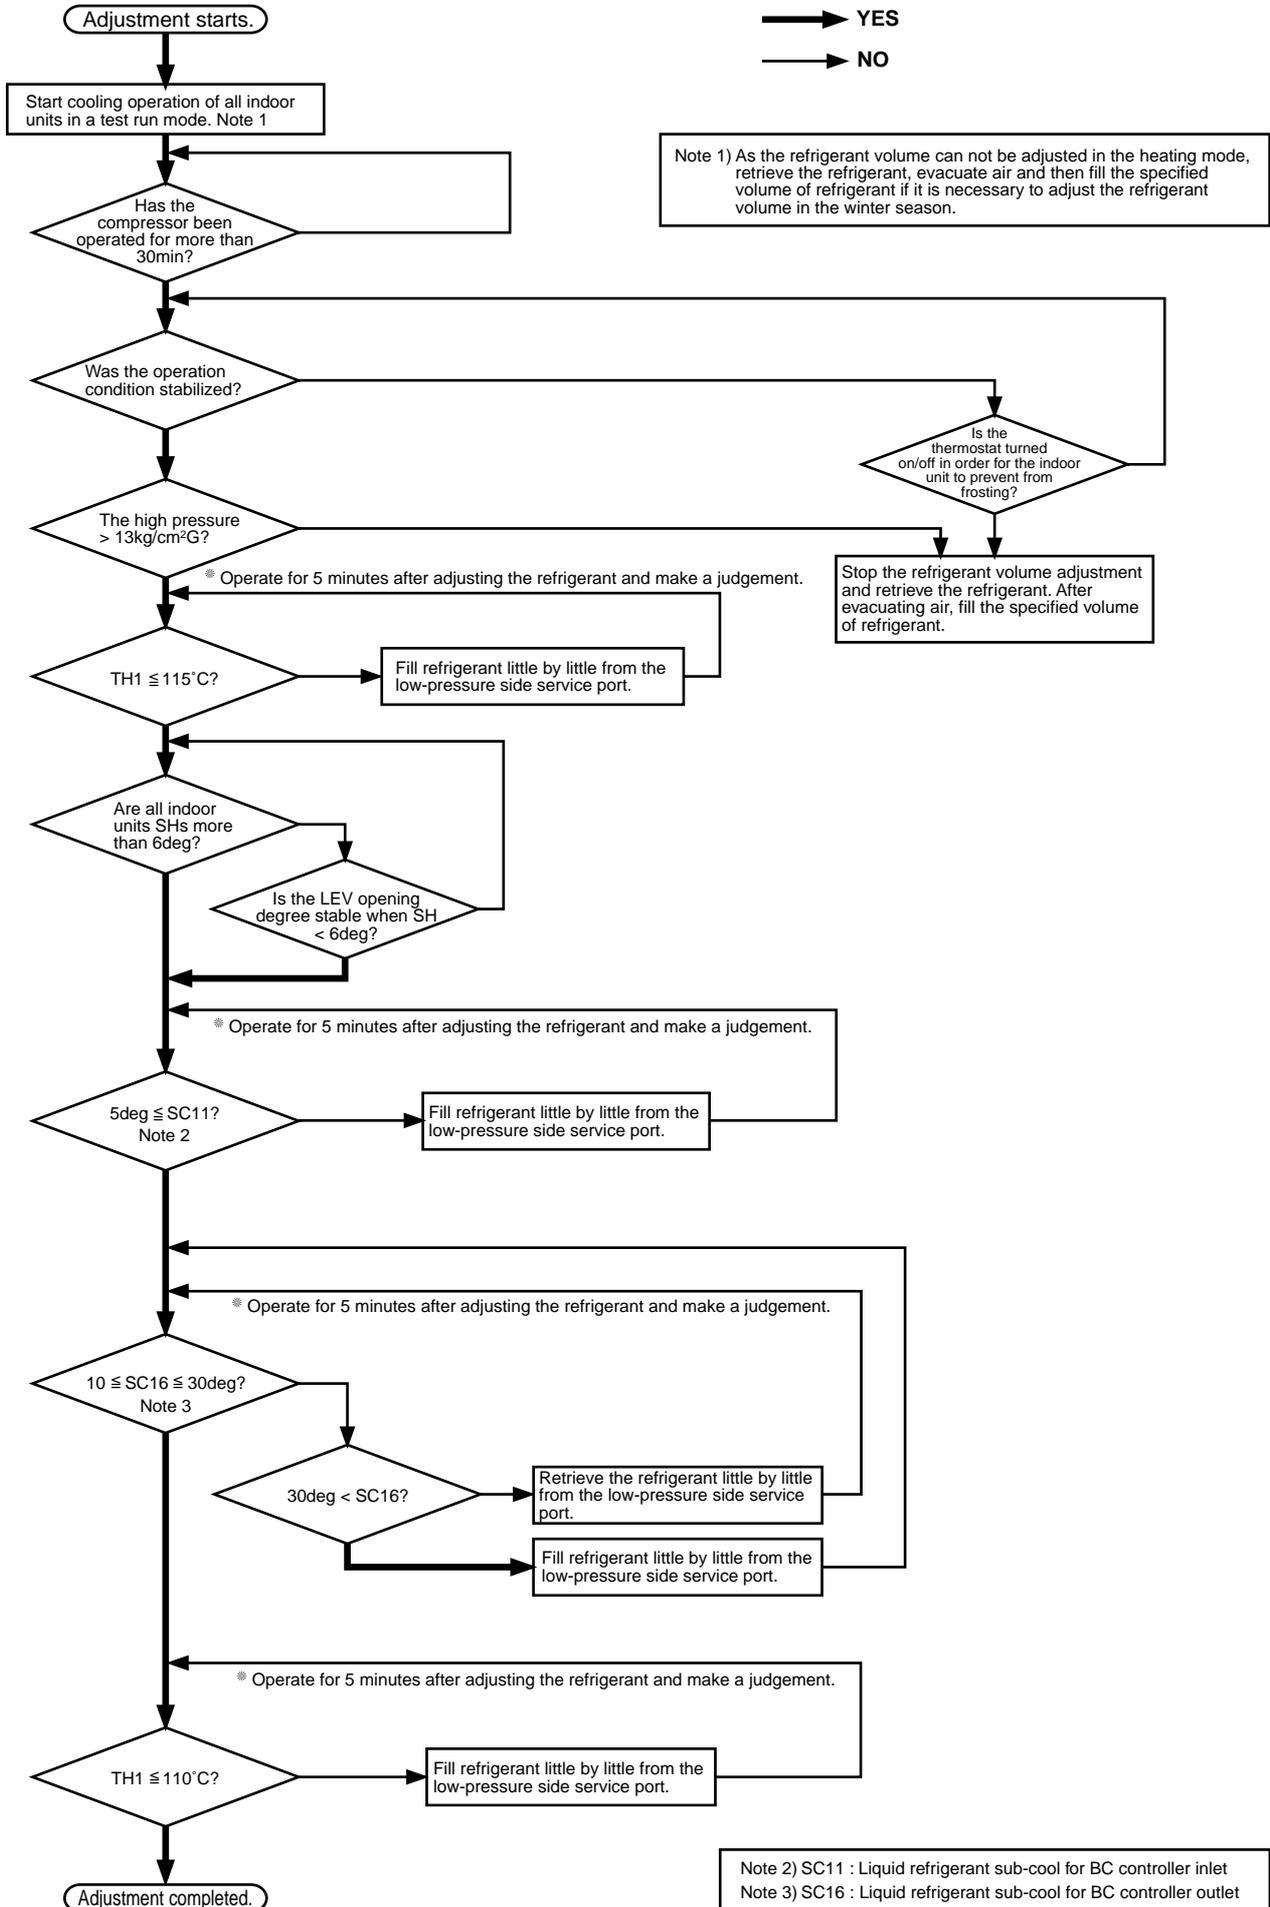

Time required for recovering refrigerant from low pressure service port (minute)

Refrigerant amount to be drawn out (kg)	Low pressure (MPa)		
	0.34~0.44	0.44~0.54	0.54~0.74
1	4.0	3.5	3.5
2	8.0	7.0	6.5
3	12.0	10.5	10.0
4	16.0	14.0	13.0
5	20.0	18.0	16.5
6	24.0	21.5	19.5
7	28.0	25.0	23.0
8	32.0	28.5	26.0
9	36.0	32.0	29.5
10	40.0	35.5	32.5
11	44.0	39.0	36.0

Additional evacuation, refrigerant replacement, and refrigerant replacement

WR2 series has unique refrigerant circuit structure which makes possible 2-pipe cooling-heating simultaneous operations. Therefore, in the case of total replacement or replenishment of refrigerant in this system, the following evacuation and refrigerant replenishment procedures are required.


① Perform evacuation by connecting to system analyzer joint of service port of high pressure ball valve and high pressure charge plug, and joint of service port of low pressure ball valve and low pressure charge plug.

② Perform refrigerant charge from low pressure circuit only, after finishing evacuation, closing vacuum pump valve, shutting off high pressure circuit of system analyzer, and opening valve of refrigerant cylinder.

(In case service port of ball valve and charge plug can not be jointed as shown in the figure, use two vacuum pumps and evacuate high pressure side and low pressure side circuits separately.)

Note 1: Though refrigerant gas itself is harmless, airtight room should be opened before gas release for preventing oxygen shortage.

2: When releasing gas, use blotting paper, etc. so that oil spouted with the gas does not spread out.

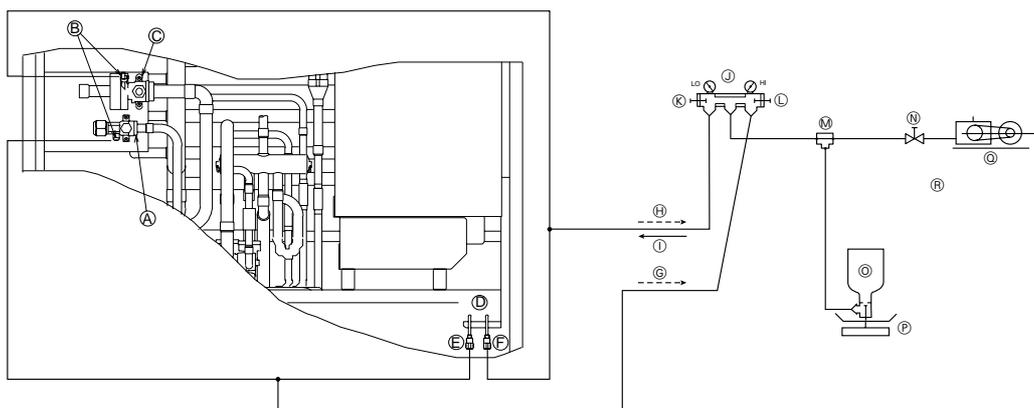

- (A) Ball valve of the high pressure side
- (B) Service port
- (C) Ball valve of the low pressure side
- (D) Charge plug
- (E) High pressure
- (F) Low pressure
- (G) Evacuation
- (H) Evacuation
- (I) Replenish of refrigerant
- (J) System analyzer
- (K) Lo knob
- (L) Hi knob
- (M) 3-way joint

- (N) Valve
- (O) R407C cylinder
- (P) Scale
- (Q) Vacuum pump  
Use a vacuum pump with a reverse flow check valve
- (R) A high-precision gravimeter measurable up to 0.1kg should be used. If you are unable to prepare such a high-precision gravimeter, you may use a charge cylinder.


## 7 TROUBLESHOOTING

### [1] Principal Parts

#### (1) Pressure sensor

1) Check for failure by comparing the sensing pressure according to the high pressure/low pressure pressure sensor and the pressure gauge pressure.

Turn on switches 1, 3, 5, 6 (High) and 2, 4, 5, 6 (Low) of the digital display select switch (SW1) as shown below, and the sensor pressure of the high pressure/low pressure sensors is displayed digitally by the light emitting diode LD1.

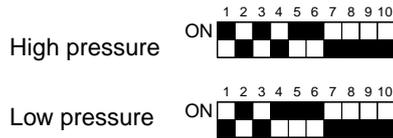


- 1 In the stopped condition, compare the pressure readings from the gauge and from the LD1 display.
  - (a) If the gauge pressure is 0~0.098MPa the internal pressure is dropping due to gas leakage.
  - (b) If the pressure according to the LD1 display is 0~0.098MPa there is faulty contact at the connector, or it is disconnected. Proceed to 4.
  - (c) If the pressure according to the LD1 display is 3.14MPa or higher, proceed to 3.
  - (d) If other than (a), (b) or (c), compare the pressure readings during operation. Proceed to 2.
- 2 Compare the pressure readings from the gauge and from the LD1 display while in the running condition.
  - (a) If the difference between the two pressures is within 0.098MPa, both the affected pressure sensor and the main MAIN board are normal.
  - (b) If the difference between the two pressures exceeds 0.098MPa, the affected pressure sensor is faulty (deteriorating performance).
  - (c) If the pressure reading in the LD1 display does not change, the affected pressure sensor is faulty.
- 3 Disconnect the pressure sensor from the MAIN board and check the pressure according to the LD1 display.
  - (a) If the pressure is 0~0.098MPa on the LD1 display, the affected pressure sensor is faulty.
  - (b) If the pressure is 3.14MPa (in the case of the low pressure sensor, 0.98MPa) or higher, the MAIN board is faulty.
- 4 Disconnect the pressure sensor from the MAIN board and short out the No. 2 and No. 3 pins of the connector (63HS, 63LS), then check the pressure by the LD1 display.
  - (a) If the pressure according to the LD1 display is 3.14MPa (in the case of the low pressure sensor, 0.98MPa) or higher, the affected pressure sensor is faulty.
  - (b) If other than (a), the MAIN board is faulty.

#### 2) Pressure sensor configuration.

The pressure sensors are configured in the circuit shown in the figure at right. If DC 5 V is applied between the red and black wires, a voltage corresponding to the voltage between the white and black wires is output and this voltage is picked up by the microcomputer. Output voltages are as shown below.

High pressure    0.1 V per 0.098MPa  
 Low pressure    0.3 V per 0.098MPa

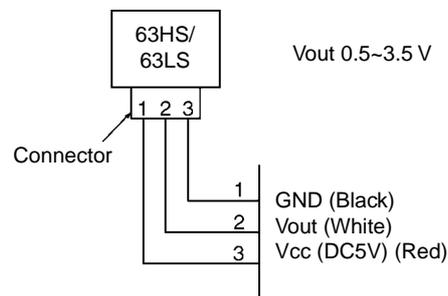

\* Connector connection specifications on the pressure sensor body side.

The connector's pin numbers on the pressure sensor body side differ from the pin numbers on the main circuit board side.


	Sensor body side	MAIN board side
Vcc	Pin 1	Pin 3
Vout	Pin 2	Pin 2
GND	Pin 3	Pin 1

## (2) Solenoid valve (SV1~6, SV71~73)

Check if the control board's output signals and the operation of the solenoid valves match.

Setting the self-diagnosis switch (SW1) as shown in the figure below causes the ON signal of each relay to be output to the LED's.

Each LED shows whether the relays for the following parts are ON or OFF. When a LED lights up, it indicates that the relay is ON.

SW1	LED							
	1	2	3	4	5	6	7	8
				SV1	SV2	SV3	SV4	
	SV5	SV6	SV71	SV72	SV73			

### 1) In the case of SV1 (Bypass Valve)

- When the compressor starts, SV1 is ON for 4 minutes, so check operation by whether the solenoid valve is emitting an operating noise.
- Changes in the operating condition by solenoid valve operation can be confirmed by the temperature of the bypass circuit and the sound of the refrigerant.







### 2) In the case of SV2 (Bypass)

- SV2 goes ON in accordance with the rise in the high pressure in the cooling mode and heating mode, so check its operation by the LED display and the operating noise emitted by the solenoid valve.  
(Conditions during operation: See **Control of Heat Source Unit.**)
- Changes in the operating condition by solenoid valve operation can be confirmed by the temperature of the bypass circuit and the sound of the refrigerant.

### 3) SV3~6, SV71~73 (Control of heat exchanger capacity)

- Operations can be confirmed by LED display and operating sound of solenoid valve, because one or more of SV3~5, SV71 are turned on depending on conditions during cooling-only operations.
- Operation can be confirmed by LED display and operating sound of solenoid valve, because all of SV3~5, SV73 are turned on during heating-only operations.
- Operations can be confirmed by LED display and operating sound of solenoid valve, because one or more of SV3~6, SV71~73 are turned on depending on conditions during cooling-principal and heating-principal operations.

- (d) The refrigerant flow is as following figure. Hot gas (high pressured) flows in cooling mode and cool gas/liquid (low pressured) flows in heating mode. Please refer to the Refrigerant Circuit Diagram.  
 And, ON/OFF of Solenoid valve is depends on the amount of running indoor units, ambient temperature and so on. So please check by LED Monitor Display.  
 The SV coil is taken off, then it is possible to open caps and check plungers. But the special tool which is on the Service Parts List is needed.

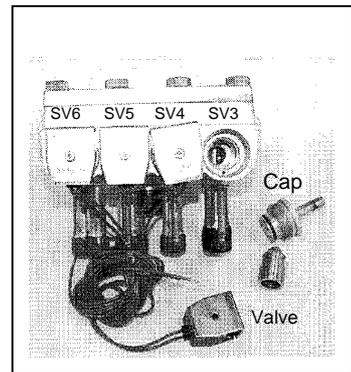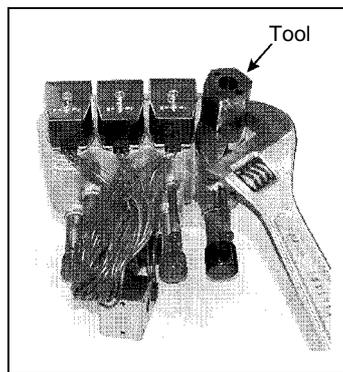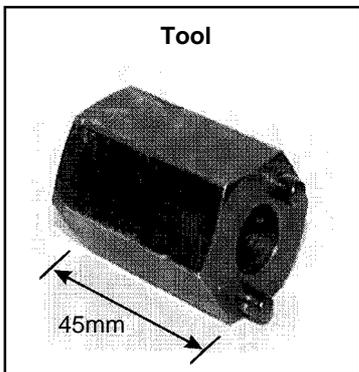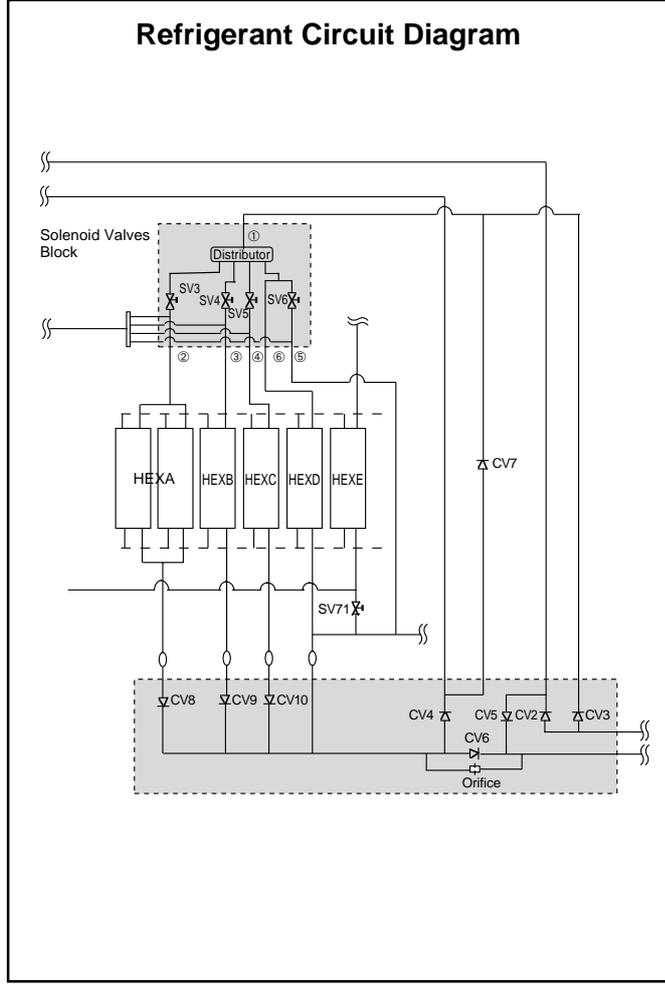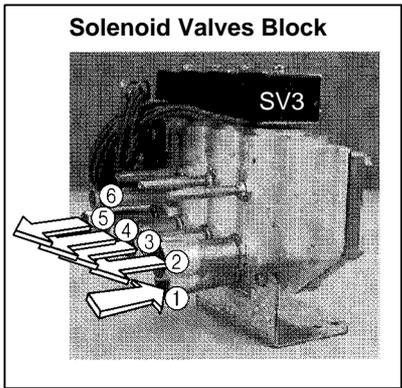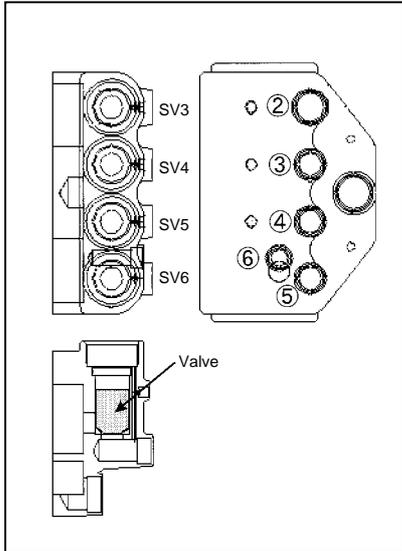


\*Closed torque : 1.3N·m

### (3) LEV

#### • Heat source unit

The valve opening angle changes in proportion to the number of pulses.

(Connections between the heat source unit's MAIN board and SLEV, LEV2)

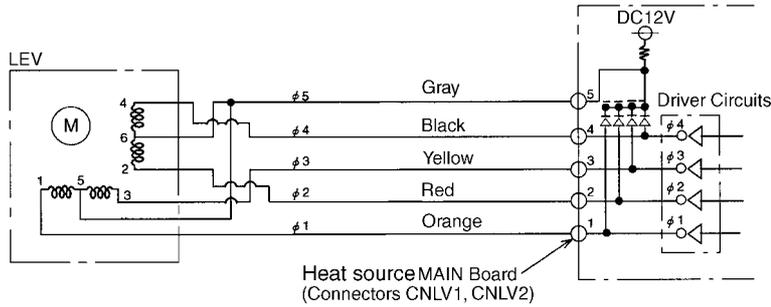

#### Pulse signal output and valve operation

Output (phase)	Output states							
	1	2	3	4	5	6	7	8
$\phi 1$	ON	OFF	OFF	OFF	OFF	OFF	ON	ON
$\phi 2$	ON	ON	ON	OFF	OFF	OFF	OFF	OFF
$\phi 3$	OFF	OFF	ON	ON	ON	OFF	OFF	OFF
$\phi 4$	OFF	OFF	OFF	OFF	ON	ON	ON	OFF


Output pulses change in the following orders when the

Valve is Closed 1→2→3→4→5→6→7→8→1

Valve is Open 8→7→6→5→4→3→2→1→8

- \* 1. When the LEV opening angle does not change, all the output phases are off.
- 2. When the output is out of phase or remains ON continuously, the motor cannot run smoothly, but move jerkily and vibrates.

#### LEV valve closing and valve opening operations

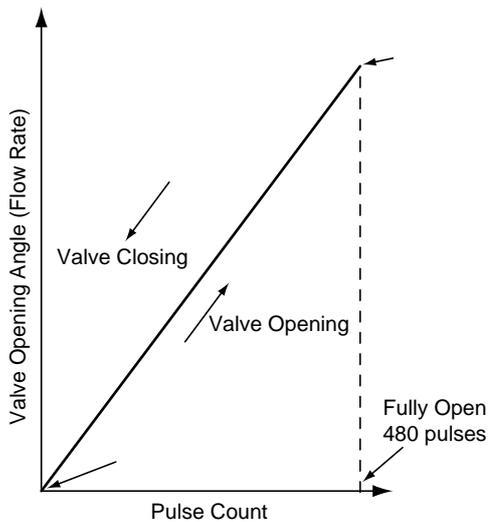


- \* When the power is switched ON, a 520 pulse valve opening signal is output to make sure the valve's position, so that it is definitely at point A. (The pulse signal is output for approximately 17 seconds.)
- \* When the valve operates smoothly, there is no sound from the LEV and no vibration occurs, but when the valve is locked, it emits a noise.
- \* Whether a sound is being emitted or not can be determined by holding a screwdriver, etc. against it, then placing your ear against the handle.
- \* If there is liquid refrigerant inside the LEV, the sound may become lower.

• **BC controller and indoor unit**

- ① LEV receives pulse signal from microcomputer, and operates valve with stepping motor.
- ② Valve opening changes in proportion to the number of pulses.

Connection of microcomputer circuit board and LEV

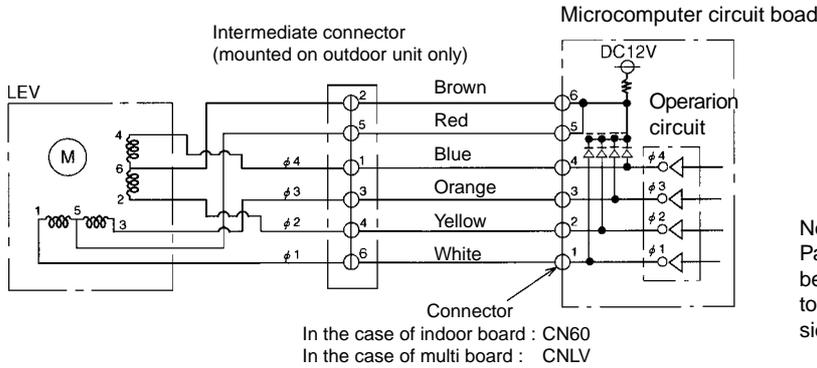


Note:  
Pay attention to colors of lead wires because numbers of intermediate connectors are different from those of circuit board side connectors.

Pulse signal output and valve operations

Output (phase) No.	Output states			
	1	2	3	4
φ1	ON	OFF	OFF	ON
φ2	ON	ON	OFF	OFF
φ3	OFF	ON	ON	OFF
φ4	OFF	OFF	ON	ON

- ① Valve open : Output pulse changes in order of 1→2→3→4→1.  
Valve close : Output pulse changes in order of 4→3→2→1→4.
- ② All output phases are turned OFF when LEV opening does not change.
- ③ In case output phase is lacking or kept "ON," motor can not rotate smoothly, generating ticking sound and vibration.

Closing and opening operations of valve


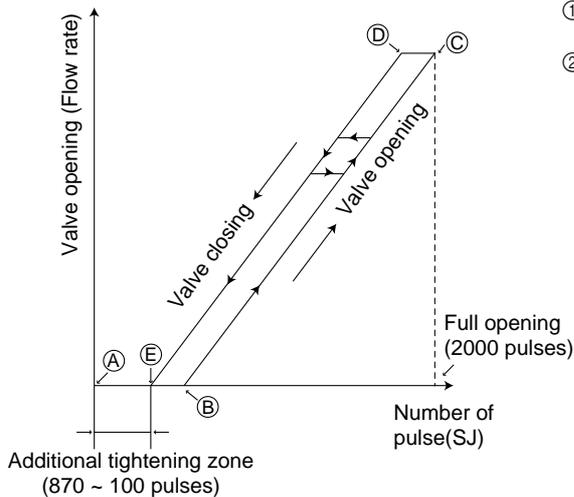


- ① When turning on power source, issue valve closing signal of 2,200 pulses, so that valve opening is located at point A.
- ② When valve runs smoothly, no sound or vibration is generated from LEV. However, big sound is observed when valve opening changes from point E to A or valve is locked.  
(Sound generation can be identified from the bundle of screwdriver attached to the valve.)

• Judgment methods and likely failure mode



Caution:

The specifications of the heat source unit (heat source LEV) and indoor unit (indoor LEV) differ. For this reason, there are cases where the treatment contents differ, so follow the treatment specified for the appropriate LEV as indicated in the right column.

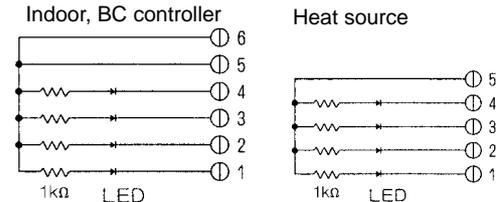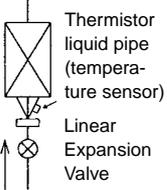Failure Mode	Judgment Method	Treatment	Affected LEV
Microcomputer driver circuit failure	<p>① Disconnect the control board connector and connect the check LED as shown in the figure below.</p>  <p>When the base power supply is turned on, the indoor LEV outputs pulse signals for 10 seconds, the heat source LEV outputs pulse signals for 17 seconds, and BC controller outputs pulse signals for 10-20 seconds. If the LED does not light up, or lights up and remains on, the driver circuit is abnormal.</p>	In the case of driver circuit failure, replace the control board.	Indoor BC controller Heat source
LEV mechanism is locked.	<p>① If the LEV is locked up, the drive motor turns with no load and a small clicking sound is generated. Generation of this sound when the LEV is fully closed or fully open is abnormal.</p>	Replace the LEV.	Indoor BC controller Heat source
The LEV motor coils have a disconnected wire or is shorted.	<p>Measure the resistance between the coils (red - white, red - orange, brown - yellow, brown - blue) using a tester. They are normal if the resistance is within <math>150\Omega \pm 10\%</math>.</p>	Replace the LEV coils.	Indoor BC controller
	<p>Measure the resistance between the coils (gray - orange, gray - red, gray - yellow, gray - black) using a tester. They are normal if the resistance is within <math>46\Omega \pm 3\%</math>.</p>	Replace the LEV coils.	Heat source
Fully closed failure (valve leaks)	<p>① If you are checking the indoor unit's LEV, operate the indoor unit's blower and the other indoor units in the cooling mode, then check the piping temperatures (liquid pipe temperatures) of the indoor units by the operation monitor through the heat source unit's control board. When the fan is running, the linear expansion valve is fully closed, so if there is leakage, the temperature sensed by the thermistor (liquid pipe temperature sensor) will become low. If the temperature is considerably low compared to the remote control's intake temperature display, it can be judged that there is a fully closed failure. In the case of minimal leakage, it is not necessary to replace the LEV if there are no other effects.</p> 	If there is a large amount of leakage, replace the LEV.	Indoor BC controller
Faulty wire connections in the connector or faulty contact.	<p>① Check for pins not fully inserted on the connector and check the colors of the lead wires visually. ② Disconnect the control board's connector and conduct a continuity check using a tester.</p>	Check the continuity at the places where trouble is found.	Indoor BC controller Heat source

• **Heat source LEV (SLEV) coil removal procedure (configuration)**


As shown in the figure, the heat source LEV is made in such a way that the coils and the body can be separated.

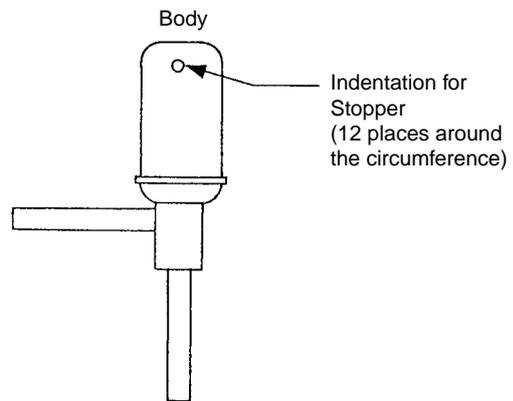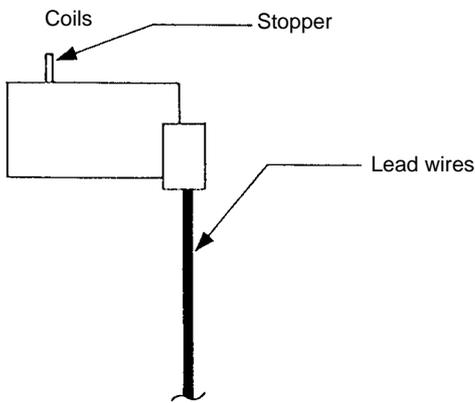

<Removing the coils>


Fasten the body tightly at the bottom (Part A in the figure) so that the body will not move, then pull out the coils toward the top. If they catch on the stopper and are difficult to take out, turn the coils left and right until the stoppers are free from the stopper indentations, then pull the coils out.

If you take out the coils only without gripping the body, undue force will be applied to the piping and the pipe may be bent over, so be sure to fasten the body in such a way that it will not move.

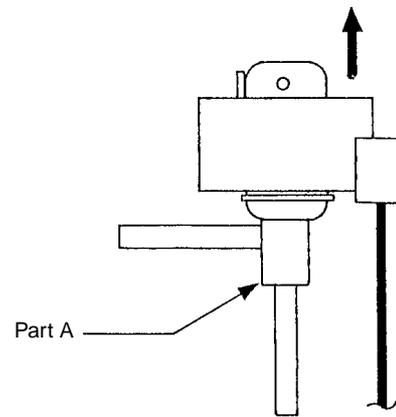

<Installing the coils>

Fasten the body tightly at the bottom (Part A in the figure) so that the body will not move, then insert the coils from the top, inserting the coils' stopper securely in one of the indentations on the body. (There are four indentations for the stopper on the body around its circumference, and it doesn't matter which indentation is used. However, be careful not to apply undue force to the lead wires or twist them around inside the body.) If the coils are inserted without gripping the body, it may exert undue force on the piping, causing it to become bent, so be sure to hold the body firmly so that it won't move when installing the coils.


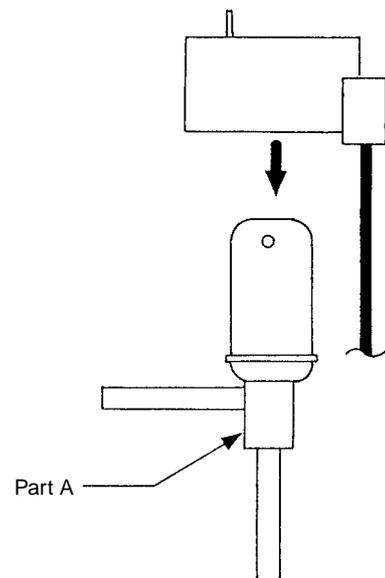


**(4) Check valves block**





The refrigerant flow in the pipe ⑥, ⑦, ⑧ and ⑨ are depend on ON/OFF of the SV3, 4, 5 and 6.

Please confirm by LED monitor display.

You can open the cap of valve A, B and C, but 3 types of hexagon socket screw keys. The size is as follows.

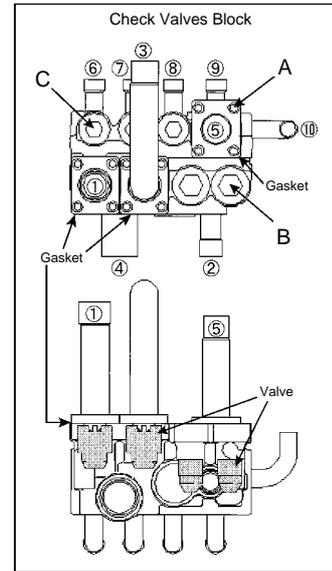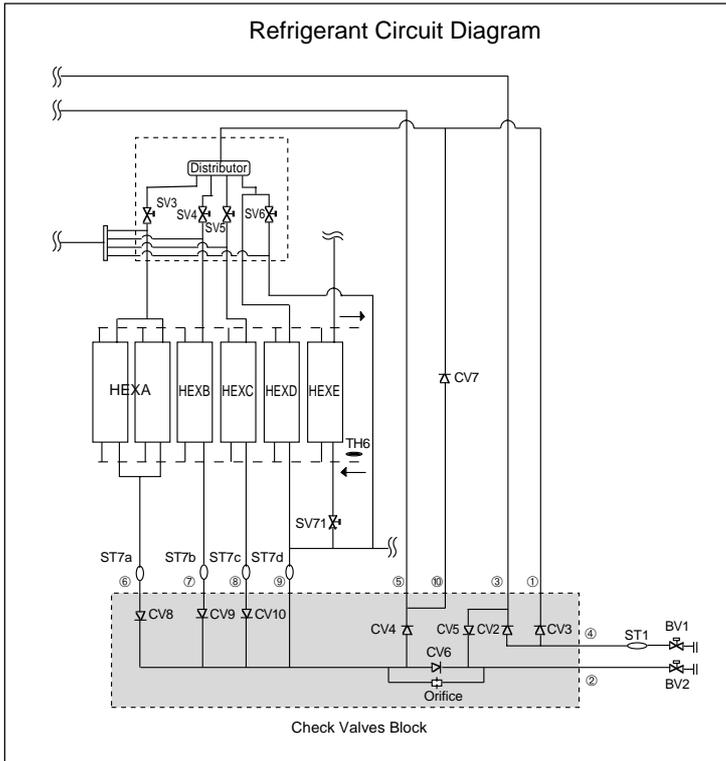

- \* Closed torque : A : 1.7kg·m (0.17N·m)
- B : 20kg·m (2.0N·m)
- C : 13kg·m (1.3N·m)

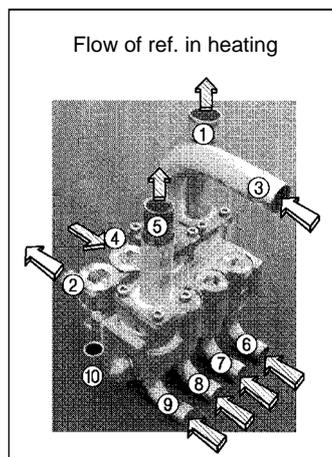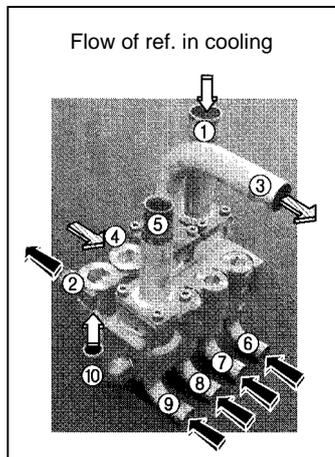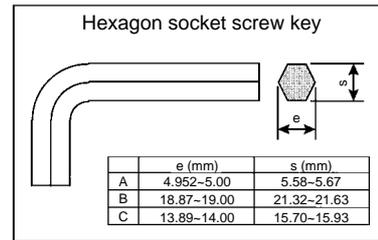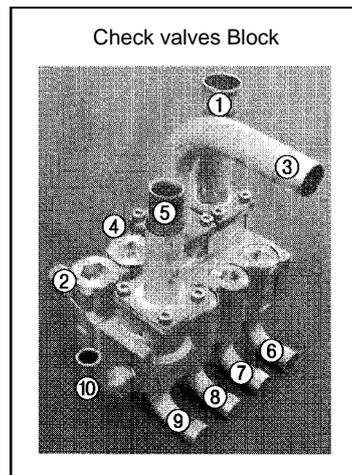

- High pressure gas
- High pressure liquid
- Low pressure gas/liquid

Solenoid valves (SVA, SVB, SVC)

Coordination signals output from the board and solenoid valve operations.

**Note 1 : (SVA, SVB, SVC)**


SVA, SVB and SVC are turned on and off in accordance with operation mode.

Mode \ Branch port	Cooling	Heating	Stopped	Defrosting
SVA	ON	OFF	OFF	OFF
SVB	OFF	ON	OFF	OFF
SVC	ON	OFF	OFF	OFF


**Note 2 : (SVA, SVB, SVC)**

Measure temperature of piping on either side of SVA ①-A

Measure temperature of piping on either side of SVB ①-B

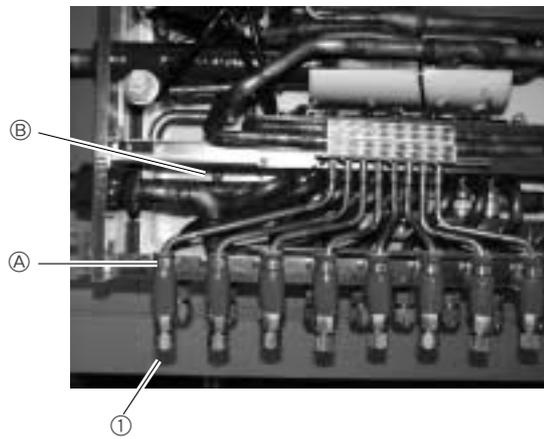

BC controller transformer

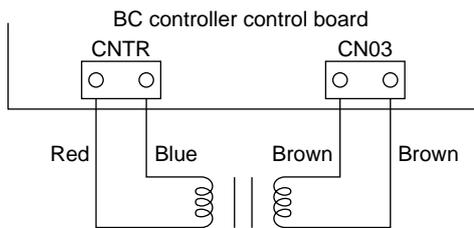


	Normal	Malfunction
CNTR(1)-(3)	Approximately 90Ω	Open or shorted
CN03(1)-(3)	Approximately 1.7Ω	

\* Disconnect the connector before measurement.

## [2] BC Controller Disassembly Procedure


### (1) Service panel

Be careful on removing heavy parts.

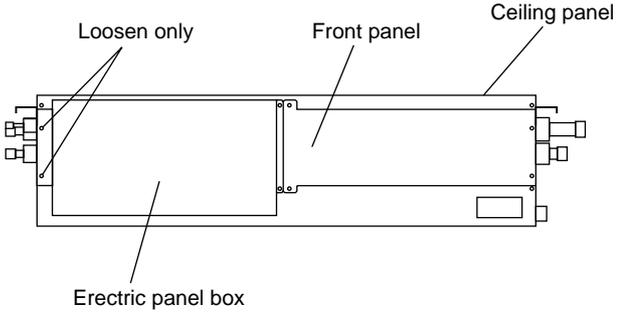Procedure	Illustrations
<p>1. Remove the two screws securing the electric panel box. Loosen the two screws securing the electric panel box, and then remove the box.</p> <p>2. Remove the four screws securing the front panel and then remove the panel.</p> <p>3. Remove the nine screws securing the ceiling panel and then remove the panel.</p>	


### (2) Control Box

Be careful on removing heavy parts.

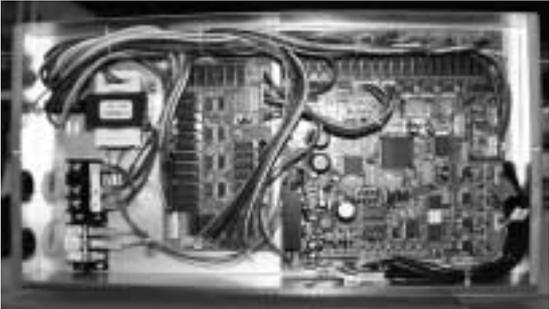
Procedure	Photos
<p>Removing the two screws that secures the electric panel box cover provides access to the controller board and all of the relay board for checking. So it is not necessary to work according to above 2.</p>	

**(3) Thermistor (Liquid and gas piping temperature detection)**

Be careful when removing heavy parts.

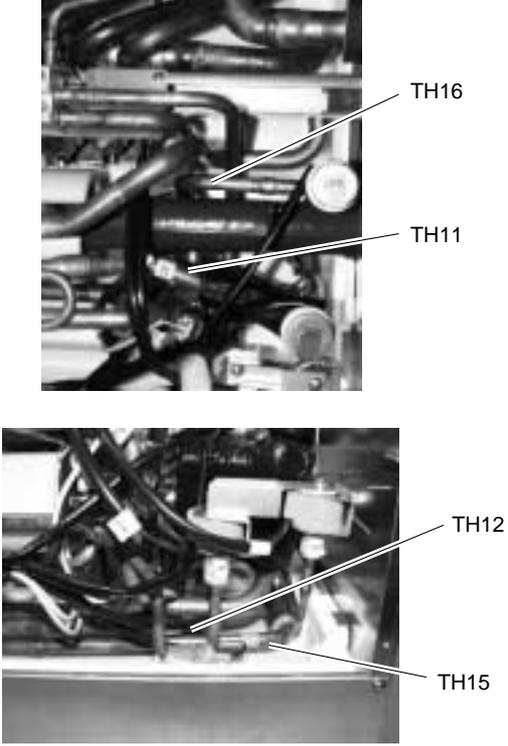
Procedure	Photos
<p>1. Remove the front panel</p> <p>① Use the procedure under (1)-1.2.3 to check TH11, TH12, TH15, and TH16.</p> <p>2. Disconnect the piping sensor lead from the controller panel.</p> <p>① TH11 - TH12 (CN10)</p> <p>② TH15, TH16 (CN11)</p> <p>3. Pull the temperature sensor from the temperature sensor housing and replace it with a new sensor.</p> <p>4. Connect the temperature sensor lead securely to the controller board.</p>	 <p>The top photograph shows a close-up of a piping system with two thermistors labeled TH16 and TH11. TH16 is located higher up on a vertical pipe, while TH11 is on a lower horizontal pipe. The bottom photograph shows another section of the piping system with two thermistors labeled TH12 and TH15. TH12 is on a vertical pipe, and TH15 is on a horizontal pipe.</p>

**(4) Pressure Sensor**

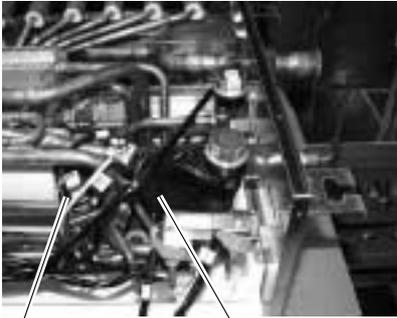Procedure	Photos
<p>1. Remove the front panel.</p> <p>① Use the procedure under (1)-1.2 to check PS1 and PS3.</p> <p>2. Disconnect the connector of the applicable pressure sensor from the controller board and insulate the connector.</p> <p>① Liquid pressure sensor (CNP1)</p> <p>② Intermediate pressure sensor (CNP3)</p> <p>3. Install a new pressure sensor at the location shown in the photograph, and plug the connector into the controller board.</p> <p><b>Important</b></p> <p>① In the case of gas leakage from the pressure sensor, take actions to fix the leak before performing the above procedure.</p>	 <p>The photograph shows a complex piping system with two pressure sensors labeled PS3 and PS1. PS3 is located on a vertical pipe on the left side, and PS1 is on a horizontal pipe on the right side.</p>

**(5) LEV**

Be careful on removing heavy parts.

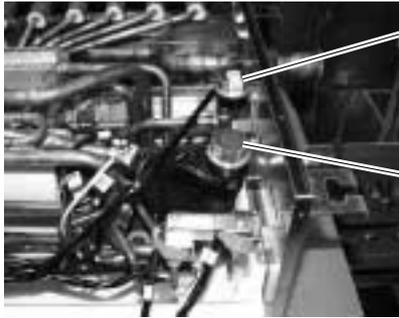Procedure	Photos
<p>1. Remove the service panel. See (1)-1.2.3</p> <p>2. Replace the applicable LEV.</p> <p><b>Important!</b></p> <p>① When performing the above procedure, be sure to allow for enough service space in the ceiling area for welding.</p> <p>② When conditions require, the unit can be lowered from the ceiling before starting work.</p>	 <p>LEV3</p> <p>LEV1</p>

**(6) Solenoid Valve Coil**

Procedure	Photos
<p>1. Remove the service panel. See (1)-1.2.3</p> <p>2. Disconnect the connector of the applicable solenoid valve.</p> <p>3. Remove the solenoid valve coil.</p> <p>① SVA, SVB solenoid valve coils can be serviced from the maintenance port. SVC can serviced from the back if service space is available in the back. To remove the back panel, remove the four screws that secure it.</p>	 <p>Solenoid valve</p>

## (7) Transmission Power Circuit (30 V) Check Procedure

If “

No.	Check Item	Judgment	Response
1	Disconnect the transmission line from TB3 and check the TB3 voltage.	DC24~30 V	Check the transmission line for the following, and correct any defects. Broken wire, short circuit, grounding, faulty contact.
		Except the above-mentioned	to No. 2
2	Check if the following connectors are disconnected in the outdoor unit's control box. MAIN Board: CNS1, CNVCC3, CNVCC4 INV Board: CNVCC2, CNVCC4, CNL2, CNR, CNAC2	Connector disconnected	Connect the connectors as shown on the electric wiring diagram plate.
		Except the above-mentioned	to No. 3
3	Disconnect the wires from CNVCC3 on the Main board and check the voltage between pins 1 and 3 on the wire side of the CNVCC3. Tester ⊕ ..... 1 pin Tester ⊖ ..... 3 pin	DC24~30 V	Check the wiring between CNS1 and TB3 for the following, and correct any defects. Broken wire, short circuit, grounding, faulty contact. If there is no trouble, replace the Main board.
		Except the above-mentioned	to No. 4
4	Disconnect the wiring from CNVCC2 on the INV board and check the voltage between pins 1 and 3 of CNVCC2. Tester ⊕ ..... 1 pin Tester ⊖ ..... 3 pin	DC24~30 V	Check the wiring between CNVCC2 and CNVCC3 for the following, and correct any defects. Broken wire, short circuit, grounding, faulty contact.
		Except the above-mentioned	to No. 5
5	Disconnect the wiring from CNL2 on the INV board, and check the resistance at both ends of choke coil L2.	0.5~2.5Ω	to No. 6
		Except the above-mentioned	Replace choke coil L2.
6	Disconnect the wiring from CNR on the INV board, and check the resistance at both ends of R7.	19~25Ω	to No. 7
		Except the above-mentioned	Replace R7.
7	Check the resistance at both ends of F01 on the INV board.	0Ω	to No. 8
		Except the above-mentioned	Replace F01
8	Check the voltage between pins 1 and 3 of CNAC2 on the INV board.	AC198~264 V	Replace the INV board.
		Except the above-mentioned	to No. 9
9	Check the voltage between L2 and N on power supply terminal block TB1.	AC198~264 V	Check the wiring to CNAC2 for the following and correct any defects. Broken wire, faulty contact.
		Except the above-mentioned	Check the power supply wiring and base power supply, and correct any defects.


**(8) Investigation of transmission wave shape/noise**

Control is performed by exchanging signals between heat source unit, indoor unit and remote controller by M-NET transmission. If noise should enter into the transmission line, the normal transmission will be hindered causing erroneous operation.

1) Symptom caused by the noise entered into transmission line

Cause	Erroneous operation	Error code
Noise entered into transmission line	Signal changes and is misjudged as the signal of other address.	6600
	Transmission wave shape changes to other signal due to noise.	6602
	Transmission wave shape changes due to noise, and can not be received normally thus providing no reply (ACK).	6607
	Transmission can not be made continuously due to the entry of fine noise.	6603
	Transmission can be made normally, but reply (ACK) or answer can not be issued normally due to noise.	6607 6608

2) Method to confirm wave shape

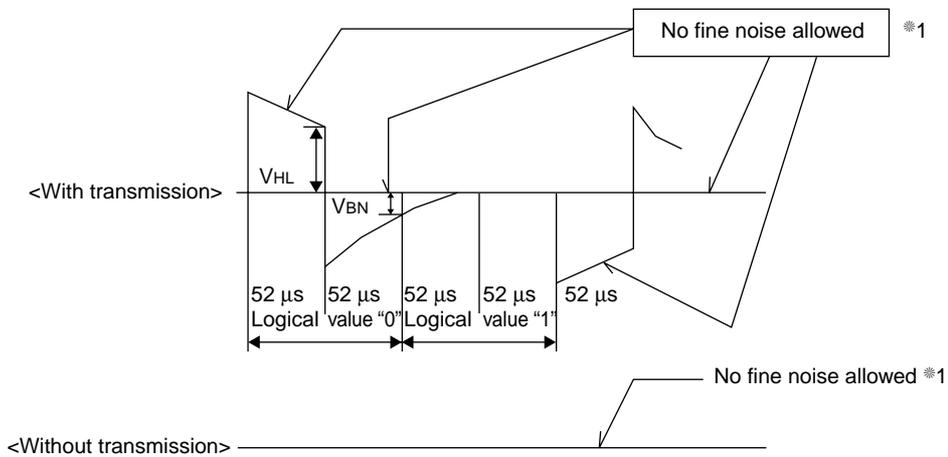

Check the wave shape of transmission line with an oscilloscope to confirm that the following conditions are being satisfied.

- ① The figure should be 104μs/bit ± 1%.
- ② No finer wave shape (noise) than the transmission signal (52μs ± 1%) should be allowed. \*1
- ③ The sectional voltage level of transmission signal should be as follows.

Logic value	Transmission line voltage level
0	V <sub>HL</sub> = 2.0V or more
1	V <sub>BN</sub> = 1.3V or less

\*1 However, minute noise from the DC-DC converter or inverter operation may be picked up.

3) Checking and measures to be taken

(a) Measures against noise

Check the items below when noise can be confirmed on wave shape or the error code in the item 1) is generated.

Items to be checked		Measures to be taken
Checking for wiring method	① Wiring of transmission and power lines in crossing.	Isolate transmission line from power line (5cm or more). Never put them in a same conduit.
	② Wiring of transmission line with that of other system in bundle.	Wire transmission line isolating from other transmission line. Wiring in bundle may cause erroneous operation like crosstalk.
	③ Use of shield wire for transmission line (for both indoor unit control and centralized control).	Use specified transmission wire. Type : Shield line CVVS/CPEVS Wire diameter : 1.25mm <sup>2</sup> or more
	④ Repeating of shield at the repeating of transmission line with indoor unit.	The transmission line is wired with 2-jumper system. Wire the shield with jumper system as same for transmission line. When the jumper wiring is not applied to the shield, the effect against noise will be reduced.
	⑤ Are the unit and transmission lines grounded as instructed in the INSTALLATION MANUAL?	Connect to ground as shown in the INSTALLATION MANUAL.
Check for earthing	⑥ Earthing of the shield of transmission line (for indoor unit control) to heat source unit.	One point earthing should be made at heat source unit. Without earthing, transmission signal may be changed as the noise on the transmission line has no way to escape.
	⑦ Arrangement for the shield of transmission line (for centralized control).	For the shield earth of the transmission line for centralized control, the effect of noise can be minimized if it is from one of the heat source units in case of the group operation with different refrigerant systems, and from the upper rank controller in case the upper rank controller is used. However, the environment against noise such as the distance of transmission line, the number of connecting sets, the type of connecting controller, and the place of installation, is different for the wiring for centralized control. Therefore, the state of the work should be checked as follows. a) No earthing • Group operation with different refrigerant systems One point earthing at heat source unit • Upper rank controller is used Earthing at the upper rank controller b) Error is generated even though one point earth is being connected. Earth shield at all heat source units.  Connect to ground as shown in the user's manual.

(b) When the wave height value of transmission wave shape is low, 6607 error is generated, or remote controller is under the state of "HO."

Items to be checked		Measures to be taken
⑧ The farthest distance of transmission line is exceeding 200m.	Confirm that the farthest distance from heat source unit to indoor unit/ remote controller is less than 200m.	
⑨ The types of transmission lines are different.	Use the transmission wire specified. Type of transmission line : Shield wire CVVS/CPEVS Wire dia. of transmission line : 1.25mm <sup>2</sup> or more	
⑩ No transmission power (30V) is being supplied to the indoor unit or the remote control.	Refer to "Transmission Power Supply (30V) Circuit Check Procedure."	
⑪ Faulty indoor unit/remote controller.	Replace heat source unit circuit board or remote controller.	


**(9) Troubleshooting at breaker tripping**

Check items	Measures to be taken
① Check the breaker capacity.	The breaker's capacity should be proper.
② Check the a short circuit or grounding in the electrical system other than the inverter.	Correct any defects.
③ Check the resistance between terminals on the terminal block TB1A for power source. ① 0 ~ several ohms or improper megohm value	Check each part inside the inverter power circuit (resistance, megohm or the like). a) Diode stack Refer to "Troubleshooting of diode stack." b) IPM Refer to "Troubleshooting of IPM." c) Rush current protection resistor d) Electromagnetic contactor e) DC reactor ※ For c) ~ e), refer to "Individual Parts Failure Judgment Methods."
④ Checking by powering again.	
① Main power source circuit breaker tripping ② No display of remote controller	
⑤ Operational check by operating air conditioner	
① Normal operation without breaker tripping.	a) As there is a possibility of instantaneous short circuit generated, find the mark of the short circuit for repair. b) When a) is not applicable, the compressor may be faulty.
② Breaker tripping	The ground fault of inverter output/compressor can be supposed. Disconnect the wiring to the compressor and check the insulation resistance of the following parts with a megger. a) Compressor terminals. b) Inverter output.

## (10) Troubleshooting the major components of the BC controller

### 1) Pressure sensor

#### Pressure sensor troubleshooting flow

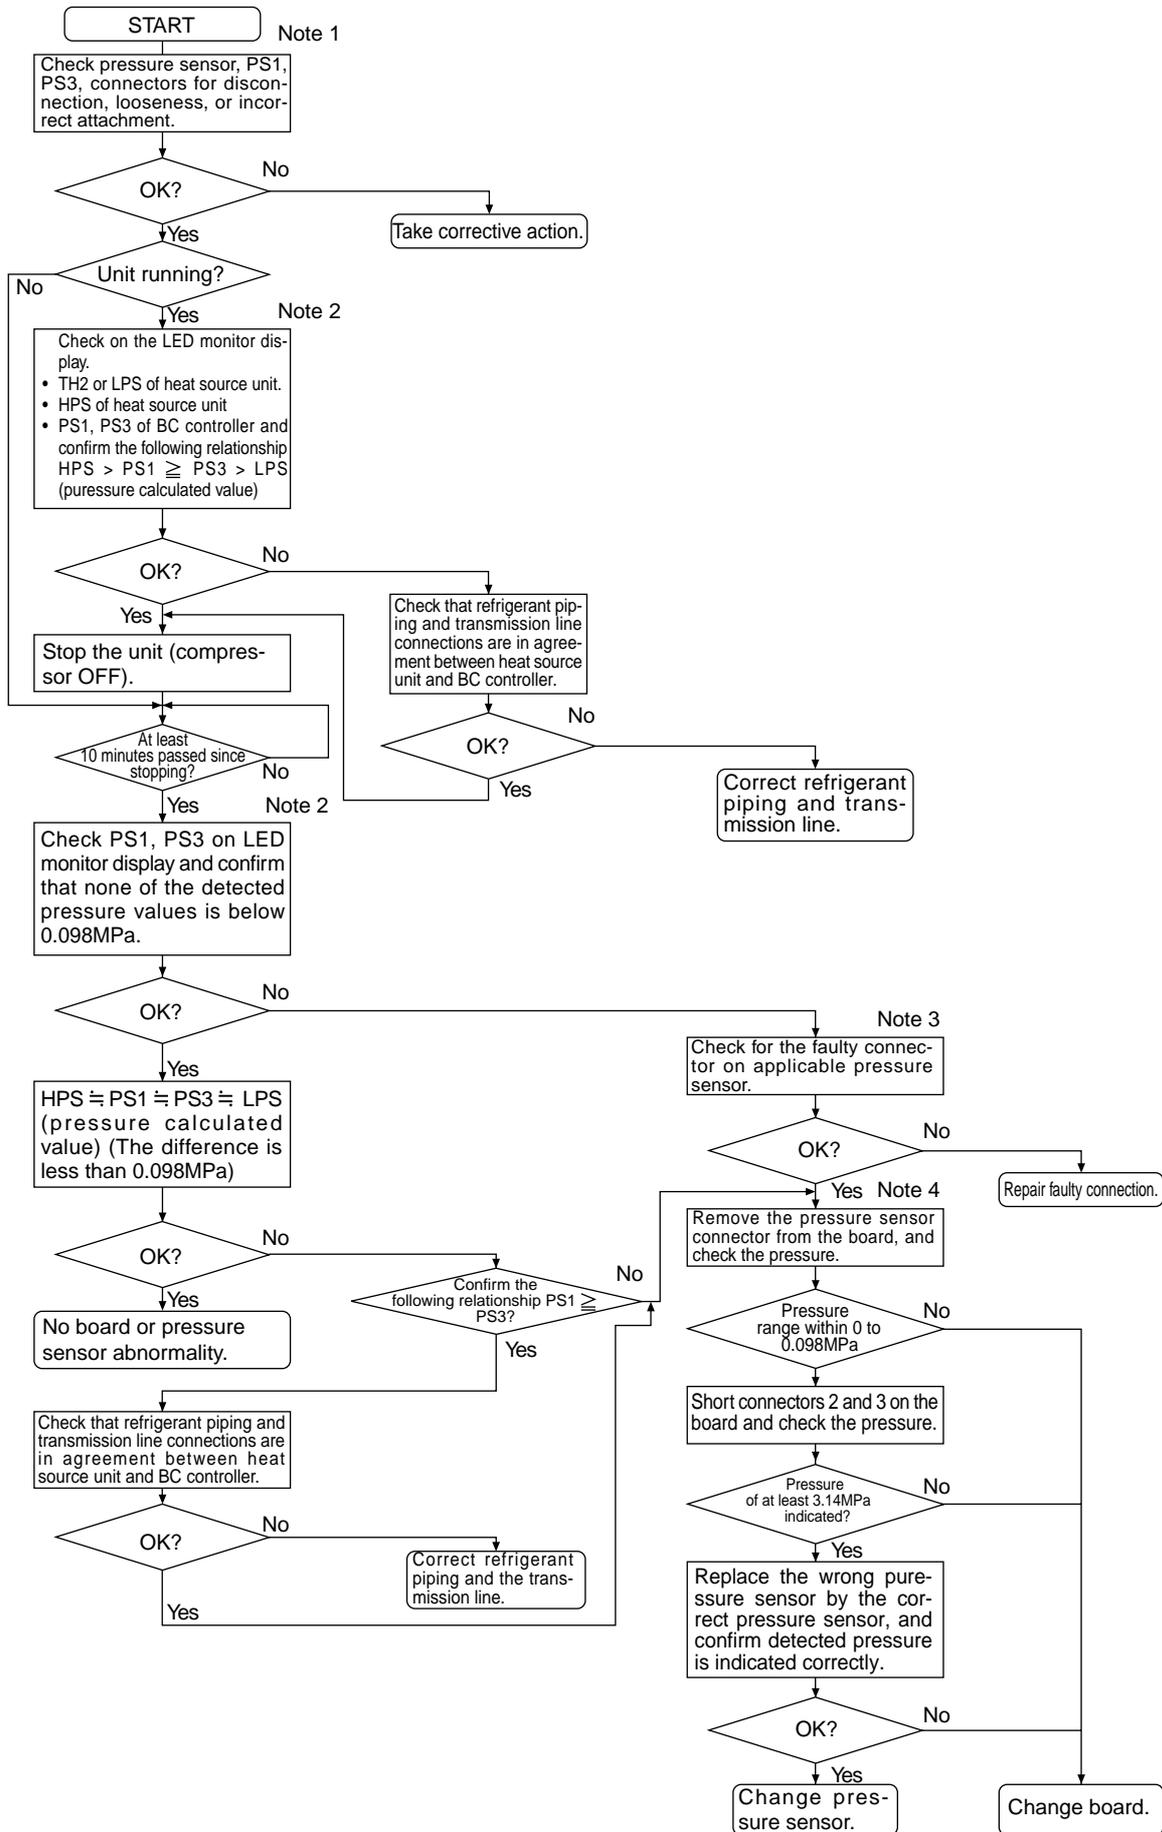



Note 1 :

- Symptoms of incorrect connection of BC controller pressure sensor to the board

Symptom						
Cooling-only	Cooling-principal		Heating-only		Heating-principal	
Normal	Insufficient cooling.	SC11 large SC16 small $\Delta$ PHM < 0	Warm indoor SC small. Warm indoor thermo ON especially noise.	SC11 small SC16 small $\Delta$ PHM < 0	Insufficient heating Warm indoor SC small Warm indoor thermo ON especially noise	SC11 large SC16 small $\Delta$ PHM < 0

Note 2 :

- Check using LED monitor display switch (heat source unit MAIN board SW1)

Measured Data	Signal	SW1 Setting
High pressure	HPS	ON 
Low pressure	LPS	ON 
BC controller pressure (liquid measurement) (intermediate)	PS1	ON 
	PS3	ON 


Note 3 :

- Check CNP1 (liquid measurement) and CMP3 (intermediate) connectors on BC controller board for disconnection or looseness.

Note 4 :


- With the sensor of the applicable connector removed from the board, use the LED monitor display switch (Note 1) to check the pressure value.

Pressure Sensor Replacement Precaution

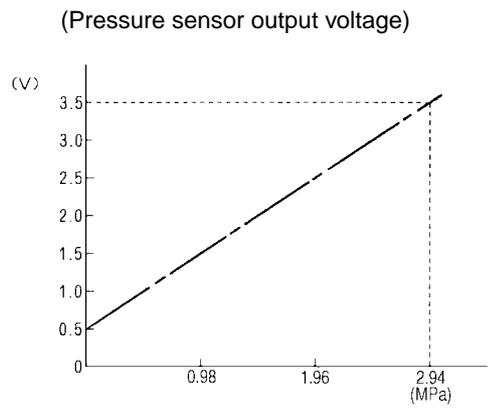


## 2) Temperature sensor

### Thermistor troubleshooting flow

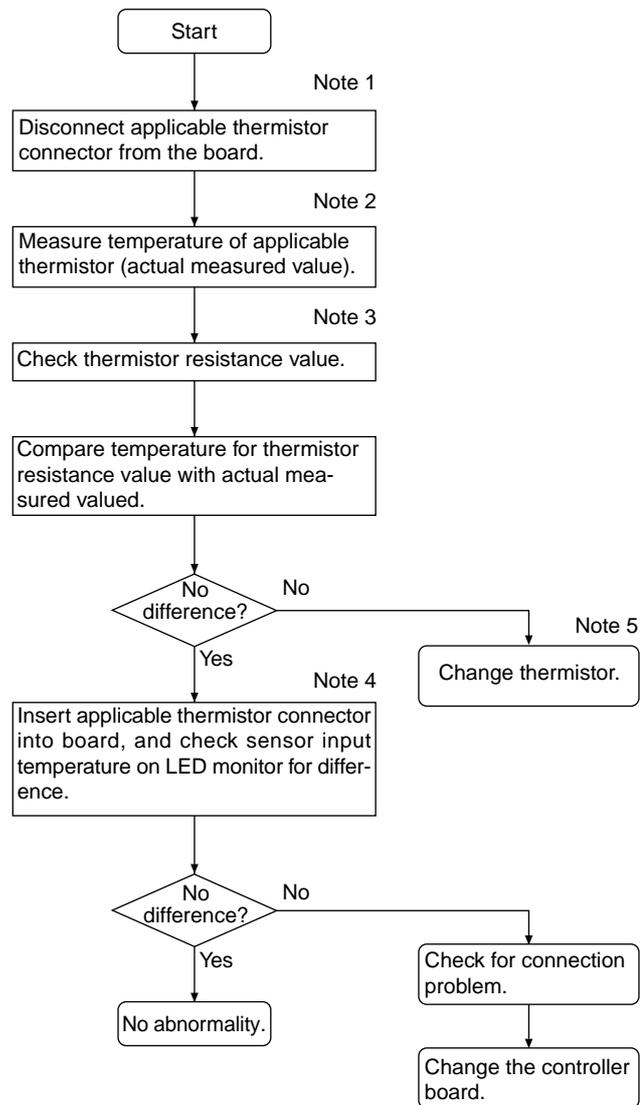

Note 1 :


- Board connector CN10 corresponds to TH11 through TH12, while connector CN11 corresponds to TH15 through TH16. Remove the applicable connector and check the sensor for each number.

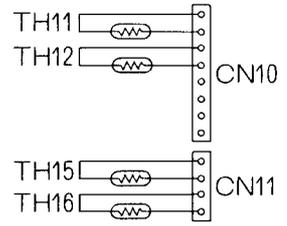

Note 2, 3 :


- Pull the sensor connector from the I/O board. Do not pull on the lead wire.
- Measure resistance using a tester or other instrument.
- Compare measured values with values on the graph below. A value within a range of  $\pm 10\%$  is normal.

Resistance measurement point (connector)



Touch the probes of the tester or other instrument to the shaded areas to measure.

Temperature sensor resistance (graph)

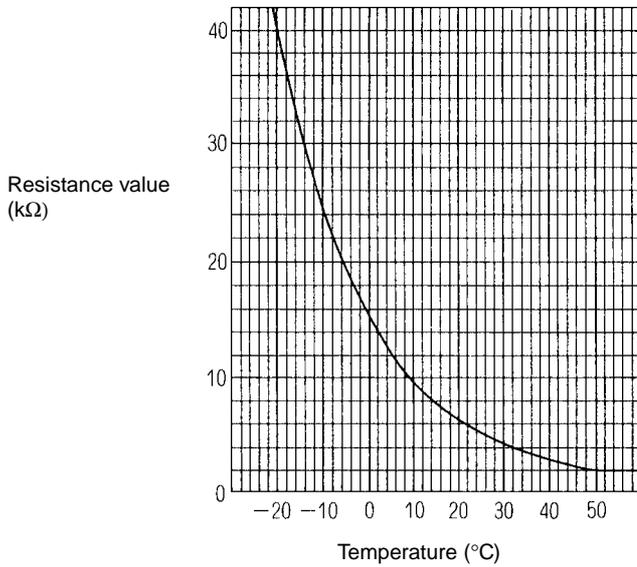

Thermistor  $R_0=15\text{ k}\Omega$


$$R_t = 15 \exp 3460 \left\{ \left( \frac{1}{273+t} - \frac{1}{273t} \right) \right\}$$

Note 4 :

- Check using LED monitor display switch (outdoor MAIN board SW1)

Measured Data	Signal	SW1 Setting
Liquid inlet temperature	TH11	ON
Bypass outlet temperature	TH12	ON
Bypass outlet temperature	TH15	ON
Bypass inlet temperature	TH16	ON

3) LEV, solenoid valve troubleshooting flow

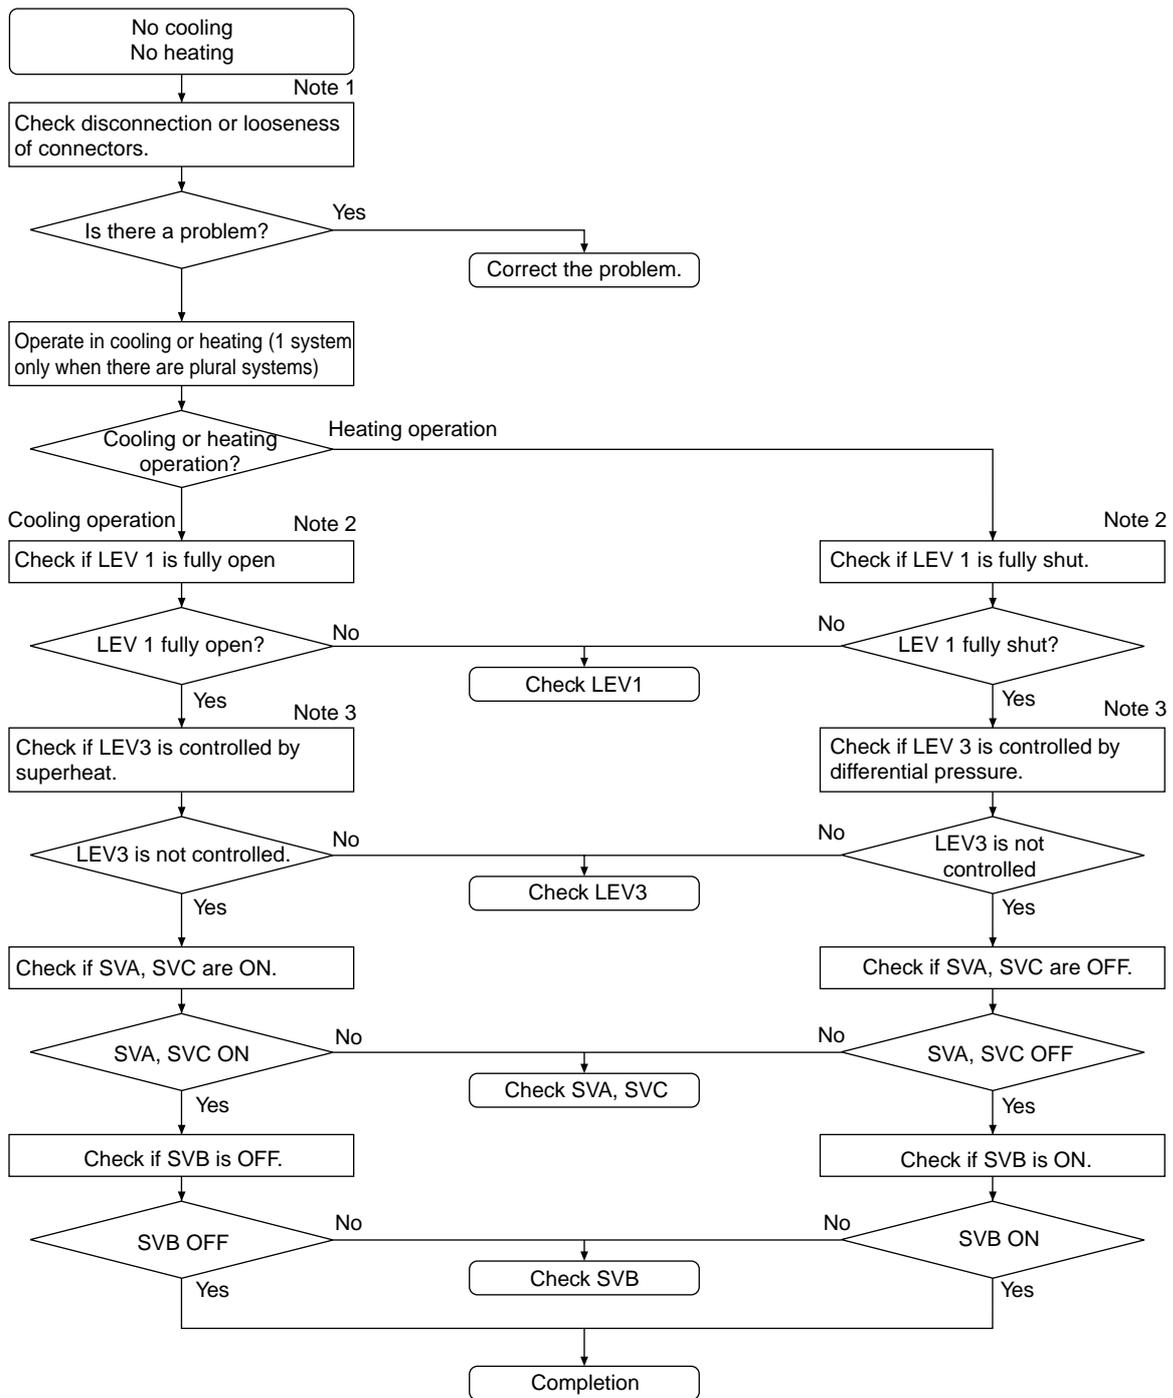

① LEV

**Note 1 :**

- Symptoms of incorrect connection to BC controller LEV board

LEV No.	1	3	Cooling-only	Cooling-main	Heating-only	Heating-main
1)	1	3	Normal	←	←	←
2)	3	1	Insufficient cooling SH12 small, SC11 small SC16 small Branch piping SC small	Insufficient cooling, insufficient heating SH12 small, SC11 small SC16 large, Branch piping SC small △ PHM large	Heating indoor SC small △ PHM large	Insufficient cooling Heating indoor SC small △ PHM large

Improper installation is the same for ① and ②, so it is omitted here.

**Note 2 : Method for checking LEV full open, full closed condition**



- ① Check LEV full opening (pulse) using the LED monitor display (outdoor controller board SW1).  
Full opened: 2000 pulses  
Full closed: 60 pulses (LEV 1 may be greater than 60 during full heating operation.)
- ② With LEV full opened, check for pressure differential by measuring temperature of piping on both sides.
- ③ With LEV full closed, check for refrigerant noise.

**Note 3 : Use the following table to determine opening due to LEV differential pressure control and superheat control.**


- BC controller LEV basic operation characteristics

Region	Failure mode	Operating mode	Description	Normal range
LEV1 pulse	Small	Heating-only	High pressure (PS1) - medium pressure (PS3) is large.	0.20~0.34MPa
	Large	Heating-main Cooling-main	High pressure (PS1) - medium pressure (PS3) is small.	
LEV3 pulse	Small	Cooling-only Cooling-main	SH12 is large.	SH12<25
		Heating-only Heating-main	High pressure (PS1) - mid pressure (PS3) is small.	0.20~0.34MPa
	Large	Cooling-only Cooling-main	SC16 and SH12 are small.	SC16>6 SH12>5
		Heating-only Heating-main	High pressure (PS1) - mid pressure (PS3) is large.	0.20~0.34MPa


(Self-diagnostic monitor)

Measured data	Signal	Heat source unit MAIN board SW1 setting
LEV 1 pulse	-	ON 
LEV 3 pulse	-	ON 
BC controller bypass output superheat	SH12	ON 
BC controller intermediate subcool	SC16	ON 
BC controller liquid subcool	SC11	ON 

(Solenoid Valve Troubleshooting Flow)

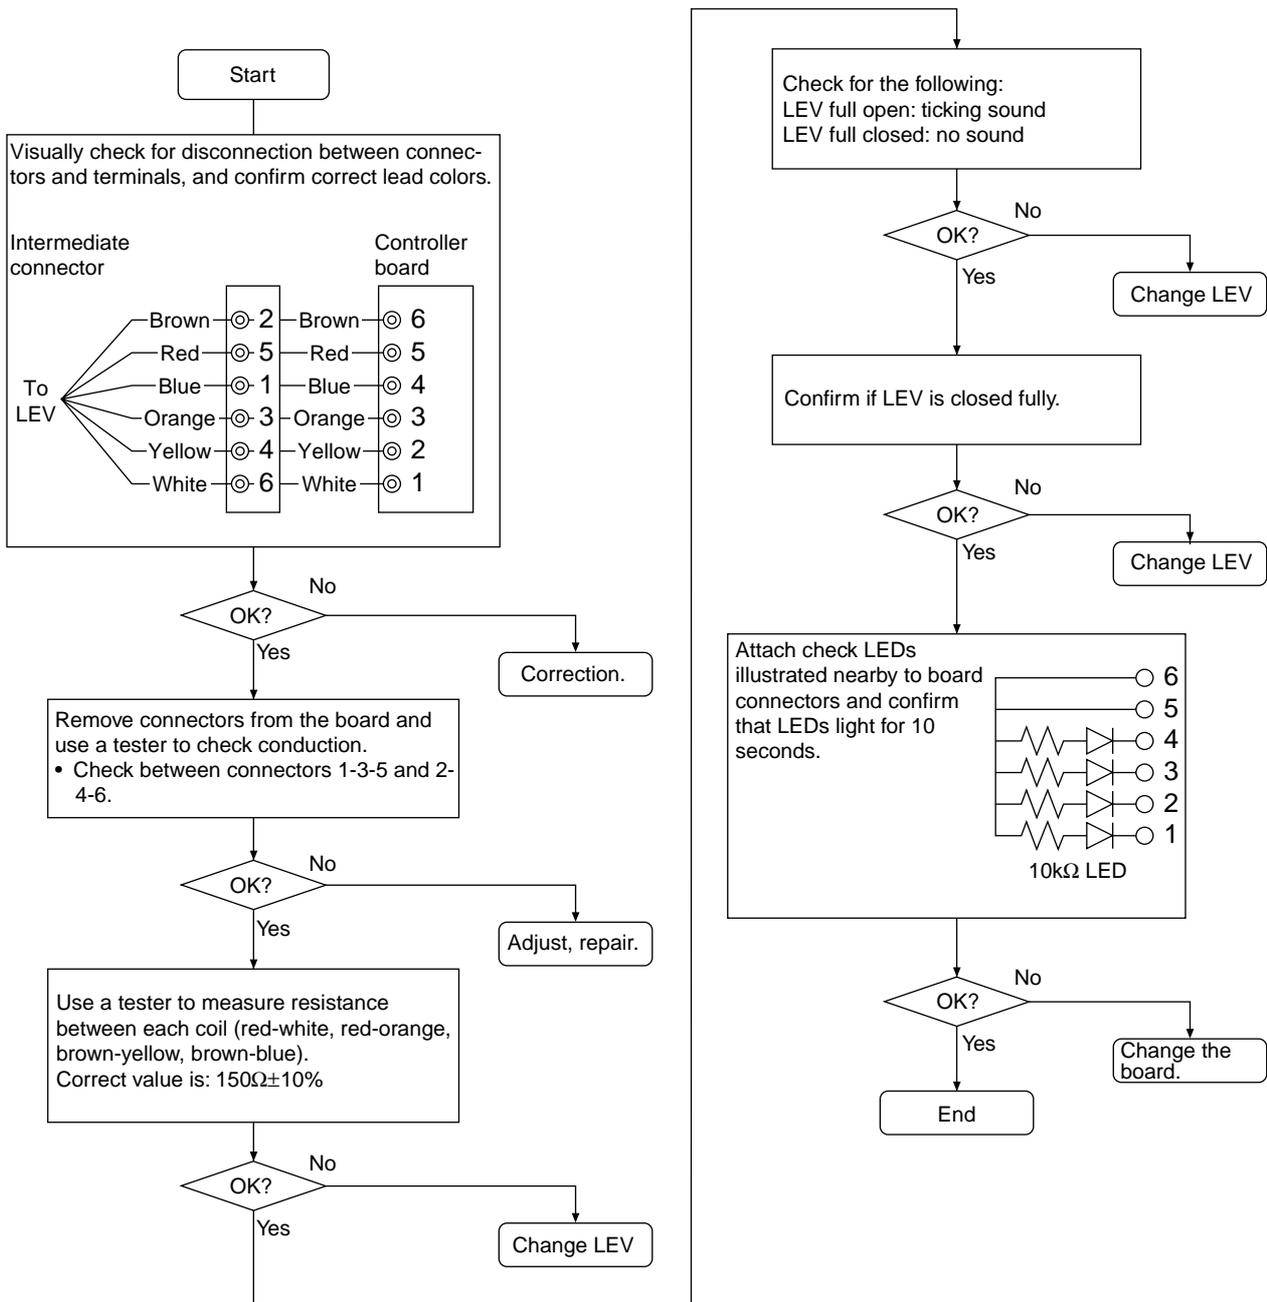

② Solenoid Valve

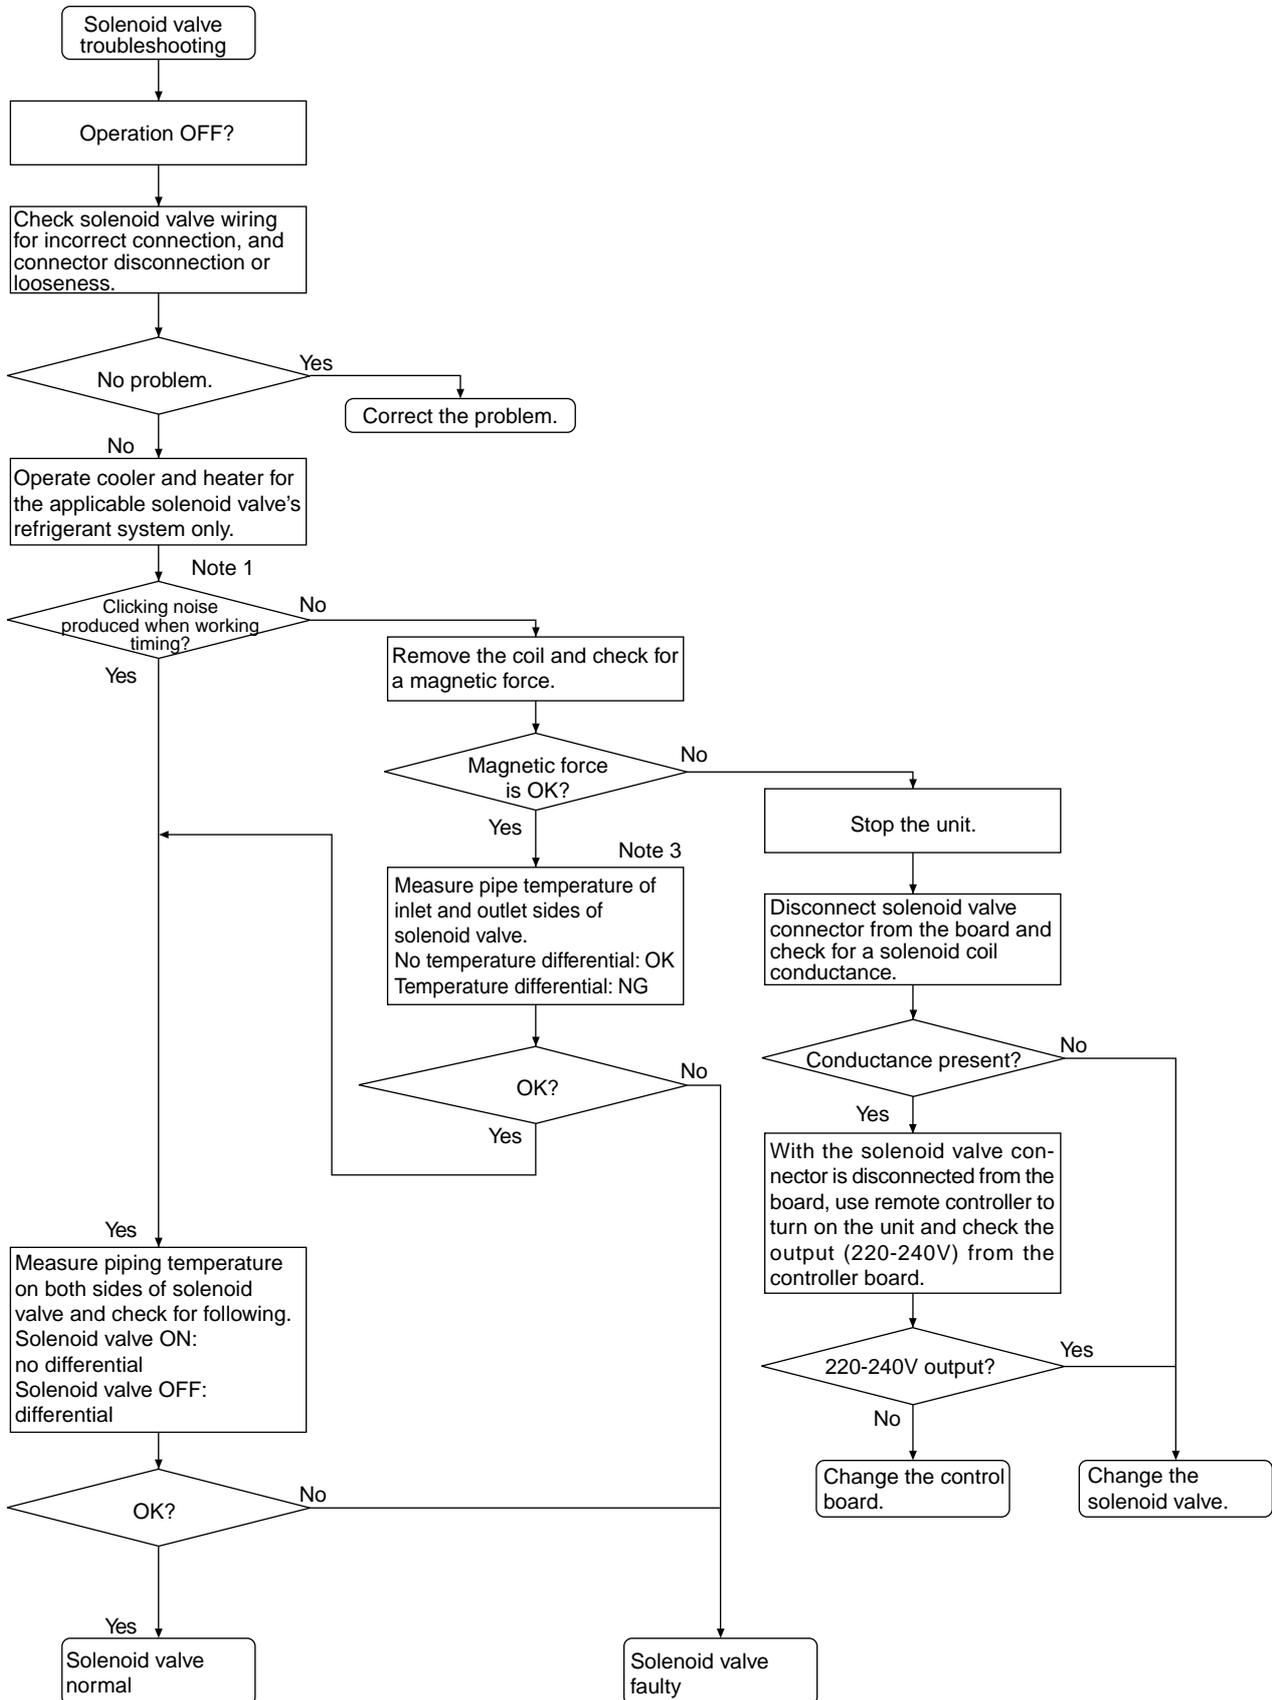

### [3] Inverter and Compressor

- a. **Replace only the compressor** if only the compressor is found to be defective.  
(Overcurrent will flow through the inverter if the compressor is damaged, however, the power supply is automatically cut when overcurrent is detected, protecting the inverter from damage.)
- b. Replace the defective components if the inverter is found to be defective.
- c. If both the compressor and the inverter are found to be defective, replace the defective components of both devices.

#### (1) Inverter related defect identification and countermeasures

	Error display/failure condition	Measure/inspection item
[1]	Inverter related errors (0403, 4200, 4220, 4230, 4240, 4250, 4260, 5110, 5301)	<p>☑ [3] Check the details of the inverter error in the error log at the outdoor PCB LED monitor display.</p> <p>☑ [2] Perform the measures corresponding to the error code and error details determined using the remote control error display self diagnosis and countermeasures.</p>
[2]	Main power breaker trip	<p>a. Check the breaker capacity.</p> <p>b. Electrical system short circuit or grounding other than the inverter</p> <p>c. Refer to 3)-[1] if not a, or b.</p>
[3]	Main power earth leakage breaker trip	<p>a. Earth leakage breaker capacity/sensitivity current check</p> <p>b. Meg defect for electrical system other than the inverter</p> <p>c. Refer to 3)-[1] if not a, or b.</p>
[4]	Only the Compressor does not operate.	<ul style="list-style-type: none"> <li>• Check the inverter frequency at the LED monitor and proceed to 2)-[3] if the status is operational</li> </ul>
[5]	The compressor always vibrates strongly or emits an abnormal noise.	Go to 2)-[3].
[6]	Noise has penetrated the peripheral device.	<p>a. Check to ensure that power supply wiring, etc. of the peripheral device is not in close contact with the power supply wiring of outdoor unit.</p> <p>b. Check to ensure that the inverter output wiring is not in close contact with the power supply wiring and transmission lines.</p> <p>c. Check to ensure that the transmission line shield wiring is being used properly in the necessary environment, and that the shield wire ground is appropriate.</p> <p>d. Meg defect for electrical system other than the inverter</p> <p>e. Attach a ferrite core to the inverter output wiring. (Please contact the factory for details of the service part settings)</p> <p>f. Change the power to another system.</p> <p>g. If this problem occurs suddenly, there is a possibility that the inverter output is grounded. Proceed to 2)-[3].</p> <p>* Contact the factory for cases other than those listed above.</p>
[7]	Sudden malfunction (as a result of external noise.)	<p>a. Check to ensure that the unit is grounded.</p> <p>b. Check to ensure that the transmission line shield wiring is being used properly in the necessary environment, and that the shield wire ground is appropriate.</p> <p>c. Check to ensure that the neither the transmission line or external connection wiring run close to another power supply system or run through the same conduct pipe.</p> <p>* Contact the factory for cases other than those listed above.</p>

1. Due to a large capacity electrolytic capacitor used in the inverter, voltage still flows through even after cutting the main power, creating the possibility of electric shock. As a result, wait for a sufficient length of time (5-10 min) after cutting the main power and check the voltage at both terminals of the electrolytic capacitor to performing any checks on the inverter.
2. Damage will result to the components of IPM, etc. if the inverter wiring is not properly secured with screws, or if the connector has not been properly inserted. It is likely that any errors occurring after replacing components are the result of wiring mistakes. Ensure that the wiring, screws, connectors and Faston, etc. are properly inserted.
3. Do not remove or insert inverter connectors with the main power supply on, as this will result in damage to the PCB.
4. The current sensor will be damaged if current flows without connecting to the PCB. Always insert connectors into the corresponding PCB when running the inverter.

## (2) Treatment of Inverter Output Related Troubles


	Check item	Phenomena	Treatment
[1] Check the INV board error detection circuit.	Perform the following: ① Disconnect INV board CND2. After removing, turn on the outdoor unit and check the error status. (The compressor does not operate because CND2, which carries the IPM drive signal, has been disconnected.)	① IPM/overcurrent error. (4250)	• Replace INV board.
		② ACCT sensor circuit error. (5301 detailed No. 6)	See to [7] [1] (5) 4) "Current Sensor ACCT" Check the resistance and replace if erroneous. Replace the INV board if the ACCT status is normal.
		③ ACCT sensor circuit error. (5301 detailed No. 13)	• INV board error detection circuit is normal. Because IPM can not drive, if the CND2 is disconnected.
[2] Check for compressor ground fault or coil error.	Disconnect the compressor wiring, and check the compressor Meg, and coil resistance.	① Compressor Meg failure Error if less than 1MΩ. * When no refrigerant is accumulated in the compressor. ② Compressor coil resistance failure Coil resistance value of 0.48Ω (20°C)	• Replace compressor Check whether the refrigerant is accumulating in the compressor again.
[3] Check to see if the inverter is damaged. * Perform this check if an error occurs immediately before or after turning on the compressor.	Perform the following: ① Reconnect the connector removed at item [1]. ② Disconnect the compressor wiring. ③ Turn on SW1-1 on the INV board. Operate the outdoor unit after above steps. Check the inverter output voltage. * It is recommend to use the tester used to determine the [7] [1] (5) 5) IPM troubleshooting when checking the inverter output voltage. * Measure when the inverter output frequency is stable.	① IPM/overcurrent error. (4250)	• Refer to item [5] for inverter circuit trouble.
		② There is a high possibility of an inverter circuit error if the voltage unbalance across all wiring is greater than the larger of the values represented by 5% or 5V.	See item [2]. Proceed to item [5] however if there is no problem at [2]. Replace the compressor if there is no problem at [5].
[4] Check to see if the inverter is damaged. * Perform this check if an error occurs during steady operation.	Turn on the outdoor unit. Check the inverter output voltage. * It is recommend to use the tester used to determine the [7] [1] (5) 5) IPM troubleshooting when checking the inverter output voltage. * Measure when the inverter output frequency is stable.	① There is a high possibility of an inverter circuit error if the voltage unbalance across all wiring is greater than the larger of the values represented by 5% or 5V.	• Refer to item [5] for inverter circuit trouble.
		② No voltage unbalance across all wiring	See item [2]. Proceed to item [5] however if there is no problem at [2]. Replace the compressor if there is no problem at [5].

	Check item	Phenomena	Treatment
[5] Check the inverter circuit trouble.	① Check to see if the IPM screw terminal is loose.	① Screw terminal is loose.	• Check all IPM screw terminals and tighten.
	② Check the exterior of the IPM.	② IPM is cracked due to swelling.	• IPM replacement Check the operation in [3] or [4] after replacing the IPM. In the case of an output voltage unbalance or error recurrence: → Replace the G/A board In the case of an output voltage unbalance or error recurrence after replacement: → Replace the INV board
	③ Check the resistances between each terminal of IPM. Refer to [7] [1] (5) 5) for details on IPM troubleshooting.	③ Resistance error between each terminal of IPM.	• IPM replacement Check the operation in [3] or [4] after replacing the IPM. In the case of an output voltage unbalance or error recurrence: → Replace the G/A board In the case of an output voltage unbalance or error recurrence after replacement: → Replace the INV board
		④ All normal for items ①-③ above	• IPM replacement In the case of an output voltage unbalance or error recurrence after replacement: → Replace the G/A board In the case of an output voltage unbalance or error recurrence after replacement: → Replace the INV board

### (3) Trouble Measures when Main Power Breaker Tripped

	Check item	Phenomena	Treatment
[1]	Perform Meg check between the terminals in the power terminal block Tba.	① Zero to several ohm, or Meg failure.	Check each part in the main inverter circuit. * Refer to "Simple checking Procedure for individual components of main inverter circuit". a. Diode Stack b. IPM c. Rush current protection resistor d. Electromagnetic relay e. DC reactor f. Noise filter
[2]	Turn on the power again and check once more.	① Main power breaker trip	
		② No remote control display	
[3]	Turn on the outdoor unit and check that it operates normally.	① Operates normally without tripping the main breaker.	a. There is a possibility that the wiring shorted momentarily. Trace the short and repair. b. If a. above is not the case, there is a possibility that there was a compressor failure.
		② Main power breaker trip	• A compressor ground fault can be considered. Go to (2)-[2].

#### (4) Simple Checking Procedure for Individual Components of Main Inverter Circuit

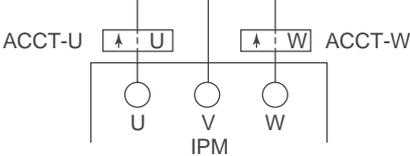Part name	Judgement method																						
Diode Stack	Refer to "Determining Diode Stack Troubleshooting" (Z [1] (5) 6))																						
IPM (Intelligent Power Module)	Refer to "Determining IPM interference" (Z [1] (5) 5))																						
Rush current protection resistor R1, R5	Measure the resistance between terminals: 4.5~5.5kΩ																						
Electromagnetic contactor (52C)	<p>Measure the resistance value at each terminal.</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <table border="1" style="border-collapse: collapse; text-align: center;"> <tr> <td></td> <td>A2</td> <td>A1</td> <td></td> </tr> <tr> <td>1/L1</td> <td></td> <td>3/L2</td> <td>5/L3</td> </tr> <tr> <td colspan="4" style="height: 40px;"></td> </tr> <tr> <td>2/T1</td> <td>4/T2</td> <td>6/T3</td> <td></td> </tr> </table> <table border="1" style="border-collapse: collapse; text-align: center;"> <thead> <tr> <th>Check Location</th> <th>Judgement value</th> </tr> </thead> <tbody> <tr> <td>A1-A2</td> <td>0.1k~1.3kΩ</td> </tr> <tr> <td>1/L1-2/T1 3/L2-4/T2 5/L3-6/T3</td> <td>∞</td> </tr> </tbody> </table> </div>		A2	A1		1/L1		3/L2	5/L3					2/T1	4/T2	6/T3		Check Location	Judgement value	A1-A2	0.1k~1.3kΩ	1/L1-2/T1 3/L2-4/T2 5/L3-6/T3	∞
	A2	A1																					
1/L1		3/L2	5/L3																				
2/T1	4/T2	6/T3																					
Check Location	Judgement value																						
A1-A2	0.1k~1.3kΩ																						
1/L1-2/T1 3/L2-4/T2 5/L3-6/T3	∞																						
DC reactor DCL	<p>Measure the resistance between terminals: 1Ω or lower (almost 0Ω)</p> <p>Measure the resistance between terminals and the chassis: ∞</p>																						
Cooling fan (MF1)	Measure the resistance between terminals : 0.1k~1.5kΩ																						
Transformer (To1)	<p>Measure the resistance between terminals on the primary side (CNTR1) : 1.0k~2.5kΩ</p> <p>Measure the resistance between terminals on the secondary side (CNTR) : 20~60Ω</p>																						
Current sensor ACCT	<p>Disconnect the CNCT2 target connector and check the resistance between terminals: 35~45Ω</p> <p>1-2PIN (U-phase) 3-4PIN (W-phase)</p> <div style="text-align: center;">  <p>※Check the ACCT connecting phase and direction.</p> </div>																						

#### [Caution at replacement of inverter parts]

- ① Fully check wiring for loose and incorrect connections.  
The incorrect or loose connection of the power circuit part wiring like IPM and diode module causes damage to the IPM. Therefore, check the wiring fully. As the insufficient tightening of screws is difficult to find, tighten them together additionally after finishing other works. For the wiring of the base for IPM, observe the wiring diagram below carefully as it has many terminals.
- ② Coat the grease provided uniformly onto the heat radiation surface of IPM /diode modules.  
Coat the grease on the full surface in a thin layer, and fix the module securely with the screw for fastening. As the radiation grease attached on the wiring terminal causes poor contact, wipe it off if attached.

## (5) Intelligent Power Module (IPM)

Measure resistances between each terminal of IPM with tester, and use the results for troubleshooting.

- ① Focus on whether there is a complete open ( $\infty\Omega$ ) state or short-circuit ( $\sim 0\Omega$ ).

The measured resistance value is a guideline and may deviate slightly.

Measure between several similar measurement points.

If the value does not differ by more than double or half from the other points, then judge the state as OK.

- ② Restrictions to applicable tester

Use a tester with an internal power of 1.5V or more.


\* Battery type tester

A card tester with button battery has a low applied voltage, so the resistance value of the diode characteristics cannot be measured correctly.


Use a measurement range that measures the low resistance when possible. An accurate measurement with less fluctuation will be possible.

The measured values for troubleshooting are shown in the table below.

• External view

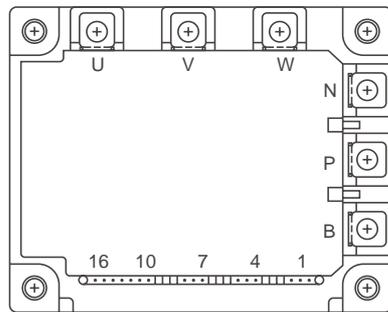

• Internal circuit diagram

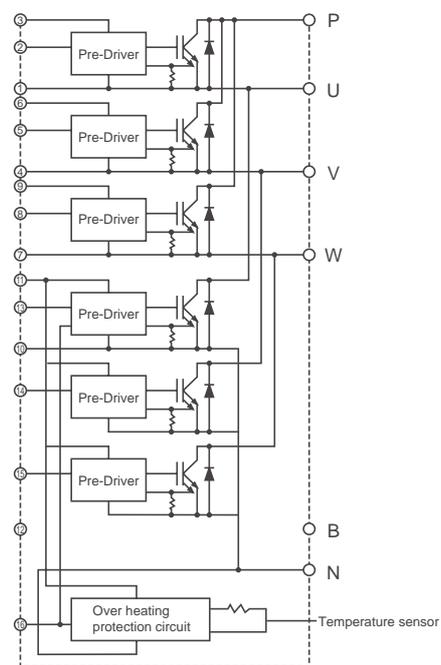


• Judged value


	Tester Black	P	N	U	V	W
Tester Red	P			5~200Ω	5~200Ω	5~200Ω
N				$\infty$	$\infty$	$\infty$
U	$\infty$	5~200Ω				
V	$\infty$	5~200Ω				
W	$\infty$	5~200Ω				

## (6) Diode stack

Perform continuity check with tester. Judged as normal if the following characteristics are observed.

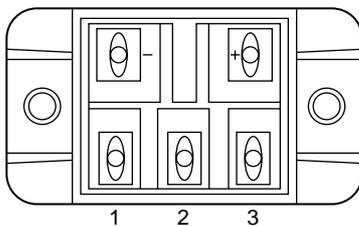


	Tester Black	+	-	1	2	3
Tester Red	+			5~200Ω	5~200Ω	5~200Ω
-				$\infty$	$\infty$	$\infty$
1	$\infty$	5~200Ω				
2	$\infty$	5~200Ω				
3	$\infty$	5~200Ω				

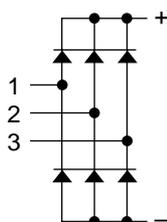

#### [4] Trouble and Remedy of Remote Controller (In the case of MA remote controller)


	Phenomena	Factors	Check method and handling
1	<p>If pushing the remote control operation SW does not make a sound such as beep with the crystal display lamp out, and no operate is possible.</p> <p>(An appropriate display  on the remote control is not on.)</p>	<ol style="list-style-type: none"> <li>1) Power supply from transformers is not turned on in Indoor Unit.               <ol style="list-style-type: none"> <li>① The original power supply of Indoor Unit is not turned on.</li> <li>② The connector (CND, CNT, CN3T) on the controller board in the room has come off.</li> <li>③ Fuse on the control board in Indoor Unit has melting down.</li> <li>④ Transformer defects or damage to unit.</li> </ol> </li> <li>2) MA remote controller has been wired incorrectly.               <ol style="list-style-type: none"> <li>① Break of the MA remote controller line and the connection to the terminals has come off.</li> <li>② Short circuit of the MA remote control wiring</li> <li>③ Reversed connections of the wiring on remote controller.</li> <li>④ Incorrect connection of the MA remote control wiring to the transmission line terminal block (TB 5).</li> <li>⑤ Reversed connections between the MA remote control wiring in the indoor unit and AC 200V power supply wiring.</li> <li>⑥ Reversed connection between the MA remote control wiring in the indoor unit and M-NET transmission wiring.</li> </ol> </li> <li>3) The maximum number of MA remote controllers connected to one is unit exceeded (two units).</li> <li>4) The wiring length of the MA remote line and the used electric wire diameter is out of specifications.</li> <li>5) The wiring of the remote display output to the outdoor unit is short circuited, or the relay is connected with reversed polarity.</li> <li>6) Defective of the controller board in the room</li> <li>7) Defects of MA remote control</li> </ol>	<ol style="list-style-type: none"> <li>a) Check the MA remote control terminal voltage (between A and B).               <ol style="list-style-type: none"> <li>i) In the case of voltage DC8.5- 12V, the remote controller is defective.</li> <li>ii) In the case of voltage not available:                   <ul style="list-style-type: none"> <li>• Check the left described 1) and 3), after checking , if these are factors, then modifications should be performed.</li> <li>• If there are no factors of the left described 1) and 3), move to b).</li> </ul> </li> </ol> </li> <li>b) Remove the remote control wiring from the terminal block TB13 for the MA remote control in the indoor unit, and check voltage between A and B.               <ol style="list-style-type: none"> <li>i) In the case of voltage DC9-12V Check the left described 2) and 4), if these are factors, then modifications should be performed.</li> <li>ii) In the case of voltage not available:                   <ul style="list-style-type: none"> <li>• Recheck the left described 1) once again, if this is a factor, them modifications should be performed.</li> <li>• If there are no factors in the left described 1), check the wiring for the remote display (the relay polarity, etc.)</li> <li>• If there are no factors, replace the controller board in the indoor unit.</li> </ul> </li> </ol> </li> </ol> <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p>In the case of item 1), the LED 1 on the controller board in the unit is off.</p> </div>
2	<p>When turning on the remote control operation SW, a temporary operation display is indicated, and the display lights out immediately, the unit stops.</p>	<ol style="list-style-type: none"> <li>1) M-NET transmission power supply from the outdoor unit is not supplied.               <ol style="list-style-type: none"> <li>① The original power supply of the outdoor unit is not turned on.</li> <li>② Disconnection of connectors on the board of the outdoor unit. Main board --- CNS1, CNVCC3 INV board --- CNAC2, CNVCC1, CNL2</li> <li>③ Power supply circuit defects of the outdoor unit.                   <ul style="list-style-type: none"> <li>• INV board defects</li> <li>• Blown fuse (F1 on INV Board)</li> <li>• Diode stack destruction</li> <li>• Prevention resistance of rush current (R1) damage</li> </ul> </li> </ol> </li> <li>2) Transmission line short</li> <li>3) Wiring mistakes of the M-NET transmission line on the side of the outdoor unit               <ol style="list-style-type: none"> <li>① Break of transmission line, and removal of terminal block</li> <li>② The room transmission line is wired to the transmission line terminal block (TB7) for the central control by mistakes.</li> </ol> </li> <li>4) M-NET transmission line break on the side of the room unit</li> <li>5) Disconnection off wiring between the M-NET transmission terminal block (TB 5) and the room controller board CN2M and pulls off of connectors</li> </ol>	<div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p>In the case of factors 2) and 3) Indicated by 7102 error code on the self-diagnosis LED of the outdoor unit.</p> </div>

#### Check method and handling

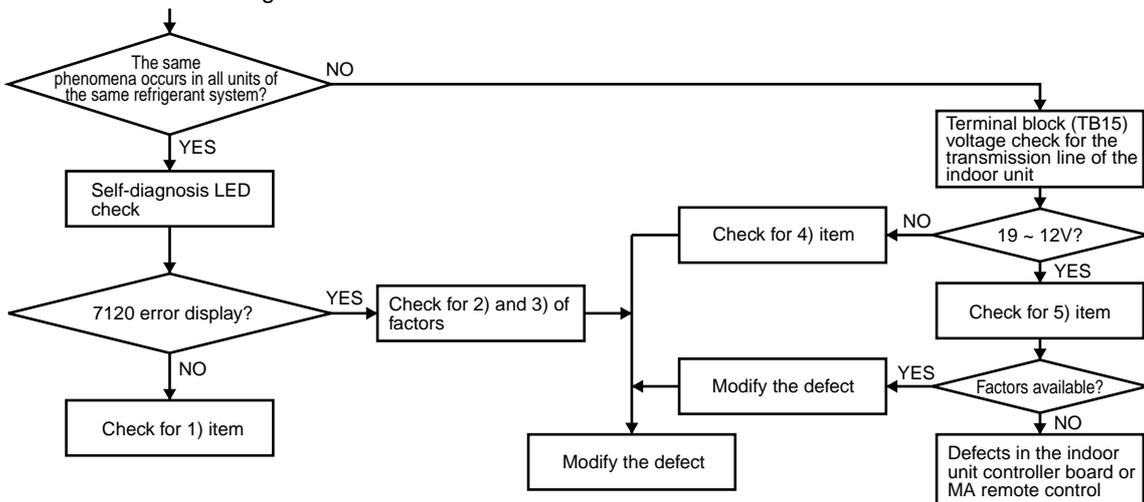

	Phenomena	Factors
3	When the remote control SW is turned on, the indication goes off after approximately 20- 30 seconds, and indoor unit stops.	1) Power supply from the transformer is not available to the control board of BC controller. ① The original power supply of the BC controller is not turned on. ② Removal of connectors (CN12, CN38, CNTR) on the control board of the BC controller. ③ Fuse on the control board of the BC controller is blown. ④ Transformer defects of the BC controller and a malfunction. ⑤ Defects on the control board of the BC controller

Check method and handling

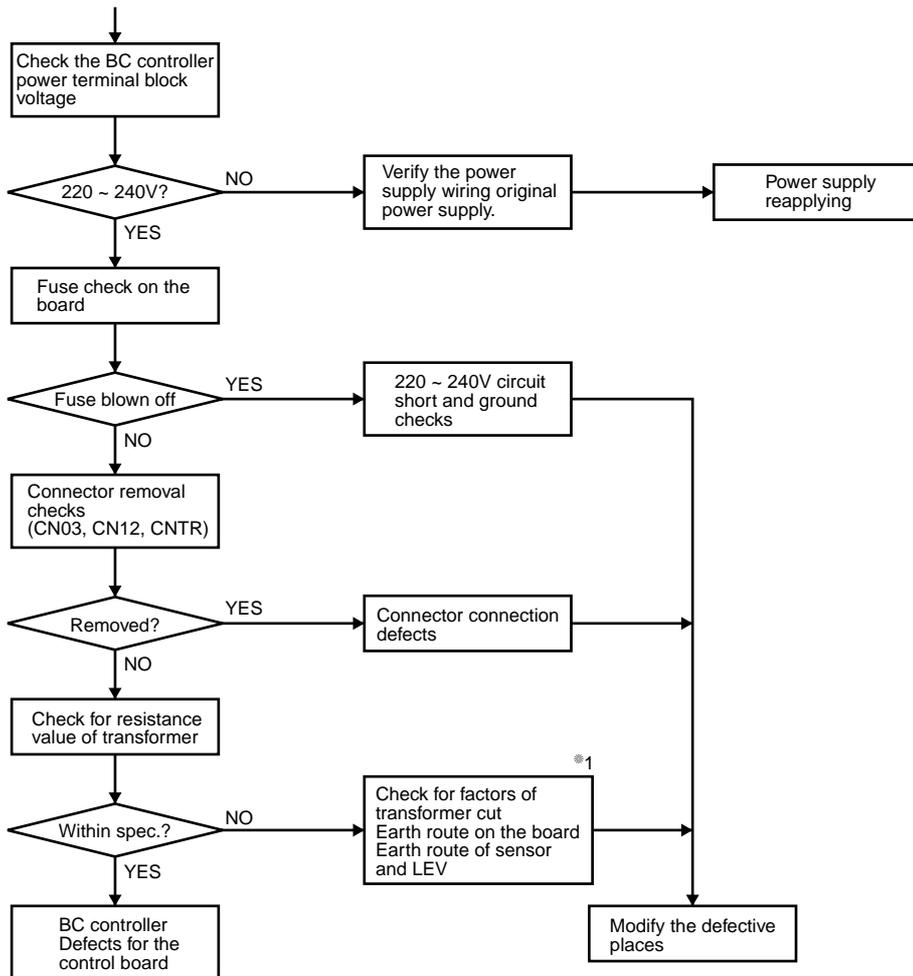


\*1 As for transformer checks, It is subject to the failure judgment method of main parts in 4.5.

Phenomena	Factors
<p>4 "HO" indication on the remote controller is not lit, and the ON/OFF switch does not work.</p>	<ol style="list-style-type: none"> <li>1) The M-NET transmission power supply form the outdoor unit is not supplied.               <ol style="list-style-type: none"> <li>① The original power supply of Indoor Unit is not turned on.</li> <li>② The connector on the controller board in Indoor Unit is removed. Main board ----CNS1, CNVCC3 INV board----CNAC2, CNVCC1, CNL2</li> <li>③ Power supply circuit defects of the outdoor unit.                   <ul style="list-style-type: none"> <li>• INV board defects</li> <li>• Diode stack defects</li> <li>• Prevention resistance of rush current (R1) damage.</li> </ul> </li> </ol> </li> <li>2) Short circuit of the M-NET transmission line</li> <li>3) Error wiring of the M-NET transmission line on the side of the outdoor unit               <ol style="list-style-type: none"> <li>① A break of the transmission line or terminal block removal</li> <li>② Indoor Unit transmission line is wired to the transmission line terminal block (TB7) for the central control by mistake.</li> </ol> </li> <li>4) M-NET transmission line break on the side of Indoor Unit (Short/ Open)</li> <li>5) Loose or disconnection of wiring between the M-NET transmission terminal block (TB 5) of Indoor Unit and Indoor Unit controller board CN2M and disconnection of connectors</li> <li>6) Error wiring of the MA remote control               <ol style="list-style-type: none"> <li>① Short circuit of the MA remote wiring</li> <li>② A break of the MA remote control line (No.2) and disconnection of the terminal block connection</li> <li>③ Reversed wiring, cross-over in the group control</li> <li>④ Wire by mistakes the MA remote control to the terminal block (TB5) for the transmission line</li> <li>⑤ Connect by mistakes the M-NET transmission line to the MA remote control terminal block (TB13)</li> </ol> </li> <li>7) The unit address is not "00" as it should be with automatic address setting.</li> <li>8) The address of Indoor Unit becomes 51 or more.</li> <li>9) The master and slave setting of the MA remote control becomes the slave setting.</li> <li>10) Use the M-NET remote control in spite of the automatic address.</li> <li>11) Defects for the room controller board (MA remote communication circuits)</li> <li>12) Defects for the remote controller</li> </ol>

In the case of 2), 3) and 7) factors, indicate 7102 errors by the self-diagnosis LED of the outdoor unit.


Check method and handling

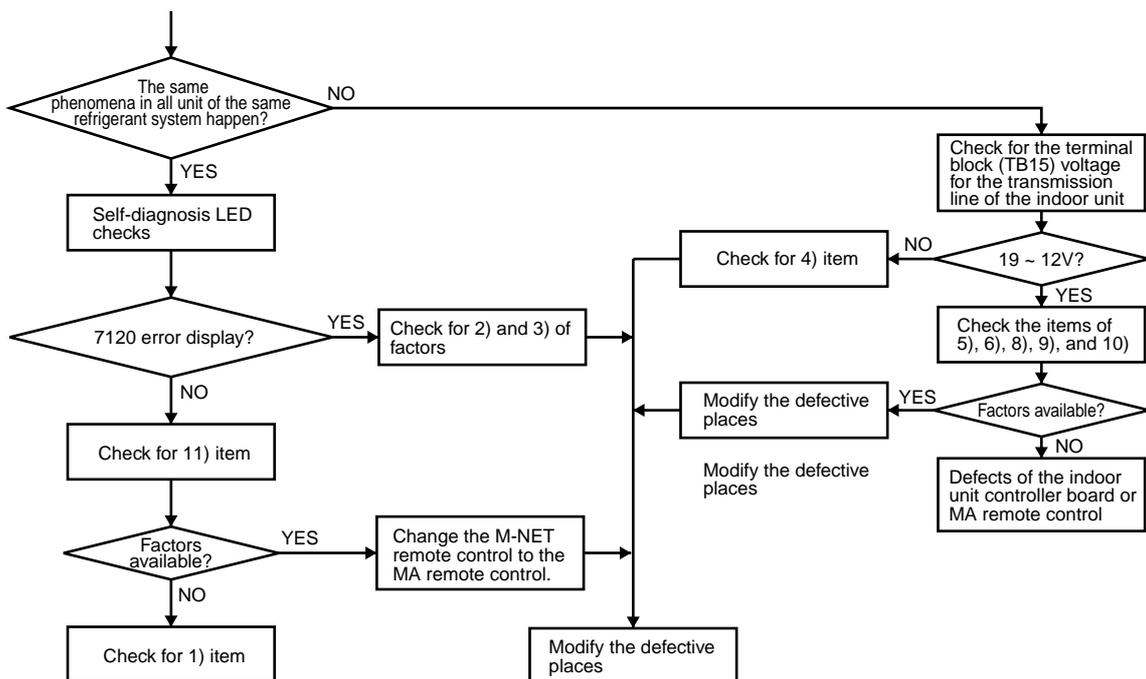

**(In the case of M-NET remote controller)**

	Symptom	Cause	Checking method & countermeasure
1	Despite pressing of remote controller ON/OFF switch, operation does not start and there is no electronic sound.  (No powering signal  appears.)	1) M-NET transmission power source is not supplied from outdoor unit. ① Main power source of outdoor unit is not connected. ② Disconnection of connector on outdoor unit circuit board. Main board : CNS1, CNVCC3 INV board : CNAC2, CNVCC1, CNL2 ③ Faulty power source circuit of outdoor unit. • Faulty INV board, • Blown fuse (F1 on INV board) • Broken diode stack • Broken resistor (R1) for rush current protection 2) Short circuit of transmission line. 3) Erroneous wiring of M-NET transmission line at outdoor unit. ① Transmission line disconnection or slipping off from terminal block. ② Erroneous connection of indoor/outdoor transmission line to TB7. 4) Disconnection of transmission wiring at remote controller. 5) Faulty remote controller.	a) Check transmission terminal block of remote controller for voltage. i) In case of 17 ~ 30V → Faulty network remote controller ii) In case of less than 17V → See "Transmission Power Circuit (30V) Check Procedure".  <div style="border: 1px solid black; padding: 5px; width: fit-content; margin-left: auto; margin-right: auto;">                         The cause of 2) and 3) is displayed with self-diagnosis LED for 7102 error.                     </div>
2	At about 10 seconds after turning remote controller operation switch ON, the display distinguishes and the operation stops.	1) Power source is not fed to indoor unit from transformer. ① Main power source of indoor unit is not turned on. ② Disconnection of connector (CND, CNT, CN3T) on indoor controller board. ③ Blown fuse on indoor controller board. ④ Faulty or disconnected transformer of indoor unit. ⑤ Faulty indoor controller board.  2) Faulty outdoor control circuit board uncontrolled. As normal transmission is fails between indoor and outdoor units, outdoor unit model can not be recognized.	

Checking method & countermeasure

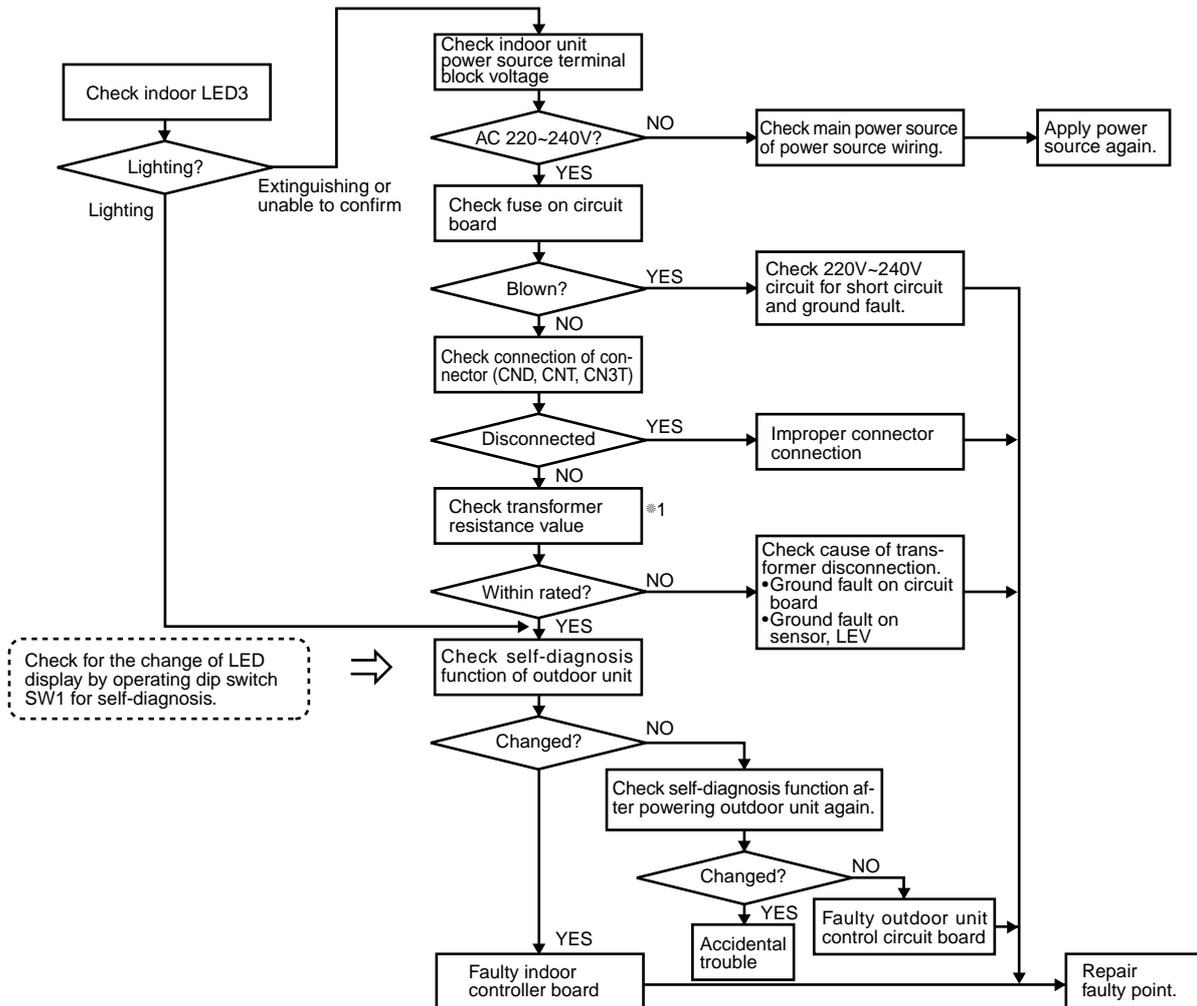


\*1 Check the transformer in accordance with the "TROUBLE SHOOTING" in the indoor unit's service handbook.

	Symptom	Cause
3	<p>"HO" display on remote controller does not disappear and ON/OFF switch is ineffective.</p>	<p>(Without using MELANS)</p> <ol style="list-style-type: none"> <li>1) Outdoor unit address is set to "00"</li> <li>2) Erroneous address.               <ol style="list-style-type: none"> <li>① Address setting of indoor unit to be coupled with remote controller incorrect. (Indoor unit = remote controller - 100.)</li> <li>② Address setting of remote controller incorrect. (Remote controller = indoor unit + 100.)</li> </ol> </li> <li>3) Faulty wiring of transmission terminal block TB5 of indoor unit in the same group with remote controller.</li> <li>4) Centralized control SW2-1 of outdoor unit is turned ON.</li> <li>5) Setting to interlocking system from indoor unit (Switch 3-1 = OFF), while Fresh Master is intended to be use by remote controller operation (indoor unit attribute).</li> <li>6) Disconnection or faulty wiring of indoor unit transmission line.</li> <li>7) Disconnection between indoor unit M-NET transmission line terminal block (TB5) and connector CN2M.</li> <li>8) More than 2 sets of power supply connector (CN40) are inserted into centralized control transmission line of outdoor unit.</li> <li>9) Faulty outdoor unit control circuit board.</li> <li>10) Faulty indoor controller board.</li> <li>11) Faulty remote controller.</li> </ol> <hr/> <p>(Interlocking control with MELANS)</p> <ol style="list-style-type: none"> <li>12) No grouping registration from MELANS (Neglecting to set the relation between indoor unit and network remote controller).</li> <li>13) Disconnection of centralized control transmission line (TB7) at outdoor unit.</li> <li>14) At system connected with MELANS, power supply connector (CN40) is inserted to centralized control transmission line of outdoor unit.</li> </ol>

Checking method & countermeasure

In case MELANS is not used

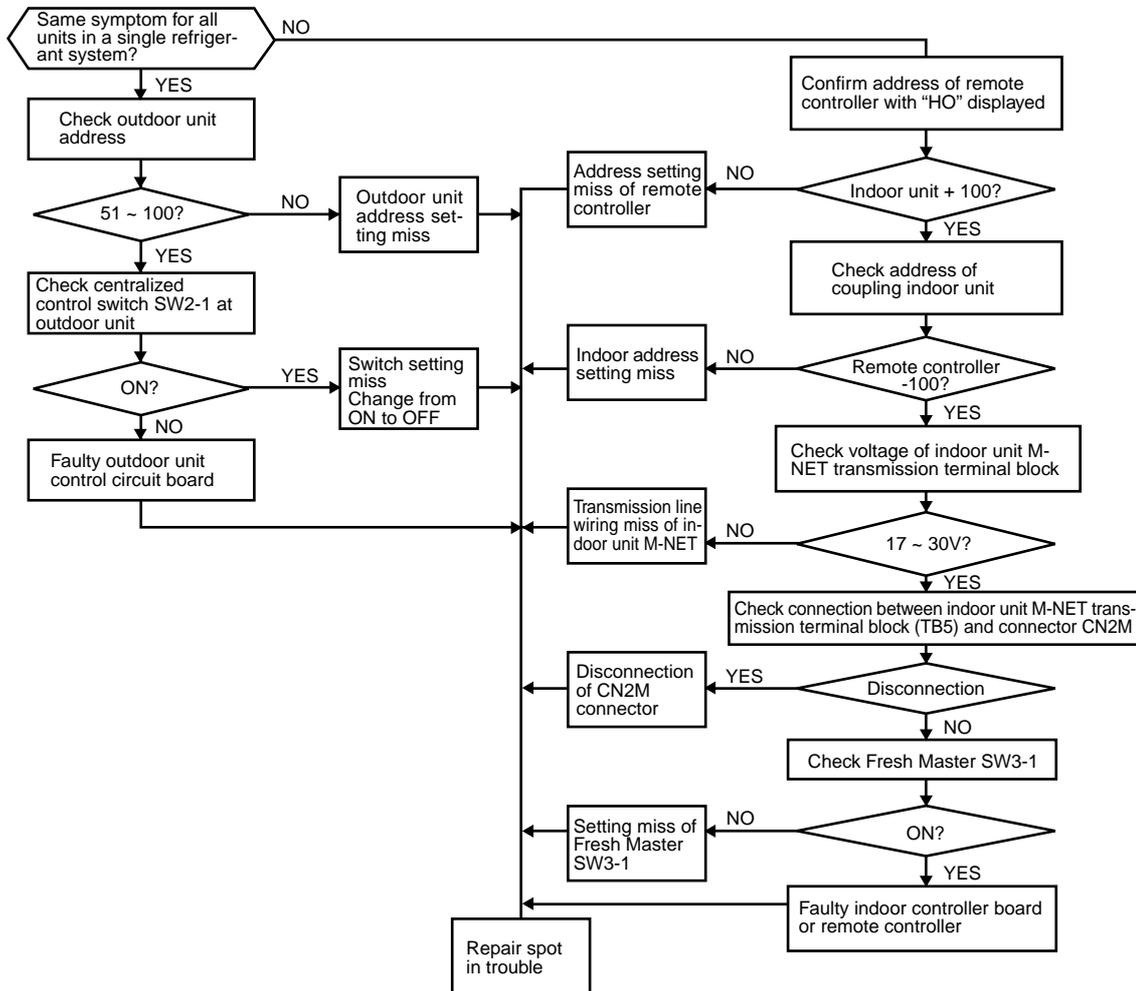

In case with MELANS used

When MELANS is used, "HO" display on the remote controller will disappear at the group registration of the indoor unit and local remote controller. If "HO" does not disappear after the registration, check the items 12) ~ 14) in the Cause column.

	Symptom	Cause	Checking method & countermeasure
4	"88" appears on remote controller at registration and access remote controller	<p>[Generates at registration and confirmation]</p> <ol style="list-style-type: none"> <li>1) Erroneous address of unit to be coupled.</li> <li>2) Disconnection of transmission line of unit to be coupled (No connection).</li> <li>3) Faulty circuit board of unit to be coupled.</li> <li>4) Installation miss of transmission line.</li> </ol> <hr style="border-top: 1px dashed black;"/> <p>[Confirmation of different refrigerant system controller]</p> <ol style="list-style-type: none"> <li>5) Disconnection of power source of outdoor unit to be confirmed.</li> <li>6) Disconnection of centralized control transmission line (TB7) of outdoor unit.</li> <li>7) Power supply connector (CN40) is not inserted into centralized control transmission line in grouping with different refrigerant system without using MELANS.</li> <li>8) More than 2 sets of power supply connector are inserted into the centralized control transmission line of outdoor unit.</li> <li>9) In the system connected with MELANS, power supply connector (CN40) is inserted into the centralized control transmission line of outdoor unit.</li> <li>10) Short circuit of centralized control transmission line.</li> </ol>	<ol style="list-style-type: none"> <li>a) Confirm the address of unit to be coupled.</li> <li>b) Check the connection of transmission line.</li> <li>c) Check the transmission terminal block voltage of unit to be coupled. <ol style="list-style-type: none"> <li>i) Normal if voltage is DC17 ~ 30V</li> <li>ii) Check the item d) in case other than i).</li> </ol> </li> <li>d) Confirm the power source of outdoor unit to be coupled with the unit to be confirmed.</li> <li>e) Confirm that the centralized control transmission line (TB7) of outdoor unit is not disconnection.</li> <li>f) Confirm the voltage of centralized control transmission line. <ol style="list-style-type: none"> <li>i) Normal in case of 10V ~ 30V</li> <li>ii) Check the items 7) ~ 10) left in case other than i).</li> </ol> </li> </ol>

Check Code List

Check Code	Check Content		
0403	Serial transmission abnormality		
0900	Trial operation		
1102	Discharge temperature abnormality		
1111	Low pressure saturation temperature sensor abnormality (TH2)		
1143	Lacked refrigerant abnormality		
1301	Low pressure abnormality (OC)		
1302	High pressure abnormality (OC)		
1368	Liquid side pressure abnormality (BC)		
1370	Intermediate pressure abnormality (BC)		
1500	Overcharged refrigerant abnormality		
1505	Suction pressure abnormality		
2134	Water temperature abnormality		
2135	Water heat exchanger frost abnormality		
2500	Leakage (water) abnormality		
2502	Drain pump abnormality		
2503	Drain sensor abnormality		
4103	Reverse phase abnormality		
4115	Power supply sync signal abnormality		
4116	Fan speed abnormality (motor abnormality)		
4200	VDC sensor/circuit abnormality		
4220	Bus voltage abnormality		
4230	Radiator panel overheat protection		
4240	Over load protection		
4250	[1]	IPM Alarm output/Bus voltage abnormality	
	[11]	IAC sensor overcurrent abnormality	
4260	Cooling fan abnormality		
5101	Thermal sensor abnormality	Air inlet (TH21:IC)	
		Discharge (TH1:OC)	
		5102	Liquid pipe (TH22:IC)
			Low pressure saturation (TH2:OC)
		5103	Gas pipe (TH23:IC)
			Accumulater liquid level (LD1)
		5104	Accumulater liquid level (LD2)
		5105	Liquid pipe (TH5)
		5106	Ambient temperature (TH6)
			THINV (PQRY)
		5107	SC coil outlet (TH7) (PQHY)
		5108	SC coil bypass outlet (TH8) (PQHY)
		5109	CS circuit (TH9)
		5110	Radiator panel (THHS)
5112	Compressor shell temperature (TH10)		
5201	Pressure sensor abnormality (OC)		
	Liquid side pressure sensor abnormality (BC)		
5203	Intermediate side pressure sensor abnormality (BC)		
5301	[6]	IAC sensor/circuit abnormality	
	[13]	IAC sensor miss-wiring abnormality	
6600	Multiple address abnormality		
6602	Transmission processor hardware abnormality		
6603	Transmission circuit bus-busy abnormality		

Check Code	Check Content
6606	Communications with transmission processor abnormality
6607	No ACK abnormality
6608	No response abnormality
6831	MA communication, No-reception error
6832	MA communication, Synchronization recovery error
6833	MA communication, Transmission/reception hardware error
6834	MA communication, Start bit error
7100	Total capacity abnormality
7101	Capacity code abnormality
7102	Connected unit count over
7105	Address setting abnormality
7106	Characteristics setting abnormality
7111	Remote control sensor abnormality
7130	Different indoor model connected abnormality

Intermittent fault check code

Trouble Delay Cope	Trouble Delay Content
1202 (1102)	Preliminary discharge temperature abnormality or preliminary discharge thermal sensor abnormality (TH1)
1205	Preliminary liquid pipe temperature sensor abnormality (TH5) (PQHY)
1211 (1111)	Preliminary low pressure saturation abnormality or preliminary low pressure saturation sensor abnormality (TH2)
1214	Preliminary THHS sensor/circuit abnormality
1216	Preliminary sub-cool coil outlet thermal sensor abnormality (TH7) (PQHY)
1217 (1117)	Preliminary sub-cool coil bypass outlet thermal sensor abnormality (TH8)
1219	Preliminary CS circuit thermal sensor abnormality (TH9)
1221	Preliminary ambient temperature thermal sensor abnormality (TH6)
1402 (1302)	Preliminary high pressure abnormality or preliminary pressure sensor abnormality
1600 (1500)	Preliminary overcharged refrigerant abnormality
1601	Preliminary lacked refrigerant abnormality
1605 (1505)	Preliminary suction pressure abnormality
1607	CS circuit block abnormality
1608	Control valve abnormality
4300 (0403)	[9] Preliminary serial transmission abnormality
4300 (5301)	[6] IAC sensor/circuit abnormality
	[13] IAC sensor miss-wiring abnormality
4320 (4220)	Preliminary bus voltage abnormality
4330 (4230)	Preliminary heat sink overheating abnormality
4340 (4240)	Preliminary overload protection
4350 (4250)	[1] IPM Alarm output/Bus voltage abnormality
	[11] IAC sensor overcurrent abnormality
4360 (4260)	Preliminary cooling fan abnormality

Please refer to ( ) : Check Code. [ ] : Error detail No.

## [5] Self-diagnosis and Countermeasures Depending on the Check Code Displayed

### (1) Mechanical

Checking code	Meaning, detecting method	Cause	Checking method & Countermeasure		
0403	Serial transmission abnormality	If serial transmission cannot be established between the MAIN and INV boards.	1) Wiring is defective.	Check 1, the connections, 2, contact at the connectors and 3, for broken wires in the following wiring. CNRS2 - CNRS3 CNAC2 - TB1A	
			2) Switches are set wrong on the INV board.		SW1-4 on the INV board should be OFF.
			3) A fuse (F01) on the INV board is defective.		If the fuse is melted, (if the resistance between the both ends of fuse is $\infty$ ), replace the fuse.
			4) The circuit board is defective.		If none of the items in 1) to 3) is applicable, and if the trouble reappears even after the power is switched on again, replace the circuit board by the following procedure (when replacing the circuit board, be sure to connect all the connectors, ground wires, etc. securely). ① If serial transmission is restored after the INV board only is replaced, then the INV board is defective. ② If serial transmission is not restored, reinstall the INV board and replace the MAIN board. If serial transmission is restored, the MAIN board is defective. ③ If serial transmission is not restored by ① and ② above, replace both boards.

Checking code	Meaning, detecting method	Cause	Checking method & Countermeasure
1102	Discharge temperature abnormality (Heat source unit)	1) Gas leak, gas shortage.	See <b>Refrigerant amount check</b> .
		2) Overload operations.	Check operating conditions and operation status of indoor/heat source units.
		3) Poor operations of indoor LEV. 4) Poor operations of BC controller LEV: Cooling-only : LEV3 Cooling-main : LEV1, 3 Heating-only, Heating-main: LEV3	Check operation status by actually performing cooling or heating operations. Cooling : Indoor LEV (Cooling-only) LEV1, 3 (BC) SVA (BC) Heating : Indoor LEV (Heating-only) LEV3 (BC) SVB (BC) SV3 ~ 6, SV73
		5) Poor operations of BC controller SVM : Cooling-only, defrost	See <b>Trouble check of LEV and solenoid valve</b> .
		6) Poor operations of BC controller SVA : Cooling-only, Cooling-main	
		7) Poor operations of BC controller SVB : Heating-only, Heating-main	
		8) Poor operations of solenoid valves. SV (3 ~ 6, SV73) : Heating-only, Heating-main	
		9) Setting error of connection address (PQRY).	
		10) Poor operations of ball valve.	Confirm that ball valve is fully opened.
		11) Heat source unit fan block, motor trouble, poor operations of fan controller→Heating (Heating-only, Heating-main). [ 3) ~ 11) : Rise in discharge temp. by low pressure drawing. ]	Check outdoor fan. See <b>Trouble check of outdoor fan</b> .
		12) Gas leak between low and high pressures. [ 4-way valve trouble, compressor trouble, solenoid valve SV1 trouble. ]	Check operation status of cooling-only or heating-only.
		13) Poor operations of solenoid valve SV2. [ Bypass valve SV2 can not control rise in discharge temp. ]	See <b>Trouble check of solenoid valve</b> .
		14) Thermistor trouble.	Check resistance of thermistor.
		15) Thermistor input circuit trouble on control circuit board.	Check inlet temperature of sensor with LED monitor.

Checking code	Meaning, detecting method	Cause	Checking method & Countermeasure
1111	Low pressure saturation temperature sensor abnormality (TH2)	1) Gas leak, Gas shortage.	See <b>Refrigerant amount check</b> .
		2) Insufficient load operations.	Check operating conditions and operation status of heat source unit.
		3) Poor operations of indoor LEV. 4) Poor operations of BC controller LEV: Cooling-only : LEV3 Cooling-main : LEV1, 3 Heating-only, Heating-main: LEV3	Check operation status by actually performing cooling-only or heating-only operations.  Cooling-only : Indoor LEV LEV1, 3 (BC) SVA (BC) Heating-only : Indoor LEV LEV3 (BC) SVB (BC) SV3~6, SV73
		5) Poor operations of BC controller SVM: Cooling-only, Defrost	See <b>Trouble check of LEV and solenoid valve</b> .
		6) Poor operations of BC controller SVM: Cooling-only, Cooling-main	
		7) Poor operations of BC controller SVB: Heating-only, Heating-main	Check address setting of indoor unit connector.
		8) Solenoid valve trouble (SV3 ~ 6, SV73). Heating-only, Heating-main	
		9) Setting error of connection address.	Confirm that ball valve is fully opened.
		10) Poor operations of ball valve.	Check indoor unit, and take measures to trouble.
		11) Short cycle of indoor unit.	
		12) Clogging of indoor unit filter.	
		13) Fall in air volume caused by dust on indoor unit fan.	
		14) Dust on indoor unit heat exchanger.	
		15) Indoor unit block, Motor trouble.  [ 9)~14) : Fall in low pressure caused by evaporating capacity in cooling-only cooling-principal operation. ]	Check heat source unit, and take measures to trouble.
		16) Short cycle of heat source unit. 17) Dust on outdoor heat exchanger.	
		18) Indoor unit fan block, motor trouble, and poor operations of fan controller.  [ 15)~17) : Fall in low press. caused by lowered evaporating capacity in heating-only heating-principal operation. ]	Check heat source unit fan. See <b>Trouble check of heat source unit fan</b> .
		19) Poor operations of solenoid valve SV2.  [ Bypass valve (SV2) can not control low pressure drop. ]	See <b>Trouble check of solenoid valve</b> .
		20) Thermistor trouble (TH2~TH10).	Check resistance of thermistor.
		21) Pressure sensor abnormality.	See <b>Trouble check of pressure sensor</b> .
		22) Control circuit board thermistor abnormality and pressure sensor input circuit abnormality.	Check inlet temp. and press. of sensor by LED monitor.
		23) Poor mounting of thermistor (TH2~TH10).	

Low pressure saturation temperature trouble

Checking code	Meaning, detecting method	Cause	Checking method & Countermeasure	
1301	Low pressure abnormality	<p>When starting from the stop mode for the first time, (if at the start of bind power transmission, the end of bind power transmission, and in the mode when the thermostat goes OFF immediately after the remote control goes ON, the following compressor start time is included), if the low pressure pressure sensor before starting is at 0.098MPa, operation stops immediately.</p>	<p>1) Internal pressure is dropping due to a gas leak.  2) The low pressure pressure sensor is defective.  3) Insulation is torn.  4) A pin is missing in the connector, or there is faulty contact.  5) A wire is disconnected.  6) The control board's low pressure pressure sensor input circuit is defective.</p>	Refer to the item on judging low pressure pressure sensor failure.
1302	High pressure abnormality 1 (Heat source unit)	<p>1) When press. sensor detects 2.47MPa or more during operations (the first time), heat source unit stops once, mode is changed to restart mode after 3 minutes, then the heat source unit restarts.</p> <p>2) When 2.94MPa or more pressure is detected again (the second time) within 30 minutes after stop of heat source unit, error stop is observed with code No. "1302" displayed.</p> <p>3) When 2.47MPa or more pressure is detected 30 or more minutes after stop of heat source unit, the detection is regarded as the first time and the process shown in 1 is observed.</p> <p>4) 30 minutes after stop of heat source unit is intermittent fault check period with LED displayed.</p> <p>5) Error stop is observed immediately when press. switch (2.94<sup>+0</sup><sub>-1.5</sub>MPa) operates in addition to pressure sensor.</p>	<p>1) Poor operations of indoor LEV.  2) Poor operations of BC controller LEV:  Heating-only, heating-principal: LEV3  3) Poor operations of BC controller SVM:  Cooling-only, defrost  4) Poor operations of BC controller SVA:  Cooling-only, cooling-main  5) Poor operations of BC controller SVB:  Heating-only, heating-main  6) Solenoid valve SV (3 ~ 6, SV71, 72) trouble.  Cooling-only, cooling-main</p> <p>7) Setting error of connection address.</p> <p>8) Poor operations of ball valve.</p> <p>9) Short cycle of indoor unit.  10) Clogging of indoor unit filter.  11) Fall in air volume caused by dust on indoor unit fan.  12) Dust on indoor unit heat exchanger.  13) Indoor unit fan block, motor trouble.  [ 8)~13) : Rise in high pressure caused by lowered condensing capacity in heating-only and heating-principal operation. ]</p> <p>14) Short cycle of heat source unit.  15) Dust on heat source unit heat exchanger.</p> <p>16) Heat source unit fan block, motor trouble, poor operations of fan controller.  [ 14)~16):Rise in high press. caused by lowered condensing capacity in cooling-only and cooling-principal operation. ]</p> <p>17) Poor operations of solenoid valves SV1, 2 (Bypass valves (SV1, 2) can not control rise in high pressure).</p> <p>18) Thermistor trouble (TH2, TH5, TH6).</p> <p>19) Pressure sensor trouble.</p> <p>20) Control circuit board thermistor trouble, press. sensor input circuit trouble.</p>	<p>Check operations status by actually performing cooling or heating operations.</p> <p>Cooling : Indoor LEV  LEV1, 3 (BC)  SVA (BC)  SV3~6, SV71, 72  Heating : Indoor LEV  LEV3 (BC)  SVB (BC)</p> <p>See <b>Trouble check of LEV and solenoid valve.</b></p> <p>Check address setting of indoor unit connector.</p> <p>Confirm that ball valve is fully open-ed.</p> <p>Check indoor unit and take measures to trouble.</p> <p>Check heat source unit and take measures to trouble.</p> <p>Check heat source unit fan  See <b>Trouble check of heat source unit fan.</b></p> <p>See <b>Trouble check of solenoid valve.</b></p> <p>Check resistance of thermistor.</p> <p>Check <b>Trouble check of pressure sensor.</b></p> <p>Check inlet temperature and press. of sensor with LED monitor.</p>

Checking code		Meaning, detecting method	Cause	Checking method & Countermeasure
1302	High pressure abnormality 2 (Heat source unit)	When press. sensor detects 0.098MPa or less just before starting of operation, error stop is observed with code No. "1302" displayed.	1) Fall in internal press. caused by gas leak. 2) Press. sensor trouble. 3) Film breakage. 4) Coming off of pin in connector portion, poor contact. 5) Broken wire. 6) Press. sensor input circuit trouble on control circuit board.	See <b>Trouble check of pressure sensor.</b>
1500	Overcharged refrigerant abnormality	1. When liquid level of accumulator reaches AL=2 (overflow level) and Td-Tc $\leq$ 20 deg during operations (the first time), heat source unit stops once, mode is changed to restart mode after 3 minutes, then the unit restarts.  2. When liquid level of accumulator reaches AL=2 (overflow level) and Td-Tc $\leq$ 20 deg again (the second time), error stop is observed with code No."1500" displayed.  3. When liquid level of accumulator reaches AL=2 (overflow level) and Td-Tc $\leq$ 20 deg 30 or more minutes after stop of heat source unit, the detection is regarded as the first time and the process shown in 1. is observed.	1) Excessive refrigerant charge. 2) Broken wire of liquid level heater. 3) Poor heater output caused by control circuit board trouble.	See Refrigerant amount check.
			4) Thermistor trouble. (TH2)	Check resistance of thermistor.
			5) Thermistor input circuit trouble on control circuit board .	Check temperature and pressure of sensor with LED monitor.
			6) Poor mounting of thermistor. (TH2, TH3, TH4)	
			4. 30 minutes after stop of heat source unit is intermittent fault check period with LED displayed.	5. In the case of ignore error indication switch (SW2-6) ON, the detection for the second time is followed by the first time.
1501	Lacked refrigerant abnormality	1. When the unit condition is as follows, the compressor is stopped (1st detection) and after 3 minutes, the compressor is restarted automatically. ① F<60Hz and TH10>85°C continuously for 60 minutes. ② F<60Hz and TH10>95°C continuously for 15 minutes. ③ F $\geq$ 60Hz and TH10>100°C continuously for 60 minutes. ④ F $\geq$ 60Hz and TH10>110°C continuously for 15 minutes. 2. If the temperature rises again as above within 2 hours after the heat source unit is stopped (2nd detection), an error stop is performed, and the check code 1501 is displayed. 3. If the temperature rises again as above within 2 hours after the heat source unit is stopped, it becomes the first detection again, and operation is the same as in 1 above. 4. The 2 hour period after the heat source unit stops is the abnormal delay period, and LED display is carried out during the abnormal stop delay.	1) Gas leakage, insufficient gas.	Refer to the item on judging the refrigerant volume.
			2) Overload operation.	Check the indoor and heat source unit operating conditions.
			3) Indoor unit LEV operation is faulty. 4) Heat source unit SLEV operation is faulty.	Actually run the equipment in cooling or heating mode and check the operating condition. Cooling : Indoor unit LEV SLEV, LEV2 Heating : Indoor unit LEV SLEV, LEV2
				Refer to the item concerning judging LEV failure.
			5) Ball valve operation is faulty.	Check with the ball valve fully open.
			6) The thermistor is faulty.	Check the thermistor's resistance.
			7) The control board's thermistor input circuit is faulty.	Check the sensor's temperature reading by the LED monitor.

Checking code	Meaning, detecting method	Cause	Checking method & Countermeasure	
1505	Suction pressure abnormality	<p>Judging that the state when the suction pressure reaches 0MPa during compressor operation indicates high pressure by the discharge temperature and low pressure saturation temperature, the back-up control by gas bypassing will be conducted.</p>	<ul style="list-style-type: none"> <li>• Operation while neglecting to open ball valve. Especially for the ball valve at low pressure side. At cooling : Gas side ball valve At heating : Liquid side ball valve</li> <li>• When plural systems are existing, the low pressure abruptly drop at indoor stopping by the erroneous wiring of transmission line (different connection of transmission line and refrigerant piping).</li> <li>• Temporary vacuum condition due to refrigerant distribution unbalance (insufficient refrigerant of low pressure line) immediately after charging refrigerant.</li> </ul>	<p>Once vacuum operation protection is commenced, do not attempt to restart until taking the measures below.</p> <p>&lt;Checking method&gt;</p> <ul style="list-style-type: none"> <li>• Check ball valve for neglecting to open.</li> <li>• Check extended piping for clogging when ball valve is opened.</li> <li>• Check transmission line for erroneous wiring. (Confirm the correct wiring and piping connection between indoor and heat source units by operating indoor unit one by one.)</li> </ul> <p>&lt;Countermeasure&gt;</p> <ul style="list-style-type: none"> <li>• After checking with the above method, make error reset by power source reset.</li> <li>• Then operate for 10~15-minutes under the operation mode reverse to that when the vacuum operation protection occurred (Heating if error occurred in cooling, while cooling if it occurred in heating), and then enter into the ordinary operation state.</li> </ul>
2000	Interlock operation	<p>In modes other than the stop mode, the pump interlock circuit performs an abnormal stop when it has been open continuously for 10 minutes, and at that time, displays "2000." However, This is displayed when DIP SW 2-8 on the heat source unit MAIN board is OFF.</p>	<ol style="list-style-type: none"> <li>1) Failure of the heat source water circulating pump to operate.</li> <li>2) Disconnection</li> <li>3) Connector pulled out, faulty contact.</li> <li>4) Faulty interlock input circuit on the relay board.</li> <li>5) Faulty interlock input circuit on the control board.</li> </ol>	
2134	Abnormal water temperature	<ol style="list-style-type: none"> <li>1. If the inlet water temperature is detected to be below 5°C or over 50°C during operation (the first time it is detected), the heat source unit is stopped temporarily, the system enters the 3-minute restart prevention mode, then restarts the heat source unit after 3 minutes.</li> <li>2. If the inlet water temperature is detected to be below 5°C or over 50°C again within 30 minutes after the heat source unit stops following the operation in 1 above, (the second time it is detected), an abnormal stop is performed, and at that time, "2134" is displayed.</li> <li>3. If the inlet water temperature is detected to be below 5°C or over 50°C again longer than 30 minutes after the heat source unit stops following the operation in 1 above, it is treated as having been detected the first time and operation is the same as in 1 above.</li> </ol>	<ol style="list-style-type: none"> <li>1) Failure of the heat source water circulating pump to operate.</li> <li>2) Cooling tower or heating equipment out of order.</li> <li>3) Clogged or dirty water heat exchanger.</li> <li>4) Faulty thermistor. (TH6)</li> <li>5) Faulty thermistor input circuit on the control board.</li> <li>6) Faulty thermistor installation. (TH6)</li> </ol>	<p>Check the thermistor's resistance.</p> <p>Check the temperature picked up by the sensor by the LED monitor.</p>

Checking code	Meaning, detecting method	Cause	Checking method & Countermeasure	
2135	Freezing of the water heat exchanger.	<ol style="list-style-type: none"> <li>1) Failure of the heat source water circulating pump to operate.</li> <li>2) Heating equipment out of order</li> <li>3) Clogged or dirty water heat exchanger</li> <li>4) Lead wire to the water heat exchanger freeze prevention thermostat is disconnected.</li> <li>5) Connector to the water heat exchanger freeze prevention thermostat is pulled out.</li> <li>6) Faulty water heat exchanger freeze prevention thermostat input circuit on the relay board.</li> <li>7) Faulty water heat exchanger freeze prevention thermostat input circuit on the control board.</li> </ol>		
2500	Leakage (water) abnormality	<ol style="list-style-type: none"> <li>1) Water leak due to humidifier or the like in trouble.</li> </ol>	Check water leaking of humidifier and clogging of drain pan.	
2502	Drain pump abnormality	<ol style="list-style-type: none"> <li>1) Drain sensor sinks in water because drain water level rises due to drain water lifting-up mechanism trouble.</li> </ol>	Check operations of drain pump.	
		<ol style="list-style-type: none"> <li>2) Broken wire of indirect heater of drain sensor.</li> </ol>	Measure resistance of indirect heater of drain sensor. (Normal: Approx. 82Ω between 1-3 of CN50)	
		<ol style="list-style-type: none"> <li>3) Detecting circuit (circuit board) trouble.</li> </ol>	Indoor board trouble if no other problems is detected.	
2503	Drain sensor abnormality	<ol style="list-style-type: none"> <li>1) Thermistor trouble.</li> <li>2) Poor contact of connector. (insufficient insertion)</li> <li>3) Full-broken of half-broken thermistor wire.</li> </ol>	Check resistance of thermistor. 0°C : 15kΩ 10°C : 9.7kΩ 20°C : 6.4kΩ 30°C : 4.3kΩ	
		<ol style="list-style-type: none"> <li>4) Indoor unit circuit board (detecting circuit) trouble.</li> </ol>	Check contact of connector. Indoor port trouble if no other problem is detected.	
	Operation of float switch	<ol style="list-style-type: none"> <li>1) Drain up input trouble.</li> </ol>	Check drain pump operations.	
		<ol style="list-style-type: none"> <li>2) Poor contact of float switch circuit.</li> </ol>	Check connect contact.	
		<ol style="list-style-type: none"> <li>3) Float switch trouble.</li> </ol>	Check float switch operations.	
3152	Abnormal temperature inside the Inverter control box	<ol style="list-style-type: none"> <li>1) If the temperature inside the control box is detected to be 70°C or more during operation (the first time it is detected), the heat source unit is stopped temporarily, the system enters the 3-minute restart prevention mode, then restarts the heat source unit after 3 minutes.</li> <li>2) If the temperature inside the control box is detected to be 70°C or more during operation (the second time it is detected) again within 30 minutes after the heat source unit stops according to 1. above, an abnormal stop is performed and at that time, "3152" is displayed.</li> <li>3) If the temperature inside the control box is detected to be 70°C or more again during operation longer than 30 minutes after the heat source unit stops according to 1. above, it is treated as having been detected the first time and operation is the same as in 1 above.</li> </ol>	<ol style="list-style-type: none"> <li>1) Cooling air passage closed.</li> <li>2) Rise in the ambient temperature.</li> <li>3) Faulty power transistor.</li> </ol>	
		<ol style="list-style-type: none"> <li>4) Faulty thermistor</li> </ol>	Check the thermistor's resistance.	
		<ol style="list-style-type: none"> <li>5) Faulty thermistor input circuit on the control board.</li> </ol>	Check the temperature picked up by the sensor using the LED monitor.	
		<ol style="list-style-type: none"> <li>6) Faulty cooling fan, connector pulled out.</li> <li>7) Faulty LEV 1 for inverter cooling, connector pulled out.</li> <li>8) Faulty cooling fan output circuit on the relay board.</li> <li>9) Faulty cooling fan output circuit on the control board.</li> <li>10) Faulty LEV 1 output circuit for inverter cooling on the control board.</li> </ol>		

Checking code	Meaning, detecting method	Cause	Checking method & Countermeasure	
4103	Reverse phase abnormality	Reverse phase (or open phase) in the power system is being detected, so operation cannot be started.	1) The phases of the power supply (L1, L2, L3) have been reversed.	If there is reverse phase before the breaker, after the breaker or at the power supply terminal blocks TB1A or TB1B, reconnect the wiring.
			2) Open phase has occurred in the power supply (L1, L2, L3, N).	Check before the breaker, after the breaker or at the power supply terminal blocks TB1A or TB1B, and if there is an open phase, correct the connections. a) Check if a wire is disconnected. b) Check the voltage between each of the wires.
			3) The wiring is faulty.	Check 1 the connections, 2, the contact at the connector, 3, the tightening torque at screw tightening locations and 4 for wiring disconnections. TB1A~NF~TB1B~CNTR1~F3~T01~CNTR Refer to the circuit number and the wiring diagram plate.
			4) The fuse is faulty.	If F3 or F1 on the MAIN board is melted, (Resistance between both ends of the fuse is $\infty$ ), replace the fuses.
			5) T01 is faulty.	To judge failure of the T01, go to "Individual Parts Failure Judgment Methods."
			6) The circuit board is faulty.	If none of the items in 1) to 5) is applicable, and if the trouble reappears even after the power is switched on again, replace the MAIN board (when replacing the circuit board, be sure to connect all the connectors, etc. securely).
4115	Power supply sync signal abnormality	The frequency cannot be determined when the power is switched on. (The power supply's frequency cannot be detected. The outdoor fan cannot be controlled by phase control.)	1) There is an open phase in the power supply (L1, L2, L3, N).	Check before the breaker, after the breaker or at the power supply terminal blocks TB1A or TB1B, and if there is an open phase, correct the connections.
			2) The power supply voltage is distorted.	If the power supply voltage waveform is distorted from a sine wave, improve the power supply environment.
			3) A fuse is defective.	If F1 on the MAIN board, or F3 is melted, (Resistance between both ends of the fuse is $\infty$ ), replace the fuses.
			4) T01 is defective.	To judge failure of the T01, go to "Individual Parts Failure Judgment Methods."
			5) The circuit board is defective.	If none of the items in 1) to 4) is applicable, and if the trouble reappears even after the power is switched on again, replace the MAIN board (when replacing the circuit board, be sure to connect all the connectors, ground wires, etc. securely).


Checking code	Meaning, detecting method	Cause	Checking method & Countermeasure
4116	Fan speed abnormality (motor abnormality)  (Detects only for PKFY-VAM) 1. Detecting fan speed below 180rpm or over 2000rpm during fan operation at indoor unit (first detection) enters into the 3-minute restart prevention mode to stop fan for 30 seconds. 2. When detecting fan speed below 180rpm or over 2000rpm again at fan returning after 30 seconds from fan stopping, error stop (fan also stops) will be commenced displaying 4116.	1) Slipping off of fan speed detecting connector (CN33) of indoor controller board.	• Confirm slipping off of connector (CN33) on indoor controller board.
		2) Slipping off of fan output connector (FAN1) of indoor power board.	• Confirm slipping off of connector (FAN1) on indoor power board.
		3) Disconnection of fan speed detecting connector (CN33) of indoor controller board, or that of fan output connector (FAN1) of indoor power board.	• Check wiring for disconnection.
		4) Filter clogging.	• Check filter.
		5) Trouble of indoor fan motor.	• Check indoor fan motor.
		6) Faulty fan speed detecting circuit of indoor controller board, or faulty fan output circuit of indoor power board.	• When aboves have no trouble. 1) For trouble after operating fan. Replace indoor controller board. If not remedied, replace indoor power board. 2) For trouble without operating fan. Replace indoor power board.
4200	VDC sensor/circuit abnormality  1. If $VDC \leq 304$ V is detected just before the inverter starts. 2. If $VDC \geq 750$ V is detected just before starting of and during operation of the inverter.	1) Power supply voltage is abnormal.	• Check if an instantaneous power affure or power failure, etc. has occurred. • Check if the voltage is the rated voltage value.
		2) The wiring is defective.	Check 1, the connections, 2, contact at the connectors, 3 tightening torque at screw tightened portions, 4, wiring polarities, 5, for broken wires, and 6, for grounding in the following wiring. TB1A~NF~TB1B, TB1B~DS~[52C, R1, R5]~[C2, C3]~IPM Wiring CNDC1(G/A)~CNVDC(INV) Wiring * Check if the wiring polarities are as shown on the electric wiring diagram plate.
		3) The rush current prevention resistors (R1, 5) are defective.	To judge failure of R1 and R5, go to "Individual Parts Failure Judgment Methods."
		4) The electromagnetic contactor (52C) is defective.	To judge failure of the 52C, go to "Individual Parts Failure Judgment Methods."
		5) The diode stack (DS) is defective.	To judge failure of the DS, go to "Individual Parts Failure Judgment Methods."
		6) The reactor (DCL) is defective.	To judge failure of the DCL, go to "Individual Parts Failure Judgment Methods."
		7) The INV board is defective.	If none of the items in 1) to 6) is applicable, and if the trouble reappears even after the power is switched on again, replace the INV board (when replacing the circuit board, be sure to connect all the connectors, ground wires, etc. securely).

Checking code		Meaning, detecting method	Cause	Checking method & Countermeasure
4220	Bus voltage abnormality	① If VDC $\leq$ 400 V is detected during inverter operation.	1) The power supply voltage is abnormal.	<ul style="list-style-type: none"> <li>• Check if an instantaneous stop or power failure, etc. has occurred.</li> <li>• Check if the voltage is the rated voltage value.</li> </ul>
			2) The wiring is defective.	Check 1, the connections, 2, contact at the connectors, 3 tightening torque at screw tightened portions, 4, wiring polarities, 5, for broken wires, and 6, for grounding in the following wiring. TB1A~NF~TB1B, TB1B~DS~[52C, R1, R5]~[C2, C3]~IPM Wiring CNDC1 (G / A) ~ CNVDC (INV) Wiring * Check if the wiring polarities are as shown on the wiring diagram plate.
			3) The rush current prevention resistors (R1, 5) are defective.	To judge failure of R1 and R5, go to "Individual Parts Failure Judgment Methods."
			4) The electromagnetic contactor (52C) is defective.	To judge failure of the 52C, go to "Individual Parts Failure Judgment Methods."
			5) The diode stack (DS) is defective.	To judge failure of the DS, go to "Individual Parts Failure Judgment Methods."
			6) The reactor (DCL) is defective.	To judge failure of the DCL, go to "Individual Parts Failure Judgment Methods."
			7) The inverter output is grounded.	<ul style="list-style-type: none"> <li>• Check the wiring between the IPM and the compressor.</li> <li>• Check the compressor's insulation resistance.</li> </ul>
			8) The IPM is defective.	Check the IPM. Judge that the IPM is faulty, (Go to "Individual Parts Failure Judgment Methods.")
			9) The circuit board is defective.	If none of the items in 1) to 8) is applicable, and if the trouble reappears even after the power is switched on again, replace the circuit board by following procedure (when replacing the circuit board, be sure to connect all the connectors, ground wires, etc. security) ① If the problem is solved after the G/A board only is replaced, then the G/A board is defective. ② If the problem is not solved, reinstall the G/A board and replace the INV board. If the problem is solved, the INV board is defective. ③ If the problem is not solved by ① and ② above, replace both boards.
4230	Radiator panel overheat protection	If the cooling fan stays ON for 5 minutes or longer during inverter operation, and if THHS $\geq$ 80°C is detected.	1) The wiring is defective.	Check 1 connections, 2 contact at the connectors and 3 for broken wires in the following wiring. MF1~CNFAN
			2) The INV board's fuse (F01) is defective.	If the fuse is defective, replace the fuse.
			3) The cooling fan (MF1) is defective.	To judge failure of the MF1, go to "Individual Parts Failure Judgment Methods."
			4) The THHS sensor is defective.	To judge failure of the THHS, go to error code "5110".
			5) The air passage is clogged.	If the air passage of the heat sink is clogged, clear the air passage.
			6) The IPM is defective.	Check the IPM. Judge that the IPM is faulty, (Go to "Individual Parts Failure Judgment Methods.")
			7) The circuit board is defective.	If none of the items in 1) to 6) is applicable, and if the trouble reappears even after the power is switched on again, replace the circuit board by following procedure (when replacing the circuit board, be sure to connect all the connectors, ground wires, etc. security) ① If the problem is solved after the G/A board only is replaced, then the G/A board is defective. ② If the problem is not solved, reinstall the G/A board and replace the INV board. If the problem is solved, the INV board is defective. ③ If the problem is not solved by ① and ② above, replace both boards.

Checking code		Meaning, detecting method	Cause	Checking method & Countermeasure
4240	Overload protection	If IAC $\geq$ 32 Arms is detected continuously for 10 minutes during operation of the inverter after 5 or more seconds have passed since the inverter started.	1) Air passage short cycle.	Is the unit's exhaust short cycling?
			2) The heat exchanger is clogged.	Clean the heat exchanger.
			3) Power supply voltage.	If the power supply voltage is less than 342V, it is outside specifications.
			4) External air temperature.	If the external air temperature is over 43°C it is outside the specifications.
			5) Capacity setting error.	<ul style="list-style-type: none"> <li>• Is the indoor unit capacity total correct?</li> <li>• Are the outdoor/indoor unit capacity settings correct?</li> </ul>
			6) The solenoid valves (SV1, 2) are defective, or the solenoid valve drive circuit is defective.	To judge failure of the solenoid valve, go to "Individual Parts Failure Judgment Methods" for the "Solenoid Valve."
			7) The wiring is defective.	Check 1 connections, 2 contact at the connectors and 3 for broken wires in the following wiring. TB1A~NF~TB1B TB1B~CNTR1
8) The inverter/compressor is defective.	Go to "Treating Inverter/Compressor Related Trouble."			
4250	IPM alarm output / Bus voltage abnormality	<p>① If over current, overheat or undervoltage of drive circuit is detected by IPM during inverter operation. [Inverter error detail : 1]</p> <p>② If VDC <math>\leq</math> 300 or VDC <math>\geq</math> 760V is detected during inverter operation. [Inverter error detail : 1]</p> <p>③ If IAC <math>\geq</math> 39Arms is detected during inverter operation. [Inverter error detail : 11]</p>	1) The power supply voltage is abnormal.	<ul style="list-style-type: none"> <li>• Check if an instantaneous stop or power failure, etc. has occurred.</li> <li>• Check if the voltage is the rated voltage value.</li> </ul>
			2) The wiring is defective.	Check 1, the connections, 2, contact at the connectors, 3 tightening torque at screw tightened portions, 4, wiring polarities, 5, for broken wires, and 6, for grounding in the following wiring. TB1A~NF~TB1B, TB1B~DS-[52C, R1, R5]~[C2, C3]~IPM Wiring CNDC1 (G / A) ~ CNVDC (INV) Wiring * Check if the wiring polarities are as shown on the wiring diagram plate.
			3) The inverter / compressor is defective.	Go to "Treatment of Inverter/Compressor Related Trouble."

Checking code		Meaning, detecting method	Cause	Checking method & Countermeasure																						
4260	Cooling fan abnormality	If the heat sink temperature (THHS) $\geq 60^{\circ}\text{C}$ for 20 minutes or longer just before the inverter starts.	1) Same as "4230."	Same as "4230."																						
5101	Thermal sensor abnormality (Heat source unit)	<p>&lt;Other than THHS&gt;</p> <p>① A short in the thermistor or an open circuit was sensed. The heat source unit switches to the temporary stop mode with restarting after 3 minutes, then if the temperature detected by the thermistor just before restarting is in the normal range, restarting takes place.</p> <p>② If a short or open circuit in the thermistor is detected just before restarting, error code "5101", "5102", "5106", "5108", "5109" or "5112" is displayed.</p> <p>③ In the 3 minute restart mode, the abnormal stop delay LED is displayed.</p> <p>④ The above short or open circuit is not detected for 10 minutes after the compressor starts, or for 3 minutes during defrosting or after recovery following defrosting.</p> <p>&lt;THHS&gt;</p> <p>If a heat sink (THHS) temperature of <math>\leq -40^{\circ}\text{C}</math> is detected just after the inverter starts or during inverter operation.</p>	1) Thermistor	Check the thermistor's resistance.																						
5102			2) Lead wires are being pinched.	Check if the lead wires are pinched.																						
5106			3) Insulation is torn.	Check for tearing of the insulation.																						
			4) A connector pin is missing, or there is faulty contact.	Check if a pin is missing on the connector.																						
5107			5) A wire is disconnected.	Check if a wire is disconnected.																						
5109			6) The thermistor input circuit on the MAIN circuit board is faulty. (In the case of the THHS, replace the INV board.)	<p>Check the temperature picked up by the sensor using the LED monitor. If the deviation from the actual temperature is great, replace the MAIN circuit board. (In the case of the THHS, replace the INV board.)</p>																						
5110																										
5112	Compressor shell temperature (TH10)	<table border="0"> <thead> <tr> <th colspan="2">Short Circuit Detection</th> <th>Open Circuit Detection</th> </tr> </thead> <tbody> <tr> <td>TH1</td> <td>240°C or higher (0.57 kΩ)</td> <td>15°C or lower (321 kΩ)</td> </tr> <tr> <td>TH2</td> <td>70°C or higher (1.71 kΩ)</td> <td>-40°C or lower (130 kΩ)</td> </tr> <tr> <td>TH6</td> <td>110°C or higher (0.4 kΩ)</td> <td>-40°C or lower (130 kΩ)</td> </tr> <tr> <td>TH9</td> <td>70°C or higher (1.14 kΩ)</td> <td>-40°C or lower (130 kΩ)</td> </tr> <tr> <td>THHS</td> <td>100°C or higher (1.14 kΩ)</td> <td>-20°C or lower (2.5 MΩ)</td> </tr> <tr> <td>TH10</td> <td>240°C or higher (0.57 kΩ)</td> <td>-15°C or lower (1656 kΩ)</td> </tr> <tr> <td>THINV</td> <td>100°C or higher (0.57 kΩ)</td> <td>-20°C or lower (1656 kΩ)</td> </tr> </tbody> </table>	Short Circuit Detection		Open Circuit Detection	TH1	240°C or higher (0.57 kΩ)	15°C or lower (321 kΩ)	TH2	70°C or higher (1.71 kΩ)	-40°C or lower (130 kΩ)	TH6	110°C or higher (0.4 kΩ)	-40°C or lower (130 kΩ)	TH9	70°C or higher (1.14 kΩ)	-40°C or lower (130 kΩ)	THHS	100°C or higher (1.14 kΩ)	-20°C or lower (2.5 MΩ)	TH10	240°C or higher (0.57 kΩ)	-15°C or lower (1656 kΩ)	THINV	100°C or higher (0.57 kΩ)	-20°C or lower (1656 kΩ)
Short Circuit Detection		Open Circuit Detection																								
TH1	240°C or higher (0.57 kΩ)	15°C or lower (321 kΩ)																								
TH2	70°C or higher (1.71 kΩ)	-40°C or lower (130 kΩ)																								
TH6	110°C or higher (0.4 kΩ)	-40°C or lower (130 kΩ)																								
TH9	70°C or higher (1.14 kΩ)	-40°C or lower (130 kΩ)																								
THHS	100°C or higher (1.14 kΩ)	-20°C or lower (2.5 MΩ)																								
TH10	240°C or higher (0.57 kΩ)	-15°C or lower (1656 kΩ)																								
THINV	100°C or higher (0.57 kΩ)	-20°C or lower (1656 kΩ)																								
5111	Thermal sensor abnormality (BC controller)	<p>1. When short (high temp. inlet) or open (low temperature inlet) of thermistor is detected during operation, error stop will be commenced displaying "5111" or "5112", "5113" or "5114", or "5115" or "5116."</p> <p>2. The above detection is not made during defrosting and 3-minute after changing operation mode.</p>	1) Thermistor trouble.	Check thermistor resistance.																						
			2) Biting of lead wire.	Check lead wire biting.																						
			3) Broken cover.	Check broken cover.																						
			4) Coming off of pin at connector portion, poor contact.	Check coming off of pin at connector.																						
			5) Broken wire.	Check broken wire.																						
			6) Faulty thermistor input circuit of control board.	Check sensor sensing temperature. If it deviates from the actual temperature seriously, replace control panel.																						
			<table border="0"> <thead> <tr> <th colspan="2">Short Detected</th> <th>Open Detected</th> </tr> </thead> <tbody> <tr> <td>TH11</td> <td>110°C or more (0.4 kΩ)</td> <td>-40°C or less (130 kΩ)</td> </tr> <tr> <td>TH12</td> <td>110°C or more (0.4 kΩ)</td> <td>-40°C or less (130 kΩ)</td> </tr> <tr> <td>TH15</td> <td>70°C or more (1.14 kΩ)</td> <td>-40°C or less (130 kΩ)</td> </tr> <tr> <td>TH16</td> <td>70°C or more (0.4 kΩ)</td> <td>-40°C or less (130 kΩ)</td> </tr> </tbody> </table>	Short Detected		Open Detected	TH11	110°C or more (0.4 kΩ)	-40°C or less (130 kΩ)	TH12	110°C or more (0.4 kΩ)	-40°C or less (130 kΩ)	TH15	70°C or more (1.14 kΩ)	-40°C or less (130 kΩ)	TH16	70°C or more (0.4 kΩ)	-40°C or less (130 kΩ)								
Short Detected		Open Detected																								
TH11	110°C or more (0.4 kΩ)	-40°C or less (130 kΩ)																								
TH12	110°C or more (0.4 kΩ)	-40°C or less (130 kΩ)																								
TH15	70°C or more (1.14 kΩ)	-40°C or less (130 kΩ)																								
TH16	70°C or more (0.4 kΩ)	-40°C or less (130 kΩ)																								

Checking code	Meaning, detecting method	Cause	Checking method & Countermeasure
5201	Pressure sensor abnormality (heat source unit)	1) Pressure sensor trouble. 2) Inner pressure drop due to a leakage. 3) Broken cover. 4) Coming off of pin at connector portion, poor contact. 5) Broken wire. 6) Faulty thermistor input circuit of MAIN board.	See <b>Troubleshooting of pressure sensor</b> .
5301	IAC sensor/circuit abnormality	① If $IAC \geq 3$ Arms is detected just before the inverter starts, or If $IAC \leq 3$ Arms is detected during inverter operation after 5 seconds has passed since the inverter started when the INV board's SW1-1 is OFF. [Inverter error detail : 6] ② If the current sensor (ACCT) miss-wiring is detected during inverter operation. [Inverter error detail : 13]	1) Contact is faulty. Check the contacts of CNACCT on the INV board. 2) The current sensor (ACCT) is connected with wrong polarity. Check the ACCT_U, W polarity with below drawing. 3) The wiring is defective. Check 1. connections. 2. contact at the connectors. 3. for broken wires in the following wiring. CNDR2-CNDR1 CN15V2-CN15V1 IPM-MC1 4) The Ac current sensor (ACCT) is defective. To judge failure of ACCT, go to Individual Parts Failure Judgment Methods. 5) The IPM is defective. Check the IPM. Judge that the IPM is faulty, (Go to Individual Parts Failure Judgment Methods.)

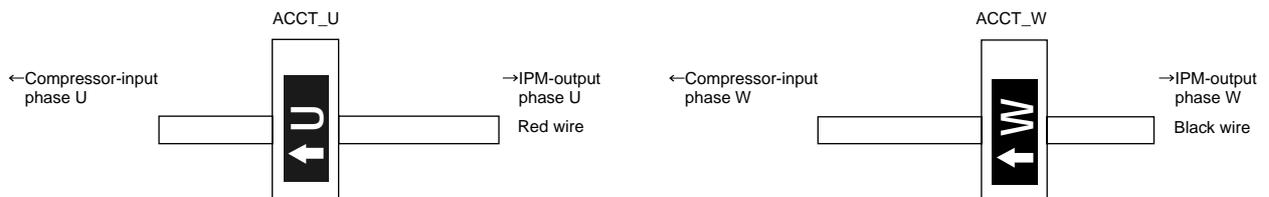

Checking code		Meaning, detecting method	Cause	Checking method & Countermeasure
5301	IAC sensor/ circuit abnormality	<p>① If IAC <math>\geq</math> 3 Arms is detected just before the inverter starts, or If IAC <math>\leq</math> 3 Arms is detected during inverter operation after 5 seconds has passed since the inverter started when the INV board's SW1-1 is OFF. [Inverter error detail : 6]</p> <p>② If the current sensor (ACCT) miss-wiring is detected during inverter operation. [Inverter error detail : 13]</p>	6) The circuit board is defective.	<p>If none of the items in 1) to 5) is applicable, and if the trouble reappears even after the power is switched on again, replace the circuit board by following procedure (when replacing the circuit board, be sure to connect all the connectors, ground wires, etc. security)</p> <p>① If the problem is solved after the G/A board only is replaced, then the G/A board is defective.</p> <p>② If the problem is not solved, reinstall the INV board and replace the INV board. If the problem is solved, the INV board is defective.</p> <p>③ If the problem is not solved by ① and ② above, replace both boards.</p>
7130	Different indoor model connected abnormality	An exclusive R22 refrigerant indoor unit was connected to a R407C refrigerant heat source unit.	<p>1) An error was made in the MAIN board of the heat source unit (replaced with the wrong circuit board).</p> <p>2) An error was made in selecting the indoor unit (installation error).</p> <p>3) An error was made in the indoor unit's circuit board (replaced with the wrong circuit board).</p>	<p>If the model name plate on the heat source unit says that it is an exclusive R22 model, and if error "7130" has occurred, the MAIN board for the heat source unit is a R407C model circuit board, so replace it with the MAIN board for the R22 model.</p> <p>If the model name plate for the indoor unit is an exclusive R22 model, install a unit which can also operate with R407C.</p> <p>If the model name plate on the indoor unit indicates that it is also capable of operating with R407C, and error "7130" occurs, the indoor unit's circuit board is for an exclusive R22 model, so replace it with the circuit board for a unit which is also capable of using R407C.</p>

## (2) Communication/system

Checking code	Meaning, detecting method	Cause	Checking method & Countermeasure
6600	<p>Multiple address error</p> <p>Transmission from units with the same address is detected.</p> <div data-bbox="280 414 552 571" style="border: 1px solid black; padding: 5px;"> <p>Note: The address/attribute shown on remote controller indicates the controller which has detected error.</p> </div>	<ol style="list-style-type: none"> <li>1) Two or more controllers of heat source unit, indoor unit, remote controller, BC controller, etc. have the same address.</li> <li>2) In the case that signal has changed due to noise entered into the transmission signal.</li> </ol>	<p>At the generation of 6600 error, release the error by remote controller (with stop key) and start again.</p> <p>a) If the error occurs again within 5 minutes. → Search for the unit which has the same address with that of the source of the trouble.</p> <div data-bbox="986 439 1409 566" style="border: 1px solid black; padding: 5px;"> <p>When the same address is found, turn off the power source of heat source unit, BC controller, and indoor unit for 5 minutes or more after modifying the address, and then turn on it again.</p> </div> <p>b) When no trouble is generated even continuing operation over 5 minutes. → The transmission wave shape/noise on the transmission line should be investigated in accordance with &lt;Investigation method of transmission wave shape/noise&gt;.</p>
6602	<p>Transmission processor hardware error</p> <p>Though transmission processor intends to transmit "0", "1" is displayed on transmission line.</p> <div data-bbox="280 913 552 1070" style="border: 1px solid black; padding: 5px;"> <p>Note: The address/attribute shown on remote controller indicates the controller which has detected error.</p> </div>	<ol style="list-style-type: none"> <li>1) At the collision of mutual transmission data generated during the wiring work or polarity change of the transmission line of indoor or heat source unit while turning the power source on, the wave shape is changed and the error is detected.</li> <li>2) 100V power source connection to indoor unit or BC controller.</li> <li>3) Ground fault of transmission line.</li> <li>4) Insertion of power supply connector (CN40) of plural heat source units at the grouping of plural refrigerant systems.</li> <li>5) Insertion of power supply connector (CN40) of plural heat source units in the connection system with MELANS.</li> <li>6) Faulty controller of unit in trouble.</li> <li>7) Change of transmission data due to the noise in transmission.</li> <li>8) Connection system with plural refrigerant systems or MELANS for which voltage is not applied on the transmission line for central control.</li> </ol>	

Checking code	Meaning, detecting method	Cause	Checking method & Countermeasure
6602	Transmission processor hardware error	<p>Checking method and processing</p>	
6603	<p>Transmission circuit bus-busy error</p> <ol style="list-style-type: none"> <li>Collision of data transmission: Transmission can not be performed for 4~10 consecutive minutes due to collision of data transmission.</li> <li>Data can not be transmitted on transmission line due to noise for 4~10 consecutive minutes.</li> </ol> <p>Note: The address/attribute shown on remote controller indicates the controller which has detected error.</p>	<ol style="list-style-type: none"> <li>As the voltage of short frequency like noise is mixed in transmission line continuously, transmission processor can not transmit.</li> <li>Faulty controller of generating unit.</li> </ol>	<ol style="list-style-type: none"> <li>Check transmission wave shape/noise on transmission line by following &lt;Investigation method of transmission wave shape/noise&gt;. <ul style="list-style-type: none"> <li>→ No noise indicates faulty controller of generating unit.</li> <li>→ Noise if existed, check the noise.</li> </ul> </li> </ol>

Checking code	Meaning, detecting method	Cause	Checking method & Countermeasure
6606	<p>Communications with transmission processor error</p> <p>Communication trouble between apparatus processor and transmission processor.</p> <div data-bbox="288 405 560 551" style="border: 1px solid black; padding: 5px;"> <p>Note: The address/attribute shown on remote controller indicates the controller which has detected error.</p> </div>	<p>1) Data is not properly transmitted due to casual erroneous operation of the generating controller.</p> <p>2) Faulty generating controller.</p>	<p>Turn off power sources of indoor unit, BC controller and heat source unit.</p> <p>( When power sources are turned off separately, microcomputer is not reset and normal operations can not be restored. )</p> <p>→ Controller trouble is the source of the trouble when the same trouble is observed again.</p>

Checking code	Meaning, detecting method				
6607	No ACK error		When no ACK signal is detected in 6 continuous times with 30 second interval by transmission side controller, the transmission side detects error.		
<div style="border: 1px solid black; padding: 5px; width: fit-content; margin: auto;">           Note: The address/attribute shown on remote controller indicates the controller not providing the answer (ACK).         </div>					
System composition	Generating unit address	Display of trouble	Detecting method	Cause	Checking method & countermeasure
(1) Single refrigerant system	① Outdoor unit (OC)	Remote controller (RC)	No reply (ACK) at OC transmission to BC	1) Poor contact of transmission line of OC or BC. 2) Damping of transmission line voltage/signal by acceptable range of transmission wiring exceeded. <div style="border: 1px solid black; padding: 2px; display: inline-block; margin: 5px 0;">             Farthest : Less than 200m              Remote controller wiring : Less than 10m           </div> 3) Erroneous sizing of transmission line (Not within the range below). Wire diameter : 1.25mm <sup>2</sup> or more 4) Faulty control circuit board of OC.	Shut down OC unit power source, and make it again. It will return to normal state at an accidental case. When normal state can not be recovered, check for the 1) ~ 4) of the cause.
	② BC controller <master> (BC)	Remote controller (RC)	No reply (ACK) at BC <master> transmission to IC	1) When BC controller (master) address is changed or modified during operation. 2) Faulty or disconnection of transmission wiring of BC controller (master). 3) Slipping off of BC unit connector (CN02). 4) Faulty BC controller (master) circuit board.	Shut down both OC and IC power sources simultaneously for 5 minutes or more, and make them again. It will return to normal state at an accidental case. When normal state can not be recovered, check for the 1) ~ 4) of the cause.
	③ BC controller <slave> (BS)	Remote controller (RC)	No reply (ACK) at BC <slave> transmission to BC <master>	1) When BC controller (slave) is changed or modified during operation. 2) Faulty or disconnection of transmission wiring of BC controller (slave). 3) Slipping off of BC unit connector (CN02). 4) Faulty BC controller (slave) circuit board.	Shut down both OC and master BC power sources simultaneously for 5 minutes or more, and make them again. It will return to normal state at an accidental case. When normal state can not be recovered, check for the 1) ~ 4) of the cause.
	④ Indoor unit (IC)	Remote controller (RC)	No reply (ACK) at IC transmission to RC	1) When IC unit address is changed or modified during operation. 2) Faulty or disconnection of transmission wiring of IC. 3) Slipping off of IC unit connector (CN2M). 4) Faulty IC unit controller. 5) Faulty remote controller.	Shut down both OC and IC power sources simultaneously for 5 minutes or more, and make them again. It will return to normal state at an accidental case. When normal state can not be recovered, check for the 1) ~ 4) of the cause.
	⑤ Remote controller (RC)	Remote controller (RC)	No reply (ACK) at RC transmission to IC	1) Faulty transmission wiring at IC unit side. 2) Faulty transmission wiring of RC. 3) When remote controller address is changed or modified during operation. 4) Faulty remote controller.	Shut down OC power sources for 5 minutes or more, and make it again. It will return to normal state at an accidental case. When normal state can not be recovered, check for the 1) ~ 4) of the cause.

Checking code	Meaning, detecting method				
6607 (continued)	No ACK error		When no ACK signal is detected in 6 continuous times with 30 second interval by transmission side controller, the transmission side detects error.		
<div style="border: 1px solid black; padding: 5px; width: fit-content; margin: 0 auto;">           Note: The address/attribute shown on remote controller indicates the controller not providing the answer (ACK).         </div>					
System composition	Generating unit address	Display of trouble	Detecting method	Cause	Checking method & countermeasure
(2) Group operation system using plural refrigerants	① Outdoor unit (OC)	Remote controller (RC)	No reply (ACK) at OC transmission to BC	As same that for single refrigerant system.	Same as measure for single refrigerant system.
	② BC controller <master> (BC)	Remote controller (RC)	No replay (ACK) at BC <master> transmission to IC	As same that for single refrigerant system.	Same as measure for single refrigerant system.
	③ BC controller <slave> (BS)	Remote controller (RC)	No reply (ACK) at BC <slave> transmission to BC <master>	As same that for single refrigerant system.	Same as measure for single refrigerant system.
	④ Indoor unit (IC)	Remote controller (RC)	No reply (ACK) at IC transmission to RC	1) Cause of 1) ~ 5) of "Cause for single refrigerant system". 2) Disconnection or short circuit of transmission line of OC terminal block for centralized control (TB7). 3) Shut down of OC unit power source of one re-frigerant system. 4) Neglecting insertion of OC unit power supply connector (CN40). 5) Inserting more than 2 sets of power supply connector (CN40) for centralized control use. For generation after normal operation conducted once, the following causes can be considered. <ul style="list-style-type: none"> <li>• Total capacity error (7100)</li> <li>• Capacity code setting error (7101)</li> <li>• Connecting set number error (7102)</li> <li>• Address setting error (7105)</li> </ul>	a) Shut down the power source of both IC and OC for over 5 minutes simultaneously, and make them again. Normal state will be returned incase of accidental trouble. b) Check for 1) ~ 5) of causes. If cause is found, remedy it. c) Check other remote controller or OC unit LED for troubleshooting for trouble. Trouble → Modify the trouble according to the content of check code. No trouble → Faulty indoor controller
	⑤ Remote controller (RC)	Remote controller (RC)	No reply (ACK) at RC transmission to IC	1) Cause of 1) ~ 3) of "Cause for single refrigerant system". 2) Disconnection or short circuit of transmission line of OC terminal block for centralized control (TB7). 3) Shut down of OC unit power source of one	a) Shut down the power source of OC for over 5 minute, and make it again. Normal state will be returned in case of accidental trouble. b) Check for 1) ~ 5) of causes. If cause is found, remedy it. When normal state can not be obtained, check 1) ~ 5) of causes.

Checking code	Meaning, detecting method				
6607 (continued)	No ACK error		When no ACK signal is detected in 6 continuous times with 30 second interval by transmission side controller, the transmission side detects error.		
<div style="border: 1px solid black; padding: 5px; display: inline-block;">           Note: The address/attribute shown on remote controller indicates the controller not providing the answer (ACK).         </div>					
System composition	Generating unit address	Display of trouble	Detecting method	Cause	Checking method & countermeasure
(3) Connecting system with system controller (MELANS)	① Outdoor unit (OC)	Remote controller (RC)	No reply (ACK) at OC transmission to BC	As same that for single refrigerant system.	Same countermeasure as that for single refrigerant system.
	② BC controller <master> (BC)	Remote controller (RC)	No reply (ACK) at BC <master> transmission to IC	As same that for single refrigerant system.	Same countermeasure as that for single refrigerant system.
	③ BC controller <slave> (BS)	Remote controller (RC)	No reply (ACK) at BC <slave> transmission to BC <master>	As same that for single refrigerant system.	Same countermeasure as that for single refrigerant system.
	④ Indoor unit (IC)	Remote controller (RC)	No reply (ACK) at IC transmission RC	Same cause of that for grouping from plural refrigerants.	Same countermeasure as that for IC unit error in plural refrigerant system.
		System controller (SC)	No reply (ACK) at IC transmission to SC	Trouble of partial IC units: 1) Same cause as that for single refrigerant system.	→ Same countermeasure as that for single refrigerant system.
				Trouble of all IC in one refrigerant system: 1) Cause of total capacity error. (7100) 2) Cause of capacity code setting error. (7101) 3) Cause of connecting number error. (7102) 4) Cause of address setting error. (7105) 5) Disconnection or short circuit of transmission line of OC unit terminal block for central control (TB7). 6) Power source shut down of OC unit. 7) Trouble of OC unit electrical system.	Confirm OC trouble diagnosis LED. → At trouble generation, check for the content according to check code. Check the content of 5)~7) shown left.
	⑤ Remote controller (RC)	System controller (SC)	No reply (ACK) at RC transmission to MELANS	Trouble of all IC: 1) As same that for single refrigerant system. 2) Insertion of power supply connector (CN40) into OC unit transmission line for centralized control. 3) Disconnection or power source shut down of power supply unit for transmission line. 4) Faulty system controller (MELANS).	Confirm voltage of transmission line for centralized control. • More than 20V → Confirm 1) 2) left. • Less than 20V → Confirm 3) left.
				Same cause as that for plural refrigerant system.	Same countermeasure as that for plural refrigerant system.
				Trouble of partial IC units: 1) Same cause of that for single refrigerant system.	→ Same countermeasure as that for single refrigerant system.
				Trouble of all IC in one refrigerant system: 1) Error detected by OC unit. Total capacity error. (7100) Capacity code setting error. (7101) Connecting number error. (7102) Address setting error. (7105) 2) Disconnection or short circuit of transmission line of OC unit terminal block for central control (TB7). 3) Power source shut down of OC unit. 4) Trouble of OC unit electrical system.	Confirm OC trouble diagnosis LED. → At trouble generation, check for the content according to check code.  Check the content of 2)~4) shown left.
			Trouble of all IC: 1) As same that for single refrigerant system. 2) Insertion of power supply connector (CN40) into OC unit transmission line for central-ized control. 3) Disconnection or power shutdown of power supply unit for transmission line. 4) Faulty MELANS.	Check the causes of 1) ~ 4) left.	

Checking code	Meaning, detecting method				
6607 (continued)	No ACK error		When no ACK signal is detected in 6 continuous times with 30 second interval by transmission side controller, the transmission side detects error. <div style="border: 1px solid black; padding: 5px; margin-top: 10px;">             Note: The address/attribute shown on remote controller indicates the controller not providing the answer (ACK).           </div>		
System composition	Generating unit address	Display of trouble	Detecting method	Cause	Checking method & countermeasure
(3) Connecting system with system controller (MELANS)	⑤ System controller (SC)	Remote controller (RC)	No reply (ACK) at transmission of IC to SC	Trouble of partial remote controller: 1) Faulty wiring of RC transmission line. 2) Slipping off or poor contact of RC transmission connector. 3) Faulty RC.	Check 1) ~ 3) left.
				Trouble of all IC in one refrigerant system. 1) Error detected by OC unit. Total capacity error (7100) Capacity code setting error (7101) Connecting number error (7102) Address setting error (7105) 2) Slipping off or short circuit of transmission line of OC unit terminal block for central control (TB7). 3) Power source shut down of OC unit. 4) Trouble of OC unit electrical system.	Confirm OC trouble diagnosis LED. → At trouble generation, check for the content according to check code. Check the content of 2) ~ 4) shown left.
				Trouble of all RC: 1) As same that for single refrigerant system. 2) Inserting supply power connector (CN40) to OC transmission line for centralized control. 3) Slipping off or power shutdown of power supply unit for transmission line. 4) Faulty MELANS.	Check the causes 1)~4) left.
No relation with system	Address which should not be existed	-	-	1) IC unit is keeping the memory of the original group setting with RC although the RC address was changed later. The same symptom will appear for the registration with SC. 2) IC unit is keeping the memory of the original interlocking registration with Fresh Master with RC although the Fresh Master address was changed later.	As some IC units are keeping the memory of the address not existing, delete the information. Employ one of the deleting method among two below. 1) Deletion by remote controller. Delete unnecessary information by the manual setting function of remote controller. 2) Deletion by connecting information deleting switch of OC unit. <div style="border: 1px solid black; padding: 5px; margin-top: 10px;">             Be careful that the use of this method will delete all the group information set with RC and all the interlocking information of Fresh Master and IC unit.           </div> ① Shut down OC unit power source, and wait for 5 minutes. ② Turn on the dip switch SW2-2 provided on OC unit control circuit board. ③ Make OC unit power source, and wait for 5 minutes. ④ Shut down OC unit power source, and wait for 5 minutes. ⑤ Turn off the dip switch SW2-2 provided on OC unit control circuit board. ⑥ Make OC unit power source.

Checking code	Meaning, detecting method	Cause	Checking method & Countermeasure
6608	<p><b>No response error</b></p> <p>Though acknowledgement of receipt (ACK) is received after transmission, no response command is returned. Detected as error by transmission side when the same symptom is re-peated 10 times with an interval of 3 seconds.</p> <div style="border: 1px solid black; padding: 5px; width: fit-content;"> <p>Note: The address/attribute shown on remote controller indicates the controller which has detected error.</p> </div>	<ol style="list-style-type: none"> <li>1) At the collision of mutual transmission data when transmission wiring is modified or the polarity is changed while turning the power source on, the wave shape changes detecting error.</li> <li>2) Repeating of transmission error due to noise.</li> <li>3) Damping of transmission line voltage/signal due to exceeding of the acceptable range for transmission wiring. <ul style="list-style-type: none"> <li>• Farthest      Less than 200m</li> <li>• RC wiring    Less than 12m</li> </ul> </li> <li>4) Damping of transmission voltage/signal due to improper type of transmission line. <ul style="list-style-type: none"> <li>• Wire size : More than 1.25mm<sup>2</sup></li> </ul> </li> </ol>	<ol style="list-style-type: none"> <li>a) Generation at test run. Turn off the power sources of OC unit, IC unit and Fresh Master for more than 5 minutes simultaneously, and make them again. → Returning to normal state means the trouble detection due to transmission line work while powering.</li> <li>b) Check 3) and 4) of the causes left.</li> <li>c) Investigate the transmission wave shape/noise on transmission line according to &lt;Investigation method of transmission wave shape/noise&gt;.</li> </ol> <div style="border: 1px solid black; border-radius: 10px; padding: 5px; text-align: center; margin-top: 10px;"> <p>Much possibility if 6602 is generated.</p> </div>

### (3) System error

Checking code	Meaning, detecting method	Cause	Checking method & Countermeasure															
7100	<p><b>Total capacity error</b></p> <p>Total capacity of indoor units in the same refrigerant system exceeds limitations.</p> <div style="border: 1px solid black; padding: 5px; width: fit-content;"> <p>Trouble source: Heat source unit</p> </div>	<ol style="list-style-type: none"> <li>1) Total capacity of indoor units in the same refrigerant system exceeds the following: <table border="1" style="margin-top: 10px; width: 100%; border-collapse: collapse;"> <thead> <tr> <th>Model</th> <th>Total capacity</th> <th>Total capacity code</th> </tr> </thead> <tbody> <tr> <td>PQRY-P200</td> <td>302</td> <td>62</td> </tr> <tr> <td>PQRY-P250</td> <td>378</td> <td>78</td> </tr> <tr> <td>PQHY-P200</td> <td>260</td> <td>52</td> </tr> <tr> <td>PQHY-P250</td> <td>325</td> <td>65</td> </tr> </tbody> </table> </li> <li>2) Erroneous setting of OC model selector switch (SW3-10). <div style="text-align: center; margin-top: 10px;"> <p style="font-size: small; margin: 0;">ON .... 250 OFF ... 200 SW3</p> </div> </li> </ol>	Model	Total capacity	Total capacity code	PQRY-P200	302	62	PQRY-P250	378	78	PQHY-P200	260	52	PQHY-P250	325	65	<ol style="list-style-type: none"> <li>a) Check for the model total (capacity cord total) of indoor units connected.</li> <li>b) Check whether indoor unit capacity code (SW2) is wrongly set.  For erroneous switch setting, modify it, turn off power source of heat source unit, and indoor unit simultaneously for 5 minutes or more to modify the switch for setting the model name (capacity code).</li> </ol> <hr style="border-top: 1px dashed black;"/> <p>Check for the model selector switch (Dip switches SW3-10 on heat source unit control circuit) of OC.</p>
Model	Total capacity	Total capacity code																
PQRY-P200	302	62																
PQRY-P250	378	78																
PQHY-P200	260	52																
PQHY-P250	325	65																
7101	<p><b>Capacity code error</b></p> <p>Error display at erroneous connection of Indoor unit of which model name can not be connected.</p> <div style="border: 1px solid black; padding: 5px; width: fit-content;"> <p>Trouble source : Heat source unit Indoor unit</p> </div>	<ol style="list-style-type: none"> <li>1) The Indoor unit model name (model code) connected is not connectable. Connectable range....20~250</li> <li>2) Erroneous setting of the switch (SW2) for setting of model name of Indoor unit connected.</li> </ol>	<ol style="list-style-type: none"> <li>a) Check for the model name of the Indoor unit connected.</li> <li>b) Check for the switch (SW2 if indoor controller for setting of Indoor unit model name of generating address. When it is not agreed to the model name, modify the capacity code while shutting off the power source of Indoor unit. * The capacity of Indoor unit can be confirmed by the self-diagnosis function (SW1 operation) of Indoor unit.</li> </ol>															
7102	<p><b>Connected unit count over</b></p> <p>Number of units connected in the same refrigerant system exceeds limitations.</p> <div style="border: 1px solid black; padding: 5px; width: fit-content;"> <p>Trouble source: Heat source unit</p> </div>	<ol style="list-style-type: none"> <li>1) Number of unit connected to terminal block (TB3) for heat source/indoor transmission line exceeds limitations given be-lows: <table border="1" style="margin-top: 10px; width: 100%; border-collapse: collapse;"> <thead> <tr> <th>Item</th> <th>Limitation</th> </tr> </thead> <tbody> <tr> <td>① Total of Indoor unit</td> <td>1~15 (PQRY-P200) 1~16 (PQRY-P250) 1~13 (PQHY-P200) 1~16 (PQHY-P250)</td> </tr> <tr> <td>② Total of Indoor unit &amp; RC</td> <td>1~35</td> </tr> <tr> <td>③ Total of BC controller</td> <td>1</td> </tr> </tbody> </table> </li> </ol>	Item	Limitation	① Total of Indoor unit	1~15 (PQRY-P200) 1~16 (PQRY-P250) 1~13 (PQHY-P200) 1~16 (PQHY-P250)	② Total of Indoor unit & RC	1~35	③ Total of BC controller	1	<ol style="list-style-type: none"> <li>a) Check whether the connection of units to the terminal block for indoor/heat source transmission wiring (TB3) of heat source unit is not exceeding the limitation. (See ① ~ ② left.)</li> <li>b) Check for 2), 3), and 4).</li> <li>c) Check for the connection of transmission wiring to the terminal block for centralized control is erroneously connected to the indoor/heat source transmission wiring terminal block (TB3).</li> </ol>							
Item	Limitation																	
① Total of Indoor unit	1~15 (PQRY-P200) 1~16 (PQRY-P250) 1~13 (PQHY-P200) 1~16 (PQHY-P250)																	
② Total of Indoor unit & RC	1~35																	
③ Total of BC controller	1																	

Checking code	Meaning, detecting method	Cause	Checking method & Countermeasure
7102	<b>Connected unit count over</b>	2) The Outdoor unit address is being set to 51~100 under automatic address mode (Remote controller displays "HO"). 3) Disconnection of transmission wiring at Outdoor unit. 4) Short circuit of transmission line in case of 3) & 4), remote controller displays "HO". 5) Disconnection of transmission wiring at BC controller. 6) BC controller not for the BIG R2 (model: FA, FB type) is connected.	d) Check for the model total (capacity code total) of indoor units connected.
7105	<b>Address setting error</b> • Erroneous setting of OC unit address • Erroneous setting of BC controller address  <div style="border: 1px solid black; padding: 2px; width: fit-content;">             Trouble source :              Outdoor unit              BC controller           </div>	1) Setting error of Outdoor unit address. The address of Outdoor unit is not being set to 51~100. 2) The address of BC controller is not being set within 51~100.	Check that the address of OC unit is being set to 51~100. Reset the address if it stays out of the range, while shutting the power source off. When BC controller is out of the range, reset it while shutting the power source of both OC unit and BC controller off.
7107	<b>Branch No. setting error</b> Can not operate because branch No. of indoor unit wrongly set.  <div style="border: 1px solid black; padding: 2px; width: fit-content;">             Trouble source :              BC controller           </div>	1) Indoor unit capacity per connector joint is exceeded as follows: Single connection : 81 or more Two connection joint : 161 or more Three connection joint : 241 or more Four connection joint : 321 or more  2) Four or more indoor units are set for the same connection.  3) The smallest branch No. has not been set when used at joint.  4) Does the address of BC controller (slave) become the least address + 50 of Indoor controller connecting to BC controller (slave)?  5) The address of Indoor Unit, which is connected to BC controller (slave), sets up the small address from the greatest address of Indoor Unit which is connected to BC control (master).	a) Check indoor unit connection No. in refrigerant circuit. ① No four or more indoor units which are set for the same branch No. A? ② Check total capacity of indoor units which are set for the same branch No. Judged as trouble when it applies to Cause 1). ③ Check whether the smallest branch No. is set when used at joint.  b) Check whether indoor unit capacity code (SW2) is wrongly set. (Keep factory shipment condition.) For erroneous switch setting, modify it, turn off the power source of outdoor unit, and indoor unit simultaneously for 5 minutes or more, and then turn on.  C) Verify the address of BC controller (slave) and Indoor Unit.
7111	<b>Remote control sensor error</b> Error not providing the temperature designed to remote controller sensor.  <div style="border: 1px solid black; padding: 2px; width: fit-content;">             Trouble source :              Indoor unit           </div>	1) In case when the old type remote controller for M-NET is used and the remote controller sensor is designed on indoor unit. (SW1-1 turned ON)	a) Replace the old remote controller by the new remote controller.
7130	<b>Different Indoor model and BC controller connected error</b>	A indoor unit not for the R407C (model: P•••) is connected.	Use the P••• indoor unit.

## [6] LED Monitor Display


### (1) How to read LED for service monitor

By setting of DIP SW1-1 ~ 1-8, the unit operating condition can be observed with the service LED on the control circuit board. (For the relation of each DIP SW to the content, see the table provided.)

As shown in the figure below, the LED consist of 7 segments is put in 4 sets side by side for numerical and graphic display.

OC	: Heat source unit	SV	: Solenoid valve	THHS	: Inverter radiator panel
IC	: Indoor unit	LEV	: Electronic expansion valve		
		COMP	: Compressor		
SW1	: Heat source unit control circuit board				
E	: Memory storage for service activities (sampling per minute)				


7 seg LED

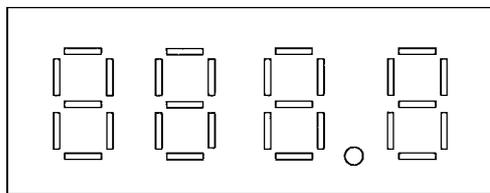

The numerical display includes that of pressure, temperature or the like, while the graphic display includes that of operating condition, solenoid valve ON/OFF state or the like.


- Numerical display

Example : Display at 1.84MPa of pressure sensor data (Item No. 56)

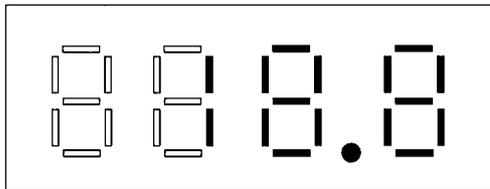

- Graphic display (Two LEDs aligned vertically express a flag.)

Example : At forcible powering in heat source unit operation display

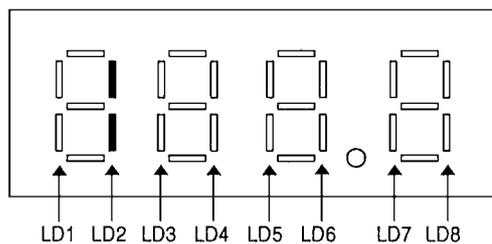

(2) PQR

E: E2 Contents stored in the E2PROM; M: Monitored by the IC through communications; E\*: Stored in service memory.

No	SW1	Item	Display								Remarks
	12345678910		LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8	
0	0000000000	Relay Output Display 1 (Lights up to display)	COMP Operating	Crankcase Heater ON	21S4	SV1	SV2	SV3	SV4	Lights for Normal Operation	LD8 is a relay output indicator which lights up at all times when the microcomputer's power is ON. When sending of a monitoring request to IC/BC is terminated, if there is no error, "----" is displayed. E*
		Check Display 1 OC Error	0 ~ 9999 Address and error code reversed								
1	1000000000	Relay Output Display 2	SV5	SV6	SV71	SV72	SV73		SSR		E*
2	0100000000	Check Display 2 (Including the IC)	0 ~ 9999 Address and error code reversed								If there is no error, "----" is displayed. E*
3	1100000000										
4	0010000000										
5	1010000000	Communication Demand capacity	0 ~ 9999								If no demand control, "----" displayed. {%} E*
6	0110000000	External Signal (Signal being input)	ON/OFF demand	Pump interlock Error							E*
7	1110000000	Heat Source Unit Operation Display	BC operating command	Warm-up mode	3 minutes restart protection mode	Compressor operating	Preliminary Error	Error			E*
8	0001000000	Indoor Unit Check	Unit No. 1	Unit No. 2	Unit No. 3	Unit No. 4	Unit No. 5	Unit No. 6	Unit No. 7	Unit No. 8	Lights up if an abnormal stop has occurred in the IC. The indicator for Unit No. 1 goes off when error reset is carried out from the smallest address. M
9	1001000000		Unit No. 9	Unit No. 10	Unit No. 11	Unit No. 12	Unit No. 13	Unit No. 14	Unit No. 15	Unit No. 16	
10	0101000000	Indoor Unit Operation Mode	Unit No. 1	Unit No. 2	Unit No. 3	Unit No. 4	Unit No. 5	Unit No. 6	Unit No. 7	Unit No. 8	Lights up during cooling. Blinks during heating. Goes off during stop and blower operation. M
11	1101000000		Unit No. 9	Unit No. 10	Unit No. 11	Unit No. 12	Unit No. 13	Unit No. 14	Unit No. 15	Unit No. 16	
12	0011000000	Indoor Unit Thermostat ON	Unit No. 1	Unit No. 2	Unit No. 3	Unit No. 4	Unit No. 5	Unit No. 6	Unit No. 7	Unit No. 8	Lights up when thermostat is ON. Goes off when thermostat is OFF. M
13	1011000000		Unit No. 9	Unit No. 10	Unit No. 11	Unit No. 12	Unit No. 13	Unit No. 14	Unit No. 15	Unit No. 16	
14	0111000000	BC All Indoor Unit Mode	Cooling-only ON	Cooling-only OFF	Heating-only ON	Heating-only OFF	Mixed ON	Mixed OFF	Fan	OFF	E*
15	1111000000	Heat Source Unit Operation Mode	Stop	Standby		Cooling-only	Cooling-main	Heating-only	Heating-main	Demand	
16	0000100000	Heat Source Unit Control Mode	Cooling-only Refrigerant Recovery	Cooling-main Refrigerant Recovery	Heating-only Refrigerant Recovery	Heating-main Refrigerant Recovery	Cooling-only Oil Recovery	Cooling-main Oil Recovery	Heating-only Oil Recovery	Heating-main Oil Recovery	
17	1000100000	Preliminary Error in Heat Source Unit	High Pressure Error 1, 2	Low Pressure Error 1	Discharge Temperature Error	Overcurrent Protection	Heat Sink Thermostat Operating	Overcurrent Break	INV Error	Over-charged Refrigerant	The flag corresponding to the item where there is an error delay lights up. E*
18	0100100000		Suction pressure Error	Configuration Detection Error	Comp. temperature Error	Water heat exchanger frost Error	Water temperature Error		Pump interlock Error		
19	1100100000		TH1 Error	TH2 Error				TH6 Error	HPS Error	THHS Error	
20	0010100000				TH9 Error	TH10 Error		THINV Error			

No	SW1	Item	Display								Remarks
	12345678910		LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8	
21	1010100000	Heat Source Unit Preliminary Error History	High Pressure Error 1, 2	Low Pressure Error 1	Discharge Temperature Error	Overcurrent Protection	Heat Sink Thermostat Operation	Overcurrent Break		Over-charged Refrigerant	Lights up if an error delay has occurred between the time the power was turned on and the present time. To turn the indicators off, switch the power OFF briefly. E*
22	0110100000		Suction pressure Error	Configuration Detection Error	Comp. temperature Error	Water heat exchanger frost Error	Water temperature Error		Pump interlock Error		
23	1110100000		TH1 Error	TH2 Error				TH6 Error	HPS Error	THHS Error	
24	0001100000				TH9 Error	TH10 Error		THINV Error			
25	1001100000	Error History 1	0 ~ 9999								The error and error delay code are displayed. If the address and error code are shown in reverse, or there is no error, "- - -" is displayed. E
26	0101100000	Inverter Error Detail	Inverter Error Detail (1 ~ 9)								If there is no error, "- - -" is displayed. E
27	1101100000	Error History 2	0 ~ 9999								E
28	0011100000	Inverter Error Detail	Inverter Error Detail (1 ~ 9)								
29	1011100000	Error History 3	0 ~ 9999								
30	0111100000	Inverter Error Detail	Inverter Error Detail (1 ~ 9)								
31	1111100000	Error History 4	0 ~ 9999								
32	0000010000	Inverter Error Detail	Inverter Error Detail (1 ~ 9)								
33	1000010000	Error History 5	0 ~ 9999								
34	0100010000	Inverter Error Detail	Inverter Error Detail (1 ~ 9)								
35	1100010000	Error History 6	0 ~ 9999								
36	0010010000	Inverter Error Detail	Inverter Error Detail (1 ~ 9)								
37	1010010000	Error History 7	0 ~ 9999								
38	0110010000	Inverter Error Detail	Inverter Error Detail (1 ~ 9)								
39	1110010000	Error History 8	0 ~ 9999								
40	0001010000	Inverter Error Detail	Inverter Error Detail (1 ~ 9)								
41	1001010000	Error History 9	0 ~ 9999								
42	0101010000	Inverter Error Detail	Inverter Error Detail (1 ~ 9)								
43	1101010000	Error History 10	0 ~ 9999								
44	0011010000	Inverter Error Detail	Inverter Error Detail (1 ~ 9)								
45	1011010000	Type of Inverter Error Preliminary (Details of the inverter error in No. 17)	0 ~ 9999								If there is no error, "- - -" is always overwritten. E*
46	0111010000	TH1 Data	-99.9 ~ 999.9								E*  [ No. 52 THHS data are monitored by the inverter microcomputer. ]
47	1111010000	TH2 Data	↑								
48	0000110000										
49	1000110000										
50	0100110000										
51	1100110000	TH6 Data	-99.9 ~ 999.9								

No	SW1	Item	Display								Remarks
			LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8	
52	0010110000	THHS Data	-99.9 ~ 999.9								E*
53	1010110000	HPS Data	↑								
54	0110110000	THINV Data	↑								
55	1110110000										
56	0001110000	TH9 Data	-99.9 ~ 999.9								
57	1001110000	TH10 Data	↑								
58	0101110000	LPS Data	↑								
59	1101110000	α OC	0 ~ 9.999								
60	0011110000	α OC*	↑								
61	1011110000	Accumulator Level α OC*	① and ② below are displayed alternately at every 5 seconds. ① Accumulator Level: 0~9 ("AL=" is also displayed), ② α OC*:0~9.999								
62	0111110000	H <sub>z</sub> AK Increase/ Decrease	ΔHz -	ΔHz 0	ΔHz +	-	-	ΔAK -	ΔAK 0	ΔAK +	
63	1111110000	Difference from Target T <sub>c</sub> (T <sub>cm</sub> -T <sub>c</sub> )	Low -3 deg. or lower	Low -3 ~ -2 deg.	Low -2 ~ -1 deg.	Stable Region		High 1~2 deg.	High 2~3 deg.	High 3 deg or higher	
64	0000001000	Difference from Target T <sub>e</sub> (T <sub>em</sub> -T <sub>e</sub> )	Low -3 deg. or lower	Low -3 ~ -2 deg.	Low -2 ~ -1 deg.	Stable Region		High 1~2 deg.	High 2~3 deg.	High 3 deg or higher	
65	1000001000	T <sub>c</sub>	-99.9 ~ 999.9								
66	0100001000	T <sub>e</sub>	↑								
67	1100001000	T <sub>cm</sub>	↑								
68	0010001000	T <sub>em</sub>	↑								
69	1010001000	Comp Frequency	0 ~ 9999								Control Frequency E*
70	0110001000	INV Output Frequency	↑								Frequency actually out- put from the inverter. E*
71	1110001000	AK	↑								E*
72	0001001000	SLEV	↑								
73	1001001000										
74	0101001000	LEV2	0 ~ 9999								
75	1101001000	DC Trunk Line Current	-99.9 ~ 999.9								(M) Monitored by the inverter's microcomputer.
76	0011001000	OC Address	0 ~ 9999								
77	1011001000	IC1 Address/ Capacity Code	0 ~ 99				0 ~ 99				E  On the left (LD1~LD4), the IC address, and on the right (LD5~LD8), the capacity code is displayed (displayed alternately every 1 minute).
78	0111001000	IC2 Address/ Capacity Code	↑				↑				
79	1111001000	IC3 Address/ Capacity Code	↑				↑				
80	0000101000	IC4 Address/ Capacity Code	↑				↑				
81	1000101000	IC5 Address/ Capacity Code	↑				↑				
82	0100101000	IC6 Address/ Capacity Code	↑				↑				

When there is an error stop with No.95-121, the data on error stops or the data immediately before the error postponement stop, which is stored in service memory, are displayed.

No	SW1	Item	Display								Remarks
	12345678910		LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8	
83	1100101000	IC7 Address/ Capacity Code	0 ~ 99				0 ~ 99				E  On the left (LD1~LD4), the IC address, and on the right (LD5~LD8), the capacity code is displayed (displayed alternately every 5 seconds).
84	0010101000	IC8 Address/ Capacity Code	↑				↑				
85	1010101000	IC9 Address/ Capacity Code	↑				↑				
86	0110101000	IC10 Address/ Capacity Code	0 ~ 9999								
87	1110101000	IC11 Address/ Capacity Code	↑								
88	0001101000	IC12 Address/ Capacity Code	↑								
89	1001101000	IC13 Address/ Capacity Code	↑								
90	0101101000	IC14 Address/ Capacity Code	↑								
91	1101101000	IC15 Address/ Capacity Code	↑								
92	0011101000	IC16 Address/ Capacity Code	↑								
93	1011101000	COMP Operation Time, Higher order 4 digits	↑								E*
94	0111101000	Lower order 4 digits	↑								
95	1111101000	Heat Source Unit Operation\Mode	Permissible Stop	Standby	Defrost	Cooling- only	Cooling- main	Heating- only	Heating- main	De- mand	E
96	0000011000	Heat Source Unit Control Mode	Cooling-only Refrigerant Recovery	Cooling-main Refrigerant Recovery	Heating-only Refrigerant Recovery	Heating-main Refrigerant Recovery	Cooling- only Oil Recovery	Cooling- main Oil Recovery	Heating- only Oil Recovery	Heating- main Oil Recovery	
97	1000011000	Relay Output Display 1 Lighting Display	COMP Operat- ing	Crankcase Heater ON	21S4	SV1	SV2	SV3	SV4		
98	0100011000	TH1 Data	-99.9 ~ 999.9								
99	1100011000	TH2 Data	↑								
100	0010011000										
101	1010011000										
102	0110011000	LEV2 Data	0 ~ 9999								
103	1110011000	TH6 Data	-99.9 ~ 999.9								
104	0001011000	HPS Data	↑								
105	1001011000	THHS Data	↑								
106	0101011000	THINV Data	↑								
107	1101011000										
108	0011011000	TH9 Data	-99.9 ~ 999.9								
109	1011011000	TH10 Data	↑								
110	0111011000	LPS Data	↑								
111	1111011000	α OC	0 ~ 9.999								

When there is an error stop with No.95-121, the data on error stops or the data immediately before the error postponement stop, which is stored in service memory, are displayed.

No	SW1	Item	Display								Remarks
	12345678910		LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8	
112	0000111000	α OC*	0 ~ 9.999								E
113	1000111000	Tc	-99.9 ~ 999.9								
114	0100111000	Te	↑								
115	1100111000	Configuration Correction Value	0 ~ 9999								
116	0010111000	INV Output Frequency	↑								
117	1010111000	AK	↑								
118	0110111000	SLEV	↑								
119	1110111000	Relay out put Display2 lighting Display	SV5	SV6	SV71	SV72	SV73		SSR		
120	0001111000	DC Trunk Line Current	-99.9 ~ 999.9								
121	1001111000	Heat Source Unit Operation Display	BC operating command	Warm-up mode	3-minute Restart protection mode	Compressor Operating	Preliminary Error	Error			
122	0101111000	BC All Indoor Unit Mode	Cooling-only ON	Cooling-only OFF	Heating-only ON	Heating-only OFF	Mixed ON	Mixed OFF	Fan	Stop	
123	1101111000										
124	0011111000										
125	1011111000										
126	0111111000										
127	1111111000	Elapsed Time for CS Circuit Closed Detection	0 ~ 9999								
128	0000000100	BC TH 11 Data	-99.9 ~ 999.9								M
129	1000000100	IBC TH 12 Data	↑								
130	0100000100										
131	1100000100										
132	0010000100	BC TH 15 Data	-99.9 ~ 999.9								
133	1010000100	BC TH 16 Data	↑								
134	0110000100	BC P1 Data	↑								
135	1110000100	BC P3 Data	↑								
136	0001000100	BC SC 11 Data	↑								
137	1001000100	BC SH 12 Data	↑								
138	0101000100										
139	1101000100	BC SC 16 Data	-99.9 ~ 999.9								

No	SW1	Item	Display								Remarks
	12345678910		LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8	
140	0011000100	BC LEV 1 Data	-99.9 ~ 999.9								M
141	1011000100	BC LEV 3 Data	↑								
142	0111000100										
143	1111000100										M
144	0000100100	IC1 liquid Pipe Temperature	-99.9 ~ 999.9								
145	1000100100	IC2 liquid Pipe Temperature	↑								
146	0100100100	IC3 liquid Pipe Temperature	↑								
147	1100100100	IC4 liquid Pipe Temperature	↑								
148	0010100100	IC5 liquid Pipe Temperature	↑								
149	1010100100	IC6 liquid Pipe Temperature	↑								
150	0110100100	IC7 liquid Pipe Temperature	↑								
151	1110100100	IC8 liquid Pipe Temperature	↑								
152	0001100100	IC9 liquid Pipe Temperature	↑								
153	1001100100	IC10 liquid Pipe Temperature	↑								
154	0101100100	IC11 liquid Pipe Temperature	↑								
155	1101100100	IC12 liquid Pipe Temperature	↑								
156	0011100100	IC13 liquid Pipe Temperature	↑								
157	1011100100	IC14 liquid Pipe Temperature	↑								
158	0111100100	IC15 liquid Pipe Temperature	↑								
159	1111100100	IC16 liquid Pipe Temperature	↑								
160	0000010100	IC1 Gas Pipe Temperature	↑								
161	1000010100	IC2 Gas Pipe Temperature	↑								
162	0100010100	IC3 Gas Pipe Temperature	↑								
163	1100010100	IC4 Gas Pipe Temperature	↑								
164	0010010100	IC5 Gas Pipe Temperature	↑								
165	1010010100	IC6 Gas Pipe Temperature	↑								

No	SW1	Item	Display								Remarks
	12345678910		LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8	
166	0110010100	IC7 Gas Pipe Temperature	-99.9 ~ 999.9								M
167	1110010100	IC8 Gas Pipe Temperature	↑								
168	0001010100	IC9 Gas Pipe Temperature	↑								
169	1001010100	IC10 Gas Pipe Temperature	↑								
170	0101010100	IC11 Gas Pipe Temperature	↑								
171	1101010100	IC12 Gas Pipe Temperature	↑								
172	0011010100	IC13 Gas Pipe Temperature	↑								
173	1011010100	IC14 Gas Pipe Temperature	↑								
174	0111010100	IC15 Gas Pipe Temperature	↑								
175	1111010100	IC16 Gas Pipe Temperature	↑								
176	0000110100	IC1 SH	↑								M
177	1000110100	IC2 SH	↑								
178	0100110100	IC3 SH	↑								
179	1100110100	IC4 SH	↑								
180	0010110100	IC5 SH	↑								
181	1010110100	IC6 SH	↑								
182	0110110100	IC7 SH	↑								
183	1110110100	IC8 SH	↑								
184	0001110100	IC9 SH	↑								
185	1001110100	IC10 SH	↑								
186	0101110100	IC11 SH	↑								
187	1101110100	IC12 SH	↑								
188	0011110100	IC13 SH	↑								
189	1011110100	IC14 SH	↑								
190	0111110100	IC15 SH	↑								
191	1111110100	IC16 SH	↑								
192	0000001100	IC1 SC	↑								M
193	1000001100	IC2 SC	↑								
194	0100001100	IC3 SC	↑								
195	1100001100	IC4 SC	↑								
196	0010001100	IC5 SC	↑								
197	1010001100	IC6 SC	↑								
198	0110001100	IC7 SC	↑								
199	1110001100	IC8 SC	↑								

No	SW1	Item	Display								Remarks
	12345678910		LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8	
200	0001001100	IC9 SC	-99.9 ~ 999.9								M
201	1001001100	IC10 SC	↑								
202	0101001100	IC11 SC	↑								
203	1101001100	IC12 SC	↑								
204	0011001100	IC13 SC	↑								
205	1011001100	IC14 SC	↑								
206	0111001100	IC15 SC	↑								
207	1111001100	IC16 SC	↑								
208	0000101100	IC1 LEV Opening pulse	0 ~ 9999								M
209	1000101100	IC2 LEV Opening pulse	↑								
210	0100101100	IC3 LEV Opening pulse	↑								
211	1100101100	IC4 LEV Opening pulse	↑								
212	0010101100	IC5 LEV Opening pulse	↑								
213	1010101100	IC6 LEV Opening pulse	↑								
214	0110101100	IC7 LEV Opening pulse	↑								
215	1110101100	IC8 LEV Opening pulse	↑								
216	0001101100	IC9 LEV Opening pulse	↑								
217	1001101100	IC10 LEV Opening pulse	↑								
218	0101101100	IC11 LEV Opening pulse	↑								
219	1101101100	IC12 LEV Opening pulse	↑								
220	0011101100	IC13 LEV Opening pulse	↑								
221	1011101100	IC14 LEV Opening pulse	↑								
222	0111101100	IC15 LEV Opening pulse	↑								
223	1111101100	IC16 LEV Opening pulse	↑								
224	0000011100	IC1 Operation Mode/ Branch Number	0: Stop 1: Fan 2: Cooling 3: Heating 4: Dry				0 ~ 99				M  On the left (LD1~LD4), the IC address, and on the right (LD5~LD8), the capacity code is displayed (displayed alternately every 5 seconds).
225	1000011100	IC2 Operation Mode/ Branch Number									
226	0100011100	IC3 Operation Mode/ Branch Number									
227	1100011100	IC4 Operation Mode/ Branch Number									
228	0010011100	IC5 Operation Mode/ Branch Number									

No	SW1	Item	Display								Remarks
			LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8	
229	10100111000	IC6 Operation Mode/ Branch Number									M  On the left (LD1~LD4), the IC address, and on the right (LD5~LD8), the capacity code is displayed (displayed alternately every 5 seconds).
230	0110011100	IC7 Operation Mode/ Branch Number									
231	11100111000	IC8 Operation Mode/ Branch Number									
232	0001011100	IC9 Operation Mode/ Branch Number									
233	1001011100	IC10 Operation Mode/ Branch Number	0: Stop 1: Fan 2: Cooling 3: Heating 4: Dry				0 ~ 99				
234	0101011100	IC11 Operation Mode/ Branch Number									
235	1101011100	IC12 Operation Mode/ Branch Number									
236	0011011100	IC13 Operation Mode/ Branch Number									
237	1011011100	IC14 Operation Mode/ Branch Number									
238	0111011100	IC15 Operation Mode/ Branch Number									
239	1111011100	IC16 Operation Mode/ Branch Number									
240	0000111100	IC1 Filter	0 ~ 9999								M
241	1000111100	IC2 Filter	↑								
242	0100111100	IC3 Filter	↑								
243	1100111100	IC4 Filter	↑								
244	0010111100	IC5 Filter	↑								
245	1010111100	IC6 Filter	↑								
246	0110111100	IC7 Filter	↑								
247	1110111100	IC8 Filter	↑								
248	0001111100	IC9 Filter	↑								
249	1001111100	IC10 Filter	↑								
250	0101111100	IC11 Filter	↑								
251	1101111100	IC12 Filter	↑								
252	0011111100	IC13 Filter	↑								
253	1011111100	IC14 Filter	↑								
254	0111111100	IC15 Filter	↑								
255	1111111100	IC16 Filter	↑								

**(3) PQHY**

E: E2 Contents stored in the E2PROM; M: Monitored by the IC through communications; E\*: Stored in service memory.

No	SW1	Item	Display								Remarks
	12345678910		LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8	
0	0000000000	Relay Output Display 1 (Lights up to display)	COMP Operating	Crankcase Heater ON	21S4	SV1	SV2	SV3	SV4	Lights for Normal Operation	LD8 is a relay output indicator which lights up at all times when the microcomputer's power is ON. When sending of a monitoring request to IC/BC is terminated, if there is no error, "----" is displayed. E*
		Check Display 1 OC Error	0 ~ 9999 Address and error code reversed								
1	1000000000	Relay Output Display 2	SV5	SV6	SV71	SV72	SV73		SSR		E*
2	0100000000	Check Display 2 (Including the IC)	0 ~ 9999 Address and error code reversed								If there is no error, "----" is displayed. E*
3	1100000000										
4	0010000000										
5	1010000000	Communication Demand capacity	0 ~ 9999								If no demand control, "----" displayed. (%) E*
6	0110000000	External Signal (Signal being input)	ON/OFF demand	Pump interlock Error							E*
7	1110000000	Heat Source Unit Operation Display		Warm-up mode	3 minutes restart protection mode	Compressor operating	Preliminary Error	Error			E*
8	0001000000	Indoor Unit Check	Unit No. 1	Unit No. 2	Unit No. 3	Unit No. 4	Unit No. 5	Unit No. 6	Unit No. 7	Unit No. 8	Lights up if an abnormal stop has occurred in the IC. The indicator for Unit No. 1 goes off when error reset is carried out from the smallest address. M
9	1001000000		Unit No. 9	Unit No. 10	Unit No. 11	Unit No. 12	Unit No. 13	Unit No. 14	Unit No. 15	Unit No. 16	
10	0101000000	Indoor Unit Operation Mode	Unit No. 1	Unit No. 2	Unit No. 3	Unit No. 4	Unit No. 5	Unit No. 6	Unit No. 7	Unit No. 8	Lights up during cooling. Blinks during heating. Goes off during stop and blower operation. M
11	1101000000		Unit No. 9	Unit No. 10	Unit No. 11	Unit No. 12	Unit No. 13	Unit No. 14	Unit No. 15	Unit No. 16	
12	0011000000	Indoor Unit Thermostat ON	Unit No. 1	Unit No. 2	Unit No. 3	Unit No. 4	Unit No. 5	Unit No. 6	Unit No. 7	Unit No. 8	Lights up when thermostat is ON. Goes off when thermostat is OFF. M
13	1011000000		Unit No. 9	Unit No. 10	Unit No. 11	Unit No. 12	Unit No. 13	Unit No. 14	Unit No. 15	Unit No. 16	
14	0111000000										E*
15	1111000000	Heat Source Unit Operation Mode	Stop	Standby		Cooling		Heating		Demand	
16	0000100000	Heat Source Unit Control Mode	Cooling Refrigerant Recovery		Heating Refrigerant Recovery		Cooling high fre. Oil Recovery	Cooling low fre. Oil Recovery	Heating high fre. Oil Recovery	Heating low fre. Oil Recovery	
17	1000100000	Preliminary Error in Heat Source Unit	High Pressure Error 1, 2	Low Pressure Error 1	Discharge Temperature Error	Overcurrent Protection	Heat Sink Thermostat Operating	Overcurrent Break	INV Error	Over-charged Refrigerant	The flag corresponding to the item where there is an error delay lights up. E*
18	0100100000		Suction pressure Error	Configuration Detection Error	Comp. temperature Error	Water heat exchanger frost Error	Water temperature Error		Pump interlock Error		
19	1100100000		TH1 Error	TH2 Error			TH5 Error	TH6 Error	HPS Error	THHS Error	
20	0010100000		TH7 Error	TH8 Error	TH9 Error	TH10 Error		THINV Error			

No	SW1	Item	Display								Remarks
	12345678910		LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8	
21	1010100000	Heat Source Unit Preliminary Error History	High Pressure Error 1, 2	Low Pressure Error 1	Discharge Temperature Error	Overcurrent Protection	Heat Sink Thermostat Operation	Overcurrent Break		Overcharged Refrigerant	Lights up if an error delay has occurred between the time the power was turned on and the present time. To turn the indicators off, switch the power OFF briefly. E*
22	0110100000		Suction pressure Error		Comp. temperature Error	Water heat exchanger frost Error	Water temperature Error		Pump interlock Error		
23	1110100000		TH1 Error	TH2 Error			TH5 Error	TH6 Error	HPS Error	THHS Error	
24	0001100000		TH7 Error	TH8 Error	TH9 Error	TH10 Error		THINV Error			
25	1001100000	Error History 1	0 ~ 9999								The error and error delay code are displayed. If the address and error code are shown in reverse, or there is no error, " - - - " is displayed. E
26	0101100000	Inverter Error Detail	Inverter Error Detail (1 ~ 9)								If there is no error, " - - - " is displayed. E
27	1101100000	Error History 2	0 ~ 9999								E
28	0011100000	Inverter Error Detail	Inverter Error Detail (1 ~ 9)								
29	1011100000	Error History 3	0 ~ 9999								
30	0111100000	Inverter Error Detail	Inverter Error Detail (1 ~ 9)								
31	1111100000	Error History 4	0 ~ 9999								
32	0000010000	Inverter Error Detail	Inverter Error Detail (1 ~ 9)								
33	1000010000	Error History 5	0 ~ 9999								
34	0100010000	Inverter Error Detail	Inverter Error Detail (1 ~ 9)								
35	1100010000	Error History 6	0 ~ 9999								
36	0010010000	Inverter Error Detail	Inverter Error Detail (1 ~ 9)								
37	1010010000	Error History 7	0 ~ 9999								
38	0110010000	Inverter Error Detail	Inverter Error Detail (1 ~ 9)								
39	1110010000	Error History 8	0 ~ 9999								
40	0001010000	Inverter Error Detail	Inverter Error Detail (1 ~ 9)								
41	1001010000	Error History 9	0 ~ 9999								
42	0101010000	Inverter Error Detail	Inverter Error Detail (1 ~ 9)								
43	1101010000	Error History 10	0 ~ 9999								
44	0011010000	Inverter Error Detail	Inverter Error Detail (1 ~ 9)								
45	1011010000	Type of Inverter Error Preliminary (Details of the inverter error in No. 17)	0 ~ 9999								If there is no error, " - - - " is always overwritten. E*
46	0111010000	TH1 Data	-99.9 ~ 999.9								E* [ No. 52 THHS data are monitored by the inverter microcomputer. ]
47	1111010000	TH2 Data	↑								
48	0000110000	TH7 Data	↑								
49	1000110000	TH8 Data	↑								
50	0100110000	TH5 Data	↑								
51	1100110000	TH6 Data	↑								

No	SW1	Item	Display								Remarks
	12345678910		LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8	
52	0010110000	THHS Data	-99.9 ~ 999.9								E*
53	1010110000	HPS Data	↑								
54	0110110000	THINV Data	↑								
55	1110110000										
56	0001110000	TH9 Data	-99.9 ~ 999.9								
57	1001110000	TH10 Data	↑								
58	0101110000	LPS Data	↑								
59	1101110000	α OC	0 ~ 9.999								
60	0011110000	α OC*	↑								
61	1011110000	Accumulator Level α OC*	① and ② below are displayed alternately at every 5 seconds. ① Accumulator Level: 0~9 ("AL=" is also displayed), ② α OC*:0~9.999								
62	0111110000	HzAK Increase/ Decrease	ΔHz -	ΔHz 0	ΔHz +	-	-	ΔAK -	ΔAK 0	ΔAK +	
63	1111110000	Difference from Target Tc (Tcm-Tc)	Low -3 deg. or lower	Low -3 ~ -2 deg.	Low -2 ~ -1 deg.	Stable Region		High 1~2 deg.	High 2~3 deg.	High 3 deg or higher	
64	0000001000	Difference from Target Te (Tem-Te)	Low -3 deg. or lower	Low -3 ~ -2 deg.	Low -2 ~ -1 deg.	Stable Region		High 1~2 deg.	High 2~3 deg.	High 3 deg or higher	
65	1000001000	Tc	-99.9 ~ 999.9								
66	0100001000	Te	↑								
67	1100001000	Tcm	↑								
68	0010001000	Tem	↑								
69	1010001000	Comp Frequency	0 ~ 9999								Control Frequency E*
70	0110001000	INV Output Frequency	↑								Frequency actually out- put from the inverter. E*
71	1110001000	AK	↑								E*
72	0001001000	SLEV	↑								
73	1001001000	LEV1	↑								
74	0101001000	LEV2	↑								
75	1101001000	DC Trunk Line Current	-99.9 ~ 999.9								(M) Monitored by the inverter's microcomputer.
76	0011001000	OC Address	0 ~ 9999								
77	1011001000	IC1 Address/ Capacity Code	0 ~ 99				0 ~ 99				E  On the left (LD1~LD4), the IC address, and on the right (LD5~LD8), the capacity code is displayed (displayed alternately every 1 minute).
78	0111001000	IC2 Address/ Capacity Code	↑				↑				
79	1111001000	IC3 Address/ Capacity Code	↑				↑				
80	0000101000	IC4 Address/ Capacity Code	↑				↑				
81	1000101000	IC5 Address/ Capacity Code	↑				↑				
82	0100101000	IC6 Address/ Capacity Code	↑				↑				

When there is an error stop with No.95-121, the data on error stops or the data immediately before the error postponement stop, which is stored in service memory, are displayed.

No	SW1 12345678910	Item	Display								Remarks
			LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8	
83	1100101000	IC7 Address/ Capacity Code	0 ~ 99				0 ~ 99				E  On the left (LD1~LD4), the IC address, and on the right (LD5~LD8), the capacity code is displayed (displayed alternately every 5 seconds).
84	0010101000	IC8 Address/ Capacity Code	↑				↑				
85	1010101000	IC9 Address/ Capacity Code	↑				↑				
86	0110101000	IC10 Address/ Capacity Code	0 ~ 9999								
87	1110101000	IC11 Address/ Capacity Code	↑								
88	0001101000	IC12 Address/ Capacity Code	↑								
89	1001101000	IC13 Address/ Capacity Code	↑								
90	0101101000	IC14 Address/ Capacity Code	↑								
91	1101101000	IC15 Address/ Capacity Code	↑								
92	0011101000	IC16 Address/ Capacity Code	↑								
93	1011101000	COMP Operation Time, Higher order 4 digits	↑								E*
94	0111101000	Lower order 4 digits	↑								
95	1111101000	Heat Source Unit Operation\Mode	Permissible Stop	Standby	Defrost	Cooling- only	Cooling- main	Heating- only	Heating- main	De- mand	E
96	0000011000	Heat Source Unit Control Mode	Cooling-only Refrigerant Recovery	Cooling-main Refrigerant Recovery	Heating-only Refrigerant Recovery	Heating-main Refrigerant Recovery	Cooling- only Oil Recovery	Cooling- main Oil Recovery	Heating- only Oil Recovery	Heating- main Oil Recovery	
97	1000011000	Relay Output Display 1 Lighting Display	COMP Operat- ing	Crankcase Heater ON	21S4	SV1	SV2	SV3	SV4		
98	0100011000	TH1 Data	-99.9 ~ 999.9								
99	1100011000	TH2 Data	↑								
100	0010011000	TH7 Data	↑								
101	1010011000	TH8 Data	↑								
102	0110011000	LEV2 Data	0 ~ 9999								
103	1110011000	TH6 Data	-99.9 ~ 999.9								
104	0001011000	HPS Data	↑								
105	1001011000	THHS Data	↑								
106	0101011000	THINV Data	↑								
107	1101011000	LEV1 Data	-99.9 ~ 999.9								
108	0011011000	TH9 Data	-99.9 ~ 999.9								
109	1011011000	TH10 Data	↑								
110	0111011000	LPS Data	↑								
111	1111011000	α OC	0 ~ 9.999								

When there is an error stop with No.95-121, the data on error stops or the data immediately before the error postponement stop, which is stored in service memory, are displayed.

No	SW1	Item	Display								Remarks
			LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8	
112	0000111000	$\alpha$ OC*	0 ~ 9.999								E
113	1000111000	Tc	-99.9 ~ 999.9								
114	0100111000	Te	↑								
115	1100111000	Configuration Correction Value	0 ~ 9999								
116	0010111000	INV Output Frequency	↑								
117	1010111000	AK	↑								
118	0110111000	SLEV	↑								
119	1110111000	Relay out put Display2 lighting Display	SV5	SV6	SV71	SV72	SV73		SSR		
120	0001111000	DC Trunk Line Current	-99.9 ~ 999.9								
121	1001111000	Heat Source Unit Operation Display		Warm-up mode	3-minute Re-start protection mode	Compressor Operating	Preliminary Error	Error			
122	0101111000	TH5 Data	-99.9 ~ 999.9								
123	1101111000										
124	0011111000										
125	1011111000										
126	0111111000										
127	1111111000	Elapsed Time for CS Circuit Closed Detection	0 ~ 9999								
128	0000000100										
129	1000000100										
130	0100000100										
131	1100000100										
132	0010000100										
133	1010000100										
134	0110000100										
135	1110000100										
136	0001000100										
137	1001000100										
138	0101000100										
139	1101000100										

No	SW1	Item	Display								Remarks
	12345678910		LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8	
140	0011000100										M
141	1011000100										
142	0111000100										
143	1111000100										
144	0000100100	IC1 liquid Pipe Temperature					-99.9 ~ 999.9				
145	1000100100	IC2 liquid Pipe Temperature					↑				
146	0100100100	IC3 liquid Pipe Temperature					↑				
147	1100100100	IC4 liquid Pipe Temperature					↑				
148	0010100100	IC5 liquid Pipe Temperature					↑				
149	1010100100	IC6 liquid Pipe Temperature					↑				
150	0110100100	IC7 liquid Pipe Temperature					↑				
151	1110100100	IC8 liquid Pipe Temperature					↑				
152	0001100100	IC9 liquid Pipe Temperature					↑				
153	1001100100	IC10 liquid Pipe Temperature					↑				
154	0101100100	IC11 liquid Pipe Temperature					↑				
155	1101100100	IC12 liquid Pipe Temperature					↑				
156	0011100100	IC13 liquid Pipe Temperature					↑				
157	1011100100	IC14 liquid Pipe Temperature					↑				
158	0111100100	IC15 liquid Pipe Temperature					↑				
159	1111100100	IC16 liquid Pipe Temperature					↑				
160	0000010100	IC1 Gas Pipe Temperature					↑				
161	1000010100	IC2 Gas Pipe Temperature					↑				
162	0100010100	IC3 Gas Pipe Temperature					↑				
163	1100010100	IC4 Gas Pipe Temperature					↑				
164	0010010100	IC5 Gas Pipe Temperature					↑				
165	1010010100	IC6 Gas Pipe Temperature					↑				

No	SW1	Item	Display								Remarks
	12345678910		LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8	
166	0110010100	IC7 Gas Pipe Temperature	-99.9 ~ 999.9								M
167	1110010100	IC8 Gas Pipe Temperature	↑								
168	0001010100	IC9 Gas Pipe Temperature	↑								
169	1001010100	IC10 Gas Pipe Temperature	↑								
170	0101010100	IC11 Gas Pipe Temperature	↑								
171	1101010100	IC12 Gas Pipe Temperature	↑								
172	0011010100	IC13 Gas Pipe Temperature	↑								
173	1011010100	IC14 Gas Pipe Temperature	↑								
174	0111010100	IC15 Gas Pipe Temperature	↑								
175	1111010100	IC16 Gas Pipe Temperature	↑								
176	0000110100	IC1 SH	↑								M
177	1000110100	IC2 SH	↑								
178	0100110100	IC3 SH	↑								
179	1100110100	IC4 SH	↑								
180	0010110100	IC5 SH	↑								
181	1010110100	IC6 SH	↑								
182	0110110100	IC7 SH	↑								
183	1110110100	IC8 SH	↑								
184	0001110100	IC9 SH	↑								
185	1001110100	IC10 SH	↑								
186	0101110100	IC11 SH	↑								
187	1101110100	IC12 SH	↑								
188	0011110100	IC13 SH	↑								
189	1011110100	IC14 SH	↑								
190	0111110100	IC15 SH	↑								
191	1111110100	IC16 SH	↑								
192	0000001100	IC1 SC	↑								M
193	1000001100	IC2 SC	↑								
194	0100001100	IC3 SC	↑								
195	1100001100	IC4 SC	↑								
196	0010001100	IC5 SC	↑								
197	1010001100	IC6 SC	↑								
198	0110001100	IC7 SC	↑								
199	1110001100	IC8 SC	↑								

No	SW1	Item	Display								Remarks
	12345678910		LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8	
200	0001001100	IC9 SC	-99.9 ~ 999.9								M
201	1001001100	IC10 SC	↑								
202	0101001100	IC11 SC	↑								
203	1101001100	IC12 SC	↑								
204	0011001100	IC13 SC	↑								
205	1011001100	IC14 SC	↑								
206	0111001100	IC15 SC	↑								
207	1111001100	IC16 SC	↑								
208	0000101100	IC1 LEV Opening pulse	0 ~ 9999								M
209	1000101100	IC2 LEV Opening pulse	↑								
210	0100101100	IC3 LEV Opening pulse	↑								
211	1100101100	IC4 LEV Opening pulse	↑								
212	0010101100	IC5 LEV Opening pulse	↑								
213	1010101100	IC6 LEV Opening pulse	↑								
214	0110101100	IC7 LEV Opening pulse	↑								
215	1110101100	IC8 LEV Opening pulse	↑								
216	0001101100	IC9 LEV Opening pulse	↑								
217	1001101100	IC10 LEV Opening pulse	↑								
218	0101101100	IC11 LEV Opening pulse	↑								
219	1101101100	IC12 LEV Opening pulse	↑								
220	0011101100	IC13 LEV Opening pulse	↑								
221	1011101100	IC14 LEV Opening pulse	↑								
222	0111101100	IC15 LEV Opening pulse	↑								
223	1111101100	IC16 LEV Opening pulse	↑								
224	0000011100	IC1 Operation Mode	0: Stop 1: Fan 2: Cooling 3: Heating 4: Dry								M
225	1000011100	IC2 Operation Mode									
226	0100011100	IC3 Operation Mode									
227	1100011100	IC4 Operation Mode									
228	0010011100	IC5 Operation Mode									

No	SW1	Item	Display								Remarks
	12345678910		LD1	LD2	LD3	LD4	LD5	LD6	LD7	LD8	
229	10100111000	IC6 Operation Mode	0: Stop 1: Fan 2: Cooling 3: Heating 4: Dry								M
230	0110011100	IC7 Operation Mode									
231	11100111000	IC8 Operation Mode									
232	0001011100	IC9 Operation Mode									
233	1001011100	IC10 Operation Mode									
234	0101011100	IC11 Operation Mode									
235	1101011100	IC12 Operation Mode									
236	0011011100	IC13 Operation Mode									
237	1011011100	IC14 Operation Mode									
238	0111011100	IC15 Operation Mode									
239	1111011100	IC16 Operation Mode									
240	0000111100	IC1 Filter									
241	1000111100	IC2 Filter	↑								
242	0100111100	IC3 Filter	↑								
243	1100111100	IC4 Filter	↑								
244	0010111100	IC5 Filter	↑								
245	1010111100	IC6 Filter	↑								
246	0110111100	IC7 Filter	↑								
247	1110111100	IC8 Filter	↑								
248	0001111100	IC9 Filter	↑								
249	1001111100	IC10 Filter	↑								
250	0101111100	IC11 Filter	↑								
251	1101111100	IC12 Filter	↑								
252	0011111100	IC13 Filter	↑								
253	1011111100	IC14 Filter	↑								
254	0111111100	IC15 Filter	↑								
255	1111111100	IC16 Filter	↑								

## 8 PREPARATION, REPAIRS AND REFRIGERANT REFILLING WHEN REPAIRING LEAKS


### [1] Location of Leaks: Extension Piping or Indoor Units (When Cooling)

- ① Attach a pressure gage to the low-pressure servicing check joint (CJ2).
- ② Stop all of the indoor units. When the compressor has stopped, shut off the liquid ball valve (BV2) for the heat source unit.
- ③ Stop all of the indoor units. When the compressor has stopped, turn the SW3-6 switch on the main board for the heat source unit to ON. (This will start the pump down operation causing all of the indoor units to enter the cooling mode.)
- ④ While in the pump down operation (SW3-6 ON), the low pressure (LPS) will reach below at least 0.20 MPa or the indoor unit and the compressor will automatically shut down within 15 minutes of starting the pump down operation. Shut down all of the indoor units and the compressor if the pressure gage for the lowpressure servicing joint (CJ2) reads 0.15 MPa or after running the pump down operation for 20 minutes.
- ⑤ Shut off the gas ball valve (BV1) for the heat source unit.
- ⑥ Remove any refrigerant remaining in the extension piping and the indoor units. Be sure to recover the refrigerant without releasing it into the air.
- ⑦ Repair the location of the leak.
- ⑧ After repairing the leak, create a vacuum to remove any air from inside of the extension piping or the indoor units.
- ⑨ Open the ball valves for the heat source unit (BV1 and BV2), turn the SW3-6 switch to OFF, adjust refrigerant levels and confirm proper circulation.

### [2] Location of Leaks: Heat Source Unit (Cooling Mode)

- ① Test run all indoor units in cooling mode.
  1. With SW3-1 on the MAIN board of the heat source unit set to ON and SW3-2 OFF → ON to test run all indoor units.
  2. Change the remote controller settings so that all indoor units run in cooling mode.
  3. Check that all indoor units are running in cooling mode.
- ② Check the Tc and SC16 data.  
(The LED monitor switch (SW1) on the MAIN board of the heat source unit can be used to display this data on the LED.)
  1. If SC16 is 10 degrees or more ..... Continue to step ③.
  2. If SC16 is less than 10 degrees ..... After stopping the compressor, remove any refrigerant, repair the leak point, then extract the air to create a vacuum and refill with new refrigerant (same procedure as 4. Location of leaks: Heat source unit (when heating)).

[Tc LED monitor switch]



[SC16 LED monitor switch]



- ③ Stop all indoor units and the compressor.
  1. With SW3-1 on the MAIN board of the heat source unit set to ON and SW3-2 ON → OFF to stop all indoor units and the compressor.
  2. Check that all indoor units have been stopped.
- ④ Close both ball valves (BV1 and BV2).
- ⑤ Remove a small amount of refrigerant from the liquid ball valve (BV2) check joint. If this operation is not performed, remaining refrigerant may cause the unit to malfunction.
- ⑥ Remove any refrigerant remaining in the heat source unit. Reclaim the refrigerant; do not discharge it into the air.
- ⑦ Repair the leak point.
- ⑧ After the leak point is repaired, change the dryer and extract all of the air from the heat source unit to create a vacuum.
- ⑨ Open both ball valves (BV1 and BV2) on the heat source unit, then adjust the refrigerant amount and verify that the refrigerant is circulating properly.



### **[3] Location of Leaks: Extension Piping or Indoor Units (Heating Mode)**

- ① Test run all indoor units in heating mode.
  1. With SW3-1 on the MAIN board of the heat source unit set to ON and SW3-2 OFF → ON to test run all indoor units.
  2. Change the remote controller settings so that all indoor units run in heating mode.
  3. Check that all indoor units are running in heating mode.
- ② Stop all indoor units and the compressor.
  1. With SW3-1 on the MAIN board of the heat source unit set to ON and SW3-2 ON → OFF to stop all indoor units and the compressor.
  2. Check that all indoor units have been stopped.
- ③ Close both ball valves (BV1 and BV2).
- ④ Remove any refrigerant remaining in the extension piping or the indoor units.  
Reclaim the refrigerant; do not discharge it into the air.
- ⑤ Repair the leaks.
- ⑥ After the leaks are repaired, extract all air from the extension piping and the indoor units to create a vacuum.  
Then, open both ball valves (BV1 and BV2), then adjust the refrigerant amount and verify that the refrigerant is circulating properly.

### **[4] Location of Leaks: Heat Source Unit (When Heating)**

- ① Remove any refrigerant from the entire system (heat source unit, extension piping and indoor units).  
Reclaim the refrigerant; do not discharge it into the air.
- ② Repair the leaks.
- ③ After the leaks are repaired, replace the dryer with a new one and extract all of the air from the entire system to create a vacuum. Then, refill with refrigerant until it reaches the calculated specification (heat source unit + extension piping + indoor units). Refer to "Chapter [6]" for more details.

## 9 CHECK THE COMPOSITION OF THE REFRIGERANT

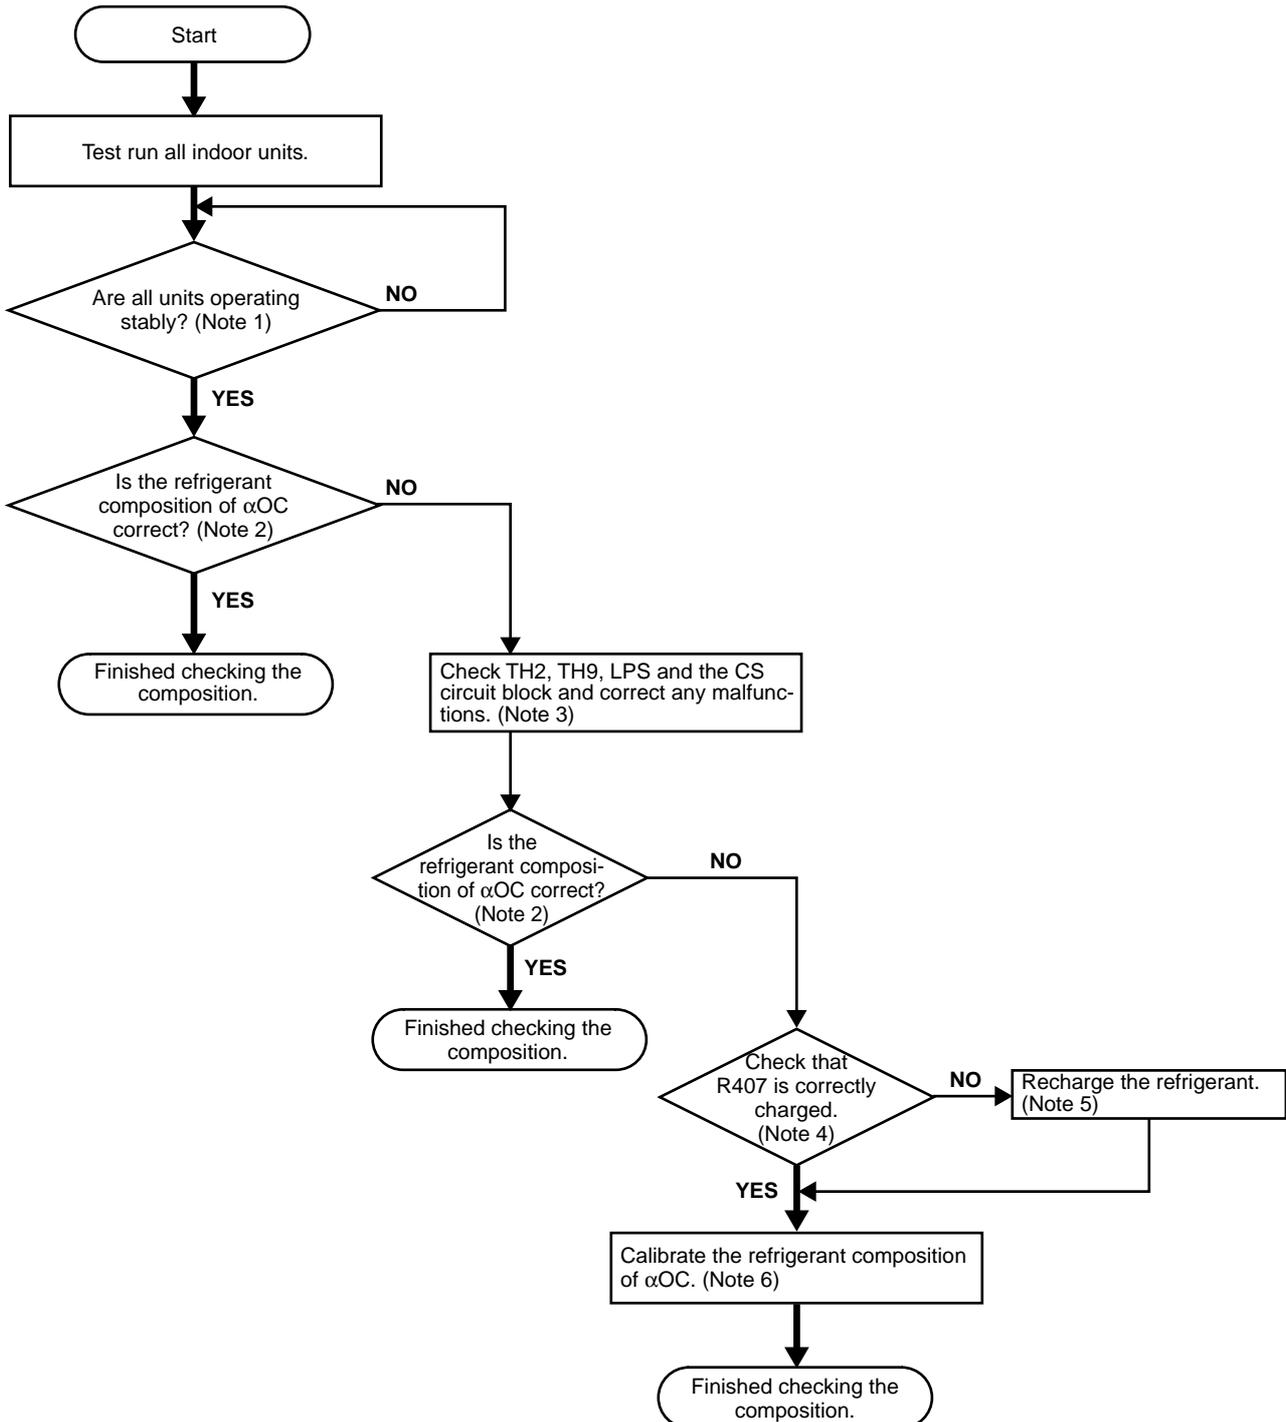

Note 1 Wait until the units stabilize as described in the refrigerant amount adjustment procedure in “Chapter 6”.

Note 2 After the units are operating stably, check that the refrigerant composition of  $\alpha$ OC is within the following ranges, indicating that the composition check is finished.


If the accumulator liquid level AL = 0 when cooling:  $\alpha$ OC = 0.20 ~ 0.26

If the accumulator liquid level AL = 1 when cooling:  $\alpha$ OC = 0.23 ~ 0.34

When heating:  $\alpha$ OC = 0.25 ~ 0.34

(The self-diagnosis switch (SW1) on the main board of the heat source unit can be used to display this data on the LED.)


[ $\alpha$ OC self-diagnosis switch]



Note 3 TH2 and TH9: Check and make any corrections using the same method as that for a faulty temperature sensor, (refer to TROUBLESHOOTING).

LPS: Check and make any corrections using the same method as that for a faulty low pressure sensor, (refer to TROUBLESHOOTING).

CS circuit block: Set the self-diagnosis switch on the outdoor MAIN board as shown below.



- Check and make any corrections so that “0” is displayed.
- If any number other than 0 is displayed and TH2, TH9 or LPS are malfunctioning, correct them, then set SW2-9 on the MAIN board of the heat source unit from OFF to ON.
- If any number other than 0 is displayed and TH2, TH9 or LPS are not malfunctioning, replace the CS circuit if refrigerant is not flowing through it (while operating) and set SW2-9 on the MAIN board of the heat source unit from OFF to ON.

Note 4 If it can be verified that R407C was correctly charged in the liquid phase, continue to Yes. If there is a possibility that it was not charged correctly, such as with a gas charger, continue to No.

Note 5 After reclaiming the system’s refrigerant, extract the air to create a vacuum, then refill with new refrigerant. Be sure to charge in the liquid phase. In addition, be sure to change the dryer.

Note 6 After the units are operating stably, check that the refrigerant composition of  $\alpha$ OC is within the following ranges, indicating that the circulation check is finished.

If the accumulator liquid level AL = 0 when cooling:  $\alpha$ OC = 0.21 ~ 0.25

If the accumulator liquid level AL = 1 when cooling:  $\alpha$ OC = 0.24 ~ 0.28

When heating:  $\alpha$ OC = 0.27 ~ 0.31

If the refrigerant composition of  $\alpha$ OC is not within the ranges specified above, a large error has been detected. Refer to section 1-3 in Chapter 6, then after setting SW4-1 on the MAIN board of the heat source unit to ON, calibrate the refrigerant circulation constant  $\alpha$ OC with SW4-2 until it is within the ranges specified above.

**After calibrating, keep the SW4-1 ON and finish the circulation check.**

<Example calibration of the refrigerant circulation constant  $\alpha$ OC>

Conditions: If the accumulator liquid level AL = 0 and  $\alpha$ OC = 0.29 when cooling,  $\alpha$ OC must be adjusted so that it is between 0.21 and 0.25.

By switching SW4-2 between ON and OFF, adjustments can be made in the following order:

0 → 3% → 6% → 9% → 12% → -6% → -3% → 0

For this example, by making an adjustment of -0.06 (-6%),  $\alpha$ OC can be adjusted to 0.23.

1. If SW4-2 is already set to OFF, change the switch 5 times.  
OFF (0.29) → ON (0.32) → OFF (0.35) → ON (0.38) → OFF (0.41) → ON (0.23)
2. If SW4-2 is already set to ON, change the switch 5 times.  
ON (0.29) → OFF (0.32) → ON (0.35) → OFF (0.38) → ON (0.41) → OFF (0.23)

## 10 DIFFERENCES BETWEEN THE PREVIOUS REFRIGERANT AND THE NEW REFRIGERANT

### 1] Chemical Characteristics

The new refrigerant (R407C) is a chemically stable non-combustible refrigerant with few of the same characteristics as R22.

However, the vapor specific gravity is heavier than the specific gravity of air, so if the refrigerant leaks out in a closed room, it remains on the bottom near the floor and there is danger of accidents occurring due to lack of oxygen, so always handle it in an atmosphere with good ventilation where the refrigerant won't accumulate.

	New refrigerant (HFC based)	Previous refrigerant (HCFC Based)
	R407C	R22
	R32/R125/R134a	R22
Composition (wt%)	(23/25/52)	(100)
Refrigerant handling	Nonazetropic refrigerant	Single refrigerant
Chlorine	Not included	Included
Safety class	A1/A1	A1
Molecular weight	86.2	86.5
Boiling point (°C)	-43.6	-40.8
Vapor pressure (25°C, MPa) (Gauge)	0.9177	0.94
Saturated vapor density (25°C, kg/m <sup>3</sup> )	42.5	44.4
Combustibility	Noncombustible	Noncombustible
Ozone depletion coefficient (ODP) *1	0	0.055
Global warming coefficient (GWP) *2	1530	1700
Refrigerant charging method	Fluid charging	Gas charging
Additional charge when leaking	Impossible	Possible



\*1: If CFC11 is used as the reference. \*2: If CO<sub>2</sub> is used as the reference.

### 2] Chances in Composition

R407C is a nonazetropic refrigerant composed of 3 components, R32, R125 and R134a. Therefore, if refrigerant leaks from the gas phase unit, that containing large amounts of the R32 and R125 components will leak out, so there will be more R134a remaining in the machine, and there is a possibility that breakdown of the machine due to insufficient capacity (condensation on the heat exchanger, etc.) could result. Also, if the equipment is charged with refrigerant directly from a bombe, if it is charged in the gas phase, the composition will change greatly, so be sure to charge the equipment from the bombe's liquid phase side.

#### ① Nonazetropic refrigerant

In both gas phases, when charging refrigerant from a bombe with refrigerants which have different compositions, the composition will change if refrigerant leaks from the unit. As an example, the change in the composition of the refrigerant is shown in the case where R407C is charged as a gas from a bombe, and in the case where it is charged as a liquid. Compared to when the refrigerant is charged as a liquid, the change in composition is great and the influence on unit performance and operating state is great, so it is necessary to charge the refrigerant in the liquid phase.

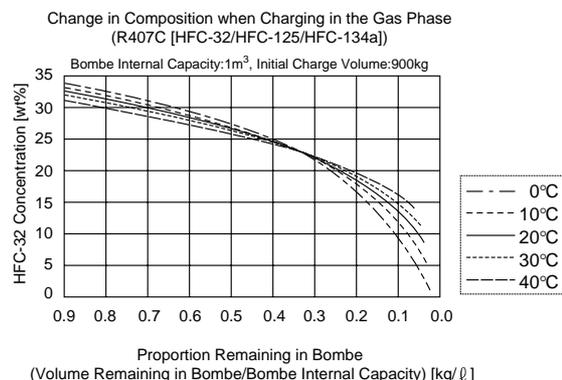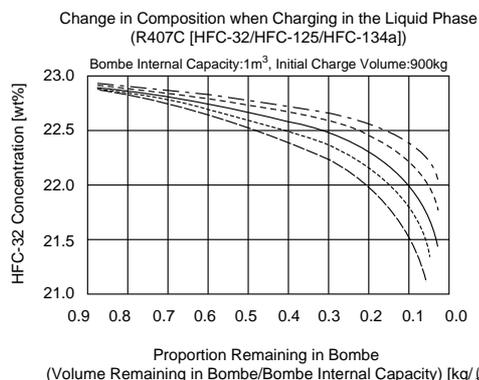

### [3] Pressure Characteristics

Compared to the previous refrigerant (R22), the pressure of the new refrigerant (R407C) is higher.

Temperature (°C) \ Pressure (Gauge)	R407C	R22
	MPa (Gauge)/kgf/cm <sup>2</sup> (Gauge)	MPa (Gauge)/kgf/cm <sup>2</sup> (Gauge)
-20	0.18/1.8	0.14/1.4
0	0.47/4.8	0.40/4.1
20	0.94/9.6	0.81/8.3
40	1.44/14.7	1.44/14.7
60	2.44/24.9	2.33/23.8
65	2.75/28.0	2.60/26.5

Data source: Japan refrigeration and air conditioning association thermal characteristics chart NIST REFPROP V5.10. Asahi Glass, other

**Note:**

1. Mixing of refrigerants

R407C is a refrigerant which is a mixture of HFC32, HFC125 and HFC134a. R407C has different characteristics from R22, so absolutely do not mix them.

Also, absolutely do not add R410a to this refrigerant.

2. Moisture control

If a lot of moisture is mixed into the refrigeration system, it will cause hydrolysis of the organic materials used in the refrigerator oil or compressor motor, etc., and this could cause capillary clogging or failure of the insulation on the compressor or other components.

3. Impurities control

If a lot of dirt, air or flux are mixed into the refrigerant, it could accelerate decomposition or aging, etc. of the refrigerator oil, or could cause clogging of capillaries or failure of the compressor.

## 11 REFRIGERATOR OIL

### 1] Refrigerator Oil with HFC Based Refrigerants

A different refrigerator oil is used with the new refrigerant than with R22.

Note:

Since the type of refrigerator oil used with R22 is different from that used with R407C, the different types of refrigerant oil should not be mixed and used together.

### 2] Influence of Contaminants

With the refrigerator oil used with the new refrigerant, it is necessary to exercise greater caution concerning the mixing of contaminants than with the mineral oil used with the previous refrigerant. Therefore, it is necessary to get a sufficient grasp of the basic items in the following table to understand the harm that is caused to the refrigeration cycle from deficiencies involving the oil charging process, and to prevent contaminants from being mixed in.

Influence of oil with contaminants mixed in on the refrigeration cycle

Cause		Symptom	Influence on the refrigeration cycle	
Mixing with moisture		Freezing of expansion valves and capillaries	Clogging of expansion valves and capillaries	Cooling deficiencies
		Hydrolysis Sludge formation Generation of acids Oxidation	Compressor overheating Poor motor insulation Copper plating on sliding parts	Burnout of the motor Locking
Mixing with air		Oxidation	Aging of oil	Sticking of sliding parts
Mixing of foreign matter	Dirt, contaminants	Adhesion to the expansion valves and to capillaries	Expansion valve, capillaries Clogging of the drier	Cooling deficiencies Overheating of the compressor
		Mixing of foreign matter in the compressor	Sticking of sliding parts	
	Mineral oil, etc.	Sludge formation, adhesion	Clogging of expansion valve, capillaries	Cooling deficiencies Overheating of the compressor
		Aging of oil	Sticking of sliding parts	

Contaminants is a general term for moisture, air, process oil, dirt, other refrigerants and other refrigerator oils, etc.