

July 2006

No. OC309

REVISED EDITION-A

TECHNICAL & SERVICE MANUAL

Series PKFY Wall Mounted **R410A** / **R407C** / **R22**

 Indoor unit
[Model names]

PKFY-P20VAM-E

PKFY-P25VAM-E

[Service Ref.]

PKFY-P20VAM-E
PKFY-P25VAM-E


Revision:

- RoHS PARTS LIST is added.
- Some descriptions have been modified.

- Please void OC309.

Note:

- This manual describes only service data of the indoor units.
- RoHS compliant products have <G> mark on the spec name plate.
- For servicing of RoHS compliant products, refer to the RoHS Parts List.

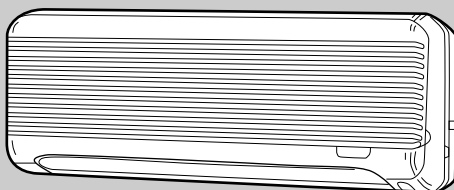

INDOOR UNIT

CONTENTS

| | |
|-----------------------------------|----|
| 1. SAFETY PRECAUTION | 2 |
| 2. PART NAMES AND FUNCTIONS | 6 |
| 3. SPECIFICATION | 8 |
| 4. OUTLINES AND DIMENSIONS..... | 10 |
| 5. WIRING DIAGRAM | 11 |
| 6. REFRIGERANT SYSTEM DIAGRAM... | 12 |
| 7. TROUBLESHOOTING | 12 |
| 8. DISASSEMBLY PROCEDURE..... | 19 |
| 9. PARTS LIST..... | 22 |
| 10. RoHS PARTS LIST..... | 25 |

1

SAFETY PRECAUTION

CAUTIONS RELATED TO NEW REFRIGERANT

Caution for units utilizing refrigerant R407C

Do not use the existing refrigerant piping.

The old refrigerant and lubricant in the existing piping contains a large amount of chlorine which may cause the lubricant deterioration of the new unit.

Use liquid refrigerant to seal the system.

If gas refrigerant is used to seal the system, the composition of the refrigerant in the cylinder will change and performance may drop.

Use "low residual oil piping"

If there is a large amount of residual oil (hydraulic oil, etc.) inside the piping and joints, deterioration of the lubricant will result.

Do not use a refrigerant other than R407C.

If another refrigerant (R22, etc.) is used, the chlorine in the refrigerant may cause the lubricant deterioration.

Store the piping to be used during installation indoors with keep both ends sealed until just before brazing. (Store elbows and other joints in a plastic bag.)

If dust, dirt, or water enters the refrigerant cycle, deterioration of the oil and compressor trouble may result.

Use a vacuum pump with a reverse flow check valve.

The vacuum pump oil may flow back into the refrigerant cycle and cause the lubricant deterioration.

Use ESTR, ETHER or HAB as the lubricant to coat flares and flange connection parts.

If large amount of mineral oil enter, that can cause deterioration of refrigerant oil etc.

Ventilate the room if refrigerant leaks during operation. If refrigerant comes into contact with a flame, poisonous gases will be released.


[1] Cautions for service

- After recovering the all refrigerant in the unit, proceed to working.
- Do not release refrigerant in the air.
- After completing the repair service, recharge the cycle with the specified amount of liquid refrigerant.

[2] Refrigerant recharging

(1) Refrigerant recharging process

- ① Direct charging from the cylinder.
 - R407C cylinder are available on the market has a syphon pipe.
 - Leave the syphon pipe cylinder standing and recharge it.
(By liquid refrigerant)

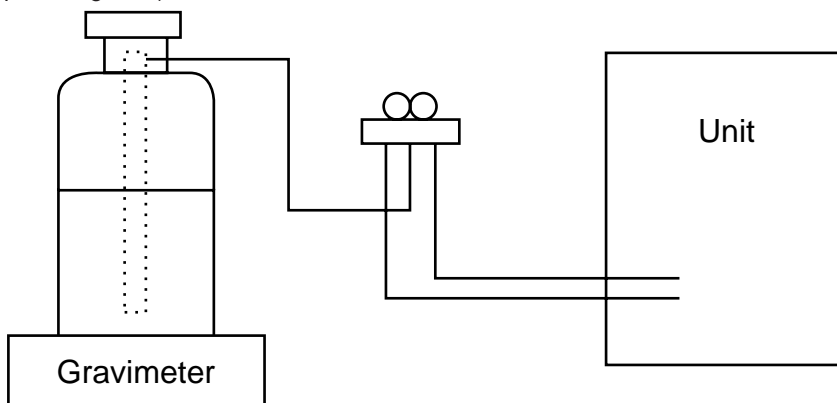

(2) Recharge in refrigerant leakage case

- After recovering the all refrigerant in the unit, proceed to working.
- Do not release the refrigerant in the air.
- After completing the repair service, recharge the cycle with the specified amount of liquid refrigerant.

[3] Service tools

Use the below service tools as exclusive tools for R407C refrigerant.

| No. | Tool name | Specifications |
|-----|---------------------------------|---|
| ① | Gauge manifold | ·Only for R407C. |
| | | ·Use the existing fitting SPECIFICATIONS. (UNF7/16) |
| | | ·Use high-tension side pressure of 3.43MPa-G or over. |
| ② | Charge hose | ·Only for R407C. |
| | | ·Use pressure performance of 5.10MPa-G or over. |
| ③ | Electronic scale | |
| ④ | Gas leak detector | ·Use the detector for R134a or R407C. |
| ⑤ | Adapter for reverse flow check. | ·Attach on vacuum pump. |
| ⑥ | Refrigerant charge base. | |
| ⑦ | Refrigerant cylinder. | ·For R407C ·Top of cylinder (Brown) |
| | | ·Cylinder with syphon |
| ⑧ | Refrigerant recovery equipment. | |

Cautions for units utilizing refrigerant R410A

Do not use the existing refrigerant piping.

The old refrigerant and lubricant in the existing piping contains a large amount of chlorine which may cause the lubricant deterioration of the new unit.

Use "low residual oil piping"

If there is a large amount of residual oil (hydraulic oil, etc.) inside the piping and joints, deterioration of the lubricant will result.

Store the piping to be used during installation indoors and keep both ends of the piping sealed until just before brazing. (Leave elbow joints, etc. in their packaging.)

If dirt, dust or moisture enter into refrigerant cycle, that can cause deterioration of refrigerant oil or malfunction of compressor.

Use ester oil, ether oil or alkylbenzene oil (small amount) as the refrigerant oil applied to flares and flange connections.

If large amount of mineral oil enter, that can cause deterioration of refrigerant oil etc.

Charge refrigerant from liquid phase of gas cylinder.

If the refrigerant is charged from gas phase, composition change may occur in refrigerant and the efficiency will be lowered.

Do not use refrigerant other than R410A.

If other refrigerant (R22 etc.) is used, chlorine in refrigerant can cause deterioration of refrigerant oil etc.

Use a vacuum pump with a reverse flow check valve.

Vacuum pump oil may flow back into refrigerant cycle and that can cause deterioration of refrigerant oil etc.

Use the following tools specifically designed for use with R410A refrigerant.

The following tools are necessary to use R410A refrigerant.

| Tools for R410A | |
|-------------------|---------------------------------------|
| Gauge manifold | Flare tool |
| Charge hose | Size adjustment gauge |
| Gas leak detector | Vacuum pump adaptor |
| Torque wrench | Electronic refrigerant charging scale |

Keep the tools with care.

If dirt, dust or moisture enter into refrigerant cycle, that can cause deterioration of refrigerant oil or malfunction of compressor.

Do not use a charging cylinder.

If a charging cylinder is used, the composition of refrigerant will change and the efficiency will be lowered.

Ventilate the room if refrigerant leaks during operation. If refrigerant comes into contact with a flame, poisonous gases will be released.


[1] Cautions for service

- (1) Perform service after collecting the refrigerant left in unit completely.
- (2) Do not release refrigerant in the air.
- (3) After completing service, charge the cycle with specified amount of refrigerant.
- (4) When performing service, install a filter drier simultaneously.
Be sure to use a filter drier for new refrigerant.

[2] Additional refrigerant charge

When charging directly from cylinder

- Check that cylinder for R410A on the market is syphon type.
- Charging should be performed with the cylinder of syphon stood vertically. (Refrigerant is charged from liquid phase.)

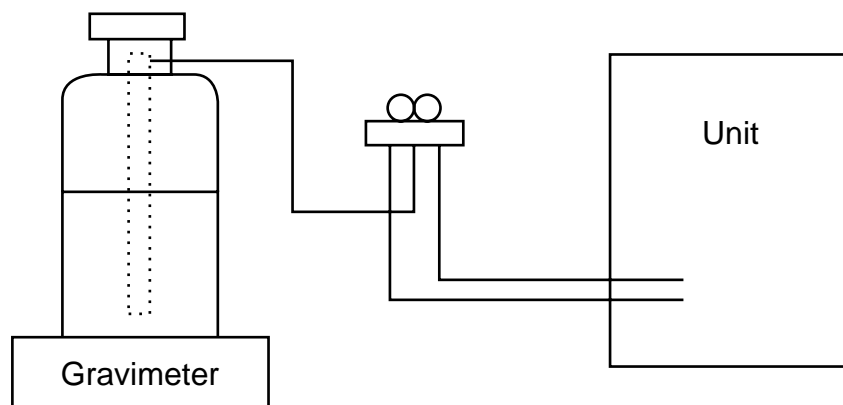

[3] Service tools


Use the below service tools as exclusive tools for R410A refrigerant.

| No. | | Specifications |
|-----|--------------------------------|--|
| ① | Gauge manifold | ·Only for R410A |
| | | ·Use the existing fitting specifications. (UNF1/2) |
| | | ·Use high-tension side pressure of 5.3MPa-G or over. |
| ② | Charge hose | ·Only for R410A |
| | | ·Use pressure performance of 5.09MPa-G or over. |
| ③ | Electronic scale | — |
| ④ | Gas leak detector | ·Use the detector for R134a, R407C or R410A. |
| ⑤ | Adaptor for reverse flow check | ·Attach on vacuum pump. |
| ⑥ | Refrigerant charge base | — |
| ⑦ | Refrigerant cylinder | ·Only for R410A |
| | | Top of cylinder (Pink) Cylinder with syphon |
| ⑧ | Refrigerant recovery equipment | — |

2

PART NAMES AND FUNCTIONS


● Indoor Unit PKFY-P20VAM-E PKFY-P25VAM-E

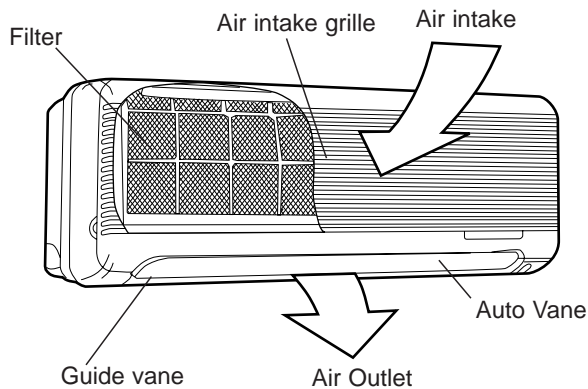


● Wired remote controller

On the controls are set, the same operation mode can be repeated by simply pressing the ON/OFF button.

● Operation buttons

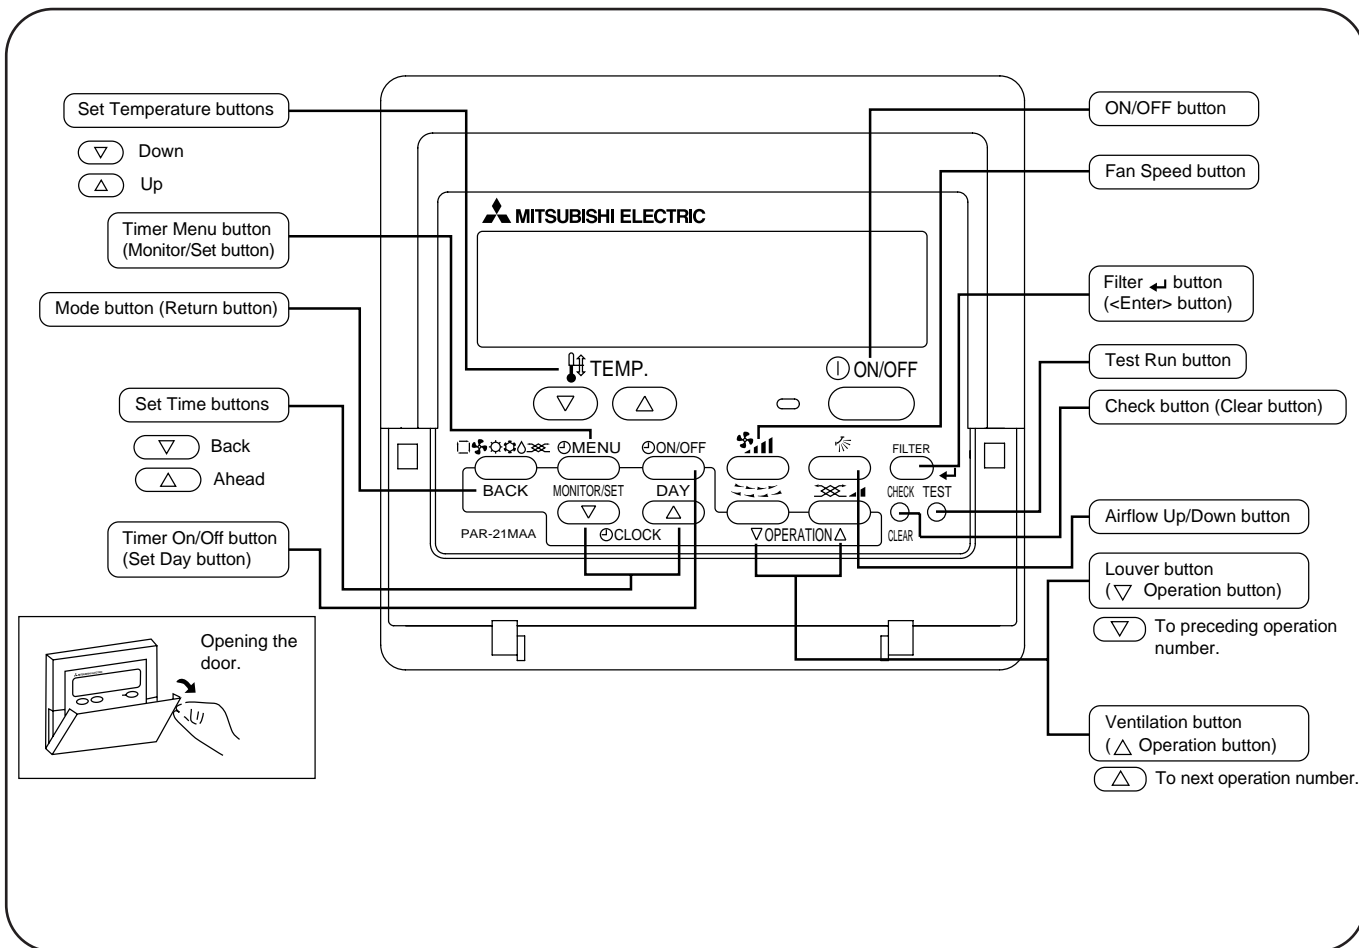

● Display

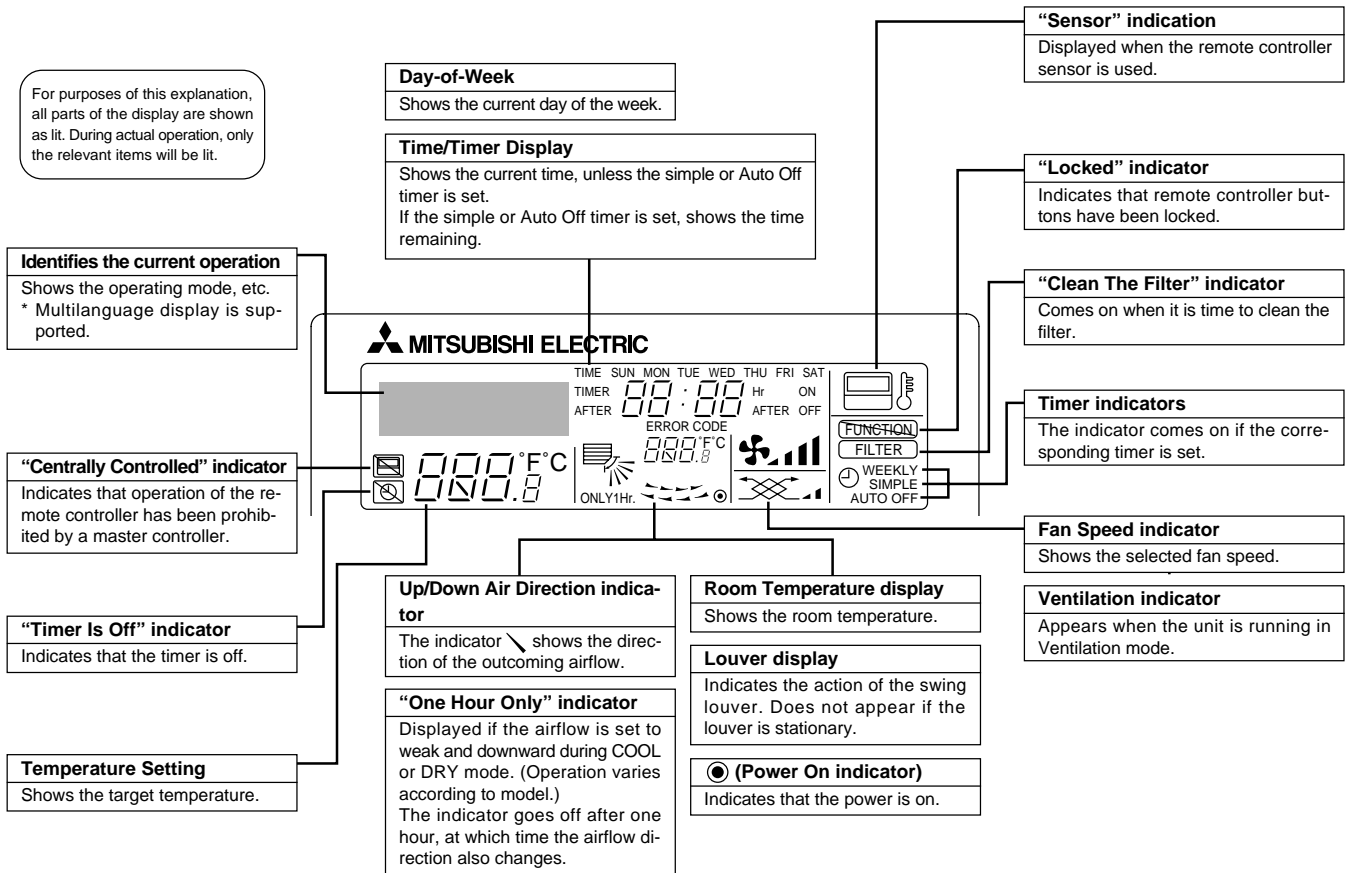

Caution

- Only the Power on indicator lights when the unit is stopped and power supplied to the unit.
- If you press a button for a feature that is not installed at the indoor unit, the remote controller will display the “Not Available” message.
If you are using the remote controller to drive multiple indoor units, this message will appear only if the feature is not present at the parent unit.
- When power is turned ON for the first time, it is normal that “PLEASE WAIT” is displayed on the room temperature indication (For max. 2minutes). Please wait until this “PLEASE WAIT” indication disappear then start the operation.

3-1. SPECIFICATION

| Item | | Unit | PKFY-P20VAM-E | PKFY-P25VAM-E |
|---------------------------|--------------------------|---------------------|--|---------------|
| Power | | ϕ, V, Hz | Single phase, 220-230-240V, 50Hz Single phase, 220V, 60Hz | |
| Cooling capacity | | kW | 2.2 | 2.8 |
| Heating capacity | | kW | 2.5 | 3.2 |
| Electric characteristic | Power Supply | Cooling | kW | 0.04 |
| | | Heating | kW | 0.04 |
| | Starting Current | Cooling | A | 0.20 |
| | | Heating | A | 0.20 |
| Exterior <munsell symbol> | | — | Plastic munsell : <2.60Y 8.66/0.69> | |
| Out dimensions | Height | mm | 295 | |
| | Width | mm | 815 | |
| | Depth | mm | 158 | |
| Heat exchanger | | — | Cross fin | |
| Fan | Fan X No. | — | Lineflow fan X 1 | |
| | Air flow ※ 2 | m ³ /min | 5.9-5.6-5.2-4.9 | |
| | External static pressure | Pa | 0 | |
| | Fan motor output | kW | 0.017 | |
| Insulator | | — | Polyethylene sheet | |
| Air filter | | — | PP honey comb | |
| Pipe dimensions | Gas side | ϕ mm(in.) | 12.7 (1/2") | |
| | Liquid side | ϕ mm(in.) | 6.35 (1/4") | |
| Unit drain pipe size | | ϕ mm | PVC pipe VP-16 connectable (I.D. 16) | |
| Noise level ※ 2 | | dB | 36-35-33-32 | |
| Product weight | | kg | 8.5 | |

Note 1. Rating conditions (JIS B 8615-1)

Cooling : Indoor D.B. 27°C W.B. 19°C

Outdoor D.B. 35°C

Heating : Indoor D.B. 20°C

Outdoor D.B. 7°C W.B. 6°C


※ 2. Air flow and the noise level are indicated as High – Middium1 – Middium2 – Low.

3-2. ELECTRICAL PARTS SPECIFICATIONS

| Model Parts name | Symbol | PKFY-P20VAM-E | PKFY-P25VAM-E |
|-----------------------------------|--------|---|---------------|
| Room temperature thermistor | TH21 | Resistance 0°C/15kΩ, 10°C/9.6kΩ, 20°C/6.3kΩ, 25°C/5.4kΩ, 30°C/4.3kΩ, 40°C/3.0kΩ | |
| Liquid pipe thermistor | TH22 | Resistance 0°C/15kΩ, 10°C/9.6kΩ, 20°C/6.3kΩ, 25°C/5.4kΩ, 30°C/4.3kΩ, 40°C/3.0kΩ | |
| Gas pipe thermistor | TH23 | Resistance 0°C/15kΩ, 10°C/9.6kΩ, 20°C/6.3kΩ, 25°C/5.4kΩ, 30°C/4.3kΩ, 40°C/3.0kΩ | |
| Fuse (Indoor controller board) | FUSE | 250V 6.3A | |
| Fan motor (with thermal fuse) | MF | 4-Pole Output 17W / PS4V17 | |
| Fan motor capacitor | C1 | 1.5μF X 440V | |
| Vane motor (with limit switch) | MV | MSFBC20A76 DC12V | |
| Linear expansion valve | LEV | DC12V Stepping motor drive Port φ3.2 (0~2000pulse) | |
| Power supply terminal block | TB2 | (L, N, ⊕) 250V 20A | |
| Transmission terminal block | TB5 | (M1, M2) 250V 10A | |

PKFY-P20VAM-E
PKFY-P25VAM-E


Unit : mm

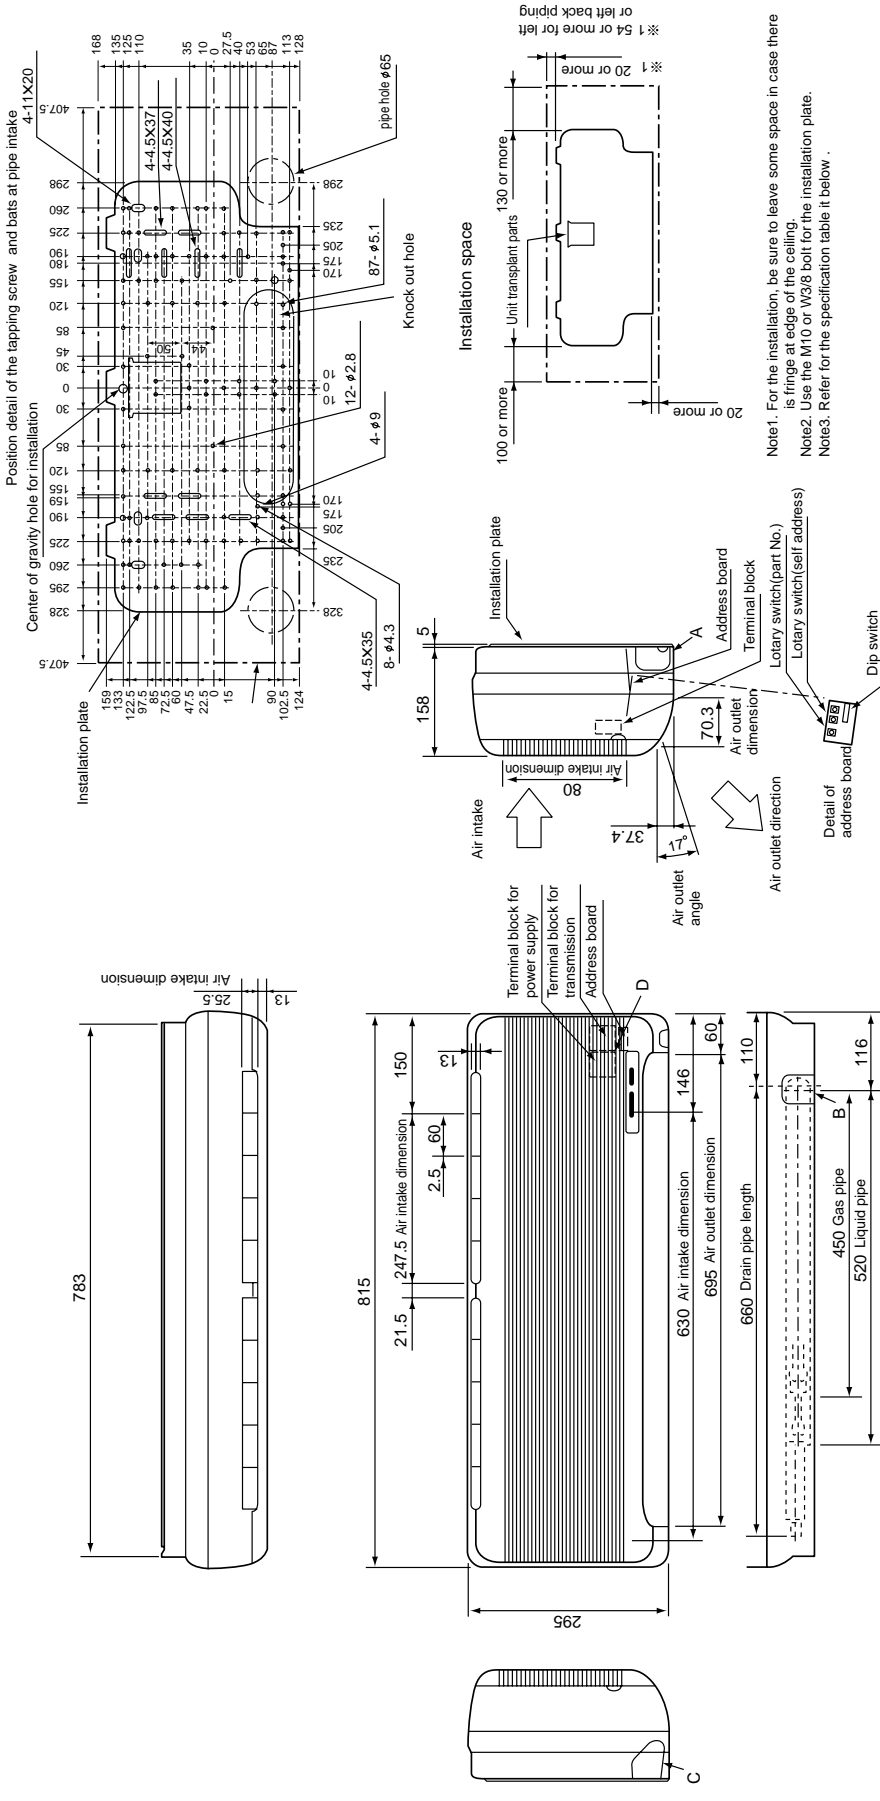

| | | |
|------------------|-------------|--------------------------------------|
| Refrigerant pipe | Liquid pipe | Flare connection 1/4F |
| | Gas pipe | Flare connection 1/2F |
| Drain pipe | | Connection inner dimension ϕ 16 |

※ 3 Address board is protected by the plastic cover.
For the setting, remark 1-screw using the screw driver.

: There is no terminal board for MA remote controller.
: In case of connecting MA remote controller, use the cable with the connector attached to the indoor unit.
Please connect the cable with the connector with the lead wire and connector (Relay connector) for the MA remote controller of indoor controller board.

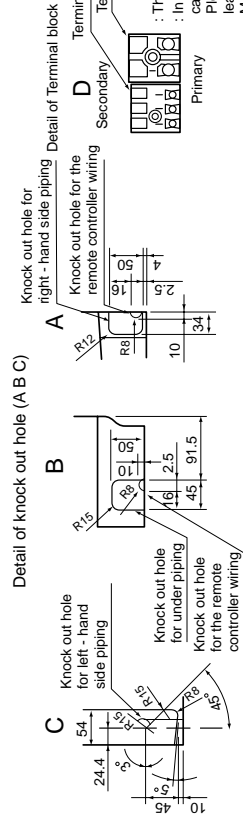

Note1. For the installation, be sure to leave some space in case there is fringe at edge of the ceiling.
Note2. Use the M10 or $\frac{1}{8}$ inch bolt for the installation plate.
Note3. Refer for the specification table it below .


5

WIRING DIAGRAM

PKFY-P20VAM-E PKFY-P25VAM-E

Legend

| Symbol | Name | Symbol | Name | Symbol | Name |
|--------|---|--------|--|-----------|---------------------------|
| M.B | Indoor controller board | TH23 | Thermistor | TB2 | Terminal block |
| CN32 | Connector | TH22 | Pipe temperature,detection/Gas (0°C/15k Ω ,25°C/5.4k Ω) | TB5 | Terminal block |
| CN41 | Remote switch | P.B | Indoor power board | A.B | Circuit board |
| CN51 | Centrally control | ZNR | Varistor | SW1<A,B> | Switch |
| CN52 | Remote indication | FUSE | Fuse (6.3A) | SW5<A,B> | Mode selection |
| SW2 | Switch | F.C | Fan phase control | SW11<A,B> | Voltage selection |
| SW3 | Capacity code | MF | Fan motor | SW12<A,B> | Address setting 1st digit |
| TH21 | Thermistor | C1 | Capacitor(fan motor) | SW14<A,B> | Address setting 2nd digit |
| TH22 | Room temperature,detection (0°C/15k Ω ,25°C/5.4k Ω) | MV | Vane motor | | Connection No. |
| | Pipe temperature,detection/liquid (0°C/15k Ω ,25°C/5.4k Ω) | LEV | Linear expansion valve | | |

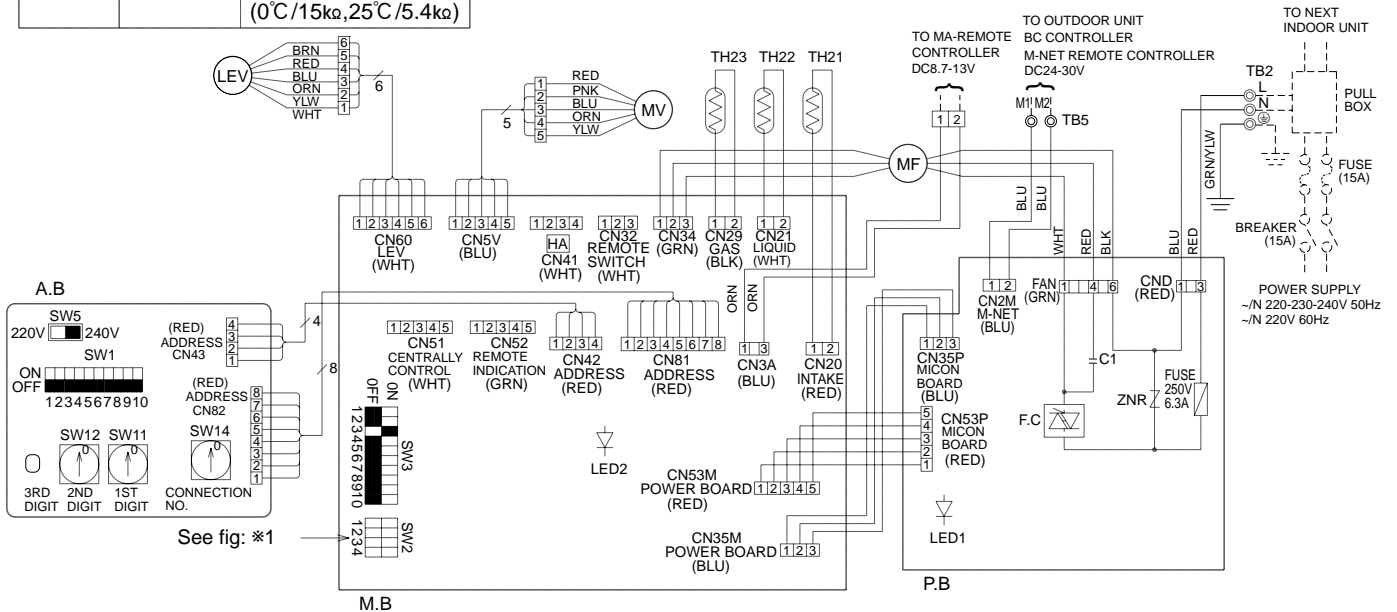

Note

- At servicing for outdoor unit, always follow the wiring diagram of outdoor unit.
- In case of connecting MA-remote controller, please connect MA remote controller cable in an accessory to the connector 1 2. (Remote controller wire is non-polar.)
- In case of using M-NET, please connect to TB5. (Transmission line is non-polar.)
- Symbols used in wiring diagram above are, ⊙: terminal block, □: connector.
- The setting of the SW2 dip switches differs in the capacity. For the detail, refer to the fig: *1.
- Please set the switch SW5 according to the power supply voltage.
Set SW5 to 240V side when the power supply is 230 and 240 volts.
When the power supply is 220 volts, set SW5 to 220V side.

LED on indoor board for service

| Mark | Meaning | Function |
|------|---------------------------------------|--|
| LED1 | Main power supply | Main power supply(Indoor unit:220-240V) power on → lamp is lit |
| LED2 | Power supply for MA-Remote controller | Power supply for MA-Remote controller on → lamp is lit |


< *1 >

| Models | SW2 | Models | SW2 |
|-------------|--------|-------------|--------|
| PKFY-P20VAM | ON OFF | PKFY-P25VAM | ON OFF |

6

REFRIGERANT SYSTEM DIAGRAM

PKFY-P20VAM-E
PKFY-P25VAM-E

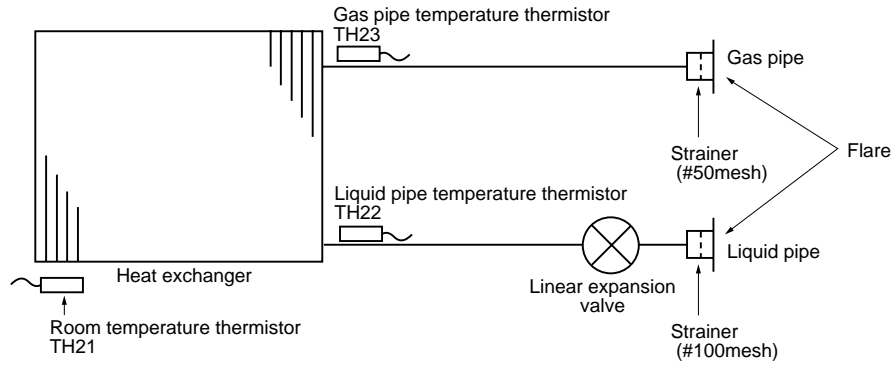

| Item | Models | PKFY-P20VAM-E | PKFY-P25VAM-E |
|-------------|--------|---------------|---------------|
| Gas pipe | | φ12.7 (1/2") | |
| Liquid pipe | | φ6.35 (1/4") | |

7

TROUBLESHOOTING

7-1. HOW TO CHECK

PKFY-P20VAM-E PKFY-P25VAM-E

| Parts name | Check points | | | | | | | | | | | | | | |
|---|--|-----------------------|-----------------------|---------------|-----------------|-----------------|----------------------|-------------------------|-----------------------|-----------------------|---|-----------|--|--|--|
| Room temperature thermistor (TH21) Liquid pipe temperature thermistor (TH22) Gas pipe temperature thermistor (TH23) | Disconnect the connector then measure the resistance using a tester. (Surrounding temperature 10°C ~30°C) <table border="1"> <thead> <tr> <th>Normal</th> <th>Abnormal</th> </tr> </thead> <tbody> <tr> <td>4.3kΩ~9.6kΩ</td> <td>Open or short</td> </tr> </tbody> </table> Refer to the next page for the details. | Normal | Abnormal | 4.3kΩ~9.6kΩ | Open or short | | | | | | | | | | |
| Normal | Abnormal | | | | | | | | | | | | | | |
| 4.3kΩ~9.6kΩ | Open or short | | | | | | | | | | | | | | |
| Vane motor | Measure the resistance between the terminals using a tester. (Surrounding temperature 25°C) <table border="1"> <thead> <tr> <th>Normal</th> <th>Normal</th> <th>Abnormal</th> </tr> </thead> <tbody> <tr> <td>①-② Red-Pink</td> <td>①-③ Red-Blue</td> <td rowspan="2">Open or short</td> </tr> <tr> <td>①-④ Red-Orange</td> <td>①-⑤ Red-Yellow</td> </tr> <tr> <td colspan="3" style="text-align: center;">200Ω ±7%</td> </tr> </tbody> </table> | Normal | Normal | Abnormal | ①-② Red-Pink | ①-③ Red-Blue | Open or short | ①-④ Red-Orange | ①-⑤ Red-Yellow | 200Ω ±7% | | | | | |
| Normal | Normal | Abnormal | | | | | | | | | | | | | |
| ①-② Red-Pink | ①-③ Red-Blue | Open or short | | | | | | | | | | | | | |
| ①-④ Red-Orange | ①-⑤ Red-Yellow | | | | | | | | | | | | | | |
| 200Ω ±7% | | | | | | | | | | | | | | | |
| Fan motor | ① Measure the resistance between the terminals using a tester. (Surrounding temperature 20°C) <table border="1"> <thead> <tr> <th></th> <th>Normal</th> <th>Abnormal</th> </tr> </thead> <tbody> <tr> <td>White-Black</td> <td>195Ω</td> <td rowspan="2">Open or short</td> </tr> <tr> <td>Red-Black</td> <td>200Ω</td> </tr> </tbody> </table> ② Without disassembling the parts, measure the electrical pressure of the gray wire (Signal line) and brown wire (GND) while the power is on. <table border="1"> <tbody> <tr> <td>Normal</td> <td>(1) At first, check if the electrical pressure is 12V between the brown wire (GND) and yellow wire (VCC). (2) Slowly start running the fan. It is normal if while the fan rotate once, the electrical pressure change from 0V to 12V then go back to 0V.</td> </tr> <tr> <td>Abnormal</td> <td>If the electrical pressure stay at around 0V or 10V, it means the fan motor has the defects.</td> </tr> </tbody> </table> | | Normal | Abnormal | White-Black | 195Ω | Open or short | Red-Black | 200Ω | Normal | (1) At first, check if the electrical pressure is 12V between the brown wire (GND) and yellow wire (VCC). (2) Slowly start running the fan. It is normal if while the fan rotate once, the electrical pressure change from 0V to 12V then go back to 0V. | Abnormal | If the electrical pressure stay at around 0V or 10V, it means the fan motor has the defects. | | |
| | Normal | Abnormal | | | | | | | | | | | | | |
| White-Black | 195Ω | Open or short | | | | | | | | | | | | | |
| Red-Black | 200Ω | | | | | | | | | | | | | | |
| Normal | (1) At first, check if the electrical pressure is 12V between the brown wire (GND) and yellow wire (VCC). (2) Slowly start running the fan. It is normal if while the fan rotate once, the electrical pressure change from 0V to 12V then go back to 0V. | | | | | | | | | | | | | | |
| Abnormal | If the electrical pressure stay at around 0V or 10V, it means the fan motor has the defects. | | | | | | | | | | | | | | |
| Linear expansion valve | Disconnect the connector then measure the resistance valve using a tester. (Coil temperature 20°C) <table border="1"> <thead> <tr> <th colspan="4">Normal</th> <th>Abnormal</th> </tr> </thead> <tbody> <tr> <td>(1)-(5) White-Red</td> <td>(2)-(6) Yellow-Brown</td> <td>(3)-(5) Orange-Red</td> <td>(4)-(6) Blue-Brown</td> <td rowspan="2">Open or short</td> </tr> <tr> <td colspan="4" style="text-align: center;">150Ω ±10%</td> </tr> </tbody> </table> | Normal | | | | Abnormal | (1)-(5) White-Red | (2)-(6) Yellow-Brown | (3)-(5) Orange-Red | (4)-(6) Blue-Brown | Open or short | 150Ω ±10% | | | |
| Normal | | | | Abnormal | | | | | | | | | | | |
| (1)-(5) White-Red | (2)-(6) Yellow-Brown | (3)-(5) Orange-Red | (4)-(6) Blue-Brown | Open or short | | | | | | | | | | | |
| 150Ω ±10% | | | | | | | | | | | | | | | |

<Thermistor Characteristic graph>


Thermistor for lower temperature

Room temperature thermistor (TH21)
 Liquid pipe temperature thermistor (TH22)
 Gas pipe temperature thermistor (TH23)

Thermistor $R_0 = 15k\Omega \pm 3\%$
 Fixed number of $B = 3480K \pm 2\%$

$$R_t = 15 \exp \left\{ 3480 \left(\frac{1}{273+t} - \frac{1}{273} \right) \right\}$$

| | |
|------|-------|
| 0°C | 15kΩ |
| 10°C | 9.6kΩ |
| 20°C | 6.3kΩ |
| 25°C | 5.4kΩ |
| 30°C | 4.3kΩ |
| 40°C | 3.0kΩ |

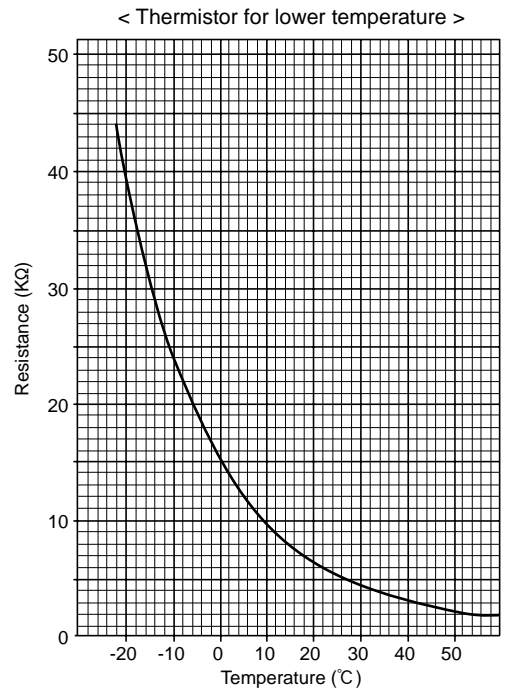


Linear expansion valve

① Operation summary of the linear expansion valve.

- Linear expansion valve open/close through stepping motor after receiving the pulse signal from the indoor controller board.
- Valve position can be changed in proportion to the number of pulse signal.

<Connection between the indoor controller board and the linear expansion valve>

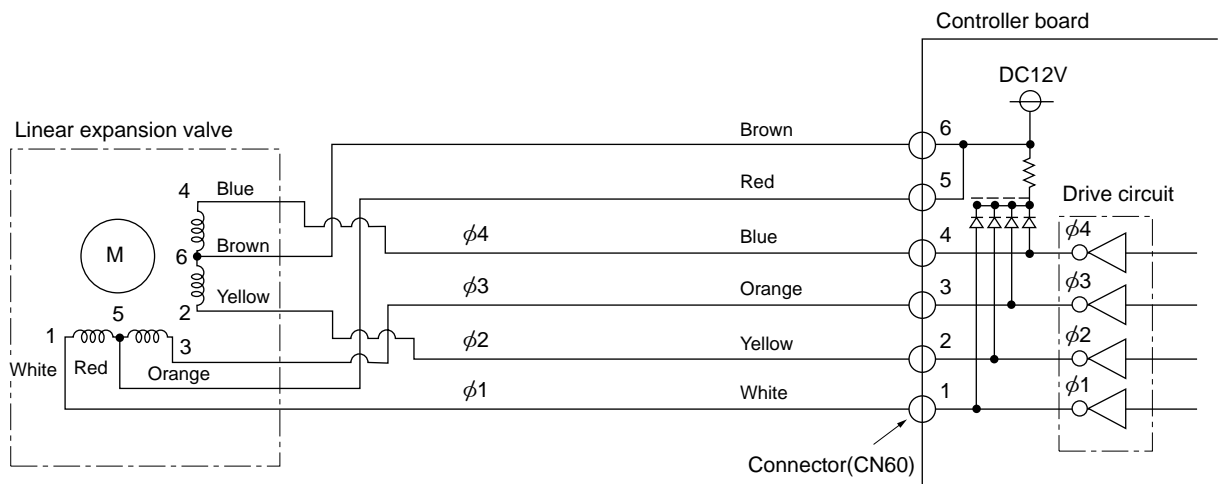

Note : Since the number of the connector at the controller board side and the relay connector are different, follow the color of the lead wire.

<Output pulse signal and the valve operation>


| Output (Phase) | Output | | | |
|----------------|--------|-----|-----|-----|
| | 1 | 2 | 3 | 4 |
| $\phi 1$ | ON | OFF | OFF | ON |
| $\phi 2$ | ON | ON | OFF | OFF |
| $\phi 3$ | OFF | ON | ON | OFF |
| $\phi 4$ | OFF | OFF | ON | ON |

Closing a valve : 1 → 2 → 3 → 4 → 1
 Opening a valve : 4 → 3 → 2 → 1 → 4

The output pulse shift in above order.

- * 1. When linear expansion valve operation stops, all output phase become OFF.
- 2. At phase interruption or when phase does not shift in order, motor does not rotate smoothly and motor lock, and vibrates.

② Linear expansion valve operation

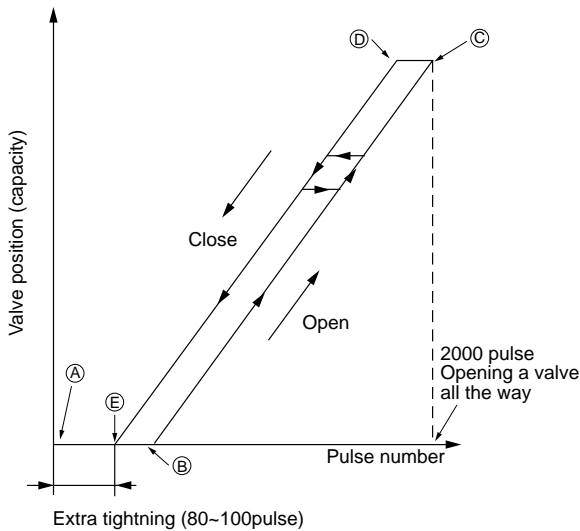

- * When the switch is turned on, 2200 pulse closing valve signal will be send till it goes to ② point in order to define the valve position.

When the valve move smoothly, there is no noise or vibration occurring from the linear expansion valve ; however, when the pulse number moves from ③ to ② or when the valve is locked, more noise can be heard than normal situation.




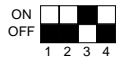

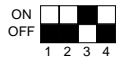

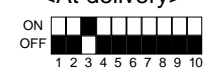
- * Noise can be detected by placing the ear against the screw driver handle while putting the screw driver to the linear expansion valve.

③ Trouble shooting



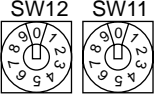
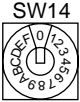



| Symptom | Check points | Countermeasures |
|--|---|---|
| Operation circuit failure of the micro processor. | Disconnect the connector on the controller board, then connect LED for checking. <p>1kΩ LED</p> Pulse signal will be sent out for 10 seconds as soon as the main switch is turn on. If there is LED with lights on or lights off, it means the operation circuit is abnormal. | Exchange the indoor controller board at drive circuit failure. |
| Linear expansion valve mechanism is locked. | Motor will idle and make ticking noise when motor is operated while the linear expansion valve is locked. This ticking sound is the sign of the abnormality. | Exchange the linear expansion valve. |
| Short or breakage of the motor coil of the linear expansion valve. | Measure the resistance between the each coil (red-white, red-orange, brown-yellow, brown-blue) using a tester. It is normal if the resistance is in the range of 150Ω±10%. | Exchange the linear expansion valve. |
| Valve doesn't close completely (thermistor leaking). | To check the linear expansion valve, operate the indoor unit in fan mode and at the same time operate other indoor units in cooling mode, then check the pipe temperature <liquid pipe temperature> of the indoor unit by the outdoor multi controller board operation monitor. During fan operation, linear expansion valve is closed completely and if there are some leaking, detecting temperature of the thermistor will go lower. If the detected temperature is much lower than the temperature indicated in the remote controller, it means the valve is not closed all the way. It is not necessary to exchange the linear expansion valve, if the leakage is small and not making any trouble. <p>Thermistor Linear expansion valve</p> | If large amount of thermistor is leaked, exchange the linear expansion valve. |
| Wrong connection of the connector or contact failure. | Check the color of lead wire and missing terminal of the connector. | Disconnect the connector at the controller board, then check the continuity. |

7-2. FUNCTION OF DIP SWITCH

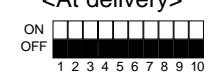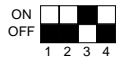
PKFY-P20VAM-E PKFY-P25VAM-E

| Switch | Pole | Function | Operation by switch | | Remarks | | | | | | |
|-----------------------------------|---|---|---------------------------------|---------------------------------|--|-----|---------------|---|---------------|---|---|
| | | | ON | OFF | | | | | | | |
| SW1 Mode selection | 1 | Thermistor<Intake temperature> position | Built-in remote controller | Indoor unit | <div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;">Address board</div> <p style="text-align: center;"><At delivery></p>  <p>NOTE: ※1 SW1-7=OFF, SW1-8=ON →Setting air flow. SW1-7=OFF, SW1-8=ON →Indoor fan stop. ※2 It is impossible to intake the fresh air.</p> | | | | | | |
| | 2 | Filter clogging | Provide | Not provide | | | | | | | |
| | 3 | Filter sign indication | 2,500 hr | 100 hr | | | | | | | |
| | 4 | Air intake ※2 | Not effective | Not effective | | | | | | | |
| | 5 | Remote indication switching | Thermostat ON signal indication | Fan output indication | | | | | | | |
| | 6 | Humidifier control | Fan operation at Heating mode | Heat thermostat ON is operating | | | | | | | |
| | 7 | Air flow at heat thermostat | Low ※1 | Extra low ※1 | | | | | | | |
| | 8 | OFF | Setting air flow ※1 | Reset to SW1-7 | | | | | | | |
| | 9 | Auto restart function | Effective | Not effective | | | | | | | |
| | 10 | Power ON/OFF | Effective | Not effective | | | | | | | |
| SW2 Capacity code switch | 1~4 | <table border="1" style="width: 100%; text-align: center;"> <thead> <tr> <th>MODEL</th> <th>SW2</th> </tr> </thead> <tbody> <tr> <td>PKFY-P20VAM-E</td> <td>  </td> </tr> <tr> <td>PKFY-P25VAM-E</td> <td>  </td> </tr> </tbody> </table> | | | MODEL | SW2 | PKFY-P20VAM-E |  | PKFY-P25VAM-E |  | <div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;">Indoor controller board</div> <p>Set while the unit is off.</p> <p style="text-align: center;"><At delivery></p> <p>Set for each capacity.</p> |
| | | MODEL | SW2 | | | | | | | | |
| PKFY-P20VAM-E |  | | | | | | | | | | |
| PKFY-P25VAM-E |  | | | | | | | | | | |
| SW3 Function selection | 1 | Heat pump/Cool only | Cooling only | Heat pump | <div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;">Indoor controller board</div> <p>Set while the unit is off.</p> <p style="text-align: center;"><At delivery></p>  <p>(Note 1) At cooling mode, each angle can be used only 1 hour.</p> | | | | | | |
| | 2 | Capacity save | Available | Not available | | | | | | | |
| | 3 | Vane | Available | Not available | | | | | | | |
| | 4 | Reading change of LEV opening on reversion of after defrosting | Not available | Available | | | | | | | |
| | 5 | Vane horizontal angle | Second setting | First setting | | | | | | | |
| | 6 | Vane cooling limit angle setting ※1 | Horizontal angle | Down B,C | | | | | | | |
| | 7 | Indoor linear expansion valve opening | Effective | Not effective | | | | | | | |
| | 8 | Heater 4 degressed up | Not effective | Effective | | | | | | | |
| | 9 | Target Superheat setting temperature | 9 degressed | 6 degressed | | | | | | | |
| | 10 | Target Subcool setting temperature | 15 degressed | 10 degressed | | | | | | | |

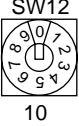






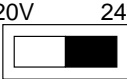
| Switch | | Operation by switch | Remarks |
|--|---------------|---|--|
| SW11 1st digit address setting SW12 2nd digit address setting | Rotary switch |   <p>Address setting should be done when M-NET remote controller is being used.</p> | <p>Address board</p> <p>Address can be set while the unit is stopped.</p> <p><At delivery></p>  |
| SW14 Connection No. Setting | Rotary switch |  <p>This is the switch to be used when the indoor unit is operated with R2 series outdoor unit as a set.</p> | <p>Address board</p> <p><At delivery></p>  |
| SW5 Voltage selection | 2 |  <p>If the unit is used at the 230V or 240V area, set the voltage to 240V. If the unit is used at the 220V, set the voltage to 220V.</p> | <p>Address board</p> <p><At delivery></p>  |

7-3-2. Indoor power board
PKFY-P20VAM-E
PKFY-P25VAM-E

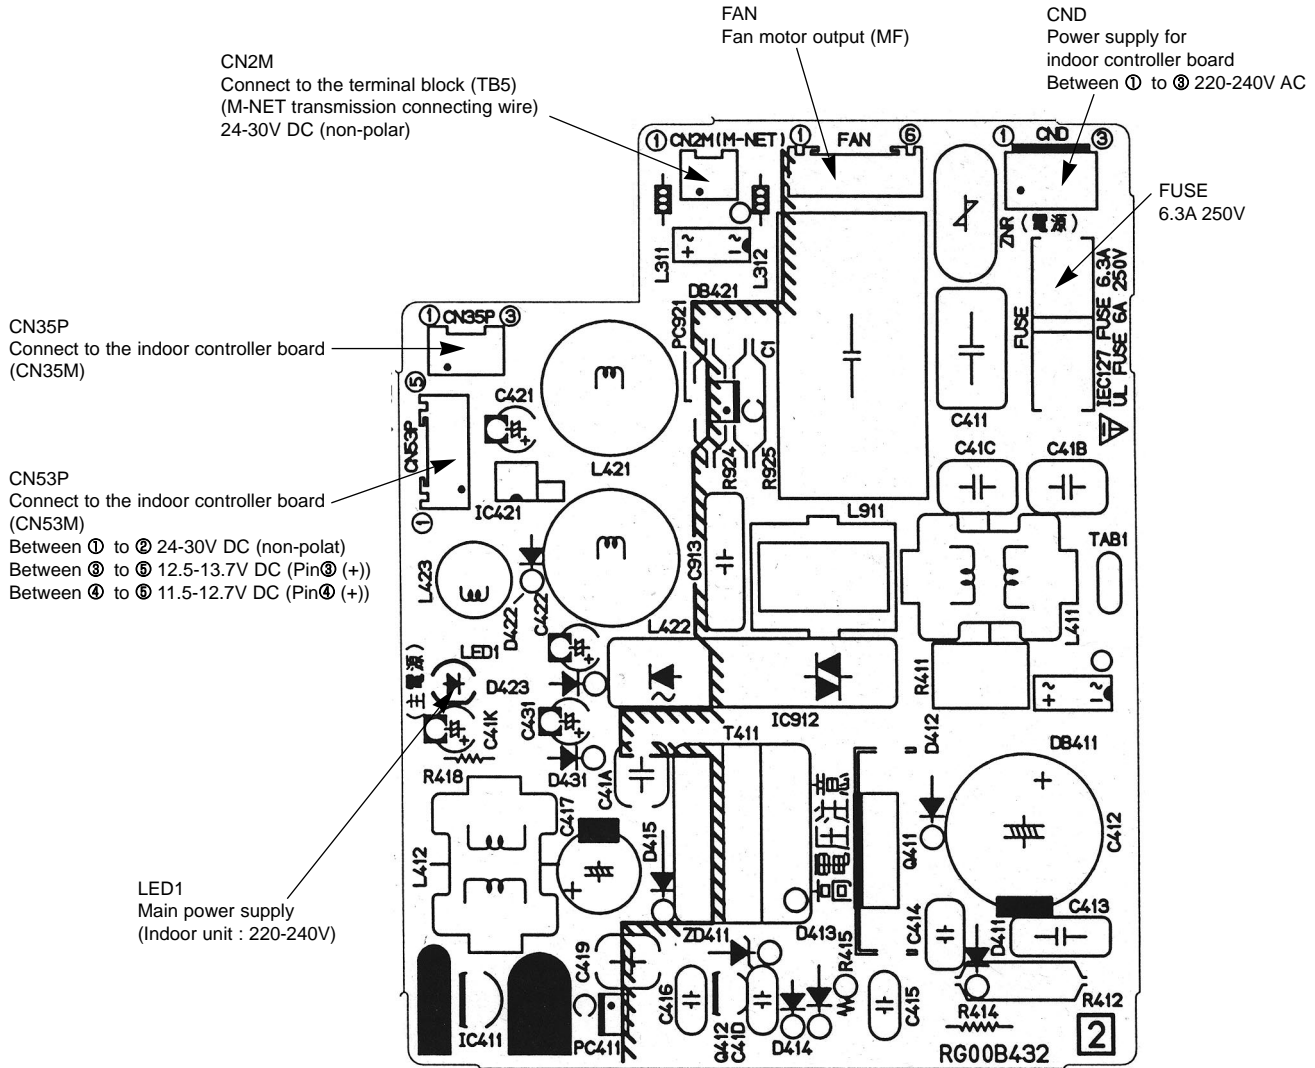

PKFY-P20VAM-E PKFY-P25VAM-E

Be careful on removing heavy parts.
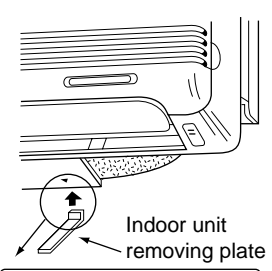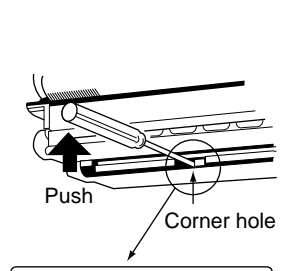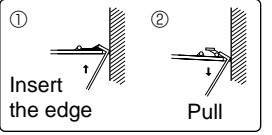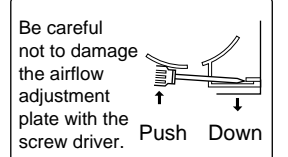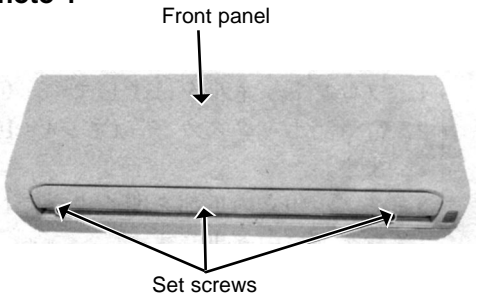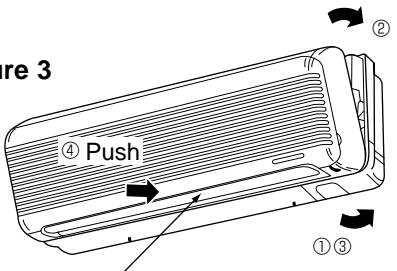
| OPERATION PROCEDURE | PHOTOS & ILLUSTRATIONS |
|--|--|
| <p>1. REMOVING THE LOWER SIDE OF THE INDOOR UNIT FROM THE INSTALLATION PLATE</p> <p>When there is removing plate</p> <ol style="list-style-type: none"> (1) Remove the corner box at right lower side of the indoor unit. (2) Insert the removing plate at the back side of the corner box to remove the indoor unit. (3) Remove the hook by pulling the lower side of the indoor unit down as shown in the figure 1. <p>When there is no removing plate or it can not be used for some reason.</p> <ol style="list-style-type: none"> (1) Remove the front panel. (2) Insert the screw driver to the corner hole at both left and right side as shown in the figure 2. (3) Push it up then, pull down the lower side of indoor unit and remove the hook. | <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>Figure 1</p>  <p>Indoor unit removing plate</p> </div> <div style="text-align: center;"> <p>Figure 2</p>  <p>Push Corner hole</p> </div> </div> <div style="margin-top: 10px;">  <p>① Insert the edge ② Pull</p> </div> <div style="margin-top: 10px; border: 1px solid black; padding: 5px;"> <p>Be careful not to damage the airflow adjustment plate with the screw driver.</p>  <p>Push Down</p> </div> |
| <p>2. REMOVING THE FRONT PANEL</p> <p>✱ Before removing the front panel, leave the open space at upper side of air flow adjustment plate approximately 2 to 3 cm.</p> <ol style="list-style-type: none"> (1) Remove the screw caps then remove the set screws. (Refer to the photo 1) (2) Remove the left side of the front panel, then right side. (3) After removing the lower side of the front panel a little, remove it as pulling the upper side toward you. <p>✱ Please pay attention to the nozzle assemble.</p> <p>INSTALLING THE FRONT PANEL</p> <ol style="list-style-type: none"> (1) Insert the lower side of the front panel under the air adjustment plate. (2) Set the upper side of the front panel. (3) Set the lower side of the front panel then fix it with the screws. (4) Press the area indicated as arrow sign and set it to the air conditioner unit. | <p>Photo 1</p>  <p>Front panel Set screws</p> <p>Figure 3</p>  <p>④ Push Airflow adjustment plate ① ② ③</p> |

OPERATION PROCEDURE

PHOTOS & ILLUSTRATIONS

3. REMOVING THE INDOOR MICRO CONTROLLER BOARD AND INDOOR POWER BOARD

- (1) Remove the front panel. (Refer to 2)
- (2) Remove the electrical box cover (screw 4 X 10).
(Refer to the photo 2)

INDOOR MICRO CONTROLLER BOARD

- (1) Disconnect the following connectors on the indoor micro controller board.
(connector in front of)
 - CN60, CN5V, CN34, CN29, CN21
 - CN42, CN81, CN3A, CN20
- (2) Pull out the indoor micro controller board toward you, then disconnect the rest of connectors.
 - CN53M, CN35M (See the photo 3)

INDOOR POWER BOARD

- (1) Disconnect the following connectors on the indoor power board.
 - FAN, CN53P, CN35P, CN2M, CND
- (2) Remove the screws of the indoor power board, then pull out the indoor power board toward you. (See the photo 3)

Photo 2


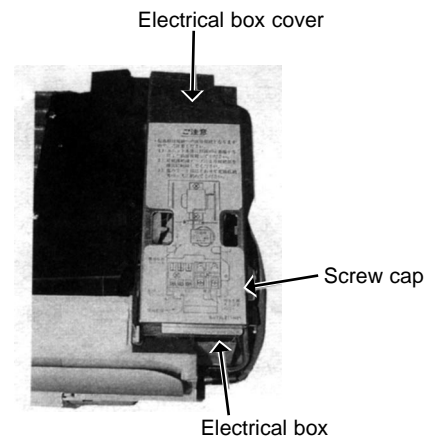



Photo 3

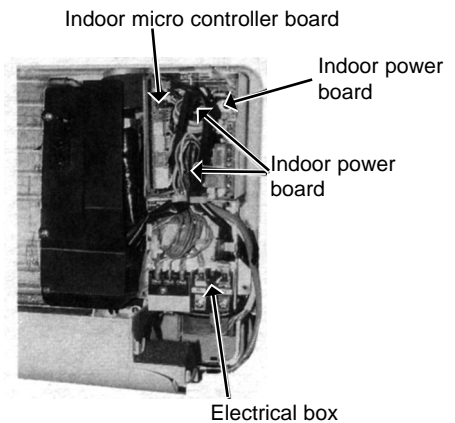






4. REMOVING THE ELECTRICAL BOX

- (1) Remove the front panel. (Refer to 2)
- (2) Remove the electrical box cover.
- (3) Pull the nozzle assembly toward you as opening the catch of the nozzle assembly.
- (4) Disconnect the indoor/outdoor connector.
- (5) Disconnect the following connector on the indoor micro controller board. (See the photo 4)
 - CN60, CN5V, CN34, CN29, CN21, CN20, CN3A
- (6) Disconnect the following connector on the indoor power board. (See the photo 4)
 - FAN, CN2M, CND
- (7) Disconnect the ground wire.
- (8) Pull the disconnected lead wire out from the electrical box.
- (9) Push up the upper fixture catch to remove the box, then pull the lower fixture and remove it from the box fixture.


Photo 4

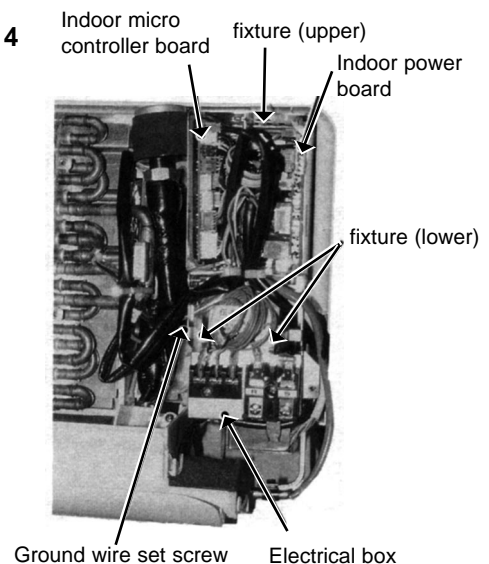

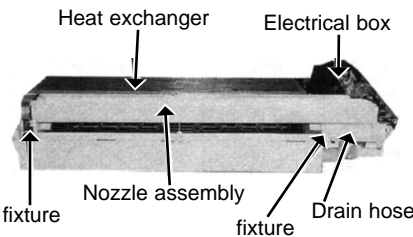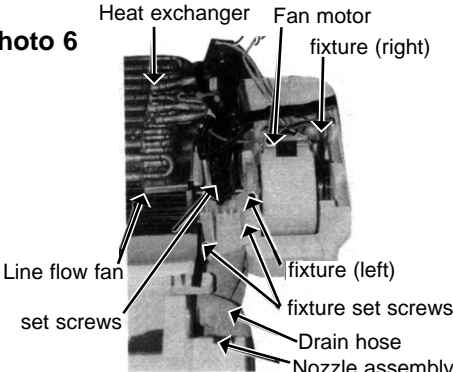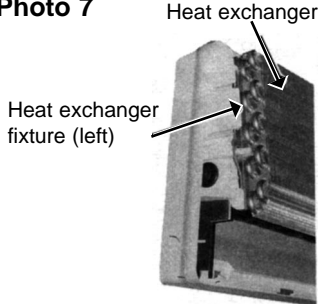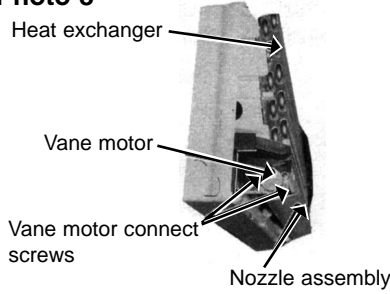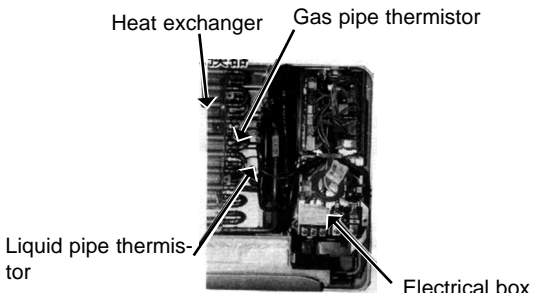

| OPERATION PROCEDURE | PHOTOS & ILLUSTRATIONS |
|---|--|
| <p>5. REMOVING THE NOZZLE ASSEMBLY</p> <ol style="list-style-type: none"> (1) Remove the front panel (Refer to 2). (2) Remove the electrical box cover. (3) Disconnect the connector (CN5V) on the indoor micro controller board. (4) After unhook the right side of the corner box, press the upper left side and remove the corner box. (5) Remove the nozzle assemble from the fixture. (See the photo 5) (6) Remove the drain hose. | <p>Photo 5</p>  |
| <p>6. REMOVING THE LINE FLOW FAN AND THE FAN MOTOR</p> <ol style="list-style-type: none"> (1) Remove the front panel. (Refer to 2) (2) Remove the nozzle assembly. (Refer to 5) (3) Remove the electrical parts box. (4) Remove the fixture while pressing the right side of motor fixture catch. (See the photo 6) (5) Remove the left side of the motor fixture. (6) Loosen the screw which fixes the line flow fan to the fan motor, then remove the fan motor by sliding it to the right side. (See the photo 6) (7) Pull the left-hand side of the heat exchanger toward you. (See the photo 7) (8) Remove the line flow fan. | <p>Photo 6</p>  <p>Photo 7</p>  |
| <p>7. REMOVING THE VANE MOTOR</p> <ol style="list-style-type: none"> (1) Remove the front panel. (2) Remove the screw of the electrical parts box cover, and remove the cover. (3) Remove the screw of the vane motor, and remove the motor from the shaft. (4) Disconnect the vane motor connector (CN5V) on the indoor controller board. | <p>Photo 8</p>  |
| <p>8. REMOVING THE LIQUID PIPE THERMISTOR AND GAS PIPE THERMISTOR</p> <ol style="list-style-type: none"> (1) Remove the front panel. (Refer to 2) (2) Remove the electrical box cover. (3) Remove the pipe cover. (4) Cut the wiring fixed band. (5) Remove the liquid pipe thermistor and gas pipe thermistor. (See the photo 9) (6) Disconnect the connector (CN29) (CN21) on the indoor micro controller board. | <p>Photo 9</p>  |


PANEL PARTS
PKFY-P20VAM-E
PKFY-P25VAM-E

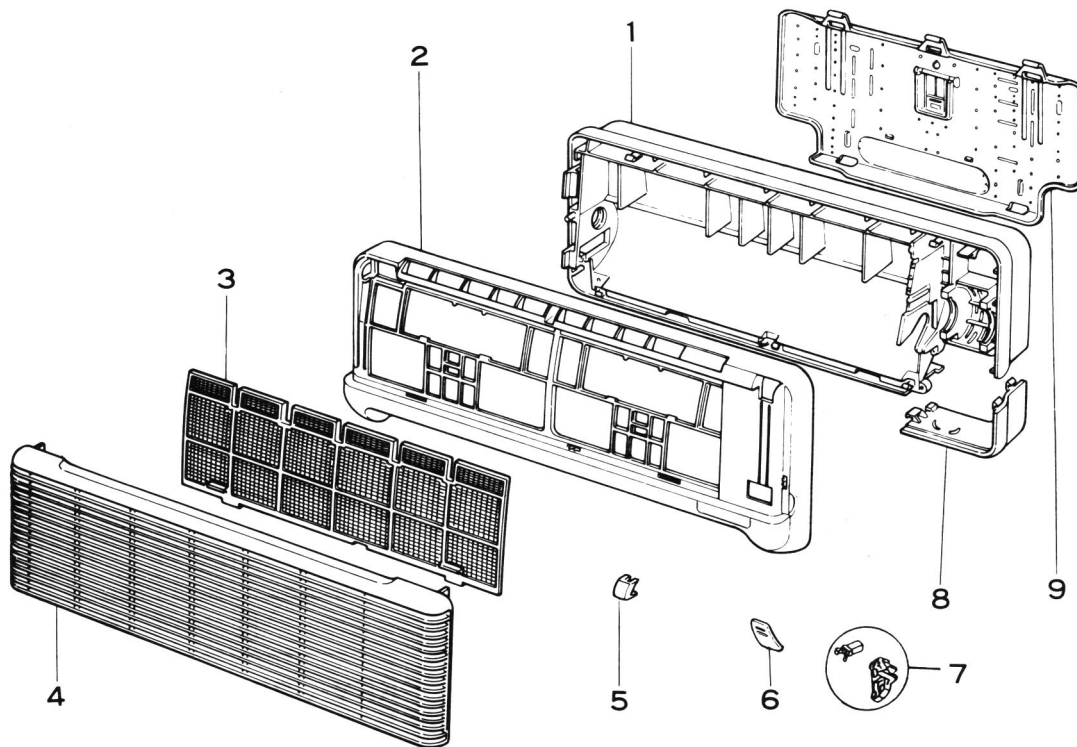

Part number that is circled is not shown in the figure.


| No. | Parts No. | Parts Name | Specifications | Q'ty / set | Remarks (Drawing No.) | Wiring Diagram Symbol | Recom- mended Q'ty | Price | |
|-----|-------------|-----------------|----------------|--------------------------------|--------------------------|-----------------------------|--------------------------|-------|--------|
| | | | | PKFY-P20VAM-E PKFY-P25VAM-E | | | | Unit | Amount |
| 1 | R01 22A 635 | BOX | | 1 | | | | | |
| 2 | R01 22A 651 | FRONT PANEL | | 1 | | | | | |
| 3 | R01 22A 500 | AIR FILTER | | 1 | | | | | |
| 4 | R01 22A 691 | INTAKE GRILLE | | 1 | | | | | |
| 5 | R01 22A 096 | SCREW CAP | | 1 | 3PCS/SET | | | | |
| 6 | — | RECEIVING COVER | | 1 | (DT25C174H03) | | | | |
| 7 | R01 22A 054 | GRILLE CATCH | | 1 | | | | | |
| 8 | T7W A00 658 | CORNER BOX | | 1 | | | | | |
| 9 | R01 22A 808 | BACK PLATE | | 1 | | | | | |
| ⑩ | — | BRAND LABEL | | 1 | (BC79R798H02) | | | | |

ELECTRICAL PARTS PKFY-P20VAM-E PKFY-P25VAM-E

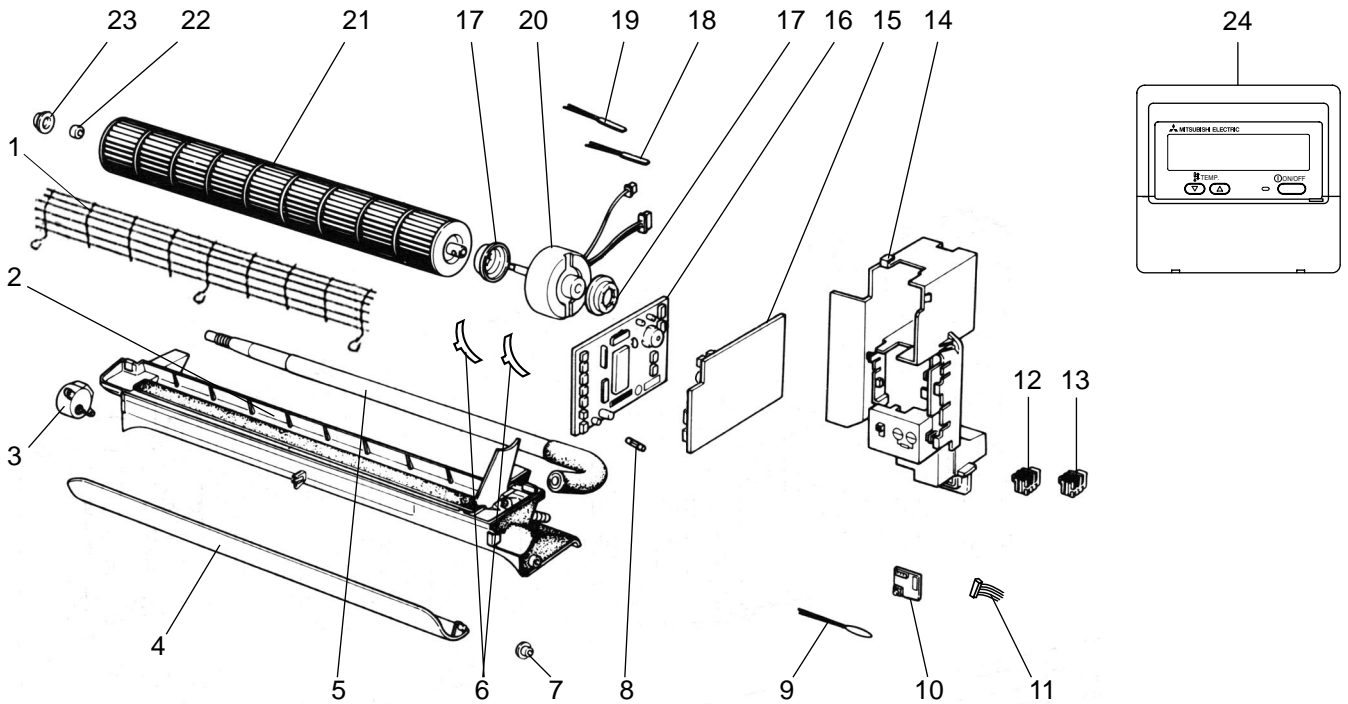

| No. | Parts No. | Parts Name | Specifications | Q'ty / set | | Remarks (Drawing No.) | Wiring Diagram Symbol | Recom- mended Q'ty | Price | |
|-----|-------------|-----------------------------|-------------------|-------------------|-------------------|--------------------------|-----------------------------|--------------------------|-------|--------|
| | | | | PKFY- P20VAM-E | PKFY- P25VAM-E | | | | Unit | Amount |
| 1 | T7W B00 675 | FAN GUARD | | 1 | 1 | | | | | |
| 2 | R01 22A 530 | NOZZLE | | 1 | 1 | | | | | |
| 3 | R01 22A 223 | VANE MOTOR | | 1 | 1 | | MV | | | |
| 4 | R01 22A 002 | AUTO VANE | | 1 | 1 | | | | | |
| 5 | R01 22A 527 | DRAIN HOSE | | 1 | 1 | | | | | |
| 6 | R01 22A 126 | MOTOR BAND | SET (LEFT, RIGHT) | 1 | 1 | | | | | |
| 7 | R01 07Y 092 | VANE SLEEVE | | 1 | 1 | | | | | |
| 8 | T7W 520 239 | FUSE | 250V 6.3A | 1 | 1 | | FUSE | | | |
| 9 | T7W E12 202 | ROOM TEMPERATURE THERMISTOR | | 1 | 1 | | TH21 | | | |
| 10 | T7W B01 294 | ADDRESS BOARD | | 1 | 1 | | A.B | | | |
| 11 | T7W E00 304 | ADDRESS CABLE | | 1 | 1 | | | | | |
| 12 | T7W 512 716 | TERMINAL BLOCK | 2P (M1, M2) | 1 | 1 | | TB5 | | | |
| 13 | T7W E05 716 | TERMINAL BLOCK | 3P (L, N, ⊕) | 1 | 1 | | TB2 | | | |
| 14 | — | ELECTRICAL BOX | | 1 | 1 | (BG00J285G24) | | | | |
| 15 | T7W E03 313 | POWER BOARD | | 1 | 1 | | P.B | | | |
| 16 | R01 H17 310 | INDOOR CONTROLLER BOARD | | 1 | 1 | | M.B | | | |
| 17 | R01 22A 105 | RUBBER MOUNT | | 2 | 2 | | | | | |
| 18 | R01 E38 202 | PIPE TEMPERATURE THERMISTOR | GAS | 1 | 1 | | TH23 | | | |
| 19 | T7W E06 202 | PIPE TEMPERATURE THERMISTOR | LIQUID | 1 | 1 | | TH22 | | | |
| 20 | T7W E11 762 | FAN MOTOR | PS4V17-KA | 1 | 1 | | MF | | | |
| 21 | R01 22A 114 | LINE FLOW FAN | | 1 | 1 | | | | | |
| 22 | R01 005 103 | SLEEVE BEARING | | 1 | 1 | | | | | |
| 23 | R01 22A 102 | BEARING MOUNT | | 1 | 1 | | | | | |
| 24 | — | REMOTE CONTROLLER | PAR-21MAA | 1 | 1 | | R.B | | | |

HEAT EXCHANGER PARTS
PKFY-P20VAM-E
PKFY-P25VAM-E

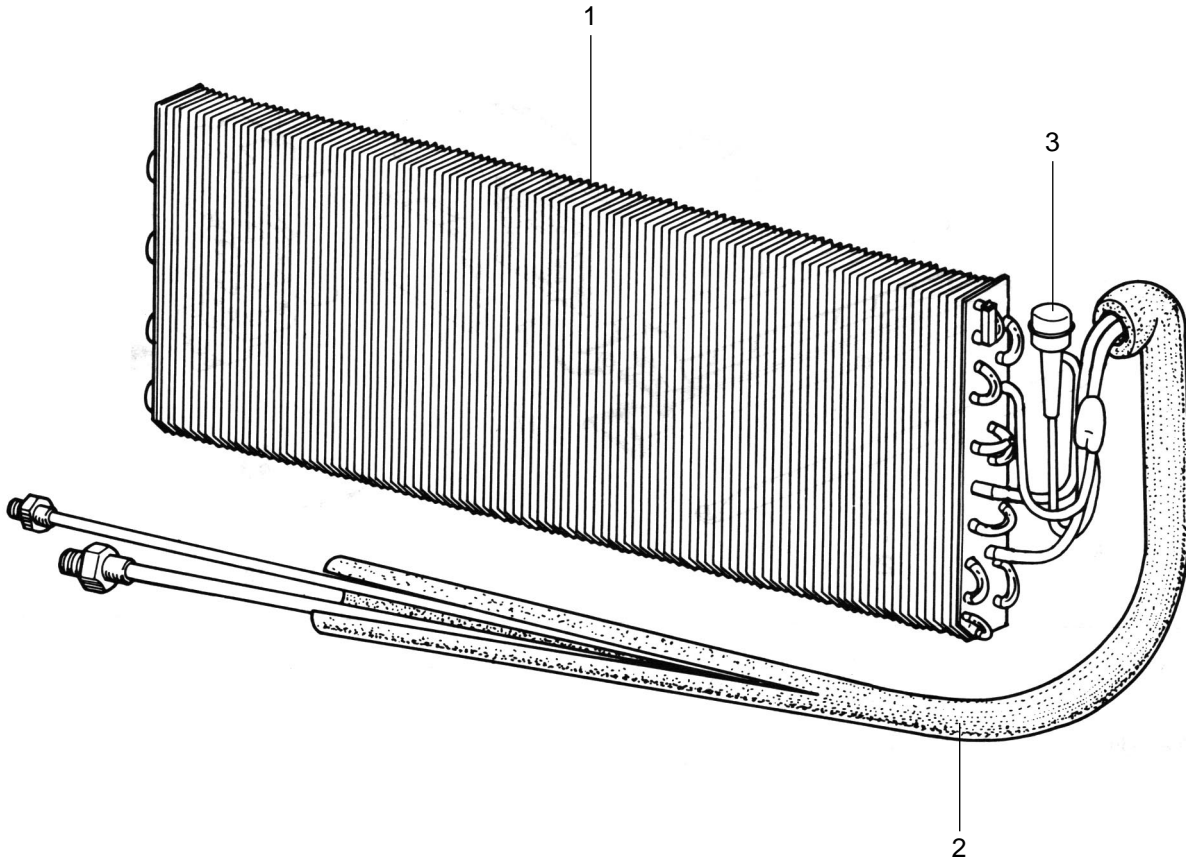


| No. | Parts No. | Parts Name | Specifications | Q'ty / set | | Remarks (Drawing No.) | Wiring Diagram Symbol | Recom- mended Q'ty | Price | |
|-----|-------------|------------------------|----------------|-------------------|-------------------|--------------------------|-----------------------------|--------------------------|-------|--------|
| | | | | PKFY- P20VAM-E | PKFY- P25VAM-E | | | | Unit | Amount |
| 1 | R01 H58 480 | HEAT EXCHANGER | | 1 | | | | | | |
| | R01 H59 480 | HEAT EXCHANGER | | | 1 | | | | | |
| 2 | R01 E03 470 | CONNECT PIPE | | 1 | 1 | | | | | |
| 3 | R01 E63 401 | LINEAR EXPANSION VALVE | | 1 | 1 | | LEV | | | |

10

RoHS PARTS LIST

PANEL PARTS
 PKFY-P20VAM-E
 PKFY-P25VAM-E

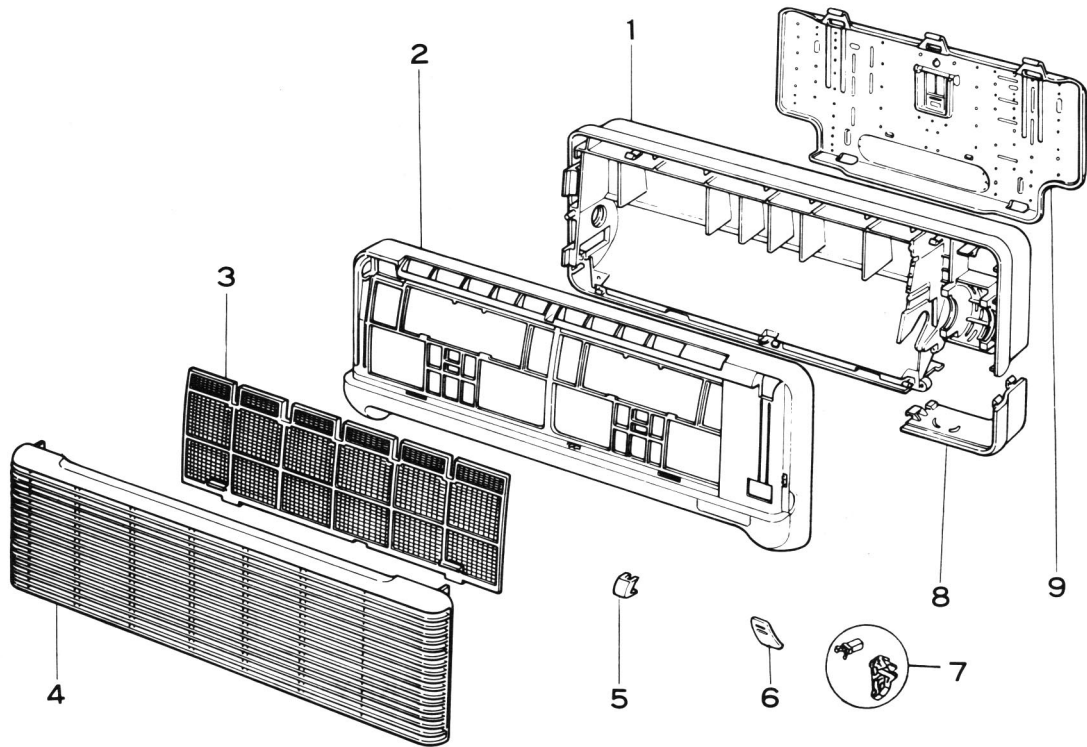


Part number that is circled is not shown in the figure.

| No. | RoHS | Parts No. | Parts Name | Specifications | Q'ty / set | Remarks (Drawing No.) | Wiring Diagram Symbol | Recom- mended Q'ty | Price | |
|-----|------|-------------|-----------------|----------------|--------------------------------|--------------------------|-----------------------------|--------------------------|-------|--------|
| | | | | | PKFY-P20VAM-E PKFY-P25VAM-E | | | | Unit | Amount |
| 1 | G | R01 23A 635 | BOX | | 1 | | | | | |
| 2 | G | R01 23A 651 | FRONT PANEL | | 1 | | | | | |
| 3 | G | R01 23A 500 | AIR FILTER | | 1 | | | | | |
| 4 | G | R01 23A 691 | INTAKE GRILLE | | 1 | | | | | |
| 5 | G | R01 23A 096 | SCREW CAP | | 1 | 3PCS/SET | | | | |
| 6 | G | — | RECEIVING COVER | | 1 | (DT25C174H03) | | | | |
| 7 | G | R01 23A 054 | GRILLE CATCH | | 1 | | | | | |
| 8 | G | T7W A01 658 | CORNER BOX | | 1 | | | | | |
| 9 | G | R01 23A 808 | BACK PLATE | | 1 | | | | | |
| ⑩ | G | — | BRAND LABEL | | 1 | (BC79R798H02) | | | | |


ELECTRICAL PARTS

PKFY-P20VAM-E PKFY-P25VAM-E

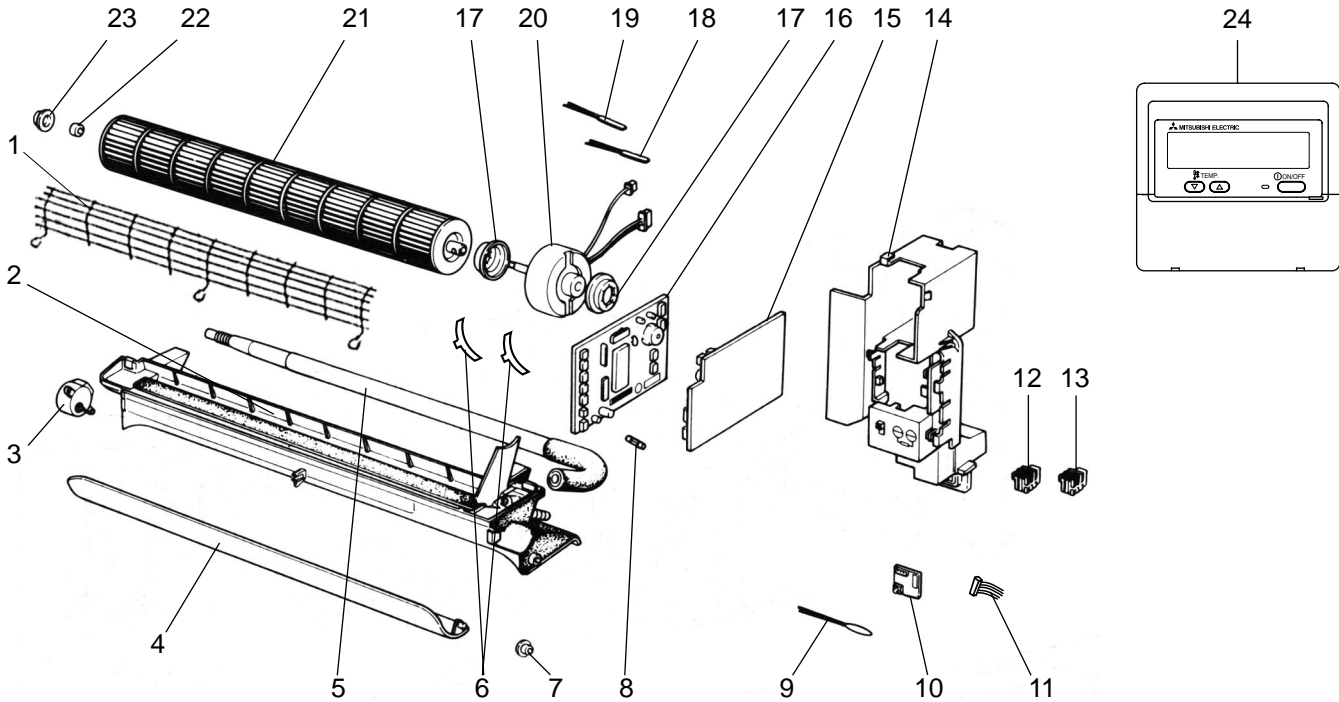

| No. | RoHS | Parts No. | Parts Name | Specifications | Q'ty / set | | Remarks (Drawing No.) | Wiring Diagram Symbol | Recom- mended Q'ty | Price | |
|-----|------|-------------|-----------------------------|-------------------|-------------------|-------------------|--------------------------|-----------------------------|--------------------------|-------|--------|
| | | | | | PKFY- P20VAM-E | PKFY- P25VAM-E | | | | Unit | Amount |
| 1 | G | T7W 23A 675 | FAN GUARD | | 1 | 1 | | | | | |
| 2 | G | R01 23A 530 | NOZZLE | | 1 | 1 | | | | | |
| 3 | G | R01 23A 223 | VANE MOTOR | | 1 | 1 | | MV | | | |
| 4 | G | R01 23A 002 | AUTO VANE | | 1 | 1 | | | | | |
| 5 | G | R01 23A 527 | DRAIN HOSE | | 1 | 1 | | | | | |
| 6 | G | R01 23A 126 | MOTOR BAND | SET (LEFT, RIGHT) | 1 | 1 | | | | | |
| 7 | G | R01 08Y 092 | VANE SLEEVE | | 1 | 1 | | | | | |
| 8 | G | R01 E06 239 | FUSE | 250V 6.3A | 1 | 1 | | FUSE | | | |
| 9 | G | R01 H06 202 | ROOM TEMPERATURE THERMISTOR | | 1 | 1 | | TH21 | | | |
| 10 | G | T7W E01 294 | ADDRESS BOARD | | 1 | 1 | | A.B | | | |
| 11 | G | T7W E04 304 | ADDRESS CABLE | | 1 | 1 | | | | | |
| 12 | G | T7W E33 716 | TERMINAL BLOCK | 2P (M1, M2) | 1 | 1 | | TB5 | | | |
| 13 | G | T7W E34 716 | TERMINAL BLOCK | 3P (L, N, ⊕) | 1 | 1 | | TB2 | | | |
| 14 | G | — | ELECTRICAL BOX | | 1 | 1 | (BG00J285G24) | | | | |
| 15 | G | T7W E28 313 | POWER BOARD | | 1 | 1 | | P.B | | | |
| 16 | G | R01 H94 310 | INDOOR CONTROLLER BOARD | | 1 | 1 | | M.B | | | |
| 17 | G | R01 23A 105 | RUBBER MOUNT | | 2 | 2 | | | | | |
| 18 | G | R01 H14 202 | PIPE TEMPERATURE THERMISTOR | GAS | 1 | 1 | | TH23 | | | |
| 19 | G | R01 H05 202 | PIPE TEMPERATURE THERMISTOR | LIQUID | 1 | 1 | | TH22 | | | |
| 20 | G | T7W 23A 762 | FAN MOTOR | PS4V17-KA | 1 | 1 | | MF | | | |
| 21 | G | R01 23A 114 | LINE FLOW FAN | | 1 | 1 | | | | | |
| 22 | G | R01 E04 103 | SLEEVE BEARING | | 1 | 1 | | | | | |
| 23 | G | R01 23A 102 | BEARING MOUNT | | 1 | 1 | | | | | |
| 24 | G | — | REMOTE CONTROLLER | PAR-21MAA | 1 | 1 | | R.B | | | |

HEAT EXCHANGER PARTS
PKFY-P20VAM-E
PKFY-P25VAM-E

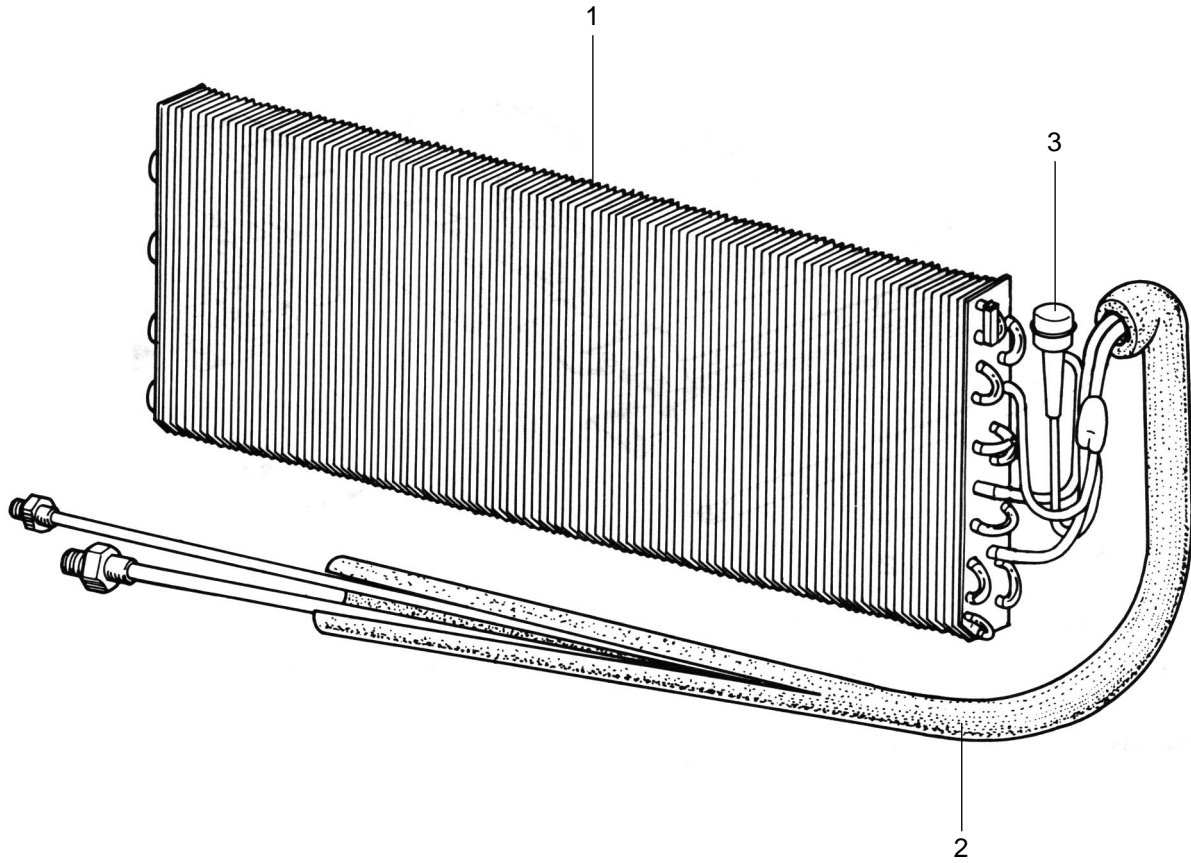

| No. | RoHS | Parts No. | Parts Name | Specifications | Q'ty / set | | Remarks (Drawing No.) | Wiring Diagram Symbol | Recom- mended Q'ty | Price | |
|-----|------|-------------|------------------------|----------------|-------------------|-------------------|--------------------------|-----------------------------|--------------------------|-------|--------|
| | | | | | PKFY- P20VAM-E | PKFY- P25VAM-E | | | | Unit | Amount |
| 1 | G | R01 J37 480 | HEAT EXCHANGER | | 1 | | | | | | |
| | G | R01 J38 480 | HEAT EXCHANGER | | | 1 | | | | | |
| 2 | G | R01 E04 470 | CONNECT PIPE | | 1 | 1 | | | | | |
| 3 | G | R01 H05 401 | LINEAR EXPANSION VALVE | | 1 | 1 | | LEV | | | |

CITY MULTI

 **mitsubishi electric corporation**

HEAD OFFICE : TOKYO BLDG., 2-7-3, MARUNOUCHI, CHIYODA-KU, TOKYO100-8310, JAPAN
