P series	A.1 CEILING CASSETTE (PLA)	A-5	CEILIN
	A.2 WALL-MOUNTED (PKA)	A-139	WALL- MOUNTED
	A.3 CEILING-SUSPENDED (PCA)	A-173	CEILING
	A.4 CEILING-SUSPENDED for Professional kitchen (PCA-HA)	A-237	CEILING SUSPENDED for Kitchen
	A.5 FLOOR-STANDING (PSA)	A-249	FLOOR- STANDING
	A.6 CEILING-CONCEALED (PEAD/PEA)	A-283	CEILING
	A.7 REMOTE CONTROLLER & TROUBLE SHOOTING	A-413	REMOTE CONTROLLER & TROUBLE SHOOTING
	A.8 OUTDOOR UNIT	A-431	OUTDOOR
	A.9 MULTI SYSTEM	A-577	MULTI SYSTEM
S series	B.1 600×600 CEILING CASSETTE (SLZ)	B-3	600×600 CEILING CASSETTE
S series	B.1 600×600 CEILING CASSETTE (SLZ) B.2 CEILING-CONCEALED (SEZ)	B-39	CEILING 600×600 CONCEALED CEILING CASSETTE
S series			
S series	B.2 CEILING-CONCEALED (SEZ)	B-39	CEILING
S series M series	B.2 CEILING-CONCEALED (SEZ) B.3 FLOOR-STANDING(SFZ)	B-39 B-83	FLOOR CEILING STANDING CONCEALED
	B.2 CEILING-CONCEALED (SEZ) B.3 FLOOR-STANDING(SFZ) B.4 OUTDOOR UNIT (SUZ)	B-39 B-83 B-117	OUTDOOR FLOOR CEILING UNIT STANDING CONCEALED
	B.2 CEILING-CONCEALED (SEZ) B.3 FLOOR-STANDING(SFZ) B.4 OUTDOOR UNIT (SUZ) C.1 WALL-MOUNTED	B-39 B-83 B-117 C-5	WALL- OUTDOOR FLOOR CEILING MOUNTED UNIT STANDING CONCEALED
	B.2 CEILING-CONCEALED (SEZ) B.3 FLOOR-STANDING(SFZ) B.4 OUTDOOR UNIT (SUZ) C.1 WALL-MOUNTED C.2 FLOOR-STANDING	B-39 B-83 B-117 C-5 C-551	FLOOR- WALL- OUTDOOR FLOOR CEILING STANDING MOUNTED UNIT STANDING CONCEALED

Major Optional Parts ····· D-3	
Optional parts list D-5	
System control D-17	
-,	
≪ Model Name (Starting from MAC) ≫	
Optional Parts for indoor unit	
MAC-2360FT-E D1-1	MAC-1001CL-E D1-14
MAC-2370FT-E D1-2	MAC-334IF-E
MAC-2380FT-E D1-4	MAC-497IF-E D1-25
MAC-2450FT-E D1-5	MAC-587IF-E D1-33
MAC-2460FT-E D1-6	MAC-1702RA-E D1-37
MAC-2470FT-E D1-7	MAC-1710RA-E D1-37
MAC-2490FT-E D1-9	MAC-SL100M-E D1-39
MAC-1416FT-E D1-10	MAC-1200RC-E D1-40
MAC-3000FT-E D1-11	MAC-1300RC-E D1-41
MAC-3010FT-E D1-12	
MAC-100FT-E D1-13	
Optional Parts for outdoor unit	
MAC-A454JP-E D1-42	MAC-643BH-E D1-55
MAC-A455JP-E D1-43	MAC-644BH-E D1-56
MAC-A456JP-E D1-44	MAC-646BH-E D1-57
MAC-890SG-E D1-45	MAC-892INS-E D1-59
MAC-881SG-E D1-47	MAC-893INS-E D1-62
MAC-882SG D1-49	MAC-001MF-E D1-66
MAC-886SG-E D1-51	MAC-062RA-E D1-68
MAC-883SG D1-52	
MAC-856SG D1-54	

\ll Model Name (Starting from P) \gg

■ Optional Parts for indoor unit

•			
PAC-HA11PAR······	D2-1	SLP-2FALMP2 ······	D2-63
PAC-HA31PAR·····	D2-1	PAC-SH65OF-E·····	D2-64
PAC-HA31PAU······	D2-1	PAC-SF28OF-E	D2-66
PAC-KE92PTB-E······	D2-8	PAC-SJ65AS-E	D2-67
PAC-KE93PTB-E		PAC-SH94DM-E	
PAC-KE94PTB-E	D2-0	PAC-SK19DM-E	D2-73
PAC-KE95PTB-E	D2-8	PAC-SK01DM-E	D2-//
PAC-SK53KF-E·····	D2-12	PAC-SJ92DM-E·····	D2-81
PAC-SK54KF-E·····	D2-12	PAC-SJ93DM-E·····	D2-81
PAC-SK55KF-E·····	D2-12	PAC-SJ94DM-E·····	D2-81
PAC-SK56KF-E·····		PAC-KE07DM-E ·····	D2-87
PAC-SK57KF-E·····	D2-12	PAC-SF81KC-E·····	D2-93
PAC-SG38KF-E·····		PAC-SK38HR-E·····	D2-95
PAC-KE85LAF ·····	D2-16	PAC-SG94HR-E ·····	D2-98
PAC-SH59KF-E·····	D2-18	PAC-SG96HR-E ·····	D2-101
PAC-SH88KF-E·····		PAC-SG97HR-E ·····	D2-102
PAC-SH89KF-E·····	D2-20	PAC-SJ39HR-E	
PAC-SH90KF-E·····	D2-20	PAR-41MAA	
PAC-KE92TB-E·····	D2-21	PAC-YT52CRA······	
PAC-KE93TB-E		PAR-CT01MAA-PB/SB ······	
PAC-KE94TB-E		PAC-SH29TC-E······	
PAC-KE95TB-E······		PAR-SL97A-E	
PAC-KE250TB-F ······	D2-25	PAR-SL101A-E ······	D2-171
PAC-SE1ME-E ······		PAR-SA9CA-E	
PAC-SF1ME-E	D2-21 D2-31	PAR-SF9FA-E	
		PAR-SE9FA-E·····	
PLP-U160ELR-E	D2-33		
PAC-SJ37SP-E ·····	D2-47	PAR-SL94B-E	D2-131
PAC-SK36HK-E	D2-49	PAC-SE41TS-E	
PAC-SJ41TM-E	D2-57	PAC-SE55RA-E······	
PAC-SK51FT-E ·····	D2-62	PAC-SF40RM-E	D2-203
SLP-2FAP	D2-63	PAC-SA88HA-E······	D2-207
SLP-2FALP ·····	D2-63		
■ Optional Parts for outdoor unit			
PAC-SJ87RJ-E·····	D2-226	PAC-SG60DS-E·····	D2-259
PAC-SJ88RJ-E·····	D2-227	PAC-SG61DS-E·····	D2-260
PAC-SG72RJ-E·····		PAC-645BH-E	D2-262
PAC-SG73RJ-E······	D2-229	PAC-646BH-E	D2-265
PAC-SG75RJ-E	D2-230	PAC-SG63DP-E·····	
PAC-SG76RJ-E·····	D2-231	PAC-SG64DP-E·····	
PAC-493PI	D2-232	PAC-SH97DP-E·····	
PAC-SG81DR-E ······		PAC-IF01MNT-E ······	
PAC-SG82DR-E		PAC-SJ95MA-E·····	
PAC-SG85DR-E		PAC-SJ96MA-E······	
PAC-SJ07SG-E		PAC-SK15MA-E	
PAC-SG59SG-E			
		PAC-SK52ST ·····	
PAC-SH96SG-E		PAC (SVE012B E	
PAC-SJ06AG-E		PAC-(S)IF013B-E	
PAC-SH63AG-E		PAC-SJ71FM-E ·······	D2-313
PAC-SH95AG-E ······		PAC-SC36NA-E······	D2-316
PAC-SJ08DS-E	D2-258		

\ll Model Name (Starting from MS**) \gg

■ Optional Parts for indoor unit

MSDD-50TR2-E·····	D2-209
MSDD-50TR-E ·····	D2-211
MSDD-50WR-E	D2-213
MSDD-50WR2-E	D2-215
MSDT-111R3-E	
MSDT-111R-E	
MSDF-1111R2-E	
MSDF-1111R-E	D2-223

Major Optional Parts

Part Name	Description
Plasma Quad Connect High performance air purifying device that effectively removes various kinds of air pollutants and is even installable on the existing indoor unit.	Plasma Quad Connect
Deodorising Filter Captures small foul-smelling substances in the air.	Deodorising filter
Air-cleaning Filter Removes fine dust particles from the air by means of static electricity.	Air-clearing filter
V Blocking Filter Inhibits 99% of adhered virus, and other harmful substances, such as bacteria, mold and allergen.	V Blocking Filter
Silver-ionized Air Purifier Filter Captures the bacteria, pollen and other allergens in the air and neutralises them.	Silver-ionized Air Purifier Filter
Oil Mist Filter Element Filter element (12 pieces) that blocks the oil mist for ceiling-suspended models used in professional kitchens.	Filter frame Filter element
High-efficiency Filter Element Element for high-efficiency filter. Removes fine dust particles from the air.	Plug (for directing airflow) High-efficiancy filter element *For 4-way cassette units (PLA)
3D i-see Sensor Corner Panel for SLZ Corner panel holding the 3D i-see Sensor.	i-see Sensor corner panel
3D Total Flow for PLA Casement equipped with horizontal louver.	
3D i-see Sensor Corner Panel for PLA Corner panel holding the 3D i-see Sensor.	i-see Sensor corner panel
Shutter Plate Plate for blocking an air outlet of the 4-way cassette (PLA) indoor unit.	Shutter Plate

Part Name	Description
Multi-functional Casement Casement for fresh-air intake and attaching the high-efficiency filter element (optional).	Indoor unit body Multi-functional casement
Fresh-air Intake Duct Flange Flange attachment for adding a duct to take in fresh air from outside.	'For 4-way cassette units (PLA)
Space Panel Decorative cover for the installation when the ceiling height is low.	Space Panel Panel
Drain Pump Pumps drain water to a point higher than that where the unit is installed.	*for ceiling-suspended units
Decorative Cover To be attached to the upper section of ceiling- suspended models for professional kitchen use. Helps prevent dust accumulation.	Decorative cover Decorative cover Indoor unit
MA Interface Interface for connecting with the PAR-41MAA remote controller and PAC-YT52CRA.	MA & contact terminal interface
System Control Interface Interface to connect with M-NET controllers.	System control interface
Wi-Fi Interface Interface enabling users to control air conditioners and check operating status via devices such as personal computers, tablets and smartphones.	WiFi interface
Connector Cable This product is an adaptor which inputs the incoming signals from an open/close switch to the air conditioner.	Switch Indoor unit Relay
Power Supply Terminal Kit Terminal bed to change the power supply from outdoor power supply to separate indoor/ outdoor power supplies.	
Wired Remote Controller Advanced deluxe remote controller with full-dot liquid-crystal display and backlight. Equipped with convenient functions like night-setback.	Annu (i)

Part Name	Description
MA Touch Remote Controller Remote controller with the full color touch display. Smartphone/Tublet App is available for setting, customize and control.	BE DEL
Simple Wired Remote Controller Remote controller with liquid-crystal display, and backlight function for operation in dark location.	
Remote Controller Terminal Block	
Kit for PKA The terminal block is used as a relay to wire an indoor unit and to two remote controllers or to wire a remote controller and multiple indoor units in order to perform group control.	
Wireless Remote Controller Signal Sender Handheld unit for sending operation signals to the indoor unit.	Handheld unit
Wireless Remote Controller Signal Receiver Receives operation signals from the wireless remote controller handheld unit.	Signal receiver
Wireless Remote Controller Kit (Sender & Receiver) Remote controller handheld unit (signal sender) and receiver (signal receiver) for ceiling-suspended units.	Signal receiver
Control Holder Holder for storing the remote controller.	Control holder
Remote Sensor Sensor to detect the room temperature at remote positions.	Remote sensor
Remote On/Off Adapter Connector for receiving signals from the local system to control the on/off function.	Remote on/off adapter
Remote Operation Adapter Adapter to display the operation status and control on/off function from a distance.	Remote operation adapter
Connector Cable for Remote Display Connector used to display the operation status and control on/off function from a distance.	Connector cable for remote display Brown Red Orange Yellow Green
Distribution Pipe Branch pipe for P Series simultaneous multisystem use, or to connect two branch boxes for PUMY.	Indoor unit Indoor unit Distribution pipe

Part Name	Description
Joint Pipe Part for connecting refrigerant pipes of different diametres.	Indoor unit Joint pipe Onsite pipe
Liquid Refrigerant Dryer Removes water and minute particles from refrigerant pipes.	
Branch Box Outer Cover Casement for branch boxes.	Complete view Branch box outer cover
Air Discharge Guide Changes the direction of air being exhausted from the outdoor unit.	
Air Protection Guide Protects the outdoor unit from the wind.	
Drain Socket A set of caps to cover unnecessary holes at the bottom of the outdoor unit, and a socket to guide drain water to the local drain pipe.	Cap
Centralised Drain Pan Catches drain water generated by the outdoor unit.	Outdoor unit Centralised drain pan Base (local construction)
M-NET Converter Used to connect P Series A-control models to M-NET controllers.	Croup remote contribution of the contribution
Control/Service Tool Monitoring tool to display operation and self-diagnosis data.	Control/service tool
Step Interface Interface for adjusting the capacity of inverter- equipped outdoor units.	Case interior
High-static Fan Motor Static pressure enhanced up to +30pa.	
	-

Optional Parts List <Indoor>

	Option		lver-ioniz Purifier F				ing Filter		Deodo Fil		Plasma Quad Connect	Soft dry Cloth	Interface		Wi-Fi Interface	Connector Cable	
door Unit		MAC- 2360 FT	MAC- 2370 FT	MAC- 2380 FT	MAC- 2450 FT	MAC- 2460 FT	MAC- 2470 FT	MAC- 2490 FT	MAC- 3000 FT-E	MAC- 3010 FT-E	MAC- 100 FT-E	MAC- 1001 CL-E	MAC- 334 IF-E	MAC- 497 IF-E	MAC- 587 IF-E	MAC- 1702 RA-E	MA 17
Wall-mounted	MSZ-RW25VG			· · ·				•		•		022		•		•	
	MSZ-RW35VG																
	MSZ-RW50VG							•		•			•	•		•	
	MSZ-LN18VG2(W)(V)(R)(B)																
	MSZ-LN25VG2(W)(V)(R)(B)							•		•		•	•	•		•	
	MSZ-LN35VG2(W)(V)(R)(B)																
	MSZ-LN50VG2(W)(V)(R)(B)											•				•	
	MSZ-LN60VG2(W)(V)(R)(B)																
	MSZ-FT25VG														*1		
	MSZ-FT35VG														*1		(
	MSZ-FT50VG										•				*1	•	
	MSZ-AP15VG														*1		-
	MSZ-AP20VG										•				★1		-
	MSZ-AY25VG						*2				*3				*1		-
	MSZ-AY35VG						*2				* 3				★1		
	MSZ-AY42VG						*2				*3				*1		-
	MSZ-AY50VG						*2				* 3		•	•	*1	•	
	MSZ-AP60VG														*1		
	MSZ-AP71VG					•					•		•	•	*1	•	
	MSZ-EF18VG(W)(B)(S)														*1		
	MSZ-EF22VG(W)(B)(S)						•				•	•		•	* 1	•	
	MSZ-EF25VG(W)(B)(S)										•	•			* 1	•	
	MSZ-EF35VG(W)(B)(S)										•	•		•	* 1	•	
	MSZ-EF42VG(W)(B)(S)										•	•			* 1	•	
	MSZ-EF50VG(W)(B)(S)						•				•	•	•	•	● *1	•	
	MSZ-BT20VG										•				● *1	•	
	MSZ-BT25VG						•				•		•	•	*1	•	
	MSZ-BT35VG										•		•	•	* 1	•	
	MSZ-BT50VG						•				•				* 1		
	MSZ-HR25VF										•		•		* 1	•	
	MSZ-HR35VF						•				•		•	•	* 1	•	
	MSZ-HR42VF										•		•	•	* 1	•	
	MSZ-HR50VF						•				•		•	•	*1	•	
	MSZ-HR60VF										•		•	•	* 1	•	
	MSZ-HR71VF						•				•			•	*1		
	MSZ-DW25VF										•			•	*1	•	
	MSZ-DW35VF						•				•			•	*1	•	
	MSZ-DW50VF						•				•		•	•	*1	•	
	MSY-TP35VF						•				•			•	*1	•	
	MSY-TP50VF										•		•	•	* 1	•	
	MSZ-FH25VE2			•					•					•	*1	•	
	MSZ-FH35VE2			•					•				•	•	*1	•	
	MSZ-FH50VE2								•					•	*1	•	
	MSZ-SF15VA										•			•	* 1		\vdash
	MSZ-SF20VA										•		•		*1		
	MSZ-SF25VE3														0*1		
	MSZ-SF35VE3		•								•		•		*1		-
	MSZ-SF42VE3														* 1		
	MSZ-SF50VE3														*1		
	MSZ-GF60VE2														* 1		
	MSZ-GF71VE2										•				*1		
	MSZ-WN25VA														*1	•	
	MSZ-WN35VA														* 1		
	MSZ-VNN35VA MSZ-DM25VA																-
	MSZ-DM25VA MSZ-DM35VA														*1 *1		
	MSZ-DM35VA MSZ-HJ25VA		•								•			•	*1		
			•														
	MSZ-HJ35VA		•														
	MSZ-HJ50VA		•													•	
	MSZ-HJ60VA		•													•	
Tloor	MSZ-HJ71VA		•												-	0	
Floor- Standing	MFZ-KT25VG		•				•						•	•	*1		
o.a.i.a.ii.g	MFZ-KT35VG														* 1		
	MFZ-KT50VG		•				•						•	•	★1	•	
	MFZ-KT60VG														*1		
	MFZ-KW25VG		•				•						•	•	*1	•	
	MFZ-KW35VG														*1		
	MFZ-KW50VG		•											•	*1	•	
	MFZ-KW60VG														*1		
1-way	MLZ-KP25VF		•				•							•	● *1	•	
Cassette	MLZ-KP35VF		•											•	*1		
	MLZ-KP50VF		•				•						•	•	*1	•	
	MLZ-KY20VG		•				•						•	•	*1	•	

^{*1} Outside attachment only.
*2 Equipped as standard for VGK model
*3 Plasma quad plus is equipped as standard for VGKP model

Wired Remote Controller Wireless Controller Contr	
Indoor Unit	
Wall-mounted MSZ-RW35VG	MAC- 1300
MSZ-RWSOVG MSZ-LNSVG(W)(V)(R)(B) MSZ-LNSVG2(W)(V)(R)(B) MSZ-LNSSVG2(W)(V)(R)(B) MSZ-LNSSVG MSZ-FTSSVG MSZ-FTSSVG MSZ-FTSSVG MSZ-FTSSVG MSZ-FTSSVG MSZ-FTSSVG MSZ-AP15VG MSZ-AP20VG MSZ-AY25VG	RC-E
MSZ-RYSOVG MSZ-LN18VG2(W)(V)(R)(B) MSZ-LN3SVG2(W)(V)(R)(B) MSZ-LN3SVG2(W)(V)(R)(B) MSZ-LN3SVG2(W)(V)(R)(B) MSZ-LN3SVG2(W)(V)(R)(B) MSZ-LN3SVG2(W)(V)(R)(B) MSZ-LN3SVG2(W)(V)(R)(B) MSZ-LN3SVG2(W)(V)(R)(B) MSZ-LN3SVG MSZ-FT3SVG MSZ-FT3SVG MSZ-FT3SVG MSZ-FT3SVG MSZ-FT3SVG MSZ-FT3SVG MSZ-AP18VG MSZ-AP18VG MSZ-AP20VG MSZ-AP20VG MSZ-AP20VG MSZ-AP20VG MSZ-AP20VG MSZ-AP20VG MSZ-AP20VG MSZ-AP3VG MSZ-BSZ-PGVGW)(B)(S) MSZ-EF22VG(W)(B)(S) MSZ-EF22VG(W)(B)(S) MSZ-EF3XVG(W)(B)(S) MSZ-EF3XVG MSZ-BSZ-BSVG MSZ-BSZ-BSZ-BSVG MSZ-BSZ-BSZ-BSZ-BSZ-BSZ-BSZ-BSZ-BSZ-BSZ-B	•
MSZ-LN18VG2(W)(V)(R)(B) MSZ-LN2SVG2(W)(V)(R)(B) MSZ-LN50VG2(W)(V)(R)(B) MSZ-LN50VG2(W)(V)(R)(B) MSZ-LN50VG2(W)(V)(R)(B) MSZ-LN50VG2(W)(V)(R)(B) MSZ-LN50VG2(W)(V)(R)(B) MSZ-LN50VG2(W)(V)(R)(B) MSZ-LN50VG2(W)(V)(R)(B) MSZ-FT35VG MSZ-FT35VG MSZ-FT35VG MSZ-FT35VG MSZ-FT35VG MSZ-AP15VG MSZ-AP20VG MSZ-AP20VG MSZ-AY35VG MSZ-AY35VG MSZ-AY35VG MSZ-AY35VG MSZ-AY35VG MSZ-AY35VG MSZ-AY35VG MSZ-AY35VG MSZ-AY35VG MSZ-AP35VG MSZ-AP35VG MSZ-AP35VG MSZ-AP35VG MSZ-AP35VG MSZ-AP35VG MSZ-EF35VG(W)(B)(S) MSZ-EF35VG(W)(B)(S) MSZ-EF35VG(W)(B)(S) MSZ-EF35VG(W)(B)(S) MSZ-EF35VG(W)(B)(S) MSZ-EF35VG MSZ-BT35VG MSZ-BT30VG MSZ-BT35VG MSZ-BT35VG MSZ-BT30VG	•
MSZ-LN35VG2(W)(V)(R)(B) MSZ-LN35VG2(W)(V)(R)(B) MSZ-LN35VG2(W)(V)(R)(B) MSZ-LN36VG2(W)(V)(R)(B) MSZ-LN36VG2(W)(V)(R)(B) MSZ-LN36VG2(W)(V)(R)(B) MSZ-LN36VG2(W)(V)(R)(B) MSZ-T752VG MSZ-T752VG MSZ-T753VG MSZ-T753VG MSZ-AP15VG MSZ-AP15VG MSZ-AP20VG MSZ-AY25VG MSZ-AY35VG MSZ-AY35VG MSZ-AY35VG MSZ-AY50VG MSZ-AY50VG MSZ-AY50VG MSZ-AP60VG MSZ-EF12VG(W)(B)(S) MSZ-EF12VG(W) M	* 3
MSZ-LNSSVG2(W)(V)(R)(B) MSZ-LNSOVG2(W)(V)(R)(B) MSZ-LNSOVG2(W)(V)(R)(B) MSZ-LNSOVG2(W)(V)(R)(B) MSZ-FT3SVG MSZ-FT3SVG MSZ-FT3SVG MSZ-FT3SVG MSZ-FT3SVG MSZ-AP15VG MSZ-AP15VG MSZ-AP2VG MSZ-AP2VG MSZ-AY2SVG MSZ-AY2SVG MSZ-AY2VG MSZ-AY4VG MSZ-AY4VG MSZ-AY5VG MSZ-AY4VG MSZ-AP71VG MSZ-AP71VG MSZ-AP71VG MSZ-EF2VG(W)(B)(S) MSZ-EF2VG(W)(B)(S) MSZ-EF2VG(W)(B)(S) MSZ-EF2VG(W)(B)(S) MSZ-EF2VG(W)(B)(S) MSZ-EF3VG(W)(B)(S) MSZ-EF3VG(W)(B)(S) MSZ-EF3VG(W)(B)(S) MSZ-EF3VG(W)(B)(S) MSZ-EF3VG MSZ-BY3VG MSZ-B	* 3
MSZ-HR30VG2(W)(V)(R)(B) MSZ-FT35VG MSZ-FT35VG MSZ-AP15VG MSZ-AP15VG MSZ-AP15VG MSZ-AP20VG MSZ-AY25VG MSZ-AY25VG MSZ-AY25VG MSZ-AY25VG MSZ-AY25VG MSZ-AY25VG MSZ-AY20VG MSZ-AP71VG MSZ-EF18VG(W)(B)(S) MSZ-EF18VG(W)(B)(S) MSZ-EF18VG(W)(B)(S) MSZ-EF18VG(W)(B)(S) MSZ-EF25VG(W)(B)(S) MSZ-EF25VG(W)(B)(S) MSZ-EF35VG(W)(B)(S) MSZ-EF35VG(W)(B)(S) MSZ-EF35VG(W)(B)(S) MSZ-EF35VG(W)(B)(S) MSZ-BT35VG MSZ-BT35VG MSZ-BT35VG MSZ-BT35VG MSZ-BT35VG MSZ-BT35VG MSZ-HR35VF MSZ-HR35VF MSZ-HR35VF MSZ-HR35VF MSZ-HR30VF	* 3
MSZ-FT25VG MSZ-FT35VG MSZ-AP15VG MSZ-AP15VG MSZ-AP15VG MSZ-AP20VG MSZ-AY25VG MSZ-AY35VG MSZ-AY35VG MSZ-AY35VG MSZ-AY35VG MSZ-AY35VG MSZ-AY42VG MSZ-AP60VG MSZ-AP60VG MSZ-AP60VG MSZ-AP60VG MSZ-AP60VG MSZ-EF18VG(W)(B)(S) MSZ-EF25VG(W)(B)(S) MSZ-EF25VG(W)(B)(S) MSZ-EF25VG(W)(B)(S) MSZ-EF25VG(W)(B)(S) MSZ-EF25VG(W)(B)(S) MSZ-EF35VG(W)(B)(S) MSZ-EF35VG MSZ-BT20VG MSZ-BT35VG MSZ-BT35VG MSZ-BT35VG MSZ-BT35VG MSZ-BT35VG MSZ-BT35VG MSZ-HR35VF MSZ-HR30VF MSZ-HR30VF MSZ-HR35VF MSZ-HR30VF MSZ	● *3
MSZ-FT35VG MSZ-AP15VG MSZ-AP20VG MSZ-AP20VG MSZ-AP25VG MSZ-AY25VG MSZ-AY35VG MSZ-AY32VG MSZ-AY32VG MSZ-AY32VG MSZ-AY32VG MSZ-AY32VG MSZ-AY32VG MSZ-AY32VG MSZ-AY32VG MSZ-AP20VG MSZ-AP20VG MSZ-AP20VG MSZ-AP20VG MSZ-AP20VG MSZ-AP20VG MSZ-EF18VG(W)(B)(S) MSZ-EF18VG(W)(B)(S) MSZ-EF18VG(W)(B)(S) MSZ-EF25VG(W)(B)(S) MSZ-EF25VG(W)(B)(S) MSZ-EF25VG(W)(B)(S) MSZ-EF35VG MSZ-BT35VG MSZ-HR25VF MSZ-HR25VF MSZ-HR25VF MSZ-HR25VF MSZ-HR25VF MSZ-HR25VF MSZ-HR25VF MSZ-HR35VF MSZ-BT35VG MSZ-BT35VG MSZ-BT35VG MSZ-BT35VG MSZ-BT35VG MSZ-HR35VF MSZ-HR35VF MSZ-HR35VF MSZ-HR35VF MSZ-BT35VG M	*3
MSZ-PT50VG MSZ-AP15VG MSZ-AP20VG MSZ-AY25VG MSZ-AY25VG MSZ-AY25VG MSZ-AY35VG MSZ-AY35VG MSZ-AY5VG MSZ-AP60VG MSZ-AY6VG MSZ-AP60VG MSZ-BY1VG MSZ-EF3VG(W)(B)(S) MSZ-EF3VG(W)(B)(S) MSZ-EF3VG(W)(B)(S) MSZ-EF3VG(W)(B)(S) MSZ-EF3VG(W)(B)(S) MSZ-EF3VG(W)(B)(S) MSZ-EF3VG(W)(B)(S) MSZ-EF3VG(W)(B)(S) MSZ-EF3VG(W)(B)(S) MSZ-BY3VG MSZ-B	•
MSZ-AP20VG MSZ-AY25VG MSZ-AY35VG MSZ-AY35VG MSZ-AY35VG MSZ-AY50VG MSZ-AY50VG MSZ-AY50VG MSZ-AY50VG MSZ-AY50VG MSZ-AP60VG MSZ-AP60VG MSZ-AP71VG MSZ-EP2VG(W)(B)(S) MSZ-EP2VG(W)(B)(S) MSZ-EP2VG(W)(B)(S) MSZ-EP2VG(W)(B)(S) MSZ-EP2VG(W)(B)(S) MSZ-EP25VG(W)(B)(S) MSZ-EP25VG(W)(B)(S) MSZ-EP25VG(W)(B)(S) MSZ-EP25VG(W)(B)(S) MSZ-EP25VG(W)(B)(S) MSZ-EP25VG(W)(B)(S) MSZ-EP25VG MSZ-BT35VG MSZ-BT35VG MSZ-BT35VG MSZ-BT35VG MSZ-BT35VG MSZ-BT35VG MSZ-BT35VG MSZ-HR50VF MSZ-H	•
MSZ-AY25VG MSZ-AY35VG MSZ-AY35VG MSZ-AY60VG MSZ-AY60VG MSZ-AP60VG MSZ-AP60VG MSZ-EP18VG(W)(B)(S) MSZ-EP18VG(W)(B)(S) MSZ-EP18VG(W)(B)(S) MSZ-EP25VG(W)(B)(S) MSZ-EP25VG(W)(B)(S) MSZ-EP25VG(W)(B)(S) MSZ-EP25VG(W)(B)(S) MSZ-EP25VG(W)(B)(S) MSZ-EP25VG(W)(B)(S) MSZ-EP25VG(W)(B)(S) MSZ-EP25VG(W)(B)(S) MSZ-EP25VG(W)(B)(S) MSZ-BT35VG MSZ-BT35VG MSZ-BT35VG MSZ-BT35VG MSZ-BT35VG MSZ-BT35VG MSZ-BT35VG MSZ-HR25VF MSZ-HR25VF MSZ-HR25VF MSZ-HR25VF MSZ-HR25VF MSZ-HR25VF MSZ-HR25VF MSZ-HR25VF MSZ-HR25VF MSZ-HR35VF MSZ-HR30VF MSZ-HR35VF MSZ-HR35VA MSZ-HR35VA MSZ-HR35VA MSZ-DM35VA MSZ-DM35VA MSZ-DM35VA MSZ-DM35VA MSZ-DM35VA	•
MSZ-AY35VG MSZ-AY60VG MSZ-AP60VG MSZ-AP60VG MSZ-AP60VG MSZ-EP60VG MSZ-EP60VG MSZ-EF60VG(W)(B)(S) MSZ-BF60VG MSZ-BF60V	•
MSZ-AY42VG MSZ-AY50VG MSZ-AP70VG MSZ-AP71VG MSZ-AP71VG MSZ-EF18VG(W)(B)(S) MSZ-EF2CVG(W)(B)(S) MSZ-EF2CVG(W)(B)(S) MSZ-EF2CVG(W)(B)(S) MSZ-EF3SVG(W)(B)(S) MSZ-EF3SVG(W)(B)(S) MSZ-EF3SVG(W)(B)(S) MSZ-EF3SVG(W)(B)(S) MSZ-EF3SVG(W)(B)(S) MSZ-BT35VG MSZ-BT35VG MSZ-BT35VG MSZ-BT35VG MSZ-BT35VG MSZ-HR25VF MSZ-HR35VF MSZ-HZ35VF MSZ-HZ35VA MSZ-HZ3	
MSZ-AY50VG MSZ-AP60VG MSZ-AP71VG MSZ-EF18VG(W)(B)(S) MSZ-EF18VG(W)(B)(S) MSZ-EF26VG(W)(B)(S) MSZ-EF26VG(W)(B)(S) MSZ-EF26VG(W)(B)(S) MSZ-EF3VG(W)(B)(S) MSZ-EF42VG(W)(B)(S) MSZ-EF42VG(W)(B)(S) MSZ-EF42VG(W)(B)(S) MSZ-EF50VG(W)(B)(S) MSZ-EF50VG(W)(B)(S) MSZ-BT20VG MSZ-BT20VG MSZ-BT20VG MSZ-BT35VG MSZ-BT35VG MSZ-BT35VG MSZ-BT50VG MSZ-HR50VF MSZ-HR85VF MSZ-HR85VF MSZ-HR85VF MSZ-HR85VF MSZ-HR85VF MSZ-HR80VF MSZ-HR80VF MSZ-HR71VF MSZ-HR71VF MSZ-DW35VF MSZ-DW35VF MSZ-DW35VF MSZ-DW50VF MSZ-DW50VF MSZ-DW50VF MSZ-DW50VF MSZ-DW50VF MSZ-P50VG MSZ-F15VA MSZ-F15VA MSZ-F15VA MSZ-F15VA MSZ-SF20VA MSZ-SF20VA MSZ-SF35VE3 MSZ-SF35VE3 MSZ-SF30VE3 MSZ-WN35VA MSZ-DW35VA	•
MSZ-AP60VG MSZ-AP71VG MSZ-EF18VG(W)(B)(S) MSZ-EF22VG(W)(B)(S) MSZ-EF22VG(W)(B)(S) MSZ-EF25VG(W)(B)(S) MSZ-EF25VG(W)(B)(S) MSZ-EF35VG(W)(B)(S) MSZ-EF35VG(W)(B)(S) MSZ-EF30VG(W)(B)(S) MSZ-EF30VG(W)(B)(S) MSZ-EF30VG(W)(B)(S) MSZ-BT20VG MSZ-BT20VG MSZ-BT20VG MSZ-BT35VG MSZ-BT35VG MSZ-BT35VG MSZ-HR35VF MSZ-HR35VF MSZ-HR35VF MSZ-HR30VF MSZ-HR40VF MSZ-HR50VF MSZ-HR50VF MSZ-HR50VF MSZ-HR50VF MSZ-HR50VF MSZ-HR50VF MSZ-HR50VF MSZ-HR50VF MSZ-HR50VF MSZ-HR50VF MSZ-HR50VF MSZ-HR50VF MSZ-HR50VF MSZ-HR50VF MSZ-HR50VF MSZ-HR50VF MSZ-HR50VF MSZ-HR50VF MSZ-HR50VF MSZ-HR50VF MSZ-HR50VF	•
MSZ-AP71VG MSZ-EF18VG(W)(B)(S) MSZ-EF2CVG(W)(B)(S) MSZ-EF2SVG(W)(B)(S) MSZ-EF3SVG(W)(B)(S) MSZ-EF3SVG(W)(B)(S) MSZ-EF3SVG(W)(B)(S) MSZ-EF3SVG(W)(B)(S) MSZ-EF3SVG(W)(B)(S) MSZ-EF3SVG(W)(B)(S) MSZ-EF3SVG(W)(B)(S) MSZ-BT2OVG MSZ-BT2OVG MSZ-BT2OVG MSZ-BT2OVG MSZ-BT3SVG MSZ-BT3SVG MSZ-BT3SVG MSZ-BT3SVG MSZ-HR50VF MSZ-HR35VF MSZ-HR35VF MSZ-HR35VF MSZ-HR42VF MSZ-HR50VF MSZ-HR50VE MSZ-HR50VF MSZ-HR50VF MSZ-HR50VF MSZ-HR50VF MSZ-HR50VF MSZ-HR50VF MSZ-HR50VF MSZ-HR50VE MSZ-HR50VF MSZ-HR50VE MSZ-HR50VE MSZ-FH50VE2 MSZ-FH50VE3 MSZ-SF40VE3 MSZ-SF40VE3 MSZ-SF40VE3 MSZ-SF50VE3 MSZ-SF50VE3 MSZ-SF50VE3 MSZ-SF50VE3 MSZ-SF50VE3 MSZ-SF50VE3 MSZ-SF50VE3 MSZ-SF50VE3 MSZ-MN3SVA MSZ-WN3SVA	•
MSZ-EF18VG(W)(B)(S) MSZ-EF2SVG(W)(B)(S) MSZ-EF2SVG(W)(B)(S) MSZ-EF2SVG(W)(B)(S) MSZ-EF35VG(W)(B)(S) MSZ-EF35VG(W)(B)(S) MSZ-EF35VG(W)(B)(S) MSZ-EF35VG(W)(B)(S) MSZ-BT20VG MSZ-BT20VG MSZ-BT25VG MSZ-BT35VG MSZ-BT35VG MSZ-BT35VG MSZ-BT35VG MSZ-HR35VF MSZ-HR35VF MSZ-HR35VF MSZ-HR35VF MSZ-HR30VF MSZ-HR60VF MSZ-WR60VF MSZ-WR	-
MSZ-EF22VG(W)(B)(S) MSZ-EF35VG(W)(B)(S) MSZ-EF35VG(W)(B)(S) MSZ-EF35VG(W)(B)(S) MSZ-EF50VG(W)(B)(S) MSZ-EF50VG(W)(B)(S) MSZ-EF50VG(W)(B)(S) MSZ-BT20VG MSZ-BT20VG MSZ-BT25VG MSZ-BT35VG MSZ-BT35VG MSZ-BT35VG MSZ-HR35VF MSZ-HR35VF MSZ-HR35VF MSZ-HR35VF MSZ-HR30VF MSZ-HR42VF MSZ-HR50VF MSZ-DW50VF MSZ-DW50VF MSZ-DW50VF MSZ-DW50VF MSZ-DW50VF MSZ-DW50VF MSZ-F15VA MSZ-F15VA MSZ-F15VA MSZ-F15VA MSZ-SF20VA MSZ-SF35VE3 MSZ-SF35VE3 MSZ-SF50VE3 MSZ-SF50VE3 MSZ-SF50VE3 MSZ-GF60VE2 MSZ-WN25VA MSZ-WN35VA MSZ-DM35VA MSZ-DM35VA MSZ-DM35VA	•
MSZ-EF35VG(W)(B)(S) MSZ-EF42VG(W)(B)(S) MSZ-EF50VG(W)(B)(S) MSZ-BT20VG MSZ-BT25VG MSZ-BT35VG MSZ-BT35VG MSZ-BT35VG MSZ-BT35VG MSZ-HR25VF MSZ-HR25VF MSZ-HR42VF MSZ-HR42VF MSZ-HR50VF MSZ-HR60VF MSZ-HR71VF MSZ-DW35VF MSZ-DW35VF MSZ-DW35VF MSZ-DW35VF MSZ-DW50VF MSZ-BT50VG MSZ-BT50VG MSZ-BT50VG MSZ-BT50VG MSZ-HR50VF MSZ-HR50VF MSZ-HR50VF MSZ-HR50VF MSZ-HR50VF MSZ-HR50VF MSZ-BT50VG MSZ	•
MSZ-EF42VG(W)(B)(S)	
MSZ-BT20VG (W)(B)(S)	•
MSZ-BT20VG MSZ-BT25VG MSZ-BT35VG MSZ-BT35VG MSZ-BT50VG MSZ-HR25VF MSZ-HR35VF MSZ-HR35VF MSZ-HR42VF MSZ-HR50VF MSZ-HR60VF MSZ-HR60VF MSZ-HR70VF MSZ-DW25VF MSZ-DW35VF MSZ-F15VF MSZ-F15VA MSZ-F15VA MSZ-F15VA MSZ-SF15VA MSZ-	•
MSZ-BT25VG MSZ-BT35VG MSZ-BT50VG MSZ-HR25VF MSZ-HR35VF MSZ-HR42VF MSZ-HR42VF MSZ-HR60VF MSZ-HR60VF MSZ-HR60VF MSZ-HR71VF MSZ-HR71VF MSZ-DW35VF MSZ-DW35VF MSZ-DW35VF MSZ-DW35VF MSZ-F15VA MSZ-F15VA MSZ-SF35VE3 MSZ-SF35VE3 MSZ-SF35VE3 MSZ-SF30VE3 MSZ-SF30VE3 MSZ-SF30VE3 MSZ-SF30VE3 MSZ-SF30VE3 MSZ-GF60VE2 MSZ-WN35VA MSZ-WN35VA MSZ-WN35VA MSZ-WSSVA MSZ-WSSVA MSZ-GF10VE2 MSZ-SF15VA MSZ-SF30VE3 MSZ-WN25VA MSZ-WN25VA MSZ-WN35VA MSZ-WN35VA MSZ-WN35VA MSZ-WN35VA MSZ-DM35VA	_
MSZ-BT35VG MSZ-BT50VG MSZ-HR25VF MSZ-HR35VF MSZ-HR42VF MSZ-HR50VF MSZ-HR60VF MSZ-HR60VF MSZ-HR71VF MSZ-DW25VF MSZ-DW25VF MSZ-DW25VF MSZ-DW25VF MSZ-DW50VF MSZ-BT50VA MSZ-FH25VE2 MSZ-FH35VE2 MSZ-FH35VE2 MSZ-FH35VE2 MSZ-SF15VA MSZ-SF25VE3 MSZ-SF25VE3 MSZ-SF25VE3 MSZ-SF25VE3 MSZ-SF35VE3 MSZ-SF35VE3 MSZ-SF35VE3 MSZ-SF50VE3 MSZ-SF50VE3 MSZ-GF60VE2 MSZ-GF60VE2 MSZ-GF71VE2 MSZ-WN25VA MSZ-WN25VA MSZ-WN25VA MSZ-WN25VA MSZ-WN25VA MSZ-DW35VA	
MSZ-BT50VG MSZ-HR25VF MSZ-HR35VF MSZ-HR42VF MSZ-HR50VF MSZ-HR60VF MSZ-HR60VF MSZ-HR71VF MSZ-DW25VF MSZ-DW25VF MSZ-DW25VF MSZ-DW50VF MSZ-TH50VCP MSZ-FH25VE2 MSZ-FH25VE2 MSZ-FH35VE2 MSZ-FH35VE2 MSZ-FH35VE2 MSZ-SF15VA MSZ-SF25VE3 MSZ-SF25VE3 MSZ-SF25VE3 MSZ-SF25VE3 MSZ-SF35VE3 MSZ-	
MSZ-HR35VF MSZ-HR42VF MSZ-HR60VF MSZ-HR60VF MSZ-HR71VF MSZ-DW25VF MSZ-DW35VF MSZ-DW50VF MSZ-DW50VF MSZ-DW50VF MSZ-F15VF MSZ-F1	
MSZ-HR42VF MSZ-HR50VF MSZ-HR60VF MSZ-HR71VF MSZ-DW25VF MSZ-DW35VF MSZ-DW35VF MSZ-DW35VF MSZ-DW50VF MSZ-DW50VF MSZ-DW50VF MSZ-DW50VF MSZ-DW50VF MSZ-DW50VF MSZ-DW50VF MSZ-DW50VF MSZ-F15VF MSZ-F15VF MSZ-F15VF MSZ-F15VA MSZ-SF50VF MSZ-	
MSZ-HR50VF MSZ-HR60VF MSZ-HR71VF MSZ-DW25VF MSZ-DW35VF MSZ-DW35VF MSZ-DW50VF MSZ-F15VF MSZ-F15VF MSZ-F15VF MSZ-F15VA MSZ-SF15VA MSZ-SF15VA MSZ-SF15VA MSZ-SF20VA MSZ-SF20VB MSZ-WN25VA MSZ-WN25VA MSZ-WN35VA MSZ-WN35VA MSZ-DM35VA MSZ-DM35VA MSZ-DM35VA	
MSZ-HR60VF MSZ-HR71VF MSZ-DW25VF MSZ-DW35VF MSZ-DW35VF MSZ-DW50VF MSZ-DW50VF MSZ-TP35VF MSY-TP35VF MSZ-FH25VE2 MSZ-FH25VE2 MSZ-FH50VE2 MSZ-FH50VE2 MSZ-SF15VA MSZ-SF25VE3 MSZ-SF25VE3 MSZ-SF35VE3 MSZ-SF35VE3 MSZ-SF35VE3 MSZ-SF30VE3 MSZ-	
MSZ-HR71VF MSZ-DW25VF MSZ-DW35VF MSZ-DW35VF MSZ-DW50VF MSY-TP35VF MSY-TP50VF MSY-TP50VF MSZ-FH25VE2 MSZ-FH35VE2 MSZ-FH35VE2 MSZ-FH50VE2 MSZ-SF15VA MSZ-SF25VE3 MSZ-SF25VE3 MSZ-SF35VE3 MSZ	
MSZ-DW25VF MSZ-DW35VF MSZ-DW50VF MSZ-DW50VF MSY-TP35VF MSY-TP50VF MSY-TP50VF MSZ-FH25VE2 MSZ-FH35VE2 MSZ-FH35VE2 MSZ-FH50VE2 MSZ-SF15VA MSZ-SF15VA MSZ-SF25VB3 MSZ-SF25VB3 MSZ-SF35VE3 MSZ-WN25VA MSZ-WN35VA MSZ-WN35VA MSZ-WN35VA MSZ-DM35VA MSZ-DM35VA MSZ-DM35VA	
MSZ-DW50VF MSY-TP35VF MSY-TP50VF MSY-TP50VF MSZ-FH25VE2 MSZ-FH35VE2 MSZ-FH50VE2 MSZ-SF15VA MSZ-SF15VA MSZ-SF20VA MSZ-SF25VE3 MSZ-SF25VE3 MSZ-SF35VE3 MSZ-WN25VA MSZ-WN25VA MSZ-WN35VA MSZ-WN35VA MSZ-WN35VA MSZ-DM35VA MSZ-DM35VA MSZ-DM35VA MSZ-DM35VA	
MSZ-DW50VF MSY-TP35VF MSY-TP50VF MSY-TP50VF MSZ-FH25VE2 MSZ-FH35VE2 MSZ-FH50VE2 MSZ-SF15VA MSZ-SF15VA MSZ-SF20VA MSZ-SF25VE3 MSZ-SF25VE3 MSZ-SF35VE3 MSZ-WN25VA MSZ-WN25VA MSZ-WN35VA MSZ-WN35VA MSZ-WN35VA MSZ-DM35VA MSZ-DM35VA MSZ-DM35VA MSZ-DM35VA	
MSY-TP50VF MSZ-FH25VE2 MSZ-FH35VE2 MSZ-FH50VE2 MSZ-SF15VA MSZ-SF15VA MSZ-SF25VA MSZ-SF25VA MSZ-SF25VB3 MSZ-SF35VE3 MSZ-SF35VE3 MSZ-SF42VE3 MSZ-SF42VE3 MSZ-SF50VE3 MSZ-WN25VA MSZ-WN25VA MSZ-WN35VA MSZ-WN35VA MSZ-WN35VA MSZ-WN35VA MSZ-DM35VA MSZ-DM35VA MSZ-DM35VA	
MSZ-FH25VE2 MSZ-FH35VE2 MSZ-FH50VE2 MSZ-SF15VA MSZ-SF25VA MSZ-SF25VE3 MSZ-SF35VE3 MSZ-SF42VE3 MSZ-SF50VE3 MSZ-SF50VE3 MSZ-GF60VE2 MSZ-GF71VE2 MSZ-WN25VA MSZ-WN25VA MSZ-WN35VA MSZ-DM25VA MSZ-DM35VA MSZ-DM35	
MSZ-FH35VE2 MSZ-FH50VE2 MSZ-SF15VA MSZ-SF25VE3 MSZ-SF25VE3 MSZ-SF35VE3 MSZ-SF42VE3 MSZ-SF42VE3 MSZ-SF50VE3 MSZ-SF50VE3 MSZ-GF60VE2 MSZ-GF71VE2 MSZ-WN25VA MSZ-WN25VA MSZ-WN35VA MSZ-DM35VA	
MSZ-FH50VE2 MSZ-SF15VA MSZ-SF20VA MSZ-SF25VE3 MSZ-SF25VE3 MSZ-SF35VE3 MSZ-SF35VE3 MSZ-SF30VE3 MSZ-SF42VE3 MSZ-SF30VE3 MSZ-GF60VE2 MSZ-GF71VE2 MSZ-WN25VA MSZ-WN35VA MSZ-DM25VA MSZ-DM25VA MSZ-DM35VA	•
MSZ-SF15VA	
MSZ-SF25VE3 MSZ-SF35VE3 MSZ-SF35VE3 MSZ-SF36VE3 MSZ-SF50VE3 MSZ-GF60VE2 MSZ-GF60VE2 MSZ-GF71VE2 MSZ-WN25VA MSZ-WN35VA MSZ-WN35VA MSZ-DM25VA MSZ-DM25VA MSZ-DM35VA	•
MSZ-SF35VE3 MSZ-SF42VE3 MSZ-SF50VE3 MSZ-GF60VE2 MSZ-GF71VE2 MSZ-WN25VA MSZ-WN35VA MSZ-WN35VA MSZ-DM25VA MSZ-DM35VA	
MSZ-SF42VE3 MSZ-SF50VE3 MSZ-GF60VE2 MSZ-GF71VE2 MSZ-WN25VA MSZ-WN35VA MSZ-DM25VA MSZ-DM35VA	
MSZ-SF50VE3 MSZ-GF60VE2 MSZ-GF60VE2 MSZ-GF71VE2 MSZ-WN25VA MSZ-WN35VA MSZ-DM25VA MSZ-DM35VA	•
MSZ-GF60VE2 MSZ-GF71VE2 MSZ-WN25VA MSZ-WN35VA MSZ-DM25VA MSZ-DM35VA	•
MSZ-GF71VE2 MSZ-WN25VA MSZ-WN35VA MSZ-DM25VA MSZ-DM35VA MSZ-DM35VA MSZ-DM35VA MSZ-DM35VA MSZ-DM35VA MSZ-DM35VA MSZ-DM35VA MSZ-DM35VA	•
MSZ-WN25VA	
MSZ-DM25VA	•
MSZ-DM35VA	•
LIVIOC-TI JCDVA	
MSZ-HJ35VA	
MSZ-HJ50VA	
MSZ-HJ60VA	
MSZ-HJ71VA	
Floor- MFZ-KT25VG	
IVII Z-IKTSSVG	•
MFZ-KT50VG	•
MFZ-KT60VG	•
MFZ-KW35VG	•
MFZ-KW50VG	•
MFZ-KW60VG	
1-way MLZ-KP25VF	•
Cassette MLZ-KP35VF	•
MLZ-KP50VF	•
*1 Either MAC-334IF-E or MAC-497IF-E is required. Up to two wired remote controllers can be c	

^{*1} Either MAC-334IF-E or MAC-497IF-E is required. Up to two wired remote controllers can be connected at the same time.

*2 Either MAC-334IF-E or MAC-497IF-E is required. Only one wired remote controller can be connected.

*3 Available only for LN18/25/35/50/60VG2W.

*4 Available only for LN18/25/35/50/60VG2B/R/V.

$\overline{}$		Option									Fil	ter										
		Орион	Oil Mist	Long	1											1						
				Filter Life High-efficiency Filter Element						V Blocking Filter							Filter Box					
				Filter		s 40 47 40			8 *1 *2 *3 *4													
			D4.0	B. 6	*5	*6	*7	*8		DA O	*2	*3				DA C	D4.0	B4.0	B4.0	B4.0		
			PAC- SG38	PAC- KE85	PAC- SH59	PAC- SH88	PAC- SH89	PAC- SH90	PAC- SK53	PAC- SK54	PAC- SK55	PAC- SK56	PAC- SK57	MAC- 2470	MAC- 1416	PAC- KE92	PAC- KE93	PAC- KE94	PAC- KE95	PAC- KE250		
Inc	door Unit		KF-E	LAF	KF-E	KF-E	KF-E	KF-E	KF-E	KF-E	KF-E	KF-E	KF-E	FT-E	FT-E	TB-E	TB-E	TB-E	TB-E	TB-F		
	4-way cassette	SLZ-M15FA2								•												
		SLZ-M25FA2								•												
		SLZ-M35FA2								•												
		SLZ-M50FA2								•												
		SLZ-M60FA2								•												
	Ceiling - concealed	SEZ-M25DA(L)2																				
	J	SEZ-M35DA(L)2																				
S series		SEZ-M50DA(L)2																				
S		SEZ-M60DA(L)2																				
		SEZ-M71DA(L)2																				
	Concealed floor	SFZ-M25VA																				
	standing	SFZ-M35VA																				
		SFZ-M50VA																				
		SFZ-M60VA																				
	4	SFZ-M71VA																				
	4-way cassette	PLA-ZM35EA2																				
	-	PLA-ZM50EA2			•				•													
		PLA-ZM60EA2																				
		PLA-ZM71EA2																				
		PLA-ZM100EA2																				
		PLA-ZM125EA2																				
		PLA-ZM140EA2																				
		PLA-M35EA2																				
		PLA-M50EA2			•																	
		PLA-M60EA2			•				•													
		PLA-M71EA2			•																	
		PLA-M100EA2			•				•													
		PLA-M125EA2																				
		PLA-M140EA2			•				•													
	Ceiling - concealed	PEAD-M35JA(L)2														•						
		PEAD-M50JA(L)2														•						
		PEAD-M60JA(L)2															•					
		PEAD-M71JA(L)2															•					
		PEAD-M100JA(L)2																•				
ies		PEAD-M125JA(L)2																				
P series		PEAD-M140JA(L)2																	•			
۵		PEA-M200LA2		•																		
		PEA-M250LA2																				
	Wall - mounted	PKA-M35LA(L)2												•								
	mountou	PKA-M50LA(L)2												•								
		PKA-M60KA(L)2													•							
		PKA-M71KA(L)2																				
		PKA-M100KA(L)2													•							
	Ceiling - suspended	PCA-M35KA2													•							
	Johning Gasperiaeu					•					•											
		PCA-M50KA2				•					•											
		PCA-M60KA2					•															
		PCA-M71KA2					•					•										
		PCA-M100KA2																				
		PCA-M125KA2						•					•									
		PCA-M140KA2																				
		PCA-M71HA2	•																			
	Floor - standing	PSA-M71KA																				
		PSA-M100KA																				
		PSA-M125KA																				
	PS	PSA-M140KA																				

^{*1} V Blocking Filter(PAC-SK53KF-E) cannot be used with High-efficiency filter element(PAC-SH59KF-E).

*2 V Blocking Filter(PAC-SK55KF-E) cannot be used with High-efficiency filter element(PAC-SH88KF-E).

*3 V Blocking Filter(PAC-SK56KF-E) cannot be used with High-efficiency filter element(PAC-SH89KF-E).

*4 V Blocking Filter(PAC-SK57KF-E) cannot be used with High-efficiency filter element(PAC-SH90KF-E).

*5 High-efficiency filter element(PAC-SH59KF-E) cannot be used with 3D Total Flow unit(PLP-U160ELR-E), Plasma Quad Connect(PAC-SK51FT-E), Insulation kit (PAC-SK36HK-E) and V Blocking Filter(PAC-SK53KF-E).

*6 High-efficiency filter element(PAC-SH89KF-E) cannot be used with V Blocking Filter(PAC-SH89KF-E).

*7 High-efficiency filter element(PAC-SH89KF-E) cannot be used with V Blocking Filter(PAC-SH89KF-E).

*8 High-efficiency filter element(PAC-SH99KF-E) cannot be used with V Blocking Filter(PAC-SH99KF-E).

		Option		Plasma Quad Connect													3D			M.de
																-see Corner	Total			Multi- functional
				Plasma	a Quad (Connect		Attach	ment for	Ducted		Box for	Ducted		Pa		Flow unit	Plate	kit	Casement
				*2	1		1			1							WI #1	*4	*3	*5
			MAC-	PAC-	SLP-	SLP-	SLP-	PAC-	PAC-	PAC-	PAC-	PAC-	PAC-	PAC-	PAC-	PAC-	PLP-	PAC-	PAC-	PAC-
l n	door I Init		100 FT-E	SK51	FAP	FALP	FALMP2	HA11	HA31	HA31	KE92	KE93	KE94	KE95	SF1	SE1	U160	SJ37 SP-E	SK36	SJ41
	door Unit 4-way cassette	SLZ-M15FA2	F1-E	FT-E	•	•	•	PAR	PAR	PAU	PTB-E	PTB-E	PTB-E	PTB-E	ME-E	ME-E	ELR-E	SP-E	HK-E	TM-E
	, may oddoono	SLZ-M25FA2				•	•													
		SLZ-M35FA2																		
		SLZ-M50FA2				•	•								•					
		SLZ-M60FA2																		
	Ceiling - concealed	SEZ-M25DA(L)2																		
တ္	Ü	SEZ-M35DA(L)2	•					•												
S series		SEZ-M50DA(L)2	•					•												
S		SEZ-M60DA(L)2	•					•												
		SEZ-M71DA(L)2	•					0												
	Concealed floor	SFZ-M25VA																		
	standing	SFZ-M35VA																		
		SFZ-M50VA																		
		SFZ-M60VA																		
		SFZ-M71VA																		
	4-way cassette	PLA-ZM35EA2																	•	
		PLA-ZM50EA2		•														•	•	•
		PLA-ZM60EA2																		
		PLA-ZM71EA2		•												•	•	•	•	•
		PLA-ZM100EA2																		
		PLA-ZM125EA2														•		•		
		PLA-ZM140EA2																		
		PLA-M35EA2																		
		PLA-M50EA2																•		
		PLA-M60EA2															•	•		
		PLA-M71EA2																		
		PLA-M100EA2		•														•	•	
		PLA-M125EA2																		
		PLA-M140EA2		•												•	•	•	•	•
	Ceiling - concealed	PEAD-M35JA(L)2																		
		PEAD-M50JA(L)2	•						•	•	•									
		PEAD-M60JA(L)2																		
		PEAD-M71JA(L)2							•				_							
SS		PEAD-M100JA(L)2																		
P series		PEAD-M125JA(L)2	•						•	•			•							
۵		PEAD-M140JA(L)2																		
		PEA-M200LA2 PEA-M250LA2																		
	Wall - mounted	PKA-M35LA(L)2																		
	ountou	PKA-M50LA(L)2	•																	
		PKA-M60KA(L)2	•																	
		PKA-M71KA(L)2	•																	
		PKA-M100KA(L)2																		
	Ceiling - suspended	PCA-M35KA2																		
		PCA-M50KA2																		
		PCA-M60KA2																		
		PCA-M71KA2																		
		PCA-M100KA2																		
		PCA-M125KA2																		
		PCA-M140KA2																		
		PCA-M71HA2																		
	Floor - standing	PSA-M71KA																		
		PSA-M100KA																		
		PSA-M125KA																		
	<u> </u>	PSA-M140KA																		

^{*1 3}D Total Flow unit(PLP-U160ELR-E) cannot be used with Plasma Quad Connect(PAC-SK51FT-E), Insulation kit(PAC-SK36HK-E), Shutter Plate(PAC-SJ37SP-E), Multi functional casement(PAC-SJ41TM-E) and High-efficiency filter element(PAC-SH59KF-E)

*2 Plasma Quad Connect(PAC-SK51FT-E) cannot be used with PLP-U160ELR-E(3D Total Flow unit), Insulation kit (PAC-SK36HK-E), Auto elevation panel(PLP-6EAJ, PLP-6EAJE), Multi functional casement(PAC-SJ41TM-E) and High-efficiency filter element(PAC-SH59KF-E).

*3 Insulation kit(PAC-SK36HK-E) cannot be used with 3D Total Flow unit(PLP-U160ELR-E), Plasma Quad Connect(PAC-SK51FT-E), Auto elevation panel(PLP-6EAJ, PLP-6EAJE), Shutter Plate(PAC-SJ37SP-E), Multi functional casement(PAC-SJ41TM-E) and High-efficiency filter element(PAC-SH59KF-E)

*4 Shutter Plate(PAC-SJ37SP-E) cannot be used with 3D Total Flow unit(PLP-U160ELR-E) and Insulation kit(PAC-SK36HK-E).

*5 Multi functional casement(PAC-SJ41TM-E) cannot be used with 3D Total Flow unit(PLP-U160ELR-E), Plasma Quad Connect(PAC-SK51FT-E) and Insulation kit(PAC-SK36HK-E).

abla		Option																		
			Eroch o	ir Intake	Space								Decorative	System	Wi-Fi					
				II IIIIake Flange	Panel			D	rain Pun	np			Cover	Control	Interface		Power S	upply Te	rminal Ki	it
			Duoi i	iango									0010	Interface	III III III III III III III III III II					
				1			1		1	1										
			PAC-	PAC-	PAC-	PAC-	PAC-	PAC-	PAC-	PAC-	PAC-	PAC-	PAC-	MAC-	MAC-	PAC-	PAC-	PAC-	PAC-	PAC-
			SH65	SF28	SJ65	SK19	SK01	SJ92	SJ93	SJ94	KE07	KE06	SF81	334	587	SK38	SG94	SG96	SG97	SJ39
Inc	door Unit		OF-E	OF-E	AS-E	DM-E	DM-E	DM-E	DM-E	DM-E	DM-E	DM-FI	KC-E	IF-E	IF-E	HR-E	HR-E	HR-E	HR-E	HR-E
	4-way cassette	SLZ-M15FA2																		
		SLZ-M25FA2																		
		SLZ-M35FA2																		
		SLZ-M50FA2																		
		SLZ-M60FA2												•	•					
	Ceiling - concealed	SEZ-M25DA(L)2																		
SS		SEZ-M35DA(L)2									•			•	•					
S series		SEZ-M50DA(L)2												•						
SS		SEZ-M60DA(L)2									•			•	•					
		SEZ-M71DA(L)2									•			•	•					
	Concealed floor	SFZ-M25VA									-									
	standing	SFZ-M35VA												•						
		SFZ-M50VA												•						
		SFZ-M60VA																		
		SFZ-M71VA																		
	4-way cassette	PLA-ZM35EA2																		
	- way casselle													●*1						•
		PLA-ZM50EA2	•		•									●*1	•					•
		PLA-ZM60EA2	•											●*1 ●*1						•
		PLA-ZM71EA2												★1						
		PLA-ZM100EA2												* 1						
		PLA-ZM125EA2	•		•									*1	•					•
		PLA-ZM140EA2												*1						
		PLA-M35EA2												*1						
		PLA-M50EA2												*1						
		PLA-M60EA2												*1						•
		PLA-M71EA2												*1						
		PLA-M100EA2												*1						•
		PLA-M125EA2												*1						
		PLA-M140EA2												*1						
	Ceiling - concealed	PEAD-M35JA(L)2												*1						
		PEAD-M50JA(L)2												*1						
		PEAD-M60JA(L)2												*1					•	
		PEAD-M71JA(L)2												* 1	•				•	
		PEAD-M100JA(L)2												*1	•				•	
P series		PEAD-M125JA(L)2												0 *1	•				•	
sei		PEAD-M140JA(L)2												* 1	•				•	
Д		PEA-M200LA2										•		* 1						
		PEA-M250LA2										•		* 1	•					
	Wall - mounted	PKA-M35LA(L)2					•							* 1		•				
		PKA-M50LA(L)2												* 1		•				
		PKA-M60KA(L)2				•								* 1			•			
		PKA-M71KA(L)2												* 1						
		PKA-M100KA(L)2												*1						
	Ceiling - suspended													_						
	Coming - Suspended													●*1						
		PCA-M50KA2						•						*1				•		
		PCA-M60KA2												O *1						
		PCA-M71KA2							•					*1				•		
		PCA-M100KA2																		
		PCA-M125KA2							•											
		PCA-M140KA2							•											
		PCA-M71HA2		•									•		•				•	
	Floor - standing	PSA-M71KA																		
		PSA-M100KA													•			•		
		PSA-M125KA																		
		PSA-M140KA	1																	

 $^{^{\}star}1$ P Series indoor units can be used in combination with SUZ or MXZ outdoor units.

$\overline{}$		Option	\/\/ir	ed Remo	te Contr	oller		Wirel	ess Ren	note Con	troller			1		
		Ориоп		Controlle		Terminal Block kit for PKA	Signal	Sender		nal Rece		Controller Kit (Sender & Receiver)	Remote Sensor	Remote On/Off Adapter	Operation	Connector Cable for Remote Display
			PAR-	PAR- CT01	PAC- YT52	PAC- SH29	PAR- SL97	PAR- SL101	PAR- SA9	PAR- SF9	PAR- SE9	PAR- SL94	PAC- SE41	PAC- SE55	PAC- SF40	PAC- SA88
In	door Unit		MAA	MAA	CRA	TC-E	A-E	A-E	CA-E	FA	FA-E	B-E	TS-E	RA-E	RM-E	HA-E
	4-way cassette	SLZ-M15FA2						*3							*1	
		SLZ-M25FA2						*3							*1	
		SLZ-M35FA2						*3							*1	
		SLZ-M50FA2						*3							*1	
		SLZ-M60FA2						*3							*1	
	Ceiling - concealed	SEZ-M25DA(L)2	DA2	DA2	DA2			*3							*1	
ies		SEZ-M35DA(L)2	DA2	DA2	DA2			*3	•				•		★1	
S series		SEZ-M50DA(L)2	DA2	DA2	DA2			*3					•		*1	
S		SEZ-M60DA(L)2	DA2	DA2	DA2			*3	•				•		★1	
		SEZ-M71DA(L)2	DA2	DA2	DA2			*3							*1	
	Concealed floor	SFZ-M25VA	•		•			*3	•				•		*1	
	standing	SFZ-M35VA						*3							*1	
		SFZ-M50VA		•				* 3					•	•	● *1	•
		SFZ-M60VA						*3						•	*1	
		SFZ-M71VA		•				* 3						•	* 1	
	4-way cassette	PLA-ZM35EA2						*3						•	*1	
		PLA-ZM50EA2	•	•	•		•	* 3			•		•	•	● *1	
		PLA-ZM60EA2						*3							*1	
		PLA-ZM71EA2						*3							*1	
		PLA-ZM100EA2						*3							*1	
		PLA-ZM125EA2						*3			•				*1	
		PLA-ZM140EA2						*3							*1	
		PLA-M35EA2						*3							*1	
		PLA-M50EA2						*3							*1	
		PLA-M60EA2						*3							*1	
		PLA-M71EA2						*3							*1	
		PLA-M100EA2						*3							*1	
		PLA-M125EA2						*3							*1	
		PLA-M140EA2						*3							*1	
	Ceiling - concealed	PEAD-M35JA(L)2						*3							*1	
		PEAD-M50JA(L)2						*3							*1	
		PEAD-M60JA(L)2						*3							*1	
		PEAD-M71JA(L)2						*3							*1	
1 ,,		PEAD-M100JA(L)2						*3							*1	
series		PEAD-M125JA(L)2						*3							*1	
P se		PEAD-M140JA(L)2						*3							*1	
"		PEA-M200LA2	•		•			*3	•						*1	
		PEA-M250LA2						* 3						•	* 1	•
	Wall - mounted	PKA-M35LA(L)2	*2	* 2	*2	•	•	* 3						•	• *1	•
		PKA-M50LA(L)2	*2	* 2	*2	•		* 3							* 1	
		PKA-M60KA(L)2	*2	* 2	*2	•	•	* 3						•		
		PKA-M71KA(L)2	*2	* 2	*2	•		* 3								
		PKA-M100KA(L)2	*2	* 2	*2	•		● *3					•	•		•
	Ceiling - suspended	PCA-M35KA2						● *3				•	•		* 1	
		PCA-M50KA2	•	•	•			● *3	•			•	•	•	• *1	•
		PCA-M60KA2						* 3				•	•		* 1	
		PCA-M71KA2	•	•	•		•	* 3	•			•	•	•	• *1	•
		PCA-M100KA2						* 3				•	•	•	* 1	
		PCA-M125KA2	•	•	•		•	* 3	•			•	•		* 1	
		PCA-M140KA2		•				* 3							* 1	
		PCA-M71HA2	•	•	•		•	* 3	•				•		* 1	
	Floor - standing	PSA-M71KA						* 3	•				•	0	* 1	•
		PSA-M100KA						* 3	•				•	•	* 1	•
		PSA-M125KA						* 3						•	● *1	•
		PSA-M140KA						* 3	•				•	•	* 1	•

^{*1} Unable to use with wireless remote controller.
*2 PAC-SH29TC-E is required for wireless model.
*2 Group control cannot be used.

Optional Parts List <Outdoor>

	Option		Air	Outlet G	iuide		preve	ater
utdoor Unit		MAC- 890 SG-E	MAC- 881	MAC- 882	MAC- 886 SG-E	MAC- 883	MAC- 643	MA 64
RW Series	MUZ-RW25VGHZ	3G-E	SG	SG	3G-E	SG	BH-E	BH
	MUZ-RW35VGHZ			•				
	MUZ-RW50VGHZ	•						
L series	MUZ-LN25VG		•					
	MUZ-LN25VGHZ							
	MUZ-LN35VG		•					
	MUZ-LN35VGHZ							
	MUZ-LN50VG							
	MUZ-LN50VGHZ							
	MUZ-LN60VG							
FT series	MUZ-FT25VGHZ							
1 1 361163			•					
	MUZ-FT35VGHZ MUZ-FT50VGHZ							
A series				•				
A series	MUZ-AP15VG							
	MUZ-AP20VG		•					
	MUZ-AY25VG							
	MUZ-AY25VGH							
	MUZ-AY35VG							
	MUZ-AY35VGH							
	MUZ-AY42VG							
	MUZ-AY42VGH		•					
	MUZ-AY50VG							
	MUZ-AY50VGH							
	MUZ-AP60VG							
	MUZ-AP71VG				•			
E series	MUZ-EF25VG							
	MUZ-EF25VGH							
	MUZ-EF35VG							
	MUZ-EF35VGH							
	MUZ-EF42VG						•	
	MUZ-EF50VG			•				•
BT series	MUZ-BT20VG							
	MUZ-BT25VG					•		
	MUZ-BT35VG							
	MUZ-BT50VG		•					
HR series	MUZ-HR25VF							
	MUZ-HR35VF							
	MUZ-HR42VF							
	MUZ-HR50VF							
	MUZ-HR60VF			•				
	MUZ-HR71VF			•				
DW series	MUZ-DW25VF							
J	MUZ-DW25VF							
	MUZ-DW35VF MUZ-DW50VF					•		
TD series	MUY-DW50VF MUY-TP35VF							
TP series	MUY-TP50VF							
F series	MUZ-FH25VE		•					
	MUZ-FH25VEHZ		•					
	MUZ-FH35VE							
	MUZ-FH35VEHZ							
	MUZ-FH50VE							
	MUZ-FH50VEHZ				•			
S series								
O Series	MUZ-SF25VE							
	MUZ-SF25VEH							
	MUZ-SF35VE							
	MUZ-SF35VEH							
	MUZ-SF42VE		•					
	MUZ-SF42VEH							
	MUZ-SF50VE				•			
	MUZ-SF50VEH							
G series	MUZ-GF60VE				•			
	MUZ-GF71VE				•			
W series	MUZ-WN25VA					•		
	MUZ-WN35VA							
D series	MUZ-DM25VA							
	MUZ-DM35VA							
H series	MUZ-HJ25VA					•		
	MUZ-HJ35VA							
	MUZ-HJ50VA		•					
	MUZ-HJ60VA				•			
	MUZ-HJ71VA							
Compact	MUFZ-KW25VGHZ							
floor	MUFZ-KW35VGHZ							
	MUFZ-KW50VGHZ				•			
	MUFZ-KW60VGHZ							

		Option				Distribut	ion Pipe				В	Branch Pi	ipe/Head	der (Join	t)			Joint Pip	е	Unit
				For Twir	n (50:50)	1	For 7 (33:3	Triple 3:33)	For Qua (25:25:		In case 2-branc		Branch Pipe	Hea	ader		6.35> ø9.52		9.52> ø12.7	ø15.8 > Pipe
			MSDD- 50TR	50TR2		MSDD- 50WR2	111R	MSDT- 111R3	111R	MSDF- 111R2	MSDD-		CMY- Y62-G	CMY- Y64-G	CMY- Y68-G	PAC- SG72	PAC- SG87	PAC- SG73	PAC- SG88	Ø19.0 PAC SG7
Outdoor Ur SERIES	nit SUZ-M25VA	$\overline{}$	-E	-E	-E	-E	-E	-E	-E	-E	50AR-E	50BR-E	-E	-E	-E	RJ-E	RJ-E	RJ-E	RJ-E	RJ-I
R32)	SUZ-M35VA																			
	SUZ-M50VA																			
	SUZ-M60VA																			
SERIES	SUZ-M71VA SUZ-KA25VA6																			
R410A)	SUZ-KA35VA6																			
- /	SUZ-KA50VA6																			
	SUZ-KA60VA6																			
10	SUZ-KA71VA6																			
Power Inverter	PUZ-ZM35VKA2 PUZ-ZM50VKA2																		•	
(R32)	PUZ-ZM60VHA2																•			
(-)	PUZ-ZM71VHA2			•															•	
	PUZ-ZM100VKA2			•				•											•	
	PUZ-ZM100YKA2			•															•	
	PUZ-ZM125VKA2 PUZ-ZM125YKA2			•				•		•									•	
	PUZ-ZM140VKA2			•						•									•	
	PUZ-ZM140YKA2			•						•									•	
	PUZ-ZM200YKA2					•				•									•	
Davis	PUZ-ZM250YKA2					•		•		•										
Power Inverter	PUHZ-ZRP35VKA2 PUHZ-ZRP50VKA2															•				
(R410A)																				
	PUHZ-ZRP71VHA2		•															•		
	PUHZ-ZRP100VKA3						•											•		•
10	PUHZ-ZRP100YKA3 PUHZ-ZRP125VKA3						•													-
SERIES	PUHZ-ZRP125VKA3		•				•		•									•		
SEL	PUHZ-ZRP140VKA3		•						•									•		
20	PUHZ-ZRP140YKA3		•																	•
	PUHZ-ZRP200YKA3				•		•											•		
Standard	PUHZ-ZRP250YKA3																			
Inverter	PUZ-M100VKA2 PUZ-M125VKA2			•																
(R32)	PUZ-M140VKA2			•				•												
	PUZ-M100YKA2			•																
	PUZ-M125YKA2			•																
	PUZ-M140YKA2			•				•												
	PUZ-M200YKA2 PUZ-M250YKA2					•		•		•										
Standard			•																	
Inverter	PUHZ-P125VKA																			
(R410A)			•				•													
	PUHZ-P100YKA																			
	PUHZ-P125YKA PUHZ-P140YKA		•				•													
	PUHZ-P200YKA3				•				•											
	PUHZ-P250YKA3				•		•													
MXZ SERIE																				
R32)	MXZ-2F42VF4 MXZ-2F53VF(H)4																			
	MXZ-2F53VFHZ2																			
	MXZ-3F54VF4																			
	MXZ-3F68VF4																			
	MXZ-4F72VF4																			_
	MXZ-4F80VF4 MXZ-4F83VF2																			
	MXZ-4F83VFHZ2																			
	MXZ-5F102VF2																			
	MXZ-6F120VF2																			
	MXZ-2HA40VF2																			
	MXZ-2HA50VF2 MXZ-3HA50VF2																			
MXZ SERIE																				
R410A)	MXZ-2D42VA2																			
	MXZ-2D53VA(H)2																			
	MXZ-2E53VAHZ																			
	MXZ-3E54VA MXZ-3E68VA																			
	MXZ-4E72VA																			
	MXZ-4E83VA																			
	MXZ-4E83VAHZ																			
	MXZ-5E102VA																			
	MXZ-6D122VA2 MXZ-2DM40VA																			
	MXZ-2DM40VA MXZ-3DM50VA																			
PUMY SERI		BS)									•	•	•	•	•					
R410A)	PUMY-SP112YKM2(-	·BS)												•	•					
	PUMY-SP125VKM2(•	•	•	•	•					
	PUMY-SP125YKM2(0			0	0					
	PUMY-SP140VKM2(PUMY-SP140YKM2(•	•	•		0					
	PUMY-SP140YKM2(- PUMY-P112VKM6(-B												•	•	•					•
	PUMY-P112YKM5(-B																			
	PUMY-P125VKM6(-E													•	•					-
	PUMY-P125YKM5(-E	3S)										•		•	•			•		•
	PUMY-P140VKM6(-E											•	0	0	0					
	PUMY-P140YKM5(-E										•	•		0	0			0		
	PUMY-P200YKM3(-E PUMY-P250YBM2(-E										0							•		•
	PUMY-P300YBM2(-E										•	•	•	•	•					
POWERFUL		-,																		
HEATING	PUHZ-SHW112YHA		•																	
	PUHZ-SHW140YHA		•																	
XZ series	PXZ-4F75VG																			

	Option			Joint Pipe	e		Liquid F	Refrigera	nt Dryer									
	Sp.io	Unit ø9.52 >	Unit ø6.35 >	Unit ø9.52 >	Unit ø12.7 >	Unit ø12.7 >	For pipe	For pipe	For pipe				Air	Outlet G	uide			
		Pipe ø15.88	Pipe ø9.52	Pipe ø12.7 Flare	Pipe ø9.52	Pipe ø15.88	ø6.35	ø9.52	Ø12.7	MAC-	MAC-	MAC-	MAC-	PAC-	PAC-	PAC-	PAC-	PAC-
Outdoor Unit		PAC- SG76RJ-E	PAC- 493PI	MAC- A454JP-E	MAC- A455JP-E	MAC- A456JP-E	SG81 DR-E	SG82 DR-E	SG85 DR-E	881 SG	882 SG	856 SG	886 SG-E	SJ07 SG-E	SG59 SG-E	SH96 SG-E	SH96 SG	SK22 SG-E
S SERIES (R32)	SUZ-M25VA SUZ-M35VA				•					•								
	SUZ-M50VA SUZ-M60VA										•		•					
	SUZ-M71VA																	
P SERIES (R410A)	SUZ-KA25VA6 SUZ-KA35VA6									•								
(11410A)	SUZ-KA50VA6				•					•			•					
	SUZ-KA60VA6 SUZ-KA71VA6												•					
Power	PUZ-ZM35VKA2						•							•				
Inverter (R32)	PUZ-ZM50VKA2 PUZ-ZM60VHA2							•						•	•			
(1102)	PUZ-ZM71VHA2							•							•			
	PUZ-ZM100VKA2 PUZ-ZM100YKA2							•									•	
	PUZ-ZM125VKA2																	
	PUZ-ZM125YKA2 PUZ-ZM140VKA2							•									•	
	PUZ-ZM140YKA2							•										
	PUZ-ZM200YKA2 PUZ-ZM250YKA2							•									0	
Power	PUHZ-ZRP35VKA2						•							•				
Inverter (R410A)	PUHZ-ZRP50VKA2 PUHZ-ZRP60VHA2						•	•						•	•			
(104)	PUHZ-ZRP71VHA2							•							•			
	PUHZ-ZRP100VKA3 PUHZ-ZRP100YKA3																•	
S	PUHZ-ZRP125VKA3							•									•	
SERIES	PUHZ-ZRP125YKA3 PUHZ-ZRP140VKA3							0									•	
<u>ო</u>	PUHZ-ZRP140YKA3																	
	PUHZ-ZRP200YKA3 PUHZ-ZRP250YKA3							•	•								•	
Standard	PUZ-M100VKA2							•									•	
Inverter (R32)	PUZ-M125VKA2 PUZ-M140VKA2							•									•	
(1.102)	PUZ-M100YKA2							•										
	PUZ-M125YKA2 PUZ-M140YKA2							•									•	
	PUZ-M200YKA2																	
Standard	PUZ-M250YKA2 PUHZ-P100VKA							•									•	
Inverter	PUHZ-P125VKA							•										
(R410A)	PUHZ-P140VKA PUHZ-P100YKA							•									•	
	PUHZ-P125YKA							•									•	
	PUHZ-P140YKA PUHZ-P200YKA3							•									•	
MYZ CEDIEC	PUHZ-P250YKA3								•								•	
MXZ SERIES (R32)	MXZ-2F33VF4 MXZ-2F42VF4									•								
	MXZ-2F53VF(H)4									•								
	MXZ-2F53VFHZ2 MXZ-3F54VF4			•								•				•		
	MXZ-3F68VF4	•	•	•								•						
	MXZ-4F72VF4 MXZ-4F80VF4	•	•	•	•	•						•						
	MXZ-4F83VF2 MXZ-4F83VFHZ2	•	•	•	•	•										0		
	MXZ-4F63VFH22 MXZ-5F102VF2	•	•	•	•	•										•		
	MXZ-6F120VF2 MXZ-2HA40VF2	•	•	•	•	•										•		
	MXZ-2HA50VF2									•								
MXZ SERIES	MXZ-3HA50VF2 MXZ-2D33VA									•		•						
R410A)	MXZ-2D42VA2									•								
	MXZ-2D53VA(H)2 MXZ-2E53VAHZ			•						•							•	
	MXZ-3E54VA			•								•						
	MXZ-3E68VA MXZ-4E72VA	•	•	•	•	•						0						
	MXZ-4E83VA	•	•	•	•	•											•	
	MXZ-4E83VAHZ MXZ-5E102VA	0	•	•	0	•											•	
	MXZ-6D122VA2		•	•	•	•											•	
	MXZ-2DM40VA MXZ-3DM50VA			•						•		•						
PUMY SERIES	PUMY-SP112VKM2(-BS)																•	
R410A)	PUMY-SP112YKM2(-BS) PUMY-SP125VKM2(-BS)																•	
	PUMY-SP125YKM2(-BS)																	
	PUMY-SP140VKM2(-BS) PUMY-SP140YKM2(-BS)																•	
	PUMY-P112VKM6(-BS)																•	
	PUMY-P112YKM5(-BS) PUMY-P125VKM6(-BS)																•	
	PUMY-P125YKM5(-BS)																	
	PUMY-P140VKM6(-BS) PUMY-P140YKM5(-BS)																•	
	PUMY-P200YKM3(-BS)																•	
	PUMY-P250YBM2(-BS) PUMY-P300YBM2(-BS)																	•
POWERFUL	PUHZ-SHW112VHA							•							•			
HEATING	PUHZ-SHW112YHA							0							•			
PXZ series	PUHZ-SHW140YHA PXZ-4F75VG PXZ-5F85VG	•	•	•		•						•						

	Option	Α	ir Protec	tion Guid	de		Drain	Socket		Fre	eze-prev	ention H	eater (fo	or Drain F	Pan)	Ce	entralized	d Drain F	an
0.11		PAC- SJ06	PAC- SH63	PAC- SH95	PAC- SK21	PAC- SJ08	PAC- SG60	PAC- SG61	PAC- SK27	MAC- 643	MAC- 644	PAC- 645	PAC- 646	PAC- SJ10	PAC- SJ20	PAC- SG63	PAC- SG64	PAC- SH97	PAC SJ83
Outdoor Unit S SERIES	SUZ-M25VA	AG-E	AG-E	AG-E	AG-E	DS-E	DS-E	DS-E	DS-E	BH-E	BH-E	BH-E	BH-E	BH-E	BH-E	DP-E	DP-E	DP-E	DP-
R32)	SUZ-M35VA																		
	SUZ-M50VA SUZ-M60VA																		
	SUZ-M71VA																		
SERIES	SUZ-KA25VA6									•									
R410A)	SUZ-KA35VA6									•									
	SUZ-KA50VA6 SUZ-KA60VA6										•								
	SUZ-KA71VA6																		
Power	PUZ-ZM35VKA2	•				•										•			
Inverter (R32)	PUZ-ZM50VKA2 PUZ-ZM60VHA2	•				•		•								•	•		
(1132)	PUZ-ZM71VHA2		•					•									•		
	PUZ-ZM100VKA2			•				•										•	
	PUZ-ZM100YKA2			•				•										•	
	PUZ-ZM125VKA2 PUZ-ZM125YKA2			•				•										•	
	PUZ-ZM140VKA2			•				•										•	
	PUZ-ZM140YKA2			•														•	
	PUZ-ZM200YKA2 PUZ-ZM250YKA2							•											
Power	PUHZ-ZINZ501KAZ PUHZ-ZRP35VKA2	•														•		•	
Inverter	PUHZ-ZRP50VKA2	•				•										•			
(R410A)	PUHZ-ZRP60VHA2		0																
	PUHZ-ZRP71VHA2 PUHZ-ZRP100VKA3			•				•									•	•	
	PUHZ-ZRP100YKA3			•				•										•	
ES ES	PUHZ-ZRP125VKA3			•				•										•	
SERIES	PUHZ-ZRP125YKA3 PUHZ-ZRP140VKA3			•				•										•	
<u>م</u>	PUHZ-ZRP140YKA3			•				•										•	
	PUHZ-ZRP200YKA3			•				•										•	
Ctdd	PUHZ-ZRP250YKA3			•				•										•	
Standard Inverter	PUZ-M100VKA2 PUZ-M125VKA2			•				•										•	
(R32)	PUZ-M140VKA2			•				•										•	
	PUZ-M100YKA2			•														•	
	PUZ-M125YKA2			•				0										0	
	PUZ-M140YKA2 PUZ-M200YKA2			•				•										•	
	PUZ-M250YKA2			•				•										•	
Standard	PUHZ-P100VKA			•				•										•	
Inverter (R410A)	PUHZ-P125VKA PUHZ-P140VKA			•				•										•	
(1410/1)	PUHZ-P100YKA			•															
	PUHZ-P125YKA			•				•										•	
	PUHZ-P140YKA			•				•										•	
	PUHZ-P200YKA3 PUHZ-P250YKA3			•				•										•	
MXZ SERIES	MXZ-2F33VF4									•									
(R32)	MXZ-2F42VF4									•									
	MXZ-2F53VF(H)4 MXZ-2F53VFHZ2									•									
	MXZ-3F54VF4												•						
	MXZ-3F68VF4												•						
	MXZ-4F72VF4 MXZ-4F80VF4												•						
	MXZ-4F83VF2						•					•	•						
	MXZ-4F83VFHZ2																		
	MXZ-5F102VF2						0					•							
	MXZ-6F120VF2 MXZ-2HA40VF2						•					•							
	MXZ-2HA50VF2																		
	MXZ-3HA50VF2																		
MXZ SERIES R410A)	MXZ-2D33VA MXZ-2D42VA2									•									
IN-TION)	MXZ-2D53VA(H)2																		
	MXZ-2E53VAHZ																		
	MXZ-3E54VA												•						
	MXZ-3E68VA MXZ-4E72VA												•						
	MXZ-4E72VA MXZ-4E83VA						•					•							
	MXZ-4E83VAHZ																		
	MXZ-5E102VA						0					0							
	MXZ-6D122VA2 MXZ-2DM40VA						•					•							
	MXZ-3DM50VA																		
PUMY SERIES	PUMY-SP112VKM2(-BS)			•				•						•				•	
R410A)	PUMY-SP112YKM2(-BS)			•				•						•				•	
	PUMY-SP125VKM2(-BS) PUMY-SP125YKM2(-BS)			•				•						•				•	
	PUMY-SP140VKM2(-BS)							•						•				•	
	PUMY-SP140YKM2(-BS)			•										•				•	
	PUMY-P112VKM6(-BS)			•				•							•			•	
	PUMY-P112YKM5(-BS) PUMY-P125VKM6(-BS)			•				•							•			•	
	PUMY-P125YKM5(-BS)							•							•				
	PUMY-P140VKM6(-BS)			•				•							•			•	
	PUMY-P140YKM5(-BS)			•				0							•			0	
	PUMY-P200YKM3(-BS) PUMY-P250YBM2(-BS)			•	•			•	•						•			•	•
	PUMY-P300YBM2(-BS)				•														
POWERFUL	PUHZ-SHW112VHA																		
HEATING	PUHZ-SHW112YHA PUHZ-SHW140YHA		•																
PXZ series	PXZ-4F75VG												•						
	PXZ-5F85VG	1	1		1		•					•							

<u></u>		Option						Step Ir	nterface						
			M-NET Adapter	M-N	ET Conv	rerter	Control/ Service Tool	1 PC w/atta	board chment kit		tion for nulator	Connection Kit	High Static Fan Motor	Muffler	Connecto for Drain Hose Heater
Οι	utdoor Unit		PAC- IF01 MNT-E	PAC- SK15 MA-E	PAC- SJ96 MA-E	PAC- SJ95 MA-E	PAC- SK52 ST	PAC- IF012 B-E	PAC- (S)IF013 B-E	MAC- 892 INS-E	MAC- 893 INS-E	PAC- LV11 M-J	PAC- SJ71 FM-E	MAC- 001 MF-E	MAC- 062 RA-E
	SERIES	SUZ-M25VA SUZ-M35VA					-								
(110)Z)	SUZ-M50VA													
		SUZ-M60VA SUZ-M71VA													
	SERIES 110A)	SUZ-KA25VA6													
(174	+TUA)	SUZ-KA35VA6 SUZ-KA50VA6													
		SUZ-KA60VA6 SUZ-KA71VA6													
	Power	PUZ-ZM35VKA2		•			•		•						
	Inverter (R32)	PUZ-ZM50VKA2 PUZ-ZM60VHA2				•	•		•						
		PUZ-ZM71VHA2 PUZ-ZM100VKA2				•	•		•						
		PUZ-ZM100YKA2				•	•		•						
		PUZ-ZM125VKA2 PUZ-ZM125YKA2				•	•		•						
		PUZ-ZM140VKA2				•	•		•						
		PUZ-ZM140YKA2 PUZ-ZM200YKA2				•	•		•						
	Power	PUZ-ZM250YKA2 PUHZ-ZRP35VKA2			•	•	•	•	•						
	Inverter	PUHZ-ZRP50VKA2					•	•	•						
	(R410A)	PUHZ-ZRP60VHA2 PUHZ-ZRP71VHA2				•	•	•	•						
		PUHZ-ZRP100VKA3				•	•	•	•				•		
S		PUHZ-ZRP100YKA3 PUHZ-ZRP125VKA3				•	•	•	•				•		
SERIES		PUHZ-ZRP125YKA3 PUHZ-ZRP140VKA3				•	•	0	•				•		
D SS		PUHZ-ZRP140YKA3				•	•	•	•				•		
		PUHZ-ZRP200YKA3 PUHZ-ZRP250YKA3				•	•	•	•						
	Standard Inverter	PUZ-M100VKA2				•	•								
	(R32)	PUZ-M125VKA2 PUZ-M140VKA2				•	•								
		PUZ-M100YKA2 PUZ-M125YKA2				•	0								
		PUZ-M140YKA2				•	•								
		PUZ-M200YKA2 PUZ-M250YKA2				•									
	Standard Inverter	PUHZ-P100VKA				•	•								
	(R410A)	PUHZ-P125VKA PUHZ-P140VKA				•	•								
		PUHZ-P100YKA PUHZ-P125YKA				•	•								
		PUHZ-P140YKA				•	•	_	_						
		PUHZ-P200YKA3 PUHZ-P250YKA3				•	•	•	•						
MX (R3	Z SERIES	MXZ-2F33VF4 MXZ-2F42VF4													
, NO	<i>-</i> /	MXZ-2F53VF(H)4													
		MXZ-2F53VFHZ2 MXZ-3F54VF4													
		MXZ-3F68VF4													
		MXZ-4F72VF4 MXZ-4F80VF4													
		MXZ-4F83VF2 MXZ-4F83VFHZ2													
		MXZ-5F102VF2													
		MXZ-6F120VF2 MXZ-2HA40VF2													
		MXZ-2HA50VF2 MXZ-3HA50VF2													
	Z SERIES	MXZ-2D33VA													
R4	110A)	MXZ-2D42VA2 MXZ-2D53VA(H)2													
		MXZ-2E53VAHZ	•							•					
		MXZ-3E54VA MXZ-3E68VA													
		MXZ-4E72VA MXZ-4E83VA	•												
		MXZ-4E83VAHZ	•								•				
		MXZ-5E102VA MXZ-6D122VA2	0												
		MXZ-2DM40VA													
	MY SERIES	MXZ-3DM50VA PUMY-SP112VKM2(-BS)										•			
R4	110A)	PUMY-SP112YKM2(-BS) PUMY-SP125VKM2(-BS)										•			
		PUMY-SP125YKM2(-BS)													
		PUMY-SP140VKM2(-BS) PUMY-SP140YKM2(-BS)										•			
		PUMY-P112VKM6(-BS) PUMY-P112YKM5(-BS)										•	•		
		PUMY-P125VKM6(-BS)										•	•		
		PUMY-P125YKM5(-BS) PUMY-P140VKM6(-BS)										•	•		
		PUMY-P140YKM5(-BS)											•		
		PUMY-P200YKM3(-BS) PUMY-P250YBM2(-BS)										•			
DC	WERFUL	PUMY-P300YBM2(-BS)										•			
	ATING	PUHZ-SHW112VHA PUHZ-SHW112YHA				•	•	•	•						
DY.	Z series	PUHZ-SHW140YHA PXZ-4F75VG				•	•	•	•					•	•
	_ 001100	PXZ-5F85VG													


Optional Parts List <Branch Box>

	Branch Box	Reactor Box				Different Dia	ameter Joint			
	Outer Cover	Reactor box	ø9.52>ø12.7	ø12.7>ø9.52	ø12.7>ø15.88	ø6.35>ø9.52	ø9.52>ø15.88	ø15.88>ø19.05	ø15.88>ø22.2	ø15.88>ø25.4
	PAC- AK350CVR-E	PAC-RB01BC	MAC-A454JP	MAC-A455JP	MAC-A456JP	PAC-493PI	PAC-SG76RJ-E	PAC-SG75RJ-E	PAC-SG71RJ-E	PAC-SG77RJ-E
PAC-MK34BC (Flare)			•	•		•		•	•	
PAC-MK54BC (Flare)										

System controller

Versatile system controls can be realised using optional parts, relay circuits, control panels, etc.

MAJOR SYSTEM CONTROL

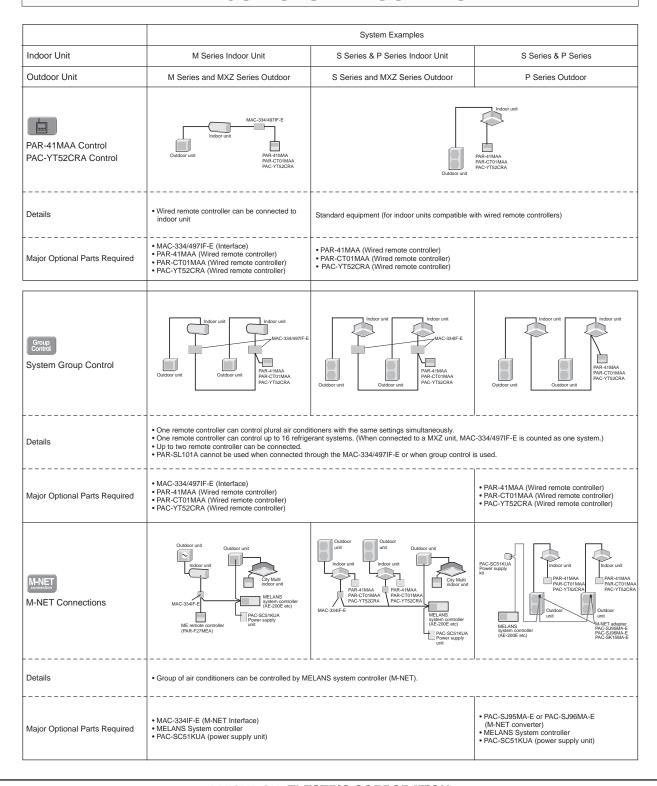

OTHERS

For M Series Indoor Units (New A-control Models Only)


	System Examples	Connection Details	Control Details	Major Optional Parts Required
Remote On/Off Operation • Air conditioner can be started/ stopped remotely. [] and [] can be used in combination)	MAC-334IF-E Switch Outdoor unit Remote control section (to be purchased locally)	Connect the interface to the air conditioner. Then connect the locally purchased remote controller to the terminal in the interface.	On/Off operation is possible from a remote location.	MAC-334IF-E (Interface) Parts for circuit such as relay box, lead wire, etc. (to be purchased locally)
Remote Display of Operation Status The On/Off status of air conditioners can be confirmed remotely. The one of the operation of the operatio	NAC-334IF-E Resistance LED Courboar unit Reference monitor section (to be purchased locally)	Connect the interface to the air conditioner. Then connect the locally purchased remote controller to the terminal in the interface.	The operation status (On/Off) or error signals can be monitored from a remote location.	MAC-334IF-E (Interface) Parts for circuit to be purchased locally (DC power source needed) External power source (12V DC) is required when using MAC-334IF-E.

For P Series and S Series Indoor Units

	System E	xamples		
	Wired remote controller	Wireless remote controller	Details	Major Optional Parts Required
2-remote Controller Control With two remote controllers, control can be performed locally and remotely from two locations.	PAR-41MAA PAC-YTSCRA * Set 'Man' and 'Sub' remote controllers. (Example of 1: 1 system)	PAR-4:1MAA PAC-1/TSC/RA 'When using wired and wireless remote controllers (Example of Simultaneous Twin)	Up to two remote controllers can be connected to one group. Both wired and wireless remote controllers can be used in combination.	Wired Remote Controller PAR-41MAA PAC-YTS2CRA (for PKA, PAC-SH29TC-Eis required) Wireless Remote Controller PAR-SL97A-E/PAR-SL101A-E (only for SLZ) Wireless Remote Controller Kit for PCA PAR-SL94B-E
Deparation Control by Level Signal Air conditioner can be started/ stopped remotely. In addition, On/Off operation by local remote controller can be prohibited/permitted.	Relay box (to be purchased) locally) Adapter for rounder control On/Orl Remote control On/Orl	Relay box (to be purchased locally) Adapter for remote On/OH Parallel Para-SL97/101A-E (Example of 1 : 1 system x 2)	Operation other than On/Off (e.g., adjustment of temperature, fan speed, and airflow) can be performed even when remote controller operation is prohibited. Timer control is possible with an external timer.	Adapter for remote On/Off PAC-SE55RA-E Relay box (to be purchased locally) Remote control panel (to be purchased locally)
C Operation Control by Pulse Signal	Relay box (to be purchased) locally) Connector remote daplay Remote controller (Example of 1 : 1 system x 2)	Relay box (to be purchased locally) Connector remote display Remote panel PAR-SL97/101A-E (Example of 1 : 1 system x 2)	The pulse signal can be turned On/Off. Operation/emergency signal can be received at a remote location.	Connector cable for remote display PAC-SA88HA-E/PAC-725AD (10 pcs. x PAC-SA88HA-E) Relay box (to be purchased locally) Remote control panel (to be purchased locally)
Remote Display of Operating Status Operating status can be displayed at a remote location.	Remote operation adapter/ Connector cable for remote display + Relay box Remote display - Remote display - PAR-41MA/FAR-CT01MAA/ PAC-VTSC/RA* (Example of 1 : 1 system)	Remote operation adapter/ Connector cable for remote display + Relay box Remote display + Remote display - PAR-SL97/101A-E (Example of Simultaneous Twin)	Operation/emergency signal can be received at a remote location (when channeled through the PAC-SF40RM-E → no-voltage signal, when channeled through the PAC-SA88HA-E → DC 12V signal).	Remote display panel (to be purchased locally) Connector cable for remote display PAC-SA88HA-E / PAC-725AD (10 pcs. x PAC-SA88HA-E) Relay box (to be purchased locally) Remote operation adapter PAC-SF40RM-E 'Unable to use with wireless remote controller
Allows On/Off operation with timer *For control by an external timer, refer to Ontrol by Level Signal.	PAR-tIMAA/ PAR-CTOTIMAA (Example of 1 : 1 system)		Weekly Timer: On/Off and up to 8 pattern temperatures can be set for each calendar day. (Initial setting) On/Off Timer: On/Off can be set once each within 72 hr in intervals of 5-minute units. Auto-off Timer: Operation will be switched off after a certain time elapse. Set time can be changed from 30 min. to 4 hr. at 10 min. intervals. 'Simple Timer and Auto-off Timer cannot be used at the same time.	Standard functions of PAR-41MAA / PAR-CT01MAA

Silver-ionized Air Purifier Filter

Photo

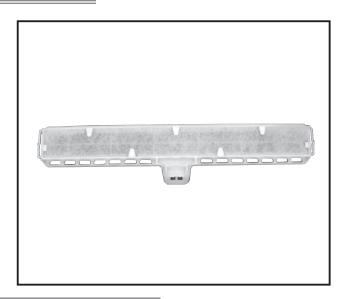

Descriptions

This filter catches dead mites and their droppings, pollen and other allergens on the filter filament, then decomposes them with artificial enzymes.

(Artificial enzyme catalyst on the filament catches the allergens and helps the chemical reaction with oxygen and severs the S-S* *S=Sulfur atoms)

pplicable Models


- MSZ-GF60VE2
- MSZ-GF71VE2
- * Silver-ionized Air Purifier filter for R32 models has been shifted to V blocking filter.

ecifications

Color	Frame: White, Filter: Blue
Material	Frame: PP, Filter: Polyester, rayon
Weight	40 g

Dimensions


Unit: mm

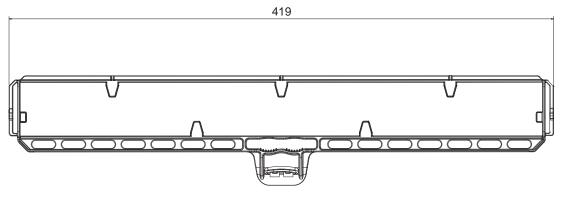



How to Use / How to Instal

Replacement of the air cleaning filter

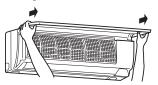


- 1. Lift the front panel until a "click" is heard.
- 2. (1) Remove the air filter.
 - (2) Remove the air cleaning filter.
 - (3) Install a new air cleaning filter.
 - (4) Install the air filter.
- 3. Close the front panel securely and press the positions indicated by the arrows.



Every 3 months:

- Remove dirt by a vacuum cleaner. When dirt cannot be removed by vacuum cleaning:
- Soak the filter and its frame in lukewarm water before rinsing it.
- After washing, dry it well in shade. Every year:
- Replace it with a new air cleaning filter for best performance.



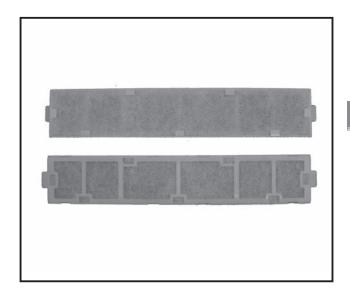

Descriptions

This air cleaning filter catches dead mites and their droppings, pollen and other allergens on the filter filament, then decomposes them with artificial enzymes.

(Artificial enzyme catalyst on the filament catches the allergens and helps the chemical reaction with oxygen and severs the S-S* bonds. *S= Sulfur atoms)

Applicable Models

- MSZ-SF25VE3
- MFZ-KT35VG
- MSZ-SF35VE3
- MFZ-KT50VG
- MSZ-SF33VE3
- MFZ-KT60VG
- MSZ-SF50VE3
- MFZ-KW25VG
- MSZ-WN25VA■ MSZ-WN35VA
- MFZ-KW35VG
- MSZ-DM25VA
- MFZ-KW50VG
- MSZ-DM35VA
- MFZ-KW60VG
- MSZ-HJ25VA
- MLZ-KP25VF
- MSZ-HJ25VA ■ MSZ-HJ35VA
- MLZ-KP35VF ■ MLZ-KP50VF
- MSZ-HJ50VA
- MLZ-KP50VF
 MLZ-KY20VG
- MSZ-HJ60VA
- MSZ-HJ71VA
- MFZ-KT25VG
- * Silver-ionized Air Purifier filter for R32 models has been shifted to V blocking filter.


Specifications

Material	Filter: Polyester, rayon, acrylic resin Frame: Polypropylene
Color (Filter)	Blue

Dimensions 222 212

How to Use / How to Install

Replacement of the air cleaning filter <MSZ Type>

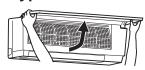

- 1. Lift the front panel until a "click" is heard.
- 2. (1) Remove the air filter.
 - (2) Remove the air cleaning filter.
 - (3) Install a new air cleaning filter.
 - (4) Install the air filter.
- 3. Close the front panel securely and press the positions indicated by the arrows.



Every 3 months:


Remove dirt by a vacuum cleaner.

When dirt cannot be removed by vacuum cleaning:

- · Soak the filter and its frame in lukewarm water before rinsing it.
- After washing, dry it well in shade. Install all tabs of the air filter.

Every year:

 Replace it with a new air cleaning filter for best performance.

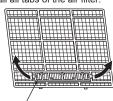


Pull to remove from the air filter


RTS




Replacement of the air cleaning filter <MFZ Type>


- (1) Remove the front panel.
 - 1. Push down the tab on the both sides of the unit to open the front panel.
 - 2. Pull the front panel toward you to remove it.
 - 3. Open the front panel completely and remove it.

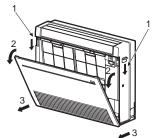

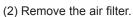

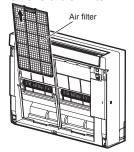

(3) Replace the air cleaning filter. Fix the filter with the tabs securely.

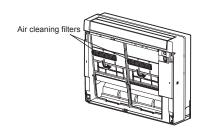


(4) Install the air filter.



(5) Securely close the front panel. Install the front panel by the removal procedure in reverse. Refer to (1) 1-3.

Replacement of the air cleaning filter <MLZ Type>


1. Press the tabs on the intake grille.

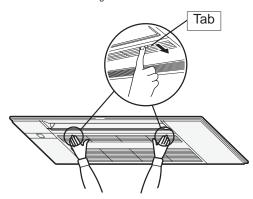

2. Open the intake grille while holding it.



- 3. Remove the air cleaning filter.4. Install a new air cleaning filter.

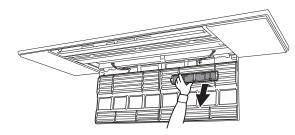

Every 3 months:

vacuum cleaning:

before rinsing it.

tabs of the air filter.

Every year:

· Remove dirt by a vacuum cleaner.


When dirt cannot be removed by

· Soak the filter and its frame in lukewarm water

• Replace it with a new air cleaning filter for best


· After washing, dry it well in shade. Install all

- 5. Close the intake grille.
- Make sure that the safety strings do not hang out of the intake grille.
- 6. Press around the each tab of the intake grille until a "click" is heard and press the center.

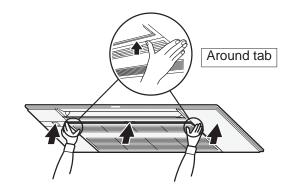



TIMIT ACCOUNT

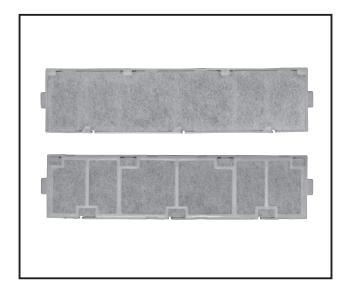

Descriptions

This air cleaning filter catches dead mites and their droppings, pollen and other allergens on the filter filament, then decomposes them with artificial enzymes.

(Artificial enzyme catalyst on the filament catches the allergens and helps the chemical reaction with oxygen and severs the S-S* bonds. *S= Sulfur atoms)

Applicable Models


- MSZ-FH25VE2
- MSZ-FH35VE2
- MSZ-FH50VE2

Specifications

	Filter: Polyester, rayon, acrylic resin Frame: Polypropylene	
Color (Filter)	Blue	


Dimensions

Unit: mm

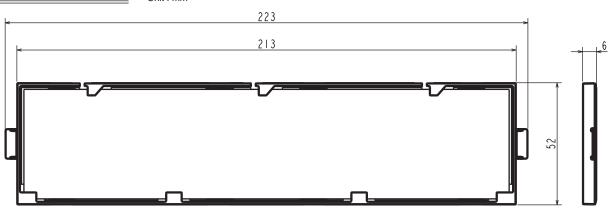

How to Use / How to Install

Replacement of the air cleaning filter

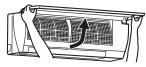

- 1. Lift the front panel until a "click" is heard.
- 2. (1) Remove the air filter.
 - (2) Remove the air cleaning filter.
 - (3) Install a new air cleaning filter.
 - (4) Install the air filter.
- Close the front panel securely and press the positions indicated by the arrows.



Every 3 months:

· Remove dirt by a vacuum cleaner.

When dirt cannot be removed by vacuum cleaning:

- Soak the filter and its frame in lukewarm water before rinsing it.
- After washing, dry it well in shade. Install all tabs of the air filter.


Every year:

 Replace it with a new air cleaning filter for best performance.



Pull to remove from the air filter

OPTIONAL PARTS

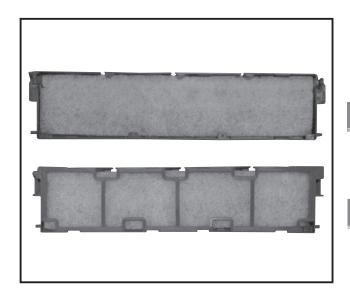

Descriptions

V Blocking Filter with antiviral effect inhibits 99% of adhered virus, and other harmful substances, such as bacteria, mold and allergen.

Two-layered filter with non-woven fabric and electrostatic filter can effectively capture and remove small particles from the air in your room.

Applicable Models


- MSZ-AP15VG
- MSZ-AP20VG
- * Not available for MSZ-AP15/20VG-E1/-E2, VGK-E1

Specifications

	Filter: Polyester, rayon, acrylic resin Frame: Polypropylene
Color (Filter)	Green


Dimensions

Unit: mm

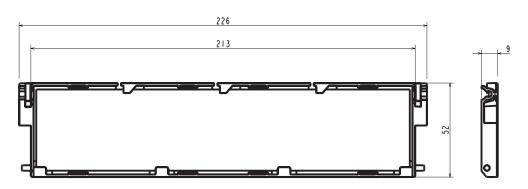

How to Use / How to Install

Replacement of the air cleaning filter

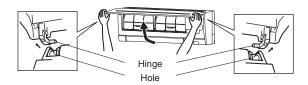

- 1. Lift the front panel until a "click" is heard.
- 2. Hold the hinges and pull to remove as shown in the illustration above.
 - Wipe with a soft dry cloth or rinse it with water.
 - Do not soak it in water for more than two hours.
 - Dry it well in shade.
- Install the front panel by following the removal procedure in reverse. Close the front panel securely and press the positions indicated by the arrows.



Every 3 months:


 Remove dirt by a vacuum cleaner.

When dirt cannot be removed by vacuum cleaning:

- Soak the filter and its frame in lukewarm water before rinsing it.
- After washing, dry it well in shade. Install all tabs of the air filter.


Every year:

Replace it with a new air cleaning filter for best performance.

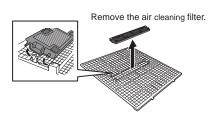



TINIT

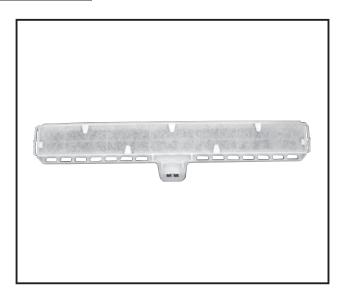

Descriptions

V Blocking Filter with antiviral effect inhibits 99% of adhered virus, and other harmful substances, such as bacteria, mold and allergen.

Two-layered filter with non-woven fabric and electrostatic filter can effectively capture and remove small particles from the air in your room.

Applicable Models


- MSZ-AP60VG
- MSZ-AP71VG


Specifications

	Color	Frame: White, Filter: Green	
Material Frame: PP, Filter: Polyester, rayon		Frame: PP, Filter: Polyester, rayon	
	Weight	40 g	

Dimensions


Unit: mm

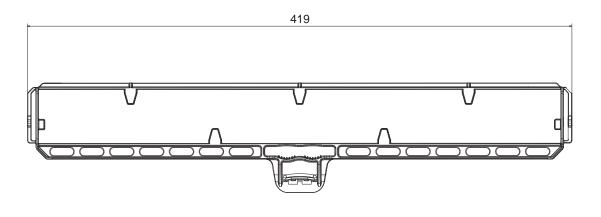

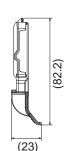

How to Use / How to Install

Replacement of the air cleaning filter

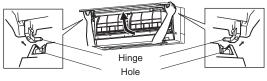

- 1. Lift the front panel until a "click" is heard.
- 2. Hold the hinges and pull to remove as shown in the illustration above.
 - · Wipe with a soft dry cloth or rinse it with water.
 - Do not soak it in water for more than two hours.
 - · Dry it well in shade before installing it.
- Install the front panel by following the removal procedure in reverse. Close the front panel securely and press the positions indicated by the arrows.



Every 3 months:

· Remove dirt by a vacuum cleaner.


When dirt cannot be removed by vacuum cleaning:

 Soak the filter and its frame in lukewarm water before rinsing it.


After washing, dry it well in shade.

Every year:

 Replace it with a new air cleaning filter for best performance.

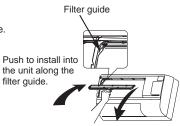

Pull to remove from the unit.

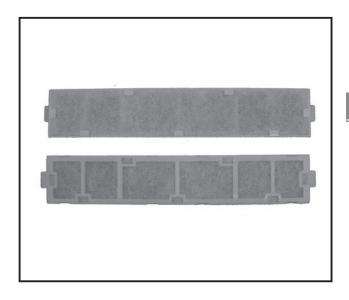

Descriptions

V Blocking Filter with antiviral effect inhibits 99% of adhered virus, and other harmful substances, such as bacteria, mold and allergen.

Two-layered filter with non-woven fabric and electrostatic filter can effectively capture and remove small particles from the air in your room.

applicable Models

■ MSZ-FT25VG ■ MSZ-EF25VGS	S ■ MSZ-HR25VF ■ MFZ-KW25VG
■ MSZ-FT35VG ■ MSZ-EF35VGV	V ■ MSZ-HR35VF ■ MFZ-KW35VG
■ MSZ-FT50VG ■ MSZ-EF35VGE	B ■ MSZ-HR42VF ■ MFZ-KW50VG
■ MSZ-AY25VG ■ MSZ-EF35VGS	S ■ MSZ-HR50VF ■ MFZ-KW60VG
■ MSZ-AY35VG ■ MSZ-EF42VGV	V ■ MSZ-HR60VF ■ MLZ-KP25VG
■ MSZ-AY42VG ■ MSZ-EF42VGE	B ■ MSZ-HR71VF ■ MLZ-KP35VG
■ MSZ-AY50VG ■ MSZ-EF42VGS	S ■ MSZ-DW25VF ■ MLZ-KP50VG
■ MSZ-EF18VGW ■ MSZ-EF50VGV	V ■ MSZ-DW35VF ■ MLZ-KY20VG
■ MSZ-EF18VGB ■ MSZ-EF50VGE	B ■ MSZ-DW50VF ■ PKA-M35LA2
■ MSZ-EF18VGS ■ MSZ-EF50VGS	S ■ MSY-TP35VF ■ PKA-M35LAL2
■ MSZ-EF22VGW ■ MSZ-BT20VG	■ MSY-TP50VF ■ PKA-M50LA2
■ MSZ-EF22VGB ■ MSZ-BT25VG	■ MFZ-KT25VG ■ PKA-M50LAL2
■ MSZ-EF22VGS ■ MSZ-BT35VG	■ MFZ-KT35VG
■ MSZ-EF25VGW ■ MSZ-BT50VG	■ MFZ-KT50VG
■ MSZ-EF25VGB	■ MFZ-KT60VG

Specifications

	Filter: Polyester, rayon, acrylic resin Frame: Polypropylene
Color (Filter)	Green

Dimensions Unit: mm 222 6 212

How to Use / How to Install

Replacement of the air cleaning filter <MSZ Type>



- 1. Lift the front panel until a "click" is heard.
- 2. Hold the hinges and pull to remove as shown in the illustration above.
 - · Wipe with a soft dry cloth or rinse it with water.
 - Do not soak it in water for more than two hours.
- · Dry it well in shade before installing it.
- 3. Install the front panel by following the removal procedure in reverse. Close the front panel securely and press the positions indicated by the arrows.



Every 3 months:


· Remove dirt by a vacuum cleaner.

When dirt cannot be removed by vacuum cleaning:

- Soak the filter and its frame in lukewarm water before rinsing it.
- After washing, dry it well in shade. Install all tabs of the air filter.

Every year:

Replace it with a new air cleaning filter for best performance.

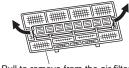


Pull to remove from the air filter



Replacement of the air cleaning filter <MFZ Type>

- 1. Push down the tab on the both sides of the unit to open the front panel.
- 2. Pull the front panel toward you to remove it.
- 3. Open the front panel completely and then remove it.
- Wipe with a soft dry cloth or wash it with water.
- Do not soak it in water for more than two hours.
- Dry it well in shade before installing it.
- 4. Install the front panel by following the removal procedure in reverse.

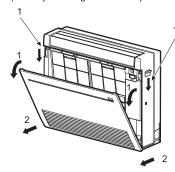

Clean every 3 months:

Remove dirt by a vacuum cleaner.


When dirt cannot be removed by vacuum cleaning: Soak the filter and its frame in lukewarm water

- before rinsing it.
 - (Diluted mild detergents can be used when dirt cannot be removed.)
- After washing, dry it well in shade.

Every year:

· Replace it with a new air cleaning filter for best performance.



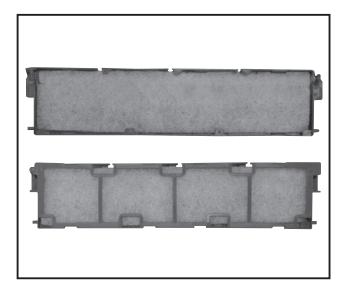

Descriptions

V Blocking Filter with antiviral effect inhibits 99% of adhered virus, and other harmful substances, such as bacteria, mold and allergen.

Two-layered filter with non-woven fabric and electrostatic filter can effectively capture and remove small particles from the air in your room.

Applicable Models

- MSZ-RW25VG
- MSZ-LN35VG2V
- MSZ-RW35VG
- MSZ-LN35VG2R
- MSZ-LN35VG2B
- MSZ-RW50VG

- MSZ-LN18VG2W MSZ-LN50VG2W
- MSZ-LN18VG2V MSZ-LN50VG2V
- MSZ-LN18VG2R
 MSZ-LN50VG2R
- MSZ-LN18VG2B
 MSZ-LN50VG2B
- MSZ-LN25VG2W MSZ-LN60VG2W
- MSZ-LN25VG2V
 MSZ-LN60VG2V


- MSZ-LN25VG2R
 MSZ-LN60VG2R
- MSZ-LN25VG2B MSZ-LN60VG2B
- MSZ-LN35VG2W

Specifications

Material	Filter: Polyester, rayon, acrylic resin Frame: Polypropylene
Color (Filter)	Green


Dimensions

Unit: mm

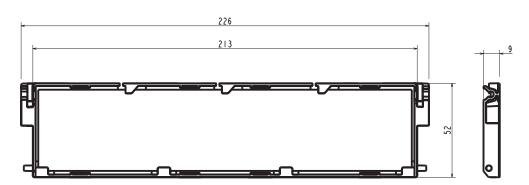


How to Use / How to Install

Replacement of the air cleaning filter

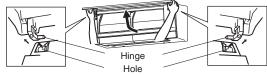

- 1. Lift the front panel until a "click" is heard.
- 2. Hold the hinges and pull to remove as shown in the illustration above.
 - Wipe with a soft dry cloth or rinse it with water.
 - Do not soak it in water for more than two hours.
 - Dry it well in shade before installing it.
- 3. Install the front panel by following the removal procedure in reverse. Close the front panel securely and press the positions indicated by the arrows

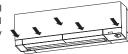


Every 3 months:

Remove dirt by a vacuum cleaner.

When dirt cannot be removed by vacuum cleaning:


- Soak the filter and its frame in lukewarm water before rinsing it.
- After washing, dry it well in shade. Install all tabs of the air filter.

Replace it with a new air cleaning filter for best performance.

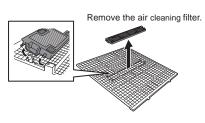



Figure

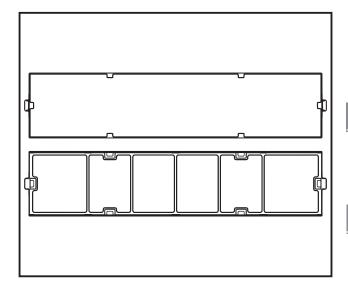

Descriptions

V Blocking Filter with antiviral effect inhibits 99% of adhered virus, and other harmful substances, such as bacteria, mold and allergen.

Two-layered filter with non-woven fabric and electrostatic filter can effectively capture and remove small particles from the air in your room.

Applicable Models


- PKA-M60KA(L)2
- PKA-M71KA(L)2
- PKA-M100KA(L)2

Specifications

	Color	Frame: White, Filter: Green
	Material	Frame: PP, Filter: Polyester, rayon

Dimensions

Unit: mm

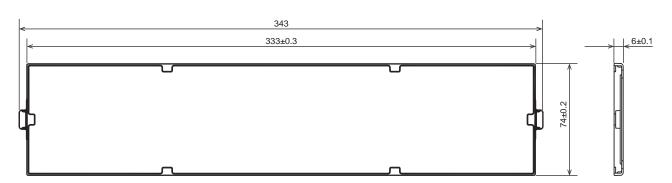

How to Use / How to Install

(Replacement of the AIR CLEANING FILTER)


- 1. Open the front panel.
- 2. Remove the air filter.
- 3. Remove the AIR CLEANING FILTER from the back side of the air filter by pulling up the tabs on both sides of the AIR CLEANING FILTER with your fingers.



- Attach a new AIR CLEANING FILTER to the back side of the air filter. Make sure all 10 tabs are securely fastened.
- 5. Install the air filter to the unit.
- 6. Close the front panel.



PARTS

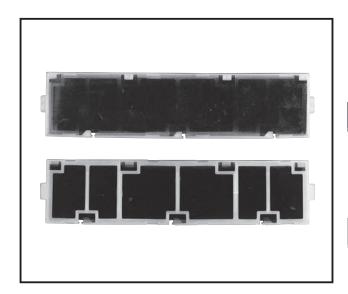

Descriptions

The catalyst coating on the honeycomb-structured frame captures small foul-smelling substances in the air, then breaks down the source of the odors with the power of the ozone generated in a plasma electrode unit.

Applicable Models


- MSZ-FH25VE2
- MSZ-FH35VE2
- MSZ-FH50VE2

Specifications

	Filter: Aluminium Catalyst: MnO ₂ , SiO ₂ Frame: Polypropylene
Color (Filter)	Black

Dimensions

Unit: mm

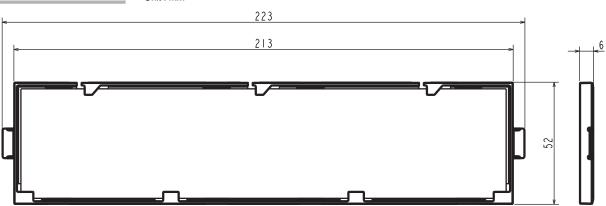

How to Use / How to Install

Replacement of the air cleaning filter



- 1. Lift the front panel until a "click" is heard.
- 2. (1) Remove the air filter.
 - (2) Remove the air cleaning filter.
 - (3) Install a new air cleaning filter.
 - (4) Install the air filter.
- 3. Close the front panel securely and press the positions indicated by the arrows.



- \bullet Remove dirt by a vacuum cleaner, or soak the framed filter in lukewarm water (30 to 40°C) for about 15 minutes. Rinse well.
- After washing, dry it well in shade.

Every 3 months:

• Deodorizing feature recovers by cleaning the filter.

When dirt or smell cannot be removed by cleaning:


• Replace it with a new air cleaning filter.



Pull to remove from the air filter



TINIT

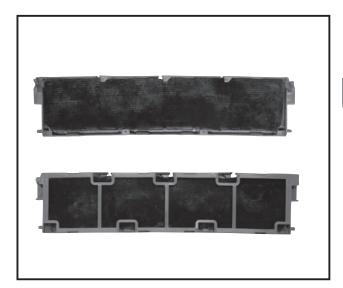

Descriptions

The catalyst coating on the honeycomb-structured frame captures small foul-smelling substances in the air, then breaks down the source of the odors with the power of the ozone generated in a plasma electrode unit.

pplicable Models

- MSZ-RW25VG
- MSZ-RW35VG
- MSZ-RW50VG
- MSZ-LN18VG2W
- MSZ-LN18VG2V
- MSZ-LN18VG2B
- MSZ-LN18VG2R
- MSZ-LN25VG2W ■ MSZ-LN25VG2V
- MSZ-LN25VG2B
- MSZ-LN25VG2R MSZ-LN35VG2W


- MSZ-LN35VG2V
- MSZ-LN35VG2B
- MSZ-LN35VG2R
- MSZ-LN50VG2W
- MSZ-LN50VG2V
- MSZ-LN50VG2B
- MSZ-LN50VG2R
- MSZ-LN60VG2W
- MSZ-LN60VG2V
- MSZ-LN60VG2B
- MSZ-LN60VG2R

Specifications

	Filter: Aluminium Catalyst: MnO ₂ , SiO ₂ Frame: Polypropylene	
Color (Filter)	Black	

Dimensions

Unit: mm

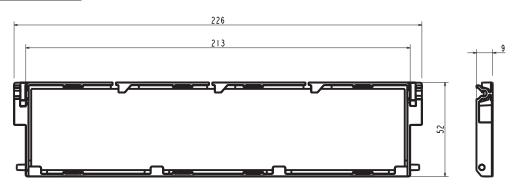

How to Use / How to Install

Replacement of the air cleaning filter



- 1. Open the front panel.
- Note: You cannot remove the front panel.
- 2. Rotate the stoppers as indicated by the arrows until they click.
- 3. Lower the front panel slowly and it will be held open with the stoppers.
- 4. Pinch the tabs on the filters; slightly push them up and pull down toward you to remove the air cleaning filters
- 5. Install the new air cleaning filters.
- 6. Close the front panel securely and press the positions indicated by the arrows.




Every 3 months:


- Remove dirt by a vacuum cleaner, or soak the framed filter in lukewarm water (30 to 40°C) for about 15 minutes. Rinse well.
- After washing, dry it well in shade.

Deodorizing feature recovers by cleaning the filter. When dirt or smell cannot be removed by cleaning:

· Replace it with a new air cleaning filter.

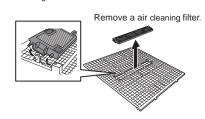

Figure

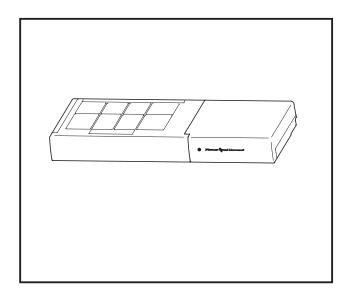

Specifications

Input voltage	Single phase 220 - 240V AC
Frequency	50/60Hz
Power consumption	4W
Size	56 × 499.5 × 168mm
Weight	1600g
Indoor unit connecting cable	Dedicated 5-wire cable

Dimensions

Unit: mm

Descriptions

In the AIR PURIFYING operation, Plasma Quad Connect reduces airborne mold, viruses and allergens.

- Never touch the Plasma Quad Connect during operation. Although the Plasma Quad Connect is safety-conscious design, touching this device could be the cause of trouble as this device discharge high voltage electricity.
- · A "hissing" sound may be heard during the Plasma Quad Connect operation. This sound is produced when plasma is being discharged. This is not a malfunction.

blicab

- MSZ-FT25VG
- MSZ-EF25VGB
- MSZ-HR50VF ■ MSZ-DM25VA

■ MSZ-HR71VF

- MSZ-FT35VG
- MSZ-EF25VGS ■ MSZ-EF35VGW
- MSZ-DM35VA ■ MSZ-HR60VF

■ SEZ-M25DA(L)2


- MSZ-FT50VG ■ MSZ-AP15VG
- MSZ-EF35VGB
- MSZ-DW25VF ■ SEZ-M35DA(L)2 ■ MSZ-DW35VF ■ SEZ-M50DA(L)2
- MSZ-AP20VG
- MSZ-FF35VGS ■ MSZ-EF42VGW
- MSZ-DW50VF SEZ-M60DA(L)2
- MSZ-AY25VG ■ MSZ-AY35VG
- MSZ-EF42VGB ■ MSZ-EF42VGS
- MSY-TP35VF ■ MSY-TP50VF ■ PEAD-M35JA(L)2
- MSZ-AY42VG ■ MSZ-AY50VG
- MSZ-EF50VGW ■ MSZ-EF50VGB
- MSZ-SF15VA ■ PEAD-M50JA(L)2 ■ MSZ-SF20VA ■ PEAD-M60JA(L)2
- MSZ-AP60VG ■ MSZ-AP71VG
- MSZ-EF50VGS ■ MSZ-BT20VG
- MSZ-SF25VE3 PEAD-M71JA(L)2 ■ MSZ-SF35VE3 ■ PEAD-M100JA(L)2
- MSZ-EF18VGW ■ MSZ-EF18VGB

■ MSZ-EF25VGW

- MSZ-BT25VG
- MSZ-BT35VG
- MSZ-EF18VGS ■ MSZ-BT50VG ■ MSZ-EF22VGW
- MSZ-EF22VGB ■ MSZ-EF22VGS
- MSZ-HR25VF ■ MSZ-HR35VF ■ MSZ-HR42VF
- MSZ-SF50VE3 PEAD-M140JA(L)2 ■ MSZ-GF60VE2 ■ PKA-M35LA(L)2

■ MSZ-SF42VE3 ■ PEAD-M125JA(L)2

- MSZ-GF71VE2 PKA-M50LA(L)2 ■ MSZ-WN25VA ■ PKA-M60LA(L)2
- MSZ-WN35VA PKA-M71LA(L)2
 - PKA-M100LA(L)2
- S-series ceiling-concealed models
- P-series ceiling-concealed models (except for PEA series)
- P-series wall-mounted models

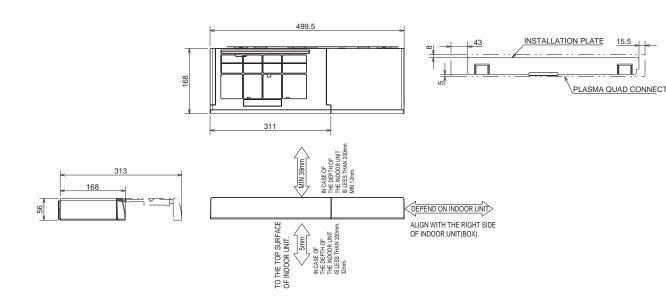








Dimensions

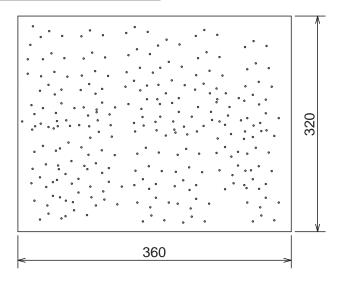

Descriptions

The SOFT DRY CLOTH must be used when wiping the surfaces of indoor units of the air conditioners as it offers gentle cleaning with minimum abrasion. Wash the SOFT DRY CLOTH with water at temperatures of 60 °C or below.

Applicable Models

- MSZ-LN18VG2W
 - MSZ-EF18VGW
- MSZ-LN18VG2V
- MSZ-EF18VGB
- MSZ-LN18VG2B
- MSZ-EF18VGS
- MSZ-LN18VG2R
- MSZ-LN25VG2W
- MSZ-EF22VGW
- MSZ-LN25VG2V
- MSZ-EF22VGB ■ MSZ-EF22VGS
- MSZ-LN25VG2B
- MSZ-EF25VGW
- MSZ-LN25VG2R
- MSZ-EF25VGB
- MSZ-LN35VG2W ■ MSZ-LN35VG2V
- MSZ-EF25VGS
- MSZ-LN35VG2B
- MSZ-EF35VGW
- MSZ-LN35VG2R
- MSZ-EF35VGB
- MSZ-LN50VG2W
- MSZ-EF35VGS
- MSZ-LN50VG2V ■ MSZ-LN50VG2B
- MSZ-EF42VGW
- MSZ-LN50VG2R
- MSZ-EF42VGB ■ MSZ-EF42VGS
- MSZ-LN60VG2W
- MSZ-EF50VGW
- MSZ-LN60VG2V
- MSZ-EF50VGB
- MSZ-LN60VG2B ■ MSZ-LN60VG2R
- MSZ-EF50VGS

Specifications

Fiber Composition	87% PET, 13% Nylon
Thickness	0.75mm
Weight	218 gsm
Total Absorption (%) Effective Absorption (%) Tensile and Elongation	575 450
Tensile Machine Direction Tensile Cross Direction	19Kgf 13Kgf
Elongation Machine Direction	85%
Elongation Cross Direction	100%
Laundering	Launderable to 60 °C
Shrinkage after 20 MW	9% or less

^{* &}quot;MAC-1001CL-E" is provided with MSZ-EF18/22/25/35/ 42/50VE3B as a standard component.

SYSTEM CONTROL Interface

Descriptions

Enables to control multiple air conditioners from a (remote) location by connecting the On/Off contact point. It can also control the operation of the relay with error signals by connecting the MA remote controller.

pplicable Models

- MSZ-RW25,35,50VG
- MSZ-LN18,25,35,50,60VG2W,V,R,B
- MSZ-FT25,35,50VG
- MSZ-AP15,20VG
- MSZ-AY25,35,42,50VG
- MSZ-AP60,71VG
- MSZ-EF18,22,25,35,42,50VGW,B,S
- MSZ-BT20,25,35,50VG
- MSZ-HR25,35,42,50,60,71VF
- MSZ-DW25,35,50VF
- MSY-TP35,50VF
- MSZ-FH25,35,50VE2
- MSZ-SF15,20VA
- MSZ-SF25,35,42,50VE3
- MSZ-GF60,71VE2
- MSZ-WN25,35VA
- MSZ-DM25,35VA


- MFZ-KT25,35,50,60VG
- MFZ-KW25,35,50,60VG
- MLZ-KP25,35,50VF
- MLZ-KY20VG
- SLZ-M15,25,35,50,60FA2
- SEZ-M25,35,50,60,71DA(L)2
- SFZ-M25,35,50,60,71VA
- PLA-ZM35,50,60,71,100,125,140EA2
- PLA-M35,50,60,71,100,125,140EA2
- PEAD-M35,50,60,71,100,125,140JA(L)2
- PEA-M200,250LA2
- PKA-M35,50,60,71,100LA(L)2
- PCA-M35,50,60,71KA2
- S-series models
- In the case the outdoor unit is SUZ or MXZ, ■ P-series models: the indoor of P-series can be connected.

(For grouping SUZ/MXZ outdoor units with P or S series indoor units, interface is required)

pecifications

Power		12V DC (supplied from indoor unit)
Operating conditions		Indoor only (ambient temperature: 0 to 40°C, no condensation)
Connection of MA smooth remote controller	Communication cable	2-wire (recommended: optional PAC remote controller cable PAC-YT81HC)
/ MA deluxe remote controller	Communication cable distance	Max. 10m
Indoor unit connecting cable	-	Dedicated 5-wire cable
Weight		360 g (including indoor unit connecting cable)

Dimensions

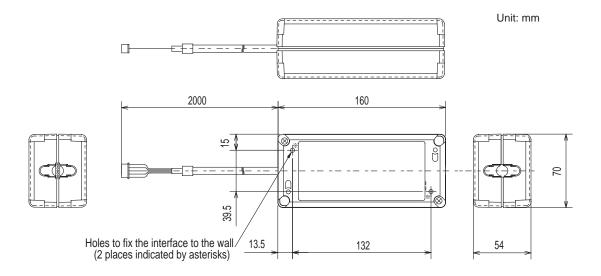

How to Use / How to Install

1. Before Installation

1.1. How to Use the SYSTEM CONTROL Interface.

■Functions

Connecting with M-NET system (Fig. 2-1)

The room air conditioner can be managed centralized or individually by the system controller using M-NET communications control.

Used as wired remote controller (Fig. 2-2)


MA remote controller can be used as a wired remote controller.

Remote control (Fig. 2-3)


Contact signals enable inputting of ON/OFF, prohibiting/allowing operation, and heating/cooling.

Status indicator output (Fig. 2-4)

Signals of ON/OFF, error/normal, heater ON/OFF, and humidifier ON/OFF are output.

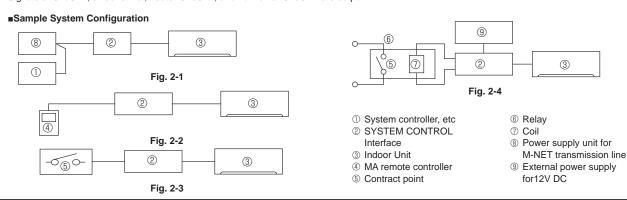

2. Function and electric wiring of interface each part

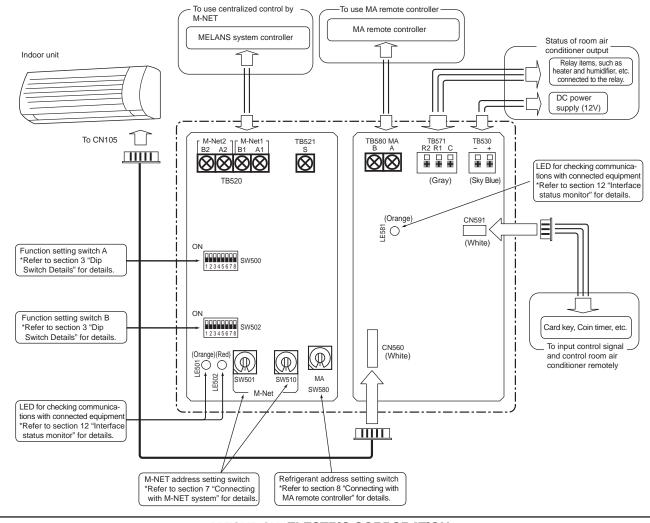

Functions	SW No.	Functions		OFF (Factory setting)	ON		
	SW500-1	1 Output setting		Switching output of heater ON/OFF (single operation)			
Function setting Switch A	SW500-2	Turn on/off with power		Not available	Available		
	SW500-3	Room temperature detector		Indoor unit	MA remote controller		
	SW500-4 SW500-5	Output setting		Switching output of ON/OFF, error/normal, heater ON/OFF, and humidifier ON/OFF			
	SW500-6	Input setting		Input of ON/OFF and prohibiting/allowing operation	Input of ON/OFF and heating/cooling		
	SW500-7	Interface status display switching		LE501: Confirmation of communications with indoor unit LE502: Confirmation of communications with M-NET LE581: Confirmation of supplying power to MA remote controller	LE501: Confirmation of communications with MA remote controller LE502: Extinguished LE581: Confirmation of supplying power to MA remote controller		
	SW500-8	Not in use		— (Set to OFF)	_		
	SW502-1	Output switching		12 VDC output during operation or error, etc	12 VDC output during stop or operating normally, etc		
	SW502-2	Input mode		Level contact	Pulse contact		
	SW502-3	Setting of range of prohibited operations by contact point		M-NET system controller ON/OFF operation allowed	M-NET system controller ON/OFF operation prohibited		
	SW502-4	Input switching	Input mode when level contact	Running or operating the machine is prohibited, etc by short circuiting the level contact	Running or operating machine is prohibited, etc by level contact opening		
Function			Input mode when pulse contact	ON/OFF is inverted by pressing pulse contact	ON or OFF no matter how many times pulse contact is pressed		
Switch B	SW502-5	Behavior when operation by contact point is prohibited		State before prohibition of operation by contact point	Air conditioner running stop		
		Behavior when prohibition of operation by contact point is canceled		State before canceling prohibition of operation by contact point	Running air conditioner		
	SW502-7	Dual auto mode*		Available	Not available		
	5002-8	Setting when P series is mixed in the same group (only when running group operation using the MA remote controller)		No mixture	Mixed		

^{*} This function cannot be used regardless of the setting of SW502-7 when any of System controller, ME remote controller, or MA remote controller which are not compatible with Dual auto mode are connected to this interface unit.

This function cannot be used regardless of the setting of SW502-7 when the air conditioner which is not compatible with Dual auto mode is set in the same group. When you connect MA remote controller to an indoor unit, Dual auto mode is not available. (Set SW502-7 ON.)

When you use this function, the operation mode cannot be set to automatic by the remote controller attached to the air conditioner.


4. Parts

	Accessory										
0	Interface unit [with connecting cable (5-core)]		1	6	Mounting cord clamps (medium)		4	9	Fasteners (for joining the wires)	@market and a	5
0	Screws for mounting 3.5×12	& MID	2	6	Mounting cord clamps (large)		3	0	Lead wires (3-core)		1
8	Cushioning material (with adhesive)		1	0	Screws for mounting 3.5 x 12 4, and 6 (Use when attaching the clamps to the interface unit)	(Simp	4	0	Screws for mounting 4 x 10 (Use when fixing near the room air conditioner)	Øm.	1
4	Mounting cord clamps (small)		2	8	Cable ties		9	®	Screws for mounting 4 x 16 (Use when joining room air conditioner parts)	(Min)	1

	Item to be Prepare at the Installation Site					
4	M-NET communication cable	2-core shield cables CVVS/CPEVS,1.25 mm² [AWG 16] or more.* • When cross-wired by same terminal box, 1.25 mm² [AWG 16] is used. CPEVS: PE insulated PVC jacketed shielded communication cable CVVS: PVC insulated PVC jacketed shielded control cable PE: Polyethylene PVC: Polyvinyl chloride				
3	Remote control cable (for connecting the ME Remote Controller)	2-core shield cables CVVS/CPEVS* • When the distance from the interface unit • is less than 10 m: 0.3 mm² [33 ft.: AWG 22] or more.* • When the distance from the interface unit • is not less than 10 m: 1.25 mm² [33 ft.: AWG 16] or more.*				
0	Remote control cable (for connecting the MA Remote Controller)	2-core sheath cable 0.3 mm² to 1.25 mm²* [AWG 22 to 16]*				
Signal cable (also used as extension cable) Sheath cable 0.3 mm² [AWG 22] or more.* When remote control: The extension cable of Lead wires When status signal output: The cable for relay connection, or cable for DC power						
9	Related parts sold separately Prepare the necessary number of parts sold separately as needed for your system.					

Please use cable with supplementary insulation.
 Use wires which have insulation more than the MAX voltage.
 MAX voltage is defined according to the law of the country where the interface is used.

• Connect the interface unit ① and the indoor control board of a room air conditioner using the connecting cable (5-core) that comes with the interface unit ①.

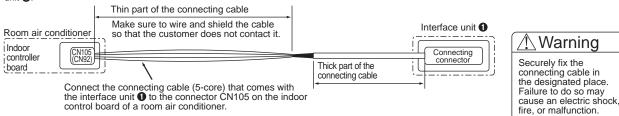


The connecting cable (5-core) connected to a room air conditioner should be wired according to the room air conditioner installation manual.

Notes

- Extending or shortening the connecting cable (5-core) that comes out of the interface unit **①** cause it to malfunction. Also, keep the connecting cable (5-core) as far as possible away from the electrical wires and ground wire. Do not bundle them together.
- To prevent the board from being damaged by static electricity, always remove static electricity before starting work.

6. Connecting the SYSTEM CONTROL Interface with each system (For details on each system, see the relevant instruction manual.)

- Screw the mounting cord clamp **①** ~ **①** according to the thickness of the connecting cable used for each system. Fasten the cable tie **②** as shown in the figure to prevent undesirable movement of the connecting cable
- The connecting cable (5-core) connected to a room air conditioner should be mounted at the room air conditioner or its vicinity.

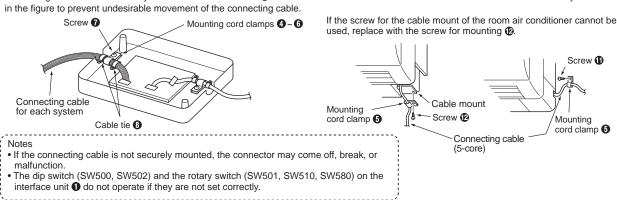


• Conduct the settings of the interface unit ① dip switch (SW500, SW502) and rotary switch (SW501, SW510, SW580) before turning on the power.


7. Connecting with M-NET system

■ Connecting the SYSTEM CONTROL Interface to M-NET cable

The room air conditioner can be managed centralized or individually by the system controller using M-NET communications control.

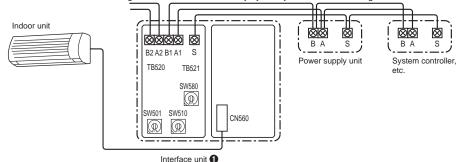

- To connect with the system controller and ME remote controller, connect the M-NET communication cable ② or ME remote control cable ③ with TB520. (It is unpolarized.) Connect 2 core communication cable with A1/B1 or A2/B2. (There will be no problems with connecting to either one.)
- Cross the shield portion of each connecting cable using the S terminal only when cross wiring the communication cables **3**.
 After wiring is complete, mount securely with any of mounting cord clamp **3** to **3**, and fix with cable tie **3** as shown in the figure.

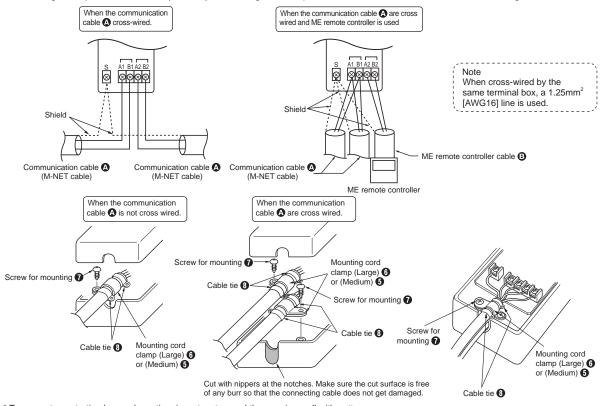

- To prevent penetration by condensation, insects, etc., seal the opening well with putty.
- Notes
- Electrical work should be performed in accordance with the Technical Standards Regarding Electrical Equipment and the Interior Wiring Standards. Connecting wires and remote control cables should be located as far away from other electrical wiring as possible. Placing them too closely together could cause a malfunction.
- To connect with the M-NET system and MA remote controller, connection is limited to only one unit of the MA remote controller.
- Do not put in the same group as City Multi or P series.
- Test run cannot be conducted from the ME remote controller or the system controller.

■ Setting when M-NET is connected

SW No.	Address	Comments
SW510 SW501	M-NET address 10s position 1s position SW510 SW501	SW510 sets the 10s position of the address and SW501 sets the 1s position of the address. (Address setting can be set from 01 \sim 50.) For example, to set a unit to the address 25, set SW510 to "2" and SW501 to "5." * The figure to the left is for address 1.
SW580	Refrigerant address SW580	When the MA remote controller is not used, set the refrigerant address (SW580) to "1."

8. Connecting with MA remote controller

Interface unit 1


■ Connecting the SYSTEM CONTROL Interface to MA remote controller A room air conditioner can be operated with the wired remote control. MA remote controller cable (9 Indoor unit SW500 Screw for mounting 7 00000000 TB580 Mounting cord MA remote controller clamp (Large) 6 or (Medium) 6 MA remote controller MA remote CN560 Cable tie 3 (R) controller cable @

- To connect with the MA remote controller, connect the MA remote control cable @ with TB580. (It is unpolarized.)
- When more than one unit of room air conditioner is operated in a group, make a cross wire connection at TB580 with the MA remote control cable ②.
- The MA remote controller can carry out simultaneous control of up to 16 sets of room air conditioners.
- Up to two MA remote controllers can be connected in one group However, up to one can be connected when using PAR-CTO*MA.
- Wiring length from the interface at the refrigerant address "0" to the MA remote controller should be less than 10 m [33 ft.].
- To operate the room air conditioner in a group, make the total length of wiring for the MA remote controller less than 50 m [164 ft.].

Notes

- · Be sure to set the "Auto Heating/Cooling Display Setting" of the MA remote controller OFF before use.
- * For details on the "Auto Heating/Cooling Display Setting", refer to the MA
- remote controller instruction manual.

 * When the "Auto Heating/Cooling Display Setting" is ON, the remote controller display may differ from the actual operating status of the unit.
- A test run cannot be initiated using the test run switch on the MA remote controller.
- Group control with CITY MULTI is unable.
- When you use the PAR-CT0*MA with M-NET system, follow the restrictions below
- 1. Be sure to set "Brightness setting" of PAR-CT0*MA to "Low".
- 2. The wiring length from the interface at the refrigerant address "0" to the PAR-CT0*MA should be less than 7 m [23 ft.].
- 3. Some room air conditioners cannot be used.
- Make sure the room air conditioner can be used before installing it.
- 4. Do not use the external output (CN104) of the indoor unit. If the indoor unit does not have the external output (CN104), you cannot use the PAR-CT0*MA with M-NET system.
- When you use the PAR-4*MA with M-NET system, follow either one of the restrictions below.
 - Be sure to set "Brightness setting" of PAR-4*MA to "Low".
 - Do not use "Setting Signal Output" of this interface unit.

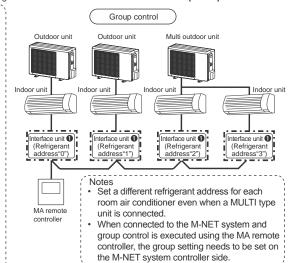

MA remote controller or Interface unit

Setting when MA remote controller is connected

Setup of an refrigerant address

Octup of all Telliger	ant address	
SW No.	Refrigerant address	Comments
SW580	Address can be set from 0 to 15	 Set the refrigerant address of the unit that supplies electric power to the MA remote controller to "0." When carrying out group operation of two of more room air conditioners, set different refrigerant addresses within the group. *A to F of the rotary switch correspond to refrigerant addresses 10 to 15.

Setup of Room temperature detector position

Functions	SW No.	Operating details
Room temperature detector position	SW500 ON OFF	SW500-3: OFF Temperature detected by suction temperature sensor of the unit is made to be room temperature. SW500-3: ON Temperature detected by temperature sensor of the remote controller is made to be room temperature.


Setting when P series is mixed in the same group (only when running group operation using the MA remote controller)


Functions	SW No.	Operating details
P series is mixed in the same group	SW502 ON	SW502-8: OFF • Set to OFF when P series is not mixed in the same group. SW502-8: ON • Set to ON when P series is mixed in the same group.

9. Remote Control

■ Connecting the SYSTEM CONTROL Interface

You can turn room air conditioner on/off, prohibit/allow manual operations, or input of heating/cooling with the ON/OFF switch.

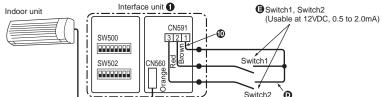

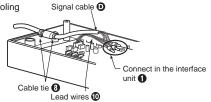

- •Connect CN591 with Switch1 and Switch2 as shown in figure above.
- •Connect the supplied lead wires (3-core) **(0)** to the connector CN591 on the interface unit.
- •Connect the supplied lead wires (3-core) (1) to the connecting cable (1) in the interface (1) as shown in the figure on the right side.
- •Wiring length from the interface to the Switch1 and Switch2 should be less than 50m [164ft].
- Procure and wire locally the remote control part including the switches.
- For each connection pattern, refer to "Setting when using remote control."
- *When using a Card key/Coin timer, make connections shown in the figure to the right.

Card key coin timer connection Interface unit SW500 SW500 CN560 SW502 CN560 SW502 CN560 SW502 CN560 CN

■ Setting when using remote control (Select one between No.1 through 5 and set.)

*Set No.1, No.6, and No.7 when using the card key/coin timer.

No.	Functions	SW No.	How to use	Operating details
1	ON/OFF Manual operation prohibited/allowed (Level Contact)	SW500 SW502	Switch 1: ON/OFF Switch 2: ON/OFF Switch 2: Manual operation prohibited/allowed	Unit is turned on when Switch1 has a short-circuit, and off when open. (Regardless of the Switch1 operation condition, the latest operation is prioritized.) When Switch2 has a short-circuit, manual operation is prohibited, and when open, manual operation is allowed. When SW502-4 is turned on, the opening and short-circuiting of Switch1 and Switch2 result in their operating in the opposite manner. *When manual operation is prohibited, ON/OFF operation of the wireless remote controller, the MA remote controller, and the ME remote controller is prohibited. (Operation from Switch1 and M-NET system controller is possible.)
2	ON/OFF Manual operation prohibited/allowed (Pulse Contact)	\$W500 \$W502	Switch1: ON/OFF Switch2: Manual operation prohibited/allowed	Every time Switch1 is pressed, ON/OFF is switched over. (Regardless of the Switch1 operation condition, the latest operation is prioritized.) Every time Switch2 is pressed, the manual operation prohibited*/the manual operation allowed is switched over. *When the manual operation is prohibited, ON/OFF operation of the wireless remote controller, the MA remote controller, and the ME remote controller is prohibited. (Operation from Switch1 and M-NET system controller is possible.)
3	ON/OFF Remote operation/ Manual operation (Level Contact)	SW500 SW502	Switch1: ON/OFF Switch2: Red Switch2: Remote operation/ Manual operation	Unit is turned on when Switch1 has a short-circuit, and off when open. When Switch2 has a short-circuit, only Switch1 is enabled (remote operation)*, when open, only Switch1 is disabled (manual operation). When SW502-4 is turned on, the opening and short-circuiting of Switch1 and Switch2 result in their operating in the opposite manner. In remote operation, ON/OFF operation from the wireless remote controller, the MA remote controller, the ME remote controller, and the M-NET system controller cannot be used.
4	ON, OFF (Pulse Contact)	\$W500 \$W502	Switch1: ON Switch2: OFF	Unit is turned on no matter how many times Switch1 is pressed. Unit is turned off no matter how many times Switch2 is pressed. And regardless of the Switch1, Switch2 operation condition, the latest operation is prioritized. ON/OFF operation from the wireless remote controller, the ME remote controller, the MA remote controller, and the M-NET system controller is enabled.
5	Heating/cooling input (Level Contact)	\$W500 SW500 \$W502	Switch1: ON/OFF Switch2: CN591 Switch2: Heating/Cooling	Unit is turned on when Switch1 has a short circuit, and off when open. Heating runs when Switch2 has a short circuit, and cooling runs when open. When SW502-4 is turned on, the opening and short-circuiting of Switch1 and Switch2 result in their operating in the opposite manner. * As for ON/OFF operation and heating/cooling operation from the wireless remote controller, Ma remote controller, ME remote controller, Switch1, and Switch2, the latest operation is prioritized.


■ Setting operation (Valid only for No.1 and No.2. The following 2 functions can be used at the same time.)


No.	Functions	SW No. How to use		Operating details	
6	Behavior when operation is prohibited.	SW502 ON OFF	air conditioner when manual operation is	SW502-5: OFF When manual operation is prohibited by Switch2, operational status is maintained as that before manual operation is prohibited. SW502-5: ON When manual operation is prohibited by Switch2, the room air conditioner turns off.	
7	Behavior when prohibition of operation is canceled.	SW502 ON OFF	prohibition of manual	SW502-6: OFF • When prohibition of manual operation is canceled by Switch2, operational status is maintained as that before cancelation. SW502-6: ON • When prohibition of manual operation is canceled by Switch2, the room air conditioner turns on.	

NDOOR UNIT

■ Connecting the SYSTEM CONTROL Interface

Each relay can be turned ON/OFF by synchronizing with the room air conditioner's ON/OFF, error/normal, Heater ON/Heater OFF, and Humidifier ON/Humidifier OFF.

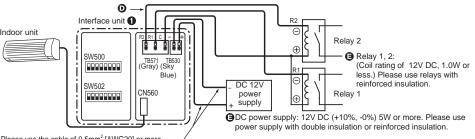

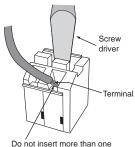

Do not insert more than one connecting cable into each terminal of TB571 and TB530.

Notes

- Connecting terminal TB530 for power supply is polarized, so confirm proper polarity of the terminals before connecting.
- Do not connect 12V DC from the DC power supply to TB571.
- Confirm polarity when using a diode built-in relay. C of TB571 is electropositive potential ⊕, and R1 and R2 are negative potential ⊖.
- For TB571 and TB530, insert wiring after inserting the flathead screwdriver into the terminal.
- Appropriate electric wire for TB571 and TB530 is as follows. Stranded wire: 0.3mm² to 1.25mm² [AWG22 to 16] Solid wire: Ø0.4mm to Ø1.2mm [Ø1/64in. to Ø3/64in.]
- Peeling dimension of the electric wire for TB571 and TB530 is 7mm to 10mm [9/32in. to 25/64in.].
- Wiring length from the interface to Relay 1 and Relay 2 should be less than 50m [164ft].

■ Setting when using Status Signal Output


Functions	SW No.	Operating details
ON/OFF, Error/ Normal Output	SW500 SW502 ON OFF	SW502-1: OFF • Relay 1 is on when room air conditioner is on, and off when room air conditioner is off. • Relay 2 is on when room air conditioner is in error, and off when room air conditioner is operating normally. SW502-1: ON • Relay 1 and 2 behavior are opposite of those above.
ON/OFF, Heater Control Output	SW500 SW502 OFF	SW502-1: OFF • Relay 1 is on when room air conditioner is on, and off when room air conditioner is off. • When the air conditioner runs in the heating (automatic heating) mode and room temperature becomes the set temperature - 2.5 °C (4.5 °F) or lower, the Relay 2 (heater) turns on. When the air conditioner runs in a mode other than the heating (automatic heating) or it is OFF, or when room temperature becomes the set temperature or higher, the Relay 2 (heater) turns off. SW502-1: ON • Relay 1 and 2 behavior are opposite of those above.
ON/OFF, Humidifier Control Output	SW500 SW502 OFF	SW502-1: OFF • Relay 1 is on when room air conditioner is on, and off when room air conditioner is off. • When the air conditioner runs in the heating (automatic heating) mode, Relay 2 (humidifier) turns on. When the air conditioner runs in a mode other than heating (automatic heating) or it is OFF, Relay 2 (humidifier) turns off. SW502-1: ON • Relay 1 and 2 behavior are opposite of those above.
Heater Control, Humidifier Control Output*	SW500 SW502 OFF	SW502-1: OFF • When the air conditioner runs in the heating (automatic heating) mode and room temperature becomes the set temperature - 2.5 °C (4.5 °F) or lower, Relay 1 (heater) turns on. When the air conditioner runs in a mode other than the heating (automatic heating) or it is OFF, or when room temperature becomes the set temperature or higher, Relay 1 (heater) turns off. • When the air conditioner runs in the heating (automatic heating) mode, Relay 2 (humidifier) turns on. When the air conditioner runs in a mode other than heating (automatic heating) or OFF, Relay 2 (humidifier) turns off. SW502-1: ON • Relay 1 and 2 behavior are opposite of those above.
ON/OFF, Humidifier Control (single operation) Output	SW500 SW502	Relay 1 is on when ON is set by System controller, ME remote controller or MA remote controller, and off when OFF is set by these controllers. When room temperature becomes the set temperature or lower in the heating (automatic heating) mode, the Relay 2 (heater) turns on. When a mode other than heating (automatic heating) or OFF is set by System controller, ME remote controller or MA remote controller, or when room temperature becomes higher than the set temperature + 1 °C (2 °F), the Relay 2 (heater) turns off. * This function is to run the heater instead of the air conditioner in the heating mode. The air conditioner stops in the heating mode. Do not use the remote controller attached to the air conditioner. If you use it, the operation may not reflect the setting. The position of detecting the room temperature is where MA remote controller is put, so make sure to connect it to the interface unit.

11. Turn on/off with power

The room air conditioner turns on when power is supplied.

- When using for the first time, set to the operational status of your choice with the remote controller and leave the power off for 1 minute.

 * When not used for a long period of time, you should set to the operational status of your choice again with the remote controller.

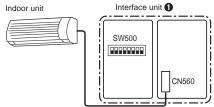

Notes


- The turn on/off with power function cannot be used when connected to multiple outdoor units.
- When starting two or more room air conditioners by using the turn on/off with power function, make the system so they do not recover simultaneously. (To avoid inrush current, start sequentially.)

Setting when using Turn on/off with power

Functions	SW No.	Operating details
Turn on/off with power	SW500 ON OFF	SW500-2: OFF • After the power is supplied, the room air conditioner resumes working in the previous running condition. When AUTO RESTART FUNCTION is not set to the room air conditioner, it remains off. SW500-2: ON • The room air conditioner turns on when power is supplied.

12. Interface status monitor

You can check the status of the interface unit by the LED lamp on the interface unit 10 board.

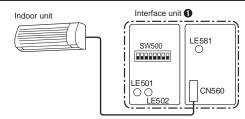

• Use the table below to check communications. If communications cannot be carried out normally, check that the relevant communications line is not disconnected from the connector or terminal box.

Functions	SW No.	Operating details
Interface status monitor	SW500 ON OFF	SW500-7: OFF ■ LE501 (Orange): When blinking at an interval of about 1 second, the Interface unit is communicating normally with the room air conditioner. When the lamp is off, the Interface unit is not communicating normally with the room air conditioner. ■ LE502 (Red): When blinking at an interval of about 1 minute, the Interface unit is communicating normally with the M-NET controller. When the lamp is off, the Interface unit is not communicating normally with the M-NET controller. SW500-7: ON ■ LE501 (Orange): When blinking at an interval of about 10 second, the Interface unit is communicating normally with the MA remote controller. When the lamp is off, the Interface unit is not communicating normally with the MA remote controller. ■ LE502 (Red): Extinguished * LE581 (Orange) displays the following status irrespective whether SW500-7 is on or off. ■ When lit, power is supplied to the MA remote controller from the Interface unit ①. When extinguished, power is not supplied.

13. Mounting the SYSTEM CONTROL Interface Unit

Notes

- The Interface unit 1 should be placed in a location where the connecting cable (5-core) from the interface unit 1 can reach an indoor unit.
- The device will not function properly the connecting cable is extended, so the connecting cable (5-core) should no be extended.
 Mount the interface unit ① securely to a pillar or wall using 2 or more screws ②.




Attach the connecting cable (5-core) of the interface unit 1 here. Store extra connecting cable (5-core) in the ductwork space behind the air conditioner

If there is any slack in the connecting cable (5-core), use a fastener 9 to keep it in place.

■ When Mounting Directly to a Wall


or more

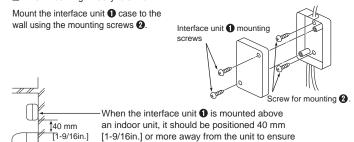

that ceiling grills can be removed.

■ When mounting the interface unit inside a ceiling

When mounting the interface unit 1 inside a ceiling or wall, install an access door to facilitate maintenance.

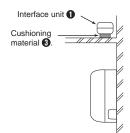

* When mounting the interface unit 1 using a cushioning material 3, be sure to mount it in a location where it will not fall.

14. Notes Regarding Use

The following control information should be thoroughly explained and provided to the users of this device. (Please provide these instructions to the user once the installation is complete.)

This Interface unit 10 operates room air conditioners using the controls of a City-Multi or P series, but there are several limitations imposed as a result of the functional differences between room air conditioners and packaged air conditioners.

- 1. When operating the system using a System Controller, MA Remote Controller, or ME Remote Controller these operations will not appear on the display of the wireless remote controller.
- 2. When original dehumidification mode is set with the remote controller attached to the room air conditioner, "Dry" is displayed because there is no mode corresponding to dehumidification on the MA remote controller, ME remote controller, and the system controller.
- 3. Because the temperature range of the room air conditioners is broader than a System Controller, MA Remote Controller, or ME Remote Controller, when the room air conditioners is set to lower than 17°C (63°F) or higher than 30°C (87°F), the temperature display on the a System Controller, MA Remote Controller, or ME Remote Controller will show the minimum or maximum temperature that can be set. (For example, even if the room air conditioner is set to cool a room to 16°C (61°F), the display on a System Controller, MA Remote controller, or ME Remote Controller may read "17°C"
- 4. Timer operations should be set using only the remote controller that came with the room air conditioners or the a System Controller, MA Remote Controller, or ME Remote Controller. If both are used to set the timer to the same time, the timer will not function properly.
- 5. When "Manual operation prohibited" (ON/OFF, setting temperature, operation mode) is set with the system controller, the corresponding operation by the remote controller attached to the room air conditioner is not accepted, but allowed operation is reflected. A beep sounds during operation to confirm reception.
- 6. A part of functions including the operation of horizontal air blow direction cannot be used from the ME remote controller, the system controller, and the MA remote controller
- 7. "Manual operation prohibited" (filter sign, air direction, fan speed, timer) cannot be set by system controller.

15. Specifications

Indoor unit side	Input voltage	12V
	Power consumption	1.8W
	Input current	0.15A
	Input voltage	12V
Power supply unit side	Power consumption	4.8W
	Input current	0.4A



MA Interface

Descriptions

Enable to connect the MA remote controller.

Applicable Models


- MSZ-RW25,35,50VG
- MSZ-LN18,25,35,50,60VG2W,V,R,B
- MSZ-FT25,35,50VG
- MSZ-AP15,20VG
- MSZ-AY25,35,42,50VG
- MSZ-AP60,71VG
- MSZ-EF18,22,25,35,42,50VGW,B,S
- MSZ-BT20,25,35,50VG
- MSZ-HR25,35,42,50,60,71VF
- MSZ-DW25,35,50VF
- MSY-TP35,50VF
- MSZ-FH25,35,50VE2
- MSZ-SF15,20VA
- MSZ-SF25,35,42,50VE3
- MSZ-GF60,71VE2
- MSZ-WN25,35VA
- MSZ-DM25.35VA
- MFZ-KT25,35,50,60VG
- MFZ-KW25,35,50,60VG
- MLZ-KP25,35,50VF
- MLZ-KY20VG


Specifications

Power		12V DC (supplied from indoor unit)		
Operating conditions		Indoor only (ambient temperature: 0 to 40°C, no condensation)		
Connection of MA smooth remote controller	Communication cable	2-wire (recommended: optional PAC remote controller cable PAC-YT81HC)		
/ MA deluxe remote controller	Communication cable distance	Max. 10m		
Indoor unit connecting cable		Dedicated 5-wire cable		
Weight		180g (including indoor unit connecting cable)		

Dimensions



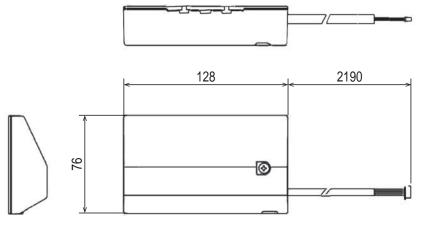

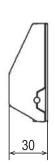



How to Use / How to Install

1. Before Installation

1.1. How to Use the MA Interface

■ Functions

Use as wired remote controller (Fig. 1-1)

You can use the MA remote controller as a wired remote controller.

■ Sample System Con iguration

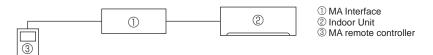


Fig. 1-1

1.2. Parts


Before installing the unit, make sure that you have all the necessary parts.

	Accessory						
0	Interface unit [with connecting cable (5-core) and screw]		1	6	Fasteners (for joining the wires)	@particular of	3
2	Mounting cord clamps		1	6	Screws for mounting 4 x 16 (Use them to fix the cord clamp 2)	(MIII)	1
8	Screws for mounting 3.5 × 12 (Use them to fix the interface holder ②)	& MID	2	0	Interface holder		1
4	Cable ties		3				

Item to be Prepare at the Installation Site					
Remote control cable (for connecting the MA Remote Controller)	2-core sheath cable 0.3 mm² to 1.25 mm²* [AWG 22 to 16]*				

Please use cable with supplementary insulation.
 Use wires which have insulation more than the max. voltage.
 Max. voltage is defined according to the law of the country where the interface is used.

Connect the interface unit 1 and the indoor control board of a room air conditioner using the connecting cable (5-core) that
comes with the interface unit 1.

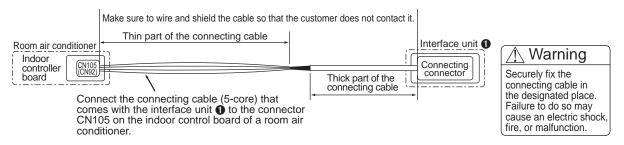

• The connecting cable (5-core) connected to a room air conditioner should be wired according to the room air conditioner installation manual.


Notes


- Extending or shortening the connecting cable (5-core) that comes out of the interface unit ① cause it to malfunction. Also, keep the connecting cable (5-core) as far as possible away from the electrical wires and ground wire. Do not bundle them together.
- To prevent the board from being damaged by static electricity, always remove static electricity before starting work.

3. Connecting the MA Interface with each system

(For details on each system, see the relevant instruction manual.)


• Fasten the cable tie ② as shown in the figure to prevent undesirable movement of the connecting cable.

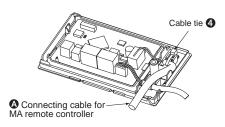

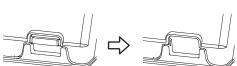

 The connecting cable (5-core) connected to a room air conditioner should be mounted at the room air conditioner or its vicinity.

If the screw for the cable mount of the room air conditioner cannot be used, replace with the screw for mounting **3**.

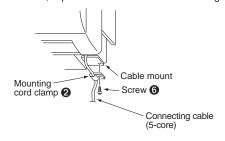

Note

When using a thick connecting cable or two connecting cables, you can broaden the hole on the interface unit using a nipper.

After broadening the hole, use a file to rub the edge on the hole to prevent the cables from being damaged.


Notes

- If the connecting cable is not securely mounted, the connector may come off, break, or malfunction.
- The dip switch (SW500) and the rotary switch (SW580) on the interface unit **1** do not operate if they are not set correctly.
- Conduct the settings of the interface unit 1 dip switch (SW500) and rotary switch (SW580) before turning on the power.

3.1. Use as a Wired Remote Controller (Using the MA Remote Controller)

■ Connecting the SYSTEM CONTROL Interface to MA remote controller


A room air conditioner can be operated with the wired remote control.

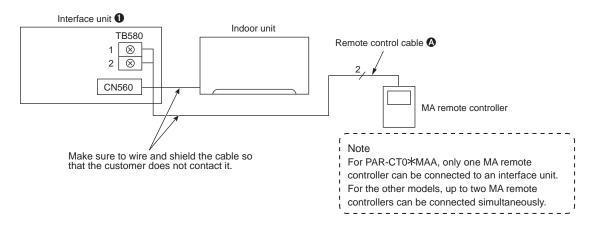

- To connect with the MA remote controller, connect the MA remote control cable @ with TB580. (It is unpolarized.)
- When more than one unit of room air conditioner is operated in a group, make a cross wire connection at TB580 with the MA
 remote control cable .
- The MA remote controller can carry out simultaneous control of up to 16 sets of room air conditioners.
- Up to two MA remote controllers can be connected in one group.
 However, up to one can be connected when using PAR-CT0*MA.
- Wiring length from the interface at the refrigerant address "0" to the MA remote controller should be less than 10 m [33 ft.].
- To operate the room air conditioner in a group, make the total length of wiring for the MA remote controller less than 50 m [164 ft.].

Notes

- Be sure to set the "Auto Heating/Cooling Display Setting" of the MA remote controller OFF before use.
 - * For details on the "Auto Heating/Cooling Display Setting", refer to the MA remote controller instruction manual.
- * When the "Auto Heating/Cooling Display Setting" is ON, the remote controller display may differ from the actual operating status of the unit.
- A test run cannot be initiated using the test run switch on the MA remote controller.
- · Group control with CITY MULTI is unable.

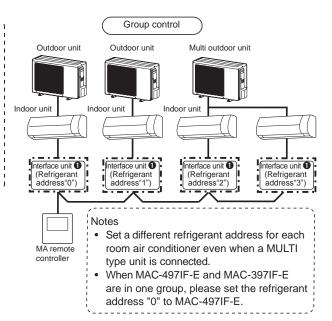

OPTIONAL

INDOOR UNIT

■ Setting when MA remote controller is connected

•Setup of an refrigerant address

SW No.	Refrigerant address	Comments
SW580	Address can be set from 0 to 15	 Set the refrigerant address of the unit that supplies electric power to the MA remote controller to "0." When carrying out group operation of two of more room air conditioners, set different refrigerant addresses within the group. *A to F of the rotary switch correspond to refrigerant addresses 10 to 15.

•Setup of Room temperature detector position

Functions	SW No.	Operating details		
Room temperature detector position	SW500 ON OFF	SW500-2: OFF Temperature detected by suction temperature sensor of the unit is made to be room temperature. SW500-2: ON Temperature detected by temperature sensor of the remote controller is made to be room temperature.		

•Setting when P series is mixed in the same group (only when running group operation using the MA remote controller)

Functions	SW No.	Operating details
P series is mixed in the same group	SW500 ON OFF	SW500-1: OFF • Set to OFF when P series is not mixed in the same group. SW500-1: ON • Set to ON when P series is mixed in the same group.


4. Dip Switch Details

■ SW500 - Function Setting

SW No.	Functions	OFF(Factory setting)	ON	Comments
SW500-1	Setting when P series is mixed in the same group (only when running group operation using the MA remote controller)	No mixture	Mixed	
SW500-2	Room temperature detector	Indoor unit	MA remote controller	
SW500-3	Interface status display switching	LE501: Confirmation of communications with indoor unit LE581: Confirmation of supplying power to MA remote controller	LE501: Confirmation of communications with MA remote controller LE581: Confirmation of supplying power to MA remote controller	
SW500-4	Not in use	— (Set to OFF)	_	

5. Test Run (Check Operations)

You can check the status of the interface unit by the LED lamp on the interface unit \P board.

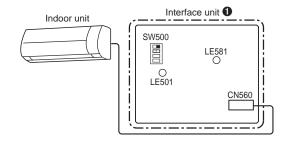

• Use the table below to check communications. If communications cannot be carried out normally, check that the relevant communications line is not disconnected from the connector or terminal box.


Functions	SW No.	Operating details
Interface status monitor	SW500 ON OFF	SW500-3: OFF LE501 (Orange): When blinking at an interval of about 1 second, the Interface unit is communicating normally with the room air conditioner. When the lamp is off, the Interface unit is not communicating normally with the room air conditioner. SW500-3: ON LE501 (Orange): When blinking at an interval of about 10 second, the Interface unit is communicating normally with the MA remote controller. When the lamp is off, the Interface unit is not communicating normally with the MA remote controller. * LE581 (Orange) displays the following status irrespective whether SW500-3 is on or off. • When lit, power is supplied to the MA remote controller from the Interface unit ①. When extinguished, power is not supplied.

When the interface is mounted to the back-side dent of the indoor unit, it should not touch the piping and the drain hose of the indoor unit.


The Interface unit should be placed in a location where the connecting cable from the interface can reach an indoor unit. Wiring for remote controller cable shall be apart (5 cm or more) from power source wiring so that it is not influenced by electric noise from power source wiring.

The device will not function properly if the connecting cable is extended, so the connecting cable should not be extended. Mount the interface unit securely to a pillar or wall using 2 or more screws.


- Using the interface holder **②**
 - 1. Mount the Interface holder **7** to a pillar or wall using 2 mounting screws **3**.

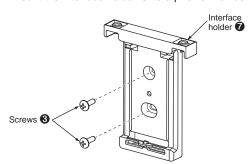


You can mount the holder on the level.

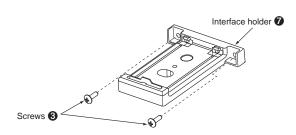


- 2. Insert the top of the interface unit 1 into the top claws of the holder, then fix the unit in the holder by pushing it against the wall to click the bottom of the unit into the bottom claw of the holder.
 - <Mounting the interface unit>

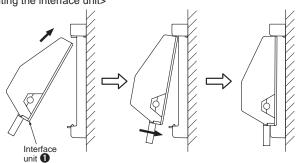


<Dismounting the interface unit>

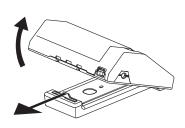

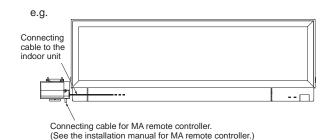

Mount the holder and interface unit beside the indoor unit so that a user cannot touch the connecting cable to the indoor unit.

■ Mounting the interface unit behind the indoor unit

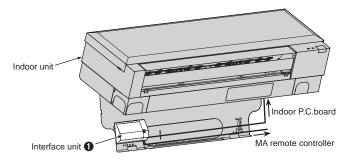

Note

Mount the interface unit at the left side behind the indoor unit as shown in the figure above so that it does not come to contact with the piping and the drain hose of the indoor unit.

If the indoor unit is connected to the outdoor unit through the piping from the left side of the indoor unit, do not mount the interface unit behind the indoor unit.

7. Notes Regarding Use

The following control information should be thoroughly explained and provided to the users of this device. (Please provide these instructions to the user once the installation is complete.)

This Interface unit **1** operates room air conditioners using the controls of a P series, but there are several limitations imposed as a result of the functional differences between room air conditioners and packaged air conditioners.

- 1. When operating the system using a MA Remote Controller these operations will not appear on the display of the wireless remote controller.
- 2. When original dehumidification mode is set with the remote controller attached to the room air conditioner, "Dry" is displayed because there is no mode corresponding to dehumidification on the MA remote controller.
- 3. Because the temperature range of the room air conditioners is broader than a MA Remote Controller when the room air conditioners is set to lower than 17 °C (63 °F) or higher than 30 °C (87 °F), the temperature display on the MA Remote Controller will show the minimum or maximum temperature that can be set. (For example, even if the room air conditioner is set to cool a room to 16 °C (61 °F), the display on a MA Remote controller may read "17 °C (63 °F)").
- 4. Timer operations should be set using only the remote controller that came with the room air conditioners or the MA Remote Controller. If both are used to set the timer to the same time, the timer will not function properly.
- 5. A part of functions including the operation of horizontal air blow direction cannot be used from the MA remote controller.

8. Specifications

Input voltage	12 V
Power consumption	2 W
Input current	0.15 A

Descriptions

This device, Wi-Fi interface, communicates the status information and controls the commands from the MELCloud by connected to indoor unit.

 Some indoor unit air conditioners are not compatible with the Wi-Fi interface. Make sure that the indoor is compatible with the Wi-Fi interface before attempting to install the Wi-Fi interface.

applicable Models

- MSZ-FT25,35,50VG
- MSZ-AP15,20VG
- MSZ-AY25,35,42,50VG
- MSZ-AP60,71VG
- MSZ-EF18,22,25,35,42,50VGW,B,S MFZ-KT25,35,50,60VG
- MSZ-BT20,25,35,50VG
- MSZ-HR25,35,42,50,60,71VF
- MSZ-DW25,35,50VF
- MSY-TP35,50VF
- MSZ-FH25,35,50VE2
- MSZ-SF15,20VA

- MSZ-SF25,35,42,50VE3
- MSZ-GF60,71VE2
- MSZ-WN25,35VA
- MSZ-DM25,35VA
- MFZ-KW25,35,50,60VG
- MLZ-KP25,35,50VF
- MLZ-KY20VF
- SLZ-M15,25,35,50,60FA2
- SEZ-M25,35,50,60,71DA(L)2
- SFZ-M25,35,50,60,71VA

- PLA-ZM35,50,60,71,100,125,140EA2
- PLA-M35,50,60,71,100,125,140EA2
- PEAD-M35,50,60,71,100,125,140JA(L)2
- PEA-M200,250LA2
- PKA-M35,50,60,71,100LA(L)2
- PCA-M35,50,60,71,100,125,140,KA2
- PCA-M71HA2
- PSA-M71,100,125,140KA
- S-series models
- P-series models


pecifications

Input Voltage	DC12.7 V (from indoor unit)
Power consumption	MAX 2 W
Size H×W×D (mm)	73.5×41.5×18.5
Weight (g)	95 (including cable)
Transmitter power level (MAX)	20 dBm @IEEE 802.11b
RF channel	1ch ~ 13ch (2412~2472 MHz)
Radio protocol	IEEE 802.11b/g/n (20)
Encryption	AES
Authentication	WPA2-PSK
Software Ver	XX.00
Length of cable (mm)	2,040

For Declaration of Conformity, please go to the website below. http://www.mitsubishielectric.com/ldg/ibim/

Product Introduction

No.	Item	Description
1	MODE switch	It selects modes.
2	RESET switch	It resets the system and ALL settings.
3	ERR LED (Orange)	It shows the network error state.
4	NET LED (Green)	It shows the network state.
5	MODE LED (Orange)	It shows the Access point mode state.
6	UNIT LED (Green)	It shows the indoor unit state.

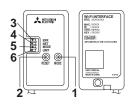

- (1) MODE switch
 - The MODE switch is used for selecting modes in configurations.
- (2) RESET switch
 - Hold down the RESET switch for 2 seconds to reboot the system.
 - Hold down the RESET switch for 14 seconds to initialize the Wi-Fi interface to the factory default.

When the Wi-Fi interface is reset to the factory default, ALL the configuration information will be lost. Take great care in implementing this operation.

Parts

1	Interface unit (with connecting cable)		1	4	Mounting cord clamp	Ð	1
2	Fixing screw for ® 3.5×16 mm	(Mining)	2	(5)	Fastener (for bundling the wires)		1
3	Fixing screw for 4 4x16 mm	(Min)	1	6	Holder		1
				7	Clip		1

How to Use / How to Install

1. Connecting the Wi-Fi interface

(For details on each system, see the relevant instruction manual.)

Turn off the breaker of the air conditioner or the ATW unit before connecting the cable to the indoor unit.

Run the cable inside the wall or above the ceiling when installing the Wi-Fi interface.

Refer to the installation manual of each model for connecting instructions and details.

(1) The connecting cable connected to a indoor unit (CN105) should be mounted at the indoor unit or its vicinity.


When mounting the Interface unit ① inside an indoor unit, refer to the installation manual of the indoor unit. Do not mount the Interface unit ① inside the indoor unit, if not mentioned.

<Air conditioner>


When mounting on the wall) (Except when connecting to the wall mounted indoor unit)

The cable side of the interface unit ① should face downward.

· 4 way cassette indoor unit

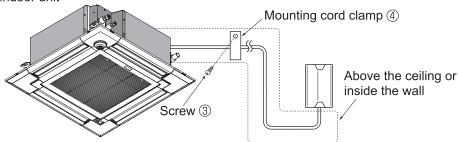


- Fix the holder (6) on the wall in the orientation shown in the figure below with the screw (2). Note: Tighten the upper and then the lower screw.
- Insert the interface unit 1) into the holder 6 until it clicks.

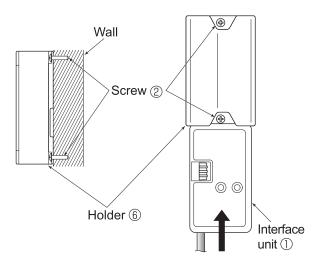


When mounting on the outer side of indoor unit (Wall mounted indoor unit)

- Insert the clip into the holder 6 until it clicks.
- Insert the interface unit ① into the holder ⑥ until it clicks.

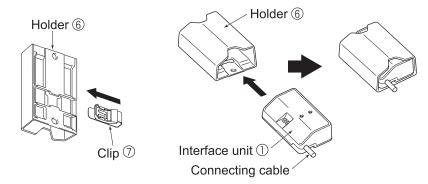


• Slip the clip ${ \mathbb O}$ over the edge of corner box to fix the interface unit ${ \mathbb O}$. Note: Mount the interface unit ${ \mathbb O}$ on the side of the indoor unit.

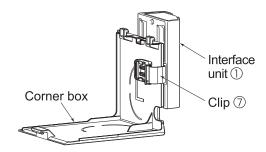


Example of mounting on the left side of indoor unit

Note: Interface unit ① can also be mounted on the right side of the indoor unit.

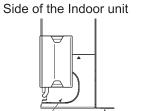

Corner box Indoor unit

• To check the LED indication after setup, remove the interface unit ① from the holder ⑥.

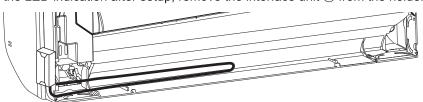

Run the connecting cable in the space on the back of the unit as shown in the above figure. Tuck cabling away and secure it.

Note: Make sure that the connecting cable will not get caught on or between the installation plate and the wall, or between the indoor unit and the installation plate.

Failure to do so may cause damage to the connecting cable resulting in communication problems.

Make sure that the connecting cable will not come out from the indoor unit.

Mount in the same procedure for air conditioner. Please refer to "When mounting on the wall" on 1. Connecting the Wi-Fi interface (1), "Air conditioner".

(2) Turn on the breaker of the air conditioner or the ATW unit and check that the LED indication of the Wi-Fi interface enters the initial state shown on right.


Initial State				
ERR	OFF			
NET	OFF			
MODE	OFF			
UNIT	Flashing			

Setting up
Refer to SETUP QUICK REFERENCE GUIDE (Included in same package) and SETUP MANUAL to connect to a Router for setting up.

For SETUP MANUAL, please go to the website below.

http://www.mitsubishielectric.com/ldg/ibim/

For MELCloud User Manual, please go to the website below. https://www.melcloud.com/Support

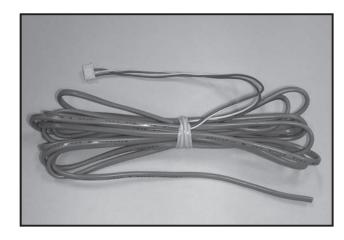

Descriptions

This product is an adapter which inputs the incoming signals from an open/close switch to the air conditioner.

pplicable Models

- MSZ-RW25,35,50VG
- MSZ-LN18,25,35,50,60VG2W,V,B,R MSZ-DM25,35VA
- MSZ-FT25.35.50VG
- MSZ-AP15,20VG
- MSZ-AY25,35,42,50VG
- MSZ-AP60,71VG
- MSZ-EF18,22,25,35,42,50VGW,B,S
- MSZ-BT20,25,35,50VG
- MSZ-HR25,35,42,50,60,71VF
- MSZ-DW25,35,50VF
- MSY-TP35,50VF
- MSZ-FH25,35,50VE2


- MSZ-WN25,35VA
- MSZ-HJ25,35,50,60,71VA
- MFZ-KT25,35,50,60VG
- MFZ-KW25,35,50,60VG
- MLZ-KP25,35,50VF
- MLZ-KY20VG

Specifications

Model name	· ·	MAC-1702RA-E	MAC-1710RA-E	
Cino	Length	2 m	10 m	
Size	Diameter	4.48 mm x 3.09 mm	4.48 mm x 3.09 mm	
	Cable core	Tinned annealed copper wire	Tinned annealed copper wire	
Material	Insulation	Heat-resistant PVC	Heat-resistant PVC	
	Sheath	Heat-resistant PVC	Heat-resistant PVC	
Weight	•	72 g	360 g	
Standards	Standards	UL2464	UL2464	
Standards	Name	2464 2CFB #23	2464 2CFB #23	

Accessory

	Part name	Illustration	Q' ty
1	Mounting cord clamp **		2
2	Screw for mounting 4×16	E	1
3	Fastener (for bundling the wires)		1

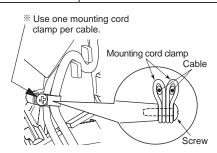


Fasten the clamps together with a screw.

How to Use / How to Install

Card key/Window connection with the open/close switch)

- 1. How to connect the open/close switch
 - Connect the connector to CN104 on the indoor electronic control P.C. board.
 - Connect the electrical wires with the tag of "IN" to the switch.

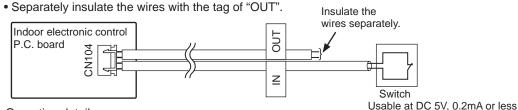


2. Operation details

- Closing the switch stops operation of the air conditioner. A remote controller is enabled even the switch is close. To disable the remote controller, cut JR88 on the indoor electronic control P.C. board.
- When the switch opens, the ON/OFF operation from the remote controller is enabled.




Connecting an connector cable to the air conditioner


Models for which the mounting cord clamp is used

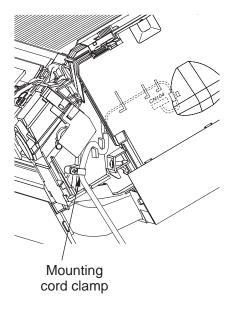

Models for which the fastener is used

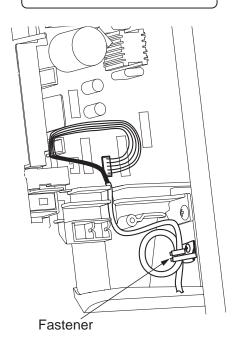

Figure

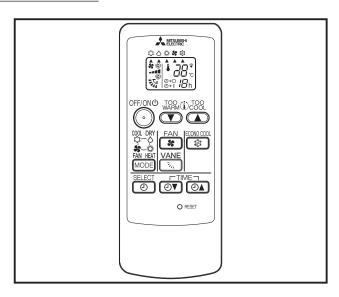

Descriptions

Wireless remote controller for M series.

Applicable Models


- MSY-TP35VF
- MSY-TP50VF


Specifications

Power	DC 3V (AAA battery 2pcs)
Usage environment	0 ~ 40°C

Dimensions



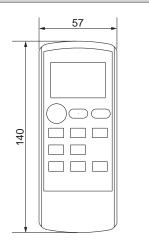

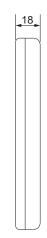

How to Use / How to Install

PREPARATION BEFORE OPERATION

Remote controller Operation display section Signal transmitting section Distance of signal : About 6 m Beep(s) is (are) heard from the indoor unit when the signal is received. Remote controller holder • Install the remote controller holder in a place where the signal can be received by the indoor unit.

Note:


Selecting installation location:

- Where it is easy to operate and easily visible.
- Where children cannot touch it.
- Select a position about 1.2 m above the floor and check that signals from the remote controller are surely received by the indoor unit from that position ('beep' or 'beep beep' receiving tone sounds). After that, attach remote controller holder to a pillar or wall and install wireless remote controller.
- In rooms where inverter type fluorescent lamps are used, the signal from the wireless remote controller may not be received.

Before operation:

Insert the power supply plug into the power outlet and/or turn the breaker on.

Installing the remote controller batteries

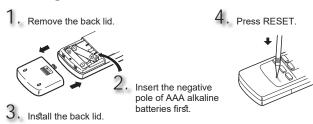

Note:

- Make sure the polarity of the batteries is correct.
- Do not use manganese batteries and leaking batteries. The remote controller could malfunction
- controller could malfunction.
- Do not use rechargeable batteries.Replace all batteries with new ones of the same type.
- Batteries can be used for approximately 1 year. However, batteries with ex-pired shelf lives last shorter.
- Press RESET gently using a thin instrument. If the RESET button is not pressed, the remote controller may not operate correctly.



INDOOR UNIT



Descriptions

- The controller holder allows you to place the remote controller on the wall.
- It helps to prevent the remote controller, from being misplaced.

Applicable Models

- MSZ-HR25VF
- MSZ-DW25VF
- MSZ-HJ25VA
- MSZ-HR35VF
 - MSZ-DW35VF
- MSZ-HJ35VA
- MSZ-HR42VF
 - MSZ-DW50VF
- MSZ-HJ50VA
- MSZ-HR50VF
 - MSZ-DM25VA

Polystyrene White

- MSZ-HJ60VA
- MSZ-HR60VF
- MSZ-DM35VA
- MSZ-HJ71VA
- MSZ-HR71VF

Specifications

Dimensions	11.26		Material Color
65	Unit : mm	25	(69)

How to Use / How to Instal

Installation area

1) Installation area


- · Area in which the remote controller is not exposed to direct sunshine.
- Area in which there is no nearby heating source.
- Area in which the remote controller is not exposed to cold (or hot) winds.
- · Area in which the remote controller can be operated easily.
- Area in which the remote controller is beyond the reach of children.

2) Installation method

- ① Attach the remote controller holder to the desired location using two tapping screws.
- ② Place the lower end of the controller into the holder.
 - A Remote controller
 - Wall
 - © Display panel
 - D Receiver
- The signal can travel up to approximately 7 meters (in a straight line) within 45 degrees to both right and left of the center line of the receiver.





Figure

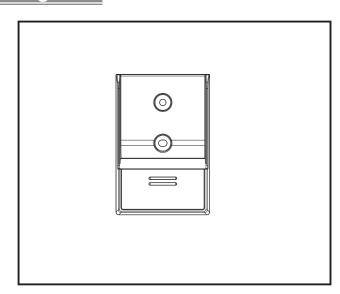

Dimensions

Unit: mm

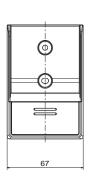

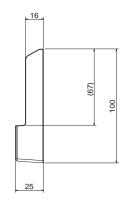

Descriptions

- The controller holder allows you to place the remote controller on the wall.
- · It helps to prevent the remote controller, from being misplaced.

pplicable Models

- MSZ-RW25VG
- MSZ-RW35VG
- MSZ-RW50VG
- MSZ-LN18VG2W
- MSZ-LN25VG2W
- MSZ-LN35VG2W
- MSZ-LN50VG2W
- MSZ-LN60VG2W
- MSZ-FT25VG
- MSZ-FT35VG
- MSZ-FT50VG
- MSZ-AP15VG
- MSZ-AP20VG
- MSZ-AY25VG
- MSZ-AY35VG ■ MSZ-AY42VG
- MSZ-AY50VG
- MSZ-AP60VG
- MSZ-AP71VG

■ MSZ-EF18VGW,B,S ■ MFZ-KT25VG

■ MFZ-KT35VG

■ MFZ-KT50VG

■ MFZ-KT60VG

■ MFZ-KW25VG

■ MFZ-KW35VG

■ MFZ-KW50VG

■ MFZ-KW60VG

■ MLZ-KP25VF

■ MLZ-KP35VF

■ MLZ-KP50VF

MLZ-KY20VG

- MSZ-EF22VGW,B,S
- MSZ-EF25VGW,B,S
- MSZ-EF35VGW,B,S
- MSZ-EF42VGW,B,S
- MSZ-EF50VGW,B,S
- MSZ-FH25VE2
- MSZ-FH35VE2
- MSZ-FH50VE2
- MSZ-SF15VA ■ MSZ-SF20VA
- MSZ-SF25VE3 ■ MSZ-SF35VE3
- MSZ-SF42VE3
- MSZ-SF50VE3
- MSZ-GF60VE2
- MSZ-GF71VE2
- MSZ-WN25VA MSZ-WN35VA

Specifications

Material	Polystyrene
Color	White

How to Use / How to Install

Installation area


1) Installation area

- · Area in which the remote controller is not exposed to direct sunshine.
- Area in which there is no nearby heating source.
- · Area in which the remote controller is not exposed to cold (or hot) winds.
- Area in which the remote controller can be operated easily.
- Area in which the remote controller is beyond the reach of children.

2) Installation method

- ① Attach the remote controller holder to the desired location using two tapping screws.
- 2 Place the lower end of the controller into the holder.
 - A Remote controller
 - B Wall
 - ① Display panel
 - (D) Receiver
- The signal can travel up to approximately 7 meters (in a straight line) within 45 degrees to both right and left of the center line of the receiver.



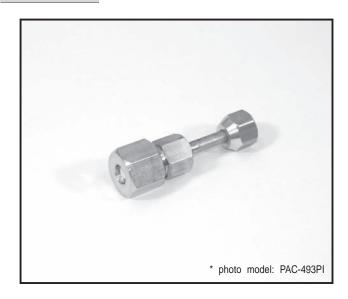

Descriptions

A part to connect refrigerant pipes of the different diameter. (Unit $\phi 9.52 \rightarrow \phi 12.7$)

oplicable Models

- MXZ-2F53VFH
- MXZ-5F102VF2 MXZ-4E72VA
- MXZ-2F53VFH4 MXZ-6F120VF2 MXZ-4E83VA
- MXZ-2F53VFHZ2 MXZ-2D53VA2 MXZ-4E83VAHZ
- MXZ-3F54VF4
- MXZ-2D53VAH2 MXZ-5E102VA


- MXZ-3F68VF4
- MXZ-2E53VAHZ MXZ-6D122VA2
 - MXZ-3DM50VA

- MXZ-4F72VF4
- MXZ-3F54VA ■ MXZ-3E68VA
- PXZ-4F75VG

- MXZ-4F80VF4
- MXZ-4F83VF2
- PXZ-5F85VG
- MXZ-4F83VFHZ2

Specifications

C 1220T - OL

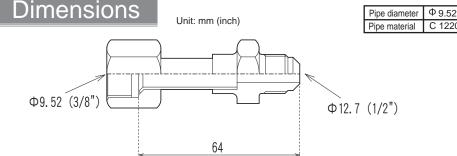

How to Use / How to Instal

Make sure that you have all the following parts, in addition to this manual in this box:

Joint Pipe PAC-SG76RJ-E (unit side:ø9.52 diameter, onsite pipe side:ø15.88 diameter) PAC-493PI (unit side:ø6.32 diameter, onsite pipe side:ø9.52 diameter) MAC-A454JP-E (unit side:ø9.52 diameter, onsite pipe side:ø12.7 diameter) MAC-A455JP-E (unit side:ø12.7 diameter, onsite pipe side:ø9.52 diameter) MAC-A456JP-E (unit side:ø12.7 diameter, onsite pipe side:ø15.88 diameter)

Installation procedure

(carefully read the following before installing.)

This optional part is used to connect indoor/outdoor unit to onsite pipes of different diameters.

 When installing this optional part, be sure to read "Refrigerant pipe connection" in the installation manual attached to outdoor unit.

Onsite piping side Unit side

1) Apply flare processing to onsite pipes to adapt to R410A, according to the table on the right. Use optional accessory flare nut at this time. **Check the installation manual attached to the outdoor unit for advisability on whether or not onsite (existing) pipes can be used.

	Ŗ	Pipe diameter (mm)	B size	
E	4		R410A flare tool	R22/R407C flare tool
	<i>W///</i>		Clutcl	n type
~// 	─ ₩	ø 6.35(1/4")	0 - 0.5	1.0 - 1.5
dies		ø 9.52(3/8")	0 - 0.5	1.0 - 1.5
'	7	ø12.70(1/2")	0 - 0.5	1.0 - 1.5
Copper pipe		ø15.88(5/8")	0 - 0.5	1.0 - 1.5

When flare processing for refrigerant R410A is applied using current tool, refer to the table above. B size can be secured using copper pipe gauge for margin

Outer diameter of copper pipe (mm)	Processing size of flare section (mm)	Flare shape
ø6.35	8.7 - 9.1	45° ± 2°
ø9.52	12.8 - 13.2	90
ø12.70	16.2 - 16.6	
ø15.88	19.3 - 19.7	® \R0.4~R0.8

2) Remove caps (both ends) for protection against mixing of foreign materials from optional part, and thinly apply refrigerat or oil (locally procured) on flare surface.


3) Securely tighten flare nut using torque wrench according to the table on the right (Proper tightening torque using torque wrench according to the table on the right (Proper tightening torque using torque wrench according to the table on the right (Proper tightening torque using torque wrench according to the table on the right (Proper tightening torque using torque wrench according to the table on the right (Proper tightening torque using torque wrench according to the table on the right (Proper tightening torque using torque wrench according to the table on the right (Proper tightening torque using torque wrench according to the table on the right (Proper tightening torque using torque wrench according to the table on the right (Proper tightening torque using torque wrench according to the table on the right (Proper tightening torque using torque wrench according to the table on the right (Proper tightening torque using torque wrench according to the table on the right (Proper tightening torque using torque wrench according to the table on the right (Proper tightening torque using torque wrench according to the table on the right (Proper tightening torque using torque wrench according to the table on the right).

Refrigerator oil application point Apply refrigerator oil to entire circumference of flare sheet surface. Do not apply to thread section.
(If applied to threads, flare nut can easily be loosened.) wrench according to the table on the right.

(Proper tightening torque using torque wrench)

Outer diameter of copper pipe (mm)	Tightening torque N•m (kgf•cm)
ø6.35	14 - 18(140 - 180)
ø9.52	34 - 42(340 - 420)
ø12.70	49 - 61(490 - 610)
ø15.88	68 - 82(680 - 820)

- 4) After refrigerant pipe is connected, be sure to perform gas leakage inspection for onsite connection pipes (including this optional part) and indoor/outdoor unit.
- 5) Heat insulation is necessary for this optional part: Wrap heat insulator (locally procured) around the onsite pipes and also the optional part (for dewdrop dripping prevention).
- 6) Perform test run according to the installation manual of the unit. making sure to also perform operation check.

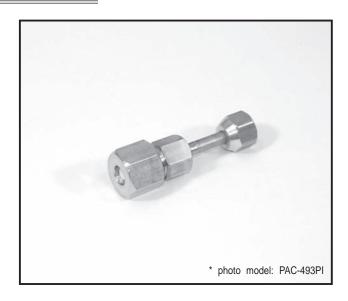

Descriptions

A part to connect the refrigerant pipes of the different diameter. (Unit ϕ 12.7 $\rightarrow \phi$ 9.52)

plicable Models

- SUZ-M35VA
- MXZ-4F72VF4
- MXZ-4E72VA


- SUZ-KA35VA6
- MXZ-4F80VF4
- MXZ-4E83VA
- - MXZ-4F83VF2 ■ MXZ-4E83VAHZ
 - MXZ-4F83VFHZ2 MXZ-5E102VA
 - MXZ-6D122VA2
 - MXZ-5F102VF2
- MXZ-6F120VF2
- PXZ-4F75VG ■ PXZ-5F85VG

Specifications

Pipe diameter	Ф 12.7
Pipe material	C 1220T - OL

Dimensions

Unit: mm (inch)

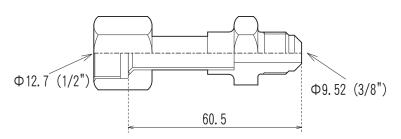

How to Use / How to Instal

Make sure that you have all the following parts, in addition to this manual in this box:

Joint Pipe PAC-SG76RJ-E (unit side:ø9.52 diameter, onsite pipe side:ø15.88 diameter) PAC-493PI (unit side:ø6.32 diameter, onsite pipe side:ø9.52 diameter) MAC-A454JP-E (unit side:ø9.52 diameter, onsite pipe side:ø12.7 diameter) MAC-A455JP-E (unit side:ø12.7 diameter, onsite pipe side:ø9.52 diameter) MAC-A456JP-E (unit side:ø12.7 diameter, onsite pipe side:ø15.88 diameter)

Unit side



Onsite piping side

Installation procedure

(carefully read the following before installing.)

This optional part is used to connect indoor/outdoor unit to onsite pipes of different diameters.

*When installing this optional part, be sure to read "Refrigerant pipe connection" in the installation manual attached to outdoor unit.

1) Apply flare processing to onsite pipes to adapt to R410A, according to the table on the right. Use optional accessory flare nut at this time. *Check the installation manual attached to the outdoor unit for advisability on whether or not onsite (existing) pipes can be used.

B	Pipe diameter		(mm)
		R410A flare tool	R22/R407C flare tool
	(mm)	Clutc	h type
	ø 6.35(1/4")	0 - 0.5	1.0 - 1.5
dies	ø 9.52(3/8")	0 - 0.5	1.0 - 1.5
	ø12.70(1/2")	0 - 0.5	1.0 - 1.5
Copper pipe	ø15.88(5/8")	0 - 0.5	1.0 - 1.5

When flare processing for refrigerant R410A is applied using current tool, refer to the table above. B size can be secured using copper pipe gauge for margin adjustment.

	Processing size of flare section (mm)	Flare shape
ø6.35	8.7 - 9.1	45° ± 2°
ø9.52	12.8 - 13.2	10 4 4
ø12.70	16.2 - 16.6	
ø15.88	19.3 - 19.7	6 R0.4~R0.8

2) Remove caps (both ends) for protection against 3) Securely tighten flare nut using torque mixing of foreign materials from optional part, and thinly apply refrigerat or oil (locally procured) on flare surface.




wrench according to the table on the right.

Proper tightening torque using torque wrench

Outer diameter of copper pipe (mm)	Tightening torque N•m (kgf•cm)
ø6.35	14 - 18(140 - 180)
ø9.52	34 - 42(340 - 420)
ø12.70	49 - 61(490 - 610)
ø15.88	68 - 82(680 - 820)

- 4) After refrigerant pipe is connected, be sure to perform gas leakage inspection for onsite connection pipes (including this optional part) and indoor/outdoor unit.
- 5) Heat insulation is necessary for this optional part: Wrap heat insulator (locally procured) around the onsite pipes and also the optional part (for dewdrop dripping prevention).
- 6) Perform test run according to the installation manual of the unit, making sure to also perform operation check.

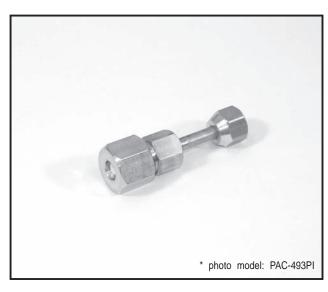

Descriptions

A part to connect refrigerant pipes of the different diameter. (Unit ϕ 12.7 $\rightarrow \phi$ 15.88)

applicable Models


- MXZ-4E72VA
- MXZ-4F72VF4
- MXZ-4E83VA
- MXZ-4F80VF4
- MXZ-5F102VA
- MX7-4F83VF2
- MXZ-6D122VA2
- MXZ-4F83VFHZ2
- PXZ-4F75VG
- MXZ-5F102VF2
- PXZ-5F85VG
- MXZ-6F120VF2

Specifications

Pipe diameter	Ф 12.7
Pipe material	C 1220T - OL

Dimensions

Unit: mm (inch)

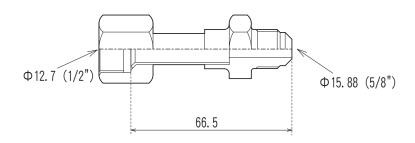

How to Use / How to Instal

Make sure that you have all the following parts, in addition to this manual in this box:

PAC-SG76RJ-E (unit side: ø9.52 diameter, onsite pipe side: ø15.88 diameter) PAC-493PI (unit side:ø6.32 diameter, onsite pipe side:ø9.52 diameter) MAC-A454JP-E (unit side:ø9.52 diameter, onsite pipe side:ø12.7 diameter) MAC-A455JP-E (unit side:ø12.7 diameter, onsite pipe side:ø9.52 diameter) MAC-A456JP-E (unit side:ø12.7 diameter, onsite pipe side:ø15.88 diameter)

Installation procedure

(carefully read the following before installing.)

This optional part is used to connect indoor/outdoor unit to onsite pipes of different diameters.

*When installing this optional part, be sure to read

"Refrigerant pipe connection" in the installation manual

attached to outdoor unit.

Unit side Onsite piping side

1)Apply flare processing to onsite pipes to adapt to R410A, according to the table on the right. Use optional accessory flare nut at this time. * Check the installation manual attached to the outdoor unit for advisability on whether or not onsite (existing) pipes can be used.

B	Pipe diameter	B size (mm)	
B 6		R410A flare tool	R22/R407C flare tool
	(mm)	Clutcl	h type
************************************	ø 6.35(1/4")	0 - 0.5	1.0 - 1.5
dies	ø 9.52(3/8")	0 - 0.5	1.0 - 1.5
	ø12.70(1/2")	0 - 0.5	1.0 - 1.5
Copper pipe	ø15.88(5/8")	0 - 0.5	1.0 - 1.5

refrigerant R410A is applied using current tool, refer to the table above. B size can be secured using copper pipe gauge for margin

t		Processing size of flare section (mm)	Flare shape
	ø6.35	8.7 - 9.1	° 45° ± 2°
	ø9.52	12.8 - 13.2	
	ø12.70	16.2 - 16.6	
	ø15.88	19.3 - 19.7	65 \ R0.4~R0.8

2) Remove caps (both ends) for protection against 3) Securely tighten flare nut using torque mixing of foreign materials from optional part, and thinly apply refrigerat or oil

(locally procured) on flare surface. Refrigerator oil application point
Apply refrigerator oil to entire circumference of flare sheet surface.

Do not apply to thread section. (If applied to threads, flare nut can easily be loosened.) wrench according to the table on the right.


(Proper tightening torque using torque wrench)

Outer diameter of copper pipe (mm)	Tightening torque N•m (kgf•cm)
ø6.35	14 - 18(140 - 180)
ø9.52	34 - 42(340 - 420)
ø12.70	49 - 61(490 - 610)
ø15.88	68 - 82(680 - 820)

- After refrigerant pipe is connected, be sure to perform gas leakage inspection for onsite connection pipes (including this optional part) and indoor/outdoor unit.
- 5) Heat insulation is necessary for this optional part: Wrap heat insulator (locally procured) around the onsite pipes and also the optional part (for dewdrop dripping prevention).
- 6) Perform test run according to the installation manual of the unit, making sure to also perform operation check.



Figure

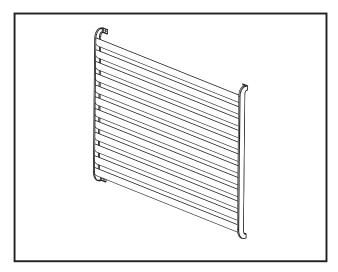

Descriptions


The air outlet guide changes the direction of air from the outdoor unit and prevents short cycling.

Applicable Models

■ MUZ-RW50VGHZ

Dimensions

Unit: mm

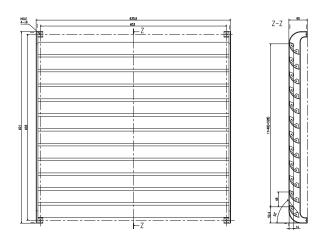

Specifications

	Color (Munsell)	Ivory (3.0Y 7.8/1.1)
Exterior	Surface treatment	Polyester powder coating
	Material	Electro-galvanized steel sheet
Weight		2.45 kg


Components


① Air outlet guide ×1	② Screw M5 x 10 x 4

How to Use / How to Install

1. Preparations

- Drill 4 holes through the marks on the front panel indicated in the right figure using a 5/32 inch (ø4.0mm) bit.
- Make sure that the drill bit is no more than 25/64 inch (10mm) long, as shown below. If it is too long, it may scratch the internal parts of the outdoor unit.

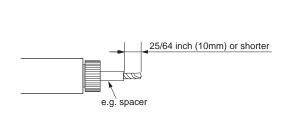


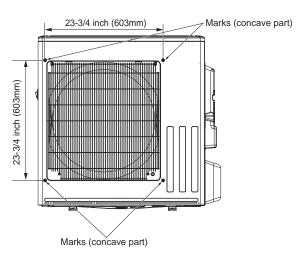



- Attach the air outlet guide 1 to the outdoor unit with M5x10 screws (4 screws) 2 .
- * Tightening torque: 2.5-2.7 N/m
- The air outlet guide1 can be attached in the upward, right or left air outlet direction.

Note: Fully tighten the screws.

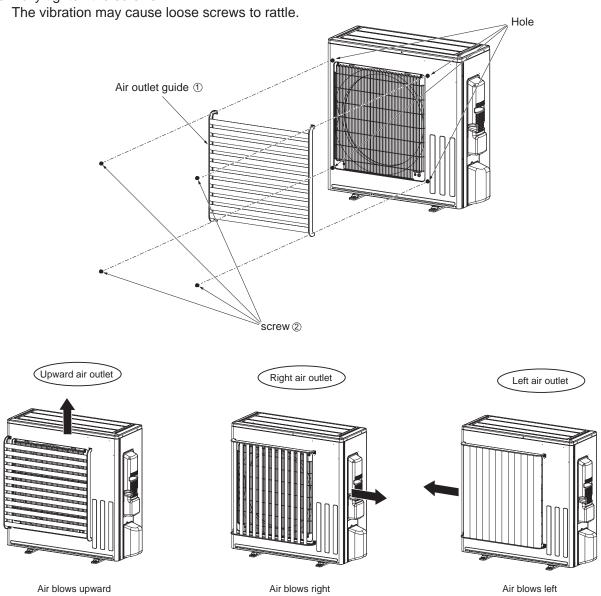

Note: Do not attach it in the downward direction.

This will cause short circuiting.

■ MXZ-2F33VF4

■ MXZ-2F53VF4

■ MXZ-2F53VFH4

■ MXZ-2HA40VF2

■ MXZ-2HA50VF2


■ MXZ-2D33VA ■ MXZ-2D42VA2

■ MXZ-2D53VA2

■ MXZ-2D53VAH2


■ MXZ-2DM40VA

Figure

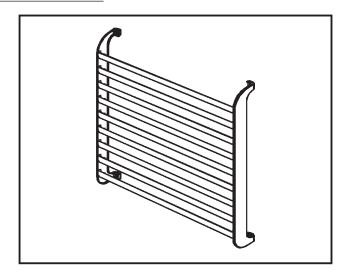

Dimensions

Unit: mm

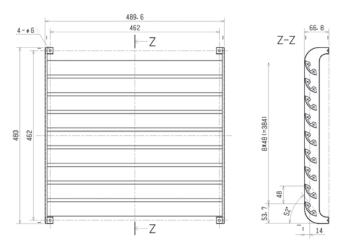


How to Use / How to Instal

1. Preparations

For 800(W) x 550(H) x 285(D) outdoor units

- Remove the front panel from the outdoor unit.
- Drill Ø4.0 mm screw holes in the front panel at the 4 locations shown below.
- The length of the drill bit should be about 10 mm as shown in the figure below. If the drill bit is too long, it may damage the parts inside the outdoor unit.

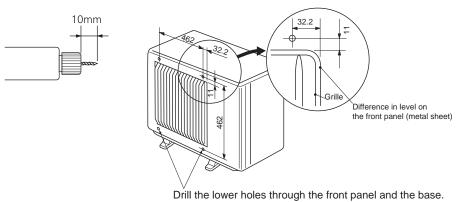

Descriptions

The air outlet guide changes the direction of air from the outdoor unit and prevents short cycling.

plicable Models

- MUZ-LN25VG
 - MUZ-FH25VE
- MUZ-LN25VGHZ MUZ-FH25VEHZ MXZ-2F42VF4
- MUZ-LN35VG
- MUZ-FT25VGHZ MUZ-SF25VE
- MUZ-AP20VG
- MUZ-AY25VG(H) MUZ-SF35VE
- MUZ-AP35VG(H) MUZ-SF35VEH
- MUZ-AP42VG(H) MUZ-SF42VE
- MUZ-EF25VG ■ MUZ-EF25VGH
- MUZ-EF35VG
- MUZ-EF35VGH
- MUZ-EF42VG
- MUZ-BT50VG
- MUZ-HR42VF
- MUZ-HR50VF
- **■** MUZ-DW50VF

- MUZ-FH35VE ■ MUZ-LN35VGHZ ■ MUZ-FH35VEHZ

 - MUZ-SF25VEH


 - MUZ-SF42VEH
 - MUZ-HJ50VA
 - MUFZ-KW25VGHZ
 - MUFZ-KW35VGHZ
 - SUZ-M25VA

 - SUZ-M35VA
 - SUZ-KA25VA6
 - SUZ-KA35VA6

Specifications


	Color (Munsell)	Ivory (3.0Y 7.8/1.1)
Exterior	Surface treatment	Polyester powder coating
	Material	Electro-galvanized steel sheet
Weight		1.6 kg

Components

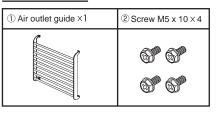



- Remove the front panel from the outdoor unit.
- Drill Ø4.0 mm screw holes in the front panel at the 4 locations shown below.
- The length of the drill bit should be about 10 mm as shown in the figure below. If the drill bit is too long, it may damage the parts inside the outdoor unit.

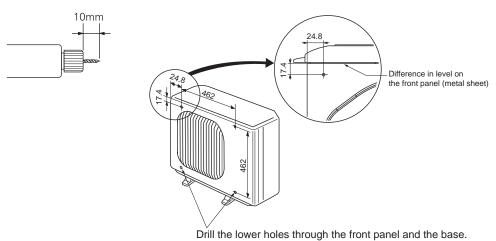


2. Attaching the air outlet guide

- Attach the air outlet guide to the outdoor unit with the 4 screws provided with the air outlet guide.
- The air outlet guide is allowed to be installed in any of the following directions so that air blows upwards, to the left, or to the right.
- * Do not install the air outlet guide in the downward direction, or it may cause short cycling.


Note: Tighten the screws securely.

A chattering sound could be produced due to vibration if the screws are loose.

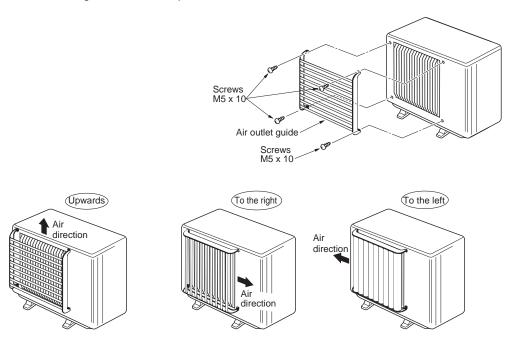



Figure

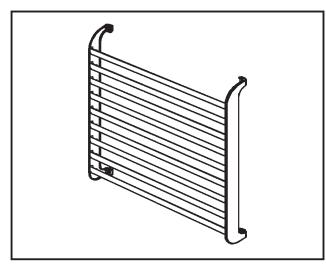

Descriptions


The air outlet guide changes the direction of air from the outdoor unit and prevents short cycling.

Applicable Models

- MUZ-RW25,35VGHZ
- MUZ-LN50VG
- MUZ-FT35,50VGHZ
- MUZ-AY50VG(H)
- MUZ-AP60VG
- MUZ-EF50VG
- **■** MUZ-HR60,71VF
- SUZ-M50VA

Dimensions

Unit: mm

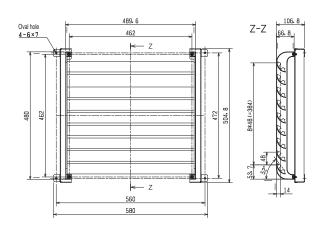

Specifications

	Color (Munsell)	Ivory (3.0Y 7.8/1.1)
Exterior	Surface treatment	Polyester powder coating
	Material	Electro-galvanized steel sheet
Weight		2.2 kg


Components

① Air outlet guide ×1	② Screw M5 x 10 x 8	③ Guide support ×2
	S	

How to Use / How to Install


1. Preparations

- Drill $\dot{\varnothing}4.0$ mm screw holes in the front panel at the 4 locations (depressed portions) shown below.
- The length of the drill bit should be about 10 mm as shown in the figure below. If the drill bit is too long, it may damage the parts inside the outdoor unit.

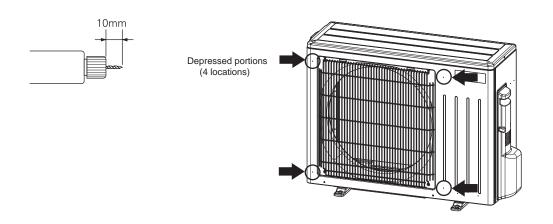



- Attach the guide support to the outdoor unit with the 4 screws (M5 x 10).
- *Tightening torque: 2.5-2.7N·m

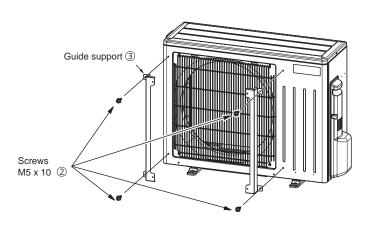


3. Attaching the air outlet guide


- Attach the air outlet guide to the outdoor unit with the 4 screws (M5 x 10).
- *Tightening torque: 2.5-2.7N⋅m
- The air outlet guide is allowed to be installed in any of the following directions so that air blows upwards, to the right, or to the left.
- * Do not install the air outlet guide in the downward direction, or it may cause short cycling.

Note: Tighten the screws securely.

A chattering sound could be produced due to vibration if the screws are loose.

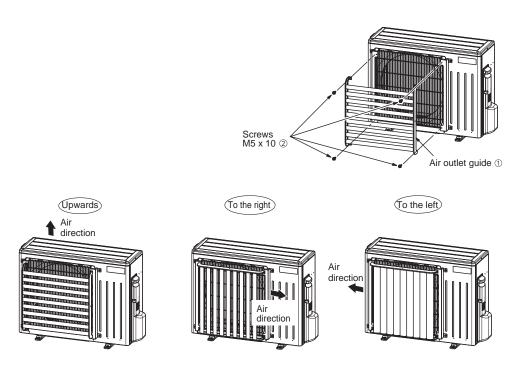



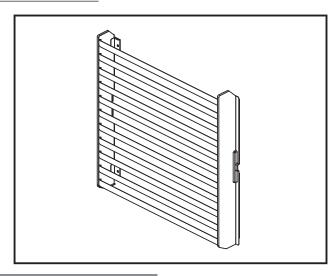

Descriptions

The air outlet guide changes the direction of air from the outdoor unit and prevents short cycling.

pplicable Models

- MUZ-LN50VGHZ MUZ-GF60VE
- MUZ-LN60VG
- SUZ-M60VA ■ SUZ-M71VA

- MUZ-GF71VE
- SUZ-KA50VA6


- MUZ-AP71VG
- MUZ-HJ60VA
- SUZ-KA60VA6

- MUZ-FH50VE
- MUZ-HJ71VA

- MUZ-FH50VEHZ MUFZ-KW50VGHZ SUZ-KA71VA6
- MUZ-SF50VE
- MUFZ-KW60VGHZ
- MUZ-SF50VEH

Dimensions

Unit: mm

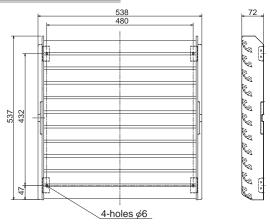

Specifications

Exterior	Color (Munsell)	Ivory (3.0Y7.8/1.1)
	Material/Surface treatment	Alloy hot-dip zinc-coated carbon steel sheet / Acrylic resin coating
Air outlet direction		Upward

Components

① Air outlet guide ×1	② Screw ×4
	67 67 67 67

How to Use / How to Insta

1. Preparations

- (1) Make sure to switch off the power supply or turn off the breaker.
- (2) Determine the position of the front panel. Drill 4 holes (ϕ 4.0 mm) into the front panel on the marks (concave part).


2. Attaching the air outlet guide

Fix the air outlet guide ① with 4 screws ② .

Air outlet guide ①

- Tighten the screws sufficiently. When the screws are not tight enough, vibrations occur and they may cause fluttering sound.
- · Attach the air outlet guide so that air does NOT blow downward to prevent short cycling.

Air blows upward

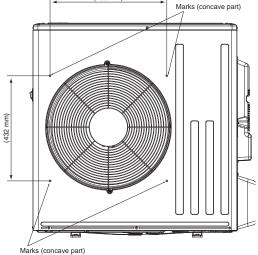

(480 mm)

The drill bit should be about 10mm long as shown in the right picture. If the drill bit is too long, it may damage the heat exchanger, the electrical parts, etc. in the outdoor unit.



3. After installation


Refer to the installation manual provided with the unit to perform pipe connection and electric wiring.

Air outlet guide ①

DUTDOOR UNIT



Figure

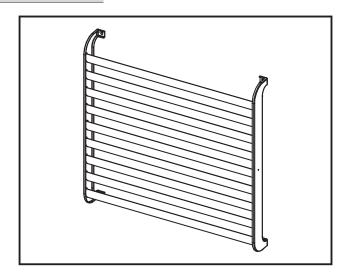

Descriptions

The air outlet guide changes the direction of air from the outdoor unit and prevents short cycling.

Applicable Models


- MUZ-AP15VG
- MUZ-WN25VA
- MUZ-BT20,25,35VG
- MUZ-WN35VA
- MUZ-HR25VF
- MUZ-DM25VA
- MUZ-HR35VF
- MUZ-DM35VA
- MUZ-DW25VF
- MUZ-HJ25VA
- MUZ-DW35VF
- MUZ-HJ35VA

Specifications

	Color (Munsell)	Ivory (3.0Y 7.8/1.1)
Exterior	Surface treatment	Polyester powder coating
	Material	Electro-galvanized steel sheet
Weight		1.6 kg

Dimensions

Unit: mm

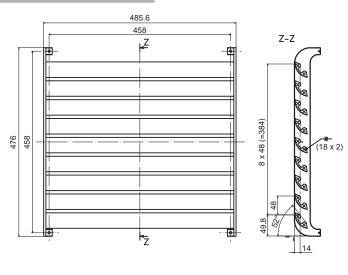


Components


① Air outlet guide ×1	② Screw M5 x 10 × 4
	6 6


How to Use / How to Install

1. Preparations

- Make a hole in the 4 concave parts indicated by ⇒ using a drill with a diameter of 4.0 mm.
- The length of the drill bit should be about 10 mm as shown in the figure below. If the drill bit is too long, it may damage the parts inside the outdoor unit.

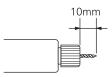

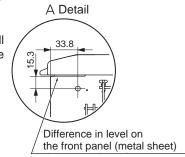

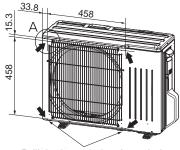

Drill the lower holes through the front paneland the base.


OUTDOOR UNIT


- Attach the air outlet guide to the outdoor unit with the 4 screws provided with the air outlet guide.
- The air outlet guide is allowed to be installed in any of the following directions so that air blows upwards, to the left, or to the right.
- * Do not install the air outlet guide in the downward direction, or it may cause short cycling.

Note: Tighten the screws securely.


A chattering sound could be produced due to vibration if the screws are loose.

* Tightening torque 2 upper screws $1.47^{+0.196}_{-0.098}$ N•m $(15^{+2}_{-1}$ kgf•cm) 2 lower screws $2.45^{+0.196}_{-0.098}$ N•m $(25^{+2}_{-1}$ kgf•cm)

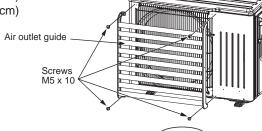


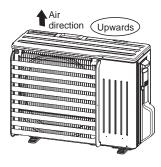



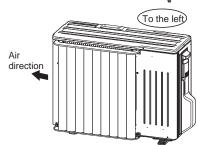


Figure

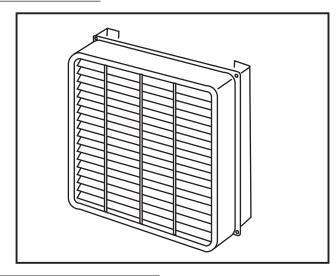


Dimensions

Unit: mm

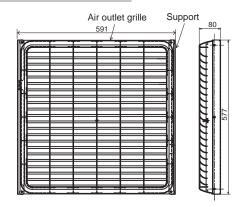


How to Use / How

- 1) Drill Ø4.0 mm screw holes in the front panel at the 4 locations shown below.
 - The length of the drill bit should be about 10 mm as shown in the figure below. If the drill bit is too long, it may damage the parts inside the outdoor unit.

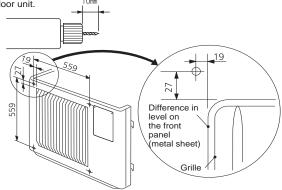

2) Fix A type supports 2 by tightening the screws M5×104 (2 each for the right and left) into the holes drilled in step 1).

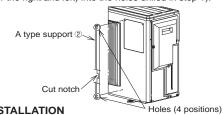

Descriptions

The air outlet guide changes the direction of air from the outdoor unit and prevents short cycling.

Applicable Models

- MXZ-3F54VF4
- MXZ-3E54VA
- PXZ-4F75VG
- MXZ-3F68VF4
- MXZ-3E68VA
- MXZ-4F72VF4
- MXZ-4E72VA
- MXZ-4F80VF4
- MXZ-3DM50VA
- MXZ-3HA50VF2


Specifications

Exterior	Color (Munsell)	Ivory (3.0Y7.8/1.1)
	Material	Air outlet grille: PP resin
		Changeable between up and down
	name x Qty. Surface treatment>	Support A x 2 (Alloy hot-dip zinc-coated carbon steel sheet / Acrylic resin coating) Support B x 2 (Alloy hot-dip zinc-coated carbon steel sheet / Acrylic resin coating) Screw (5x10) x 14 (Iron/Zinc nickel alloy plated)


Components

① Air outlet guide ×1	② Support A ×2	③ Support B ×2	④ Screw 5×10 ×14
	There is a cut part.		


Plan view of the product

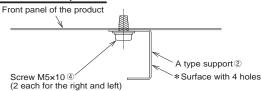

(2 each for 4 positions).

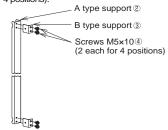

4) Fix air outlet guide 1 to B type supports 3 with 4 screws M5×104. The air direction can be selected from upwards, to the left, and to the right.

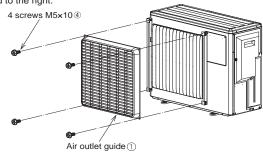


OUTDOOR UNIT

AFTER INSTALLATION

NOTE: Make sure that A type supports, B type supports, and air outlet guide are fixed with screws securely.

Freeze-prevention heater (for drain pan) MAC-643BH-E

Photo

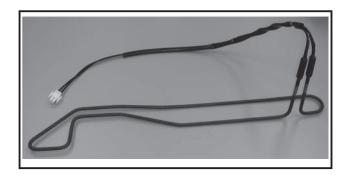

Descriptions


It is freeze-prevention heater for the outdoor unit of the air conditioner.

Applicable Models

- MUZ-EF42VG MXZ-2F33VF4 MXZ-2D33VA
- SUZ-KA25VA6 MXZ-2F42VF4 MXZ-2D42VA2
- SUZ-KA35VA6 MXZ-2F53VF4 MXZ-2D53VA2
 - MXZ-2F53VFH4 MXZ-2D53VAH2

Dimensions

Unit: mm

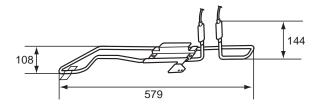

Specifications

Rated voltage	230 V 50 Hz
Power consumption	130 W

Components

1	Defrost heater	1	5	Self drilling screw	2
2	Aluminum tape	1	6	Insulation	1
3	Heater support	1	7	Wiring diagram	1
4	Cable tie	1	8	Spec label	1


How to Use / How to Install


1. INSTALLING THE HEATER

- (1) Hold the left lower side of the heat exchanger, and slightly lift up the heat exchanger.
- (2) Insert the defrost heater ① under the heat exchanger, and align it with the groove on the base.

After positioning the defrost heater 1, secure it to the base with the aluminum tape 2. In order to fix the defrost heater to the base, fix the heater support 3 to the base with 2 self drilling screws 5.

(3) Put the heat exchanger back in place, and install the motor support and the propeller fan. (Refer to the figure below for details.)

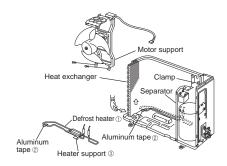


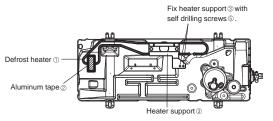

2. FIXING THE WIRES


- (1) Place the lead wires of the defrost heater ①, fan motor, and ambient temp. thermistor as shown in the figure below. Secure them with the cable tie ④.
- *If the lead wires slacken, there is a possibility that they touch the propeller fan. Be sure to secure the wires with the cable tie 4 and a clamp for safety. Cut off the surplus of the cable tie 4.
- (2) Apply the insulation (6) on the place indicated in the figure below. Secure all the wires tightly with the clamp.
- (3) Install the elect assy on the fixed place.

Connect the lead wires from the defrost heater ① to CN 722 on the inverter P.C. board.

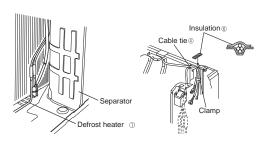

Freeze-prevention heater (for drain pan) MAC-644BH-E

Photo

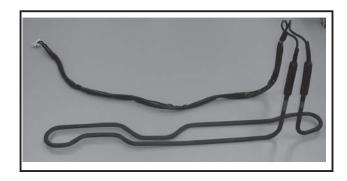

Descriptions

It is freeze-prevention heater for the outdoor unit of the air conditioner.

Applicable Models

■ SUZ-KA50VA6


Specifications

Rated voltage	230 V 50 Hz
Power consumption	120 W

Components

ĺ	1	Defrost heater	1	5	Self drilling screw	2
	2	Heater support	1	6	Wiring diagram	1
	3	Insulation	1	7	Spec label	1
	4	Cable clamp	1			

Dimensions

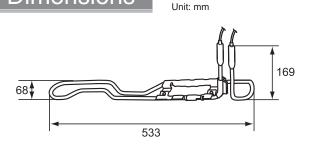

How to Use / How to Install


1. INSTALLING THE HEATER

- (1) Hold the left lower side of the heat exchanger, and slightly lift up the heat exchanger.
- (2) Insert the defrost heater ① under the heat exchanger, and align it with the groove on the base.
 - In order to fix the defrost heater to the base, fix the heater support @ to the base with 2 self drilling screws s .
- (3) Route the lead wires of the defrost heater 1, as shown in the figure below. Tightly secure them with the cable clamp 4.
 - *If the lead wires slacken, they may touch the propeller fan. Be sure to secure the wires with the cable clamp (a) for safety.

Heat exchanger Cable clamp (a) Drill a hole (ø5.4 mm) in a separator at the marked position. The drill bit should be about 30 mm long as shown in the figure below. If the drill bit is to long, it may damage the heat exchanger.


2. FIXING THE WIRES

- (1) Install the motor support.
- (2) Tightly secure all the lead wires of the defrost heater ①, the motor, and the ambient thermistor with a clamp as shown in the figure below.
- (3) Apply the insulation on $\ensuremath{\mathfrak{3}}$ the place indicated in the figure below.
- (4) Connect the lead wires of the defrost heater ① to the inverter P.C. board (CN722).

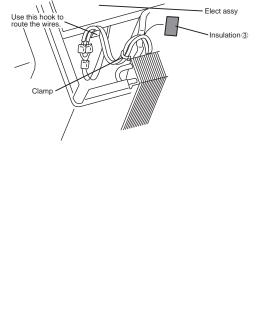

Freeze-prevention heater (for drain pan) MAC-646BH-E

Figure

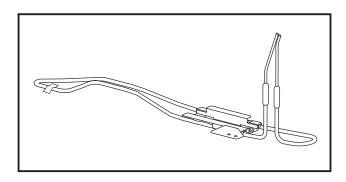

Descriptions

It is freeze-prevention heater for the outdoor unit of the air conditioner.

Applicable Models

■ MUZ-EF50VG

Specifications


Rated voltage	230 V
Electric Power	130 W

Components

1	Defrost heater	1	⑤ Cable clamp	1
2	Aluminum tape	1	6 Insulation	1
3	Heater support	1	Wiring diagram	1
4	Self drilling screw	2	Spec label	1

Dimensions


Unit: mm

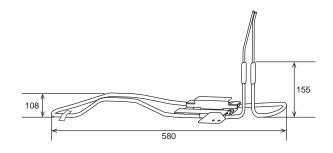

How to Use / How to Install

1. PREPARING FOR INSTALLATION


- (1) Make sure to switch off the power supply or turn off the breaker.
- (2) Remove the top panel, front panel, service panel, motor support, and elect assy.
- (3) Remove the separator and the reactor.

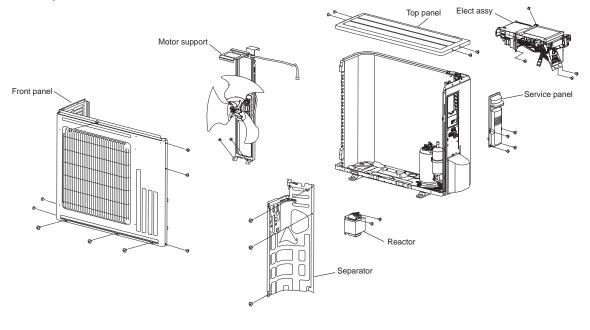

OUTDOOR UNIT

2. INSTALLING THE HEATER

- (1) Hold the left lower side of the heat exchanger, and slightly lift up the heat exchanger.
- (2) Insert the defrost heater ① under the heat exchanger, and align it with the groove on the base.
 - After positioning the defrost heater ①, secure it to the base with the aluminum tape ②.
 - In order to fix the defrost heater ① to the base, fix the heater support ③ to the base with 2 self drilling screws ④.
- (3) Put the heat exchanger back in place (refer to the figure below).

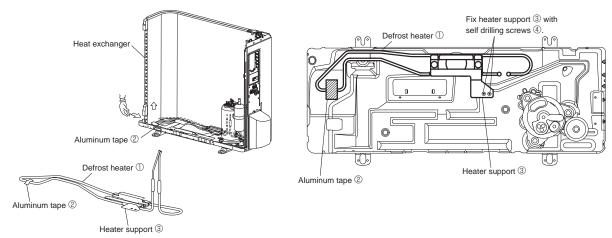


3. FIXING THE WIRES

- (1) Make a hole on the separator at the point shown in the figure on the right.
- (2) Make a ring with the cable clamp (5) and attach it to the separator with its edge coming to the front side.
- (3) Install the reactor, and then, install the separator to the original place.
- (4) Put the lead wires of the defrost heater ① through the ring of the cable clamp ⑤ on the separator to fix them.
 - Cut off the surplus part of the cable clamp ⑤.
- (5) Run the lead wires of the defrost heater ① from the rear of the separator.
- (6) Install the motor support to the original place.
- (7) Place the lead wires of the defrost heater ①, fan motor, and ambient temp. thermistor as shown in the figure below.
 - Note: If the lead wires slacken, there is a possibility that they touch the propeller fan.
- (8) Secure all the wires tightly with the clamp.
 - Apply the insulation 6 on the place indicated in the figure below.
- (9) Install the elect assy on the fixed place.


Connect the lead wires from the defrost heater ① to CN 722 on the inverter P.C. board.

Then, hang the lead wires of defrost heater ① on the hook at the rear of the elect assy.

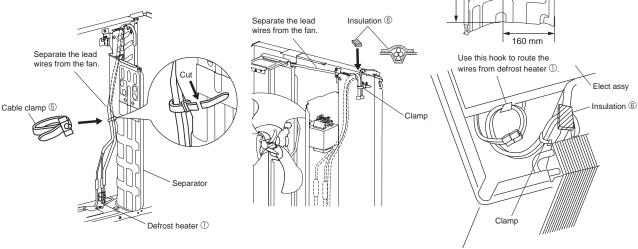

4. AFTER INSTALLATION

- (1) Attach the wiring diagram 7 to the inner side of the top panel.
- (2) Attach the spec label ® under the spec name plate.
- (3) Reinstall the front panel, top panel, and service panel.
- (4) Turn on the breaker, and perform test run to confirm that it works properly.
 - Note: Do not install either drain socket which is provided with the outdoor unit or purchased separately.
 - Inside of the drain hose and/or drain socket may freeze if the drain socket is installed.

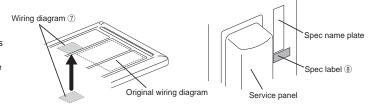


340 mm

Drill a hole (ø5.4 mm) at the position in the

figure.



Figure

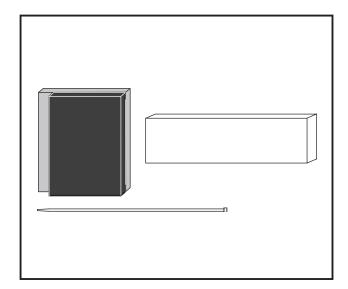


Descriptions

The insulation protects the accumulator from the freeze.

Applicable Models

■ MXZ-2E53VAHZ

Accessory

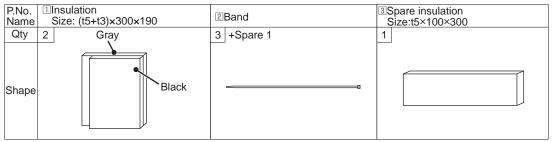

NOTES:

- (1) Attach the insulation correctly as shown in this installation manual: Incomplete attachment could cause freeze of accumulator.
- (2) The insulation have adhesive: Once they are attached, they cannot be removed. So check the positions carefully before attaching.
- (3) If any gap or break occurs during attachment, cut off the spare insulation 3 approximately and attach it. Any gap or break could cause freeze of accumulator.
- (4) If fire is used during installation or maintenance work, avoid the insulation from catching fire. Otherwise, fire may spread.

- Complete attaching the insulation before the piping/wiring work for the indoor-outdoor connection.
- In case the piping work is completed, finish the pump-down operation to remove the piping before attaching the insulation.
- Pay attention to the piping as it might be hot right after the operation is stopped.
- When assembling, pay attention not to make mistakes in connecting lead wire, fixing with the band, and so on.

For details on how to assemble each part, refer to the service manual.

(1) How to disassemble the unit


- For details on how to disassemble each part, refer to the service manual.
- ① Removing the service panel Remove the screws (3 for the front and 3 for the side), then slide the service panel downward to remove.
- ② Removing the top panel Remove the screws (2 for the front and 3 for the back), then lift the top panel upward to remove.
- ③ Removing the handle (R Rear) Remove the 3 screws to remove the handle.
- Removing the back panel Remove the 6 screws of the back panel, then lift the back panel upward to remove.
- ⑤ Removing the front panel (assy) Remove 7 screws of the front panel, then lift the front panel upward to remove.
- ® Removing the ambient temperature thermistor Remove the 2 claws of the ambient temperature thermistor holder, then remove from the rear guard.
- ② Removing the junction connector of the compressor
- ® Removing the elect assy (control P.C. board connector) Disconnect the connectors CNF1 (*1), CN712, CN714 (*2), CNTH1, CN63H, CN791, and CN792.


Remove the 5 elect assy fixing screws, then lift the elect assy upward to remove.

- *1 Remove the fan motor lead wire of CNF1 routing on elect assy.
- *2 Remove the defrost heater lead wire of CN714 routing on elect assy.
- Removing the back pillar Remove the 3 back pillar fixing screws, then remove the back pillar.
- ® Removing the outdoor heat exchanger temperature thermistor (tube: green) Pull out the outdoor heat exchanger temperature thermistor from the thermistor holder.
- ① Removing the defrost thermistor (tube: white) Pull out the defrost thermistor from the thermistor holder.
- Removing the lead wire for the compressor Remove the lead wire for both the compressor and the thermistor from the clamp of separator.
- ® Removing the separator Remove the 2 separator fixing screws, then lift the separator upward to remove.


Note: Pay attention not to touch the propeller fan when removing the separator.

Remove the compressor felt (top/body).

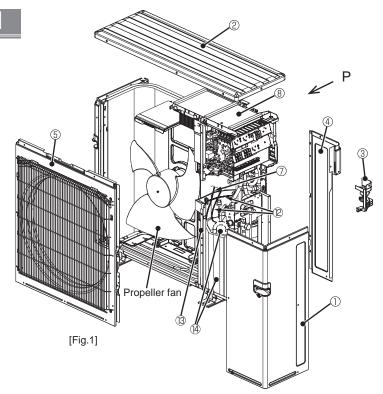

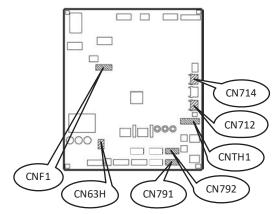

[Fig.2] Reference figure of the controller board

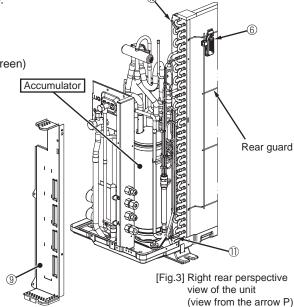


Continued to the next page

PARTS

(2) How to attach the INSULATION (hereafter referred to as INS)

- When attaching the INS, be sure not to include any air or dust between the INS and ACC.
- If there is any condensation on the ACC, wipe it before attaching the INS.
- If any gap or break occurs during attachment, cut off the spare INS 3 approximately and attach it.

"Attaching the INS on the back side of the ACCUMULATOR (hereafter referred to as ACC)"

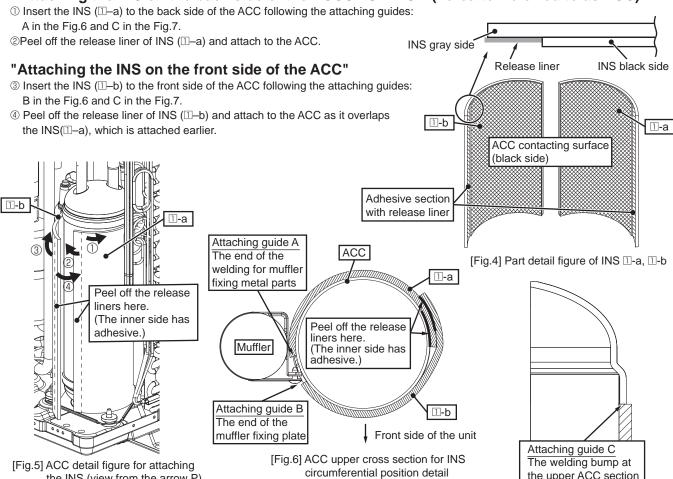


(3) How to fix with the band 2

the INS (view from the arrow P)

- Do not fix the piping and lead wire together with the INS with the band.
- · Make sure that the head of the band does not touch the piping, panels, and other peripheral parts. (Cut the extra part of the band after fixing it.)

Fix the 3 positions with the band 2 over the INS as shown in the Fig.8.

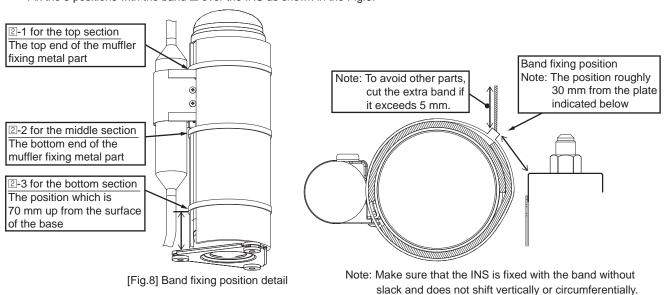


the upper ACC section

ACC section

[Fig.7] INS vertical position in



Figure

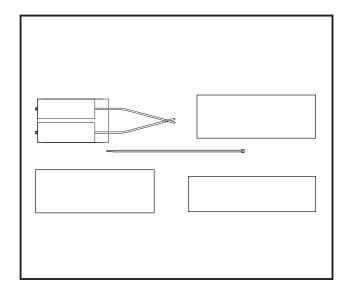


Descriptions

The insulation protects the accumulator from the freeze.

Applicable Models

■ MXZ-4E83VAHZ

Accessory

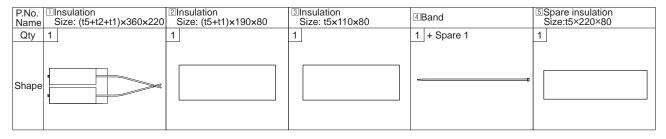

NOTES:

- (1) Attach the insulation correctly as shown in this installation manual: Incomplete attachment could cause freeze of accumulator.
- (2) The insulation have adhesive: Once they are attached, they cannot be removed. So check the positions carefully before attaching.
- (3) If any break occurs during attachment, cut off the spare insulation $\[\]$ approximately and attach it. Break could cause freeze of accumulator.
- (4) If fire is used during installation or maintenance work, avoid the insulation from catching fire. Otherwise, fire may spread.

How to Use / How to Install


- Complete attaching the insulation before the piping/wiring work for the indoor-outdoor connection.
- In case the piping work is completed, finish the pump-down operation to remove the piping before attaching the insulation.
- Pay attention to the piping as it might be hot right after the operation is stopped.
- When assembling, pay attention not to make mistakes in connecting lead wire, fixing with the band, and so on.


For details on how to assemble each part, refer to the service manual.

(1) How to disassemble the unit

For details on how to disassemble each part, refer to the service manual.

- ① Removing the service panel Remove the 8 screws of the service panel, then slide the service panel downward to remove.
- ② Removing the top panel Remove the screws (2 for the front and 3 for the back), then lift the top panel upward to remove.
- ③ Removing the back panel (assy) Remove the 8 screws of the back panel, then lift the back panel upward to remove.
- Removing the front panel (assy)
 Remove the 9 screws of the front panel, then lift the front panel upward to remove.
- ⑤ Remove the junction connector of the compressor.
- ® Removing the electrical parts Disconnect the following connectors on the control board: CNF1 (*1), CN712, CN713, CN714 (*2), CNTH1, CNTH2, CN63H, CN791, CN792, CN793, and CN794. Remove the 4 elect assy fixing screws, then lift the elect assy upward to remove.
 - *1 Remove the fan motor lead wire of CNF1 routing on elect assy.
 - *2 Remove the defrost heater lead wire of CN714 routing on elect assy.
- Removing the back pillar
 Remove the 3 back pillar fixing screws, then remove the back pillar.
- ® Removing the vb fixture Remove the 2 vb fixture fixing screws, then remove the vb fixture.
- Removing the lead wire for the compressor Remove the lead wire for both the compressor and the thermistor from the clamp of separator.
- ® Removing the separator Remove the 2 separator fixing screws, then lift the separator upward to remove. Pay attention not to touch the propeller fan when removing the separator.
- ①Remove the compressor felt (top/body).

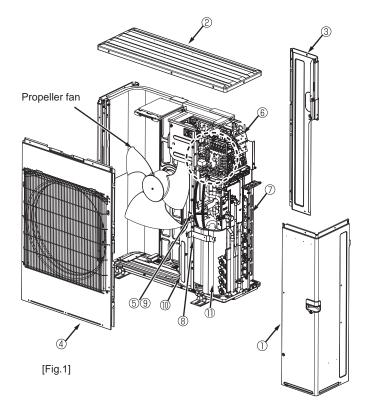

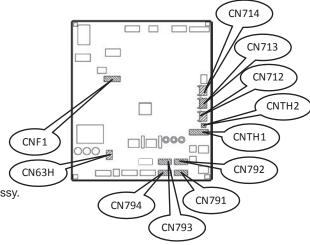

[Fig.2] Reference figure of the controller board



UTDOOR UNIT

(2) How to attach the INSULATION (hereafter referred to as INS)

- •When attaching the INS, be sure not to include any air or dust between the insulation and ACC.
- •Do not fix the piping and lead wire together with the INS with the band.
- •Make sure that the head of the band does not touch the piping, panels, and other peripheral parts. (Cut the extra part of the band after fixing it.)
- •If there is any condensation on the ACC, wipe it before attaching the INS.
- •If any break occurs during attachment, cut off the spare INS approximately and attach it.

Release liner

[Fig.5]

[Fig.8]

"Attaching the INS on the bottom section of the ACCUMULATOR (hereafter referred to as ACC) unit"

•Placing the INS II around the ACC

Pull the band of the INS


the arrow in the Fig.3, then place the INS

around the ACC with its adhesive inside as shown in the Fig.9 and the Fig.10.

Remove the tape after placing the INS 11.

•Peeling the release liner ${\Bbb Z}$ of the INS ${\Bbb L}$

Peel the release liner ${\Bbb Q}$ while placing the INS ${\Bbb I}$ as shown in the Fig.4.

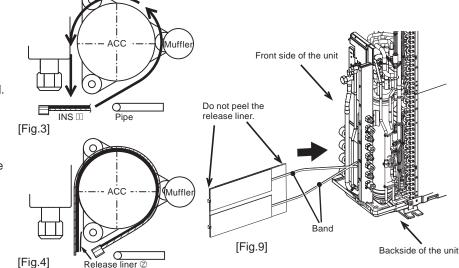

•Attaching the INS \square / Peeling the release liner \odot

Put the end of INS

to the attaching guides A and B, then attach to the ACC as shown in the Fig.5 and Fig.11.

Pay attention not to tilt the INS \square when attaching to the ACC.

Peel the release liner \odot after attaching the inner INS \square .

•Attaching the INS


Pull the INS ① towards the arrow then attach to the ACC as it overlaps the inner INS ① with no gaps between the INS and the ACC as shown in the Fig.6.

·Fixing with the band

Fix the 2 bands of the INS $\ \square$ as shown in the Fig.7.

Note: To avoid other parts, cut the extra part of the band if it exceeds 5 mm.

•Completing the attachment of the INS

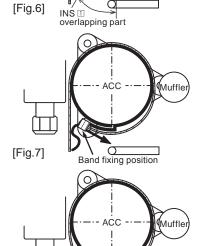


Attaching guide A

Backside of the ACC center

Muffle

[Fig.10]

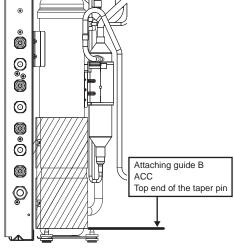

Remove the tape after

placing the INS II.

[Fig.11] Back side of the ACC



•Placing the INS 2 around the ACC

•Peeling the release liner ⊗ of the INS ②

Peel the release liner \otimes while placing the INS 2 as shown in the Fig.13.

•Attaching the INS 2 / Peeling the release liner ®

Put the end of the INS ② to the attaching guide C and D, then attach to the ACC as shown in the Fig.14 and Fig.19.


Peel the release liner @ after attaching the end of the INS @.

•Attaching the INS ② (Completing attachment of INS ②)

Pull the INS 2 towards the arrow in the Fig.15, then attach with no gaps between ACC and INS 2.

•Peeling the release liner of the INS 3 / Attaching the INS 3

Peel the release liner of the INS ③, then insert the INS ③ as shown in the Fig.18.
Put the end of the INS ③ to the attaching guide D and E, then attach as it overlaps the INS ② as shown in the Fig.16 and the Fig.19.

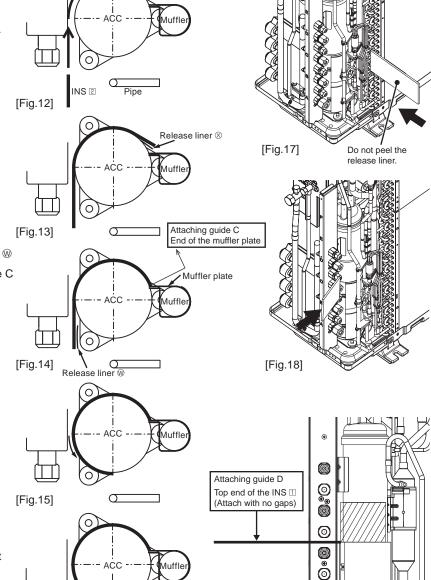

"Fixing the top section of the ACC unit with the band"


Placing the band 4 around the INS 2 and the INS 3 as shown in the Fig.20.

Fix the band 4. For the height, the position, and the head of the band, refer to the Fig.21 and the Fig.22.

Notes: Make sure to fix the muffler plate and the INS firmly.

Make sure that the INS is fixed with the band without slack and does not shift vertically or circumferentially.

[Fig.16] Overlapping part

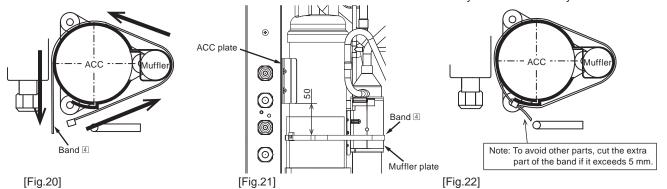

INS 3

Attaching guide E Square corner of the


muffler plate

OUTDOOR UNIT

[Fig.19] Back side of the ACC



Figure

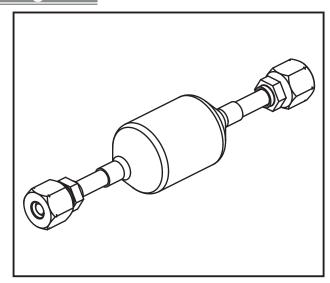

Descriptions

This product is the muffler of the heat pump outdoor unit.


Applicable Models

- PXZ-4F75VG
- PXZ-5F85VG

Specifications

Diameter	ø43.2
Material	C1220T-3/4H


Contents

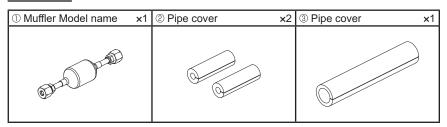

■ Parts to be provided at your site

④ Piping tape 1

Dimensions

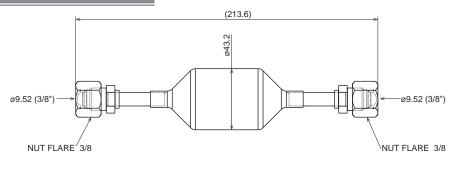

How to Use / How to Instal

Installation

Connection pipe condition

Connection side	Indoor	Outdoor
Connection Gas pipe size	ø9.52	ø9.52


- Connect the muffler ① to the gas piping within 3 meters from the piping connection port of the outdoor unit outside.
- The muffler can be connected in any orientation.


Flaring work

- 3. Cut the copper pipe correctly with a pipe cutter. (Fig. 1, 2)
- Completely remove all burrs from the cut cross section of pipe. (Fig. 3)
 - Point the copper pipe downward while removing burrs to prevent them from dropping
- 5. Remove flare nuts (A) and port cap attached to the muffler ①, then put the flare nuts on the pipe with the burrs completely removed. (Not possible to put them on after flaring work.)
- Perform the flare work (Fig. 4 and 5). Firmly hold the copper pipe according to the dimensions shown in the table. Select X mm from the table according to the tool selected.
- Check the following.
 - Check the flare work based on Fig.6.
 - If the flare work is not proper, cut off the flared section and do flaring work again.

Pipe connection

- Align the center of the pipe with that of the pipe at the muffler, then tighten the flare nuts by 3 to 4 turns by hand.
- Tighten the flare nuts in the range of from 34.4N m (350kgf cm) to 41.2 N m (420kgf cm).
- 10. Perform the procedure 3 to 4 for outdoor and indoor side.
- 11. After connecting the muffler with the piping at an indoor and outdoor unit, cover the muffler and piping joints with the pipe covers @ and 3. (Do not point their slits in the same orientation.)
- 12. Using the piping tape 4, apply the tape starting from the root of Indoor gas pipe. Tape the pipe cover securely so that there is no clearance between the cover and the parts (muffler etc.) and at the slits. (For the detail, see the following figure.)

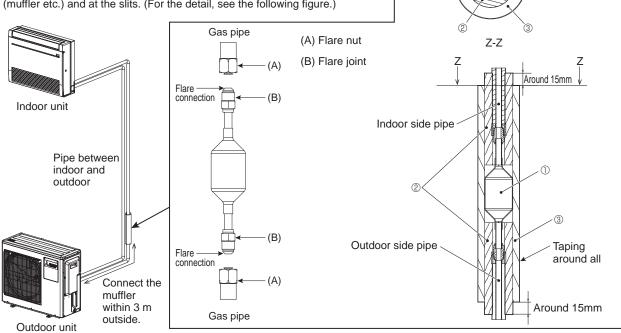

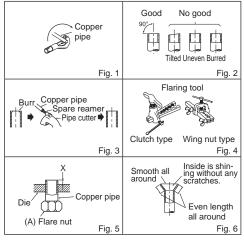


			X (mm)		Tightening torque	
Pipe diameter (mm)	Nut (mm)	Clutch type tool for R32, R410A	type tool	Wing nut type tool for R22		kgf⋅cm
Ø9.52 (3/8")	22	0 to 0.5	1.0 to 1.5	1.5 to 2.0	34.4 to 41.2	350 to 420

Do not make their slits to the same orientation.

Taping


around all

No clearance at slit in 2 and 3

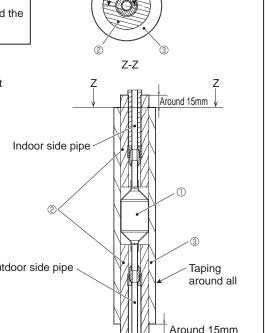



Figure

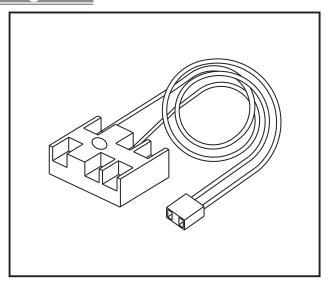

Descriptions

This product is the connector for the drain hose heater of the heat pump outdoor unit.

Applicable Models

- PXZ-4F75VG
- PXZ-5F85VG

Specifications


Rated voltage	AC 230 V
Max. current	1 A

Contents

① Terminal block assy	×1	② Screw	×1	3 Cable strap x1

How to Use / How to Insta

Installation

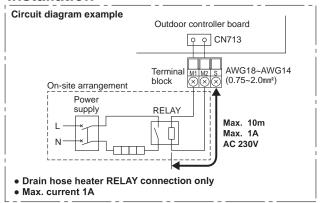


Notice about terminal treatment of cable and wire




- · Be sure to attach each screw to its correspondent terminal when securing the cord and/or the wire to the terminal block.
- Make earth wire a little longer than others. (More than 35 mm)
- For future servicing, give extra length to the connecting wires.

In case of PXZ UNIT size H710xW840xD330

- 1) Remove the service panel, top panel and front panel. 2) Attach the terminal block $\hat{\mathbb{Q}}$ to CO PB Holder with the
- 3) Connect the lead wire ① of connector side to CN713 port on the outdoor controller board.
- 4) Connect cables (locally procured) for a drain hose heater RELAY to the terminal block \odot so that no part of its core is appeared, and no external force is reached to the connecting section of the terminal block.
- 5) Firmly tighten the terminal screws to prevent the wires from loosening.
 - After tightening, pull the wires lightly to confirm that they do not move.
- 6) Fix the lead wire with the cable clamp and cable strap 3. Do not fix the wire at fixed point of screw in the cable clamp. Run the cables or wires so as not to deform the service panel. Otherwise, rainwater may enter the outdoor
- 7) Assemble the service panel, top panel, and front panel securely.

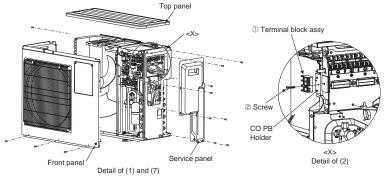


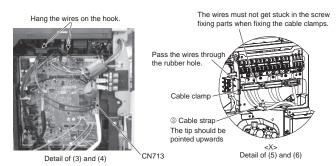

In case of PXZ UNIT size H796xW950xD330

- 1) Remove the service panel and cable cover.
- 2) Attach the terminal block ① to TB Bed with the screw ②.
- 3) Connect the lead wire ① of connector side to CN713 port on the outdoor controller board.
- 4) Pass the cables (locally procured) for a drain hose heater RELAY to the terminal block ① through the grommet, and connect them so that no part of its core is appeared, and no external force is reached to the connecting section of the terminal block
- 5) Firmly tighten the terminal screws to prevent the wires from loosening.
 - After tightening, pull the wires lightly to confirm that they
- 6) Fix the lead wire with the cable clamp. Do not fix the wire at fixed point of screw in the cable clamp. Run the cables or wires so as not to deform the service panel. Otherwise,
- rainwater may enter the outdoor unit.

 7) Assemble the cable cover, service panel, top panel, and front panel securely.

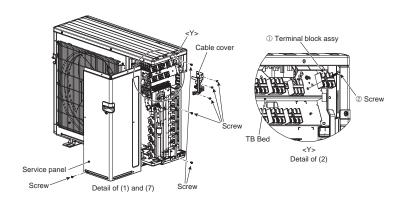


CN713






Detail of (3) and (4)

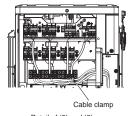

Detail of (5) and (6)



Photo

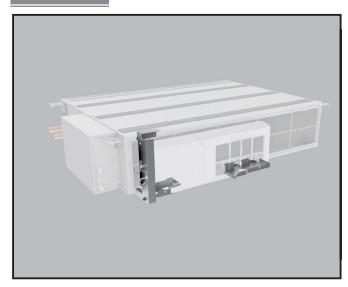

Descriptions

An attachment that connects Plasma Quad Connect to indoor unit.

X Plasma Quad Connect should be used together with PQ attachment or PQ box.

Applicable Models

PAC-HA11PAR

- SEZ-M25DA(L)2
- SEZ-M35DA(L)2
- SEZ-M50DA(L)2 ■ SEZ-M60DA(L)2
- SEZ-M71DA(L)2

PAC-HA31PAR

- PEAD-M35JA2 ■ PEAD-SM35JA
- PEAD-M50JA2 ■ PEAD-SM50JA ■ PEAD-M60JA2 ■ PEAD-SM60JA
- PEAD-M71JA2 ■ PFAD-SM71JA
- PEAD-M100JA2 ■ PEAD-SM100JA
- PEAD-M125JA2 ■ PEAD-SM125JA ■ PEAD-SM140JA ■ PEAD-M140JA2
- PEAD-M35JAL2 ■ PEAD-SM35JAL
- PEAD-M50JAL2 ■ PEAD-SM50JAL
- PEAD-M60JAL2 ■ PEAD-SM60JAL
- PEAD-M71JAL2 ■ PEAD-SM71JAL
- PEAD-M100JAL2 PEAD-SM100JAL
- PEAD-M125JAL2 PEAD-SM125JAL
- PEAD-M140JAL2 PEAD-SM140JAL

PAC-HA31PAU

- PEAD-SM35JA ■ PEAD-M35JA2
- PEAD-M50JA2 ■ PEAD-SM50JA
- PEAD-M60JA2 ■ PEAD-SM60JA
- PEAD-M71JA2 ■ PEAD-SM71JA
- PEAD-M100JA2 ■ PEAD-SM100JA
- PEAD-M125JA2 ■ PEAD-SM125JA ■ PEAD-M140JA2 ■ PEAD-SM140JA
- PEAD-SM35JAL ■ PEAD-M35JAL2
- PEAD-M50JAL2 ■ PEAD-SM50JAL
- PEAD-M60JAL2 ■ PEAD-SM60JAL
- PEAD-SM71JAL ■ PEAD-M71JAL2
- PEAD-M100JAL2 PEAD-SM100JAL
- PEAD-M125JAL2
 PEAD-SM125JAL ■ PEAD-M140JAL2 ■ PEAD-SM140JAL

How to Use / How to Install

■ PAC-HA11,31PAR

1 Confirming the Supplied Parts


Check that the packet includes the following parts in addition to this Installation Manual.

ITEM	① PLATE 1	② PLATE 2	③ PLATE 3	④ PLATE 4	⑤ Screw (4×10)	6 Screw (5×10)	⑦ RUBBER PLATE
Quantity	1	1	1	1	3	2	2
Shape PAC-HA11PAR					(]mmo		
Quantity	1	-	1	1	3	2	2
Shape PAC-HA31PAR							


2 Installing the PQ attachment and PLASMA QUAD CONNECT

This Installation Manual covers the installation instructions for units with a depth of 700 mm. For units with a depth of 450 mm, see their manual. (Figures without indication of model names show PAC-HA11PAR.)

- 1.Remove the COVER_F, and then remove Filter 1 from the cover of the PLASMA QUAD CONNECT. (Fig. 3-1)
 - Discard Filter 1, for it is not needed for mounting the PLASMA QUAD CONNECT in the way described here. (In the case of MAC-100FT-E)Remove the device and Filter 2, and attach a RUBBER PLATE (⑦) in the area shown in Fig. 3-2. (The other plate is a spare.)
- Re-place the device and Filter 2 in their original positions, and close the cover.
- * Attach the RUBBER PLATE (⑦) to keep the PLASMA QUAD CONNECT from making noise when the indoor unit to which it is attached vibrates.
- * For connecting the internal wiring of the PLASMA QUAD CONNECT, see steps (5) through (9) in the manual for the PLASMA QUAD CONNECT.

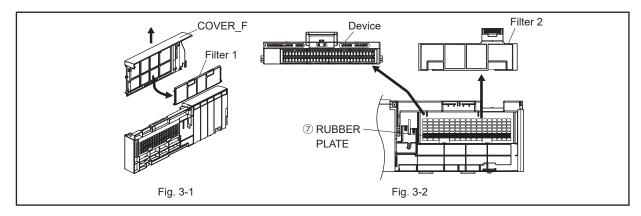


2. Remove the filter from the indoor unit. (Fig. 3-3)

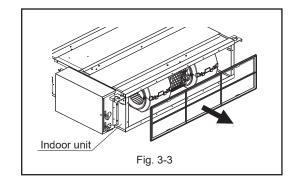


- 3. Mount PLATE 1 (1), PLATE 2 (2), and PLATE 3 (3) to the indoor unit, using three screws (5).
- * Screw-down position
- 1) PLATE 1: Hole in the front of the bottom plate
 2) PLATE 2: The fifth hole from the front of the bottom plate (PAC-HA11PAR)
- 3 PLATE 3: Hole in the front of the top plate


Re-place the filter to the original position. (Fig. 3-4) (Fig. 3-5) (Fig. 3-6)

4. Temporarily fasten the screws (⑥) to PLATE 1 (①) and PLATE 3 (③). (Fig. 3-7)

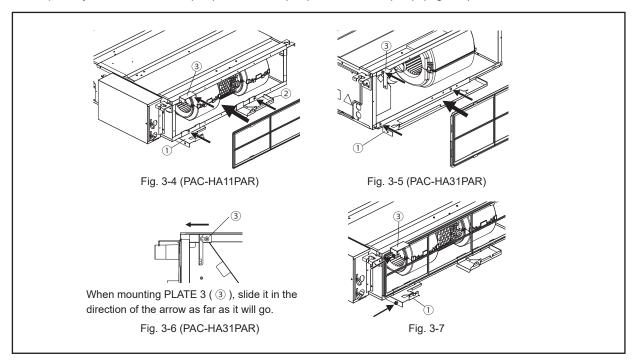


- 5. Slide the PLASMA QUAD CONNECT in the direction of the arrow until it is securely in place.
 - Make sure to place the PLASMA QUAD CONNECT in the orientation shown in the figure below.
- 6.Mount PLATE 4 (④) to the indoor unit, and tighten the two screws that were temporarily fastened in Step 4. (Fig. 3-9)

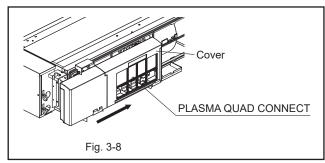

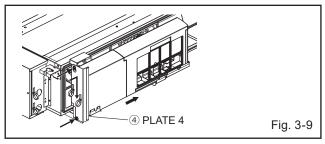

The maintenance of the PLASMA QUAD CONNECT requires extra 550 mm or longer of the cable. Hold the excess cable with the CABLE STRAP marked with * in the figure (including the power supply cable installed on site).

* When using another interface, hold the cables at the same locations as the cables supplied with the PLASMA QUAD CONNECT.

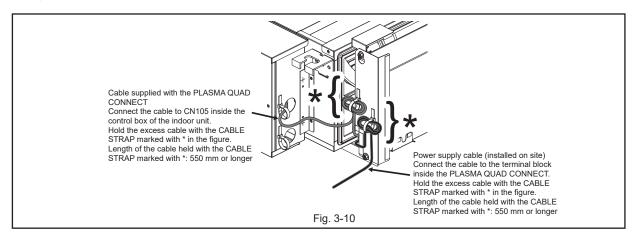

8. Set the external static pressure.

Attaching the PLASMA QUAD CONNECT increases the pressure loss. In a certain capacity range where the airflow may not reach the rated airflow level with the factory default external static pressure setting, adjust the external static pressure setting as necessary. For the adjustment procedure, see the Installation Manual for the indoor unit.

3 Maintenance

Turn off the power supply before starting the maintenance work.

Do not pinch the cables during the maintenance work.

Before servicing the indoor unit (suction side), remove the PLASMA QUAD CONNECT.

Before servicing the PLASMA QUAD CONNECT, slide off the COVER_F in the direction of the arrow.

When there is no sufficient maintenance space above the unit to remove the COVER_F, remove the PLASMA QUAD CONNECT to remove the COVER_F.



For details on the maintenance of the PLASMA QUAD CONNECT, see the manual for the PLASMA QUAD CONNECT.

OPTIONAL PARTS

■ PAC-HA31PAU


1 Confirming the Supplied Parts

Check that the packet includes the following parts in addition to this Installation Manual.


	-					
ITEM	① PLATE 1	② PLATE 2	③ PLATE 3	④ PLATE 4	⑤ Screw (4×10)	6 CABLE STRAP
Quantity	1	1	1	1	9	1
Shape PAC-HA31PAU					(Jump	
ITEM	⑦ WIRE SADDLE	® RUBBER	RPLATE			
Quantity	1	2				
Shape PAC-HA31PAU						

2 Installing the PQ attachment and PLASMA QUAD CONNECT


- Remove the COVER_F, and then remove Filter 1 from the cover of the PLASMA QUAD CONNECT. (Fig. 3-1-1)
 Discard Filter 1, for it is not needed for mounting the PLASMA QUAD CONNECT in the way described here. (In
 the case of MAC-100FT-E)
 - Remove the device and Filter 2, and attach a RUBBER PLATE (®) in the area shown in Fig. 3-1-2. (The other plate is a spare.)
 - Re-place the device and Filter 2 in their original positions, and close the cover.
- * Attach the RUBBER PLATE (®) to keep the PLASMA QUAD CONNECT from making noise when the indoor unit to which it is attached vibrates.
- * For connecting the internal wiring of the PLASMA QUAD CONNECT, see steps (5) through (9) in the manual for the PLASMA QUAD CONNECT.

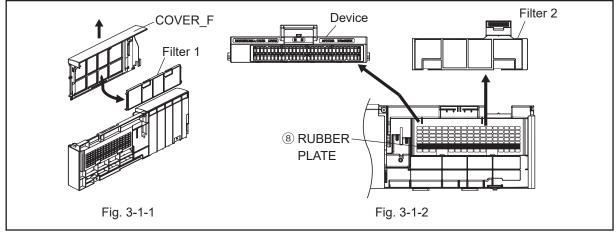


2. Remove the filter from the indoor unit. (Fig. 3-2)

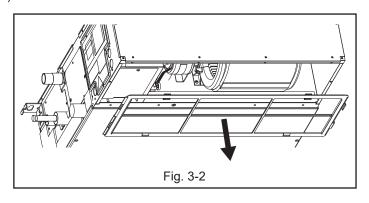


3. Mount PLATE 1 (①) and PLATE 2 (②) to the indoor unit, using four screws. Attach CABLE STRAP (⑥) and WIRE SADDLE (⑦) to PLATE 1 (①). Re-place the filter to the original position. (Fig. 3-3)

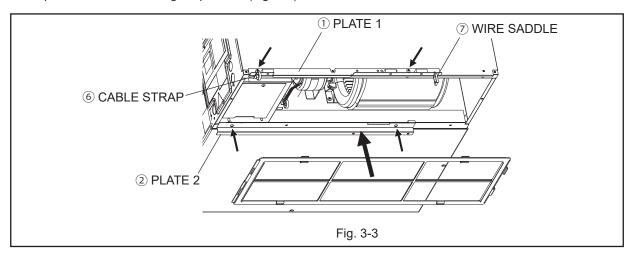

4. Mount PLATE 3 (③) to the indoor unit, using four screws. Insert the PLASMA QUAD CONNECT all the way in the direction of the arrow. (Fig. 3-4)

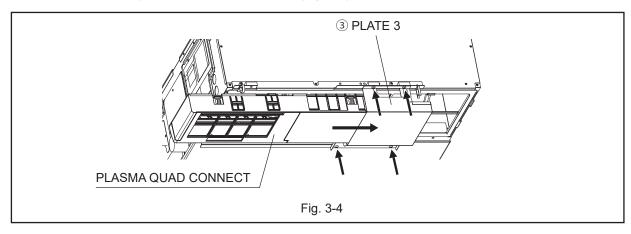


5. Mount PLATE 4 (4) to the indoor unit, using one screw. (Fig. 3-5) Make sure to place the PLASMA QUAD CONNECT in the orientation shown in the figure below.

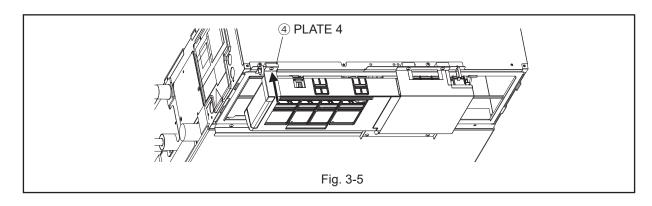

Hold the cables with CABLE STRAP (6) and WIRE SADDLE (7).

* When using another interface, hold the cables at the same locations as the cables supplied with the PLASMA QUAD CONNECT.

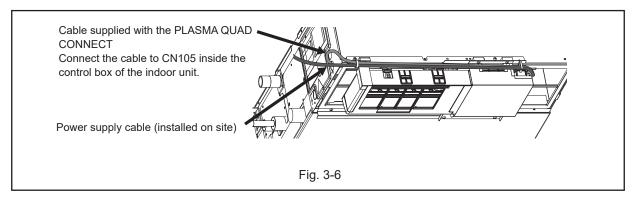

7. Set the external static pressure.

Attaching the PLASMA QUAD CONNECT increases the pressure loss. Adjust the external static pressure setting as necessary. For the adjustment procedure, see the Installation Manual for the indoor unit.


Maintenance

Turn off the power supply before starting the maintenance work.

Do not pinch the cables during the maintenance work.


Before servicing the indoor unit (suction side), remove the PLASMA QUAD CONNECT.

Before servicing the PLASMA QUAD CONNECT, slide off the COVER_F in the direction of the arrow. (Fig. 4)

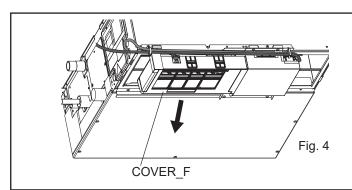

For details on the maintenance of the PLASMA QUAD CONNECT, see the manual for the PLASMA QUAD CONNECT.

Photo

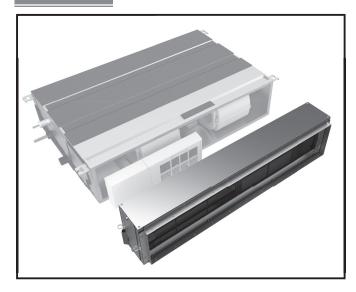

Descriptions

A filter box that connects Plasma Quad Connect to indoor unit.

※ Plasma Quad Connect should be used together with PQ attachment or PQ box.

Applicable Models

PAC-KE92PTB-E

- PEAD-M35JA2
- PEAD-M50JA2
- PEAD-M35JAL2
- PEAD-M50JAL2
- PEAD-SM35JA
- PEAD-SM50JA
- PEAD-SM35JAL
- PEAD-SM50JAL

PAC-KE94PTB-E

- PEAD-M100JA2
- PEAD-M125JA2
- PEAD-M123JA2 ■ PEAD-M100JAL2
- PEAD-M125JAL2
- PEAD-SM100JA
- PEAD-SM125JA
- PEAD-SM100JAL■ PEAD-SM125JAL
- PAC-KE93PTB-E
- PEAD-M60JA2
- PEAD-M71JA2
- PEAD-M60JAL2
- PEAD-M71JAL2■ PEAD-SM60JA
- E DEAD CM74 IA
- PEAD-SM71JA■ PEAD-SM60JAL
- PEAD-SM71JAL

PAC-KE95PTB-E

- PEAD-M140JA2
- PEAD-M140JAL2
- PEAD-SM140JA
- PEAD-SM140JAL

How to Use / How to Install

Confirming the Supplied Parts

Check that the packet includes the following parts in addition to this Installation Manual.

		•		
PARTS	SHAPE			Model name
① CCDEW (4×40)	Anna		26	PAC-KE92•93PTB-E
① SCREW (4×10)	(mm		32	PAC-KE94•95PTB-E
② CABLE STRAP				PAC-KE92•93•94•95PTB-E
		a×b	-	-
© SUCTION ELANCE	a	857 × 208	1	PAC-KE92PTB-E
③ SUCTION FLANGE	I Г	1057 × 208	1	PAC-KE93PTB-E
	1357 × 208		1	PAC-KE94PTB-E
		1557 × 208	1	PAC-KE95PTB-E
4 WIRING COVER			1	PAC-KE92•93•94•95PTB-E
⑤ RUBBER PLATE			2	PAC-KE92•93•94•95PTB-E


Installing the PQ attachment and PLASMA QUAD CONNECT

Remove the COVER_F, and then remove Filter 1 from the cover of the PLASMA QUAD CONNECT. (Fig. 4-1) Discard Filter 1, for it is not needed for mounting the PLASMA QUAD CONNECT in the way described here. (In the case of MAC-100FT-E)


Remove the device and Filter 2, and attach a RUBBER PLATE (5) in the area shown in Fig. 4-2. (The other plate

- Re-place the device and Filter 2 in their original positions, and close the cover.


 * Attach the RUBBER PLATE (⑤) to keep the PLASMA QUAD CONNECT from making noise when the indoor unit to which it is attached vibrates.
- * For connecting the internal wiring of the PLASMA QUAD CONNECT, see steps (5) through (9) in the manual for the PLASMA QUAD CONNECT.

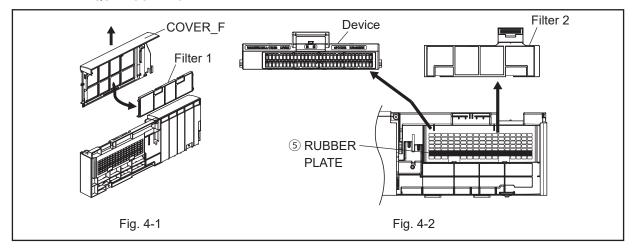

Remove the side panel from the filter box. (Fig. 4-3)

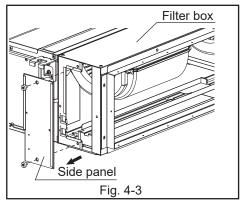

3. Mount the PLASMA QUAD CONNECT on the rails. Hook the tabs on the PLASMA QUAD CONNECT onto the notches in the rails. (Fig. 4-4)

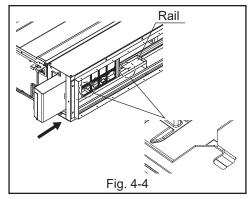


4. Insert the filter that was removed in step 3-1 above along the top and bottom rails.(Fig. 4-5) When using the PAC-KE93, 94, or 95PTB-E, join the two filters before inserting them. (Fig. 4-6)

If the two filters are inserted without them being joined together, it will render the one in the back difficult to remove.


↑ CAUTION

Never place your hand inside the filter box during maintenance. If the filter tabs become caught when the filter is removed for maintenance, use a long stick or similar item to remove the remaining filter.

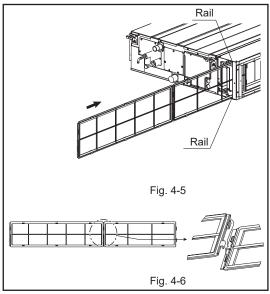

5.Connect cables. (Fig. 4-7)
Attach the WIRING COVER with the supplied screws, and attach the CABLE STRAP. The maintenance of the PLASMA QUAD CONNECT requires extra 550 mm or longer of the cable. Hold the excess cable with the CABLE STRAP marked with * in the figure (including the power supply cable installed on site).

When using another interface, hold the cables at the same locations as the cables supplied with the PLASMA QUAD CONNECT.

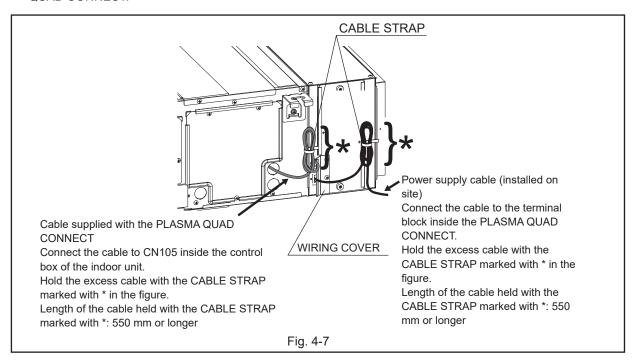

Attaching the PLASMA QUAD CONNECT increases the pressure loss. Adjust the external static pressure setting as necessary. For the adjustment procedure, see the Installation Manual for the indoor unit.

3 **Maintenance**


Turn off the power supply before starting the maintenance work. Do not pinch the cables during the maintenance work.

Before servicing the indoor unit (suction side), remove the PLASMA QUAD CONNECT.

To service the PLASMA QUAD CONNECT, remove the PLASMA QUAD CONNECT using the reverse order of installation.

For details on the maintenance of the PLASMA QUAD CONNECT, see the manual for the PLASMA QUAD CONNECT.

Photo

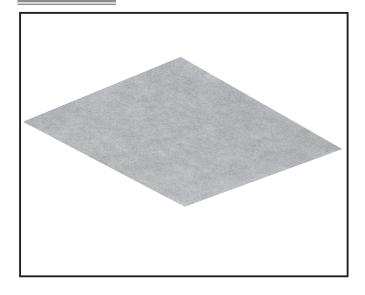

Descriptions

V Blocking Filter with antiviral effect inhibits 99% of adhered virus, and other harmful substances, such as bacteria, mold and allergen.

Two-layered filter with non-woven fabric and electrostatic filter can effectively capture and remove small particles from the air in your room.

Applicable Models

PAC-SK53KF-E

- PLA-ZM35EA type
- PLA-ZM50EA type
- PLA-ZM60EA type
- PLA-ZM71EA type
- PLA-ZM100EA type
- PLA-ZM125EA type
- PLA-ZM140EA type
- PLA-M35EA type
- PLA-M50EA type
- PLA-M60EA type
- PLA-M71EA type
- PLA-M100EA type
- PLA-M125EA type
- PLA-M140EA type
- PLA-SM35EA type
- PLA-SM50EA type
- PLA-SM60EA type ■ PLA-SM71EA type
- PLA-SM100EA type
- PLA-SM125EA type
- PLA-SM140EA type

PAC-SK54KF-E

- SLZ-M15FA type
- SLZ-M25FA type
- SLZ-M35FA type
- SLZ-M50FA type
- SLZ-M60FA type

PAC-SK55KF-E

- PCA-M35KA type
- PCA-M50KA type

PAC-SK56KF-E

- PCA-M60KA type
- PCA-M71KA type

PAC-SK57KF-E

- PCA-M100KA type
- PCA-M125KA type
- PCA-M140KA type

Specifications

Model	PAC-SK57KF-E	PAC-SK56KF-E	PAC-SK55KF-E	PAC-SK54KF-E	PAC-SK53KF-E		
Filter size (mm × mm)	753 × 207	A: 433 × 207 B: 753 × 207	433 × 207	308 × 308	507 × 507		
Quantity	2	A × 1, B × 1	1	1	1		
Filter Material		Polyester, Rayon					
Color (Filter)	Light green						
Applicable Models	PCA-M100 KA type PCA-M125 KA type PCA-M140 KA type	PCA-M60 KA type PCA-M71 KA type	PCA-M35KA type PCA-M50KA type	SLZ-M**FA series	PLA-ZM**EA series PLA-M**EA series PLA-SM**EA series		

How to Use / How to Install


Installing the filter

- (1) Open the intake grille.
 - Refer to the installation manuals of 1-way/4-way ceiling-cassette type panels and the ceiling suspended indoor units for details.
- (2) Remove the standard filter [Figure 1] and install the Air cleaning filter by aligning its corners with the inside corners of the intake grille [Figure 2]. Then attach the standard filter to fix the Air cleaning filter.

 • There is no front or back on the Air cleaning filter.

 • Do not layer two or more pieces of Air cleaning filter. Droplets or dripping may result.

 - Do not change the number of air outlet to 2 when using the Air cleaning filter.
 - It cannot be used with a high efficiency filter.
 - It may be discolored depending on the usage environment.

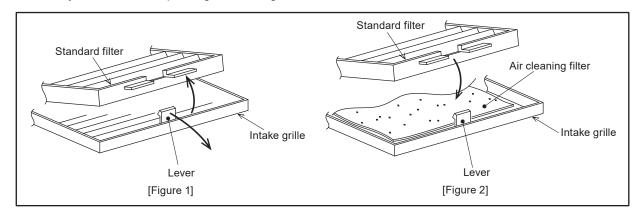

Selecting function

- (1) Increasing the air volume (It is necessary when the Air cleaning filter is installed.) Be sure to make a setting for increasing the air volume as the installation of the Air cleaning filter causes the decrease in air volume, resulting in performance decline and dripping.
- For Mr. Slim
 - Set the Setting no. of Mode no. 10 of Function table from 1 to 2 with the remote controller by referring to the installation manual of the indoor unit.
 - For SLZ*FA series, set the Setting no. of Mode no.8 of Function table from 2 to 3.

<Example> Function table

Mode	Settings	Mode no.	Setting no.	Initial setting
Installed options (high efficiency filter)	Not supported	10	1	0
mstalled options (night efficiency litter)	Supported	10	2	

3 Cleaning

Every 3 months:

· Remove dirt by a vacuum cleaner.

When dirt cannot be removed by vacuum cleaning:

- · Soak the filter in lukewarm water before rinsing it.
- · After washing, dry it well in shade.


Every year:

· Replace it with a new Air cleaning filter for best performance.

This information is based on REGULATION (EU) No 528/2012 for Europe countries

Model name	Treated Article (Parts name)	Active Substances (CAS No.)	Property	Instruction for Use (Safe handling information)
PAC-SK53KF-E PAC-SK55KF-E PAC-SK55KF-E PAC-SK56KF-E PAC-SK57KF-E	FILTER	Dimethyloctadecyl [3- (trimethoxysilyl) propyl] ammonium chloride (27668-52-6)	Antivirus Antibacterial Antimold	Use this product in line with the instruction manual indications and for the intended purpose only. Do not put into mouth. Keep away from children.

Photo

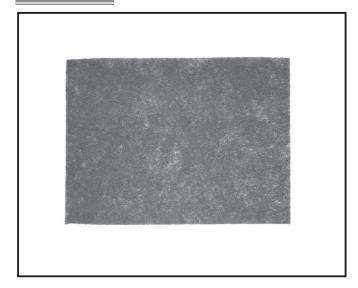

Descriptions

Filter Element (12 Pieces) for ceiling suspended models for professional kitchen use.

Applicable Models

■ PCA-M71HA type


Specifications

Material	Modacrylic fiber / Polyester		
Color	Black		
	60 ℃ or less		
Reproduction	Disposable (Reproduction not possible)		
Packing	12 elements per bag		


Note: Only the filter element must be replaced (the filter frame provided on the main body must be used)

Dimensions

Unit: mm

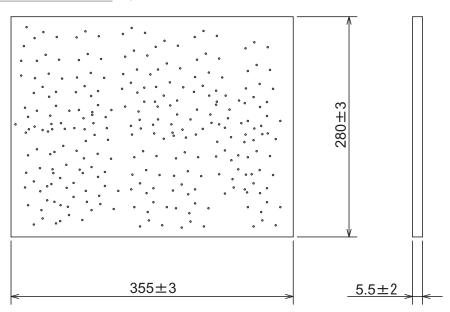

State of installation to filter frame

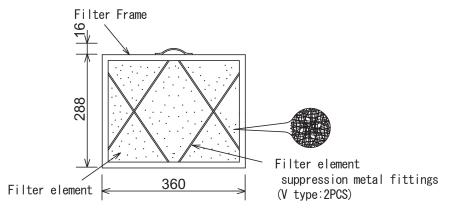


How to Use / How to Install

Cleaning the oil filter

1) Removing the oil filter

①Remove the filter by sliding it in the direction of an arrow.

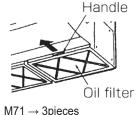


2) Replacing the filter element

- ①Remove the oil filter by sliding it in the direction of an arrow.
- ②Remove the two metal fittings for filter element according to the following procedure. Bend the metal fittings towards ① side(inside) and then slide them in the direction of ② to remove.
- ③Replace the filter element (disposable).

Note:

Install the filter element within the frame securely.

- ④Install the metal fittings for filter element in their original positions.
- ⑤Turn the side of oil filter that the metal fittings are installed downward and install the filter in the unit.

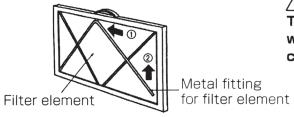

3) Cleaning the frame of the oil filter Tools to be prepared

- · Protective goods such as a rubber glove
- · Scrubbing brush or brush

Note:

Avoid using a metal scrubbing brush or brush since the aluminum materials could be damaged.

 Household neutral detergent or alkalescent detergent(for washing dishes or clothes)

Note:

If alkaline detergent is used for cleaning, the part made of aluminum could discolor.

Make sure the filter element is removed when cleaning the oil filter.

①If the filter is not so dirty.(If the filter is cleaned once a week(once per 100 operating hours).) Wash the filter with water and above-mentioned detergent using a scrubbing brush or brush, etc. (It is more effective to wash the filter with lukewarm water.)

2If the filter is extremely dirty.


Put the previously-mentioned detergent (its strength should be about 1/10 of undi-luted solution)into hot water whose temperature is 50°C or less, and soak the filter for 1 hour or more before washing.

!Warning:

To prevent your hand from burning, start washing the filter after the hot water gets cold.

OPTIONAL PARTS

Photo

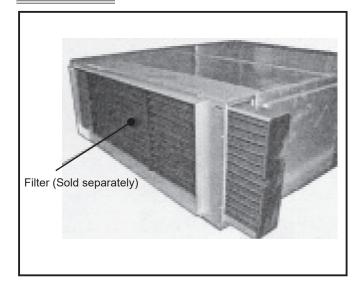

Descriptions

Long life filter is part that remove dust in air. The filter box for the respective type is required for installation.

Applicable Models


- PEA-M200LA
- PEA-M250LA

Specifications


Filter size (mm × mm)	600 × 390
Quantity	2
Filter Material	Synthetic fiber unwoven cloth fllter
Color (Filter)	Black

Dimensions

Unit: mm

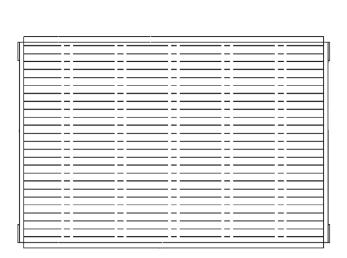



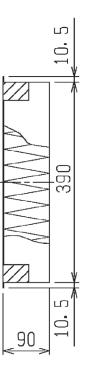


How to Use / How to Install


Mounting procedure


Filter box PAC-KE63, 80, 140, 250TB-F

- Procedure for mounting the filter from the side
 - (1) Remove the two screws for the cover on the filter box. (Fig. 1)
 - (2) When using filter box PAC-KE63, 80, 140TB-F (using filter: high-efficiency filter), change the position (up/down) of the retainer plate. (Fig. 2) (Not necessary if using the long-life filter or filter box PAC-KE250TB-F.)

Mount by inserting the rear side into the side panel of the filter box and securing in the front with two screws.

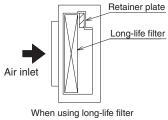


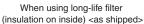


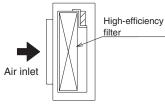

When using high-efficiency filter (insulation on outside)

- (3) Insert the filter through the opening in the filter box. After the filter has been insertsd, close the cover (removed in stop(1)) and tighten the screws. (Fig. 3)

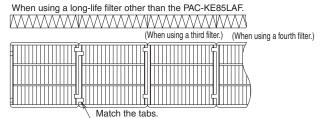

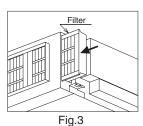

The PAC-KE85LAF and high-efficiency filters are joined by hook-and-loop fastening tape. Be sure to check the position and proper adhesion of this tape when inserting the filter.

⚠ CAUTION

Never place your hand inside the filter box during maintenance. If the filter tabs become caught when the filter is removed for maintenance, use a long stick or similar item to remove the remaining filter.

Change position


Fig.1

Cover

Retainer plate



Photo

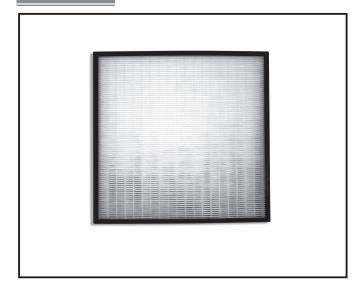

Descriptions

High Efficiency Filter is part that remove dust in air. Multi-functional casement is required for installation. PAC-SJ41TM-E (E type)

Applicable Models


- PLA-ZM·EA series
- PLA-M·EA series
- PLA-SM·EA series

Specifications

Dust collection efficiency	Colorimetric method 65% (JIS 11 class)
Filter element ,aterial	Electrrostatic polyolefin fiber
Life	Approx. 2,500 hours (at dust density 0.15 mg/m³) *Reproduction not possible
Parts composition	This element x 1

Dimensions

Unit: mm

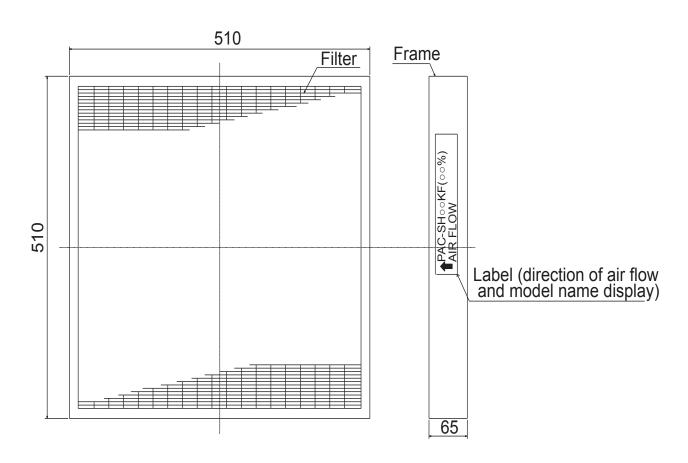

How to Use / How to Insta

Parts check.

(The unit is provided with this manual and following parts in the box.)

Part #, Name	High-efficiency filter element		
Q'ty	1		
Figure			

NOTICE


(1) In case that the High-efficiency filter element is installed, it should be installed on the Multi-functional casement which is option.

Be sure to purchase the Multi-functional casement.

Installation of High-efficiency filter element (same procedure for replacement)

- •Remove the intake grille of the grille in advance. (See the "installation instructions of grille" for details.)
- Loosen the 4 screws (B type)/8 screws (E type) of the 2 plates (B type)/4 plates (E type) for installation of the High-efficiency filter element of the Multi-functional casement as shown below. Then, slide them outward.
- Set the High-efficiency filter element in the Multi-functional casement, slide the plates inward, and then tighten the 4 screws (B type)/8 screws (E type) securely.

- 1. When the main unit is used with "2 ways" air outlet, the High-efficiency filter element is not available.
- 2. When the High-efficiency filter element is installed, the operation noise can be larger.
- 3. When attaching the High-efficiency filter element, check the direction of air flow, referring to the stamp on the side.

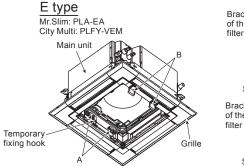

Bracket for installation of the High-efficiency filter element "B"



Bracket for installation of the High-efficiency filter element "A"



3 Air flow volume setting when High-efficiency filter element is installed

Note:

1. When the High-efficiency filter element is attached for the first time, the setting for increase in airflow rate must be performed

attached: No setting is required when the filter is replaced.

2. This setting is necessary only when the element is newly

Set up for increasing air flow volume.

(CAUTION | • If the set up is not done correctly, the air flow volume will decrease and it can lower the performance and cause dew drop.

- 1) If the main unit to be combined is a slim air conditioner (combination with PLA):
 - Setting must be performed from the remote control: See the pages of "Function Selection" in the installation manual provided with the remote control. (Set optional assembly to "Yes".)

Replacement Period


- •The High-efficiency filter element is single-use (not recyclable).
- •The reference for operation time is 2,500 hours (depending on the environment in which the air-conditioner is installed)



Do not wash with water.

CAUTION •Washing with water will degrade the performance and could cause the element to become unusable.

Photo

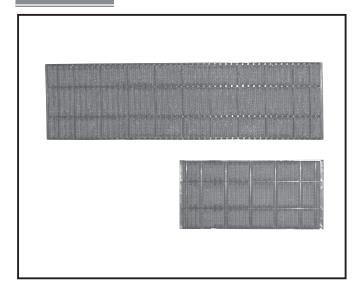

Descriptions

- High Efficiency Filter is part that remove dust in air.
 Dust collection efficiency: 70% (Weighing method)
 It is the best for the air-conditioning of the stove where a lot of going of the person in and out exists.


Applicable Models and Specifications

Model		PAC-SH88KF-E	PAC-SH89KF-E	PAC-SH90KF-E		
Dust collection efficiency		70% (weighing method)				
Filter material		PP fiber (antibacterial + mildew-proof), honeycomb weave (Identification: gray yarn woven)				
Maintenance		Approx. 2,500 hours (varies with operating conditions)				
Parts Filter(large)		_	1	2		
composition Filter(small)		2	1	_		
Applicable models (type)		PCA-M35,50KA type	PCA-M60,71KA type	PCA-M100,125,140KA type		


Dimensions

Unit: mm

	Α	В
Small	432	425
Large	752	745

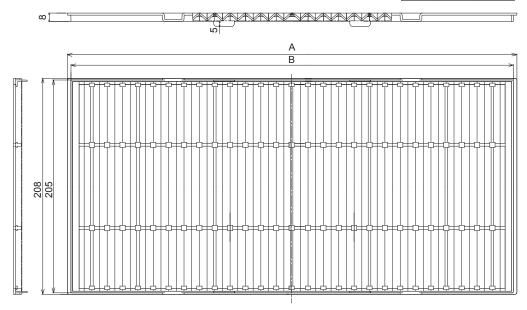


How to Use / How to Install

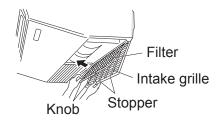

- Open the intake grille.
- Hold the knob on the filter then pull the filter up in the direction of an arrow. To replace the high efficiency filter, be sure to insert the filter far enough until it fits into the stopper.

Photo

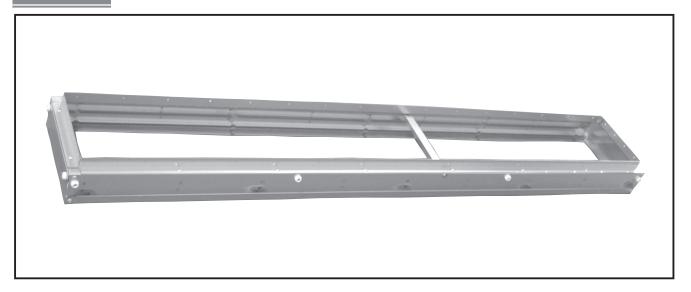

Applicable Models

Model	PAC-KE92TB-E	PAC-KE93TB-E	PAC-KE94TB-E	PAC-KE95TB-E
Applicable	PEAD-M35,50JA(L) type	PEAD-M60,71JA(L) type	PEAD-M100,125JA(L) type	PEAD-M140JA(L) type
models	PEAD-SM35,50JA(L) type	PEAD-SM60,71JA(L) type	PEAD-SM100,125JA(L) type	PEAD-SM140JA(L) type

D2-21

How to Use / How to Install

1 Confirming the Supplied Parts

1. Model names and applicable models

Madalmana	A mulicable tomas	Applicable filter		
Model name	Applicable types	Size	Q'ty	
PAC-KE92TB-E	PEAD-M35,50JA(L) PEAD-SM35,50JA(L)	900×240	1	
PAC-KE93TB-E	PEAD-M60,71JA(L) PEAD-SM60,71JA(L)	550×240	2	
PAC-KE94TB-E	PEAD-M100,125JA(L) PEAD-SM100,125JA(L)	700×240	2	
PAC-KE95TB-E	PEAD-M140JA(L)	700×240	1	
PAC-NE951B-E	PEAD-SM140JA(L)	900×240	1	

2. Provided parts


Check that the packet includes the following parts in addition to this installation manual.

PARTS	SHAPE		Q'ty	Model name
① SCREW(4×10)			24	PAC-KE92,93TB-E
	On the Cartes Of		30	PAC-KE94,95TB-E
		a × b	-	-
	ļ. a	857×208	1	PAC-KE92TB-E
② SUCTION FLANGE	b	1057×208	1	PAC-KE93TB-E
		1357×208	1	PAC-KE94TB-E
		1557×208	1	PAC-KE95TB-E

2 Attach the filter box

Attach the filter box before installalling the indoor unit.

1. Remove the filter on the indoor unit. (Fig. 2-1)

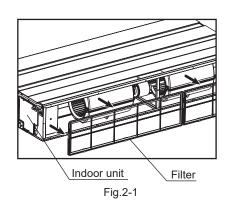

OPTIONAL PARTS PAC-KE92,93TB-E10 pcs. PAC-KE94,95TB-E12 pcs.

Note) Failure to firmly tightened the screws will cause air leakage. Make sure the screws are firmly tightened.

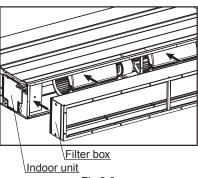


Fig.2-2

3. Install the supplied suction flange on the filter box with the supplied screws. (Fig. 2-3)

PAC-KE92,93TB-E12 pcs. PAC-KE94,95TB-E16 pcs.


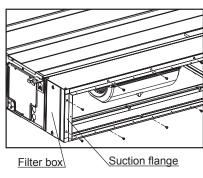



Fig.2-3

Installing the filter

- 1. Installation that allows for maintenance from the side
 - (1) Remove the side panel from the filter box. (Fig. 3-1-1)
 - (2) Insert the filter that was removed in step 2-1 above along the top and bottom rails. (Fig. 3-1-2) When using the PAC-KE93, 94, or 95TB model, join the two filters before inserting them. (Fig. 3-1-3)

If the two filters are inserted without them being joined together, it will render the one in the back difficult to remove.

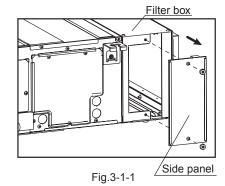


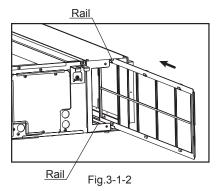







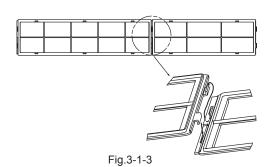

⚠ CAUTION

Never place your hand inside the filter box during maintenance. If the filter tabs become caught when the filter is removed for maintenance, use a long stick or similar item to remove the remaining filter.

- 2. Installation that allows for maintenance from the bottom
 - (1) Remove the under panel from the filter box. (Fig. 3-2-1)
 - (2) Insert the filter that was removed in step 3-1 above through the bottom of the filter box. (Fig. 3-2-2)
 - (3) Insert the filter between the insulators on the top plate of the filter box until the filter is completely inside the filter box, and place the filter on the under frame of the filter box. (Fig. 3-2-3)
 - (4) Install the under panel.

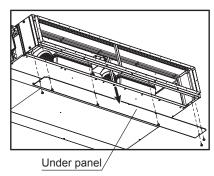


Fig.3-2-1


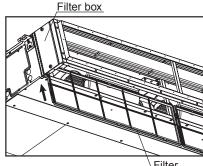


Fig.3-2-2 Filter

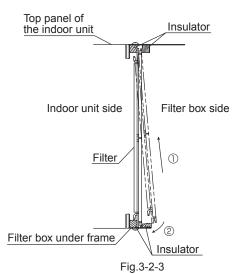


Final Check

The last step of the procedure is to make sure that nothing has been overlooked during the procedure. In addition, once the filter box has been mounted and the above procedure has been completed, carefully check for air leakage at the connections of the indoor unit.

For more detailed information, please consult your dealer.

Photo

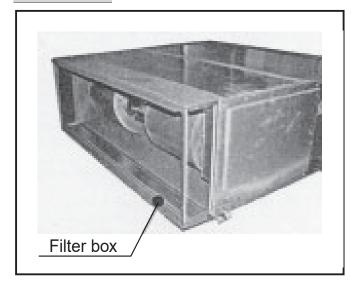

Descriptions

A filter box that connects long life filter to indoor unit. ** The filter box for the respective type is required for installation.

Applicable Models

- PEA-M200LA
- PEA-M250LA

How to Use / How to Install

Confirming the Supplied Parts

1. Model names and applicable models

Madalasas	Applicable filter					
Model name	Filter	Model name	Size	Q'ty		
PAC-KE250TB-F	Long life filter	PAC-KE85LAF	411×600	2		

2. Provided parts

Check that the packet includes the following parts in addition to this installation manual.

PARTS	SHAPE	Q'ty
① SCREW(4×10)	22233	12

Attach the filter box


Attech the filter box before installalling the indoor unit.

- 1. Remove the fixing screws (12 screws) and then remove the flange from the indoor unit. (Refer to Photo 3-1)
 - Note) These screws will be reused. Keep them in a safe place.
- 2. Open the cover on the side of the filter box.
- 3. Use the screws provided to mount the filter box. (Refer to Photo 3-2)
 - Note) Failure to firmly tightened the screws will cause air leakage. Make sure the screws are firmly tightened.
- 4. Attach the intake flange removed is Step 1. to the filter box. (Refer to Photo 3-3)
- 5. After the filter (sold separately) has been inserted, close the cover. (Refer to Photo 3-4)

⚠ CAUTION


Never place your hand inside the filter box during maintenance. If the filter tabs become caught when the filter is removed for maintenance, use a long stick or similar item to remove the remaining filter.


Intake flange

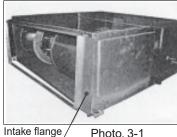





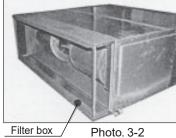

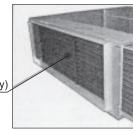

Filter (Sold separately)

Photo. 3-4


Final Check 3

The last step of the procedure is to make sure that nothing has been overlooked during the procedure. In addition, once the filter box has been mounted and the above procedure has been completed, carefully check for air leakage at the connections of the indoor unit.

Photo. 3-3



Figure

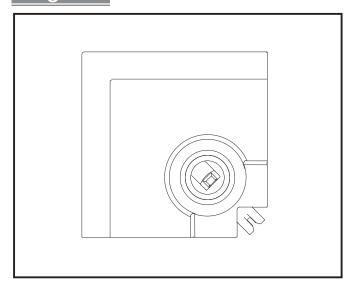

Descriptions

- •A total of eight sensors rotate a full 360° in 3- minute intervals. In addition to ditecting body temperature, our original algorithm also detects the number of occupants in the room and their positions.
- •Install the i-see Sensor corner panel to the corner of the decorative panel.

Applicable Models


- PLA-ZM·EA series
- PLA-M·EA series
- PLA-SM·EA series

Specifications


Adapter wiring	Connect the 9-core cord with connector to the indoor controller board of the indoor unit.
Exterior	ABS resin (Munsell No.1.0Y9.2/0.2)

Dimensions

Unit: mm

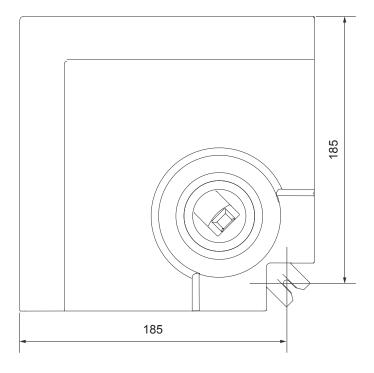

• The i-see Sensor corner panel can be installed on any of the following positions among 1 to 3:

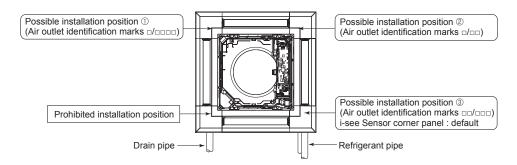


1 Preparation for installing i-see Sensor corner panel

1. Open the intake grille and remove the corner panel. The corner panel is at where refrigerant pipes are (where local wires are drawn into). The following explains procedures for the case of the possible installation position ③. When the position ① or ② is selected, remove the corresponding corner panel.

Note:


- Discard only the removed corner panel.
- Reuse the screw of the removed corner panel to install the i-see Sensor corner panel.
- When installing the i-see Sensor corner panel during grille installation, complete the wiring work of grille before proceeding to the following procedure.
- 2. Loosen the 2 screws on the electrical box cover, and remove the cover by sliding; however, in this installation, the cover can hang temporarily.

Make sure to turn off the main power before work.

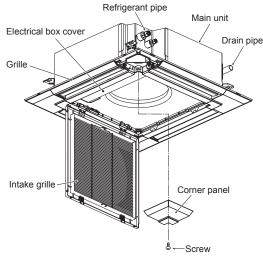


2 Installing i-see Sensor corner panel

- 2-1 Installation procedure for possible installation position ③
- Pull the lead wires of i-see Sensor corner panel from the square hole of the grille where the removed corner panel was.

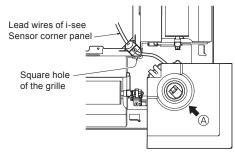

- Route the lead wire connector (white, 4 poles and white, 5 poles) of the i-see Sensor corner panel from the side of the electrical box on the main unit, and connect to the connector CN4Z and CN5Y on the controller board.
- 3. Use the clamp inside the electrical box to hold the lead wires for the i-see Sensor corner panel into the electrical box without slack.
- 4. Slide the i-see Sensor corner panel towards the arrow A as shown in the figure above, and fix it with the screw. (Reuse the screw of the corner panel removed in the previous procedure.)
- After the installation of the i-see Sensor corner panel is complete, re-install the electrical box cover and the intake grille as they were.

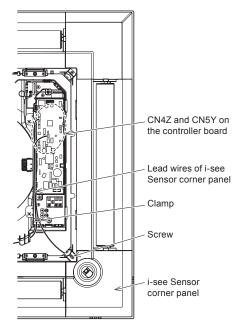



PARTS

NDOOR UNI

2-2 Installation procedure for possible installation position ①


- 1. Pass the lead wire of i-see Sensor corner panel through the square hole of the grille located in the corner.
- Route the lead wire connectors (white, 4 poles and white, 5 poles)
 of the i-see Sensor corner panel from the side of the electrical box
 on the main unit, and connect to the connectors CN4Z and CN5Y on
 the controller board.
- 3. Route the lead wires for the i-see Sensor corner panel through the bell mouth hooks on the main unit and fix the excess portions of the lead wires in the electrical box using the cable band, making sure that there is no slack in the lead wires.
- 4. Slide the i-see Sensor corner panel towards the arrow A as shown in the figure above, and fix it with the screw. (Reuse the screw of the corner panel removed in the previous procedure.)
- After the installation of the i-see Sensor corner panel is complete, re-install the electrical box cover and the intake grille as they were.

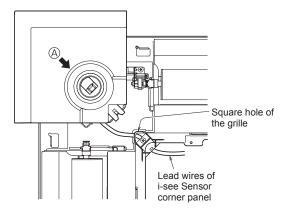

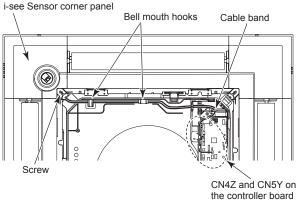


2-3 Installation procedure for possible installation position ②

- Pass the lead wire of i-see Sensor corner panel through the square hole of the grille located in the corner.
- Route the lead wire connectors (white, 4 poles and white, 5 poles) of the i-see Sensor corner panel from the side of the electrical box on the main unit, and connect to the connectors CN4Z and CN5Y on the controller board.
- Fix the excess portions of the lead wires for the i-see Sensor corner panel in the electrical box using the cable band, making sure that there is no slack in the lead wires.
- 4. Slide the i-see Sensor corner panel towards the arrow A as shown in the figure above, and fix it with the screw. (Reuse the screw of the corner panel removed in the previous procedure.)
- 5. After the installation of the i-see Sensor corner panel is complete, re-install the electrical box cover and the intake grille as they were.

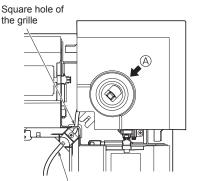

Lead wires of i-see Sensor corner panel

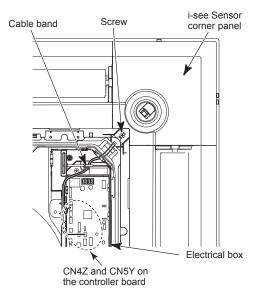

- Make sure to perform a function selection to set the position or the ceiling height of the i-see Sensor using the remote controller or DIP switches.
- 1) When used in combination with PLA-EA

Configuration will be done on the remote controller. For the function selection procedure and operation method, refer to "5. Service Menu" in the installation manual of the remote controller.


Select and configure units 01-04 or all units.

- a) To configure the indoor unit of an independent system, select and configure unit 01.
- b) To configure two, three, or four indoor units individually, select and configure each unit 01–04.
- c) To configure two, three, or four indoor units simultaneously, select and configure all units.

Mode	Setting	Mode number	Setting number	Initial setting	Check*	Remarks
2D : C	Position ①		1			Corner with the air outlet identification marks □/□□□□
3D i-see Sensor positioning	Position ②	12	2			Corner with the air outlet identification marks □/□□
positioning	Position ③		3	0		Corner with the air outlet identification marks □□/□□□
3D i-see Sensor ceiling height setting	Low ceiling		1			Ceiling height: less than 2.7 m
(when installing the 3D i-see Sensor panel)	Standard	26	2	0		Ceiling height: 2.7 – 3.5 m
	High ceiling		3			Ceiling height: 3.5 – 4.5 m




Figure

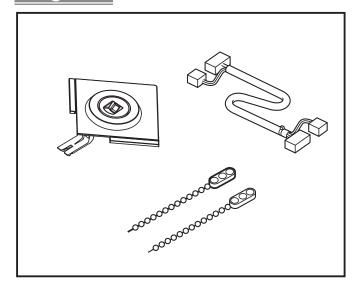

Dimensions

Unit: mm

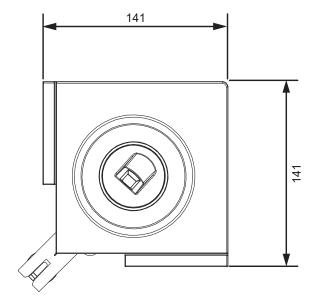

Descriptions

- •Both floor and inlet temperatures are measured to provide a comfort sensation fully in a room covering from the ceiling to the floor surfaces.
- •The i-see Sensor detects persons in the room and performs various control functions according to the remote controller settings.
- •Install the i-see Sensor corner panel to the corner of the decorative panel.

Applicable Models

■ SLZ-M·FA series

Specifications

Adapter wiring	Connect the 9-core cord with connector to the indoor controller board of the indoor unit.
Exterior	ABS resin (Munsell No.1.0Y9.2/0.2)
i-see Sensor operation	The i-see Sensor rotates for approximately one minute once every three minutes.

Corner panel

Connector of the

the vane motor

wire coming from

. Screw with washer

Intake grille

Grille hook

Corner panel

Connector box cover


How to Use / How to Insta

1. Accessories

Make sure that all the following accessories besides this installation manual are contained in the package.

Model	Accessory name	Q' ty
	i-see Sensor	1
PAC-SF1ME-E	② Junction wire	1
	③ Fastener	2
	© Sometiment of the state of th	

- 2. Preparation for mounting i-see Sensor (The junction wire @ needs to be connected to the indoor unit.)
 - Note 1: Turn off main power supply to the indoor unit before installation.
 - Note 2: See the installation manual of the indoor unit in addition to this manual.
 - · Remove the grille from the indoor unit as described in the following procedure.
 - 1) Open the intake grille, loosen the screws for the corner panels, and remove the corner panels.
 - 2) Remove the screw for the connector box cover, and open the connector box cover. Disconnect the connector of the wire coming from the vane motor.
 - 3) Remove the 4 screws fastened on the corners of the
 - 4) Disengage the 2 hooks of the grille from the indoor unit, and remove the grille.

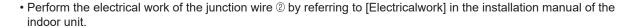




- Mount the i-see Sensor ① on either corner of the grille, which is marked with "O" or "□" by referring to [Installing the grille] in the installation manual of the indoor unit.
- Note 1: "O" stamp : default i-see Sensor position.
- Note 2: Discard the corner panel removed from the position indicated with "O" or "□".
- Note 3: To change the position of the i-see Sensor from the position indicated with "O" to that indicated with "O", change the function setting (SLZ) or the switch (SW3-4) setting (PLFY).
- After mounting the i-see Sensor ①, close the connector box cover. Replace the 3 corner panels, the intake grille, in the reverse order of the removal described above.

4. Check

- · Make sure that there is no gap either between the body of indoor unit and the grille or between the ceiling surface and the grille. The gap may cause dew formation.
- · Make sure that the wires are connected properly.
- For i-see Sensor corner panel, check the rotating movement. If the i-see Sensor does not rotate, see the procedure in [installing the grille] in the installation manual of the indoor unit again.

Figure

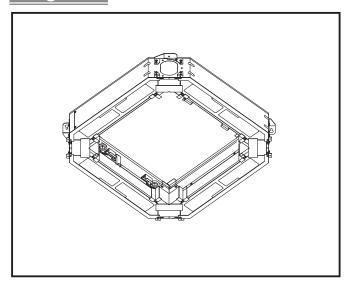

Descriptions

3D Total Flow is an innovative function. Our original 3D i-see sensor detects the temperature of the floor, and then the newly installed 3D Total Flow unit automatically controls the airflow in the left/right directions in a smart manner.

with Plasma Quad Connect(PAC-SK51FT-E), Insulation kit(PAC-SK36HK-E), Shutter Plate(PAC-SJ37SP-E), Multi functional casement(PAC-SJ41TM-E) and Highefficiency filter element(PAC-SH59KF-E)


Applicable Models

- PLA-ZM·EA2 series
- PLA-M·EA2 series


Dimensions

Unit: mm

See from the panel side

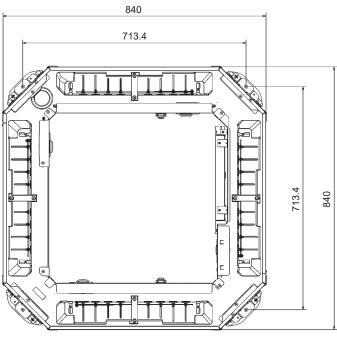



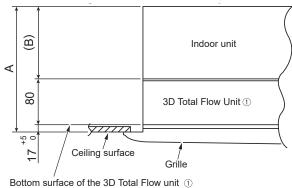

Request:


Set up an access opening for the joint of piping.

 Set up an access opening so that inspections for inside the ceiling and on the joint portions of concealed pipes can be performed.

Indoor unit	Α	(B)
Small models	338	241
Large models	378	281

Note: The gap between the top surface of the indoor unit and the ceiling slab must be 7 mm or more.

1. Checking parts • Make sure that you have all the following parts in addition to this manual in the box.

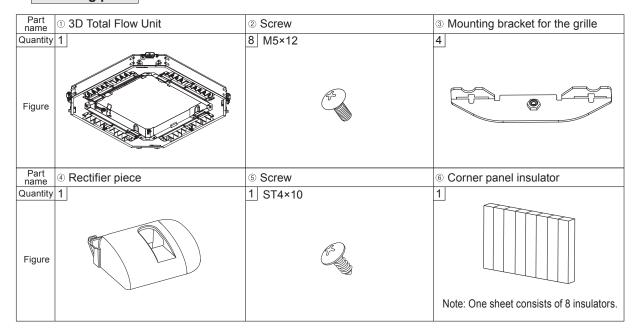


2. Installing the indoor unit

Perform the wiring work on site (for power supply, inside and outside connecting wires, and remote controller wires) before installing the 3D Total Flow Unit.

The wiring work cannot be performed after installing the 3D Total Flow Unit.

- Refer to the installation manual of the indoor unit for installation.
- Be sure to confirm the following items when installing the unit.
- 1. The size of the ceiling opening is within the range of 860×860 to 910×910.
- 2. The following dimensions are necessary for installation.

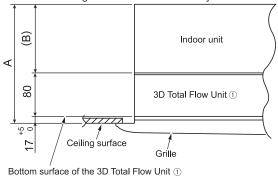

Request:

Set up an access opening for the joint of piping.

 Set up an access opening so that inspections for inside the ceiling and on the joint portions of concealed pipes can be performed.


Indoor unit	Α	(B)
Small models	338	241
Large models	378	281

Note: The gap between the top surface of the indoor unit and the ceiling slab must be 7 mm or more.

3. Preparation before installing the 3D Total Flow Unit and the grille

(1) 3D Total Flow Unit

Remove the tape, then remove the protective cushions for the temporary fixing hooks.

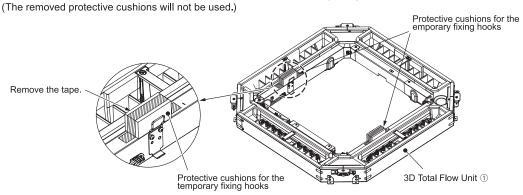

<Removing the intake grille and the corner panels>


Refer to the installation manual of the grille.

<Attaching corner panel insulators>

Attach the corner panel insulators ® to the 4 corner panels on the grille according to the figure below.

- Attach 2 of the corner panel insulators ® to each corner panel.
- Attach the insulators to the signal receiver corner panel and the i-see Sensor corner panel as well as the standard corner panels.

Note: Skip this procedure when the corner panel insulators ® have already been attached.

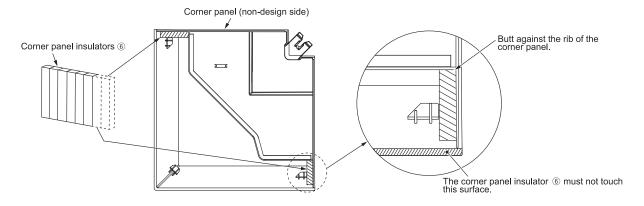


4. Installing the 3D Total Flow Unit


(1) Fixing the 3D Total Flow Unit temporarily

Set the electrical parts boxes of the indoor unit and the 3D Total Flow Unit ① at the same position, then attach the temporary fixing hooks on the 3D Total Flow Unit ① to the tabs on the indoor unit to fix them temporarily.

- Put your fingers in the holes on the protective cushions on the 3D Total Flow Unit ① to lift it up. Do not apply force on the inside vanes at that time. Doing so may cause damage.
- The lead wire of the 3D Total Flow Unit ① must not be tucked in the indoor unit and the 3D Total Flow Unit ①.
- Do not apply excessive force on the 3D Total Flow Unit ① when fixing it temporarily. Doing so may cause an accident or damage.

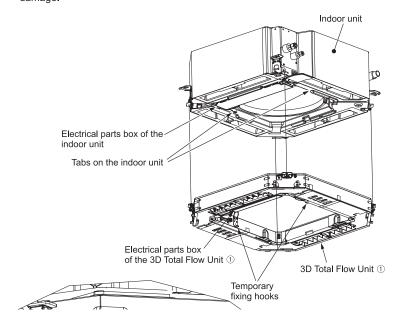

<Temporary fixation of the 3D Total Flow Unit ①>

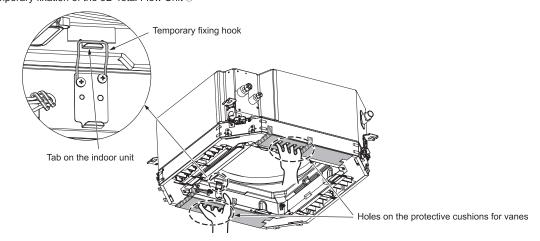

4. Installing the 3D Total Flow Unit (continued from the previous page)

(2) Fixing the 3D Total Flow Unit


Fix the 3D Total Flow Unit ① to the indoor unit by tightening the screws mounted in each corner of it.

After fixing the 3D Total Flow Unit \odot , remove the 2 protective cushions for the vanes of the 3D Total Flow Unit \odot . (The removed protective cushions will not be used.)

Request:


Tighten the screws with a torque of 2.8 to 3.6 N.m. Never use an impact driver.

• Otherwise, breakage of parts may result.

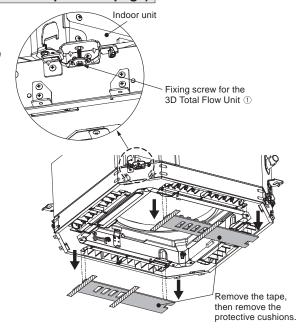

(3) Attaching the mounting bracket for the grille

Insert the hook on each corner of the 3D Total Flow Unit 1 into the 4 cross holes of the mounting bracket for the grill 3, and fix them with 8 screws of 2. (Refer to the figure below)

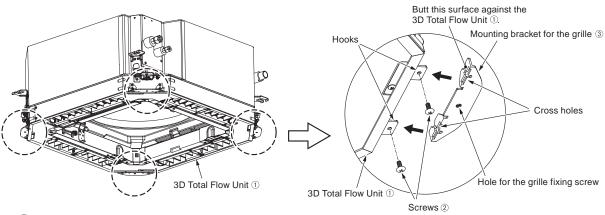


Request:

Tighten the screws with a torque of 1.2 to 1.8 N.m. Never use an impact driver.

• Otherwise, breakage of parts may result.


Adjust the height of the 3D Total Flow Unit ① with the indoor unit from the ceiling surface again with the supplied installation gauge according to the figure below.

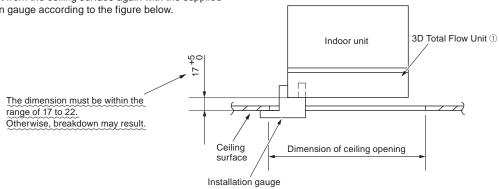

5. Attaching the grille

(1) Preparation for fixing the grille temporarily Make sure that the 2 temporary fixing hooks for the grille are raised up.



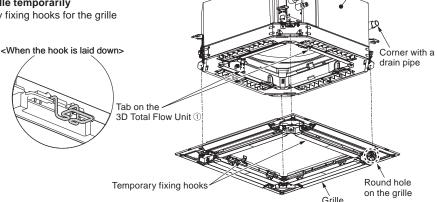


(2) Fixing the grille temporarily

Set the corners with a drain pipe of the indoor unit and a round hole of the grille at the same position, then fix them temporarily by attaching the tab on the 3D Total Flow Unit \odot to the temporary fixing hook.

- \bullet Do not let the lead wires of the grille and the 3D Total Flow Unit \odot get caught between them.
- Do not apply excessive force on the grille when fixing it temporarily.

Doing so may cause an accident or damage.

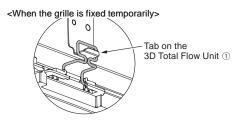

Indoor unit

(3) Fixing the grille

Fix the grille to the 3D Total Flow Unit ① by tightening the screws mounted in each corner of it.

• There must be no gap between the 3D Total Flow Unit ① and the grille, or the grille and the ceiling surface.

Request:

Tighten the screws with a torque of 2.8 to 3.6 N.m. Never use an impact driver.

• Otherwise, breakage of parts may result.



When there is a gap between the grille and the ceiling surface
 Adjust the height of the indoor unit with the grille mounted to clear the gap.




TINIT

For the installation of the corner panel, refer to the installation manual of the grille.

When the corner panel has a safety string, attach it to the hook on the grille securely.

• Otherwise, the corner panel may fall down during operation.

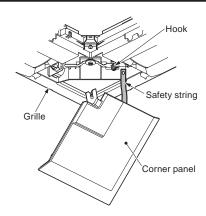


6. Connecting wires

(1) Removing the electrical parts cover in the indoor unit

1. To open the electrical parts cover, loosen the 2 screws fixing the cover and the electrical parts box, then slide the cover in the longitudinal direction.


(2) Connecting the lead wire of the 3D Total Flow Unit ① for power communication

- Remove the lead wire of the 3D Total Flow Unit ① for power communication from the clamps, and connect it to CN4G connector (blue, 4 poles) of the controller circuit board of the indoor unit securely.
- Press the clamps of the 3D Total Flow Unit ① against the unit.
- Protruding clamps interrupt opening/closing the electrical parts cover of the indoor unit.
- 2. Fix the earth wire for the 3D Total Flow Unit \odot in the electrical parts box of the indoor unit with supplied screws with a torque of 1.6 \pm 0.1 N.m.

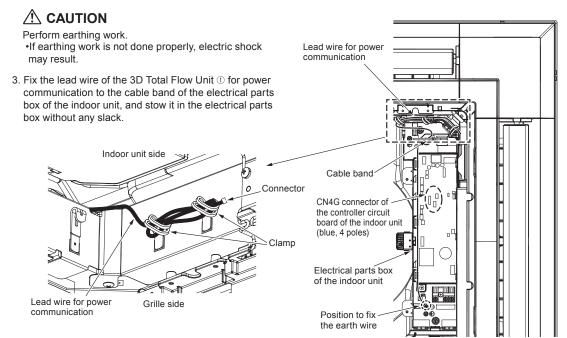

(3) Connecting the lead wire of the grille vane motor


- Connect the lead wire of the grille vane motor to CNV connector (white, 20 poles)
 of the controller circuit board of the indoor unit securely.
- 2. Fix the lead wire for the grille vane motor to the clamp of the 3D Total Flow Unit ① and the cable band and the clamp in the electrical parts box of the indoor unit, and stow it in the electrical parts box without any slack.

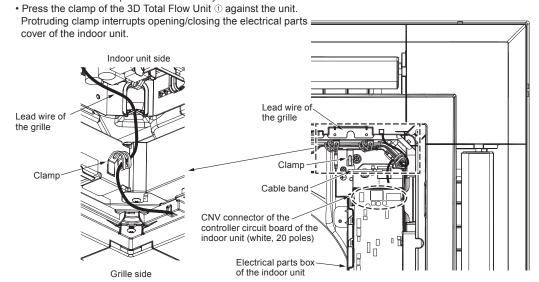

6. Connecting wires (Continued from the previous page)


(4) Connecting the lead wire of the signal receiver corner panel (When attaching the signal receiver corner panel to the standard attachment position)

- Connect the lead wire of the signal receiver corner panel to CN90 connector (white, 9 poles) of the controller circuit board of the indoor unit securely.
- 2. Fix the lead wire of the signal receiver corner panel to the clamp of the 3D Total Flow Unit ①, then fix it to the tab of the bell mouth and the cable band in the electrical parts box of the indoor unit, and stow it in the electrical parts box without any slack

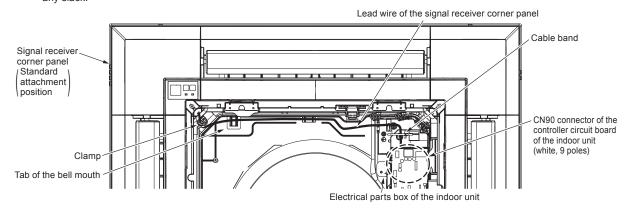


(5) Connecting the lead wire of the i-see Sensor corner panel (When attaching the i-see Sensor corner panel to the standard attachment position)

- 1. Run the lead wire of the i-see Sensor corner panel through the corner hole on the grille.
- 2. Connect the lead wire of the i-see Sensor corner panel to CN4Z connector (white, 4 poles) and CN5Y connector (white, 5 poles) of the controller circuit board of the indoor unit securely.
- 3. Fix the lead wire of the i-see Sensor corner panel to the clamp of the 3D Total Flow Unit ① and the clamp in the electrical parts box of the indoor unit, and stow it in the electrical parts box without any slack.
 - \bullet Press the clamp of the 3D Total Flow Unit \oplus against the unit.
 - Protruding clamps interrupt opening/closing the electrical parts cover of the indoor unit.
- 4. Fix the i-see Sensor corner panel to the grille with supplied screws for it.

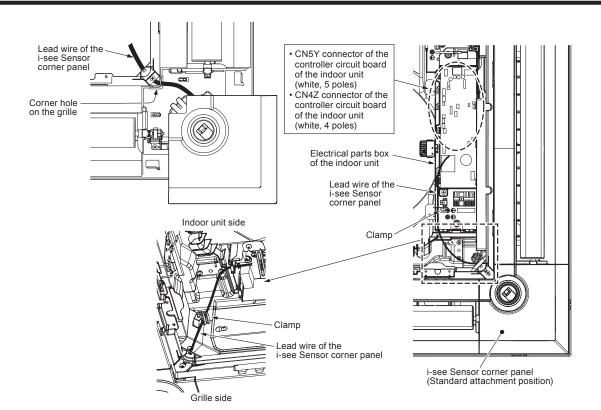

(6) Connecting the lead wire of the signal receiver corner panel (When attaching the signal receiver corner panel at other than the standard attachment position)

The signal receiver corner panel can be attached at the following 2 positions besides the standard attachment position.

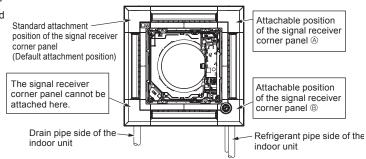

Lead wire of the

Clamps

signal receiver


corner panel

Signal receiver corner panel

(Attachable position (A)

<When attaching to the attachable position @>


- 1. Connect the lead wire of the signal receiver corner panel to CN90 connector (white, 9 poles) of the controller circuit board of the indoor unit securely.
- 2. Fix the lead wire of the signal receiver corner panel to the clamps of the 3D Total Flow Unit ① and the cable band in the electrical parts box of the indoor unit, and stow it in the electrical parts box without any slack.
 - Press the clamps of the 3D Total Flow Unit ① against the unit. Protruding clamps interrupt opening/closing the electrical parts cover of the indoor unit.

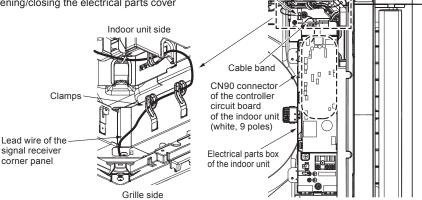

<When attaching to the attachable position ®>

- 1. Run the lead wire of the signal receiver corner panel from the electrical parts box side of the indoor unit, and connect it to CN90 connector (white, 9 poles) of the controller circuit board of the indoor unit securely.
- 2. Fix the lead wire of the signal receiver corner panel to the clamp of the 3D Total Flow Unit ① and the clamp in the electrical parts box of the indoor unit, and stow it in the electrical parts box without any slack.
 - Press the clamp of the 3D Total Flow Unit ① against the unit.


Protruding clamps interrupt opening/closing the electrical parts cover of the indoor unit.

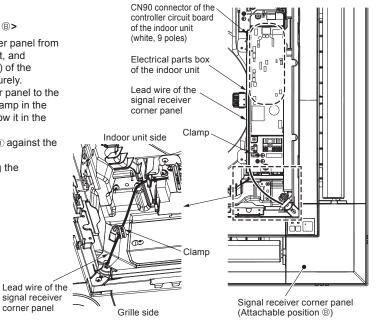

corner panel


(7) Connecting the lead wire of the i-see Sensor corner panel (When attaching the i-see Sensor corner panel at other than the standard attachment position)


The i-see Sensor corner panel can be attached at the following 2 positions besides the standard attachment position.

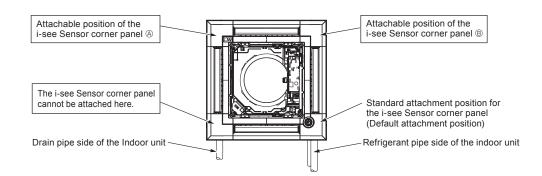

<When attaching to the attachable position @>


- 1. Run the lead wire of the i-see Sensor corner panel through the corner hole on the grille.
- Connect the lead wire of the i-see Sensor corner panel to CN4Z connector (white, 4 poles) and CN5Y connector (white, 5 poles) of the controller circuit board of the indoor unit securely.
- 3. Fix the lead wire of the i-see Sensor corner panel to the clamp of the 3D Total Flow Unit ①, then fix it to the tab of the bell mouth and the cable band in the electrical parts box of the indoor unit, and stow it in the electrical parts box without any slack.
- 4. Fix the i-see Sensor corner panel to the grille with supplied screws for it.

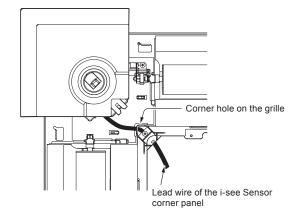


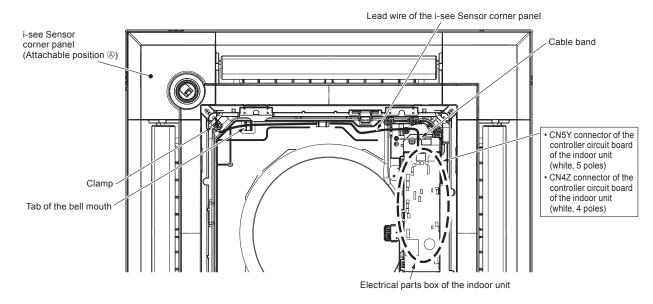

<When attaching to the attachable position $\ensuremath{\$>}$

- 1. Run the lead wire of the i-see Sensor corner panel through the corner hole on the grille.
- Connect the lead wire of the i-see Sensor corner panel to CN4Z connector (white, 4 poles) and CN5Y connector (white, 5 poles) of the controller circuit board of the indoor unit securely.
- 3. Fix the lead wire of the i-see Sensor corner panel to the clamps of the 3D Total Flow Unit ① and the clamps in the electrical parts box of the indoor unit, and stow it in the electrical parts box without any slack.
 - Press the clamps of the 3D Total Flow Unit ① against the unit.
 Protruding clamps interrupt opening/closing the electrical parts cover of the indoor unit.
- Fix the i-see Sensor corner panel to the grille with supplied screws for it.

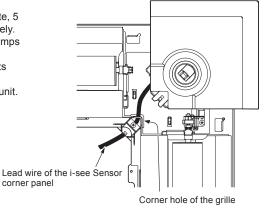


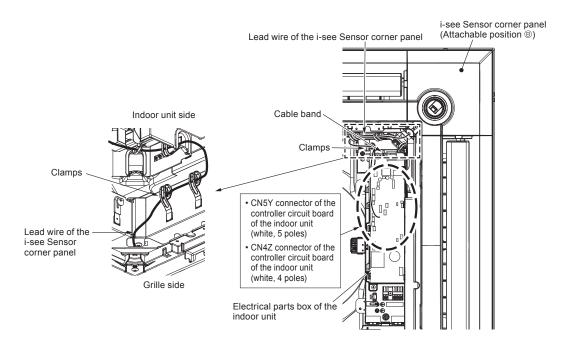

When attaching the i-see Sensor corner panel at other than the standard attachment position Read the installation manual because the setting needs to be changed.

(8) Attaching the electrical parts cover in the indoor unit

- 1. Attach the rectifier piece ⓐ with the screw ⑤ before attaching the electrical parts cover of the indoor unit.
- 2. Attach the electrical parts cover in the opposite procedure of (1) Removing the electrical parts cover in the indoor unit, 6. Connecting wires.

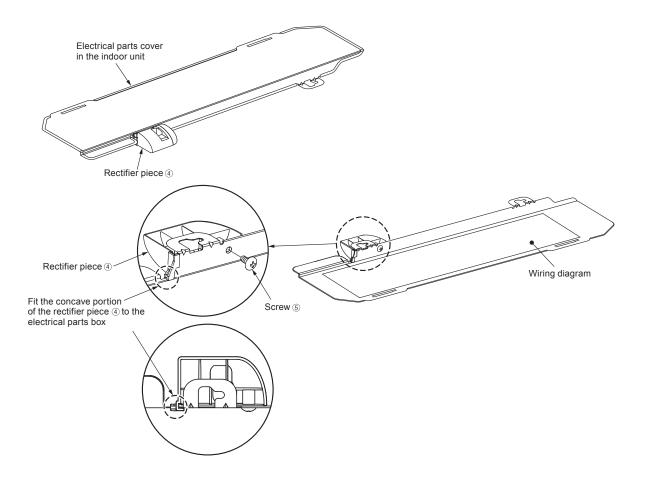

Tighten the screw with a torque of 0.8 to 1.1 N.m. Never use an impact driver.

• Otherwise, breakage of parts may result.

Attach the rectifier piece 4 properly.

• Operating noise may be bigger if the rectifier piece is not attached correctly.

(9) Connecting the lead wire for the automatic filter elevation panel (Only when also installing the automatic filter elevation panel)

When also installing the automatic filter elevation panel, do not let the lead wire touch the wire of the elevation machine motor box when running the wires.

Do not let the wire of the elevation machine motor box get caught in the electrical parts cover. Otherwise the wire may snap.


- 1. To open the electrical parts cover, loosen the 2 screws fixing the cover and the electrical parts box of the 3D Total Flow Unit ①, then slide the cover.
- 2. Connect the lead wire for the automatic filter elevation panel to CN4G connector (blue, 4 poles) of the controller circuit board of the 3D Total Flow Unit ① securely.
- 3. Fix the earth wire for the automatic filter elevation panel in the electrical parts box of the 3D Total Flow Unit ① with supplied screws for it.

Tighten the screws with a torque of 1.6 ± 0.1 N.m.

⚠ CAUTION

Perform earthing work.

- · If earthing work is not done properly, electric shock may result.
- 4. Fix the earth wire for the automatic filter elevation panel to the clamps of the 3D Total Flow Unit ① and the cable band in the electrical parts box, and stow it in the electrical parts box without any slack.
 - Press the clamps of the 3D Total Flow Unit ① against the unit.
 - Protruding clamps interrupt opening/closing the electrical parts cover of the indoor unit.
- 5. Attach the electrical parts cover of the 3D Total Flow Unit ① in the opposite procedure of removing.

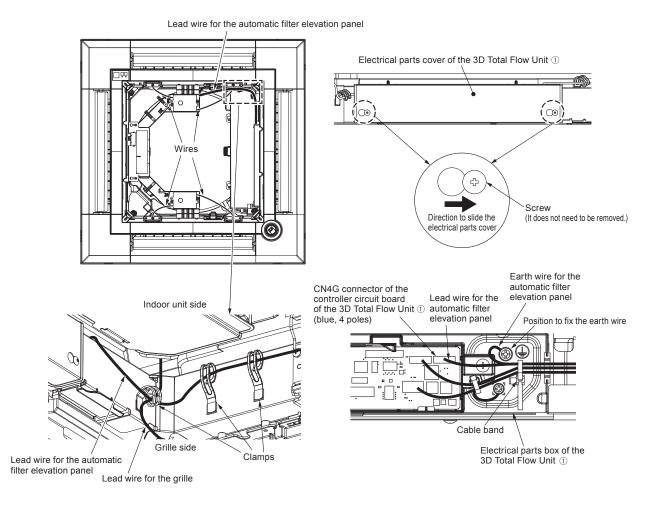

INDOOR UNIT

7. Attaching the intake grille

Refer to the installation manual of the indoor unit.

8. Checking

<Common subject matter>

Make sure that there is no gap between the indoor unit and the 3D Total Flow Unit ①, or the grille and the ceiling surface.

• Gap can cause dripping or droplet on the surface.

Make sure that the wires are connected properly.

• If they are not connected properly, the horizontal vane, the vertical vanes, or the elevation grille may not work, or dripping or droplet on the surface may occur.

Make sure that the corner panel insulators ® are attached to all the corner panels.

• If they are not attached, dripping or droplets on the surface may result.

<When installing the i-see Sensor corner panel>

Make sure that the i-see Sensor rotates properly.

• If the i-see Sensor does not rotate, go back and check the procedure in 6. Connecting wires.

<When installing the automatic filter elevation panel>

Make sure that descending distance of the intake grille is as desired, and the intake grille moves up/down smoothly. When changing the descending distance, be sure to check the operation again.

After checking all the items above, transfer all the manuals, including this manual and the manuals for the indoor unit and optional parts to the customer.

Be sure to explain how to clean the filter and how to move up/down the intake grille with a remote controller.

Request:


Do not operate the unit without a filter.

• Doing so may cause clogging of oil and dust in the unit, resulting in breakage.

Do not operate the unit for a long time except for a test run.

• If operating the unit for a long time on site under construction, dust and odor may attach to the unit.

Figure

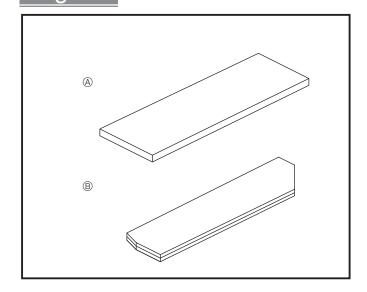

Descriptions

Part to block the air outlet of a cassette-type indoor unit.

Applicable Models


- PLA-ZM·EA series
- PLA-M·EA series
- PLA-SM·EA series

Specifications

	Г	Number of shutter plates	1
Air outlet pattern	4 directions → 3 directions	1	
	4 directions → 2 directions	2	
	(Change to 1 direction is not possible.) Note 1: Selecting "2 directions" requires cleaning of the filter approximately once. (Filter clogging may cause cooling/heating performance to drop.) Note 2: Selecting "3 directions" or "2 directions" may increase operating sound. Note 3: "2 directions" should not be selected when operating in high-temperature/high-humidity environment. (Dew formation or dewdrop may result.) Note 4: When set to "2 ways", the unit cannot be used with the optional high efficiency filter element. Note 5: When this air outlet shutter plate is installed, a draft reduction setting is not available.		
Material	Foamed polyethylene + Foamed urethane		
Color	Black		
Installation method	Glued to the air outlet of the indoor unit.		

Dimensions


Unit : mm

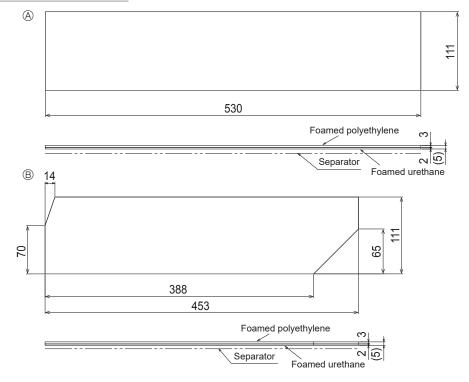

How to Use / How to Insta

Checking for provided parts

Make sure that the parts shown on the right are in this bag, along with the instruction sheet.

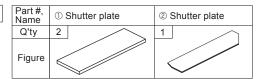

Air-outlet shutter plate Installation Manual


- 1. Locate the Shutter Plate installation position
- •This is a part which is used to convert the number of air-outlet from "4 ways" to "3 ways" or "2 ways". Note: Convert to "1 way" is not available.
- •Select the outlet direction and decide the outlet to be closed.
- 1. When the number of outlet is selected to "2 ways", be sure to explain to the customer that the filter should be cleaned once a month. (Otherwise, the filter will be clogged, and the performance of the cooling and heating can be lower.)


 2. When the number of outlet is selected to "3 ways" or "2 ways", the operation noise can be larger.

 3. Never to select "2 ways" in the environment of high temperature and high humidity.
- (It can cause dew drops.)
- 2. Installation of shutter plate (Fig.1)
- •Install the shutter plate to the indoor unit so that it can fit the air-outlet concave portion.

Notes:

- 1. Install one piece of Shutter plate ① per one air-outlet.
 2. The installation should be done before the grille is installed.
- 3. The shutter plate must be installed not to cause wrinkle or gap. (It can cause dew drops.)
- 4. When attaching the shutter plate to the blow outlet (marked ★) between the refrigerant piping and the drain pump, attach the shutter plate ②.
- 3. Function setting
- •When the number of air-outlet is changed, it is necessary to make function selection. For the setting method, refer to the installation manual of the main unit.
- 4. Setting of the auto vane (Fig.2)
- •It is possible to fix the autò vane of the grille to the fully closed position, which is applied to the air-outlet installed on the shutter plate. Once the auto vane is fixed, the operation of a remote controller and all of automatic control will not be available. Note that the fixed vane angle differs from the one which is displayed on the remote controller.

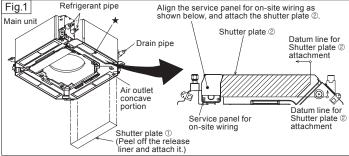

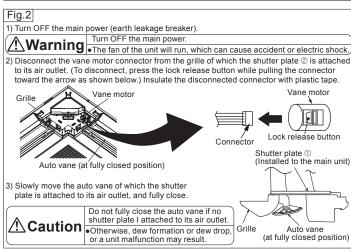

Descriptions

This insulation kit is required to set 14°C cooling operation.

Applicable Models

- PLA-ZM EA2 series
- PLA-M EA2 series

How to Use / How to Install

1. Checking parts • This manual and the following parts are included in Insulation Kit.

Cite	cking parts	(The figures show the shapes of the parts as viewed from above.)	
P.No. Name	①Refrigerant piping area insulator	© Refrigerant piping ③ Refrigerant piping ④ Refrigerant piping ⑤ Hanging bracket insulator ⑥ Indoor un area insulator area insulator for refrigerant piping area insulator	nit side panel ⑦Indoor unit side panel insulator
Qty	1		1
Shape			
P.No. Name	®Indoor unit side pandinsulator	el <code> (®) Hanging bracket insulator (®) Hanging bracket insulator (®) Indoor unit top panel (®) Indoor unit top panel (®) Insulator (%) Insulator (</code>	p panel ®Drain pipe insulator
Qty	1	2 1 1 1	1
Shape			
P.No. Name	(Insulator for entry for emote controller ca		
Qty	1	1 1	
Shape			
P.No. Name	Grille insulator Size: t5×523×13	(B) Grille insulator <p< th=""><th>ator @Grille insulator Size: t2×40×5</th></p<>	ator @Grille insulator Size: t2×40×5
Qty	4	1 4 1 3	8
Shape			
P.No. Name	Corner panel insu Size: t6×35×7	lator @Corner panel insulator @Corner panel insulator @Corner panel insulator @Corner panel insulator @Corner	panel insulator @Corner panel insulator
Qty	8	4 4 4 4	4
Shape			
P.No. Name	@Corner panel insu	lator @Corner panel insulator	
Qty	1	1	
Shape			

^{*}Insulation Kit includes two bags: one contains parts ①-® and the other contains parts ⑦-®.

Remarks


- Attach the insulators correctly as shown in this installation manual. Incomplete attachment could cause moisture to adhere or drip.
 The insulators have adhesive on them. When attaching the insulators, remove the protective sheets.
 Once the insulators are attached, they cannot be removed. Check the attachment positions carefully before attachment.
- · Attach the insulators securely so that they do not peel off. Make sure that there are no gaps and that the insulators are not torn.

- To attach to a small type indoor unit, cut off insulators ②-④ and ⑤-⑥ into the appropriate size.

 * The shaded portions of insulators shown below should be cut off. The cut-off portions have slits: Use a tool such as scissors to cut. (The cut-off portions can be discarded.)

Refrigerant piping area insulator ②




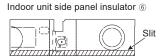

Refrigerant piping area insulator ③



Indoor unit side panel insulator 7

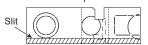

Refrigerant piping area insulator ④



Indoor unit side panel insulator ®




3. Attaching to refrigerant piping area


- Attach the insulators ①-⑤ to the refrigerant piping area.
- Attach the insulators in the numerical order of ①-⑤ to fit the shapes.
- * Before attaching the insulators, check the shapes and the positions to apply them.

 * If it is difficult to attach the insulators, cut them off into the appropriate size.

 * Attach the insulators without any gaps between them.

- * If any gap or break occurs during attachment, cut off the spare ® appropriately and attach it.

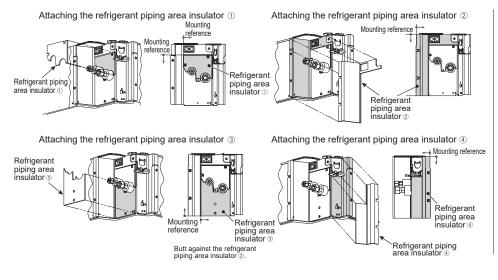

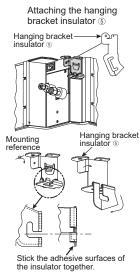


4. Attaching to sides of indoor unit

- Attach the insulators ⑥-⑧ to the sides of indoor unit.
- Attach the insulators in the numerical order of 6-8 to fit the shapes.
- Before attaching the insulators, check the shapes and the positions to apply them.
- * If it is difficult to attach the insulators, cut them off into the appropriate size.


- * Attach the insulators without any gaps between them.

 * If any gap or break occurs during attachment, cut off the spare ® appropriately and attach it.

 * When installing a duct flange for fresh air intake or a divided duct flange, cut off the insulator at the attachment position along the slit, and attach it by referring to the appropriate installation manual. (After attachment, provide sufficient heat insulation.)

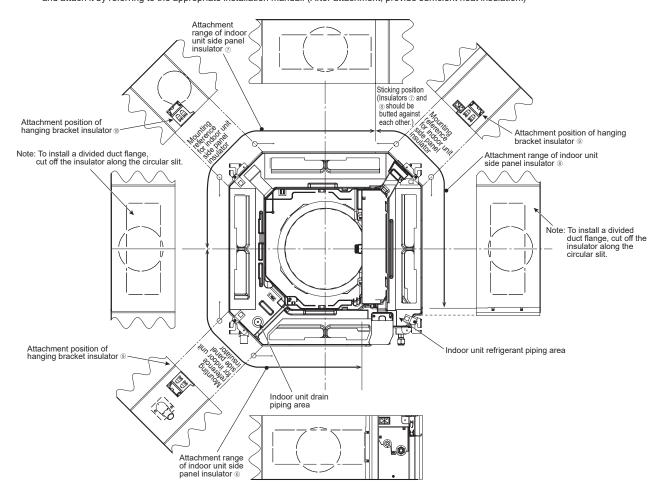


- Attach the insulators ® and ® to the hanging brackets on the sides of indoor unit.
 * Before attaching the insulators, check the shapes and the positions to apply them.
- * Use the same procedure to attach the hanging bracket insulators (at two points) and hanging the bracket insulator (at one point).
- * If it is difficult to attach the insulators, cut them off into the appropriate size.
- * If any gap or break occurs during attachment, cut off the spare ® appropriately and attach it.

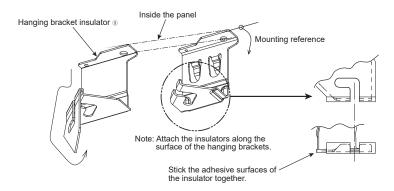

- Attach the insulators ① and ② to the top panel of the indoor unit.
 Align the edges of the insulators and the top panel.
- * Before attaching the insulators, check the shapes and the positions to apply them.
- * Attach the insulators without any gaps between them.
- * If any gap or break occurs during attachment, cut off the spare ® appropriately and attach it.

 * Make sure that there is no accumulation of excess air.

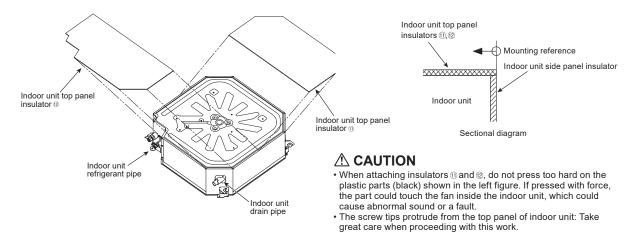


6. Attaching to drain pipe

- Attach the insulator ® to the drain pipe of the indoor unit.

 * Attach the insulator along the surface of the drain pipe.


 * Before attaching the insulator, check the shape and the position to apply it.

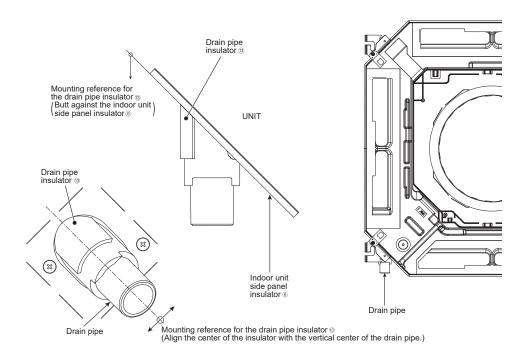

7. Attaching to entries for remote controller cable and power cable

- \bullet Attach the insulators $\ensuremath{\mathfrak{B}}$ and $\ensuremath{\mathfrak{B}}$ in the recessed portions for wiring of the indoor unit.
 - * Fit the insulators in the recessed portions.
- * Before attaching the insulators, check the shapes and the positions to apply them.
- * For removal of the electrical wiring service panel (remote controller) and electrical wiring service panel,
- refer to the installation manual that comes with the indoor unit.

 * For electrical work, refer to the installation manual that comes with the indoor unit.

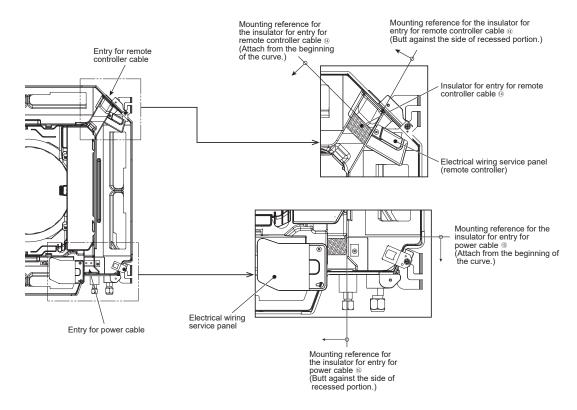


8. Attaching to grille


- (1) Attach the insulators ⑦ on the back (non-design side) of grille.

 * Before attaching the insulators, check the shapes and the positions to apply them.

 * Do not apply excessive force on movable parts, such as vanes, during work. Doing so may cause an accident or damage.

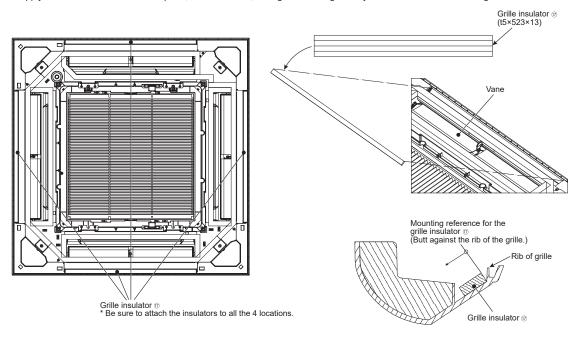


- Before attaching the insulator, check the shape and the position to apply it.
- * Attach the insulator to the factory-installed grille insulators. Avoid deformation of the grille insulators when attaching it.
- * Do not apply excessive force on movable parts, such as vanes, during work. Doing so may cause an accident or damage.

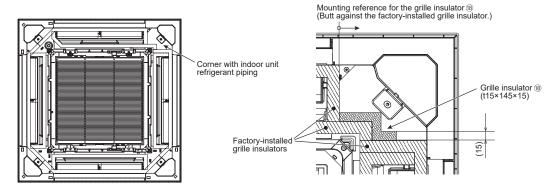


- (3) Attach the insulators (9) and (20) to the inside of the corner pockets.

 * Before attaching the insulators, check the shapes and the positions to apply them.
 - * Remove the corner panels before work.
 - For removal, refer to the installation manual that comes with the indoor unit.
 - Attach the insulators to all the 4 corner pockets.
 - * Do not apply excessive force on movable parts, such as vanes, during work. Doing so may cause an accident or damage.

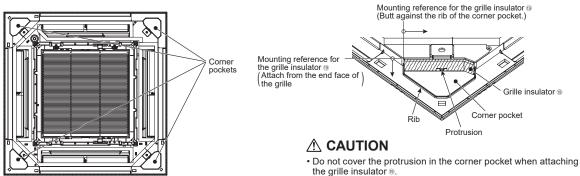

the grille insulator @

The corner panel cannot be installed if the protrusion is covered.

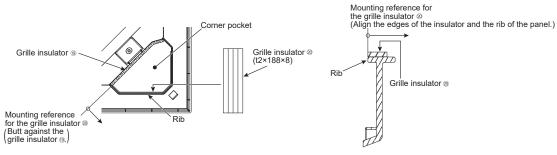


- (4) Attach the insulators ② on the back (non-design side) of grille.


 - * Attach the insulators to 3 corners. (An insulator has been installed to the corner with refrigerant piping at the factory.)

 * Before attaching the insulators, check the shapes and the positions to apply them.

 * Do not apply excessive force on movable parts, such as vanes, during work. Doing so may cause an accident or damage.

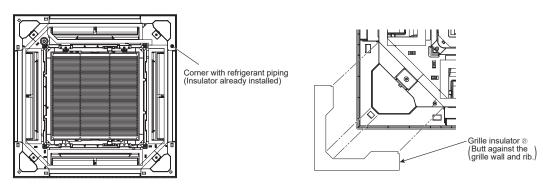


- (5) Attach the insulators @ on the front (design side) of grille.
 - Attach 2 insulators to each of the 4 corner areas.
 - Before attaching the insulators, check the shapes and the positions to apply them.
 - * Do not apply excessive force on movable parts, such as vanes, during work. Doing so may cause an accident or damage.

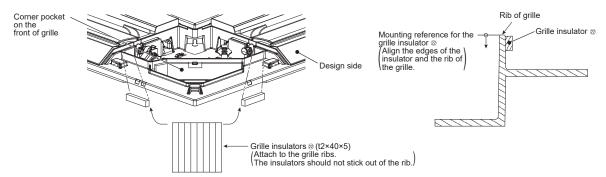

9. Attaching to corner panels


- (1) Attach the insulators @ to the corner panel of the grile.
 - Before attaching the insulators, check the shapes and the positions to apply them.
 - Attach the insulators to the signal receiver corner panel and the i-see Sensor corner panel as well as the standard corner panels.
 - * Do not apply excessive force on the movable part of i-see Sensor or the signal receiver. Doing so may cause an accident or damage.

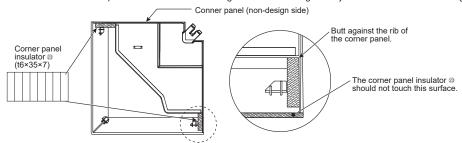


- (2) Attach the insulators 29 to the corner panels of the grille.

 - Before attaching the insulators, check the shapes and the positions to apply them.


 Attach the insulators to the signal receiver corner panel and the i-see Sensor corner panel as well as the standard corner panels.
 - * Do not apply excessive force on the movable part of i-see Sensor or the signal receiver. Doing so may cause an accident or damage.

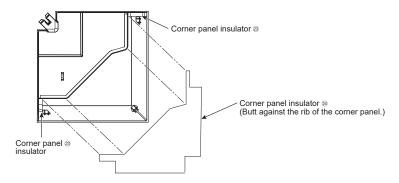

- (3) Attach the insulators @ to the corner panels of the grille.
 - Before attaching the insulators, check the shapes and the positions to apply them.
 - * Attach the insulators to the signal receiver corner panel and the i-see Sensor corner panel as well as the standard corner panels.
 - * Do not apply excessive force on the movable part of i-see Sensor or the signal receiver. Doing so may cause an accident or damage.

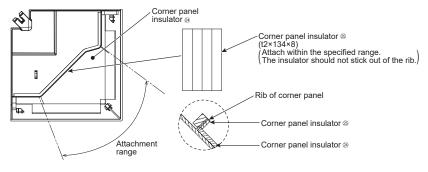


- (4) Attach the insulators to the corner panels of the grille.
 - Before attaching the insulators, check the shapes and the positions to apply them.
 - Attach the insulators to the signal receiver corner panel and the i-see Sensor corner panel as well as the standard corner panels.
 - Do not apply excessive force on the movable part of rece Sensor or the signal receiver. Doing so may cause an accident or damage.

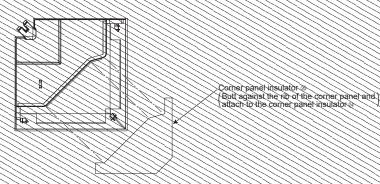

- (5) Attach the insulators 🎕 and the insulator(5) 🥸 or 🕸 to the standard corner panels and the signal receiver corner panels
 - Before attaching the insulators, check the shapes and the positions to apply them
 - Attach the insulators of to both the standard and the signal receiver corner panels

 - Attach the insulators only to the standard corner panels.
 Attach the insulator only to the signal receiver corner panel.
 - *Do not apply excessive force on the signal receiver. Doing so may cause an accident or damage

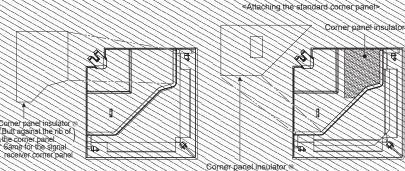

Corner-panel insulator **
(Butt against the rib of the corner-panel)

Remove the safety sting as needed before attacking the insulator.

Remove the safety sting as needed before attacking the insulator.


Make sure to reinstall it if the safety sting is removed.

Failure to do so may cause a fall.

Attaching the signal receiver corner panels Corner panel Insulator & Attack In the same way as the Lipulator for the standard comer panel.

Comer pagel insulator > (Buttagainst the ill of the comer pagel.)

- (6) Attach the insulator @ to the i-see Sensor corner panel of the grille
 - Before attaching the insulator, check the shape and the position to apply it.
 - Do not apply excessive torce on the i-see Sensor. Doing so may cause an accident or damage.

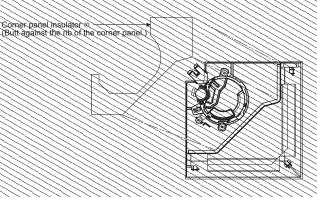


10. Setting remote controller

To enable the setting of 14°C in the cooling operation, refer to the operation manual and instruction book for the indoor unit.



Figure

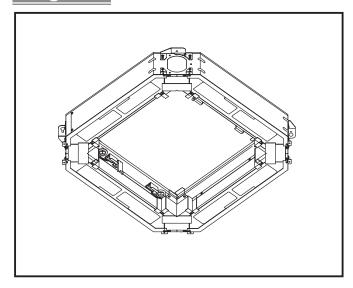

Descriptions

A part required installation of a high-efficiency filter element. Can also be used for introducing fresh air from outdoor.

Applicable Models

- PLA-ZM·EA series
- PLA-M·EA series
- PLA-SM·EA series


Specifications

Connected duct diameter (mm)				
air	Number of intakes	Any 2 corners or less (among four corners)		
intake	Input volume	20% or less of indoor units air volume		
High-performance filter element(Optional parts)		Colorimetric method (65%)		

Dimensions

Unit: mm

See from the panel side

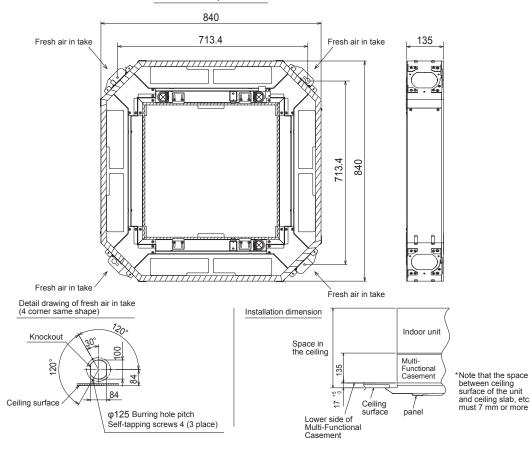

How to Use / How to Install

1 Parts check

(The unit is provided with this manual and following parts in the box.)

MULTI-FUNCTIONAL CASEMENT

Part No.	Multi-functional casement	Screw with washer (black)	3 Screw	Grille securing bracket
Q'ty	1 10	4 M5×0.8×25	8 M5×0.8×12	4 With insulator
Figure			Q	

NOTICE

- (1) When taking in fresh air from outside, use the PAC-SH65OF-E duct flange (optional). In addition, procure following items at local site: duct fan, duct, and dust collecting filter. Intake-air volume should be 20% or less of indoor unit air volume. Note: It is available of fresh-air intake even when the High-efficiency filter element is installed.
- (2) Follow the procedure in this installation manual of the Multi-functional casement ①.

 Otherwise, it is possible that installation of refrigerant pipes, drain pipe, and electrical wiring will not be available.


2 Installation of Main unit

•Follow the procedure in the installation manual which is attached to the main unit.

3 Installation of Multi-functional casement


Preparation before installation

- •An optional part Shutter plate to change the number of air outlet is to be installed on the main unit of the indoor unit; thus install the shutter plate before installing the Multi-functional casement ①.
- •The Multi-functional casement ① has 4 knockout on each side so that the fresh air can be taken from any of four sides. Select any one or two sides in advance and make knockout holes on the Multi-functional casement ①.

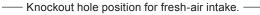



Making knockout holes

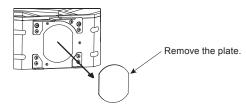

•Be sure to use the PAC-SH65OF-E (optional) for duct flange.

Installation of Multi-functional casement

Electrical work of main unit

•Be sure to do the wiring (indoor/outdoor unit connection cable, remote controller cable, etc.) before installing the Multi-functional casement ①:

Note: Wiring after installing the Multi-functional casement ① will be difficult.

Temporary installation

Note: Be sure to use two persons for this work.


- •Fix the 2 screw with washer (black) ② to each position. (drain pipe corner position and to its opposite corner).
- ◆Align the direction of the Multi-functional casement ① according to the label for checking the installation position attached inside the Multi-functional casement ①.

Note: If installed in improper direction, parts damage, wind leakage, or dew drop may result.


•Hook the hole of the Multi-functional casement ① to the screw with washer (black) ② and hand tight.

Fixing

•Temporarily secure the 2 screws with washers ②, and also the other 2 screws with washers ②, and then tighten these screws with washers ② after making sure that the position of Multi-functional casement ① is correct.

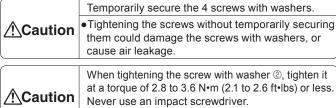



It may result in parts damage.

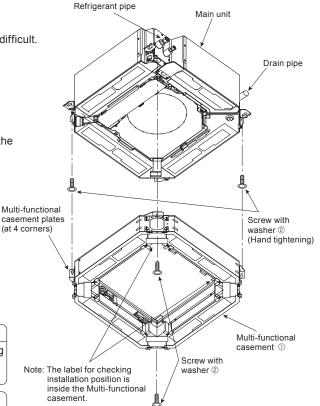

Attaching bracket for securing grille

•Use 8 screws ③ to secure the 4 Grille securing brackets ④ to each corner of Multi-functional casement ①. (See the figure below.)

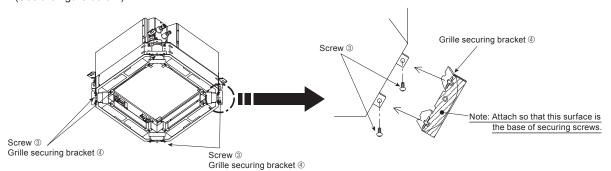

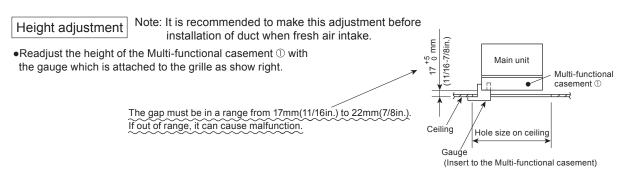

NDOOR UNIT

Installation of duct (in case of fresh air intake)

Installation of duct flange


Ceiling


• Install the optional duct flange referring to the installation manual provided with it.

∕!\Caution

Linkage of duct fan and air conditioner.

• In case that a duct fan is used, be sure to make it linked with the air conditioner when outside air is taken. Do not run the duct fan only. It can cause dew drop.

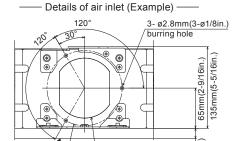

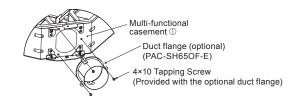


Installation of duct (should be prepared locally)

ø100mm(ø3-15/16in.)

knocked out hole Centers for ø125mm(ø4-15/16in.)

- Prepare a duct of which inner diameter fits into the outer diameter of the duct flange.
- In case that the environment above the ceiling is high temperature and high humidity, wrap the duct in a heat insulator to avoid causing dew drop on the wall.
- A duct must be procured at local site for dust collecting filter since the dust contained in the outside air taken into the indoor unit is not removed without such filter.

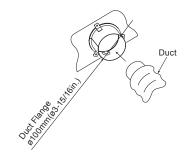


Installation of grille 5

Preparation for temporarily hanging the grille

• Check that the 2 temporary hanging hooks on the grille are in the raised position.




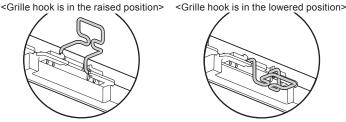


Temporary installation of the grille

• Align the label attached on the drain pipe corner of the Multi-functional casement to the corner with the round hole of the grille, and temporarily install the grille by latching the grille hooks onto the projections on the Multi-functional casement ①.

- 1. Make sure electrical wires are not caught between the Multi-functional casement and the grille.
- 2. Never force pressure on the grille during the temporary installation. It may result in accident and damage.

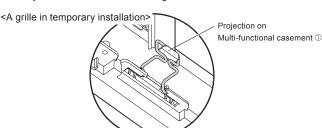

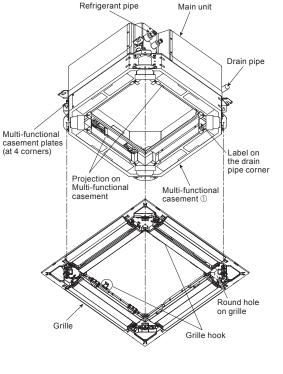


5 Installation of grille

Fixing the grille

• Refer to the installation manual of the main unit for the installation.


Electrical work

 For lead wires of the grille the Signal receiver, and the i-see Sensor make sure that they passed through the bush on the Multi-functional casement, as shown in the right figure, and connect to the main unit.

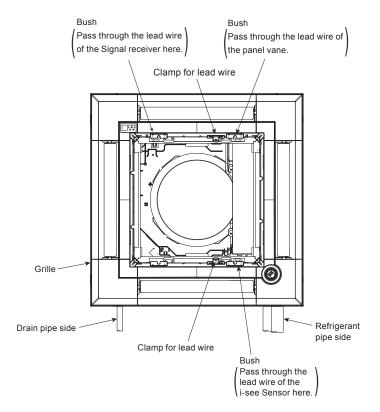



Figure

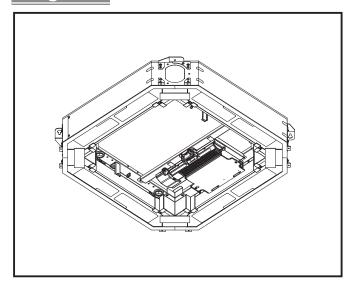

Descriptions

A Part to purify the inhaled air. It can also be used for introducing fresh air from outdoor.

Applicable Models

- PLA-ZM·EA series
- PLA-M·EA series
- PLA-SM·EA series


Specifications

Connec	Connected duct diameter (mm)				
air	Number of intakes	Any 2 corners or less (among four corners)			
intake	Input volume	20% or less of indoor units air volume			
Air purifying equipment		Plasma element			


Dimensions

Unit: mm

See from the panel side

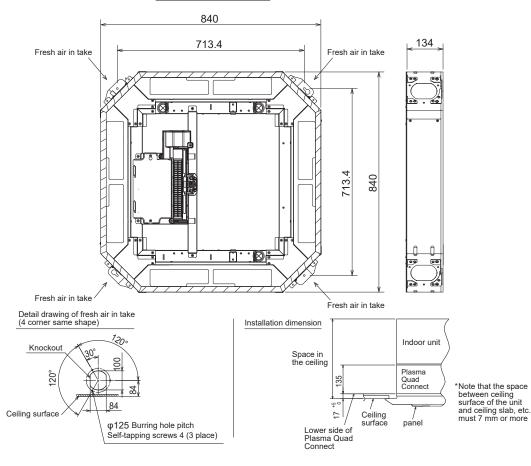

Photo

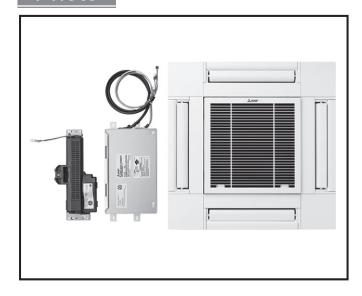

Descriptions

A Panel with part to purify the inhaled air.

Applicable Models

■ SLZ Series


Specifications

Power consumption (W)	4			
Size H × W × D (mm)	625 x 625 x 20 (379 x 188 x 69) *2			
Weight (kg)	3.0 (1.4) *2			

- *1 Power source depends on indoor unit.
- *2 This figure () indicates Plasma Quad Connect Electrical Box.
- *3 This optional part can't be use with V Blocking Filter(PAC-SK54KF-E).
- *4 This optional part use CN105 connector of indoor unit. Other interface have to use CN105 of this optional part. (Please refer to I.M.)

Dimensions

Unit: mm

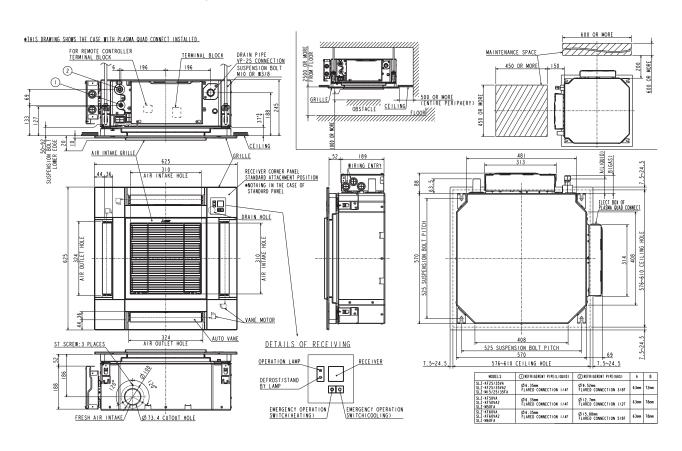



Photo



Descriptions

Part to attach a duct to take in fresh air from outdoors.

Applicable Models


- PLA-ZM·EA series
- PLA-M·EA series
- PLA-SM·EA series


Specifications

Connection duct diameter (mm)	ø100
Material	Hot-dip zinc-coated carbon steel sheet (t0.8)
Accessory	Insulator, Fixing screw (ST4x10)x3


Dimensions

Unit : mm

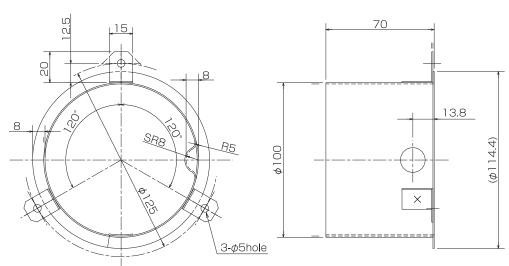

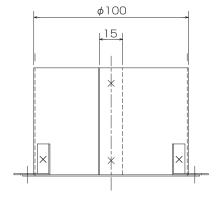


1. Checking Parts (This box contains the installation manual and the following parts)

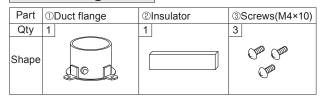

2. Attaching Duct Flange for External Air Input

- 1) Punch an opening for the duct flange.
 - <When attaching to main unit>
 - Cut the slit of the ø100 cut-out hole to which the duct flange is to be attached.
 - <When attaching to Multi-functional casement>
 - Remove the ø100 knockout hole to which the duct flange is to be attached.
- 2) Paste insulator @ on the duct flange ① (see the figure on the right).
- 3) Use 3 screws ③ to attach duct flange ① (see the figure below).

Note:

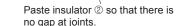


Insulator @


Duct flange ①

- 1. When attaching to the main unit, be sure to remove the insulator that is pasted on the location of main unit (shown in the figure below).
- 2. When attaching to Multi-functional casement, be sure to set the concave portion of duct flange ① toward the grille attachment surface when attaching it. (If the duct flange is attached to a location other than the specified one, the grille cannot be attached.)
- 3. When external air is input directly through the main unit, intake-air volume should be 5% or less of indoor unit air volume.
- 4. When external air is input through the Multi-functional casement, intake-air volume should be 20% or less of indoor unit air volume.
- 5. To input the external air, the duct fan and dust collecting filter to prevent drawing in dust and other particles are necessary. For details, see "Fresh air intake volume & static pressure characteristics" in the P series DATA BOOK.
- 6. When external air is input into the main unit, the operation noise can be larger.

When attaching to main unit

• For the E type 4-way cassette (PLA-ZM • EA,PLA-M • EA,PLA-SM • EA)

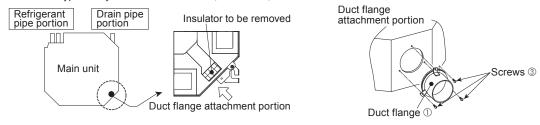

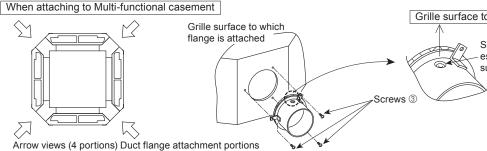

Grille surface to which flange is attached

Set the concave portion (grille setscrew – escape section) toward the grille surface to which flange is attached.

Photo



Descriptions

Part to attach a duct to take in fresh air from outdoors.

Applicable Models


■ PCA-M71HA type

Specifications

Connecting duct diameter (mm)	200			
I Material	Hot-dip zinc-coated carbon steel sheet (t0.8)			
Accessory	Fixing screw (ST4x10) x 4			

Dimensions

Unit: mm

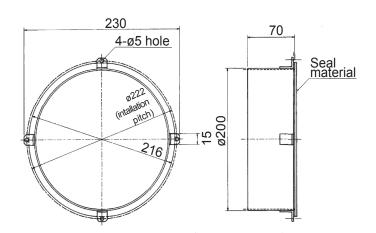

How to Use / How to Install


1. Checking Provided Parts

Make sure that you have all the following parts before installation:

①Duct flange	②Tapping screws (4x10)
x1	₹


2. Duct Flange Installation Procedure

- 1. Punch out the knockout opening for installing duct on indoor unit.
- 2. Use the provided tapping screws $\ensuremath{\mathfrak{D}}$ to secure duct flange $\ensuremath{\mathfrak{D}}.$

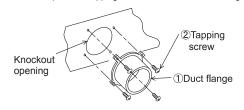

3. Duct Installation Procedure


 Securely fix the duct (with inner diameter 200 mm) procured at local site to the duct flange, using screws or band.

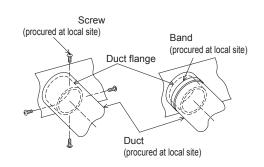

PARTS

INDOOR UNIT

Figure

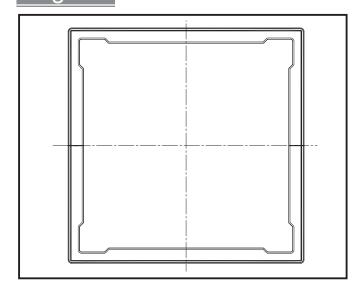

Descriptions

Enables to install cassete-type indoor units even if the ceiling height is low.

A part to the panel 40 mm lower than the ceiling surface.

Applicable Models


- PLA-ZM·EA series
- PLA-M·EA series
- PLA-SM·EA series


Specifications


Exterior	Color	Munsell No.1.0Y9.2/0.2				
	Surface treatment	Coating				
	Material	Styrofoam				

Dimensions


Unit: mm

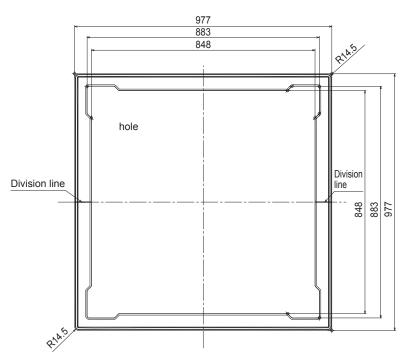

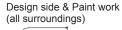

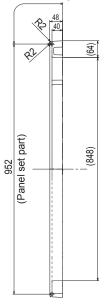


Installation dimension

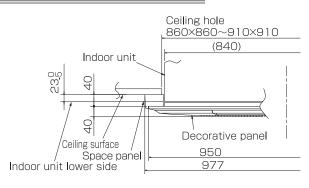

How to Use / How to Insta

1. Checking packed parts

Make sure that you have all the following parts, in addition to this manual in this box:

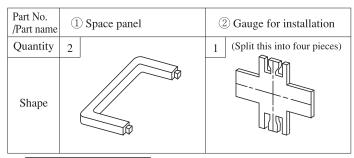


Installing space panel


- Install before installing decorative panel.
- This space panel is to be installed on decorative panel before installing on unit body. (If decorative panel has already been installed, remove it.)

Preparation for installation

- (1) Checking size of opening in ceiling
 - Make sure that opening in ceiling is within the range shown below: $860 \times 860 \sim 910 \times 910$
- (2) Positioning of ceiling surface and unit body
 - Divide the provided gauge for installation 2 into four parts, and insert it into the unit or outlet of Multi-functional casement. Place the unit in the center of opening in ceiling, referring to the figure below.

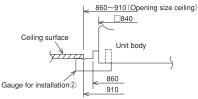


• Using provided gauge for installation ②, position the ceiling surface and unit body. If position of ceiling surface and unit body does not match, it may result in leak of draft, drip of dewdrops and incorrect operation of horizontal vane of decorative panel, etc.

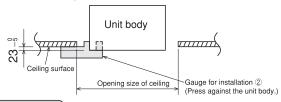

Setting the decorative panel and space panel

- Place the space panel ① (two locations), matching the flange section of decorative panel, and assemble space panel ① on the decorative panel and then set them.
- ※ Be sure to assemble space panel ① on the decorative panel: If assembled incorrectly, space panel ① may break.

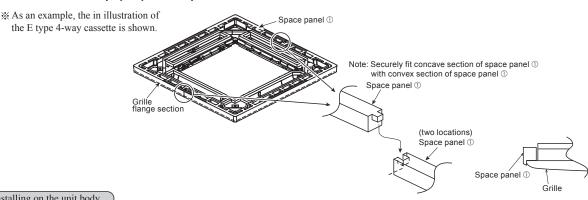

(Installing on the unit body

• The procedures are the same as those for decorative panel. Install the assembled set, referring to the installation manual for decorative panel.

Photo



Descriptions

Raises drain generated during unit's operation to secure the appropriate angle of the drain pipe.

Applicable Models


- PKA-M60KA
- PKA-M60KAL
- PKA-M71KA
- PKA-M71KAL
- PKA-M100KA
- PKA-M100KAL

Specifications


Rated voltage	220-240V 50Hz / 60Hz			
Power consumption	12 / 10.8W			
Operating current	0.114 / 0.092A			
Discharge lift	Max. 500 mm from drain pump's top surface			
Discharge rate	24 ℓ /h or more			
External dimensions (mm)	300 (H) x 300 (W) x 187 (D)			
Exterior	Cover : ABS resin (Munsell 6.4Y 8.9/0.4)			
Driving motor	Single, shading type (Class E insulation)			
Drain piping	Connected to drain outlet. PVC pipe VP-20 (O.D. 26) can be used			

Dimensions

Unit : mm

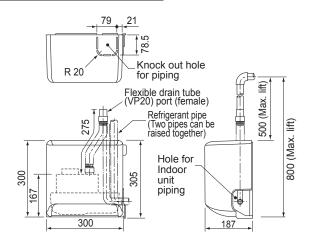


Dimension of Mounting plate

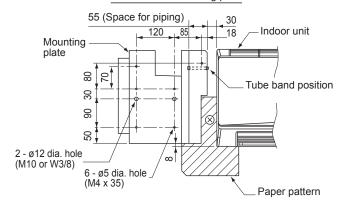

Required space for installation of Drain Pump

[Maintenance space]

* In case that there is a rim at the corner of ceiling, consider the dimension of the rim before installation.

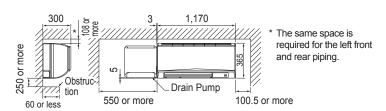

Accessories

(Make sure of the following items attached with the Drain Pump before installation.)

(A) Drain Pump	(B) Screw	(C) Drain tube	(D) Drain tube cover	(E) Tube clip	(F) Pull tight	(G) Paper pattern	(H) Wiring plate
x 1	(M4 x 16) x 1 (M4 x 35) x 6	60000000000000000000000000000000000000	x 1	x 1	x 1	x 1	x1


The items (B) – (F) are packed between main body and cover of the Drain Pump. Take them out after the cover removed.


How to Use / How to Install

Before installation of the Drain Pump (* Position the indoor unit first.)

Set up of the Drain Pump

- Remove the cover and the mounting plate which is fixed on the back of the Drain Pump each.
 - * The packaging material which is put between the cover and the main body of Drain Pump is only for cushion for transportation. Take it out as it is unnecessary.
 - * Take out the accessories.
- Run the pull tight (F) attached through the square hole on the mounting plate.
- Cut the knock out hole on the cover with a nipper and etc.

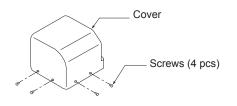

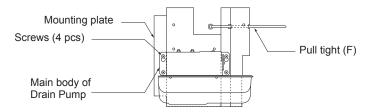

* The screws removed will be used later. Keep them not to lose.

1-2 Set up and installation of the indoor unit (* See the item of piping connection set up in the installation manual of the indoor unit.)

- (1) Make the knock out hole for left side piping on the left side panel of the indoor unit.
- Pull out the drain cap from the left drain outlet
- Hold the convex section at the end and pull the drain cap.



- Insert the drain cap into the right drain outlet.
- Insert a screwdriver or similar tool into the hole at the end of the cap and insert the cap fully into the outlet.



- (3) Remove the drain hose from the indoor unit.
- Hold the end of the drain hose (a) (marked by the arrow) and pull the drain hose out (b).



- Insert the accessory drain hose (C) into the left drain outlet.
- Insert the hose up to the base of the drain pipe connection opening.
- Make sure that the hook on the drain hose is securely caught on the projection in the opening in the drain pan.



(6) Install the indoor unit.

⚠ CAUTION


The indoor unit must be installed horizontally.

Otherwise, the water can leak and it will make the wall dirty.


Installation of the Drain Pump

2-1 Fixing of the mounting plate

- The installation place should be carefully considered if it is proper for installation. If it is not strong enough to hole the unit, make it stronger by using board or beam before installation.
- (1) Decide the installation position of the mounting plate by using the paper pattern (G) attached.
 - (* The left end of the indoor unit should be marked in advance.)
 - 1) Fix the paper pattern on the wall with the screw (B) (M4 × 16) attached with putting it to the left end of the indoor unit for positioning of the Drain Pump as shown in the drawing.
 - 2) Position the mounting plate with pushing it against the paper pattern.
- (2) Fix the mounting plate with the screws (B) (M4 × 35) attached. Fix the mounting plate using the 5 dia, holes, (6 locations pointed by arrows in the drawing.) In case that the mounting plate is fixed by fixing bolts (through bolts, bolt anchors, or nut anchors), get M10 or W3/8 screws locally and put them into two ø 12 holes of the mounting plate to fix it.
- (3) When the mounting plates is installed, remove the paper pattern.
- (4) Check that the mounting plate is level and positioned correctly with the indoor unit. (Refer to Dimensions)

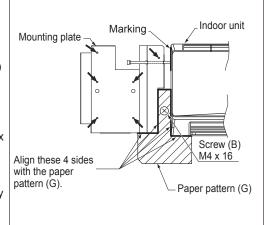

- (1) Install the screws to the 2 upper holes (indicated by the arrows shown in right figure) of the mounting plate by hand tightening them about halfway, and then hook the Drain Pump on the screws.
- (2) Level the Drain Pump by using a spirit level. Then tighten the 4 screws securely to fix the Drain Pump.

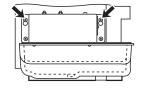


↑ CAUTION

The Drain Pump must be leveled.

Otherwise, the water leaks and it makes wall dirty.

Installation of refrigerant piping (* See the item of refrigerant piping connection in the Installation of the indoor unit.)


- (1) Install the refrigerant piping using the left piping method.
- (2) When the refrigerant piping and drain pipe are routed vertically together, route the piping through the space in the mounting plate.
- Be sure that the indoor unit must be positioned at the place where was marked at 2-1.
- The bending radius of the refrigerant pipe must be R80 or less.
- The tube raised should be fixed with the pull tight which was put through the square hole of the mounting plate.
- (3) Position the refrigerant piping in the left piping space of the indoor unit as shown in right figure.

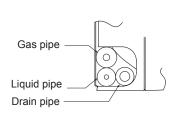

4. Installation of drain piping


Connection of drain tube

- (1) Connect the drain tube (C) which is installed to the left side drain port of the indoor unit to the drain port of the Drain Pump.
- (2) Fix the connection port securely with the tube clip (E) attached.
- (3) Connect the flexible drain tube, which is run from the top panel of the Drain Pump, to the local drain piping. The part connected must be closed by vinyl chloride type alue.
- (4) Insulate the flexible drain tube which is run from top panel of Drain Pump with the drain tube cover (D) attached.

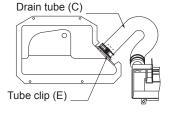

4-2 Installation of drain piping

- (1) The drain pipe should be installed in accordance with the following procedure.
- The drain pipe should be installed so that the outdoor side (drain side) becomes falling slope (1/100 or more) and do not make trap or peaks.
- The horizontal run of the drain pipe should be 20 m or less. In case that the tube is crosscut sawing for long distance, some support brackets should be installed to prevent the pipe from being wavy. Never install the air bleeder. The drain will blow out.
- The hard vinyl chloride pipe VP20 (outer dia. 26 mm) should be used for the drain pipe. And the part connected must be closed by vinyl chloride type glue to prevent water leak.
- Be sure to wrap the drain pipe with adiabatic material (foam polyethylene: specific gravity 0.03, thickness 9 mm or more) available on the market.
- Do not install stink trap to the outlet of the drain pipe.
- The outlet of the drain pipe should be installed the place where it is not possible to cause stink.
- In case that plural drain pipes are installed, install the main pipe so that it comes approximately 10 cm lower than the drain outlet and the pipes must be made of material of VP30 or similar and they should be falling slope (1/100 or more).
- It is possible to raise the outlet of the drain pipe to 80 cm (max. lift) from bottom face of Drain Pump. However, if there is a horizontal run pipe connected to the vertical section of the drain pipe, water will overflow from the drain pan. This is because too much water will flow back when the operation stops. Therefore, the drain pipe must be raised vertically. Also, install the flow back stop at the highest point to prevent the water from flow back from horizontal part of the pipe. See the drawing below.

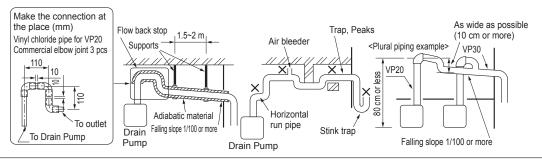




5. Electric wiring

- **Set up of the indoor unit** (* Confirm that the power is off before starting the installation work.)
- Remove the panel of indoor unit and the electric box cover. (* See the indoor unit installation section in the installation manual of the indoor unit.)

5-2 **Electric wiring**


- Route the wiring through the left piping space of the indoor unit to the electric box as shown in right figure.
- Connect the lead wires to the connectors of the indoor unit control board, and then place the slack in the wires in the wiring storage space of the Drain Pump. (Fix the lead wires with the clamps.)

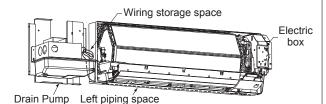

5-3 **Electric wiring operation**

- Pull out the electric box as far as necessary to connect the lead wires to the control board connectors "CNP" and "CN4F"
- Connect the lead wires with connectors to the control board connectors "CNP" and "CN4F". At this time, remove the bypass connector (will be unused) from the terminal CN4F of the control board.
- Be sure not to have the lead wires touch the heat generator (heat sink) on the control board.


Electric circuit diagram

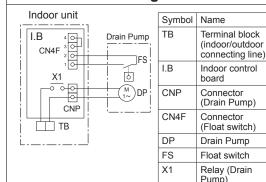

Note:


stands for terminal connection. oo stands for connector joint.

Electric wiring operation

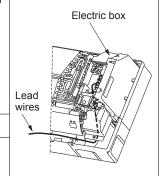

Wiring plate

Affix the wiring plate (H) to the rear of the panel.

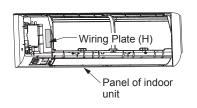


After completing the electric wiring operation, make sure that the hooks are securely caught on the unit, and then put the electric box cover and panel back in place.



6. Test run

- After the installation of the Drain Pump has been completed, make sure that the drain works correctly and the water does not leak from any part of connection.
- (1) Pour water
 - Pour water approximately 800 cc to the drain pan. (* See the drain pipe [checking the drain flow] section in the installation manual of the indoor unit.)
 - (* If the water is poured too much, it is possible that the drainage does not work due to alarm stop by activation of drain over flow protection device.)
- (2) Test run
 - In accordance with the procedure for test run in the installation manual for the indoor unit, operate the air cooling and make sure that the drainage works and the water does not leak.
 - When the Drain Pump is installed in winter season, the water must be drained.
 - To drain water, remove the drain plug under the Drain Pump. Prepare the pan to receive drain.
 - When the drainage has been completed, put the drain plug back in place.
- (3) After checking, put the cover back in place.
 - Make sure that the left end of the indoor unit perfectly comes on the point marked at 2-1. (If they do not match, the cover will not be able to be installed or there will be a gap between the cover and the indoor unit.)

Figure

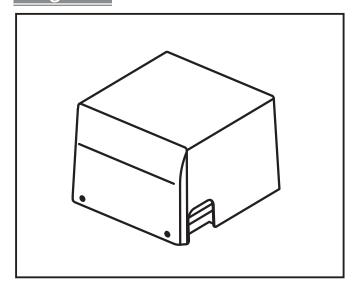

Descriptions

Raises drain generated during unit's operation to secure the appropriate angle of the drain pipe.

Applicable Models


- PKA-M60KA(L)2
- PKA-M71KA(L)2
- PKA-M100KA(L)2

Specifications

Rated voltage	220V-240V 50Hz/60Hz
Power consumption	3.9W
Operating current	0.05A
Discharge lift	Max. 555 mm from drain pump's top surface
Discharge rate	24 l /h or more
Extwernal dimensions (mm)	295 (H) × 288 (W) × 210 (D)
Exterior	Cover : PS resin (Munsell 1.0Y 9.2/0.2)
Driving motor	DC motor(Class E insulation)
Drain piping	Connected to drain outlet. PVC pipe VP-20 (O.D. 26) can be used.

Dimensions


Unit: mm

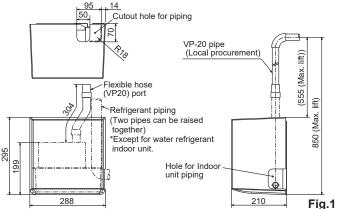




	Α	В	С	D	Е	F *	G
PK-K type	1170	365	300	100.5	250	108	4

^{*} In case that there is a rim at the corner of ceiling, consider the dimension of the rim before installation.

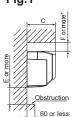

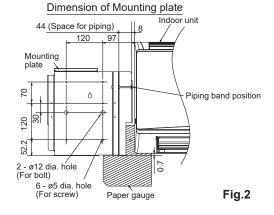

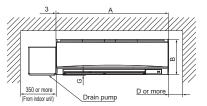


Fig.3

Accessories

(Make sure of the following items attached with the Drain Pump before installation.)

(A) Drain Pump	(B) Screw	(C) Screw	(D) Drain hose	(E) Flexible hose cover	(F) Band	(G) Paper gauge
		A				
x 1	(4 x 35) x 6	(4 x 16) x 1	x 1	x 1	x 2	x 1

^{*} The items (B) – (F) are packed between main body and exterior cover of the Drain Pump. Take them out after the exterior cover removed.



How to Use / How to Install

1. Before installation of the Drain Pump (* Position the indoor unit first.)

1-1 Set up of the Drain Pump

- Remove the exterior cover and the mounting plate which is fixed on the back of the Drain Pump. Take out the accessories.
- When installing the refrigerant piping vertically, run the band (F) attached through the square hole on the mounting plate, and cut the cutout hole on the top of the exterior cover with a nipper.


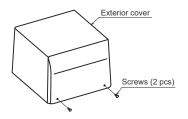


Fig.4

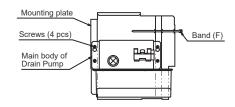

* The removed screws will be used later. Keep them not to lose.

1-2 Set up and installation of the indoor unit (* See the item of piping connection set up in the installation manual of the indoor unit.)

- (1) Make the cutout hole for left side piping on the left side panel of the indoor unit.
- (2) Pull out the drain cap from the left drain outlet.
 - · Hold the convex section at the end and pull the drain cap.



Fig.5-1

- (3) Remove the drain hose from the indoor unit.
 - Hold the end of the drain hose (a) (marked by the arrow) and pull the drain hose out (b).



Fig.5-2

- (4) Insert the drain cap into the right drain outlet.
 - Insert a screwdriver or similar tool into the hole at the end of the cap and insert the cap fully into the outlet.



Fig.5-3

- (5) Insert the accessory drain hose (D) into the left drain outlet.
 - Insert the hose up to the base of the drain pipe connection opening.
 - Make sure that the hook on the drain hose is securely caught on the projection in the opening in the drain pan.



Fig.5-4

(6) Install the indoor unit.

♠ CAUTION


The indoor unit must be installed horizontally.

Otherwise, the water can leak and it will make the wall dirty.

2. Installation of the Drain Pump

2-1 Fixing of the mounting plate

- The installation place should be carefully considered about whether it is proper for installation. If it is not strong enough to hole the unit, make it stronger by using board or beam before installation.
- (1) Decide the installation position of the mounting plate by using the paper gauge (G).
 - (* The left end of the indoor unit should be marked in advance.)
 - 1) Fix the paper gauge (G) on the wall with the screw (C) (4×16) attached with putting it to the left end of the indoor unit for positioning of the Drain Pump as shown in the drawing.
 - 2) Position the mounting plate with pushing it against the paper gauge (G).
- (2) Fix the mounting plate with the screws (B) (4 × 35) attached. Fix the mounting plate using the 5 dia. holes. (6 locations pointed by arrows in the drawing.) In case that the mounting plate is fixed by fixing bolts (through bolts, bolt anchors, or nut anchors), get M10 or W3/8 screws locally and put them into two ø 12 holes of the mounting plate to fix it.
- (3) When the mounting plates is installed, remove the paper gauge (G)
- (4) Check that the mounting plate is level and positioned correctly with the indoor unit as shown in Fig.2.

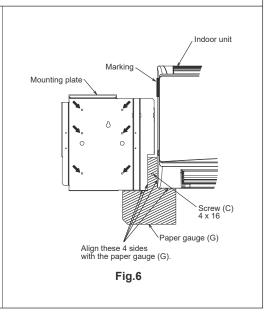

- Fix the Drain Pump on the mounting plate.
- (1) Install the screws to the 2 upper holes (indicated by the arrows shown in Fig. 7) of the mounting plate by hand tightening them about halfway, and then hook the Drain Pump on the screws.
- (2) Level the Drain Pump by using a spirit level. Then tighten the 4 screws securely to fix the Drain Pump.

∴ CAUTION

The Drain Pump must be installed horizontally

Otherwise, the water leaks and it makes wall dirty.


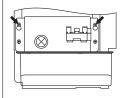


Fig.7

3. Installation of refrigerant piping (* See the item of refrigerant piping connection in the Installation of the indoor unit. t cannot be implemented with PKFY-WL*VKM series.


- When running the refrigerant piping and the drain piping together.
- (1) Install the refrigerant piping using the left piping method.
- (2) Run the piping through the space in the mounting plate.
 - Be sure that the indoor unit must be positioned at the place where was marked at 4-1.
 - The bending radius of the refrigerant piping must be R80 or less.
 (If it is larger than R80, the exterior cover cannot be attached because it touches to the piping.)
 - The tube raised should be fixed with the pull tight which was put through the square hole of the mounting plate.
- (3) Position the refrigerant piping in the left piping space of the indoor unit as shown in Fig. 8.

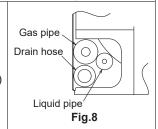

4. Installation of drain piping


4-1 Connection of Drain hose

- (1) Connect the drain hose (D), which is fixed to the left side drain port on the indoor unit to the drain port on the Drain Pump as shown in Fig.9. Be sure to use PVC adhesive to close the connection part so that water will not leak.
- (2) Connect the flexible hose, which runs from the top panel of the Drain Pump, to the local drain piping as shown in Fig.10. Be sure to use the PVC adhesive and the attached band (F) to close and fix the connection part so that water will not leak.
- (3) Insulate the flexible hose which runs from top panel of Drain Pump by attaching the flexible hose cover (E) as shown in Fig.10.

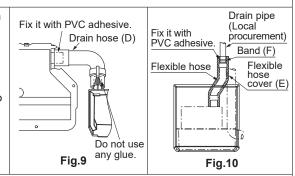

4-2 Installation of drain piping

- (1) The drain pipe should be installed in accordance with the following procedure.
 - The drain pipe should be installed so that the outdoor side (drain side) becomes falling slope (1/100 or more) and do not make trap or peaks.
 - The horizontal run of the drain pipe should be 20 m or less. In case that the tube is horizontally run for long distance, some support brackets should be installed to prevent the pipe from being wavy. Never install the air bleeder. The drain will blow out.
 - The hard vinyl chloride pipe VP20 (outer dia. 26 mm) should be used for the drain pipe. And the part connected must be closed by PVC adhesive to prevent water leak.
 - Be sure to wrap the drain pipe with adiabatic material (foam polyethylene: specific gravity 0.03, thickness 10 mm or more) available on the market.
 - Do not install stink trap to the outlet of the drain pipe.
 - The outlet of the drain pipe should be installed the place where it is not possible to cause stink.
 - In case that plural drain pipes are installed, install the main pipe so that it comes approximately 10 cm lower than the drain outlet and the pipes must be made of material of VP30 or similar and they should be falling slope (1/100 or more).
 - It is possible to raise the outlet of the drain pipe to 85 cm (max. lift) from bottom face of Drain Pump. However, if there is a horizontal run pipe connected to the vertical section of the drain pipe, water will overflow from the drain pan. This is because too much water will flow back when the operation stops. Therefore, the drain pipe must be raised vertically. Also, install the flow back stop at the highest point to prevent the water from flow back from horizontal part of the pipe. See the drawing below.

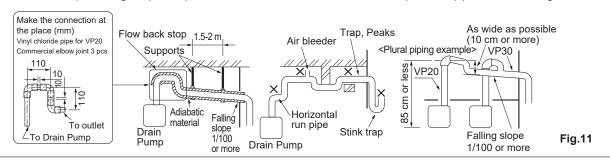


5. Electric wiring

5-1 Set up of the indoor unit (* Confirm that the power is off before starting the installation work.)

(1) Remove the panel of indoor unit and the electric box cover. (* See the indoor unit installation section in the installation manual of the indoor unit.)

5-2 Electric wiring

- Pass the wiring through the left piping space of the indoor unit to the electric box as shown in Fig.12.
- Connect the lead wires to the connectors of the indoor unit control board, and then place the slack in the wires in the wiring storage space of the Drain Pump. (Fix the lead wires with the clamps.)

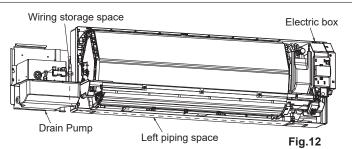

5-3 Electric wiring operation

- Pull out the electric box as far as necessary to connect the lead wires to the control board connectors "CNP" and "CN4F".
- Connect the lead wires with connectors to the control board connectors "CNP" and "CN4F". At this time, remove the bypass connector (will be unused) from the terminal CN4F of the control board.
- Be sure not to have the lead wires touch the heat generator (heat sink) on the control board.

Electric wiring operation


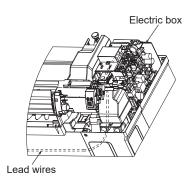



Fig.13

Electric circuit diagram

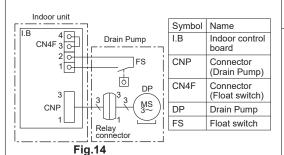

Note: ____, oo stands for connector joint.


• After completing the electric wiring operation, make sure that the hooks are securely caught on the unit, and then put the electric box cover and panel back in place.

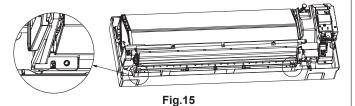

6. Test run

- After the installation of the Drain Pump has been completed, make sure that the drain works correctly and the water does not leak from any part of connection.
- (1) Pour water
 - Pour water approximately 800 cc to the drain pan of indoor unit. (* See the drain pipe [checking the drain flow] section in the installation manual of the indoor unit.)
 - (* If water is poured too much, the drain pump may stop working and cannot drain water due to the activation of the drain over flow protection.)
- (2) Test run
 - In accordance with the procedure for test run in the installation manual for the indoor unit, operate the air cooling and make sure that the drainage works and the water does not leak.
 - * When the Drain Pump is installed in winter season, the water must be drained. To drain water, remove the drain plug on the side surface of the Drain Pump. Prepare the pan to receive drain. When the drainage has been completed, put the drain plug back in place.
- (3) After checking, put the cover back in place.
 - Make sure that the left end of the indoor unit perfectly comes on the point marked at 4-1. (If they do not match, the cover may be not able to be installed or may have a gap from the indoor unit.)

Photo

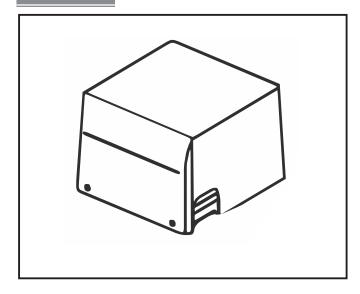

Descriptions

Raises drain generated during unit's operation to secure the appropriate angle of the drain pipe.

Applicable Models


- PKA-M35LA(L)2
- PKA-M50LA(L)2


Specifications

Rated voltage	220V-240V 50Hz/60Hz		
Power consumption	3.9W		
Operating current	0.05A		
Discharge lift	Max. 555 mm from drain pump's top surface		
Discharge rate	24 l /h or more		
Extwernal dimensions (mm)	295 (H) × 288 (W) × 210 (D)		
Exterior	Cover : PS resin (Munsell 0.7PB 9.2/0.4)		
Driving motor	DC motor(Class E insulation)		
Drain piping	Connected to drain outlet. PVC pipe VP-20 (O.D. 26) can be used		

Dimensions

Unit: mm

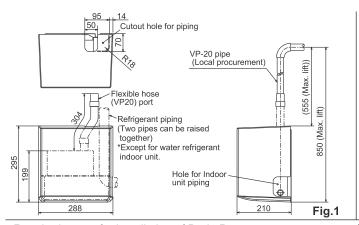

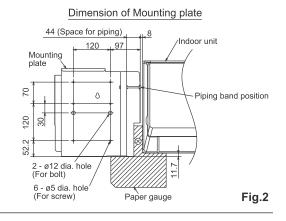

Required space for installation of Drain Pump

	A *1	В	С	D	Е	F *2	G
PK-L type	773/898	299	237	150	250	75	15

- *1 Refer to the installation manual of the indoor unit.
- *2 In case that there is a rim at the corner of ceiling, consider the dimension of the rim before installation.


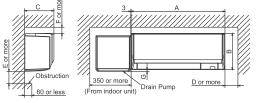


Fig.3

Accessories

(Make sure of the following items attached with the Drain Pump before installation.)

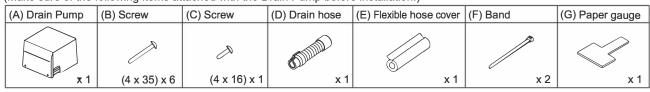

^{*} The items (B) - (F) are packed between main body and exterior cover of the Drain Pump. Take them out after the exterior cover removed.



1. Before installation of the Drain Pump (* Position the indoor unit first.)

1 -1 Set up of the Drain Pump

- Remove the exterior cover and the mounting plate which is fixed on the back of the Drain Pump. Take out the accessories.
- When installing the refrigerant piping vertically, run the band (F) attached through the square hole on the mounting plate, and cut the cutout hole on the top of the exterior cover with a nipper.


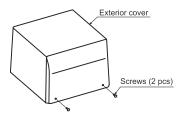


Fig.4

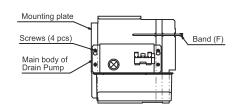

* The removed screws will be used later. Keep them not to lose.

1 -2 Set up and installation of the indoor unit (* See the item of piping connection set up in the installation manual of the indoor unit.)

- (1) Make the cutout hole for left side piping on the left side panel of the indoor unit.
- (2) Pull out the drain cap from the left drain outlet.
 - . Hold the convex section at the end and pull the drain cap.



Fig.5-1

- (3) Remove the drain hose from the indoor unit.
 - Hold the end of the drain hose (a) (marked by the arrow) and pull the drain hose out (b).



Fig.5-2

- (4) Insert the drain cap into the right drain outlet.
 - Insert a screwdriver or similar tool into the hole at the end of the cap and insert the cap fully into the outlet.



- (5) Insert the accessory drain hose (D) into the left drain outlet.
 - . Insert the hose up to the base of the drain pipe connection opening.
 - Make sure that the hook on the drain hose is securely caught on the projection in the opening in the drain pan.



Fig.5-4

(6) Install the indoor unit.

♠ CAUTION


The indoor unit must be installed horizontally.

Otherwise, the water can leak and it will make the wall dirty

2. Installation of the Drain Pump

2-1 Fixing of the mounting plate

- The installation place should be carefully considered about whether it is proper for installation. If it is not strong enough to hole the unit, make it stronger by using board or beam before installation.
- (1) Decide the installation position of the mounting plate by using the paper gauge (G).
 - (* The left end of the indoor unit should be marked in advance.)
 - 1) Fix the paper gauge (G) on the wall with the screw (C) (4×16) attached with putting it to the left end of the indoor unit for positioning of the Drain Pump as shown in the drawing.
 - 2) Position the mounting plate with pushing it against the paper gauge (G).
- (2) Fix the mounting plate with the screws (B) (4×35) attached. Fix the mounting plate using the 5 dia. holes. (6 locations pointed by arrows in the drawing.) In case that the mounting plate is fixed by fixing bolts (through bolts, bolt anchors, or nut anchors), get M10 or W3/8 screws locally and put them into two ø 12 holes of the mounting plate to fix it.
- (3) When the mounting plates is installed, remove the paper gauge (G).
- (4) Check that the mounting plate is level and positioned correctly with the indoor unit as shown in Fig.2.

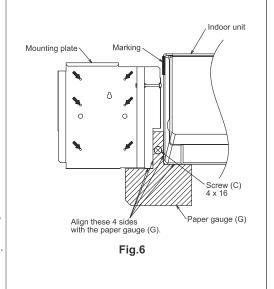


2-2 Installation of the Drain Pump

- Fix the Drain Pump on the mounting plate.
- (1) Install the screws to the 2 upper holes (indicated by the arrows shown in Fig. 7) of the mounting plate by hand tightening them about halfway, and then hook the Drain Pump on the screws.
- (2) Level the Drain Pump by using a spirit level.

Then tighten the 4 screws securely to fix the Drain Pump.


The Drain Pump must be installed horizontally. CAUTION

Otherwise, the water leaks and it makes wall dirty.

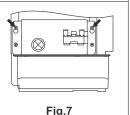

3. Installation of refrigerant piping (* See the item of refrigerant piping connection in the Installation of the indoor unit.)


- When running the refrigerant piping and the drain piping together.
- (1) Install the refrigerant piping using the left piping method.
- (2) Run the piping through the space in the mounting plate.
 - Be sure that the indoor unit must be positioned at the place where was marked at 4-1.
 - The bending radius of the refrigerant piping must be R80 or less. (If it is larger than R80, the exterior cover cannot be attached because it touches to the piping.)
 - The tube raised should be fixed with the pull tight which was put through the square hole of the mounting plate.
- (3) Position the refrigerant piping in the left piping space of the indoor unit as shown in Fig. 8.

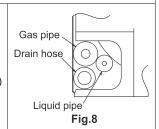

4. Installation of drain piping


4-1 Connection of Drain hose

- (1) Connect the drain hose (D), which is fixed to the left side drain port on the indoor unit to the drain port on the Drain Pump as shown in Fig.9. Be sure to use PVC adhesive to close the connection part so that water will not leak.
- (2) Connect the flexible hose, which runs from the top panel of the Drain Pump, to the local drain piping as shown in Fig.10. Be sure to use the PVC adhesive and the attached band (F) to close and fix the connection part so that water will not leak.
- (3) Insulate the flexible hose which runs from top panel of Drain Pump by attaching the flexible hose cover (E) as shown in Fig.10.

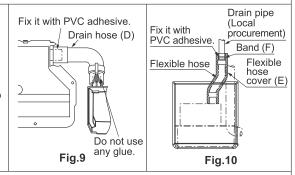

4-2 Installation of drain piping

- (1) The drain pipe should be installed in accordance with the following procedure.
 - The drain pipe should be installed so that the outdoor side (drain side) becomes falling slope (1/100 or more) and do not make trap or peaks.
 - The horizontal run of the drain pipe should be 20 m or less. In case that the tube is horizontally run for long distance, some support brackets should be installed to prevent the pipe from being wavy. Never install the air bleeder. The drain will blow out.
 - The hard vinyl chloride pipe VP20 (outer dia. 26 mm) should be used for the drain pipe. And the part connected must be closed by PVC adhesive to prevent water leak.
 - Be sure to wrap the drain pipe with adiabatic material (foam polyethylene: specific gravity 0.03, thickness 10 mm or more) available on the market.
 - Do not install stink trap to the outlet of the drain pipe.
 - The outlet of the drain pipe should be installed the place where it is not possible to cause stink.
 - In case that plural drain pipes are installed, install the main pipe so that it comes approximately 10 cm lower than the drain outlet and the pipes must be made of material of VP30 or similar and they should be falling slope (1/100 or more).
 - It is possible to raise the outlet of the drain pipe to 85 cm (max. lift) from bottom face of Drain Pump. However, if there is a horizontal run pipe connected to the vertical section of the drain pipe, water will overflow from the drain pan. This is because too much water will flow back when the operation stops. Therefore, the drain pipe must be raised vertically. Also, install the flow back stop at the highest point to prevent the water from flow back from horizontal part of the pipe. See the drawing below.

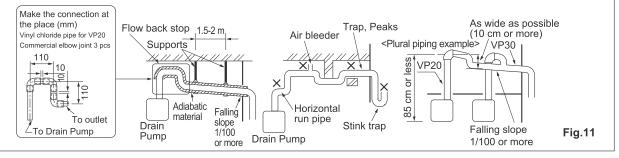


5. Electric wiring

5-1 Set up of the indoor unit (* Confirm that the power is off before starting the installation work.)

(1) Remove the panel of indoor unit and the electric box cover. (* See the indoor unit installation section in the installation manual of the indoor unit.)

5-2 Electric wiring

- Pass the wiring through the left piping space of the indoor unit to the electric box as shown in Fig.12.
- Connect the lead wires to the connectors of the indoor unit control board, and then place the slack in the wires in the wiring storage space of the Drain Pump. (Fix the lead wires with the clamps.)

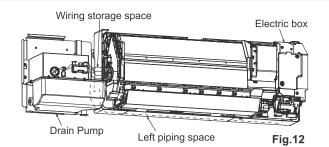

5-3 Electric wiring operation

- Pull out the electric box as far as necessary to connect the lead wires to the control board connectors "CNP" and "CN4F".
- Connect the lead wires with connectors to the control board connectors "CNP" and "CN4F". At this time, remove the bypass connector (will be unused) from the terminal CN4F of the control board.
- Be sure not to have the lead wires touch the heat generator (heat sink) on the control board.

Electric wiring operation


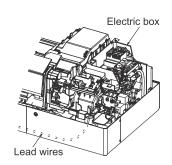



Fig.13

Electric circuit diagram

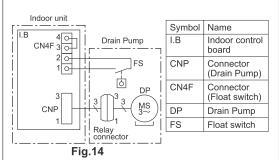

Note: ___, oo stands for connector joint.


• After completing the electric wiring operation, make sure that the hooks are securely caught on the unit, and then put the electric box cover and panel back in place.

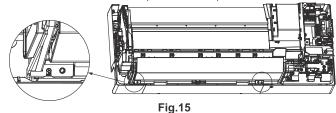

6. Test run

- After the installation of the Drain Pump has been completed, make sure that the drain works correctly and the water does not leak from any part of connection.
- (1) Pour water
 - Pour water approximately 800 cc to the drain pan of indoor unit. (* See the drain pipe [checking the drain flow] section in the installation manual of the indoor unit.)
 - (* If water is poured too much, the drain pump may stop working and cannot drain water due to the activation of the drain over flow protection.)
- (2) Test run
 - In accordance with the procedure for test run in the installation manual for the indoor unit, operate the air cooling and make sure that the drainage works and the water does not leak.
 - * When the Drain Pump is installed in winter season, the water must be drained. To drain water, remove the drain plug on the side surface of the Drain Pump. Prepare the pan to receive drain. When the drainage has been completed, put the drain plug back in place.
- (3) After checking, put the cover back in place.
 - Make sure that the left end of the indoor unit perfectly comes on the point marked at 4-1. (If they do not match, the cover may be not able to be installed or may have a gap from the indoor unit.)

Photo

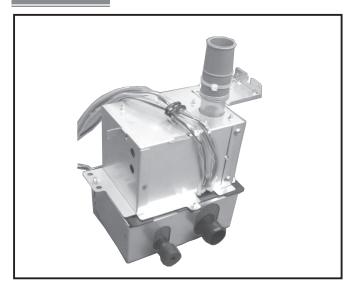

Descriptions

Raises drain generated during unit's operation to secure the appropriate angle of the drain pipe.

Applicable Models


Drain pump	PAC-SJ92DM-E	PAC-SJ93DM-E	PAC-SJ94DM-E
Applicable models	PCA-M35KA type PCA-M50KA type	PCA-M71KA type PCA-M100KA type PCA-M125KA type PCA-M140KA type	

Specifications

Rated power	220V AC, single-phase, 50/60Hz		
Power consumption	12/10.8W		
Operating current	0.114/0.092A		
Drain lift	Max. 600mm from indoor unit's top surface		
Discharge rate	24 ℓ /h or more		
Driving motor	Shading type (Class E insulation)		
Drain piping	Connected to drain outlet. PVC pipe VP-20 (O.D. Φ 26) can be used.		


Dimensions


Unit : mm

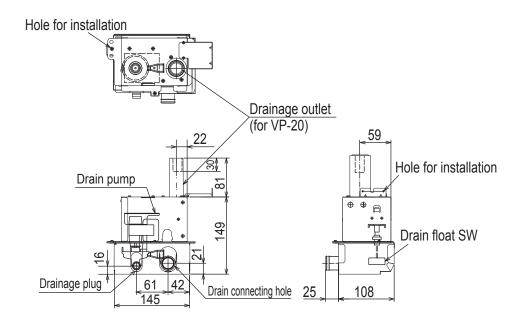

How to Use / How to Install

1 Confirming Supplied Accessories * Before starting installation, make sure that the following accessories are present.

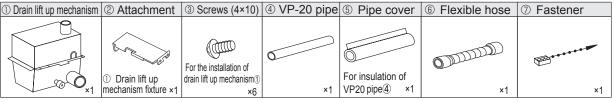


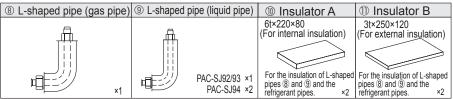


2 Installation Diagram of the Drain lift up mechanism

- * This drain lift up mechanism must be installed inside an indoor unit.
- * Installing this drain lift up mechanism limits to arrange the refrigerant pipe only upward.
- * To facilitate installation of the drain lift up mechanism, it should be installed before indoor unit.
- * The size of the plumbing that must connect, by the refrigerant kind of the indoor unit that corresponds in the case of PAC-SH85DM-E, changes.
- * Please refer to the installation manual of an indoor unit for details.
- * Accessory pipes (® or ®) are compatible with any types of refrigerant pipe. The connection pipe of the L-shaped pipe (liquid pipe) included with PAC-SJ94 will differ depending on the indoor unit model in use.
- *1 In case of accessory parts VP-20pipe @ and pipe cover ⑤ do not have enough length because the lifting height is high, please supply locally.


 Unit:mm

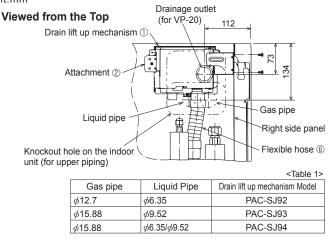

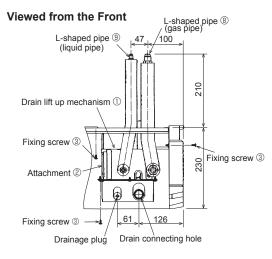

Viewed from the Right VP-20nine (locally supplied) Elbow pipe (locally supplied) VP-20pipe 4 *1 (pipe cover ⑤) L-shaped pipe ®,9 (gas pipe, liquid pipe) Fixing hole Drain lift up mechanism 108.5 221 Drain connecting hole on 40 27 the indoor unit Flexible hose 6


Positions of Holes on the Ceiling

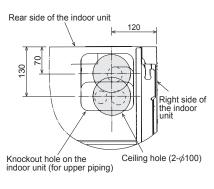

3 Installing the Drain lift up mechanism

- Connect the flexible hose to the drain lift up mechanism before installing the mechanism to an indoor unit
- 1.Remove the intake grille and side panel. (Refer to the indoor unit installation manual.)
- 2. Prepare the knockout hole to be used for the upper piping of the indoor unit.
- 3.Fix the attachment ② with the fixing screws ③ (×2)
- 4.Apply vinyl chloride type adhesive to the drain connecting hole of the drain lift up mechanism ① and insert the flexible hose ⑥ firmly into the hole.
- 5.Apply vinyl chloride type adhesive to the drain connection hole of the indoor unit, and install the drain lift up mechanism ① while inserting the flexible hose ⑥. Do not twist during insertion.
- 6.Fix the drain lift up mechanism ① with the fixing screws ③ (×4)

Notice Do not press the rear side panel (metal plate) as deformation will result.

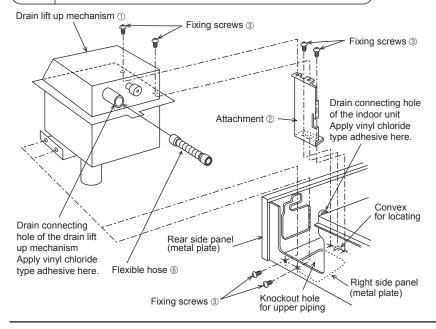

4 Refrigerant Piping


• For details on piping, refer to the installation manual of the indoor unit.

[With the stop valve of the outdoor unit fully closed]

- 1. Apply lubricant to the flare sheet of the L-shaped pipes (gas pipe, liquid pipe) $\ensuremath{\$}$, $\ensuremath{\$}$.
- 2. Remove the flare nut and cap from the indoor unit.
- 3. Apply lubricant to the flare sheet connecting section of the indoor unit.
- 4.Connect the L-shaped pipes (gas pipe, liquid pipes) ® and 9 quickly.
- 5. Fit the removed flare nut to the existing pipes and carry out flaring.
- 6. Connect the L-shaped pipes with the existing pipes in the same way.
- 7.Cover each connection with heat insulator 1, 1.

[After the refrigerant circuit is complete]


- 8. Vacuumize the refrigerant lines through the service port of the liquid stop valve.
- 9. Fully open the stop valves (both liquid and gas).
- $\bullet \ \, \text{The method for operating the stop valve is described on the outdoor unit installation manual}.$

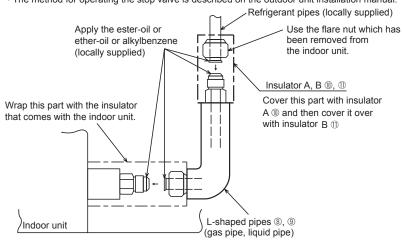




TIND SOOR UNIT

- *2 In case of accessory parts VP-20pipe ④ and pipe cover (5) do not have enough length because the lifting height is high, please supply locally.
- · For details on piping, refer to the installation manual of the indoor unit.
- 1. Apply vinyl chloride type adhesive to the drainage outlet of the drain lift up mechanism ①, then insert the VP-20 pipe 4 into it. (30mm deep)
- 2. Connect the VP20 pipe ${}^{\textcircled{4}}$ and existing drain pipe using a 90-degree elbow etc. and adhesive.
- 3. Cover the VP-20 pipe @ with the pipe cover ⑤.
- Insulate all pipes, from the drain lift up mechanism up to the outside.

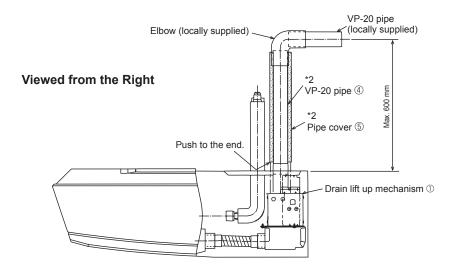


[Make sure to follow the following points during drain piping.]

- · Drain lifting height must be less than 600 mm.
- Incline the drain pipe downwards (1/100 or more) to the drainage side (outdoor).
- Do not create traps or peaks.
- Keep the horizontal piping within 20 m. Use fixtures to prevent the pipe from waving.
- Do not install air vent pipes. The drainage may spout out.
- Use general-purpose hard vinyl chloride pipes (outer diameter: ϕ 26) and apply vinyl chloride type adhesive to prevent any leakage.
- Cover with insulator (made of foamed polyethylene, with specific gravity of 0.03 thickness of 9 mm or more).
- Do not install odor trap at the drain outlet.
- · Locate the end of pipe at a point where odor is unlikely to occur.
- Do not insert the pipe directly into a drainage ditch where sulfur gas may be produced.
 Use VP-30 pipes for centralized piping. Install the centralized drain pipe approximately 10 cm below the output of pipes connected from the drain lift up mechanism.

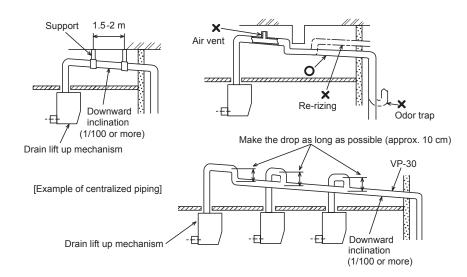


Electric Wiring 6

- *Refer to the installation manual of the indoor unit together with this manual.
- *Perform the work after checking that the power supply is off.
- 1.Remove the beam.
- 2.Remove the electric parts cover.
- 3. Pull the electric parts box downwards.
- 4. Connect the lead wire of drain lift up mechanism to the CNP and CN4F connectors provided on the control PCB of the indoor unit.
- 5. Tie up the lead wires with the fastener $\ensuremath{\mathbb{O}}$ so that the wires do not come apart inside the electric parts box.
- 6. When the wiring is finished, re-install the electric parts box, its cover and the beam.

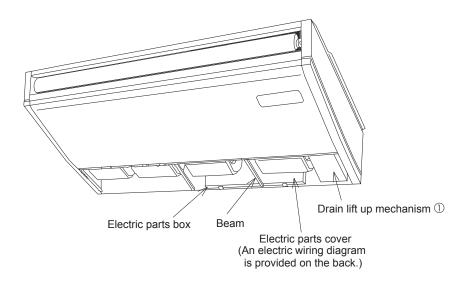

Lead wire of the drain lift up mechanism

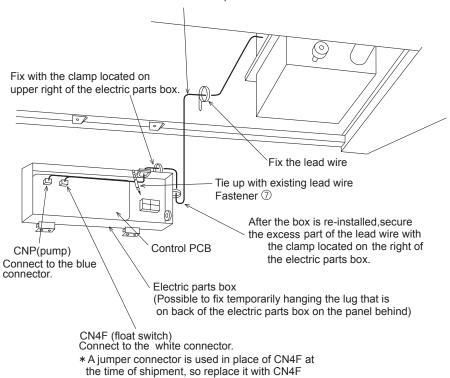


* The positions of the connectors which must be connected to the control PCB in certain models differ from those specified in the above diagram. Make sure that the lead wire are connected to CNP and CN4F connectors.

7 **Test Run** *Through this test run, check that drainage is discharged properly and that there is no water leakage from any of the connections. *Refer to the installation manual of the indoor unit together with this manual.

1. Supplying water

Supply approximately 1000cc of water to the air outlet.

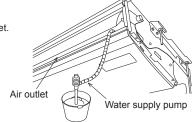

- 2.Carrying out a test run
 - (1) Turn the power ON.


 - (2) Press the TEST RUN button on the remote controller twice.

 (3) Press the MODE button to select cooling mode.

 *The drain lift up mechanism will be activated to start discharging the water.


 - (4) Check whether water is discharged properly.
 (5) Press the POWER ON/OFF button to cancel the test run.
 - (6) Turn the power OFF.
- 3.Re-install each part after checking.
 - *If the drain lift up mechanism is installed at the time of the year when heating is used, make sure that the water for the drain check has been removed.

After removal of the water, reinstall the drainage plug.

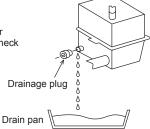

D2-86

Installation figure

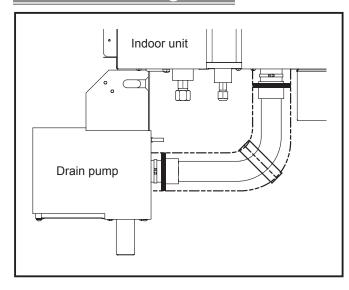

Descriptions

Raises drain generated during unit's operation to secure the appropriate angle of the drain pipe.

Applicable Models

■ SEZ-M · DA(L) series

Specifications

- External type
- 220 240V AC
- Liquid level detection: Float switch

Provided parts

Check that the packet includes the following parts in addition to installation manual.


Item	① DRAIN PUMP	② ATTACHMENT	③ DRAIN HOSE 1	④ PIPE COVER 1	⑤ PIPE COVER 2
Quantity	1	1	1	1	1
Shape			(385mm)	(255mm)	(200mm)
Item	⑥ HOSE BAND	① SCREW	® CLAMP	9 FERRITE CLAMP	⑩ BAND 1
Quantity	1	3	3	1	2
Shape		0,000			(100mm)
Item	① DRAIN HOSE 2	① PIPE COVER 3	③ BAND 2		
Quantity	1	1	6		
Shape	(175mm)	0	(380mm)		

How to Use / How to Install


1 Installing the Drain Pump


1-1 Installing the Drain Pump

(1) Unscrew the (a)screw on the unit cover, hook the ② ATTACHMENT over the mounting bracket on the unit, and screw it on to the unit with the (a)screw. (Fig. 1)

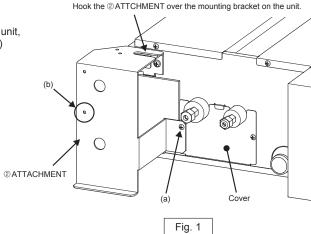


- (2) Temporarily screw in the \odot SCREW in the hole (b) on the \odot ATTACHMENT. (Fig. 1 and 2)
- (3) Loosen the drain-pump-cover fixing screws, and remove the cover. (Fig. 3)

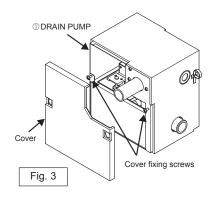

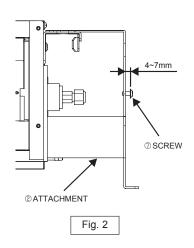


(4) Hang the ① DRAIN PUMP on the ② ATTACHMENT by placing the ⑦ SCREW (the one screwed in during Step (2) above) through the Figure-8 hole on back of the ① DRAIN PUMP, and then tighten the ⑦ SCREW from inside the ① DRAIN PUMP. (Fig. 4)

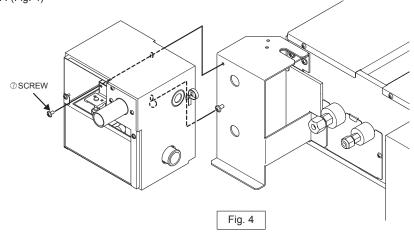


1-2 Installing DRAIN HOSE 1

- (1) Connect each end of 3 DRAIN HOSE 1 to the drain port on the unit and on the drain pump. (Fig. 5)
 - * Insert the hose all the way to the end of the ports.
 - * Do not use any adhesive.
- (2) Secure the hose with 6 HOSE BANDs at both ends of the hose. (Fig. 5)

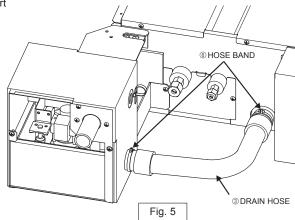


(3) Attach @ PIPE COVER 1 and @ PIPE COVER 2 to 3 DRAIN HOSE 1 flush against each other and against the unit and the drain pump, and then secure them in place with ® BANDs.

Wrap the pipe cover connection with vinyl tape to close the gap. (Fig. 6)

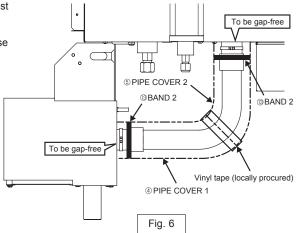


1-3 Wiring connections


- (1) Remove the CONTROL BOX COVER from the unit by unscrewing the two screws on the cover. (Fig. 7)
- (2) Unscrew the (c)CONTROL BOX fixing screw. (Fig. 7)

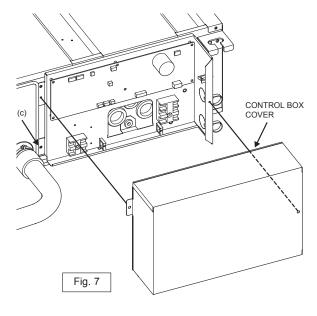


- (3) Remove the short-circuit connector from CN4F on the control board (white, 4P). (Fig. 8)
- (4) Route the two drain pump wires behind the CONTROL BOX and into the CONTROL BOX.
 Lift the CONTROL BOX in the direction of the arrow (d) to allow the wires through. (Fig. 8)

 ★ Do not pinch the wires.
- (5) Wind the drain pump wire (connector: blue, 3P) around ③ FERRITE CLAMP once, and fix it in place with ⑤BAND. (Fig. 9)
- (6) Connect the drain pump wire (connector: blue, 3P) to CNP on the control board, and connect the float switch wire (white: 4P) to CN4F on the control board respectively. (Fig. 8)
- (7) Place the screw(c) that was removed in Step 3-3.(2) above back on. (Fig. 7)

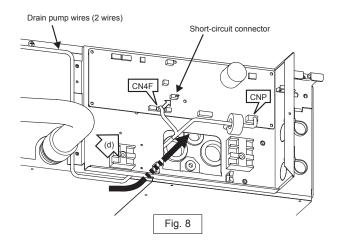

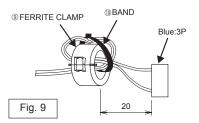


(8) Fix the two drain pump wires with ® CLAMPs to the unit. (Fig. 10)

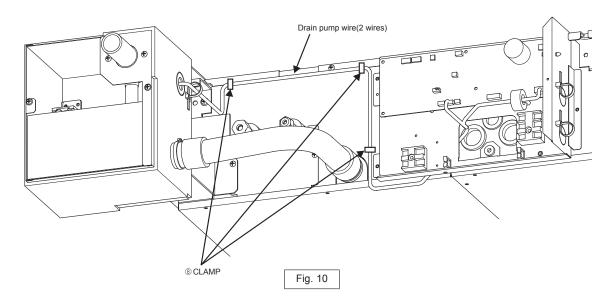


2 Drain piping work

- Ensure that the drain piping is downward (pitch of more than 1/100) to the outdoor (discharge) side. Do not provide any trap or irregularity on the way.
- Ensure that any cross-wise drain piping is less than 20 m (excluding the difference of elevation). If the drain piping is long, provide metal braces to prevent it from waving. Never provide any air vent pipe. Otherwise drain may be ejected.
- Use a hard vinyl chloride pipe O.D. ø 32 for drain piping.
- Ensure that collected pipes are 10 cm lower than the unit body's drain port.
- Do not provide any odor trap at the drain discharge port.
- Put the end of the drain piping in a position where no odor is generated.
- Do not put the end of the drain piping in any drain where ionic gases are generated.

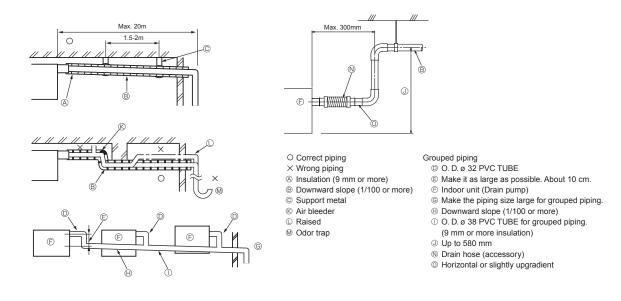


- 2-1. Insert the ① DRAIN HOSE 2 into the drain port (insertion margin: 25mm). (The drain hose must not be bent more than 45° to prevent the hose from breaking or clogging.) (Attach the hose with glue for the hard vinyl chloride pipe, and fix it with the ③ BAND 2.)
- 2-2. Attach the drain pipe (O.D. ø 32 PVC TUBE, field supply). (Attach the pipe with glue for the hard vinyl chloride pipe, and fix it with the ③ BAND 2.)
- 2-3. Perform insulation work on the drain pipe (O.D. ø 32 PVC TUBE) and on the socket (including elbow).
- 2-4. Check the drainage.
- 2-5. Attach the @ PIPE COVER 3 and, fix it with the @ BAND 2 to insulate the drain port.

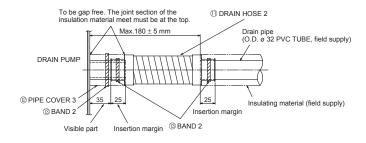


3 Confirming drain discharge


Make sure that the drain-up mechanism operates normally for discharge and that there is no water leakage from the connections.

- Be sure to confirm the above in a period of heating operation.
- Be sure to confirm the above before ceiling work is done in the case of a new construction.
- Make sure that water is not leaking from the connection (e) on the drain pump shown in the right figure.

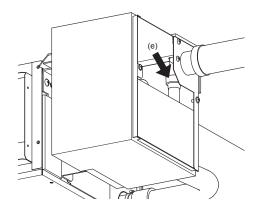



- 3-1. Fill water into the feed water pump using a feed water tank. In filling, be sure to put the end of the pump or tank in a drain pan. (If the insertion is incomplete, water may flow over the machine.)
 - * Do not splash water on the drain pump coil or the float switch wire through hole when pouring water.
- 3-2. Perform the test run in cooling mode, or turn on the switch SWE on the controller circuit board. (The drain pump and the fan are forced to operate without any remote controller operation.) Make sure using a transparent hose that drain is discharged.

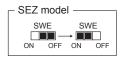


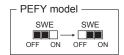


3-3. After confirmation, cancel the test run mode, and turn off the main power. When the switch SWE has been turned on, turn it off, and attach the CONTROL BOX COVER and the DRAIN PUMP COVER in the original positions.

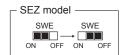

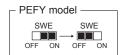

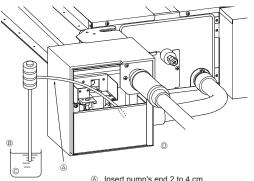

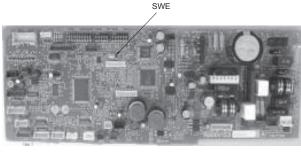

<Indoor board>

- (A) Insert pump's end 2 to 4 cm.(B) About 2000 cc
- Water
- Do not splash water on the drain pump coil or the float switch wire through hole when pouring water.

Photo



Decoration Covers

Descriptions

A decoration cover to be attached to the upper section of ceiling suspended models. Possible to prevent dust accumulation.

Applicable Models

■ PCA-M71HA type


Specifications

Material	SUS304 (0.8t)	
	Front cover x 1	
Parts composition	Suspension bracket cover x 4	
i arts composition	Tapping screw (4 x 10, with nylon washer) x 4	
	Washer x 8 (hot-dip zinc-coated carbon steel	
	sheet (t1. 2))	


Dimensions

Unit: mm

Front cover

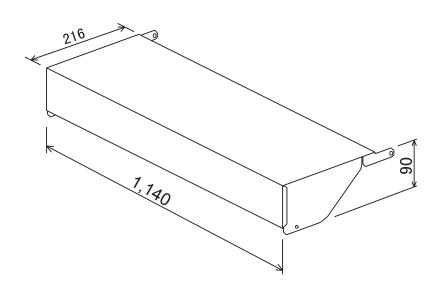


Suspention blacket cover

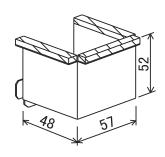

How to Use / How to Insta

1. Checking Provided Parts

*Make sure that you have all the following parts before install ation:

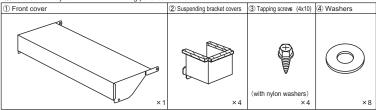

2. Front Cover Installation Procedure

- ★The following procedure shows how to attach the front cover after installing air-conditioner.
- Loosen the nuts of bolts suspending the unit, and lower the unit by approx. 5 mm.
 When lowering the unit, be careful not to damage the wires, coolant pipe or drain pipe.
 Remove the screws that secure the front panel and top panel to the unit (at 4 points).
- (The provided tapping screws@are spares for these screws.)

 3. Put front cover ① over the unit.

 Be careful not to damage the insulation sheets pasted on the top surface of unit and the inside
- 4. Use the screws removed in step 2 to temporarily secure front cover ①.
- (Do not tighten the screws at this time.)

 5. Tighten the nuts of bolts suspending the unit, and fit the unit onto ceiling.
- Tighten the nuts while carefully watching the attached status of front cover ①.


 6. Tighten the screws that were temporarily secured in step 4.
- Make sure that front cover holds the insulation sheet on the top surface of unit.
- and that the cover fits securely on the top surface of unit before tightening the screws.

 7. Separate the unit from ceiling to leave a gap of 2-3 mm fromceiling.

 Be sure to provide this space: If the unit is in contact with ceiling, the vibrations could be transmitted to ceiling.
- 8. Make sure that the unit is correctly installed, and then tighten the nuts of bolts suspending the unit.

[CAUTION] Do not tighten the lower double nuts yet, because installing suspending bracket covers must now be done.

※ If you attach the front cover before installing the unit, perform the procedure in steps 2 and 3, and then fully tighten the 2 screws on each side (4 in total).

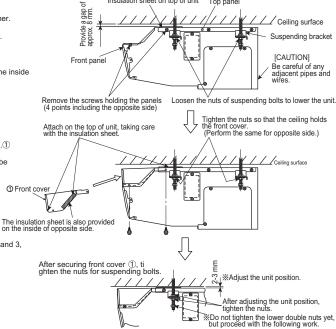


Insulation sheet on top of unit

Top panel

3. Suspending Bracket Installation Procedure

- ★ Attach the suspending bracket covers in succession.
- 1. Remove the lower double nuts (from 4 points) from the suspending bolts.
- Put the provided washers (tops and bottoms of suspending bracket covers) and suspending bracket covers through suspending bolts. (4)
- Tighten the nuts removed in step 1 for the suspending bolts.
 Make sure that the suspending bracket covers are in close contact with the unit and ceiling.

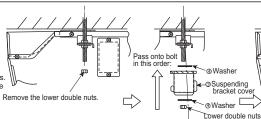




4. Test Run

- ※ Also refer to the installation manual of indoor unit.

 ★ Make sure that test run is performed without any abnormal sound, such as vibrations, fluttering sound, etc. [Test Run Procedure]
- 1. Turn power on.
 2. Press the TEST RUN button on remote controller twice
- Press the MODE button on remote controller to set to the fan mode
 * The fan will rotate to blow out air.
- Make sure that no abnormal sound, such as vibrations, fluttering sound, etc. is heard.
 Press the ON/OFF button on remote controller to release test run.
- 6. Turn power off.

Figure

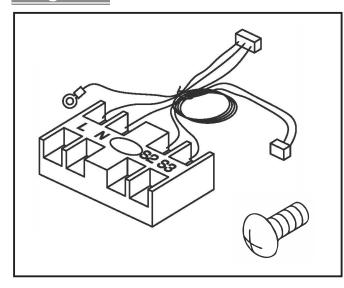

Descriptions

This kit is used when the power supply of indoor unit and outdoor unit is separated.(For PUHZ/PUZ application only)


Applicable Models


- PKA-M35LA(L) type■ PKA-M50LA(L) type
 - Specifications

Terminal block capacity	20A/300V
Terminal block material	Denatured melamine

Dimensions

Unit: mm

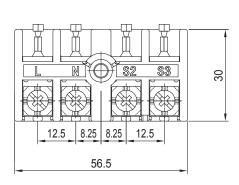

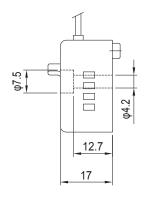

How to Use / How to

1. Overview


This kit is used when the power supply of the indoor unit and the outdoor unit is separated. (For PUHZ/PUZ application only) Refer to the installation manual of the indoor unit as well.

• The indoor power supply A Outdoor unit power supply B Earth leakage breaker C Wiring circuit breaker or isolating switch D Outdoor unit

- E Indoor unit/outdoor unit connecting cables
- F Remote controller
 G Indoor unit
- H This terminal kit
- J Indoor unit power supply
- * Affix label B that is included with the manuals of indoor unit near each wiring diagram for the indoor and outdoor units.


2. Provided parts

Confirm the following parts are included.

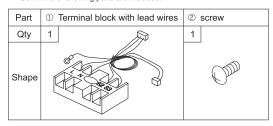

Simultaneous twin/triple/quadruple system


• The indoor power supply

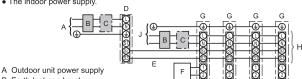

- B Earth leakage breaker
 C Wiring circuit breaker or isolating switch
 D Outdoor unit
- E Indoor unit/outdoor unit connecting cables
- F Remote controller G Indoor unit
- H This terminal kit
- J Indoor unit power supply
- * Affix label B that is included with the manuals of indoor unit near each wiring diagram for the indoor and outdoor units. Note:

Some units cannot be used in a simultaneous twin/triple/quadruple system. Refer to the outdoor unit installation manual for details.

- Secure the terminal block \odot with the screw \circledcirc and the ground wire (Black) with the screw. <Photo 6> Hang the lead wire of the terminal block \odot . <Photo 5>
- *Route the lead wire so that it does not stick out to the side cover side. It may cause wire breakage. (10) Restore the removed parts.

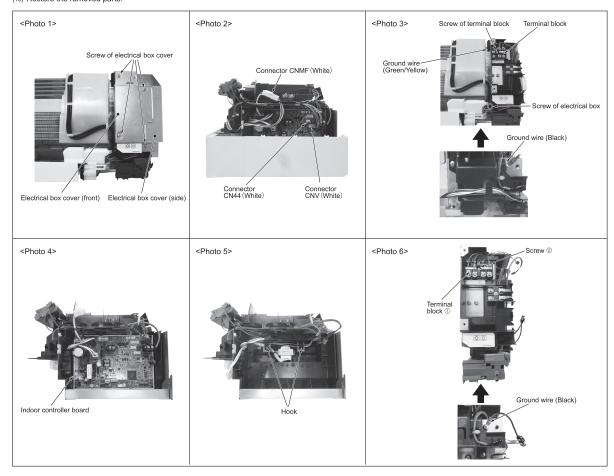

4. Electric wiring

Be sure to do the electric wiring according to the indoor unit installation manual.

5. Affix the labels enclosed with the manual of indoor unit near the electric wiring diagrams of both indoor and outdoor units.

Three types of labels (labels A-C) are provided: Affix the label B. (Separate indoor unit/outdoor unit power supplies... Label B)

6. DIP switch settings of the outdoor unit control board


It is necessary to change the settings of DIP switch on the outdoor unit control board.

Outdoor unit DIP switch settings (when using separate indoor unit/ ON 3 OFF 1 2 <SW8> outdoor unit power supplies only) SW8-3:ON

7. Test run

Perform a test run according to the installation manuals of the indoor and outdoor units.

Photo

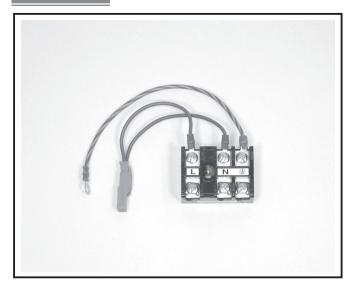

Descriptions

This kit (L/N/Earth) is used when the power supply of the indoor unit and the outdoor unit is separated. (For PUHZ applications only)

Applicable Models


- PKA-M60,71,100KA type■ PKA-M60,71,100KAL type

Specifications

Terminal block capacity	20A/250V
Terminal block material	Denatured melamine

Dimensions

Unit: mm

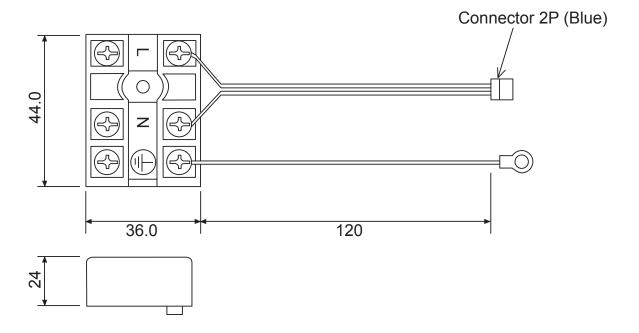

How to Use / How to Instal

1. Overview


This kit is used when the power supply of the indoor unit and the outdoor unit is separated. (for PUHZ applications only)

Refer to the installation manual of the indoor unit as well.


2. Provided parts

Comfirm the following parts are included.

Terminal block (lead wires already wired) x 1	Screw (to attach terminal block) x 1	Fastener (to tie lead wires) x 1	Screw (to secure ground wire) x 1
	Om		For PAC-SG96HR-E only

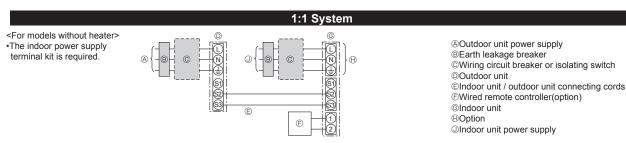


•Affix a label B that is included with the manuals near each wiring diagram for the indoor and outdoor units.

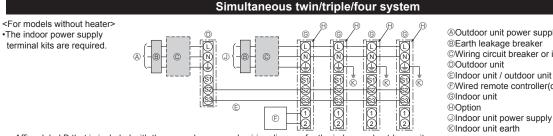


- •Affix a label B that is included with the manuals near each wiring diagram for the indoor and outdoor units.
- **@Outdoor unit power supply**
- ®Earth leakage breaker
- ©Wiring circuit breaker or isolating switch
- ©Indoor unit / outdoor unit connecting cords ©Wired remote controller(option)

■ Wall mounted, PKA-M·KA, PKA-M·KAL series:

- 1. Remove the electrical box covers (front and side).
- Terminal block attachment hole
- 2. Attach terminal block ${\ensuremath{\, \textcircled{1}}}$ using screw ${\ensuremath{\, \textcircled{2}}}$ in the direction shown in the figure.

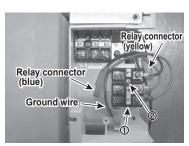

Change the relay connectors of blue and yellow lead wires, secure the ground wire using screw
 at the position shown in the figure, and then bundle the lead wires using fastener
 .

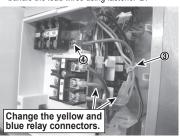

3. Electric wiring


Be sure to do the electric wiring following the steps in each indoor unit installation manual.

4. Paste the labels enveloped in the instruction document of indoor unit near the electric wiring diagrams of both indoor and outdoor units.

Three types of labels (labels A-C) are provided: Paste the label B. (Separate indoor unit/outdoor unit power supplies... Label B)


5. DIP switch settings of the outdoor unit control board

It is necessary to change the settings of DIP switch on the outdoor unit control board.

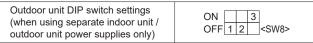


6. Test run

Perform a test run following the steps in the installation manual of the outdoor unit.

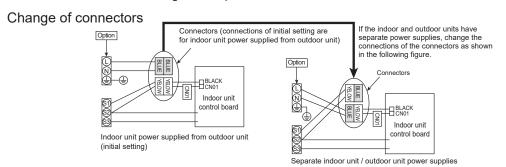

Photo

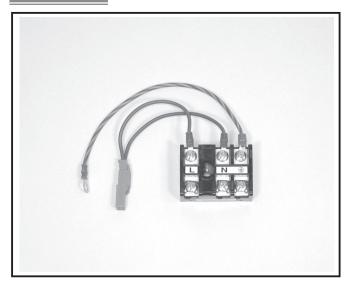

Descriptions

This kit (L/N/Earth) is used when the power supply of the indoor unit and the outdoor unit is separated. (For PUHZ applications only)

Applicable Models


- PSA-M***KA series
- PCA-M***KA series

Specifications


Terminal block capacity	30A/330V		
Terminal block material	Denatured melamine		
Parts composition	Terminal block (with lead wires connected) x 1, Screw x 1, Fastener (for binding lead wires)		

Dimensions

Unit: mm

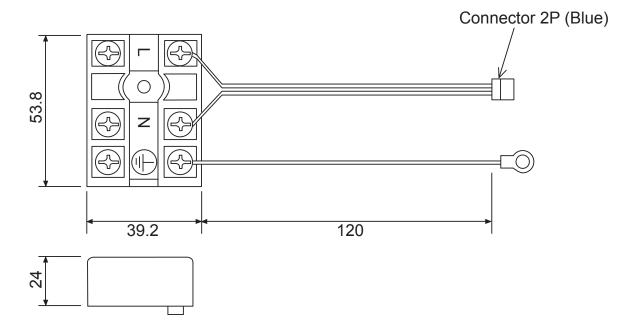

Photo

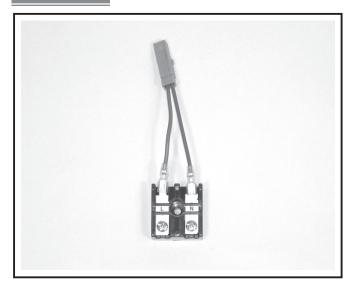

Descriptions

Applicable Models


- PCA-M71HA type■ PEAD-M JA series■ PEAD-M JAL series

Specifications

Terminal block capacity		15A/264V		
	Terminal block material	Denatured melamine		
	,	Terminal block (with lead wires connected) x 1, Screw x 1, Fastener (for binding lead wires)		

Dimensions

Unit: mm

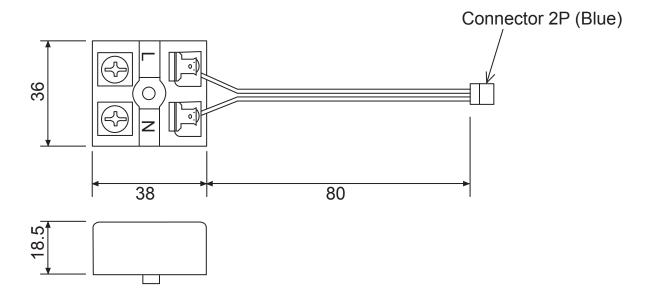

How to Use / How to Insta


1. Overview

This kit is used when the power supply of the indoor unit and the outdoor unit is separated. (for PUHZ applications only)

Refer to the installation manual of the indoor unit as well.


2. Provided parts

Comfirm the following parts are included

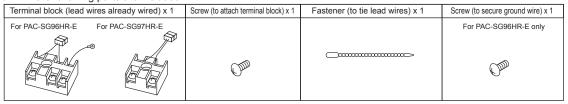

1:1 System

- <For models without heater
- The indoor power supply terminal kit is required.

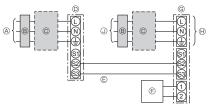


- @Outdoor unit power supply
- ®Earth leakage breaker
- ©Wiring circuit breaker or isolating switch
- Outdoor unit
- ©Indoor unit / outdoor unit connecting cords
- ®Remote controller
- ©Indoor unit
- ⊕Option
- Indoor unit power supply

•Affix a label B that is included with the manuals near each wiring diagram for the indoor and outdoor units.

Simultaneous twin/triple/four system

- <For models without heater>
- •The indoor power supply terminal kits are required.

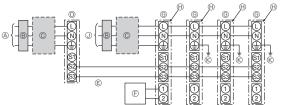

- •Affix a label B that is included with the manuals near each wiring diagram for the indoor and outdoor units.
- ©Wiring circuit breaker or isolating switch
- @Outdoor unit
- ©Indoor unit / outdoor unit connecting cords
- ®Remote controller
- @Indoor unit
- ⊕Option
- Indoor unit power supply
- ⊗Indoor unit earth

3. Attachment method


■ PAC-SG96HR

Ceiling suspended, PCA-M·KA series


1.Remove the cover of electric parts box.



2. Attach terminal block ① using screw ② in the direction shown in the figure.

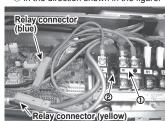


3. Change the relay connectors of blue and yellow lead wires, secure the ground wire using screw 4 at the position shown in the figure, and then bundle the lead wires using fastener ③

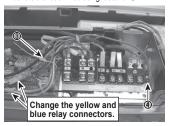


Ceiling suspended for kitchens, PCA-M71HA type:


1.Remove the terminal block cover of electric parts box.

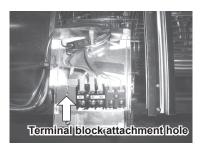

2. Attach terminal block $\mathbin{\textcircled{1}}$ using screw ② in the direction shown in the figure.

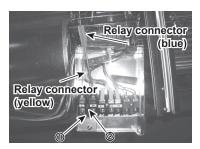


3. Change the relay connectors of blue and yellow lead wires, and then bundle the lead wires using fastener 3.

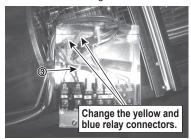


Ceiling concealed, PEAD-M·JA, PEAD-M·JAL series


1.Remove the cover of electric parts box.

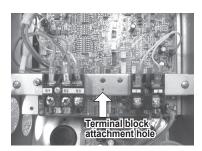

2. Attach terminal block ① using screw ② in the direction shown in the figure.

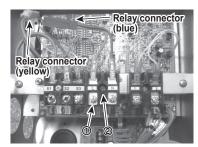

3. Change the relay connectors of blue and yellow lead wires.

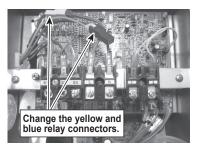


Be sure to do the electric wiring following the steps in each indoor unit installation manual.

5. Paste the labels enveloped in the instruction document of indoor unit near the electric wiring diagrams of both indoor and outdoor units.

Three types of labels (labels A-C) are provided: Paste the label B. (Separate indoor unit/outdoor unit power supplies... Label B)

6. DIP switch settings of the outdoor unit control board


It is necessary to change the settings of DIP switch on the outdoor unit control board.

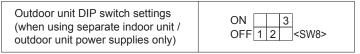


7. Test run

Perform a test run following the steps in the installation manual of the outdoor unit.

Change of connectors (except PCA-M·KA series)

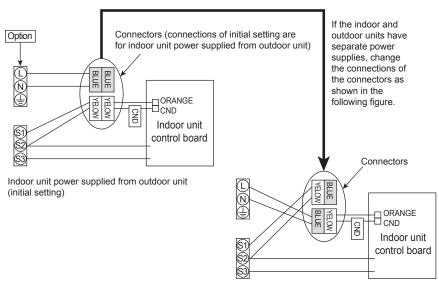


Separate indoor unit / outdoor unit power supplies

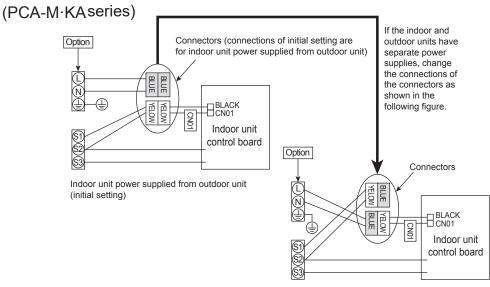

Separate indoor unit / outdoor unit power supplies



Figure

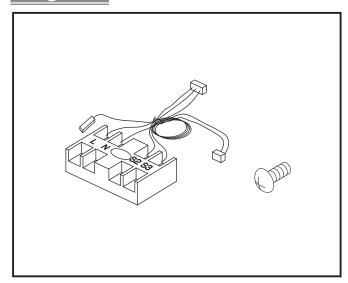

Descriptions

This kit is used when the power supply of the indoor unit and the outdoor unit is separated. (for PLA series applications only)

Applicable Models


- PLA-ZM · EA series
- PLA-M · EA series
- PLA-SM · EA series


Specifications

Terminal block capacity	5A/250V
Terminal block material	Denatured melamine

Dimensions

Unit: mm

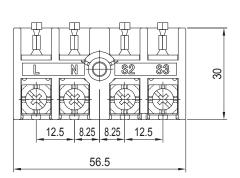

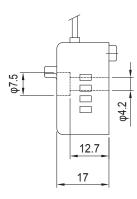


How to Use / How to Insta

1. Overview

This kit is used when the power supply of the indoor unit and the outdoor unit is separated. (For PUHZ/PUZ application only) Refer to the installation manual of the indoor unit as well

1:1 System


• The indoor power supply.

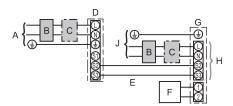

- A Outdoor unit power supply
- B Earth leakage breaker
- C Wiring circuit breaker or isolating switch
- D Outdoor unit
- E Indoor unit/outdoor unit connecting cables
- F Remote controller
- G Indoor unit
- H This terminal kit
- J Indoor unit power supply
- * Affix label B that is included with the manuals of indoor unit near each wiring diagram for the indoor and outdoor units.

Simultaneous twin/triple/quadruple system

• The indoor power supply.

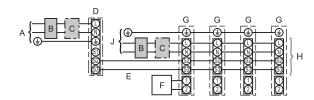


- A Outdoor unit power supply
- B Earth leakage breaker
- C Wiring circuit breaker or isolating switch
- D Outdoor unit
- E Indoor unit/outdoor unit connecting cables
- F Remote controller
- G Indoor unit
- H This terminal kit
- J Indoor unit power supply
- * Affix label B that is included with the manuals of indoor unit near each wiring diagram for the indoor and outdoor units.

Some units cannot be used in a simultaneous twin/triple/quadruple system. Refer to the outdoor unit installation manual for details.

2. Provided parts


Confirm the following parts are included.

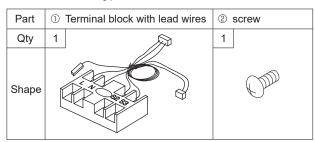



3. Installation procedure

Note: Please refer to the electrical work section in the indoor unit's installation manual for how to remove the electrical box cover.


- (1) Remove the electrical box cover.
- (2) Remove the 1 screw and disconnect the connector CN01 (black) and CN3C (blue), and the tab terminal; then remove the terminal block.
- (3) Secure the terminal block ① to the terminal block attachment position using the 1 screw ② in the direction as shown in the figure, then connect the connector CN01 (black) and CN3C (blue), and the tab terminal.

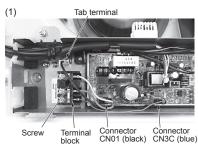

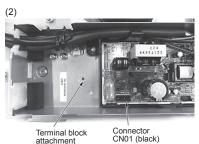


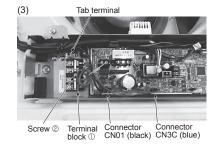

<Attachment method details>

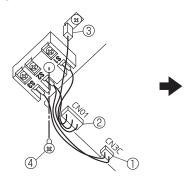

- ① Disconnect connector CN3C (blue) from the indoor controller board.
- ② Disconnect connector CN01 (black) from the indoor controller board.
- ③ Disconnect the tab terminal.
- 4 Remove the screw from the terminal block.

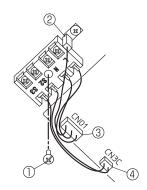

Install the optional Power supply terminal kit.

- ① Secure the terminal block with the screw.
- ② Insert the tab terminal.
- ③ Connect connector CN01 (black) to the indoor controller board.
- ④ Connect connector CN3C (blue) to the indoor controller board.

4. Electric wiring

Be sure to do the electric wiring according to the indoor unit installation manual.

Affix the labels enclosed with the manual of indoor unit near the electric wiring diagrams of both indoor and outdoor units.

Three types of labels (labels A-C) are provided: Affix the label B. (Separate indoor unit/outdoor unit power supplies... Label B)

6. DIP switch settings of the outdoor unit control board

It is necessary to change the settings of DIP switch on the outdoor unit control board.

Outdoor unit DIP switch settings (when using separate indoor unit/ outdoor unit power supplies only) SW8-3:ON

ON 3 OFF 1 2 <SW8>

7. Test run

Perform a test run according to the installation manuals of the indoor and outdoor units.

Photo



Descriptions

Advanced MA remote controller with the large size dot liquid crystal display. Multi-language display and weekly timer function are available.

Applicable Models


- MSZ-RW25,35,50VG*1
- MSZ-LN18,25,35,50,60VG2(W)(V)(R) (B)*1
- MSZ-FT25,35,50VG*1
- MSZ-AP15,20,25,35,42,50,60,71VG*1
- MSZ-EF18,22,25,35,42,50VG(W)(B)(S)*1
- MSZ-BT20,25,35,50VG*1
- MSZ-HR25,35,42,50,60,71VF*1
- MSZ-DW25,35,42,50VF*1
- MSY-TP35,50VF*1
- MSZ-FH25,35,50VE2*1
- MSZ-SF15,20VA*1
- MSZ-SF25,35,42,50VE3*1
- MSZ-GF60,71VE2*1
- MSZ-WN25,35VA*1
- MSZ-DM25,35VA*1
- MFZ-KT25,35,50,60VG*1
- MFZ-KW25,35,50,60VG*1
- MLZ-KP25,35,50VF*¹
- P-series models *2 (except for PSA-M KA)
- SLZ-M FA2 series
- SEZ-M DA2 series
- *1 Either MAC-334IF-E or MAC-497IF-E is required.
- *2 Remote controller terminal block kit "PAC-SH29TC-E" is required for PKA-M*LAL2 KAL2.

Specifications


Product size	120(W) × 120(H) × 14.5(D)mm (4 3/4 × 4 3/4 × 37/64 [in])		
Net weight	0.25kg (35/64lbs)		
Rated power supply voltage	12V DC (supplied from indoor units)		
Power consumption	0.3W		
Hanna amainamana	Temperature	0 - 40° C (32 - 104° F)	
Usage environment	Humidity	25 - 90%RH (with no dew condensation)	
	Panel	PMMA	
Material	Main body	ABS	
Sound Pressure Level	The A-weighted sound pressure level is below 70dB		

Dimensions

Unit : mm

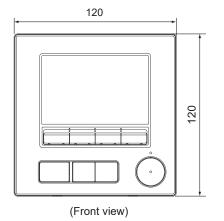



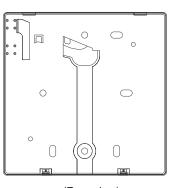

OPTIONAL PARTS

(Rear view)


How to Use / How to Install

2 Component names and supplied parts

The following parts are included in the box.

Parts name		Appearance
Remote controller (top case)	1	Right figure *1
Remote controller (bottom case)	1	Right figure *2
Roundhead cross slot screws M4×30	2	*3
Wood screw 4.1×16 (for direct wall installation)		*3
Simple Manual	2	



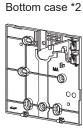

3 Field-supplied parts/Required tools

(1) Field-supplied parts

The following parts are field-supplied parts.

Parts name	Qty.	Notes
Double switch box or 86type switch box	1	Not required for direct wall installation
Thin metal conduit	Necessary	
Lock nut and bushing	Necessary	
Cable cover	Necessary	Required for routing remote controller cable along a wall
Putty	Reasonable	
Molly anchor	Necessary	
Remote controller cable (Use a 0.3 mm² (AWG22) 2-core sheathed cable.)	Necessary	

(2) Field-supplied tools

- Flat-tip screwdriver (Width: 3 5 mm (1/8 13/64 inch))
- Nipper
- Miscellaneous tools

5 How To Install

This remote controller is for the wall installation. It can be installed either in the switch box or directly on the wall. When performing direct wall installation, wires can be thread through either back or top of the remote controller.

(1) Selecting an installation site

Install the remote controller (switch box) on the site where the following conditions are met.

- (a) For connection to the indoor unit with an Auto descending panel, a place where people can check the Auto descending panel operation of the indoor unit while they are operating the remote controller (Refer to the indoor unit Instructions Book for how to operate Auto descending panel.)
- (b) A flat surface
- (c) A place where the remote controller can measure the accurate indoor temperature Sensors to monitor indoor temperature are on the indoor unit and on the remote controller. When the room temperature is monitored with the sensor on the remote controller, the built-in sensor on the remote controller monitors the room temperature. When using the sensor on the remote controller, follow the instructions below.
 - To monitor the accurate indoor temperature, install the remote controller away from direct sunlight, heat sources, and the supply air outlet of the air conditioner.

^{*3} ISO metric screw thread

^{*4} Remote controller cable is not included.

- Install the remote controller in a location that allows the sensor to measure the representative room temperature.
- Install the remote controller where no wires are routed around the temperature sensor on the controller. (If wires are routed, the sensor cannot measure accurate indoor temperature.)

Important

■ Discrepancy between the indoor temperature measured at the wall and the actual indoor temperature may occur.

If the following conditions are met, the use of the temperature sensor on the indoor unit is recommended.

- Supply air does not reach to the wall easily where the remote controller is installed due to improper airflow distribution.
- There is a great discrepancy between the wall temperature and the actual indoor temperature.
- The back side of the wall is directly exposed to the outside air.

Note: When temperature changes rapidly, the temperature may not be detected accurately.

Do not install the controller in a place where the difference between the remote controller surface temperature and the actual room temperature will be great.

If the temperature difference is too high, room temperature may not be adequately controlled

To reduce the risk of malfunctions, do not install the controller in a place where water or oil may come into contact with the controller, or in a condensing or corrosive environments.

To avoid deformation and malfunction, do not install the remote controller in direct sunlight or where the ambient temperature may exceed 40°C (104°F) or drop below 0°C (32°F).


To reduce the risk of malfunctions and damage to the controller, avoid installing the remote controller on an electrically conductive surface, such as an unpainted metal sheet.

Refer to either of the following manuals for temperature sensor setting: indoor unit Installation Manual for CITY MULTI; this manual for Mr. SLIM.

(2) Installation space

Leave a space around the remote controller as shown in the figure shown below, regardless of whether the controller is installed in the switch box or directly on the wall. Removing the remote controller will not be easy with insufficient space.


Also, leave an operating space in front of the remote controller.

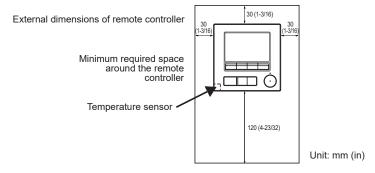

(3) Installation work

Controller can be installed either in the switch box or directly on the wall. Perform the installation properly according to the installation method.

- 1) Drill a hole in the wall.
 - Installation using a switch box
 - Drill a hole in the wall, and install the switch box on the wall.
 - Connect the switch box to the conduit tube.
 - Direct wall installation
 - Drill a hole in the wall, and thread the cable through it.

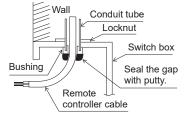




TINIT

- Installation using a switch box
 - Seal the remote controller cable access hole at the connection of switch box and conduit tube with putty.


To reduce the risk of electric shock, malfunctions, or fire, seal the gap between the cables and cable access holes with putty.


3 Prepare the bottom case of the remote controller.

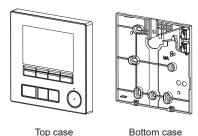

4 Connect the remote controller cable to the terminal block on the bottom case.

Peel off the remote controller cable sheath as shown below to connect to the terminal block properly. Secure the remote controller cable so that the peeled part of the cable will fit into the case.

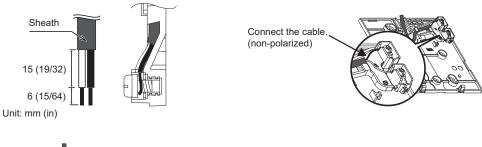

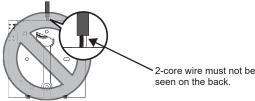

■ Direct wall installation


· Seal the hole through which the cable is threaded with putty.

To reduce the risk of electric shock, shorting, or malfunctions, keep wire pieces and sheath shavings out of the terminal block.

Important

Do not use solderless terminals to connect cables to the terminal block.

Solderless terminals may come in contact with the circuit board and cause malfunctions or damage the controller cover.

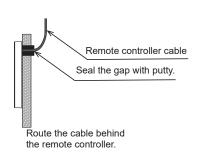


5 Install the bottom case.

- Installation using a switch box
 - · Secure at least two corners of the switch box with screws.
- Direct wall installation
 - · Thread the cable through the groove.
 - · Secure at least two corners of the remote controller with screws.
 - Be sure to secure top-left and bottom-right corners of the remote controller (viewed from the front) to prevent it from lifting. (Use molly anchor etc.)

■ Installation using a switch box

Seal the c

■ Direct wall installation

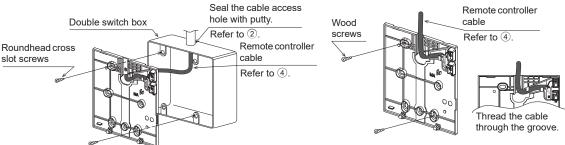


Important

To avoid damage to the controller, do not overtighten the screws. (Recommended torque: 0.2 to 0.3 N•m)

To avoid damage to the controller, do not make holes on the controller cover.

6 Cut out the cable access hole.

- Direct wall installation (when running the cable along the wall)
 - Cut out the thin-wall part on the cover (the shaded area in the right figure) with a nipper.

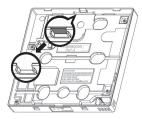



Notice

Note that accidentally touching the circuit board may damage the circuit board when cutting out a cable access hole.

7 Connect the connector to the top case.

Connect the connector on the bottom case to the socket on the top case.

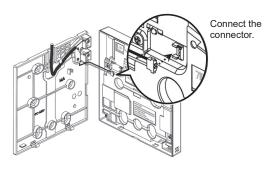

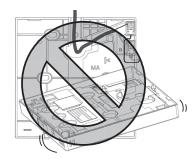

Important

To prevent malfunctions, do not remove the protective sheet or the circuit board from the top case.

To prevent cable breakage and malfunctions, do not hang the top controller casing hang by the cable as shown in the figure above.

8 Install the top case on the bottom case.


Two mounting tabs are at the top of the top case.

Hook those two tabs onto the bottom case, and click the top case into place. Check that the case is securely installed and not lifted.


Important

When attaching the top casing to the bottom casing, push it until it they click into place. If they are not properly locked into place, they may fall, causing personal injury, controller damage, or malfunctions.



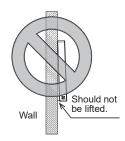


- Direct wall installation (when running the cable along the wall)
 - Thread the cable through the access hole at the top of the remote controller.
 - Seal the cut-out part of the cover with putty.
 - Use a cable cover.

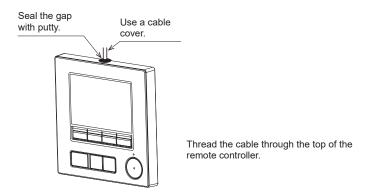

· Uninstalling the top case

1 Uninstalling the top case

Insert a flat-tip screwdriver with a blade width of 3-5 mm (1/8-13/64 inch) into the latches at the bottom of the remote controller and lift the latches. Then, pull up the top case.

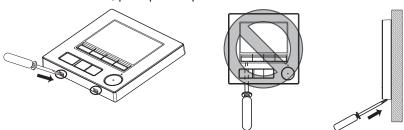

■ At the time of factory shipment, protective sheet is on the operation interface of the front cover. Peel off the protective sheet on the operation interface prior to use.

Important

To prevent damage to the controller casing, do not force the flat-tip screwdriver to turn with its tip inserted in the slot.

Do not insert the flat-tip screwdriver too far. Doing so will damage the circuit board.

To prevent damage to the controller casing, use a flat-head screwdriver with a blade width of 3-5 mm (1/8-13/64 inch).

2 Disconnect the cable from the connector.

Hold the connector end of the cable, and pull it upward and out of the connector.

6. Important

Discrepancy between the indoor temperature measured at the wall and the actual indoor temperature may occur.


If the following conditions are met, the use of the temperature sensor on the indoor unit is recommended.

- Supply air does not reach to the wall easily where the remote controller is installed due to improper airflow distribution.
- There is a great discrepancy between the wall temperature and the actual indoor temperature.
- The back side of the wall is directly exposed to the outside air.

Note: When temperature changes rapidly, the temperature may not be detected accurately.

INDOOR UNIT

6 Remote controller button functions

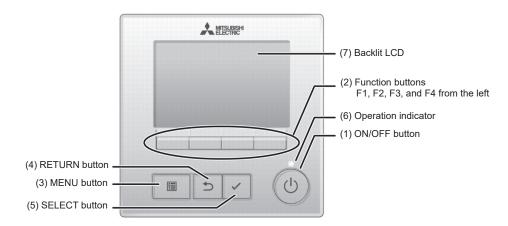

(1) ON/OFF button

Use to turn ON/OFF the indoor unit.

(2) Function buttons

Use to select the operation mode or to set the temperature and fan speed on the Main display. Use to select items on other screens.

(3) MENU button

Use to bring up the Main menu.

(4) RETURN button

Use to return to the previous screen.

(5) SELECT button

Use to jump to the setting screen or to save the settings.

(6) Operation indicator

Stays lit during normal operation. Blinks during startup and when an error occurs.

(7) Backlit LCD

Dot display. When the backlight is off, pressing any button turns the backlight on and it will stay lit for a certain period of time depending on the screen. Performing any button operation keeps the backlight on.

Note: When the backlight is off, pressing any button turns the backlight on and does not perform its function. (except for the ON/OFF button)


Pressing the MENU button will bring up the Main menu as shown below.

Operation menu *1 Timer menu *1 Energy saving menu *1 Initial setting menu *2*3 Maintenance menu *1 Service menu *2*3

- *1 Refer to the Instructions Book for details.
- *2 Explained in this manual.
- *3 If no buttons are pressed for 10 minutes on the initial setting screens, or 2 hours on the service screens (10 minutes on some screens), the screen will automatically return to the Main display. Any settings that have not been saved will be lost.

The available items on the menu depend on the connected indoor unit model. For items not described in the manuals that are enclosed with the MA Remote Controller, refer to the manuals that came with the air conditioning units.

Button operations on the Main menu

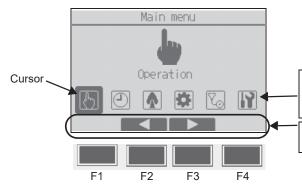

Move the cursor to the desired function with the F2 and F3 buttons, and press the SELECT button to go to the next page. Password may be required.

Button function guide will appear at the bottom of the screens

OPTIONAL PARTS Make sure that the MA remote controller is properly installed according to the instructions in the Installation Manual and that the indoor and outdoor unit installation has been completed before turning on the power.

(1) When the power is turned on, the following screen will appear.



Note: When the power is on for the first time, the Language selection screen will be displayed. Refer to section 9 (5) under "Display setting menu". Select a desired language. The system will not start-up without language selection.


Normal start up (indicating the percentage of process completion)

(2) Main display

After the successful startup, the Main display will appear. The Main display can be displayed in two different modes: "Full" and "Basic." Refer to section 9 "Initial settings" for how to select the display mode. (The factory setting is "Full.")



Main display in the Full mode (while the unit is not in operation)

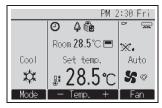

Main display in the Full mode (while the unit is in operation)

Note: Refer to the Instruction Book for the icons on the display.

8 Test run

Note: Maintenance password is required.

- (1) Read the section about Test run in the indoor unit Installation Manual before performing a test run.
- (2) At the Main display, press the MENU button and select Service>Test run>Test run.
- (3) Press the ON/OFF button to cancel the test run if necessary.
- (4) Refer to the indoor unit Installation Manual for the detailed information about test run and for how to handle the errors that occur during a test run.

Note: Refer to section 10 "Service menu" for information about the maintenance password.

9 Initial settings (Remote controller settings)

Note: Administrator password is required.

From the Main display, select Main menu>Initial setting, and make the remote controller settings on the screen that appears.



Basic setting menu

- Main/Sub
- Clock
- Daylight saving time
- · Administrator password

Display setting menu

- Main display
- Remote controller display details setting
- Contrast•Brightness
- Language selection

Operation setting menu

Auto mode

Wi-Fi interface setting

Note: The initial administrator password is "0000." Refer to section (4) "Administrator password setting" for how to change the password.

OPTIONAL PARTS

[Button operation]

- ① When the F3 or F4 button is pressed, the currently selected setting will appear highlighted. Select "Sub", and press the SELECT button to save the change.
- 2 Press the MENU button to return to the Main menu screen. (This button always brings up the Main menu screen.)



(2) Clock setting

[Button operation]

- 1) Move the cursor with the F1 or F2 button to the desired item.
- (2) Change the date and time with the F3 or F4 button, and press the SELECT button to save the change. The change will be reflected on the clock display on the Status display and the Main display.

Note: Clock setting is necessary for time display, weekly timer, timer setting and error history. Make sure to perform clock setting when the unit is used for the first time or has not used for a long time.

Note: If a given system has no system controllers, the clock time will not automatically be corrected. In this case, periodically correct the clock time.



(3) Daylight saving time

The start/end time for daylight saving time can be set. The daylight saving time function will be activated based on the setting contents.

- If a given system has a system controller, disable this setting to keep the correct time.
- At the beginning and the end of daylight saving time, the timer may go into action twice or not at all.
- · This function will not work unless the clock has been set.

[Button operation]

- 1 The daylight saving time function can be activated/deactivated or the start/end times can be set by using the F1 through F4 buttons.
 - DST

Select "Yes" to activate the daylight saving time, or select "No" to deactivate.

Date(Start)

Set the start day of the week, week number, and month for daylight saving time.

Start time

Set the start time for daylight saving time.

Forward to

Set the time when the clock is to be set forward to at the start time above.

Date(End) (2nd page)

Set the end day of the week, week number, and month for daylight saving time.

• End time (2nd page)

Set the end time for daylight saving time.

Backward to (2nd page)

Set the time when the clock is to be set backward to at the end time above.

2 Press the SELECT button to save the setting.

* If "5th" is selected for the week number and the 5th week does not exist in the selected month of the year, the setting is considered to be "4th."





[Button operation]

- ① A window to enter a new password will appear. Enter a new password, and press the SELECT button.
- Press the F4 button (OK) on the password change confirmation screen to save the change. Press the F3 button (Cancel) to cancel the change.

Note: The initial administrator password is "0000." Change the default password as necessary to prevent unauthorized access. Have the password available for those who need it.

Note: If you forget your administrator password, you can initialize the password to the default password "0000" by pressing and holding the F1 button for ten seconds on the administrator password setting screen.

Note: The administrator password is required to make the settings for the following items.

- · Timer setting · Weekly timer setting · Energy-save setting
- · Outdoor unit silent mode setting · Restriction setting
- · Night setback setting · Initial setting

Refer to the Instruction Book that came with the remote controller for the detailed information about how to make the settings for these items.







Display setting menu

(1) Main display setting

[Button operation]

Move the cursor to "Full/Basic," and use the F3 or F4 button to select the display mode "Full" or "Basic." (The factory setting is "Full.")

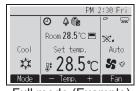

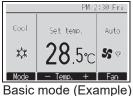



Full mode (Example)

te: This setting is only for the Main display. In the Basic mode, icons that indicate control status on timer and schedule settings will not appear on the display. Vane, louver, and ventilation settings or room temperature will not appear, either.

(2) Black and white inversion setting

Move the cursor to "B&W inversion" and use the F3 or F4 button to select the display mode "Yes" or "No." (The factory setting is "No.") Selecting "Yes" will invert the colors of the display, turning white background to black and black characters to white as shown at right.



(3) Remote controller display details setting

Make the settings for the remote-controller-related items as necessary. Press the SELECT button to save the changes.



[Button operation]

- 1) Select "Clock" from the display details setting screen, and press the F4 button (Change) to bring up the clock display setting screen.
- 2 Use the F1 through F4 buttons to select "Yes" (display) or "No" (nondisplay) and its format for the Status display and the Main display.
- 3 Save the settings with the SELECT button. (The factory settings are "Yes" (display) and "24 h" format.)



Clock display: Yes (Time is displayed on the Status display and the Main display.) No (Time is not displayed on the Status display and the Main display.)

Display format: 24-hour format

12-hour format

AM/PM display (Effective when the display format is 12-hour): AM/PM before the time AM/PM after the time

Note: Time display format will also be reflected on the timer and schedule setting display. The time is displayed as shown below.

12-hour format: AM12:00 ~ AM1:00 ~ PM12:00 ~ PM1:00 ~ PM11:59 12:00 ~ 24-hour format: 0:00 ~ 1:00 ~ 13:00 ~

[2] Temperature unit setting

[Button operation]

Move the cursor to "Temperature" from the display details setting screen, and select the desired temperature unit with the F3 or F4 button. (The factory setting is Centigrade (°C).)

- °C: Temperature is displayed in Centigrade. Temperature is displayed in 0.5- or 1-degree increments, depending on the model of indoor units.
- °F: Temperature is displayed in Fahrenheit.
- 1 °C: Temperature is displayed in Centigrade in 1-degree increments.



[3] Room temperature display

[Button operation]

Move the cursor to "Room temp." on the display details setting screen, and select the desired setting with the F3 or F4 button.

(The factory setting is "Yes".)

- Yes: Room temperature appears on the Main display.
- No: Room temperature does not appear on the Main display.

Note: Even when "Yes" is set, the room temperature is not displayed on the Main display in the "Basic" mode.

[4] Auto (single set point) mode display setting

[Button operation]

Move the cursor to "Auto mode" from the display details setting screen, and select the desired mode with the F3 or F4 button. (The factory setting is "Yes.")

- Yes: "Auto Cool" or "Auto Heat" is displayed during operation in the Auto (single set point) mode.
- No: Only "Auto" is displayed during operation in the Auto (single set point) mode.

The backlight lighting-up time can be set.

[Button operation]

Move the cursor to "Backlight" from the display details setting screen, and select the desired time (5/10/20/30/60 seconds) with the F4 button. (The factory setting is "30" seconds.)

Note: This setting is effective on the Status display and the Main display.

[6] LED lighting

The LED lighting can be set to either "Yes" (On) or "No" (Off). (The factory setting is "Yes".)

When "No" is selected, the LED will not light up even during the normal operation.




(4) Contrast Brightness

[Button operation]

Select the desired brightness for the remote controller LCD with the F1 and F2 buttons.

Adjust the contrast with the F3 or F4 button. The current level is indicated with a triangle.

Note: Adjust the contrast and brightness to improve viewing in different lighting conditions or installation locations. This setting can not improve viewing from all directions.

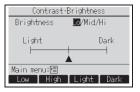


(5) Language selection

[Button operation]

Move the cursor to the language you desire with the F1 through F4 buttons.

Press the SELECT button to save the setting.



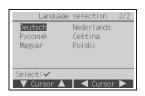

OPTIONAL PARTS

INDOOR UNIT

Note: Maintenance password is required.

At the Main display, press the MENU button and select "Service" to make the maintenance settings.

When the Service menu is selected, a window will appear asking for the password.

To enter the current maintenance password (4 numerical digits), move the cursor to the digit you want to change with the F1 or F2 button, and set each number (0 through 9) with the F3 or F4 button. Then, press the SELECT button.

Note: The initial maintenance password is "9999." Change the default password as necessary to prevent unauthorized access. Have the password available for those who need it.

Note: If you forget your maintenance password, you can initialize the password to the default password "9999" by pressing and holding the F1 button for ten seconds on the maintenance password setting screen.

Note: Air conditioning units may need to be stopped to make certain settings. There may be some settings that cannot be made when the system is centrally controlled.





(1) Test run (CITY MULTI and Mr. SLIM)

Select "Test run" from the Service menu to bring up the Test run menu.

- Test run: Select this option to perform a test run.
- Drain pump test run: Select this option to perform a test run on the drain pump on the indoor unit.

Applicable only to the type of indoor units that support the test run function.

Note: Refer to the indoor unit Installation Manual for the detailed information about test run.



(2) Collecting the model names and serial numbers (Mr. SLIM only)


The model names and the serial numbers of the indoor and outdoor units can be imported into the remote controller.

[Button operation]


Select "Input maintenance info." from the Service menu to bring up the Maintenance information screen.



Select "Collect model names and S/N".

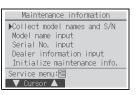


The model name will be displayed on the remote controller after the model names and the serial numbers have been collected. Press the F4 button to switch the display between the model name and the serial number.

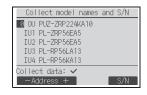

Note

- The model names and serial numbers cannot be collected immediately after the power is turned on. Wait for approximately 10 minutes until the remote controller is ready to collect data.
- · It may take more than 10 minutes when certain functions are selected or when an error occurs.
- · It may take approximately one minute for the remote controller to collect data.
- · This function may not be available on some indoor units. Refer to the catalog for details

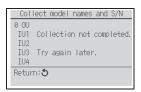

Data cannot be collected for approximately 10 minutes after the power is turned on.

(3) Input maintenance information (CITY MULTI and Mr. SLIM)

Select "Input maintenance info." from the Service menu to bring up the Maintenance information screen. Refer to the indoor unit Installation Manual for how to make the settings.

Note: The following settings can be made from the Maintenance information screen.

·Registering model names and serial numbers

Enter the model names and serial numbers of outdoor and indoor units. The information entered will appear on the Error information screen.

Model names can have up to 25 characters, and the serial numbers can have up to 15 characters.

Registering dealer information

Enter phone number of a dealer. The entered information will appear on the Error information screen. Phone number can have up to 13 characters.

·Initializing maintenance information

Select the desired item to initialize the model name, serial number, and dealer information settings.



(4) Function setting (CITY MULTI)

Make the settings for the indoor unit functions via the remote controller as necessary.

Select "Function setting" from the Settings menu to bring up the Function setting screen.



[Button operation]

1 The Function setting screen will appear.

Press the F1 or F2 button to move the cursor to one of the following: M-NET address, function setting number, or setting value. Then, press the F3 or F4 button to change the settings to the desired settings.


② Once the settings have been completed, press the SELECT button. A screen will appear that indicates that the settings information is being sent.

To check the current settings of a given unit, enter the setting for its M-NET address and function setting number, select Conf for the Function, and press the SELECT button.

A screen will appear that indicates that the settings are being searched for. When the search is done, the current settings will appear.

When the settings information has been sent, a screen will appear that indicates its completion.

To make additional settings, press the RETURN button to return to the screen shown in Step ② above. Set the function numbers for other indoor units by following the same steps.

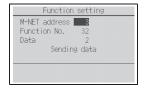



Note

- Refer to the indoor unit Installation Manual for information about the factory settings of indoor units, function setting numbers, and setting values.
- Be sure to write down the settings for all functions if any of the initial settings has been changed after the completion of installation work.


Make the settings for the indoor unit functions via the remote controller as necessary.

Select "Function setting" from the Settings menu to bring up the Function setting screen.



[Button operation]

- ① Set the indoor unit refrigerant addresses and unit numbers with the F1 through F4 buttons, and then press the SELECT button to confirm the current setting.
- When data collection from the indoor units is completed, the current settings appears highlighted. Non-highlighted items indicate that no function settings are made. Screen appearance varies depending on the "Unit No." setting.

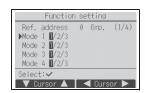

Common items

The display format and the setting method vary with indoor units. Pattern 1

3 Use the F1 or F2 button to move the cursor to select the mode number, and change the setting number with the F3 or F4 button.



Individual items (Unit No. 1 through 4)


- When the settings are completed, press the SELECT button to send the setting data from the remote controller to the indoor units.
- (5) When the transmission is successfully completed, the screen will return to the Function setting screen.



Pattern 2

- 3 Toggle through the pages with the F3 or F4 button.
- Select the mode number with the F1 or F2 button, and then press the SELECT button.
- Select the setting number with the F1 or F2 button. Setting range for modes 1 through 28: 1 through 3 Setting range for modes 31 through 66: 1 through 15
- When the settings are completed, press the SELECT button to send the setting data from the remote controller to the indoor units.
- When the transmission is successfully completed, the screen will return to the Function setting screen.



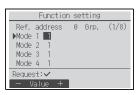

Note:

- · Make the function settings shown in Table 1 on Mr. SLIM units as necessary.
- · Refer to the Instructions Book when it is necessary to set the settings for CITY MULTI units.
- Table 1 summarizes the setting options for each mode number. Refer to the indoor unit Installation Manual for the detailed information about initial settings, mode numbers, and setting numbers for the indoor units.
- Be sure to write down the settings for all functions if any of the initial settings has been changed after the completion of installation work.

PARTS

Mode No.	Mode	Settings	Setting No.	Unit numbers	
01	Automatic recovery after	Disable	1	Set "Grp." for the Unit number.	
	power failure	Enable (Four minutes of standby time is required after the restoration of power.)	2	These settings apply to all the connected indoor units.	
02	Thermistor selection (indoor temperature	indoor units in operation			
	detection)	Thermistor on the indoor unit to which the remote controller is connected (fixed)	2		
		Built-in sensor on the remote controller	3		
03	LOSSNAY connection	Not connected	1		
		Connected (without outdoor air intake by the indoor units)	2		
		Connected (with outdoor air intake by the indoor units)	3		
04	Power voltage	240 V	1		
		220 V, 230 V	2		
05	Auto mode	Enable (Automatically the unit achieves effective energy saving operation.)	1		
		Disable	2		
07	Filter sign	100 hours	1	Set "1, 2, 3, 4, or All" for the Unit	
		2500 hours	2	number.	
		Not displayed	3	These settings apply to each indoor	
08	Fan speed	Silent mode (or standard)	1	unit. If "1, 2, 3, or 4" is set for the Unit	
	·	Standard (or High ceiling 1)	2	number, the settings apply only to	
		High ceiling (or High ceiling 2)	3	the specified indoor unit regardless	
09	Outlet	4 directional	1	of the number of connected indoor	
		3 directional	2	units (one through four units). 'If "All" is set for the Unit number, the	
		2 directional	3	settings apply to all the connected	
10	Optional parts	No	1	indoor units regardless of the	
	(High-efficiency filter)	Yes	2	number of connected indoor units	
11	Vane	No vanes (or the vane setting No.3 is effective.)	1	(one through four units).	
		Equipped with vanes (The vane setting No.1 is effective.)	2		
		Equipped with vanes (The vane setting No.2 is effective.)	3		

(6) LOSSNAY setting (CITY MULTI only)

This setting is required only when the operation of CITY MULTI units is interlocked with LOSSNAY units. This setting is not available for the Mr. SLIM units. Interlock settings can be made for the indoor unit to which the remote controller is connected. (They can also be confirmed or deleted.)

Note:

- · Use the centralized controller to make the settings if it is connected.
- · To interlock the operation of the indoor units with the LOSSNAY units, be sure to interlock the addresses of ALL indoor units in the group and that of the LOSSNAY unit.

[Button operation]

① When "Lossnay" on the Settings menu is selected, the remote controller will automatically begin searching for the registered LOSSNAY addresses of the currently connected indoor unit.




OPTIONAL PARTS ② When the search is completed, the smallest address of the indoor units that are connected to the remote controller and the address of the interlocked LOSSNAY unit will appear. "--" will appear if no LOSSNAY unit is interlocked with the indoor units. If no settings need to be made, press the RETURN button to go back to the Settings menu.



To make LOSSNAY interlock setting


3 Enter the addresses of the indoor unit and the LOSSNAY unit to be interlocked, with the F1 through F4 buttons, select "Set" in the "Function", and press the SELECT button to save the settings. "Sending data" will appear on the screen. If the setting is successfully completed, "Setting completed" will appear.

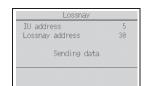



To search for the LOSSNAY address

(4) Enter the address of the indoor unit to which the remote controller is connected, select "Conf" in the "Function", and press the SELECT button. "Collecting data" will appear on the screen. If the signal is received correctly, the indoor unit address and LOSSNAY address will appear. "--" will appear when no LOSSNAY unit is found. "Unit not exist" will appear if no indoor units that are correspond to the entered address are found.

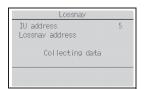



To delete the interlock setting

(5) To delete the interlocked setting between LOSSNAY unit and the indoor units to which the remote controller is connected, enter the indoor unit address and LOSSNAY address with the F1 through F4 buttons, select "Del." in the "Function", and press the SELECT button. "Deleting" will appear. The screen will return to the search result screen if the deletion is successfully completed. "Unit not exist" will appear if no indoor units that are correspond to the entered address are found. If deletion fails, "Request rejected" will appear on the screen.





Select "Check" on the Service menu to bring up the Check menu screen.

The type of menu that appears depends on the type of indoor units that are connected (CITY MULTI or Mr. SLIM).

<Mr. SLIM>



<CITY MULTI>



[Button operation]

1 Error history

Select "Error history" from the menu*1, and press the SELECT button to view up to 16 error history records. Four records are shown per page, and the top record on the first page indicates the latest error record. *1 Mr. SLIM: Error history menu; CITY MULTI: Check menu

[Deleting the error history]

To delete the error history on the screen that shows error history, press the F4 button (Delete). A confirmation screen will appear asking if you want to delete the error history.

Press the F4 button (OK) to delete the error history.

"Error history deleted" will appear on the screen. Press the RETURN button to go back to the menu*1.

*1 Mr. SLIM: Error history menu; CITY MULTI: Check menu




Error history Error history deleted Error history menu:

2 Preliminary error history (Mr. SLIM only)

The detected error signs can be maintained.

Select "Preliminary error hist." from the Error history menu, and press the SELECT button to view up to 32 preliminary error history records. Four records are shown per page, and the top record on the first page indicates the latest error record.

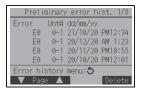



[Deleting the preliminary error history]

To delete the preliminary error history on the screen that shows preliminary error history, press the F4 button (Delete). A confirmation screen will appear asking if you want to delete the preliminary error history.

Press the F4 button (OK) to delete the preliminary error history.

"Preliminary error history deleted" will appear on the screen. Press the RETURN button to go back to the Error history menu.

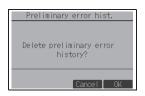

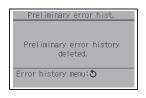

3 Other options in the Check menu (Mr. SLIM only)

The following options are also available on the Mr. SLIM units in the Check menu. Refer to the indoor unit Installation Manual for details.

- · Smooth maintenance
- · Request code



INDOOR UNIT

Error history of each unit can be checked via the remote controller. [Button operation]


- 1 Select "Self check" from the Diagnosis menu, <Mr. SLIM> and press the SELECT button to view the Self check screen.
- 2 With the F1 or F2 button, enter the refrigerant address (Mr. SLIM) or the M-NET address (CITY MULTI), and press the SELECT
- 3 Error code, unit number, attribute, and indoor unit demand signal ON/OFF status at the contact (CITY MULTI only) will appear. "-" will appear if no error history is available.



<CITY MULTI>



<Mr. SLIM>

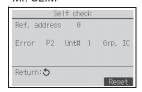

<CITY MULTI>







When there is no error history

[Resetting the error history]

1 Press the F4 button (Reset) on the screen that shows the error history. A confirmation screen will appear asking if you want to delete the error history.

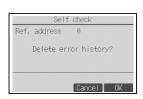

2 Press the F4 button (OK) to delete the error history. If deletion fails, "Request rejected" will appear, and "Unit not exist" will appear if no indoor units that are correspond to the entered address are found.

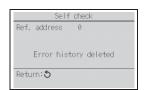

- ① Select "Maintenance password" on the Others menu, and press the SELECT button to bring up the screen to enter a new password.
- ② Move the cursor to the digit you want to change with the F1 or F2 button, and set each digit to the desired number (0 through 9) with the F3 or F4 button.
- 3 Press the SELECT button to save the new password.
- 4 A confirmation screen will appear asking if you want to change the maintenance password. Press the F4 button (OK) to save the change. Press the F3 button (Cancel) to cancel the change.
- 5 "Changes saved" will appear when the password is updated.
- 6 Press the MENU button to return to the Service menu or press the RETURN button to go back to the "Maintenance password" screen.







(10)Remote controller information

The following information of the remote controller in use can be checked.

- Model name
- · Software version
- · Serial number

[Button operation]

- 1 Select "Others" from the Service menu.
- 2 Select "Remote controller information".



Photo



Descriptions

New functions have been added to the CITY MULTI series that enable the setting of certain indoor unit functions (such as static pressure) from the remote controller. (For more detailed information, please contact your nearest sales office or distributor.)

Applicable Models


- MSZ-RW25,35,50VG*1
- MSZ-LN18,25,35,50,60VG2(W)(V)(R) (B)*1
- MSZ-FT25,35,50VG*¹
- MSZ-AP15,20,25,35,42,50,60,71VG*1
- MSZ-EF18,22,25,35,42,50VG(W)(B)(S)*1
- MSZ-BT20,25,35,50VG*¹
- MSZ-HR25,35,42,50,60,71VF*1
- MSZ-DW25,35,42,50VF*1
- MSY-TP35,50VF*1
- MSZ-FH25,35,50VE2*1
- MSZ-SF15,20VA*1
- MSZ-SF25,35,42,50VE3*1
- MSZ-GF60,71VE2*1
- MSZ-WN25,35VA*¹
- MSZ-DM25,35VA*¹
- MFZ-KT25,35,50,60VG*1
- MFZ-KW25,35,50,60VG*1
- MLZ-KP25,35,50VF*1
- P-series models *2 (except for PSA-M KA)
- SLZ-M FA2 series
- SEZ-M DA2 series
- *1 Either MAC-334IF-E or MAC-497IF-E is required.
- *2 Remote controller terminal block kit "PAC-SH29TC-E" is required for PKA-M*LAL2 KAL2.

Unit:mm[in.]

	Specifications
Product size	70 (W) × 120 (H) × 14.5 (D) mm (2-3/4 × 4-3/4 × 9/16 [in]) (not including the protruding part)
Net weight	0.1 kg (1/4 lb.)
Rated power supply voltage	12 VDC (supplied from indoor units)
Power consumption	0.3 W
Usage environment	Temperature 0 to 40°C (32 to104°F) Humidity 30 - 90%RH (with no dew condensation)
Material	PC + ABS

Dimensions

Specifications

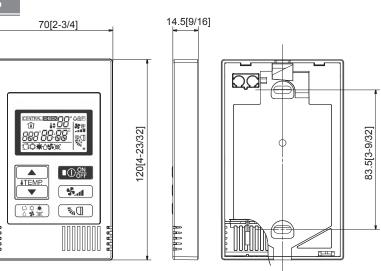


How to Use / How to Install

1 Component names and supplied parts

The following parts are included in the box.

Parts name	Qty.	Appearance
Remote controller (top case)	1	Right figure *1
Remote controller (bottom case)	1	Right figure *2
Roundhead cross slot screws M4×30	2	*3
Wood screw 4.1×16 (for direct wall installation)	2	*3
Installation Manual (this manual)	1	
Instruction Book	1	

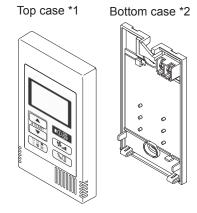


2 Field-supplied parts/Required tools

(1) Field-supplied parts

The following parts are field-supplied parts.

Parts name	Qty.	Notes
Single switch box	1	Not required for direct wall installation
Thin metal conduit	Necessary	
Lock nut and bushing	Necessary	
Cable cover	Necessary	Required for routing remote controller cable along a wall
Putty	Reasonable	
Molly anchor	Necessary	
Remote controller cable (Use a 0.3 mm² (AWG22) 2-core sheathed cable.)	Necessary	

Switch box

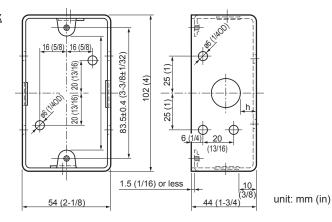

(2) Field-supplied tools

- Flat-tip screwdriver (Width: 3 5 mm (1/8 7/32 inch))
- Knife or Nipper
- Miscellaneous tools


^{*3} ISO metric screw thread

^{*4} Remote controller cable is not included.

The wiring is different when the remote controller is connected to a CITY MULTI control system ("-A" type and later) and when it is connected to a Mr. SLIM air conditioner (A control type). The wiring also differs with the system configuration. Check the system used.

1. Connecting to CITY MULTI control system

The numbers (1) to (4) in the figure correspond to items (1) to (4) in the following description.

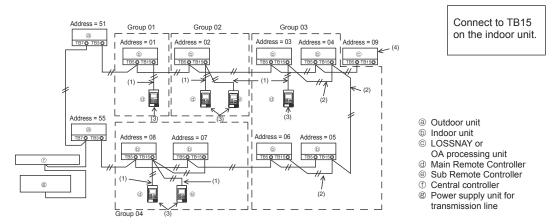

- (1) Wiring from the remote controller
 - Connect to the MA remote controller terminal block (TB15) on the indoor unit.
 - The terminal block has no polarity. Connect to the terminal block at the rear bottom of the remote controller.
- (2) Operating in a group (Groups 03, and 04 above)
 - Interconnect the MA remote controller terminal block (TB15) of the indoor units you want to operate as a group, and connect the MA remote controller to that point.
 - When the remote controller is used in combination with the system controller as shown in the figure above, group setting at the system controller (central controller in the figure above) is necessary.
- (3) Number of connectable remote controllers (groups 02 and 04)
 - A main remote controller and one sub remote controller, a total of two, can be connected to a group made up of indoor units.

NOTE: When using this Simple MA remote controller in combination with other MA remote controllers, be sure to follow the compatibility rules below.

Indoor unit function	Main remote controller	Sub remote controller	Compatibility
Models applicable for AUTO (dual set point) mode	This Simple MA remote controller	This Simple MA remote controller	Compatible, and AUTO (dual set point) mode can be used depending on the indoor units to be connected.
	Other MA remote controllers	This Simple MA remote controller	Compatible, but AUTO (dual set point) mode cannot be used.
	This Simple MA remote controller	Other MA remote controllers	Incompatible
Models not applicable for AUTO (dual set point) mode	Combination with al	l of the above	Compatible

- (4) To interlock to a LOSSNAY or OA processing unit, make the following settings using the remote controller. (For a description of how to set an interlock, see section 6 Ventilation Setting).) Set the LOSSNAY or OA processing unit address and the address of all the indoor units you want to interlock.
- (5) Total length of remote controller wiring
 - The simple MA controller can be wired up to 200 m (656 ft).

⚠ CAUTION	Remote controllers cannot be wired together. Only one wire can be connected to the remote controller terminal block.	


NOTE: When interlocking the MA remote controller with a LOSSNAY or OA processing unit, always set the address of all the indoor units in the group and the address of the LOSSNAY or OA processing unit.

2. Connecting to Mr. SLIM air conditioner

The remote controller wiring depends on the system configuration. Check the system configuration. Wire the remote controller as shown in the example below.


The numbers (1) to (3) in the figure correspond to items (1) to (3) in the following description.

[1] Connecting the remote controller for each refrigerant system (Standard 1:1, simultaneous twin, simultaneous triple, simultaneous four)

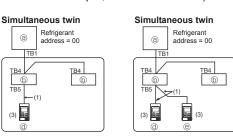

Connect to TB5 on the indoor unit.

[2] When grouping by different refrigerant systems

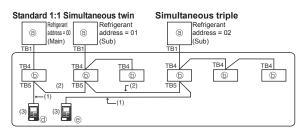


- Outdoor unit
- Indoor unitMain Remote Controller(Simple MA Controller)
- Sub Remote Controller
 (Simple MA Controller)
- * Set the refrigerant address using the outdoor unit dip switches. (For more information, refer to the outdoor unit installation manual.)
- * All the indoor units enclosed in are controlled as one group.
 - (1) Wiring from remote controller
 - Connect to indoor unit TB5 (remote controller terminal block). (The terminal block has no polarity.)
 - For simultaneous multi type, when mixing various types of indoor units, always connect the remote controller to the indoor unit with the most functions (wind velocity, vane, louver, etc.).
 - (2) When grouping with difference refrigerant systems
 - Group using the remote controller wiring. Connect the remote controller to an arbitrary indoor unit of each refrigerant system you want to group.
 - When mixing different types of indoor units in the same group, always make the outdoor unit connecting the indoor unit with the most functions (wind velocity, vane, louver, etc.) the Main unit (refrigerant address = 00). Also, when the Main unit is the simultaneous multi type, always satisfy the conditions of (1) above.
 - The Simple MA Remote Controller can control up to 16 refrigerant systems as one group.
 - (3) Up to two remote controllers can be connected to one group
 - When two remote controllers are connected to one group, always set the Main remote controller and Sub remote controller.
 - When only one remote controller is connected to one group, set it as the Main controller. When two remote controllers are connected to one group, set the Main remote controller and Sub remote controller. (For a description of how to set the Main/Sub switch, see step 5 in section

 (4 | How To Install).)

NOTE: When using this Simple MA remote controller in combination with other MA remote controllers, be sure to follow the compatibility rules below.

Indoor unit function	Main remote controller	Sub remote controller	Compatibility
Models applicable for AUTO (dual set point) mode	This Simple MA remote controller	This Simple MA remote controller	Compatible, and AUTO (dual set point) mode can be used depending on the indoor units to be connected.
	Other MA remote controllers	This Simple MA remote controller	Compatible, but AUTO (dual set point) mode cannot be used.
	This Simple MA remote controller	Other MA remote controllers	Incompatible
Models not applicable for AUTO (dual set point) mode	Combination with al	l of the above	Compatible

TIMIT

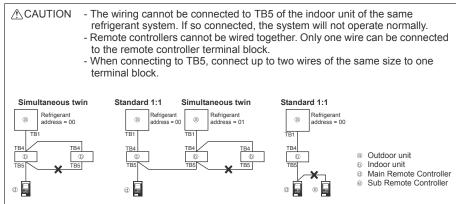

4 How To Install

This remote controller is for the wall installation. It can be installed either in the switch box or directly on the wall. When performing direct wall installation, wires can be thread through either back or top of the remote controller.

(1) Selecting an installation site

Install the remote controller (switch box) on the site where the following conditions are met.

- (a) A flat surface
- (b) A place where the remote controller can measure the accurate indoor temperature Sensors to monitor indoor temperature are on the indoor unit and on the remote controller. When the room temperature is monitored with the sensor on the remote controller, the built-in sensor on the Main remote controller monitors the room temperature. When using the sensor on the remote controller, follow the instructions below.
- To monitor the accurate indoor temperature, install the remote controller away from direct sunlight, heat sources, and the supply air outlet of the air conditioner.
- Install the remote controller in a location that allows the sensor to measure the representative room temperature.
- Install the remote controller where no wires are routed around the temperature sensor on the controller. (If wires are routed, the sensor cannot measure accurate indoor temperature.)

Important

Do not install the controller in a place where the difference between the remote controller surface temperature and the actual room temperature will be great.

If the temperature difference is too high, room temperature may not be adequately controlled.

To reduce the risk of malfunctions, do not install the controller in a place where water or oil may come into contact with the controller, or in a condensing or corrosive environments

(2) Installation space

Leave a space around the remote controller as shown in the figure shown below, regardless of whether the controller is installed in the switch box or directly on the wall. Removing the remote controller will not be easy with insufficient space.

Also, leave an operating space in front of the remote controller.

To avoid deformation and malfunction, do not install the remote controller in direct sunlight or where the ambient temperature may exceed 40°C (104°F) or drop below 0°C (32°F).

Do not install the remote controller directly onto electrically conductive objects such as metal plate that has not been painted.

External dimensions of remote controller

Minimum required space around the remote controller

troller.

Temperature sensor

unit: mm (in)

PARTS

NDOOR UNI

Controller can be installed either in the switch box or directly on the wall. Perform the installation properly according to the installation method.

① Drill a hole in the wall.


- Installation using a switch box
 - · Drill a hole in the wall, and install the switch box on the wall.
 - · Connect the switch box to the conduit tube.
- Direct wall installation
 - · Drill a hole in the wall, and thread the cable through it.


② Seal the cable access hole with putty

- Installation using a switch box
 - Seal the remote controller cable access hole at the connection of switch box and conduit tube with putty.

To reduce the risk of electric shock, malfunctions, or fire, seal the gap between the cables and cable access holes with putty.




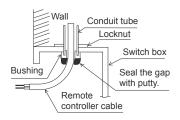

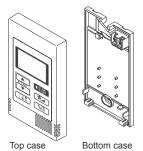

Connect the remote controller cable to the terminal block on the bottom case.

Peel off the remote controller cable sheath as shown below to connect to the terminal block properly. Secure the remote controller cable so that the peeled part of the cable will fit into the case.

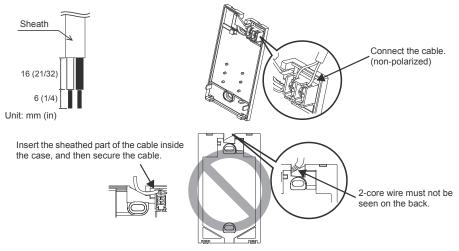

■ Direct wall installation


• Seal the hole through which the cable is threaded with putty.

To reduce the risk of electric shock, shorting, or malfunctions, keep wire pieces and sheath shavings out of the terminal block.

Important

Do not use solderless terminals to connect cables to the terminal block.

Solderless terminals may come in contact with the circuit board and cause malfunctions or damage the controller cover.

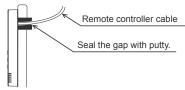

Route the cable behind the remote controller.





TIMIT


⑤ Install the bottom case.

Be sure to secure two places of the bottom case.

■ Installation using a switch box

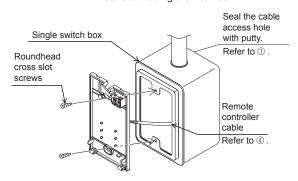

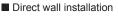

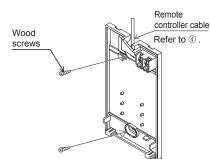


Important

To avoid deformation and damage to the bottom case, do not overtighten the screws

To avoid damage to the bottom case, do not make holes on it.

6 Cut out the cable access hole.

- Direct wall installation (when running the cable along the wall)
 - Cut out the thin-wall part on the cover (the shaded area in the right figure) with a knife or a nipper.
 - Thread the cable from the groove behind the bottom case through this access hole.

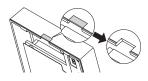

Set the dip switches on the top case.

When using two remote controllers in one group, set the dip switches.


When using two remote controllers in one group, specify the main and sub remote controllers using dip switch No. 1 shown below.

- When connecting only one remote controller to one group, it is always the main remote controller.
 When connecting two remote controllers to one group, set one remote controller as the main remote controller and the other as the sub remote controller.
- The factory setting is "Main".


Setting the dip switches

There are switches on the back of the top case. Remote controller Main/Sub and other function settings are performed using these switches. Ordinarily, only change the Main/Sub setting of SW1. (The factory settings are ON for SW1, 2, and 3 and OFF for SW4.)

SW No.	SW contents Main	ON	OFF	Comment
1	Remote controller Main/Sub setting	Main	Sub	Set one of the two remote controllers at one group to "ON".
2	Temperature display units setting	Celsius	Fahrenheit	When the temperature is displayed in [Fahrenheit], set to "OFF".
3	Cooling/heating display in AUTO mode	Yes	No	When you do not want to display "Cooling" and "Heating" in the AUTO mode, set to "OFF".
4	Indoor temperature display	Yes	No	When you want to display the indoor temperature, set to "ON".

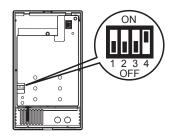

Connect the connector on the bottom case to the socket on the top case.

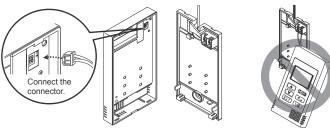

Important


To prevent malfunctions, do not remove the protective sheet or the circuit board from the top case.

To prevent cable breakage and malfunctions, do not hang the top controller casing hang by the cable as shown in the figure above.

9 Insert the wires into the clamp.

Important

Hold the wires in place with the clamp to prevent undue force from being applied to the terminal block and causing cable breakage.

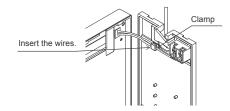


Install the top case on the bottom case.

Two mounting tabs are at the top of the top case.


Hook those two tabs onto the bottom case, and click the top case into place. Check that the case is securely installed and not lifted.

Important

When attaching the top casing to the bottom casing, push it until it they click into place. If they are not properly locked into place, they may fall, causing personal injury, controller damage, or malfunctions.

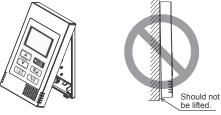

- Direct wall installation (when running the cable along the wall)
 - Thread the cable through the access hole at the top of the remote controller.
 - Seal the cut-out part of the cover with putty.
 - · Use a cable cover.

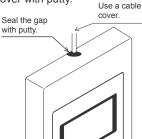

Thread the cable through the top of the remote controller.

· Uninstalling the top case

① Uninstalling the top case

Insert a flat-tip screwdriver with a blade width of 3-5 mm (1/8-7/32 inch) into the latches at the bottom of the remote controller and lift the latches. Then, pull up the top case.


Important

To prevent damage to the controller casing, do not force the flat-tip screwdriver to turn with its tip inserted in the slot.

Do not insert the flat-tip screwdriver too far. Doing so will damage the circuit board.



- 1. Before making a test run, refer to the "Test Run" section of the indoor unit installation manual.
- 2. When the Ook button and ITEMP button are pressed simultaneously for 2 seconds or longer, test run is performed.
- 3. Stop the test run by pressing the \bigcirc_{OFF}^{ON} button.
- 4. If trouble occurred during the test run, refer to the "Test Run" section of the indoor unit installation manual.

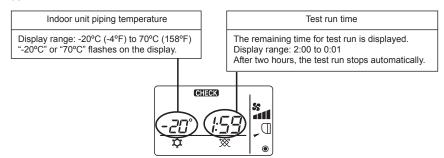

6 Ventilation Setting

Make this setting only when interlocked operation with LOSSNAY or OA processing unit is necessary with CITY MULTI models.


(This setting cannot be made with Mr. SLIM air conditioners.)

Perform this operation when you want to register the LOSSNAY or OA processing unit, confirm the registered units, or delete the registered units controlled by the remote controller.


The following uses indoor unit address 05 and LOSSNAY or OA processing unit address 30 as an example to describe the setting procedure.

[Setting Procedure]

- ① Stop the air conditioner using the remote controller \bigcirc_{OFF}^{ON} button.
- ② Press and hold down the and and buttons at the same time for two seconds. The display shown below appears. The remote controller confirms the registered LOSSNAY or OA processing unit addresses of the currently connected indoor units.

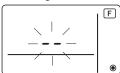

- ③ Registration confirmation result
 - The indoor unit address and registered LOSSNAY or OA processing unit address are displayed alternately.

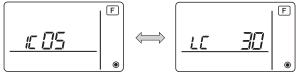

<Indoor unit address and indoor unit display>

<LOSSNAY address display and LOSSNAY display>

- When LOSSNAY or OA processing unit are not registered



④ If registration is unnecessary, end registration by pressing and holding down the and ITEMP. ▼ buttons at the same time for two seconds.

If a new LOSSNAY or OA processing unit must be registered, go to step **1. Registration procedure**.

If you want to confirm another LOSSNAY or OA processing unit, go to step **2. Confirmation procedure**. To delete a registered LOSSNAY or OA processing unit, go to step **3. Deletion procedure**.

<1. Registration procedure>


- ⑤ Set the address of the indoor unit to be interlocked with the LOSSNAY unit using the **ITEMP** and **ITEMP** ▶ buttons. (01 to 50)
- ⑥ After setting, press the button and set the Lossnay address you want to register by operating the ITEMR ▲ and ITEMR ▼ buttons. (01~50)



Indoor unit address LOSSNAY or OA processing unit address


- The Press the Open button, and register the set indoor unit address and LOSSNAY address.
 - Registration end display

The indoor unit address and "IC" and LOSSNAY address and "LC" are alternately displayed.

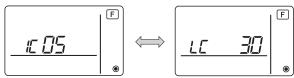

- Registration error display

If the address is not registered correctly, the indoor unit address and [BB], and the registered LOSSNAY (or OA processing unit address) and [BB] are alternately displayed.

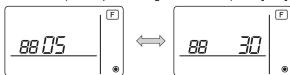


Cannot be registered because the registered indoor unit or LOSSNAY or OA processing unit does not exist.

Cannot be registered because another LOSSNAY or OA processing unit was registered at the registered indoor unit.

<2. Confirmation procedure>

- Press the Ook button and button simultaneously for 2 seconds, and check the LOSSNAY address registered at the set indoor unit address.
 - Confirmation end display (When LOSSNAY is connected.)
 The indoor unit address and "IC" and registered LOSSNAY address and "LC" are alternately displayed.

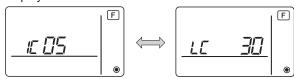

- Confirmation end display (When LOSSNAY or OA processing unit is not connected.)



- Registered indoor unit address does not exist.





<3. Deletion procedure>

Use this procedure when you want to delete registration of indoor units connected by the remote controller and LOSSNAY or OA processing unit.

- © Confirm (see 2. Confirmation procedure) the LOSSNAY or OA processing unit you want to delete and display the indoor units and LOSSNAY or OA processing unit confirmation results.
- - Deletion end display
 Indoor unit address and "— —" and registered LOSSNAY or OA processing unit address and "— —"

Deletion error display
 When deletion was not performed properly.

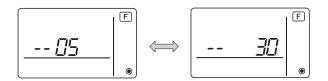

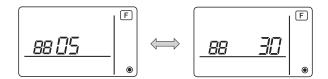

7 Function Selection for Mr. SLIM

Make the following settings for Mr. SLIM if necessary. (This setting cannot be made with CITY MULTI Control System. To make CITY MULTI indoor unit settings from the remote controller, refer to section (8 | Function Selection for CITY MULTI).)

Set the functions of each indoor unit from the remote controller, as required. The functions of each indoor unit can be selected only from the remote controller.

Set the functions by selecting the necessary items from Table 1.

Table1. Function selection contents

are alternately displayed.

(For a detailed description of the factory settings and mode of each indoor unit, refer to the indoor unit installation manual.)


Mode No.	Mode	Settings Setting Check No.			Unit numbers
01	Automatic recovery	Disable	1		Set "00" for the Unit number.
	after power failure	Enable (Four minutes of standby time is required after the restoration of power.)	2		These settings apply to all the connected indoor units.
02	Thermistor selection (Indoor temperature	Average temperature reading of the indoor units in operation	1		
	detection)	Thermistor on the indoor unit to which the remote controller is connected (fixed)	2		
		Built-in sensor on the remote controller	3		
03	LOSSNAY connection	Not connected	1		
		Connected (without outdoor air intake by the indoor units)	2		
		Connected (with outdoor air intake by the indoor units)	3		
04	Power voltage	240 V	1		
		220 V, 230 V	2		
07	7 Filter sign	100 hours	1		Set "01" to "04" or "AL" for the
		2500 hours	2		Unit number. These settings apply to each
		Not displayed	3		indoor unit.
80	Fan speed	Silent mode (or standard)	1		
		Standard (or High ceiling 1)	2		• If "01" ("02", "03", "04") is
		High ceiling (or High ceiling 2)	3		set for the Unit number, the settings apply only to the
09	No. of air outlets	4 directional	1		specified indoor unit
		3 directional	2		regardless of the number of
		2 directional	3		connected indoor units (one
10	Installed options	No	1		through four units). If "AL" is set for the Unit
	(High performance filter)	Yes	2		number, the settings apply
11	11 Vane setting	No vanes (or the vane setting No.3 is effective.)	1		to all the connected indoor
		Equipped with vanes (The vane setting No.1 is effective.)	2		units regardless of the number of connected indoor units (one through
		Equipped with vanes (The vane setting No.2 is effective.)	3		four units).

- * Static pressure setting can be made by using Mode 08 in combination with Mode 10 depending on the indoor unit model. Refer to the Indoor unit Installation Manual for details.
- * For mode numbers other than listed above, refer to the indoor unit installation manual.

NOTE: When the indoor unit functions were changed using the function selection after installation is complete, always indicate the set contents by entering check marks or other marks in the appropriate check field of Table 1.


First grasp the function selection flow. The following describes setting of "Thermistor selection" of Table 1 as an example.

(For the actual setting procedure, see [Setting procedure] ① to ⑩.)

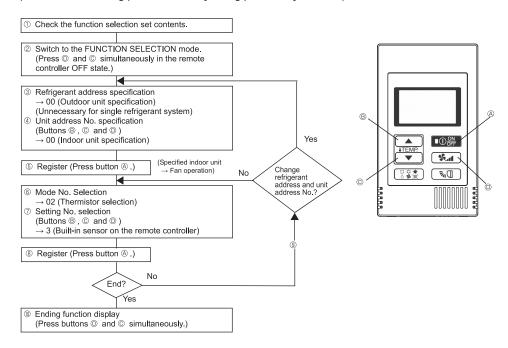

[Setting procedure] (Set only when change is necessary.)

- ① Check the set contents of each mode. When the set contents of a mode were changed by function selection, the functions of that mode also change.
 - Check the set contents as described in steps ② to ⑦ and change the setting based on the entries in the Table 1 check field. For the factory settings, refer to the indoor unit installation manual.
- _____
- ② Set the remote controller to Off.
 - Press and hold down the @ \P and the @ $ITEMP. <math display="inline">\blacktriangledown$ buttons at the same time for two seconds or longer.
 - " [F] (FUNCTION)" blinks for a while, then the remote controller display changes to the display shown below.

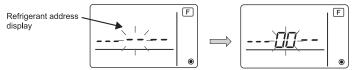

- 3 Set the outdoor unit refrigerant address No.
 - When the [®] **LIEMP.** ▲ and [©] **LIEMP.** ▼ buttons are pressed, the refrigerant address No. decreases and increases between 00 and 15.
 - Set it to the refrigerant address No. whose function you want to select.
 - (This step is unnecessary for single refrigerant system.)
- * If the remote controller enters the OFF state after the "F (FUNCTION)" and room temperature displays " 88" have flashes for two seconds, communication is probably abnormal. Make sure there are no noise sources near the transmission line.


NOTE: If you make a mistake during operation, end function selection by step 1 and repeat selection from step 2.

- 4 Set the indoor unit address No.
 - Press the

 button. The unit address No. display "--" flashes.

When the ® $[\overline{\textbf{1EMR}} \ \]$ and © $[\overline{\textbf{1EMR}} \ \ \ \ \ \]$ buttons are pressed, the unit address No. changes in the order of $00 \leftrightarrow 01 \leftrightarrow 02 \leftrightarrow 03 \leftrightarrow 04 \leftrightarrow AL$. Set it to the unit address No. of the indoor unit whose functions you want to set.

Unit address No. display

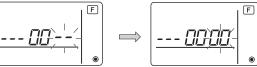

- * When setting mode 1 to 6, set the unit address No. to "00".
- * When setting modes 7 to 14:
- When setting for each indoor unit, set the unit address No. to "01-04".
- When batch setting for all indoor units, set the unit address No. to "AL".

INDOOR UN

Sefrigerant address and unit address No. registration Press the (A) OFF button. The refrigerant address and unit address No. are registered. After a while, the mode No. display "- -" flashes.


Mode No. display

- * When " @B" flashes at the room temperature display, the selected refrigerant address is not in the system. When "F" is displayed at the unit address No. display, and when it flashes together with the refrigerant address display, the selected unit address No. does not exist. Correctly set the refrigerant address and unit address No. by repeating steps ③ and ④.
- When registered using the

 When you want to know the location of the indoor units of the unit address No. whose functions were selected, check here.

When the unit address No. is 00 or AL, all the indoor units of the selected refrigerant address perform the fan operation.

EX): When refrigerant address 00, unit address No. = 02 registered

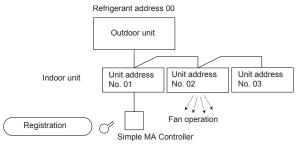

- * When grouping by different refrigerant systems and an indoor unit other than the specified refrigerant address performs the fan operation, the refrigerant address set here is probably duplicated.
- Recheck the refrigerant address at the outdoor unit dip switches.
- 6 Mode No. selection

Select the mode No. you want to set with the ® **[ITEMP. ▲**] and © **[ITEMP. ▼**] buttons. (Only the settable mode numbers can be selected.)



Select the setting contents of the selected mode.

When the © solution is pressed, the current setting No. flashes. Use this to check the currently set contents.


Select the setting No. using the ® &TEMP. ▲ and © &TEMP. ▼ buttons.

Setting No. 1 = Average temperature reading of the indoor units in operation

Setting No. 1 = Average temperature reading of the indoor units in operation

® The contents set at steps ③ to ⑦ are registered.

When the (a) the mode No. and setting No. flash and registration begins. The flashing mode No. and setting No. change to a steady light and setting ends.

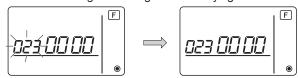

- * When " ## " flashes at the Mode No. display, communication is probably abnormal. Make sure there are no noise sources near the transmission line.
- $\ \, \mbox{$\scriptsize @$}$ To select more functions, press the $\mbox{$\scriptsize @$}$ and repeat steps $\mbox{$\scriptsize @$}$ to $\mbox{$\scriptsize @$}$.

Press and hold down the © **§TEMP.** ▼ and © **§** buttons at the same time for two seconds or longer.

After a while, the function selection display disappears and the remote controller returns to the air conditioner off display.

* Do not operate the air conditioner from the remote controller for 30 seconds after the end of function selection.

NOTE: When the functions of an indoor unit were changed by function selection after the end of installation, always indicate the set contents by entering check marks or other marks in the appropriate check field of Table 1.

8 Function Selection for CITY MULTI

Make this setting only when the function settings need to be changed on CITY MULTI. (This setting cannot be made with Mr. SLIM Control System. To make settings for Mr. SLIM, refer to section $\fbox{7}$ Function Selection for Mr. SLIM).)

Set the functions of each indoor unit from the remote controller, as required.

Refer to the Indoor unit Installation Manual for factory settings, mode No., and the setting No. of the indoor units.


NOTE: Be sure to write down any settings that you change performing the following steps.


■ Setting the indoor unit Setting Value

2 sec.

- ① Press the Open button to stop the operation of the air conditioner.
- ② Press and hold down the 🐧 and the 🖫 buttons at the same time for two seconds or longer to check the current settings.
- ③ When the response has been received from the indoor unit, the current settings appear. If there is no response, nothing appears.



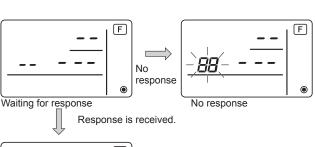

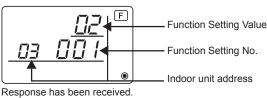



Procedure A

- ④ Press the ♣TEMP. ▲ and the ♣TEMP. ▼ buttons to set the address of the indoor unit whose settings to be made. (ALL, 1 to 50)
- ⑤ Press the ♣ button, then press the LTEMP. ▲ and the LTEMP. ▼ buttons to set the Function Setting No. to be set. (000 to 255)
- ⑥ Press the button, then press the ITEMP and the ITEMP buttons to set the Function Setting Value. to be set (00 to 15)
- Press the ON button to set the settings.

TIMIT

® If the set settings need to be changed, repeat steps ④ to ⑦.
To complete the settings, press the and the seconds or longer.

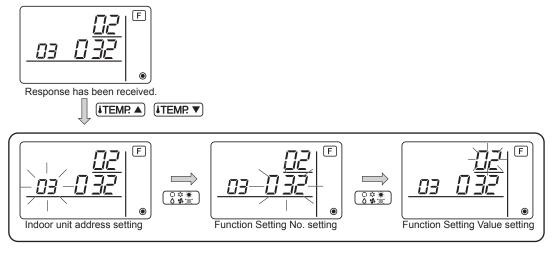

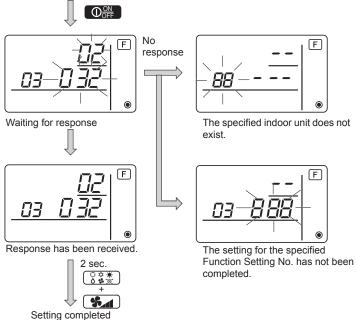


■ Checking the indoor unit Function Setting Value

- ① Perform the Procedure A on the previous page.
- ② Press the **ITEMP** and the **ITEMP** buttons to set the address of the indoor unit whose settings to be checked. (ALL, 1 to 50)
- ③ Press the ♣ button, then press the ♣TEMP. ▲ and the ♣TEMP. ▼ buttons to set the Function Setting No. to be checked. (000 to 255)
- 4 Press the **\$\mathbb{4}** button to display the current Function Setting Value.

⑤ To check the settings, repeat steps ② to ④ .

To complete the checking process, press the ⑤ ** and the for two seconds or longer.

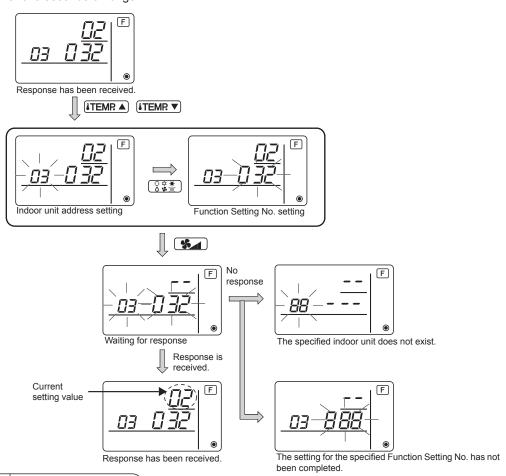


9 Self diagnosis


Retrieve the error history of each unit using the Simple MA controller.

- ② Set the address or refrigerant address No. you want to self-diagnosis.

 When the ③ 【**ITEMR** A and ③ 【**ITEMR** Temperature are pressed, the address decreases and increases between 01 and 50 or 00 and 15. Set it to the address No. or refrigerant address No. you want to self-diagnosis.

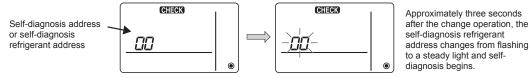

③ Self-diagnosis result display <Error history> (For the contents of the error code, refer to the indoor unit installation manual or service handbook.)

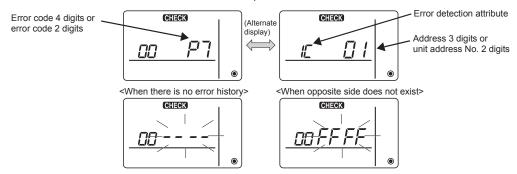


The error history is displayed in ③ self-diagnosis results display.

When the ① **\$**____ button is pressed two times successively within three seconds, the self-diagnosis object address and refrigerant address flash.

When the error history was reset, the display shown below appears.

When error history reset failed, the error contents are displayed again.

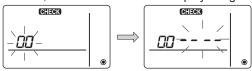

Self-diagnosis reset

There are the following two ways of resetting self-diagnosis.

Press the $ext{ } ext{ } e$

 \rightarrow Resets self-diagnosis and returns to the state before self-diagnosis.

Press the 0 0 button. \rightarrow Self-diagnosis resets and indoor units stop. (When operation is prohibited, this operation is ineffective.)


10 Remote Controller Check

When the air conditioner cannot be controlled from the Simple MA controller, use this function to check the remote controller.

First check the power mark.

When normal voltage (DC12V) is not applied to the remote controller, the power mark goes off.


When the power mark is off, check the remote controller wiring and the indoor unit.

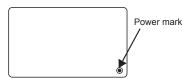

② Switch to the remote controller check mode.


When the ® **ITEMP** button and © **S** button are pressed simultaneously for 5 seconds or longer, the figure shown below is displayed.

When the \triangle \bigcirc button is pressed, remote controller check begins.

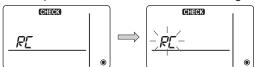

③ Remote controller check result <When remote controller is normal>

<When remote controller is faulty>

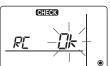

Since there is no problem at the remote controller, check for other causes.



(Error display 1) "NG" flashes

→ Remote controller send/receive circuit abnormal


Remote controller switching is necessary.

When the problem is other than the checked remote controller



(Error display 2) "E3" "6833" "6832" flash → Cannot send

There is noise on the transmission line, or the indoor unit or another remote controller is faulty. Check the transmission line and the other remote controllers.

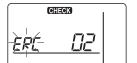

(Error display 3) "ERC" and data error count are displayed \rightarrow Data error generation

"Data error count" is the difference between the number of bits of remote controller send data and the number of bits actually sent to the transmission line. In this case, the send data was disturbed by the noise, etc. Check the transmission line.



④ Remote controller check reset

When the ® **ITEMR** button and © **S** button are pressed simultaneously for 5 seconds or longer, remote controller diagnosis is reset, the [HO] and run lamp flash for a certain period of time, and then the remote controller returns to its state before diagnosis.

Photo



Descriptions

Advanced MA remote controller with the large size dot liquid crystal display. Multi-language display and weekly timer function are available.

Applicable Models

- MSZ-RW25,35,50VG*1
- MSZ-LN18,25,35,50,60VG2(W)(V)(R) (B)*1
- MSZ-FT25,35,50VG*¹
- MSZ-AP15,20,25,35,42,50,60,71VG*1
- MSZ-EF18,22,25,35,42,50VG(W)(B)(S)*1
- MSZ-BT20,25,35,50VG*1
- MSZ-HR25,35,42,50,60,71VF*1
- MSZ-DW25,35,42,50VF*1
- MSY-TP35,50VF*1
- MSZ-FH25,35,50VE2*1
- MSZ-SF15,20VA*¹
- MSZ-SF25,35,42,50VE3*1
- MSZ-GF60,71VE2*1
- MSZ-WN25,35VA*1
- MSZ-DM25,35VA*1
- MFZ-KT25,35,50,60VG*1
- MFZ-KW25,35,50,60VG*1
- MLZ-KP25,35,50VF*¹
- P-series models *2 (except for PSA-M KA)
- SLZ-M FA2 series
- SEZ-M · DA2 series
- *1 Either MAC-334IF-E or MAC-497IF-E is required.
- *2 Remote controller terminal block kit "PAC-SH29TC-E" is required for PKA-M*LAL2 · KAL2.

How to Use / How to Instal

1. System Requirements

! WARNING

The CD-ROM that is supplied with the unit can only be played on a CD-drive or a DVD-drive. Do not attempt to play this CD-ROM on an audio CD player as this may damage your ears and/or speakers.

Your computer must meet the following requirements to run Manual Navigation Software.

[PC] PC/AT compatible

[CPU] Core2 Duo 1.66 GHz or faster (Core2 Duo 1.86 GHz or faster recommended) Pentium D 1.7 GHz or faster (Pentium D 3.0 GHz or faster recommended)

Pentium M 1.7 GHz or faster (Pentium M 2.0 GHz or faster recommended)

Pentium 4 2.4 GHz or faster (Pentium 4 2.8 GHz or faster recommended)

* Core2 Duo or faster processor is required to run Manual Navigation Software on Windows Vista or later.

[RAM] Windows Vista or later: 1 GB minimum (2 GB or more recommended)

Windows XP: 512 MB minimum (1 GB or more recommended)

[HDD space] 1 GB minimum (available space)

Windows Vista or later: Available space in the drive that has the Document folder

* Windows XP: Available space in the drive that has the My Document folder

[Resolution] SVGA 800 × 600 or greater

Windows8/Pro/Enterprise (Pro recommended)

Windows7 Ultimate/Enterprise/Professional/Home Premium Service Pack1 (Professional recommended)

Windows Vista Ultimate/Business/Home Basic Service Pack1 (Business version recommended)

Windows XP Professional/Home Edition Service Pack2 or Service Pack3 (Professional version recommended)

Windows8: Adobe Reader 11.0.2 or later (Windows Reader, installed by default in Windows8, cannot be used.)

Windows7: Adobe Reader 10.1.0 or later

Windows XP and Windows Vista: Adobe Reader 8.1.3 or later

* Software to view PDF files

"Windows", "Windows XP", "Windows Vista", "Windows7" and "Windows8" are registered trade marks of Microsoft Corporation.

"Adobe Reader" and "Adobe Acrobat" are registered trademarks of Adobe Systems Incorporated. "Core2 Duo" and "Pentium" are registered trademarks of Intel Corporation.


2. Component names and supplied parts

The following parts are included in the box.

Parts name	Qty.	Appearance
Remote controller (top case)	1	Right figure *1
Remote controller (bottom case)	1	Right figure *2
Roundhead cross slot screws M4×30	2	*3
Wood screw 4.1×16 (for direct wall installation)	2	*3
Simple Manual	1	
CD-ROM (this manual) Instruction Book and Installation Manual	1	

Bottom case *2

Top case *1

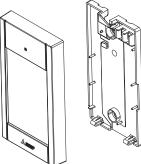

^{*3} ISO metric screw thread

^{*4} Remote controller cable is not included.


3. Field-supplied parts/Required tools

(1) Field-supplied parts

The following parts are field-supplied parts.

Parts name	Qty.	Notes
Single switch box	1	Not required for direct wall installation
Thin metal conduit	Necessary	
Lock nut and bushing	Necessary	
Cable cover	Necessary	Required for routing remote controller cable along a wall
Putty	Reasonable	
Molly anchor	Necessary	
Remote controller cable (Use a 0.3 mm² (AWG22) 2-core sheathed cable.)	Necessary	

Switch box

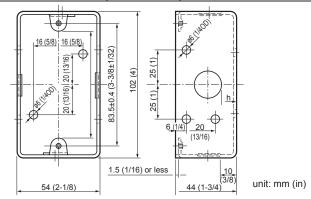

(2) Field-supplied tools

- Flat-tip screwdriver (Width: 3 5 mm (1/8 7/32 inch))
- Nipper
- Miscellaneous tools

4. Selecting an installation site

This remote controller is for the wall installation. It can be installed either in the switch box or directly on the wall. When performing direct wall installation, wires can be thread through either back or top of the remote controller.

(1) Selecting an installation site

Install the remote controller (switch box) on the site where the following conditions are met.

- (a) For connection to the indoor unit with an Auto descending panel, a place where people can check the Auto descending panel operation of the indoor unit while they are operating the remote controller (Refer to the indoor unit Instructions Book for how to operate Auto descending panel.)
- (b) A flat surface
- (c) A place where the remote controller can measure the accurate indoor temperature

 Sensors to monitor indoor temperature are on the indoor unit and on the remote controller. When the room
 temperature is monitored with the sensor on the remote controller, the built-in sensor on the remote controller
 monitors the room temperature. When using the sensor on the remote controller, follow the instructions below.
 - To monitor the accurate indoor temperature, install the remote controller away from direct sunlight, heat sources, and the supply air outlet of the air conditioner.
 - Install the remote controller in a location that allows the sensor to measure the representative room temperature.
 - Install the remote controller where no wires are routed around the temperature sensor on the controller. (If wires are routed, the sensor cannot measure accurate indoor temperature.)

Important

- Discrepancy between the indoor temperature measured at the wall and the actual indoor temperature may occur. If the following conditions are met, the use of the temperature sensor on the indoor unit is recommended.
 - Supply air does not reach to the wall easily where the remote controller is installed due to improper airflow distribution.
 - There is a great discrepancy between the wall temperature and the actual indoor temperature.
 - The back side of the wall is directly exposed to the outside air.

Note: When temperature changes rapidly, the temperature may not be detected accurately.

If the temperature difference is too high, room temperature may not be adequately controlled.

To reduce the risk of malfunctions, do not install the controller in a place where water or oil may come into contact with the controller, or in a condensing or corrosive environments.

To avoid deformation and malfunction, do not install the remote controller in direct sunlight or where the ambient temperature may exceed 40°C (104°F) or drop below 0°C (32°F).

To reduce the risk of malfunctions and damage to the controller, avoid installing the remote controller on an electrically conductive surface, such as an unpainted metal sheet.

Refer to either of the following manuals for temperature sensor setting: indoor unit Installation Manual for CITY MULTI; this manual for Mr. SLIM.


(2) Installation space

Leave a space around the remote controller as shown in the figure shown below, regardless of whether the controller is installed in the switch box or directly on the wall. Removing the remote controller will not be easy with insufficient space.

Also, leave an operating space in front of the remote controller.

External dimensions of remote controller

Minimum required space around the remote controller

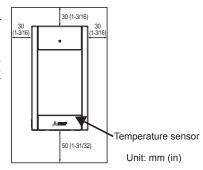

(3) Installation work

Controller can be installed either in the switch box or directly on the wall. Perform the installation properly according to the installation method.


1 Drill a hole in the wall.

- Installation using a switch box
 - Drill a hole in the wall, and install the switch box on the wall.
 - · Connect the switch box to the conduit tube.
- Direct wall installation
 - · Drill a hole in the wall, and thread the cable through it.


2 Seal the cable access hole with putty.

- Installation using a switch box
 - Seal the remote controller cable access hole at the connection of switch box and conduit tube with putty.

To reduce the risk of electric shock, malfunctions, or fire, seal the gap between the cables and cable access holes with putty.

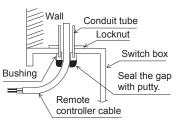


3 Prepare the bottom case of the remote controller.

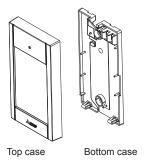

4 Connect the remote controller cable to the terminal block on the bottom case.

Peel off the remote controller cable sheath as shown below to connect to the terminal block properly. Secure the remote controller cable so that the peeled part of the cable will fit into the case.

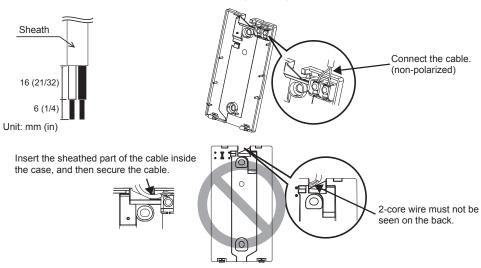

■ Direct wall installation


• Seal the hole through which the cable is threaded with putty.

To reduce the risk of electric shock, shorting, or malfunctions, keep wire pieces and sheath shavings out of the terminal block.

Important

Do not use solderless terminals to connect cables to the terminal block.


Solderless terminals may come in contact with the circuit board and cause malfunctions or damage the controller cover.

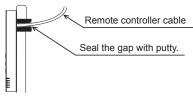


Route the cable behind the remote controller.

Be sure to secure two places of the bottom case.

■ Installation using a switch box

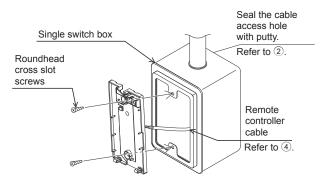

■ Direct wall installation

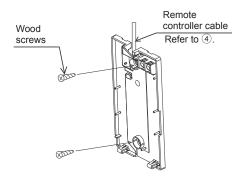


Important

To avoid deformation and damage to the bottom case, do not overtighten the screws.

To avoid damage to the bottom case, do not make holes on it.

6 Cut out the cable access hole.

- Direct wall installation (when running the cable along the wall)
 - Cut out the thin-wall part on the cover (the shaded area in the right figure) with a nipper.
 - Thread the cable from the groove behind the bottom case through this access hole.

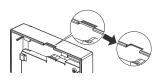


Notice

To prevent damage to the circuit board, remove the front cover from the top case before cutting out a cable access hole.

Note that accidentally touching the circuit board may damage the circuit board when cutting out a cable access hole.

7 Connect the connector to the top case.

Connect the connector on the bottom case to the socket on the top case.

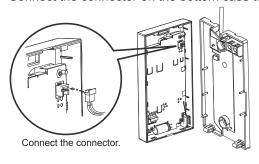




Important

To prevent malfunctions, do not remove the protective sheet or the circuit board from the top case.

To prevent cable breakage and malfunctions, do not hang the top controller casing hang by the cable as shown in the figure above.

Important

Hold the wires in place with the clamp to prevent undue force from being applied to the terminal block and causing cable breakage.

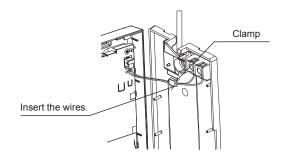

9 Install the top case on the bottom case.


Two mounting tabs are at the top of the top case.

Hook those two tabs onto the bottom case, and click the top case into place. Check that the case is securely installed and not lifted.


Important

When attaching the top casing to the bottom casing, push it until it they click into place. If they are not properly locked into place, they may fall, causing personal injury, controller damage, or malfunctions.



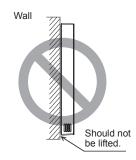

- Direct wall installation (when running the cable along the wall)
 - Thread the cable through the access hole at the top of the remote controller.
 - Seal the cut-out part of the cover with putty.
 - Use a cable cover.

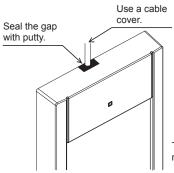


Thread the cable through the top of the remote controller.

· Uninstalling the top case

1 Uninstalling the top case

Insert a flat-tip screwdriver with a blade width of 3-5 mm (1/8-7/32 inch) into the latches at the bottom of the remote controller and lift the latches. Then, pull up the top case.

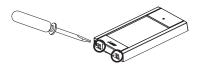

■ At the time of factory shipment, protective sheet is on the operat cover. Peel off the protective sheet on the operation interface prior to use.

Important


To prevent damage to the controller casing, do not force the flat-tip screwdriver to turn with its tip inserted in the slot.

Do not insert the flat-tip screwdriver too far. Doing so will damage the circuit board. To prevent damage to the controller casing, use a flat-head screwdriver with a blade width of 3-5 mm (1/8-7/32 inch).

OPTIONAL PARTS

TINIT

5. Remote controller button functions

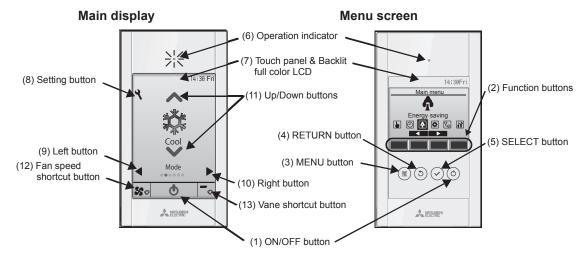

(1) ON/OFF button

Use to turn ON/OFF the indoor unit.

(2) Function buttons

Use to select the operation mode or to set the temperature and fan speed on the Main display. Use to select items on other screens.

(3) MENU button

Use to bring up the Main menu.

(4) RETURN button

Use to return to the previous screen.

(5) SELECT button

Use to jump to the setting screen or to save the settings.

(6) Operation indicator

Stays lit during normal operation. Blinks during startup and when an error occurs.

(7) Touch panel & Backlit full color LCD

Dot display. When the backlight is off, pressing any area turns the backlight on and it will stay lit for a certain period of time depending on the screen. Performing any button operation keeps the backlight on.

(8) Setting button

Use to bring up the Main menu. When the menu operation is locked, an administrator password is required.

(9) Left button

Use to switch the setting items in the following order: louver, ventilation, vane, fan speed, operation mode, and preset temperature.

(10) Right button

Use to switch the setting items in the following order: preset temperature, operation mode, fan speed, vane, ventilation, and louver.

(11) Up/Down buttons

Use to change the contents of the setting selected in (9) and (10) above.

(12) Fan speed shortcut button

Use to directly access the fan speed settings screen

(13) Vane shortcut button

Use to directly access the vane settings screen.

Pressing the Setting button will bring up the Main menu as shown below.

Operation menu *1 Timer menu *1 Energy saving menu *1 Initial setting menu *2*3 Maintenance menu *1


Service menu *2*3

- *1 Refer to the Instructions Book in the CD-ROM for details.
- *2 Explained in this manual.
- *3 If no buttons are pressed for 10 minutes on the initial setting screens, or 2 hours on the service screens (10 minutes on some screens), the screen will automatically return to the Main display. Any settings that have not been saved will be lost.

The available items on the menu depend on the connected indoor unit model. For items not described in the manuals that are enclosed with the MA Touch Remote Controller, refer to the manuals that came with the air conditioning units.

Note: When the backlight is off, pressing any area turns the backlight on and does not perform its function.

Button operations on the Main menu

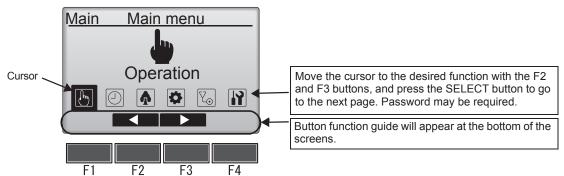

6. Turning on the power

Make sure that the MA remote controller is properly installed according to the instructions in the Installation Manual and that the indoor and outdoor unit installation has been completed before turning on the power.

(1) When the power is turned on, the following screen will appear.



Note: When the power is on for the first time, the Language selection screen will be displayed. Refer to section 10 (4) under "Display setting menu". Select a desired language. The system will not start-up without language selection.

Normal start up (indicating the percentage of process completion)

(2) Main display

After the successful startup, the Status display will appear. While the Status display is displayed, pressing any area switches the screen to the Main display. The Main display can be displayed in two different modes: "Full" and "Basic." Refer to section 10 "Initial settings" for how to select the display mode. (The factory setting is "Full.")



Main display in the Full mode (while the unit is not in operation)



Main display in the Full mode (while the unit is in operation)

Note: Refer to the Instruction Book for the icons on the display.

7. Test run

Note: Maintenance password is required.

- (1) Read the section about Test run in the indoor unit Installation Manual before performing a test run.
- (2) At the Main display, press the Setting button and select Service>Test run>Test run.
- (3) Press the ON/OFF button to cancel the test run if necessary.
- (4) Refer to the indoor unit Installation Manual for the detailed information about test run and for how to handle the errors that occur during a test run.

Note: Refer to section 11 "Service menu" for information about the maintenance password.

8. Initial settings (Remote controller settings)

Note: Administrator password is required.

From the Main display, select Main menu>Initial setting, and make the remote controller settings on the screen that appears.

Initial setting menu

Basic setting
Display setting
Operation setting
Touch panel
Screen update

Main menu: 5

Cursor

Basic setting menu

- Clock
- · Daylight saving time
- Administrator password

Display setting menu

- · Main display
- Remote controller display details setting
- · Brightness
- · Language selection
- Design

Operation setting menu

Auto mode

Touch panel menu (Refer to the Instruction Book.)

Note: The initial administrator password is "0000." Refer to section (3) "Administrator password setting" for how to change the password.

Basic setting menu

(1) Clock setting [Button operation]

- 1 Move the cursor with the F1 or F2 button to the desired item.
- 2 Change the date and time with the F3 or F4 button, and press the SELECT button to save the change. The change will be reflected on the clock display on the Status display and the Main display.

Note: Clock setting is necessary for time display, weekly timer, timer setting and error history. Make sure to perform clock setting when the unit is used for the first time or has not used for a long time.

Note: If a given system has no system controllers, the clock time will not automatically be corrected. In this case, periodically correct the clock time.



OOR UNIT

The start/end time for daylight saving time can be set. The daylight saving time function will be activated based on the setting contents.

- If a given system has a system controller, disable this setting to keep the correct time.
- At the beginning and the end of daylight saving time, the timer may go into action twice or not at all.
- This function will not work unless the clock has been set.

[Button operation]

- The daylight saving time function can be activated/deactivated or the start/end times can be set by using the F1 through F4 buttons.
 - DST

Select "Yes" to activate the daylight saving time, or select "No" to deactivate.

Date(Start)

Set the start day of the week, week number, and month for daylight saving time.

· Start time

Set the start time for daylight saving time.

· Forward to

Set the time when the clock is to be set forward to at the start time above.

Date(End) (2nd page)

Set the end day of the week, week number, and month for daylight saving time.

End time (2nd page)

Set the end time for daylight saving time.

Backward to (2nd page)

Set the time when the clock is to be set backward to at the end time above.

- 2 Press the SELECT button to save the setting.
 - * If "5th" is selected for the week number and the 5th week does not exist in the selected month of the year, the setting is considered to be "4th."
- (3) Administrator password setting

[Button operation]

- 1 A window to enter a new password will appear. Enter a new password, and press the SELECT button.
- 2 Press the F4 button (OK) on the password change confirmation screen to save the change. Press the F3 button (Cancel) to cancel the change.


Note: The initial administrator password is "0000." Change the default password as necessary to prevent unauthorized access. Have the password available for those who need it.


Note: If you forget your administrator password, you can initialize the password to the default password "0000" by pressing and holding the F1 button for ten seconds on the administrator password setting screen.

Note: The administrator password is required to make the settings for the following items.

- · Timer setting · Weekly timer setting · Energy-save setting
- · Outdoor unit silent mode setting · Restriction setting
- · Night setback setting · Initial setting

Refer to the Instruction Book that came with the remote controller for the detailed information about how to make the settings for these items.

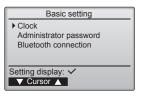

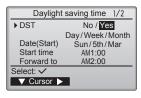







OPTIONAL PARTS


NDOOR UNIT

Display setting menu

(1) Main display setting

[Button operation]

- ① Move the cursor to "Full/Basic," and use the F3 or F4 button to select the display mode "Full" or "Basic." (The factory setting is "Full.")
- 2 Move the cursor to "Icon explan." and use the F3 or F4 button to select the display mode "Yes" or "No." (The factory setting is "Yes.")

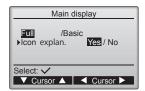







Example: Basic mode (Icon explanation enabled)



Example: Full mode (Icon explanation disabled)



Example: Basic mode (Icon explanation disabled)


Note: This setting is only for the Main display. In the Basic mode, icons that indicate control status on timer and schedule settings will not appear on the display. When "No" is selected, the explanation of the setting contents on the Main display will not appear.

(2) Remote controller display details setting

Make the settings for the remote-controller-related items as necessary. Press the SELECT button to save the changes.

[1] Clock display [Button operation]

- ① Select "Clock" from the display details setting screen, and press the F4 button (Change) to bring up the clock display setting screen.
- ② Use the F1 through F4 buttons to select "Yes" (display) or "No" (non-display) and its format for the Status display and the Main display.
- 3 Save the settings with the SELECT button. (The factory settings are "Yes" (display) and "24 h" format.)

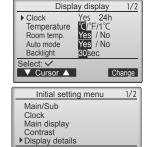



Clock display: Yes (Time is displayed on the Status display and the Main display.) No (Time is not displayed on the Status display and the Main display.)

Display format: 24-hour format 12-hour format

AM/PM display (Effective when the display format is 12-hour): AM/PM before the time

AM/PM after the time

Note: Time display format will also be reflected on the timer and schedule setting display. The time is displayed as shown below.

12-hour format: AM12:00 - AM1:00 - PM12:00 - PM1:00 - PM11:59 24-hour format: 0:00 - 1:00 - 12:00 - 13:00 - 23:59

[2] Temperature unit setting

[Button operation]

Move the cursor to "Temperature" from the display details setting screen, and select the desired temperature unit with the F3 or F4 button. (The factory setting is Centigrade (°C).)

- °C: Temperature is displayed in Centigrade. Temperature is displayed in 0.5- or 1-degree increments, depending on the model of indoor units.
- °F: Temperature is displayed in Fahrenheit.
- 1 °C: Temperature is displayed in Centigrade in 1-degree increments.





[3] Room temperature display

[Button operation]

Move the cursor to "Room temp." on the display details setting screen, and select the desired setting with the F3 or F4 button.

(The factory setting is "Yes".)

- · Yes: Room temperature appears on the Main display.
- No: Room temperature does not appear on the Main display.

Note: Even when "Yes" is set, the room temperature is not displayed on the Main display in the "Basic" mode.

[4] Auto (single set point) mode display setting

[Button operation]

Move the cursor to "Auto mode" from the display details setting screen, and select the desired mode with the F3 or F4 button. (The factory setting is "Yes.")

- Yes: "Auto Cool" or "Auto Heat" is displayed during operation in the Auto (single set point) mode.
- No: Only "Auto" is displayed during operation in the Auto (single set point) mode.

[5] Backlight

The backlight lighting-up time can be set.

[Button operation]


Move the cursor to "Backlight" from the display details setting screen, and select the desired time (5,10,20,30,60 seconds) with the F4 button. (The factory setting is "30" seconds.)

Note: This setting is effective on the Status display and the Main display.

[6] LED lighting

The LED lighting can be set to either "Yes" (On) or "No" (Off). (The factory setting is "Yes".)

When "No" is selected, the LED will not light up even during the normal operation.

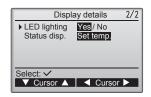

OPTIONAL PARTS

INDOOR UNIT

[7] Status display

Make the settings for the temperature to be displayed on the Status display.

[Button operation]

Move the cursor to "Status disp." from the display details setting screen, and select the desired setting with the F4 button.

Each pressing the F4 button will toggle through the following options: Set temp., Room temp., and Hide.

(3) Brightness

[Button operation]

Select the desired brightness for the remote controller LCD with the F1 and F2 buttons.

The ON/OFF of the Stay lit mode can be switched with the F4 button. When "ON" is selected, the backlight will remain lit dimly even after the specified time has elapsed.

Note: Adjust the brightness to improve viewing in different lighting conditions or installation locations. This setting can not improve viewing from all directions.



(4) Language selection

[Button operation]

Move the cursor to the language you desire with the F1 through F4 buttons.

Press the SELECT button to save the setting.





(5) Design setting

The screen design can be set.

[Button operation]

Select the color option with the F4 button.

- · Color: The display color can be selected.
- White: Monochrome display (white basis)
- Black: Monochrome display (black basis)

When "White" or "Black" is selected, press the SELECT button. When "Color" is selected, select the following item with the F1 or F2 button, and set the desired display color for each item.

- Color shade: Set the color shade with the F3 or F4 button. (The settable range is -90 to 89.)
- Pattern: Set the color with the F4 button.
- Color set to: Select "Character" or "BG" (Background) as a target to which the color is applied with the F4 button.
- * At factory shipment, these items are set as follows.

	Color option	Color shade	Pattern	Color set to
CT01MAA(R)-S, SB	Color	-70	1	Character
CT01MAA(R)-PB	Color	-90	2	Character

Operation setting menu

(1) Auto mode setting


[Button operation]

Whether or not to use the Auto (single set point) or Auto (dual set points) mode can be selected by using the F3 or F4 button. This setting is valid only when indoor units with the Auto mode function are connected.

(The factory setting is "Yes".)

Press the SELECT button to save the changes made.

- · Yes: The Auto mode can be selected in the operation mode setting.
- No: The Auto mode cannot be selected in the operation mode setting.

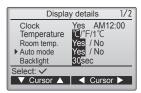



9. Service menu


Note: Maintenance password is required.


At the Main display, press the Setting button and select "Service" to make the maintenance settings.

When the Service menu is selected, a window will appear asking for the password.


To enter the current maintenance password (4 numerical digits), move the cursor to the digit you want to change with the F1 or F2 button, and set each number (0 through 9) with the F3 or F4 button. Then, press the SELECT button.

Note: The initial maintenance password is "9999." Change the default password as necessary to prevent unauthorized access. Have the password available for those who need it.

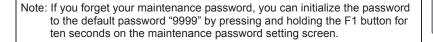

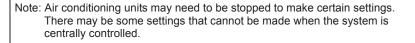



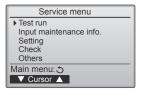

OPTIONAL

INDOOR UNIT

(1) Test run (CITY MULTI and Mr. SLIM)

Select "Test run" from the Service menu to bring up the Test run menu.

- Test run: Select this option to perform a test run.
- Drain pump test run: Select this option to perform a test run on the drain pump on the indoor unit.

Applicable only to the type of indoor units that support the test run function.

Note: Refer to the indoor unit Installation Manual for the detailed information about test run.

(2) Input maintenance information (CITY MULTI and Mr. SLIM)

Select "Input maintenance info." from the Service menu to bring up the Maintenance information screen. Refer to the indoor unit Installation Manual for how to make the settings.

Note: The following settings can be made from the Maintenance information screen.

·Registering model names and serial numbers

Enter the model names and serial numbers of outdoor and indoor units. The information entered will appear on the Error information screen. Model names can have up to 18 characters, and the serial numbers can have up to 8 characters.

Registering dealer information

Enter phone number of a dealer. The entered information will appear on the Error information screen. Phone number can have up to 13 characters.

Initializing maintenance information

Select the desired item to initialize the model name, serial number, and dealer information settings.

(3) Function setting (CITY MULTI)

Make the settings for the indoor unit functions via the remote controller as necessary.

Select "Function setting" from the Settings menu to bring up the Function setting screen.

▶ M-NET address Function No. Data Set /Conf Function

Function setting

32 Sending data

M-NET address Function No.

[Button operation]

- 1) The Function setting screen will appear.
 - Press the F1 or F2 button to move the cursor to one of the following: M-NET address, function setting number, or setting value. Then, press the F3 or F4 button to change the settings to the desired settings.
- 2 Once the settings have been completed, press the SELECT button. A screen will appear that indicates that the settings information is being sent.


To check the current settings of a given unit, enter the setting for its M-NET address and function setting number, select Conf for the Function, and press the SELECT button.

A screen will appear that indicates that the settings are being searched for. When the search is done, the current settings will appear.

③ When the settings information has been sent, a screen will appear that indicates its completion.

To make additional settings, press the RETURN button to return to the screen shown in Step 2 above. Set the function numbers for other indoor units by following the same steps.



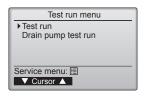

Maintenance infomation


Serial No. input Dealer information input


Initialize maintenance info.

▶ Model name input

Service menu: 🗐

▼ Cursor ▲

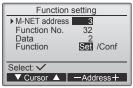

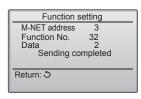

Note:

- Refer to the indoor unit Installation Manual for information about the factory settings of indoor units, function setting numbers, and setting values.
- · Be sure to write down the settings for all functions if any of the initial settings has been changed after the completion of installation work.

(4) Function setting (Mr. SLIM)


Make the settings for the indoor unit functions via the remote controller as necessary.

Select "Function setting" from the Settings menu to bring up the Function setting screen.



[Button operation]

- ① Set the indoor unit refrigerant addresses and unit numbers with the F1 through F4 buttons, and then press the SELECT button to confirm the current setting.
- ② When data collection from the indoor units is completed, the current settings appears highlighted. Non-highlighted items indicate that no function settings are made. Screen appearance varies depending on the "Unit No." setting.

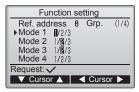


Common items

3 Use the F1 or F2 button to move the cursor to select the mode number, and change the setting number with the F3 or F4 button.



Individual items (Unit No. 1 through 4)

- When the settings are completed, press the SELECT button to send the setting data from the remote controller to the indoor units.
- (5) When the transmission is successfully completed, the screen will return to the Function setting screen.

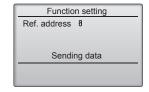

Note:

- \cdot Make the function settings shown in Table 1 on Mr. SLIM units as necessary.
- · Refer to the Instructions Book when it is necessary to set the settings for CITY MULTI units.
- Table 1 summarizes the setting options for each mode number. Refer to the indoor unit Installation Manual for the detailed information about initial settings, mode numbers, and setting numbers for the indoor units.
- Be sure to write down the settings for all functions if any of the initial settings has been changed after the completion of installation work.

OPTIONAL PARTS

Table ¹	1.	Functio	n setting	options

Mode No.	Mode	Settings	Setting No.	Unit numbers		
01	Automatic recovery after	Disable	1	Set "Grp." for the Unit number.		
	power failure	Enable (Four minutes of standby time is required after the restoration of power.)	2	These settings apply to all the connected indoor units.		
02	Thermistor selection (indoor temperature	Average temperature reading of the indoor units in operation	1			
	detection)	Thermistor on the indoor unit to which the remote controller is connected (fixed)	2			
		Built-in sensor on the remote controller	3			
03	LOSSNAY connection	Not connected	1			
		Connected (without outdoor air intake by the indoor units)	2			
		Connected (with outdoor air intake by the indoor units)	3			
04	Power voltage	240 V	1			
		220 V, 230 V	2			
05	Auto mode	Enable (Automatically the unit achieves effective energy saving operation.)	1			
		Disable	2			
07	Filter sign	100 hours	1	Set "1, 2, 3, 4, or All" for the Unit		
		2500 hours	2	number.		
		Not displayed	3	These settings apply to each indoor unit.		
08	Fan speed	Silent mode (or standard)	1	If "1, 2, 3, or 4" is set for the Unit		
		Standard (or High ceiling 1)	2	number, the settings apply only to		
		High ceiling (or High ceiling 2)	3	the specified indoor unit regardless		
09	Outlet	4 directional	1	of the number of connected indoor		
		3 directional	2	units (one through four units). If "All" is set for the Unit number, the		
		2 directional	3	settings apply to all the connected		
10	Optional parts	No	1	indoor units regardless of the		
	(High-efficiency filter)	Yes	2	number of connected indoor units		
11	Vane	No vanes (or the vane setting No.3 is effective.)	1	(one through four units).		
		Equipped with vanes (The vane setting No.1 is effective.)	2			
		Equipped with vanes (The vane setting No.2 is effective.)	3			

(5) LOSSNAY setting (CITY MULTI only)


This setting is required only when the operation of CITY MULTI units is interlocked with LOSSNAY units. This setting is not available for the Mr. SLIM units. Interlock settings can be made for the indoor unit to which the remote controller is connected. (They can also be confirmed or deleted.)

Note:


- · Use the centralized controller to make the settings if it is connected.
- \cdot To interlock the operation of the indoor units with the LOSSNAY units, be sure to interlock the addresses of ALL indoor units in the group and that of the LOSSNAY unit.

[Button operation]

① When "Lossnay" on the Settings menu is selected, the remote controller will automatically begin searching for the registered LOSSNAY addresses of the currently connected indoor unit.

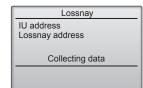


When the search is completed, the smallest address of the indoor units that are connected to the remote controller and the address of the interlocked LOSSNAY unit will appear. "--" will appear if no LOSSNAY unit is interlocked with the indoor units. If no settings need to be made, press the RETURN button to go back to the Settings menu.

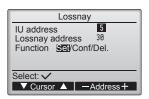

To make LOSSNAY interlock setting


3 Enter the addresses of the indoor unit and the LOSSNAY unit to be interlocked, with the F1 through F4 buttons, select "Set" in the "Function", and press the SELECT button to save the settings. "Sending data" will appear on the screen. If the setting is successfully completed, "Setting completed" will appear.

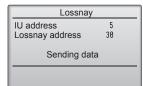



To search for the LOSSNAY address

4 Enter the address of the indoor unit to which the remote controller is connected, select "Conf" in the "Function", and press the SELECT button. "Collecting data" will appear on the screen. If the signal is received correctly, the indoor unit address and LOSSNAY address will appear. "--" will appear when no LOSSNAY unit is found. "Unit not exist" will appear if no indoor units that are correspond to the entered address are found.

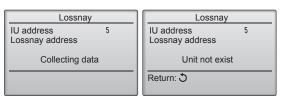

To delete the interlock setting

(5) To delete the interlocked setting between LOSSNAY unit and the indoor units to which the remote controller is connected, enter the indoor unit address and LOSSNAY address with the F1 through F4 buttons, select "Del." in the "Function", and press the SELECT button. "Deleting" will appear. The screen will return to the search result screen if the deletion is successfully completed. "Unit not exist" will appear if no indoor units that are correspond to the entered address are found. If deletion fails, "Request rejected" will appear on the screen.





OPTIONAL

TIME

Select "Check" on the Service menu to bring up the Check menu screen.


The type of menu that appears depends on the type of indoor units that are connected (CITY MULTI or Mr. SLIM).

(When CITY MULTI is connected, only "Error history" will appear in the menu.)

<Mr. SLIM> Check menu ▶ Error history Diagnosis Smooth maintenance Request code Service menu: 🗐

▼ Cursor ▲

<CITY MULTI>

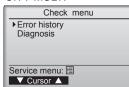

[Button operation]

1 Error history

Select "Error history" from the Check menu, and press the SELECT button to view up to 16 error history records. Four records are shown per page, and the top record on the first page indicates the latest error record.

Error history 1/4 Error Unt# dd/mm/yy 12/84/1**7** 12:34 12:34 12:34 12:34 0-1 0-1 E0 E0 E0 12/04/1**7** 12/04/1**7** 12/04/1**7** 12/04/1**7** Check menu: Delete ▼ Page ▲

[Deleting the error history]

To delete the error history, press the F4 button (Delete) on the screen that shows error history. A confirmation screen will appear asking if you want to delete the error history.

Press the F4 button (OK) to delete the error history.

"Error history deleted" will appear on the screen. Press the RETURN button to go back to the Check menu screen.





2 Other options in the Check menu (Mr. SLIM only)

The following options are also available on the Mr. SLIM units in the Check menu.

- · Smooth maintenance
- · Request code

These options are available only on the Mr. SLIM units. Refer to the indoor unit Installation Manual for details.

(7) Diagnostic function

Error history of each unit can be checked via the remote controller.

[Button operation]

- 1 Select "Self check" from the Diagnosis menu, <Mr. SLIM> and press the SELECT button to view the Self check screen.
- 2 With the F1 or F2 button, enter the refrigerant address (Mr. SLIM) or the M-NET address (CITY MULTI), and press the SELECT
- 3 Error code, unit number, attribute, and indoor unit demand signal ON/OFF status at the contact (CITY MULTI only) will appear. "-" will appear if no error history is available.

Select: ✓

-Address+

Ref. address

Self check

<CITY MULTI>



Self check

Grp.IC


Reset


<CITY MULTI>

M-NET address


Return: 5

Error 5102 Contact OFF

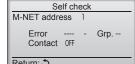

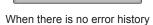


<Mr. SLIM>

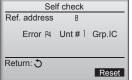

[Resetting the error history]

- 1) Press the F4 button (Reset) on the screen that shows the error history. A confirmation screen will appear asking if you want to delete the error history.
- 2 Press the F4 button (OK) to delete the error history. If deletion fails, "Request rejected" will appear, and "Unit not exist" will appear if no indoor units that are correspond to the entered address are found.
- Self check Ref. address Delete error history? Cancel OK

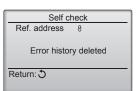

- (8) Changing the maintenance password [Button operation]
- 1 Select "Maintenance password" on the Others menu, and press the SELECT button to bring up the screen to enter a new password.
- 2 Move the cursor to the digit you want to change with the F1 or F2 button, and set each digit to the desired number (0 through 9) with the F3 or F4 button.
- 3 Press the SELECT button to save the new password.
- 4 A confirmation screen will appear asking if you want to change the maintenance password. Press the F4 button (OK) to save the change. Press the F3 button (Cancel) to cancel the change.
- Maintenance password Enter maintenance password M234 Change maintenance password Cursor ▶ —



- Maintenance password Enter maintenance password 2345 Changes saved Service menu:
- (5) "Changes saved" will appear when the password is updated.
- 6 Press the MENU button to return to the Service menu or press the RETURN button to go back to the "Maintenance password" screen.

RTS


(9) Remote controller information

The following information of the remote controller in use can be checked.

- Model name
- · Software version
- Serial number

[Button operation]

- 1 Select "Others" from the Service menu.
- ② Select "Remote controller information".

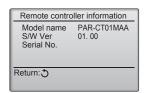

10. Remote controller check

When the remote controller does not work properly, use the remote controller checking function to troubleshoot the problem.


(1) Check the remote controller display and see if anything is displayed (including lines). Nothing will appear on the remote controller display if the correct voltage (8.5-12 VDC) is not supplied to the remote controller. If this is the case, check the remote controller wiring and indoor units.

[Button operation]

① Select "Remote controller check" from the Diagnosis menu, and press the SELECT button to start the remote controller check and see the check results. To cancel the remote controller check and exit the Remote controller check menu screen, press the MENU or the RETURN button. The remote controller will not reboot itself.



Select "Remote controller check".

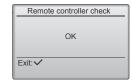

Remote controller check results screen


OK: No problems are found with the remote controller. Check other parts for problems.

E3, 6832: There is noise on the transmission line, or the indoor unit or another remote controller is faulty. Check the transmission line and the other remote controllers.

NG (ALL0, ALL1): Send-receive circuit fault. Remote controller needs replacing.

- ERC: The number of data errors is the discrepancy between the number of bits in the data transmitted from the remote controller and that of the data that was actually transmitted over the transmission line. If data errors are found, check the transmission line for external noise interference.
- ② If the SELECT button is pressed after the remote controller check results are displayed, remote controller check will end, and the remote controller will automatically reboot itself.

Figure

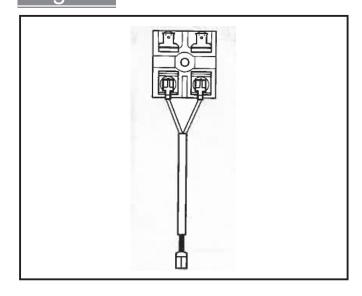

Descriptions

The terminal block is used as a relay to wire an indoor unit and to 2 remote controllers or to wire a remote controller and multiple indoor units in order to perform grouping control.

Applicable Models


■ PKA-M***LA series■ PKA-M***LAL series

Specifications


Terminal block capacity	10A/250V
Applicable wire	Φ 1.6mm or less
Terminal block material	Phenol resin

Dimensions


Unit: mm

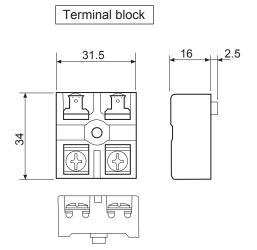

Wire cable

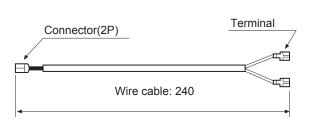

Wiring Diagram

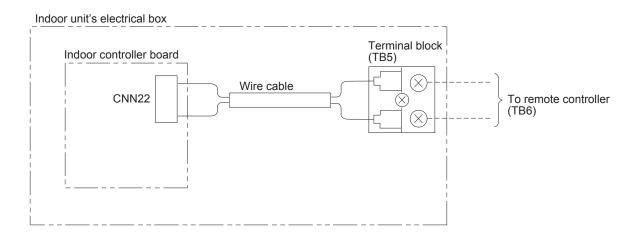


2 Installation procedure


PKA-M·KAL

- 1). Open the front grille and remove the 2 screws.
- 2). Remove the 3 screw covers and the 3 front panel screws.
- 3). Pull out the bottom of the front panel to the front.

 Note: Beware that the panel does not contact with the vane while in the procedure.
- 4). Remove the terminal block cover and the control board cover by removing their respective screws. Note: Be sure to keep the washers at hand.
- 5). Secure terminal block ① with screw ② to the electrical control box.
- 6). Connect wire cable ③ to terminal block ① and to connector CN22 on the indoor controller board.
- 7). Wire the wires of the cable that wire an indoor unit and 2 remote controllers or the cable that wire a remote controller and multiple indoor units for grouping control to the screw terminals at the bottom of terminal block ①. Note: For more details about the methods for wiring the indoor unit and the remote controller(s), refer to the installation manual attached with the appropriate indoor unit.
- 8). After the installation of the terminal block is complete, reinstall the removed parts in the reverse order.

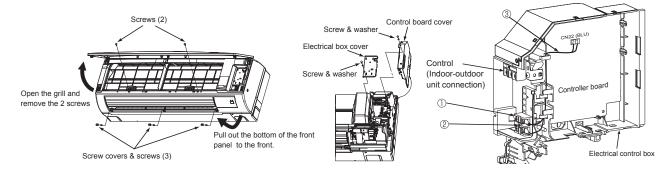

Photo

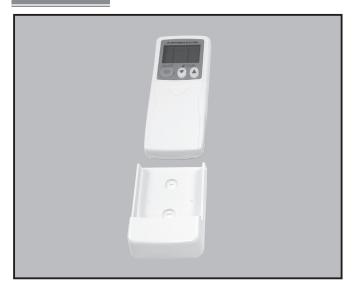

Descriptions

Wireless remote controller for P series and S series. (The receiver is necessary.)

Applicable Models


- PLA-M·EA series
- PLA-ZM·EA series
- PLA-SM·EA series
- SLZ-M·FA series
- SEZ-M·DA series
- SEZ-M·DAL series
- SFZ-M·VA series
- PEAD-M·JA series
- PEAD-M·JAL series
- PKA-M·LA series
- PKA-M·LAL series
- PKA-M·KA series
- PKA-M·KAL series
- PCA-M·KA series
- PCA-M71HA type

Specifications


Accessory	"AAA" LR03 alkaline batteries: 2 pcs		
	4.1 × 16 wood screw: 2		

Dimensions


Unit : mm

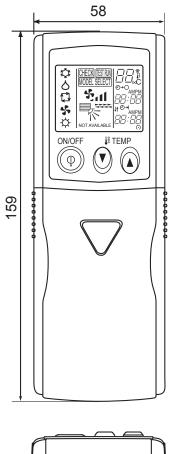



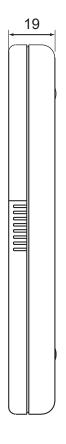

Photo

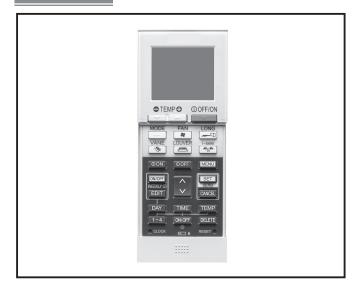

Descriptions

Wireless remote controller for P-series and S-series.

Applicable Models


- SLZ-M FA2 series SEZ-M DAL2 series
- SFZ-M·VA series
- PLA-ZM EA2 series
- PLA-M EA2 series
- PLA-SM EA series
- PEAD-M JA(L)2 * series
- PEAD-SM JÀ(L) * series
- PEA-M LA series
- PKA-M LAL2 series
- PKA-M KAL2 series
- PCA-M ⋅ KA2 * seriesPCA-M ⋅ HA2 * series
- PSA-M KA * series
- *Signal receiver "PAR-SA9CA-E" is required.

Specifications

Parts Name	Quantity
Wireless remote controller	1
Remote controller holder	1
AA(LR6) alkaline battery	2
Tapping screws 3.5 × 16	2

Dimensions

Unit: mm

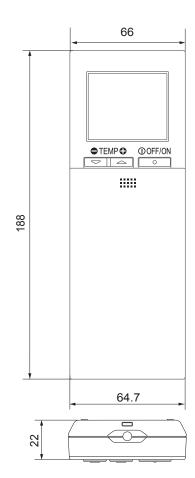

1 Confirming the Supplied Parts

Check that the box includes the following parts in addition to this installation manual:

Parts Name	Quantity
Wireless remote controller	1
Remote controller holder	1
LR6 AA alkaline battery	2
Tapping screws 3.5 × 16	2

Only use LR6 AA batteries. Replace low batteries with new LR6 AA batteries. Observe the polarity of the batteries as indicated, and insert the negative end first.


2 Installation

- Use the remote controller holder that is provided to avoid misplacing the remote controller.
- Install the remote controller in a location that meets the following conditions.
 - · Out of the direct sun light
 - · Away from any heat sources
 - Out of the airflow from the air conditioner (cool or warm)
 - Where the operation of the remote controller can easily be performed and the display is readily visible to the user
 - · Out of the reach of small children


NOTES:


- * If there is a fluorescent light in the room in which the air conditioner is to be installed, turn it on and make sure that the signal from the remote controller can be received by the indoor unit from the intended installation location. When the signal receiving unit receives a signal from the remote controller, a short beeping sound will be heard.
 - If the air conditioner unit is installed in a room in which a fluorescent light on an electronic lighting control system (i.e., inverter light) is installed, signal interference may occur.
- * Maximum signal receiving distance is approximately 7 meters (Approx. 22 feet). Signal receiving angle is approximately 45 degrees to the right and the left from the center.
- * Install the unit at least 1 meter (Approx. 3 feet) away from the TV or radio.

 (If the unit is installed too close to these appliances, signal interference (picture distortion and noise) may occur.)
- Use the tapping screws that are provided to mount the remote controller holder on the wall, and then place the remote controller in the holder.
- 1. Remove the top cover, insert two LR6 AA batteries, and then install the top cover.

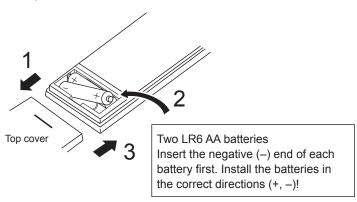

2. Press the Reset button.

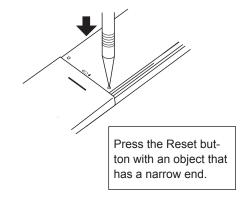

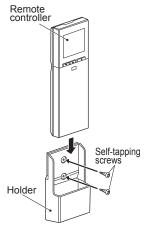

TINIT

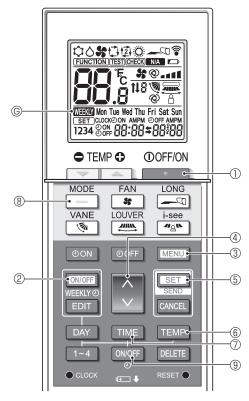


Fig. 3-1


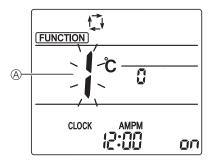


Fig. 3-2

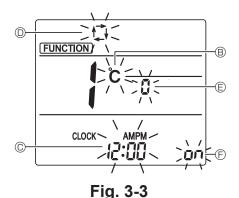

The following settings can be made in the initial setting

Item	Setting	Fig. 5-3
Temperature unit	°C/°F	B
Time display	12-hour format/24-hour format	©
AUTO mode	Single set point/Dual set point	0
Pair No.	0–3	E
Backlight	On/Off	Ē

1. Switching to the initial setting mode (Fig. 3-1, Fig. 3-2)

- 1. Press the _____ button ① to stop the air conditioner.
 - If the weekly timer is enabled, press the button ② to disable the timer. (WEEKLY ⑤ disappears.)
- 2. Press the MENU button 3.
 - · The Function setting screen will be displayed and the function No. (A) will blink.
 - Press the button 4 to change the function No.
- 3. Check that function No. "1" is displayed, and then press the SET button 5.
 - · The Screen display setting screen will be displayed.

2. Changing the temperature unit

(Fig. 3-1, Fig. 3-3 ®)

Press the TEMP button 6.

- Pressing the TEMP button ® changes the temperature unit (°C / °F). (The factory setting is "°C".) c: The temperature is displayed in degrees Celsius.
 - *F: The temperature is displayed in degrees Fahrenheit.

3. Changing the time display

(Fig. 3-1, Fig.3-3 ©)

Press the TIME button 7.

• Pressing the TIME button ⑦ changes the time display (เล: ก็ก็ / ลูน:กูกู). (The factory setting is "12hour format".)

ເຂົ້າເມື່ອ: The time is displayed in the 12-hour format. ੋਪ: 🔐 : The time is displayed in the 24-hour format.

4. Changing the AUTO mode

(Fig. 3-1, Fig.3-3 ⁽¹⁾)

Press the ___ button ®.

- Pressing the button ® changes the Auto mode (点 / 每). (The factory setting is "Single set point".)
 - : The AUTO mode operates as the usual automatic mode (Single set point).
 - 13 : The AUTO mode operates using dual set points.

OPTION UNIT PARTS


5. Changing the pair No. (Fig. 3-1, Fig.3-3 ©)

Press the button 4.

• Set the pair number to "0"-"3". (The factory setting is "0".)

Indoor unit setting				
	Mr. Slim	CITY	CITY MULTI	
Pair No. of wireless remote controller	Indoor PC Indoor PC board jumper wire (J41 and J42 settings) Indoor PC SW22 settings			
Controller		SW22-3	SW22-4	
0	Do not cut (initial setting)	ON	ON	
1	Cut only J41	OFF	ON	
2	Cut only J42	ON	OFF	
3	Cut both J41 and J42	OFF	OFF	

Setting example (when using Mr. Slim)

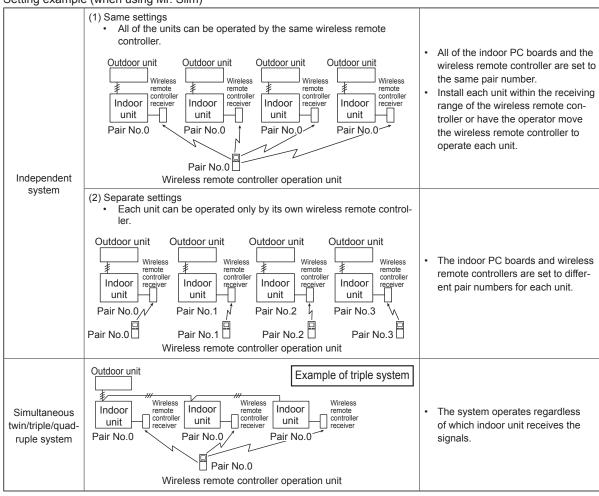

6. Changing the backlight setting

(Fig. 3-1, Fig. 3-3 (E))

Press the ON/OFF button 9.

- Pressing the ONOFF button (9) changes the setting (on/oFF). (The factory setting is "ON".)
 - on: The backlight comes on when a button is pressed.
 - $_{\mbox{\scriptsize 0}}$ FF : The backlight does not come on when a button is pressed.

7. Completing the settings

(Fig. 3-1, Fig. 3-2)

Press the SET button ⑤.

• The function No. (A) blinks.

Press the MENU button 3.

• The remote controller exits the initial setting mode. (The air conditioner operation is stopped.)

Function settings

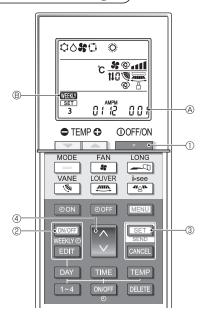


Fig. 4-1

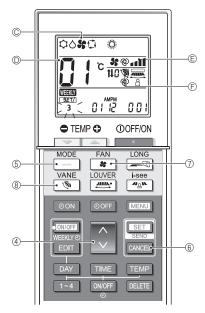


Fig. 4-2

To confirm the functions and settings for the indoor unit you want to set, refer to the operation manual and technical materials for the unit.

1. Switching to the function setting mode (Fig. 4-1)

- 1. Press the _____ button ① to stop the air conditioner.
 - If the weekly timer is enabled, press the button ② to disable the timer. (WEEKLY ® disappears.)
- 2. Press the seconds.
- The remote controller enters the function setting mode. (The group model setting number (A)

2. Entering the group model setting number (Fig. 4-1)

Press the button 4.

· Enter the group model setting number for the indoor unit you want to operate. (The factory setting

To confirm the group model setting number, refer to the indoor unit operation manual.

The fan speed, vertical airflow direction and operation mode can be set by operating the group model setting number.

When you want to change any settings other than above, refer to the descriptions about the separate setting modes in the following pages.

3. Separate settings mode 1

(Fig. 4-2, Fig. 4-3)

You can also set the functions as necessary for the indoor unit that you want to operate.

1) Operation mode setting (The factory setting is "01".)

- 1. Press the ___ button ⑤.
 - The operation mode © blinks.
- 2. Press the button 4 to select the setting number ©.

Operation mode display ©	Setting No.	Operation mode display ©	Setting No. ©
\$0 % €	01	O ## O	05
₽0 Ð () 02	Φ ٥ \$\$	06
₽0 ₩	03	‡ %	07
D # (04		

^{*} If the setting is incorrect, press the CANCEL button (6) and repeat the procedure from step 1.

2) Fan speed setting (The factory setting is "01".)

- 1. Press the substant 1.
 - The fan speed © blinks.
- 2. Press the Dutton 4 to select the setting number ©.

Fan speed display ©		eed display ©	Setting No.		
\$ (4 speeds)		(4 speeds)	01		
35	\$ 		02		
3g	\$		03		
35		(1 speed, none)	04		

^{*} If the setting is incorrect, press the CANCEL button 6 and repeat the procedure from step 1.

3) Vertical airflow direction setting (The factory setting is "01".)

- 1. Press the button 8.The airflow direction blinks.
- 2. Press the 🕽 button 4 to select the setting number @.

	Setting			
With auto vane		With	out auto vane	No. ©
1	(With vane, swing)	Ø	(With vane, swing)	01
3	(With vane, no swing)	4	(With vane, no swing)	02
No display (no vane)		No display (no vane)		03

^{*} If the setting is incorrect, press the CANCEL button (6) and repeat the procedure from step 1.

Fig. 5-1

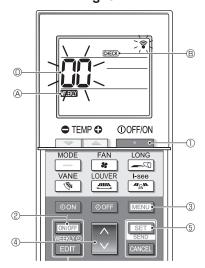


Fig. 5-2

Refer to the following tables for details on the check codes.

* A receiver adapter (MA type) cannot be used.

1. Testrun (Fig. 5-1)


- 1. Press the button ① to stop the air conditioner.
 - If the weekly timer is enabled (WEEKW A is on), press the ONIOFF button ② to disable it (WEEKW A is off).

 OUT TO THE WEEKLY OF THE WEEK
- 2. Press the MENU button ③ for 5 seconds.
 - CHECK (B) comes on and the unit enters the service mode.
- 3. Press the MENU button 3.
 - comes on and the unit enters the test run mode.
- Press the following buttons to start the test run.
 Switch the operation mode between cooling and heating and start the test run.

 Switch the fee paged and start the test.
 - s : Switch the fan speed and start the test run.
 - : Switch the airflow direction and start the test run.
 - : Switch the louver and start the test run.
- 5. Stop the test run.
 - Press the _____ button ① to stop the test run.
 - · After 2 hours, the stop signal is transmitted.

2. Self-check (Fig. 5-2)

- Press the button ① to stop the air conditioner.
- If the weekly timer is enabled (WEEKLY & is on), press the WEEKLY button ② to disable it (WEEKLY & WEEKLY O
- 2. Press the MENU button 3 for 5 seconds.
- CHECK (B) comes on and the unit enters the self-check mode.
- Press the button 4 to select the refrigerant address (M-NET address) of the indoor unit for which you want to perform the self-check.
- 4. Press the SET button ⑤.
 - If an error is detected, the check code is indicated by the number of beeps from the indoor unit and the number of blinks of the OPERA-TION INDICATOR lamp.
- 5. Press the button ①.
 - CHECK (B) and the refrigerant address (M-NET address) (D) go off and the self-check is completed.

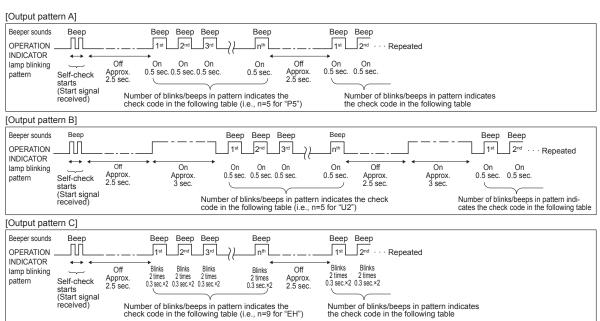

■ Mr. Slim output contents [Output pattern A] Errors detected by indoor unit

Wireless remote controller	Wired remote controller		
Beeper sounds/OPERATION		Symptom	Remark
INDICATOR lamp blinks	Check code		
(Number of times)			
1	P1	Intake sensor error	
2	P2, P9	Pipe (liquid or 2-phase pipe) sensor error	
3	E6, E7	Indoor/outdoor unit communication error	
4	P4	Drain sensor error/Float switch connector open	
5	P5	Drain overflow protection operation	
5	PA	Forced compressor error	
6	P6	Freezing (during cooling operation)/Overheating protection operation	
		(during heating operation)	
7	EE	Assembly error (system error)	
8	P8	Pipe temperature error	
9	E4	Communication error between wired remote controller and indoor unit	
10	_	_	
11	Pb	Indoor unit fan motor error	
12	Fb	Indoor unit control system error (memory error, etc.)	
14	PL	Refrigerant circuit abnormal	

[Output pattern B] Errors detected by unit other than indoor unit (outdoor unit, etc.) * The supported check codes may vary depending on the connected outdoor unit.

Wireless remote controller	Wired remote controller		
Beeper sounds/OPERATION		Symptom	Remark
INDICATOR lamp blinks	Check code		
(Number of times)			
1	E9	Indoor/outdoor unit communication error	
2	UP	Compressor overcurrent interruption	
3	U3, U4	Open/short of outdoor unit thermistors	
4	UF	Compressor overcurrent interruption (When compressor locked)	
5	U2	Abnormal high discharging temperature/49C worked/insufficient refrigerant	
6	U1, Ud	Abnormal high pressure (63H worked)/Overheating protection operation	For details,
7	U5	Abnormal temperature of heat sink	check the LED
8	U8	Outdoor unit fan protection stop	display of the outdoor con-
9	U6	Compressor overcurrent interruption/Abnormal of power module	troller board.
10	U7	Abnormality of super heat due to low discharge temperature	troller board.
11	U9, UH	Abnormality such as overvoltage or voltage shortage and abnormal synchronous signal to main circuit/Current sensor error	
12	-	_	
13	l —	_	
14	Others	Other errors (Refer to the technical manual for the outdoor unit.)	

[Output pattern C] From detected by unit other than indoor unit (outdoor unit letc.)

[Output pattern of Errors detected by unit other than indoor unit (outdoor unit, etc.)				
Wireless remote controller	remote controller Wired remote controller controller			
Wheless remote controller				
Beeper sounds/OPERATION		Symptom	Remark	
INDICATOR lamp blinks	Check code			
(Number of times)				
9	EH	Panel communication abnormal (auto ascending/descending panel)		

■ CITY MULTI output contents

[Output pattern A] The abnormal unit (attribute) is an indoor unit, LOSSNAY unit, or outdoor air processing unit. [Output pattern B] The abnormal unit (attribute) is an outdoor unit or other unit (a unit other than an indoor unit, LOSS-NAY unit, or outdoor air processing unit).

Beeper sounds/OPERATION INDICATOR lamp blinks (Number of times)	M-NET check code	Remarks
1	0000 0000	
2		
3		If the wired remote controller and system controller are not used together,
4	4000 – 4999	the details of the check codes in the error history can be checked using the LED display of the outdoor PC board.
5	5000 - 5999	To check the error history of the outdoor unit, refer to the outdoor unit
6	6000 – 6999	service handbook.
7	7000 – 7999	
8	0 – 999	

Notes:

- 1. If the beeper does not sound and the OPERATION INDICATOR lamp remains off after the signal was received when the self-check starts, there is no error history.
- 2. If the beeper sounds 3 times continuously "beep, beep, beep (0.4 + 0.4 + 0.4 seconds)" after the signal was received when the self-check starts, the specified refrigerant address (M-NET address) is incorrect.

3. Unit function selection

This setting method is for Mr. Slim. For CITY MULTI models, set the DIP switches on the indoor PC board and outdoor PC board.

To set the DIP switches, refer to the technical materials for the CITY MULTI models.

Set the functions as necessary using the remote controller. The functions for each unit can be set only from the remote controller.

Select the functions from table 1 that must be set.

Only the refrigerant systems that are connected to indoor units equipped with wireless remote controller receivers can be set from the wireless remote controller operation unit. The refrigerant address cannot be specified using the wireless remote controller operation unit.

Table 1 Function selection settings (For details about the factory settings and modes of each indoor unit, refer to the indoor unit installation manual.)

The items in the following table are representative examples. Because the settings for each mode may vary depending on the model, refer to the indoor unit installation manual for details.

Mode	Settings	Mode no.	Setting no.	Initial setting	Setting
Power failure auto-	Not available	01	1		
matic recovery	Available	1 01	2		1
Indoor temperature	Indoor unit operating average		1		1
detecting	Set by indoor unit's remote controller	02	2		1
	Remote controller's internal sensor	1	3]
LOSSNAY	Not Supported		1		Select unit
connectivity	Supported (indoor unit is not equipped with fresh air intake)	03	03 2		number 00.
	Supported (indoor unit is equipped with fresh air intake)]	3		1
Auto operation mode	Auto operation mode Single set point (Available 14°C (58°F) cooling setting) 11 12	06 1			
	Dual set point (Not available 14°C (58°F) cooling setting)"1"2				
Filter sign	100Hr	07	1		
	2500Hr		2		
	No filter sign indicator]	3		1
Fan speed	Silent		1]
	Standard	08	2		
	High ceiling]	3		
Number of air outlets	4-directional		1		Select unit
	3-directional	09	2		number 01–04 or AL (all
	2-directional		3		
Installed option	Without	10	1		units).
(high-efficiency filter, etc.)	With] '0	2		
Up/down vane setting *3	Not setting/Equipped with vanes (vanes angle setup ③)		1]
	Equipped with vanes (vanes angle setup ①)	11	2		1
	Equipped with vanes (vanes angle setup ②)		3		
Built-in humidifier	Not equipped	13	1		
	Equipped] '3	2]

¹ It is available when the indoor unit is connected to any of the particular outdoor units. 2 An optional insulation kit is required.

^{*3} The setting varies depending on the model.

Function selection procedure (Fig. 5-3, 5-4)

First, it is important to understand the procedure for the function selection. The following procedure explains how to set "LOSSNAY connectivity" in table 1 to "Supported (indoor unit is not equipped with outdoor-air intake)" as an example. For the actual operations, refer to the following procedure.


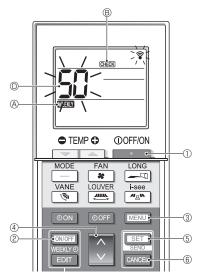


Fig. 5-3

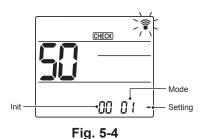

- Press the button ① to stop the air conditioner.
 - * If the weekly timer is enabled (WEEV) (A) is on), press the ONOFF button ② to disable it (WEEV) (A) is off).
- 2. Press the MENU button 3 for 5 seconds.
- 3. Press the button 4 to set the displayed number to "50".
 - While pointing the wireless remote controller toward the receiver, press the SET button ⑤. (The unit number blinks.)
- Press the button 4 to set the unit number of the indoor unit.
 - While pointing the wireless remote controller toward the receiver, press the SET button ⑤. (The mode number blinks.)
 - * When the unit number is transmitted, the selected indoor unit starts operating in the fan mode. You can use this step to confirm which indoor unit corresponds to the unit number you selected to change the functions.
 - However, if you set the unit number to "00" or "AL", all of the indoor units in the same refrigerant system will start operating in the fan mode.
 - * If you transmit a unit number that cannot be selected, the beeper sounds 3 times continuously "beep, beep, beep (0.4 + 0.4 + 0.4 sec.)".

 If this occurs, press the CANCEL button ®, and then set the unit number again while the unit number display is blinking.
 - * If the signal was not received correctly, the beeper will not sound or it will beep twice.

 If this occurs, press the CANCEL button (§), and then set the unit number again while the unit number display is blinking.
- 5. Press the $\ensuremath{\bigcirc}$ button $\ensuremath{\textcircled{4}}$ to set the mode number.
 - While pointing the wireless remote controller toward the receiver, press the SET button ⑤. (The setting number blinks.)

At this time, the beeper sound and OPERATION IN-DICATOR lamp blinking pattern indicate the current setting number for the selected mode number.

Current setting value = 1: Beep (1 sec.) × 1 time

- = 2: Beep (1 sec.) × 2 times
- = 3: Beep (1 sec.) × 3 times

- * If you enter a mode that cannot be set, the beeper sounds 3 times continuously "beep, beep, beep (0.4 + 0.4 + 0.4 sec.)".
- If this occurs, press the GANGEL button (§), and then set the mode number again while the mode number display is blinking.
- * If the signal was not received correctly, the beeper will not sound or it will beep twice.

 If this occurs, press the CANCEL button (S), and then
- If this occurs, press the CANCEL button (§), and then set the mode number again while the mode number display is blinking.
- 6. Press the $\hfill \bigcirc$ button $\hfill \oplus$ to select the setting number.
 - While pointing the wireless remote controller toward the receiver, press the set button s. (The mode number blinks.)

At this time, the beeper sound and OPERATION IN-DICATOR lamp blinking pattern indicate the setting number for the selected mode number.

Current setting value = 1: Beep (1 sec.) × 1 time

- = 2: Beep (1 sec.) × 2 times
- = 3: Beep (1 sec.) × 3 times
- If you enter a number that cannot be set, the originally set number will be used.
- * If the signal was not received correctly, the beeper will not sound or it will beep twice.

If this occurs, repeat the procedure from step 5.

- To set another mode without changing the unit number of the indoor unit, repeat steps 5 and 6.
- 8. To change the unit number of the indoor unit and perform the function selection, repeat steps 4–6.
- 9. Press the button ① to complete the function selection.


Note:

- After the function selection is complete, do not operate the wireless remote controller for 30 seconds.
- Whenever the function selection is used to change the indoor unit functions after installation, be sure to record all of the settings with a "o" or other mark in the "Initial setting" column of the table.

■ PCA-M • KA2 series

■ PCA-M • HA2 type

Figure

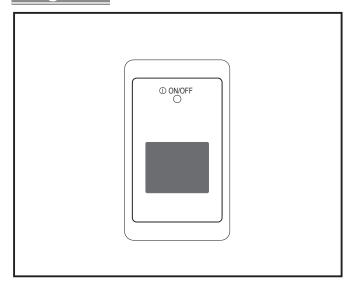

Descriptions

Enables the use of wireless remote controller.

Applicable Models


- PEAD-M JA series
- PEAD-M JAL series
- SEZ-M DA series
- SEZ-M DAL series
- PEAD-SM JA series
- PEAD-SM JAL series
- PSA-M · KA series


Specifications

Item	Content
external dimensions	120(H) × 70(W) × 22.5(D) mm
Weight	0.2kg
Power	DC12V (supplied from indoor unit control)
Temperature	0 - 40 °C Humidity : 30 - 90% RH (no condensing)
Material	ABS
Colour (Munsell)	White Grey (4.8Y7.92/0.66)

Dimensions

Unit: mm

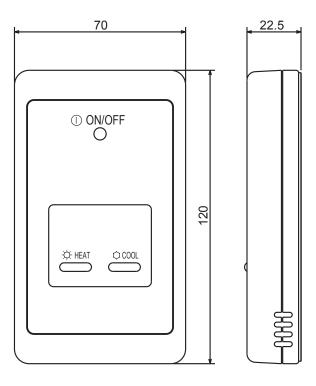

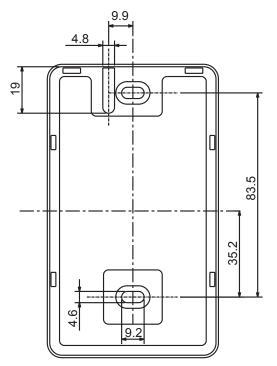

This installation manual contains only the description of how to install the Signal Receiving Unit PAR-SA9CA-E. For information about how to wire and how to install air conditioning units, see the

For your safety, first be sure to read (1 Safety Precautions) described below thoroughly and then install the Signal Receiving Unit PAR-SA9CA-E correctly

Safety Precautions

The following two symbols are used to denote dangers that may be caused by incorrect use and their degree:

⚠ WARNING	This symbol denotes what could lead to serious injury or death if you misuse the PAR-SA9CA-E.
⚠ CAUTION	This symbol denotes what could lead to a personal injury or damage to your property if you misuse the PAR-SA9CA-E.

After reading this installation manual, keep it in a place where the final user can see it anytime When someone moves, repairs or uses the PAR-SA9CA-E, make sure that this manual is forwarded to the final user

⚠ WARNING

- Ask your dealer or technical representative to install the unit.
 - Any deficiency caused by your own installation may result in an electric shock or fire.
- Install in a place which is strong enough to withstand the weight of the PAR-SA9CA-E.
 - Any lack of strength may cause the PAR-SA9CA-E to fall down, resulting in personal
- Firmly connect the wiring using the specified cables. Carefully check that the cables do not exert any force on the terminals.
 - Improper wiring connections may produce heat and possibly a fire.
 - Never modify or repair the PAR-SA9CA-E by yourself. Any deficiency caused by your modification or repair may result in an electric shock or fire.
 - Consult with your dealer about repairs

- Ensure that installation work is done correctly following this installation
- Any deficiency caused by installation may result in an electric shock or fire.
- All electrical work must be performed by a licensed technician, according to local regulations and the instructions given in this manual. Any lack of electric circuit or any deficiency caused by installation may result in an
- Do not move and re-install the PAR-SA9CA-E yourself.
- Any deficiency caused by installation may result in an electric shock or fire. Ask your distributor or special vendor for moving and installation
- To dispose of this product, consult your dealer.

♠ CAUTION

- Do not install in any place exposed to flammable gas leakage
 - Flammable gases accumulated around the body of PAR-SA9CA-E may cause an explosion.
- Do not use in any special environment.
 - Using in any place exposed to oil (including machine oil), steam and sulfuric gas may deteriorate the performance significantly or give damage to the component
- Wire so that it does not receive any tension.
- Tension may cause wire breakage, heating or fire. Completely seal the wire lead-in port with putty etc.
- Any dew, moisture, cockroaches, insects entering the unit may cause an electric shock or a malfunction.
- Do not wash with water.
 - Doing so may cause an electric shock or a malfunction.
- \blacksquare Do not install in any place at a temperature of more than 40 °C (104 °F) or less than 0 °C (32 °F) or exposed to direct sunlight.

- Do not install in any steamy place such a bathroom or kitchen. Avoid any place where moisture is condensed into dew. Doing so may cause an electric shock or a malfunction.
- Do not install in any place where acidic or alkaline solution or special spray are often used.
 - Doing so may cause an electric shock or malfunction.
- Use standard wires in compliance with the current capacity. A failure to this may result in an electric leakage, heating or fire
- Do not touch any PCB (Printed Circuit Board) with your hands or with tools. Do not allow dust to collect on the PCB. Doing so may cause fire or an electric shock.
- Do not touch any control button with your wet hands. Doing so may cause an electric shock or a malfunction
- Do not press any control button using a sharp object.
- Doing so may cause an electric shock or a malfunction
- Never contact the power supply with the control wiring terminals. Doing so will certainly cause the controller to catch fire.

2 **Confirming the Supplied Parts**

Check that the box includes the following parts in addition to this installation manual:


- (1) Signal Receiving Unit .
- (2) Remote controller wire (5 m (16 ft))
- (3) Screw (M4 × 30). (4) Wood screw (4.1 × 16)


Sample System Connection

Only the wiring from the signal receiving unit and between the remote controllers is shown below. The wiring differs depending on the unit to be connected or the system to be used. For details on restrictions, refer to the installation manual or the service handbook that came with the unit.

1. Connecting to Mr. SLIM air conditioner (1) Standard 1:1, simultaneous twin

- - ① Connecting the signal receiving unit Connect the signal receiving unit to the CN90 (Connect to the wireless remote controller board) on the indoor unit using the supplied remote controller wire. Connect the signal receiving units to all the indoor units.

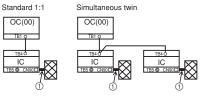

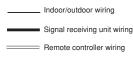






(2) Grouping indoor units connected to different outdoor units

- ① Connecting the signal receiving unit
 - Connect the signal receiving unit to the CN90 (Connect to the wireless remote controller board) on the indoor unit using the supplied remote controller wire. Connect the signal receiving units to all the indoor units.
- ② Remote controller wiring
- Connect the remote controller wire to the TB5 (terminal block for remote controller wiring) on the indoor unit. (No
- The indoor units can be grouped by the remote controller wiring. Daisy-chain the indoor unit to be grouped to one of the indoor units connected to the same outdoor unit.
- When some types of indoor units are in the system, connect the remote controller wire to the indoor unit with the most functions (wind velocity, vane, louver, etc.). Assign the refrigerant address of "00" to the outdoor unit connected to the indoor unit with the most function.
- The indoor units connected to 16 different outdoor units at maximum can be controlled as one group.

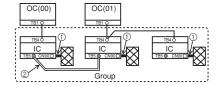


Pair number setting cannot be made on the SEZ-KA·VA or SEZ-KC·VA model. For details on restrictions, refer to the installation manual or the service handbook with the unit

1. Setting method

Assign the same pair number to the wireless remote controller as that of the indoor unit. If not doing so, the remote controller cannot be operated. Refer to the installation manual that came with the wireless remote controller for how to set pair numbers of wireless remote controllers.

Position of daisy wire on the controller circuit board on the indoor unit

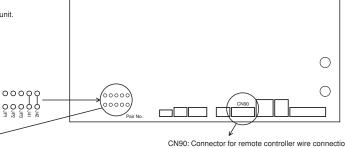

For pair number settings, the following 4 patters (A-D) are available.

Controller circuit board on the indoor unit (reference)


Pair number setting pattern	Pair number on remote controller side	Indoor controller circuit board side Point where the daisy wire is disconnected
A	0	Not disconnected
В	1	J41 disconnected
С	2	J42 disconnected
D	3~9	J41 and J42 disconnected

2. Setting example

(1) To use the units in the same room


Separate setting

Assign a different pair number to each indoor unit to operate each indoor unit by its own wireless remote controller.

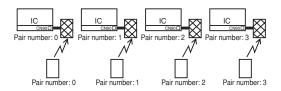


Single setting

Assign the same pair number to all the indoor units to operate all the indoor units by a single wireless remote controller.

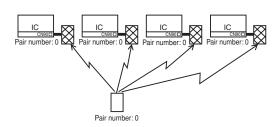

(2) To use the units in different rooms

Assign the same pair number to the wireless remote controller as that of the indoor unit. (Leave the setting as it is at purchase.)

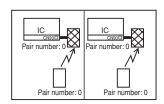

5 **How To Install**


The installation method for the signal receiving unit varies depending on the installation site.

When it is installed on the ceiling, refer to the section "Installation on the ceiling", and when it is installed on the switch box or on the wall, refer to the section "Installation on the switch box or on the wall".

1. Common items for "Installation on the ceiling" and "Installation on the switch box or on the wall" (1) Select the installation site.


- The following must be observed.

 ① Connect the signal receiving unit to the indoor unit with the supplied remote controller wire. Note that the length of the remote controller wire is 5 m (16 ft). Install the remote controller within the reach of the remote controller wi
- $\textcircled{3} \ \ \textbf{When installing on either the switch box or the wall, allow space around the Signal Receiving Unit as shown in the figure}$ on the right.
- ③ When installing the Signal Receiving Unit to the swich box, the Signal Receiving Unit slipped downward for 6.5 mm (1/4 inch) as right illustrated.

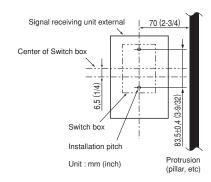


- (4) Parts which must be supplied on site.
 - Switch box for one unit Thin-copper wiring pipe
 - Lock nut and bushing
- (5) The thickness of the ceiling to which the remote controller is installed must be between 9 mm (3/8 inch) and 25 mm (1 inch).
- ⑥ Install the unit on the ceiling or on the wall where the signal can be received from the wireless remote con-
 - The area where the signal from the wireless remote controller can be received is 45 $^{\circ}$ and 7 m (22 ft) away from the front of the signal receiving unit.
- (7) Install the signal receiving unit to the position shown below depending on the indoor unit model.


A: Ceiling cassette type, Ceiling concealed type

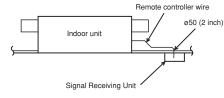

When concealing wire, the hole ø50 (2 inch) to push a remote control wire through is nesessary on the ceiling.

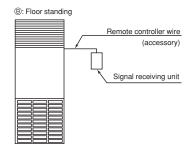

- The point where the remote controller wire is connected differs depending on the indoor unit model.
 - Take into account that the remote controller wire cannot be extended when selecting the installation site.
 - · If the Signal Receiving Unit is installed near a fluoresent lamp specially inverter type, signal interception may occur. Be careful for installing the Signal Receiving Unit or replacing the lamp.
- ® Connect the remote controller wire securely to the order wire to pass the remote controller wire through the conduit as shown below.

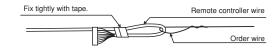

- 2. Installation on the ceiling
 - (1) Make a hole on the ceiling to install the signal receiving unit.




(2) Install the remote controller wire to the terminal block.




Insert the minus screwdriver toward the arrow pointed and wrench it to remove the cover.

A flat screwdriver whose width of blade is between 4 and 7 mm (5/32 - 9/32 inch) must be used.

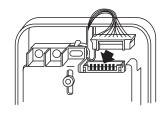

Mounting the cover



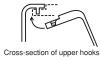

- 1) Hang the cover to the upper hooks (2 places).
- ② Mount the cover to the lower case


⚠ CAUTION

Insert the cover securely until the clicking sound is made. If not doing so, the cover may fall.

(3) Use the remote controller wire to connect it to the connector (CN90) on the controller circuit board on the indoor unit.

Refer to the 4 Setting the Pair Number Switch for details on controller circuit board on the indoor unit

(4) Install the signal receiving unit to the ceiling.

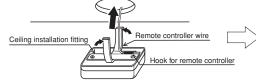

To remove the signal receiving unit, pull it down, secure the space for fingers, and remove the ceiling installation fitting.

- Hang the remote controller wire securely to the hook before installation.
- Hook the springs on the ceiling installation fitting first, and push the signal receiving unit from the bottom to install it to the ceiling.



- Do not install the signal receiving unit to the ceiling with holding the ceiling installation fitting.
- Doing so cause fingers to be caught leading to injury.


 Do not leave the remote controller wire hanging from the signal receiving unit.
- Doing so may cause disconnection of the wire or malfunction of the signal receiving unit.

NOTE: Confirm the installation direction first before installing the signal receiving unit.

- 3. Installation on the switch box or on the wall
- (1) Use the remote controller wire to connect it to the connector (CN90) on the controller circuit board on the indoor unit.

Refer to the 4 Setting the Pair Number Switch for details on controller circuit board on the indoor unit.

- (2) Seal the Signal Receiving Unit cord leadin hole with putty in order to prevent the possible entry of dew, water droplets, cockroaches, other insects, etc.
- When installing on the switch box, seal the connections between the switch box and wiring pipe with putty.

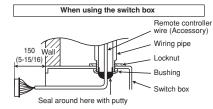


- When opening a hole using a drill for Signal Receiving Unit wire (or taking the wire out of the back of the Signal Receiving Unit),
- seal that hole with putty.


 When routing the wire via the portion cut off from the upper case, equally seal that portion with putty.



(3) Remove the ceiling installation fitting.

- Remove the screws (M4 \times 16) on the ceiling installation fitting.
- The screws (M4 x 16) are fixed with nuts from inside.
 Remove the cover, and fix the nuts to prevent the nuts from moving.

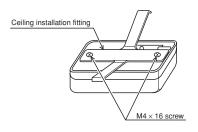


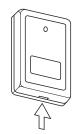

Insert the minus screwdriver toward the arrow pointed and wrench it to remove the


A flat screwdriver whose width of blade is between 4 and 7 mm (5/32 - 9/32 inch) must be used.

(4) Install the remote control wire to the terminal block.

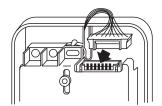


(5) Installing hole when the Signal Receiving Unit is installed on the wall direct.

- Cut the thin-wall portion inside the bottom case (oblique section) by a knife or a nipper.
 Take out the connected remote controller wire to the terminal brock through
- Take out the connected remote controller wire to the terminal brock through this space.

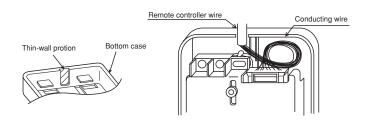

(6) Install the lower case on the switch box or directly on the wall.

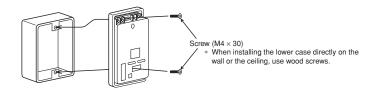





- 1 Hang the cover to the upper hooks (2 places).
- ② Mount the cover to the lower case

⚠ CAUTION

Insert the cover securely until the clicking sound is made. If not doing so, the cover may fall.

6 Emergency Operation


 $\textcircled{1} \ \ \textbf{ON/OFF lamp} \ (\textbf{lit} \ \textbf{when unit is operating; unlit} \ \textbf{when unit is not operating)} \\$

② Emergency operation


In cases where the remote control unit does not operate properly, use either the $\ \, \circlearrowleft \ \,$ COOL or $\ \, \overleftrightarrow{\hookrightarrow} \ \,$ HEAT button on the wireless remote control signal receiver to toggle the unit on or off. On cooler only units, pushing the $\ \, \overleftrightarrow{\hookrightarrow} \ \,$ HEAT button toggles the fan on and off.

Pressing the COOL or CHEAT button selects the following settings.

Operation mode	COOL	HEAT
Preset temperature	24 °C/75 °F	24 °C/75 °F
Fan speed	High	High
Air Direction	Horizontal	Down

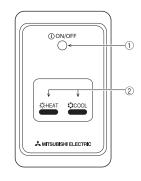


Figure

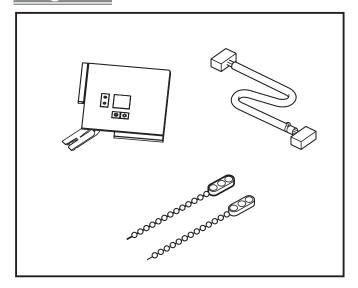

Dimensions

Unit: mm

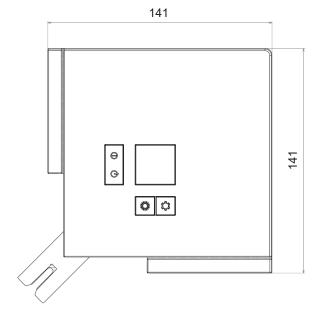

Descriptions

•Integrate the Signal Receiver in the corner panel.

Applicable Models

■ SLZ-M • FA series

Specifications

Model name	PAR-SF9FA-E
Operation indicator lamp	During operation: LED (green) lights, Abnormal condition: LED (green) blinks, Preparing for heating operation:LED.(orange) lights
Emergency operation	Cooling/heating switch (operate/stop) equipped.
Number of controllable units	Maximum 16 refrigerant systems in one group (At least one wireless signal receiving kit must be installed to each refrigerant system.)
Adapter wiring	Connect the 9-core cord with connector (attached) to CN90 of the indoor controller board of the indoor unit.
Signal distance	Within 7m in 45 degrees range from the front of the Signal Receiver

How to Use / How to Install

1. Accessories

Make sure that all the following accessories besides this installation manual are contained in the package.

		1
Model	Accessory name	Q'ty
	① Signal receiver	1
PAR-SF9FA-E	② Junction wire	1
	③ Fastener	2
	© accordance of	

2. Preparation for mounting signal receiver (The junction wire ② needs to be connected to the indoor unit.)

Note 1: Turn off main power supply to the indoor unit before installation.

Note 2: See the installation manual of the indoor unit in addition to this manual.


- Remove the grille from the indoor unit as described in the following procedure.
 - 1) Open the intake grille, loosen the screws for the corner panels, and remove the corner panels.
 - Remove the screw for the connector box cover, and open the connector box cover. Disconnect the connector of the wire coming from the vane motor.
 - 3) Remove the 4 screws fastened on the corners of the grille.
- 4) Disengage the 2 hooks of the grille from the indoor unit, and remove the grille.
- Perform the electrical work of the junction wire ② by referring to [Electrical work] in the installation manual of the indoor unit.

3. Mounting signal receiver

- Mount the signal receiver ① on either corner of the grille, which is marked with "□" or "〇" by referring to [Installing the grille] in the installation manual of the indoor unit.
- Note 1: "□" stamp : default signal receiver position.
- Note 2: Discard the corner panel removed from the position indicated with "□" or "○".
- After mounting the signal receiver ①, close the connector box cover. Replace the 3 corner panels, the intake grille, in the reverse order of the removal described above.


4. Check

- Make sure that there is no gap either between the body of indoor unit and the grille or between the ceiling surface and the grille. The gap may cause dew formation.
- · Make sure that the wires are connected properly.
- The colors of the male and female sections of the junction wire connectors must match.
- Otherwise the vanes do not move or the indoor unit does not respond to input from the wireless remote controller.

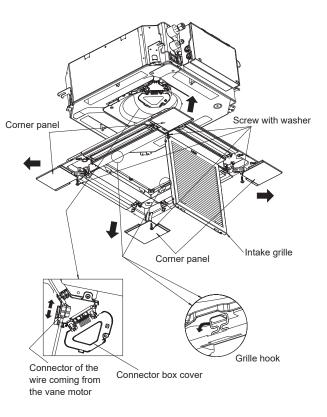



Figure

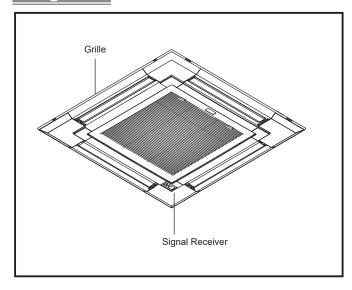

Descriptions

•Integrate the Signal Receiver in the corner panel.

Applicable Models


- PLA-ZM EA series
- PLA-M EA series
- PLA-SM EA series

Specifications

Model name	PAR-SE9FA-E
Operation indicator lamp	During operation: LED (green) lights, Abnormal condition: LED (green) blinks, Preparing for heating operation:LED.(orange) lights
Emergency operation	Cooling/heating switch (operate/stop) equipped.
Number of controllable units	Maximum 16 refrigerant systems in one group (At least one wireless signal receiving kit must be installed to each refrigerant system.)
Adapter wiring	Connect the 9-core cord with connector (attached) to CN90 of the indoor controller board.
Signal distance	Within 7m in 45 degrees range from the front of the Signal Receiver

Dimensions

Unit: mm

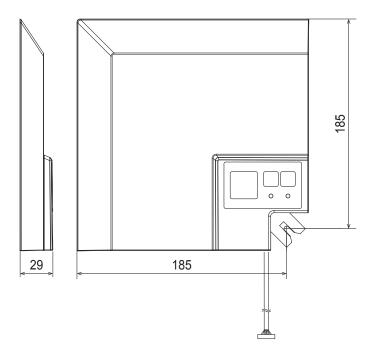

How to Use / How to Install

1 Preparation for installing SIGNAL RECEIVER

 Open the intake grille and remove the corner panel. The corner panel is in opposite to where refrigerant pipes are (where local wires are drawn into).


Note:

- · Discard only the removed corner panel.
- Reuse the screw of the removed corner panel to install the signal receiver
- When installing the signal receiver during grille installation, complete the wiring work of grille before proceeding to the following procedure.
- Loosen the 2 screws on the electrical box cover, and remove the cover by sliding; however, in this installation, the cover can hang temporarily.
- Specify the target unit for wireless remote controller operation.Follow the procedure below to set the pair number on the indoor controller board and the wireless remote controller.
- Setting pair number
 - The pair number setting is to specify the unit which is to be operated by wireless remote controller.

When specifying the unit is not required, this setting is not necessary.

The pair number is set to "0" on indoor unit (signal receiver) side and wireless remote controller side at an initial setting.

 When specifying the unit is required, match the pair number on the indoor unit (signal receiver) side and on the wireless remote controller side as shown in the table below. Make sure to turn off the main power before work.

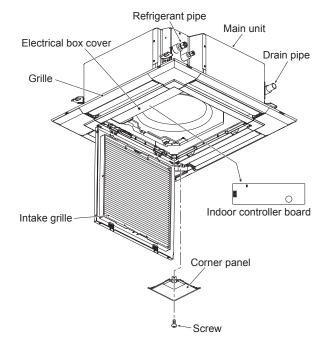


	Pair number of	indoor unit	
Pair number of wireless remote controller	Cut jumper wire J41, J42, or both on the	When the unit is in cor Set SW22.	mbination with PLFY-EM
	indoor controller board.	SW 22-3	SW 22-4
0	No need to cut.	ON	ON
1	Cut only J41.	OFF	ON
2	Cut only J42.	ON	OFF
3	Cut J41 and J42.	OFF	OFF

2 Installing SIGNAL RECEIVER

- Installation procedure for the default location
- 1. Pull out the lead wire of signal receiver from the square hole located in the corner of grille, where the removed corner panel was in the preparation procedure.
- 2. Pass the lead wire through the 2 hooking portions and inside the electrical box, and connect it to CN90 on the indoor controller board as shown below.

Adjust the lead wire length to allow the corner panel to be removed again, and fix it with the cable band.

3. Install the signal receiver by sliding it towards the arrow A, and fix in the corner with the screw. (Reuse the screw which was used to fix the removed corner panel.)

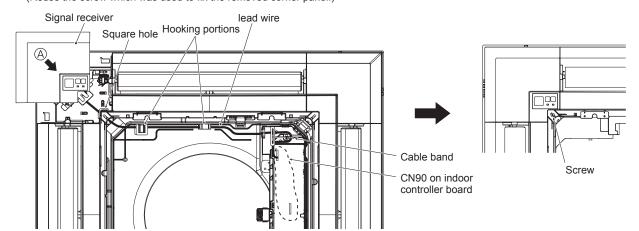


4. After completing the installation, attach the electrical box cover and the intake grille as they were.




INDOOR UNIT


• To install the signal receiver to the 2 locations other than the default location, follow the procedure below.

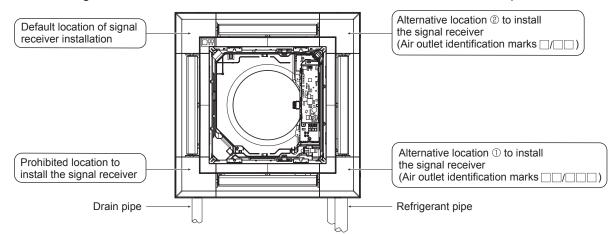


- Installation procedure for the alternative location ①
- Pass the lead wire of signal receiver through the square hall located in the corner of grille.
- 2. Loosen the 2 screws fixing the electrical box cover on the unit, and slide the cover to open.
- Route the lead wire of signal receiver (white, 9 poles) from the electrical box side on the unit, and certainly connect it to CN90 on the indoor controller board.
- 4. The lead wire of signal receiver must be held together without slack using the clamp into the electrical box.
- 5. Follow the reverse procedure of 2 to reinstall the electrical box cover on the unit.
- Install the signal receiver to the grille and fix with the screws.

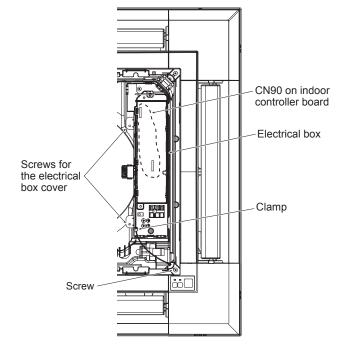

- Installation procedure for the alternative location ②
- 1. Pass the lead wire of signal receiver through the square hall located in the corner of grille.
- 2. Loosen the 2 screws fixing the electrical box cover on the unit, and slide the cover to open.
- Route the lead wire of signal receiver (white, 9 poles) from the electrical box side on the unit, and certainly connect it to CN90 on the indoor controller board.
- The lead wire of signal receiver must be held together without slack, and fixed with the cable band into the electrical box.
- 5. Follow the reverse procedure of 2 to reinstall the electrical box cover on the unit.
- Install the signal receiver to the grille and fix with the screws.

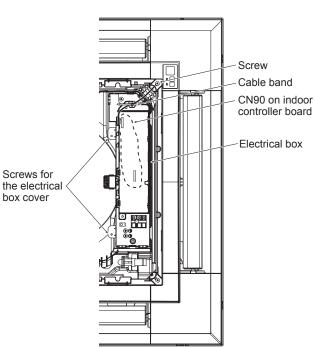

Photo

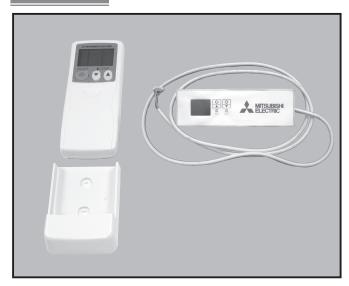

Descriptions

Enables the use of wireless remote controller for ceiling suspended models.

Applicable Models


■ PCA-M • KA series


Specifications


Operation indication	During operation: LED (green) is lit, Alarm: LED (green) flashes.
Emergency operation	Cooler/heater button (start/stop) is provided.
Number of units controlled	Max. 16 refrigerant systems per group (One or more wireless light receivers must be installed for each refrigerant system.)
Adapter wiring	9-wire cord (standard accessory) with connector is connected to the connector (CN90) on the indoor unit control board.
Light receiver range	7m or less, at within 45 degrees to the front of receiver (the range varies with conditions)
Operating conditions	Temperature: 0 to 40 °C , Humidity: 30 to 90% (no condensation)
Exterior	White gray (Munsell 4.48Y 7.92/0.66), ABS resin
Installation method	Attached to the brand label case of indoor unit.

Dimensions

Unit: mm

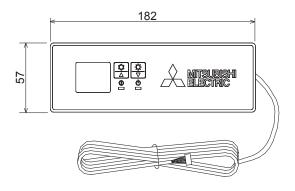

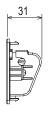

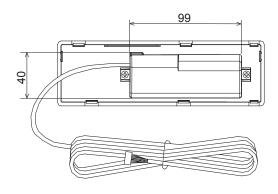

D2-191

How to Use / How to Instal

(1 | Making Sure of Components)


Make sure that the following components, along with this manual, are packed in the box.

Component	Q'ty
Wireless remote controller receiver	1
Wireless remote controller	1
Remote control holder	1
"AAA" LR03 alkaline batteries	2
4.1×16 wood screws	2
Cord retaining clips	2
Connection cord fixing seal (12×30 size)	1

2 How to Install) * Be sure to turn the power off before installing.


$\ensuremath{\boxdot}$ Removing the intake grille and the right side panel

· Slide the catch holding the intake grille backwards to open the grille. Remove the screw holding the side panel, and then slide the side panel forward to remove it.

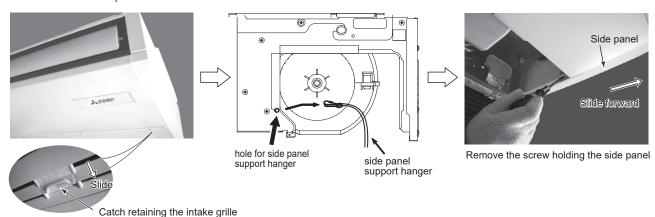


② Removing the existing brand label case

• Remove the brand label case (name plate with MITSUBISHI ELECTRIC) from the bottom right of the unit. If it is difficult to remove the case, use a flat-blade screwdriver, etc., taking care not to damage the panel.

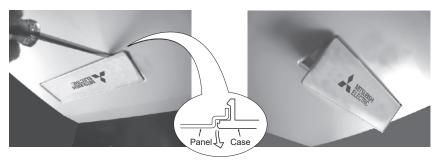

③ Installing to the indoor unit

- · Pass the receiver board connector through the right side of the square hole to which the brand label case was attached and then pull the connector and cord through the slit in the right side of the bottom panel.
- Fit the receiver into the square hole where the brand label case was attached.

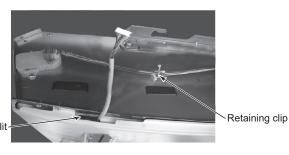



4 Laying out the lead wire

- · Pass the lead wire for receiver through the retaining clips.
- · Fix the lead wire for receiver with the clips on the ceiling side of the unit.





S Removing the beam and the electrical box cover

- Remove the beam.
- · Loosen the two screws at the bottom of the electrical box cover, and then slide the cover to the left to remove it.
- Pull down the electrical box.

Also on the opposite side Electrical box fixing screw Electrical box cover fixing screw




Beam Electrical box cover

© Connecting the receiver board connector to the control circuit board

- Pass the cord through the bush at the top right of the electrical box.
- Connect the connector to CN90 on the right of the control board.
- If the cord is loose, bundle it using the clamps under the above bush.



Bush

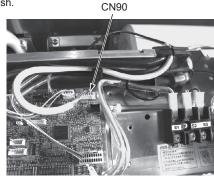


* The positions of the connectors may be different according to the model. Please refer to the wiring diagram to confirm the positions of the connectors.

② Reinstalling the removed components

• Reinstall the removed components in reverse order. (The brand label case is not needed.)

® Remote control holder

• To install the wireless remote controller on a wall, first attach the remote control holder to a wall.

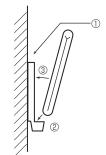

Fitting remote control into holder

- ① Fix the remote control holder to the wall using the 2 wood screws provided.
- ② Insert the remote control into the holder.
- 3 Push the remote control against the wall.

Removing remote control

Pull the top of remote control forward.


NOTE: The remote signal will reach the receiver over a distance of approx. 7m in a straight line and approx. 45° left or right. If the infrared receiver is affected by fluorescent light (especially, inverter type), it may not be able to receive the signal. Take this into consideration when installing fluorescent lights or replacing them.

This remote controller needs model number setting before use. Set the model number in the following order. Without setting the air conditioner will not work property. (The factory setting of model number is "001".)

- 1 Insert batteries.
- ② Press the SET button with something sharp at the end. MODE SELECT blinks and Model No. is lighted.
- ③ Press the temp () () button to set the Model Number.
- ④ Press the SET button with something sharp at the end.

MODE SELECT and Model No. are lighted for 3 seconds, then turned off.

Indoor Unit Model	(H/P)/(C/O)	Model No.
PCA-M·KA	Outdoor Heat pump	001
FCA-IVITA	Outdoor Cooling only	033

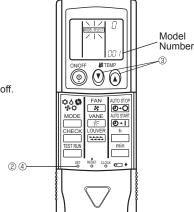

S S **0-0 ⊕+1**

Pair Number Setting


- This is the setting to specify the unit to operate with the wireless remote controller.
 Make setting for J41, J42 (Jumper wire) of indoor controller board and the pair number of wireless remote controller.
 The pair number setting is available with the 4 patterns as shown in the following table. Make setting for the pair number (J41, J42) of indoor controller board and the pair number of wireless remote controller which is used as shown in the following table. *The initial setting is Pair No. "0".
 - ① Press the SET button with something sharp at the end.

Start this operation from the status of remote controller display turned off.

MODEL SELECT blinks and Model No. is lighted.

- ② Press the min button twice continuously. Pair No. "0" blinks.
- ③ Press the temp () (a) button to set the pair number you want to set.
- 4 Press the SET button with something sharp at the end. Set pair number is lighted for 3 seconds then turned off.

Pair No. of wireless remote controller	Indoor PC board
0	Initial setting
1	Cut J41
2	Cut J42
3 ~ 9	Cut.l41 .l42

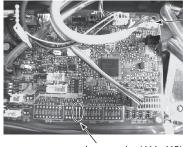



The positions of the connectors may be different according to the model.
Please refer to the wiring diagram to confirm the positions of the connectors.

Jumper wire (J41, J42)

Test Run

Measure an impedance between the power supply terminal block on the outdoor unit and the ground with a 500V Megger and check that it is equal to or greater than 1.0 $\mbox{M}\Omega.$


1)4



- ② Press the button twice continuously. (Start this operation from the status of remote controller display turned off.)
 - TEST RUN and current operation mode are displayed.
- ③ Press the ☐ (♠♦◘ ♣♦) button to activate COOL ♠ mode, then check whether cool air is blown out from the unit.
- ④ Press the (♣♦♠) to button to activate HEAT mode, then check whether warm air is blown out from the unit. (only H/P model)
- ⑤ Press the button and check whether strong air is blown out from the unit.
- 6 Press the VANE button and check whether the auto vane operates properly.
- The Press the ON/OFF button to stop the test run.

NOTE: • Point the remote controller towards the indoor unit receiver while following steps ② to ⑦.
• It is not possible to run in FAN, DRY or AUTO mode.



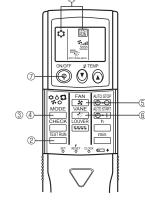

This setting is available only for Mr. Slim model. CITY MULTI model can be set by dip switch of indoor/outdoor control circuit board. Refer to technical data of CITY MULTI model to set dip switch.

Each function can be set according to necessity using the remote controller. The setting of function for each unit can only be done by the remote controller. Select function available from the Table3. Function selection using wireless remote controller is available only for refrigerant system with wireless function. Refrigerant address cannot be specified by the wireless remote controller.

The article below describes how to set "LOSSNAY connectivity" into "supported (indoor unit is not equipped with outdoor-air intake)" in Table 3 as an example.

 $\begin{tabular}{ll} \hline \end{tabular}$ Go to the function select mode Press the $\begin{tabular}{ll} \Box \end{tabular}$ button $\begin{tabular}{ll} \hline \end{tabular}$ button visible twice continuously.

(Start this operation from the status of remote controller display turned off.) CHECK is lighted and "00" blinks.

Press the temp (1) button © once to set "50". Direct the wireless remote controller toward the receiver of the indoor unit and press the

② Setting the unit number

Press the temp (a) button (and (to set the unit number "00". Direct the wireless remote controller toward the receiver of the indoor unit and press the important button (3).

3 Selecting a mode

Enter "03" to change the LOSSNAY connectivity setting using the ② © and buttons. Direct the wireless remote controller toward the receiver of the indoor unit and press the $\bigcap_{n=1}^{n}$ button \triangle .

Current setting number:

1=1 beep (1 second)

2=2 beeps (1 second each)

3=3 beeps (1 second each)

* If a mode number that can not be recognized by the unit is entered, 3 beeps (3 beeps of 0.4 seconds duration) will be heard.

Reenter the mode number selecting.

* If the signal was not received by the sensor or an error occurred during transmission, you will not hear a beep or a "double beep" may be heard. Press the button again.

④ Selecting the setting number Use the ⑦⑤ and ⑥⑤ buttons to change the LOSSNAY connectivity setting to "02". Direct the wireless remote controller toward the sensor of the indoor unit and press the nbutton ⑥.
At this time, current setting number for selected mode number will be output

by the interrupted buzzer sounds and the blinks of operation indicator.

Output: setting number = 1 → beep beep (0.4 second + 0.4 second) ×1

2 → beep beep (0.4 second + 0.4 second) ×2 $3 \rightarrow \text{beep beep (0.4 second + 0.4 second)} \times 3$

* If a setting number that can not be recognized by the unit is entered, 3 beeps (3 beeps of 0.4 seconds duration) will be heard (unit will beep only). Reenter the setting number selecting.

* If the signal was not received by the sensor or an error occurred during transmission, you will not hear a beep or a "double beep" may be heard.

Press the button again.

If the number that can not be set is input, the former setting number will be set.


(5) To select multiple functions continuously


Repeat steps (3) and (4) to change multiple function settings continuously.


6 Complete function selection

Direct the wireless remote controller toward the sensor of the indoor unit and press the n button .


NOTE: Whenever changes are made to the function settings after construction or maintenance, be sure to record the added functions with an "O", in the "Check" column provided on the chart.

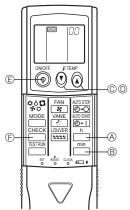

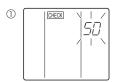

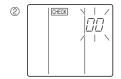



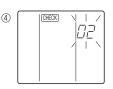

Other function selections
Now that you know how to change LOSSANY connectivity setting, there are several other settings that can be changed as well.
The following table lists the various settings that can be changed through the remote controller and the default settings.

Function	Settings	PCA-M·KA
Power failure	Not available	*1
automatic recovery	Available	*1
Indoor temperature	Indoor unit operating average	0
detecting	Set by indoor unit's remote controller	
	Remote controller's internal sensor	
LOSSNAY connectivity	Not supported	0
_	Supported (indoor unit is not equipped with outdoor-air intake)	
	Not supported (indoor unit is not equipped with outdoor-air intake)	
Filter sign	100Hr	
	2500Hr	0
	No filter sign indicator	
Fan speed	Quiet	
	Standard	0
	High ceiling	
Up/down vane setting	No vanes	
	Equipped with vanes (No.1 set)	0
	Equipped with vanes (No.2 set)	

^{*1} Power failure automatic recovery initial setting depends on the connecting outdoor unit.

Things to remember when entering function selections: The basic procedure for entering function selections is the same as described for switching between LOSSNAY connectivity. However, there are some differences at step ② for selecting the unit number, step ③ for selecting the mode number and step (a) for selecting the setting number.

The following Tables 4 and 5 list the various function settings, mode numbers and setting numbers.

Table 4 details the function of the entire refrigerant system while Table 5 shows the function that can be set for the indoor unit.

Table 4. Itemized functions of the entire refrigerant system (select unit number 00)

Table 4. Itemized functions of the entire reingerant system (select unit number 60)					
Mode	Settings	Mode No.	Setting No.	Check	Remarks
Power failure	Not available		1		
automatic recovery	Available (Approximately 4-minutes wait-period after power	01	2		Approximately 4-minutes wait-
,	is restored.)				period after power is restored.
Indoor temperature	Indoor unit operating average		1		
detecting	Set by indoor unit's remote controller	02	2		
	Remote controller's internal sensor		3		
LOSSNAY	Not supported		1		
connectivity	Supported (indoor unit is not equipped with outdoor-air intake)	03	2		
,	Not supported (indoor unit is not equipped with outdoor-air intake)		3		

Table 5. Itemized functions of the indoor unit (select unit numbers 01 to 04 or 07)

Mode	Settings	Mode No.	Setting No.	Check	Remarks
Filter sign	100Hr		1		
	2500Hr	07	2		
	No filter sign indicator		3		
Fan speed	Quiet		1		
	standard	08	2		
	High ceiling		3		
Up/down vane	No vanes		1		
setting	Equipped with vanes (No.1 set)	11	2		
	Equipped with vanes (No.2 set)		3		


- Setting the unit numbers
 Set "00" as the unit number when setting function from Table 4.
 When setting function from Table 5.
 - When setting function for an indoor unit in an independent system, set the unit number to 01.
 - When setting function for a simultaneous-Twin Triple quadruple indoor unit system, assign unit numbers from 01 to 04 to
- When setting function for a simultaneous-Twin Triple quadruple indoor unit system, assign unit numbers from 01 to 00 each indoor unit.
 When setting the same functions for an entire simultaneous Twin Triple quadruple-indoor unit system, assign "07" as the unit number.
 ③ Selecting the mode number Select from Table 4 and Table 5.
 ④ Selecting the setting number.

Self-Check


- ① Turn on the main power to the unit.
 ② Press the ☐ button twice continuously.
 (Start this operation from the status of remote controller display turned off.)
 - (A) CHECK begins to light.
 - ® "00" begins to blink.
- 3 While pointing the remote controller toward the unit's receiver, press the $\overset{\mathtt{h}}{\sqsubseteq}$ button. The check code will be indicated by the number of times that the buzzer sounds from the receiver section and the number of blinks of the operation lamp.
- 4 Press the ON/OFF button to stop the self-check.



① Output pattern (Mr.Slim model / CITY MULTI model) [Output pattern A]

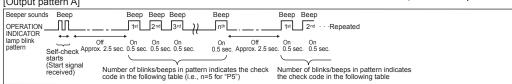

[Output pattern B]

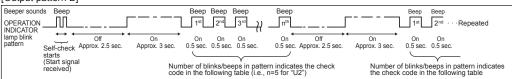

② Check code (Mr.Slim model)
[Output pattern A] Errors detected by indoor unit

Wireless remote controller	Wired remote controller		
Beeper sounds/OPERATION INDICATOR lamp blinks (Number of times)	Check code	Symptom	Remarks
1	P1	Intake sensor error	
2	P2, P9	Pipe (Liquid or 2-phase pipe) sensor error	
3	E6,E7	Indoor/outdoor unit communication error	
4	P4	Drain sensor error/Float switch connector open	
5	P5	Drain pump error	
6	P6	Freezing/Overheating safeguard operation	
7	EE	Communication error between indoor and outdoor units	
8	P8	Pipe temperature error	
9	E4	Remote controller signal receiving error	
10	_	-	
11	_	_	
12	Fb	Indoor unit control system error (memory error, etc.)	
No sound	E0, E3	Remote controller transmission error	
No sound	E1, E2	Remote controller control board error	
No sound		No corresponding	

[Output pattern B]	Errore detected	by unit other than	indoor unit (outdo	or unit oto \
IOUTDUT DATTERN BI	Errors defected	by linit other than	inaoor unit (outao	orunit etc.)

Wireless remote controller	Wired remote controller	_	
Beeper sounds/OPERATION INDICATOR lamp blinks (Number of times)	Check code	Symptom	Remarks
1	E9	Indoor/outdoor unit communication error (Transmitting error) (Outdoor unit)	
2	UP	Compressor overcurrent interruption	
3	U3,U4	Open/short of outdoor unit thermistors	
4	UF	Compressor overcurrent interruption (When compressor locked)	
5	U2	Abnormal high discharging temperature/ insufficient refrigerant	For details, check
6	U1,Ud	Abnormal high pressure (63H worked)/Overheating protection operation	the LED display of the outdoor
7	U5	Abnormal temperature of heat sink	controller board.
8	U8	- (Outdoor unit error)	
9	U6	Compressor overcurrent interruption/Abnormal of power module	
10	U7	Abnormality of super heat due to low discharge temperature	
11	U9,UH	Abnormality such as overvoltage or voltage shortage and abnormal synchronous signal to main circuit/Current sensor error	
12	_	-	
13	_	_	
14	Others	Other errors (Refer to the technical manual for the outdoor unit.)	

On wireless remote controller
 The continuous buzzer sounds from receiving section of indoor unit.

Blink of operation lamp

On wired remote controller
Check code display in the LCD.

③ Check code (CITY MULTI model) [Output pattern A] Errors detected by indoor unit or LOSSNAY unit [Output pattern B] Errors detected by unit other than indoor unit (outdoor unit, etc.)

Wireless remote controller	Wired remote controller	
Beeper sounds/OPERATION INDICATOR lamp blinks (Number of times)	Check code	Remarks
1	1000 ~ 1999	
2	2000 ~ 2999	
3	3000 ~ 3999	
4	4000 ~ 4999	
5	5000 ~ 5999	
6	6000 ~ 6999	
7	7000 ~ 7999	
8	0000 ~ 0999	
9	8000 over	

^{*1} Refer to service handbook of outdoor unit for the detail.

On wireless remote controller
The continuous buzzer sounds from receiving section of indoor unit. Blink of operation lamp
On wired remote controller
Check code display in the LCD.


^{*1} If the beeper does not sound again after the initial 2 beeps to confirm the self-check start signal was received and the OPERATION INDICATOR lamp does not come on, there are no error records.

*2 If the beeper sounds 3 times continuously "beep, beep, beep (0.4 + 0.4 + 0.4 sec.)" after the initial 2 beeps to confirm the self-check start signal was received, the specified refrigerant address is incorrect.

^{*2} If the beeper does not sound again after the initial 2 beeps to confirm the self-check start signal was received and the OPERATION INDICATOR lamp does not come on, there are no error records.

*3 If the beeper sounds 3 times continuously "beep, beep, beep (0.4 + 0.4 + 0.4 sec.)" after the initial 2 beeps to confirm the self-check start signal was received, the specified address is incorrect.

Figure

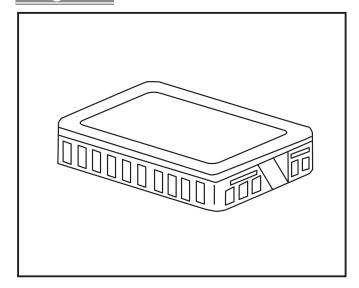

Descriptions

Enables to pick up the room tempreture at the remote position.

Applicable Models


- S-series models
- P-series models

Specifications

External dimensions (mm)	120 (H) x 70 (W) x 15 (D)		
Exterior	White gray (Munsell 4.48Y 7.92/0.66) Material: ABS resin		
Operating conditions	Temperature: -20 to 65 °C Humidity: 30 to 90% RH (no condensation)		
Installation method	ounting on single-type switch box (JIS C8336) or directly mounting on wall		
Accessory	-wire cable (12m), Connector with post, Fixing screw (x2)		
When combining with	environmental measurement controller		
Temperature measuring rar	ge -20 to 65 °C		
Measurement resolution 0.1 °C (10 to 35 °C), 0.5 °C (other temperature ranges)			

Dimensions


Unit : mm

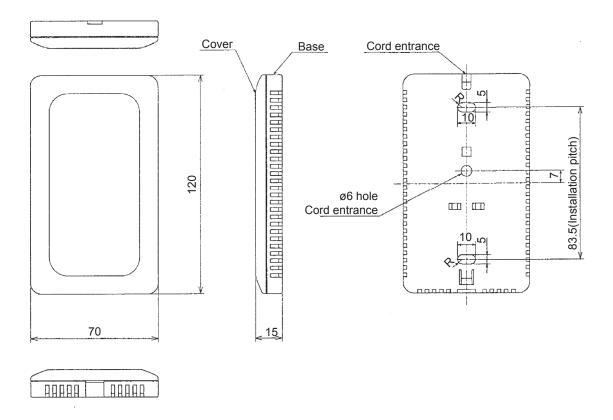

How to Use / How to Insta


How to Install


- (1) Determine the installation of the remote sensor (switch box). The follwing items must be observed.
 - ①Select a place where the remote sensor will detect an average temperature of the room, and where the sensor will not be subject to direct sunlight, heat sources, or the blow-off from the air condi-
 - ②Install the sensor within the length of the cable provided (12m). (The cable cannot be extented. If extented, it may cause misoperation due to noise.)
 - 3The following parts must be procured at the site.

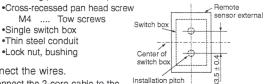

(2)Connect the wires.


•Connect the 2-core cable to the terminal block in the lower case. Peel the sheath of the 2-core cable as shown in Fig.1, and correctly wire it as shown in Fig.2.

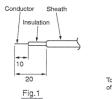


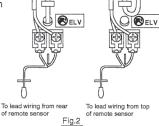

- •The wiring connection of the indoor unit's electrical box and remote sensor is an shown in Fig.3. There are three methods of connecting the 2-core cable to the electrical box
- Exchange 2-core cable (connector 20)
 - ①When using the connector attached to the end of the 2-core cable as it is.
 - @When cutting the connector attached to the end of the 2-core cable and connecting the cable to the terminal block in the I.B. (Indoor Board).
- 3When using the enclosed post for connection and convert


The above three methods are used according to the indoor unit being used. If the 2-core cable is to be embedded in the wall, follow Fig.4.

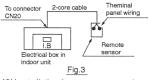

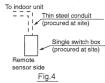

(3)Install the lower case on the wall or switch box.

The recommended tightening torque for installing the 2core cable to the terminal block is 1.17N·m.

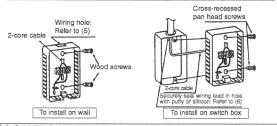

- **△CAUTION**
- •If the screws are tightened too hard, the case may break or deform.
- Install the sensor on a flat wall. If installed on a bumpy wall, the case may break or trouble may

(4) Fit the upper case.



Catch the two upper claws first, and fit the case as shown on the left.

•Securely fit the case until a catching sound is heard. It may drop off if is not fitted

To remove the case, fit a flat-flap screwdriver into the claw section as shown below, and move the screwdriver in the direction of the arrow.




ACAUTION


 Do not turn the screwdriver when it is fit into the claw section as the claws may be broken.

(5) Wiring hole for direction installation on wall, etc. Cut the thin section (shaded section) of the lower case with a knife

or pair of nippers, etc. The 2-core cable connected to the terminal block is led out from here.

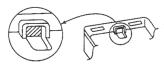


- (6) Securely seal the wiring lead hole with putty or silicon to prevent dew, water drops, cockroaches and other insects from entering.
 - •When installing directly on the wall, seal the section cut on the lower case with putty or silicon.
 - If the wiring is to be passed through a hole in the wall (when leading the wiring from the rear of the remote sensor), seal the hole in
 - •When installing on a switch box, seal the connection of the switch box and conduit with putty or silicon.

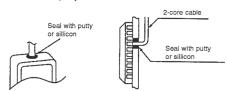

To lead wiring from top of remote sensor

To lead wiring from rear of remote sensor,

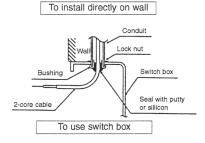


Setting of indoor unit

When the remote sensor is connected to the indoor unit and room temepature detection poisition is changed, reset the setting of "Set temp. 4-deg. up" in the heating mode as shown below.

- 1 K control models
- : DIP switch Nos 1-6 on the control
- PCB of the indoor unit.
- ② M-NET control models: DIP switch Nos 3-8 on the control
 - PCB of the indoor unit.
- 3 A control models
- : Refer to A-control air-conditioners
- SERVICE TECHNICAL GUIDE.

Figure

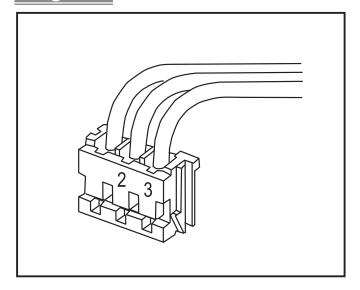

Descriptions

•Operation other than ON/OFF (adjustment of temperature, fan speed, and air direction, for example) can be performed even when remote controller operation is prohibited.

Applicable Models


- S-series models
- P-series models

Specifications

Function	ON/OFF by external signal External signal ON (remote control disabled) / OFF (remote control enabled) switch able
Input signal	No-voltage contact (ON/OFF level signal)
Connector	3P (connected to CN32 on outdoor unit control board)
Cable type	3-wire cable, for extension: Sheathed vinyl cord or cable (0.5 to 1.25mm²)
Cable length	2m (max. 10m when extended locally)

Dimensions

Unit: mm

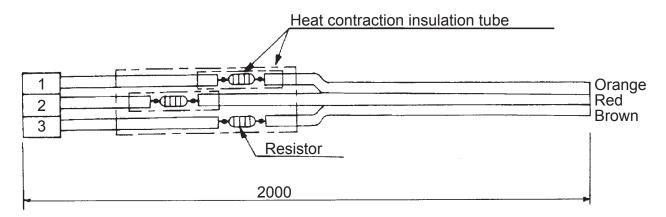

1 Connecting to the Indoor Unit

- 1. Connect to the connector CN32 on the indoor controller board.
- 2. Press the connector for the remote ON/OFF adaptor into the CN32 connector. The connector can only be connected in one direction only. Do not force the connection.

2 Locally Procured Wiring

With the remote ON/OFF adaptor, variations of connection method with the locally installed circuit will provide different types of operating configurations.

Example: External timer operation, remote control operation

- 1. Basic Connection Method
 - SW1 Operating switch
 - Performs operation/stopping of indoor unit.
 - SW2 Selecting switch

For selecting whether the operation/stopping is to be performed by external circuit or remote control.*


- * Also includes system controller (central controller).
- 2. Switch Settings (Refer to table at right for details.)


SW2 - If on.

- Operation/stopping cannot be controlled from remote controller.
- Other operations (such as temperature settings and changing fan speed) can be performed.
- Operation/stopping can be performed by SW1.

SW2 - If off.

- Operations can be performed from remote controller.
- Operation/stopping cannot be performed by SW1.

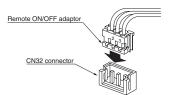

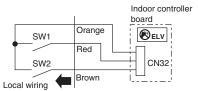



		SI	W2
Ì		ON	OFF
Remote controller		Cannot perform operation/stopping	Can perform operation/stopping
CVV4	ON	Operation	Cannot perform
SW1	OFF	Stopping	operation/stopping

3 Examples of Usage


In either case, there is a 5 to 6 second delay from the time when the operating command is sent until the unit operates.


1. To perform operation/stopping by only remote operation or external timer and to prohibit operation/stopping by the remote controller, use the following circuits.

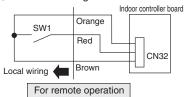

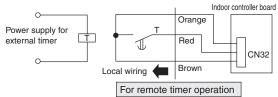


2. To perform operation/stopping by remote operation or external timer and allow operation/stopping by the remote controller, use the following circuits.

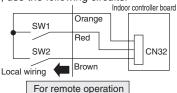

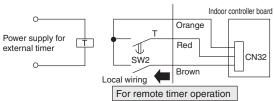

3. To start operation by remote operation and then freely use remote controller, use the following circuit.

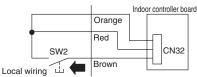

Use a momentary switch (a switch that is turned on manually and turns off automatically) for $\mbox{SW2}.$

Press SW2 (for 1 second or more) and the operation starts. After this, the remote controller can be used for operations.

Indoor controller board

4. To permit/prohibit the use of the remote controller by an external circuit.




If SW2 is on, operation cannot be performed by the remote controller.


If SW2 is off, operation is permitted.

4 Wiring Restrictions

Keep the length of wire from the circuit board of the indoor unit within 10 meters. Excessive length could cause improper operation. Use a transit relay when extending wiring such as remote wiring.

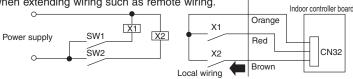

Figure

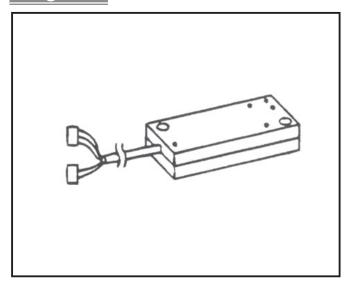

Descriptions

Extraction of non-voltage contact output.
*Use of optional [Remote Operation Adapter] and "remote display panel" Part to be provided at your site) provides nonvoltage contact outputs of signals (operation, error) and operation/stop input function.

Unable to use with wireless remote controller. (except PKA-M·LAL/KAL)

Applicable Models


- S-series models
- P-series models (Except PKA-M·LA(L), PKA-M·KA(L)

Specifications

Power			Supplied from indoor unit		
Externa	l dimensi	ons (mm)	160 x 70 x 30		
Exterio	r		Material: ABS resin, Color: Gray (Munsell 3.07Y 6.16/0.33)		
Weight			200g		
Operation	ng conditi	ons	Indoor only Temperature: 0 to 40 °C , Humidity: 35 to 85%RH (no condensation)		
Connec (indoor	ting cable unit)		5-wire (3 + 2) cable with connector (9-pin, 4-pin)		
Output	signal		No-voltage "a" contact (relay contact method)		
Number of Contacts Contact capacity		of Contacts	2 (Operation / Alarm)		
		capacity	200V AC (30V DC)/1A or less		
	Minimum load		10mA		
Input si	signal		Pulse signal (instantaneous non-voltage "a" contact), pulse width: 200ms or more		
	Number	of Contacts	1 (start/stop)		
Input/οι		Туре	CV, CVS, or equivalent sheathed vinyl cord/cable		
signal c		Diameter	Twisted: 0.5 to 1.25mm2, Single: Φ 0.65 to Φ 1.2mm		
(locally p	nopaieu)	Distance	Output signal cable: Max. 100m Input signal cable: Max. 10m (Extension relay must be used when exceeding 10m)		

^{*} This kit cannot be used with a wireless remote controller. Water leakage alarm will not be displayed if the unit is built into the ceiling (PDH)

Unit: mm

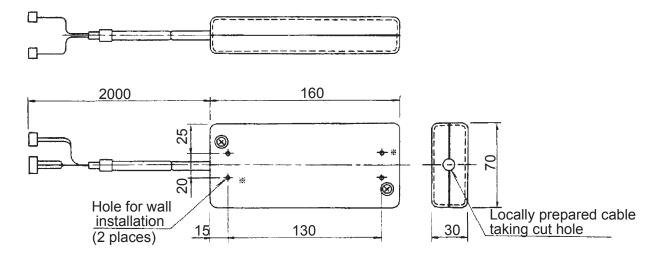

How to Use / How to Install

1 Confirming the Supplied Parts

(1) Parts Provided

Check that the box includes the following parts in addition to this installation manual.

Parts	① Remote operation adaptor unit	② Cord clamp	③ Wall mount bracket
Shape	(with 2 meter wire for connecting with indoor unit)	(Use this clamp if the local wiring is too thick to be held by the clamp inside the main unit.)	0 0
Quantity	1	1	1
Parts	Screws for mounting ③	© Cushion material	® Tie-wrap
Shape	3.5 x 12 (Black)	(With adhesive on both sides.)	(Use this for bundling lead wires.)
Quantity	4	1	5
Parts	⑦ Cord clamp	® Screws for mounting ⑦	Screws for mounting main unit
Shape	QD)	3.5 x 12 (Black)	3.5 x 12 (Black)
Quantity	5	5	2


(2) Locally Procured Parts


Note: Please keep LVD. LVD;Low Voltage Directive (EC Directive of Europe)
Apply some countermeasure for wiring and relay not to be touched from outside.

① Wiring should be covered by the insulation tube. ② Use relay with EU regulation.

Item	Part Name	Model & Specifications			
External output function	External signal output wire	Use a vinyl cord with sheath or cable Electric wire type: CV, CVS or equivalent Electric wire size: 0.5 mm² to 1.25 mm² Single wire: \$0.65 mm to \$1.2 mm			
	Display lamp, etc.	No-voltage contact AC 220 to 240 V (DC30V), 1A or less			
External input function	External signal input wire	Use a vinyl cord with sheath or cable Electric wire type: CV, CVS or equivalent Electric wire size: 0.5 mm² To 1.25 mm² (Single wire: \$\phi\$0.65 mm to \$\phi\$1.2 mm)			
	Switch	No-voltage momentary contact (Operation Stop is switched by input of a pulse of 200 ms or more)			

2 External Dimension Drawing

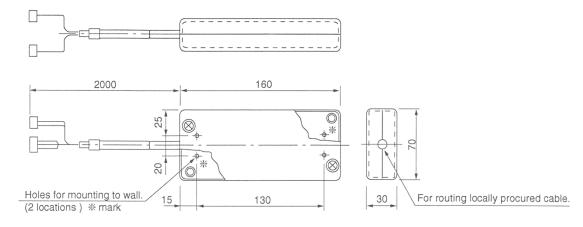

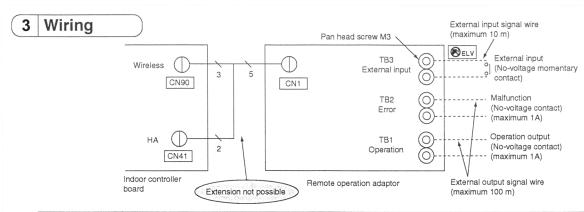


△Caution

- 1) TB3 is a dedicated terminal for contact input. Do not apply voltage. Applying voltage will cause damage to the circuit board inside the for the indoor unit controller.
- 2) Always use the cable provided for connecting the unit to the indoor unit. Never make modifications to extend this cable. Extensions could cause the cable to be affected by external noise which could lead to mis-operation. If an extension is needed, refer to specification chart in "6. Product Specifications" a follow it when extending the external signal wire.
- <Connecting to the indoor unit>
- ① If external output functions are used Insert the 9-electrode (3 core) side of the cable provided into CN90 on the controller circuit board for the indoor unit.
- ② If external input functions are used Insert the 4-electrode (2 core)side of the cable provided into CN41 on the controller circuit board for the indoor unit.
 - # The connector can only be inserted in one direction. Be sure to check that the connector is in the proper direction before inserting. Forcing the connector will cause damage.

How to Install


There are three ways to mount the remote operation adaptor main unit: [A] Using mounting bracket, [B] Mounting directly, and [C] Using the cushion material.


(1) Installation Example (Suspended Type)

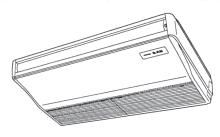


△Caution

- 1) When mounting the remote operation adaptor main unit, be sure to use the mounting hardware to mount it to a wall or beam so that an inspection port is available for servicing.
- 2) If there is any loose remaining wire after installation, use a tie-wrap ® to bundle it.

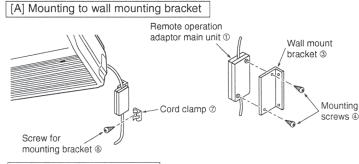


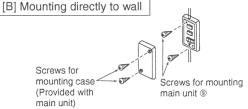

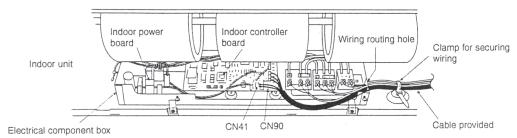




(2) Installation Example 2 [Cassette Type]

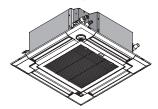


△Caution

- 1) When mounting the remote operation adaptor main unit, be sure to use the mounting hardware to mount it to a wall or beam so that an inspection port is available for servicing.
 2) If there is any loose remaining wire after installation, use a tie-wrap
 ⑤ to bundle it.

[A] If recess-mounted into ceiling

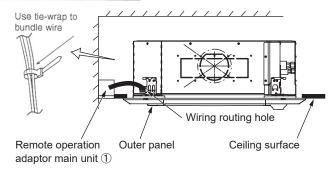

Figure

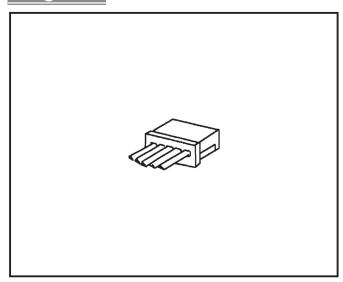

Descriptions

•This adapter enables control of several units with a multiple remote control display.

pplicable Models


- S-series models
- P-series models

Specifications

Function	Connecting cable to output status signal of the air conditioner, and ON/OFF by external (pulse) signal.
Input signal	Pulse signal (no voltage instantaneous ON contact) Pulse duration 200m/s or more.
Connector	5P (connector to CN51 or CN52 on indoor unit control board)
Cable type	5-wire vinyl cable, for extension: sheathed vinyl cord or cable (0.5 to 1.25 mm²)
Cable length	2 m (max. 10 m when extended locally)
Output capacity)	DC12V 75 mA (Max 0.9W)

Dimensions

Unit: mm

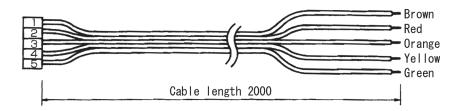

How to Use / How to Install

1. Parts list

Make sure that the following items are included in the package.

Multiple Remote Controller Adapter 2 m (6-1/2 ft)

• PAC-SA88HA-E: 1 pc.

2. Connection to the Indoor Unit

Connect the connector of the Multiple Remote Controller Adapter to the connector CN51 or CN52 of the indoor unit control board as necessary.

The connector can only be connected in one direction. Do not force the connection.



3. Locally Procured Parts

All parts other than the Multiple Remote Controller Adapter are procured locally.

The items required will depend on the connection method. Refer to the example of use shown below.

1 Switch Single pole, single action switch.

≜CAUTION	Select a part with contacts for extremely low amperage. 5 or 12 VDC is used at the contact points for the switch so there is a load of only approximately 1 mA. Improper switch selection could cause improper operation.

2 Relay Use relays that meet the following specifications.

Operation coil Rated voltage: 12 VDC

Power consumption: 0.9 W or less

* Use the diode that is recommended by the relay manufacturer at both ends of the relay coil.

3 Transit relay When the wiring work as described in 6. Wiring Restrictions is required, this relay is used.

4 Control cable The length of the electrical wiring for the PAC-SA88HA-E is 2 meters (6-1/2 ft).

To extend this length, use sheathed 2-core cable. Don't extend the cable more than 10 meters (32 ft).

Control cable type: CVV, CVS, CPEV or equivalent Cable size: 0.5 mm² ~ 1.25 mm² (16 to 22 AWG)

⚠CAUTION

- 1. Wiring should be covered by insulation tube with supplementary insulation.
- 2. Use relays or switches with IEC or equivalent standard.

Maximum cable length is 10 m (32 ft.)
* Every time the SW is pushed (the pulse

is inputted), it reacts against ON/OFF.

3. The electric strength between accessible parts and control circuit should have 2750 V or more.


4. Locally Procured Wiring

Basic connection methods for following models are shown below as examples. For details, refer to the CITY MULTI DATA BOOK, Electrical Wiring Diagram etc.

Indoor unit "-E" type input/output connector (CITY MULTI series)

Polarity (output terminal)

No.	Color	CN51	CN52
1	Brown		+
2	Red		-
3	Orange	+	-
4	Yellow	-	-
5	Green	-	

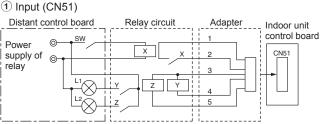

SW: Distant ON/OFF switch


L1: Status lamp L2: Error lamp

X: Relay (a point of contact, fixed DC1 mA) Y, Z: Relay Contact rating voltage ≥ 15 VDC Contact rating current ≥ 0.1 A Minimum applicable load ≤ DC1 mA

ON/OFF (Pulse) input specification

Item Description Pulse sign (Normally open) Input signal Standard of pulse 200 ms 200 ms or more or more


② Input (CN52)

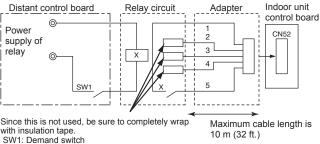

X: Relay (coil ≤ 0.9 W, 12 VDC)

SW1 Indoor unit Forced thermo-OFF OFF Normal running

3 Output (CN52)

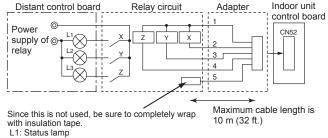

Fan motor output (SW1-5 OFF)

Thermostat ON (SW1-5 ON) L2: Cooling/Dry status lamp


L3: Heating status lamp X, Y, Z: Relay (Coil with fixed 12 VDC, a power consumption of 0.9 W or less)

5. Wiring Restrictions

Keep the length of the cable connecting to the circuit board of the indoor unit shorter than 10 meters (32 ft). Longer than 10 meters (32 ft) could cause improper operation.

Use a transit relay when extending wiring such as remote wiring.

When using a polarized relay (such as a relay with a diode), connect the relay in the correct polarity to avoid damage to the indoor unit circuit board.

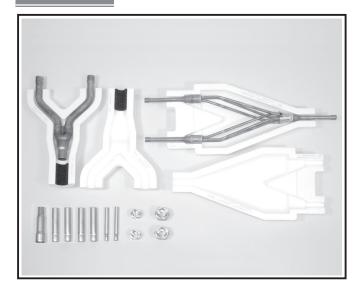

Descriptions

Branch pipe for Multi-System Twin type Twin use. (50:50)

Applicable Models


- PUZ-ZM71VHA type
- PUZ-ZM100,125,140VKA type
- PUZ-ZM100,125,140YKA type
- PUZ-M100,125,140VKA type
- PUZ-M100,125,140YKA type


[R32 type]

Specifications


	Distribution ratio	Outdoor unit capacity is divided into two (50:50)
Main body	Number of distribution pipes	1 each for liquid pipe and gas pipe
	Pipe material	Phosphate deoxidized copper C1220T-OL (JIS H3300)
Accessory	Pipe cover	Styrofoam molding (1 each for liquid pipe and gas pipe)
	Joint	7 joints (4 types)



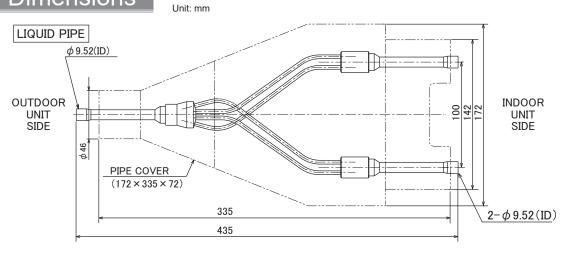

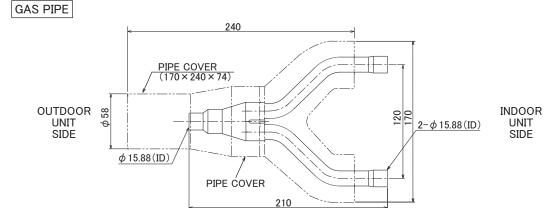

JOINT(Accessory)

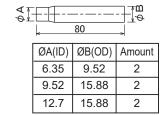


φ ()		80	
	ØC(ID)	ØD(OD)	Amount
	19.05	15.88	1

How to Use / How to Insta


Package Air-conditioner Optional Parts Instruction Sheet for Simultaneous Twin Distributing Pipe

Make sure that you have all the following parts before installation.

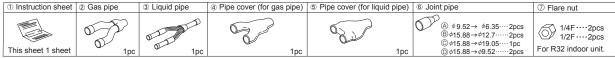

See the following for the specifications of gas pipe ②, and liquid pipe ③,

■ MSDD-50TR2

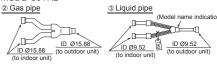


- (Model name indication)

 ※ Procure the following at local site in addition to the above
 - Tape for heat insulator sealing
 - Extended pipe for refrigerant pipe


Pipe size and limit to refrigerant pipe


■For R32 pov	ver inverter									(Table 1)
Outdoon	Pipe size (mm)				Actual pipe length (m)		Height Difference (m)		Note 1	
Outdoor unit capacity	Gas pip	oe side	Liquid p	ipe side	Indeed Outdeed	A . D . C-	Indeed Indeed	Indoor-Outdoor		Number
unit capacity	Outdoor unit side	Indoor unit side	Outdoor unit side	Indoor unit side	iridoor-Outdoor	A + B + C=	indoor-indoor	maoor-Outaoor	iridoor-iridoor	of bends
ZM71	Ø15.88	M35, 50 Ø12.7(1/2)	Ø9.52	M35, 50 Ø6.35(1/4)	-	55m or less	B-C =	H=	h =	
ZM100-140	(5/8)	M60, 71 Ø15.88(5/8)	(3/8)	M60, 71 Ø9.52(3/8)		100m or less	8m or less	30m or less	1m or less	15 or less


Note 1: Limit the number of bends for refrigerant pipes to 8 in each of the < A + B> and < A + C> ranges. % See the installation manual provided with the main unit for details on chargeless pipe length and refrigerant additional charge amount.

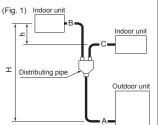

Pipe connections

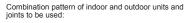

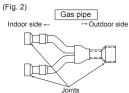

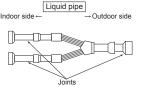

- 1. Perform work, taking care with the followings:

 Be sure to check the combination pattern of indoor and outdoor units and joints to be used (Table 2).

 Be sure to observe the limits to refrigerant pipe length and number of bends (Table 1).

 Insert the refrigerant pipe (procured at local site) and joint (§) into the expanded pipe portions of distributing pipe (this product) until they stop, and then connect them using anti-oxidization soldering.

 There is no restriction on the orientation of distributing pipe (this product)during installation.

 Take care that no foreign object, such as dust, enters during pipe connecting work.

 Remove the tag of liquid pipe (§) after checking it.

 Preprovided injust (§) will be precessed described.

- The provided joints ® will be necessary depending on the capability of model used: See (Table 2), and connect the joints as shown in (Fig. 2).


 Do not bend or widen the distributing pipe (liquid pipe).
- For R32 power inverter

<Table 2>

Outdoor unit	Indoor unit	Joint to be used	
ZM71	35+35	Outer Ø15.88 – inner Ø12.7 [indoor gas pipe side], Outer Ø9.52 – inner Ø6.35 [indoor liquid pipe side]	
ZM100	50+50	®Outer Ø15.88 – inner Ø12.7 [indoor gas pipe side],	
ZM125	60+60	No leight in account.	
ZM140	71+71	No joint is necessary.	

Note: Installation positions in brackets [

Heat insulation work

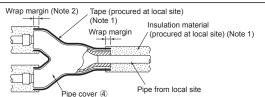


- Cover the entire refrigerant pipe (procured at local site) with heat insulation material. When using generally available heat insulation material, heat-resistant insulation material (at least 12 mm thick).
- 2. Pipe covers (4) and (5) will shrink slightly at high temperatures
- Fit[']gas pipe ② into pipe covers ④, and then seal the mated portion of pipe covers ④ using heat insulation seal tape (procured at local site).
- · Process liquid pipe 3 in the same way

Please install contents other than this description on the main part of a product with an attached installation description, and use them as it.

* model change from MSDD-50SR-E

Photo

Dimensions

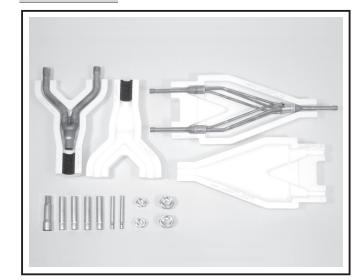

Unit: mm

Descriptions


Branch pipe for Multi-System Twin type Twin use. (50:50)


pplicable Models

- PUHZ-ZRP71VHA2
- PUHZ-ZRP100VKA3
- PUHZ-ZRP125VKA3
- PUHZ-ZRP140VKA3
- PUHZ-ZRP100YKA3
- PUHZ-ZRP125YKA3
- PUHZ-ZRP140YKA3
- PUHZ-P100VKA
- PUHZ-P125VKA
- for Twin 50:50 use
- PUHZ-P140VKA
- PUHZ-P100YKA
- PUHZ-P125YKA
- PUHZ-P140YKA
- PUHZ-SHW112VHA
- PUHZ-SHW112YHA
- PUHZ-SHW140YHA
- [R410A type]


Specifications

Main body	Distribution ratio	Outdoor unit capacity is divided into two (50:50)		
	Number of distribution pipes	1 each for liquid pipe and gas pipe		
	Pipe material	Phosphate deoxidized copper C1220T-OL (JIS H3300)		
Accessory	Pipe cover	Styrofoam molding (1 each for liquid pipe and gas pipe)		
	Joint	7 joints (4 types)		

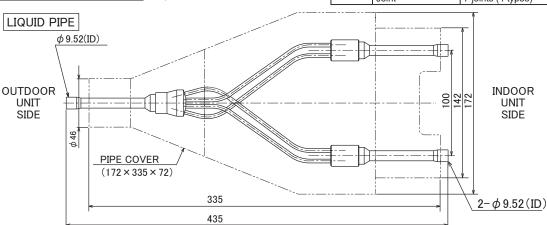

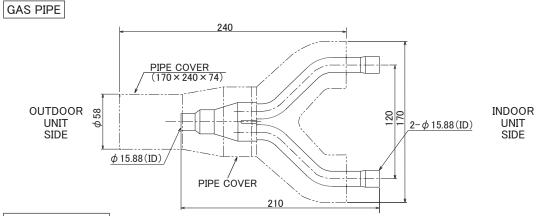

JOINT(Accessory)

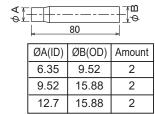


Ф С		80	
	ØC(ID)	ØD(OD)	Amount
	19.05	15.88	1

How to Use / How to Instal


Package Air-conditioner Optional Parts Instruction Sheet for Simultaneous Twin Distributing Pipe

Make sure that you have all the following parts before installation.

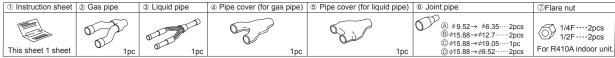

See the following for the specifications of gas pipe ② ,and liquid pipe ③ ,



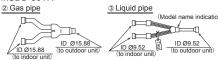


- (Model name indication) ※ Procure the following at local site in addition to the above
 - ·Tape for heat insulator sealing
 - ·Extended pipe for refrigerant pipe


Pipe size and limit to refrigerant pipe


■For R410A										(Table 1)
Outdoor		Pipe siz	ze (mm)		Actu	al pipe length	n (m)	Height Diff	erence (m)	Note 1
Outdoor unit capacity	Gas pir	oe side	Liquid p	ipe side	Indeed Outdeed	A L D L C =	Indeed Indeed	Indoor-Outdoor		Number
unit capacity	Outdoor unit side	Indoor unit side	Outdoor unit side	Indoor unit side	iridoor-Outdoor	A+B+C-	indoor-indoor	Indoor-Ouldoor	iridoor-iridoor	of bends
71(3Hp)	915.88 (5/8) 35, 50 (99.52(3/8) (912.7(1/2) 60,71 (915.88(5/8)		Ø9 52	35, 50 Ø6.35(1/4)	_	50m or less	B-C =	H=	h =	
100,125,140 (4,5,6Hp)		Ø9.52 (3/8)	60,71 Ø9.52(3/8)		75m or less	8m or less	30m or less	1m or less	15 or less	


Note 1: Limit the number of bends for refrigerant pipes to 8 in each of the $\langle A+B \rangle$ and $\langle A+C \rangle$ ranges. % See the installation manual provided with the main unit for details on chargeless pipe length and refrigerant additional charge amount.

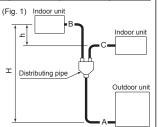

Pipe connections

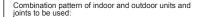

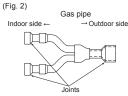

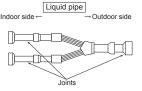

- 1. Perform work, taking care with the followings:

 Be sure to check the combination pattern of indoor and outdoor units and joints to be used (Table 2).

 Be sure to observe the limits to refrigerant pipe length and number of bends (Table 1).

 Insert the refrigerant pipe (procured at local site) and joint ® into the expanded pipe portions of distributing pipe (this product) until they stop, and then connect them using anti-oxidization soldering.

 There is no restriction on the orientation of distributing pipe (this product)during installation.

 Take care that no foreign object, such as dust, enters during pipe connecting work.

 Remove the tag of liquid pipe ③ after checking it.

 Per provided injust @will be processed deponding on the capability of model used. See (Table 2), and connect.
- - Pipe conflictions

 The provided joints ® will be necessary depending on the capability of model used: See (Table 2), and connect the joints as shown in (Fig. 2).


 Do not bend or widen the distributing pipe (liquid pipe).

■ For R410A		(Table 2)
Outdoor unit	Indoor unit	Joint to be used
		®Outer Ø15 88—inner Ø12 7 [indoor gas nine side]

Outdoor unit	maoor unit	Some to be used		
71(3Hp)		®Outer Ø15.88—inner Ø12.7 [indoor gas pipe side], &Outer Ø9.52—inner Ø6.35 [indoor liquid pipe side]		
71(3HP) 35+35 (1.0+1.0)		©Outer Ø15.88—inner Ø9.52 [indoor gas pipe side], @Outer Ø9.52—inner Ø6.35 [indoor liquid pipe side]		
100(4Hp)	50+50 (2+2)	®Outer Ø15.88−inner Ø12.7 [indoor gas pipe side], ⊗Outer Ø9.52−inner Ø6.35 [indoor liquid pipe side]		
125(5Hp)	60+60 (2.5+2.5)	No joint is necessary.		
140(6Hp)	71+71 (3+3)	The joint is necessary.		


※ Installation positions in brackets (

Heat insulation work

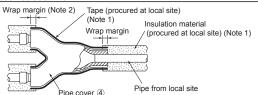

- Cover the entire refrigerant pipe (procured at local site) with heat insulation material. When using generally available heat insulation material, heat-resistant insulation material (at least 12 mm thick).
- 2. Pipe covers (4) and (5) will shrink slightly at high temperatures
- Fit gas pipe ② into pipe covers ④, and then seal the mated portion of pipe covers ④ using heat insulation seal tape (procured at local site).
- Process liquid pipe 3 in the same way

Please install contents other than this description on the main part of a product with an attached installation description, and use them as it.

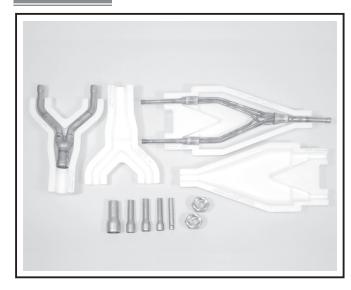

Descriptions

Branch pipe for Multi-System Twin type Twin use. (50:50)

Applicable Models

■ PUHZ-ZRP200,250YKA3 ■ PUHZ-P200,250YKA3 for Twin 50:50 use


[R410A type]


Specifications

	Distribution ratio	Outdoor unit capacity is divided into two (50:50)	
Main body	Number of distribution pipes	1 each for liquid pipe and gas pipe	
	Pipe material	Phosphate deoxidized copper C1220T-OL (JIS H3300)	
Accessory	Pipe cover	Styrofoam molding (for liquid pipe and gas pipe)	
,	Joint	5 joints (4 types)	


Dimensions

Unit: mm

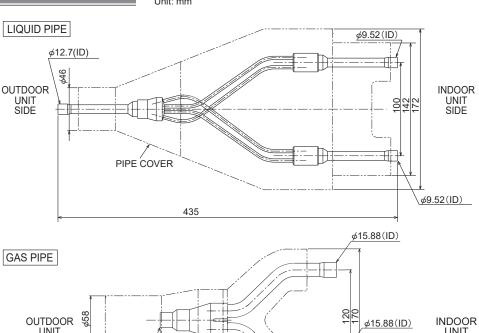

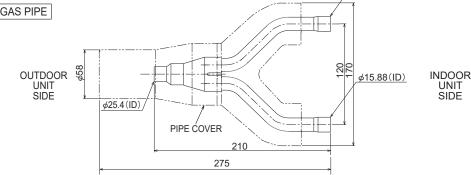

JOINT(Accessory)

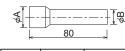

ØA(ID)	ØB(OD)	Amount
28.6	25.4	1
15.88	12.7	1
19.05	15.88	2
	•	-

SIT!		7
ļ	80	*

ØC(ID)	ØD(OD)	Amoun
9.52	12.7	1


Package Air-conditioner Optional Parts Instruction Sheet for Simultaneous Twin Distributing Pipe

Make sure that you have all the following parts in packing box before installation.

① Instruction sheet	② Gas pipe	3 Liquid pipe	Pipe cover (for gas pipe)	⑤ Pipe cover (for liquid pipe)	Joint pipe	⑦ Flare nut
This sheet 1 sheet	1pc	1pc	1pc	1pc	Ø12.7→Ø 9.52 ······· 1pc Ø12.7→Ø 15.88 ······ 1pc Ø15.88→Ø19.05 ····· 2pcs Ø25.4→Ø28.6 ····· 1pc	5/8F····2pcs For R410A indoor unit.

See the following for the specifications of gas pipe $\ensuremath{@}$,and liquid pipe $\ensuremath{@}$,



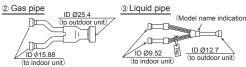


- $({\sf Model \ name \ indication}) \quad \ensuremath{\times} \quad {\sf Procure \ the \ following \ at \ local \ site \ in \ addition \ to \ the \ above}$
 - · Tape for heat insulator seal
 - •Extended pipe for refrigerant pipe

Pine size and limit to refrigerant pine

	PO 0.20 0110										
■For R407C fixed speed models (Ta										(Table 1-1)	
	Outdoor	Pipe size (mm)			Actu	Actual pipe length (m) Heigh			erence (m)	Note 1	
- 1		Gas pi	oe side	Liquid p	ipe side						Number
	uriit capacity	Outdoor unit side	Indoor unit side	Outdoor unit side	Indoor unit side	Indoor-Outdoor	A+B+C=	Indoor-Indoor	Indoor-Outdoor	Indoor-Indoor	of bends
	200(8Hp)	φ25.4 (1)	Ø19.05	Ø12.7	Ø9.52	A + B = A + C =	70m or less	P-C -	H =	h =	15 or less
	250(10Hp)	φ28.6 (1-1/8)	(3/4)	(1/2)	(3/8)	50m or less	70111 01 1633	8m or less	40m or less	1m or less	15 01 1655

■For R410A Power Inverter models (Table 1-2) Actual pipe length (m) Height Difference (m) Note Pipe size (mm) Outdoor Number Gas pipe side Liquid pipe side unit capacity A+B+C=of bends Outdoor unit side Indoor unit side Outdoor unit side Indoor unit side Indoor-Outdoor Indoor-Indoor Indoor-Outdoor Ø25.4 (1) 100 m or less Ø9.52 (3/8) 200(8Hp) (ZRP200/250) $B-C \mid =$ 15 or less Ø15.88(5/8) Ø9.52(3/8) A + C = 70 m or less 1m or less 30m or less 8m or less Ø25.4 80m or less (P200/250) Ø12.7 (1/2) 250(10Hp) (1) Ø28.6 (1-1/8)

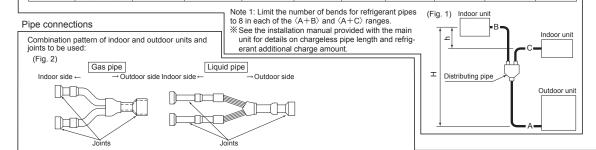

- 1. Perform work, taking care with the followings:

 Be sure to check the combination pattern of indoor and outdoor units and joints to be used (Table 2-1, 2-2).

 Be sure to observe the limits to refrigerant pipe length and number of bends (Table 1-1, 1-2).

 Insert the refrigerant pipe (procured at local site) and joint (§) into the expanded pipe portions of distributing pipe (this product) until they stop, and then connect them using anti-oxidization soldering.

 There is no restriction on the orientation of distributing pipe (this product)during installation.

 Take care that no foreign object, such as dust, enters during pipe connecting work.

 Remove the tag of liquid pipe (3) after checking it.


 Price provided joints (§) will be necessary depending on the capability of model used: See (Table 2), and connect the joints as shown in (Fig. 2-1, 2-2).

 Do not bend or widen the distributing pipe (liquid pipe).

■For R407C fi	xed speed	(Table 2-1				
Outdoor unit	Indoor unit	Joint to be used				
200(8Hp)	100+100 (4+4)	Outer Ø15.88—inner Ø19.05 [indoor gas pipe side]				
250(10Hp)	125+125 (5+5)	Outer Ø25.4—inner Ø28.6 [outdoor gas pipe side]				
Installation positions in brackets ().						

-1)	For R410A P	ower Inverter	(Table 2-2)
	Outdoor unit	Indoor unit	Joint to be used
	200(8Hp)	100+100 (4+4)	Outer Ø12.7—inner Ø9.52 [outdoor liquid pipe side]
	250(10Hp)	125+125 (5+5)	HA:Outer Ø25.4—inner Ø28.6 [outdoor gas pipe side] HA2,KA:No joint necessary


Heat insulation work

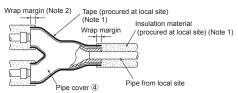

- Cover the entire refrigerant pipe (procured at local site)
 with heat insulation material. When using generally
 available heat insulation material, heat-resistant
- risulation material (at least 12 mm thick).

 Pipe covers ③ and ⑤ will shrink slightly at high temperatures: Provide wrap margins with insulation
- ·Fit gas pipe ② into pipe covers ④, and then seal the mated portion of pipe covers ④ using heat insulation seal tape (procured at local site) •Process liquid pipe ③ in the same way.

Please install contents other than this description on the main part of a product with an attached installation description, and use them as it.

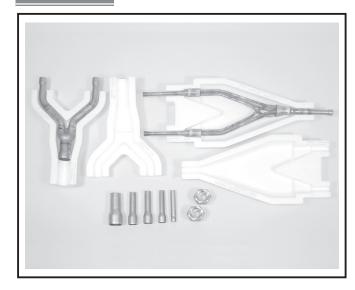

Descriptions

Branch pipe for Multi-System Twin type Twin use. (50:50)

Applicable Models

- PUZ-ZM200,250YKA type
- PUZ-M200,250YKA type


for Twin 50:50 use [R32 type]

Specifications


	Distribution ratio	Outdoor unit capacity is divided into two (50:50)
Main body	Number of distribution pipes	1 each for liquid pipe and gas pipe
	Pipe material	Phosphate deoxidized copper C1220T-OL (JIS H3300)
Accessory	Pipe cover	Styrofoam molding (for liquid pipe and gas pipe)
	Joint	5 joints (4 types)

Dimensions

Unit: mm

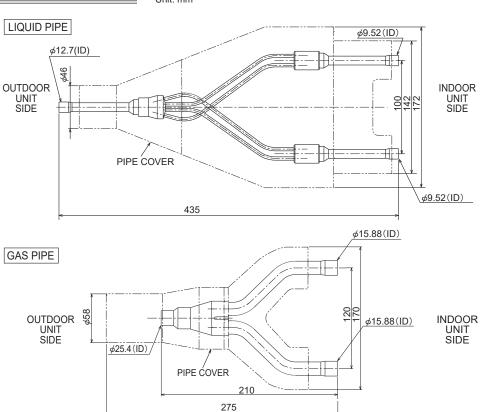

JOINT(Accessory)

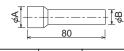

ØA(ID)	ØB(OD)	Amount
28.6	25.4	1
15.88	12.7	1
19.05	15.88	2


STEE		<u></u>
-	80	

ØC(ID)	ØD(OD)	Amoun
9.52	12.7	1

☐ Make sure that you have all the following parts in packing box before installation.

①Instruction sheet	@Gas pipe	3 Liquid pipe	Pipe cover (for gas pipe)	©Pipe cover (for liquid pipe)	Joint pipe	⊘ Flare nut
1 sheet	1pc	1pc	1pc	1pc	● ø12.7→ø9.52 · · · 1pc ● ø12.7→ø15.88 · · 1pc ● ø15.88-ø19.05 · · 2pcs ● ø25.4→ø28.6 · · · 1pc	©5/8F···2pcs For R32 indoor unit.


• See the following for the specifications of gas pipe @,and liquid pipe ③.

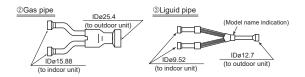

Note:

- The following items must be obtained locally in addition to the packed parts.
- Heat insulating sealing tape
- (b) Extension pipe for refrigerant pipe


2 Pipe size and limit to refrigerant pipe

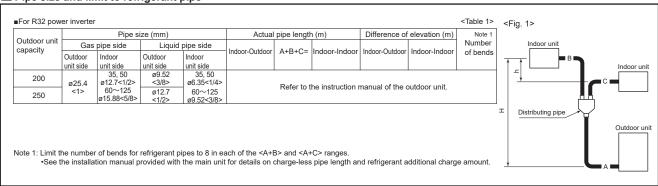

3 Pipe connections

- Perform work, taking care with the following:

 Be sure to check the combination pattern of indoor and outdoor units and joints to be used <Table 2>. Be sure to observe the limits to refrigerant pipe length and number of bends <Table 1>.
 Insert the refrigerant pipe (procured at local site) and joint (a) into the expanded pipe portions of
- distributing pipe (this product) until they stop, and then connect them using anti-oxidization soldering. There is no restriction on the orientation of distributing pipe (this product) during installation.
- Take care that no foreign object, such as dust, enters during pipe connecting work
- 2. Pipe connections
 - The provided joint(s) (a) will be necessary depending on the capability of model used: See <Table 2>, and connect the joints as shown in <Fig. 2>
- Do not bend or widen the distributing pipe (liquid pipe).

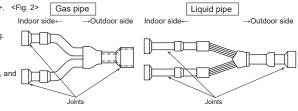


Combination pattern of indoor and outdoor units and joints to be used

inverter	<table 2=""></table>
Indoor unit	Joint to be used
100+100	Outerø12.7-innerø9.52[outdoor liquid pipe side]
125+125	No joint is necessary
	Indoor unit 100+100

Note 1: Installation positions in brackets [].

4 Heat insulation work

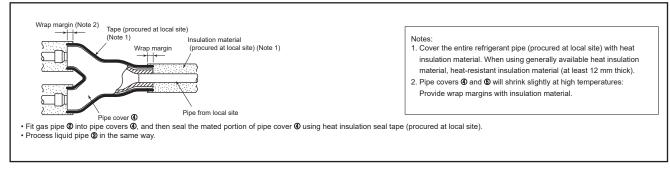

Please install contents other than this description on the main part of a product with an attached installation description, and use them as it.



Descriptions

3-branch pipe for Multi-System Triple use. (33:33:33)

Applicable Models

- PUZ-ZM100,125,140VKA type
- PUZ-ZM100,125,140,200,250YKA type
- PUZ-M140VKA type
- PUZ-M140,200,250YKA type


for 33:33:33 Triple use [R32 type]


Specifications

	Distribution ratio	Outdoor unit capacity is divided into three (33:33:33)
Main body	Number of distribution pipes	1 each for liquid pipe and gas pipe
	Pipe material	Phosphate deoxidized copper C1220T-OL (JIS H3300)
Accessory	Pipe cover	Polyethylene foam molding (for liquid pipe) EPT sponge rubber type (for gas pipe)
	Joint	10 joints (6 types)



Unit: mm

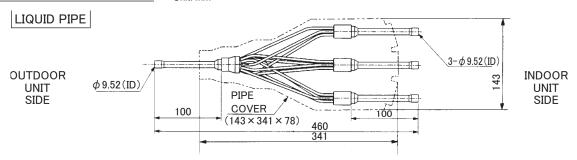

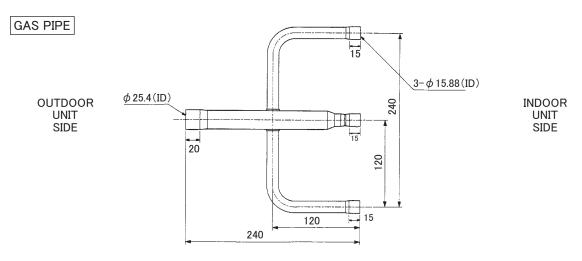

LOINIT/A			
JOINT(Accessary)	ØA(ID)	ØB(OD)	Amount
80	12.7	9.52	1
	28.6	25.4	1

OFIT		
DE L	00	
<	80	


ØC(ID)	ØD(OD)	Amount
12.7	15.88	3
19.05	25.4	1
6.35	9.52	3
15.88	25.4	1

How to Use / How to Install


Packaged Air Conditioner Optional Parts Instruction Sheet for Simultaneous Triple Distributing Pipe exclusively used with Free Compo Multi-Units

MSDT-111R3-E [Indoor unit same-capacity triple 33:33:33]

☐ Make sure that you have all the following parts in packing box before beginning installation:

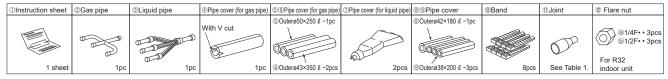

•See the following for the specifications of gas pipe ② and liquid pipe ③ :

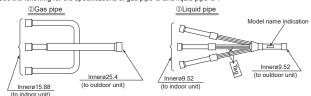

Joint specifications and provided numbers <Table 1> Note:

The following items must be obtained locally in addition to the packed parts.

Begin Heat insulating sealing tape
Extension pipe for refrigerant pipe


Sizes of joint pipe ends (mm)	Numbers provided
Outerø9.52-Innerø6.35	3
® Outerø9.52-Innerø12.7	1
© Outerø15.88-Innerø12.7	3
Outerø25.4-Innerø19.05	1
© Outerø25.4-Innerø15.88	1
© Outerø25.4-Innerø28.6	1
© Outerø15 88-Innerø9 52	3

2 Pipe size and limit to refrigerant pipe

		Pipe siz	e (mm)		Actual pipe length (m)			Difference of	Note 1		
Outdoor unit	Gas pi	pe side	Liquid pipe side						Indoor-Indoor	Number	
capacity	Outdoor unit side	Indoor unit side	Outdoor unit side	Indoor unit side	Indoor-Outdoor	ndoor-Outdoor A+B+C+D=		Indoor-Outdoor		of bends	
100	ø15.88	ø9.52 <3/8>	ø9.52	ø6.35							
125, 140	<5/8>	ø12.7 <1/2>	<3/8>	<1/4>		Pefer to	the instruction	manual of the	outdoor unit		
200						outdoor unit.					
250 <1> <5/8> Ø12.7 <1/2> <3/8>											

Note 1: Limit the number of bends for refrigerant pipes to 8 in each of the <A+B>, <A+C> and <A+D> ranges.

*See the installation manual provided with the main unit for details on charge-less pipe length and refrigerant additional charge amount.

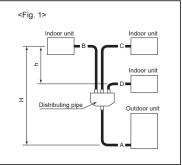

Pipe connections


- 1. Perform work, taking care with the following:
- Be sure to check the combination pattern of indoor and outdoor units, joints to be used <Table 3>, pipe size <Table 1> and joint ①. Be sure to observe the limits to refrigerant pipe length and number of bends <Table 2>.
- Insert the refrigerant pipe (procured at local site) and joint (1) into the expanded pipe portions of distributing pipe (this product) until they stop, and then connect them using anti-oxidization soldering,
- There is no restriction on the orientation of distributing pipe (this product) during installation Take care that no foreign object, such as dust, enters during pipe connecting work.
- Remove the tag of liquid pipe 3 after checking it.
- 2. Pipe connections
 The provided joints (1) will be necessary depending on the capability of model used: See <Table 3>, and connect the refrigerant piping.

Combination pattern of indoor and outdoor units and joints to be used:


	-	Iable 3>
Outdoor unit	Indoor unit	Joint to be used
100	35+35+35	© Outerø25.4-innerø15.88[outdoor gas pipe side]×1, © Outerø15.88-innerø9.52[indoor gas pipe side]×3, @ Outerø9.52-innerø6.35[indoor liquid pipe side]×3
125,140	50+50+50	© Outerø25.4-innerø15.88[outdoor gas pipe side]×1, © Outerø15.88-innerø12.7[indoor gas pipe side]×3, ® Outerø9.52-innerø6.35[indoor liquid pipe side]×3
200	60+60+60	No Joint is necessary
250	71+71+71	® Outerø9.52-innerø12.7[outdoor liquid pipe side]×1

Note 1: Installation positions in brackets [].

4 Heat insulation work

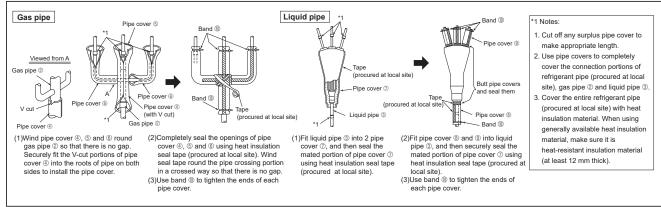

Please install contents other than this description on the main part of a product with an attached installation description, and use them as it.

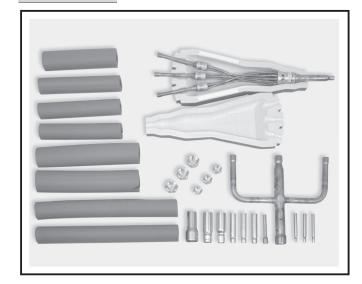

Descriptions

3-branch pipe for Multi-System Triple use. (33:33:33)

Applicable Models

- PUHZ-ZRP100VKA3
- PUHZ-ZRP125VKA3
- PUHZ-ZRP140VKA3 ■ PUHZ-ZRP100YKA3
- PUHZ-ZRP125YKA3
- PUHZ-ZRP140YKA3
- PUHZ-ZRP250YKA3
- PUHZ-P140VKA
- PUHZ-P140YKA

■ PUHZ-ZRP200YKA3

- PUHZ-P200YKA3
- PUHZ-P250YKA3

for 33:33:33 Triple use [R410A type]


Specifications


	Main body	Distribution ratio	Outdoor unit capacity is divided into three (33:33:33)
		Number of distribution pipes	1 each for liquid pipe and gas pipe
		Pipe material	Phosphate deoxidized copper C1220T-OL (JIS H3300)
	Accessory	Pipe cover	Polyethylene foam molding (for liquid pipe) EPT sponge rubber type (for gas pipe)
ı		loint	13 joints (7 types)



LIQUID PIPE



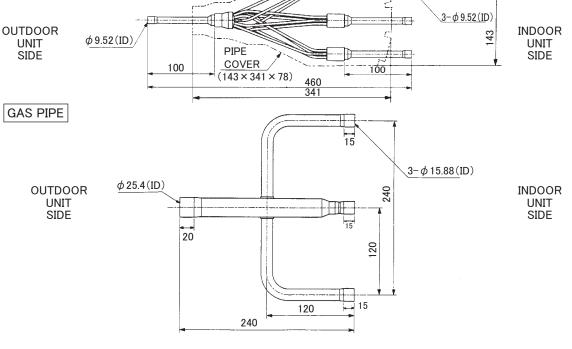

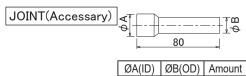


	80	
A(ID)	ØB(OD)	Amount
12.7	9.52	1
28.6	25.4	1

	80	
~~(ID)	(AD/OD)	Λ


ØC(ID)	ØD(OD)	Amount
12.7	15.88	3
19.05	25.4	1
6.35	9.52	3
15.88	25.4	1
9.52	15.88	3

Package Air-conditioner Optional Parts Instruction Sheet for Simultaneous Triple Distributing Pipe exclusively used with Free Compo Multi-Units

Make sure that you have all the following parts in packing box before beginning installation:

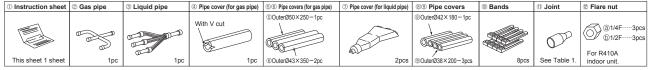



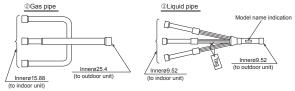


Note:
The following items must be obtained locally in addition to the packed parts.


Beta insulating sealing tape
Extension pipe for refrigerant pipe Sizes of joint pipe ends (mm) Numbers provided Outerø9.52–Innerø6.35 Outerø9.52-Innerø12.7 Outerø15.88-Innerø12.7 Outerø25.4-Innerø19.05 © Outerø25.4-Innerø15.88 Outerø25.4-Innerø28.6 Outerø15.88-Innerø9.52

Joint specifications and provided numbers

<Table 1>

Pipe size and limit to refrigerant pipe

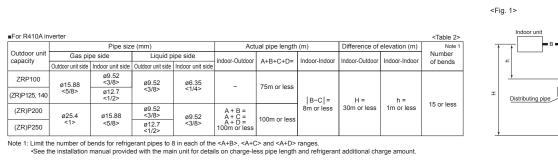

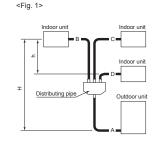


Pipe connections

- Perform work, taking care with the following:
 Be sure to check the combination pattern of indoor and outdoor units, joints to be used <Table 3>, pipe size <Table 1> and joint ①.
 Be sure to observe the limits to refrigerant pipe length and number of bends <Table 2>.
 Insert the refrigerant pipe (procured at local site) and joint ① into the expanded pipe portions of distributing pipe (this product) until they stop, and then connect them using anti-oxidization soldering.
 There is no restriction on the orientation of distributing pipe (this product) during installation.
- . Take care that no foreign object, such as dust, enters during pipe connecting work.
- Remove the tag of liquid pipe ③ after checking it.

 Pipe connections
- The provided joints (f) will be necessary depending on the capability of model used: See <Table 3>, and connect the refrigerant piping.
 Do not bend or widen the distributing pipe (liquid pipe).

Combination pattern of indoor and outdoor units and joints to be used:

■For R410A in	verter		<table 3=""></table>					
Outdoor unit	Indoor unit	Joint to be used						
ZRP100	35+35+35	© Outerø25.4-innerø15.88[outdoor gas pipe side]×1, © Outerø15.88-innerø9.52[indoor gas pipe side]×3, @ Outerø9.52-innerø6.35[indoor liquid pipe side]×3						
(ZR)P125,140	50+50+50	© Outerø25.4-innerø15.88[outdoor gas pipe side]×1, © Outerø15.88-innerø12.7[indoor gas pipe side]×3, @ Outerø9.52-innerø6.35[indoor liquid pipe side]×3						
(ZR)P200	60+60+60	No Joint is necessary						
(ZR)P250	71+71+71	Outerø9.52-innerø12.7[outdoor liquid pipe side]×1						
Note 1: Installa	Note 4: local listing positions in breakets []							

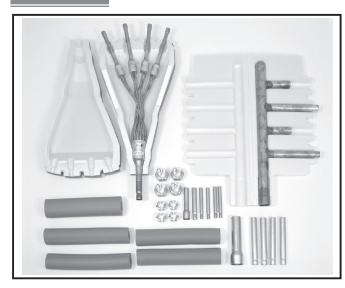

Descriptions

4-branch pipe for Multi-System Quadruple use. (25:25:25:25)

Applicable Models

- PUZ-ZM125,140VKA type PUZ-ZM125,140,200,250YKA type
- PUZ-M200,250YKA type


[R32 type] for 25:25:25:25 Quadruple use


Specifications

	Distribution ratio	Outdoor unit capacity is divided into four (25:25:25:25)			
Main body	Number of distribution pipes	1 each for liquid pipe and gas pipe			
	Pipe material	Phosphate deoxidized copper C1220T-OL (JIS H3300)			
Accessory	Pipe cover	Polyethylene foam molding (for liquid pipe) EPT sponge rubber type (for gas pipe)			
	Joint	15 joints (7 types)			
	Band	7 bands			

Dimensions

Unit: mm

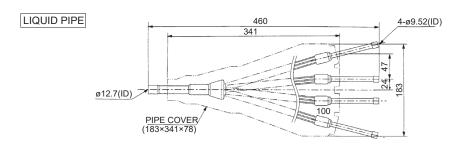

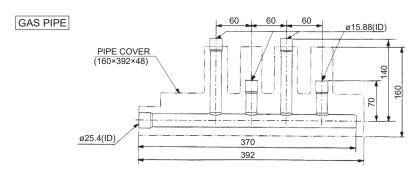

JOINT(Accessory)



ØA(ID)	ØB(OD)	Amount		
28.6	25.4	1		
15.88	12.7	1		




ØC(ID)	ØD(OD)	Amount
12.7	15.88	4
6.35	9.52	4
9.52	12.7	1
15.88	25.4	1
9.52	15.88	4


Packaged Air Conditioner Optional Parts Instruction Sheet for Simultaneous Quadruple Distributing Pipe exclusively used with Free Compo Multi-Units

Model MSDF-1111R2-E [Indoor unit (quadruple) With same-capacity 25:25:25:25]

☐ Make sure that you have all the following parts in packing box before beginning installation:

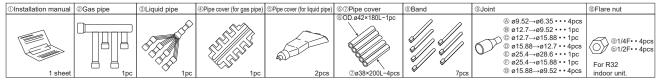

• The gas pipe ② and liquid pipe ③ are specified as shown below

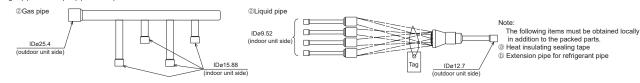

2 Pipe size and refrigerant pipe limits

		Pipe siz	Pipe size (mm) Actual pipe length (m) Difference of elevation					Pipe size (mm)				elevation (m)	Note 1		Indoor unit	Indoor unit		
Outdoor unit	Gas pi	oe side	Liquid p	ipe side	Indoor Outdoor	4 - D - O - D	Indoor Indoor			Number	 							
capacity	Outdoor unit side	Indoor unit side	Outdoor unit side	Indoor unit side	iliuooi-Outuooi	A+B+C+D=	+B+C+D= Indoor-Indoor Indoor-Outdoor Indoor-Indoor		of bends	ء ا		Ir	door unit Inc	door				
125,140	ø15.88 <5/8>	ø9.52 <3/8>	ø9.52 <3/8>	ø6.35 <1/4>		Refer to the instruction manual of the outdoor unit.						+		Outdoor unit				
200	ø25.4 <1>	ø12.7 <1/2>	ø9.52 <3/8>	ø6.35 <1/4>								Distributor pipe (Packed part)	-]					
250	ø25.4 <1>	ø15.88 <5/8>	ø12.7 <1/2>	ø9.52 <3/8>							-							


Pipe connections

- 1. Perform work, taking care with the following:
- Be sure to check the combination pattern of indoor and outdoor units, joints to be used <Table 2>, pipe size and joint (9.
- Be sure to observe the limits to refrigerant pipe length and number of bends <Table 1>.
 Insert the refrigerant pipe (procured at local site) and joint (a) into the expanded pipe portions of distributing pipe (this product) until they stop, and then connect them using anti-oxidization soldering.
- There is no restriction on the orientation of distributing pipe (this product) during installation.
 Take care that no foreign object, such as dust, enters during pipe connecting work.
- · Remove the tag of liquid pipe (3) after checking it.
- - The provided joint(s) ® will be necessary depending on the capability of model used: See <Table 2>, and connect the refrigerant piping.
 Do not bend or widen the distributing pipe (liquid pipe).


Combination pattern of indoor and outdoor units and joints to be used:

		<table 2=""></table>
Outdoor unit	Indoor unit	Joint to be used
125,140	35+35+35+35	© Outerø25.4-innerø15.88[outdoor gas pipe side]×1, © Outerø15.88-innerø9.52[indoor gas pipe side]×4, © Outerø12.7-innerø9.52[outdoor liquid pipe side]×1, © Outerø9.52-innerø6.35[indoor liquid pipe side]×4
200	50+50+50+50	® Outerø15.88−innerø12.7[indoor gas pipe side]×4, ® Outerø9.52−innerø6.35[indoor liquid pipe side]×4, ® Outerø12.7-innerø9.52[outdoor gas pipe side]×1
250	60+60+60+60	No Joint is necessary

4 Heat insulation work

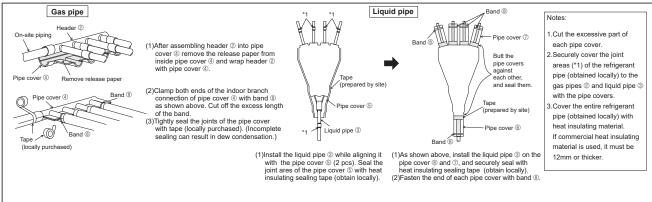

Please install contents other than this description on the main part of a product with an attached installation description, and use them as it.

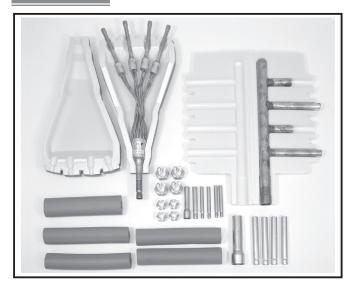

Descriptions

4-branch pipe for Multi-System Quadruple use. (25:25:25:25)

Applicable Models

- PUHZ-ZRP125VKA3
- PUHZ-ZRP200YKA3
- PUHZ-ZRP140VKA3
- PUHZ-ZRP250YKA3
- PUHZ-ZRP125YKA3
- PUHZ-P200YKA3
- PUHZ-ZRP140YKA3
- PUHZ-P250YKA3


[R410A type] for 25:25:25:25 Quadruple use


Specifications

	Distribution ratio	Outdoor unit capacity is divided into four (25:25:25:25)
Main body	Number of distribution pipes	1 each for liquid pipe and gas pipe
	Pipe material	Phosphate deoxidized copper C1220T-OL (JIS H3300)
Accessory	Pipe cover	Polyethylene foam molding (for liquid pipe) EPT sponge rubber type (for gas pipe)
	Joint	15 joints (7 types)
	Band	7 bands


Dimensions

Unit: mm

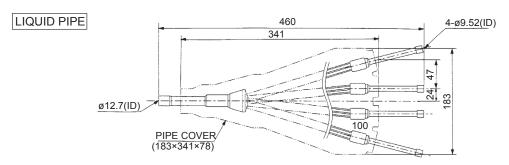

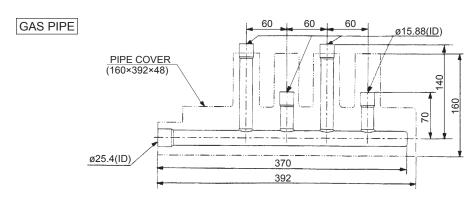

JOINT(Accessory)

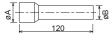


ØA(ID)	ØB(OD)	Amount
28.6	25.4	1
15.88	12.7	1




ØC(ID)	ØD(OD)	Amount
12.7	15.88	4
6.35	9.52	4
9.52	12.7	1
15.88	25.4	1
9.52	15.88	4

Package Air-conditioner Optional Parts Instruction Sheet for Simultaneous Quadruple Distributing Pipe exclusively used with Free Compo Multi-Units


Make sure that you have all the following parts in packing box before beginning installation:

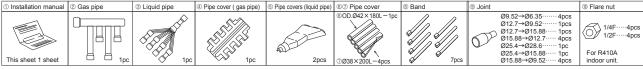

● the gas pipe ② and liquid pipe ③ are specified as shown below

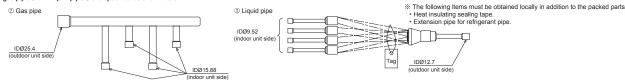

Pipe size and refrigerant pipe limits.

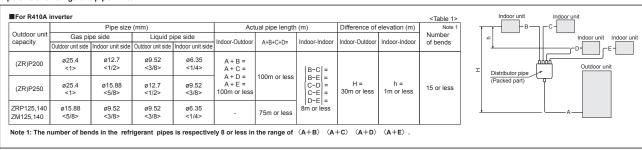

Pipe connections

- 1. Perform work, taking care with the following:

 Be sure to check the combination pattern of indoor and outdoor units, joints to be used 〈Table 2〉, pipe size and joint used ③.

 Be sure to observe the limits to refrigerant pipe length and number of bends 〈Table 1〉.

 Insert the refrigerant pipe (procured at local site) and joint ③ into the expanded pipe portions of distributing pipe (this product) until they stop, and then connect them using anti-oxidization soldering.

 There is no restriction on the orientation of distributing pipe (this product)during installation.


 Take care that no foreign object, such as dust, enters during pipe connecting work.

 Remove the tag of liquid pipe ③ after checking it.
- 2. Pipe connections
- The provided joints ® will be necessary depending on the capability of model used: See 〈Table 2〉, and connect the refrigerant piping.
 Do not bend or widen the distributing pipe (liquid pipe).

Combination pattern of indoor and outdoor units and joints to be used:

For R410A	inverter		<table 2=""></table>
Outdoor unit	Indoor unit	Joint to be used	
(ZR)P200	50+50+50+50	© Outerø15.88-innerø12.7[indoor gas pipe side]×4, @ Outerø9.52-innerø6.35[indoor liquid pipe side]×4, ® Outerø12.7-innerø9.52[outdoor gas pipe side]×1	
(ZR)P250	60+60+60+60	No Joint is necessary	
ZRP125,140	35+35+35+35	© Outerø25.4-innerø15.88[outdoor gas pipe side]×1, © Outerø15.88-innerø9.52[indoor gas pipe side]×4, © Outerø12.7-innerø9.52[outdoor liquid pipe side]×1, © Outerø9.52-innerø6.35[indoor liquid pipe side]×4	

Heat insulation work

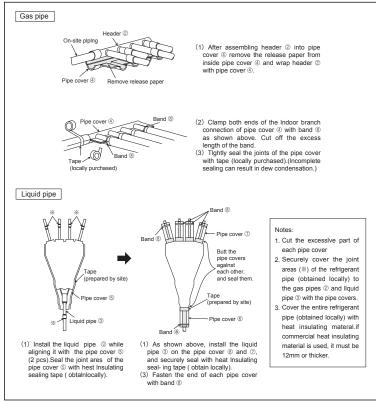

Please install contents other than this description on the main part of a product with an attached installation description, and use them as it.



Descriptions

A part to connect refrigerant pipes of the different diameter. (Unit ϕ 6.35 $\rightarrow \phi$ 9.52)

Applicable Models


■ PUZ-ZM35,50VKA type [R32 type]

Specifications

Pipe diameter	Ф 6.35
Pipe material	C 1220T - OL

Dimensions

Unit: mm (inch)

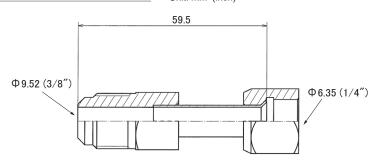

How to Use / How to

Make sure that you have all the following parts, in addition to this manual in this box:

Joint Pipe PAC-SJ87RJ-E (unit side:ø6.35 diameter, onsite pipe side:ø9.52 diameter) PAC-SJ88RJ-E (unit side:ø9.52 diameter, onsite pipe side:ø12.70 diameter) Unit side Onsite piping side

Installation procedure (carefully read the following before installing.) This optional part is used to connect indoor/outdoor unit to on-site pipes of different diameters.


- When installing this optional part, be sure to read "Refrigerant pipe connection" in the installation manual attached to outdoor unit.
- 1) Apply flare processing to on-site pipes to adapt to R32, according to the table on the right. Use optional accessory flare nut at this time. **Check the installation manual attached to the outdoor unit for advisability on whether or not on-site (existing) pipes can be used.

	В	Dina diameter	B size	e (mm))
		Pipe diameter (mm)	R32 flare tool	R22/R407C flare tool	
	7777		Clutc	h type	
1/4/		ø 6.35(1/4")	0 - 0.5	1.0 - 1.5	
di	dies	ø 9.52(3/8")	0 - 0.5	1.0 - 1.5	
	Copper pipe	ø12.70(1/2")	0 - 0.5	1.0 - 1.5	

*When flare processing for refrigerant R32 is applied using current tool, refer to the table above. B size can be secured using copper pipe gauge for margin adjustment.

Outer diameter of copper pipe (mm)	Processing size of flare section (mm)	Flare shape
ø6.35	8.7 - 9.1	ůn 45° ± 2°
ø9.52	12.8 - 13.2	00 4- B0 8
ø12.70	16.2 - 16.6	60 \ <u>R0.4~R0.8</u>

2) Remove caps (both ends) for protection against 3) Securely tighten flare nut using torque mixing of foreign materials from optional part, and thinly apply refrigerat or oil (locally procured) on flare surface

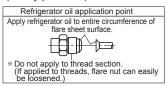


wrench according to the table on the right. (Proper tightening torque using torque wrench)

Outer diameter of	Tightening torque N•m
copper pipe (mm)	(kgf•cm)
ø6.35	14 - 18(140 - 180)
ø9.52	34 - 42(340 - 420)
ø12.70	49 - 61(490 - 610)

- 4) After refrigerant pipe is connected, be sure to perform gas leakage inspection for onsite connection pipes (including this optional part) and indoor/outdoor unit.
- 5) Heat insulation is necessary for this optional part: Wrap heat insulator (locally procured) around the onsite pipes and also the optional part (for dewdrop dripping prevention).
- 6) Perform test run according to the installation manual of the unit, making sure to also perform operation check.

OUTDOOR UNIT

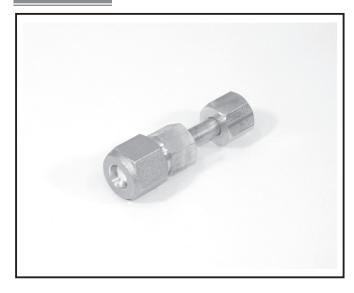

Descriptions

A part to connect refrigerant pipes of the different diameter. (Unit ϕ 9.52 \rightarrow ϕ 12.7)

Applicable Models


- PUZ-ZM60,71VHA type■ PUZ-ZM100,125,140VKA type
- PUZ-ZM100,125,140,200YKA type

[R32 type]

Specifications

Pipe diameter	Ф 9.52
Pipe material	C 1220T - OL

Dimensions

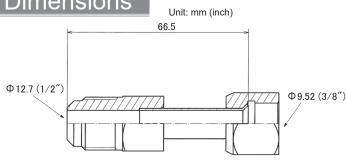

How to Use / How to

Make sure that you have all the following parts, in addition to this manual in this box:

Joint Pipe PAC-SJ87RJ-E (unit side:ø6.35 diameter, onsite pipe side:ø9.52 diameter) PAC-SJ88RJ-E (unit side: ø9.52 diameter, onsite pipe side: ø12.70 diameter) Unit side Onsite piping side

Installation procedure

(carefully read the following before installing.)

This optional part is used to connect indoor/outdoor unit to on-site pipes of different diameters.

* When installing this optional part, be sure to read "Refrigerant pipe connection" in the installation manual attached to outdoor unit.


- 1) Apply flare processing to on-site pipes to adapt to R32, according to the table on the right. Use optional accessory flare nut at this time.
- *Check the installation manual attached to the outdoor unit for advisability on whether or not on-site (existing) pipes can be used.

В	Pipe diameter (mm)		e (mm)
		R32 flare tool	R22/R407C flare tool
		Cluto	h type
	ø 6.35(1/4")	0 - 0.5	1.0 - 1.5
dies	ø 9.52(3/8")	0 - 0.5	1.0 - 1.5
Copper pipe	ø12.70(1/2")	0 - 0.5	1.0 - 1.5

*When flare processing for refrigerant R32 is applied using current tool, refer to the table above. B size can be secured using copper pipe gauge for margin adjustment.

Outer diameter of copper pipe (mm)	Processing size of flare section (mm)	Flare shape
ø6.35	8.7 - 9.1	\$60 ± 2°
ø9.52	12.8 - 13.2	.#\$
ø12.70	16.2 - 16.6	R0.4~R0.8


2) Remove caps (both ends) for protection against 3) Securely tighten flare nut using torque mixing of foreign materials from optional part, and thinly apply refrigerat or oil (locally procured) on flare surface

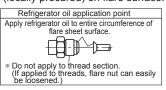

wrench according to the table on the right. (Proper tightening torque using torque wrench)

Outer diameter of copper pipe (mm)	Tightening torque N•m (kgf•cm)
,	() - /
ø6.35	14 - 18(140 - 180)
ø9.52	34 - 42(340 - 420)
ø12.70	49 - 61(490 - 610)

- 4) After refrigerant pipe is connected, be sure to perform gas leakage inspection for onsite connection pipes (including this optional part) and indoor/outdoor unit.
- 5) Heat insulation is necessary for this optional part: Wrap heat insulator (locally procured) around the onsite pipes and also the optional part (for dewdrop dripping prevention).
- 6) Perform test run according to the installation manual of the unit, making sure to also perform operation check

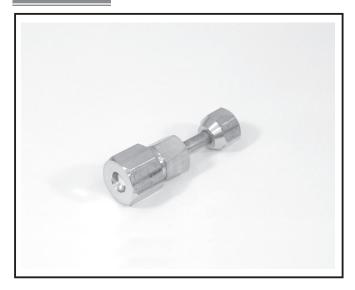

Descriptions

A part to connect refrigerant pipes of the different diameter. (Unit ϕ 6.35 \rightarrow ϕ 9.52)

Applicable Models


■ PUHZ-ZRP35VKA2 ■ PUHZ-ZRP50VKA2 [R410A type]

Specifications

	Pipe diameter	Ф 6.35
ı	Pipe material	C 1220T - OL

Dimensions

Unit: mm (inch)

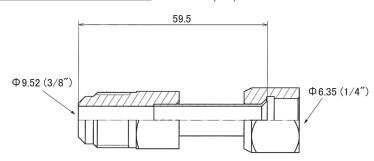

How to Use / How to

Make sure that you have all the following parts, in addition to this manual in this box:

PAC-SG72RJ-E (unit side:ø6.35 diameter, onsite pipe side:ø9.52 diameter) PAC-SG73RJ-E (unit side:ø9.52 diameter, onsite pipe side:ø12.70 diameter)
PAC-SG74RJ-E (unit side:ø12.70 diameter, onsite pipe side:ø15.88 diameter)
PAC-SG75RJ-E (unit side:ø15.88 diameter, onsite pipe side:ø19.05 diameter)

Unit side

Onsite piping side

Installation procedure

(carefully read the following before installing.)

This optional part is used to connect indoor/outdoor unit to onsite pipes of different diameters.

X When installing this optional part, be sure to read "Refrigerant pipe connection" in the installation manual attached to outdoor unit.

1) Apply flare processing to onsite pipes to adapt to R410A, according to the table on the right. Use optional accessory flare nut at this time. **Check the installation manual attached to the outdoor unit for advisability on whether or not onsite (existing) pipes can be used. *When pipe of 19.05 diameter is used, be sure to turn ON the SW8-1 on outdoor unit control board


B 	
dies	ſ
_ ~	ſ
Conner nine	۳

	Pipe diameter (mm)	D SIZE (IIIIII)		
		R410A flare tool	R22/R407C flare too	
		Clutch type		
	ø 6.35(1/4")	0 - 0.5	1.0 - 1.5	
	ø 9.52(3/8")	0 - 0.5	1.0 - 1.5	
	ø12.70(1/2")	0 - 0.5	1.0 - 1.5	
	ø15.88(5/8")	0 - 0.5	1.0 - 1.5	
	ø19.05(3/4")	0 - 0.5	1.0 - 1.5	

 \divideontimes When flare processing for refrigerant R410A is applied using current tool, refer to the table above. B size can be secured using copper pipe gauge for margin adjustment.

	Processing size of	Flore chanc
copper pipe (mm)	flare section (mm)	Flare shape
ø6.35	8.7 - 9.1	. 45° ± 2°
ø9.52	12.8 - 13.2	0.50
ø12.70	16.2 - 16.6	
ø15.88	19.3 - 19.7	® \R0.4~R0.8
ø19.05	23.6 - 24.0	

2) Remove caps (both ends) for protection against mixing of foreign materials from optional part, and thinly apply refrigerat or oil (locally procured) on flare surface.

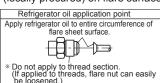

3) Securely tighten flare nut using torque wrench according to the table on the right.

Proper tightening torque using torque wrench

Outer diameter of	Tightening torque N•m
copper pipe (mm)	(kgf•cm)
ø6.35	14 - 18(140 - 180)
ø9.52	34 - 42(340 - 420)
ø12.70	49 - 61(490 - 610)
ø15.88	68 - 82(680 - 820)
ø19.05	100 - 120(1000 - 1200)

- 4) After refrigerant pipe is connected, be sure to perform gas leakage inspection for onsite connection pipes (including this optional part) and indoor/outdoor unit.
- 5) Heat insulation is necessary for this optional part: Wrap heat insulator (locally procured) around the onsite pipes and also the optional part (for dewdrop dripping prevention)
- 6) Perform test run according to the installation manual of the unit, making sure to also perform operation check.



Descriptions

A part to connect refrigerant pipes of the different diameter. (Unit ϕ 9.52 $\rightarrow \phi$ 12.7)

pplicable Models


- PUHZ-ZRP60VHA2
- PUHZ-ZRP71VHA2
- PUHZ-ZRP100VKA3
- PUHZ-ZRP125VKA3
- PUHZ-ZRP140VKA3
- PUHZ-ZRP100YKA3
- PUHZ-ZRP125YKA3
- PUHZ-ZRP140YKA3
- PUHZ-ZRP200YKA3
- [R410A type]

Specifications

Pipe diameter	Ф 9.52
Pipe material	C 1220T - OL

Dimensions

Unit: mm (inch)

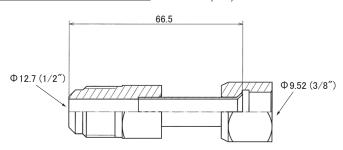

How to Use / How to

Make sure that you have all the following parts, in addition to this manual in this box:

•		· · ·
Joint Pipe		
PAC-SG72RJ-E (unit s	side:ø6.35 diameter, ons	ite pipe side:ø9.52 diameter)
PAC-SG73RJ-E (unit s	side: ø9.52 diameter, ons	ite pipe side:ø12.70 diameter)
		site pipe side:ø15.88 diameter)
PAC-SG75RJ-E (unit s	side:ø15.88 diameter, on:	site pipe side:ø19.05 diameter)
Unit side		Onsite piping side

Installation procedure

(carefully read the following before installing.)

This optional part is used to connect indoor/outdoor unit to onsite pipes of different diameters.

*When installing this optional part, be sure to read "Refrigerant pipe connection" in the installation manual attached to outdoor unit.


- 1) Apply flare processing to onsite pipes to adapt to R410A, according to the table on the right. Use optional accessory flare nut at this time. **Check the installation manual attached to the outdoor unit for advisability on whether or not onsite (existing) pipes can be used.
- *When pipe of 19.05 diameter is used, be sure to turn ON the SW8-1 on outdoor unit control board.

В	Pipe diameter		e (mm)	
			R410A flare tool	R22/R407C flare tool
	· · · · · · · · · · · · · · · · · · ·	(mm)	Clutc	h type
		ø 6.35(1/4")	0 - 0.5	1.0 - 1.5
	/ M	ø 9.52(3/8")	0 - 0.5	1.0 - 1.5
	dies	ø12.70(1/2")	0 - 0.5	1.0 - 1.5
	<u> </u>	ø15.88(5/8")	0 - 0.5	1.0 - 1.5
	Copper pipe	ø19.05(3/4")	0 - 0.5	1.0 - 1.5

refrigerant R410A is applied using current tool, refer to the table above. B size can be secured using copper pipe gauge for margin adjustment.

	Processing size of flare section (mm)	Flare shape
ø6.35	8.7 - 9.1	ůn 45° ± 2°
ø9.52	12.8 - 13.2	\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\
ø12.70	16.2 - 16.6	
ø15.88	19.3 - 19.7	® R0.4~R0.8
ø19.05	23.6 - 24.0	·

2) Remove caps (both ends) for protection against mixing of foreign materials from optional part, and thinly apply refrigerat or oil (locally procured) on flare surface.

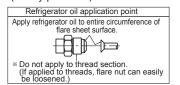

3) Securely tighten flare nut using torque wrench according to the table on the right.

(Proper tightening torque using torque wrench)

	(b			
Outer diameter of		Tightening torque N·m		
	copper pipe (mm)	(kgf•cm)		
	ø6.35	14 - 18(140 - 180)		
	ø 9.52	34 - 42(340 - 420)		
	ø12.70	49 - 61(490 - 610)		
	ø15.88	68 - 82(680 - 820)		
	ø19.05	100 - 120(1000 - 1200)		

- 4) After refrigerant pipe is connected, be sure to perform gas leakage inspection for onsite connection pipes (including this optional part) and indoor/outdoor unit.
- 5) Heat insulation is necessary for this optional part: Wrap heat insulator (locally procured) around the onsite pipes and also the optional part (for dewdrop dripping prevention)
- 6) Perform test run according to the installation manual of the unit, making sure to also perform operation check



Descriptions

A part to connect refrigerant pipes of the different diameter. (Unit ϕ 15.88 $\rightarrow \phi$ 19.05)

Applicable Models

- PUHZ-ZRP60VHA2
- PUHZ-ZRP71VHA2
- PUHZ-ZRP100VKA3
- PUHZ-ZRP125VKA3
- PUHZ-ZRP140VKA3
- PUHZ-ZRP100YKA3
- PUHZ-ZRP125YKA3
- PUHZ-ZRP140YKA3


[R410A type]

Specifications

Pipe diameter	Ф 15.88
Pipe material	C 1220T - OL

Dimensions

Unit: mm (inch)

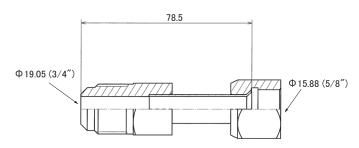

How to Use / How to Insta

Make sure that you have all the following parts, in addition to this manual in this box:

PAC-SG72RJ-E (unit side: ø6.35 diameter, onsite pipe side: ø9.52 diameter) PAC-SG73RJ-E (unit side:ø9.52 diameter, onsite pipe side:ø12.70 diameter) PAC-SG74RJ-E (unit side:ø12.70 diameter, onsite pipe side:ø15.88 diameter)

PAC-SG75RJ-E (unit side:ø15.88 diameter, onsite pipe side:ø19.05 diameter)

Onsite piping side Unit side

Installation procedure (carefully read the following before installing.)

This optional part is used to connect indoor/outdoor unit to onsite pipes of different diameters.

When installing this optional part, be sure to read "Refrigerant pipe connection" in the installation manual attached to outdoor unit.

1) Apply flare processing to onsite pipes to adapt to R410A, according to the table on the right. Use optional accessory flare nut at this time. **Check the installation manual attached to the outdoor unit for advisability on whether or not onsite (existing) pipes can be used. *When pipe of 19.05 diameter is used, be sure to turn ON the SW8-1 on outdoor unit control board


В
dies
Copper pine

Pipe diameter	D SIZE (IIIIII)	
	R410A flare tool	R22/R407C flare tool
(mm)	Clutcl	h type
ø 6.35(1/4")	0 - 0.5	1.0 - 1.5
ø 9.52(3/8")	0 - 0.5	1.0 - 1.5
ø12.70(1/2")	0 - 0.5	1.0 - 1.5
ø15.88(5/8")	0 - 0.5	1.0 - 1.5
ø19.05(3/4")	0 - 0.5	1.0 - 1.5

 \divideontimes When flare processing for refrigerant R410A is applied using current tool, refer to the table above. B size can be secured using copper pipe gauge for margin adjustment.

Outer diameter of copper pipe (mm)	Processing size of flare section (mm)	Flare shape
ø6.35	8.7 - 9.1	. \(\square 45^\circ \pm 2^\circ}
ø 9.52	12.8 - 13.2	200
ø12.70	16.2 - 16.6	
ø15.88	19.3 - 19.7	6 R0.4~R0.8
ø19.05	23.6 - 24.0	

2) Remove caps (both ends) for protection against mixing of foreign materials from optional part, and thinly apply refrigerat or oil (locally procured) on flare surface.

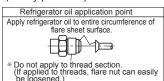

3) Securely tighten flare nut using torque wrench according to the table on the right.

(Proper tightening torque using torque wrench)

Outer diameter of	Tightening torque N·m
copper pipe (mm)	(kgf•cm)
ø6.35	14 - 18(140 - 180)
ø9.52	34 - 42(340 - 420)
ø12.70	49 - 61(490 - 610)
ø15.88	68 - 82(680 - 820)
ø19.05	100 - 120(1000 - 1200)

- 4) After refrigerant pipe is connected, be sure to perform gas leakage inspection for onsite connection pipes (including this optional part) and indoor/outdoor unit.
- 5) Heat insulation is necessary for this optional part: Wrap heat insulator (locally procured) around the onsite pipes and also the optional part (for dewdrop dripping prevention)
- 6) Perform test run according to the installation manual of the unit, making sure to also perform operation check.



Descriptions

A part to connect refrigerant pipes of the different diameter. (Unit ϕ 9.52 $\to \phi$ 15.88)

Applicable Models


- MXZ-3E68VA
- MXZ-4E72VA
- MXZ-4F72VF3
- MXZ-3F68VF3 ■ MXZ-4F80VF3
- MXZ-4E83VA
- MXZ-4F83VF
- MXZ-5E102VA
 - MXZ-6D122VA2 MXZ-5F102VF
- MXZ-4E83VAHZ MXZ-6F122VF
 - MXZ-4F83VFHZ

Specifications

Pipe diameter	Ф 9.52
Pipe material	C 1220T - OL

Dimensions

Unit: mm (inch)

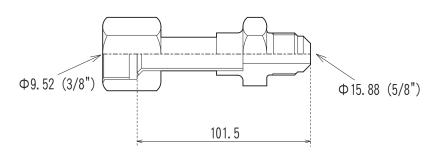

How to Use / How to Instal

Make sure that you have all the following parts, in addition to this manual in this box:

Joint Pipe PAC-SG76RJ-E (unit side:ø9.52 diameter, onsite pipe side:ø15.88 diameter) PAC-493PI (unit side:ø6.32 diameter, onsite pipe side:ø9.52 diameter) MAC-A454JP-E (unit side: ø9.52 diameter, onsite pipe side: ø12.7 diameter) MAC-A455JP-E (unit side:ø12.7 diameter, onsite pipe side:ø9.52 diameter) MAC-A456JP-E (unit side:ø12.7 diameter, onsite pipe side:ø15.88 diameter)

Unit side

Onsite piping side

Installation procedure

(carefully read the following before installing.)

This optional part is used to connect indoor/outdoor unit to onsite pipes of different diameters.

X When installing this optional part, be sure to read "Refrigerant pipe connection" in the installation manual attached to outdoor unit.


1) Apply flare processing to onsite pipes to adapt to R410A, according to the table on the right. Use optional accessory flare nut at this time. **Check the installation manual attached to the outdoor unit for advisability on whether or not onsite (existing) pipes can be used.

∣ ₽	Pipe diameter (mm)	B size	e (mm)
B 8 1		R410A flare tool	R22/R407C flare tool
		Clutch type	
	ø 6.35(1/4")	0 - 0.5	1.0 - 1.5
dies	ø 9.52(3/8")	0 - 0.5	1.0 - 1.5
	ø12.70(1/2")	0 - 0.5	1.0 - 1.5
Copper pipe	ø15.88(5/8")	0 - 0.5	1.0 - 1.5

When flare processing for refrigerant R410A is applied using current tool, refer to the table above. B size can be secured using copper pipe gauge for margin adjustment.

	Processing size of flare section (mm)	Flare shape
ø6.35	8.7 - 9.1	45° ± 2°
ø9.52	12.8 - 13.2	
ø12.70	16.2 - 16.6	
ø15.88	19.3 - 19.7	® \R0.4~R0.8

2) Remove caps (both ends) for protection against mixing of foreign materials from optional part, and thinly apply refrigerat or oil (locally procured) on flare surface.

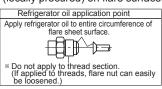

3) Securely tighten flare nut using torque wrench according to the table on the right.

(Proper tightening torque using torque wrench)

Outer diameter of copper pipe (mm)	Tightening torque N·m (kgf·cm)
ø6.35	14 - 18(140 - 180)
ø9.52	34 - 42(340 - 420)
ø12.70	49 - 61(490 - 610)
ø15.88	68 - 82(680 - 820)

- 4) After refrigerant pipe is connected, be sure to perform gas leakage inspection for onsite connection pipes (including this optional part) and indoor/outdoor unit.
- 5) Heat insulation is necessary for this optional part: Wrap heat insulator (locally procured) around the onsite pipes and also the optional part (for dewdrop dripping prevention)
- 6) Perform test run according to the installation manual of the unit, making sure to also perform operation check.



Descriptions

A part to connect refrigerant pipes of the different diameter. (Unit ϕ 6.35 $\to \phi$ 9.52)

Applicable Models


- MXZ-3E68VA
- MXZ-4E72VA
- MXZ-4F72VF3 ■ MXZ-4F80VF3
- MXZ-4E83VA
- MXZ-4F83VF
- MXZ-5E102VA
- MXZ-5F102VF
- MXZ-6D122VA2
- MXZ-6F122VF
- MXZ-4E83VAHZ MXZ-4F83VFHZ
- MXZ-3F68VF3

Specifications

Pipe diameter	Ф 6.35
Pipe material	C 1220T - OL

Dimensions

Unit: mm (inch)

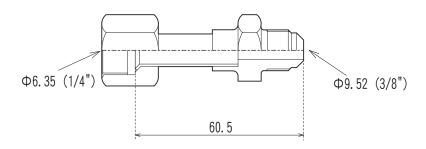

How to Use / How to Instal

Make sure that you have all the following parts, in addition to this manual in this box:

Joint Pipe PAC-SG76RJ-E (unit side:ø9.52 diameter, onsite pipe side:ø15.88 diameter) PAC-493PI (unit side:ø6.32 diameter, onsite pipe side:ø9.52 diameter) MAC-A454JP-E (unit side: ø9.52 diameter, onsite pipe side: ø12.7 diameter) MAC-A455JP-E (unit side:ø12.7 diameter, onsite pipe side:ø9.52 diameter) MAC-A456JP-E (unit side:ø12.7 diameter, onsite pipe side:ø15.88 diameter)

Unit side



Onsite piping side

Installation procedure

(carefully read the following before installing.)

This optional part is used to connect indoor/outdoor unit to onsite pipes of different diameters.

X When installing this optional part, be sure to read "Refrigerant pipe connection" in the installation manual attached to outdoor unit.


1) Apply flare processing to onsite pipes to adapt to R410A, according to the table on the right. Use optional accessory flare nut at this time. **Check the installation manual attached to the outdoor unit for advisability on whether or not onsite (existing) pipes can be used.

B Pipe diameter		B size	e (mm)
	(mm)	R410A flare tool	R22/R407C flare tool
		Clutch type	
	ø 6.35(1/4")	0 - 0.5	1.0 - 1.5
dies	ø 9.52(3/8")	0 - 0.5	1.0 - 1.5
	ø12.70(1/2")	0 - 0.5	1.0 - 1.5
Copper pipe	ø15.88(5/8")	0 - 0.5	1.0 - 1.5

*When flare processing for refrigerant R410A is applied using current tool, refer to the table above. B size can be secured using copper pipe gauge for margin

Outer diameter of copper pipe (mm)	Processing size of flare section (mm)	Flare shape
ø6.35	8.7 - 9.1	45° ± 2°
ø9.52	12.8 - 13.2	
ø12.70	16.2 - 16.6	
ø15.88	19.3 - 19.7	® \R0.4~R0.8

2) Remove caps (both ends) for protection against mixing of foreign materials from optional part, and thinly apply refrigerat or oil (locally procured) on flare surface.

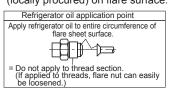

3) Securely tighten flare nut using torque wrench according to the table on the right.

(Proper tightening torque using torque wrench)

Outer diameter of copper pipe (mm)	Tightening torque N•m (kgf•cm)
ø6.35	14 - 18(140 - 180)
ø9.52	34 - 42(340 - 420)
ø12.70	49 - 61(490 - 610)
ø15.88	68 - 82(680 - 820)

- 4) After refrigerant pipe is connected, be sure to perform gas leakage inspection for onsite connection pipes (including this optional part) and indoor/outdoor unit.
- 5) Heat insulation is necessary for this optional part: Wrap heat insulator (locally procured) around the onsite pipes and also the optional part (for dewdrop dripping prevention)
- 6) Perform test run according to the installation manual of the unit, making sure to also perform operation check.

OUTDOOR UNIT



Descriptions

Removes minute dirt particles in the refrigerant pipe, when replacing an air-conditioning unit. (for Liquid Pipe of $\emptyset 6.35$)

applicable Models

■ PUZ-ZM50VKA2 ■ PUHZ-ZRP50VKA2

■ PUZ-ZM35VKA2 ■ PUHZ-ZRP35VKA2

[R32 type]


[R410A type]

Specifications

Pipe size	Liquid side: Ø6.35 flare
Applicable refrigerant	R32 / R410A

Dimensions

Unit: mm

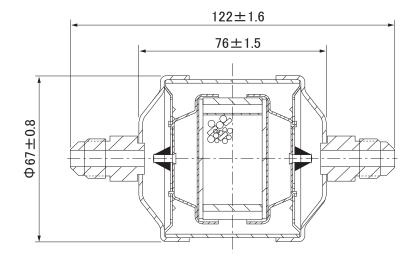

How to Use / How to Insta

Make sure that you have all the following parts.

	②Connection pipe PAC-SG81DR-E (for diameter of Ø6.35) PAC-SG82DR-E (for diameter of Ø9.52)	
For diameter of 6.35 or 9.52	For diameter of 6.35 or 9.52	For diameter of 6.35 or 9.52
One piece	One piece	One piece

Installation Procedures (carefully read the following before installation.)

- Cautions: 1) This optional part is used to remove moisture within refrigerant pipe to prevent compressor failures. However, if too much impurity inside refrigerant cycle has accumulated, such as amount of mixed moisture, dryer must be replaced after one season elapses. (Amount of allowable moisture absorption: 3 -7 cc)
 - 2) Install the filter dryer to refrigerant pipe mid way on liquid side.
 - 3) Filter dryer can be installed outside of the unit. Installation inside the unit is possible only when installation space can be secured.

Preparation for installation

In the following parts, the installation for PUHZ-RP3VHA is highlighted as a representive.

- •1)Refer to the installation manual of the unit for procedure of refrigerant piping and vacuuming, etc.
 - Remove the panel from outdoor unit. (See Fig. 1.)
- •2)Removing the panel

Remove the service panel, front pipe cover and back pipe cover.

Remove back pipe cover only when taking it from back pipe.

- •3)Pipe connection
 - When bending pipe, take bending R (R100-R150) just enough, and take care that pipe des not fold.
 - · Apply pipe processing without touching compressor. (If the pipe touches, it may cause abnormal sound or vibration.)
 - · Apply flare processing to connection pipe, arranging this on site.
 - Thinly apply refrigerator oil (locally procured) to flare sheet surface.


Outer diameter of copper pipe (mm)	Processing size of flare section (mm) 8.7 - 9.1 12.8 - 13.2	
ø6.35		
ø9.52		
Flare shape	Refrigerator oil application point	
%0 45° ± 2° H 8 R0.4~R0.8	Apply refrigerator oil to entire circumference of flare sheet surface.	

(Proper tightening torque using torque wrench)

reper agricer in ig to read acting to read in error in				
	Outer diameter of	Tightening torque		
	copper pipe (mm)	N•m (kgf•cm)		
	ø6.35	14 - 18 (140 - 180)		
	ø9.52	34 - 42 (340 - 420)		

Z/ / dies		dies Copper pipe	Pipe diameter (mm)	B size (mm)	
	7////			R410A flare tool	R22, R407C flare tool
	144			Clutch type	
	dies		ø 6.35(1/4")	0 - 0.5	1.0 - 1.5
			ø 9.52(3/8")	0 - 0.5	1.0 - 1.5

*When flare processing for refrigerant R410A is applied using current tool, refer to the table above. B size can be secured using copper pipe gauge for margin adjustment.

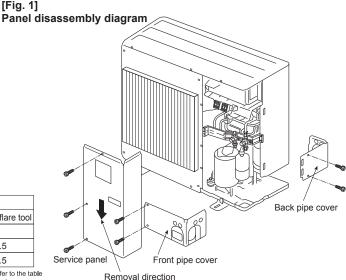

of service panel


2 Installation of Filter dryer

Be sure to install filter dryer on liquid side (narrow side).


• 1) When filter dryer is being installed inside the unit, refer to Figs 2 and 3, according to the installation space for dryer. If installation space for dryer cannot be secured, install it outside of the unit.Install referring to Item 2-ii).

(Fig. 2)

Filter dryer installation diagram (Installation inside the unit)

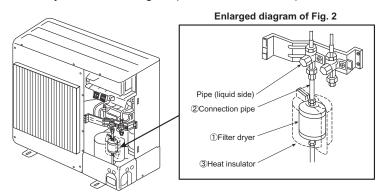


[Fig. 3] Filter dryer installation diagram (horizontal installation inside the unit)

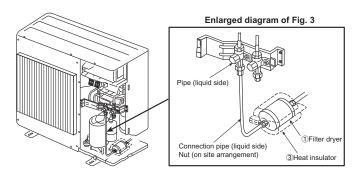

2) When installing outside of the unit, install it at optional position of extension pipe. Make and arrange connection pipe on the site. (See Fig. 4.)

[Fig. 4]
Filter dryer installation diagram (Installation outside of the unit)

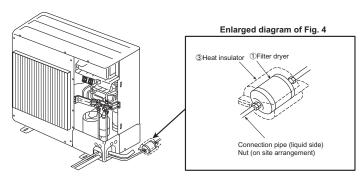

- 3) Perform heat insulation work. (To prevent dewdrops forming)
 - After dryer is installed, wrap heat insulator around dryer section.
 ※Apply taping to joint of heat insulator ensuring that there is no gap. Also wrap heat insulator around pipe.

3 | Filter dryer installation is now complete. Reattach service panel as it was.

4 Test run

1) Perform test run according to the installation manual of the unit, and be sure to perform gas leak check and operation check.

Photo



Descriptions

Removes minute dirt particles in the refrigerant pipe, when replacing an air-conditioning unit. (for Liquid Pipe of ϕ 9.52)

Applicable Models

- PUZ-ZM60VHA type
- PUZ-ZM71VHA type
- PUZ-ZM100VKA type
- PUZ-ZM125VKA type
- PUZ-ZM140VKA type
- PUZ-ZM100YKA type
- PUZ-ZM125YKA type
- PUZ-ZM140YKA type PUZ-ZM200YKA type
- PUZ-M100VKA type
- PUZ-M125VKA type
- PUZ-M140VKA type
- PUZ-M100YKA type
- PUZ-M125YKA type
- PUZ-M140YKA type
- PUZ-M200YKA type

- PUHZ-ZRP60VHA2
- PUHZ-ZRP71VHA2
- PUHZ-ZRP100YKA3
- PUHZ-ZRP125YKA3 ■ PUHZ-ZRP140YKA3
- PUHZ-ZRP100VKA3 ■ PUHZ-ZRP125VKA3
- PUHZ-ZRP140VKA3
- PUHZ-ZRP200YKA3
- PUHZ-P100VKA
- PUHZ-P125VKA
- PUHZ-P140VKA
- PUHZ-P100YKA
- PUHZ-P125YKA
- PUHZ-P140YKA
- PUHZ-P200YKA3 ■ PUHZ-SHW112VHA
- PUHZ-SHW112YHA
- PUHZ-SHW140YHA

[R32 type]


[R410A type]

Specifications

Pipe size	Liquid side: Ø 9.52 flare
Applicable refrigerant	R32 / R410A

Dimensions

Unit: mm

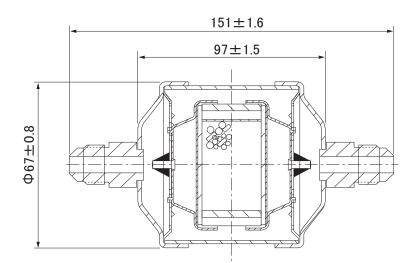

OUTDOOR UNIT

How to Use / How to Insta

Make sure that you have all the following parts.

①Filter dryer	©Connection pipe	③Heat insulator
PAC-SG81DR-E (for diameter of ø6.35)	PAC-SG81DR-E (for diameter of ø6.35)	PAC-SG81DR-E (for diameter of ø6.35)
PAC-SG82DR-E (for diameter of ø9.52)	PAC-SG82DR-E (for diameter of ø9.52)	PAC-SG82DR-E (for diameter of ø9.52)
For diameter of 6.35 or 9.52	For diameter of 6.35 or 9.52	For diameter of 6.35 or 9.52
One piece	One piece	One piece

Installation Procedures (carefully read the following before installation.)

- Cautions: 1) This optional part is used to remove moisture within refrigerant pipe to prevent compressor failures. However, if too much impurity inside refrigerant cycle has accumulated, such as amount of mixed moisture, dryer must be replaced after one season elapses. (Amount of allowable moisture absorption: 3 -7 cc)
 - 2) Install the filter dryer to refrigerant pipe mid way on liquid side.
 - 3) Filter dryer can be installed outside of the unit. Installation inside the unit is possible only when installation space can be secured.

Preparation for installation

In the following parts, the installation for PUHZ-RP3VHA is highlighted as a representive.

- •1)Refer to the installation manual of the unit for procedure of refrigerant piping and vacuuming, etc.
 - Remove the panel from outdoor unit. (See Fig. 1.)
- •2)Removing the panel

Remove the service panel, front pipe cover and back pipe cover.

Remove back pipe cover only when taking it from back pipe.

- •3)Pipe connection
 - · When bending pipe, take bending R (R100 R150) just enough, and take care that pipe des not fold.
 - · Apply pipe processing without touching compressor. (If the pipe touches, it may cause abnormal sound or vibration.)
 - · Apply flare processing to connection pipe, arranging this on site.
 - Thinly apply refrigerator oil (locally procured) to flare sheet surface.


Outer diameter of copper pipe (mm)	Processing size of flare section (mm)	
ø6.35	8.7 - 9.1	
ø9.52	12.8 - 13.2	
Flare shape	Refrigerator oil application point	
°C + 45° ± 2° °C + 45° ± 2° R0.4∼R0.8	Apply refrigerator oil to entire circumference of flare sheet surface.	

(Proper tightening torque using torque wrench)

Outer diameter of	Tightening torque
copper pipe (mm)	N•m(kgf•cm)
ø6.35	14 - 18(140 - 180)
ø9.52	34 - 42(340 - 420)

	B-	Pipe	B size (mm)	
dies		diameter (mm)	R410A flare tool	R22, R407C flare tool
			Clutch type	
	الما	ø6.35(1/4")	0 - 0.5	1.0 - 1.5
	Copper pipe	ø9.52(3/8")	0 - 0.5	1.0 - 1.5

^{*}When flare processing for refrigerant R410A is applied using current tool, refer to the table above. B size can be secured using copper pipe gauge for margin adjustment

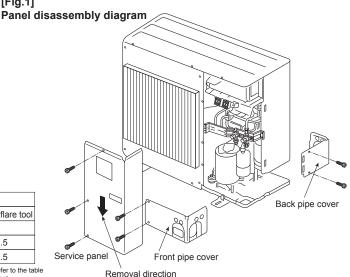

of service panel


2 Installation of Filter dryer

Be sure to install filter dryer on liquid side (narrow side).


·1) When filter dryer is being installed inside the unit, refer to Figs 2 and 3, according to the installation space for dryer. If installation space for dryer cannot be secured, install it outside of the unit (see Fig. 4).

[Fig. 2]

Filter dryer installation diagram (Installation inside the unit)

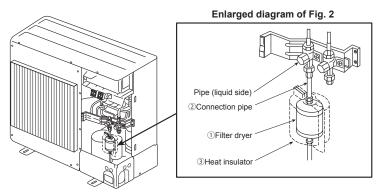


[Fig. 3] Filter dryer installation diagram (horizontal installation inside the unit)

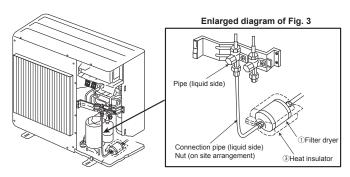

2) When installing outside of the unit, install it at optional position of extension pipe. Make and arrange connection pipe on the site. (See Fig. 4.)

[Fig. 4]
Filter dryer installation diagram (Installation outside of the unit)

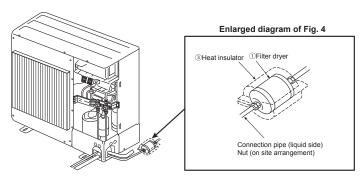

- 3) Perform heat insulation work. (To prevent dewdrops forming)
 - · After dryer is installed, wrap heat insulator around dryer section.
 - *Apply taping to joint of heat insulator ensuring that there is no gap. Also wrap heat insulator around pipe.

3 | Filter dryer installation is now complete. Reattach service panel as it was.

4 Test run

1) Perform test run according to the installation manual of the unit, and be sure to perform gas leak check and operation check.

OUTDOOR UNIT

Photo



Descriptions

Removes minute dirt particles in the refrigerant pipe. Is used when replacing an air-conditioning unit. (for Liquid Pipe of ϕ

Applicable Models

- PUHZ-ZRP250YKA3 type PUHZ-P250YKA3 type
- PUZ-ZM250YKA type ■ PUZ-M250YKA type

[R410A type]


[R32 type]

Specifications


Pipe size	Liquid side: Ø 12.7 flare
Applicable refrigerant	R32 / R410A

Dimensions

Unit: mm

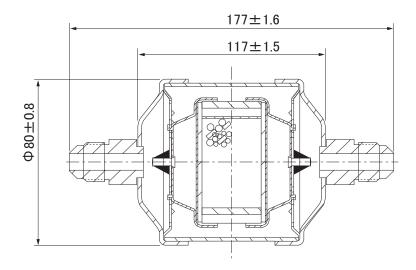

Make sure that you have all the following parts.

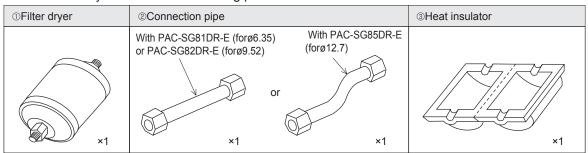

Installation Procedures (carefully read the following before installing)

- Cautions 1) This optional part is used to remove moisture inside the refrigerant pipe and prevent fault of compressor. However, if there is excessive contamination inside the refrigerant cycle, such as a large amount of mixed moisture, etc., the dryer must be replaced after it is used during one season (the amount of allowable moisture absorption: 3-7 cc).
 - 2) Install the filter dryer to refrigerant pipe midway on liquid side, using flare connection.
 - 3) The filter dryer can be attached outside the unit. It can also be attached to the inside of unit only if the space for installation can be secured

Preparations for Installation

- Refer to the installation manual of outdoor unit for the procedures of removing outdoor unit panel, refrigerant piping, vacuuming, etc.
- Removing panel
 - Remove the service panel and cover.
- iii) Connecting pipes
 - When bending pipe, allow enough bending R (R100-150), and
 - take care that the pipe is not folded.
 Lay out the pipe so that it does not come into contact with the compressor (Being in contact could cause abnormal sound or vibrations.)
 - Apply flare processing to the connection pipe procured at local site.
 - Thinly coat the flare sheet surface with refrigerant oil (procured at local site).

Pine	Dimension B (mm)		
diameter (mm)	R410A flare tool	R22/R407C flare tool	
	Clutch type		
ø6.35(1/4")	0 - 0.5	1.0 - 1.5	
ø9.52 (3/8")	0 - 0.5	1.0 - 1.5	
ø12.7 (1/2")	0 - 0.5	1.0 - 1.5	
	(mm) ø6.35(1/4") ø9.52 (3/8")	R410A flare tool Clu	

*Use the above table as a reference when processing the flare for refrigerant R410A using the conventional tool. Dimension B can be secured when using a copper pipe gauge for outgoing margin adjustment.

Outer diameter of copper pipe (mm)	Processing size of flare portion øA (mm)
ø6.35	8.7 - 9.1
ø9.52	12.8 - 13.2
ø12.7	16.2 - 16.6


Flare shape	Refrigerant oil coating point	
≥ 45° ± 2°	Coat the entire circumference of	
10 43 IZ	sheet surface with refrigerant oil.	
 		
% \\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\		
Y (2007)		


(Appropriate tightening force with torque wrench)			
Outer diameter of copper pipe (mm)			
ø6.35	14 - 18 (140 - 180)		
ø9.52	34 - 42 (340 - 420)		
ø12.7	49 - 61 (490 - 610)		

Installing Filter Dryer


Be sure to attach the filter dryer on the liquid pipe (narrower one)

When installing the filter dryer inside the unit, refer to Fig. 1 or Fig. 2 according to the space in unit and install it. If there is no space for the dryer to be installed in unit, install it outside the unit (see Fig. 3).

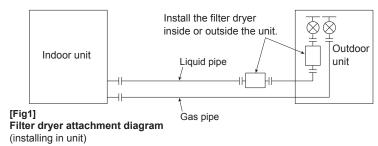

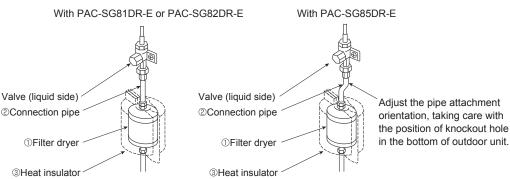


[Fig2]Filter dryer attachment diagram (horizontal attachment in unit)

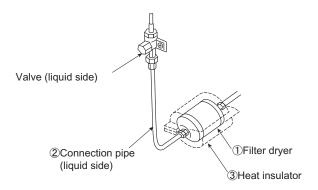

ii) When installing the filter dryer outside the unit, attach it to any position of extended pipe. Procure the connection pipe at local site.

[Fig3]Filter dryer attachment diagram (attachment outside unit)

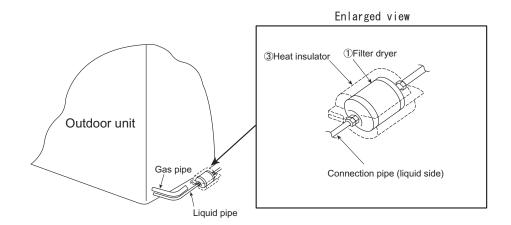

- iii) Heat insulation (to prevent dripping)
 - After attaching the filter dryer, wrap the heat insulator around the dryer.
 *Tape the seam of heat insulator so that no gap is produced.
 - Also wrap heat insulator around other pipes.


The attachment of filter dryer is now complete.

Reattach the service panels, etc. to the original position.

4 | Test Run

i) Perform test run according to the installation manual of unit, and be sure to execute gas leakage check and operation check.

- Remove the front panel from the outdoor unit.
- Drill Ø4.0 mm screw holes in the front panel at the 4 locations shown below.
- The length of the drill bit should be about 10 mm as shown in the figure below. If the drill bit is too long, it may damage the parts inside the outdoor unit.

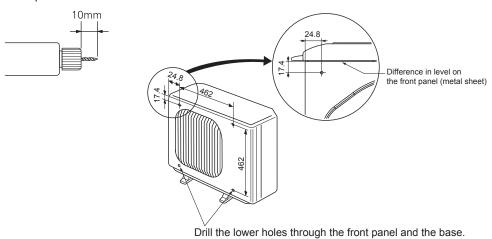


2. Attaching the air outlet guide

- Attach the air outlet guide to the outdoor unit with the 4 screws provided with the air outlet guide.
- The air outlet guide is allowed to be installed in any of the following directions so that air blows upwards, to the left, or to the right.
- * Do not install the air outlet guide in the downward direction, or it may cause short cycling.


Note: Tighten the screws securely.

A chattering sound could be produced due to vibration if the screws are loose.

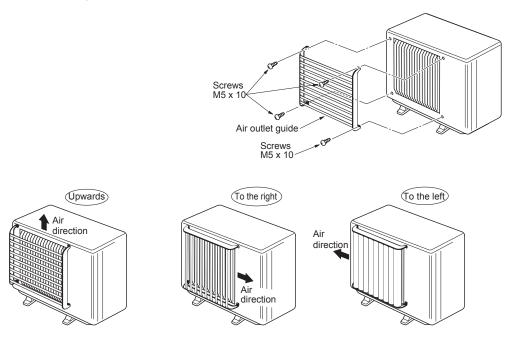

Air Outlet Guide

Figure

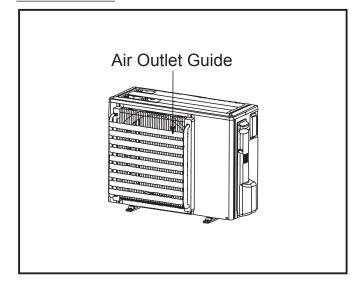

Descriptions

A part to change air direction from outdoor unit. Can also be used to prevent short cycles.

Applicable Models


- PUZ-ZM35VKA type■ PUZ-ZM50VKA type
- [R32 type]
- PUHZ-ZRP35VKA2 type PUHZ-ZRP50VKA2 type
- 1 piece required [R410A type]


Specifications

Exterior	Color (Munsell)	Ivory (3.0Y 7.8/1.1)	
LXIGIIOI	Material/surface treatment	t Alloy hot-dip zinc-coated carbon steel sheet/Acrylic resin coating	
Weight		2.8kg	
Air outlet direction		Changeable between up, down or sideways	
Accessory name x Qty. <material surface="" treatment=""></material>		Screw (M5x10) x 4 (Iron/Zinc nickel alloy plated) Screw (M4x12) x 4 (Iron/Zinc nickel alloy plated)	

Dimensions

Unit: mm

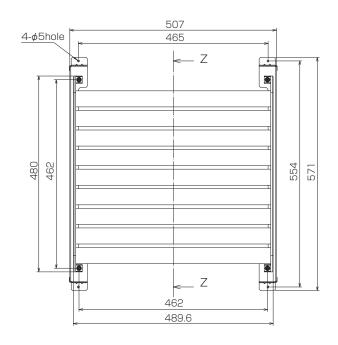

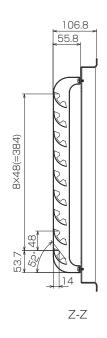

⚠ CAUTION

When the outdoor unit is installed in front of a store or in a passage, this air outlet guide is used to change the discharge direction of hot air (during cooling) or cold air (during heating) from the outdoor unit.

Upward, downward and sideways directions are possible. This guide is also effective to protect the

winds may blow against the discharge outlet.

- Note the followings when installing this guide:

 1) Be sure not to use "upward discharge" in a place where snowing is possible. Snow may accumulate in the
- guard, which could damage the fan, etc.

 2) Attaching this unit will decrease the performance (by 2-3%) and increase noise from outdoor unit (by approx. 1-2 dB).


 3) Do not use "upward discharge" when there are any obstacles at the back and on both sides of outdoor unit (air is taken in from top of unit): This could cause a short cycle.
- To eliminate the influence of external wind, be sure to install the unit with its back facing to wall.
- 5) Do not install this unit in a place where wind directly blows to the back of the unit.



Note that two sets of this product are necessary for ZM100, ZM125, ZM140 ZRP100, ZRP125, ZRP140.

1 Accesories

Make sure that this package has the following parts as well as the installation sheet:

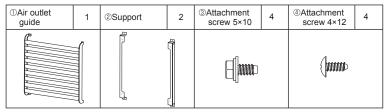

2 Requirements of installation space

[Unit:mm]

- Secure the necessary surrounding space shown below and select a place with less obstacles, to prevent a short cycle.
- 1) Surrounding space needed when installing one unit
- Do not use "upward discharge" in cases of figures (3) and (5) below.
- (1) Obstacle at front (open at back, sides and top)




(2) Obstacles at back and front (open at sides and top)




(3) Obstacles at back and top (open at front and sides)




(4) Obstacles at back, and sides (open at front and top)

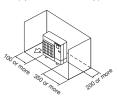


(5) Obstacles at back, sides and top (open at front)

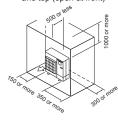


- 2) Surrounding space needed when installing multiple units
 - · When installing units horizontally in a series, leave at least 350 mm space between units .
 - Do not use "upward discharge" in case of figure (3) below.
- (1) Obstacle at front (open at back, sides and top)

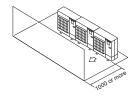


(2) Obstacles at back and front (open at sides and top)

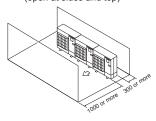


(3) Obstacles at back and top (open at front and sides)

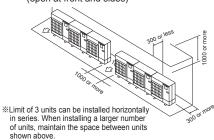

- (4) Installing units, one in each row
- (5) Installing multiple units in multiple rows

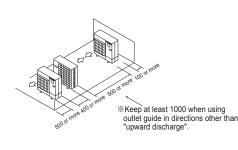

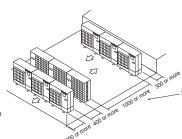


※Keep at least 2000 when using outlet guide in directions other than "upward discharge".

3 Installation Complete Diagrams

809W × 300D × 630H(mm) Outdoor unit Air outlet guide


4 Installation Method

- Four blowout directions can be selected: Check the orientation of blowout vane, and attach the blowout guide in the direction that matches the situation at local site.
- (1) Make a frame by fixing 2 supports ② on the outdoor unit with 4 screws ④.
 (2) Fix the air outlet guide ① to the supports mounted on the outdoor unit with 4 screws ③.

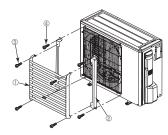

Setting blow-off direction>					
Upward	Downward	Sideways to left	Sideways to right		
1		+			

Photo

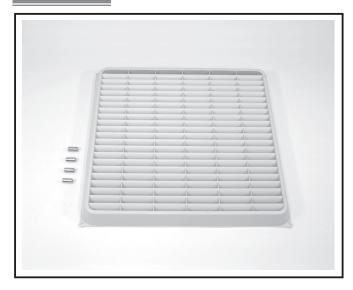

Descriptions

A part to change air direction from outdoor unit. Can also be used to prevent short cycles.

pplicable Models

- PUZ-ZM60VHA type ■ PUZ-ZM71VHA type
- PUHZ-ZRP60VHA2
- PUHZ-ZRP71VHA2
- only 1 piece required
- PUHZ-SHW112VHA
- PUHZ-SHW112YHA
- PUHZ-SHW140YHA 2 pieces required

[R32 type]


[R410A type]


Specifications

Exte	rior	Color (Munsell)	Ivory (3.0Y 7.8/1.1)		
LXICI	KICHOI	Material	Air outlet grille: PP resin		
Wei	Weight		1.2kg		
Air outlet direction		direction	Changeable between up, down or sideways		
Accessory name x Qty. <material surface="" treatment=""></material>		ry name x Qty. I/Surface treatment>	Washer faced screw (M5x35) x 4 (Iron wire (SWCH18A)/Zinc nickel plated)		

Dimensions



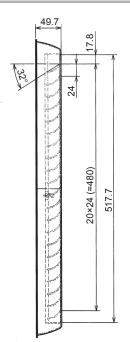

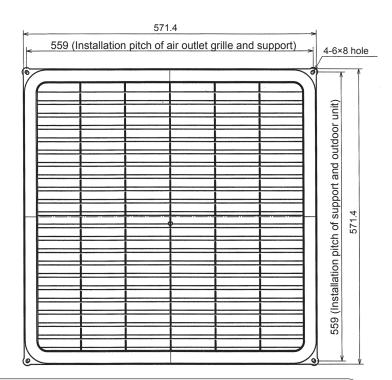

⚠ CAUTION

* Air Guide prevents reverse rotation of outdoor unit fan when it enters low speed rotation mode with fan controller being operated. It is also used for protection of fan when strong winds, such as a typhoon, wind blowing through tall buildings, etc., directly strike the air outlet. In addition, installation of this product is necessary when cooling operation is to be performed in outdoor tempreture of -5°C or lower (down to -15°C).

Note the followings when installing this guide:

- Be sure not to use "upward discharge" in a place where snowing is possible. Snow may accumulate in the guard, which could damage the fan, etc.
 Attaching this unit will decrease the performance (by 2-3%) and increase noise from outdoor unit (by approx. 1-2 dB).
- Do not use "upward discharge" when there are any obstacles at the back and on both sides of outdoor unit (air is taken in from top of unit): This could cause a short cycle.


 To eliminate the influence of external wind, be sure to install the unit with its back facing to wall.
- 5) Do not install this unit in a place where wind directly blows to the back of the unit.

How to Use / How to Instal

2-fan type outdoor unit

1 Checking provided parts

Make sure that this package has the following parts as well as the installation sheet:

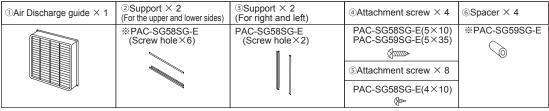



2 Checking Installation Space


(In the following diagrams, dimensions in parentheses are for 2 fan type models. Dimensions not in parentheses are common for all series models. Unit: mm)

- Secure the necessary surrounding space shown below and select a place with less obstacles, to prevent a short cycle.
- Surrounding space needed when installing one unit
 Do not use "upward discharge" in cases of figures (3) and (5) below.
- (1) Obstacle at front (open at back, sides and top)



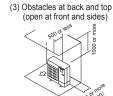


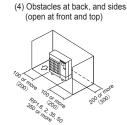


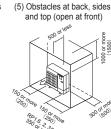

- 2) Surrounding space needed when installing multiple units
 - When installing units horizontally in a series, leave at least 350 mm space between units for RP2, 50 type or lower models, and at least 10 mm for RP2.5, 60 type or higher models.
 - Do not use "upward discharge" in case of figure (3) below.
- (1) Obstacle at front (open at back, sides and top)



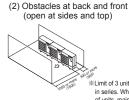


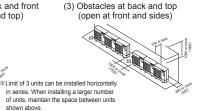







(5) Installing multiple units in multiple rows

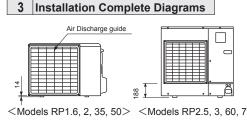

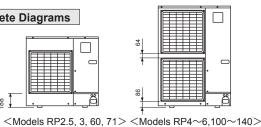

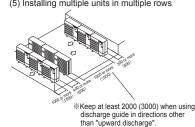

4 Installation Method


For RP1.6, 2, 35, 50:


- 1) Fix the two supports (2) and two supports (3), using four screws (5) to make a frame.
 2) Attach the assembled supports to the outdoor unit using four screws (5), and then attach blowout guide (1) to the support (2), using four screws (4).

 • Four blowout directions can be selected: Check the orientation of blowout vane, and attach the blowout guide in the direction
 - that matches the situation at local site.


For (R)P2.5 - 6, 60 - 140: (Two sets of support and blowout guide are necessary for two-fan type models.)

- 1) Remove the 4 screws that hold the existing fan guard.
- 2) Fit the 4 spacers into the hole in fan guard, and then use the 4 screws 4 to install the provided blowout guide 1 to the outdoor unit above the existing fan guard.
 - The four blowout directions can be selected: Check the orientation of blowout vane, and install the blowout guide in the direction that matches the circumstance at local site.

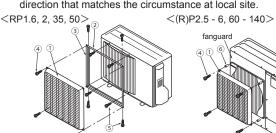

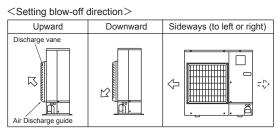

Figure

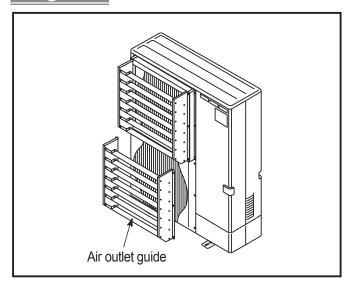

Specifications

	Color (Munsell)	lvory (3.0Y 7.8/1.1)		
Exterior	Material	Air outlet grille: Alloy hot-dip zinc- coated carbon steel sheet		
Weight		7kg		
Air outlet direction		Changeable between up, down or sideways		
Accessory name x Qty. <material surface="" treatment=""></material>		Washer faced screw (M5x15) x 12 (Iron wire (SWCH18A)/Zinc nickel plated) Washer x 12, Spring washer x 12		

Descriptions

A part to change air direction from outdoor unit. Can also be used to prevent short cycles.

applicable Models

- PUZ-M100VKA type
- PUZ-M125VKA type
- PUZ-M140VKA type
- PUZ-M100YKA type
- PUZ-M125YKA type
- PUZ-M140YKA type
- MXZ-4F83VF
- MXZ-5F102VF
- MXZ-6F122VF
- MXZ-2F53VFHZ
- MXZ-4F83VFHZ
- 1 piece required
- PUZ-ZM100VKA type
- PUZ-ZM125VKA type
- PUZ-ZM140VKA type
- PUZ-ZM100YKA type
- PUZ-ZM125YKA type
- PUZ-ZM140YKA type ■ PUZ-ZM200YKA type
- PUZ-ZM250YKA type
- PUZ-M200YKA type
- PUZ-M250YKA type


2 piece required


[R32 type]


- PUHZ-P100VKA
- PUHZ-P125VKA
- PUHZ-P140VKA
- PUHZ-P100YKA ■ PUHZ-P125YKA
- PUHZ-P140YKA
- 1 piece required
- PUHZ-ZRP100VKA3
- PUHZ-ZRP125VKA3
- PUHZ-ZRP140VKA3
- PUHZ-ZRP100YKA3
- PUHZ-ZRP125YKA3
- PUHZ-ZRP140YKA3
- PUHZ-ZRP200YKA3
- PUHZ-ZRP250YKA3
- PUHZ-P200YKA3 ■ PUHZ-P250YKA3
- 2 pieces required
- MXZ-4E83VA
- MXZ-5E102VA ■ MXZ-6D122VA2
- MXZ-2E53VAHZ
- MXZ-4E83VAHZ

1 piece required [R410A type]

Unit: mm

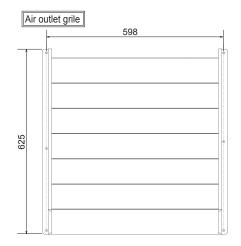

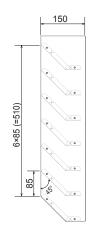

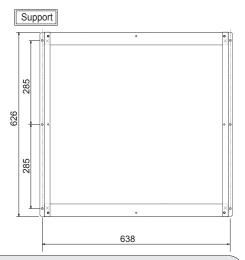



⚠ CAUTION

Air Guide prevents reverse rotation of outdoor unit fan when it enters low speed rotation mode with fan controller being operated. It is also used for protection of fan when strong winds, such as a typhoon, wind blowing through tall buildings, etc., directly strike the air outlet. In addition, installation of this product is necessary when cooling opetation is to be performed in outdoor tempreture of -5°C or lower (down to -15°C).

- Note the followings when installing this guide:
 1) Be sure not to use "upward discharge" in a place where snowing is possible. Snow may accumulate in the guard, which could damage the fan, etc.
- 2) Attaching this unit will decrease the performance (by 2-3%) and increase noise from outdoor unit (by approx. 1-2 dB)
- 3) Do not use "upward discharge" when there are any obstacles at the back and on both sides of outdoor unit (air is taken in from top of unit): This could cause a short cycle.
- To eliminate the influence of external wind, be sure to install the unit with its back facing to wall.
- 5) Do not install this unit in a place where wind directly blows to the back of the unit.

How to Use / How to Instal

2-fan type outdoor unit

1 Checking provided parts

Make sure that this package has the following parts as well as the installation sheet:

①Air Discharge guide	1	②Support	1	3Screw(5×15)	12	@Washer	12	⑤Spring washer	12

2 Checking Installation Space (Unit: mm)

- Secure the necessary surrounding space shown below and select a place with less obstacles, to prevent a short cycle.
- 1) Surrounding space needed when installing one unit
- Do not use "upward discharge" in cases of figures (3) and (5) below.
- (open at back, sides and top)

(1) Obstacle at front

(open at sides and top)

(2) Obstacles at back and front


(open at front and sides)

(3) Obstacles at back and top

(open at front and top)

(4) Obstacles at back, and sides

(5) Obstacles at back, sides and top (open at front)

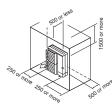


- 2) Surrounding space needed when installing multiple units
 - · When installing units horizontally in a series, leave at least 10 mm space between units.


(2) Obstacles at back and front

- Do not use "upward discharge" in case of figure (3) below.
- (1) Obstacle at front (open at back, sides and top)




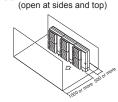


(3) Obstacles at back and top (open at front and sides)

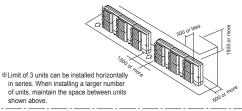

(1) Installing units, one in each row

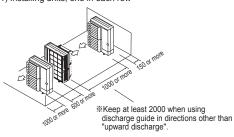


(2) Installing multiple units in multiple rows

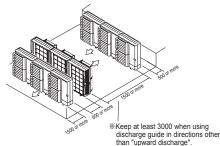


3 Installation Method


- 4 blowout directions can be selected: Check the orientation of blowout vane, and attach the blowout guide in the direction that matches the situation at local site.
- (1)Attach the support ② to the outdoor unit using the washers ④ , spring washers ⑤ and screws ③ (at the 6 points) on the existing fan guard

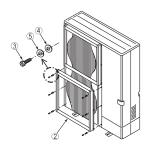

(2)Set the orientation of the blowout vane of the discharge guide ⊕ to the desired direction and install the vane to the outdoor unit using the washers ⊕, spring washers ⊕ and screws ⊕ (at 6 points).

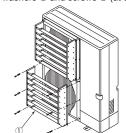


<Setting blow-off direction>

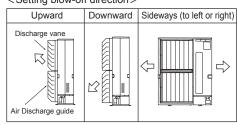

TIMIL

Air Protect Guide

Figure

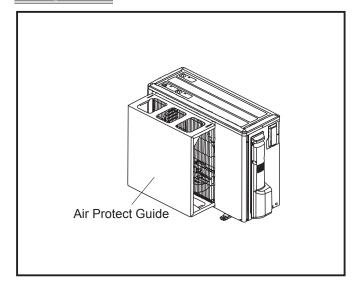

Descriptions

Enables operation even when the outside temperature is low. Protect the unit from cold wind.

applicable Models

- PUZ-ZM35VKA type
- PUZ-ZM50VKA type

[R32 type]

(for cooling at -15 °C)

- PUHZ-ZRP35VKA2
- PUHZ-ZRP50VKA2


1 piece required [R410A type]

Specifications

	Color (Munsell)	Ivory (3.0Y 7.8/1.1)		
Exterior	Surface treatment	Acrylic resin coating		
Exterior	Material	Alloy hot-dip zinc-coated carbon steel sheet		
Weight		3.4kg		
Accessory name x Qty.		Mounting screw (4x10) x 4 Spring washerx 4		

Dimensions

Unit: mm

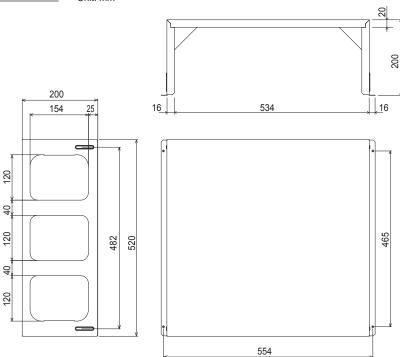

⚠ CAUTION

* This Air protect prevents reverse rotation of outdoor unit fan when it enters low speed rotation mode with fan controller being operated. It is also used for protection of fan when strong winds, such as a typhoon, wind blowing through tall buildings, etc., directly strike the air outlet. In addition, installation of this product is necessary when cooling operation is to be performed in outdoor tempreture of -5°C or lower (down to -15°C).

- Pay attention to the following points when installing this product:


 1) To eliminate the effects of external wind, be sure to install this unit with back surface facing wall side.

 2) Do not install this unit in orientation or site where wind directly blows at the back of the unit.
- 3) Installing of this product will reduce the capacity of the unit (approx. 2 or 3%) and increase the noise of outdoor unit (approx. 1 or 2dB)
- 4) Do not use this product where there is any obstacle at either side or above the outdoor unit (discharge air will be blocked): This may cause a short cycle.

How to Use / How to Install


1 Accessories

Make sure that all the following parts, in addition to this manual, are in this box.

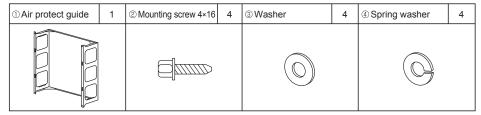


2 Requirements of installation space [Unit: mm]

(1) One unit installation:

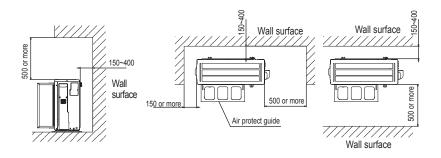


(2) Multiple unit installation: *Installation of multiple units in series must be no more than five units.

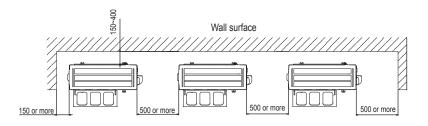

3 Installation procedure

(1) Install the air protect guide ①on the outdoor unit using washers ③, spring washers ④ and screws ②.

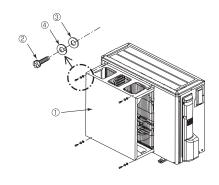

OUTDOOR UNIT

* model change from PAC-SG57AG-E from Sep 2005

Photo



Descriptions

Enables operation even when the outside temperature is low. Protect the unit from cold wind.

applicable Models

- PUZ-ZM60VHA type
- PUZ-ZM71VHA type
- PUHZ-ZRP60HA2
- PUHZ-ZRP71VHA2 1 piece required
- PUHZ-SHW112VHA
- PUHZ-SHW112YHA
- PUHZ-SHW140YHA
- 2 pieces required [R410A type]


[R32 type]


Specifications


	Color (Munsell)	Ivory (3.0Y 7.8/1.1)	
Exterior	Surface treatment	Acrylic resin coating	
Extorior	Material	Alloy hot-dip zinc-coated carbon stee sheet	
Weight		3.3kg	
Accessory name x Qty. <material surface="" treatment=""></material>		Washer faced screw (M5x15) x 4 <iron (swch18a)="" nickel<br="" wire="" zinc="">plated></iron>	

Dimensions

Unit: mm (inch)

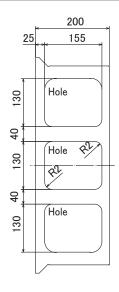

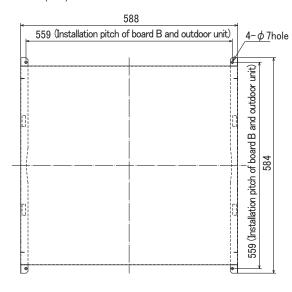

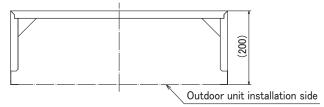

CAUTION

Air Guide prevents reverse rotation of outdoor unit fan when it enters low speed rotation mode with fan controller being operated. It is also used for protection of fan when strong winds, such as a typhoon, wind blowing through tall buildings, etc., directly strike the air outlet. In addition, installation of this product is necessary when cooling operation is to be performed in outdoor tempreture of -5°C or lower (down to -15°C).

- Note the followings when installing this guide:

 1) Be sure not to use "upward discharge" in a place where snowing is possible. Snow may accumulate in the guard, which could damage the fan, etc.
- 2) Attaching this unit will decrease the performance (by 2-3%) and increase noise from outdoor unit (by approx. 1-2 dB).

 3) Do not use "upward discharge" when there are any obstacles at the back and on both sides of outdoor unit (air is taken in from top of unit): This could cause a short cycle.
- 4) To eliminate the influence of external wind, be sure to install the unit with its back facing to wall.
- 5) Do not install this unit in a place where wind directly blows to the back of the unit.

How to Use / How to Install

Package air-conditioner Optional parts Installation Manual for Air Guide

SAFETY PRECAUTIONS

- •Carefully read this section 'Safety Precautions', and securely install the optional parts.
- •Be sure to observe the cautions described here: They include critical contents for safety.
- •The following indications show the classifications for danger, and possible consequences following incorrect handling.

 ⚠ WARNING
 Incorrect handling could lead to death or serious injury.

 ⚠ CAUTION
 Incorrect handling could lead to injury or damage to house and household articles.

After installation, perform a test run and make sure that there is no abnormality, and ask your customer to keep this
installation sheet with the installation manual at all times. Also ask the customer to transfer these manuals to a new user
if the user changes.

MARNING

Ask the dealer or specialist for installation.

 If installed incorrectly by user, water leak, electric shock, fire, etc could result. Carefully install the optional parts according to this installation sheet.

•Incorrect installation could cause water leak, electric shock, fire, etc.

Before performing installation (moving) and electrical work

ACAUTION

Do not place polyethylene bags in reach of young children.

 Putting them over the head will block breathing passages, which could result in suffocation.

Securely apply heat-insulation to refrigerant pipe so that no condensation occurs.

 If heat-insulation is inadequate, condensation could occur on the surface of pipes and dewdrops could accumulate on ceiling, floor or important goods. If electrical work is necessary, use only specified electric wires adapted with current capacity.

•Use of unsuitable wire could cause electric leak, overheating or fire.

Securely perform drain piping work according to the installation manual so that no condensation occurs.

 If piping work is incorrect, water leak may occur and ceiling, furniture, etc may get wet.

This Air Guide prevents reverse rotation of outdoor unit fan when it enters low speed rotation mode with fan controller being operated. It is also used for protection of fan when strong winds, such as in a typhoon, wind blowing through tall buildings, etc., directly strike the at air outlet

In addition, installation of this product is necessary when cooling operation is to be performed in outside-air temperature of -5°C or lower (down to -15°C).


Pay attention to the following points when installing this product:

- 1) To eliminate the effects of external wind, be sure to install this unit with back surface facing wall side.
- 2) Do not install this unit in orientation or site where wind directly blows at the back of the unit.
- 3) Installing of this product will reduce the capacity of the unit (approx. 2 or 3%) and increase the noise of outdoor unit (approx. 1 or 2dB).
- 4) Do not use this product where there is any obstacle at either side or above the outdoor unit (discharged air will be blocked). This may cause a short cycle.


When 2-fan type outdoor unit is used, note that two sets of this product will be necessary.

1 Checking parts

Make sure that all the following parts, in addition to this manual, are in this box:

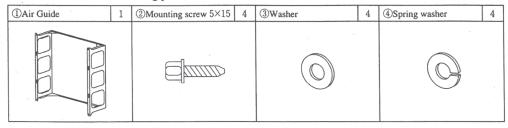


OPTIONAL PARTS (2) Multiple unit installation: *Installation of multiple units in series must be no more than five units.

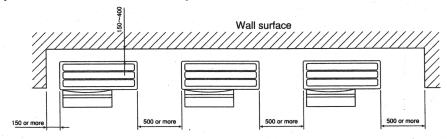


3 Installation procedure


(1) Remove the fan guard fixing screws (five screws on circumference), and then remove the fan guard.

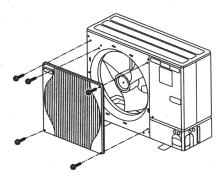


(3) Insert the stoppers (four locations) of the fan guard into the installation holes on the outdoor unit.

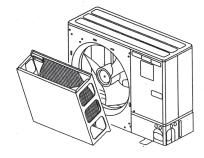

(2) Insert the fan guard stoppers into the square holes on the air guide.

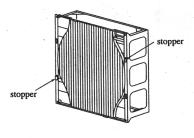

- (4) Install the air guide on the outdoor unit using washers (3), spring washers (4) and screws (2).
 - * Use existing screws for handle section.

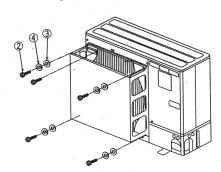

Photo



Specifications

	Color (Munsell)	lvory (3.0Y 7.8/1.1)		
Exterior	Surface treatment	Acrylic resin coating		
	Material	Alloy hot-dip zinc-coated carbon steel sheet		
Weight		3.5kg		
Accessory name x Qty. <material surface="" treatment=""></material>		Washer faced screw (M5x15) x 4 <iron (swch18a)="" nickel="" plated="" wire="" zinc=""></iron>		

Descriptions

Enables operation even when the outside temperature is low. Protect the unit from cold wind.

Applicable Models


- PUZ-ZM100VKA type
- PUZ-ZM125VKA type
- PUZ-ZM140VKA type
- PUZ-ZM100YKA type
- PUZ-ZM125YKA type
- PUZ-ZM140YKA type
- PUZ-ZM200YKA type
- PUZ-ZM250YKA type
- PUZ-M200YKA type
- PUZ-M250YKA type
- 2 pieces required
- PUZ-M100VKA type
- PUZ-M125VKA type
- PUZ-M140VKA type ■ PUZ-M100YKA type
- PUZ-M125YKA type
- PUZ-M140YKA type
- 1 piece required [R32 type]


- PUHZ-ZRP100VKA3
- PUHZ-ZRP125VKA3
- PUHZ-ZRP140VKA3
- PUHZ-ZRP100YKA3
- PUHZ-ZRP125YKA3
- PUHZ-ZRP140YKA3
- PUHZ-P100VKA
- PUHZ-P125VKA
- PUHZ-P140VKA
- PUHZ-P100YKA
- PUHZ-P125YKA
- PUHZ-P140YKA
- 1 piece required
- PUHZ-ZRP200,250YKA3
- PUHZ-P200,250YKA3
- 2 pieces required

[R410A type]

Dimensions

Unit: mm (inch)

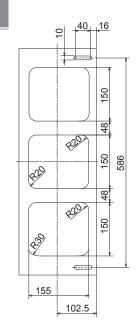

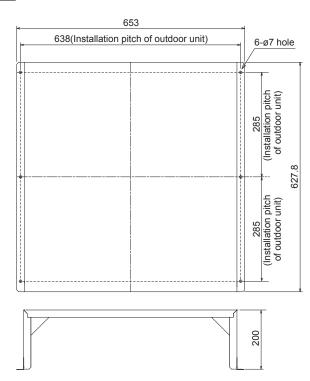

⚠ CAUTION

* Air Guide prevents reverse rotation of outdoor unit fan when it enters low speed rotation mode with fan controller being operated. It is also used for protection of fan when strong winds, such as a typhoon, wind blowing through tall buildings, etc., directly strike the air outlet. In addition, installation of this product is necessary when cooling opetation is to be performed in outdoor tempreture of -5°C or lower (down to -15°C).

Note the followings when installing this guide:

- 1) Be sure not to use "upward discharge" in a place where snowing is possible. Snow may accumulate in the guard, which could damage the fan, etc. 2) Attaching this unit will decrease the performance (by 2-3%) and increase noise from outdoor unit (by approx. 1-2 dB).

 3) Do not use "upward discharge" when there are any obstacles at the back and on both sides of outdoor unit (air is taken in from top of unit): This could
- 4) To eliminate the influence of external wind, be sure to install the unit with its back facing to wall.
- 5) Do not install this unit in a place where wind directly blows to the back of the unit.

Y PRECAUTIONS • Carefully read this section 'Safety Precautions', and securely install the optional parts. •Be sure to observe the cautions described here: They include critical contents for safety •The following indications show the classifications for danger, and possible consequences following incorrect handling. **⚠WARNING** Incorrect handling could lead to death or serious injury. **⚠** CAUTION Incorrect handling could lead to injury or damage to house and household articles. After installation, perform a test run and make sure that there is no abnormality, and ask your customer to keep this installation sheet with the installation manual at all times. Also ask the customer to transfer these manuals to a new user WARNING Ask the dealer or specialist for installation. Carefully install the optional parts according to this installation •If installed incorrectly by user, water leak, electric shock, fire, etc. Incorrect installation could cause water leak, electric shock, fire, etc. Before performing installation (moving) and electrical work **!**CAUTION Do not place polyethylene bags in reach of young children If electrical work is necessary, use only specified electric wires adapted with current capacity. Putting them over the head will block breathing passages which could result in suffocation. •Use of unsuitable wire could cause electric leak, overheating or fire. Securely perform drain piping work according to the Securely apply heat-insulation to refrigerant pipe so that no installation manual so that no condensation occurs. •If heat-insulation is inadequate, condensation could occur on the surface of olf piping work is incorrect, water leak may occur and ceiling, pipes and dewdrops could accumulate on ceiling, floor or important goods. furniture, etc may get wet.

This Air Guide prevents reverse rotation of outdoor unit fan when it enters low speed rotation mode with fan controller being operated. It is also used for protection of fan when strong winds, such as in a typhoon, wind blowing through tall buildings, etc., directly strike the at air outlet.

In addition, installation of this product is necessary when cooling operation is to be performed in outside-air temperature of -5° C or lower (down to -15° C).

Pay attention to the following points when installing this product:

- 1) To eliminate the effects of external wind, be sure to install this unit with back surface facing wall side.
- 2) Do not install this unit in orientation or site where wind directly blows at the back of the unit.
- 3) Installing of this product will reduce the capacity of the unit (approx. 2 or 3%) and increase the noise of outdoor unit (approx. 1 or 2dB).
- 4) Do not use this product where there is any obstacle at either side or above the outdoor unit (discharged air will be blocked). This may cause a short cycle.

When 2-fan type outdoor unit is used, note that two sets of this product will be becessary.

1 Checking parts


Make sure that all the following parts, in addition to this manual, are in this box:

①Air Guide	1	②Mounting screw (5×15)	6	③Washer	6	4Spring washer	6


2 Requirements of space for installation

(Unit: mm)

(1)One unit installation

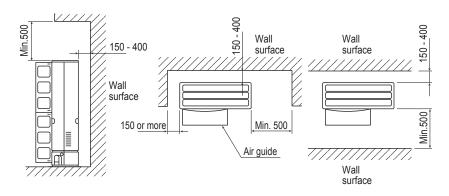


(2) Multiple unit installation: Installation of multiple units in series must be no more than 5 units.

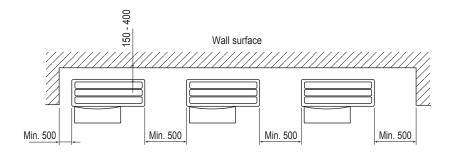


3 Installation procedure

(1)Install the air guide 1 on the outdoor unit using washers 3, spring washers 4 and screws 2.

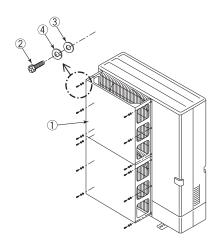

OUTDOOR UNIT

Figure

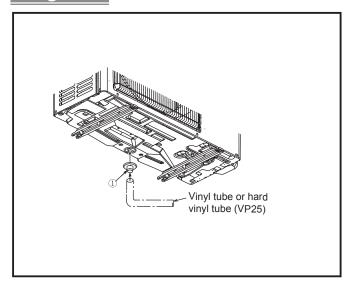

Descriptions

Cap the unnecessary holes on the outdoor unit (bottom) and centralize the drainage when using a drain pipe.

pplicable Models

- PUZ-ZM35VKA type ■ PUZ-ZM50VKA type
- PUHZ-ZRP35VKA ■ PUHZ-ZRP50VKA
- [R32 type]
- [R410A type]


Specifications

Drain pipe	PVC VP-25 or vinyl hose (ID: 25mm)	
	No freezing allowed (Never to be used in cold climates)	
Material	EPT rubber	
Component	Drain socket x 1	

Dimensions

Unit: mm


Drain socket

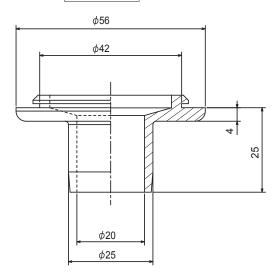

The outdoor unit is provided with several holes for drainage at the bottom to ma easier. The drain socket is used to close the unnecessary holes and centralize when using the drain tube at the installation place.

Do not to use the drain socket in cold areas. The drain tube can be frozen.
** Condensation could drop through the part fitting holes in the bottom of the ou
Use the centralized drain pan to completely prevent condensation dropping.

1. Accessory

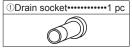


Be aware that the part shown to the left is put in the package together with the installation manual.


2. Installation procedure prepare the adhesive in the field.

(1) Glue the drain socket ① to the hole that is used to the drainage at the bottom of the unit with the glue (Prepare in the field).

(2) Insert a vinyl tube of which inner diameter 25 mm available commercially or a hard vinyl tube VP25 to the drain socket ①.

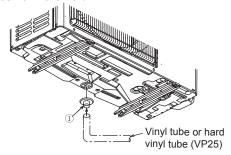

Figure

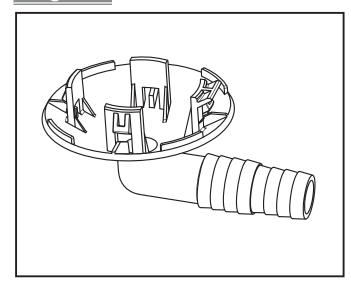

Descriptions

Cap the unnecessary holes on the outdoor unit (bottom) and centralize the drainage when using a drain pipe.

Applicable Models


- MXZ-4E83VA
- MXZ-5E102VA
- MXZ-6D122VA2
- MXZ-4F83VF
- MXZ-5F102VF
- MXZ-6F122VF


Specifications

Drain pipe	PVC VP-25 or vinyl hose (ID: 25mm)		
	No freezing allowed (Never to be used in cold climates)		
Material	EPT rubber		
Component	Drain socket x 1, Drain cap x 6		

Dimensions

Unit: mm

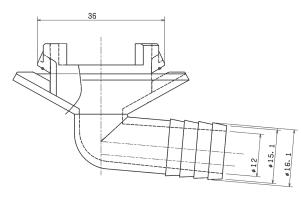

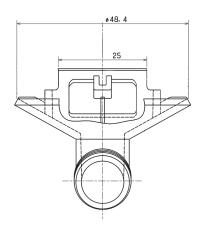

How to Use / How to Install

1. Accessories

Be aware that the following parts are put in the package together with the installation manual.

(ADrain socket1 pc	®Drain cap6 pcs

2. Installation procedure for drain unit & Prepare the adhesive in the field.

Install the unit horizontally.


(1)Please perform the drain piping work only when draining from one place.

- Provide drain piping before indoor and outdoor piping connection.
- Attach the drain socket
 to one of the several drain holes. Fix the drain socket
 into the drain hole of the base using the catches to secure it in place.
- 3 Connect the soft PVC hose I.D.15 mm as shown in the illustration.
- Make sure to provide drain piping with a downhill grade for easy drain now.


(2)Glue the drain caps ® to close all the other unnecessary holes with the glue (Prepare in the field).

<Note>Apply the glue securely, as the glue (Prepare in the field) will work as seal to prevent water from leaking.

<Note>Use the adhesive for the rubber and metal.

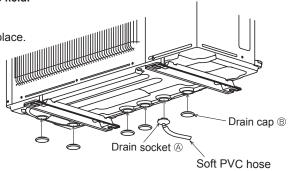

Photo

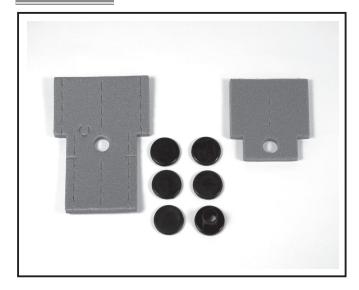

Descriptions

Cap the unnecessary holes on the outdoor unit (bottom) and centralize the drainage when using a drain pipe.

Applicable Models

- PUZ-ZM60VHA type
- PUZ-ZM71VHA type
- PUZ-ZM100VKA type
- PUZ-ZM125VKA type
- PUZ-ZM140VKA type
- PUZ-ZM140VKA type■ PUZ-ZM100YKA type■ PUZ-ZM125YKA type■ PUZ-ZM140YKA type

- PUZ-M100VKA type
- PUZ-M125VKA type
- PUZ-M140VKA type
- PUZ-M100YKA type
- PUZ-M125YKA type
- PUZ-M140YKA type
- PUZ-M200YKA type ■ PUZ-M250YKA type
- [R32 type]


- PUHZ-ZRP60VHA
- PUHZ-ZRP71VHA
- PUHZ-ZRP100VKA
- PUHZ-ZRP125VKA
- PUHZ-ZRP140VKA
- PUHZ-ZRP100YKA
- PUHZ-ZRP125YKA
- PUHZ-ZRP140YKA
- PUHZ-ZRP200YKA
- PUHZ-ZRP250YKA
- PUHZ-P100VKA
- PUHZ-P125VKA ■ PUHZ-P140VKA
- PUHZ-P100YKA
- PUHZ-P125YKA
- PUHZ-P140YKA
- PUHZ-P200YKA
- PUHZ-P250YKA [R410A type]


Specifications

Drain pipe	PVC VP-25 or vinyl hose (ID: 25mm)		
Operating conditions	No freezing allowed (Never to be used in cold climates)		
Material	EPT rubber		
Component	Drain socket x 1, Drain cap x 5 Heat insulator x 3 (1 for liquid pipe, 1 large and 1 small insulator for gas pipe). Band x 8		

Dimensions

Unit: mm

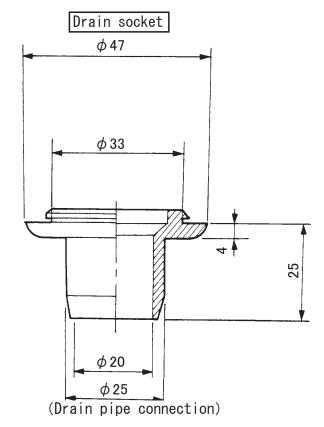

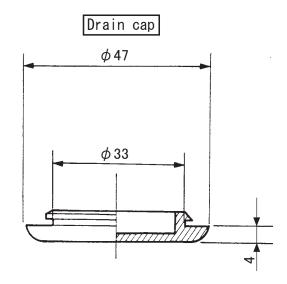

How to Use / How to Install

1 Accessory

Make sure that the following parts are put in the package.

①Drain socket ······· 1 pcs	②Drain cap ····· 5 pcs	
③Insulation part (for liquid pipe) ···· 1 pc	④Insulation part (for gas pipe) ····· 1 pc	⑤Band 8 pcs
Small size	Large size	


2. Installation method for drain unit ☆Prepare the adhesive in the field.

- (1) Glue the drain socket ① to the hole that is used to centralize the drainage among several holes at the bottom of the unit with the glue (Prepare in the field).
- (2) Glue the drain caps ② to close all the other unnecessary holes with the glue (Prepare in the field). (Note) Apply the glue securely, as the glue (Prepare in the field) will work as seal to prevent water from leaking.

(Note) Use the adhesive for the rubber and metal.

(Recommended product) Supper X series made by CEMEDINE CO., Ltd.

(3) Insert a vinyl tube of which inner diameter 25 mm available commercially or a hard vinyl tube VP25 to the drain socket ①.

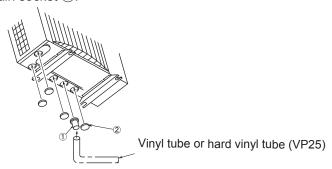

3. Installation method for insulation parts


Install the insulation parts to stop valve of the outdoor unit.

- *The insulation parts should be installed after the tube has been connected to the unit.
- XSome units are provided with a check valve near stop valve. In this case,


cut the insulation parts (3) and (4) so that they will fit the stop valve properly.

- (1) Install the insulation part ③ with 2 holes to the liquid pipe side so that the holes fit the valve caps and cover the stop valve entirely.
- (2) Fix the insulation part ③ securely with bands ⑤.

 Install the other insulation part ④ to the gas pipe side with the same procedure.

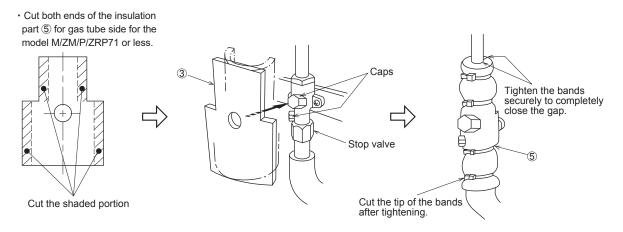

Figure

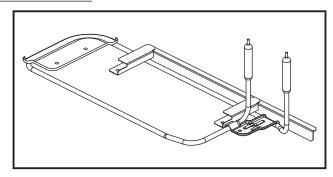

Descriptions


It is freeze-prevention heater for the outdoor unit of the air conditioner.

Applicable Models

- MXZ-4E83VA
- MXZ-4F83VF
- MXZ-5E102VA
- MXZ-5F102VF
- MXZ-6D122VA2
- MXZ-6F122VF

Dimensions

Unit: mm

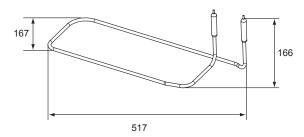

Specifications

Rated voltage	230 V 50 Hz				
Power consumption	80 W				

Components

This package includes the following parts besides this installation sheet.

① base heater	1	② heater guard* 1	3	screws 5 × 12	8	4 cable ties	2	⑤ fasteners	2
								(3°550)	
6 spec label	1	① base heater support(1)	1	® base heater suppo	ort((2) 1 9 clamp		1	
					Þ		P		

^{*} Refer to 4 Mounting the heater guard

How to Use / How to Install

1 Preparation

It is easier to mount the base heater before installing the outdoor unit.

- Make sure that the main power supply to the unit is OFF.
- Do not lose the removed screws. Many screws will be removed to install the base heater.
- Eliminate dust, dirt, etc.

2 Preparation for mounting the base heater

Before mounting the base heater, follow the procedures below to remove some parts from the outdoor unit. **NOTE**: Turn OFF power supply before disassembly.

- 1 Remove the screw fixing the service panel.
- 2 Pull down the service panel and remove it.
- 3 Remove the screws fixing the top panel.
- 4 Remove the top panel.
- 5 Remove the screws fixing the front panel.
- 6 Remove the front panel.
- **7** Removal of fan.

Remove the mounting screws for the fan. Pull the fan toward you to remove it.

8 Removal of motor support.


Disconnect the connector of the fan motor, and remove mounting screw for the motor support. Slightly pull the motor support toward you and lift it up to remove it.

3 Mounting the base heater

1 Temporarily place the base heater 1 along the groove of the base as shown in the photo below.



- 2 Fix the base heater ① with the base heater supports ⑦, ⑧ and the screws 5 × 12 ③
- Be careful not to damage the lead wire and surface of the base heater with the edge of the sheet metal.

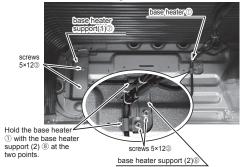

Position the base heater ① as shown in the photo above.

4 Mounting the heater guard

When you see the holes A as in the photo below,




install the heater guard 2 .

Place the heater guard ② as shown in the below photo. Fix them with the screws $5 \times 12 \ 3$.

<After installation of the heater guard ② >



When the holes A are covered as in the right photo, do not install the heater guard ②.

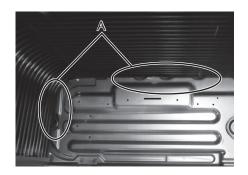

5 Mounting the motor support


Mount the motor support.

· Make sure that the lead wire is not caught between the bottom of the motor support and the base.

6 Securing the lead wires


Wiring diagram


Connect the lead wires according to the wiring diagram on the right.

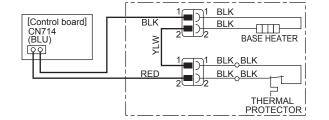

< In case of UNIT size H796 × W950 × D330 > ··· (A)


- Bundle the lead wires of the base heater and the fan motor together with clamps.
- Secure the lead wires so they will not interfere with the propeller fan.
- Pass the lead wires through the rubber parts hole on the metal parts of the electrical box toward the electrical box. * Fix the lead wires between the motor support and the rubber parts hole with the cable ties @
- 🔞 After connecting the lead wires, bundle the extra lead wires together and secure them with the fastener 🗓 . *Arrange the lead wires so that they do not touch the service panel.

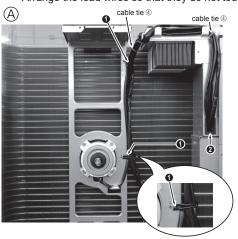

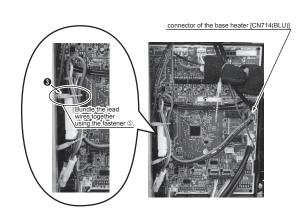

< In case of UNIT size H1048 × W950 × D330 > ··· ®


- Fix the clamp (9) on the right side of the motor support with screw 5 × 12 (3).
 Bundle the lead wires of the base heater and the fan motor together with clamps.
 Secure the lead wires so they will not interfere with the propeller fan.
 Pass the lead wires through the rubber parts hole on the metal parts of the electrical box toward the electrical box. *Arrange the lead wires so that they do not touch the service panel.

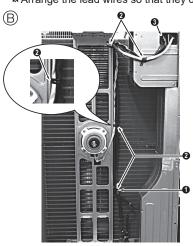



7 Attaching the spec label

Attach the spec label ® by the spec name plate on the service panel.

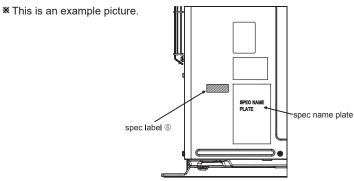

8 Reinstallation

Make sure that the installation of the base heater and connections of the lead wires have been completed according to this installation sheet. Install the removed parts in the reverse order of removal.


- Tighten the propeller fan with a torque of 5.7 \pm 0.3N•m[4.2 \pm 0.2ft-lbs](57 \pm 3kgf•cm).
- Rotate the propeller fan and make sure that the base heater and the lead wires do not interfere with the movement of propeller fan.

∕!\WARNING

Mount the outer panels securely. Incomplete installation may result in electric shock and fire caused by dust, water, etc.

-igure

Base Heater

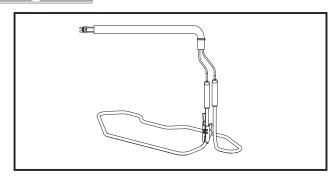

Descriptions


It is freeze-prevention heater for the outdoor unit of the air conditioner.

pplicable Models

- MXZ-3E54VA
- MXZ-3F54VF3
- MXZ-3E68VA
- MXZ-3F68VF3
- MXZ-4E72VA
- MXZ-4F72VF3
- MUZ-EF50VG
- MXZ-4F80VF3

Dimensions

Unit: mm

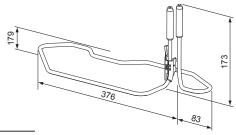

Specifications

Rated voltage	230 V 50 Hz
Power consumption	120 W

Components

This package includes the following parts besides this installation sheet.

1 Base heater	1	② Heater support U	2	③ Heater support L	2	4 Heater plate 1
1 Bacc Hoater	•	© Frontor support s	_	© Floator Support E		Treater plate
⑤ Cable tie	3	6 Fastener	2	⑦ Earth plate	1	8 Earth wire 2
		(S) 500		0 0		
9 Screw M4 × 8	8	10 Self-drilling screw	2	① Spec label	1	① Cable strap 2

How to Use / How to Install

1 Preparation

It is easier to mount the base heater before installing the outdoor unit.

- · Make sure that the main power supply to the unit is OFF.
- · Do not lose the removed screws. Many screws will be removed to install the base heater.
- · Eliminate dust, dirt, etc.

Preparation for mounting the base heater

Before mounting the base heater, follow the procedures below to remove some parts from the outdoor unit.

NOTE: Turn OFF power supply before disassembly.

- Remove the screw fixing the service panel.
- 2 Pull down the service panel and remove it.
- 3 Remove the screws fixing the top panel.
- 4 Remove the top panel.
- **5** Remove the screws fixing the front panel.
- **6** Remove the front panel.
- Removal of fan.

Remove the mounting screws for the fan. Pull the fan toward you to remove it.

Removal of motor support.


Disconnect the connector of the fan motor, and remove mounting screw for the motor support.

Slightly pull the motor support toward you and lift it up to remove it.

3 Before installation


Before installation, follow the procedures below to remove some parts from the outdoor unit. NOTE: Turn OFF power supply before disassembly.

- 1) Remove the screw fixing the service panel.
- 2) Remove the service panel.
- 3) Remove the screws fixing the top panel.
- 4) Remove the top panel.
- 5) Remove the screws fixing the front panel.
- 6) Remove the front panel.
- 7) Remove the screws fixing the back panel.
- 8) Remove the back panel.
- Disconnect the connectors (CN791, CN792, CN712, CNTH2, CNTH1, CN797, CN63H, CNF1, and relay connector), and remove the electrical box.

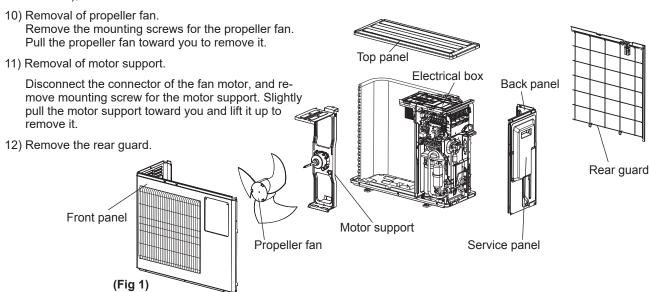


4 Preparation for mouting the base heater


- 1) Fix the heater support U ② and L ③ to the base heater ① with 2 screws M4 × 8 ⑨ (2 places) as shown in the Fig 2. (Place the heater supports as they fit in the drain holes).
- 2) Fix an earth wire 8 to each heater support L 3 with screw M4 \times 8 9 .

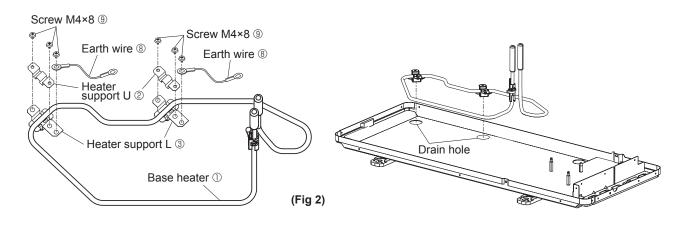


5 Installing the base heater

- 1) Hold the left lower side of the heat exchanger and slightly lift it up as shown in the Fig 3.
- 2) Insert the base heater ① under the heat exchanger, and align it with the groove on the base. Confirm that the heater supports are placed as they fit in the drain holes
- 3) Mount the motor support. NOTES:
 - Take out the earth wire to the left side of the motor support.
 - Make sure that the lead wire is not caught between the bottom of the motor support and the base.
- 4) Fix the front side of the base heater $\ensuremath{\textcircled{1}}$ with the heater plate $\ensuremath{\textcircled{4}}$.
 - Fix the heater plate ⓐ and motor support with the 2 screws that were installed to fix the motor support as shown in the Fig 4.
- 6) Fix the 2 earth wires (8) which are attached to the heater support to the earth plate (7).

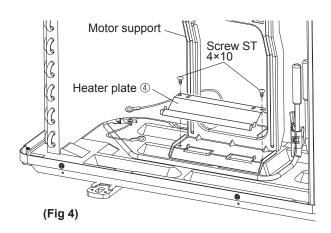

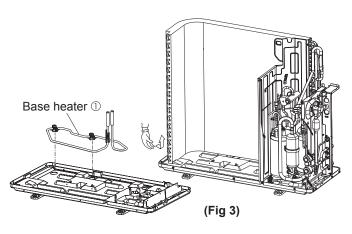


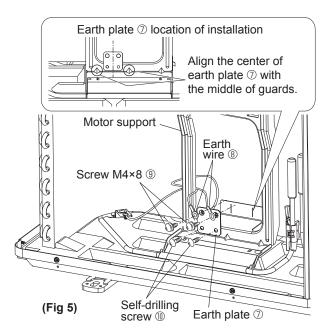

6 Securing the lead wires

Wiring diagram


Connect the lead wires according to the wiring diagram on the right.

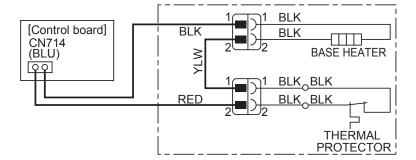

OUTDOOR UNIT


- 1) Bundle the lead wires of the base heater and the fan motor together, and fix 2 positions with the cable ties (5).
 - Secure the lead wires so they will not interfere with the propeller fan.
 - Hook the lead wire of the fan motor to the hook on the motor support and the ditch.
- 2) Reinstall the rear guard.
- 3) Attach the 2 cable straps ① on the separator as shown in Fig 6.
 - The holes to mount the cable straps ① are covered with aluminum tape. Remove the tape before attaching the cable straps 12.
- 4) Hook all the lead wires in the notch of the separator.
- 5) Secure the lead wire of the base heater with the 2 cable straps 12.
- 6) Secure other lead wires with 3 clamps on the separator.
- 7) Reinstall the electrical box. Reconnect the connectors.
- 8) Connect the lead wire of the base heater to the connector CN714 on the controller circuit board as show in the Fig 7.
- 9) Bundle all the connectors except CN791. CN792, and relay connector with the fastener 6.

Hook in the notch Lead wire of Hook in the fan motor notch on the separator Motor Attaching positions of the cable straps ® support Cable tie ⑤ Clamr Hook (Fig 6)

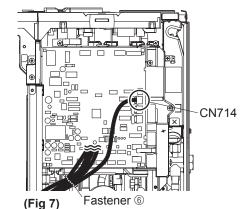

After installation


- 1) Reinstall the propeller fan, back panel, front panel, top panel, and service panel.
- 2) Attach the spec label (1) below the spec name plate.
- 3) Turn on the breaker, and perform test run to confirm that it works properly.
 - Do not install either drain socket which is provided with the outdoor unit or purchased separately. Inside of the drain hose and/or the drain socket may freeze if the drain socket is installed.
- Tighten the propeller fan with a torque of 3.4 $_{-0.5}^{0.5}$ N•m [2.5 $_{-0.4}^{0.4}$ ft-lbs](34 $_{-5}^{0.5}$ kgf•cm).
- Rotate the propeller fan and make sure that the base heater and the lead wires do not interfere with the movement of propeller fan.

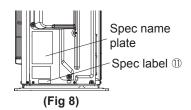

⚠ WARNING

Mount the outer panels securely. Incomplete installation may result in electric shock and fire caused by dust, water, etc.

Photo

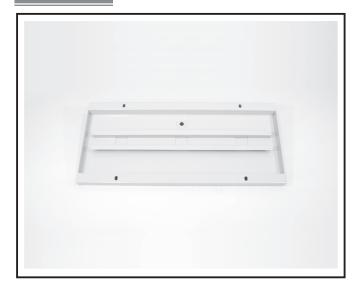

Descriptions

A drain pan for the drain water generated from the outdoor unit

Applicable Models


- PUZ-ZM35VKA type ■ PUZ-ZM50VKA type [R32 type]
- PUHZ-ZRP35VKA ■ PUHZ-ZRP50VKA [R410A type]

Specifications

Drain ou	tlet size	R3/4 screw (20A)					
	Color (Munsell)	Ivory (3.0Y 7.8/1.1)					
Exterior	Surface treatment	Acrylic resin coating					
	Material	Alloy hot-dip zinc-coated carbon steel sheet (t1.6)					
Weight		6.3kg					
Mounting (locally p	p bolt repared)	M10 (or W3/8), length: 48 mm or less extrusion from drain pan's under surface					


Dimensions

Unit: mm

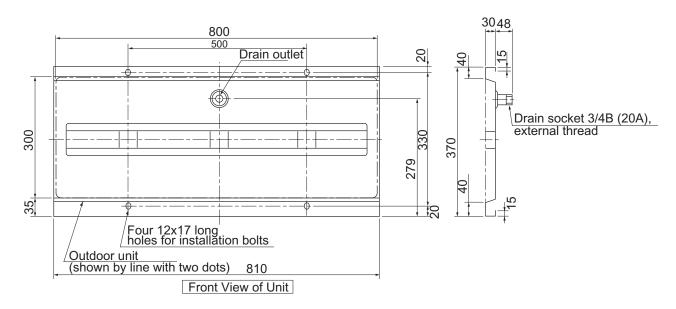


1 Installation Method

- (1) When installing on installation frame
 - 1) The installation frame must have structure and strength that can sufficiently support the outdoor unit and drain pan. Securely install the outdoor unit and drain pan so that they cannot fall or drop as a result of earthquake, strong wind, etc.
 - 2) The drain socket of drain pan is at the center in the longitudinal direction. When constructing the installation frame, be careful that no part of the frame interferes with the socket.
 - 3) The drain pan is tightened with the outdoor unit. Punch approx. ϕ 13 holes in the installation frame at pitches to install the outdoor unit.
 - 4) Fix the frame, drain pan and outdoor unit together to join them firmly (at the 4 points). The bolt length must be no more than 60 mm.

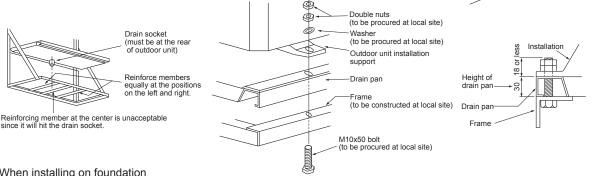


- (2) When installing on foundation
 - •Since concentrated drain disposal is necessary, make the foundation at least 150 mm high measured from the ground as shown in the figure below.

If it is less than 150 mm, drain piping will not be possible because the drain socket protrudes 48 mm.

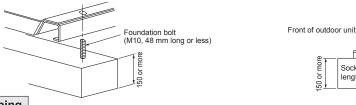

- 2 Drain Piping
- (1) When connecting steel pipe: Connect 3/4B internally threaded pipe.
- (2) When connecting vinyl pipe (soft): Use a ϕ 25 mm internal dia. pipe, and fix the connected section with a hose band, etc.
- (3) When connecting PVC pipe (hard): Use VP-20 and connect with a joint for PVC pipe.
 - XIn all cases, seal the socket threaded section securely with a seal tape, etc., and make sure that water does not leak.

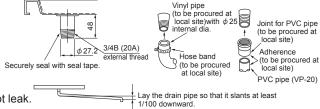

Elbow

Socket

length

Rear of outdoor unit

Drain pan Foundation Outdoor unit

Drain pan

(to be constructed at local site)

Frame

Photo



Descriptions

A drain pan for the drain water generated from the outdoor

Applicable Models


- PUZ-ZM60VHA type PUZ-ZM71VHA type PUHZ-ZRP71VHA
- [R32 type] [R410A type]

Specifications

Drain ou	tlet size	R3/4 screw (20A)				
	Color (Munsell)	Ivory (3.0Y 7.8/1.1)				
Exterior	Surface treatment	Acrylic resin coating				
Exterior	Material	Alloy hot-dip zinc-coated carbon stee sheet (t1.6)				
Weight		7.8kg				
Mounting bolt (locally prepared)		M10 (or W3/8), length: 60 mm or less extrusion from drain pan's under surface				


Dimensions

Unit: mm

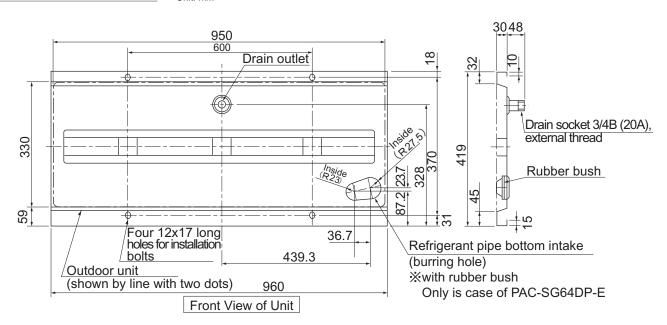


1 Installation Method


- (1) When installing on installation frame
 - 1) The installation frame must have structure and strength that can sufficiently support the outdoor unit and drain pan. Securely install the outdoor unit and drain pan so that they cannot fall or drop as a result of earthquake, strong wind, etc.
 - 2) The drain socket of drain pan is at the center in the longitudinal direction. When constructing the installation frame, be careful that no part of the frame interferes with the socket.
 - 3) The drain pan is tightened with the outdoor unit. Punch approx. ϕ 13 holes in the installation frame at pitches to install the outdoor unit.
 - 4) Fix the frame, drain pan and outdoor unit together to join them firmly (at the 4 points). The bolt length must be no more than 60 mm.

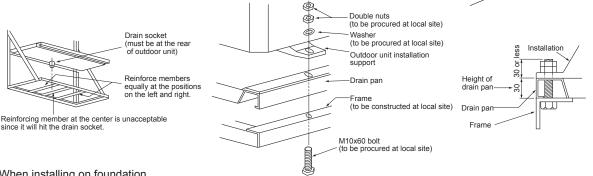

- (2) When installing on foundation
 - Since concentrated drain disposal is necessary, make the foundation at least 150 mm high measured from the ground as shown in the figure below.

If it is less than 150 mm, drain piping will not be possible because the drain socket protrudes 48 mm.

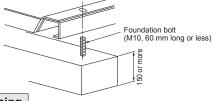

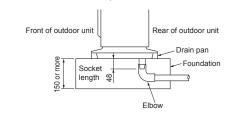

Outdoor unit


Drain pan

(to be constructed at local site)

Frame

2 Drain Piping


- (1) When connecting steel pipe: Connect 3/4B internally threaded pipe.
- (2) When connecting vinyl pipe (soft): Use a ϕ 25 mm internal dia. pipe, and fix the connected section with a hose band, etc.
- (3) When connecting PVC pipe (hard): Use VP-20 and connect with a joint for PVC pipe. XIn all cases, seal the socket threaded section securely with a seal tape, etc., and make sure that water does not leak.

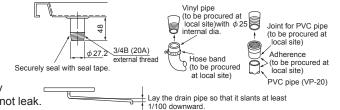


3 Refrigerant Piping

- •The refrigerant pipe can be laid in from four directions: front, right, rear and bottom. When laying, be sure to perform the following: (2)Piping from other directions:
- (1) Piping from the bottom:

Cut out the rubber bush to match the thickness of refrigerant pipe insulator. Pass the refrigerant pie through the rubber bush and fit it into the burring hole. Seal it with adhesive that is equivalent to Cemedyne 366 (to be procured at local site) to prevent water leak.

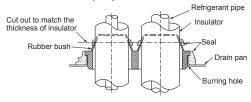

Block the burring hole of the bottom piping section in the drain pan with rubber bush. Seal it with adhesive that is equivalent to Cemedyne 366 (to be procured at local site) to prevent water leak.

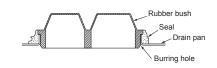

Photo



Specifications

Drain outlet size		R3/4 screw (20A)			
	Color (Munsell)	Ivory (3.0Y 7.8/1.1)			
Exterior Surface treatment		Acrylic resin coating			
	Material	Alloy hot-dip zinc-coated carbon steel sheet (t1.6)			
Weight		8.8kg			
		M10 (or W3/8), length: 60 mm or less extrusion from drain pan's under surface			

Descriptions

A drain pan for the drain water generated from the outdoor

Applicable Models


- PUZ-ZM100VKA type PUHZ-ZRP100VKA
- PUZ-ZM125VKA type
- PUZ-ZM140VKA type
- PUZ-ZM100YKA type
- PUZ-ZM125YKA type
- PUZ-ZM140YKA type
- PUZ-ZM200YKA type
- PUZ-ZM250YKA type
- PUZ-M100VKA type
- PUZ-M125VKA type
- PUZ-M140VKA type
- PUZ-M100YKA type ■ PUZ-M125YKA type
- PUZ-M140YKA type
- PUZ-M200YKA type ■ PUZ-M250YKA type
- [R32 type]

- PUHZ-ZRP125VKA
- PUHZ-ZRP140VKA
- PUHZ-ZRP100YKA
- PUHZ-ZRP125YKA
- PUHZ-ZRP140YKA
- PUHZ-P100VKA
- PUHZ-P125VKA
- PUHZ-P140VKA
- PUHZ-P100YKA
- PUHZ-P125YKA
- PUHZ-P140YKA
- PUHZ-ZRP200YKA
- PUHZ-ZRP250YKA
- PUHZ-P200YKA
- PUHZ-P250YKA [R410A type]


Dimensions

Unit: mm

Air intake side

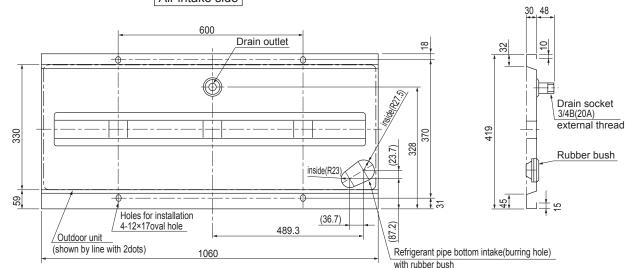




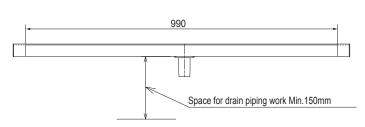

1 Installation Method

- (1) When installing on installation frame
 - 1) The installation frame must have structure and strength that can sufficiently support the outdoor unit and drain pan. Securely install the outdoor unit and drain pan so that they cannot fall or drop as a result of earthquake, strong wind, etc.
 - 2) The drain socket of drain pan is at the center in the longitudinal direction. When constructing the installation frame, be careful that no part of the frame interferes with the socket.
 - 3) The drain pan is tightened with the outdoor unit. Punch approx. ϕ 13 holes in the installation frame at pitches to install the outdoor unit.
 - 4) Fix the frame, drain pan and outdoor unit together to join them firmly (at the 4 points). The bolt length must be no more than 60 mm.

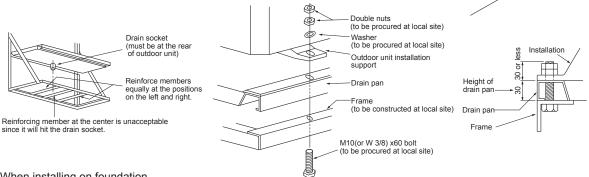


- (2) When installing on foundation
 - Since concentrated drain disposal is necessary, make the foundation at least 150 mm high measured from the ground as shown in the figure below.

If it is less than 150 mm, drain piping will not be possible because the drain socket protrudes 48 mm.



- 2 Drain Piping
- (1) When connecting steel pipe: Connect 3/4B internally threaded pipe.
- (2) When connecting vinyl pipe (soft): Use a ϕ 25 mm internal dia. pipe, and fix the connected section with a hose band, etc.
- (3) When connecting PVC pipe (hard): Use VP-20 and connect with a joint for PVC pipe. XIn all cases, seal the socket threaded section securely with a seal tape, etc., and make sure that water does not leak.

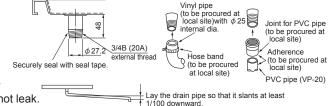


Drain pan

Frame (to be constructed at local site)


3 Refrigerant Piping

- The refrigerant pipe can be laid in from four directions: front, right, rear and bottom. When laying, be sure to perform the following:
- (1) Piping from the bottom:

Cut out the rubber bush to match the thickness of refrigerant pipe insulator. Pass the refrigerant pie through the rubber bush and fit it into the burring hole. Seal it with adhesive that is equivalent to Cemedyne 366 (to be procured at local site) to prevent water leak.

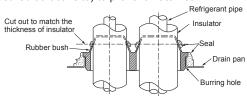

(2)Piping from other directions: Block the burring hole of the bottom piping section in the drain pan with rubber bush. Seal it with adhesive that is equivalent to Cemedyne 366 (to be procured at local site) to prevent water leak.

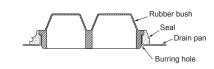

Descriptions

A-control MXZ models can be connected to "M-NET" through optional M-NET converter so that they can be monitored / controlled effectively and meticulously.

Applicable Models


- MXZ-4E83VA
- MXZ-2E53VAHZ
- MXZ-5E102VA
- MXZ-4E83VAHZ
- MXZ-6D122VA2

Specifications

Power	Supplied from power supply unit		
Power consumption	0.8 W (at 30 V DC)		
Operating conditions	Mounted inside the electrical utility box of outdoor unit. (Temperature: -20 to 60 $^\circ\!\!\!\!\!\!\!^\circ$, humidity: 90% or less (no condensation))		
Weight	0.3kg		

Dimensions


Unit: mm

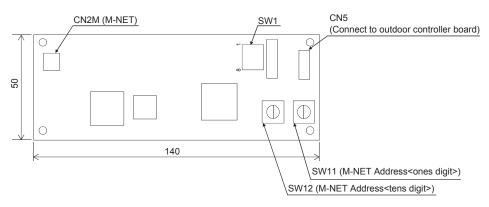

How to Use / How to Install

1. Wiring diagram

The electrical box of outdoor unit.

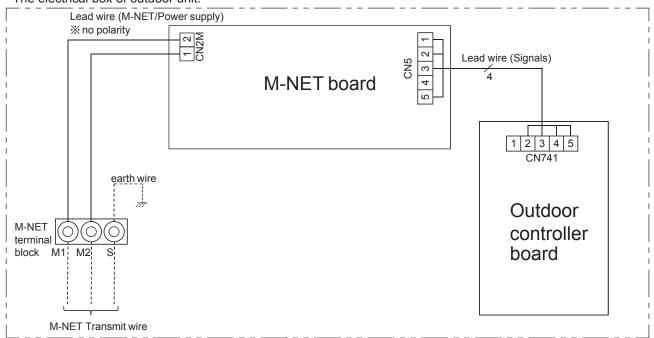

NI TOOGE IN

Description

1	M-NET Board		1			
2	Fixture		2			
3	Screw (M3×10)		2			
4	Terminal block (M-NET)		1			
(5)	Terminal screw (M4×25)	4	1			
6	Label	CENTRALIZED CONTROL M1 M2 S BG79H744H03	1			
7	Lead wire-A (4 wires)	Color:Red Color:White Length:380mm	1			
8	Lead wire-B (2 wires)	Length:530mm	1			
9	Ground wire and screw (M4×8)	Length:200mm	1each			
10	Fastener	<u> </u>	2			
3. Switch setting						

Figure

Ĝ

Q'ty

Before installation

Set M-NET address on M-NET board in advance before installing on the electrical box.

(1) M-NET head address setting


The setting should be done by rotary switches SW11 and SW12 on M-NET board. (Factory settings are all Zero) Make sure to set M-NET address within the range of 01 to 50. When installing two or more outdoor units, do not use the same number more than once for M-NET address.

(2) Indoor unit connection switch setting

Set each indoor unit to ON or OFF with SW1.

♦M-NET address setting

Starting with the M-NET head address set with SW11 and SW12, the M-NET address is automatically allocated in numerical order to each indoor unit which is connected.

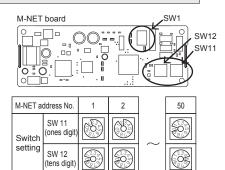

	C	onr	nec	tior	ı S	ettir	ng		
Switch	OF 12345678 SW1								
ON Indoor connect OFF No connection									
Setting	SW1	-1	-2	-3	-4	-5	-6	(-7)	(-8)
	Indoor Unit	Α	В	С	D	Е	F	-	-
				(5	SW	1-7	,8 r	not	use)

Descriptions

A-control Mr. SLIM models can be connected to "M-NET" through optional M-NET converter so that they can be monitored / controlled effectively and meticulously.

Applicable Models

- PUZ-ZM60,71VHA
- PUZ-ZM100,125,140VKA
- PUZ-ZM100,125,140YKA
- PUZ-ZM200.250YKA
- PUZ-M100,125,140VKA
- PUZ-M100,125,140YKA
- PUZ-M200,250YKA
- [R32 type]


- PUHZ-ZRP60,71VHA
- PUHZ-ZRP100,125,140VKA
- PUHZ-ZRP100,125,140YKA
- PUHZ-ZRP200.250YKA
- PUHZ-P100,125,140VKA
- PUHZ-P100,125,140YKA
- PUHZ-P200,250YKA
- PUHZ-SHW112VHA ■ PUHZ-SHW112,140YHA

[R410A type]

Specifications


Power	Supplied from control board
Power consumption	0.6W (at 5V DC, 12V DC)
Operating conditions	Mounted inside the electrical utility box of outdoor unit. (Temperature: -20 to 60 °C , humidity: 90% or less (no condensation))
Weight	0.3kg

Dimensions

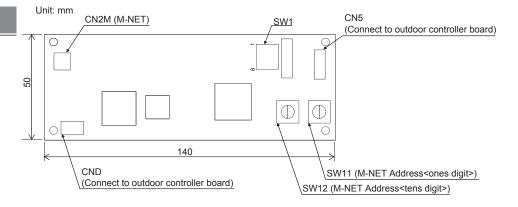

How to Use / How to Install

Wiring diagram

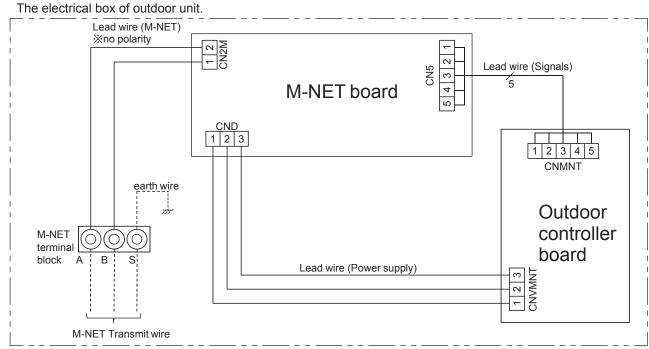

NI LACOUTI IO

No.	Description	Figure	Q'ty	No.	Description	Figure	Q'ty
①	M-NET board (with insulation sheets and supports)		1	9	Label	CENTRALIZED CONTROL (M-NET) ABS BG79H744H02	1
2	Plate1 (For mounting M-NET board)	0 0	1	10	Lead wire-A (5 wires)	Color: Red Length: 380 mm (15 inch)	1
3	Plate2 (For mounting M-NET board)	0 0 0 0	1	11)	Lead wire-B (5 wires)	Color: White Length: 280 mm (11 inch)	1
4	Plate3 (For mounting M-NET board)	o√o o	1	12	Lead wire-C (3 wires)	Length: 480 mm (19 inch)	1
(5)	Insulation sheets (\$),(\$\mathbb{O}\),(\$\mathbb{O}\)		S 1M 1L 1	13	Lead wire-D (2 wires)	Length: 680 mm (27 inch)	1
6	Terminal screw (M3×20)		2	14)	Ground wire and screw (M4×8)		1 each
7	Terminal block (M-NET)		1	15	Fastener	<u> </u>	2
8	Terminal screw (M3×20)	and the state of t	1				

3. Switch setting

■ M-NET address setting

Make M-NET setting and refrigerant address setting on only outdoor unit.

There is no address settings for outdoor unit and remote controller like City Multi system.

The M-NET address setting for taking into centralized control system should be done only to the outdoor unit.

The address set number should be 1-50 same as for City Multi indoor unit and make set in order of number for the same group.

	A control slim	City Multi (M-NET)		
Indoor unit	_	1 - 50		
Outdoor unit	1 - 50	51 - 100		
Remote controller	_	101 - 150		
System controller	201	- 250		
Group remote controller	201 - 250			

The setting should be done by rotary switches SW11 (ones digit) and SW12 (tens digit) on M-NET board of the outdoor unit. (Factory settings are all zero.)

•		I -	
	⊢xamn	Δ	

	[Example	;]			
!	M-NET address No.		1	2	50
	Switch	SW11 (ones digit)	(23 to 55)	22 3 k 5 0 0 0 0 L 0 0 0 0 0 0 0 0 0 0 0 0 0 0	23 _P 55
	setting	SW12 (tens digit)	23 k 5 %	23 P 50 P 100 P 10	23 pg (5)

Descriptions

A-control Mr. SLIM models can be connected to "M-NET" through optional M-NET converter so that they can be monitored / controlled effectively and meticulously.

Applicable Models

- PUZ-ZM35VKA type
- PUZ-ZM50VKA type
- PUHZ-ZRP35VKA PUHZ-ZRP50VKA

[R32 type]


[R410A type]

Specifications

Power	Supplied from control board			
Power consumption	0.6W (at 5V DC, 12V DC)			
Operating conditions	Mounted inside the electrical utility box of outdoor unit. (Temperature: -20 to 60 °C , humidity: 90% or less (no condensation))			
Weight	0.3kg			

Dimensions

Unit: mm

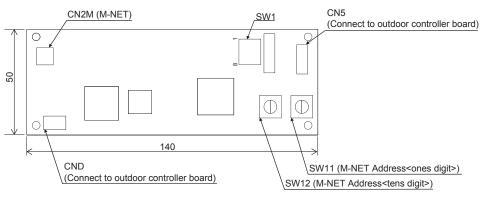

How to Use How to

1. Wiring diagram

The electrical box of outdoor unit. Lead wire (M-NET) ※no polarity Lead wire (Signals) CN5 က 5 M-NET board 4 CND 1 2 3 1 2 3 4 5 CNMNT earth wire Outdoor controller M-NET terminal board block В Lead wire (Power supply) CNVMNT 2 M-NET Transmit wire

No.	Description	Figure	Q'ty	No.	Description	Figure	Q'ty
1	M-NET board (with insulation sheets and supports)		1	7	Lead wire (5 wires)	length: 280mm	1
2	Plate (For mounting M-NET board)	and	1	8	Lead wire (3 wires)	length: 300mm	1
3	Screw (M4×8)		2	9	Lead wire (2 wires)	length: 280mm	1
4	Terminal block (M-NET)		1	100	Ground wire and screw (M4×8)		1 each
5	Terminal screw (M3×20)	and the second second	1	1	Fastener	<u> </u>	2
6	Label	CENTRALIZED CONTROL (M-NET) ABS BG79H744H02	1				

3. Switch setting

■ M-NET address setting

Make M-NET setting and refrigerant address setting on only outdoor unit.

There is no address settings for outdoor unit and remote controller like City Multi system.

The M-NET address setting for taking into centralized control system should be done only to the outdoor unit.

The address set number should be 1-50 same as for City Multi indoor unit and make set in order of number for the same group.

	A control slim	City Multi (M-NET)		
Indoor unit	_	1 - 50		
Outdoor unit	1 - 50	51 - 100		
Remote controller	_	101 - 150		
System controller	201 - 250			
Group remote controller	201 - 250			

The setting should be done by rotary switches SW11 (ones digit) and SW12 (tens digit) on M-NET board of the outdoor unit. (Factory settings are all zero.)

					_	
\sim	nı	n	r	10	┗,	
—	U			Xа	С.	
е	DΙ	n	r	ĸa	E)	

		;]			
Э	M-NET address No.		1	2	50
	Switch setting	SW11 (ones digit)	(12 3 A S) (19)	22 3 k 5 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	 \$ L 9
		SW12 (tens digit)	2 3 k 5 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	2 3 k 5 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	23 p.550 2000 2000

Descriptions

Applicable Models

A-control Mr. SLIM models can be connected to "M-NET" through optional M-NET converter so that they can be monitored / controlled effectively and meticulously.


■ PUZ-ZM35VKA2 ■ PUZ-ZM50VKA2

Specifications

Power	Supplied from control board	
Power consumption	0.6W (at 5V DC, 12V DC)	
Operating conditions	Mounted inside the electrical utility box. (Temperature: -20 to 60°C , humidity: 90% or	
	less (no condensation)	
Weight	0.68kg (without package)	

Unit: mm CN2M (M-NET) CN5 (Connect to outdoor controller board) SW1 (M-NET Address<ones digit>) SW12 (M-NET Address<tens digit>)

How to Use / How to Install

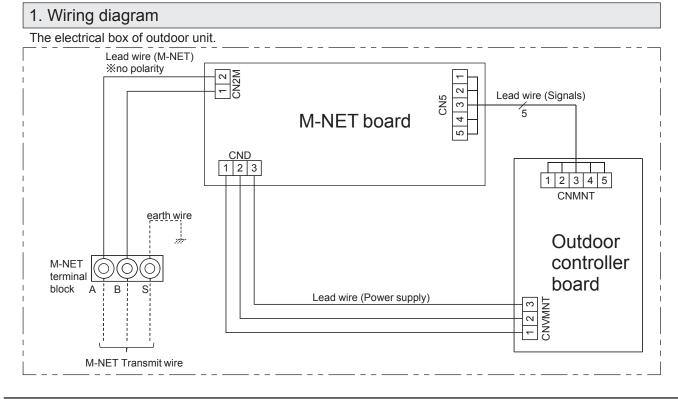

OUTDOOR UNIT

2. Parts List

No.	Part name	Figure	Q'ty	No.	Part name	Figure	Q'ty
0	M-NET case (bottom) (with M-NET board, M-NET terminal block, and cable bushing	40	1	8	Lead wire for power supply (3 poles)		1
2	M-NET case (top)		1	9	Lead wire for M-NET (2 poles)		1
3	M-NET cover		1	(1)	Earth wire and screw (M4×8)	J 500 B	1 each
4	Screw (M4×10) (not serrated)	B	2	1	Fastener	<u> </u>	1
5	Screw (M4×10) (serrated)	P	4	P	Cable tie		1
6	Cable band		1	13	White cushioning material		1
7	Lead wire for signal (5 poles)		1				

3. Switch setting

■ M-NET address setting

Make M-NET setting and refrigerant address setting on only outdoor unit.

There is no address settings for outdoor unit and remote controller like City Multi system.

The M-NET address setting for taking into centralized control system should be done only to the outdoor unit.

The address set number should be 1-50 same as for City Multi indoor unit and make set in order of number for the same group.


	A control slim	City Multi (M-NET)	
Indoor unit	_	1 - 50	
Outdoor unit	1 - 50	51 - 100	
Remote controller	_	101 - 150	
System controller	201 - 250		
Group remote controller	201 - 250		


The setting should be done by rotary switches SW11 (ones digit) and SW12 (tens digit) on M-NET board of the outdoor unit. (Factory settings are all zero.)

[Example]

	Lizampic	,]			
9	M-NET address No.		1	2	50
	Switch	SW11 (ones digit)	(12 3 h (5) (5)	22 3 k 5 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	 23 p s s s s s s s
	setting	SW12 (tens digit)	23 × 50	23 × 50 09 Los	(23 kg) (00 g) (00 g) (00 g)

4. Work procedure

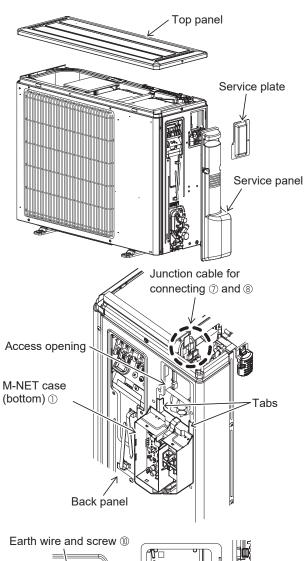

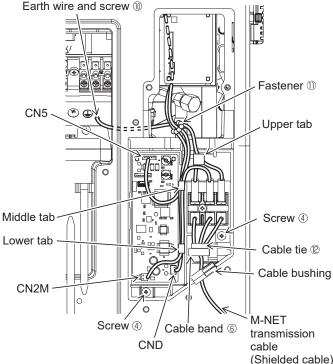


- (1) Remove the top panel, service panel, and service plate.
 - The 2 screws removed from the service plate will be used in (14).
 - The removed service plate will not be used.
- (2) Attach the 2 tabs of the M-NET case (bottom) ① to the access opening.
- (3) Fix the M-NET case (bottom) ① to the back panel with the 2 screws ④.
- (4) Connect the lead wire for signal (5 poles) ② and the lead wire for power supply (3 poles) ⑧ to the junction cable for connection ② and ⑧ that is fixed on the back of the electrical parts box.
 - When connecting the wires, mate the connectors of the same color.
- (5) Pass the lead wire for signal (5 poles) ① that was connected in (4) through the middle tab of the M-NET case (bottom) ①, and connect it to CN5 on the M-NET board.
- (6) Pass the lead wire for power supply (3 poles) ® that was connected in (4) through the middle and lower tabs of the M-NET case (bottom) ①, and connect it to CND on the M-NET board.
- Note 1: Connect the shield of the M-NET transmission cable to the outdoor terminal block plate with the earth wire and screw (1) as needed.

 Refer to "(1) Earth wire connection" on page 2.
- (8) Tie the wires routed in (5), (6), and Note1 together with the fastener ①.
- (9) Attach the cable band ® to the M-NET transmission cable (shielded cable), and then attach the cable band ® to the M-NET case (bottom) ①.
- (10) Attach the cable tie
 above the cable band
 so that external force on the cables is not transmitted to the terminal connections.
 - \bullet Cut off the excess part of the cable tie $\ensuremath{\mathfrak{D}}.$
- (11) Pass the M-NET transmission cable (shielded cable) that was attached to the M-NET case (bottom) ① in (9) through the cable bushing.
 Seel the inteke part of the M-NET transmission cable.


Seal the intake part of the M-NET transmission cable (shielded cable) with putty or other sealing material you have.

(Failure to do so can cause sound leakage or breakdown due to intrusion of small animals, rainwater, dust, etc.)


Note 2: Route the cables as shown in the left figure.

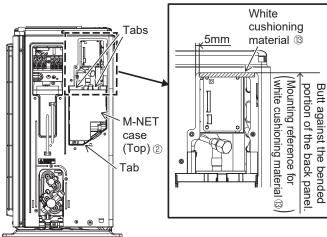



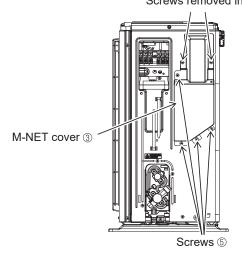

- (12) Attach the M-NET case (top) ② to the M-NET case (bottom) ① using the 3 tabs of the M-NET case (bottom) ①.
 - Note: Insert the black cushioning material (insulation) attached to the lead wire for signal (5 poles) ⑦, the lead wire for power supply (3 poles) ⑧, and the earth wire ⑩ between the M-NET case (bottom) ① and the M-NET case (top) ②. (Failure to do so can cause breakage due to intrusion of rainwater or oil.)
- (13) Attach the white cushioning material ® to the back
 - (Failure to do so can cause breakage due to intrusion of rainwater or oil.)
- (14) Fix the M-NET cover ③ to the back panel with the 4 screws ⑤ and the 2 screws removed in (1).
 - Be careful not to let the lead wire get caught between them.

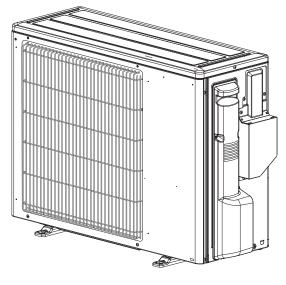

(15) Reinstall the top panel and the service panel.

Photo



Descriptions

This item is used to display operation and self-diagnosis

Applicable Models

- PUZ-ZM Series
- PUZ-M Series
- PUHZ-ZRP Series ■ PUHZ-P Series
- PUHZ-SHW Series

[R32 type]

[R410A type]

Specifications

Power	5V DC (supplied from outdoor unit control board)
Temperature	-20 to 60 $^{\circ}\mathrm{C}$, Humidity: 90% RH or less (no condensation)
External dimensions	69 (W) x 91 (H) x 27 (D) (mm), excluding lead wires
Weight	0.05kg

How to Use / How to Install

- Notes on Use
 - · Before installing / removing a control / service tool, make sure that the main power to this unit is turned OFF.
 - The connector for control / service tool has a lock. Connection / removal of the connector must be dine with the locking lever pressed.
- How to Use

 - Connect the control / service tool connector to the [CNM] connector on the outdoor unit control board.
 Operating the control / service tool's DIP switch "SW2" causes "LED1" to display the operation state and inspection code description using 2-digit value and symbols. "SW2" setting varies with the unit to be connected. For details of the display content, refer to the appropriate service handbook.
 - 3. After the control / service tool has been used, remove it from the outdoor unit control board.

D2-285

Photo



Descriptions

With Step Interface, local units can be connected with P series heat pump outdoor units.

Applicable Models

- PUHZ-ZRP Series
- PUHZ-P200, 250YKA3
- PUHZ-SHW Series


Specifications

Model	PAC-IF012B-E
Туре	Cased
Power supply	220-240V AC, 50Hz
	Target temp. (TH1)
Thermistor	Pipe temp./Liquid (TH2)
	Pipe temp./Cond./eva (TH5)

Dimensions

Unit: mm

[PAC-IF012B-E]

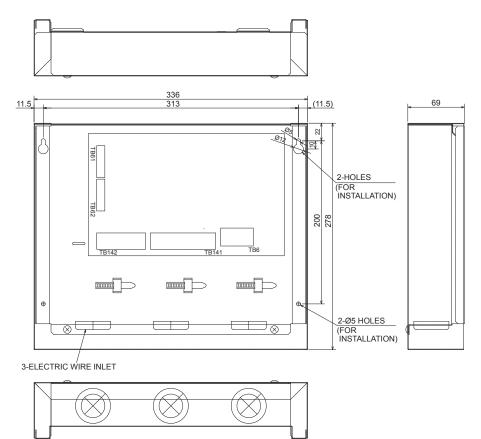

How to Use / How to Install

2. Installing the interface unit

IF012 ① ②

Fig. 2-1

2.1. Check the parts (Fig. 2-1)

The interface unit should be supplied with the following parts.


	Part Name	IF012
1	Interface unit	1
2	Thermistor	3

2.2. Choosing the interface unit installation location

- Do not install the interface unit in outdoor location as it is designed for indoor installation only. (The interface board and casing are not waterproof.)
- Avoid locations where the unit is exposed to direct sunlight or other sources of heat
- Select a location where easy wiring access to the power source is available.
- Avoid locations where combustible gases may leak, be produced, flow, or accumulate.
- Select a level location that can bear the weight and vibration of the unit.
- Avoid locations where the unit is exposed to oil, steam, or sulfuric gas.

2.3. Installing the interface unit (Fig. 2-2, Photo.2-1)

- 1. Remove 2 screws from interface unit and remove the cover.
- Install the 4 screws (locally supplied) in 4 holes.
 - A Screw B Cover
 - © Hole for installation

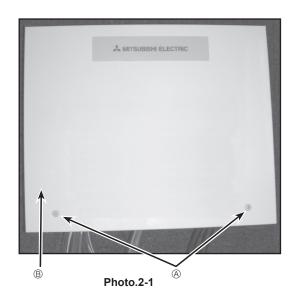

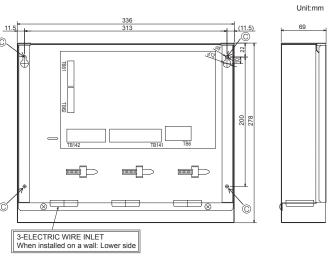
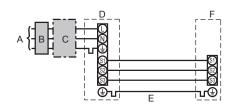


Fig.2-2

3.1.1. Interface unit power supplied from outdoor unit The following connection patterns are available.

The outdoor unit power supply patterns vary on models.



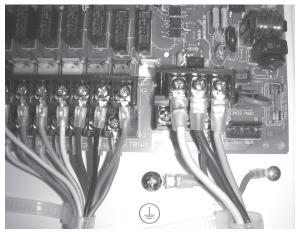


Photo.3-2

Interface unit model			PAC-IF012B-E
Wiring e No. × size (mm²)	Interface unit-Outdoor unit	*1	3 × 1.5 (polar)
Wirir Wire No. (mm	Interface unit-Outdoor unit earth	*2	1 × Min. 1.5
suit ng	Interface unit-Outdoor unit S1-S2	*2	AC 230 V
Circuit	Interface unit-Outdoor unit S2-S3	*3	DC24 V

- *2. The figures are NOT always against the ground.
 \$3 terminal has DC 24 V against \$2 terminal. However between \$3 and \$1, these terminals are not electrically insulated by the transformer or other device.
- Notes: 1. Wiring size must comply with the applicable local and national code.
 2. Power supply cables and interface unit/outdoor unit connecting cables shall not be lighter than polychloroprene sheathed flexible cable.
 (Design 60245 IEC 57)
 - 3. Install an earth longer than other cables.

3.1. Interface unit (Photo. 3-1)

- 1. Remove the cover.
- 2. Wire the power cable and control cable separately through the respective wiring inlets given in the photo.
- Do not allow slackening of the terminal screws.
 - A Inlet for control cable
 - B Inlet for power
 - C Clamp

Outdoor unit

Interface unit

D Interface / Outdoor unit connecting terminals

Outdoor unit power supply Earth leakage breaker Wiring circuit breaker or isolating switch

Interface unit/outdoor unit connecting cables


E Earth terminal




3.1.2. Separate interface unit/outdoor unit power supplies

The following connection patterns are available.

The outdoor unit power supply patterns vary on models.

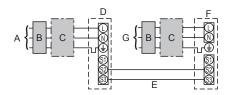

- Outdoor unit power supply
- Earth leakage breaker
- Wiring circuit breaker or isolating switch
- Outdoor unit
- Interface unit/outdoor unit connecting cables
- Interface unit
- Interface unit power supply

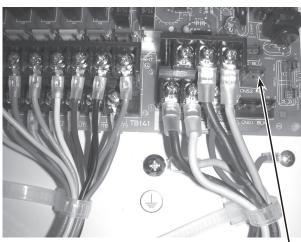

If the interface and outdoor units have separate power supplies, refer to the table below.

	Separate power supply specifications
Interface unit controller connector (CNS2) connection change	Disconnected
Outdoor unit DIP switch settings (when using separate interface unit/outdoor unit power supplies only)	ON 3 OFF 1 2 (SW8) Set the SW8-3 to ON.

Photo.3-3 CNS₂

1.1.4.		1	DAO IEOAOD E
Interrace	unit model	PAC-IF012B-E	
Interface	unit power supply		~/N (Single Phase), 50 Hz, 230 V
Interface	unit input capacity	*1	16 A
Main swit	ch (Breaker)		16 A
size	Interface unit power supply		2 × Min. 1.5
5, × (2	Interface unit power supply earth		1 × Min. 1.5
Wiring Wire No. × 3 (mm²)	Interface unit-Outdoor unit	*2	2 × Min. 0.3
×	Interface unit-Outdoor unit earth		_
= 5	Interface unit L-N	*3	230 VAC
Circuit	Interface unit-Outdoor unit S1-S2	*3	_
0 5	Interface unit-Outdoor unit S2-S3	*3	24 VDC

- *1. A breaker with at least 3.0mm contact separation in each pole shall be provided. Use earth leakage breaker (NV).
- *3. The figures are NOT always against the ground.
- 1. Wiring size must comply with the applicable local and national code.
 - 2. Power supply cables and interface unit/outdoor unit connecting cables shall not be lighter than polychloroprene sheathed flexible cable. (Design 60245 IEC 57)
 - 3. Install an earth longer than other cables.

3.1.3. Connecting thermistor cable

Connect the thermistor ② for the interface controller.

- 1. Target temp. thermistor (TH1) Connect the thermistor for the target temp. to 1 and 2 on the terminal block (TB61)
- on the interface controller. 2. Pipe temp. thermistor / Liquid (TH2) Connect the thermistor for the pipe temp. to 3 and 4 on the terminal block (TB61) on the interface controller.
- 3. Cond./eva. temp. thermistor (TH5) Connect the thermistor for the cond./eva. temp. to 5 and 6 on the terminal block (TB61) on the interface controller.

When the thermistor cables are too long, cut it to the appropriate length. Do not bind it in the interface unit.

Caution:

Do not route the thermistor cables together with power cables.

The sensor part of the thermistor should be installed where user

(It is separated by the supplementary insulation from where user may touch.)

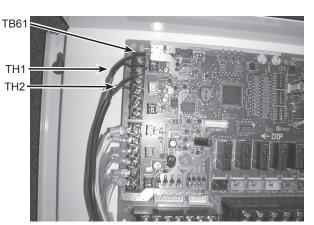


Photo.3-4



3.1.4. Connecting external input

Demand control is available by external input.


It is possible to set the outdoor unit's power consumption by setting the switch of the interface controller.

Switch1, Switch 6: Input selection of inverter capacity setting


Stricent, Circuit C. input colocion of inventor capacity county									
Input	SW 1-1	SW 1-2	SW 1-3	SW 6-1	SW 6-2	Step for capacity setting			
REMOTE SWITCH Type A (4bit-8 setting)	OFF	OFF	OFF	OFF	OFF	OFF/Step1/Step2//Step7/Auto			
REMOTE SWITCH Type B (1bit-1 setting)	ON	OFF	OFF	OFF	OFF	OFF/Step1/Step4/Step7/Auto			
4-20mA	ON	ON	OFF	ON	ON	OFF/Step1/Step2//Step7			
1-5V	ON	ON	OFF	OFF	ON	OFF/Step1/Step2//Step7			
0-10V	OFF	OFF	ON	OFF	OFF	OFF/Step1/Step2//Step7			
0-10kΩ	ON	OFF	ON	OFF	OFF	OFF/Step1/Step2//Step7/Auto			
No input (AUTO mode)	OFF	ON	ON	OFF	OFF	Only Auto mode			

• REMOTE SWITCH Type A (4bit - 8 setting) / Type B (1bit -1 setting)

TB142 10-11	TB142 10-12	TB142 10-13	TB142 10-14	Step for capacity setting				Remark		
(COM-IN5)	(COM-IN6)	(COM-IN7)	(COM-IN8)	ТуреА			ТуреВ			remark
OFF	OFF	OFF	OFF	[OFF]	OFF	0%	[OFF]	OFF	0%	OFF
ON	OFF	OFF	OFF	[ON]	Step1	10%	[ON]	Step1	10%	
OFF	ON	OFF	OFF		Step2	20%		Step4	50%	
ON	ON	OFF	OFF		Step3	30%		1	Ť	Hz fixed
OFF	OFF	ON	OFF		Step4	50%		Step7	100%	mode
ON	OFF	ON	OFF		Step5	70%		1	Î	
OFF	ON	ON	OFF		Step6	80%		1	Ť	
ON	ON	ON	OFF		Step7	100%		1	Ť	
OFF	OFF	OFF	ON		Auto			Auto		Auto mode

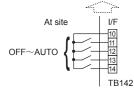



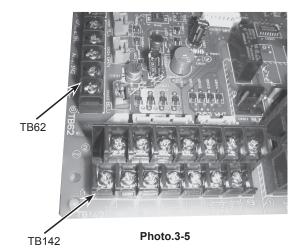

Demand control is available by connecting remote switches with terminal No.10 - 14. Make sure to use the non-voltage switch (for the remote switch)

Remote switch cable length: Maximum 10m Remote switch: Minimum applicable load DC12V, 1mA

• 4-20mA / 1-5V / 0-10V / 0-10kΩ ①Use 4-20mA / 1-5V / 0-10V

Connect the transmission cables to No. 3 and 4 on the terminal block (TB62). No. 3 on the terminal block (TB62): Plus side

No. 4 on the terminal block(TB62): Minus side (Reference side)

②Use adjustable resistor (0-10kΩ)

Connect the transmission cables to No. 1 and 2 on the terminal block (1862).								
Adjustable resistor (0-10kΩ)	4-20mA	1-5V	0-10V	Step for capacity setting		Remark		
0~100Ω	4~5mA	0~1.25V	0~0.63V	OFF	0%	Stop		
510Ω	7mA	1.75V	1.88V	Step1	10%			
1kΩ	9mA	2.25V	3.13V	Step2	20%]		
2kΩ	11mA	2.75V	4.38V	Step3	30%			
3.3kΩ	13mA	3.25V	5.63V	Step4	50%	Hz fixed mode		
4.3kΩ	15mA	3.75V	6.88V	Step5	70%	illode		
5.6kΩ	17mA	4.25V	8.13V	Step6	80%			
7.5kΩ	19~20mA	4.75~5V	9.38~10V	Step7	100%			
10kΩ	_	_	_	Auto		Auto mode		
OPEN(12kΩ~)	_	_	-	OFF	0%	Stop		

^{*}The value of the above-mentioned table becomes the center of the input value. Cable length: Maximum 10m

External function setting

This function is setting operation mode or stopping compressor, by the external signal.

TB142	Item	OFF	ON	Remark
1-2 (IN1)	Forced Comp. OFF	Normal	Forced Comp. OFF	
3-4 (IN2)Item	Fixed operation mode	Cooling	"	Available when SW2-1 and SW2-2 are ON

Cable length: Maximum 10m

Remote switch: Minimum applicableload DC12V, 1mA

At site 0-10 kΩ (4-20mA/1-5V/0-10V Wired remote controller (For maintenance) TB62

The external input signals are separated by basic insulation from power supply for the unit.

The external input signals should be separated by supplementary insulation from where user may touch in case that it is installed where

Connect the terminals by using the ring terminals and also insulate the cables of adjoining terminals when wiring to terminal block.

3.1.5. Connecting External Output

The signal in the following states can be output.

TB141			Item	OFF	ON	
1-2	(OUT1)	X1	Operation Output	OFF	ON	
3-4	(OUT2)	X2	Error Output	Normal	Error	
5-6	(OUT3)	Х3	Comp. Output	OFF(Comp. OFF)	ON	(Comp. ON)
7-8	(OUT4)	X4	Defrost Output	OFF	ON	(Defrosting)
9-10	(OUT5)	X5	Mode(Cool) Output	OFF	ON	(Cooling)
11-12	(OUT6)	X6	Mode(Heat) Output	OFF	ON	(Heating)
13-14	(OUT7)	-	_	-		_

Cable length: Maximum 50m

Output specification : Non-voltage switch 1A or less , 240V AC

*Connect the surge absorber according to the load at site.

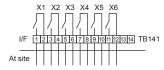


Photo.3-6

TB141

Note: External output signals are separated by basic insulation from other circuit of interface.

Caution: When 2 or more external outputs are used, the power supply on the output side should be the same.

3.1.6. Wiring specification External output / External input Locally supplied parts

Item	Name	Model and specifications				
External output function	External output signal wire	Use sheathed vinyl coated cord or cable.				
		Wire type: CV, CVS or equivalent.				
		Wire size : Stranded wire 0.5mm² to 1.25mm²				
		Solid wire: ø0.65mm to ø1.2mm				
	Display lamp, etc.	Non-voltage Contact AC220-240V (DC30V), 1A or less				
External input function	External input signal wire	Use sheathed vinyl coated cord or cable.				
		Wire type: CV, CVS or equivalent.				
		Wire size : Stranded wire 0.5mm² to 1.25mm²				
		Solid wire: ø0.65mm to ø1.2mm				
	Switch	Non-voltage "a" contact				

3.1.7. Switch setting It is possible to set the following function by setting the switch of the interface controller.

• SW2-1/2-2 : Fixed operation mode

_		
SW2-1	SW2-2	Details
OFF	OFF	Not FIX (Depending on Remote controller setting)
ON	OFF	[Cooling] FIX
OIV	OLL	[[OOOling] FIX
OFF	l on l	[Heating] FIX
<u> </u>	U.1	[[
ON	ON	External input (Depending on TB142-3, 4)

- SM2 2/2 4/2 E : Eivad cat tamparatura [Ear Auto made only]

* 3VVZ-3/Z-4	3w2-3/2-4/2-5 . Fixed set temperature [For Auto mode only]							
SW2-3	SW2-4	SW2-5	Details					
OFF	OFF	OFF	Not fixed (Demote controller cetting)					
UFF	UFF	UFF	Not fixed (Remote controller setting)					
ON	OFF	OFF	Cooling 19°C/Heating 17°C FIX					
OFF	ON	OFF	20°C FIX					
ON	ON	OFF	22°C FIX					
OFF	OFF	ON	24°C FIX					
ON	OFF	ON	26°C FIX					
OFF	ON	ON	28°C FIX					
ON	ON	ON	Cooling 30°C/Heating 28°C FIX					

Set switches in case of auto mode.

• SW2-6 : COND./EVA. TEMP. THERMISTOR (TH5)

SW2-6	Details	Model
OFF	Effect	PAC-IF012B-E

3.1.8.Before test run

After completing installation and the wiring and piping of the local application and outdoor units, check for refrigerant leakage, looseness in the power supply or control wiring, wrong polarity, and no disconnection of one phase in the supply.

Use a 500-volt megohmmeter to check that the resistance between the power supply terminals and ground is at least 1.0MΩ.

Do not use the system if the insulation resistance is less than $1.0M\Omega$.

Caution:

Do not carry out this test on the control wiring (low voltage circuit) terminals.

OUTDOOR UNIT

Local Application Factors

- * This interface is to connect Mr. Slim inverter outdoor unit of MITSUBISHI ELECTRIC to local applications. Please check the following when designing the local system.
- * MITSUBISHI ELECTRIC does not take any responsibility on the local system design.

1. Heat exchanger

(1) Withstanding pressure

Designed pressure of outdoor unit is 4.15 MPa. Following must be satisfied for burst pressure of connecting application. Burst pressure: More than 12.45 MPa (3 times more than designed pressure)

(2) Performance

Secure the heat exchanger capacity which meets the following conditions. If the conditions are not met, it may result in malfunction caused by the protection operation or the outdoor unit may be turned off due to the operation of protection

- 1. Evaporate temperature is more than 4°C in max. frequency operation under *1the cooling rated conditions.
- 2. Condense temperature is less than 60°C in max. frequency operation under *2the heating rated conditions.
- 3. In case of hot water supply, condense temperature is less than 58°C in max. frequency operation with the outside temperature 7°C D.B./6°C W.B.

Outdoor: 35°C D.B./24°C W.B. *1. Indoor: 27°C D.B./19°C W.B. *2. Indoor: 20°C D.B. Outdoor: 7°C D.B./6°C W.B.

(3) Heat exchanger internal capacity

Heat exchanger internal capacity must be within the capacity range shown below. If the heat exchanger below the minimum capacity is connected, it may result in the back flow of liquid or the failure of the compressor.

If the heat exchanger above the maximum capacity is connected, it may result in the deficiency in performance due to lack of refrigerant or overheating of the compressor.

Minimum capacity: 10 × Model capacity [cm³] / Maximum capacity: 30 × Model capacity [cm³]

e.g. When connecting to PUHZ-RP100 VHA2 Minimum capacity : $10 \times 100 = 1000 \text{ cm}^3$ Maximum capacity: 30 × 100 = 3000 cm³

Model capacity	35	50	60	71	100	125	140	200	250
Maximum capacity [cm³]	1050	1500	1800	2130	3000	3750	4200	6000	7500
Minimum capacity [cm³]	350	500	600	710	1000	1250	1400	2000	2500

(4) Contamination maintenance

- 1. Wash the inside of heat exchanger to keep it clean. Be sure to rince not to leave flux. Do not use chlorine detergent
- 2. Be sure that the amount of contamination per unit cubic content of heat transfer pipe is less than the following amount.

Example) In case of ϕ 9.52mm

Residual water: 0.6mg/m, Residual oil: 0.5mg/m, Solid foreign object: 1.8mg/m

2. Thermistor position

<Target temp.thermistor (TH1)> (Used only in *auto mode (Only for Air to Air applications))

- 1. Put thermistor (TH1) where average intake temperature for heat exchanger can be detected.
- 2. It is better to put thermistor (TH1) where radiant heat from heat exchanger can be avoided.

To use this interface for manual step control, put a fixed resistor of $4\sim10k\Omega$ instead of thermistor (TH1 on the terminal block TB61).

* Auto mode: In this mode, the capacity step of the outdoor unit is controlled automatically to let the target (intake) temperature reach the setting temperature. (Only for air to air application)

<Liquid pipe thermistor(TH2)>

- 1. Put thermistor (TH2) where liquid refrigerant pipe temperature can be detected.
- 2. It is better to protect the thermistor (TH2) with heat insulating materials not to be affected by the ambient temperature, etc.
- 3. In case that the refrigerant is distributed by distributor, put thermistor (TH2) before the distributor.

<Cond./Eva. temp. thermistor (TH5)>

1. Put thermistor (TH5) where Cond./Eva. temperature can be detected on the indoor HEX pipe.

Photo



Descriptions

With Step Interface, local units can be connected with P series heat pump outdoor units.

Applicable Models


- PUZ-ZM Series
- PUHZ-ZRP Series
- PUHZ-P200, 250YKA3
- PUHZ-SHW Series
- PUZ-M200,250YKA

Specifications


	PAC-IF013B-E	PAC-SIF013B-E	
Weight	2.5 kg + ACCESSORIES	2.5 kg + ACCESSORIES	
vveigni	0.8 kg	0.4 kg	
Allowable ambient	0 to 35° C	0 to 35° C	
temperature	0 10 35 C	0 10 35 C	
Allowable ambient humidity	80% RH or less	80% RH or less	

Dimensions


Unit: mm

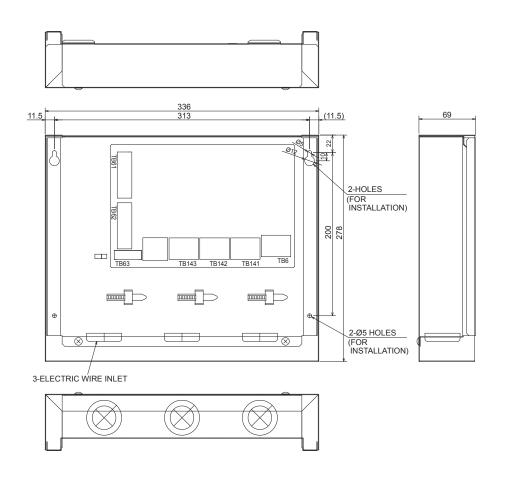


2. Installing the interface unit

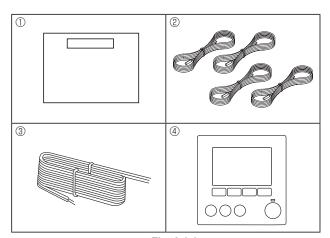

<Fig. 2.1.1>

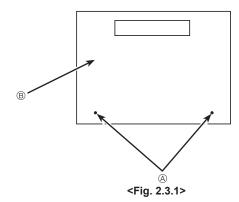

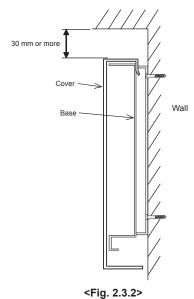

Service space

2.1. Check the parts (Fig. 2.1.1)

The interface unit should be supplied with the following parts.

	Part Name	PAC-IF013B-E	PAC-SIF013B-E
1	Interface unit	1	1
2	Thermistor	4	4
3	Remote controller cable (5m)	1	_
4	Remote controller	1	_

2.2. Choosing the interface unit installation location


- Do not install the interface unit in outdoor location as it is designed for indoor installation only. (The interface board and casing are not waterproof.)
- Avoid locations where the unit is exposed to direct sunlight or other sources of heat
- Select a location where easy wiring access to the power source is available.
- Avoid locations where combustible gases may leak, be produced, flow, or accumulate.
- · Select a level location that can bear the weight and vibration of the unit.
- · Avoid locations where the unit is exposed to oil, steam, or sulfuric gas.
- Do not install in location that is hot or humid for long period of time.

2.3. Installing the interface unit (Fig. 2.3.1, 2.3.2, 2.3.3)

- Remove 2 screws

 from interface unit and remove the cover by sliding it upward (see Fig. 2.3.1).
- 2. Install the 4 screws (locally supplied) in 4 holes (© hole).
 - * To prevent the unit from falling off the wall, select the appropriate screws (locally supplied) and secure the base horizontally to the appropriate wall location. (See Fig. 2.3.2)

Screw Cover	© Hole for installation						
	PAC-IF013B-E	PAC-SIF013B-E					
Woight	2.5 kg + ACCESSORIES	2.5 kg + ACCESSORIES					
Weight	0.8 kg	0.4 kg					
Allowable ambient temperature	0 to 35°C	0 to 35°C					
Allowable ambient humidity	80% RH or less	80% RH or less					

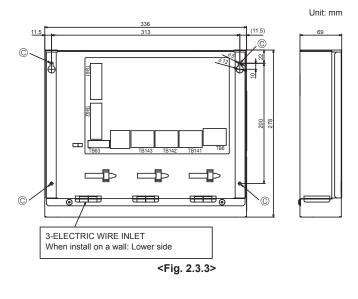

Step mode (Input)


Manual

			2-6	Арріу	See (2-1) below.							
			2-0	Not apply	See (1-1) below.*1							
	Auto	Supply air temp. control	1-5	N/A	See (1-2) below.							
		Return air temp. control	1-5	N/A	See (1-3) below.							
*1. It is recommended to select Intelligent multiple outdoor unit control. Design local AHU controller to make sure the following points. • Minimum capacity request should be 20% or more of total capacity. • Operate all outdoor units when outdoor temperature is below -15 °C.												
	3.1. System configuration (Single outdoor unit)											

Number of outdoor unit

Target temperature

(1-1) Manual step mode *1

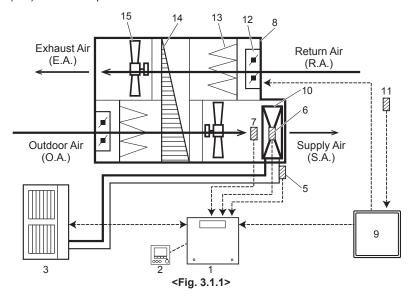

*1. Manual step mode:

Intelligent multiple outdoor unit control

N/A

• Variable capacity request signals for heat pump need to be calculated by AHU local controller.

System

See (1-1) below.


- · AHU local controller can send "Capacity steps" by nonvoltage contact signals or analog signals to the interface
- Operation mode can be set by remote controller, external input or DIP switch.

Note

- Do NOT select STEP 0 for 3 minutes after compressor is ON. (Keep compressor ON for 3 minutes at least.)
- When changing STEP, make it less than 5 steps in a single request, and keep at least 5 minutes interval between the
- Keep operation range shown at the following section 3.3.
 Do NOT send STEP 0 during defrost operation.
- Do NOT change operation mode frequently.

No.	Part name	System (1-1)
1	Interface unit	~
2	Remote controller	~
3	Outdoor unit	~
4	Target air temp. thermistor (TH1)	_ *2
5	Ref. liquid temp. thermistor (TH2)	~
6	2-Phase temp. thermistor (TH5)	✓ *3
7	HEX inlet (Coil on) temp. thermistor (TH11)	~
8	Air-Handling Unit (AHU) (Local supply)	~
9	AHU local controller (Local supply)	~
10	Heat exchanger of AHU (Local supply)	~
11	Target air temp. thermistor (Local supply)	~
12	Louver (Local supply)	~
13	Air filter (Local supply)	~
14	Heat recovery (Local supply)	~
15	Fan (Local supply)	~

- *2. Set the DIP SW 2-8 to ON.
 *3. If outdoor unit is SHW series, It's not needed to install this thermistor, and set the DIP SW 1-5 to ON.

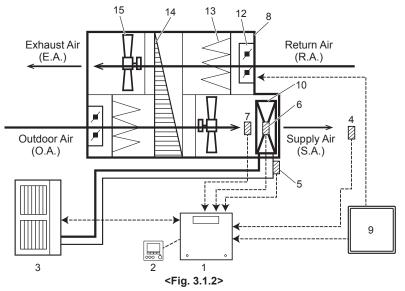

- *4. Auto step mode:
- In this mode, the capacity step of the outdoor unit is controlled automatically to let the target temperature reach the


Note

- · Auto change over function between cooling and heating mode is NOT available in this system.
- Keep operation range shown at the following section 3.3.
 Standard setting of DIP SW3-4 and SW3-5 is 3°C (SW3-4: ON, SW3-5: OFF). (Refer to "4.1.7 Switch setting".)

No.	Part name	System (1-2)
1	Interface unit	~
2	Remote controller	~
3	Outdoor unit	~
4	Target air temp. thermistor (TH1)	✓
5	Ref. liquid temp. thermistor (TH2)	~
6	2-Phase temp. thermistor (TH5)	ン *5
7	HEX inlet (Coil on) temp. thermistor (TH11)	~
8	Air-Handling Unit (AHU) (Local supply)	~
9	AHU local controller (Local supply)	~
10	Heat exchanger of AHU (Local supply)	~
11	Target air temp. thermistor (Local supply)	_
12	Louver (Local supply)	~
13	Air filter (Local supply)	~
14	Heat recovery (Local supply)	~
15	Fan (Local supply)	~

*5. If outdoor unit is SHW series, It's not needed to install this thermistor, and set the DIP SW 1-5 to ON.

(1-3) Auto step mode *6 & Return/ Room air temp. control *7

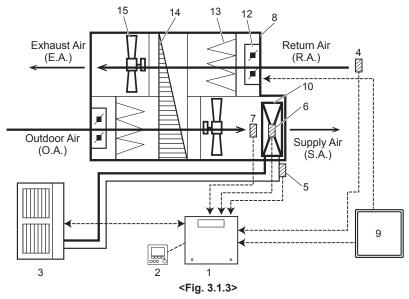

- *6. Auto step mode:
- In this mode, the capacity step of the outdoor unit is controlled automatically to let the target temperature reach the set temperature.
- *7. Return/Room air temp. control:
 Set the DIP SW 1-7 to ON.

Note

- Auto change over function between cooling and heating mode is available ONLY when this system is selected and the input selection of capacity setting (DIP SW1 and SW6) is "No input (Auto step mode)".
- Keep operation range shown at the following section 3.3.


No.	Part name	System (1-3)
1	Interface unit	~
2	Remote controller	~
3	Outdoor unit	~
4	Target air temp. thermistor (TH1)	~
5	Ref. liquid temp. thermistor (TH2)	~
6	2-Phase temp. thermistor (TH5)	レ*8
7	HEX inlet (Coil on) temp. thermistor (TH11)	~
8	Air-Handling Unit (AHU) (Local supply)	~
9	AHU local controller (Local supply)	~
10	Heat exchanger of AHU (Local supply)	~
11	Target air temp. thermistor (Local supply)	_
12	Louver (Local supply)	~
13	Air filter (Local supply)	7
14	Heat recovery (Local supply)	~
15	Fan (Local supply)	~

^{*8.} If outdoor unit is SHW series, It's not needed to install this thermistor, and set the DIP SW 1-5 to ON.

3. System

3.2. System configuration (Intelligent multiple outdoor unit control *1)

(2-1) Manual step mode (example)

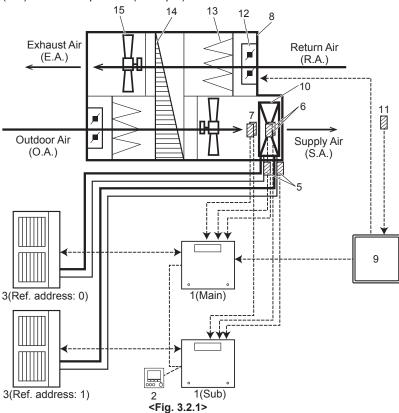

*1. Interface system receives step request signal correspond to total capacity of outdoor units, and calculates necessary capacity for each outdoor unit automatically.

Note

- This intelligent multiple outdoor unit control function is available only when Manual step mode is selected.
- Up to 6 outdoor units can be connected.
- 2 different type of outdoor units (capacity and/or series) can be mixed, but connecting the same capacity outdoor units
- is highly recommended.
 Ref. address setting on each outdoor unit is needed.
 Interface unit which connects to the Ref. address 0 outdoor unit, becomes main interface unit.
- · Connect AHU local controller (Part No. 9) to the main interface unit.
- Connect ONE remote controller (Part No. 2) to the interface unit.
- · Connect between the interface units with a remote controller (daisy chain). MAX: 500m
- · When using this function, set the DIP SW 1-8 of all interface unit to ON.
- Do NOT select STEP 0 for 3 minutes after compressor is ON. (Keep compressor ON for 3 minutes at least.)
- When changing STEP, make it less than 5 steps in a single operation, and keep at least 5 minutes interval between the
- Keep operation range shown at the following section 3.3.
 Do NOT send STEP 0 during defrost operation.
 Do NOT change operation mode frequently.

No.	Part name	System (2-1)
1	Interface unit	~
2	Remote controller	~
3	Outdoor unit	~
4	Target air temp. thermistor (TH1)	- *2
5	Ref. liquid temp. thermistor (TH2)	~
6	2-Phase temp. thermistor (TH5)	✓*3
7	HEX inlet (Coil on) temp. thermistor (TH11)	~
8	Air-Handling Unit (AHU) (Local supply)	~
9	AHU local controller (Local supply)	~
10	Heat exchanger of AHU (Local supply)	~
11	Target air temp. thermistor (Local supply)	7
12	Louver (Local supply)	~
13	Air filter (Local supply)	~
14	Heat recovery (Local supply)	~
15	Fan (Local supply)	~

- *2. Set the DIP SW 2-8 to ON.
- *3. If outdoor unit is SHW series, It's not needed to install this thermistor, and set the DIP SW 1-5 to ON.

3.3. Indoor operation range

Mode	Number of outdoor unit	HEX inlet air temp. operation range
Cooling	1 or more	15 - 32 °C
Llooting	1	0 - 28 °C
Heating	2 or more	5 - 28 °C

D2-297

4.1. Electrical connection


All electrical work should be carried out by a suitably qualified technician. Failure to comply with this could lead to electrocution, fire, and death. All wiring should be according to national wiring regulations.

Connections should be made to the terminals indicated in the following figures.

Use ring terminals and insulate the wires.

Tighten the screw from the bottom terminals first.

- 1. Do not run the low voltage cables through a slot that the high voltage cables
- 2. Do not bundle power cables together with other cables
- 3. Bundle cables as Fig. 4.1.1 by using clamps.

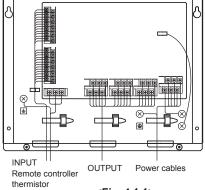


<Fig. 4.1.1>

4.1.1. Interface unit power supplied from outdoor unit

The following connection patterns are available

The outdoor unit power supply patterns vary on models

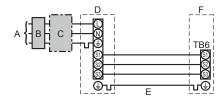

Outdoor unit power supply

- Earth leakage breaker *1, *2 В
- С Wiring circuit breaker or isolating switch
- Outdoor unit
- Interface unit/outdoor unit connecting cables
- Interface unit
- *1 If the installed earth leakage circuit breaker does not have a function to protect over-current, install a breaker with that function along the same power line.
 *2. A breaker with at least 3.0 mm contact separation in each pole shall be provided. Use earth leakage breaker (NV).
 - The breaker shall be provided to ensure disconnection of all active phase conductors of the

Note:

In accordance with IEE regulations the circuit breaker/isolating switch located on the outdoor unit should be installed with lockable devices (health and safety).

1 := ₹ :2 E	Interface unit - Outdoor unit	*3	3 × 1.5 (polar)
Wire wire	Interface unit - Outdoor unit earth	*3	1 × Min. 1.5
Circuit	Interface unit - Outdoor unit S1-S2	*4	230 V AC
Circ	Interface unit - Outdoor unit S2-S3	*4	24 V DC

- 13. Max. 45 m
 17.5 mm² used, Max. 50 m
 17.5 mm² used and S3 separated, Max. 80 m
 17.5 mm² used and S3 separated, Max. 80 m
 17.5 mm² used and S3 separated, Max. 80 m
 17.5 mm² used and S3 separated, Max. 80 m
 17.5 mm² used and S3 separated, Max. 80 m
 17.5 mm² used and S3 separated, Max. 80 m


Notes: 1. Wiring size must comply with the applicable local and national code.

- 2. Interface unit/outdoor unit connecting cords shall not be lighter than polychloroprene sheathed flexible cord. (Design 60245 IEC 57) Interface unit power supply cords shall not be lighter than polychloroprene sheathed flexible cord. (Design 60227 IEC 53)
- 3. Install an earth longer than other cables.

4.1.2. Separate interface unit/outdoor unit power supplies

The following connection patterns are available.

The outdoor unit power supply patterns vary on models.

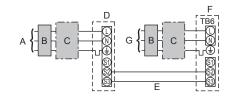


- A Outdoor unit power supply
- Earth leakage breaker *1, *2
- Wiring circuit breaker or isolating switch
- D Outdoor unit
- Interface unit/outdoor unit connecting cables
- Interface unit
- G Interface unit power supply
- *1 If the installed earth leakage circuit breaker does not have a function to protect over-current, install a breaker with that function along the same power line.

Note:


In accordance with IEE regulations the circuit breaker/isolating switch located on the outdoor unit should be installed with lockable devices (health and safety).

If the interface and outdoor units have separate power supplies, refer to the table below.

	Separate power supply specifications						
Interface unit controller connector (CNS2) connection change	Disconnected						
Outdoor unit DIP switch settings (when using separate interface unit/outdoor unit power supplies only)	ON 3 OFF 1 2 Set the SW8-3 to ON. (SW8)						

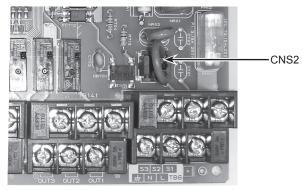

<Photo 4.1.2>

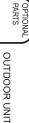

Interface	unit power supply	~/N 230 V 50 Hz	
	unit input capacity		
	ch (Breaker)	16 A	
	Interface unit power supply		2 × Min. 1.5
ing No. x m²)	Interface unit power supply earth Interface unit-Outdoor unit		1 × Min. 1.5
Wiring Wire No.: size (mm²)	Interface unit-Outdoor unit	*3	2 × Min. 0.3
	Interface unit-Outdoor unit earth		_
Circuit	Interface unit L-N	*4	230 V AC
	Interface unit-Outdoor unit S1-S2	*4	_
OF	Interface unit-Outdoor unit S2-S3	*4	24 V DC

- *2. A breaker with at least 3.0 mm contact separation in each pole shall be provided. Use earth leakage breaker (NV). The breaker shall be provided to ensure disconnection of all active phase conductors of the supply.
- *3. Max. 120 m

TB61:

TH1

TH5

*4. The values given in the left table are not always measured against the ground value

Notes: 1. Wiring size must comply with the applicable local and national code.

- 2. Interface unit/outdoor unit connecting cords shall not be lighter than polychloroprene sheathed flexible cord. (Design 60245 IEC 57) Interface unit power supply cords shall not be lighter than polychloroprene sheathed flexible cord. (Design 60227 IEC 53)
- 3. Install an earth longer than other cables.

4.1.3. Connecting thermistor cable

Connect the thermistor ② for the interface controller.

- 1. Target temp. thermistor (TH1)
 - Connect the thermistor for the target temp. to 1 and 2 on the terminal block (TB61) on the interface controller.
- 2. HEX inlet temp. thermistor (TH11)
 - Connect the thermistor for the HEX inlet temp. to 3 and 4 on the terminal block (TB61) on the interface controller.
- 3. Ref. liquid temp. thermistor (TH2)
 - Connect the thermistor for the ref. liquid temp. to 5 and 6 on the terminal block (TB61) on the interface controller.
- 4. 2-phase temp. thermistor (TH5)
 - Connect the thermistor for the 2-phase temp. to 7 and 8 on the terminal block (TB61) on the interface controller.

When the thermistor cables are too long, cut it to the appropriate length.

Do not bind it in the interface unit.

The 4 thermistors have the same specification except the color of cables, thus we do not specify which thermistor should be installed to which position.



When multiple outdoor units are connected, connect thermistors to each interface unit respectively.

⚠ Caution:
Do not route the thermistor cables together with power cables.
The sensor part of the thermistor should be installed where user can not access. (It should be separated by the supplementary insulation from areas the user can access.)

4.1.4. Connecting external input


Demand control is available by external input.

Select input type by setting the switch of the interface controller, and it is possible to set capacity request when manual step mode ("Analog input", "Remote switch" or "Modbus") is selected.

Switch 1, Switch 6: Imput selection of inverter capacity setting											
Input	SW 1-1	SW 1-2	SW 1-3	SW 6-1	SW 6-2	Step for capacity setting					
REMOTE SWITCH Type A (4bit-8 setting)	OFF	OFF	OFF	OFF	OFF						
REMOTE SWITCHType B (1bit-1 setting)	ON	OFF	OFF	OFF	OFF						
Analog (4-20mA)	ON	ON	OFF	ON	ON	See the "Capacity setting" table below.					
Analog (1-5V)	ON	ON	OFF	OFF	ON	cee the Supusity setting tuble below.					
Analog (0-10V)	OFF	OFF	ON	OFF	OFF						
Analog (0-10kΩ)	ON	OFF	ON	OFF	OFF						
No input (Auto step mode)	OFF	ON	ON	OFF	OFF	Only Auto step mode					
Modbus	ON	ON	ON	OFF	OFF	OFF/Step1/Step2//Step11					

· Capacity setting

		Step capacity		Remote switch				Step for capacity setting										
Variable resistor (0-10kΩ)	4-20mA	1-5V	0-10V	Analog input		TB 62 10-11 (COM-IN5)	TB 62 10-12 (COM-IN6)	TB 62 10-13 (COM-IN7)	TB 62 10-14 (COM-IN8)	Remote SW (Type A)						Remot (Type		Remark
OPEN(12kΩ-)	-	-	-	OFF		_	_	-	_	_		_		Stop				
10kΩ	_	_	-	Auto		OFF	OFF	OFF	ON	Auto		Auto		Auto step mode				
7.5kΩ	19-20mA	4.75-5V	9.75-10V	Step11	max.	ON	ON	ON	OFF	Step11	max.	_						
_	_	_	9.02V	Step10	\wedge	_	_	_	_	_	\triangle	-						
5.6kΩ	17mA	4.25V	8.20V	Step9	٦Г	OFF	ON	ON	OFF	Step9		_						
4.3kΩ	15mA	3.75V	7.38V	Step8		ON	OFF	ON	OFF	Step8		-						
_	_	_	6.56V	Step7		_	_	_	_	_	$\neg \vdash$	_						
3.3kΩ	13mA	3.25V	5.75V	Step6	71	OFF	OFF	ON	OFF	Step6		Step11	max.	Hz fixed mode				
_	-	-	4.93V	Step5	$\neg \Gamma$	_	_	-	-	_	$\neg \vdash$	-	Δ					
2kΩ	11mA	2.75V	4.11V	Step4	$\neg \Gamma$	ON	ON	OFF	OFF	Step4	$\neg \vdash$	_	$\neg \vdash$]				
1kΩ	9mA	2.25V	3.29V	Step3		OFF	ON	OFF	OFF	Step3		Step6						
_	-	-	2.47V	Step2	\neg U \neg	_	_	-	-	_		_						
510Ω	7mA	1.75V	1.66V	Step1	min.	ON	OFF	OFF	OFF	Step1	min.	Step1	min.					
0-100Ω	4-5mA	0-1.25V	0-0.63V	OFF		OFF	OFF	OFF	OFF	OFF		OFF		Stop				

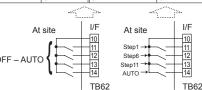

① Use 4-20mA / 1-5V / 0-10V

Connect the transmission cables to No. 11 and 12 on the terminal block (TB61).

No. 11 on the terminal block(TB61): Plus side

No. 12 on the terminal block(TB61): Minus side (Reference side)

② Use variable resistor (0-10kΩ)

Connect the transmission cables to No. 9 and 10 on the terminal block (TB61).

The values of the "capacity setting" table on the previous page show the center of the input value.

Cable length: Maximum 10m

Remote switch Type A (4 bit - 8 setting)/Type B (1 bit - 1 setting)

Demand control is available by connecting remote switches with terminal No.10 - 14.

Make sure to use the non-voltage switch (for the remote switch)

Remote switch cable length: Maximum 10m Remote switch: Minimum applicable load 12V DC, 1mA

Note:

When using intelligent multiple outdoor unit control function, input the capacity request signal to the main interface which connects to the ref. address 0 outdoor unit.

External function setting

This function is setting operation mode or stopping compressor, by the external signal.

TB62	Item	OFF	ON	Remark
1-2 (IN1)	Forced Comp. OFF *1	Normal	Forced Comp. OFF	
3-4 (IN2)Item	Fixed operation mode	Cooling	Heating	Available when SW2-1 and SW2-2 are ON

*1 The operation continues during defrosting operation.

The "Forced Comp. OFF" signal should not be turned ON frequently. It should only be used if an abnormality occurs.

Cable length: Maximum 10m

Remote switch : Minimum applicable load 12V DC, 1mA

When using IN1 with intelligent multiple outdoor unit control function, input IN1 to the interface unit respectively. Input IN2 to the main interface which connects to the ref. address 0 outdoor unit.

riangle Caution: The external input signals are separated by basic insulation from power supply for the unit.

The external input signals should be separated by supplementary insulation from where user may touch in case that it is installed where user may touch. Connect the terminals by using the ring terminals and also insulate the cables of adjoining terminals when wiring to terminal block.


4.1.5. Connecting External Output

Name	Terminal block	Item	OFF	ON
OUT1	TB141 5-6	Operation Output	OFF	ON
OUT2	TB141 3-4	Error Output	Normal	Error
OUT3	TB141 1-2	Comp. ON Output	OFF(Comp. OFF)	ON(Comp. ON)
OUT4	TB142 5-6	Defrost Output	OFF	ON(Defrosting)
OUT5	TB142 3-4	Mode(Cool) Output	OFF	ON(Cooling)
OUT6	TB142 1-2	Mode(Heat) Output	OFF	ON(Heating)
OUT7	TB143 5-6	Self protection Output	OFF	ON
OUT8	TB143 3-4	Pre-Defrost Output *1	OFF	ON


*1 The output may not be available depending on connected outdoor unit models. Cable length: Maximum 50m


Output specification: Non-voltage switch 1A, 240V AC/30V DC or less 10 mA, 5 V DC or more


*Connect the surge absorber according to the load at site.

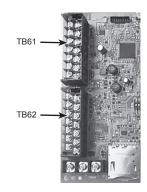

<Photo 4.1.4>

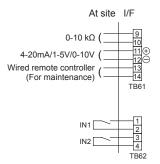

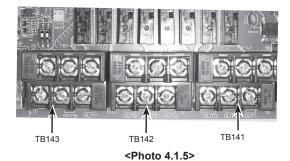

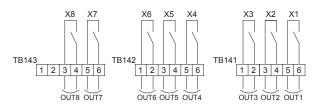

- Notes: External output signals are separated by basic insulation from other circuit
- When intelligent multiple outdoor unit control function is selected, OUT2, OUT3, OUT4, OUT7 and OUT8 will work individually on each interface.
- ⚠ Caution: When 2 or more external outputs are used, the power supply on the output side should be the same.

4.1.6. Wiring specification External output / External input Locally supplied parts

Item	Name	Model and specifications
External output function	External output signal wire	Use sheathed vinyl coated cord or cable.
		Wire type : CV, CVS or equivalent.
		Wire size: Stranded wire 0.5mm² to 1.25mm²
		Solid wire:
	Display lamp, etc.	Non-voltage Contact 220-240V AC (30V DC), 1A or less
		10 mA, 5 V DC or more
External input function	External input signal wire	Use sheathed vinyl coated cord or cable.
		Wire type : CV, CVS or equivalent.
		Wire size : Stranded wire 0.5mm² to 1.25mm²
		Solid wire :
	Switch	Non-voltage "a" contact

4.1.7. Switch setting It is possible to set the following function by setting the switch of the interface controller.

• SW2-1/2-2 : Fixed operation mode

SW2-1	SW2-2	Details
OFF	OFF	Not FIX (Depending on Remote controller setting)
ON	OFF	[Cooling] FIX
OFF	ON	[Heating] FIX
ON	ON	External input (Depending on TB62 3-4)

• SW2-3/2-4/2-5 : Fixed set temperature [For Auto step mode only]

SW2-4	SW2-5	Details
OFF	OFF	Not fixed (Remote controller setting)
OFF	OFF	Cooling 19°C/Heating 17°C FIX
ON	OFF	20°C FIX
ON	OFF	22°C FIX
OFF	ON	24°C FIX
OFF	ON	26°C FIX
ON	ON	28°C FIX
ON	ON	Cooling 30°C/Heating 28°C FIX
	OFF ON ON OFF OFF ON	OFF OFF ON OFF ON OFF ON OFF OFF ON OFF ON ON

Set switches in case of auto step mode.

• SW3-4/3-5 : Thermo OFF point by HEX inlet air temp.

(difference between target temp. and HEX inlet temp.)

[For Auto step mode and supply air temp. control]

Compressor is forced to stop when HEX inlet temp. is close to target temp. to reduce frequent ON/OFF cycling under low heating/cooling load condition.

SW3-4	SW3-5	Differential
OFF	OFF	1°C
OFF	ON	2°C
ON	OFF	3°C *1
ON	ON	4°C

^{*1.} Standard setting: 3°C

· Other DIP switch setting

DIP switch	Function	OFF	ON
SW1-4	HEX inlet temp. thermistor (TH11) *2	WITH	WITHOUT
SW1-5	2-phase temp. thermistor (TH5)	WITH	WITHOUT
SW1-6	Time stamp function on SD card data	N/A	Available *1
SW1-7	Position of target temp. thermistor (TH1)	Supply Air temp. control	Return Air temp. control
SW1-8	Intelligent multiple outdoor units control	Inactive	Active
SW2-6	LEV self control *2	OFF	ON
SW2-7	Ref. liquid temp. thermistor (TH2) *2	WITH	WITHOUT
SW2-8	Target temp. thermistor (TH1)	WITH	WITHOUT

^{*1.} This function is valid only with remote controller.

4.1.8. Before test run

After completing installation and the wiring and piping of the local application and outdoor units, check for refrigerant leakage, looseness in the power supply or control wiring, wrong polarity, and no disconnection of one phase in the supply.

Use a 500-volt megohmmeter to check that the resistance between the power supply terminals and ground is at least $1.0 M\Omega$.

 $\stackrel{\frown}{\triangle}$ Warning: Do not use the system if the insulation resistance is less than 1.0M $\!\Omega$.

 $\underline{\hat{\mathbb{N}}}$ Caution: Do not carry out this test on the control wiring (low voltage circuit) terminals.

^{*2.} This SW must be set to "OFF".

4.2 Using SD memory card

The interface unit is equipped with an SD memory card interface. Using an SD memory card can store operating logs.

(a) For insertion, push on the SD memory card until it clicks into place. (b) For ejection, push on the SD memory card until it clicks.

Note: To avoid cutting fingers, do not touch sharp edges of the SD memory card connector (CN108) on the interface controller.

(b) <Handling precautions> (1) Use an SD memory card that complies with the SD standards. Check that the SD memory card has a logo on it of those shown to the right.

Logos

Capacities

2 GB to 32 GB *1

SD speed classes

- The SD Logo is a trademark of SD-3C, LLC. The miniSD logo is a trademark of SD-3C, LLC. The microSD logo is a trademark of SD-3C, LLC.
- *1 A 2-GB SD memory card stores up to 30 days of operation logs.

- (2) SD memory cards to the SD standards include SD, SDHC, miniSD, micro SD, and microSDHC memory cards. The capacities are available up to 32 GB. Choose that with a maximum allowable temperature of 55°C.
- (3) When the SD memory card is a miniSD, miniSDHC, microSD, or micro SDHC memory card, use an SD memory card converter adapter.
- (4) Before writing to the SD memory card, release the write-protect switch.




- (5) Before inserting or ejecting an SD memory card, make sure to power off the system. If an SD memory card is inserted or ejected with the system powered on, the stored data could be corrupted or the SD memory card be damaged. *An SD memory card is live for a short duration after the system is powered off. Before insertion or ejection wait until the LED lamps on the interface control board are all off.
- (6) The read and write operations have been verified using the following SD memory cards, however, these operations are not always guaranteed as the specifications of these SD memory cards could change.

Manufacturer	Model	Tested in
Verbatim	#44015 0912-61	Mar. 2012
SanDisk	SDSDB-002G-B35	Oct. 2011
Panasonic	RP-SDP04GE1K	Oct. 2011
Arvato	2GB PS8032 TSB 24nm MLC	Jun. 2012
Arvato	2GB PS8035 TSB A19nm MLC	Jul. 2014
Lexar	LSD 8GB ABEUCL6 Rev A	Jul. 2014


Before using a new SD memory card, always check that the SD memory card can be safely read and written to by the interface board.


<How to check read and write operations>

- a) Check for correct wiring of power supply to the system. For more details, refer to section 4.1.
 - (Do not power on the system at this point.)
- b) Insert an SD memory card.
- c) Power on the system.
- d) The LED6 lamp lights if the read and write operations are successfully completed. If the LED6 lamp continues blinking or does not light, the SD memory card cannot be read or written to by the interface controller.
- (7) Make sure to follow the instruction and the requirement of the SD memory card's manufacturer.
- (8) Format the SD memory card if determined unreadable in step (6). This could make it readable.
 - Download an SD card formatter from the following site.
- SD Association homepage: https://www.sdcard.org/home/ (9) Interface board supports FAT file system but not NTFS file system.
- (10) Mitsubishi Electric is not liable for any damages, in whole or in part, including failure of writing to an SD memory card, and corruption and loss of the saved data, or the like. Back up saved data as necessary.
- (11) Do not touch any electronic parts on the interface controller when inserting or ejecting an SD memory card, or else the control board could fail.

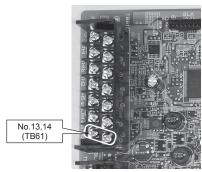


<Fig. 4.3.1>

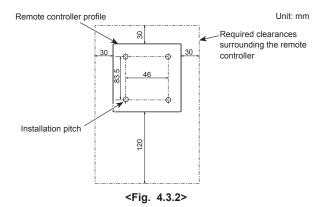

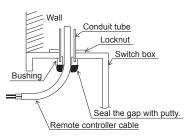

<Fig. 4.3.3>

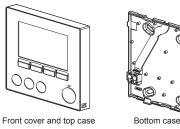

<Fig. 4.3.4>

4.3. Connecting the remote controller

4.3.1. Connect the remote controller cable to Interface unit

Connect the remote controller cable to 13 and 14 on the terminal block (TB61) on the interface controller. <Fig. 4.3.1>

Wiring wire No. × size (mm²): 2 × 0.3 (non polar)

The 5 m wire is attached as an accessory. Max. 500 m

Wiring size must comply with the applicable local and national codes.

Circuit rating: 12V DC

Circuit rating is NOT always against the ground.

Notes:

Wiring for remote controller cable shall be (5 cm or more) apart from power source wiring so that it is not influenced by electric noise from power source wiring. (Do not insert the remote controller cable and power source wiring in the same conduit.) (Refer to Fig. 4.1.1)

When wiring to TB61, use the ring type terminals and insulate them from the cables of adjoining terminals.

4.3.2. Installing the remote controller

- The remote controller can be installed either in the switch box or directly on the wall. Perform the installation properly according to the method.
 - (1) Secure clearances shown in <Fig. 4.3.2> regardless of whether installing the remote controller either directly on the wall or in the switch box.
 - (2) Prepare the following items in the field.

Double switch box

Thin metal conduit

Locknut and bushing

Cable cover

Wall plug

- 2. Drill an installation hole in the wall.
 - Installation using a switch box
 - Drill a hole in the wall for the switch box, and install the switch box in the hole.
 - Fit the conduit tube into the switch box.
 - Direct wall installation
 - Drill a cable access hole and thread the remote controller cable through it.

⚠ Caution:

To prevent entry of dew, water, and insects, seal the gap between the cable and the hole through which the cable is threaded with putty. Otherwise, electric shock, fire, or failure may result.

3. Have the remote controller ready.

Remove the bottom case from the remote controller.

4. Connect the remote controller cable to the terminal block on the bottom case. Modify the remote controller cable as shown in <Fig. 4.3.5>, and thread the cable from behind the bottom case.

Completely thread the cable to the front so that the unsheathed part of the cable cannot be seen behind the bottom case.


Connect the remote controller cable to the terminal block on the bottom case.

- Direct wall installation
- Seal the gap between the cable and the hole through which the cable is threaded.

⚠ Caution


To prevent electric shock or failure, keep the sheath ends or any other foreign objects out of the terminal block.


Do not use ring terminals to connect the wires to the terminal block on the bottom case. The terminals will come in contact with the control board and the front cover and top case, which will result in failure.

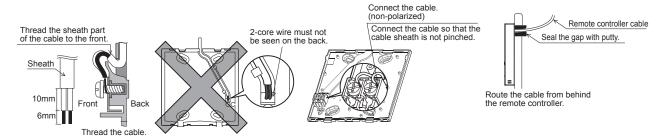


<Fig. 4.3.5>



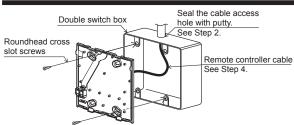

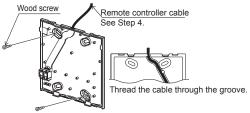


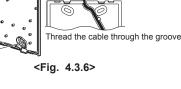

- 5. Install the bottom case.
 - Installation using a switch box
 - · When installing the bottom case in the switch box, secure at least two corners of the switch box with screws.
 - Direct wall installation
 - Thread the cable through the slot provided.
 - · When mounting the bottom case on the wall, secure at least two corners of the remote controller with screws.
 - To prevent the bottom case from lifting, use top-left bottom-right corners of the remote controller (viewed from the front) to secure the bottom case to the wall with wall plugs or the like.

⚠ Caution:

To avoid causing deformation or cracks to the remote controller, do not overtighten the screws and make an additional installation hole(s).

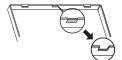


<Fig. 4.3.7>

6. Cut out the cable access hole.

7. Plug the lead wire cable into the top case.

- Direct wall installation
 - Cut out the knockout hole (indicated with grey in <Fig. 4.3.7>) in the front cover by knife or nipper.
 - Thread the remote controller cable from the slot behind the bottom case through this access hole.

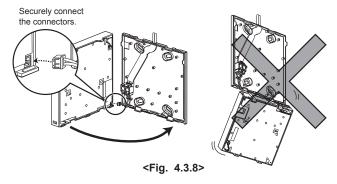

controller board from the top case.


Plug the lead wire cable coming from the bottom case into the top case.

After the cable is plugged into the top case, do not hang the top case as shown in <Fig. 4.3.8>. Otherwise, the remote controller cable could sever, which could cause malfunction to the remote controller.


8. Fit the lead wires into the clamps.

♠ Caution:


Hold the wires in place with clamps to prevent excessive strain from being applied on the terminal block and causing cable breakage.

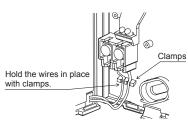

<Fig. 4.3.9>

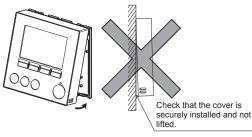

<Fig. 4.3.10>

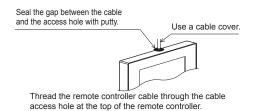

<Fig. 4.3.11>


9. Fit the top case and the front cover onto the bottom case.

The top case assembly (fitted with the front cover at factory shipment) has two tabs on top. Hook the tabs onto the bottom case and snap the top case onto the bottom case into place. Check that the cover is securely installed.

⚠ Caution:

When the top case is correctly attached to the bottom case a click is heard. If the front cover is not clicked into place it may fall off.

- Direct wall installation (when routing the remote controller cable along the wall surface)
- Thread the remote controller cable through the cable access hole at the top of the remote controller.
- Seal the gap between the cable and the access hole with putty.
- Use a cable cover.

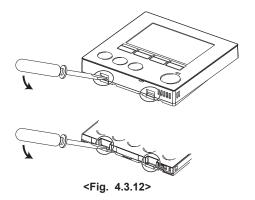

- Disassembling the top case and the front cover
- (1) Remove the front cover.

Insert a flat head screwdriver into either of two open slots at the bottom of the remote controller and move the screwdriver handle downward as shown. The engagement of the tabs will be released. Then pull the front cover toward the front to remove the front cover.

(2) Remove the top case.

Insert a flat head screwdriver into either of two open slots at the bottom of the remote controller. The subsequent procedure is the same as that of the front cover

⚠ Caution:

Use a 5 mm- flat head screwdriver. Do not turn the screwdriver forcibly while placing the blade in the slots. Doing so could break the covers.

■ Disposal of the Unit



Note: This symbol mark is for EU countries only.

This symbol mark is according to the directive 2012/19/EU Article 14 Information for users and Annex IX, and/or to the directive 2006/66/EC Article 20 Information for end-users and Annex II.

In the European Union there are separate collection systems for used electrical and electronic products, batteries and accumulators. Please dispose of this equipment, batteries and accumulators correctly at your lo-

cal community waste collection/recycling centre. Contact your local Mitsubishi Electric dealer for country-specific details on

Please, help us to conserve the environment we live in.

<Figure 5.1>

Your Mitsubishi Electric heating system products have been manufactured with high quality materials and components which can be recycled and/or reused. The symbol in Figure 5.1 means that electrical and electronic equipment, batteries and accumulators at the end of their life, should be disposed of separately from your household waste.

If a chemical symbol is printed beneath the symbol (Figure 5.1), this chemical symbol means that the battery or accumulator contains a heavy metal at a certain concentration. This is indicated as follows:

Hg: mercury (0.0005%), Cd: (cadmium (0.002%), Pb: lead (0.004%)

5.1. Safety precautions

FOR USER

- ▶ Before installing the unit, make sure you read all the "Safety Precau-
- ► The "Safety Precautions" provide very important points regarding safety. Make sure you follow them.
- ▶ Please report to or take consent by the supply authority before connection to the system.

Symbols used in the text

⚠ Warning:

Describes precautions that should be observed to prevent danger of injury or death to the user.

♠ Caution:

Describes precautions that should be observed to prevent damage to the

Symbols used in the illustrations

Indicates a part which must be grounded.

⚠ Warning:

- The unit must not be installed by the user. Ask the dealer or an authorized company to install the unit. If the unit is installed improperly, electric shock or fire may result.
- Do not stand on, or place any items on the unit.
- Do not splash water over the unit and do not touch the unit with wet hands. An electric shock may result.
- Do not spray combustible gas close to the unit. Fire may result.
- Do not place a gas heater or any other open-flame appliance where it will be exposed to the air discharged from the unit. Incomplete combustion may result.
- Do not remove the front panel or the fan guard from the outdoor unit when it is running.
- When you notice exceptionally abnormal noise or vibration, stop operation, turn off the power switch, and contact your dealer.

- Never insert fingers, sticks etc. into the intakes or outlets.
- If you detect odd smells, stop using the unit, turn off the power switch and consult your dealer. Otherwise, a breakdown, electric shock or fire may
- If the supply cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the ap-
- If the refrigeration gas blows out or leaks, stop the operation of the air conditioner, thoroughly ventilate the room, and contact your dealer.
- Do not install in location that is hot or humid for long periods of time.

⚠ Caution:

- Do not use any sharp object to push the buttons, as this may damage the remote controller.
- Never block or cover the interface unit's intakes or outlets.

Disposing of the unit


When you need to dispose of the unit, consult your dealer.

5.2. Names and functions of controller components


Display

The main display can be displayed in two different modes: "Full" and "Basic." The factory setting is "Full."

Full mode

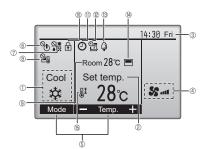

Basic mode

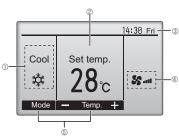

* All icons are displayed for explanation.

①Operation mode

Interface unit operation mode appears here

@Preset temperature

Preset temperature appears here. It is valid only when auto step mode is selected.

3Clock

Current time appears here.

4 Fan speed

This function is not available.

⑤Button function guide

Functions of the corresponding buttons appear here.

6 %

Appears when the ON/OFF operation is centrally controlled.

Appears when the operation mode is centrally controlled.

■ 8 **2**;

Appears when the preset temperature is centrally controlled.

Current room temperature appears here.

Appears when the On/Off timer function is enabled.

® %

Appears when the Weekly timer is enabled.

13 🗳

Appears while power is ON.

(4)


Appears when the built-in thermistor on the remote controller is activated to monitor the room temperature (9).

appears when the thermistor on the interface unit is activated to monitor the room temperature.

■ ⑤ **』**Ĭ

Appears when the preset temperature range is restricted.

Controller interface

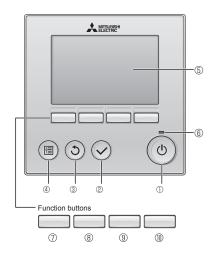

· When the backlight is off, pressing any button turns the backlight on and does not perform its function. (except for the ON/OFF button) Most settings (except ON/OFF, mode, fan speed, temperature) can be made from the Menu screen.

① ON/OFF button

Press to turn ON/OFF the interface unit.

② SELECT button

Press to save the setting.

③ RETURN button

Press to return to the previous screen

MENU button

Press to bring up the Main menu.

⑤ Backlit LCD


Operation settings will appear. When the backlight is off, pressing any button turns the backlight on and it will stay lit for a certain period of time depending on the screen.

6 ON/OFF lamp

This lamp lights up in green while the unit is in operation. It blinks while the remote controller is starting up or when there is an error.

The functions of the function buttons change depending on the screen. Refer to the button function guide that appears at the bottom of the LCD for the functions the bottom or the LCD for the functions they serve on a given screen. When the system is centrally controlled, the button function guide that corresponds to the locked button will not appear.

Main display

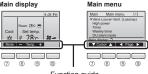

Main display: Press to change the operation

Main menu: Press to move the cursor down.

® Function button F2

⑦ Function button F1

Main display: Press to decrease temperature. Main menu: Press to move the cursor up.

9 Function button F3

Main display: Press to increase temperature. Main menu: Press to go to the previous page.

■ ® Function button F4

Main display: Not available Main menu: Press to go to the next page.

5.3. Initial settings

From the Main display, press "MENU" button, select "Initial setting", and make the remote controller settings on the screen that appears.

- · Main/Sub
- Clock
- Main display
- Contrast
- Display details
- -Clock
- -Temperature
- -Room temp.
- -Auto mode (Auto cooling/heating operation)
- Auto mode (Auto cooling/heating operation)
- · Administrator password
- · Language selection

(1) Main/Sub setting

When connecting two remote controllers, one of them needs to be designated as a sub controller.

(2) Clock setting

Clock setting is necessary for time display, SD card data logging, weekly timer, timer setting and error history.

Make sure to perform clock setting when the unit is used for the first time or has not used for a long time.

(3) Main display setting

Use the F3 or F4 button to select the display mode "Full" or "Basic." (The factory setting is "Full.")

(4) Remote controller display details setting

Make the settings for the remote-controller-related items as necessary. Press the SELECT button to save the changes.

[1] Clock display


- [2] Temperature unit setting
- [3] Room temperature display
- [4] Auto mode (Auto cooling/heating operation) display setting (The factory setting is "Yes".)
- Yes: "AUTO COOL" or "AUTO HEAT" is displayed during Auto mode (Auto cooling/ heating operation).
- · No: Only "AUTO" is displayed during Auto mode (Auto cooling/heating operation).

(5) Auto mode (Auto cooling/heating operation) setting

- Yes: The Auto mode (Auto cooling/heating operation) can be selected in the operation mode setting.
- No: The Auto mode (Auto cooling/heating operation) cannot be selected in the operation mode setting. (The factory setting is "Yes".)


(6) Administrator password setting

- The initial administrator password is "0000." Change the default password as necessary to prevent unauthorized access. Have the password available for those who need it.
- If you forget your administrator password, you can initialize the password to the default password "0000" by pressing and holding the F1 and F2 buttons simultaneously for three seconds on the administrator password setting screen.
- The administrator password is required to make the settings for the following items.
 - Timer setting
- · Weekly timer setting
- · Restriction setting

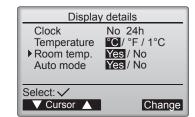


5.4. Basic operations

■ Operation mode icons

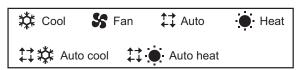

■ Turning ON and selecting operation mode

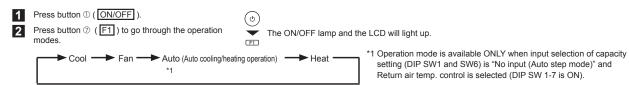

■ Preset temperature setting

Press button (a) ([F2]) to decrease the preset temperature. Press button (a) ([F3]) to increase the preset temperature. * Pressing once changes the value by 1°C (1°F).

Operation mode	Preset temperature range
Cool (Supply air temp. control)	12 - 30 °C (54 - 87 °F)
Cool (Return air temp. control)	19 - 30 °C (67 - 87 °F)
Heat	17 - 28 °C (63 - 83 °F)
Auto cooling/heating operation	19 - 28 °C (67 - 83 °F)
Fan	Not settable

* The temperature range restriction setting will be applied preferentially, if any. If the setting value is outside of the range, a message "Temp. range locked" will appear.

■ Automatic cooling/heating operation

- 1 Press button ① (ON/OFF).
- Press button ② (F1) to display the operation mode "Auto".




When the room temperature is higher than the preset temperature, cooling operation starts

When the room temperature is lower than the preset temperature, heating operation starts.

If "Display/non-display of COOL/HEAT during AUTO mode" has been set to "Non-display" while making the initial settings, only "Auto" will be displayed.

5.5. Troubleshooting

When an error occurs, the following screen will appear.
Check the error status, stop the operation, and consult your dealer.

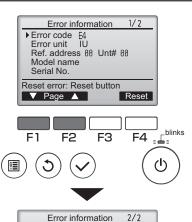

Contact information

Reset error: Reset button

Error code, error unit, refrigerant address, unit model name, and serial number will appear.

The model name and serial number will appear only if the information have been registered.

Press button $\ \ \bigcirc \ \$ (F1) or $\ \ \ \$ (F2) to go to the next page.

Contact information (dealer's phone number) will appear if the information have been registered.

OPTIONAL PARTS

OUTDOOR UNIT

^{*} The current operation mode ("Auto cool" or "Auto heat") will be displayed after the mode is determined.

5.6. Timer and Weekly timer

The settings for Timer and Weekly timer operation can be made from the remote controller.

Press button 0 ($\boxed{\text{MENU}}$) to go to the Main menu, and move the cursor to the desired setting with button 0 ($\boxed{\text{F1}}$) or 0 ($\boxed{\text{F2}}$).

■ Timer

• On/Off timer

Operation On/Off times can be set in 5-minute increments.

· Auto-Off timer

Auto-Off time can be set to a value from 30 to 240 in 10-minute increments.

■ Weekly timer

Operation On/Off times for a week can be set. Up to eight operation patterns can be set for each day.

5.7. Service

■ Maintenance password setting

- The initial administrator password is "9999". Change the default password as necessary to prevent unauthorized access. Have the password available for those who need it.
- If you forget your administrator password, you can initialize the password to default password "9999" by pressing and holding the F1 and F2 buttons simultaneously for three seconds on the maintenance password setting screen

5.8. Others

The following functions are NOT available.

(1) In main menu (Press button 4 (MENU), main menu appears.)

- "Vane Louver Vent (Lossnay)"
- "High power"
- "OU silent mode"
- In "Energy saving" menu, "schedule" function is NOT available.
- "Filter information"
- "Maintenance"
- In "Service" menu, "Drain pump test run", "Check" functions are NOT available, except for "Request code" in "Check" function.



6. Service and Maintenance


■ Error Codes

Code	Error	Action
	Target air temperature thermistor (TH1) failure	Check connection of thermistor.
		Check resistance value of thermistor.
D4		0°C 15.0 kΩ
P1		10°C 9.6 kΩ
		20°C 6.3 kΩ
		30°C 4.3 kΩ
	Ref. liquid temperature thermistor (TH2) failure	Check connection of thermistor.
P2		Check resistance value of thermistor. For characteristics, refer to (P1) above.
P6	Freezing/ overheating protection	Check local system if air flow is reduced.
PO		Check outdoor fan motor.
	2-Phase temperature thermistor (TH5) failure	Check connection of thermistor.
P9		Check resistance value of thermistor. For characteristics, refer to (P1) above.
	Communication failure between remote controller	Check connection cable for damage or loose connections.
E0 - E5	and interface controller board	Check system configuration of remote controller. (Refer to "3. System")
	Communication failure between interface	Check that outdoor unit has not been turned off.
E6 - E7	unit and outdoor unit	Check connection cable for damage or loose connections.
		Refer to outdoor unit service manual.
Fb	Interface controller board failure	Replace interface controller board.
	Abnormal refrigerant circuit	Replace the 4-way valve.
PL		Check refrigerant pipes for disconnection or leakage.
		Refer to outdoor unit service manual.
	HEX inlet temperature thermistor (TH11) failure	Check connection of thermistor.
PU		Check resistance value of thermistor. For characteristics, refer to (P1) above.
"FF" or "Cystom orrer 1"	DIP SW setting error (Intelligent multiple outdoor unit control)	Set DIP SW 1-8 to "OFF", if system is single outdoor unit control.
"EE" or "System error 1"		Connect between interface units and set Ref. address of each outdoor unit. (See "3. System".)
System error 2	Controller board is incompatible with this model.	Install interface controller board that is compatible with PAC-IF013B-E or PAC-SIF013B-E.
System error 3	Incompatible controller board is mixed when multiple interface units are connected.	Check all interface controller boards are compatible with PAC-IF013B-E or PAC-SIF013B-E.
System error 4	DIP SW 1-8 of some interface units are ON and those of the other interface units are OFF.	Set DIP SW 1-8 of all interface units to ON, or SW1-8 of all interface units to OFF.
	2 or more Interface units are connected with one remote controller and manual step mode is	Set SW1-8 of all interface units to ON if system is intelligent multiple outdoor unit control.
"System error 5" or "System error 6"	selected, but DIP SW1-8 are OFF.	Disconnect between interface units and connect remote controllers separately to each interface unit, if manual step mode is selected and intelligent multiple outdoor unit control is not selected.
System error 11	7 or more interface units are connected. (Up to 6 interface units can be connected.)	Connect 6 or less interface units in one system.
"6831" or "Please wait" remains displayed on the remote controller for more than 6 minutes.	Remote controller is incompatible with this model.	Remote controller included in the package of PAC-IF013B-E is exclusive for PAC-IF013B-E or PAC-SIF013B-E. Use the remote controller that has a drawing number "BH00J360" on the bottom.

7. Requirement on local design

- This interface is to connect Mr. Slim inverter outdoor unit of MITSUBISHI ELECTRIC to local applications. Please check the following when designing the local system.
- MITSUBISHI ELECTRIC does not take any responsibility on the local system design. Therefore, MITSUBISHI ELECTRIC does NOT take any responsibility on the failure (including outdoor unit) caused by local AHU and system design. Also R32 is flammable refrigerant, and the fire safety warranty for the whole system (including outdoor unit) must be done by your side when using R32 refrigerant.
- Conformity of regulations and laws must be confirmed on the system by your side.
- See the document "AIR-HANDLING UNIT (AHU) DESIGN GUIDELINE" for more information. To get it, contact your dealer.

Figure

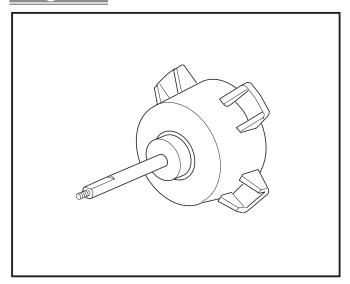

Descriptions

•When installing an outdoor unit indoors, an exhaust air duct is necessary. This product is a fan motor for increasing the static pressure of the fan used in that case.

Applicable Models

- PUHZ-ZRP100VKA3
- PUHZ-ZRP125VKA3
- PUHZ-ZRP140VKA3
- PUHZ-ZRP100YKA3R1
- PUHZ-ZRP125YKA3R1
- PUHZ-ZRP140YKA3R1


[R410A type]

Specifications

Motor name	SIC-88FWJ-D8200-1	
Pole number	10 P	
Rated output	200 W	
Rated voltage	Vm=280 V	
Rated torque	2.39 N·m [24.4 kgf·cm]	
Rated rotation speed	800 min ^{- 1}	
Insulation	Class E	
Time rating	Cont.	
Product weight	About 3.4 kg	

Dimensions

Unit: mm

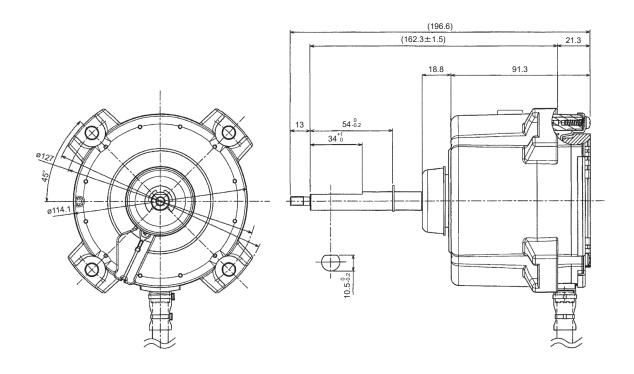


OUTDOOR UNIT

This High-static-pressure Fan Motor is designed to be installed into a system with outdoor unit air volume of 112m³/min and an air outlet static pressure of 30Pa.

Please check the system before installation.


1. Accessory

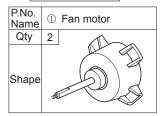

2. Requirements of installation space


[Unit: mm]

(1) One unit installation:

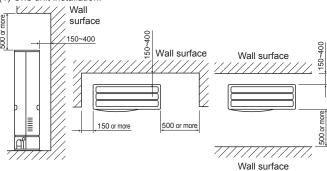

(2) Multiple unit installation:

Note: Installation of multiple units in series must be no more than five units.

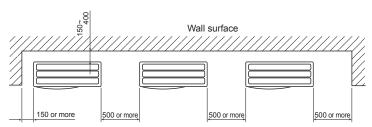

3. Procedure for attaching fan motor


- (1) Remove the service panel. (See Fig. 1)
- (2) Remove the wire grille fixing screws (4 for front/ 5 x 12), then slide the wire grille upward to remove it. (See Fig. 1) (For the each fan motor on top and under)
- (3) Remove the screw of nut (1 for front/ M6), then slide the propeller fan forward to remove it. (For the each fan motor on top and under)
- (4) Disconnect the connectors, CNF1 (WHT) and CNF2 (WHT) on the controller circuit board in the electrical parts box. (See Fig. 4)
- (5) Loosen the clamp for the lead wire on motor support and separator.
- (6) Release the lead wire from the hole on separator.
- (7) Remove the fan motor fixing screw (4 for front/ 5 x 20) to remove the fan motor. (For the each fan motor on top and under)
- (8) Fix the fan motor ① with the screws removed in (7).
- (9) Reinstall the other parts by reverse procedure of (1) to (6).

Note:

- Set the tightening torque to the value on the table 1.
- Attach the nuts using adhesive. (Recommend Three Bond 1401C)
- Make sure to hang the fan motor lead wire to the hook of the motor support. (See Fig 3.)

Table 1

	Torque
Nut	5.7±0.3N·m
Screws	3.5±0.2N·m

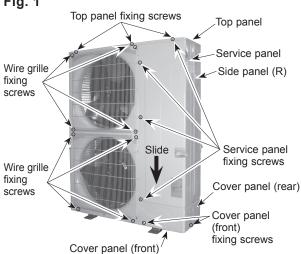



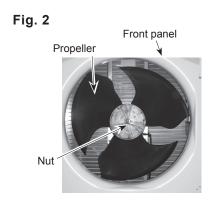



Fig. 3

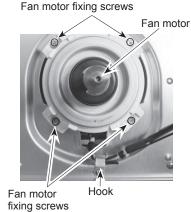

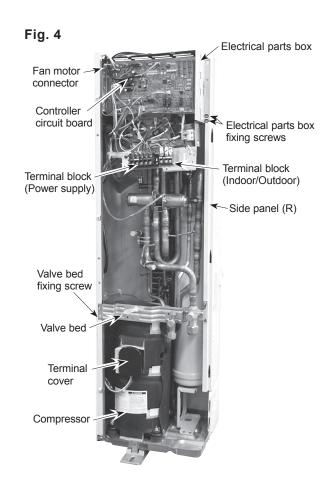

4. Switch setting

Please turn on the SW9-1 on the outdoor control board.

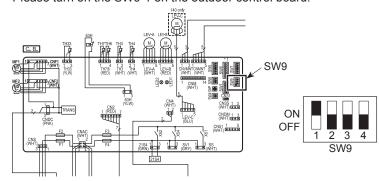

Photo



Descriptions

- •This adapter connects the relay circuit and the outdoor unit control board to enable low noise mode or demand function using external input.
- •All parts besides the wires for connection (timer, switch, relay, etc.) must be procured locally.

Applicable Models

- PUZ-ZM Series
- PUHZ-ZRP Series
- PUZ-M Series
- PUHZ-P Series
- PUZ-SM Series
- PUHZ-SHW Series
- PUHZ-SP Series

[R32 type]


[R410A type]

Specifications


Function	Inputs signal of low noise mode or demand function to the outdoor unit control board.
Input signal	No-voltage contact (ON/OFF level signal)
Connector	3P (connector to CNDM, CN3D, CN3S on outdoor unit control board)
Cable type	3-wire cable, for extension: sheathed vinyl cord or cable (0.5 to 1.25mm²)
Cable length	3m (max, 10m when extended locally)

Dimensions

Unit: mm

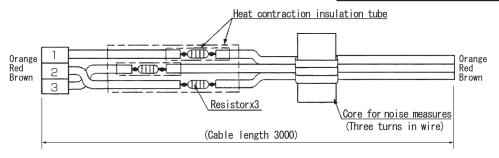

How to Use / How to Instal

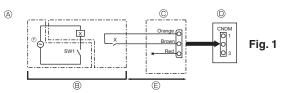

- A Circuit diagram example (low noise mode)
- ® On-site arrangement
- © External input adapter (PAC-SC36NA)

- Outdoor unit control board
- Max. 10 m © Power supply for relay


Low noise mode (on-site modification) (Fig. 1)

By performing the following modification, operation noise of the outdoor unit can be reduced by about 3-4 dB.

The low noise mode will be activated when a commercially available timer or the contact input of an ON/OFF switch is added to the CNDM connector (option) on the control board of the outdoor unit.

- The ability varies according to the outdoor temperature and conditions, etc
- ① Complete the circuit as shown when using the external input adapter (PAC-SC36NA). (Option) ② SW1 ON: Low noise mode
- SW1 OFF: Normal operation

PUHZ-ZRP / P / SP / SHW PUZ-ZM / M / SM (D)

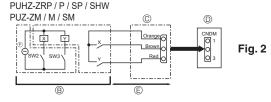

- (a) Circuit diagram example (Demand function) (b) External input adapter (PAC-SC36NA)
- On-site arrangement
- X. Y: Relay

- Outdoor unit control board
- © Max. 10 m
- Power supply for relay

Demand function (on-site modification) (Fig. 2)

By performing the following modification, energy consumption can be reduced to 0 -100% of the normal consumption.

The demand function will be activated when a commercially available timer or the contact input of an ON/OFF switch is added to the CNDM connector (option) on the control board of the outdoor unit.

- ① Complete the circuit as shown when using the external input adapter (PAC-SC36NA). (Option) ② By setting SW7-1 on the control board of the outdoor unit, the energy
 - consumption (compared to the normal consumption) can be limited as shown below.

PUHZ-ZRP / P / SP / SHW PUZ-ZM / M / SM

)	SW7-1	SW2	SW3	Energy consumption
	ON	OFF	OFF	100%
		ON	OFF	75%
		ON	ON	50%
		OFF	ON	0%(Stop)