



AIR CONDITIONERS CITY MULTI

Models PURY-P400, P500YMF-C

Service Handbook

CITY MULTI

Contents

| | | |
|---|---------------------------------------------------------------------------------------|-----|
| ① | PRECAUTIONS FOR DEVICES THAT USE R407C REFRIGERANT | 3 |
| | [1] Storage of Piping Material | 4 |
| | [2] Piping Machining | 5 |
| | [3] Brazing | 6 |
| | [4] Airtightness Test | 7 |
| | [5] Vacuuming | 7 |
| | [6] Charging of Refrigerant | 8 |
| | [7] Dryer | 8 |
| ② | COMPONENT OF EQUIPMENT | 9 |
| | [1] Appearance of Components | 9 |
| | [2] Refrigerant Circuit Diagram and Thermal Sensor | 17 |
| | [3] Electrical Wiring Diagram | 20 |
| | [4] Standard Operation Data | 24 |
| | [5] Function of Dip SW and Rotary SW | 26 |
| ③ | TEST RUN | 29 |
| | [1] Before Test Run | 29 |
| | [2] Test Run Method | 33 |
| ④ | GROUPING REGISTRATION OF INDOOR UNITS WITH M-NET REMOTE CONTROLLER | 34 |
| ⑤ | CONTROL | 40 |
| | [1] Control of Outdoor Unit | 40 |
| | [2] Control of BC Controller | 49 |
| | [3] Operation Flow Chart | 50 |
| | [4] List of Major Component Functions | 56 |
| | [5] Resistance of Temperature Sensor | 59 |
| ⑥ | REFRIGERANT AMOUNT ADJUSTMENT | 60 |
| | [1] Operating Characteristics and Refrigerant Amount | 60 |
| | [2] Adjustment and Judgement of Refrigerant Amount | 60 |
| | [3] Refrigerant Volume Adjustment Mode Operation | 62 |
| ⑦ | TROUBLESHOOTING | 66 |
| | [1] Principal Parts | 66 |
| | [2] BC Controller Disassembly Procedure | 99 |
| | [3] Self-diagnosis and Countermeasures Depending on the Check Code Displayed | 104 |
| | [4] LED Monitor Display | 121 |
| ⑧ | PREPARATION, REPAIRS AND REFRIGERANT REFILLING WHEN REPAIRING LEAKS | 141 |
| | [1] Location of leaks: Extension piping or indoor units (when cooling) ... | 141 |
| | [2] Location of leaks: Outdoor unit (Cooling mode) | 142 |
| | [3] Location of leaks: Extension piping or indoor units (Heating mode) .. | 142 |
| | [4] Location of leaks: Outdoor unit (when heating) | 143 |
| ⑨ | CHECK THE COMPOSITION OF THE REFRIGERANT (PURY-P200-250YMF-C only) | 144 |

Safety precautions

Before installation and electric work

- ▶ Before installing the unit, make sure you read all the “Safety precautions”.
- ▶ The “Safety precautions” provide very important points regarding safety. Make sure you follow them.
- ▶ This equipment may not be applicable to EN61000-3-2: 1995 and EN61000-3-3: 1995.
- ▶ This equipment may have an adverse effect on equipment on the same electrical supply system.
- ▶ Please report to or take consent by the supply authority before connection to the system.

Symbols used in the text





Warning:

Describes precautions that should be observed to prevent danger of injury or death to the user.

Caution:

Describes precautions that should be observed to prevent damage to the unit.

Symbols used in the illustrations

-  : Indicates an action that must be avoided.
-  : Indicates that important instructions must be followed.
-  : Indicates a part which must be grounded.
-  : Beware of electric shock (This symbol is displayed on the main unit label.) <Color: Yellow>

Warning:

Carefully read the labels affixed to the main unit.

Warning:

- **Use the specified cables for wiring. Make the connections securely so that the outside force of the cable is not applied to the terminals.**
 - Inadequate connection and fastening may generate heat and cause a fire.
- **Have all electric work done by a licensed electrician according to “Electric Facility Engineering Standard” and “Interior Wire Regulations” and the instructions given in this manual and always use a special circuit.**
 - If the power source capacity is inadequate or electric work is performed improperly, electric shock and fire may result.
- **Securely install the cover of control box and the panel.**
 - If the cover and panel are not installed properly, dust or water may enter the outdoor unit and fire or electric shock may result.
- **After completing service work, make sure that refrigerant gas is not leaking.**
 - If the refrigerant gas leaks and is exposed to a fan heater, stove, oven, or other heat source, it may generate noxious gases.
- **Do not reconstruct or change the settings of the protection devices.**
 - If the pressure switch, thermal switch, or other protection device is shorted and operated forcibly, or parts other than those specified by Mitsubishi Electric are used, fire or explosion may result.

1 PRECAUTIONS FOR DEVICES THAT USE R407C REFRIGERANT

Caution

Do not use the existing refrigerant piping.

- The old refrigerant and refrigerator oil in the existing piping contains a large amount of chlorine which may cause the refrigerator oil of the new unit to deteriorate.

Use refrigerant piping made of phosphorus deoxidized copper and copper alloy seamless pipes and tubes". In addition, be sure that the inner and outer surfaces of the pipes are clean and free of hazardous sulphur, oxides, dust/dirt, shaving particles, oils, moisture, or any other contaminant.

- Contaminants on the inside of the refrigerant piping may cause the refrigerant residual oil to deteriorate.

Store the piping to be used during installation indoors and keep both ends of the piping sealed until just before brazing. (Store elbows and other joints in a plastic bag.)

- If dust, dirt, or water enters the refrigerant cycle, deterioration of the oil and compressor trouble may result.

Use ester oil, ether oil or alkylbenzene (small amount) as the refrigerator oil to coat flares and flange connections.

- The refrigerator oil will degrade if it is mixed with a large amount of mineral oil.

Use liquid refrigerant to seal the system.

- If gas refrigerant is used to seal the system, the composition of the refrigerant in the cylinder will change and performance may drop.

Do not use a refrigerant other than R407C.

- If another refrigerant (R22, etc.) is used, the chlorine in the refrigerant may cause the refrigerator oil to deteriorate.

Use a vacuum pump with a reverse flow check valve.

- The vacuum pump oil may flow back into the refrigerant cycle and cause the refrigerator oil to deteriorate.

Do not use the following tools that have been used with conventional refrigerants.

(Gauge manifold, charge hose, gas leak detector, reverse flow check valve, refrigerant charge base, vacuum gauge, refrigerant recovery equipment)

- If the conventional refrigerant and refrigerator oil are mixed in the R407C, the refrigerant may deteriorate.
- If water is mixed in the R407C, the refrigerator oil may deteriorate.
- Since R407C does not contain any chlorine, gas leak detectors for conventional refrigerants will not react to it.

Do not use a charging cylinder.

- Using a charging cylinder may cause the refrigerant to deteriorate.

Be especially careful when managing the tools.

- If dust, dirt, or water gets in the refrigerant cycle, the refrigerant may deteriorate.

If the refrigerant leaks, recover the refrigerant in the refrigerant cycle, then recharge the cycle with the specified amount of the liquid refrigerant indicated on the air conditioner.

- Since R407C is a nonazeotropic refrigerant, if additionally charged when the refrigerant leaked, the composition of the refrigerant in the refrigerant cycle will change and result in a drop in performance or abnormal stopping.



[1] Storage of Piping Material

(1) Storage location



Store the pipes to be used indoors. (Warehouse at site or owner's warehouse)
Storing them outdoors may cause dirt, waste, or water to infiltrate.

(2) Pipe sealing before storage

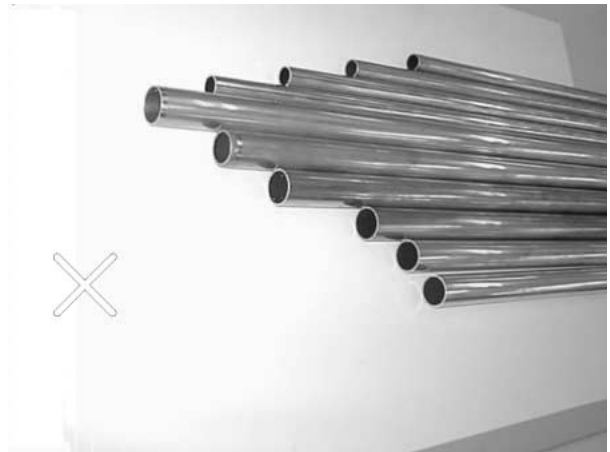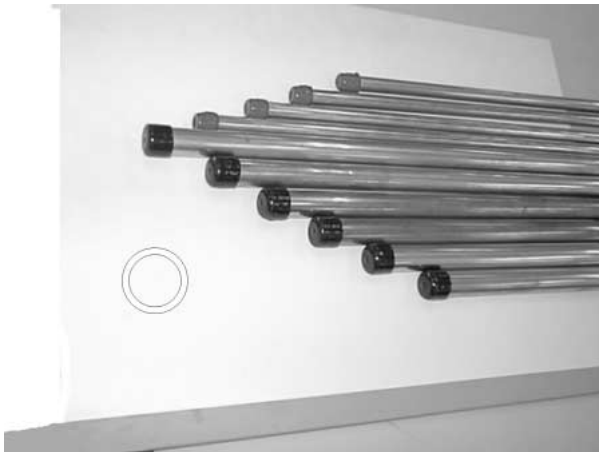

Both ends of the pipes should be sealed until immediately before brazing.
Wrap elbows and T's in plastic bags for storage.

* The new refrigerator oil is 10 times more hygroscopic than the conventional refrigerator oil (such as Suniso). Water infiltration in the refrigerant circuit may deteriorate the oil or cause a compressor failure. Piping materials must be stored with more care than with the conventional refrigerant pipes.

[2] Piping Machining

Use ester oil, ether oil or alkylbenzene (small amount) as the refrigerator oil to coat flange connections.



Use only the necessary minimum quantity of oil !

Reason :

1. The refrigerator oil used for the equipment is highly hygroscopic and may introduce water inside.

Notes :


- Introducing a great quantity of mineral oil into the refrigerant circuit may also cause a compressor failure.
- Do not use oils other than ester oil, ether oil or alkylbenzene.

[3] Brazing


No changes from the conventional method, but special care is required so that foreign matter (ie. oxide scale, water, dirt, etc.) does not enter the refrigerant circuit.

Example : Inner state of brazed section

When non-oxide brazing was not used

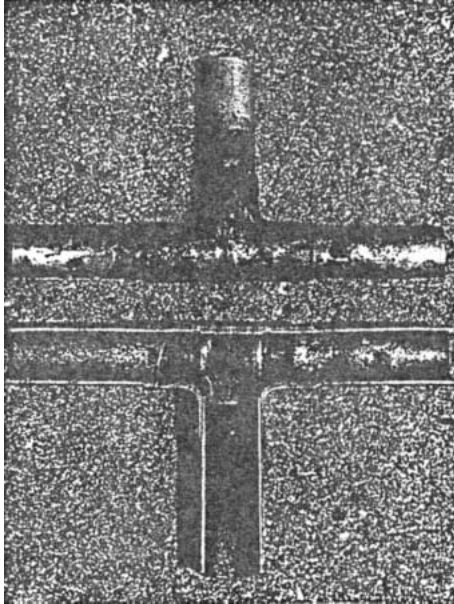

When non-oxide brazing was used

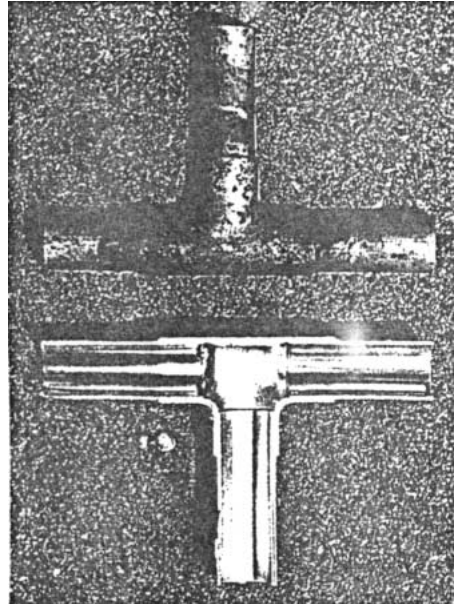

Items to be strictly observed :

1. Do not conduct refrigerant piping work outdoors on a rainy day.
2. Apply non-oxide brazing.
3. Use a brazing material (Bcup-3) which requires no flux when brazing between copper pipes or between a copper pipe and copper coupling.
4. If installed refrigerant pipes are not immediately connected to the equipment, then braze and seal both ends of them.

Reasons :


1. The new refrigerant oil is 10 times more hygroscopic than the conventional oil. The probability of a machine failure if water infiltrates is higher than with conventional refrigerant oil.
2. A flux generally contains chlorine. A residual flux in the refrigerant circuit may generate sludge.

Note :


- Commercially available antioxidants may have adverse effects on the equipment due to its residue, etc. When applying non-oxide brazing, use oxygen free nitrogen (OFN).

[4] Airtightness Test

No changes from the conventional method. Note that a refrigerant leakage detector for R22 cannot detect R407C leakage.

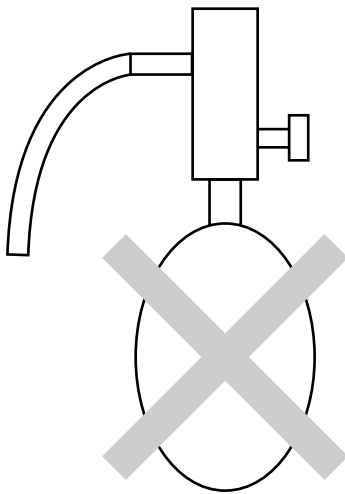

Halide torch

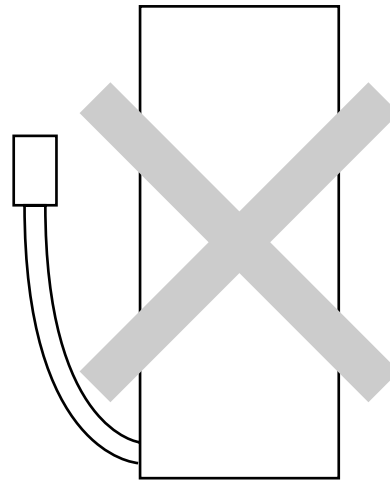

R22 leakage detector

Items to be strictly observed :

1. Pressurize the equipment with nitrogen up to the design pressure and then judge the equipment's airtightness, taking temperature variations into account.
2. When investigating leakage locations using a refrigerant, be sure to use R407C.
3. Ensure that R407C is in a liquid state when charging.

Reasons :

1. Use of oxygen as the pressurized gas may cause an explosion.
2. Charging with R407C gas will lead the composition of the remaining refrigerant in the cylinder to change and this refrigerant can then not be used.

Note :

- A leakage detector for R407C is sold commercially and it should be purchased.

[5] Vacuuming

1. Vacuum pump with check valve

A vacuum pump with a check valve is required to prevent the vacuum pump oil from flowing back into the refrigerant circuit when the vacuum pump power is turned off (power failure).

It is also possible to attach a check valve to the actual vacuum pump afterwards.

2. Standard degree of vacuum for the vacuum pump

Use a pump which reaches 0.5 Torr (500 MICRON) or below after 5 minutes of operation.

In addition, be sure to use a vacuum pump that has been properly maintained and oiled using the specified oil. If the vacuum pump is not properly maintained, the degree of vacuum may be too low.

3. Required accuracy of the vacuum gauge

Use a vacuum gauge that can measure up to 5 Torr. Do not use a general gauge manifold since it cannot measure a vacuum of 5 Torr.

4. Evacuating time

- Evacuate the equipment for 1 hour after -755 mmHg (5 Torr) has been reached.
- After evacuating, leave the equipment for 1 hour and make sure that the vacuum is not lost.

5. Operating procedure when the vacuum pump is stopped


In order to prevent a backflow of the vacuum pump oil, open the relief valve on the vacuum pump side or loosen the charge hose to draw in air before stopping operation.

The same operating procedure should be used when using a vacuum pump with a check valve.


[6] Charging of Refrigerant

R407C must be in a liquid state when charging, because it is a non-azeotropic refrigerant.

For a cylinder with a syphon attached

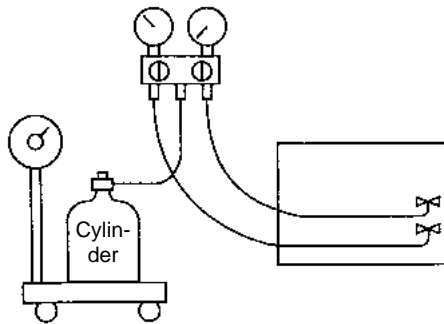


For a cylinder without a syphon attached

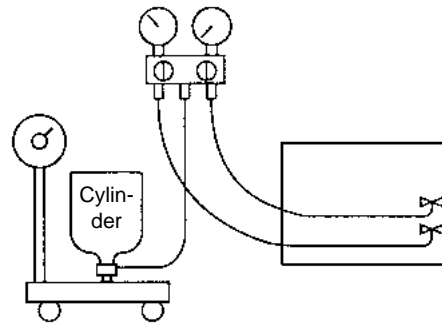


Cylinder color identification

R407C-Gray
R410A-Pink

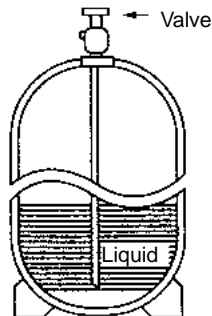

Charged with liquid refrigerant

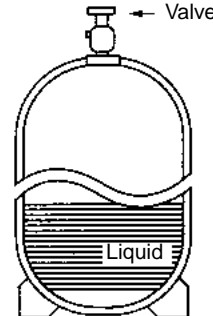

Reasons :

1. R407C is a mixture of 3 refrigerants, each with a different evaporation temperature. Therefore, if the equipment is charged with R407C gas, then the refrigerant whose evaporation temperature is closest to the outside temperature is charged first while the rest of refrigerants remain in the cylinder.

Note :

- In the case of a cylinder with a syphon, liquid R407C is charged without turning the cylinder up side down. Check the type of cylinder before charging.

[7] Dryer

1. Replace the dryer when the refrigerant circuit is opened (Ex. Change the compressor, full gas leakage). Be sure to replace the dryer with a CITY MULTI Series Y (For use with R407C).

If any other product is used, the unit will be damaged.


2. Opening the refrigerant circuit after changing to a new dryer is less than 1 hour. The replacement of the dryer should be the last operation performed.

2 COMPONENT OF EQUIPMENT


[1] Appearance of Components

Outdoor unit


• PURY-P400-500YMF-C

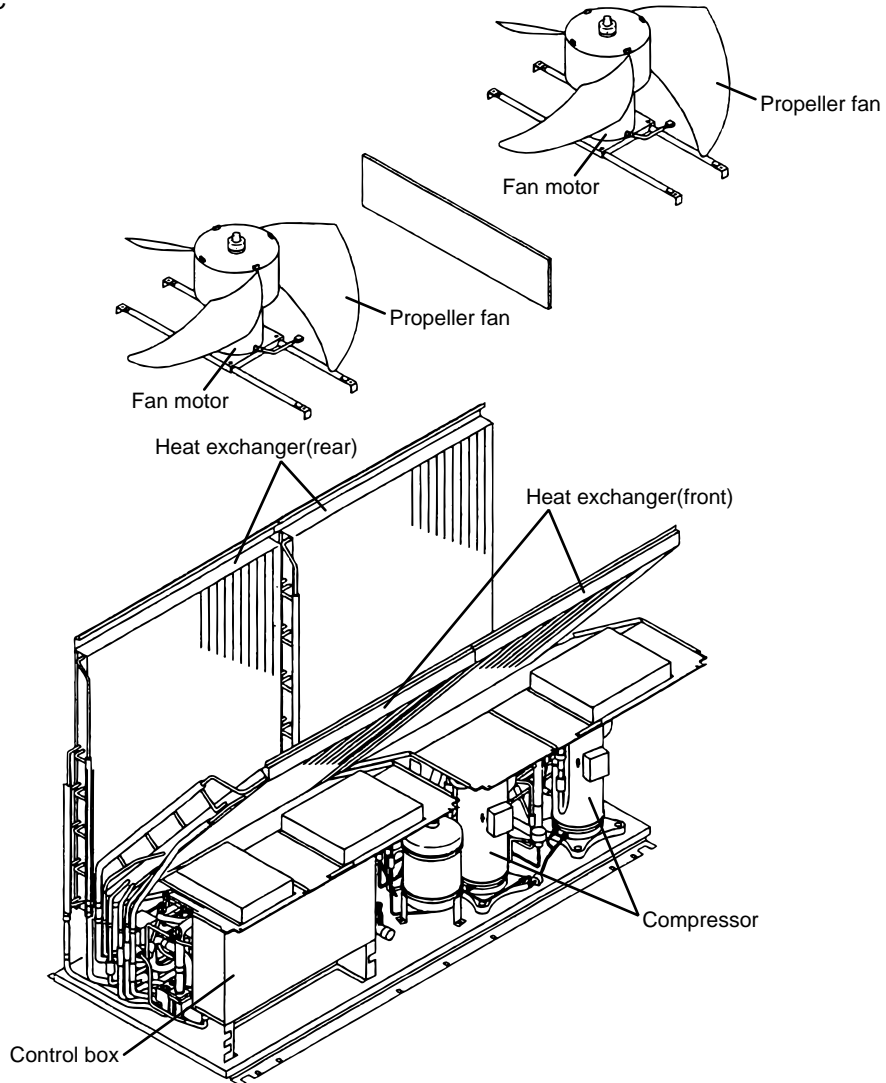



P400 TYPE

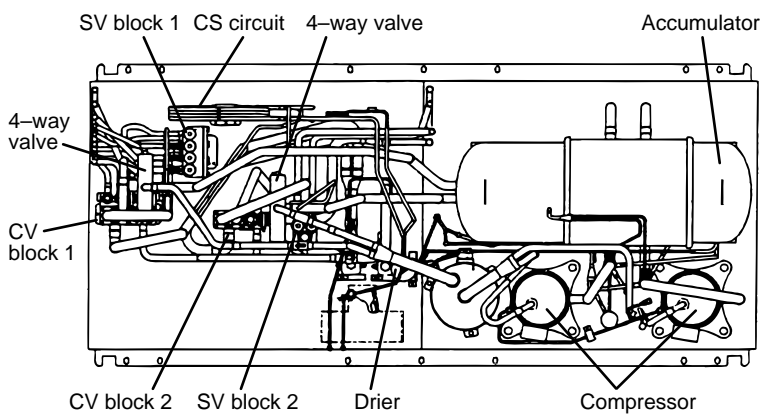

P500 TYPE

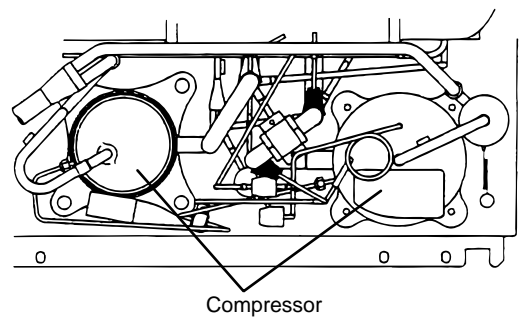


Controller Box

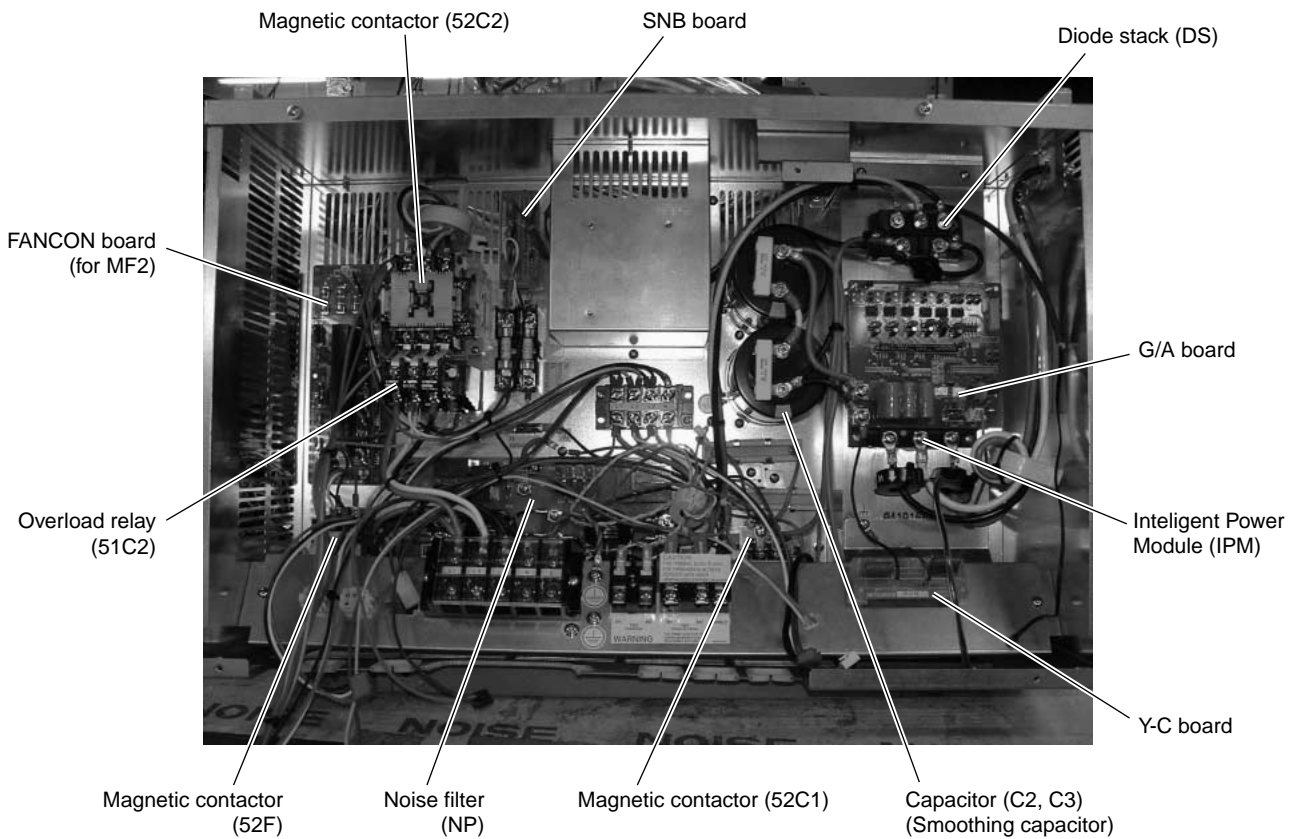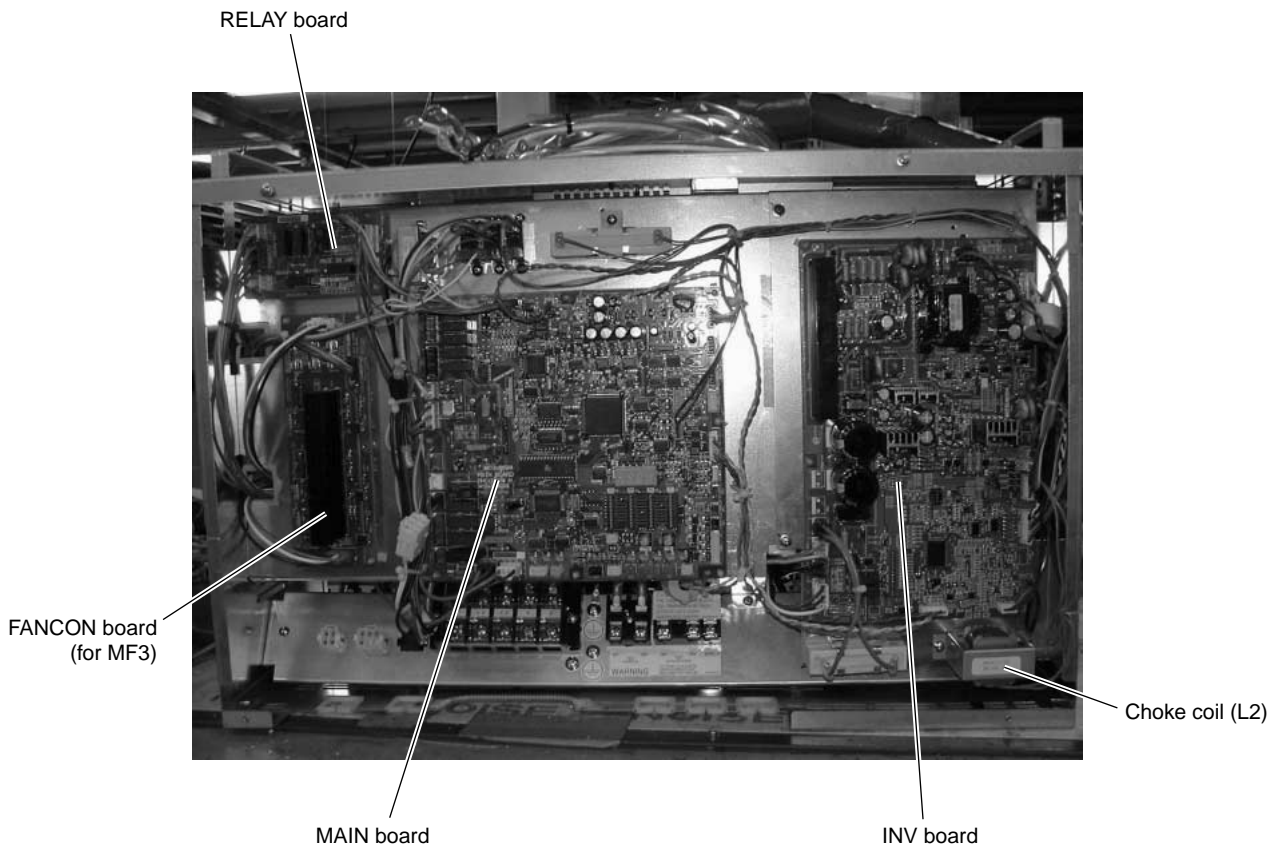


MAIN board


• PUHY / PURY

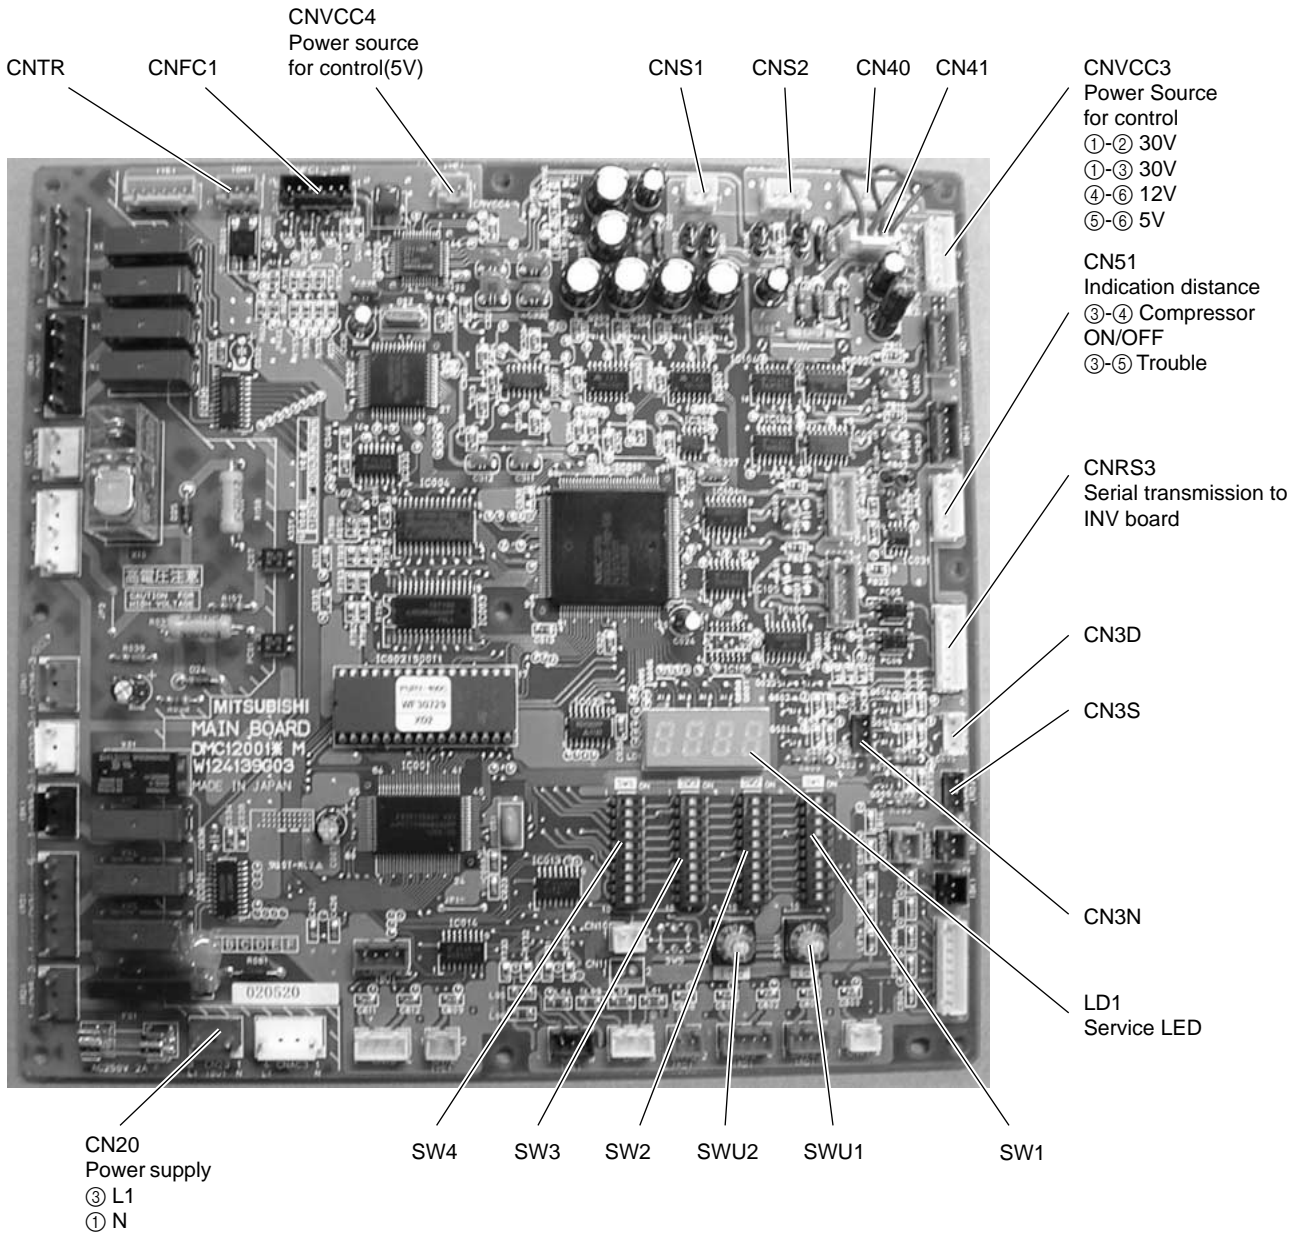


INV board

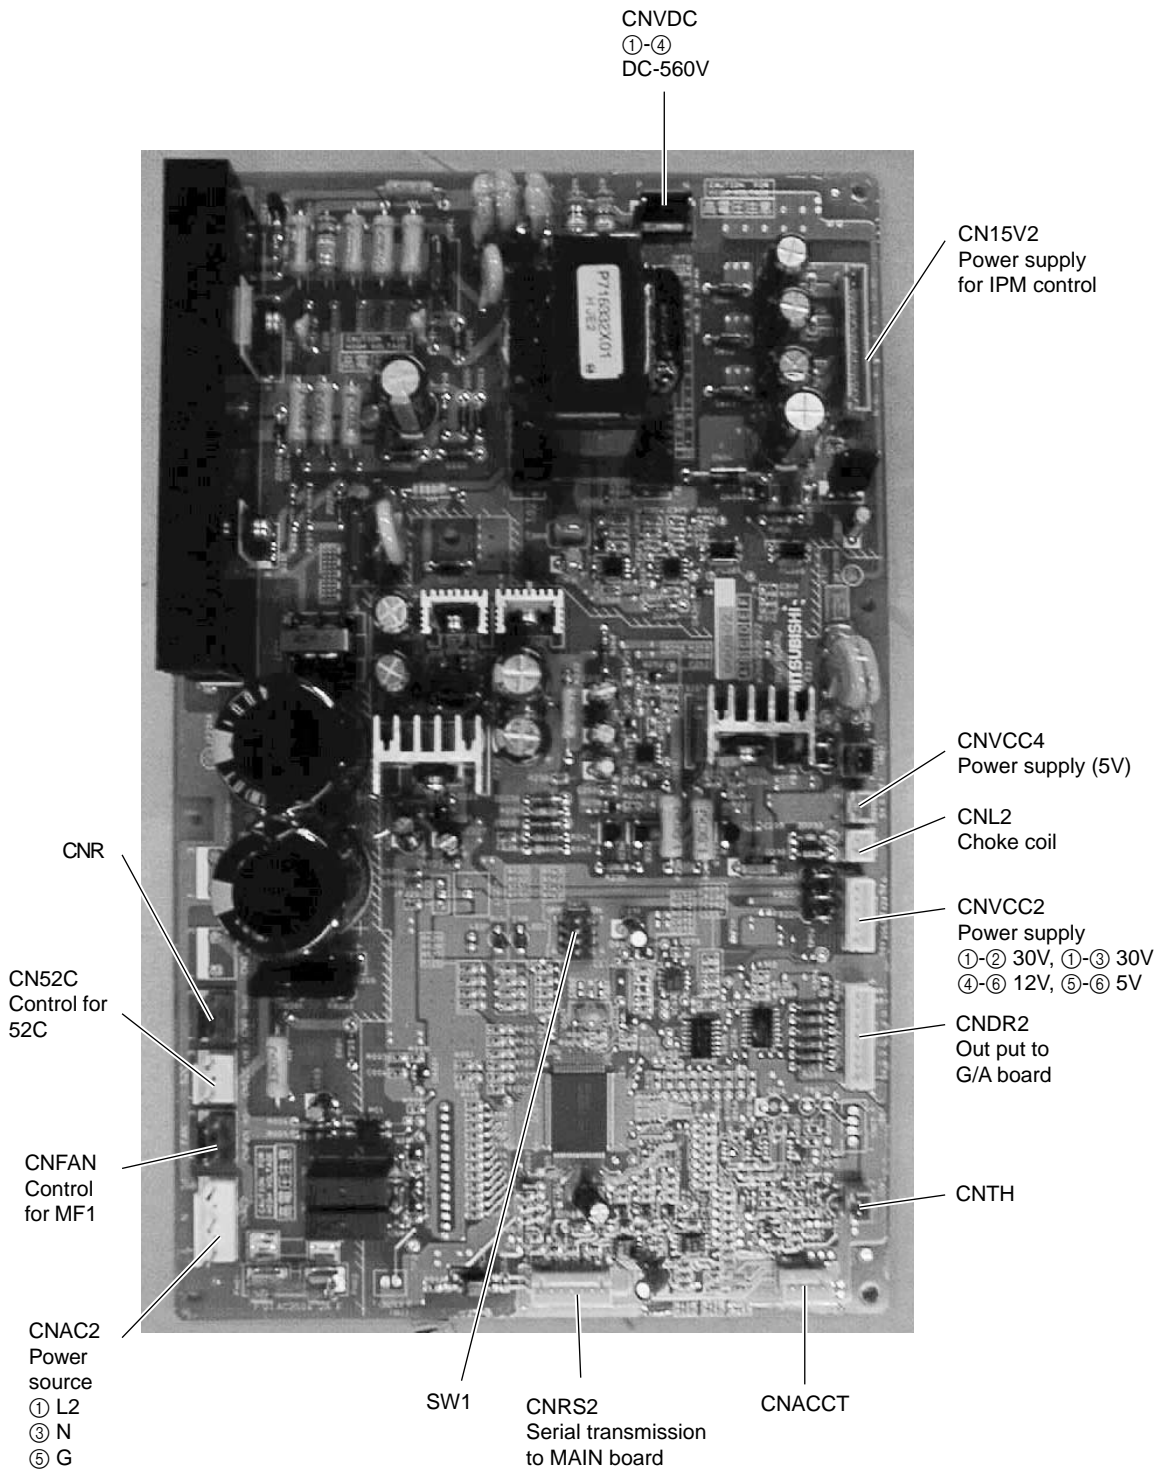


FANCON board

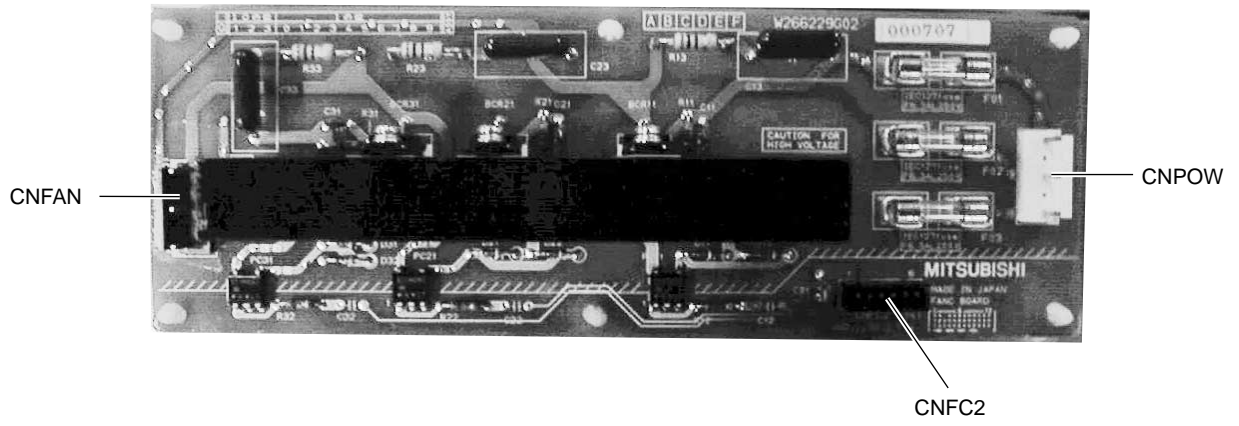


G/A board

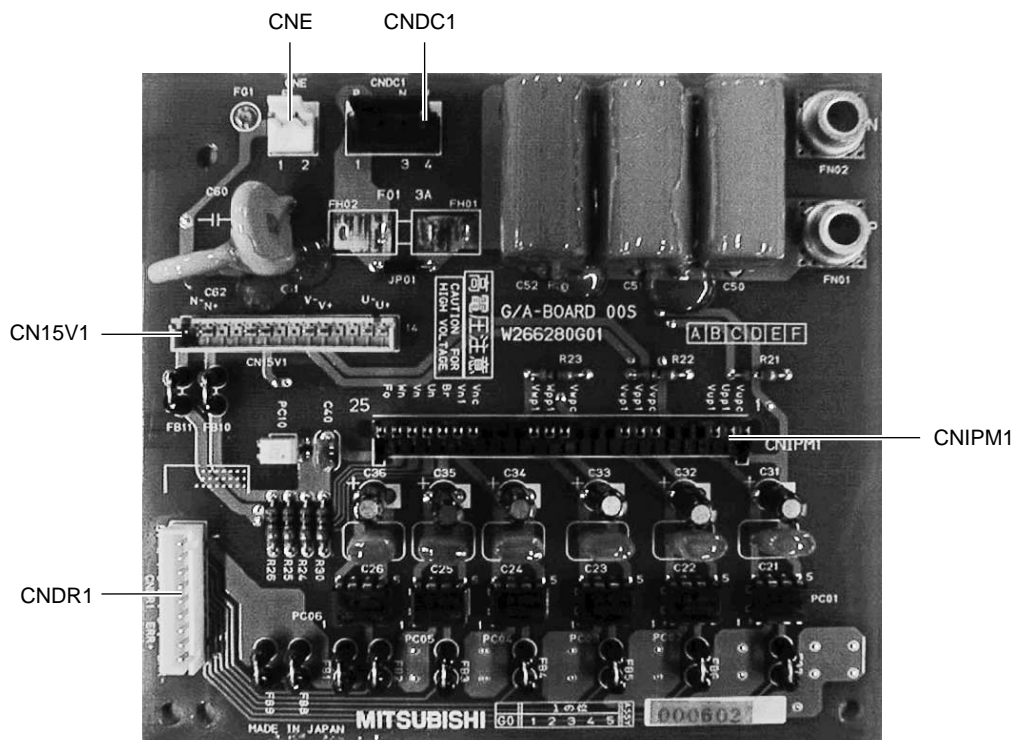


SNB board

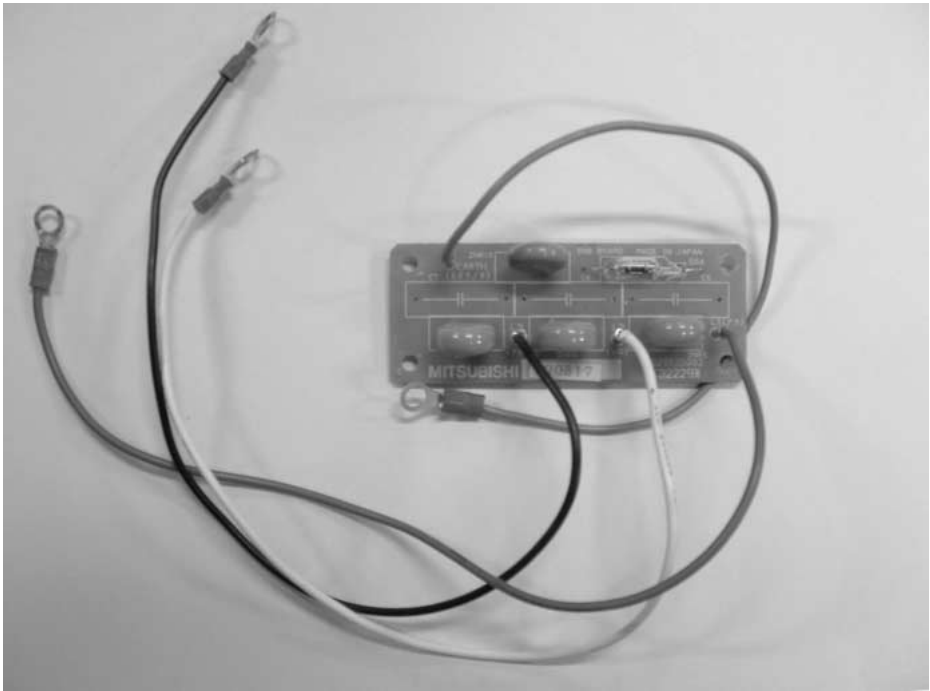


Y-C board

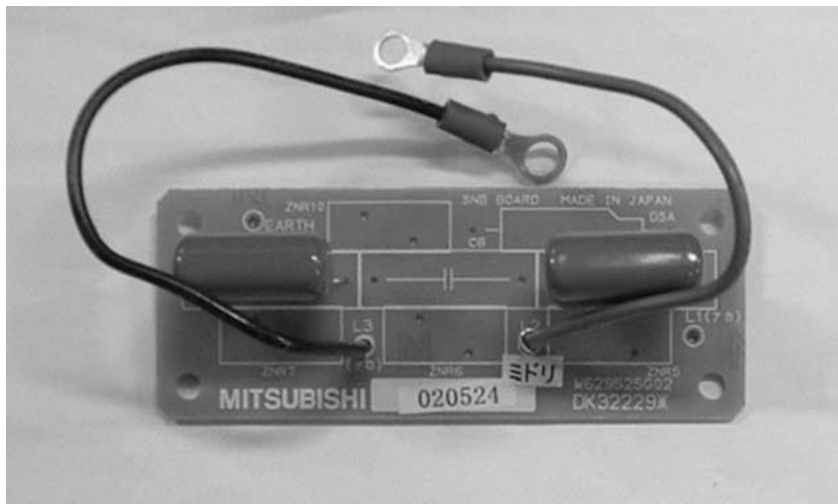


BC controller

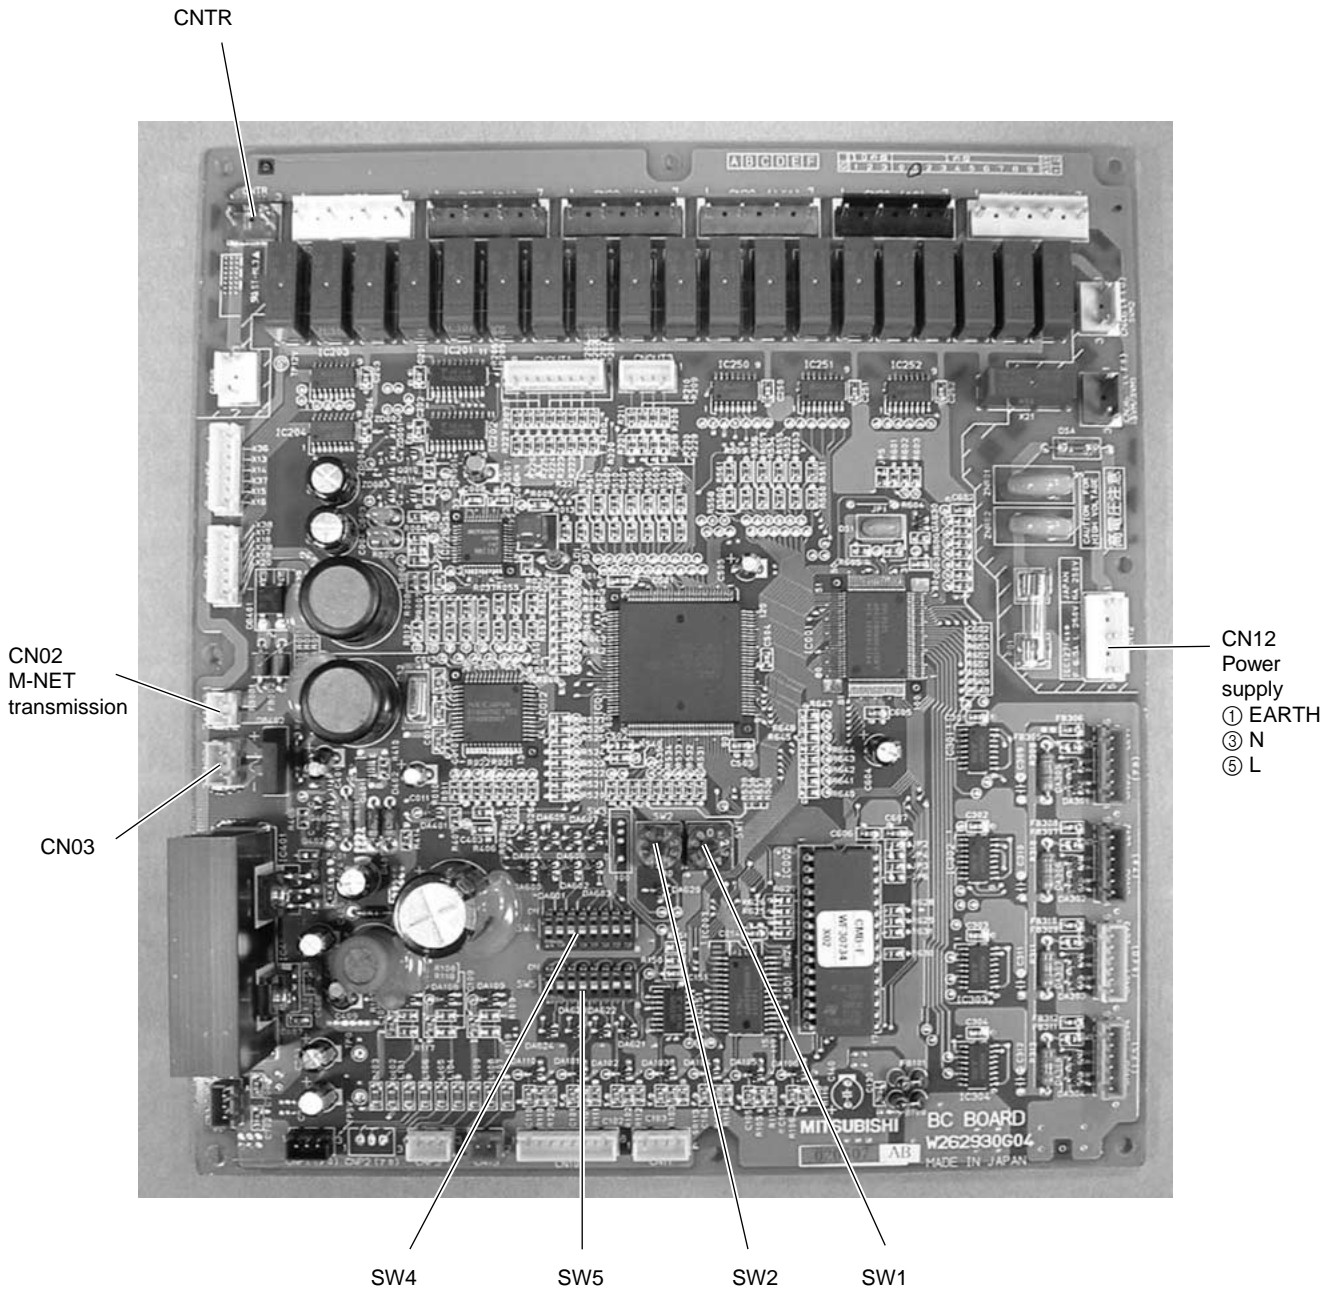


RELAY 10 board

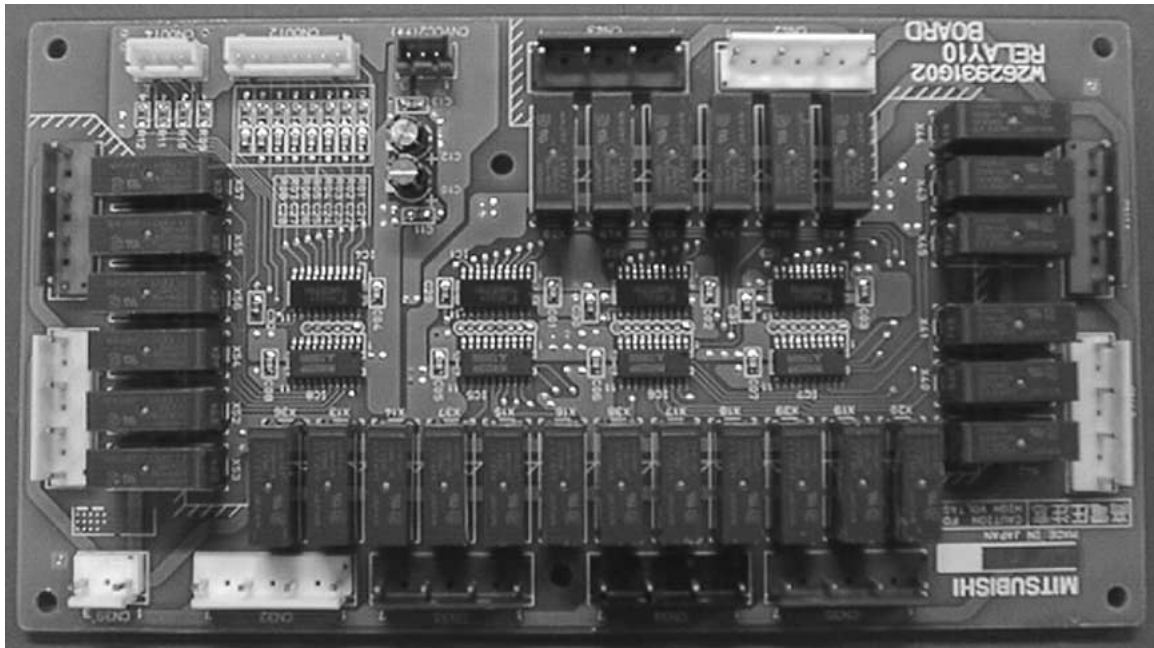






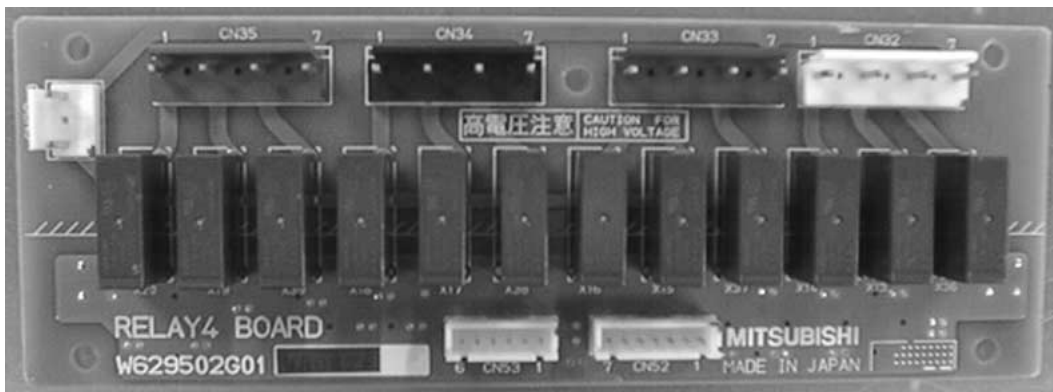


RELAY 4 board

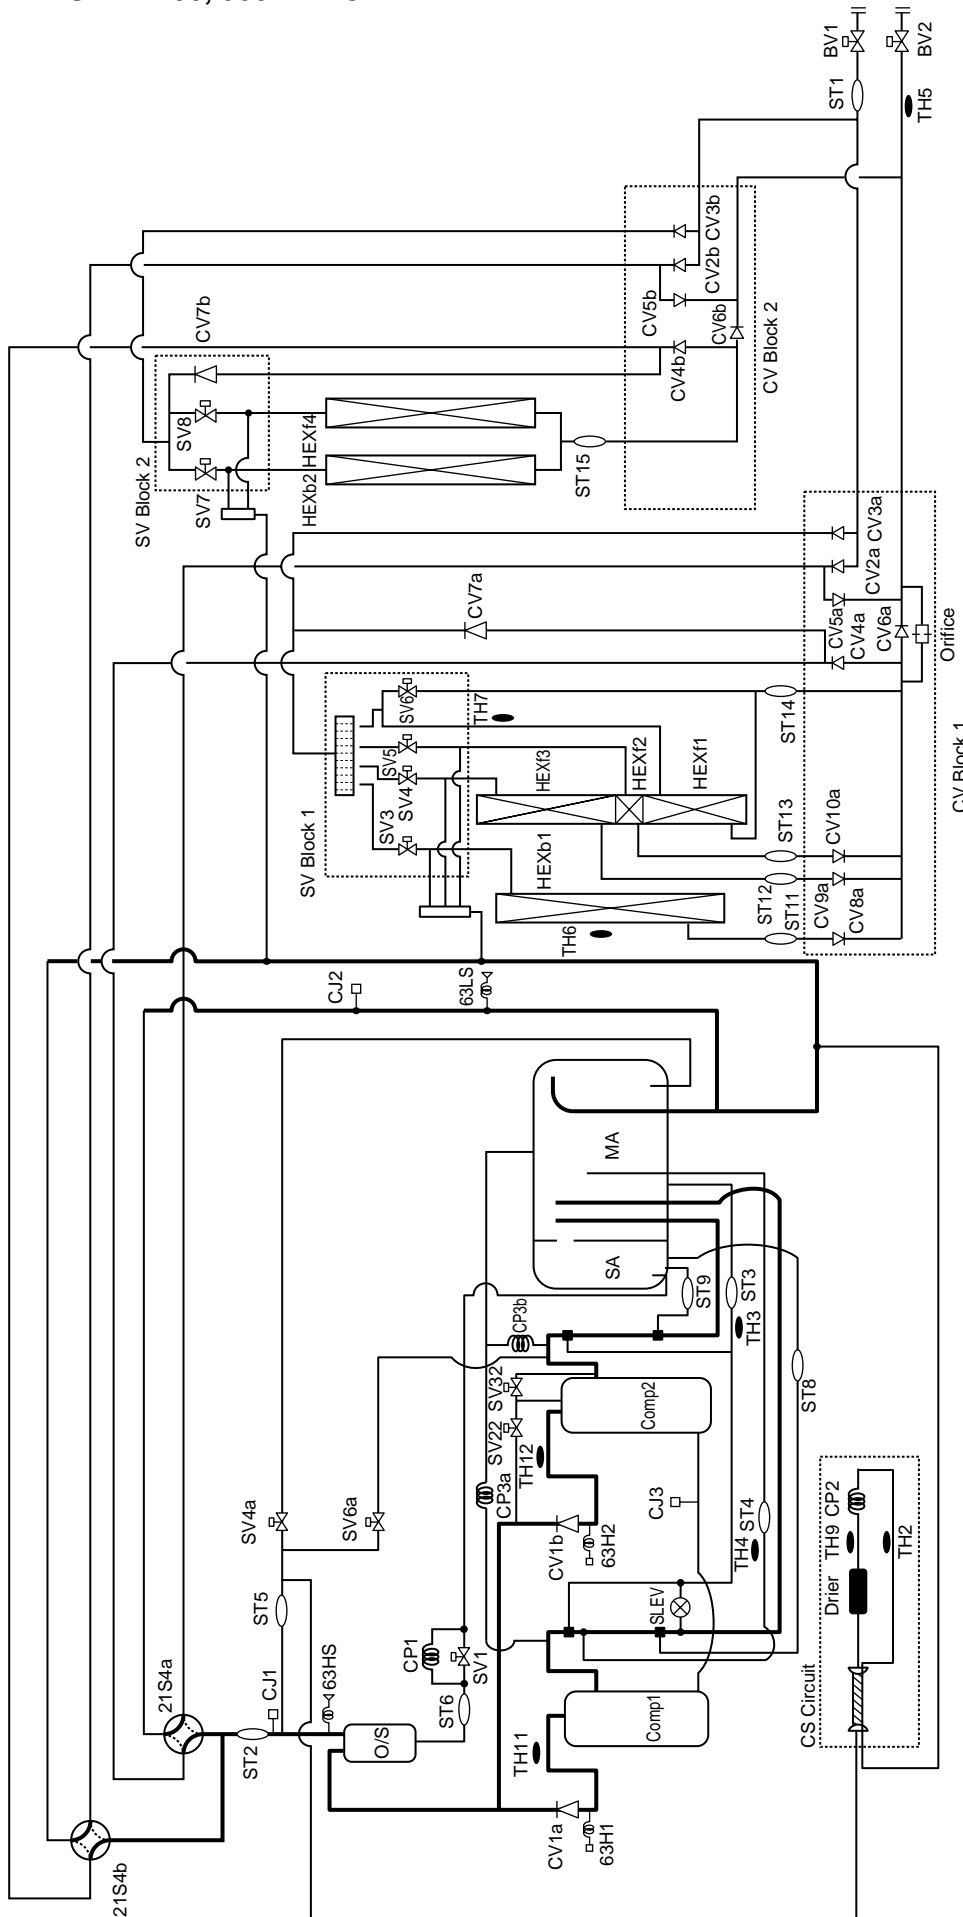







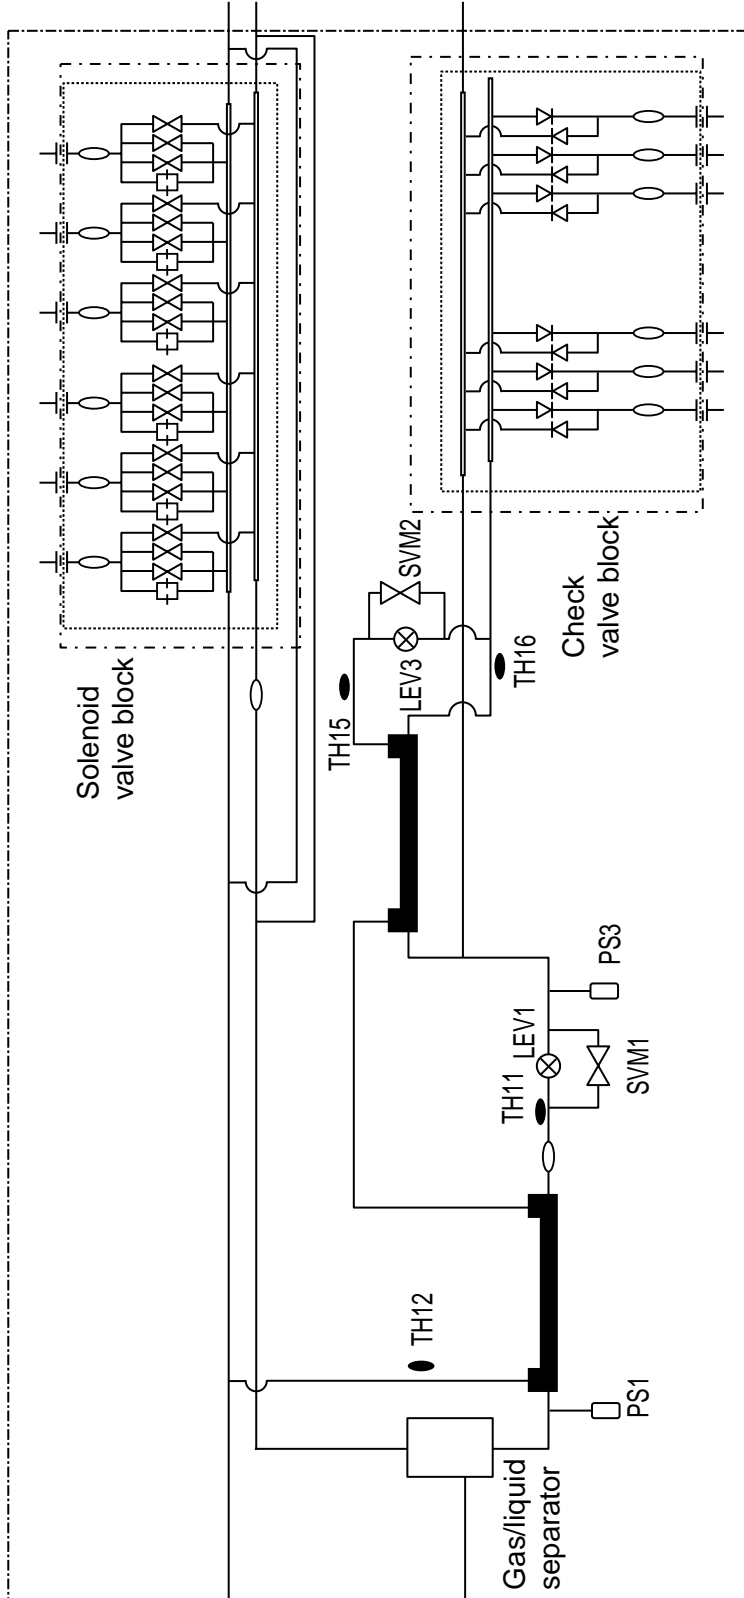
[2] Refrigerant Circuit Diagram and Thermal Sensor
PURY-P400, 500YM-F-C









-  : Solenoid valve
-  : Orifice
-  : Capillary
-  : Check valve
-  : Thermal sensor
-  : Strainer
-  : Service port
-  : Accumulator


*SV22, 32: P500 only

-  : Solenoid valve
-  : Orifice
-  : Capillary
-  : Check valve
-  : Thermal sensor
-  : Strainer



CMB-P108V-FB

-  : Solenoid valve
-  : Orifice
-  : Capillary
-  : Check valve
-  : Thermal sensor
-  : Strainer

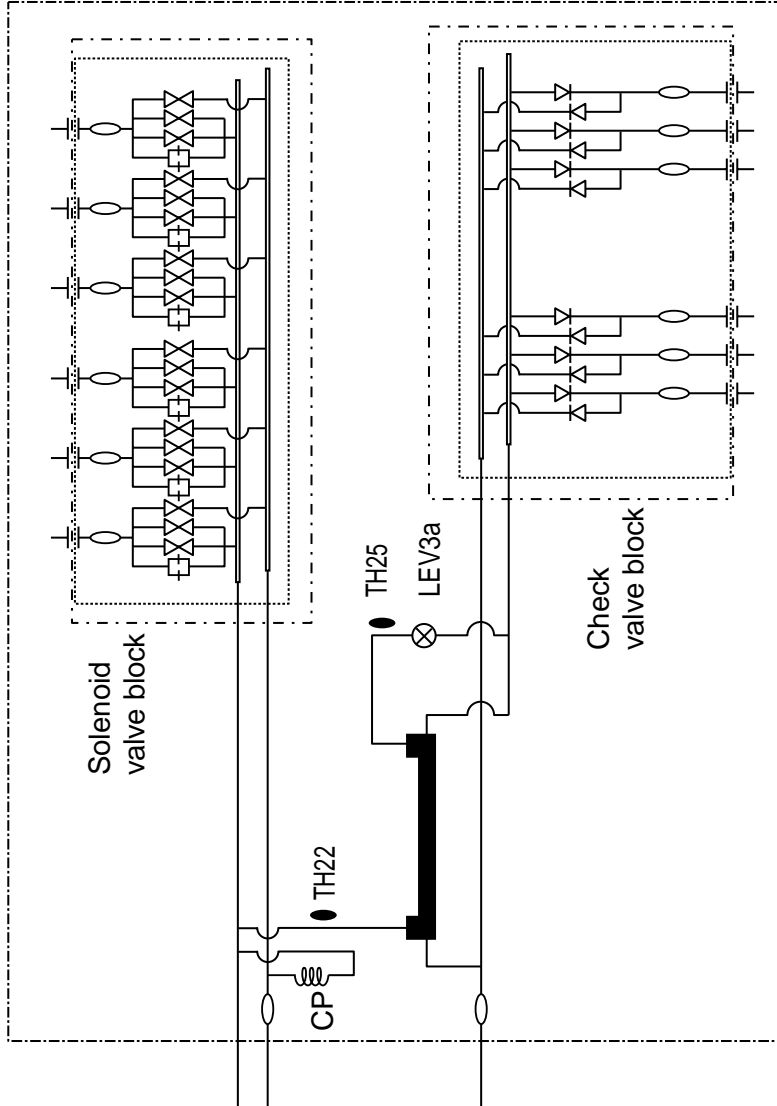

[3] Electrical Wiring Diagram PURY-P400-500YMF-C

<Symbol explanation>


| Symbol | Name | Symbol | Name |
|-----------|-----------------------------------------------|-----------|---------------------------------|
| DCL | DC reactor (Power factor improvement) | IPM | Intelligent power module |
| ACCT-LUV | Current sensor | TH1.1,12 | Thermistor |
| ZNR4 | Varistor | TH2 | Saturation vapor temp. detect |
| 52C1 | Accumulator capacitor (Inverter main circuit) | TH4 | Accumulator liquid temp. detect |
| 52C2 | Magnetic contactor | TH5 | Brake oil detect (Upper) |
| 51C2 | Overload relay | TH6 | Oil temp. detect |
| 52F | Magnetic contactor (Fan motor) | TH7 | Pipe temp. (Hex inlet) |
| MF1 | Fan motor (Radiator panel) | TH9 | High pressure liquid temp. |
| 21S4a,4b | 4-way valve | TH10 | Compressor shell temp. |
| SV1,22,32 | Solenoid valve | THHS | Radiator panel temp. detect |
| SV3,4,5,6 | Solenoid valve | LD | Accumulator liquid level detect |
| CH2.3 | Crank case heater (Compressor) | CH1.1,12 | Crank case heater (Compressor) |
| SSR | Cord heater | CH2.4 | Cord heater |
| SLEV | 7.8 (Heat exchanger capacity control) | SSR | Solid state relay |
| 63HS | Electric expansion valve (Oil return) | X1.2,4~13 | Aux. relay |
| 63LS | High pressure sensor | FB1~6 | Ferrite core |
| 63H1.2 | Low pressure sensor | ⊕ | Earth terminal |
| L2 | Choke coil (Transmission) | T1~15 | Terminal |

NOTE : Mark ⊕ indicates terminal bed
 ⊕ connector
 ⊞ board insertion connector


<Difference of appliance>

| Appliance | Name |
|----------------|----------------------|
| PURY-P400YMF-C | "*1" are not existed |
| PURY-P500YMF-C | All existed |


<Unit internal layout>

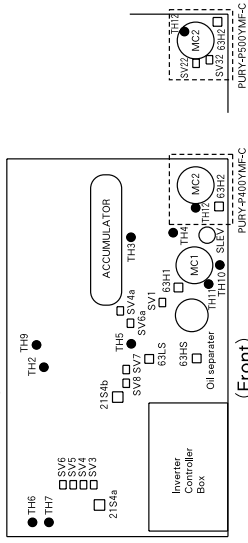

<Controller box internal layout>

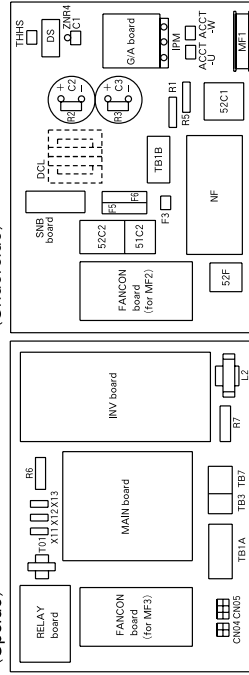


<Operation of self-diagnosis switch(SW1) and LED display>

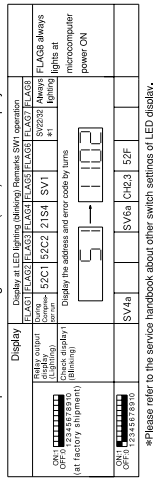



*Please refer to the service handbook about other switch settings of LED display.

<ELECTRICAL WIRING DIAGRAM>

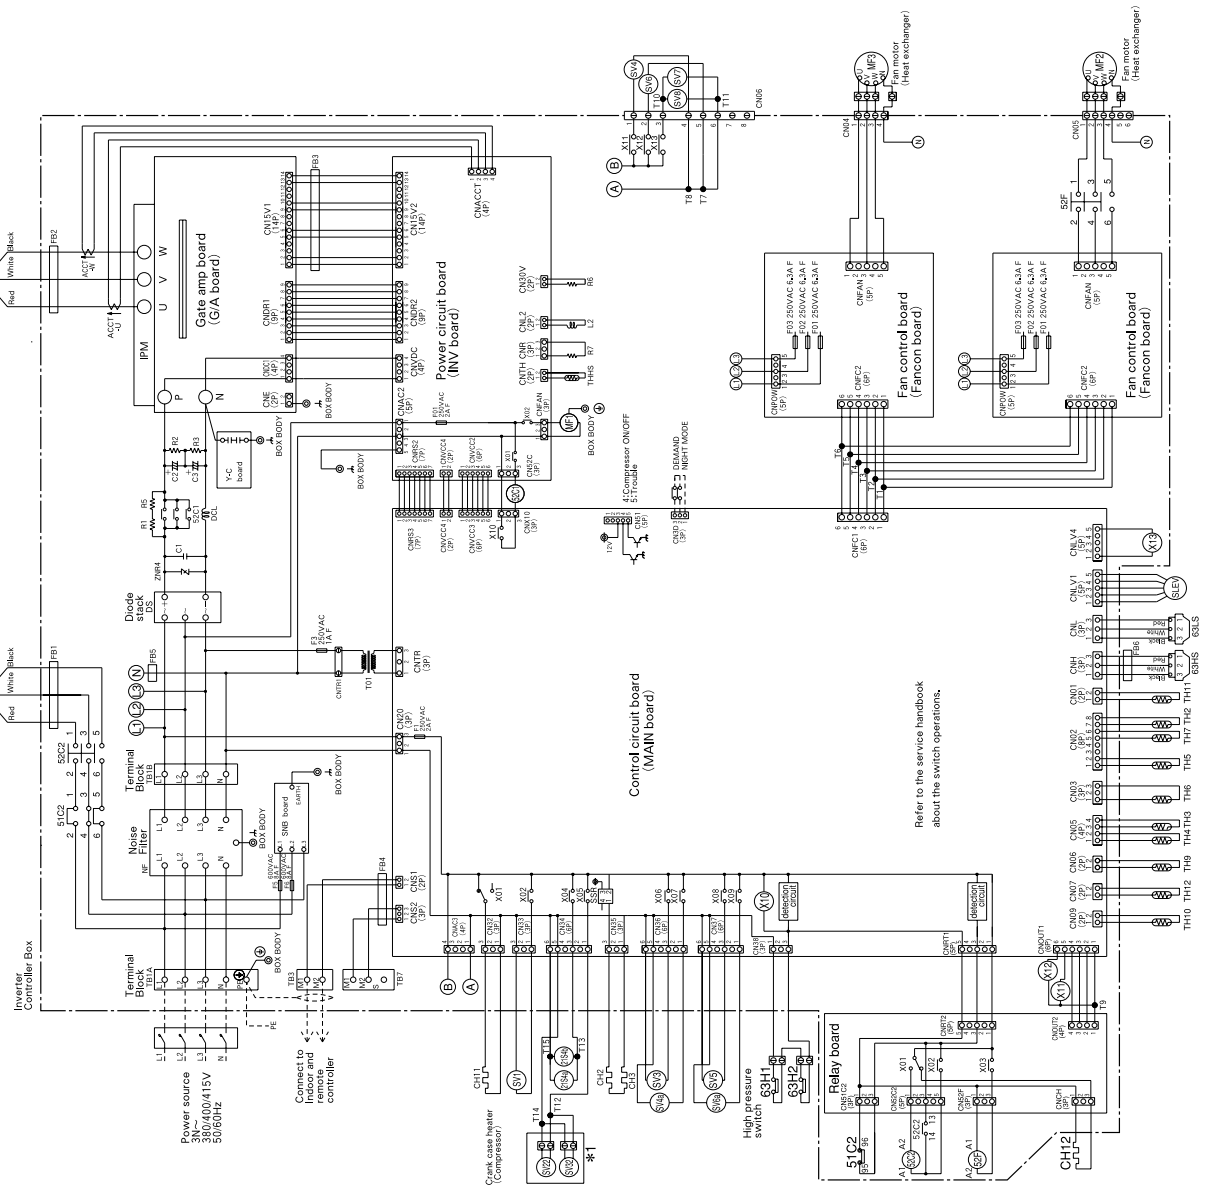

Refer to the service handbook about the switch operations.

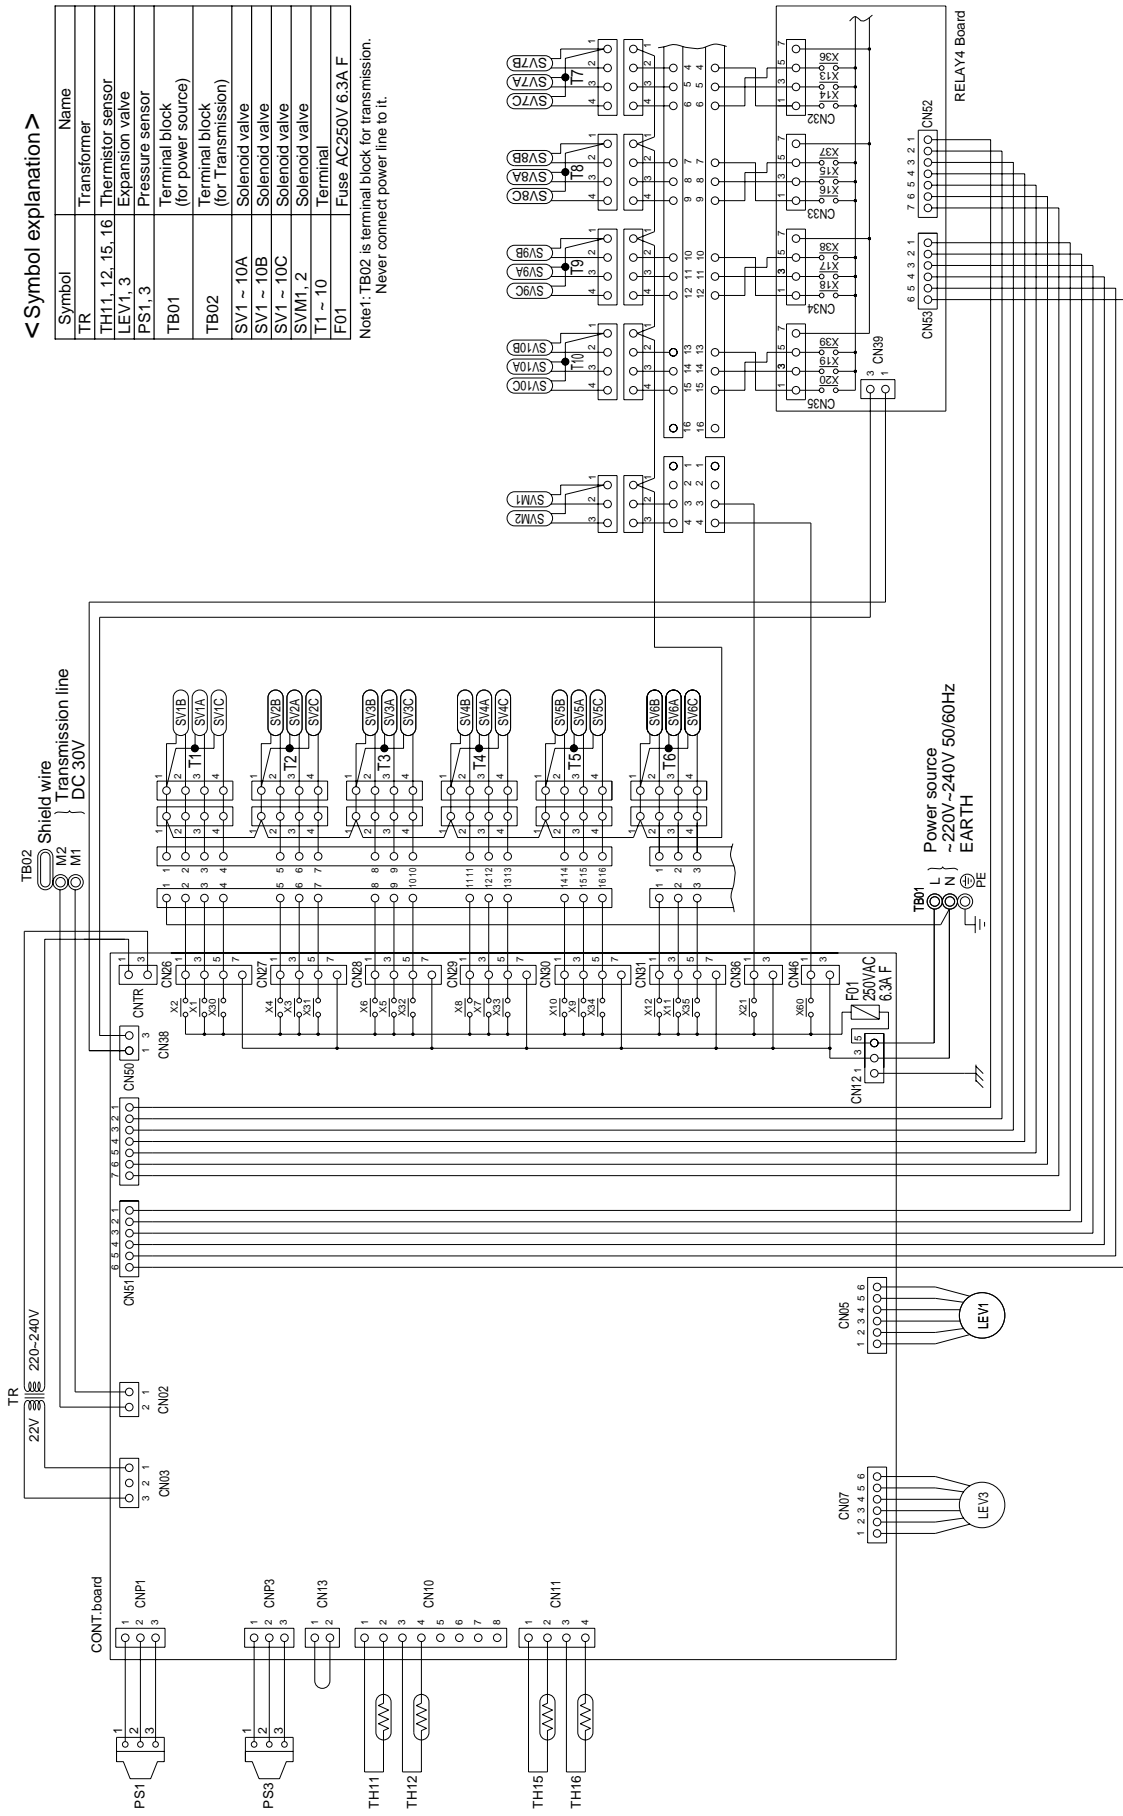


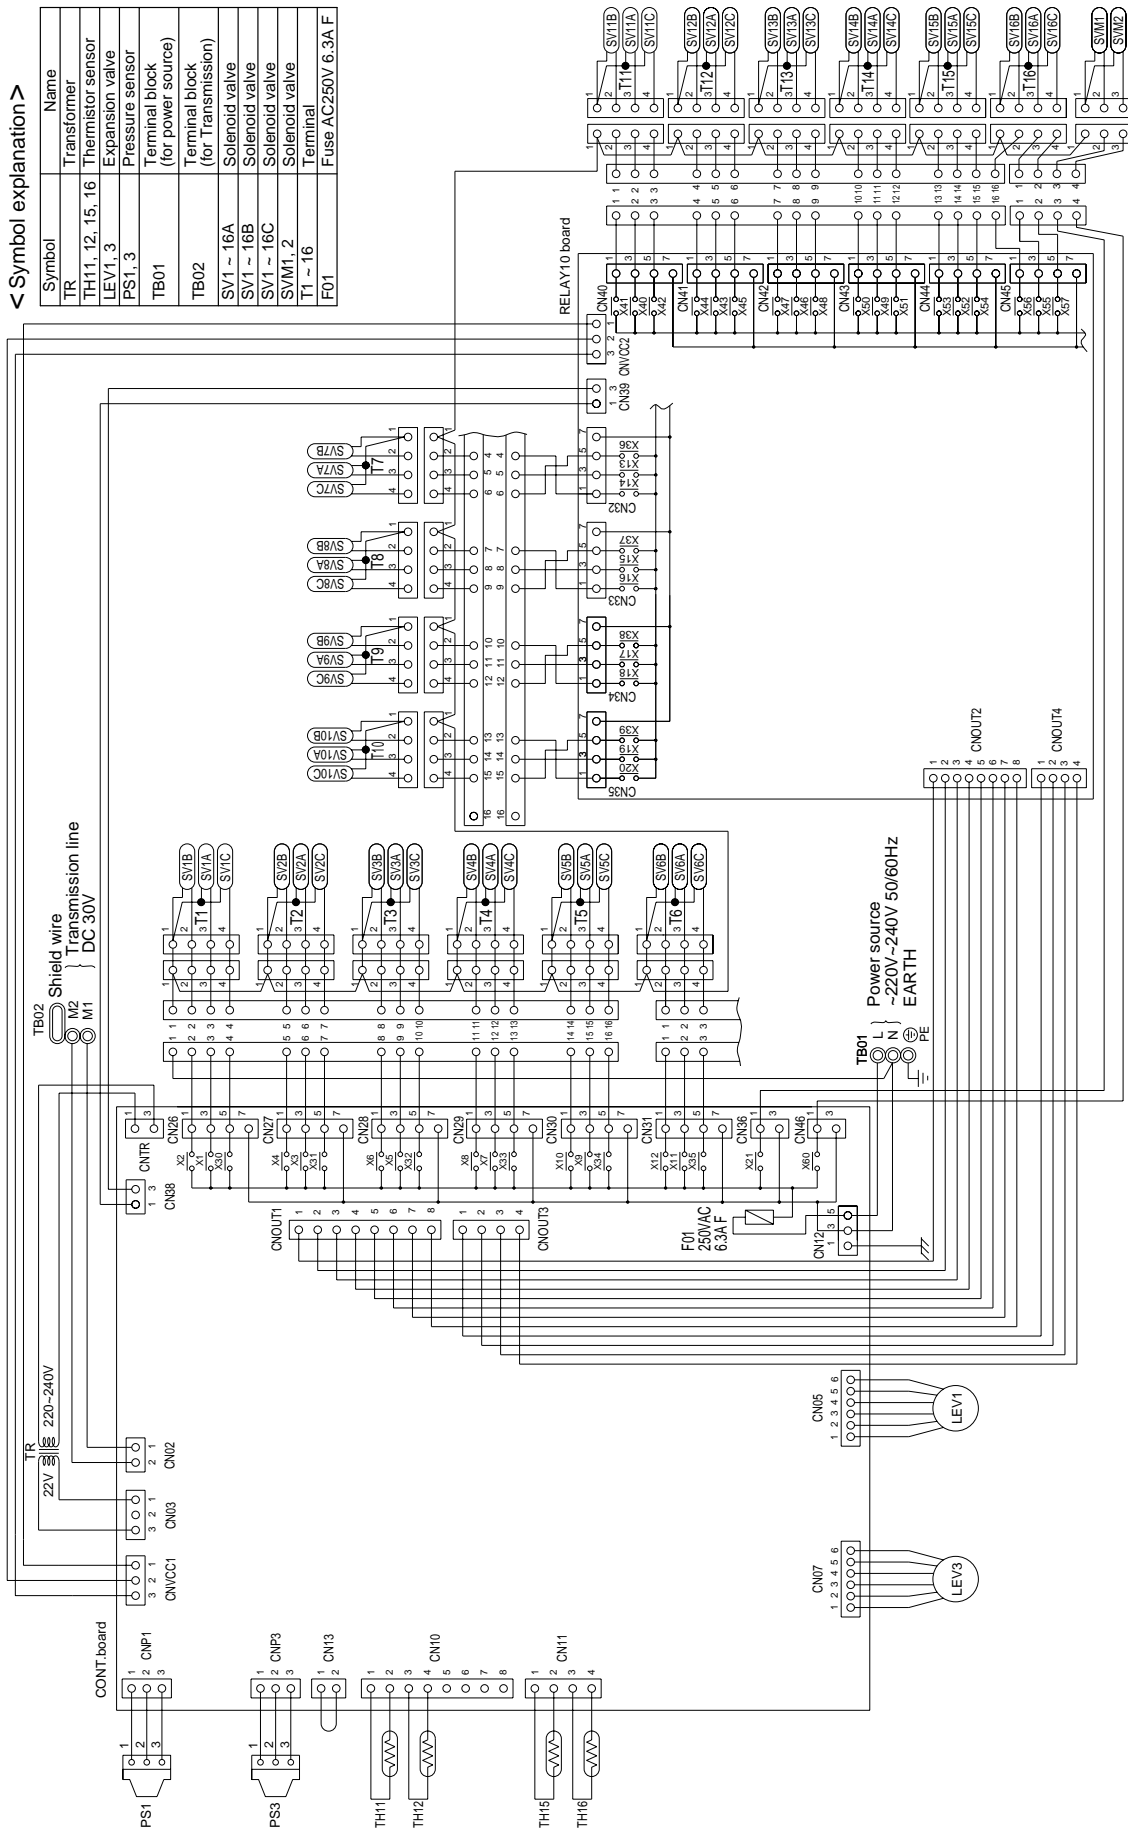

< Symbol explanation >

| Symbol | Name |
|------------------|-----------------------------------|
| TR | Transformer |
| TH11, 12, 15, 16 | Thermistor sensor |
| LEV1, 3 | Expansion valve |
| PS1, 3 | Pressure sensor |
| TB01 | Terminal block (for power source) |
| TB02 | Terminal block (for Transmission) |
| SV1 ~ 16A | Solenoid valve |
| SV1 ~ 16B | Solenoid valve |
| SV1 ~ 16C | Solenoid valve |
| SV1M1, 2 | Solenoid valve |
| T1 ~ 16 | Terminal |
| F01 | Fuse AC250V 6.3A F |

Note1: TB02 is terminal block for transmission.
Never connect power line to it.

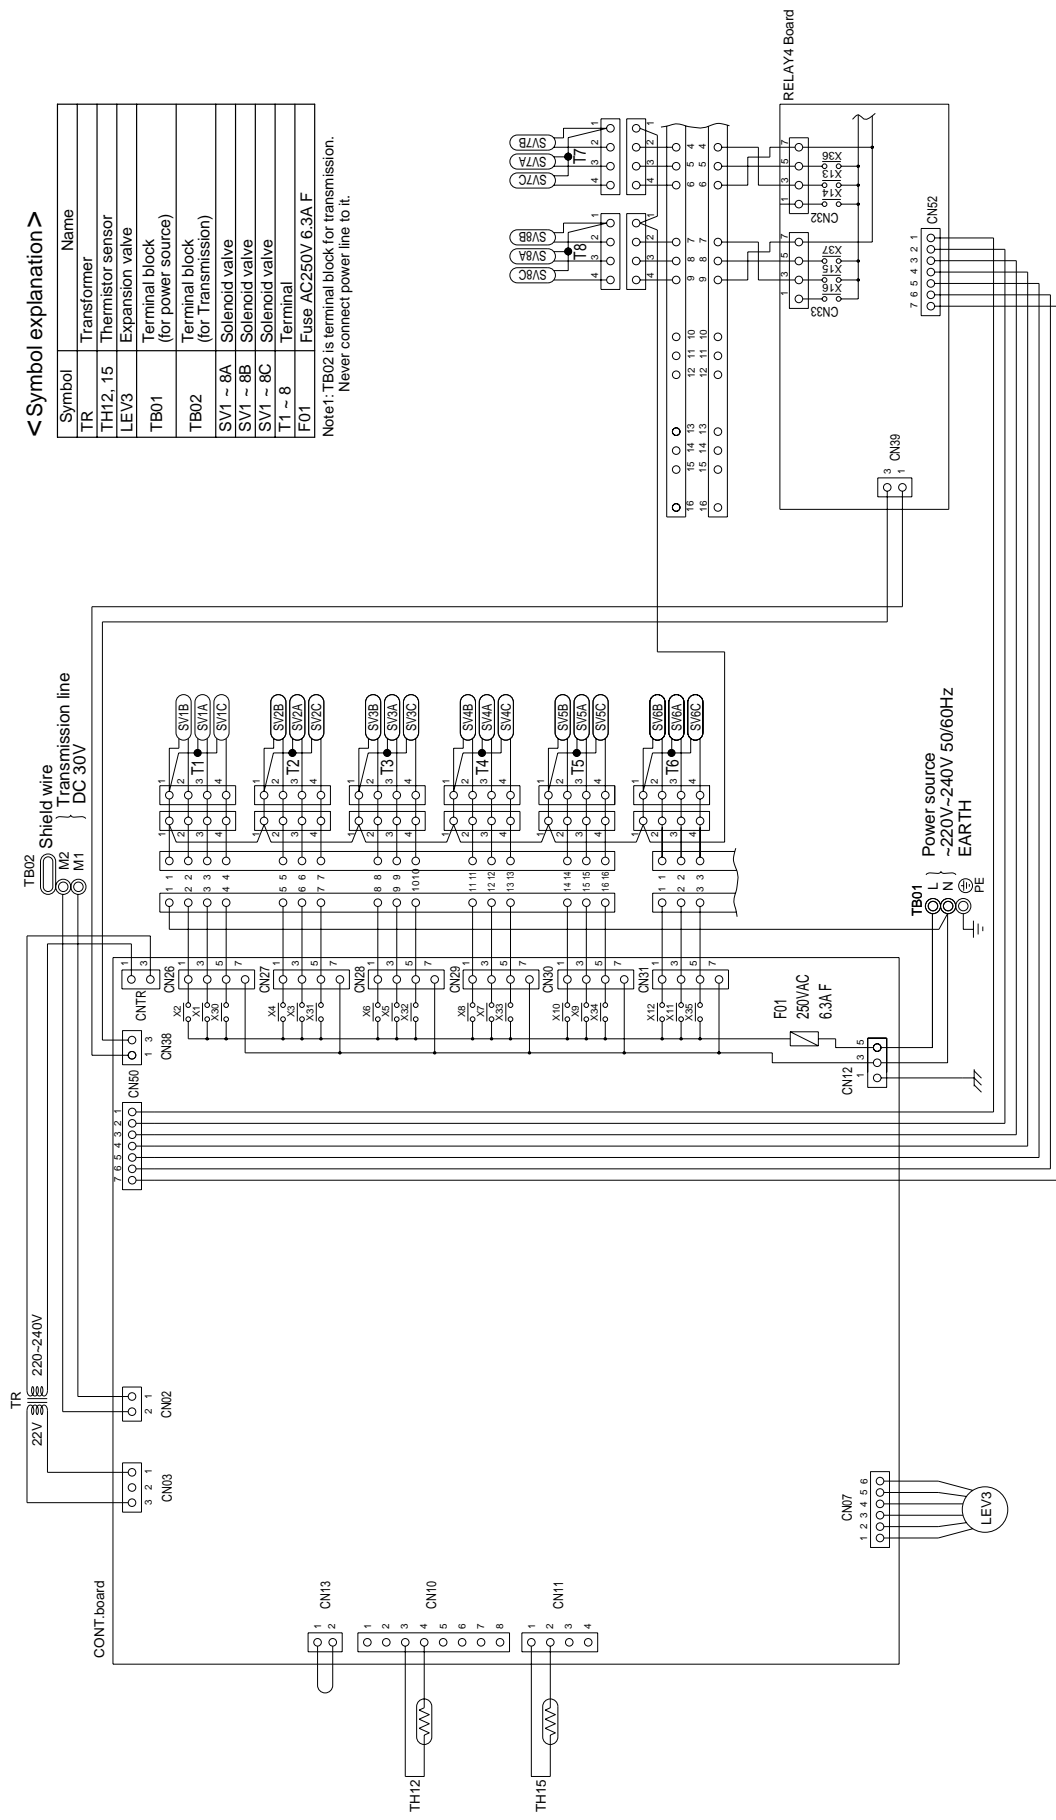

< Symbol explanation >

| Symbol | Name |
|----------|-----------------------------------|
| TR | Transformer |
| TH12, 15 | Thermistor sensor |
| LEV3 | Expansion valve |
| TB01 | Terminal block (for power source) |
| TB02 | Terminal block (for transmission) |
| SV1 ~ 8A | Solenoid valve |
| SV1 ~ 8B | Solenoid valve |
| SV1 ~ 8C | Solenoid valve |
| T1 ~ 8 | Terminal |
| F01 | Fuse AC250V 6.3A F |

Note1: TB02 is terminal block for transmission.
Never connect power line to it.

[4] Standard Operation Data

① Cooling operation

| Outdoor unit | | | PURY-P400YMF-C | | | | | PURY-P500YMF-C | | | | | |
|-----------------------|----------------------------------------------------|-------------------------------------------|----------------------------|-----------------------|-----|-----|-----|----------------|-----------------------|-----|-----|-----|-----|
| Items | | | | | | | | | | | | | |
| Condition | Ambient temp. | Indoor | 27.0/19 | | | | | 27.0/19 | | | | | |
| | | Outdoor | 35.0/24.0 | | | | | 35.0/24.0 | | | | | |
| | Indoor unit | Quantity | 5 | | | | | 5 | | | | | |
| | | Quantity in operation | 5 | | | | | 5 | | | | | |
| | | Model | - | 100 | 100 | 100 | 50 | 50 | 125 | 125 | 125 | 100 | 25 |
| | Piping | Main pipe | m | 5 | | | | | 5 | | | | |
| | | Branch pipe | | 10 | 10 | 10 | 10 | 10 | 10 | 10 | 10 | 10 | 10 |
| | | Total piping length | | 55 | | | | | 55 | | | | |
| | Indoor unit fan notch | | - | Hi | Hi | Hi | Hi | Hi | Hi | Hi | Hi | Hi | Hi |
| | Refrigerant volume | | kg | 27.1 | | | | | 29.2 | | | | |
| Outdoor unit | Total current | | A | 27.6/26.2/25.2 | | | | | 34.6/32.8/31.7 | | | | |
| | Voltage | | V | 380/400/415 | | | | | 380/400/415 | | | | |
| LEV opening | Indoor unit | | Pulse | 360 | 360 | 360 | 340 | 340 | 410 | 410 | 410 | 360 | 280 |
| | BC controller (1, 3) | | | 2000 | | 300 | | 2000 | | 350 | | | |
| | Oil return (SLEV) | | | 200 | | | | | 344 | | | | |
| Pressure | High pressure/Low pressure (after O/S) (before MA) | | kg/cm ² G (MPa) | 21.5/4.4 (2.11/0.43) | | | | | 21.5/4.3 (2.11/0.42) | | | | |
| | BC controller | High/Intermediate | | 20.5/20.5 (2.01/2.01) | | | | | 20.5/20.5 (2.01/2.01) | | | | |
| Sectional temperature | Outdoor unit | Discharge (TH11/TH12) | | 92/102 | | | | | 97/102 | | | | |
| | | Heat exchanger outlet (TH5) | | 42 | | | | | | | | | |
| | | Accumulator | Inlet | 4 | | | | | 5 | | | | |
| | | | Outlet | 6 | | | | | 7 | | | | |
| | | Suction (Comp) (No.1/No.2) | | 6/12 | | | | | 12/12 | | | | |
| | | Low pressure saturation temperature (TH2) | | 1 | | | | | | | | | |
| | | Liquid level | Upper (TH4) | 30 | | | | | | | | | |
| | | | Lower (TH3) | 1 | | | | | | | | | |
| | | Shell bottom (Comp No.1/No.2) | | 60/51 | | | | | 65/50 | | | | |
| | | CS circuit (TH9) | | 16 | | | | | | | | | |
| | Circulating configuration (αOC) | | 0.23 | | | | | | | | | | |
| | Indoor unit | LEV inlet | | 26 | | | | | | | | | |
| | | Heat exchanger outlet | | 12 | | | | | | | | | |

② Heating operation

| Items | | | Outdoor unit | PURY-P400YMF-C | | | | | PURY-P500YMF-C | | | | | |
|-----------------------|----------------------------------------------------|-------------------------------------------|--------------|----------------------------|-----------------------|------|-----|-----|----------------|-----------------------|-----|-----|-----|-----|
| Condition | Ambient temp. | Indoor | DB/WB | 20.0/- | | | | | 20.0/- | | | | | |
| | | Outdoor | | 7.0/6.0 | | | | | 7.0/6.0 | | | | | |
| | Indoor unit | Quantity | Set | 5 | | | | | 5 | | | | | |
| | | Quantity in operation | | 5 | | | | | 5 | | | | | |
| | | Model | - | 100 | 100 | 100 | 50 | 50 | 125 | 125 | 125 | 100 | 25 | |
| | Piping | Main pipe | m | 5 | | | | | 5 | | | | | |
| | | Branch pipe | | 10 | 10 | 10 | 10 | 10 | 10 | 10 | 10 | 10 | 10 | |
| | | Total piping length | | 55 | | | | | 55 | | | | | |
| | Indoor unit fan notch | | | - | Hi | Hi | Hi | Hi | Hi | Hi | Hi | Hi | Hi | Hi |
| | Refrigerant volume | | | kg | 27.1 | | | | | 29.2 | | | | |
| Outdoor unit | Total current | | | A | 25.6/24.3/23.4 | | | | | 32.1/30.5/29.4 | | | | |
| | Voltage | | | V | 380/400/415 | | | | | 380/400/415 | | | | |
| LEV opening | Indoor unit | | | Pulse | 600 | 600 | 600 | 450 | 450 | 650 | 650 | 650 | 600 | 350 |
| | BC controller (1, 3) | | | | 60 | 1400 | | 60 | 1600 | | | | | |
| | Oil return (SLEV) | | | | 122 | | | | | | | | | |
| Pressure | High pressure/Low pressure (after O/S) (before MA) | | | kg/cm ² G (MPa) | 21.5/3.6 (2.11/0.35) | | | | | 21.5/3.2 (2.11/0.31) | | | | |
| | BC controller | High/Intermediate | | | 20.5/17.5 (2.01/1.72) | | | | | 20.5/17.5 (2.01/1.72) | | | | |
| Sectional temperature | Outdoor unit | Discharge (TH11/TH12) | | °C | 88/93 | | | | | 88/93 | | | | |
| | | Heat exchanger inlet (TH5) | | | - 3 | | | | | - 1 | | | | |
| | | Accumulator | Inlet | | - 6 | | | | | - 7 | | | | |
| | | | Outlet | | - 6 | | | | | - 7 | | | | |
| | | Suction (Comp) (No.1/No.2) | | | - 5/2 | | | | | - 5/0 | | | | |
| | | Low pressure saturation temperature (TH2) | | | - 10 | | | | | | | | | |
| | | Liquid level | Upper (TH4) | | 30 | | | | | | | | | |
| | | | Lower (TH3) | | - 6 | | | | | | | | | |
| | | Shell bottom (Comp No.1/No.2) | | | 43/45 | | | | | 40/33 | | | | |
| | | CS circuit (TH9) | | | 5 | | | | | | | | | |
| | Circulating configuration (αOC) | | 0.28 | | | | | | | | | | | |
| Indoor unit | Heat exchanger inlet | | 81 | | | | | | | | | | | |
| | LEV inlet | | 34 | | | | | | | | | | | |

[5] Function of Dip SW and Rotary SW

(1) Outdoor unit

PURY-P400-500YMF-C.

① Variable capacity unit

MAIN board

| Switch | Function | Function According to Switch Operation | | Switch Set Timing | |
|--------|----------------------------------------------------------------------|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------|----------------------------------------------------------------------|---------------------------------------------|
| | | When Off | When On | When Off | When On |
| SWU | 1 ~ 2 Unit Address Setting | Set on 51 ~ 100 with the rotary switch.*2 | | Before power is turned on. | |
| SW1 | 1 ~ 8 For self diagnosis/operation monitoring | Refer to LED monitor display on the outdoor board. | | | |
| | 9 ~ 10 - | - | - | - | |
| SW2 | 1 Centralized Control Switch | Centralized control not connected. | Centralized control connected. | Before power is turned on. | |
| | 2 Deletion of connection information. | Storing of refrigeration system connection information. | Deletion of refrigeration system connection information. | Before power is turned on. | |
| | 3 Deletion of error history. | Store IC•OC error history. | Erase IC•OC error history. | During normal operation when power is on. | |
| | 4 • Adjustment of Refrigerant Volume • Ignore liquid level errors | Ordinary control | • Refrigerant volume adjustment operation. • Ignore liquid level errors | During normal operation when power is on. | Invalid 2 hours after compressor starts. |
| | 5 - | - | - | - | |
| | 6 - | - | - | - | |
| | 7 Forced defrosting | Ordinary control | Start forced defrosting. | During normal operation when power is on. | 10 minutes or more after compressor starts. |
| | 8 - | - | - | - | |
| | 9 Reset of the time the CS circuit is closed. | When the CS circuit is closed, that time is totaled. | Timer Reset | During normal operation when power is on. | |
| | 10 - | - | - | - | |
| SW3 | 1 SW3-2 Function Valid/Invalid | SW3-2 Function Invalid | SW3-2 Function Valid | During normal operation when power is on. | |
| | 2 Indoor Unit Test Operation | Stop all indoor units. | All indoor units test run ON. | When SW3-1 is ON after power is turned on. | |
| | 3 Defrosting start temperature . | - 8°C | - 10°C | During normal operation when power is on. | |
| | 4 Defrosting end temperature. | 7°C | 12°C | During normal operation when power is on. (Except during defrosting) | |
| | 5 Target low-pressure change | Ordinary control | 2deg lower than normal | During normal operation when power is on. | |
| | 6 Pump Down Function | Ordinary control | Pump Down Operation | While the compressor is stopped. | |
| | 7 Target high-pressure change | Ordinary control | High pressure / 1.5 ~ 2.5 K higher than normal | During normal operation when power is on. | |
| | 8 - | - | - | - | |
| | 9 - | - | - | - | |
| | 10 Models | Model 400 | Model 500 | When switching on the power. | |
| SW4 | 1 SW4-2 Function valid/Invalid | SW4-2 Function invalid | SW4-2 Function valid | When switching on the power. | |
| | 2 Configuration compensation value | Changes as shown below by on → off change 0 %→3 %→6 %→9 %→12 %→ - 6 %→ - 3 %→0 % | | When SW4-1 is ON | |
| | 3 - | - | - | - | |
| | 4 - | - | - | - | |
| | 5 - | - | - | - | |
| | 6 - | - | - | - | |
| | 7 - | - | - | - | |
| | 8 - | - | - | - | |
| | 9 - | - | - | - | |
| | 10 - | - | - | - | |

Note 1: Factory setting is SWU 1 to 2 = 00, SW3 - 10 = set by model. All other switches are set to OFF.

Note 2: If the address is set from 01 to 50, it automatically becomes 100.

(2) Indoor unit
DIP SW1, 3

| Switch | SW name | Operation by SW | | Switch set timing | | Remarks |
|--------|---------|----------------------------------------------------------------------------------------|-----------------------|----------------------------|------------------------------------------------|--------------------------------------------------------------------------------|
| | | OFF | ON | OFF | ON | |
| SW1 | 1 | Room temp. sensor position | Indoor unit inlet | Built in remote controller | | |
| | 2 | Clogged filter detect. | None | Provided | | |
| | 3 | Filter duration | 100h | 2500h | | |
| | 4 | OA intake | Ineffective | Effective | | Always ineffective for PKFY-P.VAM |
| | 5 | Remote display select. | Fan output display | Thermo. ON signal display | | |
| | 6 | Humidifier control | At stationary heating | Always at heat. | | |
| | 7 | Heating thermo. OFF airflow | Very low speed | Low speed | | |
| | 8 | Heating thermo. OFF airflow | SW1-7 setting | Set airflow | | |
| | 9 | Power failure automatic return | Ineffective | Effective | | |
| | 10 | Power source start/stop | Ineffective | Effective | | |
| SW3 | 1 | Model selection | Heat pump | Cool. only | At unit stopping (at remote controller OFF) | |
| | 2 | Louver <small>(Cooling capacity saving for PKFY-P. VAM, effective/ineffective)</small> | None | Provided | | |
| | 3 | Vane | None | Provided | | |
| | 4 | Vane swing function | None | Provided | | Not provided for PKFY-P.VAM Provided for PLFY-P.VGM (ON) setting |
| | 5 | Vane horizontal angle | 1st setting | 2nd setting | | |
| | 6 | Vane angle set for cooling | Down blow B, C | Horizontal | | Always down blow B,C for PKFY-P.VAM Horizontal (ON) setting for PLFY-P.VLMD |
| | 7 | – | – | – | | |
| | 8 | Heating 4deg up | Effective | Ineffective | | Ineffective (ON) setting for floor standing |
| | 9 | – | – | – | | |
| | 10 | – | – | – | | |

Note 1: The shaded part indicates the setting at factory shipment. (For the SW not being shaded, refer to the table below.)

| Model Switch | PLFY-P | | | PEFY-P | | | | PDFY-P | PFFY-P | PCFY-P | PKFY-P | | |
|-----------------|--------|--------|-------|--------|-------|------------|--------------|--------|----------------|--------|--------|-------|-----|
| | VBM-A | VLMD-A | VKM-A | VML-A | VMH-A | 20-80VMM-A | 100-140VMM-A | VM-A | VLRM-A, VLEM-A | VGM-A | VAM-A | VGM-A | |
| SW1 | 3 | OFF | ON | OFF | ON | OFF | ON | ON | OFF | ON | OFF | OFF | |
| | 6 | OFF | ON | | | | | | | OFF | OFF | OFF | OFF |
| | 7 | OFF | | ON | OFF | ON | OFF | | | | | | |
| SW3 | 3 | ON | | OFF | | | | | ON | ON | ON | ON | ON |
| | 4 | ON | OFF | ON | OFF | | | | | ON | OFF | ON | |
| | 6 | OFF | ON | OFF | | | | | | | ON | ON | ON |
| | 8 | OFF | | | | | | | ON | ON | ON | OFF | |

Note 2: The DipSW setting is only effective during unit stopping (remote controller OFF) for SW1, 2, 3 and 4 commonly and the power source is not required to reset.)

3: When both SW1-7 and SW1-8 are being set to ON, the fan stops at the heating thermostat of OFF.

Setting of DIP SW2

| Model | P20 | P25 | P32 | P40 | P50 | P63 |
|----------------------------|-----|-----|-----|-----|-----|-----|
| Capacity (model name) code | 4 | 5 | 6 | 8 | 10 | 13 |
| SW2 setting | | | | | | |






| Model | P71 | P80 | P100 | P125 | P140 | P200 | P250 |
|----------------------------|-----|-----|------|------|------|------|------|
| Capacity (model name) code | 14 | 16 | 20 | 25 | 28 | 40 | 50 |
| SW2 setting | | | | | | | |

Setting of DIP SW4

| Model | Circuit board used | SW4 | | | |
|-------------------------|--------------------|-----|-----|-----|-----|
| | | 1 | 2 | 3 | 4 |
| PMFY-P-VBM-A | Phase control | ON | OFF | ON | OFF |
| PLFY-P-VLMD-A | | - | - | - | - |
| PDFY-P20 ~ 80VM-A | | ON | OFF | ON | OFF |
| PLFY-P40 ~ 63VKM-A | | OFF | OFF | OFF | ON |
| PLFY-P80 ~ 125VKM-A | | ON | OFF | OFF | ON |
| PCFY-P-VGM-A | | OFF | ON | OFF | ON |
| PKFY-P-VGM-A | | OFF | OFF | ON | ON |
| PKFY-P-VAM-A | | - | - | - | - |
| PEFY-P20 ~ 80VMM-A | | ON | ON | OFF | OFF |
| PFFY-P-VLEM-A, P-VLRM-A | Relay selection | OFF | OFF | OFF | - |
| PEFY-P20 ~ 32VML-A | | ON | ON | ON | - |
| PEFY-P40 ~ 140VMH-A | | OFF | OFF | OFF | - |
| PEHY-P200-250VMH-A | | ON | OFF | OFF | - |
| PDFY-P100-125VM-A | | OFF | OFF | ON | - |
| PEFY-P100 ~ 140VMM-A | | ON | ON | ON | OFF |

Setting of DIP SW5



| Switch | Function | Operation by switch | Switch set timing | | | | | | | | | | | | | | | | |
|----------------|----------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------|---|---|-------|-------|-------|-------|-------|-----------------------|-------|-------|-------|-------|-------|-------|-------|-----------------------|
| SWA | Ceiling height setting | <p>(PLFY-P-VKM-A) (PCFY-P-VGM-A)</p>  <p>* The ceiling height is changed by SWB setting.</p> <table border="1"> <thead> <tr> <th colspan="2">Ceiling height</th> </tr> </thead> <tbody> <tr> <td>3</td> <td>3.5 m</td> </tr> <tr> <td>2</td> <td>2.8 m</td> </tr> <tr> <td>1</td> <td>2.3 m</td> </tr> </tbody> </table> | Ceiling height | | 3 | 3.5 m | 2 | 2.8 m | 1 | 2.3 m | Always after powering | | | | | | | | |
| Ceiling height | | | | | | | | | | | | | | | | | | | |
| 3 | 3.5 m | | | | | | | | | | | | | | | | | | |
| 2 | 2.8 m | | | | | | | | | | | | | | | | | | |
| 1 | 2.3 m | | | | | | | | | | | | | | | | | | |
| SWA | External static pressure setting | <p>(PDFY-P20 ~ 80VM-A, PEFY-P20 ~ 80VMM-A)</p>  <p>100Pa 50Pa 30Pa</p> <p>* For other models, change the setting of static pressure by replacing the connector.</p> | Always after powering | | | | | | | | | | | | | | | | |
| SWA | For options | <p>(PLFY-P-VLMD-A)</p>  <p>* As this switch is used by interlocking with SWC, refer to the item of SWC for detail.</p> | Always after powering | | | | | | | | | | | | | | | | |
| SWB | Setting of air outlet opening | <p>(PLFY-P-VKM-A)</p>  <table border="1"> <thead> <tr> <th>SWA \ SWB</th> <th>1</th> <th>2</th> <th>3</th> </tr> </thead> <tbody> <tr> <td>2-way</td> <td>3.5 m</td> <td>3.8 m</td> <td>3.8 m</td> </tr> <tr> <td>3-way</td> <td>3.0 m</td> <td>3.3 m</td> <td>3.5 m</td> </tr> <tr> <td>4-way</td> <td>2.7 m</td> <td>3.0 m</td> <td>3.5 m</td> </tr> </tbody> </table> | SWA \ SWB | 1 | 2 | 3 | 2-way | 3.5 m | 3.8 m | 3.8 m | 3-way | 3.0 m | 3.3 m | 3.5 m | 4-way | 2.7 m | 3.0 m | 3.5 m | Always after powering |
| SWA \ SWB | 1 | 2 | 3 | | | | | | | | | | | | | | | | |
| 2-way | 3.5 m | 3.8 m | 3.8 m | | | | | | | | | | | | | | | | |
| 3-way | 3.0 m | 3.3 m | 3.5 m | | | | | | | | | | | | | | | | |
| 4-way | 2.7 m | 3.0 m | 3.5 m | | | | | | | | | | | | | | | | |
| SWC | Airflow control | <p>(PLFY-P-VKM-A, PCFY-P-VGM-A, PKFY-P-VGM-A, PDFY-P-VM-A)</p>  <p>* Set to the option to install the high efficiency filter</p> | Always after powering | | | | | | | | | | | | | | | | |

3 TEST RUN

[1] Before Test Run

(1) Check points before test run




| | | | | |
|---|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------|------------------------------|--------------|
| 1 | Neither refrigerant leak nor loose power source/ transmission lines should be found. | | | |
| 2 | Confirm that the resistance between the power source terminal block and the ground exceeds 2MΩ by measuring it with a DC 500 V megger. Do not run if it is lower than 2MΩ. Note: Never apply the megger to the MAIN board. If applied, the MAIN board will be broken. | | | |
| 3 | Confirm that the Ball valve at gas and liquid, oil balance sides are fully opened. Note: Certainly close the cap. | | | |
| 4 | Be sure that the crankcase heater has been powered by turning the main power source on at least 12 hours before starting the test run. The shorter powering time causes compressor trouble. | | | |
| 5 | If any of the power supply wires (L1, L2, L3, N, ⊕.) are mistakenly connected, it is possible to damage the unit. Please exercise caution. | | | |
| 6 | A transmission booster (RP) is required when the number of connected indoor unit models in a cooling system exceeds the number of models specified in the chart below. Note: The maximum number of units that can be controlled is determined by the indoor unit model, the type of remote controller and their capabilities. | | | |
| | (*1) Capability of the connected indoor units | Remote controller type | Remote controller PAR-F 25MA | |
| | | Number of connected indoor units that can be connected without a RP. | Prior to Ver. E | After Ver. F |
| | | 200 or lower | 16 (32) | 20 (40) |
| | | 200 or higher | 16 (32) | 16 (32) |
| | The number of indoor units and the total number of remote controllers is displayed within the parenthesis (). | | | |
| | (*1) If even one unit that is higher than 200 exists in the cooling system, the maximum capacity will be "200 or higher". | | | |

* Please refer to the installation manual for more details.

* Before turning power on to the outdoor unit, first turn on the transmission booster. (If the outdoor unit are mistakenly turned on first, turn on the transmission booster and then reset the outdoor unit power.)

(2) Caution at inverter check


Because the inverter power portion in outdoor unit electrical part box have a lot of high voltage portion, be sure to follow the instructions shown below.

| | | | |
|---|-----------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------|--|
| 1 | During energizing power source, never touch inverter power portion because high voltage (approx. 580 V) is applied to inverter power portion. | | |
| 2 | When checking, | | |
| |  | Shut off main power source, and check it with tester, etc. | |
| |  | Allow 10 minutes after shutting off main power source. | |
| |  | Open the MAIN board mounting panel, and check whether voltage of both ends of electrolytic capacitor is 20 V or less. | |

(3) Check points for test run when mounting options

| Built-in optional parts | Content of test run | Check point | Result |
|----------------------------------------------|---------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------|--------|
| Mounting of drain water lifting-up mechanism | 1 Release connector of pump circuit, check error detection by pouring water into drain pan water inlet. | Local remote controller displays code No. "2503", and the mechanism stops. | |
| | | No overflow from drain pan. | |
| | 2 After that, connect connector of circuit. | Drain water comes out by operations of drain pump. | |
| | 3 Check pump operations and drainage status in cooling (test run) mode. | Sound of pump operations is heard, and drain water comes out. | |
| Mounting of permeable film humidifier | Check humidifier operations and water supply status in heating (test run) mode. | No water leak from connecting portions of each water piping. | |
| | | Water is supplied to water supply tank, and float switch is operating. | |


(4) Attention for mounting drain water lifting-up mechanism
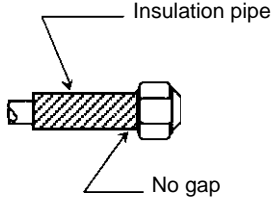
| Work | Content of test run | Check point | Result |
|------------------------------------------------------------------|------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|--------|
| Disassembling and assembling of drain water lifting-up mechanism | 1 Lead wire from control box not damaged. |  | |
| | 2 Rubber cap properly inserted to drain water outlet of drain pan? | | |
| | 3 Insulation pipe of gas and liquid pipes dealt with as shown in the right figure? | | |
| | 4 Drain pan and piping cover mounted without gap? | | |
| | 5 Drain pan hooked on cut projection of the mechanism? | | |
| Mounting of float switch | Float switch installed without contacting with drain pan? | 1 Float switch moves smoothly. | |
| | | 2 Float switch is mounted on mounting board straight without deformation. | |
| | | 3 Float switch does not contact with copper pipe. | |
| Electric wiring | 1 No mistakes in wiring? | Wiring procedure is exactly followed. | |
| | 2 Connectors connected securely and tightly? | Connector portion is tightly hooked. | |
| | 3 No tension on lead wire when sliding control box? | | |


(5) Check points for system structure

In the case of the PURY-P400-500 YMF-C

Check points from installation work to test run.

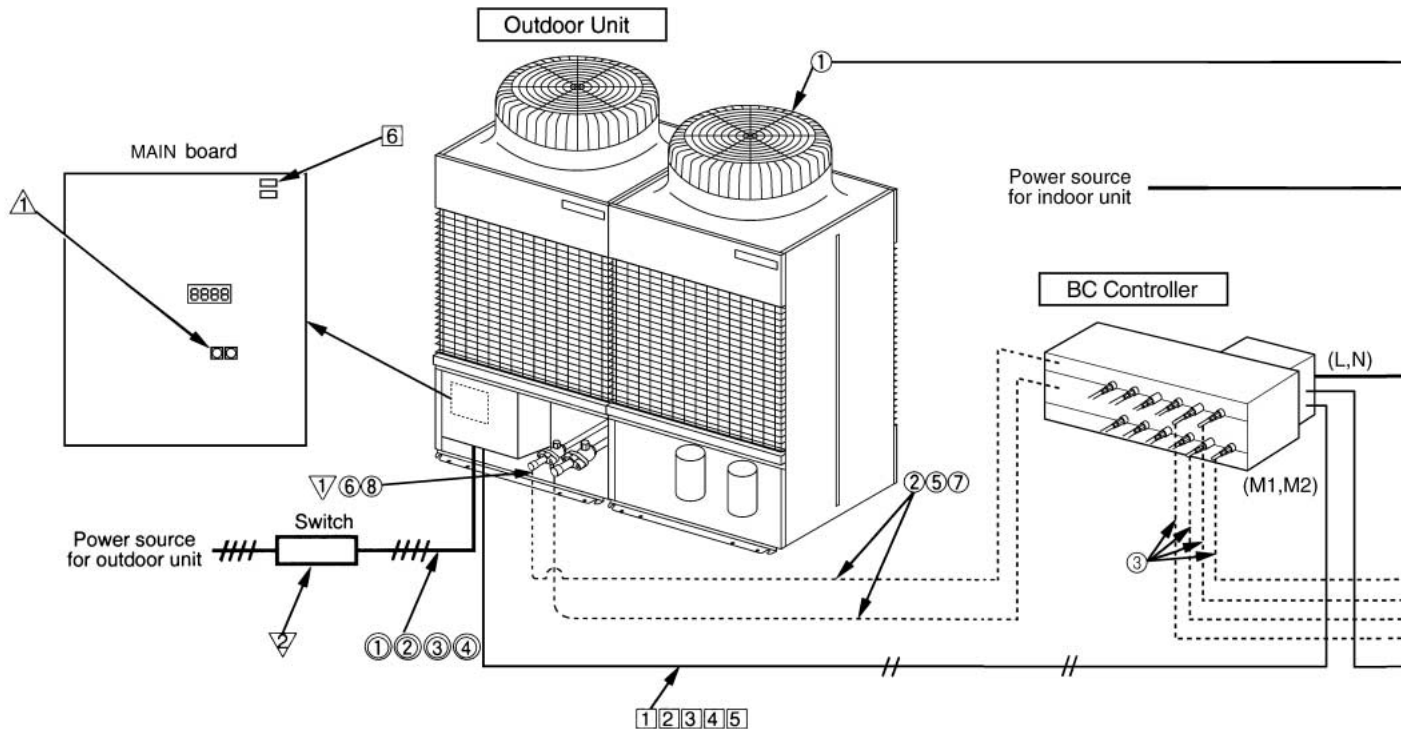



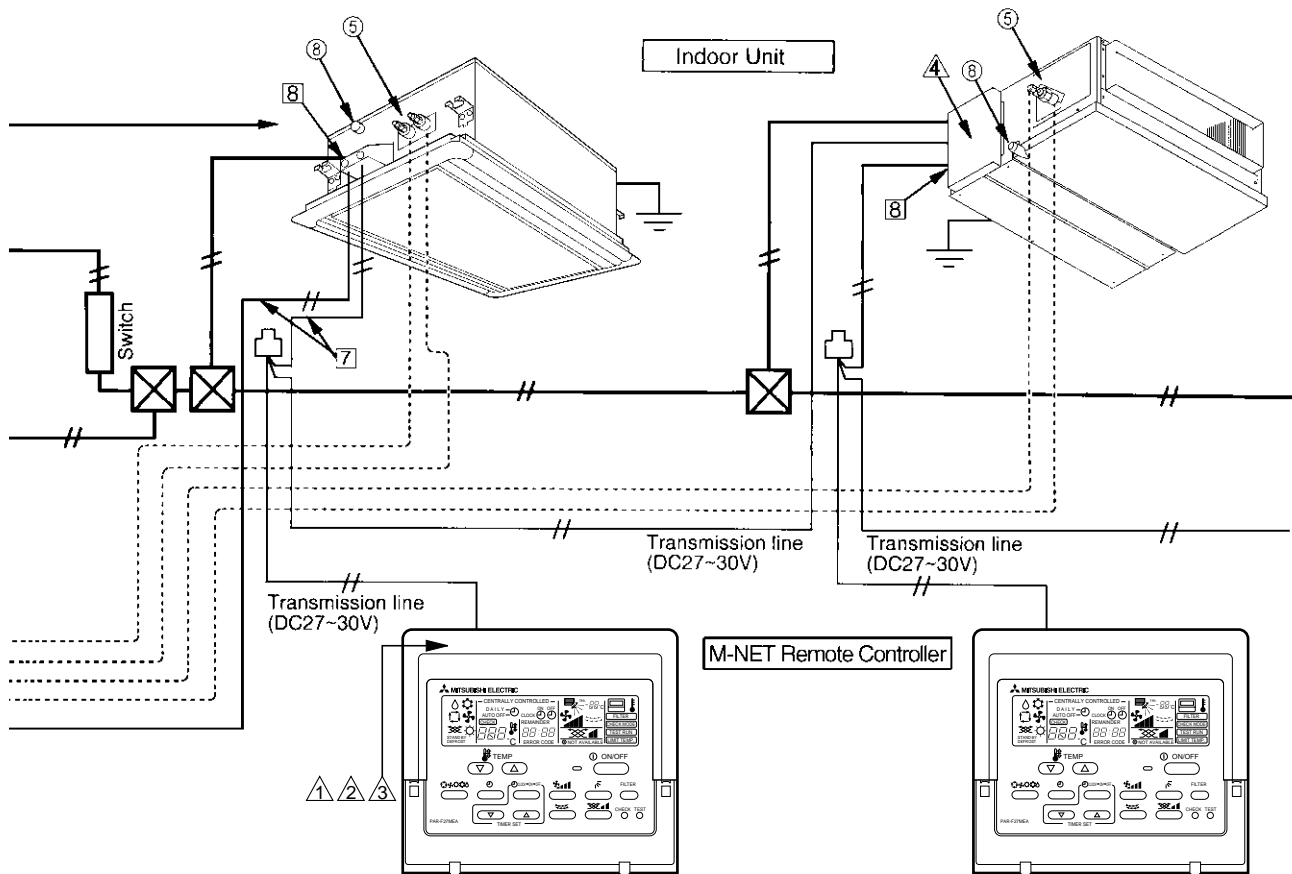





| Classification | Portion | Check item | Trouble |
|-------------------------|---------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------|
| Installation and piping | ① | Instruction for selecting combination of outdoor unit, and indoor unit followed? (Maximum number of indoor units which can be connected, connecting model name, and total capacity.) | Not operate. |
| | ② | Follow limitation of refrigerant piping length? For example, 100 m or less (total length: 220 m) at the farthest. | Not cool (at cooling). Not heat (at heating). |
| | ③ | Connecting piping size of branch piping correct? | |
| | ④ | Branch pipe properly selected? | |
| | ⑤ | Refrigerant piping diameter correct? | |
| | ⑥ | Refrigerant leak generated at connection? | Not cool, not heat, error stop. |
| | ⑦ | Insulation work for piping properly done? | Condensation drip in piping. |
| | ⑧ | Specified amount of refrigerant replenished? | Not cool, not heat, error stop. |
| | ⑨ | Pitch and insulation work for drain piping properly done? | Water leak, condensation drip in drain piping. |
| Power source wiring | ① | Specified switch capacity and wiring diameter of main power source used? | Error stop, not operate. |
| | ② | Proper grounding work done on outdoor unit? | Electric shock. |
| | ③ | The phases of the L line (L1, L2, L3) correct? | Error stop, not operate. |
| | ④ | L line and N line connected correct? | Some electric parts will be damaged. |



| Classification | Portion | Check item | Trouble |
|-------------------|---------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|
| Transmission line | ① | Limitation of transmission line length followed? For example, 200m or less (total length : 500m) at the farthest. | Erroneous operation, error stop. |
| | ② | 1.25mm ² or more transmission line used? (Remote controller 10m or less 0.75mm ²) | Erroneous operation, error stop. |
| | ③ | 2-core cable used for transmission line? | Error stop in case multiple-core cable is used. |
| | ④ | Transmission line apart from power source line by 5cm or more? | Erroneous operation, error stop. |
| | ⑤ | One refrigerant system per transmission line? | Not operate. |
| | ⑥ | The short circuit connector is changed from CN41 to CN40 on the MAIN board when the system is centralized control? (Just one outdoor unit. Not all outdoor units.) | Not operate. |
| | ⑦ | • No connection trouble in transmission line? | Error stop or not operate. |
| | ⑧ | Connection of wrong remote controller line terminals? • MA Remote controller : TB15 • M-NET Remote controller : TB5 | Never finish the initial mode. |
| System set | ① | Address setting properly done? (M-NET Remote controller, indoor unit, BC controller and outdoor unit.) | Error stop or not operate. |
| | ② | Setting of address No. done when shutting off power source? | Can not be properly set with power source turned on. |
| | ③ | Address numbers not duplicated? | Not operate. |
| | ④ | Turned on SW3-8 on indoor unit circuit board when mounting room thermistor sensor? | Set temperature not obtained at heating operations (Thermostat stop is difficult) |
| Before starting | ① | Refrigerant piping ball valve (Liquid pressure pipe, gas pressure pipe) opened? | Error stop. |
| | ② | Turn on power source 12 hours before starting operations? | Error stop, compressor trouble. |


[2] Test Run Method

| Operation procedure | |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ① | Turn on universal power supply at least 12 hours before starting → Displaying “HO” on display panel for about two minutes |
| ② | Press TEST RUN button twice → Displaying “TEST RUN” on display panel |
| ③ | Press  selection button → Make sure that air is blowing out |
| ④ | Press  select button to change from cooling to heating operation, and vice versa → Make sure that warm or cold air is blowing out |
| ⑤ | Press  adjust button → Make sure that air blow is changed |
| ⑥ | Press  or  button to change wind → Make sure that horizontal or downward blow is adjustable. |
| ⑦ | Make sure that indoor unit fans operate normally |
| ⑧ | Make sure that interlocking devices such as ventilator operate normally if any |
| ⑨ | Press ON/OFF button to cancel test run → Stop operation |
| <p>Note 1: If check code is displayed on remote controller or remote controller does not operate normally.</p> <p>2: Test run automatically stops operating after two hours by activation of timer set to two hours.</p> <p>3: During test run, test run remaining time is displayed on time display section.</p> <p>4: During test run, temperature of liquid pipe in indoor unit is displayed on remote controller room temperature display section.</p> <p>5: When pressing  adjust button, depending on the model, “NOT AVAILABLE” may be displayed on remote controller. However, it is not a malfunction.</p> <p>6: When pressing  or  button, depending on the model, “NOT AVAILABLE” may be displayed on remote controller. However, it is not a malfunction.</p> | |

4 GROUPING REGISTRATION OF INDOOR UNITS WITH M-NET REMOTE CONTROLLER

(1) Switch function

- The switch operation to register with the remote controller is shown below:

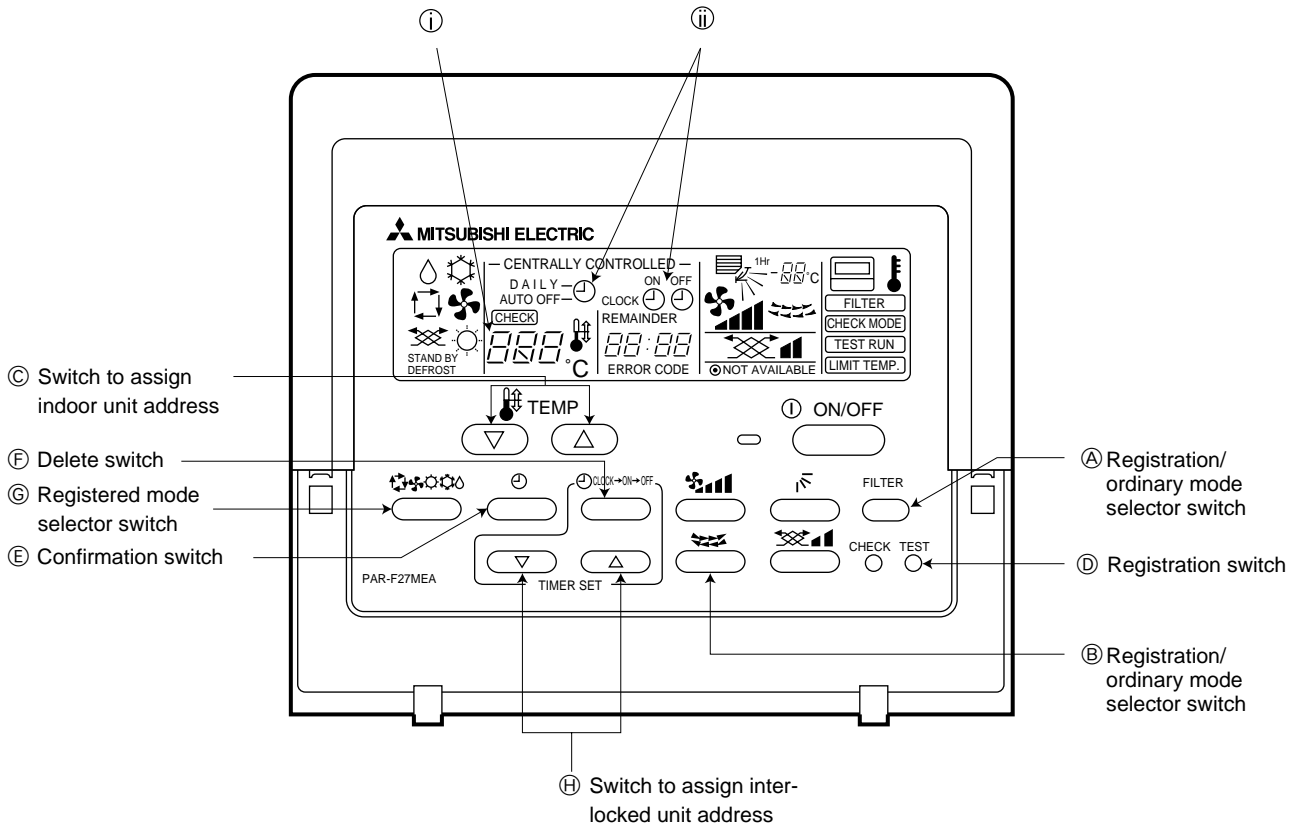

| Name | Symbol of switch | Name of actual switch | Description |
|---------------------------------------------|------------------|-----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Registration/ordinary mode selection switch | Ⓐ + Ⓑ | (FILTER) + | This switch selects the ordinary mode or registered mode (ordinary mode represents that to operate indoor units). * To select the registered mode, press the (FILTER) + switch continuously for over 2 seconds under stopping state. [Note] The registered mode can not be obtained for a while after powering. Pressing the (FILTER) + switch displays "CENTRALLY CONTROLLED". |
| Switch to assign indoor unit address | Ⓒ | of TEMP | This switch assigns the unit address for "INDOOR UNIT ADDRESS NO." |
| Registration switch | Ⓓ | (TEST RUN) | This switch is used for group/interlocked registration. |
| Confirmation switch | Ⓔ | | This switch is used to retrieve/identify the content of group and interlocked (connection information) registered. |
| Delete switch | Ⓕ | CLOCK → ON → OFF | This switch is used to retrieve/identify the content of group and interlocked (connection information) registered. |
| Registered mode selector switch | Ⓖ | | This switch selects the case to register indoor units as group (group setting mode) or that as interlocked (interlocked setting mode). *The unit address is shown at one spot ① for the group setting mode while at two spots ② for the interlocked setting mode. |
| Switch to assign interlocked unit address | Ⓕ | of TIMER SET | This switch assigns the unit address of "OA UNIT ADDRESS NO." |

(2) Attribute display of unit

- At the group registration and the confirmation/deletion of registration/connection information, the type (attribute) of the unit is displayed with two English characters.

| Display | Type (Attribute) of unit/controller |
|---------|----------------------------------------------|
| IE | Indoor unit connectable to remote controller |
| OE | Outdoor unit |
| BE | BC controller (Master) |
| UE | BC controller (Slave) |
| RE | Local remote controller |
| SE | System controller (MJ) |

[Description of registration/deletion/retrieval]

- The items of operation to be performed by the remote controller are given below. Please see the relating paragraph for detail.

① Group registration of indoor unit

- The group of the indoor units and operating remote controller is registered.
- It is usually used for the group operation of indoor units with different refrigerant system.

② Retrieval/identification of group registration information of indoor units

- The address of the registered indoor units in group is retrieved (identified).

③ Retrieval/identification of registration information

- The connection information of any unit (indoor/outdoor units, remote controller or the like) is retrieved (identified).

④ Deletion of group registration information of indoor units

- The registration of the indoor units under group registration is released (deleted).

⑤ Deletion of the address not existing

- This operation is to be conducted when "6607" error (No ACK error) is displayed on the remote controller caused by the miss setting at test run, or due to the old memory remained at the alteration/modification of the group composition.

Caution:

When MELANS (MJ-103MTRA for example) is being connected, do not conduct the group/pair registration using the remote controller. The group/pair registration should be conducted by MELANS. (For detail, refer to the instruction exclusively prepared for MELANS.)



(3) Group registration of indoor unit

1) Registration method

- Group registration of indoor unit ①
The indoor unit to be controlled by a remote controller is registered on the remote controller.

[Registration procedure]

- ① With the remote controller under stopping or at the display of "HO", continuously press the **FILTER** + switch (A + B) at the same time for 2 seconds to change to the registration mode. (See the figure below.)
- ② Assign the indoor unit address to "INDOOR UNIT ADDRESS NO." by operating the (Room temperature adjustment) (C).
Then press the **TEST RUN** switch (D) to register. In the figure below, the "INDOOR UNIT ADDRESS NO." is being set to 001.
- ③ After completing the registration, press the **FILTER** + switch (A + B) at the same time for 2 seconds to change to the original ordinary mode (with the remote controller under stopping).

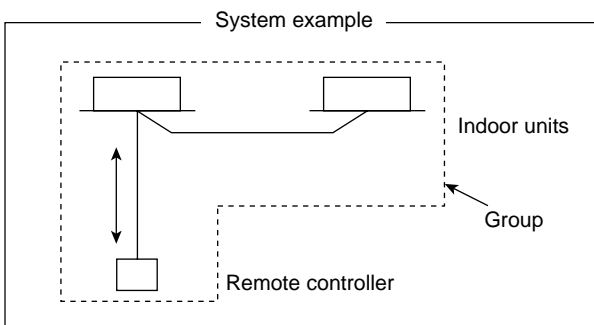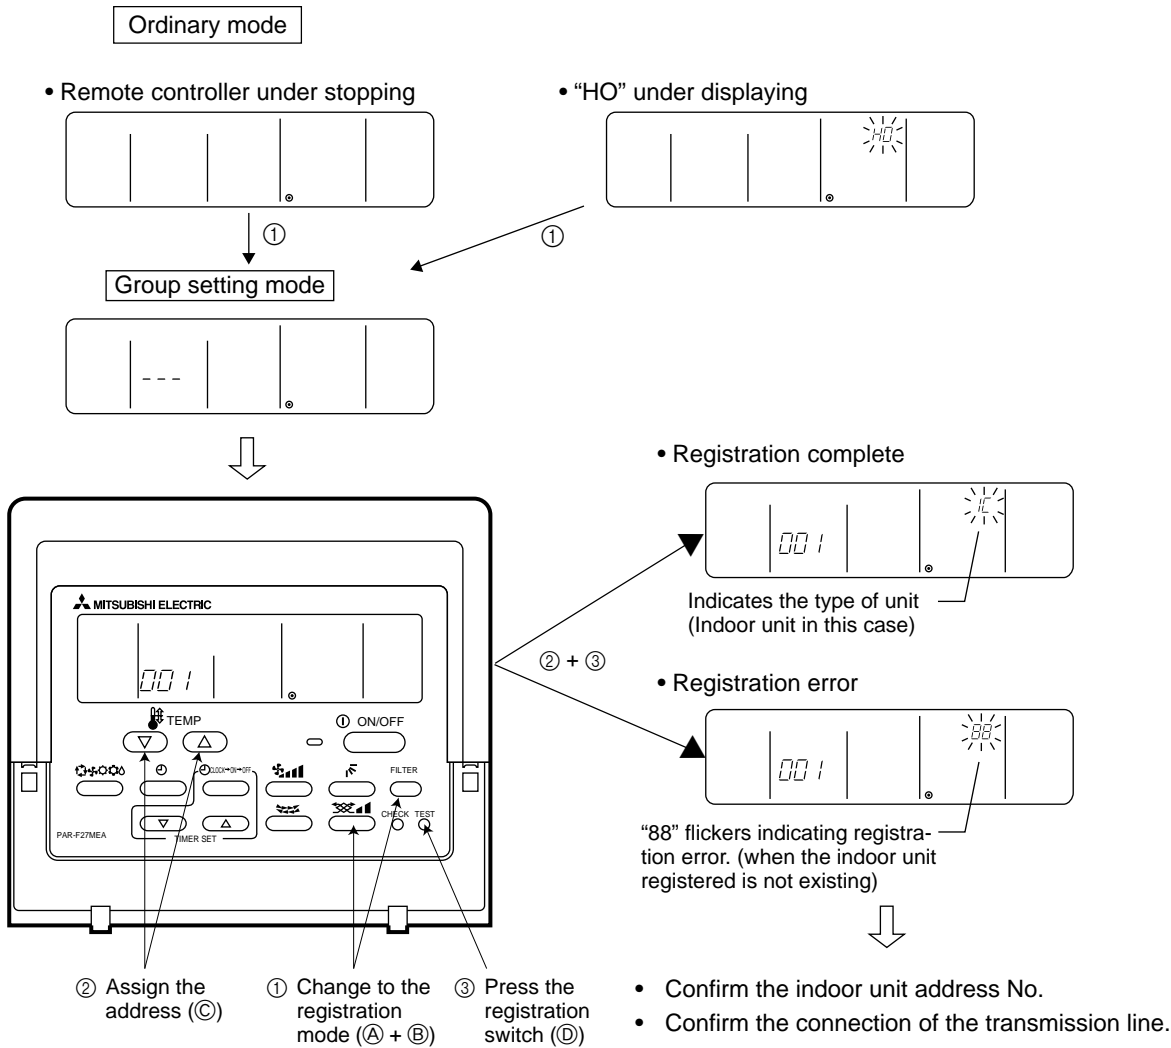


2) Method of retrieval/confirmation

- Retrieval/confirmation of group registration information on indoor unit [2]
The address of the indoor unit being registered on the remote controller is displayed.

[Operation procedure]


- ① With the remote controller under stopping or at the display of "HO", continuously press the (FILTER) + [switch (A) + (B)] at the same time for 2 seconds to change to the registration mode.
- ② In order to confirm the indoor unit address already registered, press [switch (E)]. (See figure below.) When the group of plural sets is registered, the addresses will be displayed in order at each pressing of [switch (E)].
- ③ After completing the registration, continuously press the (FILTER) + [switch (A) + (B)] at the same time for 2 seconds to change to the original ordinary mode (with the remote controller under stopping).

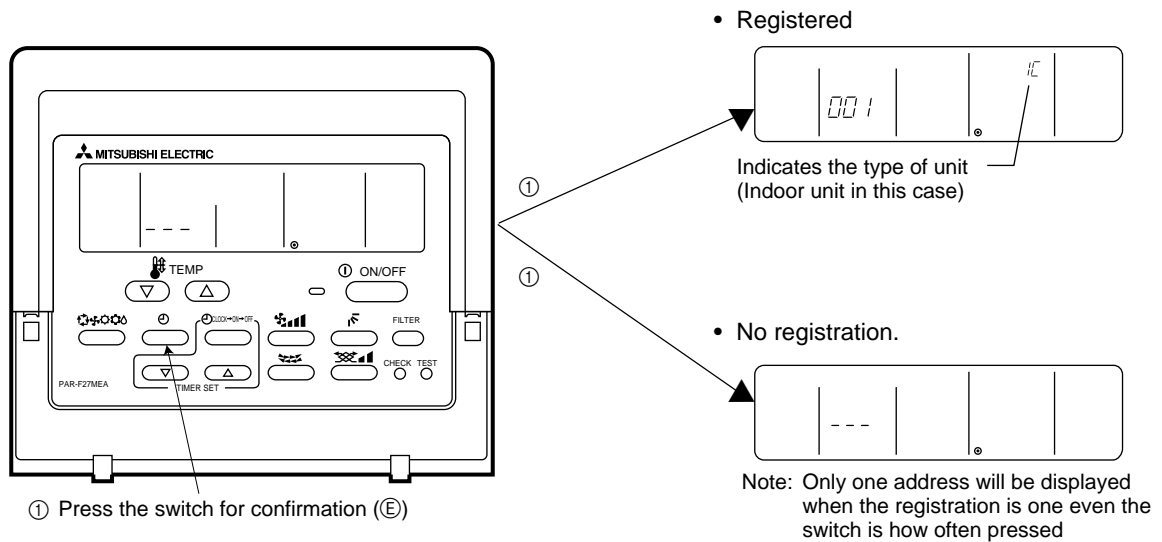

- Retrieval/confirmation of registration information [3]
The registered information on a certain unit (indoor unit, outdoor unit, remote controller or the like) is displayed.

[Operation procedure]

- ① With the remote controller under stopping or at the display of "HO", continuously press the (FILTER) + [switch (A) + (B)] at the same time for 2 seconds to change to the registration mode.
- ② Operate [switch (C)] for the interlocked setting mode. (See figure below.)
- ③ Assign the unit address of which registration information is desired to confirm with the [switch (H)] (TIMER SET) switch. Then press the [switch (E)] to display it on the remote controller. (See figure below.)
Each pressing of [switch (E)] changes the display of registered content. (See figure below.)
- ④ After completing the retrieval/confirmation, continuously press the (FILTER) + [switch (A) + (B)] at the same time for 2 seconds to change to the original ordinary mode (with the remote controller under stopping).

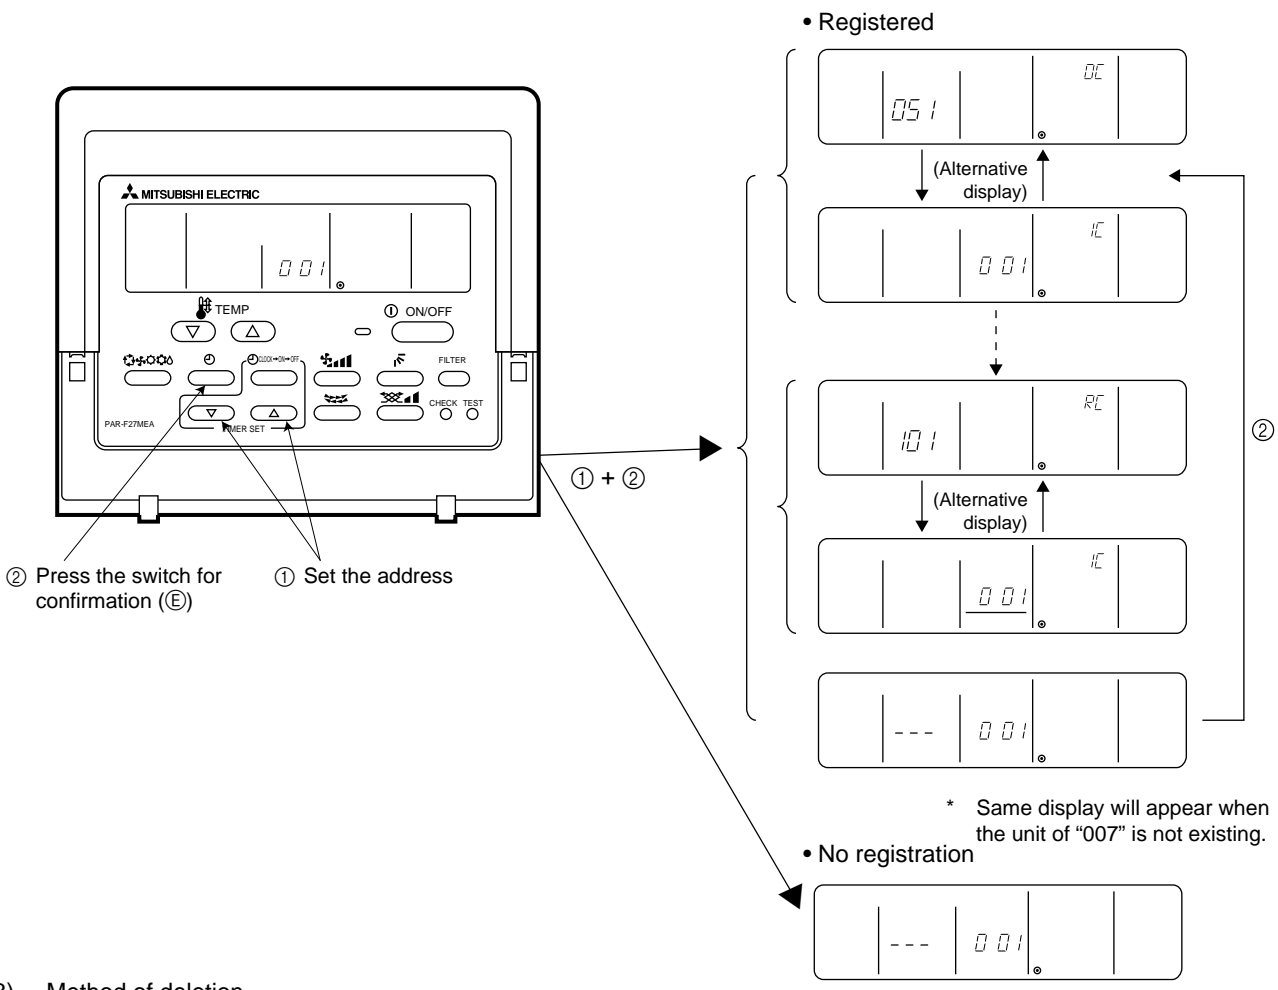


3) Method of deletion

- Deletion of group registration information of indoor unit [4]

[Operation procedure]

- ① With the remote controller under stopping or at the display of "HO", continuously press the (FILTER) + [A+B] switch (A + B) at the same time for 2 seconds to change to the registration mode.
- ② Press the [E] switch (E) to display the indoor unit address registered. (As same as [2])
- ③ In order to delete the registered indoor unit being displayed on the remote controller, press the [E] switch (E) two times continuously. At completion of the deletion, the attribute display section will be shown as "--". (See figure below.)
Note: Completing the deletion of all indoor units registered on the remote controller returns to "HO" display.
- ④ After completing the registration, continuously press the (FILTER) + [A+B] switch (A + B) at the same time for 2 seconds to change to the original ordinary mode (with the remote controller under stopping).

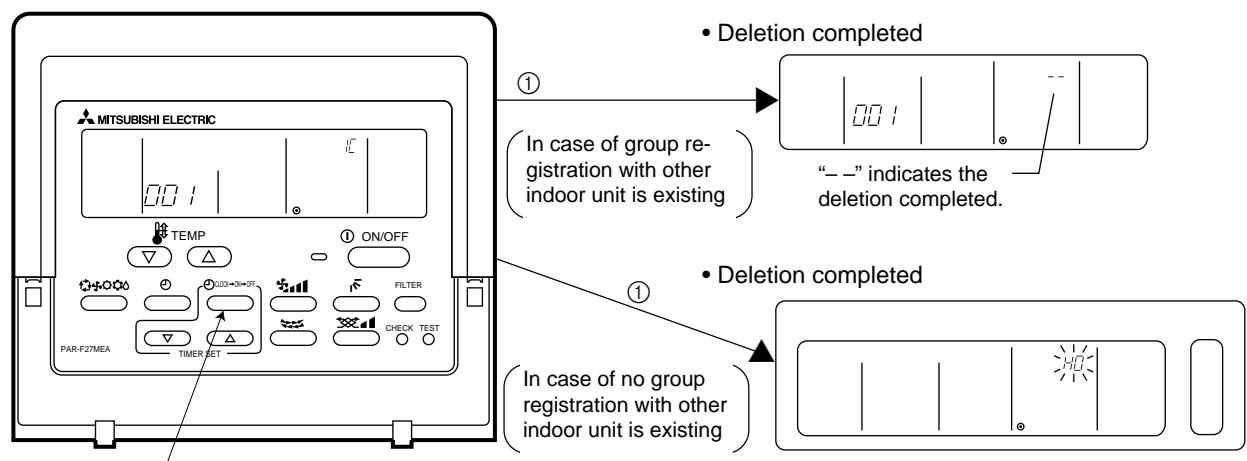

- ① Press the switch for confirmation (E) twice continuously.

4) Deletion of information on address not existing

- Deletion of information on address not existing 5


This operation is to be conducted when “6607” error (No ACK error) is displayed on the remote controller caused by the miss setting at test run, or due to the old memory remained at the alteration/modification of group composition, and the address not existing will be deleted.

Note: The connection information (connection between indoor unit and outdoor unit) on the refrigerant system can not be deleted.

An example to delete the system controller of “250” from the indoor unit of “007” is shown below.

[Operation procedure]

- ① With the remote controller under stopping or at the display of “HO”, continuously press the (FILTER) + (A + B) switch at the same time for 2 seconds to change to the registration mode.
- ② Operate (C) switch for the interlocked setting mode (ii). (See the figure below.)
- ③ Assign the unit address existing to “OA UNIT ADDRESS No.” with the (TIMER SET) switch (H), and press (E) switch to call the address to be deleted. (See the figure below.) As the error display on the remote controller is usually transmitted from the indoor unit, “OA UNIT ADDRESS No.” is used as the address of the indoor unit.
- ④ Press the (F) switch twice. (See the figure below.)
- ⑤ After completing the deletion, continuously press the (FILTER) + (A + B) switch at the same time for 2 seconds to return to the original ordinary mode (with the remote controller under stopping).

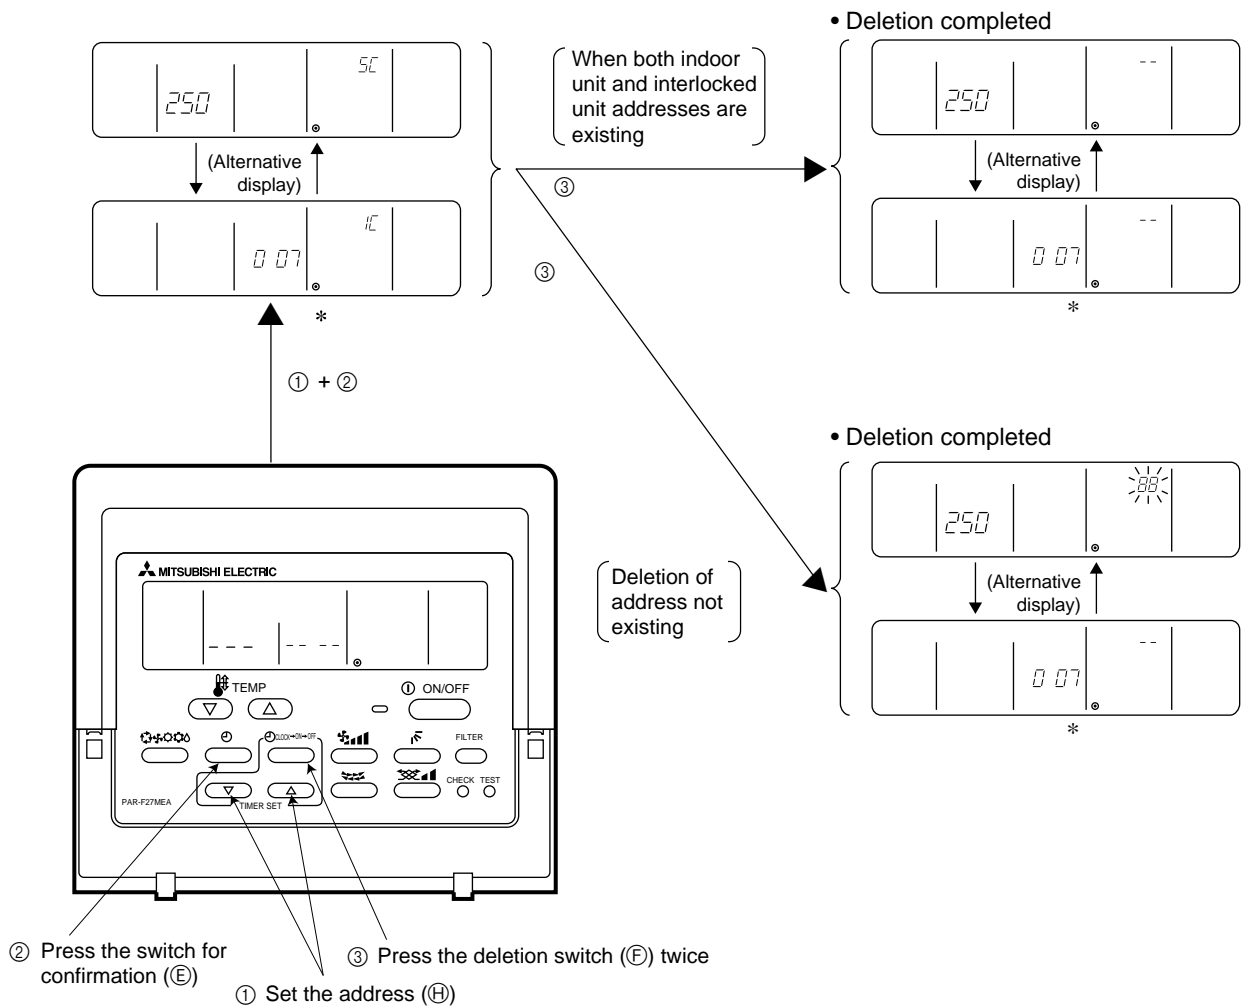

5 CONTROL

[1] Control of Outdoor Unit

[1]- 1 PURY-P400-500 YMF-C

(1) Initial processing

- When turning on power source, initial processing of microcomputer is given top priority.
- During initial processing, control processing corresponding to operation signal is suspended. The control processing is resumed after initial processing is completed. (Initial processing: Data processing in microcomputer and initial setting of each LEV opening, requiring approx. 3 minutes at the maximum.)

(2) Control at starting

- For 3 minutes after starting, 60 Hz is the upper frequency limit. (When only No. 1 compressor is operating.)
- 75 Hz is the upper limit within 2 hours after the power supply has been turned ON and for the 30 minutes after the compressor has started operation.
- Normal control is performed after the initial start mode (described later) has been completed.

(3) Compressor capacity control

- Variable capacitor compressor is performed by the variable capacity compressor (No. 1: inverter motor) and constant capacity compressor (No. 2: It has capacity control switching).
- In response to the required performance, the number of compressors operating, the switching of capacity control and the frequency of the variable capacitor compressor is controlled so that the evaporation temperature is between -2 and -6°C in cooling mode and that the condensation temperature is 49°C in heating mode.
- The fluctuation of the frequency of the variable capacitor compressor is as follows. It is performed at 2 Hz per second.
20 to 100 Hz (TH6 > 20°C and in cooling mode, or in heating mode)
30 to 100 Hz (TH6 < 20°C and in cooling mode)

1) No. 2 compressor operation, stopping and full-load/un-load switching

① Switching from stopping to operation of No. 2 compressor.

When the required performance cannot be obtained by only No. 1 compressor, the No. 2 compressor will be started. (The No. 2 compressor will be started in un-load operation.)

- After the No. 1 compressor has reached 100 Hz, the No. 2 compressor stops → un-load or un-load → full-load.

② Switching from operation to stopping of No. 2 compressor.

When the required performance is exceeded when the two compressors, No. 1 and No. 2, are operating, the No. 2 compressor is stopped or performed in un-load operation.

③ Switching from un-load to full-load of No. 2 compressor

When the required performance cannot be obtained by the No. 1 compressor and the No. 2 compressor operating in un-load, the No. 2 compressor will be switched to full-load operation.

④ Switching from full-load to un-load of No. 2 compressor

When the required performance is exceeded when the two compressors, No.1 and No. 2 operating in full-load, the No 2 compressor will be switched to un-load operation.

2) Pressure control

The upper limit value for the high pressure (Pd) has been set for each frequency. When this value is exceeded, the frequency is reduced every 30 seconds.

3) Discharge temperature control

The discharge temperature of the compressor (Td) is monitored during the operation. If the upper limit is exceeded, the frequency is reduced by 5 Hz.

- Control is performed every 30 seconds after 30 seconds at the compressor starting.

- The operating temperature is 124°C (No. 1 compressor) or 115°C (No. 2 compressor).

4) Compressor frequency control

① Ordinary control

The ordinary control is performed after the following times have passed.

- 30 seconds after the start of the compressor or 30 seconds after the completion of defrosting.
- 30 seconds after frequency control operation by means of the discharge temperature or the high pressure.

② Amount of frequency fluctuation


The amount of frequency fluctuation is controlled in response to the evaporation temperature (T_e) and the condensation temperature (T_c) so that it will reach the target values.

③ Frequency control back-up by the bypass valve

Frequency control is backed-up by the turning on (opening) the bypass valve (SV4a) when only the No. 1 compressor is operated at its lowest frequency.


• Cooling

After the compressor has been operated for 15 minutes and only the No. 1 compressor is operated in un-load (its lowest frequency), the bypass valve is turned ON when the low pressure (63 LS) is 1.0 kg/cm² G (0.098 MPa) or less and turned OFF when it is 2.0 kg/cm² G (0.196 MPa) or more.

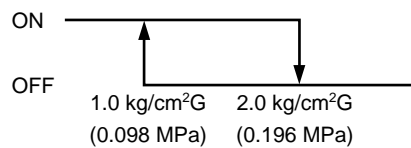

• Heating

After the compressor has been operated for 3 minutes and only the No. 1 compressor is operated in un-load (its lowest frequency), the bypass valve is turned ON when the high pressure (P_d) exceeds 27 kg/cm² (2.65 MPa) and turned OFF when it is 24 kg/cm² (2.35 MPa) or less.

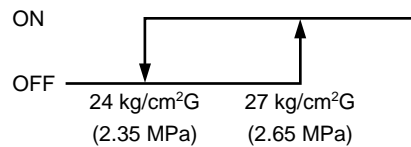

(4) Bypass - capacity control

The solenoid valves are bypass valves (SV1, SV4a and SV6a) that allow bypassing of the high pressure and low pressure sides and solenoid valves (SV22 and SV32) that control the capacity control valve inside the compressor. They operate as follows.

1) Bypass valve (SV6a) [SV6a is on (open)]


- As shown in the table below, control is performed by the operation and stopping of the No. 1 compressor and No. 2 compressor.

| No. 1 compressor | No. 2 compressor | SV6a |
|------------------|------------------|------|
| Stop | Stop | OFF |
| Operate | Stop | ON |
| Operate | Operate | OFF |

2) Bypass solenoid valves (SV1, SV4) [Both SV1 and SV4 are on (open)]

| Item | SV1 | | SV4a | |
|-----------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|---------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| | ON | OFF | ON | OFF |
| At compressor is started | ON for 4 minutes | | — | |
| Compressor stopped during cooling or heating mode | ON | | — | |
| After operation has been stopped | ON for 3 minutes | | — | |
| During defrosting (*1) in Fig below) | ON | | Normally ON | |
| During oil recovery operation | ON during oil recovery operation after continuous low-frequency compressor operation. | | — | |
| When low pressure (Ps) has dropped during lower limit frequency operation(15 minutes after start) | — | | Ps < 1.0 kg/cm ² G (0.098 MPa) | Ps ≥ 2.0 kg/cm ² G (0.196 MPa) |
| When the high pressure (Pd) is risen up during lower limit frequency operation (3 minutes after starting) | Pd ≥ 27.5 kg/cm ² G (2.70 MPa) | Pd ≤ 24 kg/cm ² G (2.35 MPa) and after 30 seconds. | Pd ≥ 27 kg/cm ² G (2.65 MPa) | Pd ≤ 24 kg/cm ² G (2.35 MPa) and after 30 seconds |
| When the discharge temperature (Td) is risen up | — | | <ul style="list-style-type: none"> • Td > $\begin{cases} 130^{\circ}\text{C} & \text{(No. 1 compressor)} \\ 115^{\circ}\text{C} & \text{(No. 2 compressor)} \end{cases}$ and • Pd > 20 kg/cm²G (1.96 MPa) or Ps < 3.5 kg/cm²G (0.34 MPa) | <ul style="list-style-type: none"> Td ≤ $\begin{cases} 115^{\circ}\text{C} & \text{(No. 1 compressor)} \\ 100^{\circ}\text{C} & \text{(No. 2 compressor)} \end{cases}$ |


* Example of operation of SV1

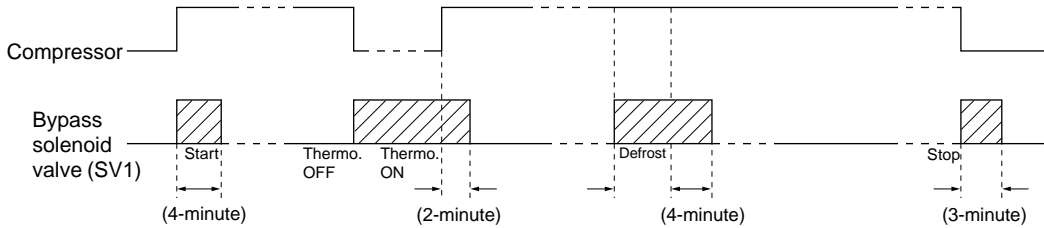

3) Capacity control solenoid valve (SV22, SV32). :P500 only

• Operation of solenoid valve

| Solenoid valve | SV22 | | SV32 | |
|-----------------------------------------|------|--------|------|--------|
| | Coil | Valve | Coil | Valve |
| Full-load (Operating at 100 % capacity) | OFF | Open | OFF | Closed |
| Un-load (Capacity control operation) | ON | Closed | ON | Open |

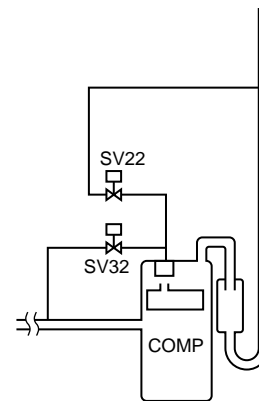

(5) Oil return control (Electronic expansion valve (SLEV))

- The amount of opening of the oil-return LEV (SLEV) is determined as follows: in cooling, by the operating capacity of the No. 1 compressor and the ambient temperature; in heating, by the operating capacity of the No. 1 compressor.
- It is opened (64pulses) when both compressors are stopped and started for 10 minutes. (Upper limit of LEV opening is $S_o = 388$ pulse.)
- $SLEV = 0$ when the No. 1 compressor is stopped.

(6) Defrosting control

1) Start of defrosting

- After there has been heating operation for 50 minutes or after 90 minutes has passed and a piping temperature (TH5) of -8°C or less is detected for a preset time, defrosting begins.
- When 10 minutes has passed since the compressor began operation or for forced defrosting (Setting of Dip SW2-7 on) when 10 minutes has passed since recovery from defrosting forced defrost mode becomes active.

2) End of defrosting

- Defrosting ends when 12 minutes have passed since the start of defrosting, or when a piping temperature (TH5 and TH7) of 7°C or more is detected for 4 minutes or longer. (Note that if the defrost-prohibited time is set on 90 minutes, the defrost-prohibit time will be 50 minutes following a 12-minute timed recovery.)
- Ending the defrosting is prohibited for 4 minutes after the start of defrosting.

3) Defrost-prohibit

- Defrosting is not performed for 10 minutes after the start of compressor operation and during oil recovery mode.

4) Abnormalities during defrosting

- If an error is detected during defrosting, the defrosting is stopped and the defrost-prohibit time is set to 20 minutes by the compressor cumulative operating time.

- 5) Change in number of operating indoor units while defrosting
 - If the number of indoor units changes while the outdoor unit is defrosting, the defrosting operation continues. Once defrosting has ended, control for changing the number of units is performed.
 - If the indoor unit is stopped while the outdoor unit is defrosting or if the thermostat is set to off, the defrosting operation continues. Once defrosting has ended, the unit is stopped.
- 6) Number of compressors operating during defrosting
 - The number of compressors operating during defrosting is always two.

(7) Control of liquid level detecting heater

Detect refrigerant liquid level in accumulator, and heat refrigerant with liquid level heater for judging refrigerant amount. 7 steps of duty control is applied to liquid level heater depending on frequency and outdoor air temperature, 1 minute after starting compressor.

(8) Judgement and control of refrigerant amount


- Judge refrigerant amount by detecting refrigerant liquid surface in the accumulator.

1) Judgement of accumulator liquid level

- Return refrigerant from accumulator liquid level detecting circuit to compressor inlet pipe, detect piping temperature, and judge liquid level.

When heated with heater, liquid refrigerant temperature is almost equal to low pressure saturation temperature, and gas refrigerant temperature is a little higher than low pressure saturation temperature. By comparing these temperatures A in accumulator inlet portion, refrigerant liquid level can be judged.

Accumulator liquid level is judged in 3 steps as shown in the figure, from temperature A and liquid level detecting temperatures (TH3, TH4). After deciding refrigerant status (Liquid: TH3 and TH4 are TH2 + 9°C or less, Gas: TH3 and TH4 are TH2 + 9°C or more), judge liquid level by comparing TH3 and TH4.

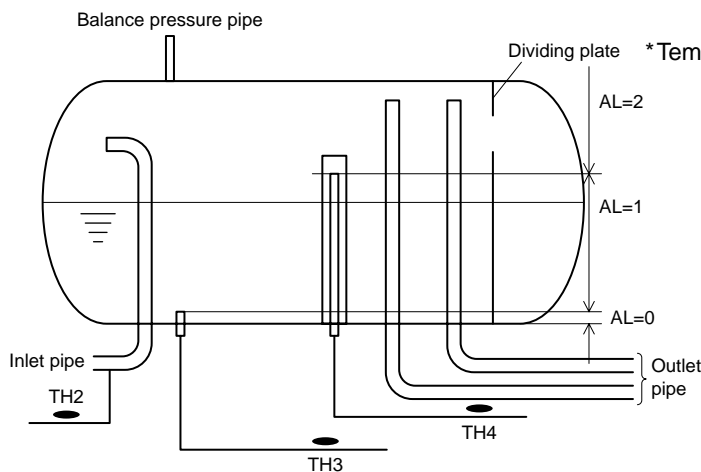

* Temperature A: low pressure saturation temperature (TH2).

- Judgement by the AL is at best only a rough guideline. Please do not add refrigerant based on the AL reading alone.

2) Control of liquid level detection

① Prohibition of liquid level detection

Liquid level is detected in normal conditions except for the following;

(Cooling)

- For 6 minutes after starting unit, and during unit stopping.

(Heating)

- During defrosting.
- For 10 minutes after refrigerant recovery.

(Note that liquid level determination is being performed even when liquid level detection is being disregarded.)

② In case AL = 2 is detected for 3 consecutive minutes during liquid level detection (control at excessive refrigerant replenishment and trouble mode)

- Changed to intermittent fault check mode preceded by 3 minutes restart prevention. But it is not abnormal when the discharge SH is high. Error stop is observed when trouble is detected again in the same intermittent fault check mode (for 30 minutes after unit stops for intermittent fault check).

- When turning on liquid level trouble disregard switch (SW2-4), error stop is not observed, and 3 minutes restart prevention by intermittent fault check mode is repeated. However, LED displays overflow.

(Turning SW2-4 on makes the error of TH6 < outdoor air sensor > ineffective.)

③ When operation mode shows "Stop," excessive or insufficient refrigerant display and excessive or insufficient refrigerant ignore display are extinguished.

(9) Outdoor unit heat exchanger capacity control

1) Control method

- In order to stabilize the evaporation temperature during cooling and the high-pressure pressure during heating that are required in response to performance needs, the capacity of the outdoor heat exchanger is controlled by regulating the fan volume of the outdoor unit by phase control and controlling the number of fans and by using the solenoid valves to vary the number of out door heat exchangers being used.

2) Control

- When both of the compressors are stopped, the fans for the outdoor units are also stopped.
- The fans operate at full speed for 5 seconds after starting.
- The fans for the outdoor unit are stopped during defrosting.


3) Capacity control pattern

| Operation mode | Operation pattern | Solenoid valve | | | | | |
|----------------|-------------------|----------------|-----|-----|-----|-----|-----|
| | | SV3 | SV4 | SV5 | SV6 | SV7 | SV8 |
| Full cooling | ① | ON | ON | ON | OFF | ON | ON |
| | ② | ON | ON | ON | OFF | OFF | OFF |
| | ③ | OFF | ON | ON | OFF | OFF | OFF |
| | ④ | OFF | ON | OFF | OFF | OFF | OFF |
| | ⑤ | OFF | OFF | ON | OFF | OFF | OFF |
| | ⑥ | OFF | OFF | OFF | OFF | OFF | OFF |
| Cooling mainly | ① | ON | ON | ON | OFF | ON | ON |
| | ② | ON | ON | ON | OFF | OFF | OFF |
| | ③ | OFF | ON | ON | OFF | OFF | OFF |
| | ④ | OFF | ON | OFF | OFF | OFF | OFF |
| | ⑤ | OFF | OFF | ON | OFF | OFF | OFF |
| | ⑥ | OFF | OFF | OFF | OFF | OFF | OFF |
| Full heating | ① | ON | ON | ON | OFF | ON | ON |
| | ② | ON | ON | ON | OFF | ON | ON |
| Heating mainly | ⑦ | ON | ON | ON | ON | OFF | OFF |
| | ⑧ | OFF | OFF | OFF | ON | OFF | OFF |
| | ① | ON | ON | ON | OFF | ON | ON |
| Defrosting | ① | ON | ON | ON | OFF | ON | ON |

* In stop, all are OFF.

(10) Circulating composition sensor (CS circuit)


- As shown in the drawing below; the CS circuit has the structure to bypass part of the gas discharged from the compressor through the capillary tube to the suction side of the compressor, exchange heat before and after the capillary tube, and produce two phase (gaseous and liquid) refrigerant at the capillary tube outlet. The dryness fraction of refrigerant at the capillary tube outlet is estimated from the temperature of high pressure liquid refrigerant at the capillary tube inlet (TH9) and the temperature of low pressure two phase (gaseous and liquid) refrigerant at the capillary outlet (TH2) and the pressure (LPS) to calculate the composition of refrigerant circulating the refrigeration cycle (α OC). It is found by utilizing the characteristic that the temperature of two phase (gaseous and liquid) R407C under a specified pressure changes according to the composition and dryness fraction (gas-liquid ratio in weight).
- The condensing temperature (T_c) and the evaporating temperature (T_e) are calculated from α OC, high pressure (HPS), and low pressure (LPS).
- The compressor frequency, the outdoor fan, and others are controlled according to the condensing temperature (T_c) and the evaporating temperature (T_e).
- CS circuit configuration (Outline drawing)

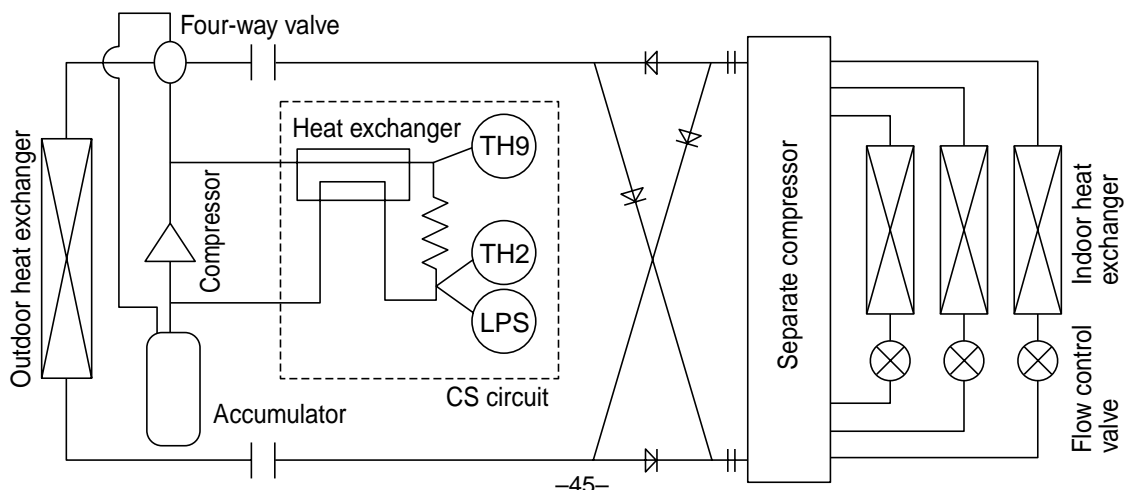


(11) Control at initial starting

- When the ambient temperature is low (5°C or less in cooling and – 5°C or less in heating), initial starting will be performed if the unit is started within 4 hours of the power being turned on.
- The following initial start mode will be performed when the unit is started for the first time after the power has been turned on.

<Flow chart of initial start mode>

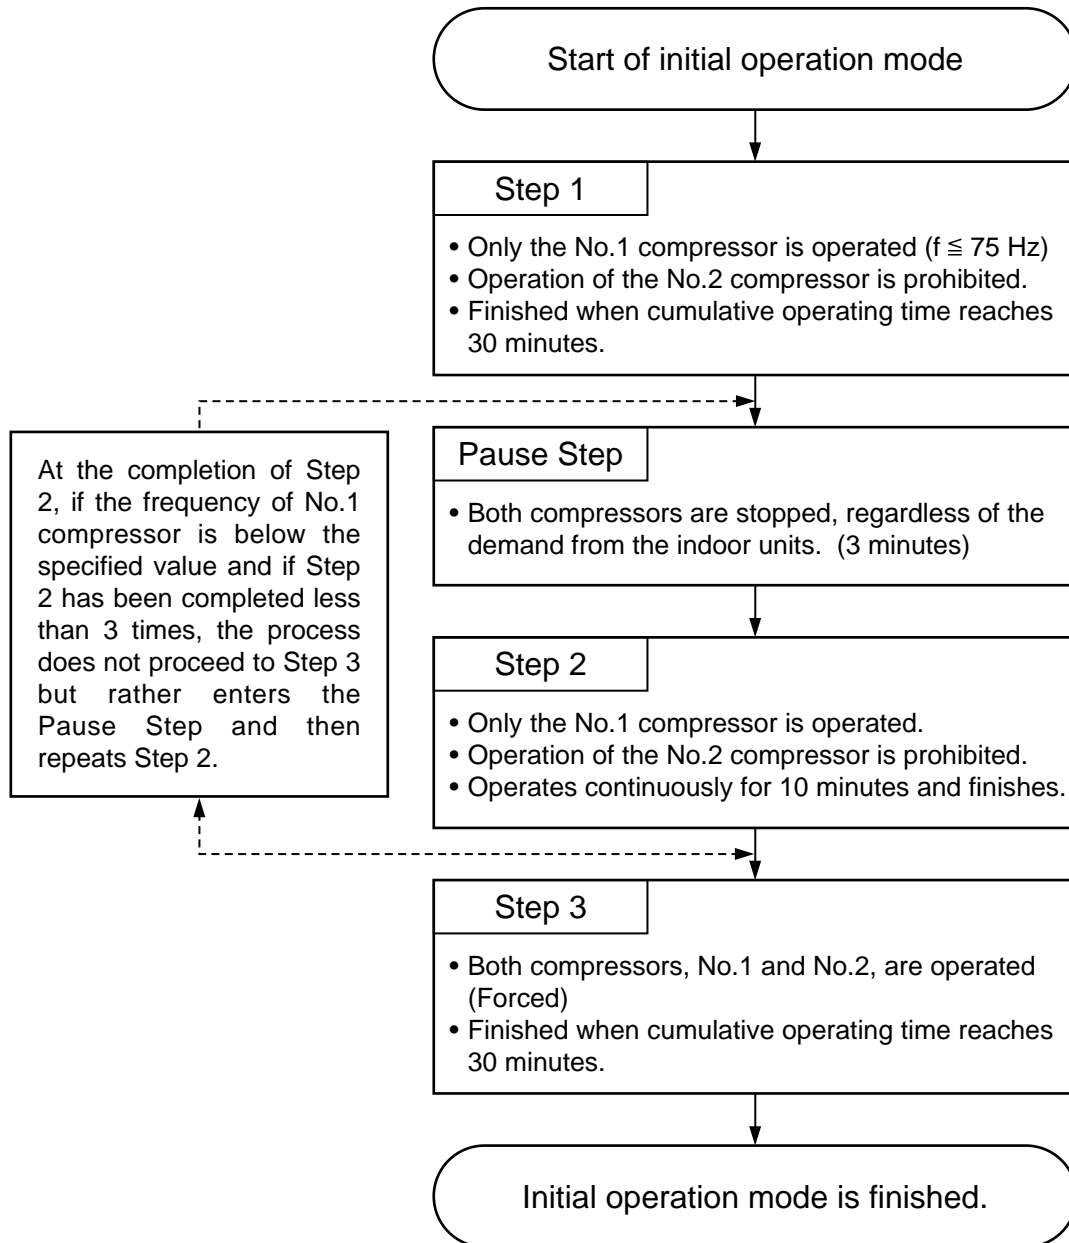

<Initial start control timing chart>

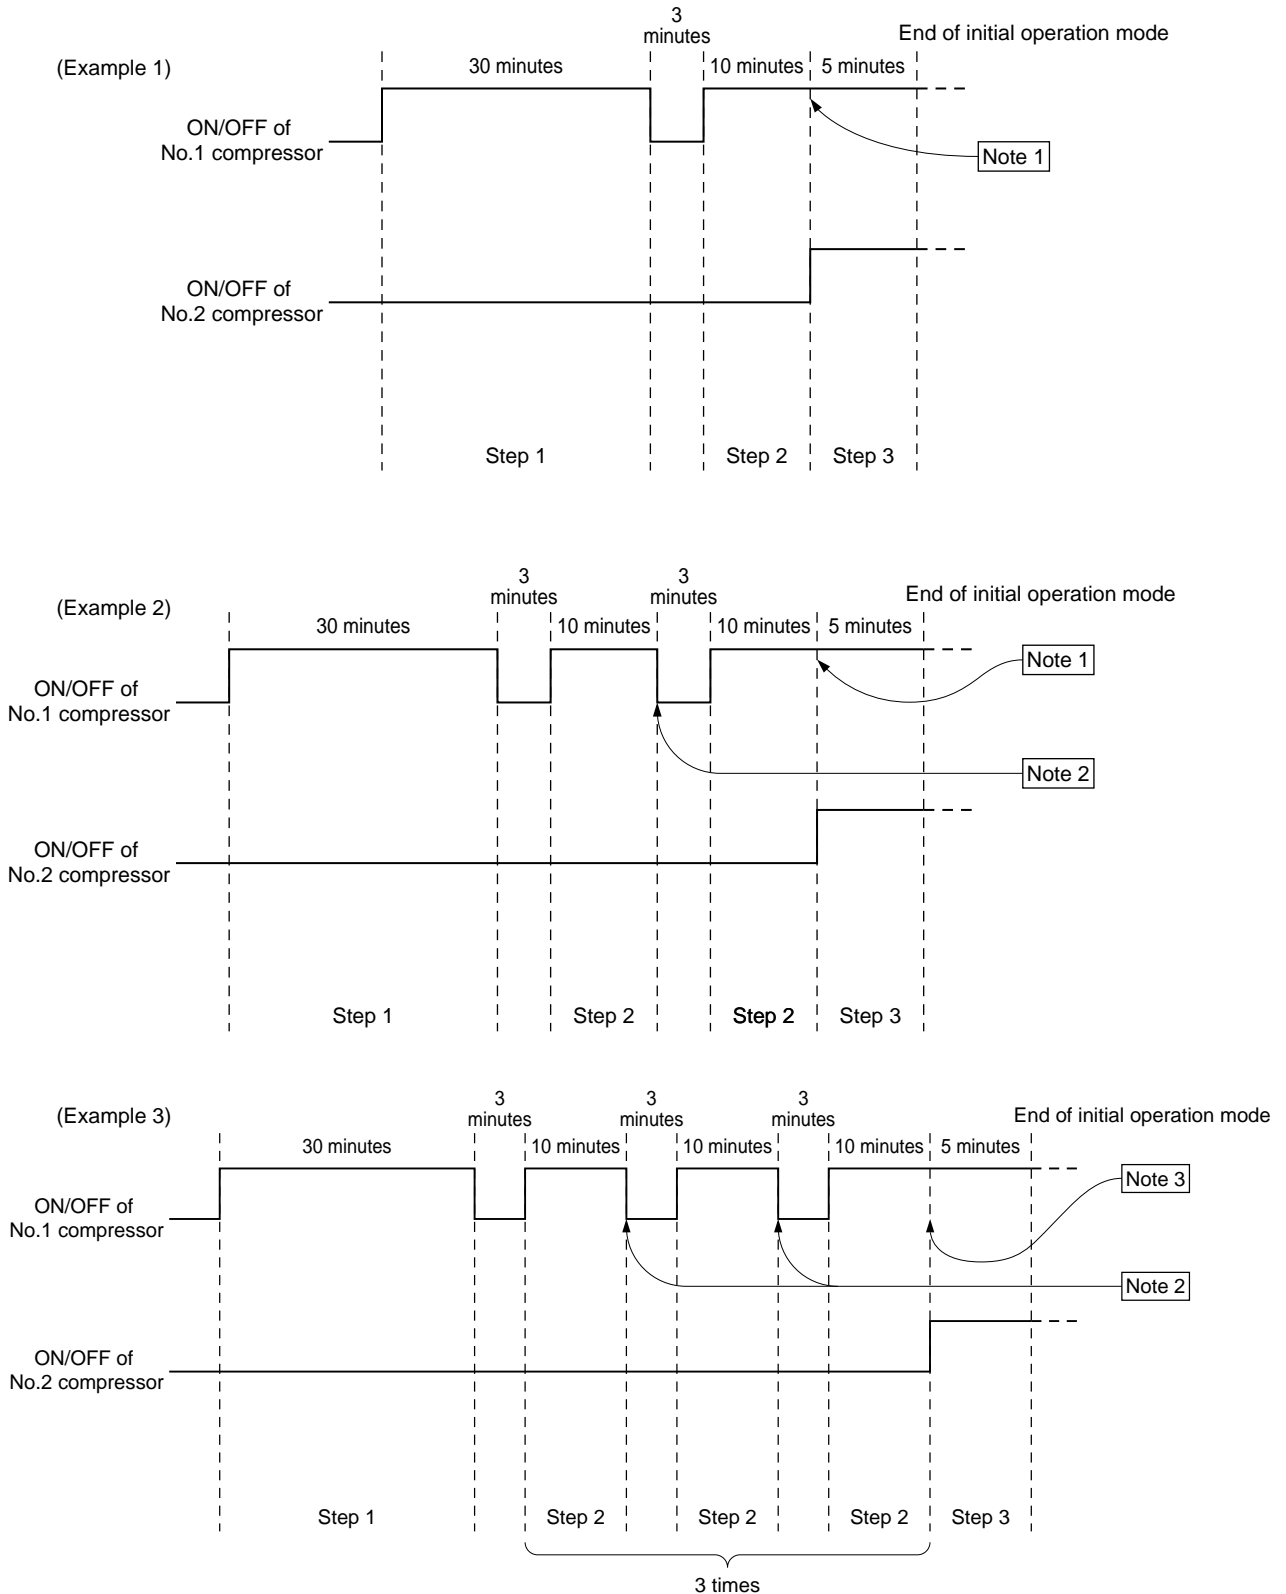

Note 1: If the frequency of No. 1 compressor is above the specified level at the end of Step 2, the mode proceeds to Step 3.

Note 2: At the completion of Step 2, if the frequency of No. 1 compressor is below the specified value and if Step 2 has been completed less than 3 times, the process does not proceed to Step 3 but rather enters the Pause Step and then repeats Step 2.

Note 3: At the completion of Step 2, if it has been completed more than 3 times, the mode will proceed to Step 3 even if the frequency of No. 1 compressor is below the specified value.

(12) Emergency response operating mode

The emergency operation mode is a mode in which the unit is run in an emergency to respond to the trouble when the compressors (No. 1, No. 2) break down, making it possible to carry out a abnormality reset using the remote control.

1) Starting the Emergency Operation Mode

- ① Trouble occurs (Display the abnormality code root and abnormality code on the remote control).
- ② Carry out trouble reset with the remote control.
- ③ If the abnormality indicted in ① above is of the kind that permits emergency operation (see the table below), initiate a retry operation.

If the trouble indicated in ① above is of the kind where emergency operation is impossible (see the table below), restart operation after carrying out the previous abnormality reset (without entering the emergency operation mode).

- ④ If the same abnormality is detected again during the retry operation in ③ above, carry out trouble reset once more with the remote control, then try emergency operation starting corresponding to the contents of the abnormality

Table Emergency Operation Mode Patterns and Abnormality Codes for which Emergency Operation is Possible or Impossible

| Emergency Mode Pattern | Codes for which emergency operation is possible. | Abnormality Codes for which Emergency Operation is Impossible | Action |
|----------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| When a No. 1 Compressor Failure Occurs | Serial transmission abnormality 0403 VDC sensor/circuit abnormality 4200 Bus voltage abnormality 4220 Radiator panel overheat protection 4230 Overcurrent protection 4240 IPM alarm output 4250 /Bus voltage abnormality Thermal sensor abnormality (Radiator panel) 5110 IAC sensor/circuit abnormality 5301 | Trouble codes other than those at left. | Emergency Operation only with the No. 2 Compressor * After the retry operation, even if there is a different abnormality code detected within <Inverter Abnormality> at left, press the button and after resetting, start the unit by emergency operation. [Example] 4250 → Reset → Retry → 4240 → Reset → Emergency operation |
| When No. 2 Compressor Failure Occurs | Overcurrent protection | | Emergency Operation only with the No. 1 Compressor |

Caution

During emergency operation, only X marked percentage of indoor units can be operated during emergency operation. In case, more than X marked percentage of indoor units are operated, over than the percentage of indoor units would be on the stand-by mode.

| | 400 | 500 |
|--------------------------|----------|----------|
| No. 1 Compressor Failure | x ≤ 48 % | x ≤ 65 % |
| No. 2 Compressor Failure | x ≤ 65 % | x ≤ 65 % |

[2] Control of BC Controller

(1) Control of SVA, SVB and SVC

SVA, SVB and SVC are turned on and off depending on connection mode.

| Connection \ Mode | Cooling | Heating | Stop | Defrost |
|-------------------|---------|---------|------|---------|
| SVA | ON | OFF | OFF | OFF |
| SVB | OFF | ON | OFF | OFF |
| SVC | ON | OFF | OFF | OFF |

(2) Control of SVM1 (only FA type)

SVM1 is turned on and off corresponding to operation mode.

| Operation mode | Cooling-only | Cooling-main | Heating-only | Heating-main | Stop |
|----------------|--------------|--------------|--------------|--------------|------|
| SVM1 | ON | OFF | OFF | OFF | OFF |

(3) Control of LEV

LEV opening (sj) is controlled corresponding to operation mode as follows:

(Number of pulse)


| | Operation mode | Cooling-only | Heating-only | Cooling-main | Heating-main | Stop |
|----|----------------|----------------------|----------------------------------|-------------------------------------------------------------------------------------------------------------------------|----------------------------------|------|
| FA | LEV1 | 2000 | 60 | <ul style="list-style-type: none"> • Liquid level control *3 • Differential pressure control *2 | 60 | 2000 |
| | LEV3 | Superheat control *1 | Differential Pressure control *2 | | Differential Pressure control *2 | 60 |
| FB | LEV3a | Superheat control *1 | 60 | Superheat control *1 | Superheat control *1 | 60 |

| | | |
|----|-------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| *1 | Superheat control | Control every minute so that superheat amount detected by bypass inlet and outlet temperatures TH12, TH15 stay in the specified range. (FA: TH12, TH15, FB: TH22, TH25) |
| *2 | Differential pressure control | Control every minute so that detected differential pressure (PS1, PS3) stay in the specified range. |
| *3 | – | 60 or more pulses are sometimes detected because of rise in liquid side pressure (PS1). |

* Please confirm that the above parts of BC controllers are being color-coded and shown with the name plate inside the BC controller unit.


[3] Operation Flow Chart

(1) Outdoor unit

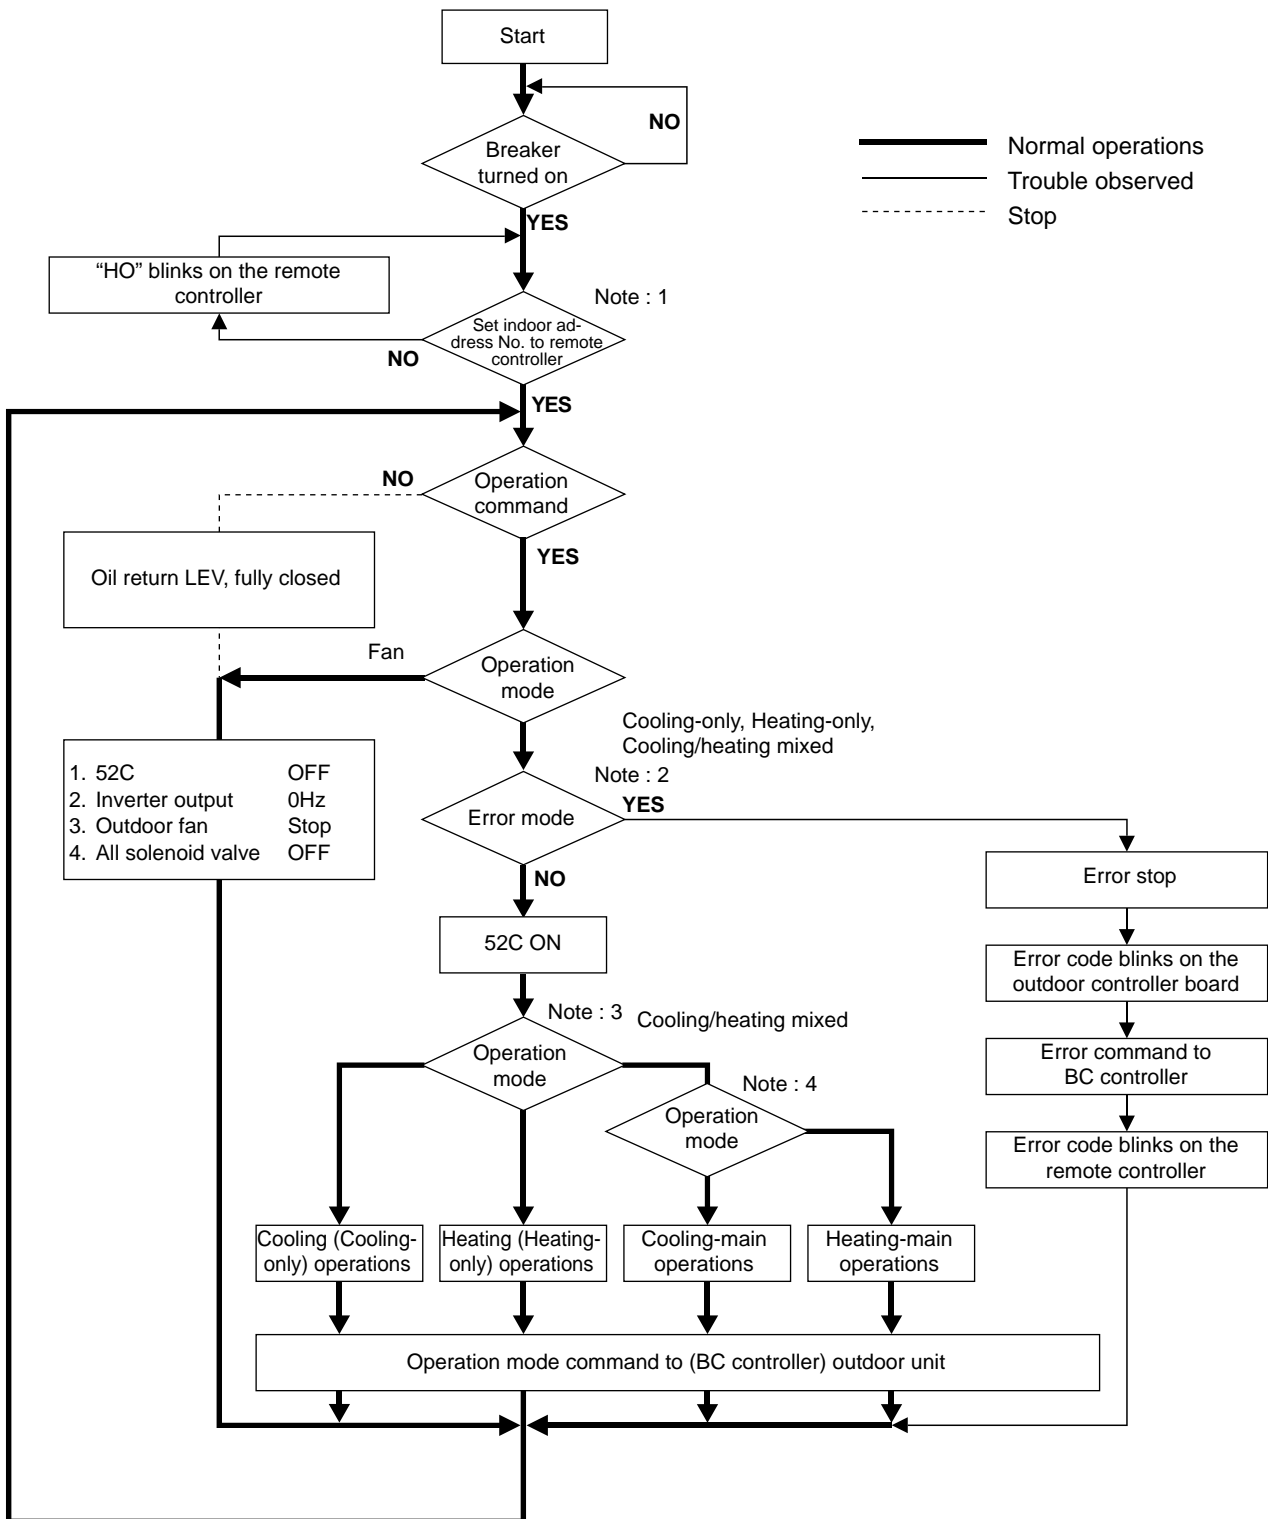


| | |
|----------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Note : 1 | For about 3 minutes after turning on power source, address and group information of outdoor unit, BC, controller indoor unit, and remote controller are retrieved by remote controller, during which "HO" blinks on and off on remote controller. In case indoor unit is not grouped to remote controller, "HO" display on remote controller continues blinking even after 3 minutes after turning on power source. |
| Note : 2 | Two trouble modes included indoor unit side trouble, (BC controller trouble) and outdoor unit side trouble. In the case of indoor unit side trouble, error stop is observed in outdoor unit only when all the indoor units are in trouble. However, if one or more indoor units are operating normally, outdoor unit shows only LED display without undergoing stop. |
| Note : 3 | Operation mode conforms to mode command by BC controller. |
| Note : 4 | In case BC controller issues cooling/heating mixed operation mode, outdoor unit decides operation mode of cooling-main operation or heating-main operation. |

(2) BC controller

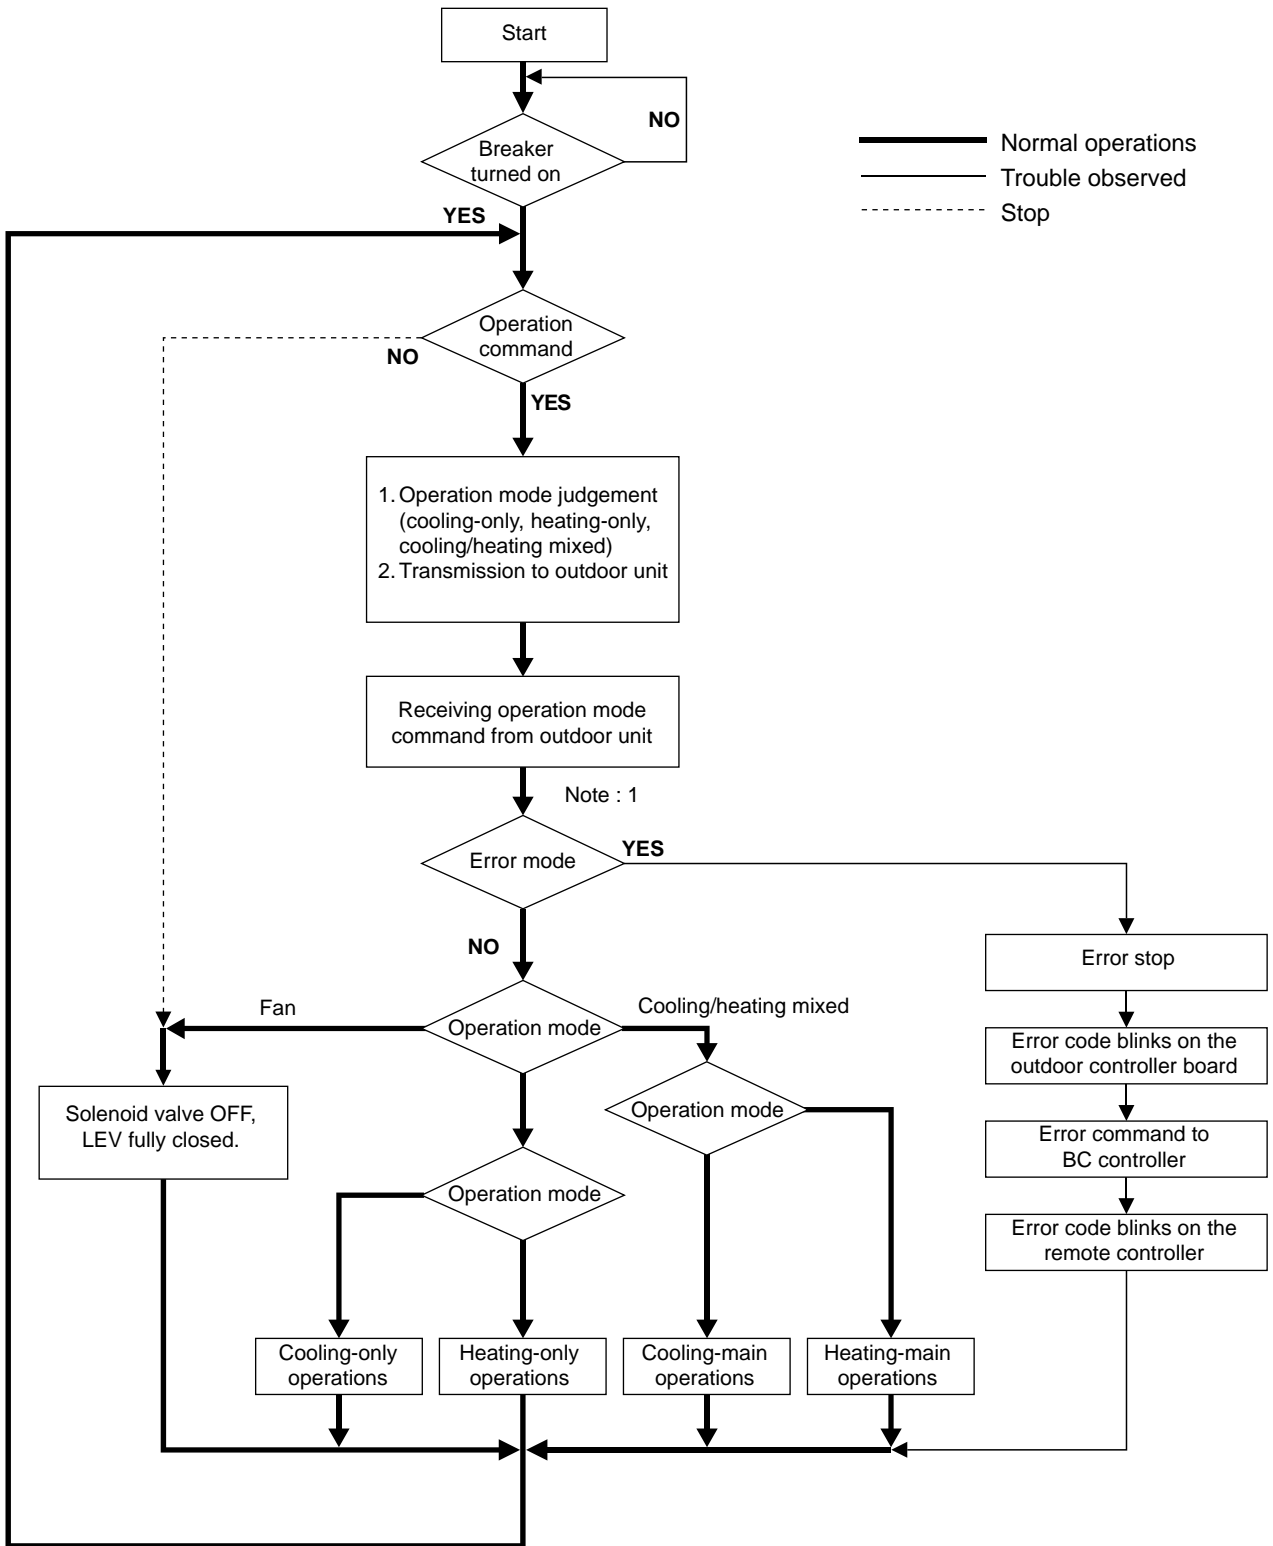


Note : 1 Two error modes include indoor unit side trouble, BC controller trouble, and outdoor unit side trouble. In the case of indoor unit side trouble, error stop is observed in the concerned indoor unit only, and in the cases of BC controller and outdoor unit side troubles, error stop is observed in all the indoor units, BC controller, and outdoor unit.

(3) Indoor unit

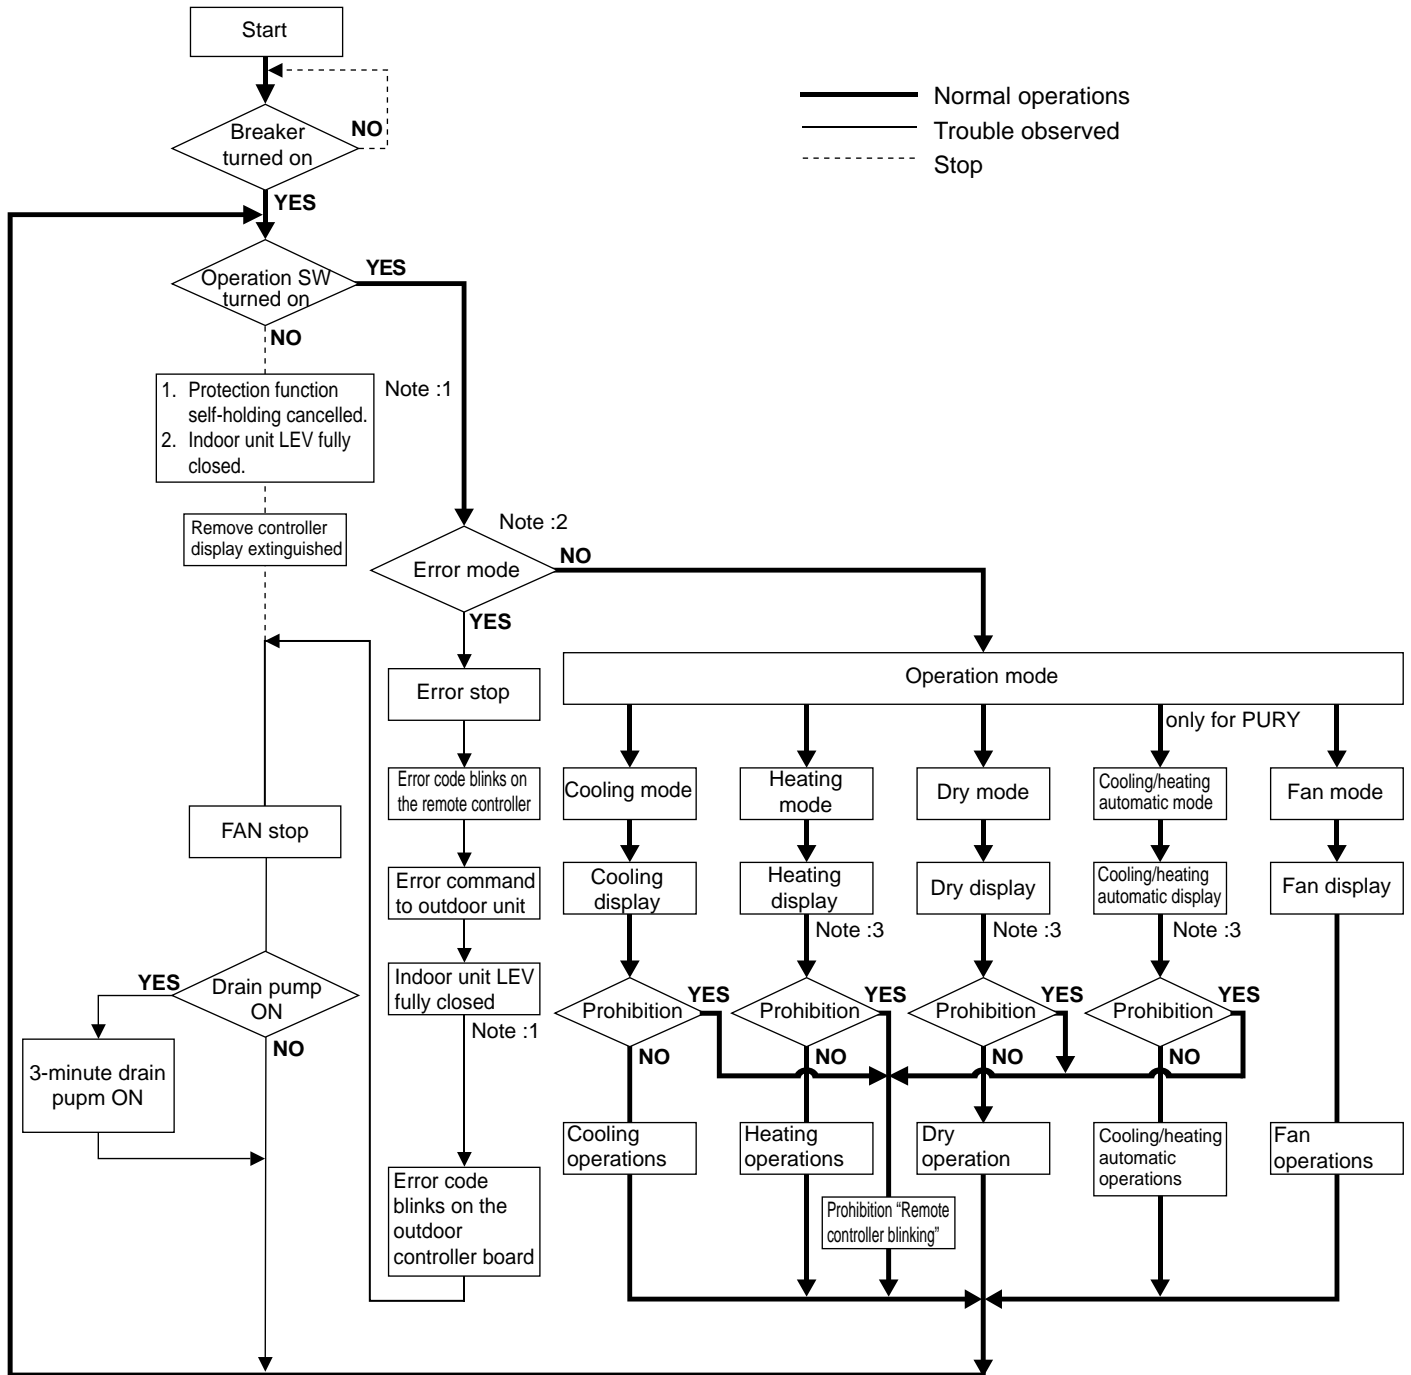


| | |
|----------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Note : 1 | Indoor unit LEV fully closed : Opening 60 |
| Note : 2 | Two error modes include indoor unit trouble, (BC controller trouble) and outdoor unit side trouble. In the case of indoor unit trouble, error stop is observed in the concerned indoor unit only, and in the cases of (BC controller and) outdoor unit side troubles, error stop is observed in all the indoor units connected. |
| Note : 3 | “Prohibition” status is observed (when several indoor units are connected to one connection, of BC controller and) when connection mode is different from indoor unit operation mode. (Operation mode display on the remote controller blinks on and off, fan stops, and indoor unit LEV is fully closed.) |

(4) Cooling operation

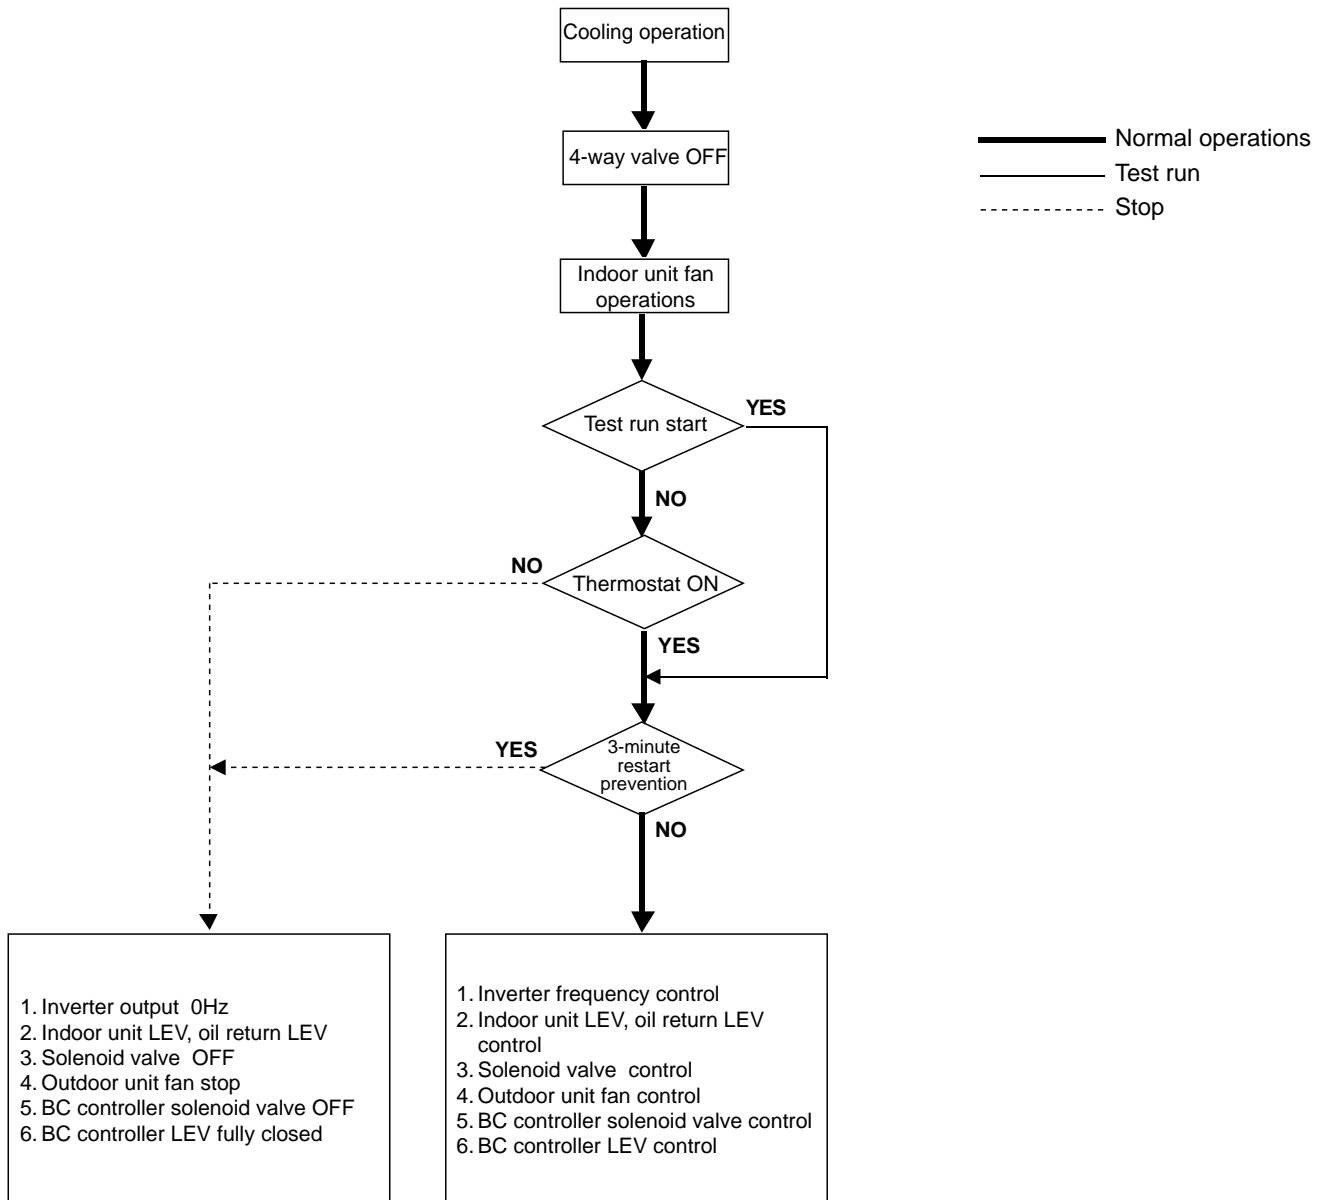


(5) Heating operation

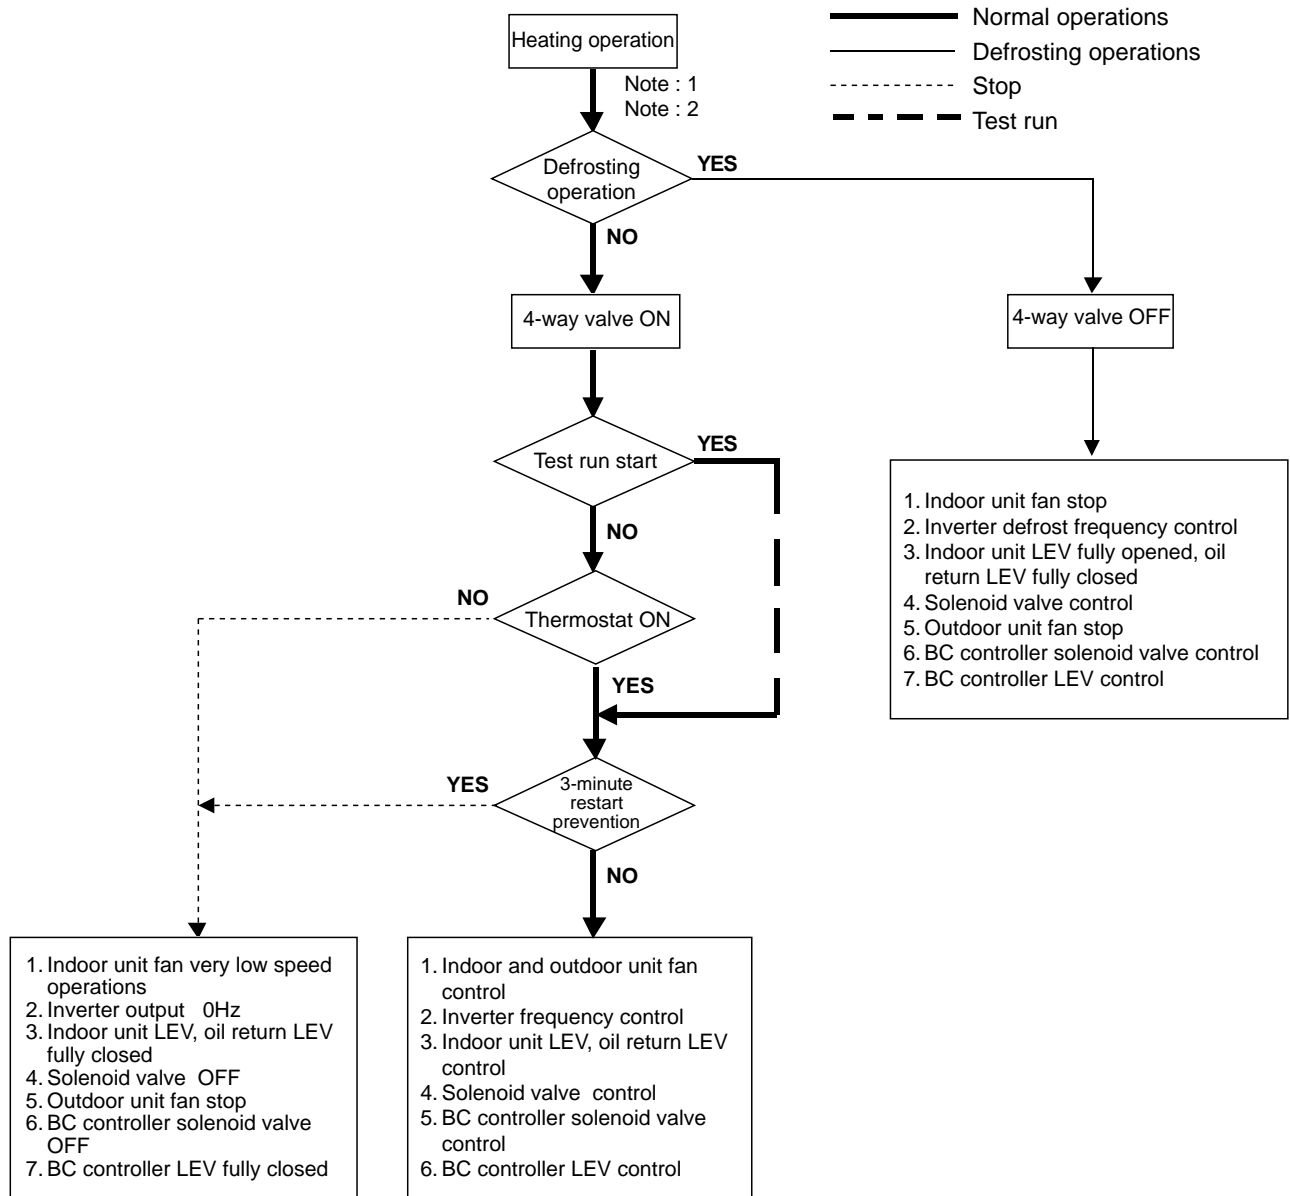



| | |
|----------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Note : 1 | When outdoor unit starts defrosting, it transmits defrost operations command to (BC controller and) indoor unit, and the indoor unit starts defrosting operations. Similarly when defrosting operation stops, indoor unit returns to heating operation after receiving defrost end command of outdoor unit. |
| Note : 2 | Defrosting start condition : After integrated 50 minutes of compressor operations, and -8°C : or less outdoor unit coil temperature. (TH7) Defrosting end condition : After 12 minutes of defrosting operation or the outdoor unit coil temperature (TH5 and TH7) having risen to 7°C or more. |

(6) Dry operation

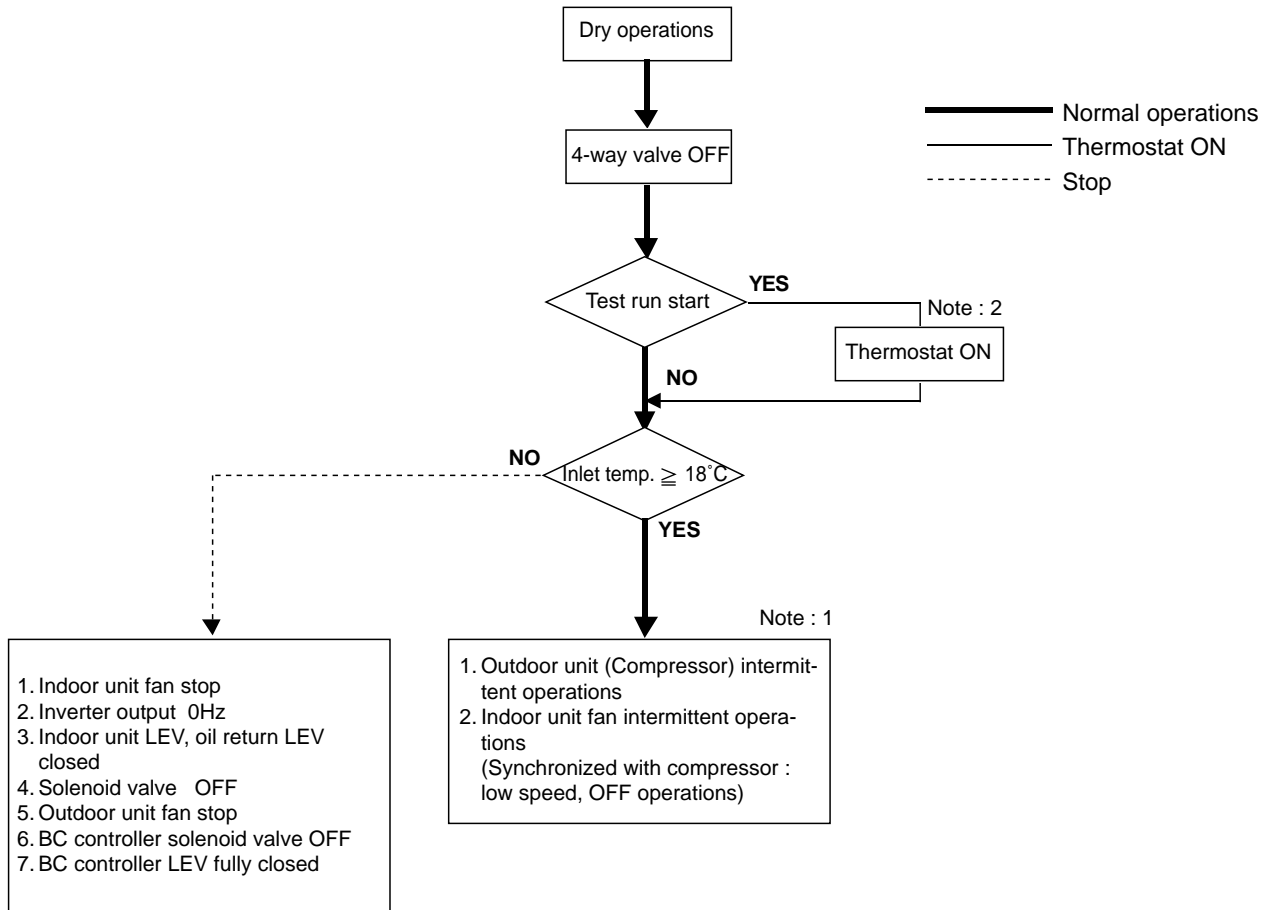

| | |
|----------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Note : 1 | When indoor unit inlet temperature exceeds 18°C, outdoor unit (compressor) and indoor unit fan start intermittent operations synchronously. Operations of outdoor unit, BC controller, indoor unit LEV and solenoid valve accompanying compressor are the same as those in cooling operations. |
| Note : 2 | Thermostat is always kept on in test run, and indoor and outdoor unit intermittent operation (ON) time is a little longer than normal operations. |

[4] List of Major Component Functions
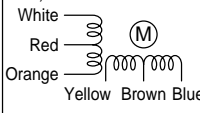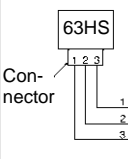
| | Name | Code (Function) | Product code | Application | Specification | Inspection method |
|--------------|----------------------------|-------------------------------|-------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Indoor unit | Electronic expansion valve | LEV | | ① Adjustment of super heat of heat exchanger outlet port of indoor unit during cooling. ② Adjustment of sub-cool of heat exchanger outlet port of indoor unit during heating. | DC 12 V Amount of opening of the stepping motor drive valve 60 to 2000 pulse. (Gear Type) | Perform a continuity check using a tester. Conductivity among white, red and orange. Conductivity among yellow, brown and blue.  |
| | Thermistor | TH21 (Inlet air temperature) | | Indoor unit control (Thermostat). | $R_0 = 15 \text{ k}\Omega$ $B_{0/80} = 3460$ $R_t = 15 \exp\{3460(\frac{1}{273+t} - \frac{1}{273})\}$ | Resistance value check |
| | | TH22 (Piping temperature) | | ① Indoor unit control (Freeze prevention, hot adjust, etc.). ② LEV control during heating (sub-cool detection). | 0°C: 15 kΩ 10°C: 9.7 kΩ 20°C: 6.4 kΩ | |
| | | TH23 (Gas piping temperature) | | LEV control during cooling (super-heat detection). | 25°C: 5.3 kΩ 30°C: 4.3 kΩ 40°C: 3.1 kΩ | |
| Compressor | MC1 | | | Uses the operating pressure to adjust the operating frequency and adjust the amount of circulating refrigerant. | Low-pressure shell scroll type. Winding resistance 0.481 (20°C). | |
| | | MC2 | | When there is a load that cannot be adjusted by MC1, this function ensures the stable flow of refrigerant. | Low-pressure shell scroll type. Winding resistance: each phase. 1.996 (20°C): P400 YMF-C 1.197 (20°C): P500 YMF-C | |
| | High pressure sensor | 63HS | | ① Detects high-pressure pressure. ② Performs frequency control and high-pressure protection. |  Pressure 0 to 30 kg/cm ² G (0 to 2.94 MPa) Vout 0.5 to 3.5 V Connector GND (Black) Vout (White) Vc (DC 5 V) (Red) | |
| | | | Low pressure sensor | 63LS | 1) Detects low-pressure. 2) Calculates the refrigerant circulation configuration. 3) Protects the low pressure | |
| Outdoor unit | Pressure switch | 63H1 62H2 | | ① Detects high-pressure. ② Performs high-pressure protection. | Set to 30 kg/cm ² G (2.94 MPa) OFF. | Conductivity check |
| | Thermistor | TH11,12 (Outlet) | | ① Detects high-pressure pressure. ② Performs high-pressure protection. | $R_{120} = 7.465 \text{ k}\Omega$ $B_{25/120} = 4057$ $R_t = 7.465 \exp\{4057(\frac{1}{273+t} - \frac{1}{393})\}$ | Resistance check |
| | | | TH2 (Low pressure saturation temperature) | | ① Detects low pressure saturation temperature. ② Performs frequency control and liquid level of accumulator. | |
| | | | | - 20°C: 92 kΩ - 10°C: 55 kΩ 0°C: 33 kΩ 10°C: 55 kΩ 20°C: 13 kΩ 30°C: 8.2 kΩ | Resistance check | |

| | Name | Code (Function) | Product code | Application | Specification | Inspection method |
|-------------------------------|-----------------------------------|------------------------------------------------|--------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------|
| Outdoor unit | Thermistor | TH3 TH4 (Liquid level detection) | | Detects liquid level of refrigerant inside accumulator using the differences among TH2, TH3, TH4. | $R_0 = 15 \text{ k}\Omega$ $B_{1/80} = 3460$ $R_t = 15 \exp\{3460(\frac{1}{273+t} - \frac{1}{273})\}$ | Resistance check |
| | | TH5 (Pipe temperature) | | ① Frequency control. ② Controls defrosting during heating. | 0°C: 15 kΩ 10°C: 9.7 kΩ 20°C: 6.4 kΩ 25°C: 5.3 kΩ 30°C: 4.3 kΩ 40°C: 3.1 kΩ | |
| | Thermistor | TH6 (Outdoor temperature) | | ① Detects the outdoor air temperature. ② Performs fan control, liquid level heater control, opening settings of LEV for oil return and other functions. | $R_0 = 15 \text{ k}\Omega$ $B_{1/80} = 3460$ $R_t = 15 \exp\{3460(\frac{1}{273+t} - \frac{1}{273})\}$ | Resistance check |
| | | TH7 (Pipe inlet heat exchanger temperature) | | Controls defrosting during heating | 0°C: 15 kΩ 10°C: 9.7 kΩ 20°C: 6.4 kΩ 25°C: 5.3 kΩ 30°C: 4.3 kΩ 40°C: 3.1 kΩ | |
| | Thermistor | TH9 | | 1) Detects the CS circuit fluid temperature. 2) Calculates the refrigerant circulation configuration. | | |
| | | TH10 | | 1) Detects the compressor shell temperature. 2) Provides compressor shell over-heating protection. | $R_{120} = 7.465 \text{ k}\Omega$ $B_{25/120} = 4057$ $R_t = 7.465 \exp\{4057(\frac{1}{273+t} - \frac{1}{273+120})\}$ 20°C: 250 kΩ 70°C: 34 kΩ 30°C: 160 kΩ 80°C: 24 kΩ 40°C: 104 kΩ 90°C: 17.5 kΩ 50°C: 70 kΩ 100°C: 13.0 kΩ 60°C: 48 kΩ 110°C: 9.8 kΩ | |
| | Thermistor | THHS inverter heat sink temperature | | Inverter cooling fan control using THHS temperature. | $R_{50} = 17 \text{ k}\Omega$ $B_{25/120} = 4170$ $R_t = 17 \exp\{4170(\frac{1}{273+t} - \frac{1}{323})\}$ 0°C: 181 kΩ 10°C: 105 kΩ 20°C: 64 kΩ 25°C: 50 kΩ 30°C: 40 kΩ 40°C: 26 kΩ | Resistance check |
| | | Solenoid valve | SV1 discharge-suction bypass | | ① Capacity control of high/low pressure bypass when starting and stopping. ② Discharge pressure rise suppression. | AC 220 to 240 V Open : conducting Close : not conducting |
| | SV22 capacity control (full load) | | | Switching of capacity control valve inside No. 2 compressor (Switching between full load operation and unload operation) (only P500 YMF-C). | AC 220 to 240 V Close : conducting Open : not conducting | |
| | SV32 capacity control (unload) | | | | AC 220 to 240 V Open : conducting Close : not conducting | |
| SV4a discharge-suction bypass | | | Capacity control and controlling the rise of high-pressure (Back-up of frequency control). | | | |


| | Name | Code (Function) | Product code | Application | Specification | Inspection method |
|--------------|------------------------|--------------------------------------------------|--------------|-----------------------------------------------------------------------|--------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------|
| Outdoor unit | Solenoid valve | SV3~8 heat exchanger capacity control | | Controls heat exchanger capacity of outdoor unit. | AC 220 to 240 V Close: conducting Open : not conducting | Conductivity test using tester. |
| | | SV6a discharge-suction bypass | | Evaporation of liquid refrigerant inside MC2. | AC 220 to 240 V Open : conducting Close: not conducting | |
| | Linear expansion valve | SLEV (Oil return) | | Adjusts the rate of refrigerant (oil) returning from the accumulator. | DC 12 V stepping motor drive valve opening amount 0 to 480 pulse (Direct drive type). | Same as indoor unit LEV. However, the resistance value is different than the indoor unit. |
| | Heater | CH11 CH12 crankcase heater | | Refrigerant heating inside compressor. | Belt heater AC 200 to 240 V MC1 1280 Ω 45 W MC2 400: 1280 Ω 45 W 500: 1029 Ω 56 W | Resistance check |
| | | CH2 CH3 Accumulator liquid level detection | | Refrigerant heating of accumulator liquid level detection circuit. | Code heater 2880 Ω (1440 Ω + 1440 Ω) AC 220 to 240 V 20 W (10 W + 10 W) | Resistance check |
| | 4-way valve | 21S4a | | Switching of cooling/heating cycle. | AC 220 to 240 V Not conducting: cooling cycle Conducting : heating cycle | Conductivity check using tester. |
| 21S4b | | | | | | |

[5] Resistance of Temperature Sensor

Thermistor for low temperature


Thermistor $R_0 = 15\text{k}\Omega \pm 3\%$ (TH3 ~ 9)

$$R_t = 15 \exp \left\{ 3460 \left(\frac{1}{273+t} - \frac{1}{273+0} \right) \right\}$$

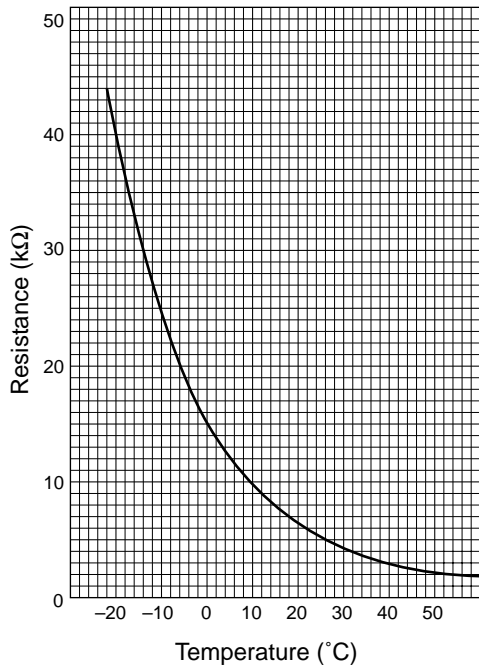


Thermistor $R_{120} = 7.465\text{k}\Omega \pm 2\%$ (TH1, 10)

$$R_t = 7.465 \exp \left\{ 4057 \left(\frac{1}{273+t} - \frac{1}{273+120} \right) \right\}$$

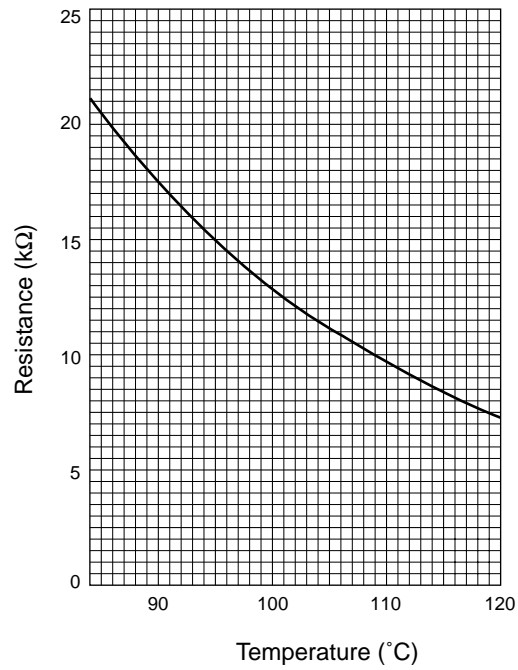


Thermistor $R_0 = 33\text{k}\Omega \pm 1\%$ (TH2)

$$R_t = 33 \exp \left\{ 3965 \left(\frac{1}{273+t} - \frac{1}{273+0} \right) \right\}$$

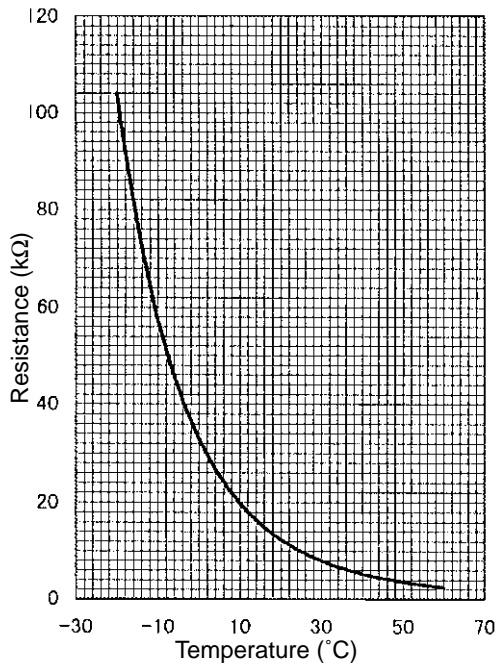

Thermistor $R_{50} = 17\text{k}\Omega \pm 2\%$ (THHS)

$$R_t = 17 \exp \left\{ 4170 \left(\frac{1}{273+t} - \frac{1}{273+50} \right) \right\}$$

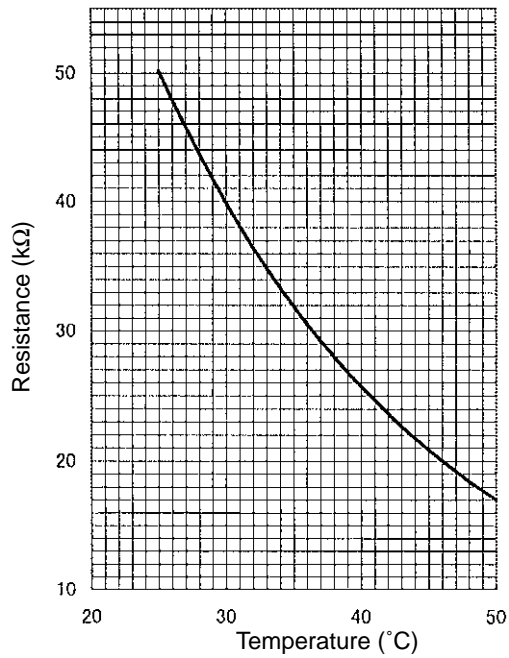

6 REFRIGERANT AMOUNT ADJUSTMENT

By clarifying the relationship between the refrigerant amount and operating characteristics for BgR2 Series, conduct service activities such as decision on the amount and adjustment of refrigerant on the market.

[1] Operating Characteristics and Refrigerant Amount

The followings are operating characteristics and refrigerant amount which draw special attention.

| | | | |
|---|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------|
| 1 | During cooling operations, required refrigerant amount tends to increase (refrigerant in accumulator decreases) in proportion to increase in the number of operating indoor units. However, the change of increase rate is small. | | |
| 2 | During heating operations, liquid level of accumulator is the highest when all the indoor units are operating. | | |
| 3 | Discharge temperature hardly changes when increasing or decreasing refrigerant amount with accumulator filled with refrigerant. | | |
| 4 | Tendency of discharge temperature | During cooling operations, discharge temperature tends to rise at overload than low temperature. | Comparison including control system |
| | | During heating operations, discharge temperature tends to rise at low temperature than overload. | |
| | | The lower the operating frequency is, the higher the discharge temperature tends to become because of deteriorated compressor efficiency. | |
| 5 | Compressor shell temperature is 20 ~ 70 degrees higher than low pressure saturation temperature (TH2) when refrigerant amount is appropriate. → Judged as over replenishment when temperature difference from low pressure saturation temperature (TH2) is 10 degrees or less. | | |

[2] Adjustment and Judgement of Refrigerant Amount

(1) Symptom

The symptoms shown in the table below are the signs of excess or lack of refrigerant amount. Be sure to adjust the amount of refrigerant in refrigerant amount adjustment mode, by checking operation status, judging refrigerant amount, and performing LED monitor display with LED Dip S/W1, 1-10, for overall judgement of excess or lack of refrigerant amount.

| | | |
|---|--------------------------------------------------------------------------------------|----------------------------------------|
| 1 | Error stop at 1500 remote controller display (excessive refrigerant replenishment) | Excessive refrigerant replenishment |
| 2 | Operating frequency does not fully increase, thus resulting in insufficient capacity | Insufficient refrigerant replenishment |
| 3 | Error stop at 1102 remote controller display (discharge temperature trouble) | |
| 4 | Error stop at 1501 remote controller display (low refrigerant trouble) | |

(2) Refrigerant Volume

1) Checking the Operating Condition

Operate all the indoor units in cooling or in heating, checking the discharge temperature, sub-cooling, low pressure saturation temperature, inlet temperature, shell bottom temperature, fluid level, fluid step, etc. and rendering an overall judgment.


Note:

Depending on the operating state, AL = 0 does not mean that there is insufficient refrigerant.

| Condition | | Judgment |
|-----------|----------------------------------------------------------------------------------------------------------------------|-----------------------------------------------|
| 1 | Discharge temperature is high. (125°C or higher) | Refrigerant volume tends toward insufficient. |
| 2 | Low pressure saturation temperature is extremely low. | |
| 3 | Inlet superheating is high (if normal, SH = 20 deg. or lower). | |
| 4 | Shell bottom temperature is high (the difference with the low pressure saturation temperature is 70 deg. or greater) | |
| 5 | Shell temperature is low (the difference with the low pressure saturation temperature is 10 deg. or lower). | Refrigerant volume tends toward overcharge. |
| 6 | Liquid level AL = 2 | |


2) Cautions When Judging the Liquid Level

If you are judging the liquid level, be sure the liquid level sensor function (sensor and heater) are operating normally.
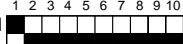
| Check Items | | Judgment |
|-------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------|
| 1 | Liquid Heater Disconnection Check | Normal if the resistance is 2.8 kΩ ± 7 %. |
| 2 | Liquid Heater Output Check Turn 1 ON on the LED monitor display switch (SW1) ON  , and output the signal for the heater relay to LED 5, then check the voltage of the heater terminal (AC 198 ~ 264 V) (leave the heater connections as they are). | Normal if AC 198 ~ 264 V is output together with the LED lighting. |
| 3 | Use the LED monitor display to check if there is misalignment between the actual temperature and the detected temperature of TH2 ~ TH4. | |

3) Check the refrigerant volume by LED monitor display using the LED.

Set the LED monitor display switch (SW1) as shown below and check the past information (history) concerning the refrigerant volume.



If LD3 lights up, it indicates the refrigerant charge abnormal delay state just before emergency stop due to refrigerant overcharge (1500).

(3) Additional Refrigerant Charge Volume

At the time of shipping from the factory, the outdoor unit is charged with the amount of refrigerant shown in the following table, but since no extension piping is included, please carry out additional charging on-site.

| Outdoor Unit Model | PURY-P400YMF-C | PURY-P500YMF-C |
|---------------------------|----------------|----------------|
| Refrigerant Charge Volume | 20 kg | 22 kg |

Calculation Formula

Calculate the additional refrigerant volume by calculating the size of the extension liquid piping and its length (units: m).

Additional Refrigerant Volume (kg) = (0.31 × L₁) + (0.12 × L₂) + (0.06 × L₃) + (0.024 × L₄) + α₁ + α₂
(Note 1)

In the calculation results, round up fractions smaller than 0.01 kg. (Example: 18.54 kg → 18.6 kg)

(α Calculation Table)

| Total Capacity of Connected Indoor Units | α ₁ |
|------------------------------------------|----------------|
| 161 ~ 330 | 2.0 kg |
| 331 ~ 480 | 2.5 kg |
| 481 ~ 630 | 3.0 kg |
| 631 ~ | 4.0 kg |

| | α ₂ |
|---------------------------------|----------------|
| BC controller (master) only | 0 kg |
| BC controller (slave) connected | 3.0 kg |

- L₁: Length of φ25.4 high press pipe (m)
- L₂: Length of φ12.7 liquid pipe (m)
- L₃: Length of φ9.52 liquid pipe (m)
- L₄: Length of φ6.35 liquid pipe (m)
- α₁: refer to the calculation table.


(Note 1) : In case high press pipe size (L₁) is φ22.22, 0.25 × L₁.

[3] Refrigerant Volume Adjustment Mode Operation

(1) Procedure

Depending on the operating conditions, it may be necessary either to charge with supplementary refrigerant, or to drain out some, but if such a case arises, please follow the procedure given below.

1/ Switching the function select switch (SW2-4), located on the outdoor unit's control board, ON starts refrigerant volume adjustment mode operation and the following operation occurs. (Refrigerant recovery mode and oil recovery mode will be invalid.)

2/ Additionally, if the LED monitor display switch (SW1) on the outdoor unit's control board is set to ON , the accumulator's liquid level is indicated by the LED lighting position.

| |
|----------------------------------|
| AL = 0 (No fluid in accumulator) |
| AL = 1 (Liquid in accumulator) |
| AL = 2 (Overcharge) |

Notes 1 Even if AL = 1 for a short time after operation in the refrigerant volume adjustment mode starts, as time passes (as the refrigeration system stabilizes), it may change to AL = 0.

Notes 2 As the refrigerant volume can not be adjusted in the heating mode, retrieve the refrigerant, evacuate air and then fill the specified volume of refrigerant if it is necessary to adjust the refrigerant volume in the winter season.

Notes 3 A refrigerant volume adjustment performed in the cooling mode must be done with a gauge reading of 13 kg/cm²G or higher.
If the pressure does not reach this guage reading the refrigerant cannot be collected.
Therefore, collect used refrigerant and evacuate the unit completely, and then fill new refrigerant up to a specified quantity.

Notes 4 Judgment by the AL is at best only a rough guideline. Please do not add refrigerant based on the AL reading alone. (Be sure to obtain calculations of the correct amount before adding refrigerant.)

Notes 5 When supplementing the refrigerant volume, please be careful to charge with liquid refrigerant.

TH1



SC11



SC16




Pd (High pressure)



(2) Refrigerant adjustment in Cooling season (Flow chart)

In case of PURY-P400, 500YMF-C

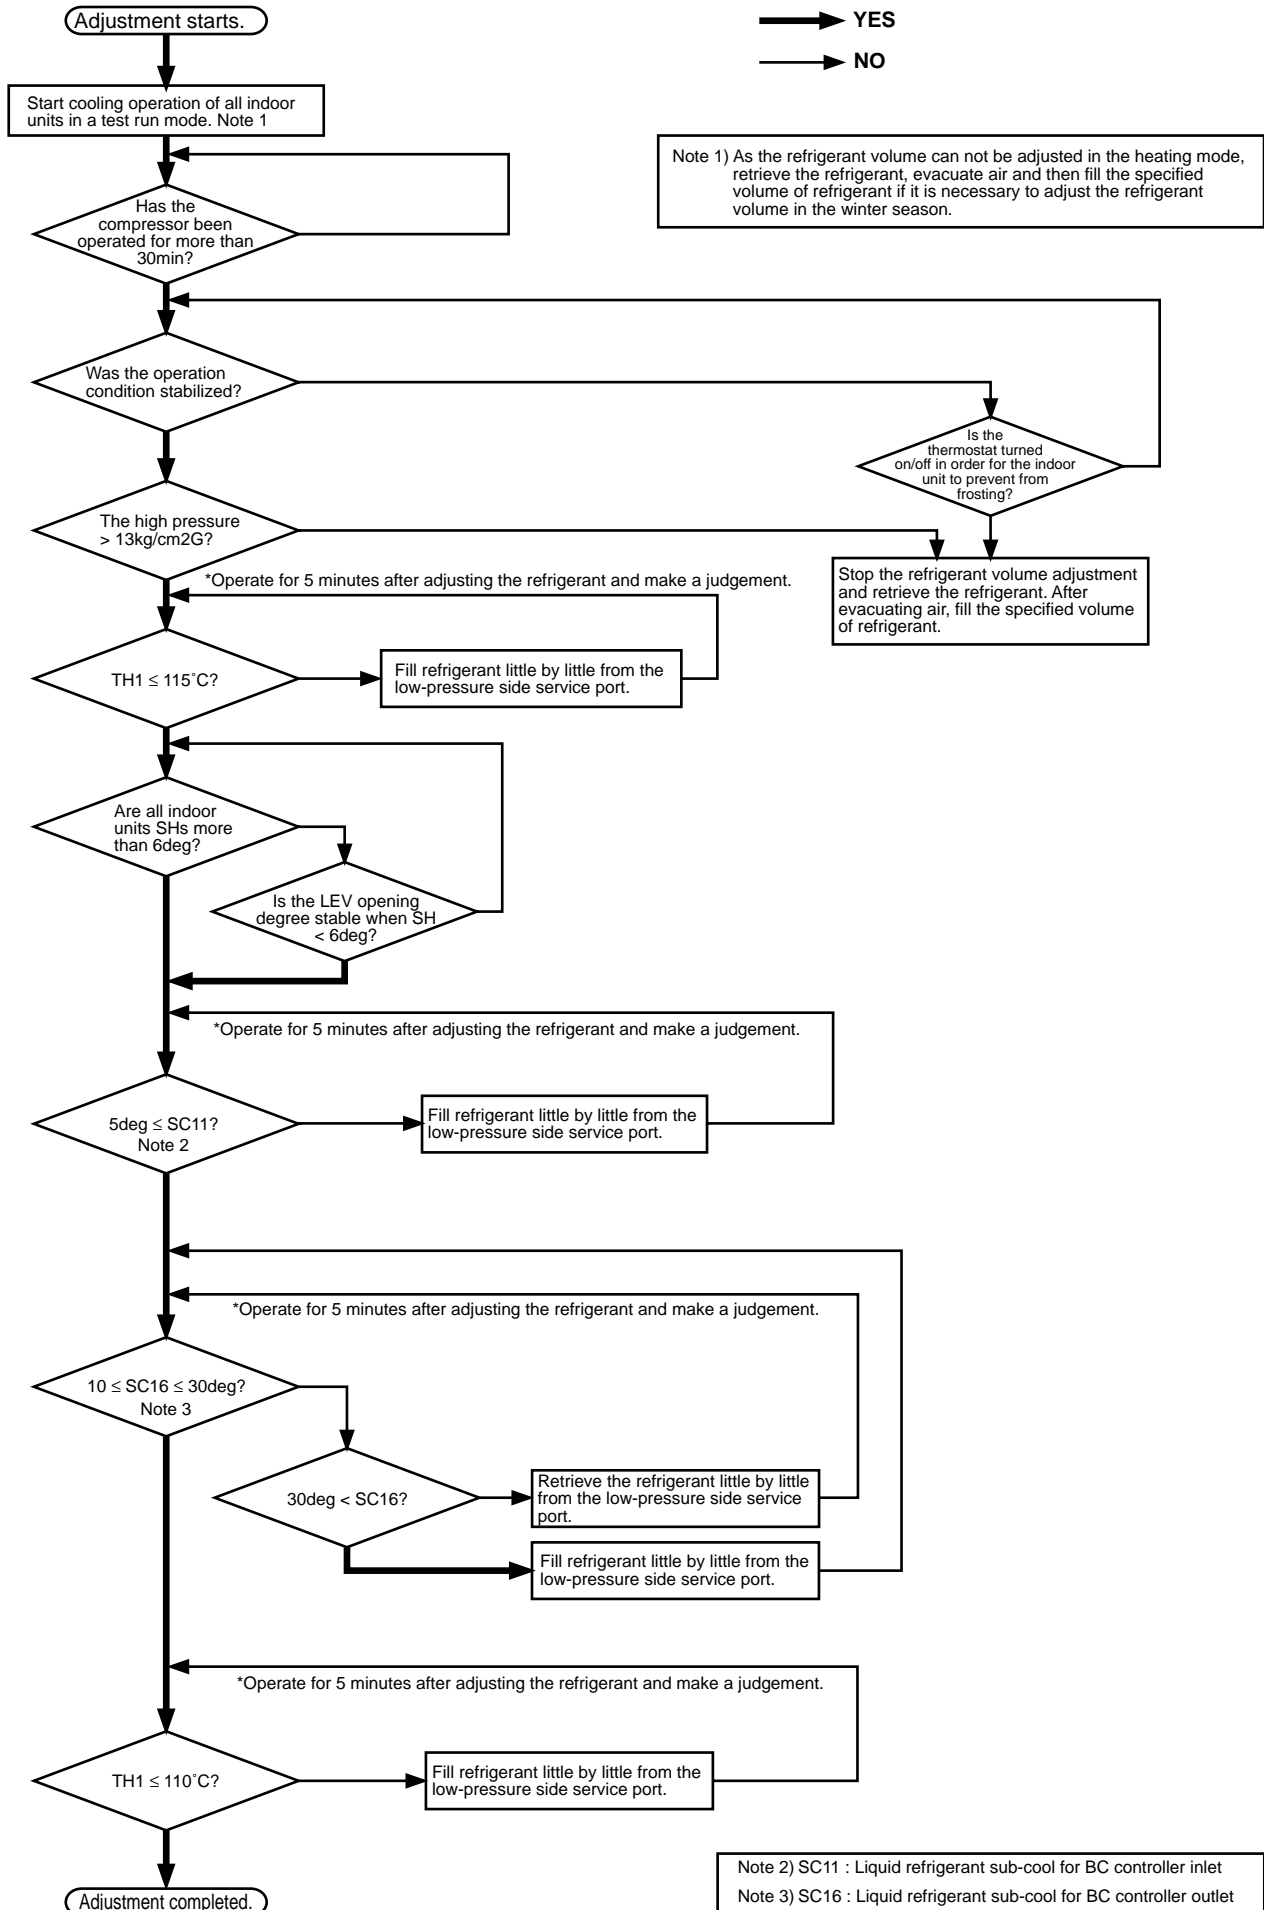

→ YES
→ NO


Note 1) As the refrigerant volume can not be adjusted in the heating mode, retrieve the refrigerant, evacuate air and then fill the specified volume of refrigerant if it is necessary to adjust the refrigerant volume in the winter season.

Stop the refrigerant volume adjustment and retrieve the refrigerant. After evacuating air, fill the specified volume of refrigerant.

Note 2) SC11 : Liquid refrigerant sub-cool for BC controller inlet
Note 3) SC16 : Liquid refrigerant sub-cool for BC controller outlet


(3) Refrigerant adjustment in heating season (Flow chart)

In case of PURY-P400, 500YMF-C

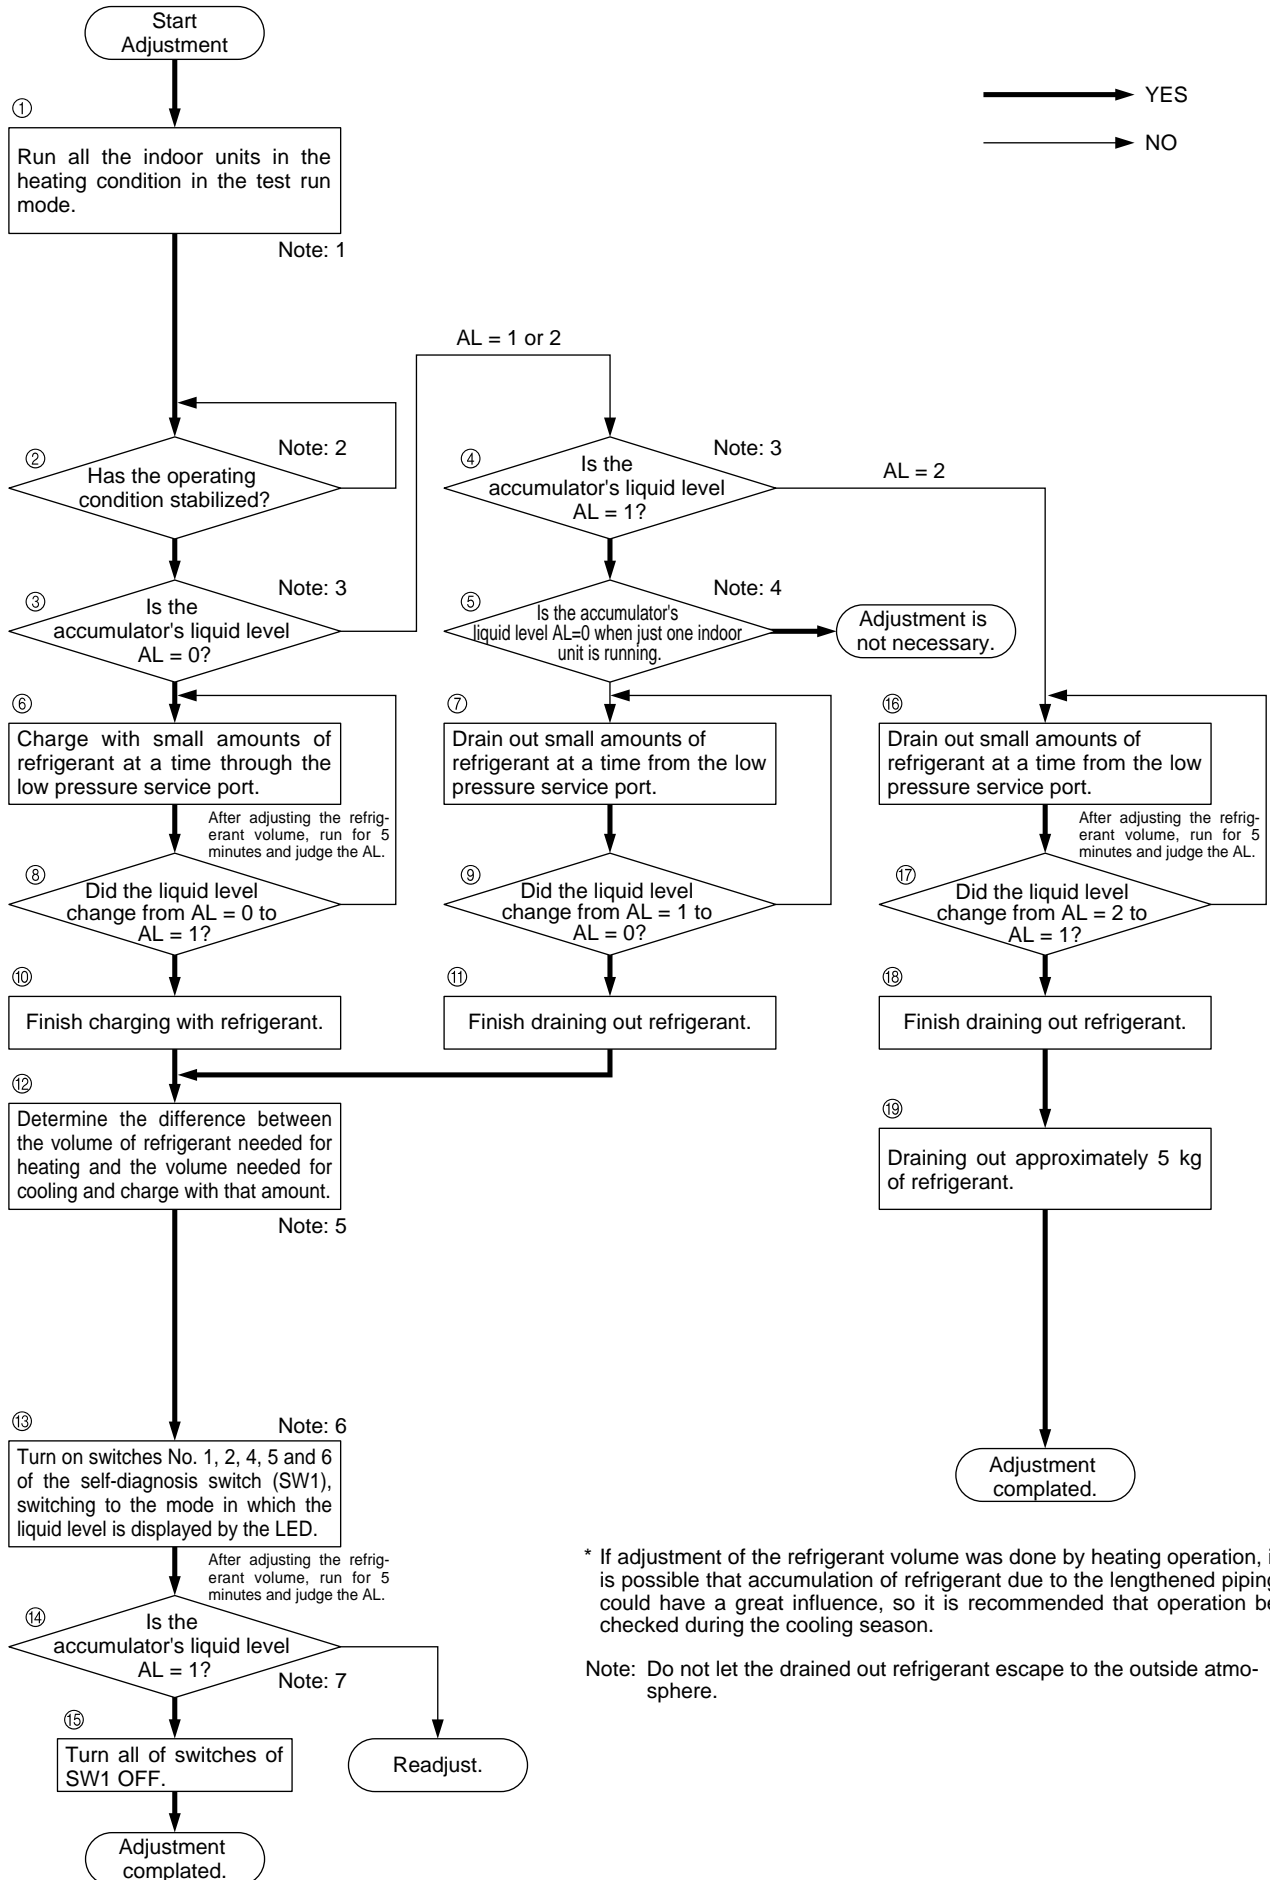

Note: 1 If there are any units which are not operating, it will cause refrigerant to accumulate, so by all means operate all the indoor units. Also, in order to prevent stable operation from being disrupted by the thermostat going OFF, set the trial operation mode.

Note: 2 If the high pressure is stabilized, it is safe to judge that the operation condition is stable.
Judge that operation is stabilized or not stabilized by whether the compressor starts after 3 or more minutes have passed.

Note: 3 When turning on SW1 to ON , the LED will display the liquid level.

Note: 4 If AL = 1, it indicates that adjustment is not necessary, but when the liquid level is on the low side even if it is in the AL = 1 region, if one unit only is run and refrigerant is accumulating in the units that are stopped, it may result in there being insufficient refrigerant, so at such a time, adjustment is necessary.

Note: 5 Determine the difference in the volume of refrigerant necessary for cooling and for heating as follows, and carry out supplementary charging in accordance with the table below.

* The piping length is the total pipe length calculated for a high press pipe with a $\phi 25.4$ size.

| | | | |
|-------------------------------|--------------|-----------|----------------|
| Pipe Length | 60 m or less | 60 ~ 90 m | 90 m or longer |
| Additional Refrigerant Volume | 18 kg | 27 kg | 31 kg |

| |
|-------------------------------------------------------------------|
| If the liquid pipe size is $\phi 12.7$, the actual length is 0.3 |
| If the liquid pipe size is $\phi 9.52$, the actual length is 0.2 |
| If the liquid pipe size is $\phi 6.35$, the actual length is 0.1 |


7 TROUBLESHOOTING

[1] Principal Parts

Pressure Sensor

(1) Judging Failure

- 1) Check for failure by comparing the sensing pressure according to the high pressure/low pressure pressure sensor and the pressure gauge pressure.
Turn on switches 1, 3, 5, 6 (High) and 2, 4, 5, 6 (Low) of the digital display select switch (SW1) as shown below, and the sensor pressure of the high pressure/low pressure sensors is displayed digitally by the light emitting diode LD1.

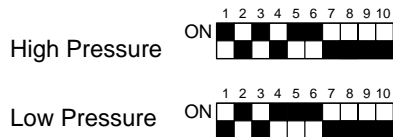


- 1 In the stopped condition, compare the pressure readings from the gauge and from the LD1 display.
 - (a) If the gauge pressure is 0~1 kg/cm²G (0.098MPa), the internal pressure is dropping due to gas leakage.
 - (b) If the pressure according to the LD1 display is 0~1 kg/cm²G (0.098MPa), there is faulty contact at the connector, or it is disconnected. Proceed to 4.
 - (c) If the pressure according to the LD1 display is 32 kg/cm²G (3.14MPa) or higher, proceed to 3.
 - (d) If other than (a), (b) or (c), compare the pressure readings during operation. Proceed to 2.
- 2 Compare the pressure readings from the gauge and from the LD1 display while in the running condition.
 - (a) If the difference between the two pressures is within 1 kg/cm²G (0.098MPa), both the affected pressure sensor and the main MAIN board are normal.
 - (b) If the difference between the two pressures exceeds 1 kg/cm²G (0.098MPa), the affected pressure sensor is faulty (deteriorating performance).
 - (c) If the pressure reading in the LD1 display does not change, the affected pressure sensor is faulty.
- 3 Disconnect the pressure sensor from the MAIN board and check the pressure according to the LD1 display.
 - (a) If the pressure is 0~1 kg/cm²G (0.098MPa) on the LD1 display, the affected pressure sensor is faulty.
 - (b) If the pressure is 32 kg/cm²G (3.14MPa) (in the case of the low pressure sensor, 10 kg/cm²G (0.98MPa)) or higher, the MAIN board is faulty.
- 4 Disconnect the pressure sensor from the MAIN board and short out the No. 2 and No. 3 pins of the connector (63HS, 63LS), then check the pressure by the LD1 display.
 - (a) If the pressure according to the LD1 display is 32 kg/cm²G (3.14MPa) (in the case of the low pressure sensor, 10 kg/cm²G (0.98MPa)) or higher, the affected pressure sensor is faulty.
 - (b) If other than (a), the MAIN board is faulty.

2) Pressure sensor configuration.

The pressure sensors are configured in the circuit shown in the figure at right. If DC 5 V is applied between the red and black wires, a voltage corresponding to the voltage between the white and black wires is output and this voltage is picked up by the microcomputer. Output voltages are as shown below.

High Pressure 0.1 V per 1 kg/cm²G (0.098MPa)
Low Pressure 0.3 V per 1 kg/cm²G (0.098MPa)

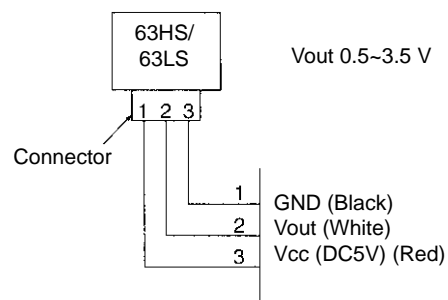

Solenoid Valve (SV1~8)

Check if the control board's output signals and the operation of the solenoid valves match.

Setting the self-diagnosis switch (SW1) as shown in the figure below causes the ON signal of each relay to be output to the LED's.

Each LED shows whether the relays for the following parts are ON or OFF. When a LED lights up, it indicates that the relay is ON.

| SW1 | LED | | | | | | | |
|-----|------|-----|-----|----------------|--------|---|---------|---|
| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 |
| | | | | 2154a 2154b | SV1 | | SV22/32 | |
| | SV4a | | | SV6a | | | | |
| | SV3 | SV4 | SV5 | SV6 | SV7, 8 | | | |

1) SV1 (Bypass valve)

- ① Since SV1 will be set to ON 4 minutes after the compressor has started operation, confirm operation by monitoring the LED display and listening for the operation of the solenoid valve.
- ② It is possible to confirm the switching being performed by the operation of the solenoid valve while the unit is operating by monitoring the temperature of the bypass circuit or the sound of the refrigerant.

2) SV22, SV32 (Full load/unload switching valve) (only P500YMF-C)

- ① The No. 1 compressor is started first and operates for approximately 10 minutes and then the No. 2 compressor starts in the unload mode. Since it will then switch to full load within 5 minutes, the operation can be confirmed by the LED display and the operating temperature of the solenoid valve. (If the indoor unit operating is small, the No. 2 compressor will not start.)
- ② It is possible to determine whether or not the compressors are switching from unload to full load by check the changes in amperage of the compressor at the moment of switching. The amperage under full load will be approximately 30 to 40 % more than operation under unload.

Note: The solenoid valve for SV22 is closed when conducting electricity while the SV32 is open when conducting electricity.

3) SV4a (Bypass valve)

- ① During unload operation in the cooling mode and when there is a rise in temperature and during unload operation in the heating mode, SV4a will be set to ON according to conditions, making is possible to check operation by the LED display and the operating sound of the solenoid valve.
- ② It is possible to confirm the switching for the operating status by the temperature of the bypass circuit or the sound of the refrigerant during the operation of the solenoid valve.

4) SV6b

When No. 2 compressor is operating and No. 2 compressor is stopped, the main SV6 will be set to ON, making it possible to confirm operation by monitoring the LED display and listening to the operating sound. Note that it may be set to OFF if the outlet temperature (TH11) exceeds 120°C .

5) 21S4a, 21S4b

21S4a, 21S4b are turned on during heating mode and heating-main mode.

6) SV3 ~ 8 (Control of heat exchanger capacity)







- (a) Operations can be confirmed by LED display and operating sound of solenoid valve, because one or more of SV3 ~8 are turned on depending on conditions during cooling-only operations.
- (b) Operation can be confirmed by LED display and operating sound of solenoid valve, because all of SV3 ~ 8 are turned on during heating-only operations.
- (c) Operations can be confirmed by LED display and operating sound of solenoid valve, because one or more of SV3 ~8 are turned on depending on conditions during cooling-principal and heating-principal operations.

Solenoid Valves Block1

The refrigerant flow is as following figure. Hot gas (high pressured) flows in cooling mode and cool gas/liquid (low pressured) flows in heating mode. Please refer to the Refrigerant Circuit Diagram.



And, ON/OFF of Solenoid valve is depends on the amount of running indoor units, ambient temperature and so on. So please check by LED Monitor Display.

If the SV coil is taken off, then it is possible to open caps and check plungers. But the special tool which is on the Service Parts List is needed.

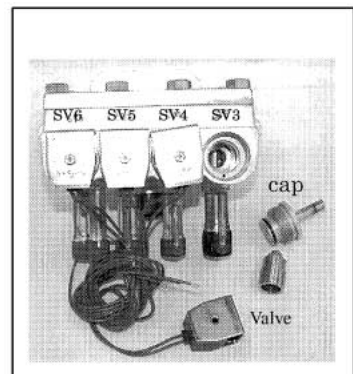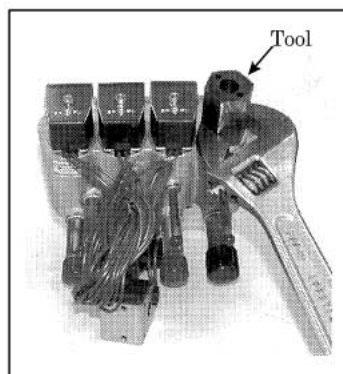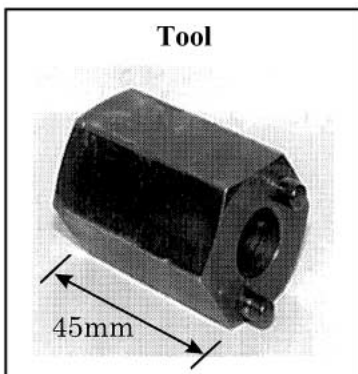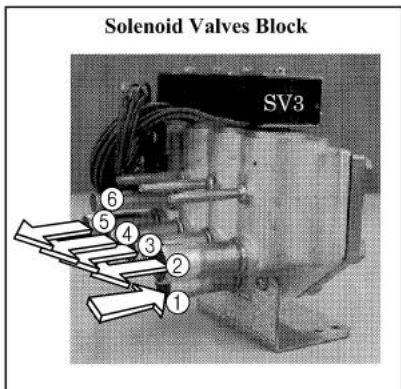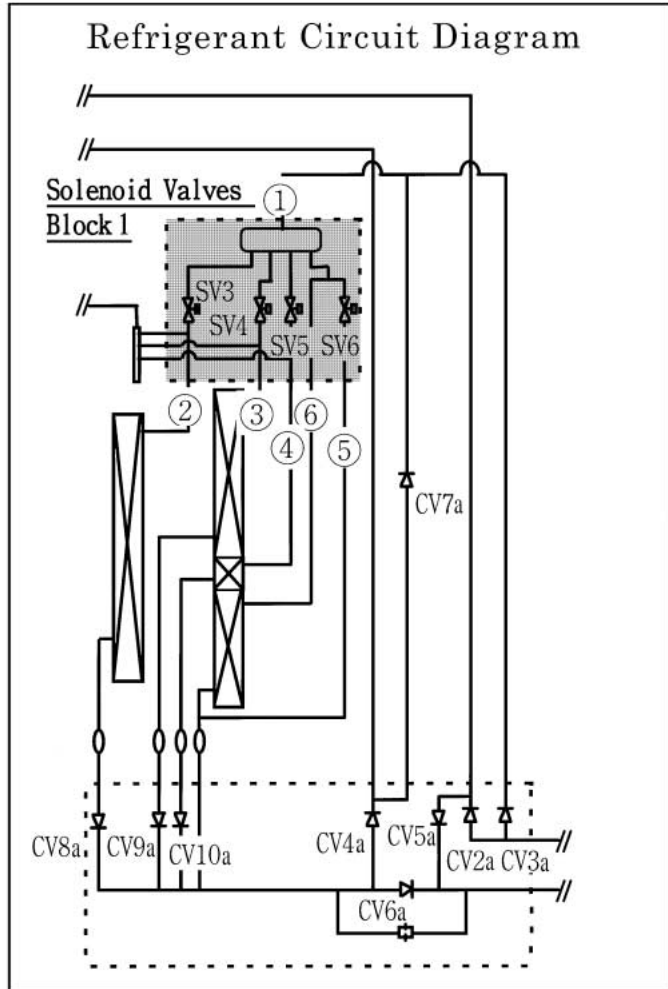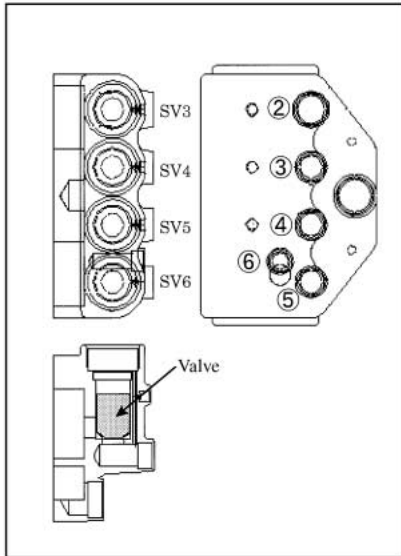

* Closed torque : 13kg·m (1.3N·m)

Solenoid Valves Block2


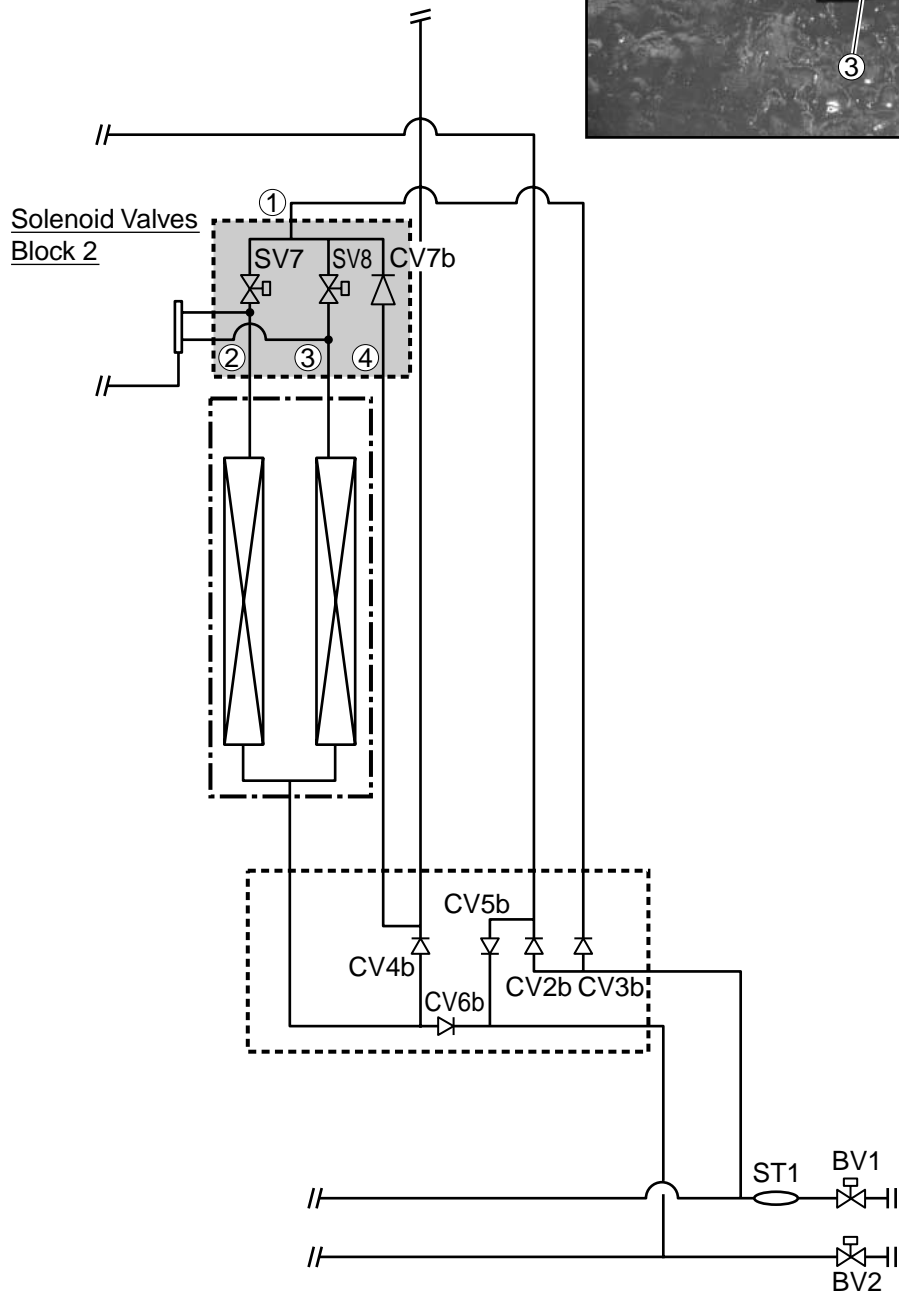
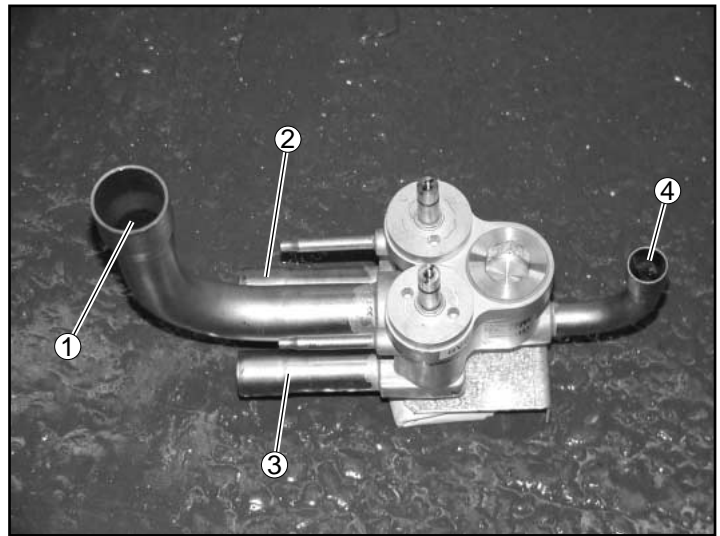


Check Valves Block1



The refrigerant flow in the pipe ⑥, ⑦, ⑧ and ⑨ are depend on ON/OFF of the SV3, 4, 5 and 6.

Please confirm by LED monitor display.


You can open the cap of valve A, B and C, but 3 types of hexagon socket screw keys. The size is as follows.

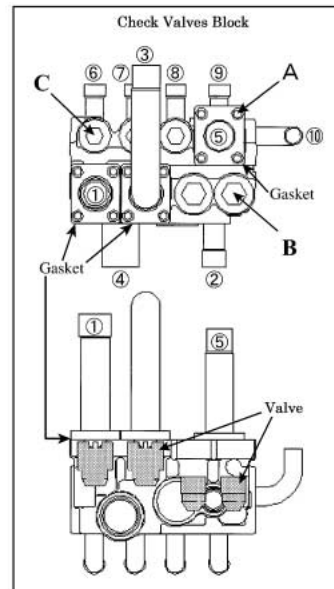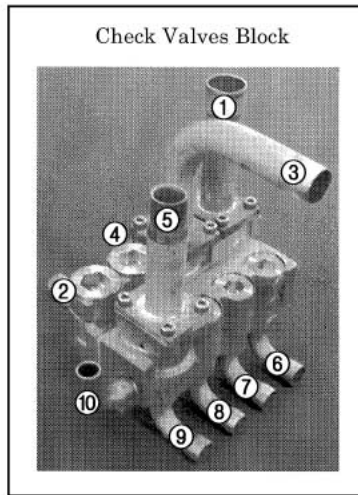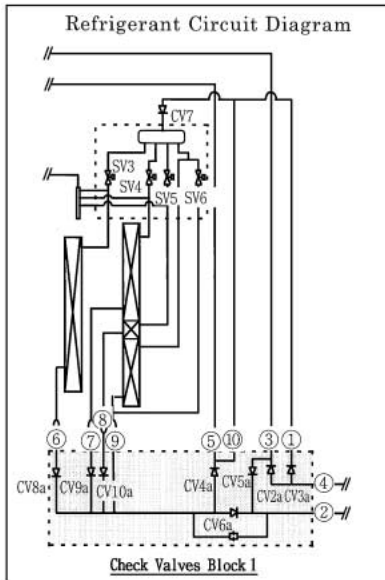



- * Closed torque : A : 1.7kg·m (0.17N·m)
- B : 20kg·m (2.0N·m)
- C : 13kg·m (1.3N·m)

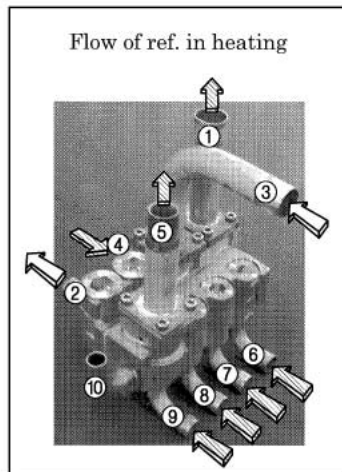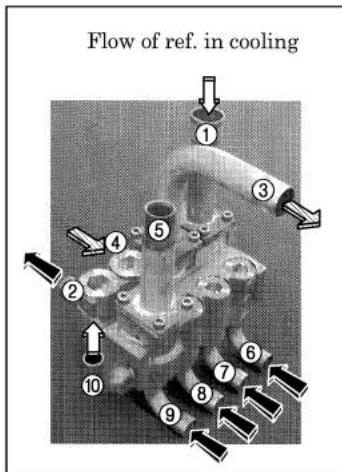

- ↖ High pressure gas
- ↗ High pressure liquid
- ↔ Low pressure gas/liquid

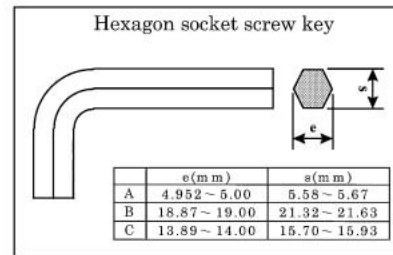


Check Valves Block2

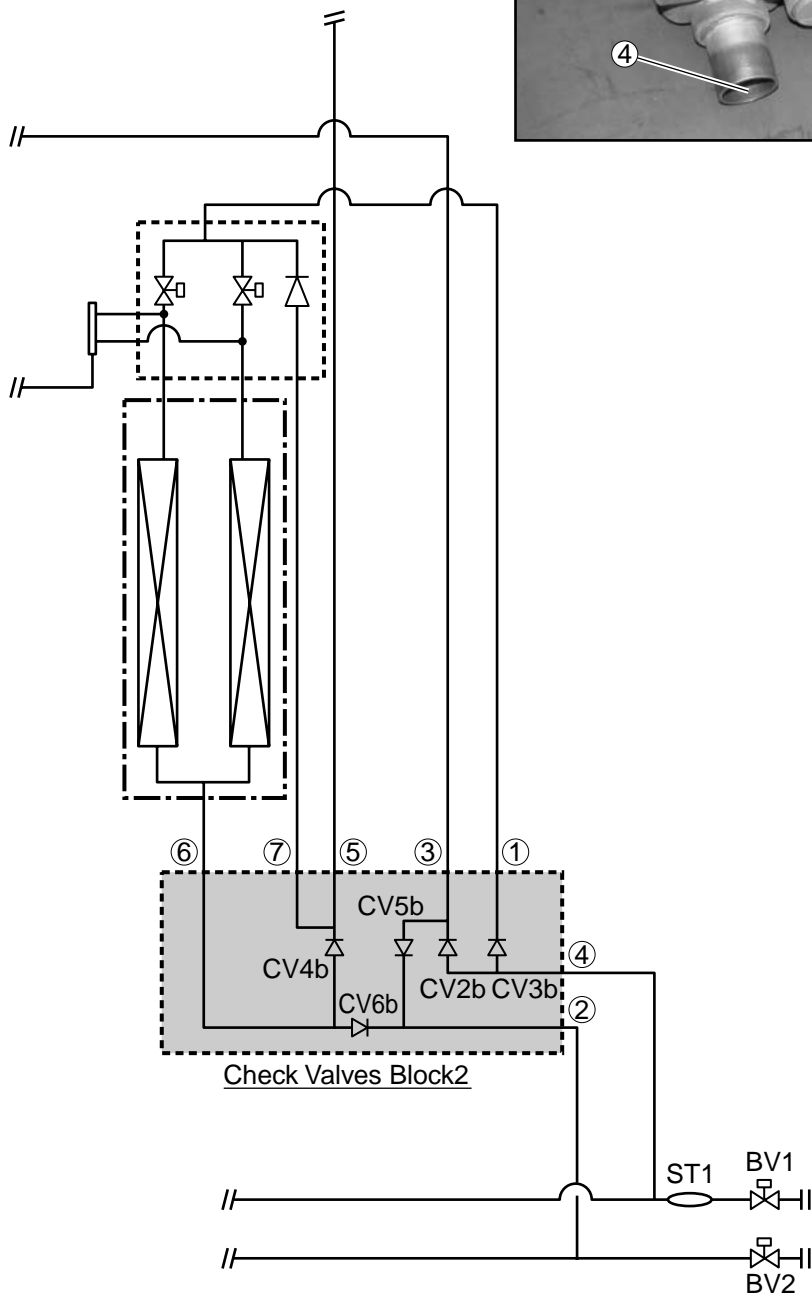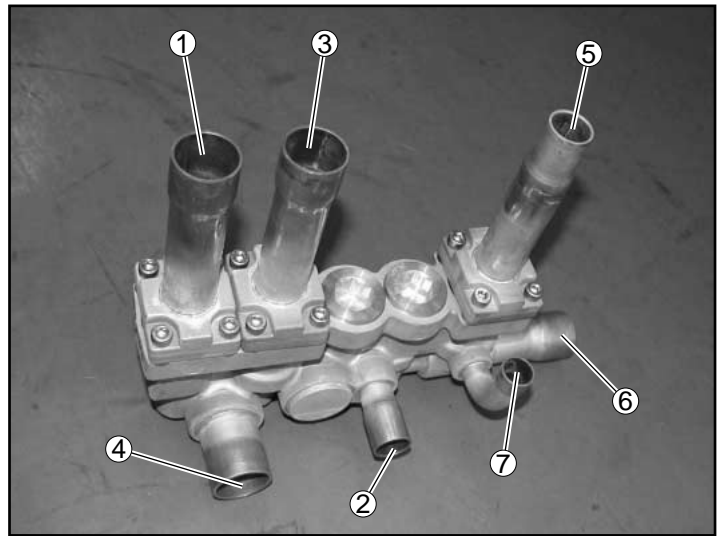

Outdoor LEV

The valve percentage opening changes in proportion to the number of pulses.
 (Connections between the outdoor unit's MAIN board and SLEV, (PURY-P400-500YMF-C))

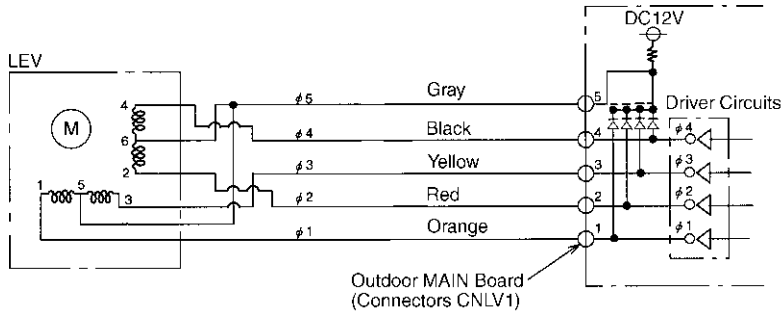


Pulse Signal Output and Valve Operation

| Output (phase) | Output states | | | | | | | |
|----------------|---------------|-----|-----|-----|-----|-----|-----|-----|
| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 |
| φ1 | ON | OFF | OFF | OFF | OFF | OFF | ON | ON |
| φ2 | ON | ON | ON | OFF | OFF | OFF | OFF | OFF |
| φ3 | OFF | OFF | ON | ON | ON | OFF | OFF | OFF |
| φ4 | OFF | OFF | OFF | OFF | ON | ON | ON | OFF |

Output pulses change in the following orders when the Valve is Closed 1→2→3→4→5→6→7→8→1
 Valve is Open 8→7→6→5→4→3→2→1→8

- * 1. When the LEV percentage opening does not change, all the output phases are off.
- 2. When the output is out of phase or remains ON continuously, the motor cannot run smoothly, but move jerkily and vibrates.

LEV Valve Closing and Valve Opening Operations


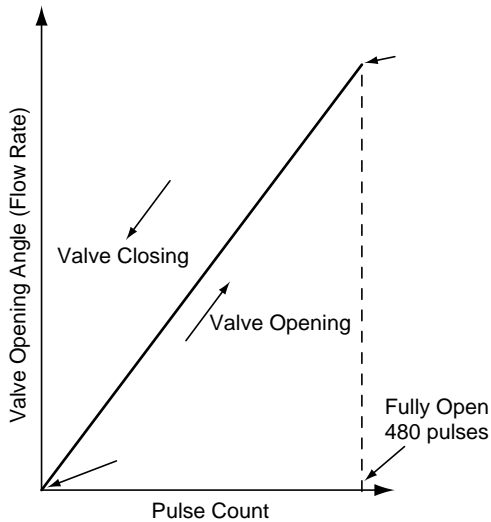


- * When the power is switched ON, a 520 pulse valve opening signal is output to make sure the valve's position, so that it is definitely at point A. (The pulse signal is output for approximately 17 seconds.)
- * When the valve operates smoothly, there is no sound from the LEV and no vibration occurs, but when the valve is locked, it emits a noise.
- * Whether a sound is being emitted or not can be determined by holding a screwdriver, etc. against it, then placing your ear against the handle.
- * If there is liquid refrigerant inside the LEV, the sound may become lower.

Judgment methods and likely failure mode


Caution:

The specifications of the outdoor unit (outdoor LEV) and indoor unit (indoor LEV) differ. For this reason, there are cases where the treatment contents differ, so follow the treatment specified for the appropriate LEV as indicated in the right column.
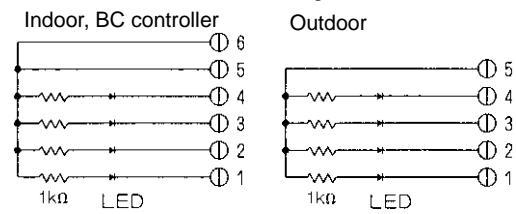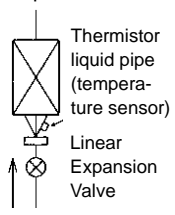
| Failure Mode | Judgment Method | Treatment | Affected LEV |
|-------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------|------------------------------------|
| Microcomputer driver circuit failure | <p>① Disconnect the control board connector and connect the check LED as shown in the figure below.</p>  <p>When the base power supply is turned on, the indoor LEV outputs pulse signals for 10 seconds, the outdoor LEV outputs pulse signals for 17 seconds, and BC controller outputs pulse signals for 10-20 seconds. If the LED does not light up, or lights up and remains on, the driver circuit is abnormal.</p> | In the case of driver circuit failure, replace the control board. | Indoor BC controller Outdoor |
| LEV mechanism is locked. | <p>① If the LEV is locked up, the drive motor turns with no load and a small clicking sound is generated. Generation of this sound when the LEV is fully closed or fully open is abnormal.</p> | Replace the LEV. | Indoor BC controller Outdoor |
| The LEV motor coils have a disconnected wire or is shorted. | <p>Measure the resistance between the coils (red - white, red - orange, brown - yellow, brown - blue) using a tester. They are normal if the resistance is within $150\Omega \pm 10\%$.</p> | Replace the LEV coils. | Indoor BC controller |
| | <p>Measure the resistance between the coils (gray - orange, gray - red, gray - yellow, gray - black) using a tester. They are normal if the resistance is within $46\Omega \pm 3\%$.</p> | Replace the LEV coils. | Outdoor |
| Fully closed failure (valve leaks) | <p>① If you are checking the indoor unit's LEV, operate the indoor unit's blower and the other indoor units in the cooling mode, then check the piping temperatures (liquid pipe temperatures) of the indoor units by the operation monitor through the heat source unit's control board. When the fan is running, the linear expansion valve is fully closed, so if there is leakage, the temperature sensed by the thermistor (liquid pipe temperature sensor) will become low. If the temperature is considerably low compared to the remote control's intake temperature display, it can be judged that there is a fully closed failure. In the case of minimal leakage, it is not necessary to replace the LEV if there are no other effects.</p>  | If there is a large amount of leakage, replace the LEV. | Indoor BC controller |
| Faulty wire connections in the connector or faulty contact. | <p>① Check for pins not fully inserted on the connector and check the colors of the lead wires visually. ② Disconnect the control board's connector and conduct a continuity check using a tester.</p> | Check the continuity at the places where trouble is found. | Indoor BC controller Outdoor |

Outdoor LEV (SLEV) Coil Removal Procedure (configuration)


As shown in the figure, the outdoor LEV is made in such a way that the coils and the body can be separated.

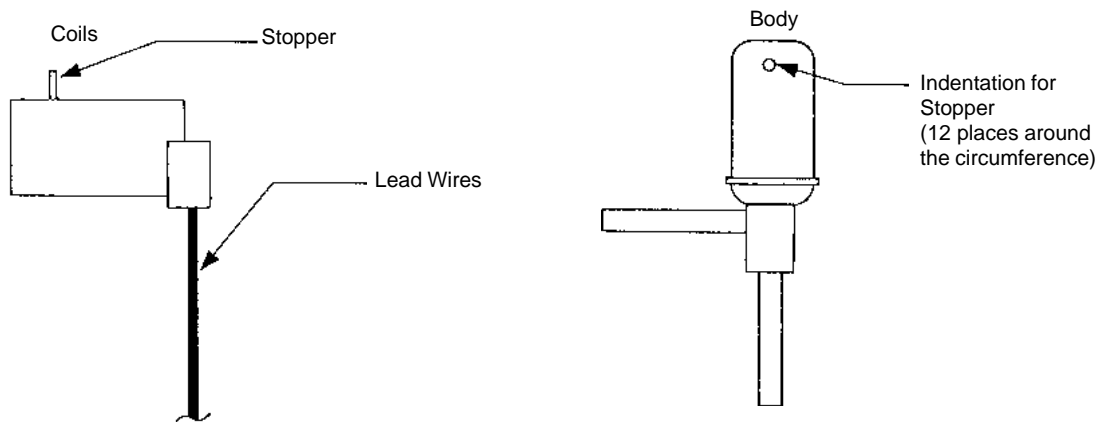

<Removing the Coils>


Fasten the body tightly at the bottom (Part A in the figure) so that the body will not move, then pull out the coils toward the top. If they catch on the stopper and are difficult to take out, turn the coils left and right until the stoppers are free from the stopper indentations, then pull the coils out.

If you take out the coils only without gripping the body, undue force will be applied to the piping and the pipe may be bent over, so be sure to fasten the body in such a way that it will not move.

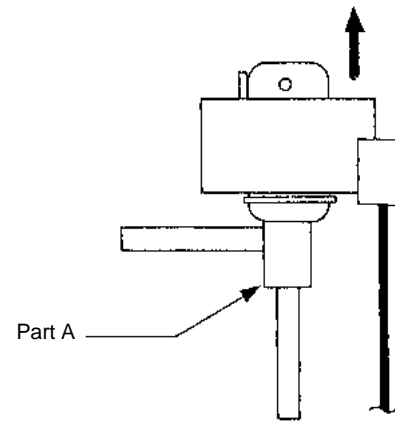

<Installing the Coils>

Fasten the body tightly at the bottom (Part A in the figure) so that the body will not move, then insert the coils from the top, inserting the coils' stopper securely in one of the indentations on the body. (There are four indentations for the stopper on the body around its circumference, and it doesn't matter which indentation is used. However, be careful not to apply undue force to the lead wires or twist them around inside the body.) If the coils are inserted without gripping the body, it may exert undue force on the piping, causing it to become bent, so be sure to hold the body firmly so that it won't move when installing the coils.

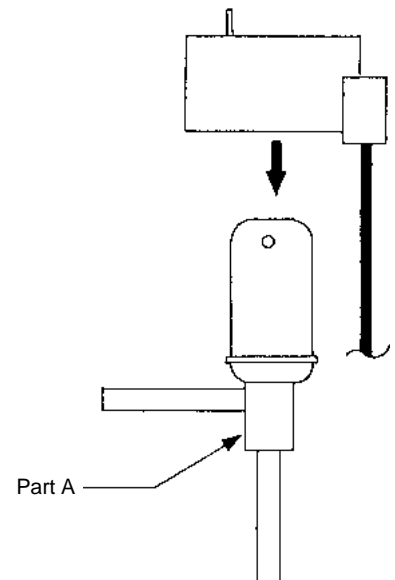


Intelligent Power Module (IPM)

Measure resistances between each terminal of IPM with tester, and use the results for troubleshooting. Specified resistance value is dependent on tester type to be used for resistance measurement, because diode inside IPM has non-linearity, thus difference of impedance and voltage in tester being influential. As the internal impedance of resistance range of analog tester equals to the center value of meter indication, the affect of internal impedance can be minimized if the tester having close center value of resistance range. Because internal voltage is normally 1.5V, the tester to be used for troubleshooting of IPM should satisfy the following conditions.


| | |
|-----------------------------------|--------------------------------------------|
| Internal voltage | 1.5V (Power source : one dry cell battery) |
| Central value of resistance range | 10 ~ 40Ω |

The measured values for troubleshooting are shown in the table below.
(Use the minimum range for tester resistance range.)

• External view

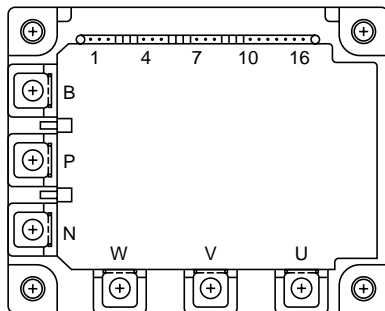

• Internal circuit diagram


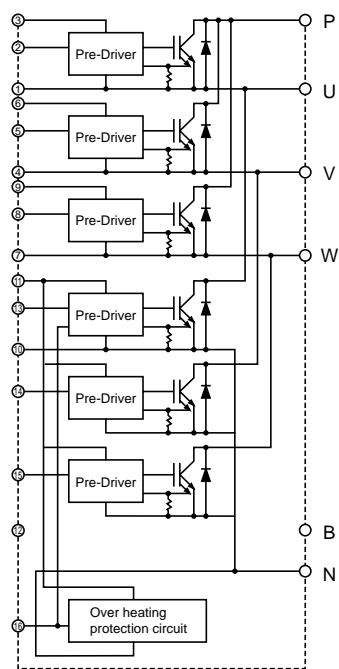


• Judged value

| Tester + Tester - | P | U | V | W | N |
|----------------------|--------|--------|--------|--------|---|
| | P | ∞ | ∞ | ∞ | ∞ |
| U | 2~100Ω | ∞ | ∞ | ∞ | ∞ |
| V | 2~100Ω | ∞ | ∞ | ∞ | ∞ |
| W | 2~100Ω | ∞ | ∞ | ∞ | ∞ |
| N | 2~100Ω | 2~100Ω | 2~100Ω | 2~100Ω | ∞ |


Diode stack

Perform continuity check with tester. Judged as normal if the following characteristics are observed.
(Use the minimum range for tester resistance range.)

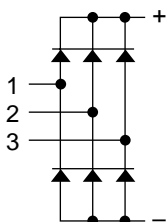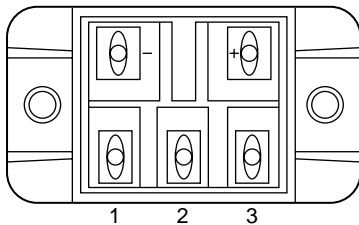


| | | Tester ⊕ | + | - |
|----------|---|----------|--------|--------|
| Tester ⊖ | 1 | 10~50Ω | ∞ | ∞ |
| | 2 | 10~50Ω | ∞ | ∞ |
| | 3 | 10~50Ω | ∞ | ∞ |
| | | Tester ⊖ | + | - |
| Tester ⊕ | 1 | ∞ | 10~50Ω | 10~50Ω |
| | 2 | ∞ | 10~50Ω | 10~50Ω |
| | 3 | ∞ | 10~50Ω | 10~50Ω |

(2) Trouble and remedy of remote controller
(In the case of MA remote controller)


| | Phenomena | Factors | Check method and handling |
|---|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | <p>If pushing the remote control operation SW does not make a sound such as beep with the crystal display lamp out, and no operate is possible.</p> <p>(An appropriate display  on the remote control is not on.)</p> | <ol style="list-style-type: none"> 1) Power supply from transformers is not turned on in Indoor Unit. <ol style="list-style-type: none"> ① The original power supply of Indoor Unit is not turned on. ② The connector (CND, CNT, CN3T) on the controller board in the room has come off. ③ Fuse on the control board in Indoor Unit has melting down. ④ Transformer defects or damage to unit. 2) MA remote controller has been wired incorrectly. <ol style="list-style-type: none"> ① Break of the MA remote controller line and the connection to the terminals has come off. ② Short circuit of the MA remote control wiring ③ Reversed connections of the wiring on remote controller. ④ Incorrect connection of the MA remote control wiring to the transmission line terminal block (TB 5). ⑤ Reversed connections between the MA remote control wiring in the indoor unit and AC 200V power supply wiring. ⑥ Reversed connection between the MA remote control wiring in the indoor unit and M-NET transmission wiring. 3) The maximum number of MA remote controllers connected to one is unit exceeded (two units). 4) The wiring length of the MA remote line and the used electric wire diameter is out of specifications. 5) The wiring of the remote display output to the outdoor unit is short circuited, or the relay is connected with reversed polarity. 6) Defective of the controller board in the room 7) Defects of MA remote control | <ol style="list-style-type: none"> a) Check the MA remote control terminal voltage (between A and B). <ol style="list-style-type: none"> i) In the case of voltage DC8.5- 12V, the remote controller is defective. ii) In the case of voltage not available: <ul style="list-style-type: none"> ● Check the left described 1) and 3), after checking , if these are factors, then modifications should be performed. ● If there are no factors of the left described 1) and 3), move to b). b) Remove the remote control wiring from the terminal block TB13 for the MA remote control in the indoor unit, and check voltage between A and B. <ol style="list-style-type: none"> i) In the case of voltage DC9-12V Check the left described 2) and 4), if these are factors, then modifications should be performed. ii) In the case of voltage not available: <ul style="list-style-type: none"> ● Recheck the left described 1) once again, if this is a factor, them modifications should be performed. ● If there are no factors in the left described 1), check the wiring for the remote display (the relay polarity, etc.) ● If there are no factors, replace the controller board in the indoor unit. <div style="border: 1px solid black; padding: 5px; width: fit-content; margin-top: 10px;"> <p>In the case of item 1), the LED 1 on the controller board in the unit is off.</p> </div> |
| 2 | <p>When turning on the remote control operation SW, a temporary operation display is indicated, and the display lights out immediately, the unit stops.</p> | <ol style="list-style-type: none"> 1) M-NET transmission power supply from the outdoor unit is not supplied. <ol style="list-style-type: none"> ① The original power supply of the outdoor unit is not turned on. ② Disconnection of connectors on the board of the outdoor unit. Main board --- CNS1, CNVCC3 INV board --- CNAC2, CNVCC1, CNL2 ③ Power supply circuit defects of the outdoor unit. (For detail, refer to Pages 127) <ul style="list-style-type: none"> ● INV board defects ● Blown fuse (F1 on INV Board) ● Diode stack destruction ● Prevention resistance of rush current (R1) damage 2) Transmission line short 3) Wiring mistakes of the M-NET transmission line on the side of the outdoor unit <ol style="list-style-type: none"> ① Break of transmission line, and removal of terminal block ② The room transmission line is wired to the transmission line terminal block (TB7) for the central control by mistakes. 4) M-NET transmission line break on the side of the room unit 5) Disconnection of wiring between the M-NET transmission terminal block (TB 5) and the room controller board CN2M and pulls off of connectors | <div style="border: 1px solid black; padding: 5px; width: fit-content; margin-top: 10px;"> <p>In the case of factors 2) and 3) Indicated by 7102 error code on the self-diagnosis LED of the outdoor unit.</p> </div> |

Check method and handling

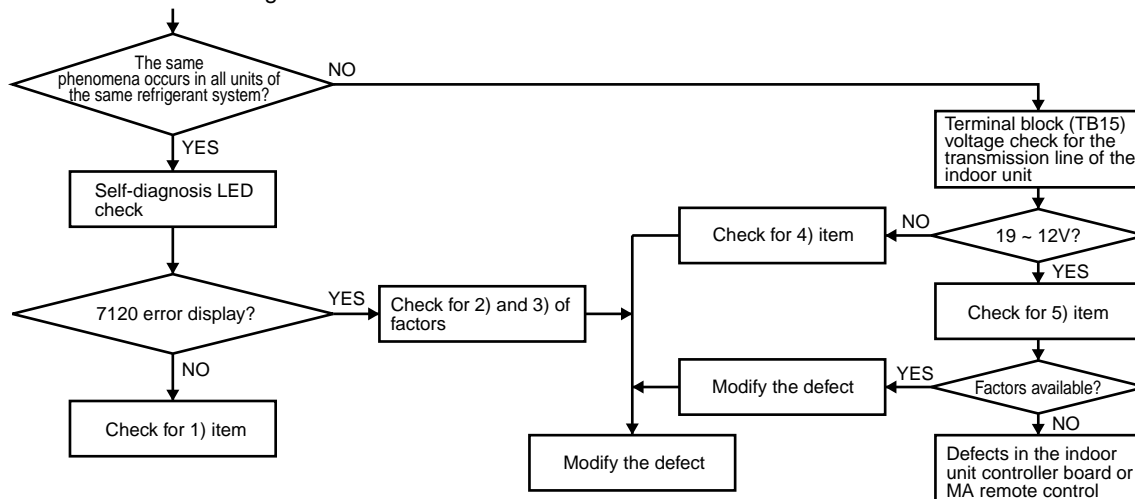

| | Phenomena | Factors |
|---|-----------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 3 | When the remote control SW is turned on, the indication goes off after approximately 20- 30 seconds, and indoor unit stops. | 1) Power supply from the transformer is not available to the control board of BC controller. ① The original power supply of the BC controller is not turned on. ② Removal of connectors (CN12, CN38, CNTR) on the control board of the BC controller. ③ Fuse on the control board of the BC controller is blown. ④ Transformer defects of the BC controller and a malfunction. ⑤ Defects on the control board of the BC controller |

Check method and handling

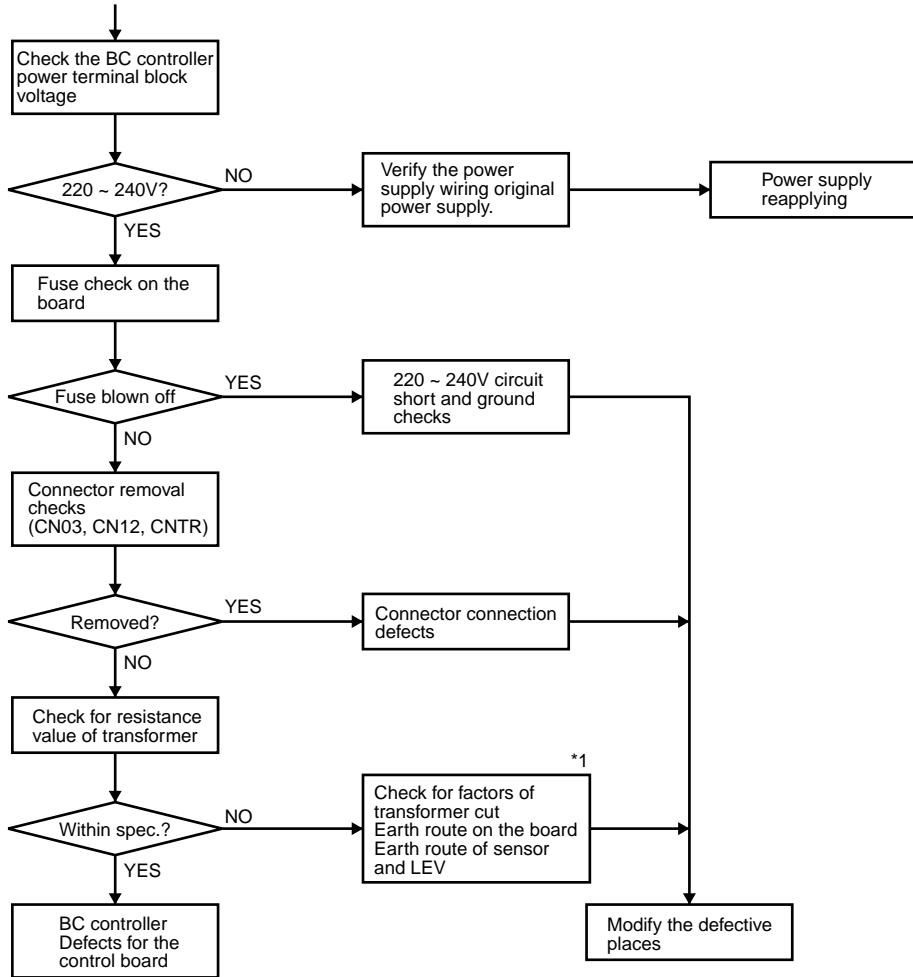


*1 As for transformer checks, It is subject to the failure judgment method of main parts in 4.5.


| | Phenomena | Factors |
|---|--------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 4 | <p>“HO” indication on the remote controller is not lit, and the ON/OFF switch does not work.</p> | <ol style="list-style-type: none"> 1) The M-NET transmission power supply form the outdoor unit is not supplied. <ol style="list-style-type: none"> ① The original power supply of Indoor Unit is not turned on. ② The connector on the controller board in Indoor Unit is removed. Main board ----CNS1, CNVCC3 INV board----CNAC2, CNVCC1, CNL2 ③ Power supply circuit defects of the outdoor unit. (For detail, refer to Pages 127) <ul style="list-style-type: none"> ● INV board defects ● Diode stack defects ● Prevention resistance of rush current (R1) damage. 2) Short circuit of the M-NET transmission line 3) Error wiring of the M-NET transmission line on the side of the outdoor unit <ol style="list-style-type: none"> ① A break of the transmission line or terminal block removal ② Indoor Unit transmission line is wired to the transmission line terminal block (TB7) for the central control by mistake. 4) M-NET transmission line break on the side of Indoor Unit (Short/ Open) 5) Loose or disconnection of wiring between the M-NET transmission terminal block (TB 5) of Indoor Unit and Indoor Unit controller board CN2M and disconnection of connectors 6) Error wiring of the MA remote control <ol style="list-style-type: none"> ① Short circuit of the MA remote wiring ② A break of the MA remote control line (No.2) and disconnection of the terminal block connection ③ Reversed wiring, cross-over in the group control ④ Wire by mistakes the MA remote control to the terminal block (TB5) for the transmission line ⑤ Connect by mistakes the M-NET transmission line to the MA remote control terminal block (TB13) 7) The unit address is not “00” as it should be with automatic address setting. 8) The address of Indoor Unit becomes 51 or more. 9) The master and slave setting of the MA remote control becomes the slave setting. 10) Use the M-NET remote control in spite of the automatic address. 11) Defects for the room controller board (MA remote communication circuits) 12) Defects for the remote controller |

In the case of 2), 3) and 7) factors, indicate 7102 errors by the self-diagnosis LED of the outdoor unit.


Check method and handling

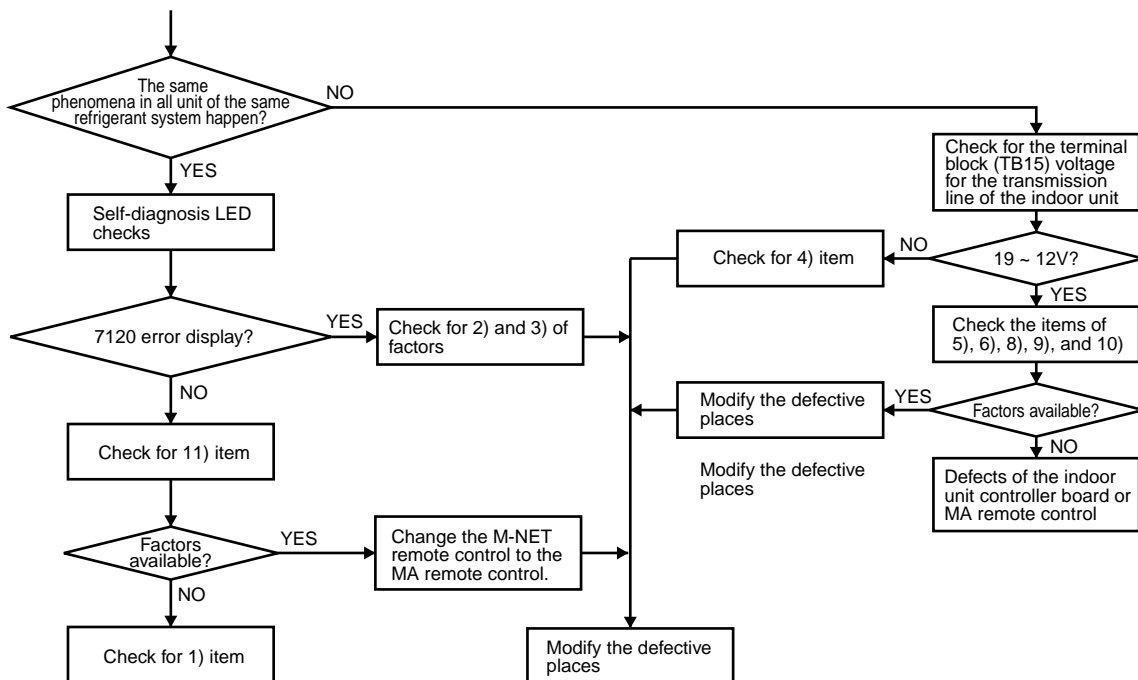

(In the case of M-NET remote controller)

| Symptom | Cause | Checking method & countermeasure |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>1) Despite pressing of remote controller ON/OFF switch, operation does not start and there is no electronic sound.</p> <p>(No powering signal  appears.)</p> | <p>1) M-NET transmission power source is not supplied from outdoor unit.</p> <ul style="list-style-type: none"> ① Main power source of outdoor unit is not connected. ② Disconnection of connector on outdoor unit circuit board. Main board : CNS1, CNVCC3 INV board : CNAC2, CNVCC1, CNL2 ③ Faulty power source circuit of outdoor unit. <ul style="list-style-type: none"> • Faulty INV board, • Blown fuse (F1 on INV board) • Broken diode stack • Broken resistor (R1) for rush current protection <p>2) Short circuit of transmission line.</p> <p>3) Erroneous wiring of M-NET transmission line at outdoor unit.</p> <ul style="list-style-type: none"> ① Transmission line disconnection or slipping off from terminal block. ② Erroneous connection of indoor/outdoor transmission line to TB7. <p>4) Disconnection of transmission wiring at remote controller.</p> <p>5) Faulty remote controller.</p> | <p>a) Check transmission terminal block of remote controller for voltage.</p> <ul style="list-style-type: none"> i) In case of 17 ~ 30V → Faulty network remote controller ii) In case of less than 17V → See "Transmission Power Circuit (30V) Check Procedure". |
| <p>2) At about 10 seconds after turning remote controller operation switch ON, the display distinguishes and the operation stops.</p> | <p>1) Power source is not fed to indoor unit from transformer.</p> <ul style="list-style-type: none"> ① Main power source of indoor unit is not turned on. ② Disconnection of connector (CND, CNT, CN3T) on indoor controller board. ③ Blown fuse on indoor controller board. ④ Faulty or disconnected transformer of indoor unit. ⑤ Faulty indoor controller board. <p>2) Faulty outdoor control circuit board uncontrolled. As normal transmission is fails between indoor and outdoor units, outdoor unit model can not be recognized.</p> | <div style="border: 1px solid black; padding: 5px; width: fit-content;"> <p>The cause of 2) and 3) is displayed with self-diagnosis LED for 7102 error.</p> </div> |

Checking method & countermeasure

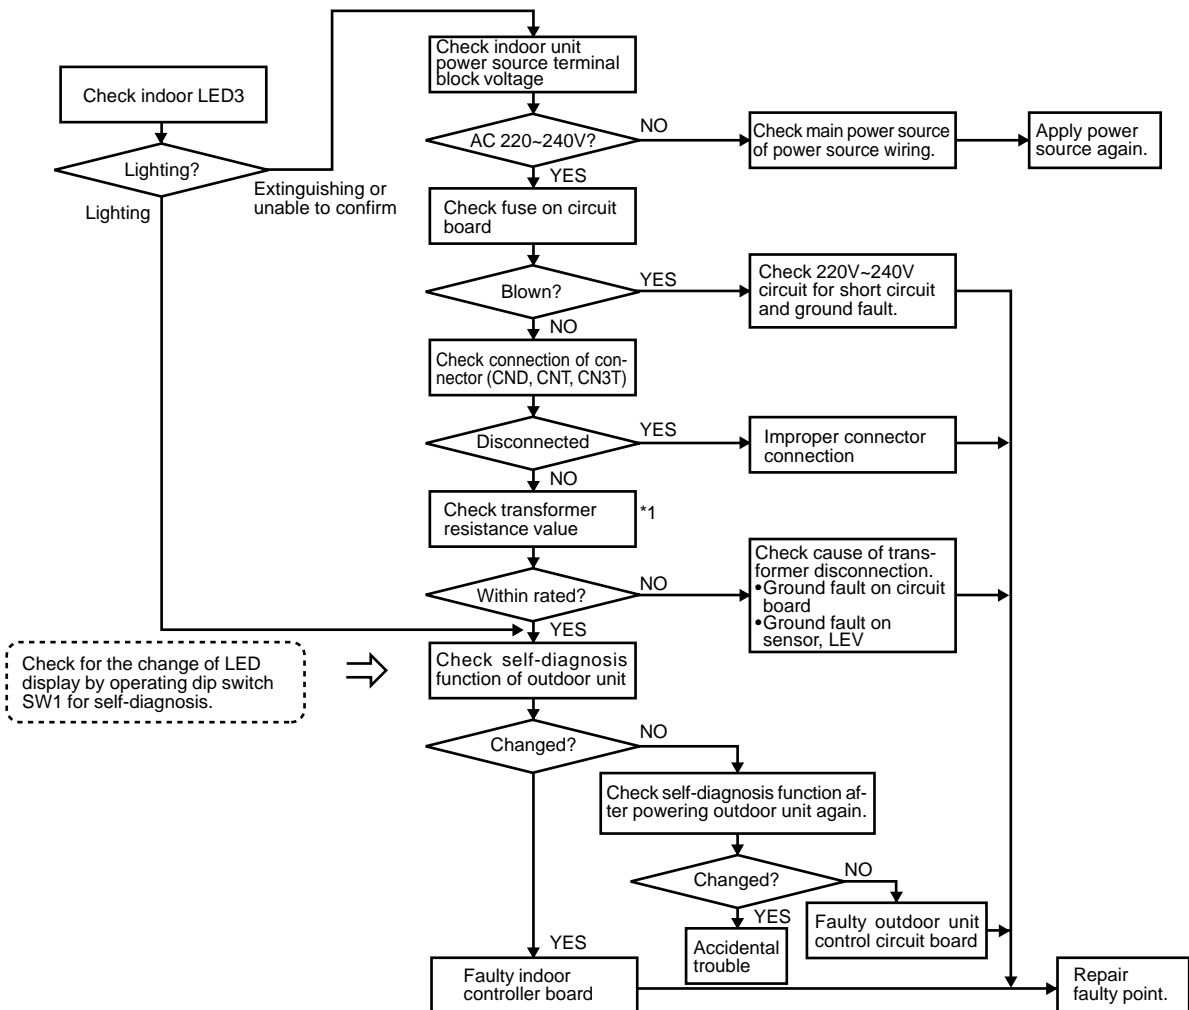


*1 Check the transformer in accordance with the "TROUBLE SHOOTING" in the indoor unit's service handbook.

| Symptom | Cause |
|------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 3 "HO" display on remote controller does not disappear and ON/OFF switch is ineffective. | <p>(Without using MELANS)</p> <ol style="list-style-type: none"> 1) Outdoor unit address is set to "00" 2) Erroneous address. <ol style="list-style-type: none"> ① Address setting of indoor unit to be coupled with remote controller incorrect. (Indoor unit = remote controller - 100.) ② Address setting of remote controller incorrect. (Remote controller = indoor unit + 100.) 3) Faulty wiring of transmission terminal block TB5 of indoor unit in the same group with remote controller. 4) Centralized control SW2-1 of outdoor unit is turned ON. 5) Setting to interlocking system from indoor unit (Switch 3-1 = OFF), while Fresh Master is intended to be use by remote controller operation (indoor unit attribute). 6) Disconnection or faulty wiring of indoor unit transmission line. 7) Disconnection between indoor unit M-NET transmission line terminal block (TB5) and connector CN2M. 8) More than 2 sets of power supply connector (CN40) are inserted into centralized control transmission line of outdoor unit. 9) Faulty outdoor unit control circuit board. 10) Faulty indoor controller board. 11) Faulty remote controller. <hr/> <p>(Interlocking control with MELANS)</p> <ol style="list-style-type: none"> 12) No grouping registration from MELANS (Neglecting to set the relation between indoor unit and network remote controller). 13) Disconnection of centralized control transmission line (TB7) at outdoor unit. 14) At system connected with MELANS, power supply connector (CN40) is inserted to centralized control transmission line of outdoor unit. |

Checking method & countermeasure

In case MELANS is not used

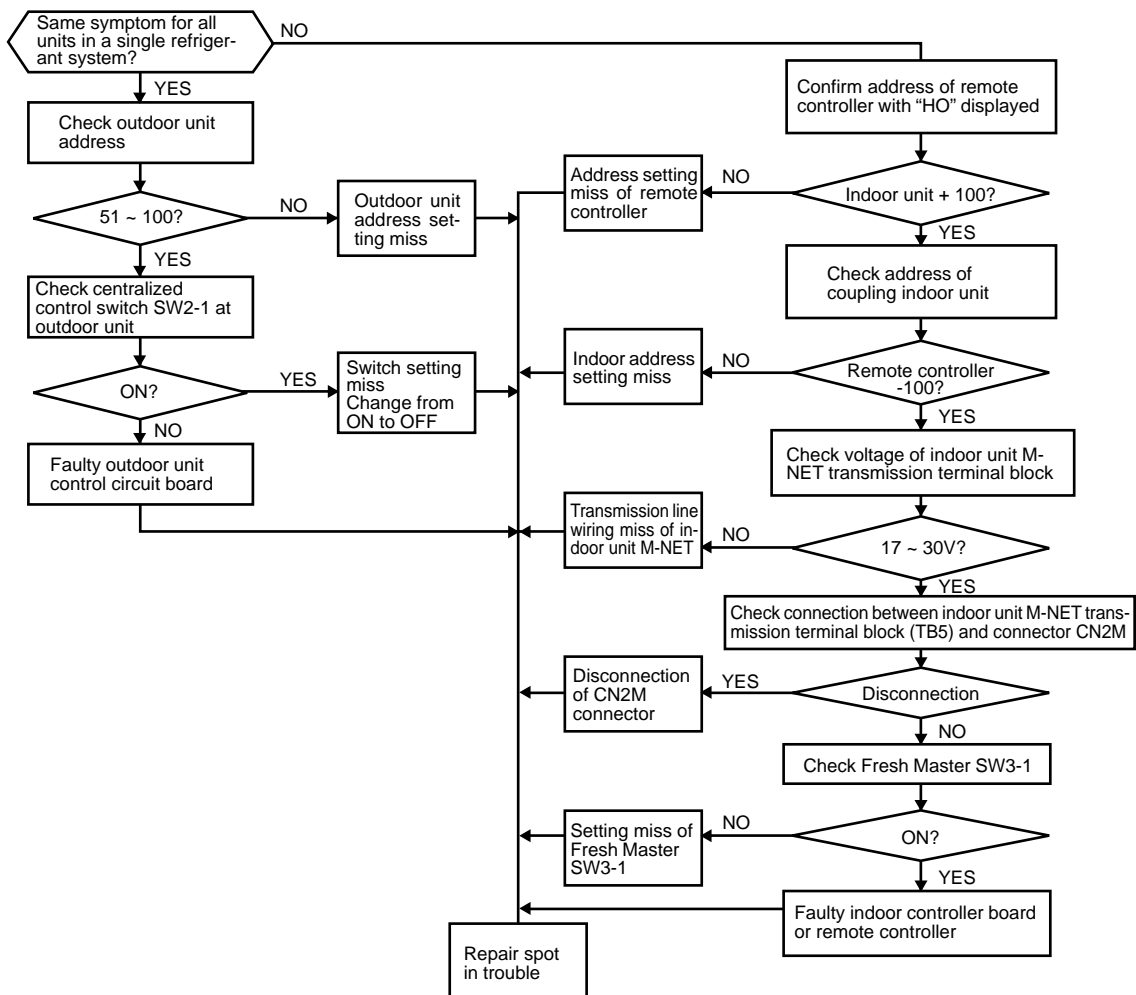

In case with MELANS used

When MELANS is used, "HO" display on the remote controller will disappear at the group registration of the indoor unit and local remote controller. If "HO" does not disappear after the registration, check the items 12) ~ 14) in the Cause column.

| | Symptom | Cause | Checking method & countermeasure |
|---|--------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 4 | "88" appears on remote controller at registration and access remote controller | <p>[Generates at registration and confirmation]</p> <ol style="list-style-type: none"> 1) Erroneous address of unit to be coupled. 2) Disconnection of transmission line of unit to be coupled (No connection). 3) Faulty circuit board of unit to be coupled. 4) Installation miss of transmission line. <hr style="border-top: 1px dashed black;"/> <p>[Confirmation of different refrigerant system controller]</p> <ol style="list-style-type: none"> 5) Disconnection of power source of outdoor unit to be confirmed. 6) Disconnection of centralized control transmission line (TB7) of outdoor unit. 7) Power supply connector (CN40) is not inserted into centralized control transmission line in grouping with different refrigerant system without using MELANS. 8) More than 2 sets of power supply connector are inserted into the centralized control transmission line of outdoor unit. 9) In the system connected with MELANS, power supply connector (CN40) is inserted into the centralized control transmission line of outdoor unit. 10) Short circuit of centralized control transmission line. | <ol style="list-style-type: none"> a) Confirm the address of unit to be coupled. b) Check the connection of transmission line. c) Check the transmission terminal block voltage of unit to be coupled. <ol style="list-style-type: none"> i) Normal if voltage is DC17 ~ 30V ii) Check the item d) in case other than i). d) Confirm the power source of outdoor unit to be coupled with the unit to be confirmed. e) Confirm that the centralized control transmission line (TB7) of outdoor unit is not disconnection. f) Confirm the voltage of centralized control transmission line. <ol style="list-style-type: none"> i) Normal in case of 10V ~ 30V ii) Check the items 7) ~ 10) left in case other than i). |

Transmission Power Circuit (30 V) Check Procedure

If “⊙” is not displayed by the remote control, investigate the points of the trouble by the following procedure and correct it.

| No. | Check Item | Judgment | Response |
|-----|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | Disconnect the transmission line from TB3 and check the TB3 voltage. | DC24~30 V | Check the transmission line for the following, and correct any defects. Broken wire, short circuit, grounding, faulty contact. |
| | | Except the above-mentioned | Go to No. 2 |
| 2 | Check if the following connectors are disconnected in the outdoor unit's control box. MAIN Board: CNS1, CNVCC3, CNVCC4 INV Board: CNVCC2, CNVCC4, CNL2, CNR, CNAC2 | Connector disconnected | Connect the connectors as shown on the electric wiring diagram plate. |
| | | Except the above-mentioned | Go to No. 3 |
| 3 | Disconnect the wires from CNVCC3 on the Main board and check the voltage between pins 1 and 3 on the wire side of the CNVCC3. Tester ⊕ 1 pin Tester ⊖ 3 pin | DC24~30 V | Check the wiring between CNS1 and TB3 for the following, and correct any defects. Broken wire, short circuit, grounding, faulty contact. If there is no trouble, replace the Main board. |
| | | Except the above-mentioned | Go to No. 4 |
| 4 | Disconnect the wiring from CNVCC2 on the INV board and check the voltage between pins 1 and 3 of CNVCC2. Tester ⊕ 1 pin Tester ⊖ 3 pin | DC24~30 V | Check the wiring between CNVCC2 and CNVCC3 for the following, and correct any defects. Broken wire, short circuit, grounding, faulty contact. |
| | | Except the above-mentioned | Go to No. 5 |
| 5 | Disconnect the wiring from CNL2 on the INV board, and check the resistance at both ends of choke coil L2. | 0.5~2.5Ω | Go to No. 6 |
| | | Except the above-mentioned | Replace choke coil L2. |
| 6 | Disconnect the wiring from CNR on the INV board, and check the resistance at both ends of R7. | 19~25Ω | Go to No. 7 |
| | | Except the above-mentioned | Replace R7. |
| 7 | Check the resistance at both ends of F01 on the INV board. | 0Ω | Go to No. 8 |
| | | Except the above-mentioned | Replace F01 |
| 8 | Check the voltage between pins 1 and 3 of CNAC2 on the INV board. | AC198~264 V | Replace the INV board. |
| | | Except the above-mentioned | Go to No. 9 |
| 9 | Check the voltage between L2 and N on power supply terminal block TB1. | AC198~264 V | Check the wiring to CNAC2 for the following and correct any defects. Broken wire, faulty contact. |
| | | Except the above-mentioned | Check the power supply wiring and base power supply, and correct any defects. |


(3) Investigation of transmission wave shape/noise

Control is performed by exchanging signals between outdoor unit, indoor unit and remote controller by M-NET transmission. If noise should enter into the transmission line, the normal transmission will be hindered causing erroneous operation.

1) Symptom caused by the noise entered into transmission line

| Cause | Erroneous operation | Error code |
|--------------------------------------|---------------------------------------------------------------------------------------------------------------|--------------|
| Noise entered into transmission line | Signal changes and is misjudged as the signal of other address. | 6600 |
| | Transmission wave shape changes to other signal due to noise. | 6602 |
| | Transmission wave shape changes due to noise, and can not be received normally thus providing no reply (ACK). | 6607 |
| | Transmission can not be made continuously due to the entry of fine noise. | 6603 |
| | Transmission can be made normally, but reply (ACK) or answer can not be issued normally due to noise. | 6607 6608 |

2) Method to confirm wave shape

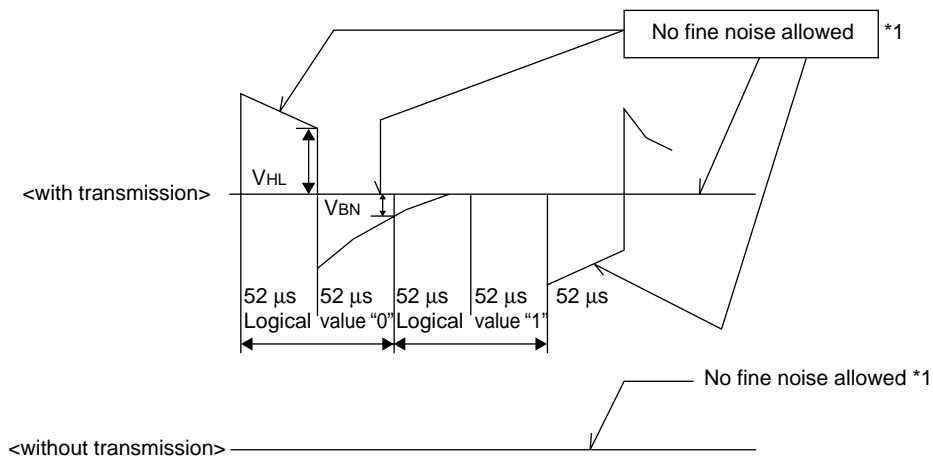

Check the wave shape of transmission line with an oscilloscope to confirm that the following conditions are being satisfied.

- ① The figure should be $104\mu\text{s/bit} \pm 1\%$.
- ② No finer wave shape (noise) than the transmission signal ($52\mu\text{s} \pm 1\%$) should be allowed. *1
- ③ The sectional voltage level of transmission signal should be as follows.

| Logic value | Transmission line voltage level |
|-------------|---------------------------------|
| 0 | $V_{HL} = 2.0\text{V}$ or more |
| 1 | $V_{BN} = 1.3\text{V}$ or less |

*1 However, minute noise from the DC-DC converter or inverter operation may be picked up.

3) Checking and measures to be taken

(a) Measures against noise

Check the items below when noise can be confirmed on wave shape or the error code in the item 1) is generated.

| Items to be checked | | Measures to be taken |
|----------------------------|----------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Checking for wiring method | ① Wiring of transmission and power lines in crossing. | Isolate transmission line from power line (5cm or more). Never put them in the same conduit. |
| | ② Wiring of transmission line with that of other system in bundle. | Wire transmission line isolating from other transmission line. Wiring in bundle may cause erroneous operation like crosstalk. |
| | ③ Use of shield wire for transmission line (for both indoor unit control and centralized control). | Use specified transmission wire. Type : Shield line CVVS/CPEVS Wire diameter : 1.25mm ² or more |
| | ④ The shield is to be daisy changed exactly the same as the transmission line. | The transmission line is wired with 2-jumper system. Wire the shield with jumper system as same for transmission line. When the jumper wiring is not applied to the shield, the effect against noise will be reduced. |
| | ⑤ Are the units and transmission lines grounded as instructed in the INSTALLATION MANUAL? | Connect to ground as shown in the INSTALLATION MANUAL. |
| Check for earthing | ⑥ Earthing of the shield of transmission line (for indoor unit control) to outdoor unit. | One point earthing should be made at outdoor unit. Without earthing, transmission signal may be changed as the noise on the transmission line has no way to escape. |
| | ⑦ Arrangement for the shield of transmission line (for centralized control). | For the shield earth of the transmission line for centralized control, the effect of noise can be minimized if it is from one of the outdoor units in case of the group operation with different refrigerant systems, and from the upper rank controller in case the upper rank controller is used. However, the environment against noise such as the distance of transmission line, the number of connecting sets, the type of connecting controller, and the place of installation, is different for the wiring for centralized control. Therefore, the state of the work should be checked as follows. a) No earthing <ul style="list-style-type: none"> • Group operation with different refrigerant systems One point earthing at outdoor unit • Upper rank controller is used Earthing at the upper rank controller b) Error is generated even though one point earth is being connected. Earth shield at all outdoor units. Connect to ground as shown in the user's manual. |

(b) When the wave height value of transmission wave shape is low, 6607 error is generated, or remote controller is under the state of "HO."

| Items to be checked | | Measures to be taken |
|---------------------|-------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------|
| | ⑧ The farthest distance of transmission line is exceeding 200m. | Confirm that the farthest distance from outdoor unit to indoor unit/remote controller is less than 200m. |
| | ⑨ The types of transmission lines are different. | Use the transmission wire specified. Type of transmission line : Shield wire CVVS/CPEVS Wire dia. of transmission line : 1.25mm ² or more |
| | ⑩ No transmission power (30V) is being supplied to the indoor unit or the remote control. | Refer to "Transmission Power Supply (30V) Circuit Check Procedure." |
| | ⑪ Faulty indoor unit/remote controller. | Replace outdoor unit circuit board or remote controller. |

4) Treatment of Inverter and Compressor Troubles


If the compressor does not work when error codes 4240, 4250, 4340 or 4350 are detected, determine the point of malfunction by following the steps in the **LED monitor display and countermeasures depending on the check code displayed**, then perform the procedures below.

| No. | Check Item | Symptoms | Treatment |
|-----|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | How many hours was the power kept on before operation? | ① If it was kept on for 12 hours or longer as specified. | Go to [2]. |
| | | ② It was kept on for less than the specified period. | Go to [2] after keeping the power on for the specified time. |
| 2 | When it is restarted, does the trouble reappear? | ① The compressor stops and the same error code is displayed. | Perform the check of wiring shown in the explanation of each error code. |
| 3 | Run the outdoor unit with the wiring to the compressor disconnected. At this time, change SW1-1 on the INV board to ON. Note) The terminals of the 3 disconnected wires should be isolated from each other. | ① The Inverter stops and the same error code is displayed. | Check the IPM is faulty. (Go to "Individual Parts Failure Judgment Methods.") |
| | | ② If the inverter's output voltage is output with good balance, *1. | Check the coil resistance and insulation resistance of the compressor, and if it is normal, run it again, and if the trouble occurs again, replace the compressor. * Insulation resistance : 2MΩ or more Coil resistance : 0.359 ~ 0.716Ω |
| | | ③ If the balance in the inverter's output voltage is not good or if the inverter's output voltages are all 0 V (a digital tester cannot be used) *1. | Check the IPM. Judge that the IPM is faulty. (Go to "Individual Parts Failure Judgment Methods.") If the IPM is normal, replace the G/A board, then perform this item again with SW1-1 ON. If the problem is not solved, replace the INV board. If the problem is solved and you connect the compressor again, turn SW1-1 OFF again. Check the compressor's coil resistance and insulation resistance. |

***1 [Cautions when measuring the voltage and current of the inverter's power circuit.]**

Since the voltage and current on the inverter's power supply side and its output side do not have a sine waveform, the measurement values will differ depending on the measuring instrument and the circuit measured.

In particular, as the inverter's output voltage has a pulse waveform, the output frequency also changes, so differences in measurement values will be great depending on the measuring instrument.

- ① When checking if the inverter's output voltage is unbalanced or not (relative comparison of the voltages between each of the lines), if you are testing with a portable tester, be sure to use an analog tester.
Use a tester of a type which can be used to judge if the IPM or diode module is faulty.
In particular, in cases where the inverter's output frequency is low, there are cases where the variations in measured voltage values between the different wires will be great when a portable digital tester is used, when in actuality they are virtually equal, and there is danger of judging that the inverter is faulty.
- ② It is recommended when checking the inverter's output voltage values (when measuring absolute values), that, if a measuring device for business frequencies is used, a rectified voltage meter (with a  symbol) be used.
Correct measurement values cannot be obtained with an ordinary portable tester. (either analog or digital)


5) Treatment of Fan Motor Related Troubles

| Condition | Possible Cause | Check Method and Treatment |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>① The fan motor will not run for 20 minutes or longer when the AK value is \geq 10%. (When the MAIN board's SW1 is set as shown below, the AK value is displayed by the service LED.)</p> <p>SW1 = 1110001000</p> <p>② The fan motor's vibration is great.</p> | <p>1) The power supply voltage is abnormal.</p> | <p>If there is an open phase condition before the breaker, after the breaker or at the power supply terminal blocks TB1A or TB1B. Correct the connections.</p> |
| | | <p>If the power supply voltage deviates from the specified range. Connect the specified power supply.</p> |
| | <p>2) Wiring is faulty.</p> | <p>For the following wiring, 1 check the connections, 2 check the contact at the connectors, 3 check the tightening torque at parts where screws are tightened, 4 check the wiring polarity, 5 check for a broken wire and 6 check for grounding.</p> <p>TB1A~NF~TB1B~CNTR1~T01~CNTR, TB1B~CNPOW, CNFAN~CN04~CNMF, CNFAN~52F~CN05~CNMF CNFC1~CNFC2</p> <p>* Check if the wiring polarity is as shown on the wiring diagram plate.</p> |
| | <p>3) The motor is faulty.</p> | <p>Measure the resistance of the motor's coils: 20~60Ω Measure the motor's insulation resistance with a megger: 10 MΩ (DC 500 V) or more</p> |
| | <p>4) A fuse (F1, F2, F3) is defective.</p> | <p>If a fuse is defective, replace it.</p> |
| | <p>5) The transformer (T01) is defective.</p> | <p>Judge that T01 is faulty. Go to "Individual Parts Failure Judgment Methods."</p> |
| <p>6) The circuit board is faulty.</p> | <p>If none of the items in 1) to 5) is applicable, and the trouble reappears even after the power is switched on again, replace the circuit board using the following procedure. (When replacing the circuit board, be sure to connect the connectors and ground wire, etc. securely.)</p> <p>① Replace the FANCON board only. If the problem is saved, the FANCON board was defective.</p> <p>② Replace the FANCON board and replace the MAIN board. If the problem is saved, the MAIN board is defective.</p> <p>③ If the trouble continues even after 1 and 2 above, then both boards are defective.</p> | |

6) Troubleshooting at breaker tripping


| Check items | Measures to be taken |
|--------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ① Check the breaker capacity. | The breaker's capacity should be correct to "System design" in data book. |
| ② Check for a short circuit or grounding in the electrical system other than the inverter. | Correct any defects. |
| ③ Check the resistance between terminals on the terminal block TB1A for power source. ① 0 ~ several ohms or improper megohm value | Check each part inside the inverter power circuit (resistance, megohm or the like). a) Diode stack Refer to "Troubleshooting of diode stack." b) IPM Refer to "Troubleshooting of IPM." c) Rush current protection resistor d) Electromagnetic contactor e) DC reactor * For c) ~ e), refer to "Individual Parts Failure Judgment Methods." |
| ④ Checking by powering again. | |
| ① Main power source circuit breaker tripping ② No display of remote controller | |
| ⑤ Operational check by operating air conditioner | |
| ① Normal operation without breaker tripping. | a) As there is a possibility of instantaneous short circuit generated, find the mark of the short circuit for repair. b) When a) is not applicable, the compressor may be faulty. |
| ② Breaker tripping | The ground fault of inverter output/compressor can be supposed. Disconnect the wiring to the compressor and check the insulation resistance of the following parts with a megger. a) Compressor terminals. b) Inverter output. |

7) Individual Parts Failure Judgment Methods.
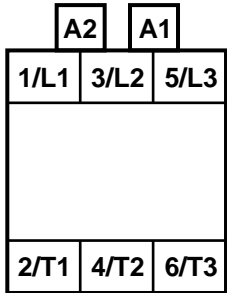
| Part Name | Judgment Method | | | | | | |
|------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------|----------------|-------|------------|-------------------------------------|---|
| Diode Stack (DS) | Refer to “Judging Diode Stack Failure.” | | | | | | |
| Intelligent Power Module(IPM) | Refer to “Judging IPM Failure.” | | | | | | |
| Electromagnetic Contactor (52C) | <p>Measure the resistance value at each terminal.</p> <div style="display: flex; align-items: center; justify-content: center;">  <table border="1" style="margin-left: 20px;"> <thead> <tr> <th>Check Location</th> <th>Judgment Value</th> </tr> </thead> <tbody> <tr> <td>A1-A2</td> <td>0.1k~1.3kΩ</td> </tr> <tr> <td>1/L1-2/T1 3/L2-4/T2 5/L3-6/T3</td> <td>∞</td> </tr> </tbody> </table> </div> | Check Location | Judgment Value | A1-A2 | 0.1k~1.3kΩ | 1/L1-2/T1 3/L2-4/T2 5/L3-6/T3 | ∞ |
| Check Location | Judgment Value | | | | | | |
| A1-A2 | 0.1k~1.3kΩ | | | | | | |
| 1/L1-2/T1 3/L2-4/T2 5/L3-6/T3 | ∞ | | | | | | |
| Rush Current Protection Resistor (R1, 5) | Measure the resistance between terminals: 4.5k~5.5kΩ | | | | | | |
| DC Reactor (DCL) | Measure the resistance between terminals: 1 Ω or lower | | | | | | |
| | Measure the resistance between the terminals and the chassis: ∞ | | | | | | |
| Cooling Fan (MF1) | Measure the resistance between terminals: 0.1k~1.5kΩ | | | | | | |
| Transformer (T01) | <p>Measure the resistance between terminals on the primary side (CNTR1): 1.0k~2.5kΩ</p> <p>Measure the resistance between terminals on the secondary side (CNTR): 20~60Ω</p> | | | | | | |
| AC Current sensor (ACCT) | Measure the resistance between terminal between 1pin and 2pin, 3pin and 4pin : 35 ~ 45 (Ω) | | | | | | |

[Caution at replacement of inverter parts]


- ① IPM and G/A board should be replaced together at the same time.
When the IPM is damaged, the G/A board may possibly be broken, and the use of the broken G/A board damages the normal IPM. Therefore, replace the IPM and G/A board together at the same time. However, if the G/A board is damaged, judge that the IPM is faulty, then judge whether replacement is necessary or not.
- ② Fully check wiring for loose and incorrect connections.
The incorrect or loose connection of the power circuit part wiring like IPM and diode module causes damage to the IPM. Therefore, check the wiring fully. As the insufficient tightening of screws is difficult to find, tighten them together additionally after finishing other works. For the wiring of the base for IPM, observe the wiring diagram below carefully as it has many terminals.
- ③ Coat the grease provided uniformly onto the heat radiation surface of IPM /diode modules.
Coat the grease on the full surface in a thin layer, and fix the module securely with the screw for fastening. As the radiation grease attached on the wiring terminal causes poor contact, wipe it off if attached.

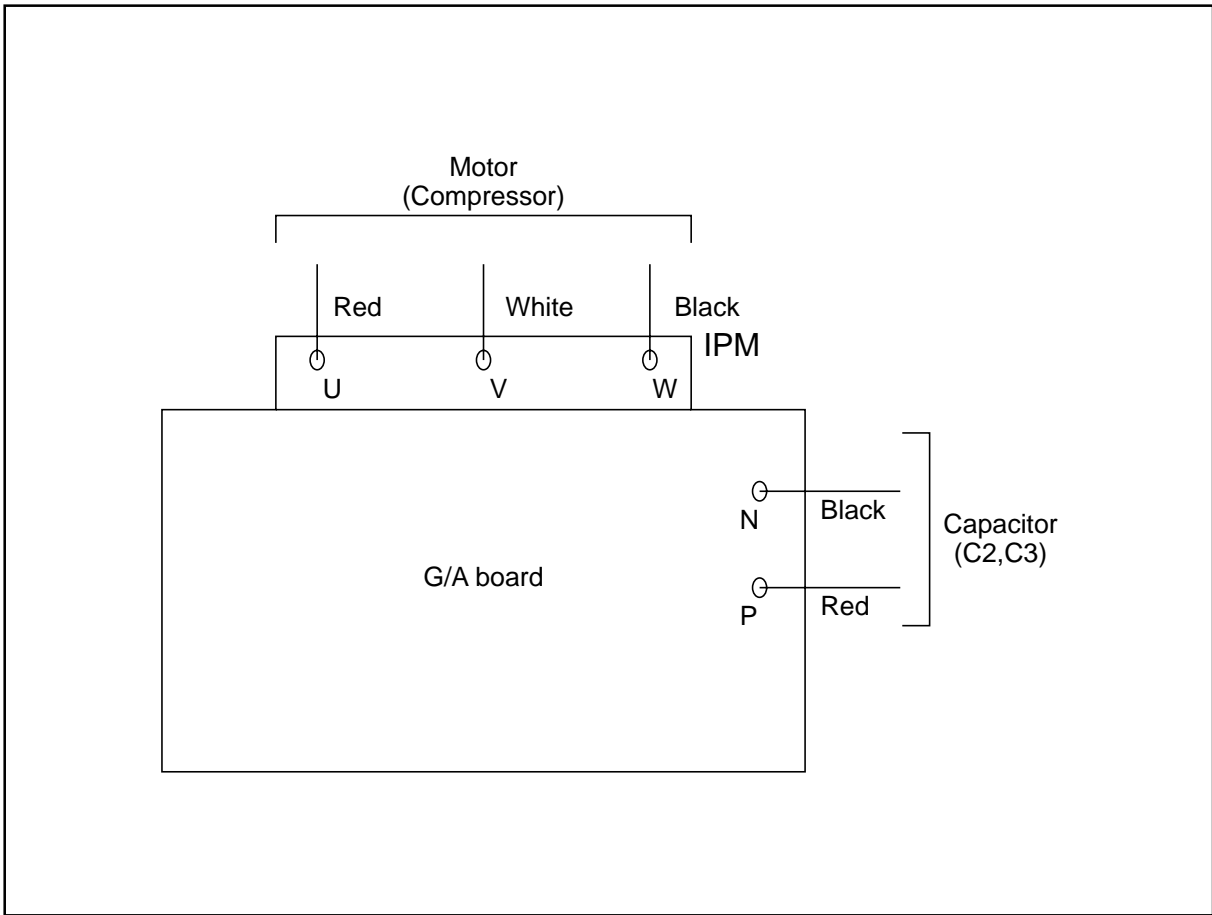

(4) Troubleshooting the major components of the BC controller

1) Pressure sensor

Pressure sensor troubleshooting flow

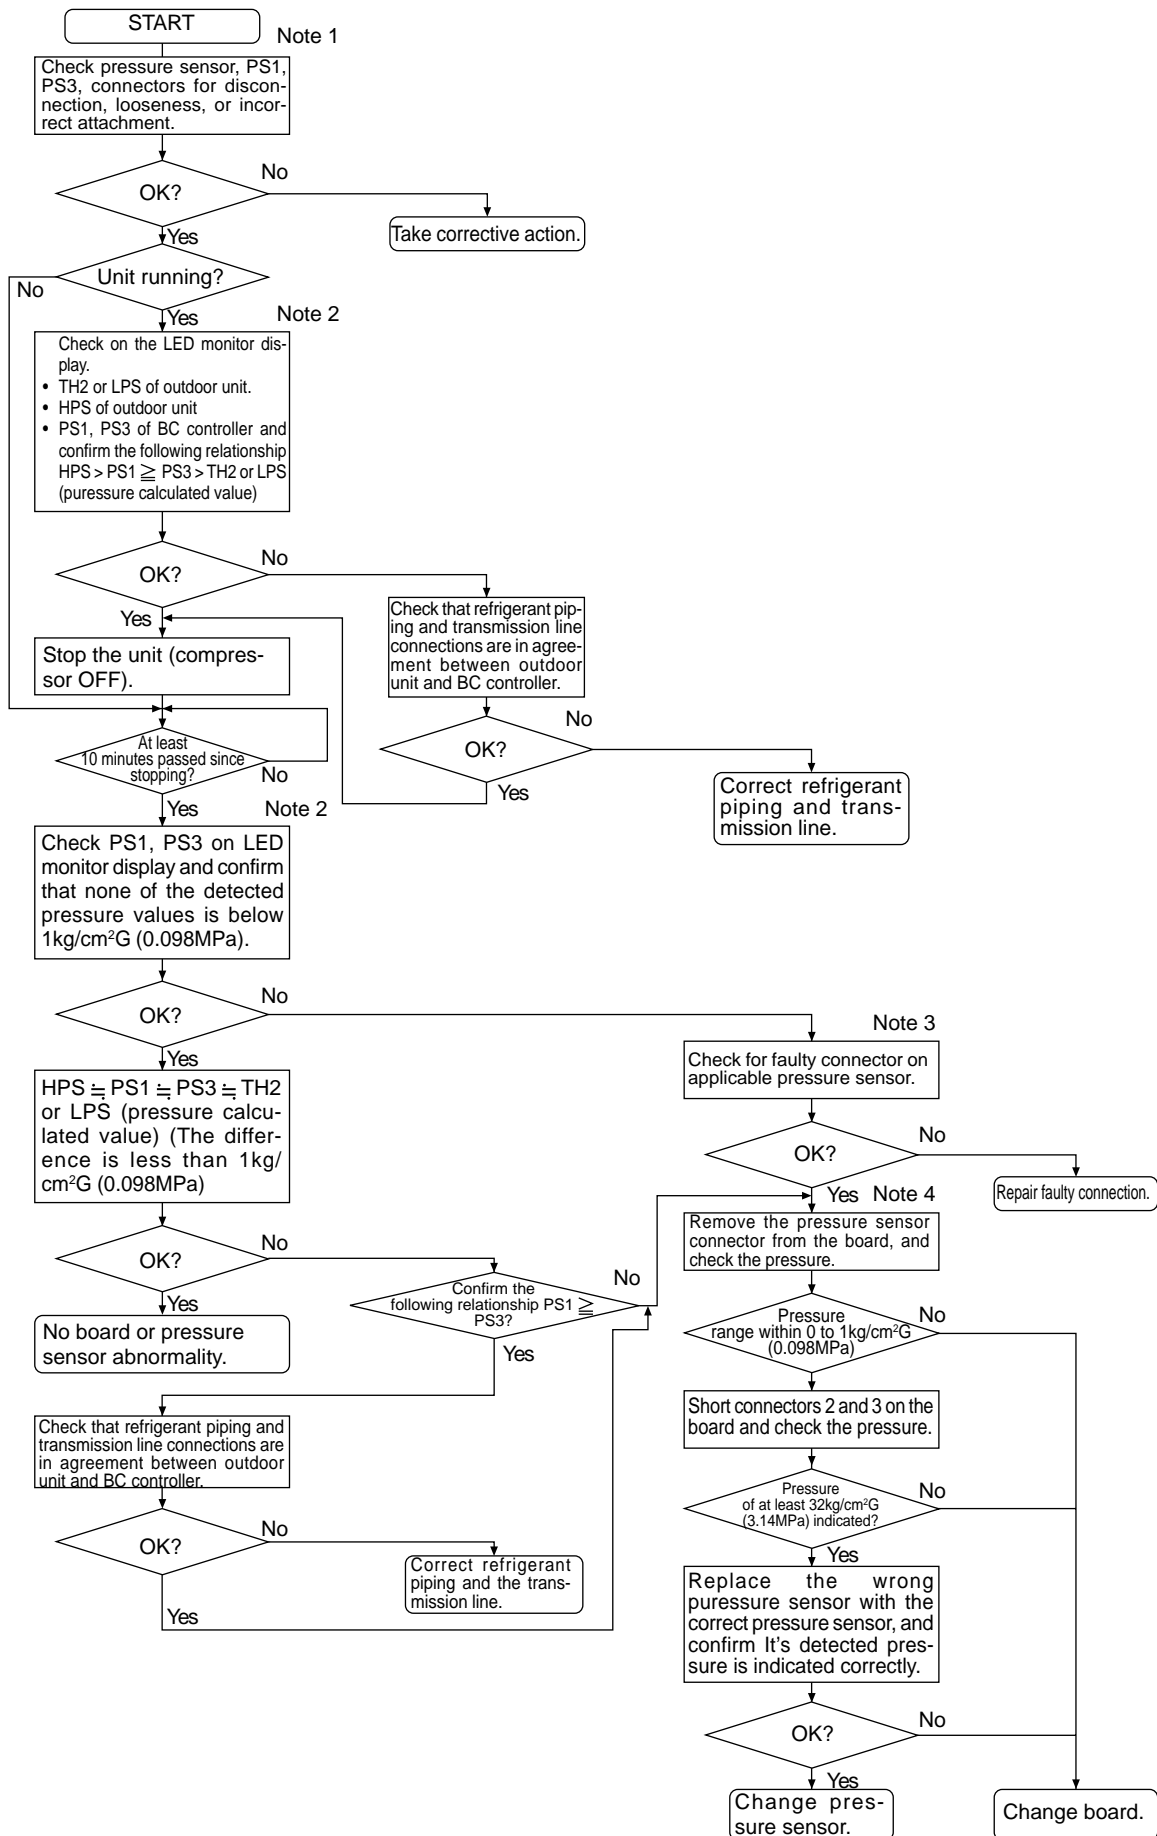



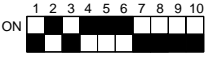

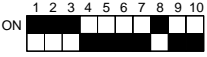
Note 1 :

- Symptoms of incorrect i.e, reverse connection of PS₁ and PS₃ to BC controller board

| Symptom | | | | | | |
|--------------|-----------------------|----------------------------------------------|-------------------------------------------------------------|----------------------------------------------|-----------------------------------------------------------------------------------|----------------------------------------------|
| Cooling-only | Cooling-principal | | Heating-only | | Heating-principal | |
| Normal | Insufficient cooling. | SC11 large SC16 small Δ PHM < 0 | Warm indoor SC small. When SV opens some noise produced. | SC11 small SC16 small Δ PHM < 0 | Insufficient heating Warm indoor SCsmall When SV opens some noise produced. | SC11 large SC16 small Δ PHM < 0 |

Note 2 :

- Check using LED monitor display switch (outdoor MAIN board SW1)
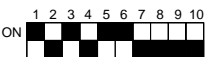
| Measured Data | Signal | SW1 Setting | Remarks |
|---------------------------------------------|--------|--------------------------------------------------------------------------------------|---------------------------------------------------------------------|
| High pressure of outdoor | HPS | ON  | See converter. |
| Low pressure saturation temperature | TH2 | ON  | See converter. |
| Low pressure of outdoor | LPS | ON  | See converter. |
| BC controller pressure (liquid measurement) | PS1 | ON  | Convert saturation temperature to desired pressure using converter. |
| (intermediate) | PS3 | ON  | |


Note 3 :

- Check CNP1 (liquid measurement) and CMP3 (intermediate) connectors on BC controller board for disconnection or looseness.

Note 4 :


- With the sensor of the applicable connector removed from the board, use the LED monitor display switch (Note 1) to check the pressure value.

Pressure Sensor Replacement Precaution

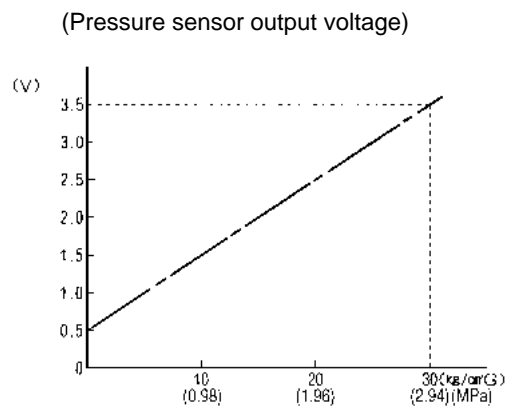


2) Temperature Sensor

Thermistor troubleshooting flow

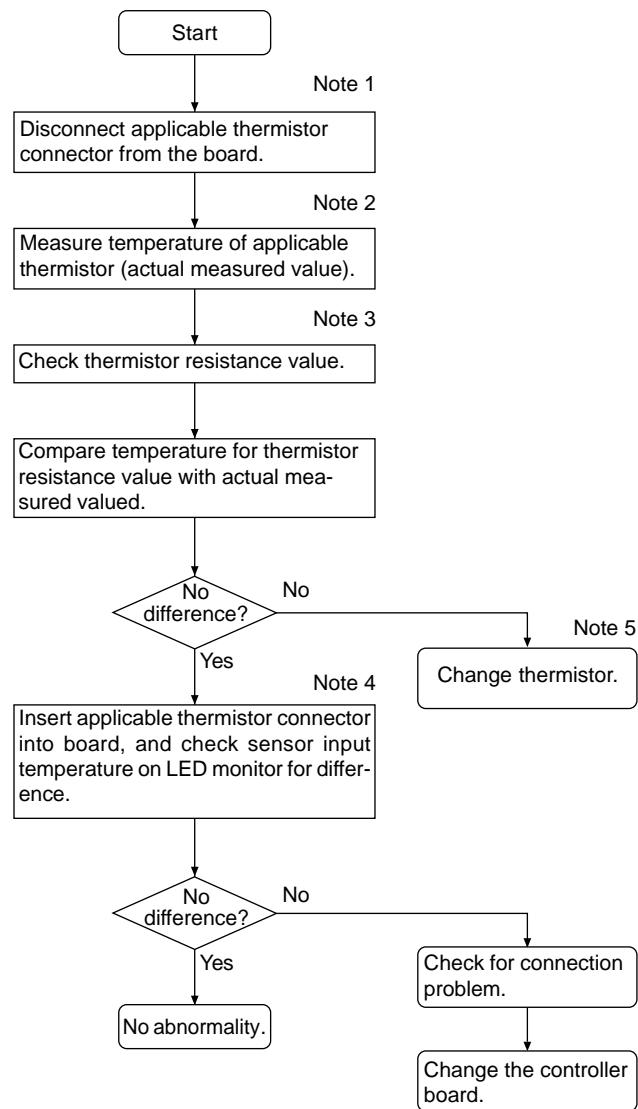

Note 1 :


- Board connector CN10 corresponds to TH11 through TH14, while connector CN11 corresponds to TH15 through TH16. Remove the applicable connector and check the sensor for each number.

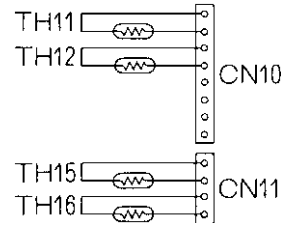

Note 2, 3 :


- Pull the sensor connector from the I/O board. Do not pull on the lead wire.
- Measure resistance using a tester or other instrument.
- Compare measured values with values on the graph below. A value within a range of ±10% is normal.

Resistance measurement point (connector)



Touch the probes of the tester or other instrument to the shaded areas to measure.

Temperature sensor resistance (graph)

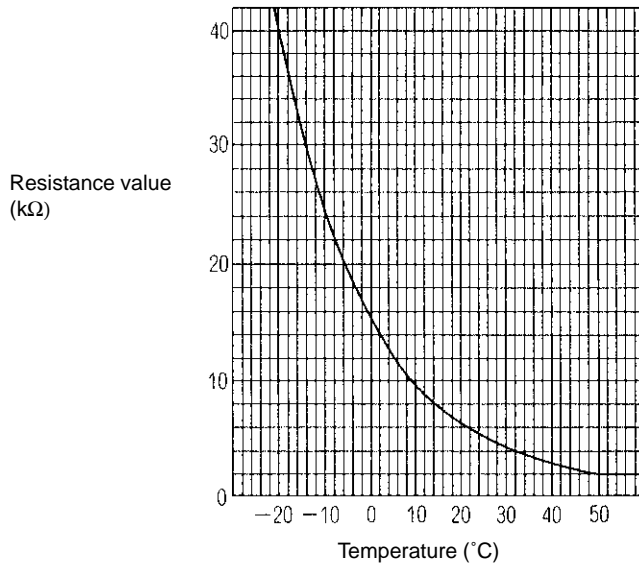

Thermistor $R_0=15 \text{ k}\Omega$


$$R_t = 15 \exp 3460 \left\{ \frac{1}{273+t} - \frac{1}{273+0} \right\}$$

Note 4 :

- Check using LED monitor display switch (outdoor MAIN board SW1)

| | Measured Data | Signal | SW1 Setting | Remarks |
|----|---------------------------|--------|-------------|----------------|
| FA | Liquid inlet temperature | TH11 | ON | See converter. |
| | Bypass inlet temperature | TH12 | ON | See converter. |
| | Bypass outlet temperature | TH15 | ON | See converter. |
| | Bypass inlet temperature | TH16 | ON | See converter. |
| FB | Bypass inlet temperature | TH22 | ON | See converter. |
| | Bypass outlet temperature | TH25 | ON | See converter. |

3) LEV, Solenoid Valve Troubleshooting Flow

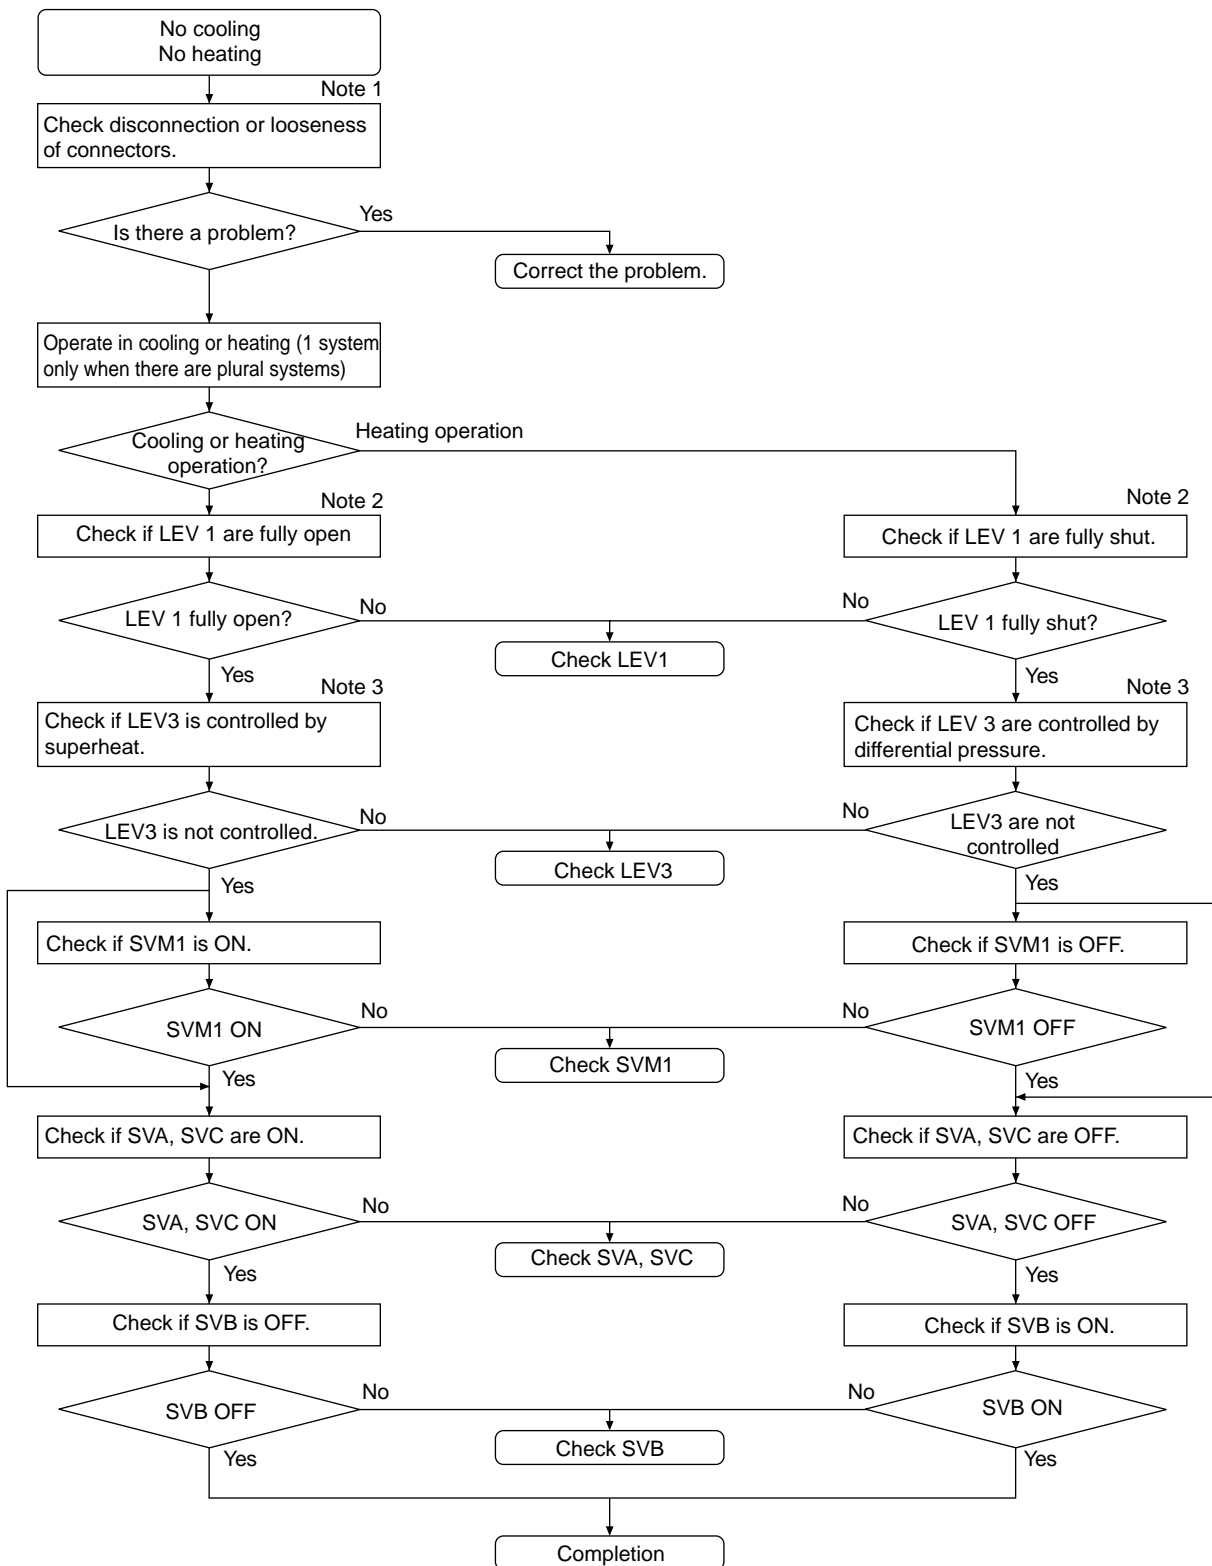

① LEV

Note 1 :

- Symptoms of incorrect connection to BC controller LEV board

| LEV No. | 1 | 3 | Cooling-only | Cooling-main | Heating-only | Heating-main |
|---------|---|---|-------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------|----------------------------------------|----------------------------------------------------------------|
| 1) | 1 | 3 | Normal | ← | ← | ← |
| 2) | 3 | 1 | Insufficient cooling SH12 small, SC11 small SC16 small Branch piping SC small | Insufficient cooling, insufficient heating SH12 small, SC11 small SC16 large, Branch piping SC small △ PHM large | Heating indoor SC small △ PHM large | Insufficient cooling Heating indoor SC small △ PHM large |

Improper installation is the same for ① and ②, so it is omitted here.

Note 2 : Method for checking LEV full open, full closed condition

- ① Check LEV full opening (pulse) using the LED monitor display (outdoor controller board SW1).
Full opened: 2000 pulses
Full closed: 60 pulses (LEV 1 may be greater than 60 during full heating operation.)
- ② With LEV full opened, check for pressure differential by measuring temperature of piping on both sides.
- ③ With LEV full closed, check for refrigerant noise.

Note 3 : Use the following table to determine opening due to LEV differential pressure control and superheat control.

- BC controller LEV basic operation characteristics


| | Region | Failure mode | Operating mode | Description | Normal range |
|----|-------------|--------------|------------------------------|-------------------------------------------------------|--------------------------------------------------|
| FA | LEV1 pulse | Small | Heating-only | High pressure (PS1) - medium pressure (PS3) is large. | 2.0 ~ 3.5 kg/cm ² G (0.20~0.34MPa) |
| | | Large | Heating-main Cooling-main | High pressure (PS1) - medium pressure (PS3) is small. | |
| | LEV3 pulse | Small | Cooling-only | SH12 is large. | SH12<25 |
| | | | Cooling-main | | |
| | | Large | Heating-only | High pressure (PS1) - mid pressure (PS3) is small. | 2.0 ~ 3.5 kg/cm ² G (0.20~0.34MPa) |
| | | | Heating-main | | |
| FB | LEV3a pulse | Small | Cooling-only | SH22 is large. | SH22<25 |
| | | | Cooling-main | | |
| | * | | Cooling-only | SH22 is small. | SH12>5 |
| | | | Cooling-main | | |
| | | Heating-main | | | |

* LEV3a operates when indoor unit connected to FB type is cooling mode.


(Self-diagnostic monitor)

| Measured Data | Signal | OUTDOOR MAIN board SW1 Setting |
|---------------------------------------|--------|--------------------------------|
| LEV1 pulse | - | |
| LEV 3 pulse | - | |
| LEV 3a pulse | - | |
| BC controller bypass output superheat | SH12 | |
| BC controller intermediate subcool | SC16 | |
| BC controller liquid subcool | SC11 | |

(Solenoid Valve Troubleshooting Flow)

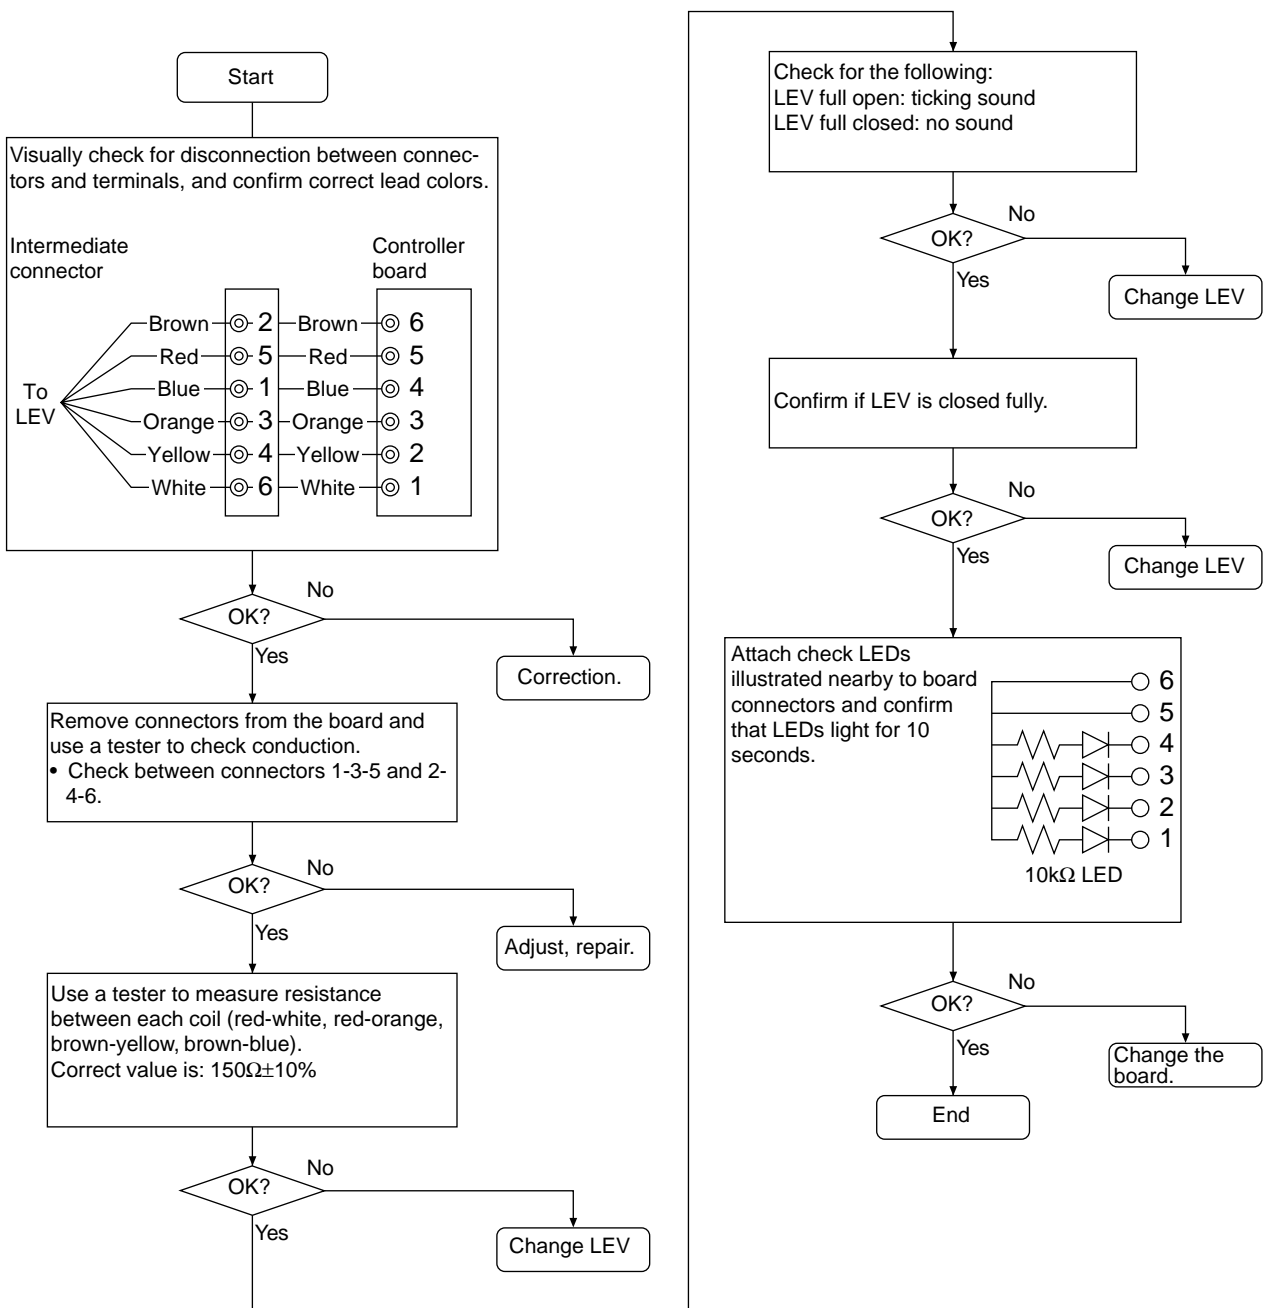

② Solenoid Valve

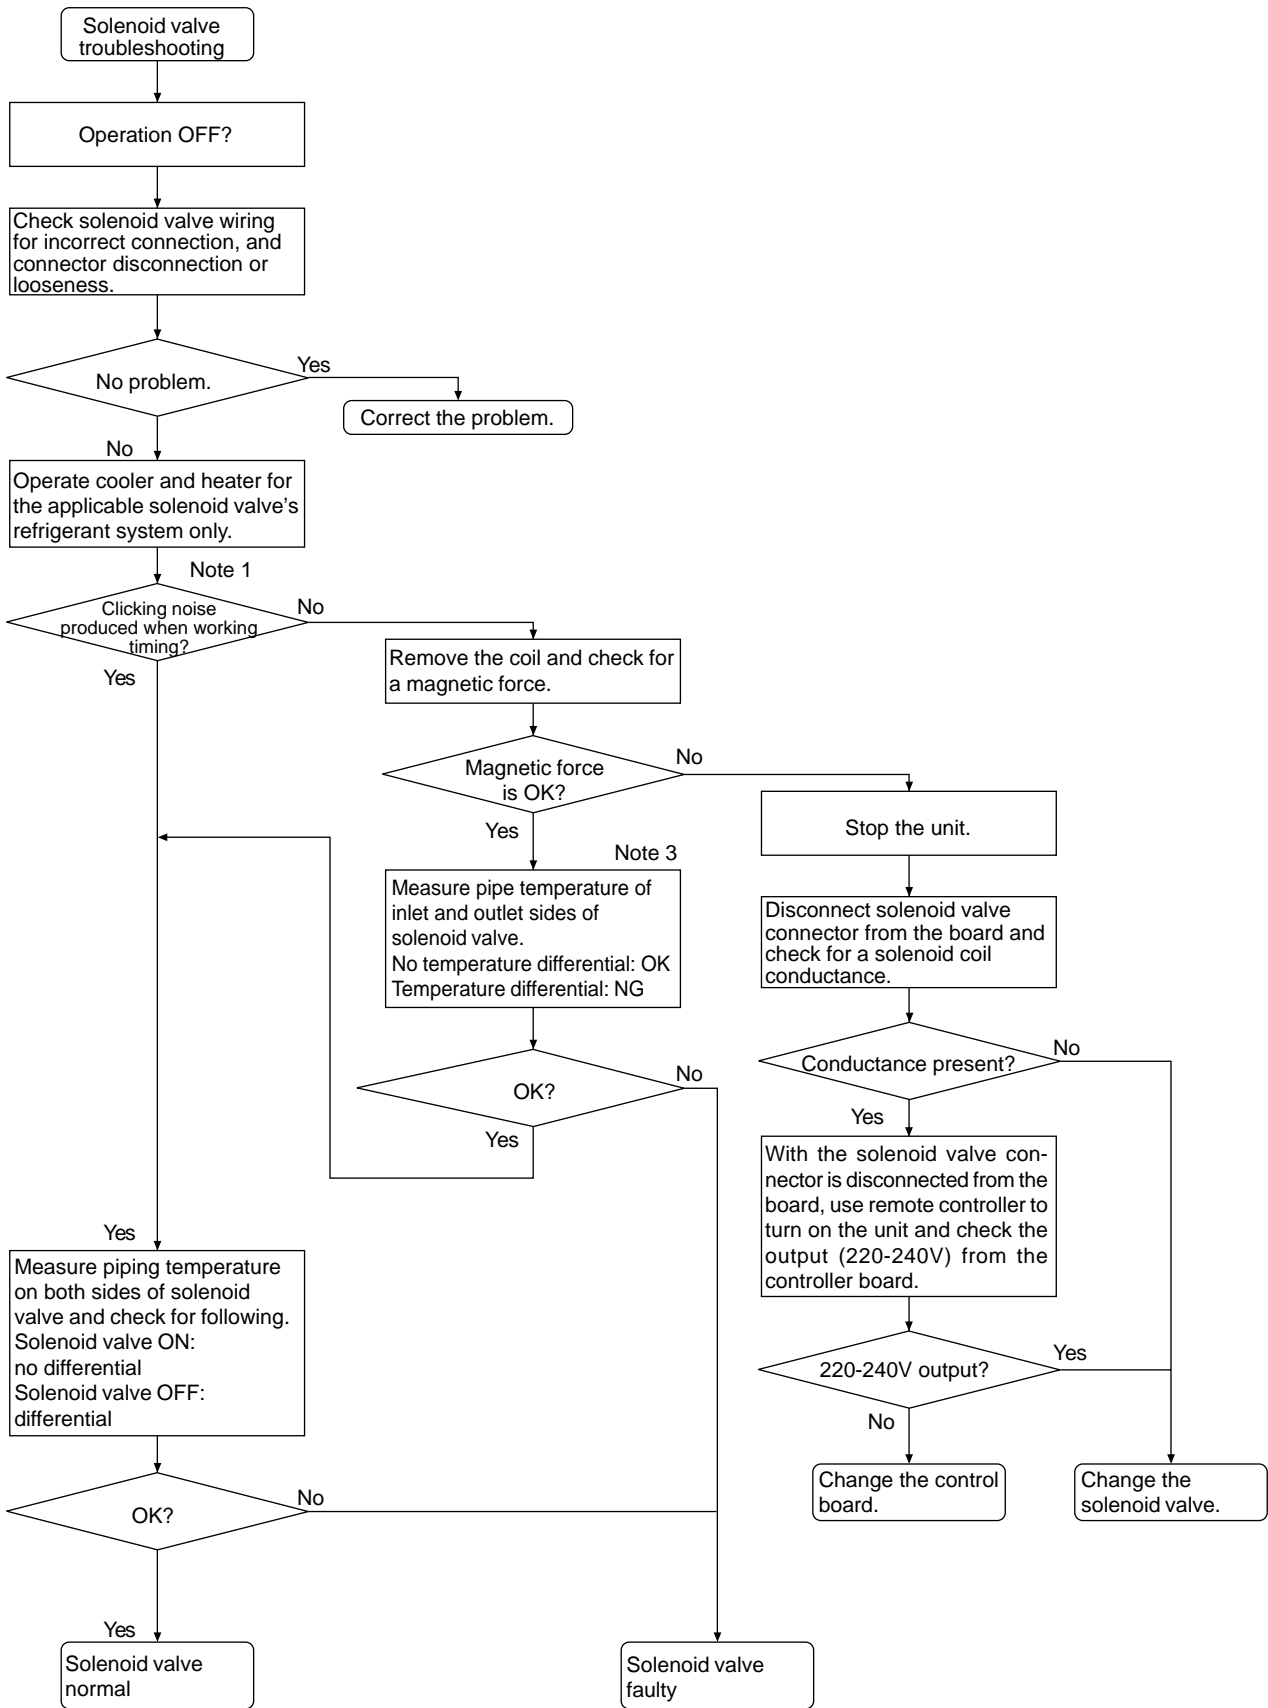

Solenoid valves (SVA, SVB, SVC, SVM1)

Coordination signals output from the board and solenoid valve operations. *SVM is not built in depending on models.

Note 1 : (SVA, SVB, SVC)

SVA, SVB and SVC are turned on and off in accordance with operation mode.

| Mode \ Branch port | Cooling | Heating | Stopped | Defrosting |
|--------------------|---------|---------|---------|------------|
| SVA | ON | OFF | OFF | OFF |
| SVB | OFF | ON | OFF | OFF |
| SVC | ON | OFF | OFF | OFF |

(SVM1)

SVM is turned on and off in accordance with operation mode.

| Operation Mode | Cooling-only | Cooling-principal | Heating-only | Heating-principal | Defrosting | Stopped |
|----------------|--------------|-------------------|--------------|-------------------|------------|---------|
| SVM1 | ON | OFF | OFF | OFF | ON | OFF |



Note 2 : (SVA, SVB, SVC)

Measure temperature of piping on either side of SVA ①-A


Measure temperature of piping on either side of SVB ①-B

(SVM1)

Measure temperature at points marked "X".

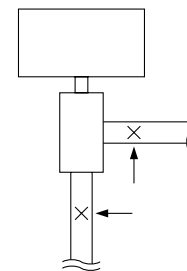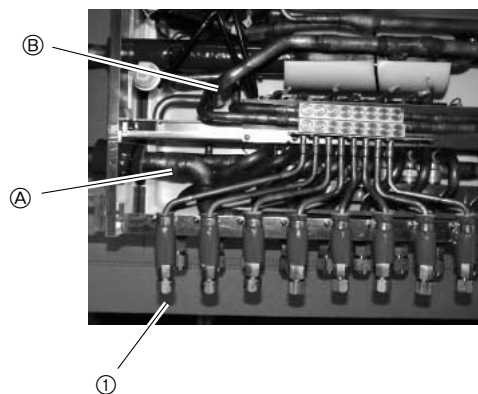

4) BC controller transformer

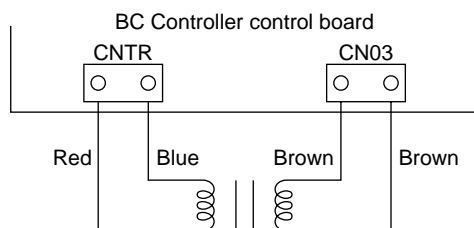


| | Normal | Malfunction |
|-------------|--------------------|-----------------|
| CNTR(1)-(3) | Approximately 90Ω | Open or shorted |
| CN03(1)-(3) | Approximately 1.7Ω | |

* Disconnect the connector before measurement.

[2] BC Controller Disassembly Procedure


(1) Service panel

Be careful on removing heavy parts.
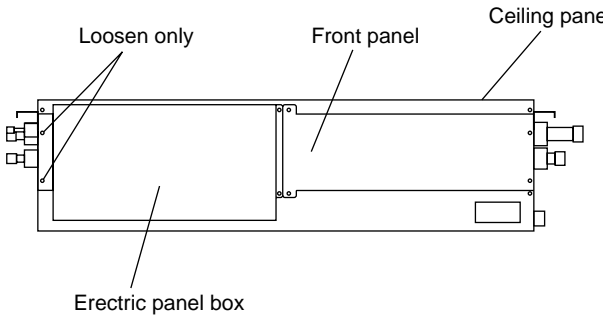
| Procedure | Illustrations |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------|
| <ol style="list-style-type: none"> 1. Remove the two screws securing the electric panel box. Loosen the two screws securing the electric panel box, and then remove the box. 2. Remove the four screws securing the front panel and then remove the panel. 3. Remove the nine screws securing the ceiling panel and then remove the panel. |  |


(2) Control Box

Be careful on removing heavy parts.

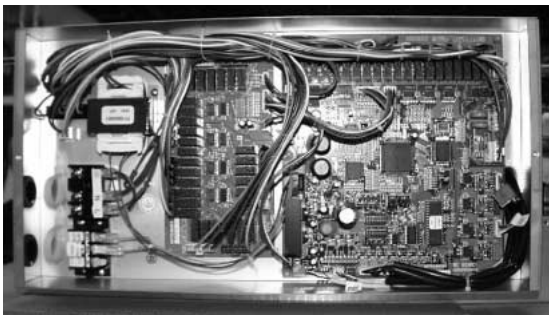
| Procedure | Photos |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|
| <p>Removing the two screws that secures the electric panel box cover provides access to the controller board and all of the relay board for checking. So it is not necessary to work according to above 2.</p> |  |

(3) Thermistor (Liquid and gas piping temperature detection)

Be careful when removing heavy parts.

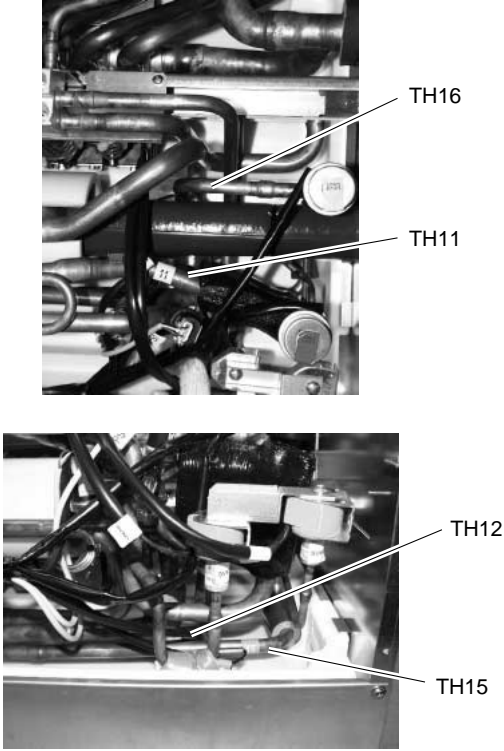
| Procedure | Photos |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>1. Remove the front panel ① Use the procedure under (1)-1.2.3 to check TH11, TH12, TH15, and TH16.</p> <p>2. Disconnect the piping sensor lead from the controller panel. ① TH11 - TH12 (CN10) ② TH15, TH16 (CN11)</p> <p>3. Pull the temperature sensor from the temperature sensor housing and replace it with a new sensor.</p> <p>4. Connect the temperature sensor lead securely to the controller board.</p> |  <p>The top photograph shows the locations of TH16 and TH11. TH16 is a circular sensor on a horizontal pipe, and TH11 is a cylindrical sensor on a vertical pipe. The bottom photograph shows the locations of TH12 and TH15. TH12 is a cylindrical sensor on a vertical pipe, and TH15 is a smaller cylindrical sensor on a horizontal pipe.</p> |

(4) Pressure Sensor

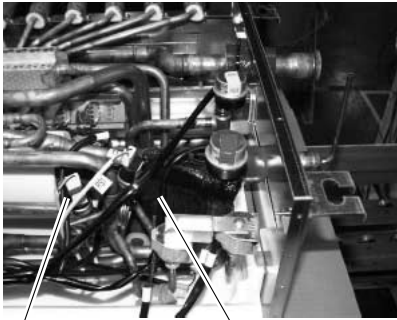
| Procedure | Photos |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>1. Remove the front panel. ① Use the procedure under (1)-1.2 to check PS1 and PS3.</p> <p>2. Disconnect the connector of the applicable pressure sensor from the controller board and insulate the connector. ① Liquid pressure sensor (CNP1) ② Intermediate pressure sensor (CNP3)</p> <p>3. Install a new pressure sensor at the location shown in the photograph, and plug the connector into the controller board.</p> <p>Important ① In the case of gas leakage from the pressure sensor, take actions to fix the leak before performing the above procedure.</p> |  <p>The photograph shows two pressure sensors, PS1 and PS3, mounted on a complex piping system. PS1 is a cylindrical sensor on a vertical pipe, and PS3 is a similar cylindrical sensor on a horizontal pipe.</p> |

(5) LEV

Be careful on removing heavy parts.
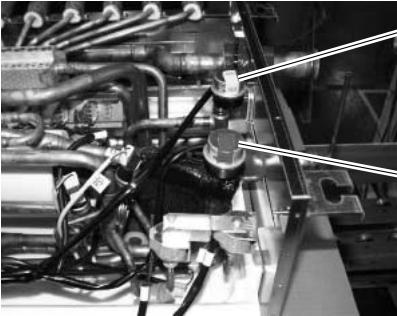
| Procedure | Photos |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------|
| <p>1. Remove the service panel. See (1)-1.2.3</p> <p>2. Replace the applicable LEV.</p> <p>Important!</p> <p>① When performing the above procedure, be sure to allow for enough service space in the ceiling area for welding.</p> <p>② When conditions require, the unit can be lowered from the ceiling before starting work.</p> |  <p>LEV3</p> <p>LEV1</p> |

(6) Solenoid Valve Coil

| Procedure | Photos |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------|
| <p>1. Remove the service panel. See (1)-1.2.3</p> <p>2. Disconnect the connector of the applicable solenoid valve.</p> <p>3. Remove the solenoid valve coil.</p> <p>① SVA, SVB, and SVM1, 2 solenoid valve coils can be serviced from the maintenance port. SVC can serviced from the back if service space is available in the back. To remove the back panel, remove the four screws that secure it.</p> |  <p>Solenoid valve</p> |

Check Code List

| Check Code | Check Content | |
|------------|----------------------------------------------------------------------|-----------------------------------------------------------|
| 0403 | Serial transmission abnormality | |
| 0900 | Trial operation | |
| 1102 | Discharge temperature abnormality | |
| 1111 | Low pressure saturation temperature sensor abnormality (TH2) | |
| 1112 | Low pressure saturation temperature abnormality | Liquid level sensing temperature sensor abnormality (TH4) |
| 1113 | | Liquid level sensing temperature sensor abnormality (TH3) |
| 1143 | Lacked refrigerant abnormality | |
| 1301 | Low pressure abnormality (OC) | |
| 1302 | High pressure abnormality (OC) | |
| 1368 | Liquid side pressure abnormality (BC) | |
| 1370 | Intermediate pressure abnormality (BC) | |
| 1500 | Overcharged refrigerant abnormality | |
| 1505 | Suction pressure abnormality | |
| 2500 | Leakage (water) abnormality | |
| 2502 | Drain pump abnormality | |
| 2503 | Drain sensor abnormality | |
| 4103 | Reverse phase abnormality | |
| 4115 | Power supply sync signal abnormality | |
| 4116 | Fan speed abnormality (motor abnormality) | |
| 4200 | VDC sensor/circuit abnormality | |
| 4220 | Bus voltage abnormality | |
| 4230 | Radiator panel overheat protection | |
| 4240 | Over load protection | |
| 4250 | IPM Alarm output / Bus voltage abnormality / Over Current Protection | |
| 4260 | Cooling fan abnormality | |
| 5101 | Thermal sensor abnormality | Air inlet (TH21:IC) |
| | | Discharge (TH1:OC) |
| 5102 | | Liquid pipe (TH22:IC) |
| | | Low pressure saturation (TH2:OC) |
| 5103 | | Gas pipe (TH23:IC) |
| | | Accumulator liquid level (LD1) |
| 5104 | | Accumulator liquid level (LD2) |
| 5105 | | Liquid pipe (TH5) |
| 5106 | | Ambient temperature (TH6) |
| 5107 | | SC coil outlet (TH7) |
| 5108 | | SC coil bypass outlet (TH8) |
| 5109 | | CS circuit (TH9) |
| 5110 | | Radiator panel (THHS) |
| 5112 | | Compressor shell temperature (TH10) |
| 5201 | Pressure sensor abnormality (OC) | |
| | Liquid side pressure sensor abnormality (BC) | |
| 5203 | Intermediate side pressure sensor abnormality (BC) | |
| 5301 | IAC sensor/circuit abnormality | |
| 6600 | Multiple address abnormality | |
| 6602 | Transmission processor hardware abnormality | |
| 6603 | Transmission circuit bus-busy abnormality | |

| Check Code | Check Content |
|------------|-----------------------------------------------------------------------|
| 6606 | Communications with transmission processor abnormality |
| 6607 | No ACK abnormality |
| 6608 | No response abnormality |
| 6831 | Abnormal MA communication receiving (No receiving) |
| 6832 | Abnormal MA communication receiving (Abnormal cycle recovery) |
| 6833 | Abnormal MA communication sending (H/W abnormality) |
| 6834 | Abnormal MA communication receiving (Start bit detection abnormality) |
| 7100 | Total capacity abnormality |
| 7101 | Capacity code abnormality |
| 7102 | Connected unit count over |
| 7105 | Address setting abnormality |
| 7106 | Characteristics setting abnormality |
| 7107 | Branch number setting abnormality |
| 7111 | Remote control sensor abnormality |
| 7130 | Different indoor model connected abnormality |

Intermittent fault check code

| Trouble Delay Cope | Trouble Delay Content |
|--------------------|-----------------------------------------------------------------------------------------------------------------|
| 1202 | Preliminary discharge temperature abnormality or preliminary discharge thermal sensor abnormality (TH1) |
| 1205 | Preliminary liquid pipe temperature sensor abnormality (TH5) |
| 1211 | Preliminary low pressure saturation abnormality or preliminary low pressure saturation sensor abnormality (TH2) |
| 1214 | Preliminary THHS sensor/circuit abnormality |
| 1216 | Preliminary sub-cool coil outlet thermal sensor abnormality (TH7) |
| 1217 | Preliminary sub-cool coil bypass outlet thermal sensor abnormality (TH8) |
| 1219 | Preliminary sub-cool coil bypass inlet thermal sensor abnormality (TH9) |
| 1221 | Preliminary ambient temperature thermal sensor abnormality (TH6) |
| 1243 | Preliminary compressor shell thermal sensor abnormality (TH10) |
| | Preliminary lacked refrigerant abnormality |
| 1402 | Preliminary high pressure abnormality or preliminary pressure sensor abnormality |
| 1600 | Preliminary overcharged refrigerant abnormality |
| 1605 | Preliminary suction pressure abnormality |
| 1607 | CS circuit block abnormality |
| 4300 | Preliminary IAC sensor/circuit abnormality |
| | Preliminary VDC sensor/circuit abnormality |
| | Preliminary serial transmission abnormality |
| 4320 | Preliminary bus voltage abnormality |
| 4330 | Preliminary heat sink overheating abnormality |
| 4340 | Preliminary overload protection |
| 4350 | Preliminary overcurrent protection |
| 4360 | Preliminary cooling fan abnormality |

[3] Self-diagnosis and Countermeasures Depending on the Check Code Displayed

(1) Mechanical

| Checking code | | Meaning, detecting method | Cause | Checking method & Countermeasure |
|---------------|---------------------------------|-------------------------------------------------------------------------------|------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 0403 | Serial transmission abnormality | If serial transmission cannot be established between the MAIN and INV boards. | 1) Wiring is defective. | Check 1, the connections, 2, contact at the connectors and 3, for broken wires in the following wiring. CNRS2 - CNRS3 CNAC2 - TB1B |
| | | | 2) Switches are set wrong on the INV board. | SW1-4 on the INV board should be OFF. |
| | | | 3) A fuse (F01) on the INV board is defective. | If the fuse is melted, (if the resistance between the both ends of fuse is ∞), replace the fuse. |
| | | | 4) The circuit board is defective. | If none of the items in 1) to 3) is applicable, and if the trouble reappears even after the power is switched on again, replace the circuit board by the following procedure (when replacing the circuit board, be sure to connect all the connectors, ground wires, etc. securely). ① If serial transmission is restored after the INV board only is replaced, then the INV board is defective. ② If serial transmission is not restored, reinstall the INV board and replace the MAIN board. If serial transmission is restored, the MAIN board is defective. ③ If serial transmission is not restored by ① and ② above, replace both boards. |

| Checking code | Meaning, detecting method | Cause | Checking method & Countermeasure |
|-------------------------------------------------------------------------------------------------------------|-----------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1102 | Discharge temperature abnormality (Outdoor unit) | 1) Gas leak, gas shortage. | See Refrigerant amount check. |
| | | 2) Overload operations. | |
| | | 3) Poor operations of indoor LEV. 4) Poor operations of BC controller LEV: | Check operation status by actually performing cooling or heating operations. Cooling : Indoor LEV (Cooling-only) LEV1, 3 (BC) SVM1 (BC) SVA (BC) Heating : Indoor LEV (Heating-only) LEV3 (BC) SVB (BC) SV3 ~ 8 See Trouble check of LEV and solenoid valve. |
| | | Cooling-only : LEV3 Cooling-main : LEV1, 3 Heating-only, Heating-main: LEV3 Defrost : LEV3 | |
| | | 5) Poor operations of BC controller SVM1 : | |
| | | Cooling-only, defrost | |
| | | 6) Poor operations of BC controller SVA : | |
| | | Cooling-only, Cooling-main | |
| | | 7) Poor operations of BC controller SVB : | |
| | | Heating-only, Heating-main | |
| | | 8) Poor operations of solenoid valves. SV (3 ~ 8) Heating-only, Heating-main | |
| | | 9) Setting error of connection address (PURY). | |
| | | 10) Poor operations of ball valve. | Confirm that ball valve is fully opened. |
| | | 11) Outdoor unit fan block, motor trouble, poor operations of fan controller→Heating (Heating-only, Heating-main). [3) ~ 11) : Rise in discharge temp. by low pressure drawing.] | Check outdoor fan. See Trouble check of outdoor fan. |
| | | 12) Gas leak between low and high pressures. [4-way valve trouble, compressor trouble, solenoid valve SV1 trouble.] | Check operation status of cooling-only or heating-only. |
| 13) Poor operations of solenoid valve SV4a. [Bypass valve SV2 can not control rise in discharge temp.] | See Trouble check of solenoid valve. | | |
| 14) Thermistor trouble. | Check resistance of thermistor. | | |
| 15) Thermistor input circuit trouble on control circuit board. | Check inlet temperature of sensor with LED monitor. | | |

| Checking code | | Meaning, detecting method | Cause | Checking method & Countermeasure |
|---------------|----------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1111 | Low pressure saturation temperature sensor abnormality (TH2) | <p>1. When saturation temperature sensor (TH2) or liquid level detecting temperature sensors (TH3, TH4) detects -40°C or less (the first time) during operations, outdoor unit stops once, mode is changed to restart mode after 3 minutes, then the outdoor unit restarts.</p> <p>2. When -40°C or less temp. is detected again (the second time) within 30 minutes after stop of outdoor unit, error stop is observed with code Nos. "1111," "1112," or "1113" displayed.</p> <p>3. When -40°C or less temperature is detected 30 or more minutes after stop of outdoor unit, the stop is regarded as the first time and the process shown in 1. is observed.</p> | 1) Gas leak, Gas shortage. | See Refrigerant amount check. |
| | | | 2) Insufficient load operations. | Check operating conditions and operation status of outdoor unit. |
| | | | 3) Poor operations of indoor LEV. 4) Poor operations of BC controller LEV: Cooling-only : LEV3 Cooling-main : LEV1, 3 Heating-only, Heating-main: LEV3 Defrost : LEV3 | Check operation status by actually performing cooling-only or heating-only operations. Cooling-only : indoor LEV LEV1, 3 (BC) SVM (BC) SVA (BC) Heating-only : indoor LEV LEV3 (BC) SVB (BC) SV3~8 |
| 1112 | Liquid level detecting temperature sensor abnormality (TH4) | <p>4. 30 minutes after stop of outdoor unit is intermittent fault check period with LED displayed.</p> <p>Note: 1. Low press. saturation temperature trouble is not detected for 3 minutes after compressor start, and finish of defrosting operations, and during defrosting operations. 2. In the case of short/open of TH2~TH4 sensors before starting of compressor or within 10 minutes after starting of compressor, "1111," "1112," or "1113" is displayed too.</p> | 7) Poor operations of BC controller SVB: Heating-only, Heating-main | See Trouble check of LEV and solenoid valve. |
| | | | 8) Solenoid valve trouble (SV3 ~ 8) Heating-only, Heating-main | |
| | | | 9) Setting error of connection address. | Check address setting of indoor unit connector. |
| 1113 | Low pressure saturation temperature trouble Liquid level detecting temperature sensor abnormality (TH3) | | 10) Poor operations of ball valve. | Confirm that ball valve is fully opened. |
| | | | 11) Short cycle of indoor unit. 12) Clogging of indoor unit filter. 13) Fall in air volume caused by dust on indoor unit fan. 14) Dust on indoor unit heat exchanger. 15) Indoor unit block, Motor trouble. | Check indoor unit, and take measures to trouble. |
| | | | [9)~14) : Fall in low pressure caused by evaporating capacity in cooling-only cooling-principal operation.] | |
| | | | 16) Short cycle of outdoor unit. 17) Dust on outdoor heat exchanger. | Check outdoor unit, and take measures to trouble. |
| | | | 18) Indoor unit fan block, motor trouble, and poor operations of fan controller. [15)~17) : Fall in low press. caused by lowered evaporating capacity in heating-only heating-principal operation.] | Check outdoor unit fan. See Trouble check of outdoor unit fan. |
| | | | 19) Poor operations of solenoid valve SV4a. [Bypass valve (SV4a) can not control low pressure drop.] | See Trouble check of solenoid valve. |
| | | | 20) Thermistor trouble (TH2~TH10). | Check resistance of thermistor. |
| | | | 21) Pressure sensor abnormality. | See Trouble check of pressure sensor. |
| | | | 22) Control circuit board thermistor abnormality and pressure sensor input circuit abnormality. | Check inlet temp. and press. of sensor by LED monitor. |
| | | | 23) Poor mounting of thermistor (TH2~TH10). | |

| Checking code | Meaning, detecting method | Cause | Checking method & Countermeasure | |
|---------------|--------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1301 | Low pressure abnormality | <p>When starting from the stop mode for the first time, (if at the start of bind power transmission, the end of bind power transmission, and in the mode when the thermostat goes OFF immediately after the remote control goes ON, the following compressor start time is included), if the low pressure sensor before starting is at 1.0 kg/cm²G (0.098MPa), operation stops immediately.</p> | <ol style="list-style-type: none"> 1) Internal pressure is dropping due to a gas leak. 2) The low pressure sensor is defective. 3) Insulation is torn. 4) A pin is missing in the connector, or there is faulty contact. 5) A wire is disconnected. 6) The control board's low pressure sensor input circuit is defective. | Refer to the item on judging low pressure sensor failure. |
| 1302 | High pressure abnormality 1 (Outdoor unit) | <ol style="list-style-type: none"> 1. When press. sensor detects 28kg/cm²G (2.47MPa) or more during operations (the first time), outdoor unit stops once, mode is changed to restart mode after 3 minutes, then the outdoor unit restarts. 2. When 30kg/cm²G (2.94MPa) or more pressure is detected again (the second time) within 30 minutes after stop of outdoor unit, error stop is observed with code No. "1302" displayed. 3. When 28kg/cm²G (2.47MPa) or more pressure is detected 30 or more minutes after stop of outdoor unit, the detection is regarded as the first time and the process shown in 1 is observed. 4. 30 minutes after stop of outdoor unit is intermittent fault check period with LED displayed. 5. Error stop is observed immediately when press. switch (30⁺⁰_{-1.5} kg/cm²G (2.94⁺⁰_{-1.5} MPa)) operates in addition to pressure sensor. | <ol style="list-style-type: none"> 1) Poor operations of indoor LEV. 2) Poor operations of BC controller LEV: Heating-only, heating-principal: LEV3 Defrost: LEV3 3) Poor operations of BC controller SVM1: Cooling-only, defrost 4) Poor operations of BC controller SVA: Cooling-only, cooling-main 5) Poor operations of BC controller SVB: Heating-only, heating-main 6) Solenoid valve SV (3 ~ 8) trouble Cooling-only, cooling-main 7) Setting error of connection address. 8) Poor operations of ball valve. 9) Short cycle of indoor unit. 10) Clogging of indoor unit filter. 11) Fall in air volume caused by dust on indoor unit fan. 12) Dust on indoor unit heat exchanger. 13) Indoor unit fan block, motor trouble. [8~13) : Rise in high pressure caused by lowered condensing capacity in heating-only and heating-principal operation.] 14) Short cycle of outdoor unit. 15) Dust on outdoor unit heat exchanger. 16) Outdoor unit fan block, motor trouble, poor operations of fan controller. [14~16): Rise in high press. caused by lowered condensing capacity in cooling-only and cooling-principal operation.] 17) Poor operations of solenoid valves SV1, 4a (Bypass valves (SV1, 4a) can not control rise in high pressure). 18) Thermistor trouble (TH2, TH5, TH6). 19) Pressure sensor trouble. 20) Control circuit board thermistor trouble, press. sensor input circuit trouble. | <p>Check operations status by actually performing cooling or heating operations.</p> <p>Cooling : Indoor LEV LEV1, 3 (BC) SVM SVA (BC) SV3~8</p> <p>Heating : Indoor LEV LEV3 (BC) SVB (BC)</p> <p>See Trouble check of LEV and solenoid valve.</p> <p>Check address setting of indoor unit connector.</p> <p>Confirm that ball valve is fully open-ed.</p> <p>Check indoor unit and take measures to trouble.</p> <p>Check outdoor unit and take measures to trouble.</p> <p>Check outdoor unit fan See Trouble check of outdoor unit fan.</p> <p>See Trouble check of solenoid valve.</p> <p>Check resistance of thermistor.</p> <p>Check Trouble check of pressure sensor.</p> <p>Check inlet temperature and press. of sensor with LED monitor.</p> |

| Checking code | | Meaning, detecting method | Cause | Checking method |
|--------------------------------------|-------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1500 | Overcharged refrigerant abnormality | <p>1. When discharge superheat ≤ 10 deg is keeping for 10 minutes or discharge superheat ≤ 20 deg for 15 minutes, outdoor unit stops once, and after 3 minutes, the unit restarts. For 60 minutes after unit stopped is intermittent fault check period.</p> <p>2. When discharge superheat ≤ 10 deg is keeping for 10 minutes or discharge superheat ≤ 20 deg for 15 minutes again (second time), the unit stops and error code 1500 is displayed.</p> <p>3. In case of SW2-6 ON, the detection for the second time is followed by the first time.</p> | 1) Excessive refrigerant charge. | Check refrigerant amount. |
| | | | 2) Thermistor trouble (TH1). | Check resistance of thermistor. |
| | | | 3) Pressure sensor trouble (63HS). | See trouble shooting of pressure sensor. |
| | | | 4) Control circuit board trouble. | Check temperature and pressure sensor with LED monitor. |
| 1501 | Lacked refrigerant abnormality | <p>1. When the unit condition is as follows, the compressor is stopped (1st detection) and after 3 minutes, the compressor is restarted automatically. PUHY-P200-250YMF-C</p> <p>① F<60Hz and TH10>85°C continuously for 60 minutes. ② F<60Hz and TH10>95°C continuously for 15 minutes. ③ F \geq 60Hz and TH10>100°C continuously for 60 minutes. ④ F \geq 60Hz and TH10>110°C continuously for 15 minutes. PURY-P200-250YMF-C</p> <p>① F<60Hz and TH10>85°C continuously for 60 minutes. ② F<60Hz and TH10>95°C continuously for 15 minutes. ③ F \geq 60Hz and TH10>100°C continuously for 60 minutes. ④ F \geq 60Hz and TH10>110°C continuously for 15 minutes.</p> <p>2. If the temperature rises again as above within 2 hours after the outdoor unit is stopped (2nd detection), an error stop is performed, and the check code 1501 is displayed.</p> <p>3. If the temperature rises again as above within 2 hours after the outdoor unit is stopped, it becomes the first detection again, and operation is the same as in 1 above.</p> <p>4. The 2 hour period after the outdoor unit stops is the abnormal delay period, and LED display is carried out during the abnormal stop delay.</p> | 1) Gas leakage, insufficient gas. | Refer to the item on judging the refrigerant volume. |
| | | | 2) Overload operation. | Check the indoor and outdoor unit operating conditions. |
| Insufficient refrigerant abnormality | | | 3) Indoor unit LEV operation is faulty. 4) Outdoor unit SLEV operation is faulty. | Actually run the equipment in cooling or heating mode and check the operating condition. Cooling : Indoor unit LEV SLEV Heating : Indoor unit LEV SLEV |
| | | | | Refer to the item concerning judging LEV failure. |
| | | | 5) Ball valve operation is faulty. | Check with the ball valve fully open. |
| | | | 6) The thermistor is faulty. | Check the thermistor's resistance. |
| | | | 7) The control board's thermistor input circuit is faulty. | Check the sensor's temperature reading by the LED monitor. |

| Checking code | Meaning, detecting method | Cause | Checking method & Countermeasure |
|---------------|------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1505 | Suction pressure abnormality | Judging that the state when the suction pressure reaches 0kg/cm ² G (0MPa) during compressor operation indicates high pressure by the discharge temperature and low pressure saturation temperature, the back-up control by gas bypassing will be conducted. <ul style="list-style-type: none"> • Operation while neglecting to open ball valve. Especially for the ball valve at low pressure side. At cooling : Gas side ball valve At heating : Liquid side ball valve • When plural systems are existing, the low pressure abruptly drop at indoor stopping by the erroneous wiring of transmission line (different connection of transmission line and refrigerant piping). • Temporary vacuum condition due to refrigerant distribution unbalance (insufficient refrigerant of low pressure line) immediately after charging refrigerant. | Once vacuum operation protection is commenced, do not attempt to restart until taking the measures below. <Checking method> <ul style="list-style-type: none"> • Check ball valve for neglecting to open. • Check extended piping for clogging when ball valve is opened. • Check transmission line for erroneous wiring. (Confirm the correct wiring and piping connection between indoor and outdoor units by operating indoor unit one by one.) <Countermeasure> <ul style="list-style-type: none"> • After checking with the above method, make error reset by power source reset. • Then operate for 10~15-minutes under the operation mode reverse to that when the vacuum operation protection occurred (Heating if error occurred in cooling, while cooling if it occurred in heating), and then enter into the ordinary operation state. |
| 2500 | Leakage (water) abnormality | When drain sensor detects flooding during drain pump OFF. | 1) Water leak due to humidifier or the like in trouble. Check water leaking of humidifier and clogging of drain pan. |
| 2502 | Drain pump abnormality | When indirect heater of drain sensor is turned on, rise in temperature is 20 deg. or less (in water) for 40 seconds, compared with the temperature detected before turning on the indirect heater. | 1) Drain sensor sinks in water because drain water level rises due to drain water lifting-up mechanism trouble. Check operations of drain pump. |
| | | 2) Broken wire of indirect heater of drain sensor. | Measure resistance of indirect heater of drain sensor. (Normal: Approx. 82Ω between 1-3 of CN50) |
| | | 3) Detecting circuit (circuit board) trouble. | Indoor board trouble if no other problems is detected. |
| 2503 | Drain sensor abnormality | Short/open is detected during drain pump operations. (Not detected when drain pump is not operating.) Short : 90°C or more detected Open : -40°C or less detected | 1) Thermistor trouble. 2) Poor contact of connector. (insufficient insertion) 3) Full-broken of half-broken thermistor wire. Check resistance of thermistor. 0°C : 15kΩ 10°C : 9.7kΩ 20°C : 6.4kΩ 30°C : 4.3kΩ |
| | | 4) Indoor unit circuit board (detecting circuit) trouble. | Check contact of connector. Indoor port trouble if no other problem is detected. |
| | Operation of float switch | When float switch operates (point of contact : OFF), error stop is observed with code No. "2503" displayed. | 1) Drain up input trouble. 2) Poor contact of float switch circuit. 3) Float switch trouble. Check drain pump operations. Check connect contact. Check float switch operations. |

| Checking code | | Meaning, detecting method | Cause | Checking method & Countermeasure |
|---------------|--------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 4103 | Reverse phase abnormality | Reverse phase (or open phase) in the power system is being detected, so operation cannot be started. | 1) The phases of the power supply (L1, L2, L3) have been reversed. | If there is reverse phase before the breaker, after the breaker or at the power supply terminal blocks TB1A, reconnect the wiring. |
| | | | 2) Open phase has occurred in the power supply (L1, L2, L3, N). | Check before the breaker, after the breaker or at the power supply terminal blocks TB1A, and if there is an open phase, correct the connections. a) Check if a wire is disconnected. b) Check the voltage between each of the wires. |
| | | | 3) The wiring is faulty. | Check 1 the connections, 2, the contact at the connector, 3, the tightening torque at screw tightening locations and 4 for wiring disconnections. TB1A~NF~TB1B~CNTR1~F3~T01~CNTR Refer to the circuit number and the wiring diagram plate. |
| | | | 4) The fuse is faulty. | If F1 on the MAIN board, or F3 is melted, (Resistance between both ends of the fuse is ∞), replace the fuses. |
| | | | 5) T01 is faulty. | To judge failure of the T01, go to "Individual Parts Failure Judgment Methods." |
| | | | 6) The circuit board is faulty. | If none of the items in 1) to 5) is applicable, and if the trouble reappears even after the power is switched on again, replace the MAIN board (when replacing the circuit board, be sure to connect all the connectors, etc. securely). |
| 4115 | Power supply sync signal abnormality | The frequency cannot be determined when the power is switched on. (The power supply's frequency cannot be detected. The outdoor fan cannot be controlled by phase control.) | 1) There is an open phase in the power supply (L1, L2, L3, N). | Check before the breaker, after the breaker or at the power supply terminal blocks TB1A, and if there is an open phase, correct the connections. |
| | | | 2) The power supply voltage is distorted. | If the power supply voltage waveform is distorted from a sine wave, improve the power supply environment. |
| | | | 3) A fuse is defective. | If F1 on the MAIN board, or F3 is melted, (Resistance between both ends of the fuse is ∞), replace the fuses. |
| | | | 4) T01 is defective. | To judge failure of the T01, go to "Individual Parts Failure Judgment Methods." |
| | | | 5) The circuit board is defective. | If none of the items in 1) to 4) is applicable, and if the trouble reappears even after the power is switched on again, replace the MAIN board (when replacing the circuit board, be sure to connect all the connectors, ground wires, etc. securely). |


| Checking code | Meaning, detecting method | Cause | Checking method & Countermeasure |
|---------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 4116 | Fan speed abnormality (motor abnormality) (Detects only for PKFY-VAM) 1. Detecting fan speed below 180rpm or over 2000rpm during fan operation at indoor unit (first detection) enters into the 3-minute restart prevention mode to stop fan for 30 seconds. 2. When detecting fan speed below 180rpm or over 2000rpm again at fan returning after 30 seconds from fan stopping, error stop (fan also stops) will be commenced displaying 4116. | 1) Slipping off of fan speed detecting connector (CN33) of indoor controller board. 2) Slipping off of fan output connector (FAN1) of indoor power board. 3) Disconnection of fan speed detecting connector (CN33) of indoor controller board, or that of fan output connector (FAN1) of indoor power board. 4) Filter clogging. 5) Trouble of indoor fan motor. 6) Faulty fan speed detecting circuit of indoor controller board, or faulty fan output circuit of indoor power board. | <ul style="list-style-type: none"> • Confirm slipping off of connector (CN33) on indoor controller board. • Confirm slipping off of connector (FAN1) on indoor power board. • Check wiring for disconnection. • Check filter. • Check indoor fan motor. • When above have no trouble. <ol style="list-style-type: none"> 1) For trouble after operating fan. Replace indoor controller board. If not remedied, replace indoor power board. 2) For trouble without operating fan. Replace indoor power board. |
| 4200 | VDC sensor/circuit abnormality 1 If $VDC \leq 304$ V is detected just before the inverter starts. 2 If $VDC \geq 750$ V is detected just before starting of and during operation of the inverter. | 1) Power supply voltage is abnormal. 2) The wiring is defective. 3) The rush current prevention resistors (R1, 5) are defective. 4) The electromagnetic contactor (52C) is defective. 5) The diode stack (DS) is defective. 6) The reactor (DCL) is defective. 7) The INV board is defective. | <ul style="list-style-type: none"> • Check if an instantaneous power failure or power failure, etc. has occurred. • Check if the voltage is the rated voltage value. <p>Check 1, the connections, 2, contact at the connectors, 3 tightening torque at screw tightened portions, 4, wiring polarities, 5, for broken wires, and 6, for grounding in the following wiring. TB1A~NF~TB1B, TB1B~DS-[52C, R1, R5]-[C2, C3]-IPM Wiring CNDC1 (G / A) ~ CNVDC (INV) Wiring * Check if the wiring polarities are as shown on the wiring diagram plate.</p> <p>To judge failure of R1 and R5, go to "Individual Parts Failure Judgment Methods."</p> <p>To judge failure of the 52C, go to "Individual Parts Failure Judgment Methods."</p> <p>To judge failure of the DS, go to "Individual Parts Failure Judgment Methods."</p> <p>To judge failure of the DCL, go to "Individual Parts Failure Judgment Methods."</p> <p>If none of the items in 1) to 6) is applicable, and if the trouble reappears even after the power is switched on again, replace the INV board (when replacing the circuit board, be sure to connect all the connectors, ground wires, etc. securely).</p> |

| Checking code | | Meaning, detecting method | Cause | Checking method & Countermeasure |
|---------------|------------------------------------|-----------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 4220 | Bus voltage abnormality | ① If $VDC \leq 400$ V is detected during inverter operation. | 1) The power supply voltage is abnormal. | <ul style="list-style-type: none"> Check if an instantaneous stop or power failure, etc. has occurred. Check if the voltage is the rated voltage value. |
| | | | 2) The wiring is defective. | Check 1, the connections, 2, contact at the connectors, 3 tightening torque at screw tightened portions, 4, wiring polarities, 5, for broken wires, and 6, for grounding in the following wiring. TB1A~NF~TB1B, TB1B~DS-[52C, R1, R5]~[C2, C3]~IPM Wiring CNDC1 (G / A) ~ CNVDC (INV) Wiring * Check if the wiring polarities are as shown on the wiring diagram plate. |
| | | | 3) The rush current prevention resistors (R1, 5) are defective. | To judge failure of R1 and R5, go to "Individual Parts Failure Judgment Methods." |
| | | | 4) The electromagnetic contactor (52C) is defective. | To judge failure of the 52 C, go to "Individual Parts Failure Judgment Methods." |
| | | | 5) The diode stack (DS) is defective. | To judge failure of the DS, go to "Individual Parts Failure Judgment Methods." |
| | | | 6) The reactor (DCL) is defective. | To judge failure of the DCL, go to "Individual Parts Failure Judgment Methods." |
| | | | 7) The inverter output is grounded. | <ul style="list-style-type: none"> Check the wiring between the IPM and the compressor. Check the compressor's insulation resistance. |
| | | | 8) The IPM is defective. | Check the IPM. Judge that the IPM is faulty, (Go to "Individual Parts Failure Judgment Methods.") |
| | | | 9) The circuit board is defective. | If none of the items in 1) to 8) is applicable, and if the trouble reappears even after the power is switched on again, replace the circuit board by following procedure (when replacing the circuit board, be sure to connect all the connectors, ground wires, etc. security) ① If the problem is solved after the G/A board only is replaced, then the G/A board is defective. ② If the problem is not solved, reinstall the G/A board and replace the INV board. If the problem is solved, the INV board is defective. ③ If the problem is not solved by ① and ② above, replace both boards. |
| 4230 | Radiator panel overheat protection | If the cooling fan stays ON for 5 minutes or longer during inverter operation, and if $THHS \geq 100^{\circ}C$ is detected. | 1) The wiring is defective. | Check 1 connections, 2 contact at the connectors and 3 for broken wires in the following wiring. MF1~CNFAN |
| | | | 2) The INV board's fuse (F01) is defective. | If the fuse is defective, replace the fuse. |
| | | | 3) The cooling fan (MF1) is defective. | To judge failure of the MF1, go to "Individual Parts Failure Judgment Methods." |
| | | | 4) The THHS sensor is defective. | To judge failure of the THHS, go to error code "5110". |
| | | | 5) The air passage is clogged. | If the air passage of the heat sink is clogged, clear the air passage. |
| | | | 6) The IPM is defective. | Check the IPM. Judge that the IPM is faulty, (Go to "Individual Parts Failure Judgment Methods.") |
| | | | 7) The circuit board is defective. | If none of the items in 1) to 6) is applicable, and if the trouble reappears even after the power is switched on again, replace the circuit board by following procedure (when replacing the circuit board, be sure to connect all the connectors, ground wires, etc. security) ① If the problem is solved after the G/A board only is replaced, then the G/A board is defective. ② If the problem is not solved, reinstall the G/A board and replace the INV board. If the problem is solved, the INV board is defective. ③ If the problem is not solved by ① and ② above, replace both boards. |

| Checking code | | Meaning, detecting method | Cause | Checking method & Countermeasure |
|---------------|--------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 4240 | Over load protection | If IAC \geq 32 Arms is detected continuously for 10 minutes during operation of the inverter after 5 or more seconds have passed since the inverter started. | 1) Air passage short cycle. | Is the unit's exhaust short cycling? |
| | | | 2) The heat exchanger is clogged. | Clean the heat exchanger. |
| | | | 3) Power supply voltage. | If the power supply voltage is less than 342 V, it is outside specifications. |
| | | | 4) External air temperature. | If the external air temperature is over 43°C it is outside the specifications. |
| | | | 5) Capacity setting error. | <ul style="list-style-type: none"> • Is the indoor unit capacity total correct? • Are the outdoor/indoor unit capacity settings correct? |
| | | | 6) The solenoid valves (SV1, 2) are defective, or the solenoid valve drive circuit is defective. | To judge failure of the solenoid valve, go to "Individual Parts Failure Judgment Methods" for the "Solenoid Valve." |
| | | | 7) The wiring is defective. | Check 1 connections, 2 contact at the connectors and 3 for broken wires in the following wiring. TB1A~NF~TB1B TB1B~FANCON board~CN04 CNMF~MF TB1B~CNTR1 CNFC1~CNFC2 |
| | | | 8) Fan motor (MF) operation is defective. | Go to "Treating Fan Motor Related Trouble." |
| | | | 9) The inverter/compressor is defective. | Go to "Treating Inverter/Compressor Related Trouble." |
| 4250 | IPM alarm output / Bus voltage abnormality | <p>① If over current, overheat or undervoltage of drive circuit is detected by IPM during inverter operation. [Inverter error detail : 1]</p> <p>② If VDC \leq 300 or VDC \geq 760V is detected during inverter operation. [Inverter error detail : 1]</p> <p>③ If IAC \geq 39Arms is detected during inverter operation. [Inverter error detail : 11]</p> | 1) The power supply voltage is abnormal. | <ul style="list-style-type: none"> • Check if an instantaneous stop or power failure, etc. has occurred. • Check if the voltage is the rated voltage value. |
| | | | 2) The wiring is defective. | Check 1, the connections, 2, contact at the connectors, 3 tightening torque at screw tightened portions, 4, wiring polarities, 5, for broken wires, and 6, for grounding in the following wiring. TB1A~NF~TB1B, TB1A~DS~[52C, R1, R5]~[C2, C3]~IPM Wiring CNDC1 (G / A) ~ CNVDC (INV) Wiring * Check if the wiring polarities are as shown on the wiring diagram plate. |
| | | | 3) The inverter / compressor is defective. | Go to "Treatment of Inverter/Compressor Related Trouble." |

| Checking code | | Meaning, detecting method | Cause | Checking method & Countermeasure | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|-----------------------------|--------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|-------------------------|------------------------|------------|------------------------------------|---------------------------------|------|-----------------------------------|----------------------------------|------|-----------------------------------|----------------------------------|------|-----------------------------------|----------------------------------|-----|-----------------------------------|----------------------------------|-----|-----------------------------------|----------------------------------|-----|------------------------------------|----------------------------------|-----|-----------------------------------|----------------------------------|-----|-----------------------------------|----------------------------------|------|--|----------------------------------|------|------------------------------------|-----------------------------------|--|
| 4260 | Cooling fan abnormality | If the heat sink temperature (THHS) \geq 100°C for 20 minutes or longer just before the inverter starts. | 1) Same as "4230." | Same as "4230." | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 5101 | Thermal sensor abnormality (Outdoor Unit) | <p><Other than THHS></p> <p>① A short in the thermistor or an open circuit was sensed. The outdoor unit switches to the temporary stop mode with re-starting after 3 minutes, then if the temperature detected by the thermistor just before restarting is in the normal range, re-starting takes place.</p> <p>② If a short or open circuit in the thermistor is detected just before restarting, error code "5101", "5102", "5103", "5104", "5105", "5106", "5108", "5109" or "5112" is displayed.</p> <p>③ In the 3 minute restart mode, the abnormal stop delay LED is displayed.</p> <p>④ The above short or open circuit is not detected for 10 minutes after the compressor starts, or for 3 minutes during defrosting or after recovery following defrosting.</p> <p><THHS></p> <p>If a heat sink (THHS) temperature of \leq -40°C is detected just after the inverter starts or during inverter operation.</p> | 1) Thermistor | Check the thermistor's resistance. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 5102 | | | 2) Lead wires are being pinched. | Check if the lead wires are pinched. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 5103 | | | 3) Insulation is torn. | Check for tearing of the insulation. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 5104 | | | 4) A connector pin is missing, or there is faulty contact. | Check if a pin is missing on the connector. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 5105 | | | 5) A wire is disconnected. | Check if a wire is disconnected. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 5106 | | | 6) The thermistor input circuit on the MAIN circuit board is faulty. (In the case of the THHS, replace the INV board.) | Check the temperature picked up by the sensor using the LED monitor. If the deviation from the actual temperature is great, replace the MAIN circuit board. (In the case of the THHS, replace the INV board.) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 5107 | | | <table border="0"> <thead> <tr> <th></th> <th>Short Circuit Detection</th> <th>Open Circuit Detection</th> </tr> </thead> <tbody> <tr> <td>TH11, TH12</td> <td>240°C or higher (0.57 kΩ)</td> <td>15°C or lower (321 kΩ)</td> </tr> <tr> <td>TH2</td> <td>70°C or higher (1.71 kΩ)</td> <td>-40°C or lower (130 kΩ)</td> </tr> <tr> <td>TH3</td> <td>70°C or higher (1.71 kΩ)</td> <td>-40°C or lower (130 kΩ)</td> </tr> <tr> <td>TH4</td> <td>70°C or higher (1.71 kΩ)</td> <td>-40°C or lower (130 kΩ)</td> </tr> <tr> <td>TH5</td> <td>110°C or higher (0.4 kΩ)</td> <td>-40°C or lower (130 kΩ)</td> </tr> <tr> <td>TH6</td> <td>110°C or higher (0.4 kΩ)</td> <td>-40°C or lower (130 kΩ)</td> </tr> <tr> <td>TH7</td> <td>110°C or higher (1.14 kΩ)</td> <td>-40°C or lower (130 kΩ)</td> </tr> <tr> <td>TH8</td> <td>70°C or higher (1.14 kΩ)</td> <td>-40°C or lower (130 kΩ)</td> </tr> <tr> <td>TH9</td> <td>70°C or higher (1.14 kΩ)</td> <td>-40°C or lower (130 kΩ)</td> </tr> <tr> <td>THHS</td> <td></td> <td>-40°C or lower (2.5 MΩ)</td> </tr> <tr> <td>TH10</td> <td>240°C or higher (0.57 kΩ)</td> <td>-15°C or lower (1656 kΩ)</td> </tr> </tbody> </table> | | | Short Circuit Detection | Open Circuit Detection | TH11, TH12 | 240°C or higher (0.57 k Ω) | 15°C or lower (321 k Ω) | TH2 | 70°C or higher (1.71 k Ω) | -40°C or lower (130 k Ω) | TH3 | 70°C or higher (1.71 k Ω) | -40°C or lower (130 k Ω) | TH4 | 70°C or higher (1.71 k Ω) | -40°C or lower (130 k Ω) | TH5 | 110°C or higher (0.4 k Ω) | -40°C or lower (130 k Ω) | TH6 | 110°C or higher (0.4 k Ω) | -40°C or lower (130 k Ω) | TH7 | 110°C or higher (1.14 k Ω) | -40°C or lower (130 k Ω) | TH8 | 70°C or higher (1.14 k Ω) | -40°C or lower (130 k Ω) | TH9 | 70°C or higher (1.14 k Ω) | -40°C or lower (130 k Ω) | THHS | | -40°C or lower (2.5 M Ω) | TH10 | 240°C or higher (0.57 k Ω) | -15°C or lower (1656 k Ω) | |
| | | | Short Circuit Detection | Open Circuit Detection | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| TH11, TH12 | | | 240°C or higher (0.57 k Ω) | 15°C or lower (321 k Ω) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| TH2 | | | 70°C or higher (1.71 k Ω) | -40°C or lower (130 k Ω) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| TH3 | 70°C or higher (1.71 k Ω) | -40°C or lower (130 k Ω) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| TH4 | 70°C or higher (1.71 k Ω) | -40°C or lower (130 k Ω) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| TH5 | 110°C or higher (0.4 k Ω) | -40°C or lower (130 k Ω) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| TH6 | 110°C or higher (0.4 k Ω) | -40°C or lower (130 k Ω) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| TH7 | 110°C or higher (1.14 k Ω) | -40°C or lower (130 k Ω) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| TH8 | 70°C or higher (1.14 k Ω) | -40°C or lower (130 k Ω) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| TH9 | 70°C or higher (1.14 k Ω) | -40°C or lower (130 k Ω) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| THHS | | -40°C or lower (2.5 M Ω) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| TH10 | 240°C or higher (0.57 k Ω) | -15°C or lower (1656 k Ω) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 5109 | CS circuit (TH9) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 5110 | Radiator panel (TH HS) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 5112 | Compressor shell temperature (TH10) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 5111 | Thermal sensor abnormality (BC controlled) | <p>1. When short (high temp. inlet) or open (low temperature inlet) of thermistor is detected during operation, error stop will be commenced displaying "5111" or "5112", "5113" or "5114", or "5115" or "5116.</p> <p>2. The above detectection is not made during defrostig and 3-minute after changing operation mode.</p> | 1) Thermistor trouble. | Check thermistor resistance. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Liquid inlet (TH11) | | | 2) Biting of lead wire. | Check lead wire biting. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bypass outlet (TH12) | | | 3) Broken cover. | Check broken cover. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Bypass inlet (TH15) | | | 4) Coming off of pin at connector portion, poor contact. | Check coming off of pin at connector. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Intermediate section (TH16) | | | 5) Broken wire. | Check broken wire. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | 6) Faulty thermistor input circuit of control board. | Check sensor sensing temperature. If it deviates from the actual temerature seriously, replace control panel. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | <table border="0"> <thead> <tr> <th></th> <th>Short Detected</th> <th>Open Detected</th> </tr> </thead> <tbody> <tr> <td>TH11</td> <td>110°C or more (0.4 kΩ)</td> <td>-40°C or less (130 kΩ)</td> </tr> <tr> <td>TH12</td> <td>110°C or more (0.4 kΩ)</td> <td>-40°C or less (130 kΩ)</td> </tr> <tr> <td>TH15</td> <td>70°C or more (1.14 kΩ)</td> <td>-40°C or less (130 kΩ)</td> </tr> <tr> <td>TH16</td> <td>70°C or more (0.4 kΩ)</td> <td>-40°C or less (130 kΩ)</td> </tr> </tbody> </table> | | | Short Detected | Open Detected | TH11 | 110°C or more (0.4 k Ω) | -40°C or less (130 k Ω) | TH12 | 110°C or more (0.4 k Ω) | -40°C or less (130 k Ω) | TH15 | 70°C or more (1.14 k Ω) | -40°C or less (130 k Ω) | TH16 | 70°C or more (0.4 k Ω) | -40°C or less (130 k Ω) | | | | | | | | | | | | | | | | | | | | | | |
| | Short Detected | Open Detected | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| TH11 | 110°C or more (0.4 k Ω) | -40°C or less (130 k Ω) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| TH12 | 110°C or more (0.4 k Ω) | -40°C or less (130 k Ω) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| TH15 | 70°C or more (1.14 k Ω) | -40°C or less (130 k Ω) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| TH16 | 70°C or more (0.4 k Ω) | -40°C or less (130 k Ω) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

| Checking code | | Meaning, detecting method | Cause | Checking method & Countermeasure |
|---------------|--------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|
| 5201 | Pressure sensor abnormality (outdoor unit) | <p>① When pressure sensor detects 1kg/cm²G (0.098MPa) or less during operation, outdoor unit once stops with 3 minutes restarting mode, and restarts if the detected pressure of pressure sensor exceeds 1kg/cm²G (0.098MPa) immediately before restarting.</p> <p>② If the detected pressure of sensor is less than 1kg/cm²G (0.098MPa) immediately before restarting, error stop is commenced displaying 5201.</p> <p>③ Under 3 minutes restarting mode, LED displays intermittent fault check.</p> <p>④ During 3 minutes after compressor start, defrosting and 3 minutes after defrosting operations, trouble detection is ignored.</p> | <p>1) Pressure sensor trouble.</p> <p>2) Inner pressure drop due to a leakage.</p> <p>3) Broken cover.</p> <p>4) Coming off of pin at connector portion, poor contact.</p> <p>5) Broken wire.</p> <p>6) Faulty thermistor input circuit of MAIN board.</p> | See Troubleshooting of pressure sensor . |
| 5201 | High pressure side | When high or intermediate pressure sensor detects 1kg/cm ² G (0.098MPa) or less immediately before starting, error stop is commenced displaying "5201", or "5203". | <p>1) Pressure sensor trouble.</p> <p>2) Inner pressure drop due to gas leak.</p> <p>3) Broken cover.</p> <p>4) Coming off of pin at connector portion, poor contact.</p> <p>5) Broken wire.</p> <p>6) Faulty pressure sensor input circuit of control board.</p> | See troubleshooting of pressure sensor . |
| 5203 | Intermediate | | | |
| 5301 | IAC sensor/circuit abnormality | <p>① If IAC \geq 3 Arms is detected just before the inverter starts, or If IAC \leq 3 Arms is detected during inverter operation after 5 seconds has passed since the inverter started when the INV board's SW1-1 is OFF. [Inverter error detail : 6]</p> <p>② If the current sensor (ACCT) miss-wiring is detected during inverter operation. [Inverter error detail : 13]</p> | 1) Contact is faulty. | Check the contacts of CNACCT on the INV board. |
| | | | 2) The current sensor (ACCT) is connected with wrong polarity. | Check the ACCT_U, W polarity with below drawing. |
| | | | 3) The wiring is defective | Check 1. connections. 2. contact at the connectors. 3. for broken wires in the following wiring. CNDR2-CNDR1 CN15V2-CN15V1 IPM-MC1 |
| | | | 4) The Ac current sensor (ACCT) is defective. | To judge failure of ACCT, go to "individual Parts Failure Judgment Methods." |
| | | | 5) The IPM is defective. | Check the IPM. Judge that the IPM is faulty, (Go to "Individual Parts Failure Judgment Methods.") |

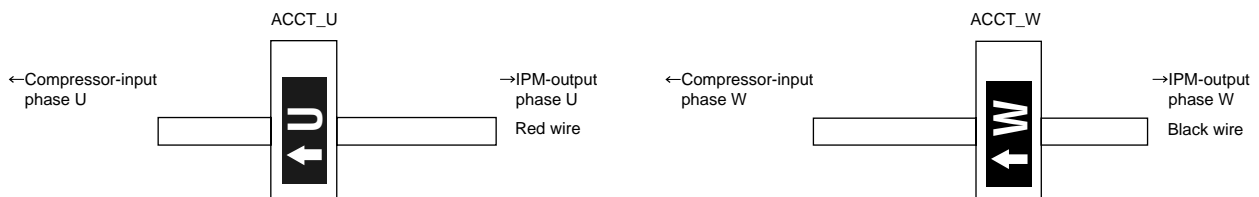

| Checking code | | Meaning, detecting method | Cause | Checking method & Countermeasure |
|---------------|----------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 5301 | IAC sensor/ circuit abnormality | <p>① If IAC \geq 3 Arms is detected just before the inverter starts, or If IAC \leq 3 Arms is detected during inverter operation after 5 seconds has passed since the inverter started when the INV board's SW1-1 is OFF. [Inverter error detail : 6]</p> <p>② If the current sensor (ACCT) miss-wiring is detected during inverter operation. [Inverter error detail : 13]</p> | 6) The circuit board is defective. | <p>If none of the items in 1) to 5) is applicable, and if the trouble reappears even after the power is switched on again, replace the circuit board by following procedure (when replacing the circuit board, be sure to connect all the connectors, ground wires, etc. securely)</p> <p>① If the problem is solved after the G/A board only is replaced, then the G/A board is defective.</p> <p>② If the problem is not solved, reinstall the INV board and replace the INV board. If the problem is solved, the INV board is defective.</p> <p>③ If the problem is not solved by ① and ② above, replace both boards.</p> |
| 7130 | Different indoor model connected abnormality | An exclusive R22 refrigerant indoor unit was connected to a R407C refrigerant outdoor unit. | 1) An error was made in the MAIN board of the outdoor unit (replaced with the wrong circuit board). | If the model name plate on the outdoor unit says that it is an exclusive R22 model, and if error "7130" has occurred, the MAIN board for the outdoor unit is a R407C model circuit board, so replace it with the MAIN board for the R22 model. |
| | | | 2) An error was made in selecting the indoor unit (installation error). | If the model name plate for the indoor unit is an exclusive R22 model, install a unit which can also operate with R407C. |
| | | | 3) An error was made in the indoor unit's circuit board (replaced with the wrong circuit board). | If the model name plate on the indoor unit indicates that it is also capable of operating with R407C, and error "7130" occurs, the indoor unit's circuit board is for an exclusive R22 model, so replace it with the circuit board for a unit which is also capable of using R407C. |

(2) Communication/system

| Checking code | Meaning, detecting method | Cause | Checking method & Countermeasure |
|---------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 6600 | <p>Multiple address error</p> <p>Transmission from units with the same address is detected.</p> <div data-bbox="276 416 547 573" style="border: 1px solid black; padding: 5px;"> <p>Note: The address/attribute shown on remote controller indicates the controller which has detected error.</p> </div> | <ol style="list-style-type: none"> 1) Two or more controllers of outdoor unit, indoor unit, remote controller, BC controller, etc. have the same address. 2) In the case that signal has changed due to noise entered into the transmission signal. | <p>At the generation of 6600 error, release the error by remote controller (with stop key) and start again.</p> <p>a) If the error occurs again within 5 minutes. → Search for the unit which has the same address with that of the source of the trouble.</p> <div data-bbox="999 439 1422 566" style="border: 1px solid black; padding: 5px;"> <p>When the same address is found, turn off the power source of outdoor unit, BC controller, and indoor unit for 5 minutes or more after modifying the address, and then turn on it again.</p> </div> <p>b) When no trouble is generated even continuing operation over 5 minutes. → The transmission wave shape/noise on the transmission line should be investigated in accordance with <Investigation method of transmission wave shape/noise>.</p> |
| 6602 | <p>Transmission processor hardware error</p> <p>Though transmission processor intends to transmit "0", "1" is displayed on transmission line.</p> <div data-bbox="276 920 547 1077" style="border: 1px solid black; padding: 5px;"> <p>Note: The address/attribute shown on remote controller indicates the controller which has detected error.</p> </div> | <ol style="list-style-type: none"> 1) At the collision of mutual transmission data generated during the wiring work or polarity change of the transmission line of indoor or outdoor unit while turning the power source on, the wave shape is changed and the error is detected. 2) 100V power source connection to indoor unit or BC controller. 3) Ground fault of transmission line. 4) Insertion of power supply connector (CN40) of plural outdoor units at the grouping of plural refrigerant systems. 5) Insertion of power supply connector (CN40) of plural outdoor units in the connection system with MELANS. 6) Faulty controller of unit in trouble. 7) Change of transmission data due to the noise in transmission. 8) Connection system with plural refrigerant systems or MELANS for which voltage is not applied on the transmission line for central control. | |

| Checking code | Meaning, detecting method | Cause | Checking method & Countermeasure |
|---------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 6602 | Transmission processor hardware error | <p>Checking method and processing</p> | |
| 6603 | <p>Transmission circuit bus-busy error</p> <ol style="list-style-type: none"> 1 Collision of data transmission: Transmission can not be performed for 4~10 consecutive minutes due to collision of data transmission. 2 Data can not be transmitted on transmission line due to noise for 4~10 consecutive minutes. <p>Note: The address/attribute shown on remote controller indicates the controller which has detected error.</p> | <ol style="list-style-type: none"> 1) As the voltage of short frequency like noise is mixed in transmission line continuously, transmission processor can not transmit. 2) Faulty controller of generating unit. | <ol style="list-style-type: none"> a) Check transmission wave shape/noise on transmission line by following <Investigation method of transmission wave shape/noise>. <ul style="list-style-type: none"> → No noise indicates faulty controller of generating unit. → Noise if existed, check the noise. |

| Checking code | Meaning, detecting method | Cause | Checking method & Countermeasure |
|---------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 6606 | <p>Communications with transmission processor error</p> <p>Communication trouble between apparatus processor and transmission processor.</p> <div data-bbox="276 405 547 555" style="border: 1px solid black; padding: 5px;"> <p>Note: The address/attribute shown on remote controller indicates the controller which has detected error.</p> </div> | <ol style="list-style-type: none"> 1) Data is not properly transmitted due to casual erroneous operation of the generating controller. 2) Faulty generating controller. | <p>Turn off power sources of indoor unit, BC controller and outdoor unit.</p> <p style="margin-left: 20px;">(When power sources are turned off separately, microcomputer is not reset and normal operations can not be restored.)</p> <p>→ Controller trouble is the source of the trouble when the same trouble is observed again.</p> |

| Checking code | Meaning, detecting method | | | | |
|----------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------|------------------------|----------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 6607 | No ACK error | | | | |
| When no ACK signal is detected in 6 continuous times with 30 second interval by transmission side controller, the transmission side detects error. | | | | | |
| Note: The address/attribute shown on remote controller indicates the controller not providing the answer (ACK). | | | | | |
| System composition | Generating unit address | Display of trouble | Detecting method | Cause | Checking method & countermeasure |
| (1) Single refrigerant system | ① Outdoor unit (OC) | Remote controller (RC) | No reply (ACK) at OC transmission to BC | 1) Poor contact of transmission line of OC or BC. 2) Damping of transmission line voltage/signal by acceptable range of transmission wiring exceeded. Farthest : Less than 200m Remote controller wiring : Less than 10m 3) Erroneous sizing of transmission line (Not within the range below). Wire diameter : 1.25mm ² or more 4) Faulty control circuit board of OC. | Shut down OC unit power source, and make it again. It will return to normal state at an accidental case. When normal state can not be re-covered, check for the 1) ~ 4) of the cause. |
| | ② BC controller <master> (BC) | Remote controller (RC) | No reply (ACK) at BC <master> transmission to IC | 1) When BC controller (master) address is changed or modified during operation. 2) Faulty or disconnection of transmission wiring of BC controller (master). 3) Slipping off of BC unit connector (CN02). 4) Faulty BC controller (master) circuit board. | Shut down both OC and IC power sources simultaneously for 5 minutes or more, and make them again. It will return to normal state at an accidental case. When normal state can not be re-covered, check for the 1) ~ 4) of the cause. |
| | ③ BC controller <slave> (BS) | Remote controller (RC) | No reply (ACK) at BC <slave> transmission to BC <master> | 1) When BC controller (slave) is changed or modified during operation. 2) Faulty or disconnection of transmission wiring of BC controller (slave). 3) Slipping off of BC unit connector (CN02). 4) Faulty BC controller (slave) circuit board. | Shut down both OC and master BC power sources simultaneously for 5 minutes or more, and make them again. It will return to normal state at an accidental case. When normal state can not be re-covered, check for the 1) ~ 4) of the cause. |
| | ④ Indoor unit (IC) | Remote controller (RC) | No reply (ACK) at IC transmission to RC | 1) When IC unit address is changed or modified during operation. 2) Faulty or disconnection of transmission wiring of IC. 3) Slipping off of IC unit connector (CN2M). 4) Faulty IC unit controller. 5) Faulty remote controller. | Shut down both OC and IC power sources simultaneously for 5 minutes or more, and make them again. It will return to normal state at an accidental case. When normal state can not be re-covered, check for the 1) ~ 4) of the cause. |
| | ⑤ Remote controller (RC) | Remote controller (RC) | No reply (ACK) at RC transmission to IC | 1) Faulty transmission wiring at IC unit side. 2) Faulty transmission wiring of RC. 3) When remote controller address is changed or modified during operation. 4) Faulty remote controller. | Shut down OC power sources for 5 minutes or more, and make it again. It will return to normal state at an accidental case. When normal state can not be re-covered, check for the 1) ~ 4) of the cause. |

| Checking code | Meaning, detecting method | | | | |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------|------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 6607 (continued) | No ACK error | | When no ACK signal is detected in 6 continuous times with 30 second interval by transmission side controller, the transmission side detects error. | | |
| <div style="border: 1px solid black; padding: 5px; width: fit-content; margin: auto;"> Note: The address/attribute shown on remote controller indicates the controller not providing the answer (ACK). </div> | | | | | |
| System composition | Generating unit address | Display of trouble | Detecting method | Cause | Checking method & countermeasure |
| (2) Group operation system using plural refrigerants | ① Outdoor unit (OC) | Remote controller (RC) | No reply (ACK) at OC transmission to BC | As same that for single refrigerant system. | Same as measure for single refrigerant system. |
| | ② BC controller <master> (BC) | Remote controller (RC) | No replay (ACK) at BC <master> transmission to IC | As same that for single refrigerant system. | Same as measure for single refrigerant system. |
| | ③ BC controller <slave> (BS) | Remote controller (RC) | No reply (ACK) at BC <slave> transmission to BC <master> | As same that for single refrigerant system. | Same as measure for single refrigerant system. |
| | ④ Indoor unit (IC) | Remote controller (RC) | No reply (ACK) at IC transmission to RC | 1) Cause of 1) ~ 5) of "Cause for single refrigerant system". 2) Disconnection or short circuit of transmission line of OC terminal block for centralized control (TB7). 3) Shut down of OC unit power source of one re-frigerant system. 4) Neglecting insertion of OC unit power supply connector (CN40). 5) Inserting more than 2 sets of power supply connector (CN40) for centralized control use. For generation after normal operation conducted once, the following causes can be considered. <ul style="list-style-type: none"> • Total capacity error (7100) • Capacity code setting error (7101) • Connecting set number error (7102) • Address setting error (7105) | a) Shut down the power source of both IC and OC for over 5 minutes simultaneously, and make them again. Normal state will be returned incase of accidental trouble. b) Check for 1) ~ 5) of causes. If cause is found, remedy it. c) Check other remote controller or OC unit LED for troubleshooting for trouble. Trouble → Modify the trouble according to the content of check code. No trouble → Faulty indoor controller |
| | ⑤ Remote controller (RC) | Remote controller (RC) | No reply (ACK) at RC transmission to IC | 1) Cause of 1) ~ 3) of "Cause for single refrigerant system". 2) Disconnection or short circuit of transmission line of OC terminal block for centralized control (TB7). 3) Shut down of OC unit power source of one | a) Shut down the power source of OC for over 5 minute, and make it again. Normal state will be returned in case of accidental trouble. b) Check for 1) ~ 5) of causes. If cause is found, remedy it. When normal state can not be obtained, check 1) ~ 5) of causes. |

| Checking code | Meaning, detecting method | | | | |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------|
| 6607 (continued) | No ACK error | | When no ACK signal is detected in 6 continuous times with 30 second interval by transmission side controller, the transmission side detects error. | | |
| <div style="border: 1px solid black; padding: 5px; width: fit-content; margin: auto;"> Note: The address/attribute shown on remote controller indicates the controller not providing the answer (ACK). </div> | | | | | |
| System composition | Generating unit address | Display of trouble | Detecting method | Cause | Checking method & countermeasure |
| (3) Connecting system with system controller (MELANS) | ① Outdoor unit (OC) | Remote controller (RC) | No reply (ACK) at OC transmission to BC | As same that for single refrigerant system. | Same countermeasure as that for single refrigerant system. |
| | ② BC controller <master> (BC) | Remote controller (RC) | No reply (ACK) at BC <master> transmission to IC | As same that for single refrigerant system. | Same countermeasure as that for single refrigerant system. |
| | ③ BC controller <slave> (BS) | Remote controller (RC) | No reply (ACK) at BC <slave> transmission to BC <master> | As same that for single refrigerant system. | Same countermeasure as that for single refrigerant system. |
| | ④ Indoor unit (IC) | Remote controller (RC) | No reply (ACK) at IC transmission RC | Same cause of that for grouping from plural refrigerants. | Same countermeasure as that for IC unit error in plural refrigerant system. |
| | | System controller (SC) | No reply (ACK) at IC transmission to SC | Trouble of partial IC units: 1) Same cause as that for single refrigerant system. | → Same countermeasure as that for single refrigerant system. |
| | | | | Trouble of all IC in one refrigerant system: 1) Cause of total capacity error. (7100) 2) Cause of capacity code setting error. (7101) 3) Cause of connecting number error. (7102) 4) Cause of address setting error. (7105) 5) Disconnection or short circuit of transmission line of OC unit terminal block for central control (TB7). 6) Power source shut down of OC unit. 7) Trouble of OC unit electrical system. | Confirm OC trouble diagnosis LED. → At trouble generation, check for the content according to check code. Check the content of 5)~7) shown left. |
| | ⑤ Remote controller (RC) | Remote controller (RC) | No reply (ACK) at RC transmission to IC | Same cause as that for plural refrigerant system. | Same countermeasure as that for plural refrigerant system. |
| | | System controller (SC) | No reply (ACK) at RC transmission to MELANS | Trouble of partial IC units: 1) Same cause of that for single refrigerant system. | → Same countermeasure as that for single refrigerant system. |
| | | | | Trouble of all IC in one refrigerant system: 1) Error detected by OC unit. Total capacity error. (7100) Capacity code setting error. (7101) Connecting number error. (7102) Address setting error. (7105) 2) Disconnection or short circuit of transmission line of OC unit terminal block for central control (TB7). 3) Power source shut down of OC unit. 4) Trouble of OC unit electrical system. | Confirm OC trouble diagnosis LED. → At trouble generation, check for the content according to check code. Check the content of 2)~4) shown left. |
| | Trouble of all IC: 1) As same that for single refrigerant system. 2) Insertion of power supply connector (CN40) into OC unit transmission line for centralized control. 3) Disconnection or power shutdown of power supply unit for transmission line. 4) Faulty MELANS. | Check the causes of 1) ~ 4) left. | | | |

| Checking code | Meaning, detecting method | | | | |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------|------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 6607 (continued) | No ACK error | | When no ACK signal is detected in 6 continuous times with 30 second interval by transmission side controller, the transmission side detects error. | | |
| <div style="border: 1px solid black; padding: 5px; width: fit-content; margin: auto;"> Note: The address/attribute shown on remote controller indicates the controller not providing the answer (ACK). </div> | | | | | |
| System composition | Generating unit address | Display of trouble | Detecting method | Cause | Checking method & countermeasure |
| (3) Connecting system with system controller (MELANS) | ⑤ System controller (SC) | Remote controller (RC) | No reply (ACK) at SC transmission to IC | Trouble of partial remote controller: 1) Faulty wiring of RC transmission line. 2) Slipping off or poor contact of RC transmission connector. 3) Faulty RC. | Check 1) ~ 3) left. |
| | | | | Trouble of all IC in one refrigerant system. 1) Error detected by OC unit. Total capacity error (7100) Capacity code setting error (7101) Connecting number error (7102) Address setting error (7105) 2) Slipping off or short circuit of transmission line of OC unit terminal block for central control (TB7). 3) Power source shut down of OC unit. 4) Trouble of OC unit electrical system. | Confirm OC trouble diagnosis LED. → At trouble generation, check for the content according to check code. Check the content of 2) ~ 4) shown left. |
| | | | | Trouble of all RC: 1) As same that for single refrigerant system. 2) Inserting supply power connector (CN40) to OC transmission line for centralized control. 3) Slipping off or power shutdown of power supply unit for transmission line. 4) Faulty MELANS. | Check the causes 1)~4) left. |
| No relation with system | Address which should not be existed | - | - | 1) IC unit is keeping the memory of the original group setting with RC although the RC address was changed later. The same symptom will appear for the registration with SC. 2) IC unit is keeping the memory of the original interlocking registration with Fresh Master with RC although the Fresh Master address was changed later. | As some IC units are keeping the memory of the address not existing, delete the information. Employ one of the deleting method among two below. 1) Deletion by remote controller. Delete unnecessary information by the manual setting function of remote controller. 2) Deletion by connecting information deleting switch of OC unit. <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> Be careful that the use of this method will delete all the group information set with RC and all the interlocking information of Fresh Master and IC unit. </div> <ol style="list-style-type: none"> ① Shut down OC unit power source, and wait for 5 minutes. ② Turn on the dip switch SW2-2 provided on OC unit control circuit board. ③ Make OC unit power source, and wait for 5 minutes. ④ Shut down OC unit power source, and wait for 5 minutes. ⑤ Turn off the dip switch SW2-2 provided on OC unit control circuit board. ⑥ Make OC unit power source. |

| Checking code | Meaning, detecting method | Cause | Checking method & Countermeasure |
|---------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 7102 | Connected unit count over | 2) The Outdoor unit address is being set to 51~100 under automatic address mode (Remote controller displays "HO"). 3) Disconnection of transmission wiring at Outdoor unit. 4) Short circuit of transmission line in case of 3) & 4), remote controller displays "HO". 5) Disconnection of transmission wiring at BC controller. 6) BC controller not for the BIG R2 (model: FA, FB type) is connected. | d) Check for the model total (capacity code total) of indoor units connected. |
| 7105 | Address setting error <ul style="list-style-type: none"> • Erroneous setting of OC unit address • Erroneous setting of BC controller address <div style="border: 1px solid black; padding: 2px; width: fit-content;">Trouble source : Outdoor unit BC controller</div> | 1) Setting error of Outdoor unit address. The address of Outdoor unit is not being set to 51~100. 2) The address of BC controller is not being set within 51~100. | Check that the address of OC unit is being set to 51~100. Reset the address if it stays out of the range, while shutting the power source off. When BC controller is out of the range, reset it while shutting the power source of both OC unit and BC controller off. |
| 7107 | Branch No. setting error Can not operate because branch No. of indoor unit wrongly set. <div style="border: 1px solid black; padding: 2px; width: fit-content;">Trouble source : BC controller</div> | 1) Indoor unit capacity per connector joint is exceeded as follows: Single connection : 81 or more Two connection joint : 161 or more Three connection joint : 241 or more Four connection joint : 321 or more 2) Four or more indoor units are set for the same connection. 3) The smallest branch No. has not been set when used at joint. 4) Does the address of BC controller (slave) become the least address + 50 of Indoor controller connecting to BC controller (slave)? 5) The address of Indoor Unit, which is connected to BC controller (slave), sets up the small address from the greatest address of Indoor Unit which is connected to BC control (master). | a) Check indoor unit connection No. in refrigerant circuit. ① No four or more indoor units which are set for the same branch No. A? ② Check total capacity of indoor units which are set for the same branch No. Judged as trouble when it applies to Cause 1). ③ Check whether the smallest branch No. is set when used at joint. b) Check whether indoor unit capacity code (SW2) is wrongly set. (Keep factory shipment condition.) For erroneous switch setting, modify it, turn off the power source of outdoor unit, and indoor unit simultaneously for 5 minutes or more, and then turn on. c) Verify the address of BC controller (slave) and Indoor Unit. |
| 7111 | Remote control sensor error Error not providing the temperature designed to remote controller sensor. <div style="border: 1px solid black; padding: 2px; width: fit-content;">Trouble source : Indoor unit</div> | 1) In case when the old type remote controller for M-NET is used and the remote controller sensor is designed on indoor unit. (SW1-1 turned ON) | a) Replace the old remote controller by the new remote controller. |
| 7130 | Different Indoor model and BC controller connected error | A indoor unit not for the R407C (model: P•••) is connected. | Use the P••• indoor unit. |

[4] LED Monitor Display


(1) How to read LED for service monitor

By setting of DIP SW1-1 ~ 1-8, the unit operating condition can be observed with the service LED on the control circuit board. (For the relation of each DIP SW to the content, see the table provided.)

As shown in the figure below, the LED consist of 7 segments is put in 4 sets side by side for numerical and graphic display.

| | | | | | |
|-----|---------------------------------------------------------------|------|------------------------------|------|---------------------------|
| OC | : Outdoor unit | SV | : Solenoid valve | THHS | : Inverter radiator panel |
| IC | : Indoor unit | LEV | : Electronic expansion valve | | |
| | | COMP | : Compressor | | |
| SW1 | : Outdoor unit control circuit board | | | | |
| E | : Memory storage for service activities (sampling per minute) | | | | |


7 seg LED

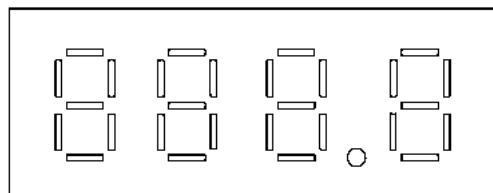

The numerical display includes that of pressure, temperature or the like, while the graphic display includes that of operating condition, solenoid valve ON/OFF state or the like.


- Numerical display

Example : display at 18.8kg/cm²G (1.84MPa) of pressure sensor data (Item No. 56)

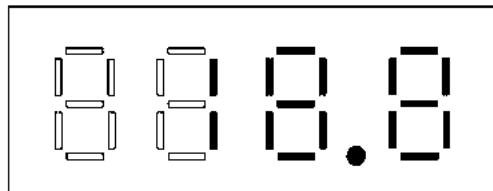

- Graphic display (Two LEDs aligned vertically express a flag.)

Example : At forcible powering in outdoor unit operation display

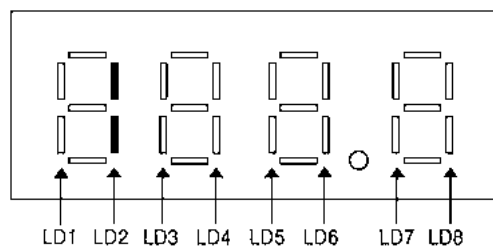

Remarks: E: Contents into EPROM M: IC monitor through communication E*: Store in service memory

| No | SW | Item | Display | | | | | | | | Remarks |
|--------|----------------------------------|------------------------------------------|------------------------------------------------|-------------------------------------------------|-------------------------------------------------|---------------------------------|---------------------------------|-----------------------------|-----------------------------|-----------------------------------|---------|
| | 1234567890 | | LD1 | LD2 | LD3 | LD4 | LD5 | LD6 | LD7 | LD8 | |
| 0 | 0000000000 | Relay output display 1, Light ON display | COMP operating | COMP1 start | 52C2 | 21S4a 21S4b | SV1 | | SV 22/32 | Regularly light ON | |
| | | Inspection display 1, OC error | 0000~9999 (Address and error code inverted) | | | | | | | | |
| 1 ☆ | 1000000000 | Relay output display 2 | SV4a | | | SV6a | CH2, 3 | 52F | Retry operation | Emergency operation | |
| 2 | 0100000000 (IC also included) | Inspection display 2 | 0000~9999 (Address and error code inverted) | | | | | | | | |
| 3 ☆ | 1100000000 | Relay output display 3 | SV3 | SV4 | SV5 | SV6 | SV7, 8 | | | | |
| 4 | 0010000000 | | | | | | | | | | |
| 5 | 1010000000 | Communication demand capacity | 0000~9999 | | | | | | | | |
| 6 | 0110000000 | External signal | Contact demand | Night mode | | | | | | | |
| 7 | 1110000000 | Outdoor unit operation display | BC operation instruct | Restriction energized | 3-minute restart | Compressor running | Error delayed | Error | | Vacuum operation protection delay | |
| 8 | 0001000000 | Indoor unit inspection | Machine No.1 | Machine No.2 | Machine No.3 | Machine No.4 | Machine No.5 | Machine No.6 | Machine No.7 | Machine No.8 | |
| 9 | 1001000000 | | Machine No.9 | Machine No.10 | Machine No.11 | Machine No.12 | Machine No.13 | Machine No.14 | Machine No.15 | Machine No.16 | |
| 10 | 0101000000 | Indoor unit operation mode | Machine No.1 | Machine No.2 | Machine No.3 | Machine No.4 | Machine No.5 | Machine No.6 | Machine No.7 | Machine No.8 | |
| 11 | 1101000000 | | Machine No.9 | Machine No.10 | Machine No.11 | Machine No.12 | Machine No.13 | Machine No.14 | Machine No.15 | Machine No.16 | |
| 12 | 0011000000 | Indoor unit thermo | Machine No.1 | Machine No.2 | Machine No.3 | Machine No.4 | Machine No.5 | Machine No.6 | Machine No.7 | Machine No.8 | |
| 13 | 1011000000 | | Machine No.9 | Machine No.10 | Machine No.11 | Machine No.12 | Machine No.13 | Machine No.14 | Machine No.15 | Machine No.16 | |
| 14 | 0111000000 | BC operation mode | Cooling-only ON | Cooling-only OFF | Heating-only ON | Heating-only OFF | Mixed ON | Mixed OFF | Fan | Stop | |
| 15 | 1111000000 | Outdoor unit operation mode | Permission stop | Standby | | Cooling-only | Cooling-main | Heating-only | Heating-main | Demand | |
| 16 | 0000100000 | Outdoor unit control mode | Initial start | Cooling-only, cooling main refrigerant recovery | Heating-only, heating main refrigerant recovery | Defrosting | Balance oil | Low oil recovery | | | |
| 17 | 1000100000 | Outdoor unit error delay | High pressure error 1, 2 | – | Low pressure error | NO1 Discharge temperature error | NO2 Discharge temperature error | NO1 Over-current protection | NO2 Over-current protection | Radiator thermo operation | |
| 18 | 0100100000 | | Over-current cut off | INV error | Refrigerant overcharge | Composition sensor error | Oil temperature error | | | | |
| 19 | 1100100000 | | TH11 error | TH12 error | TH2 error | TH3 error | TH4 error | TH5 error | TH6 error | TH7 error | |
| 20 | 0010100000 | | | TH9 error | | TH10 error | High pressure sensor error | TTHS error | | | |

| No | SW | Item | Display | | | | | | | | Remarks |
|----|------------|-----------------------------------|--------------------------------------|------------|------------------------|---------------------------------|---------------------------------|----------------------------|----------------------------|---------------------------|---------|
| | 1234567890 | | LD1 | LD2 | LD3 | LD4 | LD5 | LD6 | LD7 | LD8 | |
| 21 | 1010100000 | Outdoor error delay history | High pressure error 1, 2 | — | Low pressure error | NO1 Discharge temperature error | NO2 Discharge temperature error | NO1 Overcurrent protection | NO2 Overcurrent protection | Radiator thermo operation | |
| 22 | 0110100000 | | Overcurrent cut off | INV error | Refrigerant overcharge | Composition sensor error | Oil temperature error | | | | |
| 23 | 1110100000 | | TH11 error | TH12 error | TH2 error | TH3 error | TH4 error | TH5 error | TH6 error | TH7 error | |
| 24 | 0001100000 | | | TH9 error | | TH10 error | High pressure sensor error | THHS error | | | |
| 25 | 1001100000 | Error log 1 | 0000~9999 | | | | | | | | |
| 26 | 0101100000 | Inverter error details | Inverter error details (0001 - 0009) | | | | | | | | |
| 27 | 1101100000 | Error log 2 | 0000~9999 | | | | | | | | |
| 28 | 0011100000 | Inverter error details | Inverter error details (0001 - 0009) | | | | | | | | |
| 29 | 1011100000 | Error log 3 | 0000~9999 | | | | | | | | |
| 30 | 0111100000 | Inverter error details | Inverter error details (0001 - 0009) | | | | | | | | |
| 31 | 1111100000 | Error log 4 | 0000~9999 | | | | | | | | |
| 32 | 0000100000 | Inverter error details | Inverter error details (0001 - 0009) | | | | | | | | |
| 33 | 1000100000 | Error log 5 | 0000~9999 | | | | | | | | |
| 34 | 0100100000 | Inverter error details | Inverter error details (0001 - 0009) | | | | | | | | |
| 35 | 1100100000 | Error log 6 | 0000~9999 | | | | | | | | |
| 36 | 0010010000 | Inverter error details | Inverter error details (0001 - 0009) | | | | | | | | |
| 37 | 1010010000 | Error log 7 | 0000~9999 | | | | | | | | |
| 38 | 0110010000 | Inverter error details | Inverter error details (0001 - 0009) | | | | | | | | |
| 39 | 1110010000 | Error log 8 | 0000~9999 | | | | | | | | |
| 40 | 0001010000 | Inverter error details | Inverter error details (0001 - 0009) | | | | | | | | |
| 41 | 1001010000 | Error log 9 | 0000~9999 | | | | | | | | |
| 42 | 0101010000 | Inverter error details | Inverter error details (0001 - 0009) | | | | | | | | |
| 43 | 1101010000 | Error log 10 | 0000~9999 | | | | | | | | |
| 44 | 0011010000 | Inverter error details | Inverter error details (0001 - 0009) | | | | | | | | |
| 45 | 1011010000 | Type of inverte Error preliminary | 0001 - 0009 | | | | | | | | |
| 46 | 0111010000 | TH11 data | -99.9~999.9 | | | | | | | | |
| 47 | 1111010000 | TH12 data | ↑ | | | | | | | | |
| 48 | 0000110000 | TH2 data | ↑ | | | | | | | | |
| 49 | 1000110000 | TH3 data | ↑ | | | | | | | | |
| 50 | 0100110000 | TH4 data | ↑ | | | | | | | | |
| 51 | 1100110000 | TH5 data | ↑ | | | | | | | | |
| 52 | 0010110000 | TH6 data | ↑ | | | | | | | | |
| 53 | 1010110000 | TH7 data | ↑ | | | | | | | | |
| 54 | 0110110000 | | ↑ | | | | | | | | |
| 55 | 1110110000 | TH9 data | ↑ | | | | | | | | |
| 56 | 0001110000 | | ↑ | | | | | | | | |
| 57 | 1001110000 | TH10 data | ↑ | | | | | | | | |
| 58 | 0101110000 | High pressure sensor data | ↑ | | | | | | | | |

| No | SW | Item | Display | | | | | | | | Remarks |
|----|------------|------------------------------------------|----------------------------|----------------------|-----------------------|--------------|-----------|----------------------|----------------------|--------------------------|---------|
| | | | LD1 | LD2 | LD3 | LD4 | LD5 | LD6 | LD7 | LD8 | |
| 59 | 1101110000 | Low pressure sensor data | ↑ | | | | | | | | |
| 60 | 0011110000 | THHS data | ↑ | | | | | | | | |
| 61 | 1011110000 | | | | | | | | | | |
| 62 | 0111110000 | α oc | ↑ | | | | | | | | |
| 63 | 1111110000 | α oc* | ↑ | | | | | | | | |
| 64 | 0000001000 | Accumulator level | 0~9 ("AL=" also displayed) | | | | | | | | |
| 65 | 1000001000 | HZAK increase/decrease | Δ Hz - | Δ Hz 0 | Δ Hz + | - | - | Δ AK - | Δ AK 0 | Δ AK + | |
| 66 | 0100001000 | Difference from target Tc | Low -3deg or less | Low -3 ~-2 deg | Low -2 ~ -1 deg | Stable range | | High 1 ~ 2 deg | High 2 ~ 3 deg | High, 3deg or more | |
| 67 | 1100001000 | Difference from target ET | Low -3deg or less | Low -3 ~-2 deg | Low -2 ~ -1 deg | Stable range | | High 1 ~ 2 deg | High 2 ~ 3 deg | High, 3deg or more | |
| 68 | 0010001000 | Target Tc | -99.9~999.9 | | | | | | | | |
| 69 | 1010001000 | Target ET | ↑ | | | | | | | | |
| 70 | 0110001000 | Tc | ↑ | | | | | | | | |
| 71 | 1110001000 | Te | ↑ | | | | | | | | |
| 72 | 0001001000 | Temporary frequency | 0000~9999 | | | | | | | | |
| 73 | 1001001000 | COMP1 output frequency | ↑ | | | | | | | | |
| 74 | 0101001000 | AK | ↑ | | | | | | | | |
| 75 | 1101001000 | SLEV | ↑ | | | | | | | | |
| 76 | 0011001000 | | | | | | | | | | |
| 77 | 1011001000 | Fancon output value(Toff%) | ↑ | | | | | | | | |
| 78 | 0111001000 | COMP1 operating current | ↑ | | | | | | | | |
| 79 | 1111001000 | Number of fans used | ↑ | | | | | | | | |
| 80 | 0000101000 | OC address | ↑ | | | | | | | | |
| 81 | 1000101000 | IC1 address / Capacity code | 0000~9999 | | | | 0000~9999 | | | | |
| 82 | 0100101000 | IC2 address / Capacity code | ↑ | | | | ↑ | | | | |
| 83 | 1100101000 | IC3 address / Capacity code | ↑ | | | | ↑ | | | | |
| 84 | 0010101000 | IC4 address / Capacity code | ↑ | | | | ↑ | | | | |
| 85 | 1010101000 | IC5 address / Capacity code | ↑ | | | | ↑ | | | | |
| 86 | 0110101000 | IC6 address / Capacity code | ↑ | | | | ↑ | | | | |
| 87 | 1110101000 | IC7 address / Capacity code | ↑ | | | | ↑ | | | | |
| 88 | 0001101000 | IC8 address / Capacity code | ↑ | | | | ↑ | | | | |
| 89 | 1001101000 | IC9 address / Capacity code | ↑ | | | | ↑ | | | | |
| 90 | 0101101000 | IC10 address / Capacity code | ↑ | | | | ↑ | | | | |
| 91 | 1101101000 | IC11 address / Capacity code | ↑ | | | | ↑ | | | | |
| 92 | 0011101000 | IC12 address / Capacity code | ↑ | | | | ↑ | | | | |
| 93 | 1011101000 | IC13 address / Capacity code | ↑ | | | | ↑ | | | | |
| 94 | 0111101000 | IC14 address / Capacity code | ↑ | | | | ↑ | | | | |
| 95 | 1111101000 | IC15 address / Capacity code | ↑ | | | | ↑ | | | | |
| 96 | 0000011000 | IC16 address / Capacity code | ↑ | | | | ↑ | | | | |
| 97 | 1000011000 | COMP1 operating time, Upper four figures | 0000~9999 | | | | | | | | |

When error stop occurs, No.101 - 125 display the last data just before error stop which is stored in the service memory.

| No | SW | Item | Display | | | | | | | | Remarks |
|-----|------------|---------------------------------------------|--------------------------------------------------|-----------------------|------------------|--------------------|---------------|-------|----------|-----------------------------------|---------|
| | 1234567890 | | LD1 | LD2 | LD3 | LD4 | LD5 | LD6 | LD7 | LD8 | |
| 98 | 0100011000 | Lower four figures | 0000~9999 | | | | | | | | |
| 99 | 1100011000 | COMP2 operating time, Upper four figures | ↑ | | | | | | | | |
| 100 | 0010011000 | Lower four figures | ↑ | | | | | | | | |
| 101 | 1010011000 | Relay output display 1, Light display | COMP operating | 52C1 | 52C2 | 21S4a 21S4b | SV1 | | SV 22/32 | Regularly light ON | |
| 102 | 0110011000 | Relay output display 2 | SV4a | | | SV6a | CH2, 3 | 52F | | | |
| 103 | 1110011000 | TH11 data | -99.9~999.9 | | | | | | | | |
| 104 | 0001011000 | TH12 data | ↑ | | | | | | | | |
| 105 | 1001011000 | TH2 (Te) data | ↑ | | | | | | | | |
| 106 | 0101011000 | TH3 data | ↑ | | | | | | | | |
| 107 | 1101011000 | TH5 data | ↑ | | | | | | | | |
| 108 | 0011011000 | TH9 data | ↑ | | | | | | | | |
| 109 | 1011011000 | Relay output display 2 | SV3 | SV4 | SV5 | SV6 | SV7, 8 | | | | |
| 110 | 0111011000 | TH10 data | -99.9~999.9 | | | | | | | | |
| 111 | 1111011000 | High pressure sensor data | ↑ | | | | | | | | |
| 112 | 0000111000 | Low pressure sensor data | ↑ | | | | | | | | |
| 113 | 1000111000 | THHS data | ↑ | | | | | | | | |
| 114 | 0100111000 | Accumulator level | 0~9 ("AL=" also displayed) | | | | | | | | |
| 115 | 1100111000 | All tentative frequency | 0000~9999 | | | | | | | | |
| 116 | 0010111000 | αoc | ↑ | | | | | | | | |
| 117 | 1010111000 | αoc* | ↑ | | | | | | | | |
| 118 | 0110111000 | Tc | ↑ | | | | | | | | |
| 119 | 1110111000 | COMP1 output frequency | ↑ | | | | | | | | |
| 120 | 0001111000 | AK | ↑ | | | | | | | | |
| 121 | 1001111000 | SLEV | ↑ | | | | | | | | |
| 122 | 0101111000 | TH7 | -99.9~999.9 | | | | | | | | |
| 123 | 1101111000 | TH6 | ↑ | | | | | | | | |
| 124 | 0011111000 | COMP1 operating current | 0000~9999 | | | | | | | | |
| 125 | 1011111000 | Outdoor unit operation display | BC operation instruct | Restriction energized | 3-minute restart | Compressor running | Error delayed | Error | | Vacuum operation protection delay | |
| 126 | 0111111000 | Circulating composition correction value | -99.9~999.9 | | | | | | | | |
| 127 | 1111111000 | CS circuit block detecting time | 0000~9999 (9999 and on are displayed as 9999) | | | | | | | | |
| 128 | 0000000100 | IC1 suction temperature | -99.9~999.9 | | | | | | | | |
| 129 | 1000000100 | IC2 suction temperature | ↑ | | | | | | | | |
| 130 | 0100000100 | IC3 suction temperature | ↑ | | | | | | | | |
| 131 | 1100000100 | IC4 suction temperature | ↑ | | | | | | | | |
| 132 | 0010000100 | IC5 suction temperature | ↑ | | | | | | | | |
| 133 | 1010000100 | IC6 suction temperature | ↑ | | | | | | | | |
| 134 | 0110000100 | IC7 suction temperature | ↑ | | | | | | | | |
| 135 | 1110000100 | IC8 suction temperature | ↑ | | | | | | | | |
| 136 | 0001000100 | IC9 suction temperature | ↑ | | | | | | | | |
| 137 | 1001000100 | IC10 suction temperature | ↑ | | | | | | | | |
| 138 | 0101000100 | IC11 suction temperature | ↑ | | | | | | | | |

| No | SW | Item | Display | | | | | | | | Remarks |
|-----|------------|--------------------------------|-------------|-----|-----|-----|-----|-----|-----|-----|---------|
| | 1234567890 | | LD1 | LD2 | LD3 | LD4 | LD5 | LD6 | LD7 | LD8 | |
| 139 | 1101000100 | IC12 suction temperature | -99.9~999.9 | | | | | | | | |
| 140 | 0011000100 | IC13 suction temperature | ↑ | | | | | | | | |
| 141 | 1011000100 | IC14 suction temperature | ↑ | | | | | | | | |
| 142 | 0111000100 | IC15 suction temperature | ↑ | | | | | | | | |
| 143 | 1111000100 | IC16 suction temperature | ↑ | | | | | | | | |
| 144 | 0000100100 | IC1 liquid piping temperature | -99.9~999.9 | | | | | | | | |
| 145 | 1000100100 | IC2 liquid piping temperature | ↑ | | | | | | | | |
| 146 | 0000100100 | IC3 liquid piping temperature | ↑ | | | | | | | | |
| 147 | 1100100100 | IC4 liquid piping temperature | ↑ | | | | | | | | |
| 148 | 0010100100 | IC5 liquid piping temperature | ↑ | | | | | | | | |
| 149 | 1010100100 | IC6 liquid piping temperature | ↑ | | | | | | | | |
| 150 | 0110100100 | IC7 liquid piping temperature | ↑ | | | | | | | | |
| 151 | 1110100100 | IC8 liquid piping temperature | ↑ | | | | | | | | |
| 152 | 0001100100 | IC9 liquid piping temperature | ↑ | | | | | | | | |
| 153 | 1001100100 | IC10 liquid piping temperature | ↑ | | | | | | | | |
| 154 | 0101100100 | IC11 liquid piping temperature | ↑ | | | | | | | | |
| 155 | 1101100100 | IC12 liquid piping temperature | ↑ | | | | | | | | |
| 156 | 0011100100 | IC13 liquid piping temperature | ↑ | | | | | | | | |
| 157 | 1011100100 | IC14 liquid piping temperature | ↑ | | | | | | | | |
| 158 | 0111100100 | IC15 liquid piping temperature | ↑ | | | | | | | | |
| 159 | 1111100100 | IC16 liquid piping temperature | ↑ | | | | | | | | |
| 160 | 0000010100 | IC1 gas piping temperature | -99.9~999.9 | | | | | | | | |
| 161 | 1000010100 | IC2 gas piping temperature | ↑ | | | | | | | | |
| 162 | 0100010100 | IC3 gas piping temperature | ↑ | | | | | | | | |
| 163 | 1100010100 | IC4 gas piping temperature | ↑ | | | | | | | | |
| 164 | 0010010100 | IC5 gas piping temperature | ↑ | | | | | | | | |
| 165 | 1010010100 | IC6 gas piping temperature | ↑ | | | | | | | | |
| 166 | 0110010100 | IC7 gas piping temperature | ↑ | | | | | | | | |
| 167 | 1110010100 | IC8 gas piping temperature | ↑ | | | | | | | | |
| 168 | 0001010100 | IC9 gas piping temperature | ↑ | | | | | | | | |
| 169 | 1001010100 | IC10 gas piping temperature | ↑ | | | | | | | | |
| 170 | 0101010100 | IC11 gas piping temperature | ↑ | | | | | | | | |
| 171 | 1101010100 | IC12 gas piping temperature | ↑ | | | | | | | | |
| 172 | 0011010100 | IC13 gas piping temperature | ↑ | | | | | | | | |
| 173 | 1011010100 | IC14 gas piping temperature | ↑ | | | | | | | | |
| 174 | 0111010100 | IC15 gas piping temperature | ↑ | | | | | | | | |
| 175 | 1111010100 | IC16 gas piping temperature | -99.9~999.9 | | | | | | | | |
| 176 | 0000110100 | IC1SH | ↑ | | | | | | | | |
| 177 | 1000110100 | IC2SH | ↑ | | | | | | | | |
| 178 | 0100110100 | IC3SH | ↑ | | | | | | | | |
| 179 | 1100110100 | IC4SH | ↑ | | | | | | | | |
| 180 | 0010110100 | IC5SH | ↑ | | | | | | | | |
| 181 | 1010110100 | IC6SH | ↑ | | | | | | | | |
| 182 | 0110110100 | IC7SH | ↑ | | | | | | | | |
| 183 | 1110110100 | IC8SH | ↑ | | | | | | | | |

| No | SW | Item | Display | | | | | | | | Remarks |
|-----|------------|--------------------|--------------|-----|-----|-----|-----|-----|-----|-----|---------|
| | 1234567890 | | LD1 | LD2 | LD3 | LD4 | LD5 | LD6 | LD7 | LD8 | |
| 184 | 0001110100 | IC9SH | -99.9~999.9 | | | | | | | | |
| 185 | 1001110100 | IC10SH | ↑ | | | | | | | | |
| 186 | 0101110100 | IC11SH | ↑ | | | | | | | | |
| 187 | 1101110100 | IC12SH | ↑ | | | | | | | | |
| 188 | 0011110100 | IC13SH | ↑ | | | | | | | | |
| 189 | 1011110100 | IC14SH | ↑ | | | | | | | | |
| 190 | 0111110100 | IC15SH | ↑ | | | | | | | | |
| 191 | 1111110100 | IC16SH | ↑ | | | | | | | | |
| 192 | 0000001100 | IC1SC | -99.9~999.9 | | | | | | | | |
| 193 | 1000001100 | IC2SC | ↑ | | | | | | | | |
| 194 | 0100001100 | IC3SC | ↑ | | | | | | | | |
| 195 | 1100001100 | IC4SC | ↑ | | | | | | | | |
| 196 | 0010001100 | IC5SC | ↑ | | | | | | | | |
| 197 | 1010001100 | IC6SC | ↑ | | | | | | | | |
| 198 | 0110001100 | IC7SC | ↑ | | | | | | | | |
| 199 | 1110001100 | IC8SC | ↑ | | | | | | | | |
| 200 | 0001001100 | IC9SC | ↑ | | | | | | | | |
| 201 | 1001001100 | IC10SC | ↑ | | | | | | | | |
| 202 | 0101001100 | IC11SC | ↑ | | | | | | | | |
| 203 | 1101001100 | IC12SC | ↑ | | | | | | | | |
| 204 | 0011001100 | IC13SC | ↑ | | | | | | | | |
| 205 | 1011001100 | IC14SC | ↑ | | | | | | | | |
| 206 | 0111001100 | IC15SC | ↑ | | | | | | | | |
| 207 | 1111001100 | IC16SC | ↑ | | | | | | | | |
| 208 | 0000101100 | IC1 LEV opening | 0000~9999 | | | | | | | | |
| 209 | 1000101100 | IC2 LEV opening | ↑ | | | | | | | | |
| 210 | 0100101100 | IC3 LEV opening | ↑ | | | | | | | | |
| 211 | 1100101100 | IC4 LEV opening | ↑ | | | | | | | | |
| 212 | 0010101100 | IC5 LEV opening | ↑ | | | | | | | | |
| 213 | 1010101100 | IC6 LEV opening | ↑ | | | | | | | | |
| 214 | 0110101100 | IC7 LEV opening | ↑ | | | | | | | | |
| 215 | 1110101100 | IC8 LEV opening | ↑ | | | | | | | | |
| 216 | 0001101100 | IC9 LEV opening | ↑ | | | | | | | | |
| 217 | 1001101100 | IC10 LEV opening | ↑ | | | | | | | | |
| 218 | 0101101100 | IC11 LEV opening | ↑ | | | | | | | | |
| 219 | 1101101100 | IC12 LEV opening | ↑ | | | | | | | | |
| 220 | 0011101100 | IC13 LEV opening | ↑ | | | | | | | | |
| 221 | 1011101100 | IC14 LEV opening | ↑ | | | | | | | | |
| 222 | 0111101100 | IC15 LEV opening | ↑ | | | | | | | | |
| 223 | 1111101100 | IC16 LEV opening | ↑ | | | | | | | | |
| 224 | 0000011100 | IC1 operation mode | 0000:Stop | | | | | | | | |
| 225 | 1000011100 | IC2 operation mode | 0001:Fan | | | | | | | | |
| 226 | 0100011100 | IC3 operation mode | 0002:Cooling | | | | | | | | |
| 227 | 1100011100 | IC4 operation mode | 0003:Heating | | | | | | | | |
| 228 | 0010011100 | IC5 operation mode | 0004:Dry | | | | | | | | |

| No | SW | Item | Display | | | | | | | | Remarks | |
|-----|------------|----------------------------|---------------|---------------|---------------|---------------|---------------|---------------|---------------|---------------|---------|--------------|
| | 1234567890 | | LD1 | LD2 | LD3 | LD4 | LD5 | LD6 | LD7 | LD8 | | |
| 229 | 1010011100 | IC6 operation mode | | | | | | | | | | |
| 230 | 0110011100 | IC7 operation mode | | | | | | | | | | |
| 231 | 1110011100 | IC8 operation mode | | | | | | | | | | |
| 232 | 0001011100 | IC9 operation mode | | | | | | | | | | 0000:Stop |
| 233 | 1001011100 | IC10 operation mode | | | | | | | | | | 0001:Fan |
| 234 | 0101011100 | IC11 operation mode | | | | | | | | | | 0002:Cooling |
| 235 | 1101011100 | IC12 operation mode | | | | | | | | | | 0003:Heating |
| 236 | 0011011100 | IC13 operation mode | | | | | | | | | | 0004:Dry |
| 237 | 1011011100 | IC14 operation mode | | | | | | | | | | |
| 238 | 0111011100 | IC15 operation mode | | | | | | | | | | |
| 239 | 1111011100 | IC16 operation mode | | | | | | | | | | |
| 240 | 0000111100 | IC1 filter | 0000~9999 | | | | | | | | | |
| 241 | 1000111100 | IC2 filter | ↑ | | | | | | | | | |
| 242 | 0100111100 | IC3 filter | ↑ | | | | | | | | | |
| 243 | 1100111100 | IC4 filter | ↑ | | | | | | | | | |
| 244 | 0010111100 | IC5 filter | ↑ | | | | | | | | | |
| 245 | 1010111100 | IC6 filter | ↑ | | | | | | | | | |
| 246 | 0110111100 | IC7 filter | ↑ | | | | | | | | | |
| 247 | 1110111100 | IC8 filter | ↑ | | | | | | | | | |
| 248 | 0001111100 | IC9 filter | ↑ | | | | | | | | | |
| 249 | 1001111100 | IC10 filter | ↑ | | | | | | | | | |
| 250 | 0101111100 | IC11 filter | ↑ | | | | | | | | | |
| 251 | 1101111100 | IC12 filter | ↑ | | | | | | | | | |
| 252 | 0011111100 | IC13 filter | ↑ | | | | | | | | | |
| 253 | 1011111100 | IC14 filter | ↑ | | | | | | | | | |
| 254 | 0111111100 | IC15 filter | ↑ | | | | | | | | | |
| 255 | 1111111100 | IC16 filter | ↑ | | | | | | | | | |
| 256 | 0000000010 | | | | | | | | | | | |
| 257 | 1000000010 | | | | | | | | | | | |
| 258 | 0100000010 | | | | | | | | | | | |
| 259 | 1100000010 | | | | | | | | | | | |
| 260 | 0010000010 | | | | | | | | | | | |
| 261 | 1010000010 | | | | | | | | | | | |
| 262 | 0110000010 | | | | | | | | | | | |
| 263 | 1110000010 | | | | | | | | | | | |
| 264 | 0001000010 | Indoor unit inspection | Machine No.17 | Machine No.18 | Machine No.19 | Machine No.20 | Machine No.21 | Machine No.22 | Machine No.23 | Machine No.24 | | |
| 265 | 1001000010 | | | | | | | | | | | |
| 266 | 0101000010 | Indoor unit operation mode | Machine No.17 | Machine No.18 | Machine No.19 | Machine No.20 | Machine No.21 | Machine No.22 | Machine No.23 | Machine No.24 | | |
| 267 | 1101000010 | | | | | | | | | | | |
| 268 | 0011000010 | Indoor unit thermo | Machine No.17 | Machine No.18 | Machine No.19 | Machine No.20 | Machine No.21 | Machine No.22 | Machine No.23 | Machine No.24 | | |
| 269 | 1011000010 | | | | | | | | | | | |
| 270 | 0111000010 | | | | | | | | | | | |
| 271 | 1111000010 | | | | | | | | | | | |
| 272 | 0000100010 | | | | | | | | | | | |
| 273 | 1000100010 | | | | | | | | | | | |

| No | SW | Item | Display | | | | | | | | Remarks |
|-----|------------|-----------------------|---------|-----|-----|-----|-------------|-----|-----|-----|---------|
| | 1234567890 | | LD1 | LD2 | LD3 | LD4 | LD5 | LD6 | LD7 | LD8 | |
| 274 | 0100100010 | | | | | | | | | | |
| 275 | 1100100010 | | | | | | | | | | |
| 276 | 0010100010 | | | | | | | | | | |
| 277 | 1010100010 | | | | | | | | | | |
| 278 | 0110100010 | | | | | | | | | | |
| 279 | 1110100010 | | | | | | | | | | |
| 280 | 0001100010 | | | | | | | | | | |
| 281 | 1001100010 | | | | | | | | | | |
| 282 | 0101100010 | | | | | | | | | | |
| 283 | 1101100010 | | | | | | | | | | |
| 284 | 0011100010 | | | | | | | | | | |
| 285 | 1011100010 | | | | | | | | | | |
| 286 | 0111100010 | | | | | | | | | | |
| 287 | 1111100010 | | | | | | | | | | |
| 288 | 0000010010 | | | | | | | | | | |
| 289 | 1000010010 | | | | | | | | | | |
| 290 | 0100010010 | | | | | | | | | | |
| 291 | 1100010010 | | | | | | | | | | |
| 292 | 0010010010 | | | | | | | | | | |
| 293 | 1010010010 | | | | | | | | | | |
| 294 | 0110010010 | | | | | | | | | | |
| 295 | 1110010010 | | | | | | | | | | |
| 296 | 0001010010 | | | | | | | | | | |
| 297 | 1001010010 | | | | | | | | | | |
| 298 | 0101010010 | | | | | | | | | | |
| 299 | 1101010010 | | | | | | | | | | |
| 300 | 0011010010 | BC (master) TH11 data | | | | | -99.9~999.9 | | | | |
| 301 | 1011010010 | BC (master) TH12 data | | | | | ↑ | | | | |
| 302 | 0111010010 | BC (master) TH15 data | | | | | ↑ | | | | |
| 303 | 1111010010 | BC (master) TH16 data | | | | | ↑ | | | | |
| 304 | 0000110010 | BC (master) SC11 data | | | | | ↑ | | | | |
| 305 | 1000110010 | BC (master) SH12 data | | | | | ↑ | | | | |
| 306 | 0100110010 | BC (master) SC16 data | | | | | ↑ | | | | |
| 307 | 1100110010 | BC (master) LEV1 data | | | | | 0000~9999 | | | | |
| 308 | 0010110010 | BC (master) LEV3 data | | | | | ↑ | | | | |
| 309 | 1010110010 | | | | | | | | | | |
| 310 | 0110110010 | BC (slave) TH22 data | | | | | -99.9~999.9 | | | | |
| 311 | 1110110010 | BC (slave) TH25 data | | | | | ↑ | | | | |
| 312 | 0001110010 | BC (slave) LEV3a data | | | | | 0000~9999 | | | | |
| 313 | 1001110010 | | | | | | | | | | |
| 314 | 0101110010 | | | | | | | | | | |
| 315 | 1101110010 | | | | | | | | | | |
| 316 | 0011110010 | | | | | | | | | | |
| 317 | 1011110010 | | | | | | | | | | |
| 318 | 0111110010 | | | | | | | | | | |

| No | SW | Item | Display | | | | | | | | Remarks |
|-----|------------|------------------------------|-----------|-----|-----|-----|-----------|-----|-----|-----|---------|
| | 1234567890 | | LD1 | LD2 | LD3 | LD4 | LD5 | LD6 | LD7 | LD8 | |
| 319 | 1111110010 | | | | | | | | | | |
| 320 | 0000001010 | | | | | | | | | | |
| 321 | 1000001010 | | | | | | | | | | |
| 322 | 0100001010 | | | | | | | | | | |
| 323 | 1100001010 | | | | | | | | | | |
| 324 | 0010001010 | | | | | | | | | | |
| 325 | 1010001010 | | | | | | | | | | |
| 326 | 0110001010 | | | | | | | | | | |
| 327 | 1110001010 | | | | | | | | | | |
| 328 | 0001001010 | | | | | | | | | | |
| 329 | 1001001010 | | | | | | | | | | |
| 330 | 0101001010 | | | | | | | | | | |
| 331 | 1101001010 | | | | | | | | | | |
| 332 | 0011001010 | | | | | | | | | | |
| 333 | 1011001010 | | | | | | | | | | |
| 334 | 0111001010 | | | | | | | | | | |
| 335 | 1111001010 | | | | | | | | | | |
| 336 | 0000101010 | | | | | | | | | | |
| 337 | 1000101010 | IC17 address / capacity code | 0000~9999 | | | | 0000~9999 | | | | |
| 338 | 0100101010 | IC18 address / capacity code | ↑ | | | | ↑ | | | | |
| 339 | 1100101010 | IC19 address / capacity code | ↑ | | | | ↑ | | | | |
| 340 | 0010101010 | IC20 address / capacity code | ↑ | | | | ↑ | | | | |
| 341 | 1010101010 | IC21 address / capacity code | ↑ | | | | ↑ | | | | |
| 342 | 0110101010 | IC22 address / capacity code | ↑ | | | | ↑ | | | | |
| 343 | 1110101010 | IC23 address / capacity code | ↑ | | | | ↑ | | | | |
| 344 | 0001101010 | IC24 address / capacity code | ↑ | | | | ↑ | | | | |
| 345 | 1001101010 | | | | | | | | | | |
| 346 | 0101101010 | | | | | | | | | | |
| 347 | 1101101010 | | | | | | | | | | |
| 348 | 0011101010 | | | | | | | | | | |
| 349 | 1011101010 | | | | | | | | | | |
| 350 | 0111101010 | | | | | | | | | | |
| 351 | 1111101010 | | | | | | | | | | |
| 352 | 0000011010 | | | | | | | | | | |
| 353 | 1000011010 | | | | | | | | | | |
| 354 | 0100011010 | | | | | | | | | | |
| 355 | 1100011010 | | | | | | | | | | |
| 356 | 0010011010 | | | | | | | | | | |
| 357 | 1010011010 | | | | | | | | | | |
| 358 | 0110011010 | | | | | | | | | | |
| 359 | 1110011010 | | | | | | | | | | |
| 360 | 0001011010 | | | | | | | | | | |
| 361 | 1001011010 | | | | | | | | | | |
| 362 | 0101011010 | | | | | | | | | | |
| 363 | 1101011010 | | | | | | | | | | |

| No | SW | Item | Display | | | | | | | | Remarks |
|-----|------------|--------------------------------|---------|-----|-----|-----|-------------|-----|-----|-----|---------|
| | 1234567890 | | LD1 | LD2 | LD3 | LD4 | LD5 | LD6 | LD7 | LD8 | |
| 364 | 0011011010 | | | | | | | | | | |
| 365 | 1011011010 | | | | | | | | | | |
| 366 | 0111011010 | | | | | | | | | | |
| 367 | 1111011010 | | | | | | | | | | |
| 368 | 0000111010 | | | | | | | | | | |
| 369 | 1000111010 | | | | | | | | | | |
| 370 | 0100111010 | | | | | | | | | | |
| 371 | 1100111010 | | | | | | | | | | |
| 372 | 0010111010 | | | | | | | | | | |
| 373 | 1010111010 | | | | | | | | | | |
| 374 | 0110111010 | | | | | | | | | | |
| 375 | 1110111010 | | | | | | | | | | |
| 376 | 0001111010 | | | | | | | | | | |
| 377 | 1001111010 | | | | | | | | | | |
| 378 | 0101111010 | | | | | | | | | | |
| 379 | 1101111010 | | | | | | | | | | |
| 380 | 0011111010 | | | | | | | | | | |
| 381 | 1011111010 | | | | | | | | | | |
| 382 | 0111111010 | | | | | | | | | | |
| 383 | 1111111010 | | | | | | | | | | |
| 384 | 0000000110 | IC17 suction temperature | | | | | -99.9~999.9 | | | | |
| 385 | 1000000110 | IC18 suction temperature | | | | | ↑ | | | | |
| 386 | 0100000110 | IC19 suction temperature | | | | | ↑ | | | | |
| 387 | 1100000110 | IC20 suction temperature | | | | | ↑ | | | | |
| 388 | 0010000110 | IC21 suction temperature | | | | | ↑ | | | | |
| 389 | 1010000110 | IC22 suction temperature | | | | | ↑ | | | | |
| 390 | 0110000110 | IC23 suction temperature | | | | | ↑ | | | | |
| 391 | 1110000110 | IC24 suction temperature | | | | | ↑ | | | | |
| 392 | 0001000110 | | | | | | | | | | |
| 393 | 1001000110 | | | | | | | | | | |
| 394 | 0101000110 | | | | | | | | | | |
| 395 | 1101000110 | | | | | | | | | | |
| 396 | 0011000110 | | | | | | | | | | |
| 397 | 1011000110 | | | | | | | | | | |
| 398 | 0111000110 | | | | | | | | | | |
| 399 | 1111000110 | | | | | | | | | | |
| 400 | 0000100110 | IC17 liquid piping temperature | | | | | -99.9~999.9 | | | | |
| 401 | 1000100110 | IC18 liquid piping temperature | | | | | ↑ | | | | |
| 402 | 0100100110 | IC19 liquid piping temperature | | | | | ↑ | | | | |
| 403 | 1100100110 | IC20 liquid piping temperature | | | | | ↑ | | | | |
| 404 | 0010100110 | IC21 liquid piping temperature | | | | | ↑ | | | | |
| 405 | 1010100110 | IC22 liquid piping temperature | | | | | ↑ | | | | |
| 406 | 0110100110 | IC23 liquid piping temperature | | | | | ↑ | | | | |
| 407 | 1110100110 | IC24 liquid piping temperature | | | | | ↑ | | | | |
| 408 | 0001100110 | | | | | | | | | | |

| No | SW | Item | Display | | | | | | | | Remarks |
|-----|------------|-----------------------------|---------|-----|-----|-----|-------------|-----|-----|-----|---------|
| | 1234567890 | | LD1 | LD2 | LD3 | LD4 | LD5 | LD6 | LD7 | LD8 | |
| 409 | 1001100110 | | | | | | | | | | |
| 410 | 0101100110 | | | | | | | | | | |
| 411 | 1101100110 | | | | | | | | | | |
| 412 | 0011100110 | | | | | | | | | | |
| 413 | 1011100110 | | | | | | | | | | |
| 414 | 0111100110 | | | | | | | | | | |
| 415 | 1111100110 | | | | | | | | | | |
| 416 | 0000010110 | IC17 gas piping temperature | | | | | -99.9~999.9 | | | | |
| 417 | 1000010110 | IC18 gas piping temperature | | | | | ↑ | | | | |
| 418 | 0100010110 | IC19 gas piping temperature | | | | | ↑ | | | | |
| 419 | 1100010110 | IC20 gas piping temperature | | | | | ↑ | | | | |
| 420 | 0010010110 | IC21 gas piping temperature | | | | | ↑ | | | | |
| 421 | 1010010110 | IC22 gas piping temperature | | | | | ↑ | | | | |
| 422 | 0110010110 | IC23 gas piping temperature | | | | | ↑ | | | | |
| 423 | 1110010110 | IC24 gas piping temperature | | | | | ↑ | | | | |
| 424 | 0001010110 | | | | | | | | | | |
| 425 | 1001010110 | | | | | | | | | | |
| 426 | 0101010110 | | | | | | | | | | |
| 427 | 1101010110 | | | | | | | | | | |
| 428 | 0011010110 | | | | | | | | | | |
| 429 | 1011010110 | | | | | | | | | | |
| 430 | 0111010110 | | | | | | | | | | |
| 431 | 1111010110 | | | | | | | | | | |
| 432 | 0000110110 | IC17SH | | | | | -99.9~999.9 | | | | |
| 433 | 1000110110 | IC18SH | | | | | ↑ | | | | |
| 434 | 0100110110 | IC19SH | | | | | ↑ | | | | |
| 435 | 1100110110 | IC20SH | | | | | ↑ | | | | |
| 436 | 0010110110 | IC21SH | | | | | ↑ | | | | |
| 437 | 1010110110 | IC22SH | | | | | ↑ | | | | |
| 438 | 0110110110 | IC23SH | | | | | ↑ | | | | |
| 439 | 1110110110 | IC24SH | | | | | ↑ | | | | |
| 440 | 0001110110 | | | | | | | | | | |
| 441 | 1001110110 | | | | | | | | | | |
| 442 | 0101110110 | | | | | | | | | | |
| 443 | 1101110110 | | | | | | | | | | |
| 444 | 0011110110 | | | | | | | | | | |
| 445 | 1011110110 | | | | | | | | | | |
| 446 | 0111110110 | | | | | | | | | | |
| 447 | 1111110110 | | | | | | | | | | |
| 448 | 0000001110 | IC17SC | | | | | -99.9~999.9 | | | | |
| 449 | 1000001110 | IC18SC | | | | | ↑ | | | | |
| 450 | 0100001110 | IC19SC | | | | | ↑ | | | | |
| 451 | 1100001110 | IC20SC | | | | | ↑ | | | | |
| 452 | 0010001110 | IC21SC | | | | | ↑ | | | | |
| 453 | 1010001110 | IC22SC | | | | | ↑ | | | | |

| No | SW | Item | Display | | | | | | | | Remarks |
|-----|------------|---------------------|-------------------------------------------------------------------------------|-----|-----|-----|-----|-----|-----|-----|---------|
| | 1234567890 | | LD1 | LD2 | LD3 | LD4 | LD5 | LD6 | LD7 | LD8 | |
| 454 | 0110001110 | IC23SC | -99.9~999.9 | | | | | | | | |
| 455 | 1110001110 | IC24SC | ↑ | | | | | | | | |
| 456 | 0001001110 | | | | | | | | | | |
| 457 | 1001001110 | | | | | | | | | | |
| 458 | 0101001110 | | | | | | | | | | |
| 459 | 1101001110 | | | | | | | | | | |
| 460 | 0011001110 | | | | | | | | | | |
| 461 | 1011001110 | | | | | | | | | | |
| 462 | 0111001110 | | | | | | | | | | |
| 463 | 1111001110 | | | | | | | | | | |
| 464 | 0000101110 | IC17 LEV opening | 0000~9999 | | | | | | | | |
| 465 | 1000101110 | IC18 LEV opening | ↑ | | | | | | | | |
| 466 | 0100101110 | IC19 LEV opening | ↑ | | | | | | | | |
| 467 | 1100101110 | IC20 LEV opening | ↑ | | | | | | | | |
| 468 | 0010101110 | IC21 LEV opening | ↑ | | | | | | | | |
| 469 | 1010101110 | IC22 LEV opening | ↑ | | | | | | | | |
| 470 | 0110101110 | IC23 LEV opening | ↑ | | | | | | | | |
| 471 | 1110101110 | IC24 LEV opening | ↑ | | | | | | | | |
| 472 | 0001101110 | | | | | | | | | | |
| 473 | 1001101110 | | | | | | | | | | |
| 474 | 0101101110 | | | | | | | | | | |
| 475 | 1101101110 | | | | | | | | | | |
| 476 | 0011101110 | | | | | | | | | | |
| 477 | 1011101110 | | | | | | | | | | |
| 478 | 0111101110 | | | | | | | | | | |
| 479 | 1111101110 | | | | | | | | | | |
| 480 | 0000011110 | IC17 opeartion mode | 0000: Stop 0001: Fanning 0002: Cooling 0003: Heating 0004: Drying | | | | | | | | |
| 481 | 1000011110 | IC18 opeartion mode | | | | | | | | | |
| 482 | 0100011110 | IC19 opeartion mode | | | | | | | | | |
| 483 | 1100011110 | IC20 opeartion mode | | | | | | | | | |
| 484 | 0010011110 | IC21 opeartion mode | | | | | | | | | |
| 485 | 1010011110 | IC22 opeartion mode | | | | | | | | | |
| 486 | 0110011110 | IC23 opeartion mode | | | | | | | | | |
| 487 | 1110011110 | IC24 opeartion mode | | | | | | | | | |
| 488 | 0001011110 | | | | | | | | | | |
| 489 | 1001011110 | | | | | | | | | | |
| 490 | 0101011110 | | | | | | | | | | |
| 491 | 1101011110 | | | | | | | | | | |
| 492 | 0011011110 | | | | | | | | | | |
| 493 | 1011011110 | | | | | | | | | | |
| 494 | 0111011110 | | | | | | | | | | |
| 495 | 1111011110 | | | | | | | | | | |
| 496 | 0000111110 | IC17 filter | 0000~9999 | | | | | | | | |
| 497 | 1000111110 | IC18 filter | ↑ | | | | | | | | |
| 498 | 0100111110 | IC19 filter | ↑ | | | | | | | | |

| No | SW | Item | Display | | | | | | | | Remarks |
|-----|------------|-------------|-----------|-----|-----|-----|-----|-----|-----|-----|---------|
| | 1234567890 | | LD1 | LD2 | LD3 | LD4 | LD5 | LD6 | LD7 | LD8 | |
| 499 | 1100111110 | IC20 filter | 0000~9999 | | | | | | | | |
| 500 | 0010111110 | IC21 filter | ↑ | | | | | | | | |
| 501 | 1010111110 | IC22 filter | ↑ | | | | | | | | |
| 502 | 0110111110 | IC23 filter | ↑ | | | | | | | | |
| 503 | 1110111110 | IC24 filter | ↑ | | | | | | | | |
| 504 | 0001111110 | | | | | | | | | | |
| 505 | 1001111110 | | | | | | | | | | |
| 506 | 0101111110 | | | | | | | | | | |
| 507 | 1101111110 | | | | | | | | | | |
| 508 | 0011111110 | | | | | | | | | | |
| 509 | 1011111110 | | | | | | | | | | |
| 510 | 0111111110 | | | | | | | | | | |
| 511 | 1111111110 | | | | | | | | | | |

8 PREPARATION, REPAIRS AND REFRIGERANT REFILLING WHEN REPAIRING LEAKS

[1] Location of leaks: Extension piping or indoor units (when cooling)

(Pump down operation)

- ① Attach a pressure gage to the low-pressure servicing check joint (CJ2).
- ② Stop all of the indoor units. When the compressor has stopped, shut off the liquid ball valve (BV2) for the outdoor unit.
- ③ Stop all of the indoor units. When the compressor has stopped, turn the SW3-6 switch on the main board for the outdoor unit to ON. (This will start the pump down operation causing all of the indoor units to enter the cooling mode.)
- ④ While in the pump down operation (SW3-6 ON), the low pressure (LPS) will reach below at least 2 kg/cm²G (0.20 MPa) or the indoor unit and the compressor will automatically shut down within 15 minutes of starting the pump down operation. Shut down all of the indoor units and the compressor if the pressure gage for the low-pressure servicing joint (CJ2) reads 1.5 kg/cm²G (0.15 MPa) or after running the pump down operation for 20 minutes.
- ⑤ Shut off the gas ball valve (BV1) for the outdoor unit.
- ⑥ Remove any refrigerant remaining in the extension piping and the indoor units.
Be sure to recover the refrigerant without releasing it into the air.
- ⑦ Repair the location of the leak.
- ⑧ After repairing the leak, create a vacuum to remove any air from inside of the extension piping or the indoor units.
- ⑨ Open the ball valves for the outdoor unit (BV1 and BV2), turn the SW3-6 switch to OFF, adjust refrigerant levels and confirm proper circulation.

[2] Location of leaks: Outdoor unit (Cooling mode)

- ① Test run all indoor units in cooling mode.
 1. With SW3-1 on the MAIN board of the outdoor unit set to ON and SW3-2 OFF → ON to test run all indoor units.
 2. Change the remote controller settings so that all indoor units run in cooling mode.
 3. Check that all indoor units are running in cooling mode.
- ② Check the Tc and SC16 data.
(The LED monitor switch (SW1) on the MAIN board of the outdoor unit can be used to display this data on the LED.)
 1. If SC16 is 10 degrees or more Continue to step ③.
 2. If SC16 is less than 10 degrees After stopping the compressor, remove any refrigerant, repair the leak point, then extract the air to create a vacuum and refill with new refrigerant (same procedure as 4. Location of leaks: Outdoor unit (when heating)).

[Tc LED monitor switch]



[SC16 LED monitor switch]



- ③ Stop all indoor units and the compressor.
 1. With SW3-1 on the MAIN board of the outdoor unit set to ON and SW3-2 ON → OFF to stop all indoor units and the compressor.
 2. Check that all indoor units have been stopped.
- ④ Close both ball valves (BV1 and BV2).
- ⑤ Remove a small amount of refrigerant from the liquid ball valve (BV2) check joint. If this operation is not performed, remaining refrigerant may cause the unit to malfunction.
- ⑥ Remove any refrigerant remaining in the outdoor unit.
Reclaim the refrigerant; do not discharge it into the air.
- ⑦ Repair the leak point.
- ⑧ After the leak point is repaired, change the dryer and extract all of the air from the outdoor unit to create a vacuum.
- ⑨ Open both ball valves (BV1 and BV2) on the outdoor unit, then adjust the refrigerant amount and verify that the refrigerant is circulating properly.



[3] Location of leaks: Extension piping or indoor units (Heating mode)

- ① Test run all indoor units in heating mode.
 1. With SW3-1 on the MAIN board of the outdoor unit set to ON and SW3-2 OFF → ON to test run all indoor units.
 2. Change the remote controller settings so that all indoor units run in heating mode.
 3. Check that all indoor units are running in heating mode.
- ② Stop all indoor units and the compressor.
 1. With SW3-1 on the MAIN board of the outdoor unit set to ON and SW3-2 ON → OFF to stop all indoor units and the compressor.
 2. Check that all indoor units have been stopped.
- ③ Close both ball valves (BV1 and BV2).
- ④ Remove any refrigerant remaining in the extension piping or the indoor units.
Reclaim the refrigerant; do not discharge it into the air.
- ⑤ Repair the leaks.
- ⑥ After the leaks are repaired, extract all air from the extension piping and the indoor units to create a vacuum.
Then, open both ball valves (BV1 and BV2), then adjust the refrigerant amount and verify that the refrigerant is circulating properly.

[4] Location of leaks: Outdoor unit (when heating)

- ① Remove any refrigerant from the entire system (outdoor unit, extension piping and indoor units). Reclaim the refrigerant; do not discharge it into the air.
- ② Repair the leaks.
- ③ After the leaks are repaired, replace the dryer with a new one and extract all of the air from the entire system to create a vacuum. Then, refill with refrigerant until it reaches the calculated specification (outdoor unit + extension piping + indoor units). Refer to “Chapter 6” for more details.

9 CHECK THE COMPOSITION OF THE REFRIGERANT

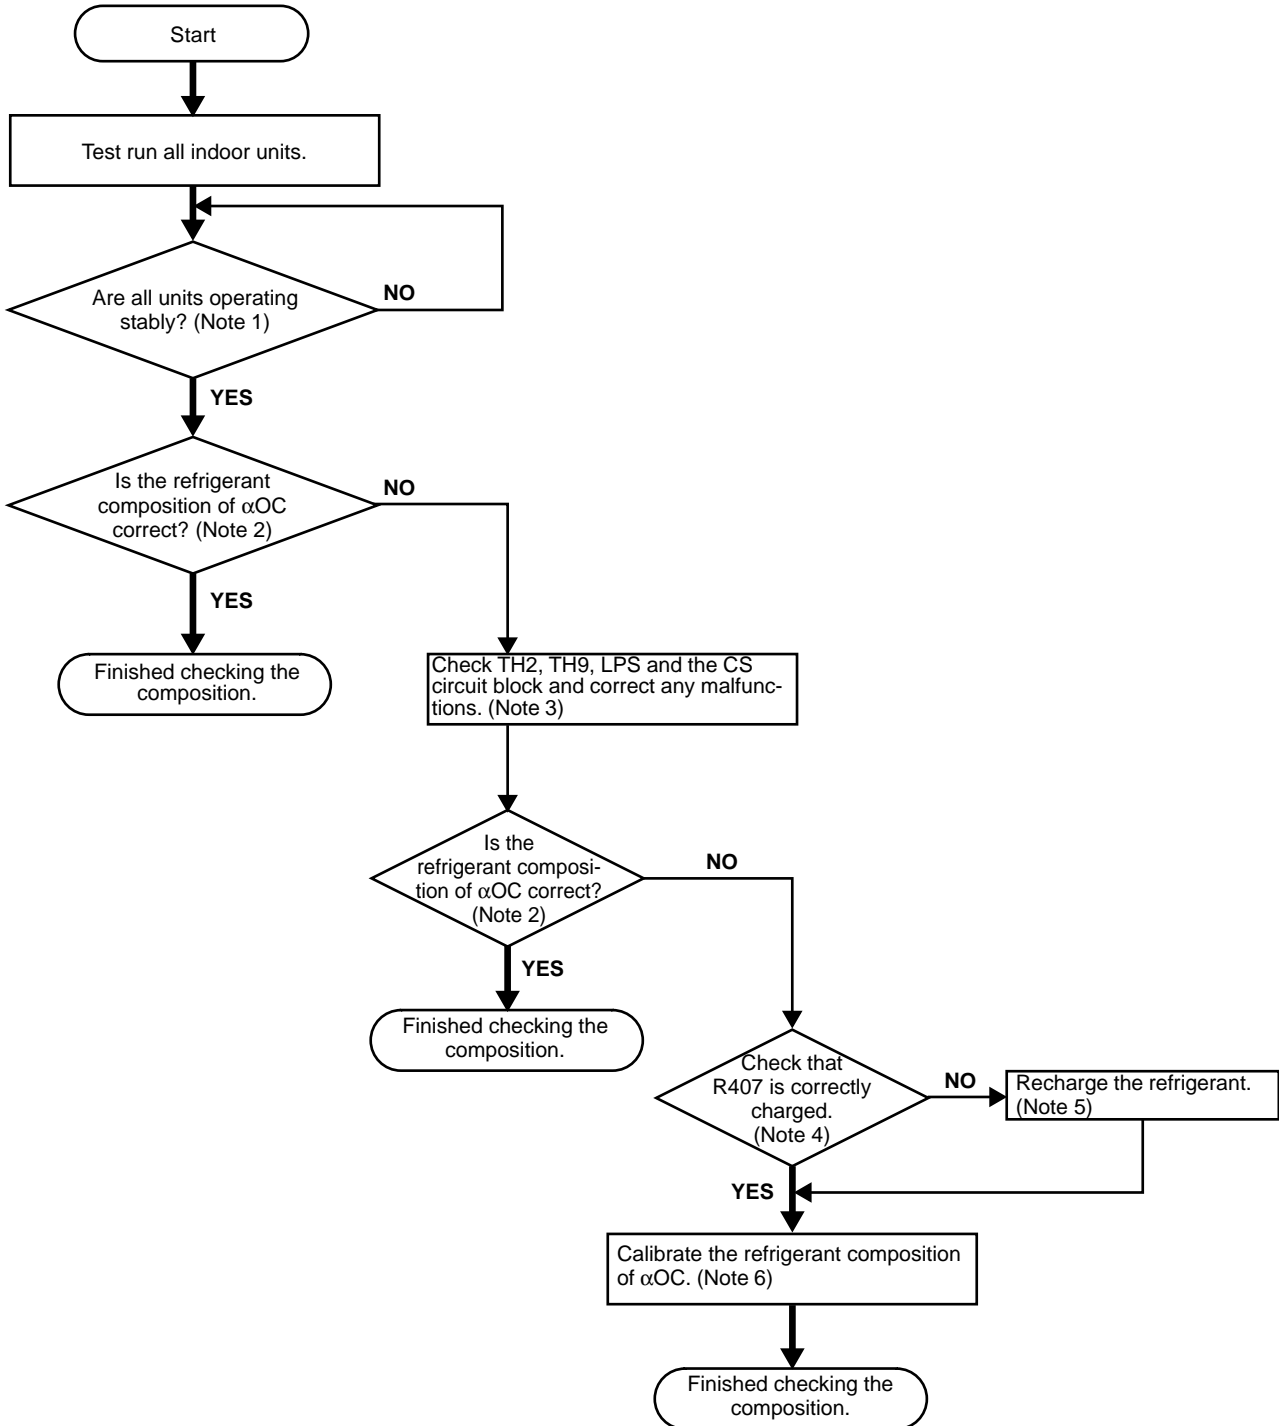

Note 1 Wait until the units stabilize as described in the refrigerant amount adjustment procedure in “Chapter 6”.

Note 2 After the units are operating stably, check that the refrigerant composition of α OC is within the following ranges, indicating that the composition check is finished.


If the accumulator liquid level AL = 0 when cooling: α OC = 0.20 ~ 0.26

If the accumulator liquid level AL = 1 when cooling: α OC = 0.23 ~ 0.34

When heating: α OC = 0.25 ~ 0.34

(The self-diagnosis switch (SW1) on the main board of the outdoor unit can be used to display this data on the LED.)

[α OC self-diagnosis switch]



Note 3 TH2 and TH9: Check and make any corrections using the same method as that for a faulty temperature sensor, (refer to TROUBLESHOOTING).

LPS: Check and make any corrections using the same method as that for a faulty low pressure sensor, (refer to TROUBLESHOOTING).

CS circuit block: Set the self-diagnosis switch on the outdoor MAIN board as shown below.



- Check and make any corrections so that “0” is displayed.
- If any number other than 0 is displayed and TH2, TH9 or LPS are malfunctioning, correct them, then set SW2-9 on the MAIN board of the outdoor unit from OFF to ON.
- If any number other than 0 is displayed and TH2, TH9 or LPS are not malfunctioning, replace the CS circuit if refrigerant is not flowing through it (while operating) and set SW2-9 on the MAIN board of the outdoor unit from OFF to ON.

Note 4 If it can be verified that R407C was correctly charged in the liquid phase, continue to Yes. If there is a possibility that it was not charged correctly, such as with a gas charger, continue to No.

Note 5 After reclaiming the system’s refrigerant, extract the air to create a vacuum, then refill with new refrigerant. Be sure to charge in the liquid phase. In addition, be sure to change the dryer.

Note 6 After the units are operating stably, check that the refrigerant composition of α OC is within the following ranges, indicating that the circulation check is finished.

If the accumulator liquid level AL = 0 when cooling: α OC = 0.21 ~ 0.25

If the accumulator liquid level AL = 1 when cooling: α OC = 0.24 ~ 0.28

When heating: α OC = 0.27 ~ 0.31

If the refrigerant composition of α OC is not within the ranges specified above, a large error has been detected. Refer to section 1-3 in Chapter 6, then after setting SW4-1 on the MAIN board of the outdoor unit to ON, calibrate the refrigerant circulation constant α OC with SW4-2 until it is within the ranges specified above.

After calibrating, keep the SW4-1 ON and finish the circulation check.

<Example calibration of the refrigerant circulation constant α OC>

Conditions: If the accumulator liquid level AL = 0 and α OC = 0.29 when cooling, α OC must be adjusted so that it is between 0.21 and 0.25.

By switching SW4-2 between ON and OFF, adjustments can be made in the following order:

0 → 3% → 6% → 9% → 12% → -6% → -3% → 0

For this example, by making an adjustment of -0.06 (-6%), α OC can be adjusted to 0.23.

1. If SW4-2 is already set to OFF, change the switch 5 times.
OFF (0.29) → ON (0.32) → OFF (0.35) → ON (0.38) → OFF (0.41) → ON (0.23)
2. If SW4-2 is already set to ON, change the switch 5 times.
ON (0.29) → OFF (0.32) → ON (0.35) → OFF (0.38) → ON (0.41) → OFF (0.23)

Service Handbook PURY-P400, P500YMF-C



HEAD OFFICE MITSUBISHI DENKI BLDG. MARUNOUCHI TOKYO 100-0005 TELEX J24532 CABLE MELCO TOKYO
