

Revision P:

- Setting when using piping has been added (11-9).
- Some descriptions have been modified.

OBH790 REVISED EDITION-N is void.

OUTDOOR UNIT

SERVICE MANUAL


**No. OBH790
REVISED EDITION-P**


Models

MXZ-2F33VF - E1, ET1
 MXZ-2F33VF2 - E1, ET1
 MXZ-2F33VF3 - E1, ET1, ER1, E2
 MXZ-2F33VF4 - E1, ET1
 MXZ-2F42VF - E1, ET1
 MXZ-2F42VF2 - E1, ET1
 MXZ-2F42VF3 - E1, ET1, ER1, E2
 MXZ-2F42VF4 - E1, ET1
 MXZ-2F53VF - E1, ET1
 MXZ-2F53VF2 - E1, ET1
 MXZ-2F53VF3 - E1, ET1, ER1, E2
 MXZ-2F53VF4 - E1, ET1
 MXZ-2F53V FH - E1
 MXZ-2F53V FH2 - E1
 MXZ-2F53V FH3 - E1, E2
 MXZ-2F53V FH4 - E1
 MXZ-3F54VF - E1, ET1, E2, ET2
 MXZ-3F54VF2 - E1, ET1
 MXZ-3F54VF3 - E1, ET1, ER1, E2, ET2, ER2
 MXZ-3F54VF4 - E1, ET1

MXZ-3F68VF - E1, ET1, E2, ET2
 MXZ-3F68VF2 - E1, ET1
 MXZ-3F68VF3 - E1, ET1, ER1
 MXZ-3F68VF4 - E1, ET1
 MXZ-4F72VF - E1, ET1, E2, ET2
 MXZ-4F72VF2 - E1, ET1
 MXZ-4F72VF3 - E1, ET1, ER1
 MXZ-4F72VF4 - E1, ET1
 MXZ-4F80VF2 - E1, ET1
 MXZ-4F80VF3 - E1, ET1
 MXZ-4F80VF4 - E1, ET1
 MXZ-4F83VF - E1, ET1, ER1
 MXZ-4F83VF2 - E1, ET1
 MXZ-5F102VF - E1, ET1, ER1
 MXZ-5F102VF2 - E1, ET1
 MXZ-6F120VF2 - E1, ET1
 MXZ-6F122VF - E1, ET1, ER1
 MXZ-2F53V FHZ - E1, ER1
 MXZ-2F53V FHZ2 - E1
 MXZ-4F83V FHZ - E1, ER1
 MXZ-4F83V FHZ2 - E1

Indoor unit service manual

MSZ-LN•VG Series (OBH766)	MSZ-AY•VG Series (OBH930, 932)	SLZ-M•FA Series (OCH522)
MSZ-LN•VG2 Series (OBH766)	MSZ-FT•VG Series (OBH864)	SEZ-M•DA Series (HWE17040)
MSZ-EF•VG Series (OBH589)	MLZ-KP•VF Series (OBH801)	SFZ-M•VA Series (HWE19090)
MSZ-AP•VF Series (OBH799)	MLZ-KP•VG Series (OBH801)	PCA-M•KA Series (OCH659)
MSZ-AP•VG Series (OBH788)	MFZ-KT•VG Series (OBH843)	PEAD-M•JA(L) Series (HWE16130)
MSZ-BT•VG Series (OBH849)	MLZ-KY•VG Series (OBH921)	PEAD-M•JA(L)2 Series (HWE21070)

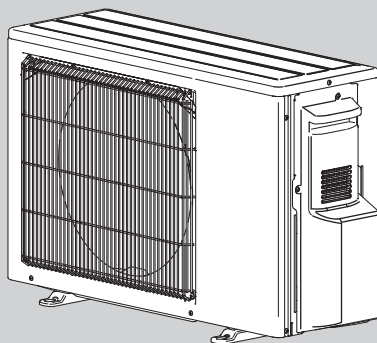

MXZ-2F33VF	MXZ-2F33VF2	MXZ-2F33VF3	MXZ-2F33VF4
MXZ-2F42VF	MXZ-2F42VF2	MXZ-2F42VF3	MXZ-2F42VF4
MXZ-2F53VF	MXZ-2F53VF2	MXZ-2F53VF3	MXZ-2F53VF4
MXZ-2F53V FH	MXZ-2F53V FH2	MXZ-2F53V FH3	MXZ-2F53V FH4

CONTENTS

• INDOOR / OUTDOOR UNIT COMPATIBILITY TABLE	4
1. TECHNICAL CHANGES	7
2. SAFETY PRECAUTION	9
3. PART NAMES AND FUNCTIONS	19
4. SPECIFICATION	21
5. NOISE CRITERIA CURVES	58
6. OUTLINES AND DIMENSIONS	62
7. WIRING DIAGRAM	70
8. REFRIGERANT SYSTEM DIAGRAM	111
9. PERFORMANCE CURVES	122
10. ACTUATOR CONTROL	171
11. SERVICE FUNCTIONS	172
12. TROUBLESHOOTING	179
13. DISASSEMBLY INSTRUCTIONS	214

PARTS CATALOG (OBB790)

Use the specified refrigerant only

Never use any refrigerant other than that specified.

Doing so may cause a burst, an explosion, or fire when the unit is being used, serviced, or disposed of.

Correct refrigerant is specified in the manuals and on the spec labels provided with our products.

We will not be held responsible for mechanical failure, system malfunction, unit breakdown or accidents caused by failure to follow the instructions.

<Preparation before the repair service>

- Prepare the proper tools.
- Prepare the proper protectors.
- Provide adequate ventilation.
- After stopping the operation of the air conditioner, turn off the power-supply breaker and pull the power plug.
- Discharge the capacitor before the work involving the electric parts.

<Precautions during the repair service>

- Do not perform the work involving the electric parts with wet hands.
- Do not pour water into the electric parts.
- Do not touch the refrigerant.
- Do not touch the hot or cold areas in the refrigeration cycle.
- When the repair or the inspection of the circuit needs to be done without turning off the power, exercise great caution not to touch the live parts.

WARNING

- **When the refrigerant circuit has a leak, do not execute pump down with the compressor.**
- **When pumping down the refrigerant, stop the compressor before disconnecting the refrigerant pipes. The compressor may burst if air etc. get into it.**
- **When opening or closing the valve below freezing temperatures, refrigerant may spurt out from the gap between the valve stem and the valve body, resulting in injuries.**

Revision A:

- MXZ-3F54VF - [E2], [ET2], MXZ-3F68VF - [E2], [ET2] and MXZ-4F72VF - [E2], [ET2] have been added.

Revision B:

- MXZ-3F54VF2 - [E1], [ET1], MXZ-3F68VF2 - [E1], [ET1], MXZ-4F72VF2 - [E1], [ET1] and MXZ-4F80VF2 - [E1], [ET1] have been added.

Revision C:

- MXZ-2F33VF2 - [E1], [ET1], MXZ-2F42VF2 - [E1], [ET1], MXZ-2F53VF2 - [E1], [ET1] and MXZ-2F53VFH2 - [E1] have been added.

Revision D:

- MXZ-2F33VF3 - [E1], [ET1], MXZ-2F42VF3 - [E1], [ET1], MXZ-2F53VF3 - [E1], [ET1], MXZ-2F53VFH3 - [E1], MXZ-3F54VF3 - [E1], [ET1], MXZ-3F68VF3 - [E1], [ET1], MXZ-4F72VF3 - [E1], [ET1] and MXZ-4F80VF3 - [E1], [ET1] have been added.

Revision E:

- MXZ-4F83VF - [E1], [ET1], MXZ-5F102VF - [E1], [ET1], MXZ-6F122VF - [E1], [ET1], MXZ-2F53VFHZ - [E1] and MXZ-4F83VFHZ - [E1] have been added.

Revision F:

- Chart of heating capacity and total input for MXZ-4F83VFHZ - [E1] have been added.
- Outdoor unit power supply for MXZ-4F83VF - [ET1] and MXZ-5F102VF - [ET1] have been added.

Revision G:

- MXZ-2F33/42/53VF3 - [E2] and MXZ-2F53VFH3 - [E2] have been added.

Revision H:

- MXZ-2F33/42/53VF3 - [ER1], MXZ-3F54/68VF3 - [ER1], MXZ-4F72VF3 - [ER1], MXZ-4F83VF - [ER1], MXZ-5F102VF - [ER1], MXZ-6F122VF - [ER1], MXZ-2F53VFHZ - [ER1] and MXZ-4F83VFHZ - [ER1] have been added.

Revision J:

- MXZ-3F54VF3 - [E2], [ET2], [ER2] have been added.

Revision K:

- INDOOR / OUTDOOR UNIT COMPATIBILITY TABLE has been modified.

Revision L:

- MXZ-2F33/42/53VF4 - [E1], [ET1], MXZ-2F53VFH4 - [E1], MXZ-3F54/68VF4 - [E1], [ET1], MXZ-4F72/80VF4 - [E1], [ET1], MXZ-4F83VF2 - [E1], [ET1], MXZ-5F102VF2 - [E1], [ET1], MXZ-6F120VF2 - [E1], [ET1], MXZ-2F53VFH2 - [E1] and MXZ-4F83VFH2 - [E1] have been added.

Revision M:


- 8. REFRIGERANT SYSTEM DIAGRAM has been corrected.

Revision N:

- INDOOR / OUTDOOR UNIT COMPATIBILITY TABLE has been modified.

Revision P:

- Setting when using piping has been added (11-9).
- Some descriptions have been modified.



<MXZ-3F54VF>

Table with columns: Model type, Model name, Capacity class [kW/h] (15, 18, 20, 22, 25, 35, 42, 50, 60, 71). Rows include Wall mounted, 1way cassette, 4way cassette, Ceiling concealed, Ceiling suspended.

*1: Models with service sub number -[E2]/[ET2] are connectable.

<MXZ-3F54VF2>

Table with columns: Model type, Model name, Capacity class [kW/h] (15, 18, 20, 22, 25, 35, 42, 50, 60, 71). Rows include Wall mounted, 1way cassette, Floor standing, 4way cassette, Ceiling concealed, Ceiling suspended.

<MXZ-3F54VF3>

Table with columns: Model type, Model name, Capacity class [kW/h] (15, 18, 20, 22, 25, 35, 42, 50, 60, 71). Rows include Wall mounted, 1way cassette, Floor standing, 4way cassette, Ceiling concealed, Ceiling suspended.

<MXZ-3F54VF4>

Table with columns: Model type, Model name, Capacity class [kW/h] (15, 18, 20, 22, 25, 35, 42, 50, 60, 71). Rows include Wall mounted, 1way cassette, Floor standing, 4way cassette, Ceiling concealed, Ceiling suspended.

<MXZ-3F68VF / MXZ-4F72VF>

Table with columns: Model type, Model name, Capacity class [kW/h] (15, 18, 20, 22, 25, 35, 42, 50, 60, 71). Rows include Wall mounted, 1way cassette, 4way cassette, Ceiling concealed, Ceiling suspended.

*1: Models with service sub number -[E2]/[ET2] are connectable.

<MXZ-3F68VF2 / MXZ-4F72VF2 / MXZ-4F80VF2>

Table with columns: Model type, Model name, Capacity class [kW/h] (15, 18, 20, 22, 25, 35, 42, 50, 60, 71). Rows include Wall mounted, 1way cassette, Floor standing, 4way cassette, Ceiling concealed, Ceiling suspended.

<MXZ-3F68VF3 / MXZ-4F72VF3 / MXZ-4F80VF3>

Table with columns: Model type, Model name, Capacity class [kW/h] (15, 18, 20, 22, 25, 35, 42, 50, 60, 71). Rows include Wall mounted, 1way cassette, Floor standing, 4way cassette, Ceiling concealed, Ceiling suspended.

<MXZ-3F68VF4 / MXZ-4F72VF4 / MXZ-4F80VF4>

Table with columns: Model type, Model name, Capacity class [kW/h] (15, 18, 20, 22, 25, 35, 42, 50, 60, 71). Rows include Wall mounted, 1way cassette, Floor standing, 4way cassette, Ceiling concealed, Ceiling suspended.

<MXZ-4F83VF / MXZ-5F102VF / MXZ-6F122VF>

Table with columns: Model type, Model name, Capacity class [kW/h] (15, 18, 20, 22, 25, 35, 42, 50, 60, 71). Rows include Wall mounted, 1way cassette, Floor standing, 4way cassette, Ceiling concealed.

<MXZ-4F83VF2 / MXZ-5F102VF2 / MXZ-6F120VF2>

Table with columns: Model type, Model name, Capacity class [kW/h] (15, 18, 20, 22, 25, 35, 42, 50, 60, 71). Rows include Wall mounted, 1way cassette, Floor standing, 4way cassette, Ceiling concealed.



<MXZ-2F53VFHZ>

Connectable indoor unit lineups (Heat pump inverter type)		Capacity class [kW/h]									
Model type	Model name	15	18	20	22	25	35	42	50	60	71
Wall mounted	MSZ-LN**VG2	●				●	●				
	MSZ-RW**VG					●	●				
	MSZ-BT**VG			●		●	●				
	MSZ-EF**VG	●	●	●	●	●	●	●			
	MSZ-AP**VG	●	●	●	●	●	●	●	●		
	MSZ-AY**VG					●	●	●	●		
MSZ-FT**VG					●	●					
1way cassette	MLZ-KP**VF					●	●				
Floor standing	MFZ-KT**VG					●	●				
	SFZ-M**VA					●	●				
4way cassette	SLZ-M**FA	●				●	●				
	SLZ-M**FA2	●				●	●				
Ceiling concealed	SEZ-M**DA(L)					●	●				
	SEZ-M**DA(L)2					●	●				

<MXZ-2F53VFHZ2>

Connectable indoor unit lineups (Heat pump inverter type)		Capacity class [kW/h]									
Model type	Model name	15	18	20	22	25	35	42	50	60	71
Wall mounted	MSZ-LN**VG2	●				●	●				
	MSZ-RW**VG					●	●				
	MSZ-BT**VG			●		●	●				
	MSZ-EF**VG	●	●	●	●	●	●	●			
	MSZ-AP**VG	●	●	●	●	●	●	●	●		
	MSZ-AY**VG(K)(P)	●	●	●	●	●	●	●	●		
	MSZ-FT**VG					●	●				
1way cassette	MLZ-KP**VF					●	●				
	MLZ-KP**VG					●	●				
	MLZ-KY**VG			●							
Floor standing	MFZ-KT**VG					●	●				
	SFZ-M**VA					●	●				
4way cassette	SLZ-M**FA	●				●	●				
	SLZ-M**FA2	●				●	●				
Ceiling concealed	SEZ-M**DA(L)					●	●				
	SEZ-M**DA(L)2					●	●				

<MXZ-4F83VFHZ>

Connectable indoor unit lineups (Heat pump inverter type)		Capacity class [kW/h]									
Model type	Model name	15	18	20	22	25	35	42	50	60	71
Wall mounted	MSZ-LN**VG2	●				●	●				
	MSZ-RW**VG					●	●				
	MSZ-BT**VG			●		●	●				
	MSZ-EF**VG	●	●	●	●	●	●	●			
	MSZ-AP**VG	●	●	●	●	●	●	●	●	●	
	MSZ-AY**VG					●	●	●	●		
MSZ-FT**VG					●	●					
1way cassette	MLZ-KP**VF					●	●				
Floor standing	MFZ-KT**VG					●	●				
	SFZ-M**VA					●	●				
	SLZ-M**FA	●				●	●				
4way cassette	SLZ-M**FA2	●				●	●				
	SEZ-M**DA(L)					●	●				
Ceiling concealed	SEZ-M**DA(L)2					●	●				

<MXZ-4F83VFHZ2>

Connectable indoor unit lineups (Heat pump inverter type)		Capacity class [kW/h]									
Model type	Model name	15	18	20	22	25	35	42	50	60	71
Wall mounted	MSZ-LN**VG2	●				●	●				
	MSZ-RW**VG					●	●				
	MSZ-BT**VG			●		●	●				
	MSZ-EF**VG	●	●	●	●	●	●	●			
	MSZ-AP**VG	●	●	●	●	●	●	●	●	●	
	MSZ-AY**VG(K)(P)	●	●	●	●	●	●	●	●	●	
	MSZ-FT**VG					●	●				
1way cassette	MLZ-KP**VF					●	●				
	MLZ-KP**VG					●	●				
	MLZ-KY**VG			●							
Floor standing	MFZ-KT**VG					●	●				
	SFZ-M**VA					●	●				
4way cassette	SLZ-M**FA	●				●	●				
	SLZ-M**FA2	●				●	●				
Ceiling concealed	SEZ-M**DA(L)					●	●				
	SEZ-M**DA(L)2					●	●				
	PEAD-M**JA(L)2					●	●				

MXZ-2F33VF - [E1], [ET1]

MXZ-2F42VF - [E1], [ET1]

MXZ-2F53VF - [E1], [ET1]

MXZ-2F53VFH - [E1]

MXZ-3F54VF - [E1], [ET1]

MXZ-3F68VF - [E1], [ET1]

MXZ-4F72VF - [E1], [ET1]

MXZ-4F83VF - [E1], [ET1], [ER1]

MXZ-5F102VF - [E1], [ET1], [ER1]

MXZ-6F122VF - [E1], [ET1], [ER1]

MXZ-2F53V FHZ - [E1], [ER1]

MXZ-4F83V FHZ - [E1], [ER1]

1. New model

MXZ-3F54VF - [E1], [ET1] → **MXZ-3F54VF** - [E2], [ET2]

MXZ-3F68VF - [E1], [ET1] → **MXZ-3F68VF** - [E2], [ET2]

MXZ-4F72VF - [E1], [ET1] → **MXZ-4F72VF** - [E2], [ET2]

1. LEV-R has been changed.

2. Outdoor control P. C. board has been changed.

MXZ-3F54VF - [E2], [ET2] → **MXZ-3F54VF2** - [E1], [ET1]

MXZ-3F68VF - [E2], [ET2] → **MXZ-3F68VF2** - [E1], [ET1]

MXZ-4F72VF - [E2], [ET2] → **MXZ-4F72VF2** - [E1], [ET1]

1. Pre charged refrigerant amount and additional refrigerant amount have been changed.

2. Outdoor control P.C. board has been changed.

3. Power board has been changed.

4. LEV R has been changed.

MXZ-4F80VF2 - [E1], [ET1]

1. New model

MXZ-2F33VF - [E1], [ET1] → **MXZ-2F33VF2** - [E1], [ET1]

MXZ-2F42VF - [E1], [ET1] → **MXZ-2F42VF2** - [E1], [ET1]

MXZ-2F53VF - [E1], [ET1] → **MXZ-2F53VF2** - [E1], [ET1]

MXZ-2F53VFH - [E1] → **MXZ-2F53VFH2** - [E1], [ET1]

1. Outdoor control P.C. board has been changed.

2. Outdoor fan motor has been changed.

MXZ-2F33VF2 - [E1], [ET1] → **MXZ-2F33VF3** - [E1], [ET1]

MXZ-2F42VF2 - [E1], [ET1] → **MXZ-2F42VF3** - [E1], [ET1]

MXZ-2F53VF2 - [E1], [ET1] → **MXZ-2F53VF3** - [E1], [ET1]

MXZ-2F53V FH2 - [E1] → **MXZ-2F53V FH3** - [E1]

MXZ-3F54VF2 - [E1], [ET1] → **MXZ-3F54VF3** - [E1], [ET1]

MXZ-3F68VF2 - [E1], [ET1] → **MXZ-3F68VF3** - [E1], [ET1]

MXZ-4F72VF2 - [E1], [ET1] → **MXZ-4F72VF3** - [E1], [ET1]

MXZ-4F80VF2 - [E1], [ET1] → **MXZ-4F80VF3** - [E1], [ET1]

MXZ-2F33VF3 - [E1] → **MXZ-2F33VF3** - [E2]

MXZ-2F42VF3 - [E1] → **MXZ-2F42VF3** - [E2]

MXZ-2F53VF3 - [E1] → **MXZ-2F53VF3** - [E2]

MXZ-2F53V FH3 - [E1] → **MXZ-2F53V FH3** - [E2]

1. Model name has been changed.

MXZ-2F33VF3 -^[E1]

MXZ-2F42VF3 -^[E1]

MXZ-2F53VF3 -^[E1]

MXZ-3F54VF3 -^[E1]

MXZ-3F68VF3 -^[E1]

MXZ-4F72VF3 -^[E1]

1. New model

MXZ-3F54VF3 -^[E1], ^[ET1], ^[ER1] → MXZ-3F54VF3 -^[E2], ^[ET2], ^[ER2]

1. Outdoor control P.C. board has been changed.

2. Outdoor fan motor has been changed.

MXZ-2F33VF3 -^[E1], ^[ET1] → MXZ-2F33VF4 -^[E1], ^[ET1]

MXZ-2F42VF3 -^[E1], ^[ET1] → MXZ-2F42VF4 -^[E1], ^[ET1]

MXZ-2F53VF3 -^[E1], ^[ET1] → MXZ-2F53VF4 -^[E1], ^[ET1]

MXZ-2F53VFH3 -^[E1] → MXZ-2F53VFH4 -^[E1]

MXZ-3F54VF3 -^[E1], ^[ET1] → MXZ-3F54VF4 -^[E1], ^[ET1]

MXZ-3F68VF3 -^[E1], ^[ET1] → MXZ-3F68VF4 -^[E1], ^[ET1]

MXZ-4F72VF3 -^[E1], ^[ET1] → MXZ-4F72VF4 -^[E1], ^[ET1]

MXZ-4F80VF3 -^[E1], ^[ET1] → MXZ-4F80VF4 -^[E1], ^[ET1]

MXZ-4F83VF -^[E1], ^[ET1] → MXZ-4F83VF2 -^[E1], ^[ET1]

MXZ-5F102VF -^[E1], ^[ET1] → MXZ-5F102VF2 -^[E1], ^[ET1]






MXZ-6F122VF -^[E1], ^[ET1] → MXZ-6F120VF2 -^[E1], ^[ET1]

MXZ-2F53VFHZ -^[E1] → MXZ-2F53VFHZ2 -^[E1]

MXZ-4F83VFHZ -^[E1] → MXZ-4F83VFHZ2 -^[E1]

1. New model

MEANINGS OF SYMBOLS DISPLAYED ON THE UNIT

 	WARNING (Risk of fire)	This mark is for R32 refrigerant only. Refrigerant type is written on nameplate of outdoor unit. In case that refrigerant type is R32, this unit uses a flammable refrigerant. If refrigerant leaks and comes in contact with fire or heating part, it will create harmful gas and there is risk of fire.
	Read the OPERATION MANUAL carefully before operation.	
	Service personnel are required to carefully read the OPERATION MANUAL and INSTALLATION MANUAL before operation.	
	Further information is available in the OPERATION MANUAL, INSTALLATION MANUAL, and the like.	

2-1. ALWAYS OBSERVE FOR SAFETY

Before obtaining access to terminal, all supply circuits must be disconnected.

2-2. CAUTIONS RELATED TO NEW REFRIGERANT

Cautions for units utilizing refrigerant R32

Preparation before the repair service.

- Prepare the proper tools.
- Prepare the proper protectors.
- Provide adequate ventilation.
- After stopping the operation of the air conditioner, turn off the power-supply breaker.
- Discharge the condenser before the work involving the electric parts.

Use new refrigerant pipes.

- In case of using the existing pipes for R22, be careful with the following.
- Be sure to clean the pipes and make sure that the insides of the pipes are clean.
 - Change flare nut to the one provided with this product. Use a newly flared pipe.
 - Avoid using thin pipes.

Make sure that the inside and outside of refrigerant piping is clean and it has no contaminants such as sulfur, oxides, dirt, shaving particles, etc, which are hazard to refrigerant cycle. In addition, use pipes with specified thickness.

Contamination inside refrigerant piping can cause deterioration of refrigerant oil, etc.

Store the piping indoors, and both ends of the piping sealed until just before brazing. (Leave elbow joints, etc. in their packaging.)

If dirt, dust or moisture enters into refrigerant cycle, that can cause deterioration of refrigerant oil or malfunction of compressor.

Precautions during the repair service.

- Do not perform the work involving the electric parts with wet hands.
- Do not pour water into the electric parts.
- Do not touch the refrigerant.
- Do not touch the hot or cold areas in the refrigerating cycle.
- When the repair or the inspection of the circuit needs to be done without turning off the power, exercise great caution not to touch the live parts.
- When opening or closing the valve below freezing temperatures, refrigerant may spurt out from the valve gap, resulting in injuries.

Use a vacuum pump with a reverse flow check valve.

Vacuum pump oil may flow back into refrigerant cycle and that can cause deterioration of refrigerant oil, etc.

Use the following tools specifically designed for use with R32 refrigerant.

The following tools are necessary to use R32 refrigerant.

Tools for R32	
Gauge manifold	Flare tool
Charge hose	Size adjustment gauge
Gas leak detector	Vacuum pump adaptor
Torque wrench	Electronic refrigerant charging scale

Handle tools with care.

If dirt, dust or moisture enters into refrigerant cycle, that can cause deterioration of refrigerant oil or malfunction of compressor.

The refrigerant oil applied to flare and flange connections must be ester oil, ether oil or alkylbenzene oil in a small amount.

If large amount of mineral oil enters, that can cause deterioration of refrigerant oil, etc.

Do not use refrigerant other than R32.

If other refrigerant (R22, etc.) is used, chlorine in refrigerant can cause deterioration of refrigerant oil, etc.

Use the specified refrigerant only.

Never use any refrigerant other than that specified.

Doing so may cause a burst, an explosion, or fire when the unit is being used, serviced, or disposed of.

Correct refrigerant is specified in the manuals and on the spec labels provided with our products.

We will not be held responsible for mechanical failure, system malfunction, unit breakdown or accidents caused by failure to follow the instructions.

Ventilate the room if refrigerant leaks during operation. If refrigerant comes into contact with a flame, poisonous gases will be released.

[1] Warning for service

- (1) Do not alter the unit.
- (2) For installation and relocation work, follow the instructions in the Installation Manual and use tools and pipe components specifically made for use with refrigerant specified in the outdoor unit installation manual.
- (3) Ask a dealer or an authorized technician to install, relocate and repair the unit.
For appliances not accessible to the general public.
- (4) Refrigerant pipe connections shall be accessible for maintenance purposes.
- (5) If the air conditioner is installed in a small room or closed room, measures must be taken to prevent the refrigerant concentration in the room from exceeding the safety limit in the event of refrigerant leakage. Should the refrigerant leak and cause the concentration limit to be exceeded, hazards due to lack of oxygen in the room may result.
- (6) Keep gas-burning appliances, electric heaters, and other fire sources (ignition sources) away from the location where installation, repair, and other air conditioner work will be performed.
If refrigerant comes into contact with a flame, poisonous gases will be released.
- (7) When installing, relocating, or servicing the air conditioner, use only the specified refrigerant (R32) to charge the refrigerant lines.
Do not mix it with any other refrigerant and do not allow air to remain in the lines.
If air is mixed with the refrigerant, then it can be the cause of abnormal high pressure in the refrigerant line, and may result in an explosion and other hazards.
- (8) After installation has been completed, check for refrigerant leaks. If refrigerant leaks into the room and comes into contact with the flame of a heater or portable cooking range, poisonous gases will be released.
- (9) Do not use low temperature solder alloy in case of brazing the refrigerant pipes.
- (10) When performing brazing work, be sure to ventilate the room sufficiently. Make sure that there are no hazardous or flammable materials nearby.
When performing the work in a closed room, small room, or similar location, make sure that there are no refrigerant leaks before performing the work.
If refrigerant leaks and accumulates, it may ignite or poisonous gases may be released.
- (11) Do not install the unit in places where refrigerant may build-up or places with poor ventilation such as a semi-basement or a sunken place in outdoor: Refrigerant is heavier than air, and inclined to fall away from the leak source.
- (12) Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer.
- (13) The appliance shall be stored in a room without continuously operating ignition sources (for example: open flames, an operating gas appliance or an operating electric heater).
- (14) Do not pierce or burn.
- (15) Be aware that refrigerants may not contain an odor.
- (16) Pipe-work shall be protected from physical damage.
- (17) The installation of pipe-work shall be kept to a minimum.
- (18) Compliance with national gas regulations shall be observed.
- (19) Keep any required ventilation openings clear of obstruction.
- (20) Servicing shall be performed only as recommended by the manufacturer.
- (21) The appliance shall be stored in a well-ventilated area where the room size corresponds to the necessary room size to meet safety requirements.
- (22) Maintenance, service and repair operations shall be performed by authorized technician with required qualification.
- (23) Be sure to have appropriate ventilation in order to prevent ignition. Furthermore, be sure to carry out fire prevention measures that there are no dangerous or flammable objects in the surrounding area.



[2] Cautions for service

- (1) Perform service after recovering the refrigerant left in unit completely.
- (2) Do not release refrigerant in the air.
- (3) After completing service, charge the system with specified amount of refrigerant.
- (4) When performing service, install a filter drier simultaneously.
Be sure to use a filter drier for new refrigerant.

[3] Additional refrigerant charge

When charging directly from cylinder

R32 is a single refrigerant and its composition does not change. Therefore, both liquid charging and gas charging are possible. Liquid charging of refrigerant all at once from the low-pressure side may cause the compressor malfunction. Accordingly, make sure that charging is gradual.

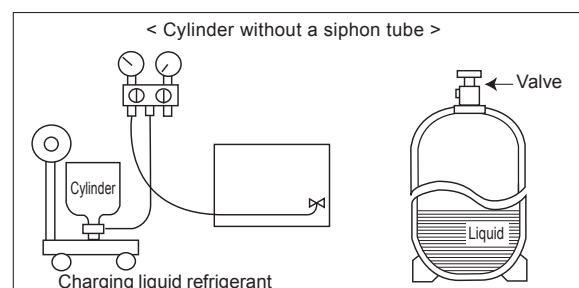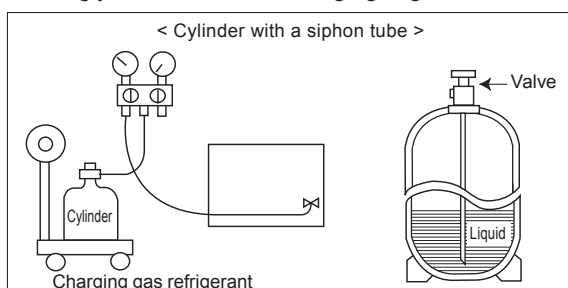

[4] Cautions for unit using R32 refrigerant

Basic work procedures are the same as those for conventional units using refrigerant R410A. However, pay careful attention to the following points.

(1) Information on servicing

(1-1) Checks on the Area

Prior to beginning work on systems containing flammable refrigerants, safety checks are necessary to ensure that the risk of ignition is minimized.

For repair to the refrigerating systems, (1-3) to (1-7) shall be completed prior to conducting work on the systems.

(1-2) Work Procedure

Work shall be undertaken under a controlled procedure so as to minimize the risk of a flammable gas or vapor being present while the work is being performed.

(1-3) General Work Area

All maintenance staff and others working in the local area shall be instructed on the nature of work being carried out.

Work in confined spaces shall be avoided. The area around the workspace shall be sectioned off. Ensure that the conditions within the area have been made safe by control of flammable material.

(1-4) Checking for Presence of Refrigerant

The area shall be checked with an appropriate refrigerant detector prior to and during work, to ensure the technician is aware of potentially toxic or flammable atmospheres. Ensure that the leak detection equipment being used is suitable for use with all applicable refrigerants, i.e. non-sparking, adequately sealed or intrinsically safe.

(1-5) Presence of Fire Extinguisher

If any hot work is to be conducted on the refrigeration equipment or any associated parts, appropriate fire extinguishing equipment shall be available at hand.

Have a dry powder or CO2 fire extinguisher adjacent to the charging area.

(1-6) No Ignition Sources

No person carrying out work in relation to a refrigeration system which involves exposing any pipe work shall use any sources of ignition in such a manner that it may lead to the risk of fire or explosion. All possible ignition sources, including cigarette smoking, should be kept sufficiently far away from the site of installation, repairing, removing and disposal, during which refrigerant can possibly be released to the surrounding space. Prior to work taking place, the area around the equipment is to be surveyed to make sure that there are no flammable hazards or ignition risks. "No Smoking" signs shall be displayed.

(1-7) Ventilated Area

Ensure that the area is in the open or that it is adequately ventilated before breaking into the system or conducting any hot work. A degree of ventilation shall continue during the period that the work is carried out. The ventilation should safely disperse any released refrigerant and preferably expel it externally into the atmosphere.

(1-8) Checks on the Refrigeration Equipment

Where electrical components are being changed, they shall be fit for the purpose and to the correct specification. At all times the manufacturer's maintenance and service guidelines shall be followed. If in doubt, consult the manufacturer's technical department for assistance.

The following checks shall be applied to installations using flammable refrigerants:

- The charge size is in accordance with the room size within which the refrigerant containing parts are installed.
- The ventilation machinery and outlets are operating adequately and are not obstructed.
- Marking to the equipment continues to be visible and legible. Markings and signs that are illegible shall be corrected.
- Refrigeration pipe or components are installed in a position where they are unlikely to be exposed to any substance which may corrode refrigerant containing components, unless the components are constructed of materials which are inherently resistant to being corroded or are suitably protected against being corroded.

(1-9) Checks on Electrical Devices

Repair and maintenance to electrical components shall include initial safety checks and component inspection procedures. If a fault exists that could compromise safety, then no electrical supply shall be connected to the circuit until it is satisfactorily dealt with. If the fault cannot be corrected immediately but it is necessary to continue operation, an adequate temporary solution shall be used. This shall be reported to the owner of the equipment so all parties are advised. Initial safety checks shall include that:

- capacitors are discharged: this shall be done in a safe manner to avoid possibility of sparking;
- no live electrical components and wiring are exposed while charging, recovering or purging the system;
- there is continuity of earth bonding

(2) Repairs to Sealed Components

(2-1) During repairs to sealed components, all electrical supplies shall be disconnected from the equipment being worked on prior to any removal of sealed covers, etc. If it is absolutely necessary to have an electrical supply to equipment during servicing, then a permanently operating form of leak detection shall be located at the most critical point to warn of a potentially hazardous situation.

(2-2) Particular attention shall be paid to the following to ensure that by working on electrical components, the casing is not altered in such a way that the level of protection is affected. This shall include damage to cables, excessive number of connections, terminals not made to original specification, damage to seals, incorrect fitting of glands, etc.

Ensure that the apparatus is mounted securely.

Ensure that seals or sealing materials have not degraded to the point that they no longer serve the purpose of preventing the ingress of flammable atmospheres.

Replacement parts shall be in accordance with the manufacturer's specifications.

(3) Repair to Intrinsic Safe Components

Do not apply any permanent inductive or capacitance loads to the circuit without ensuring that this will not exceed the permissible voltage and current permitted for the equipment in use.

Intrinsic safe components are the only types that can be worked on while live in the presence of a flammable atmosphere. The test apparatus shall be at the correct rating.

Replace components only with parts specified by the manufacturer. Other parts may result in the ignition of refrigerant in the atmosphere from a leak.

(4) Cabling

Check that cabling will not be subject to wear, corrosion, excessive pressure, vibration, sharp edges or any other adverse environmental effects. The check shall also take into account the effects of aging or continual vibration from sources such as compressors or fans.

(5) Detection of Flammable Refrigerants

Under no circumstances shall potential sources of ignition be used in the searching for or detection of refrigerant leaks.

A halide torch (or any other detector using a naked flame) shall not be used.

(6) Leak Detection Methods

Electronic leak detectors may be used to detect refrigerant leaks but, in the case of flammable refrigerants, the sensitivity may not be adequate, or may need re-calibration. (Detection equipment shall be calibrated in a refrigerant-free area.)

Ensure that the detector is not a potential source of ignition and is suitable for the refrigerant used. Leak detection equipment shall be set at a percentage of the LFL of the refrigerant and shall be calibrated to the refrigerant employed, and the appropriate percentage of gas (25% maximum) is confirmed.

Leak detection fluids are suitable for use with most refrigerants but the use of detergents containing chlorine shall be avoided as the chlorine may react with the refrigerant and corrode the copper pipe-work.

If a leak is suspected, all naked flames shall be removed/extinguished.

If a leakage of refrigerant is found which requires brazing, all of the refrigerant shall be recovered from the system, or isolated (by means of shut off valves) in a part of the system remote from the leak. For appliances containing flammable refrigerants, oxygen free nitrogen (OFN) shall then be purged through the system both before and during the brazing process.

(7) Removal and Evacuation

When breaking into the refrigerant circuit to make repairs – or for any other purpose conventional procedures shall be used. However, for flammable refrigerants it is important that best practice is followed since flammability is a consideration.

The following procedure shall be adhered to:

- remove refrigerant
- purge the circuit with inert gas
- evacuate
- purge again with inert gas
- open the circuit by cutting or brazing.

The refrigerant charge shall be recovered into the correct recovery cylinders. For appliances containing flammable refrigerants, the system shall be “flushed” with OFN to render the unit safe. This process may need to be repeated several times.

Compressed air or oxygen shall not be used for purging refrigerant systems.

For appliances containing flammable refrigerants, flushing shall be achieved by breaking the vacuum in the system with OFN and continuing to fill until the working pressure is achieved, then venting to atmosphere, and finally pulling down to a vacuum. This process shall be repeated until no refrigerant is within the system. When the final OFN charge is used, the system shall be vented down to atmospheric pressure to enable work to take place. This operation is absolutely vital if brazing operations on the pipe-work are to take place.

Ensure that the outlet for the vacuum pump is not close to any ignition sources and that ventilation is available.

(8) Charging Procedures

In addition to conventional charging procedures, the following requirements shall be followed:

- Ensure that contamination of different refrigerants does not occur when using charging equipment. Hoses or lines shall be as short as possible to minimize the amount of refrigerant contained in them.
- Cylinders shall be kept upright.
- Ensure that the refrigeration system is earthed prior to charging the system with refrigerant.
- Label the system when charging is complete (if not already).
- Extreme care shall be taken not to overfill the refrigeration system.

Prior to recharging the system, it shall be pressure-tested with the appropriate purging gas. The system shall be leak-tested on completion of charging but prior to commissioning. A follow up leak test shall be carried out prior to leaving the site.

(9) Decommissioning

Before carrying out this procedure, it is essential that the technician is completely familiar with the equipment and all its detail. It is recommended good practice that all refrigerants are recovered safely. Prior to the task being carried out, an oil and refrigerant sample shall be taken in case analysis is required prior to re-use of reclaimed refrigerant. It is essential that electrical power is available before the task is commenced.

(9-1) Become familiar with the equipment and its operation.

(9-2) Isolate system electrically.

(9-3) Before attempting the procedure, ensure that:

- mechanical handling equipment is available, if required, for handling refrigerant cylinders;
- all personal protective equipment is available and being used correctly;
- the recovery process is supervised at all times by a competent person;
- recovery equipment and cylinders conform to the appropriate standards.

(9-4) Pump down refrigerant system, if possible.

(9-5) If a vacuum is not possible, make a manifold so that refrigerant can be removed from various parts of the system.

(9-6) Make sure that cylinder is situated on the scales before recovery takes place.

(9-7) Start the recovery machine and operate in accordance with manufacturer's instructions.

(9-8) Do not overfill cylinders. (No more than 80 % volume liquid charge).

(9-9) Do not exceed the maximum working pressure of the cylinder, even temporarily.

(9-10) When the cylinders have been filled correctly and the process completed, make sure that the cylinders and the equipment are removed from site promptly and all isolation valves on the equipment are closed off.

(9-11) Recovered refrigerant shall not be charged into another refrigeration system unless it has been cleaned and checked.

(10) Labelling

Equipment shall be labelled stating that it has been de-commissioned and emptied of refrigerant. The label shall be dated and signed. For appliances containing flammable refrigerants, ensure that there are labels on the equipment stating the equipment contains flammable refrigerant.

(11) Recovery

When removing refrigerant from a system, either for servicing or decommissioning, it is recommended good practice that all refrigerants are removed safely. When transferring refrigerant into cylinders, ensure that only appropriate refrigerant recovery cylinders are employed. Ensure that the correct number of cylinders for holding the total system charge are available. All cylinders to be used are designated for the recovered refrigerant and labelled for that refrigerant (i.e. special cylinders for the recovery of refrigerant). Cylinders shall be complete with pressure-relief valve and associated shut-off valves in good working order. Empty recovery cylinders are evacuated and, if possible, cooled before recovery occurs. The recovery equipment shall be in good working order with a set of instructions concerning the equipment that is at hand and shall be suitable for the recovery of all appropriate refrigerants including, when applicable, flammable refrigerants. In addition, a set of calibrated weighing scales shall be available and in good working order. Hoses shall be complete with leak-free disconnect couplings and in good condition. Before using the recovery machine, check that it is in satisfactory working order, has been properly maintained and that any associated electrical components are sealed to prevent ignition in the event of a refrigerant release. Consult manufacturer if in doubt.

The recovered refrigerant shall be returned to the refrigerant supplier in the correct recovery cylinder, and the relevant waste transfer note arranged. Do not mix refrigerants in recovery units and especially not in cylinders. If compressors or compressor oils are to be removed, ensure that they have been evacuated to an acceptable level to make certain that flammable refrigerant does not remain within the lubricant. The evacuation process shall be carried out prior to returning the compressor to the suppliers. Only electric heating to the compressor body shall be employed to accelerate this process. When oil is drained from a system, it shall be carried out safely.

[5] Service tools


Use the below service tools as exclusive tools for R32 refrigerant.

No.	Tool name	Specifications
①	Gauge manifold	<ul style="list-style-type: none"> · Only for R32 · Use the existing fitting specifications. (UNF1/2) · Use high-tension side pressure of 5.3MPa·G or over.
②	Charge hose	<ul style="list-style-type: none"> · Only for R32 · Use pressure performance of 5.09MPa·G or over.
③	Electronic scale	—
④	Gas leak detector	· Use the detector for R134a, R407C, R410a or R32.
⑤	Adaptor for reverse flow check	· Attach on vacuum pump.
⑥	Refrigerant charge base	—
⑦	Refrigerant cylinder	<ul style="list-style-type: none"> · Only for R32 · Cylinder with syphon
⑧	Refrigerant recovery equipment	—

2-3. PRECAUTIONS WHEN REUSING EXISTING R22/R410a REFRIGERANT PIPES

(1) Flowchart

- Refer to the flowchart below to determine if the existing pipes can be used and if it is necessary to use a filter dryer.
- If the diameter of the existing pipes is different from the specified diameter, refer to technological data materials to confirm if the pipes can be used.

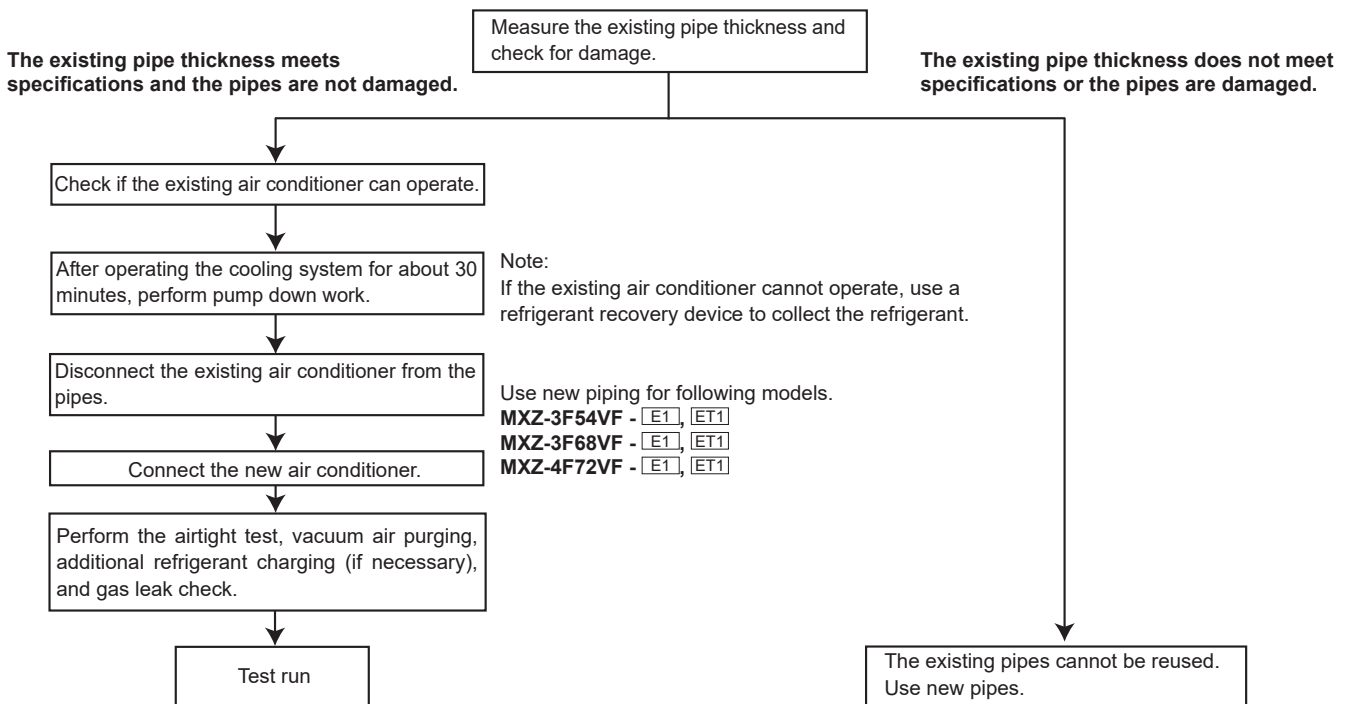

(2) Cautions for refrigerant piping work

New refrigerant R32 is adopted for replacement inverter series. Although the refrigerant piping work for R32 is same as for R22, exclusive tools are necessary so as not to mix with different kind of refrigerant. Furthermore as the working pressure of R32 is 1.6 times higher than that of R22, their sizes of flared sections and flare nuts are different.

① Thickness of pipes

Because the working pressure of R32 is higher compared to R22, be sure to use refrigerant piping with thickness shown below. (Never use pipes of 0.7 mm or below.)

Diagram below: Piping diameter and thickness



Nominal dimensions(inch)	Outside diameter (mm)	Thickness (mm)	
		R32/R410a	R22
1/4	6.35	0.8	0.8
3/8	9.52	0.8	0.8
1/2	12.70	0.8	0.8
5/8	15.88	1.0	1.0
3/4	19.05	—	1.0

② Dimensions of flare cutting and flare nut

The component molecules in HFC refrigerant are smaller compared to conventional refrigerants. In addition to that, R32 is a refrigerant, which has higher risk of leakage because its working pressure is higher than that of other refrigerants.

Therefore, to enhance airtightness and strength, flare cutting dimension of copper pipe for R32 has been specified separately from the dimensions for other refrigerants as shown below. The dimension B of flare nut for R32 also has partly been changed to increase strength as shown below. Set copper pipe correctly referring to copper pipe flaring dimensions for R32 below. For 1/2 and 5/8 inch pipes, the dimension B changes.

Use torque wrench corresponding to each dimension.

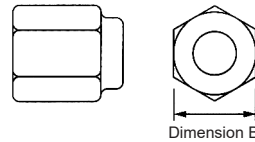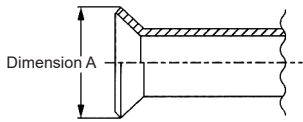

Flare cutting dimensions

Nominal dimensions(inch)	Outside diameter(mm)	Dimension A ($^{+0}_{-0.4}$) (mm)	
		R32/R410a	R22
1/4	6.35	9.1	9.0
3/8	9.52	13.2	13.0
1/2	12.70	16.6	16.2
5/8	15.88	19.7	19.4
3/4	19.05	—	23.3

Flare nut dimensions

Nominal dimensions(inch)	Outside diameter(mm)	Dimension B (mm)	
		R32/R410a	R22
1/4	6.35	17.0	17.0
3/8	9.52	22.0	22.0
1/2	12.70	26.0	24.0
5/8	15.88	29.0	27.0
3/4	19.05	—	36.0

③ Tools for R32 (The following table shows whether conventional tools can be used or not.)


Tools and materials	Use	R32 tools	Can R22 tools be used?	Can R407C tools be used?	Can R410a tools be used?
Gauge manifold	Air purge, refrigerant charge and operation check	Tool exclusive for R32	×	×	○
Charge hose		Tool exclusive for R32	×	×	○
Gas leak detector	Gas leak check	Tool for HFC refrigerant	×	○	○
Refrigerant recovery equipment	Refrigerant recovery	Tool exclusive for R32	×	×	○
Refrigerant cylinder	Refrigerant charge	Tool exclusive for R32	×	×	×
Safety charger	Prevent compressor malfunction when charging refrigerant by spraying liquid refrigerant	Tool exclusive for R32	×	×	○
Charge valve	Prevent gas from blowing out when detaching charge hose	Tool exclusive for R32	×	×	○
Vacuum pump	Vacuum drying and air purge	Tools for other refrigerants can be used if equipped with adapter for reverse flow check	△(Usable if equipped with adapter for reverse flow)	△(Usable if equipped with adapter for reverse flow)	△(Usable if equipped with adapter for reverse flow)
Flare tool	Flaring work of piping	Tools for other refrigerants can be used by adjusting flaring dimension	△(Usable by adjusting flaring dimension)	△(Usable by adjusting flaring dimension)	△(Usable by adjusting flaring dimension)
Bender	Bend the pipes	Tools for other refrigerants can be used	○	○	○
Pipe cutter	Cut the pipes	Tools for other refrigerants can be used	○	○	○
Welder and nitrogen gas cylinder	Weld the pipes	Tools for other refrigerants can be used	○	○	○
Refrigerant charging scale	Refrigerant charge	Tools for other refrigerants can be used	○	○	○
Vacuum gauge or thermistor vacuum gauge and vacuum valve	Check the degree of vacuum. (Vacuum valve prevents back flow of oil and refrigerant to thermistor vacuum gauge)	Tools for other refrigerants can be used	○	○	○
Charging cylinder	Refrigerant charge	Tool exclusive for R32	×	—	×

× : Prepare a new tool. (Use the new tool as the tool exclusive for R32.)

△ : Tools for other refrigerants can be used under certain conditions.

○ : Tools for other refrigerants can be used.

2-4. CHOOSING THE OUTDOOR UNIT INSTALLATION LOCATION

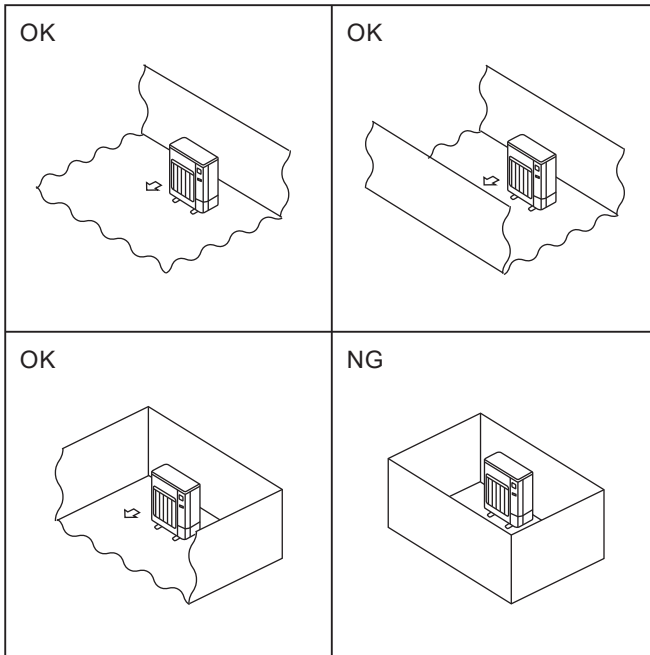

R32 is heavier than air—as well as other refrigerants—so tends to accumulate at the base (in the vicinity of the floor). If R32 accumulates around base, it may reach a flammable concentration in case room is small. To avoid ignition, maintaining a safe work environment is required by ensuring appropriate ventilation. If a refrigerant leak is confirmed in a room or an area where there is insufficient ventilation, refrain from using open flames until the work environment can be improved by ensuring appropriate ventilation. Install outdoor unit in a place where at least one of the four sides is open, and in a sufficiently large space without depressions.

2-5. MINIMUM INSTALLATION AREA


If you unavoidably install a unit in a space where all four sides are blocked or there are depressions, confirm that one of these situations (A, B or C) is satisfied.

Note: These countermeasures are for keeping safety not for specification guarantee.

A) Secure sufficient installation space (minimum installation area A_{min}).


Install in a space with an installation area of A_{min} or more, corresponding to refrigerant quantity M (factory-charged refrigerant + locally added refrigerant).

M [kg]	A_{min} [m ²]
1.0	12
1.5	17
2.0	23
2.5	28
3.0	34
3.5	39
4.0	45
4.5	50
5.0	56
5.5	62
6.0	67
6.5	73
7.0	78
7.5	84

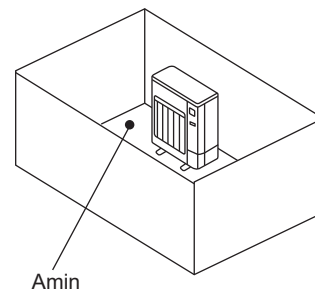


B) Install in a space with a depression height of 0.125 [m] or less.

Height from the bottom of
0.125 [m] or less

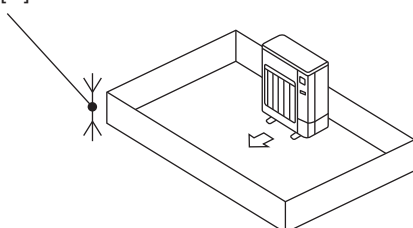


Height from the bottom of
0.125 [m] or less

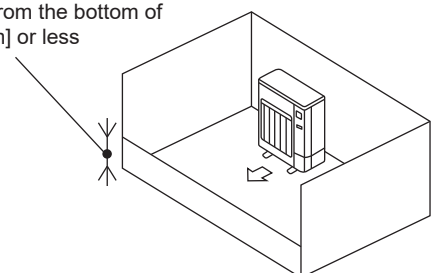

C) Create an appropriate ventilation open area.

Make sure that the width of the open area is 0.9 [m] or more and the height of the open area is 0.15 [m] or more. However, the height from the bottom of the installation space to the bottom edge of the open area should be 0.125 [m] or less.

Open area should be 75% or more opening.

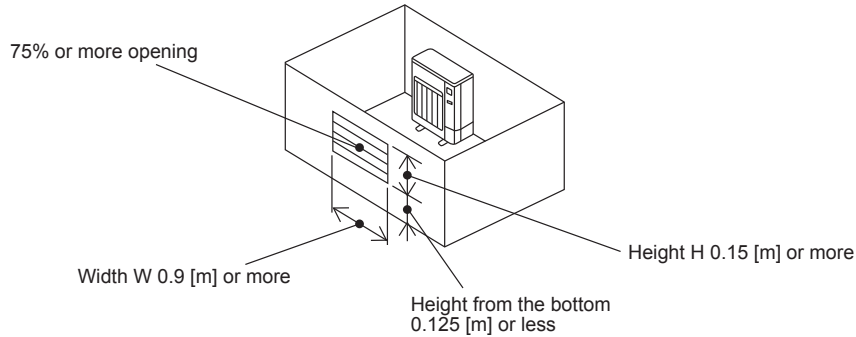

■ Indoor units

Install in a room with a floor area of A_{min} or more, corresponding to refrigerant quantity M (factory-charged refrigerant + locally added refrigerant).

* For the factory-charged refrigerant amount, refer to the spec nameplate or installation manual.

For the amount to be added locally, refer to the installation manual.

Install the indoor unit so that the height from the floor to the bottom of the indoor unit is h_0 ;

for wall mounted: 1.8 m or more;





for ceiling suspended, cassette and ceiling concealed: 2.2 m or more.

When installing floor standing, refer to indoor unit Installation manual.

There are restrictions in installation height for each model, so read the installation manual for the particular unit.

Case 1: for wall mounted, ceiling suspended, cassette and concealed


M [kg]	A_{min} [m ²]
1.0	3
1.5	4.5
2.0	6
2.5	7.5
3.0	9
3.5	12
4.0	15.5
4.5	20
5.0	24
5.5	29
6.0	35
6.5	41
7.0	47
7.5	54

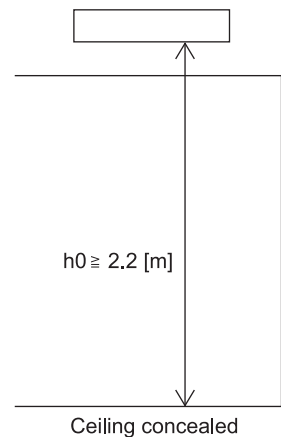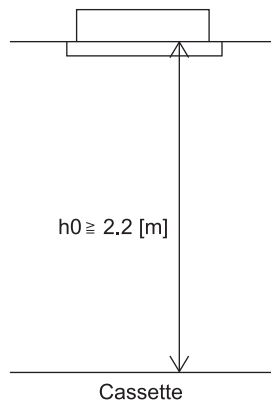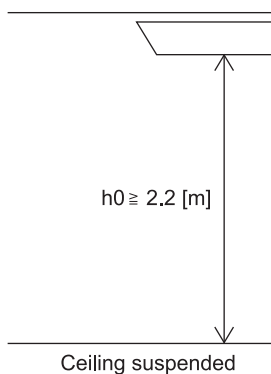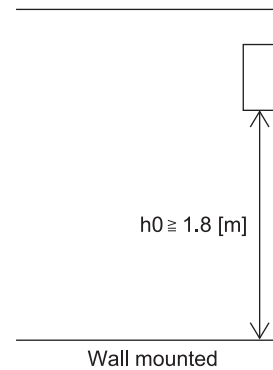


3

PART NAMES AND FUNCTIONS

MXZ-2F33VF **MXZ-2F33VF2** **MXZ-2F33VF3** **MXZ-2F33VF4**
MXZ-2F42VF **MXZ-2F42VF2** **MXZ-2F42VF3** **MXZ-2F42VF4**
MXZ-2F53VF **MXZ-2F53VF2** **MXZ-2F53VF3** **MXZ-2F53VF4**
MXZ-2F53VFH **MXZ-2F53VFH2** **MXZ-2F53VFH3** **MXZ-2F53VFH4**

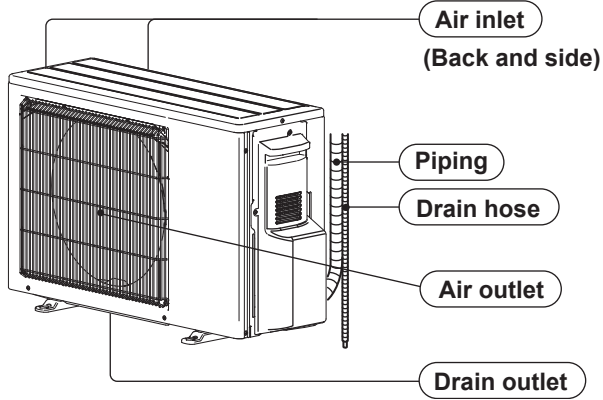

MXZ-3F54VF **MXZ-3F54VF2** **MXZ-3F54VF3** **MXZ-3F54VF4**
MXZ-3F68VF **MXZ-3F68VF2** **MXZ-3F68VF3** **MXZ-3F68VF4**
MXZ-4F72VF **MXZ-4F72VF2** **MXZ-4F72VF3** **MXZ-4F72VF4**
MXZ-4F80VF2 **MXZ-4F80VF3** **MXZ-4F80VF4**

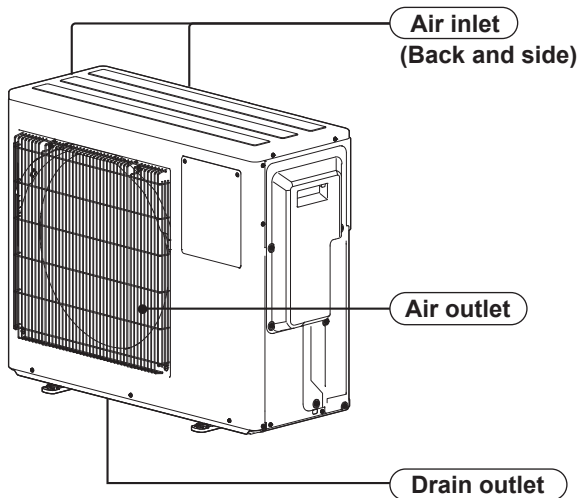

ACCESSORIES



Model	MXZ-2F33VF	MXZ-2F33VF3	MXZ-3F54VF	MXZ-3F54VF2
	MXZ-2F42VF	MXZ-2F42VF3	MXZ-3F68VF	MXZ-3F68VF2
	MXZ-2F53VF	MXZ-2F53VF3	MXZ-4F72VF	MXZ-4F72VF2
	MXZ-2F33VF2	MXZ-2F33VF4	MXZ-3F54VF3	MXZ-4F80VF2
	MXZ-2F42VF2	MXZ-2F42VF4	MXZ-3F54VF3	MXZ-4F54VF4
	MXZ-2F53VF2	MXZ-2F53VF4	MXZ-3F54VF3	MXZ-4F68VF4
			MXZ-3F54VF3	MXZ-4F72VF4
			MXZ-3F54VF3	MXZ-4F80VF4
①	Drain socket	1		1
②	Drain cap	-		2

MXZ-4F83VF
 MXZ-5F102VF
 MXZ-2F53VFHZ

MXZ-4F83VF2
 MXZ-5F102VF2
 MXZ-2F53VFHZ2

MXZ-4F83VFHZ
 MXZ-6F120VF2

MXZ-4F83VFHZ2
 MXZ-6F122VF

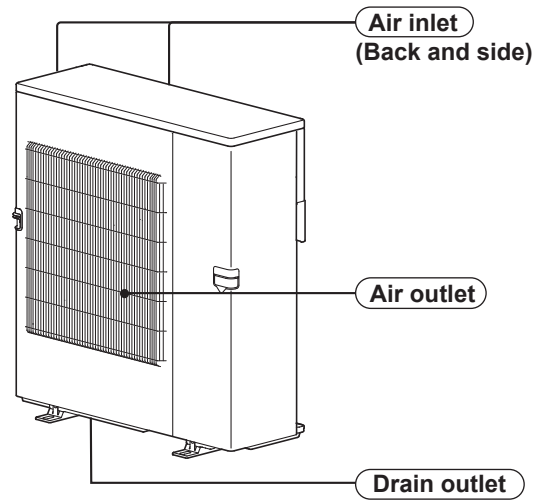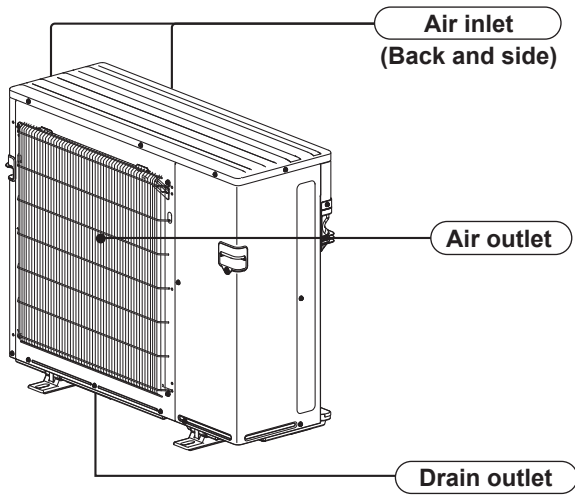

ACCESSORIES

Model	MXZ-4F83VF	MXZ-5F102VF	MXZ-6F120VF2
	MXZ-4F83VF2	MXZ-5F102VF2	MXZ-6F122VF
① Drain socket		1	
② Drain cap		5	

4

SPECIFICATION

Outdoor model			MXZ-2F33VF	
Outdoor unit power supply			Single phase 220 - 230 - 240 V, 50 Hz	
System	Indoor units number		2	
	Piping total length	m	Max. 20	
	Connecting pipe length	m	Max. 15	
	Height difference (Indoor – Outdoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.	
	Height difference (Indoor – Indoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.	
Function			Cooling	Heating
Capacity Rated (Min.-Max.) *2		kW	3.3 (1.1 - 3.8)	4.0 (1.0 - 4.1)
Breaker capacity		A	15	
Electrical data	Power input (Total) *1, *2	W	850	910
	Running current (Total) *1, *2	A	4.3 - 4.1 - 3.9	4.6 - 4.4 - 4.2
	Power factor (Total) *1, *2	%	90	
	Starting current (Total) *1, *2	A	4.6	
Coefficient of performance (C.O.P) (Total) *1, *2			3.88	4.40
Compressor	Model		KVB073FYXMC	
	Output	W	470	
	Current *1, *2	A	3.8	
	Refrigeration oil (Model)	L	0.27 (FW68S)	
Fan motor	Model		RC0J50-FA	
	Current *1, *2	A	0.35	
Dimensions W x H x D		mm	800 x 550 x 285	
Weight		kg	33	
Special remarks	Air flow (Rated)	m ³ /h	1,890	1,938
	Sound level (Rated)	dB(A)	49	50
	Fan speed (Rated)	rpm	860	880
	Pre-charged refrigerant quantity (R32)	kg	1.0	
	Max refrigerant quantity (R32)	kg	1.0	

*1 Measured under rated operating frequency.

*2 When connected with indoor units below.

MSZ-AP15VF + MSZ-LN18VG


NOTE: Test conditions are based on ISO 5151. (Refrigerant piping length (one way): 5 m)

COOLING INDOOR Dry-bulb temperature 27.0 °C Wet-bulb temperature 19.0 °C

OUTDOOR Dry-bulb temperature 35.0 °C Wet-bulb temperature 24.0 °C

HEATING INDOOR Dry-bulb temperature 20.0 °C

OUTDOOR Dry-bulb temperature 7.0 °C Wet-bulb temperature 6.0 °C



Outdoor model			MXZ-2F33VF2	
Outdoor unit power supply			Single phase 220 - 230 - 240 V, 50 Hz	
System	Indoor units number		2	
	Piping total length	m	Max. 20	
	Connecting pipe length	m	Max. 15	
	Height difference (Indoor – Outdoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.	
	Height difference (Indoor – Indoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.	
Function			Cooling	Heating
Capacity Rated (Min.-Max.) *2		kW	3.3 (1.1 - 3.8)	4.0 (1.0 - 4.1)
Breaker capacity		A	15	
Electrical data	Power input (Total) *1, *2	W	850	910
	Running current (Total) *1, *2	A	4.3 - 4.1 - 3.9	4.6 - 4.4 - 4.2
	Power factor (Total) *1, *2	%	90	
	Starting current (Total) *1, *2	A	4.6	
Coefficient of performance (C.O.P) (Total) *1, *2			3.88	4.40
Compressor	Model		KVB073FYXMC	
	Output	W	470	
	Current *1, *2	A	3.8	
	Refrigeration oil (Model)	L	0.27 (FW68S)	
Fan motor	Model		RC0J50-NA	
	Current *1, *2	A	0.35	
Dimensions W x H x D		mm	800 x 550 x 285	
Weight		kg	33	
Special remarks	Air flow (Rated)	m³/h	1,890	1,938
	Sound level (Rated)	dB(A)	49	50
	Fan speed (Rated)	rpm	860	880
	Pre-charged refrigerant quantity (R32)	kg	1.0	
	Max refrigerant quantity (R32)	kg	1.0	

*1 Measured under rated operating frequency.

*2 When connected with indoor units below.

MSZ-AP15VG + MSZ-LN18VG


NOTE: Test conditions are based on ISO 5151. (Refrigerant piping length (one way): 5 m)

COOLING INDOOR Dry-bulb temperature 27.0 °C Wet-bulb temperature 19.0 °C

OUTDOOR Dry-bulb temperature 35.0 °C Wet-bulb temperature 24.0 °C

HEATING INDOOR Dry-bulb temperature 20.0 °C

OUTDOOR Dry-bulb temperature 7.0 °C Wet-bulb temperature 6.0 °C



Outdoor model		MXZ-2F33VF3	
Outdoor unit power supply		Single phase 220 - 230 - 240 V, 50 Hz	
System	Indoor units number	2	
	Piping total length	m	Max. 20
	Connecting pipe length	m	Max. 15
	Height difference (Indoor – Outdoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.
	Height difference (Indoor – Indoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.
Function		Cooling	Heating
Capacity Rated (Min.-Max.) *2	kW	3.3 (1.1 - 3.8)	4.0 (1.0 - 4.1)
Breaker capacity		A	15
Electrical data	Power input (Total) *1, *2	W	850
	Running current (Total) *1, *2	A	4.3 - 4.1 - 3.9
	Power factor (Total) *1, *2	%	90
	Starting current (Total) *1, *2	A	4.6
Coefficient of performance (C.O.P) (Total) *1, *2		3.88	4.40
Compressor	Model	KVB073FYXMC	
	Output	W	470
	Current *1, *2	A	3.8
	Refrigeration oil (Model)	L	0.27 (FW68S)
Fan motor	Model	RC0J50-NA	
	Current *1, *2	A	0.35
Dimensions W x H x D		mm	800 x 550 x 285
Weight		kg	33
Special remarks	Air flow (Rated)	m ³ /h	1,890
	Sound level (Rated)	dB(A)	49
	Fan speed (Rated)	rpm	860
	Pre-charged refrigerant quantity (R32)	kg	0.8
	Max refrigerant quantity (R32)	kg	0.8

*1 Measured under rated operating frequency.

*2 When connected with indoor units below.

MSZ-AP15VG + MSZ-LN18VG2


NOTE: Test conditions are based on ISO 5151. (Refrigerant piping length (one way): 5 m)

COOLING INDOOR Dry-bulb temperature 27.0 °C Wet-bulb temperature 19.0 °C

OUTDOOR Dry-bulb temperature 35.0 °C Wet-bulb temperature 24.0 °C

HEATING INDOOR Dry-bulb temperature 20.0 °C

OUTDOOR Dry-bulb temperature 7.0 °C Wet-bulb temperature 6.0 °C



Outdoor model			MXZ-2F33VF4	
Outdoor unit power supply			Single phase 220 - 230 - 240 V, 50 Hz	
System	Indoor units number		2	
	Piping total length	m	Max. 20	
	Connecting pipe length	m	Max. 15	
	Height difference (Indoor – Outdoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.	
	Height difference (Indoor – Indoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.	
Function			Cooling	Heating
Capacity Rated (Min.-Max.) *2		kW	3.3 (1.1 - 3.8)	4.0 (1.0 - 4.1)
Breaker capacity		A	15	
Electrical data	Power input (Total) *1, *2	W	850	910
	Running current (Total) *1, *2	A	4.5 - 4.3 - 4.1	4.6 - 4.4 - 4.2
	Power factor (Total) *1, *2	%	90	
	Starting current (Total) *1, *2	A	4.6	
Coefficient of performance (C.O.P) (Total) *1, *2			3.88	4.40
Compressor	Model		KVB073FYXMC	
	Output	W	470	
	Current *1, *2	A	3.8	
	Refrigeration oil (Model)	L	0.27 (FW68S)	
Fan motor	Model		RC0J50-NA	
	Current *1, *2	A	0.35	
Dimensions W x H x D		mm	800 x 550 x 285	
Weight		kg	33	
Special remarks	Air flow (Rated)	m ³ /h	1,848	1,938
	Sound level (Rated)	dB(A)	49	50
	Fan speed (Rated)	rpm	840	880
	Pre-charged refrigerant quantity (R32)	kg	0.8	
	Max refrigerant quantity (R32)	kg	0.8	

*1 Measured under rated operating frequency.

*2 When connected with indoor units below.

MSZ-AY15VG + MSZ-LN18VG2

NOTE: Test conditions are based on ISO 5151. (Refrigerant piping length (one way): 5 m)

COOLING INDOOR Dry-bulb temperature 27.0 °C Wet-bulb temperature 19.0 °C

OUTDOOR Dry-bulb temperature 35.0 °C Wet-bulb temperature 24.0 °C

HEATING INDOOR Dry-bulb temperature 20.0 °C

OUTDOOR Dry-bulb temperature 7.0 °C Wet-bulb temperature 6.0 °C



Outdoor model			MXZ-2F42VF	
Outdoor unit power supply			Single phase 220 - 230 - 240 V, 50 Hz	
System	Indoor units number		2	
	Piping total length	m	Max. 30	
	Connecting pipe length	m	Max. 20	
	Height difference (Indoor – Outdoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.	
	Height difference (Indoor – Indoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.	
Function			Cooling	Heating
Capacity Rated (Min.-Max.) *2		kW	4.2 (1.1 - 4.4)	4.5 (1.0 - 4.8)
Breaker capacity		A	15	
Electrical data	Power input (Total) *1, *2	W	980	880
	Running current (Total) *1, *2	A	4.9 - 4.7 - 4.5	4.4 - 4.3 - 4.1
	Power factor (Total) *1, *2	%	90	
	Starting current (Total) *1, *2	A	7.6	
Coefficient of performance (C.O.P) (Total) *1, *2			4.29	5.11
Compressor	Model		SVB130FBBMT	
	Output	W	1,100	
	Current *1, *2	A	3.99	
	Refrigeration oil (Model)	L	0.35 (FW68S)	
Fan motor	Model		RC0J50-FA	
	Current *1, *2	A	0.35	
Dimensions W x H x D		mm	800 x 550 x 285	
Weight		kg	37	
Special remarks	Air flow (Rated)	m ³ /h	1,704	2,010
	Sound level (Rated)	dB(A)	44	50
	Fan speed (Rated)	rpm	780	910
	Pre-charged refrigerant quantity (R32)	kg	1.2	
	Max refrigerant quantity (R32)	kg	1.2	

*1 Measured under rated operating frequency.

*2 When connected with indoor units below.

MSZ-LN18VG + MSZ-LN25VG

NOTE: Test conditions are based on ISO 5151. (Refrigerant piping length (one way): 5 m)

COOLING INDOOR Dry-bulb temperature 27.0 °C Wet-bulb temperature 19.0 °C

OUTDOOR Dry-bulb temperature 35.0 °C Wet-bulb temperature 24.0 °C

HEATING INDOOR Dry-bulb temperature 20.0 °C

OUTDOOR Dry-bulb temperature 7.0 °C Wet-bulb temperature 6.0 °C



Outdoor model			MXZ-2F42VF2	
Outdoor unit power supply			Single phase 220 - 230 - 240 V, 50 Hz	
System	Indoor units number		2	
	Piping total length	m	Max. 30	
	Connecting pipe length	m	Max. 20	
	Height difference (Indoor – Outdoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.	
	Height difference (Indoor – Indoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.	
Function			Cooling	Heating
Capacity Rated (Min.-Max.) *2		kW	4.2 (1.1 - 4.4)	4.5 (1.0 - 4.8)
Breaker capacity		A	15	
Electrical data	Power input (Total) *1, *2	W	980	880
	Running current (Total) *1, *2	A	4.9 - 4.7 - 4.5	4.4 - 4.3 - 4.1
	Power factor (Total) *1, *2	%	90	
	Starting current (Total) *1, *2	A	7.6	
Coefficient of performance (C.O.P) (Total) *1, *2			4.29	5.11
Compressor	Model		SVB130FBBMT	
	Output	W	1,100	
	Current *1, *2	A	3.99	
	Refrigeration oil (Model)	L	0.35 (FW68S)	
Fan motor	Model		RC0J50-NA	
	Current *1, *2	A	0.35	
Dimensions W x H x D		mm	800 x 550 x 285	
Weight		kg	37	
Special remarks	Air flow (Rated)	m³/h	1,704	2,010
	Sound level (Rated)	dB(A)	44	50
	Fan speed (Rated)	rpm	780	910
	Pre-charged refrigerant quantity (R32)	kg	1.2	
	Max refrigerant quantity (R32)	kg	1.2	

*1 Measured under rated operating frequency.

*2 When connected with indoor units below.

MSZ-LN18VG + MSZ-LN25VG

NOTE: Test conditions are based on ISO 5151. (Refrigerant piping length (one way): 5 m)

COOLING INDOOR Dry-bulb temperature 27.0 °C Wet-bulb temperature 19.0 °C

OUTDOOR Dry-bulb temperature 35.0 °C Wet-bulb temperature 24.0 °C

HEATING INDOOR Dry-bulb temperature 20.0 °C

OUTDOOR Dry-bulb temperature 7.0 °C Wet-bulb temperature 6.0 °C



Outdoor model		MXZ-2F42VF3	
Outdoor unit power supply		Single phase 220 - 230 - 240 V, 50 Hz	
System	Indoor units number	2	
	Piping total length	m	Max. 30
	Connecting pipe length	m	Max. 20
	Height difference (Indoor – Outdoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.
	Height difference (Indoor – Indoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.
Function		Cooling	Heating
Capacity Rated (Min.-Max.) *2	kW	4.2 (1.1 - 4.4)	4.5 (1.0 - 4.8)
Breaker capacity		A	15
Electrical data	Power input (Total) *1, *2	W	980
	Running current (Total) *1, *2	A	4.9 - 4.7 - 4.5
	Power factor (Total) *1, *2	%	90
	Starting current (Total) *1, *2	A	7.6
Coefficient of performance (C.O.P) (Total) *1, *2		4.29	5.11
Compressor	Model	SVB130FBBMT	
	Output	W	1,100
	Current *1, *2	A	3.99
	Refrigeration oil (Model)	L	0.35 (FW68S)
Fan motor	Model	RC0J50-NA	
	Current *1, *2	A	0.35
Dimensions W x H x D		mm	800 x 550 x 285
Weight		kg	37
Special remarks	Air flow (Rated)	m ³ /h	1,704
	Sound level (Rated)	dB(A)	44
	Fan speed (Rated)	rpm	780
	Pre-charged refrigerant quantity (R32)	kg	1.0
	Max refrigerant quantity (R32)	kg	1.0

*1 Measured under rated operating frequency.

*2 When connected with indoor units below.

MSZ-LN18VG2 + MSZ-LN25VG2


NOTE: Test conditions are based on ISO 5151. (Refrigerant piping length (one way): 5 m)

COOLING INDOOR Dry-bulb temperature 27.0 °C Wet-bulb temperature 19.0 °C

OUTDOOR Dry-bulb temperature 35.0 °C Wet-bulb temperature 24.0 °C

HEATING INDOOR Dry-bulb temperature 20.0 °C

OUTDOOR Dry-bulb temperature 7.0 °C Wet-bulb temperature 6.0 °C



Outdoor model			MXZ-2F42VF4	
Outdoor unit power supply			Single phase 220 - 230 - 240 V, 50 Hz	
System	Indoor units number		2	
	Piping total length	m	Max. 30	
	Connecting pipe length	m	Max. 20	
	Height difference (Indoor – Outdoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.	
	Height difference (Indoor – Indoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.	
Function			Cooling	Heating
Capacity Rated (Min.-Max.) *2		kW	4.2 (1.1 - 4.4)	4.5 (1.0 - 4.8)
Breaker capacity		A	15	
Electrical data	Power input (Total) *1, *2	W	980	880
	Running current (Total) *1, *2	A	4.9 - 4.7 - 4.5	4.4 - 4.3 - 4.1
	Power factor (Total) *1, *2	%	90	
	Starting current (Total) *1, *2	A	7.6	
Coefficient of performance (C.O.P) (Total) *1, *2			4.29	5.11
Compressor	Model		SVB130FBBMT	
	Output	W	1,100	
	Current *1, *2	A	3.99	
	Refrigeration oil (Model)	L	0.35 (FW68S)	
Fan motor	Model		RC0J50-NA	
	Current *1, *2	A	0.35	
Dimensions W x H x D		mm	800 x 550 x 285	
Weight		kg	37	
Special remarks	Air flow (Rated)	m³/h	1,704	2,010
	Sound level (Rated)	dB(A)	44	50
	Fan speed (Rated)	rpm	780	910
	Pre-charged refrigerant quantity (R32)	kg	1.0	
	Max refrigerant quantity (R32)	kg	1.0	

*1 Measured under rated operating frequency.

*2 When connected with indoor units below.

MSZ-LN18VG2 + MSZ-LN25VG2


NOTE: Test conditions are based on ISO 5151. (Refrigerant piping length (one way): 5 m)

COOLING INDOOR Dry-bulb temperature 27.0 °C Wet-bulb temperature 19.0 °C

OUTDOOR Dry-bulb temperature 35.0 °C Wet-bulb temperature 24.0 °C

HEATING INDOOR Dry-bulb temperature 20.0 °C

OUTDOOR Dry-bulb temperature 7.0 °C Wet-bulb temperature 6.0 °C



Outdoor model		MXZ-2F53VF MXZ-2F53VFH		
Outdoor unit power supply		Single phase 220 - 230 - 240 V, 50 Hz		
System	Indoor units number	2		
	Piping total length	m	Max. 30	
	Connecting pipe length	m	Max. 20	
	Height difference (Indoor – Outdoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.	
	Height difference (Indoor – Indoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.	
Function		Cooling	Heating	
Capacity Rated (Min.-Max.) *2	kW	5.3 (1.1 - 5.6)	6.4 (1.0 - 7.0)	
Breaker capacity	A	15		
Electrical data	Power input (Total) *1, *2	W	1,400	1,560
	Running current (Total) *1, *2	A	6.5 - 6.2 - 6.0	7.5 - 7.1 - 6.8
	Power factor (Total) *1, *2	%	97.5	95
	Starting current (Total) *1, *2	A	7.6	
Coefficient of performance (C.O.P) (Total) *1, *2			3.79	4.10
Compressor	Model	SVB130FBBMT		
	Output	W	1,400	
	Current *1, *2	A	6.59	
	Refrigeration oil (Model)	L	0.35 (FW68S)	
Fan motor	Model	RC0J50-FA		
	Current *1, *2	A	0.35	
Dimensions W x H x D	mm	800 x 550 x 285		
Weight	kg	MXZ-2F53VF: 37	MXZ-2F53VFH: 38	
Special remarks	Air flow (Rated)	m ³ /h	1,962	2,082
	Sound level (Rated)	dB(A)	46	51
	Fan speed (Rated)	rpm	890	940
	Pre-charged refrigerant quantity (R32)	kg	1.2	
	Max refrigerant quantity (R32)	kg	1.2	

*1 Measured under rated operating frequency.

*2 When connected with indoor units below.

MSZ-LN18VG + MSZ-LN35VG

NOTE: Test conditions are based on ISO 5151. (Refrigerant piping length (one way): 5 m)

COOLING INDOOR Dry-bulb temperature 27.0 °C Wet-bulb temperature 19.0 °C

OUTDOOR Dry-bulb temperature 35.0 °C Wet-bulb temperature 24.0 °C

HEATING INDOOR Dry-bulb temperature 20.0 °C

OUTDOOR Dry-bulb temperature 7.0 °C Wet-bulb temperature 6.0 °C



Outdoor model			MXZ-2F53VF2 MXZ-2F53VFH2	
Outdoor unit power supply			Single phase 220 - 230 - 240 V, 50 Hz	
System	Indoor units number		2	
	Piping total length	m	Max. 30	
	Connecting pipe length	m	Max. 20	
	Height difference (Indoor – Outdoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.	
	Height difference (Indoor – Indoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.	
Function			Cooling	Heating
Capacity Rated (Min.-Max.) *2		kW	5.3 (1.1 - 5.6)	6.4 (1.0 - 7.0)
Breaker capacity		A	15	
Electrical data	Power input (Total) *1, *2	W	1,400	1,560
	Running current (Total) *1, *2	A	6.5 - 6.2 - 6.0	7.5 - 7.1 - 6.8
	Power factor (Total) *1, *2	%	97.5	95
	Starting current (Total) *1, *2	A	7.6	
Coefficient of performance (C.O.P) (Total) *1, *2			3.79	4.10
Compressor	Model		SVB130FBBMT	
	Output	W	1,400	
	Current *1, *2	A	6.59	
	Refrigeration oil (Model)	L	0.35 (FW68S)	
Fan motor	Model		RC0J50-NA	
	Current *1, *2	A	0.35	
Dimensions W x H x D		mm	800 x 550 x 285	
Weight		kg	MXZ-2F53VF2: 37 MXZ-2F53VFH2: 38	
Special remarks	Air flow (Rated)	m ³ /h	1,962	2,082
	Sound level (Rated)	dB(A)	46	51
	Fan speed (Rated)	rpm	890	940
	Pre-charged refrigerant quantity (R32)	kg	1.2	
	Max refrigerant quantity (R32)	kg	1.2	

*1 Measured under rated operating frequency.

*2 When connected with indoor units below.

MSZ-LN18VG + MSZ-LN35VG


NOTE: Test conditions are based on ISO 5151. (Refrigerant piping length (one way): 5 m)

COOLING INDOOR Dry-bulb temperature 27.0 °C Wet-bulb temperature 19.0 °C

OUTDOOR Dry-bulb temperature 35.0 °C Wet-bulb temperature 24.0 °C

HEATING INDOOR Dry-bulb temperature 20.0 °C

OUTDOOR Dry-bulb temperature 7.0 °C Wet-bulb temperature 6.0 °C



Outdoor model		MXZ-2F53VF3 MXZ-2F53VFH3	
Outdoor unit power supply		Single phase 220 - 230 - 240 V, 50 Hz	
System	Indoor units number	2	
	Piping total length	m	Max. 30
	Connecting pipe length	m	Max. 20
	Height difference (Indoor – Outdoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.
	Height difference (Indoor – Indoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.
Function		Cooling	Heating
Capacity Rated (Min.-Max.) *2	kW	5.3 (1.1 - 5.6)	6.4 (1.0 - 7.0)
Breaker capacity		A 15	
Electrical data	Power input (Total) *1, *2	W	1,400
	Running current (Total) *1, *2	A	6.5 - 6.2 - 6.0
	Power factor (Total) *1, *2	%	97.5
	Starting current (Total) *1, *2	A	7.6
Coefficient of performance (C.O.P) (Total) *1, *2		3.79	4.10
Compressor	Model	SVB130FBBMT	
	Output	W	1,400
	Current *1, *2	A	6.59
	Refrigeration oil (Model)	L	0.35 (FW68S)
Fan motor	Model	RC0J50-NA	
	Current *1, *2	A	0.35
Dimensions W x H x D		mm 800 x 550 x 285	
Weight		kg MXZ-2F53VF3: 37 MXZ-2F53VFH3: 38	
Special remarks	Air flow (Rated)	m ³ /h	1,962
	Sound level (Rated)	dB(A)	46
	Fan speed (Rated)	rpm	890
	Pre-charged refrigerant quantity (R32)	kg	1.0
	Max refrigerant quantity (R32)	kg	1.0

*1 Measured under rated operating frequency.

*2 When connected with indoor units below.

MSZ-LN18VG2 + MSZ-LN35VG2


NOTE: Test conditions are based on ISO 5151. (Refrigerant piping length (one way): 5 m)

COOLING INDOOR Dry-bulb temperature 27.0 °C Wet-bulb temperature 19.0 °C

OUTDOOR Dry-bulb temperature 35.0 °C Wet-bulb temperature 24.0 °C

HEATING INDOOR Dry-bulb temperature 20.0 °C

OUTDOOR Dry-bulb temperature 7.0 °C Wet-bulb temperature 6.0 °C



Outdoor model			MXZ-2F53VF4 MXZ-2F53VFH4	
Outdoor unit power supply			Single phase 220 - 230 - 240 V, 50 Hz	
System	Indoor units number		2	
	Piping total length	m	Max. 30	
	Connecting pipe length	m	Max. 20	
	Height difference (Indoor – Outdoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.	
	Height difference (Indoor – Indoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.	
Function			Cooling	Heating
Capacity Rated (Min.-Max.) *2		kW	5.3 (1.1 - 5.6)	6.4 (1.0 - 7.0)
Breaker capacity		A	15	
Electrical data	Power input (Total) *1, *2	W	1,400	1,560
	Running current (Total) *1, *2	A	6.5 - 6.2 - 6.0	7.5 - 7.1 - 6.8
	Power factor (Total) *1, *2	%	97.5	95
	Starting current (Total) *1, *2	A	7.6	
Coefficient of performance (C.O.P) (Total) *1, *2			3.79	4.10
Compressor	Model		SVB130FBBMT	
	Output	W	1,400	
	Current *1, *2	A	6.59	
	Refrigeration oil (Model)	L	0.35 (FW68S)	
Fan motor	Model		RC0J50-NA	
	Current *1, *2	A	0.35	
Dimensions W x H x D		mm	800 x 550 x 285	
Weight		kg	MXZ-2F53VF4: 37 MXZ-2F53VFH4: 38	
Special remarks	Air flow (Rated)	m³/h	1,962	2,082
	Sound level (Rated)	dB(A)	46	51
	Fan speed (Rated)	rpm	890	940
	Pre-charged refrigerant quantity (R32)	kg	1.0	
	Max refrigerant quantity (R32)	kg	1.0	

*1 Measured under rated operating frequency.

*2 When connected with indoor units below.

MSZ-LN18VG2 + MSZ-LN35VG2

NOTE: Test conditions are based on ISO 5151. (Refrigerant piping length (one way): 5 m)

COOLING INDOOR Dry-bulb temperature 27.0 °C Wet-bulb temperature 19.0 °C

OUTDOOR Dry-bulb temperature 35.0 °C Wet-bulb temperature 24.0 °C

HEATING INDOOR Dry-bulb temperature 20.0 °C

OUTDOOR Dry-bulb temperature 7.0 °C Wet-bulb temperature 6.0 °C



Outdoor model		MXZ-3F54VF	
Outdoor unit power supply		Single phase 220 - 230 - 240 V, 50 Hz	
System	Indoor units number	2 to 3	
	Piping total length	m	Max. 50
	Connecting pipe length	m	Max. 25
	Height difference (Indoor – Outdoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.
	Height difference (Indoor – Indoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.
Function		Cooling	Heating
Capacity Rated (Min.-Max.) *2	kW	5.4 (2.9 - 6.8)	7.0 (2.6 - 9.0)
Breaker capacity		A	25
Electrical data	Power input (Total) *1, *2	W	1,320
	Running current (Total) *1, *2	A	6.0 - 5.7 - 5.5
	Power factor (Total) *1, *2	%	99
	Starting current (Total) *1, *2	A	6.7
Coefficient of performance (C.O.P) (Total) *1, *2		4.09	5.00
Compressor	Model	SVB130FBBM1T	
	Output	W	1,400
	Current *1, *2	A	5.06
	Refrigeration oil (Model)	L	0.6 (FW68S)
Fan motor	Model	SIC-82FX-F764-1	
	Current *1, *2	A	0.5
Dimensions W x H x D		mm	840 x 710 x 330
Weight		kg	57
Special remarks	Air flow (Rated)	m ³ /h	1,860
	Sound level (Rated)	dB(A)	46
	Fan speed (Rated)	rpm	600
	Pre-charged refrigerant quantity (R32)	kg	1.4
	Max refrigerant quantity (R32)	kg	2.4

*1 Measured under rated operating frequency.

*2 When connected with indoor units below.

MSZ-LN18VG + MSZ-LN18VG + MSZ-LN18VG


NOTE: Test conditions are based on ISO 5151. (Refrigerant piping length (one way): 5 m)

COOLING INDOOR Dry-bulb temperature 27.0 °C Wet-bulb temperature 19.0 °C

OUTDOOR Dry-bulb temperature 35.0 °C Wet-bulb temperature 24.0 °C

HEATING INDOOR Dry-bulb temperature 20.0 °C

OUTDOOR Dry-bulb temperature 7.0 °C Wet-bulb temperature 6.0 °C



Outdoor model			MXZ-3F54VF2	
Outdoor unit power supply			Single phase 220 - 230 - 240 V, 50 Hz	
System	Indoor units number		2 to 3	
	Piping total length	m	Max. 50	
	Connecting pipe length	m	Max. 25	
	Height difference (Indoor – Outdoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.	
	Height difference (Indoor – Indoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.	
Function			Cooling	Heating
Capacity Rated (Min.-Max.) *2		kW	5.4 (2.9 - 6.8)	7.0 (2.6 - 9.0)
Breaker capacity		A	25	
Electrical data	Power input (Total) *1, *2	W	1,320	1,400
	Running current (Total) *1, *2	A	6.0 - 5.7 - 5.5	6.4 - 6.1 - 5.9
	Power factor (Total) *1, *2	%	99	
	Starting current (Total) *1, *2	A	6.7	
Coefficient of performance (C.O.P) (Total) *1, *2			4.09	5.00
Compressor	Model		SVB130FBBM1T	
	Output	W	1,400	
	Current *1, *2	A	5.06	
	Refrigeration oil (Model)	L	0.6 (FW68S)	
Fan motor	Model		SIC-82FX-F764-1	
	Current *1, *2	A	0.5	
Dimensions W x H x D		mm	840 x 710 x 330	
Weight		kg	58	
Special remarks	Air flow (Rated)	m ³ /h	1,860	1,860
	Sound level (Rated)	dB(A)	46	50
	Fan speed (Rated)	rpm	600	600
	Pre-charged refrigerant quantity (R32)	kg	2.4	
	Max refrigerant quantity (R32)	kg	2.4	

*1 Measured under rated operating frequency.

*2 When connected with indoor units below.

MSZ-LN18VG + MSZ-LN18VG + MSZ-LN18VG

NOTE: Test conditions are based on ISO 5151. (Refrigerant piping length (one way): 5 m)

COOLING INDOOR Dry-bulb temperature 27.0 °C Wet-bulb temperature 19.0 °C

OUTDOOR Dry-bulb temperature 35.0 °C Wet-bulb temperature 24.0 °C

HEATING INDOOR Dry-bulb temperature 20.0 °C

OUTDOOR Dry-bulb temperature 7.0 °C Wet-bulb temperature 6.0 °C



Outdoor model		MXZ-3F54VF3	
Outdoor unit power supply		Single phase 220 - 230 - 240 V, 50 Hz	
System	Indoor units number	2 to 3	
	Piping total length	m	Max. 50
	Connecting pipe length	m	Max. 25
	Height difference (Indoor – Outdoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.
	Height difference (Indoor – Indoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.
Function		Cooling	Heating
Capacity Rated (Min.-Max.) *2	kW	5.4 (2.9 - 6.8)	7.0 (2.6 - 9.0)
Breaker capacity		A	25
Electrical data	Power input (Total) *1, *2	W	1,320
	Running current (Total) *1, *2	A	6.0 - 5.7 - 5.5
	Power factor (Total) *1, *2	%	99
	Starting current (Total) *1, *2	A	6.7
Coefficient of performance (C.O.P) (Total) *1, *2		4.09	5.00
Compressor	Model	SVB130FBBM1T	
	Output	W	1,400
	Current *1, *2	A	5.06
	Refrigeration oil (Model)	L	0.6 (FW68S)
Fan motor	Model	SIC-82FX-F764-1	
	Current *1, *2	A	0.5
Dimensions W x H x D		mm	840 x 710 x 330
Weight		kg	58
Special remarks	Air flow (Rated)	m ³ /h	1,860
	Sound level (Rated)	dB(A)	46
	Fan speed (Rated)	rpm	600
	Pre-charged refrigerant quantity (R32)	kg	2.4
	Max refrigerant quantity (R32)	kg	2.4

*1 Measured under rated operating frequency.

*2 When connected with indoor units below.

MSZ-LN18VG2 + MSZ-LN18VG2 + MSZ-LN18VG2

NOTE: Test conditions are based on ISO 5151. (Refrigerant piping length (one way): 5 m)

COOLING INDOOR Dry-bulb temperature 27.0 °C Wet-bulb temperature 19.0 °C

OUTDOOR Dry-bulb temperature 35.0 °C Wet-bulb temperature 24.0 °C

HEATING INDOOR Dry-bulb temperature 20.0 °C

OUTDOOR Dry-bulb temperature 7.0 °C Wet-bulb temperature 6.0 °C



Outdoor model			MXZ-3F54VF4	
Outdoor unit power supply			Single phase 220 - 230 - 240 V, 50 Hz	
System	Indoor units number		2 to 3	
	Piping total length	m	Max. 50	
	Connecting pipe length	m	Max. 25	
	Height difference (Indoor – Outdoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.	
	Height difference (Indoor – Indoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.	
Function			Cooling	Heating
Capacity Rated (Min.-Max.) *2		kW	5.4 (2.9 - 6.8)	7.0 (2.6 - 9.0)
Breaker capacity		A	25	
Electrical data	Power input (Total) *1, *2	W	1,320	1,400
	Running current (Total) *1, *2	A	6.0 - 5.7 - 5.5	6.4 - 6.1 - 5.9
	Power factor (Total) *1, *2	%	99	
	Starting current (Total) *1, *2	A	6.7	
Coefficient of performance (C.O.P) (Total) *1, *2			4.09	5.00
Compressor	Model		SVB130FBBM1T	
	Output	W	1,400	
	Current *1, *2	A	5.06	
	Refrigeration oil (Model)	L	0.6 (FW68S)	
Fan motor	Model		SIC-82FX-F764-1	
	Current *1, *2	A	0.5	
Dimensions W x H x D		mm	840 x 710 x 330	
Weight		kg	58	
Special remarks	Air flow (Rated)	m³/h	1,860	1,860
	Sound level (Rated)	dB(A)	46	50
	Fan speed (Rated)	rpm	600	600
	Pre-charged refrigerant quantity (R32)	kg	2.4	
	Max refrigerant quantity (R32)	kg	2.4	

*1 Measured under rated operating frequency.

*2 When connected with indoor units below.

MSZ-LN18VG2 + MSZ-LN18VG2 + MSZ-LN18VG2

NOTE: Test conditions are based on ISO 5151. (Refrigerant piping length (one way): 5 m)

COOLING INDOOR Dry-bulb temperature 27.0 °C Wet-bulb temperature 19.0 °C

OUTDOOR Dry-bulb temperature 35.0 °C Wet-bulb temperature 24.0 °C

HEATING INDOOR Dry-bulb temperature 20.0 °C

OUTDOOR Dry-bulb temperature 7.0 °C Wet-bulb temperature 6.0 °C



Outdoor model			MXZ-3F68VF	
Outdoor unit power supply			Single phase 220 - 230 - 240 V, 50 Hz	
System	Indoor units number		2 to 3	
	Piping total length	m	Max. 60	
	Connecting pipe length	m	Max. 25	
	Height difference (Indoor – Outdoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.	
	Height difference (Indoor – Indoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.	
Function			Cooling	Heating
Capacity Rated (Min.-Max.) *2		kW	6.8 (2.9 - 8.4)	8.6 (2.6 - 10.6)
Breaker capacity		A	25	
Electrical data	Power input (Total) *1, *2	W	1,840	1,910
	Running current (Total) *1, *2	A	8.4 - 8.0 - 7.7	8.8 - 8.4 - 8.0
	Power factor (Total) *1, *2	%	99	
	Starting current (Total) *1, *2	A	10.1	
Coefficient of performance (C.O.P) (Total) *1, *2			3.70	4.50
Compressor	Model		SVB172FCKM1T	
	Output	W	1,800	
	Current *1, *2	A	8.58	
	Refrigeration oil (Model)	L	0.6 (FW68S)	
Fan motor	Model		SIC-82FX-F764-1	
	Current *1, *2	A	0.5	
Dimensions W x H x D		mm	840 x 710 x 330	
Weight		kg	57	
Special remarks	Air flow (Rated)	m ³ /h	2,124	2,376
	Sound level (Rated)	dB(A)	48	53
	Fan speed (Rated)	rpm	650	700
	Pre-charged refrigerant quantity (R32)	kg	1.4	
	Max refrigerant quantity (R32)	kg	2.4	

*1 Measured under rated operating frequency.

*2 When connected with indoor units below.

MSZ-LN18VG + MSZ-LN25VG + MSZ-LN25VG

NOTE: Test conditions are based on ISO 5151. (Refrigerant piping length (one way): 5 m)

COOLING INDOOR Dry-bulb temperature 27.0 °C Wet-bulb temperature 19.0 °C

OUTDOOR Dry-bulb temperature 35.0 °C Wet-bulb temperature 24.0 °C

HEATING INDOOR Dry-bulb temperature 20.0 °C

OUTDOOR Dry-bulb temperature 7.0 °C Wet-bulb temperature 6.0 °C



Outdoor model			MXZ-3F68VF2	
Outdoor unit power supply			Single phase 220 - 230 - 240 V, 50 Hz	
System	Indoor units number		2 to 3	
	Piping total length	m	Max. 60	
	Connecting pipe length	m	Max. 25	
	Height difference (Indoor – Outdoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.	
	Height difference (Indoor – Indoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.	
Function			Cooling	Heating
Capacity Rated (Min.-Max.) *2		kW	6.8 (2.9 - 8.4)	8.6 (2.6 - 10.6)
Breaker capacity		A	25	
Electrical data	Power input (Total) *1, *2	W	1,840	1,910
	Running current (Total) *1, *2	A	8.4 - 8.0 - 7.7	8.8 - 8.4 - 8.0
	Power factor (Total) *1, *2	%	99	
	Starting current (Total) *1, *2	A	10.1	
Coefficient of performance (C.O.P) (Total) *1, *2			3.70	4.50
Compressor	Model		SVB172FCKM1T	
	Output	W	1,800	
	Current *1, *2	A	8.58	
	Refrigeration oil (Model)	L	0.6 (FW68S)	
Fan motor	Model		SIC-82FX-F764-1	
	Current *1, *2	A	0.5	
Dimensions W x H x D		mm	840 x 710 x 330	
Weight		kg	58	
Special remarks	Air flow (Rated)	m ³ /h	2,124	2,376
	Sound level (Rated)	dB(A)	48	53
	Fan speed (Rated)	rpm	650	700
	Pre-charged refrigerant quantity (R32)	kg	2.4	
	Max refrigerant quantity (R32)	kg	2.4	

*1 Measured under rated operating frequency.

*2 When connected with indoor units below.

MSZ-LN18VG + MSZ-LN25VG + MSZ-LN25VG


NOTE: Test conditions are based on ISO 5151. (Refrigerant piping length (one way): 5 m)

COOLING INDOOR Dry-bulb temperature 27.0 °C Wet-bulb temperature 19.0 °C

OUTDOOR Dry-bulb temperature 35.0 °C Wet-bulb temperature 24.0 °C

HEATING INDOOR Dry-bulb temperature 20.0 °C

OUTDOOR Dry-bulb temperature 7.0 °C Wet-bulb temperature 6.0 °C



Outdoor model		MXZ-3F68VF3	
Outdoor unit power supply		Single phase 220 - 230 - 240 V, 50 Hz	
System	Indoor units number	2 to 3	
	Piping total length	m	Max. 60
	Connecting pipe length	m	Max. 25
	Height difference (Indoor – Outdoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.
	Height difference (Indoor – Indoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.
Function		Cooling	Heating
Capacity Rated (Min.-Max.) *2	kW	6.8 (2.9 - 8.4)	8.6 (2.6 - 10.6)
Breaker capacity		A	25
Electrical data	Power input (Total) *1, *2	W	1,840
	Running current (Total) *1, *2	A	8.4 - 8.0 - 7.7
	Power factor (Total) *1, *2	%	99
	Starting current (Total) *1, *2	A	10.1
Coefficient of performance (C.O.P) (Total) *1, *2		3.70	4.50
Compressor	Model	SVB172FCKM1T	
	Output	W	1,800
	Current *1, *2	A	8.58
	Refrigeration oil (Model)	L	0.6 (FW68S)
Fan motor	Model	SIC-82FX-F764-1	
	Current *1, *2	A	0.5
Dimensions W x H x D		mm	840 x 710 x 330
Weight		kg	58
Special remarks	Air flow (Rated)	m ³ /h	2,124
	Sound level (Rated)	dB(A)	48
	Fan speed (Rated)	rpm	650
	Pre-charged refrigerant quantity (R32)	kg	2.4
	Max refrigerant quantity (R32)	kg	2.4

*1 Measured under rated operating frequency.

*2 When connected with indoor units below.

MSZ-LN18VG2 + MSZ-LN25VG2 + MSZ-LN25VG2


NOTE: Test conditions are based on ISO 5151. (Refrigerant piping length (one way): 5 m)

COOLING INDOOR Dry-bulb temperature 27.0 °C Wet-bulb temperature 19.0 °C

OUTDOOR Dry-bulb temperature 35.0 °C Wet-bulb temperature 24.0 °C

HEATING INDOOR Dry-bulb temperature 20.0 °C

OUTDOOR Dry-bulb temperature 7.0 °C Wet-bulb temperature 6.0 °C



Outdoor model			MXZ-3F68VF4	
Outdoor unit power supply			Single phase 220 - 230 - 240 V, 50 Hz	
System	Indoor units number		2 to 3	
	Piping total length	m	Max. 60	
	Connecting pipe length	m	Max. 25	
	Height difference (Indoor – Outdoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.	
	Height difference (Indoor – Indoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.	
Function			Cooling	Heating
Capacity Rated (Min.-Max.) *2		kW	6.8 (2.9 - 8.4)	8.6 (2.6 - 10.6)
Breaker capacity		A	25	
Electrical data	Power input (Total) *1, *2	W	1,840	1,910
	Running current (Total) *1, *2	A	8.4 - 8.0 - 7.7	8.8 - 8.4 - 8.0
	Power factor (Total) *1, *2	%	99	
	Starting current (Total) *1, *2	A	10.1	
Coefficient of performance (C.O.P) (Total) *1, *2			3.70	4.50
Compressor	Model		SVB172FCKM1T	
	Output	W	1,800	
	Current *1, *2	A	8.58	
	Refrigeration oil (Model)	L	0.6 (FW68S)	
Fan motor	Model		SIC-82FX-F764-1	
	Current *1, *2	A	0.5	
Dimensions W x H x D		mm	840 x 710 x 330	
Weight		kg	58	
Special remarks	Air flow (Rated)	m³/h	2,124	2,376
	Sound level (Rated)	dB(A)	48	53
	Fan speed (Rated)	rpm	650	700
	Pre-charged refrigerant quantity (R32)	kg	2.4	
	Max refrigerant quantity (R32)	kg	2.4	

*1 Measured under rated operating frequency.

*2 When connected with indoor units below.

MSZ-LN18VG2 + MSZ-LN25VG2 + MSZ-LN25VG2

NOTE: Test conditions are based on ISO 5151. (Refrigerant piping length (one way): 5 m)

COOLING INDOOR Dry-bulb temperature 27.0 °C Wet-bulb temperature 19.0 °C

OUTDOOR Dry-bulb temperature 35.0 °C Wet-bulb temperature 24.0 °C

HEATING INDOOR Dry-bulb temperature 20.0 °C

OUTDOOR Dry-bulb temperature 7.0 °C Wet-bulb temperature 6.0 °C



Outdoor model		MXZ-4F72VF	
Outdoor unit power supply		Single phase 220 - 230 - 240 V, 50 Hz	
System	Indoor units number	2 to 4	
	Piping total length	m	Max. 60
	Connecting pipe length	m	Max. 25
	Height difference (Indoor – Outdoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.
	Height difference (Indoor – Indoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.
Function		Cooling	Heating
Capacity Rated (Min.-Max.) *2	kW	7.2 (3.7 - 8.8)	8.6 (3.4 - 10.7)
Breaker capacity		A	25
Electrical data	Power input (Total) *1, *2	W	1,850
	Running current (Total) *1, *2	A	8.5 - 8.1 - 7.8
	Power factor (Total) *1, *2	%	99
	Starting current (Total) *1, *2	A	10.1
Coefficient of performance (C.O.P) (Total) *1, *2		3.89	4.60
Compressor	Model	SVB172FCKM1T	
	Output	W	2,000
	Current *1, *2	A	6.98
	Refrigeration oil (Model)	L	0.6 (FW68S)
Fan motor	Model	SIC-82FX-F764-1	
	Current *1, *2	A	0.5
Dimensions W x H x D		mm	840 x 710 x 330
Weight		kg	58
Special remarks	Air flow (Rated)	m ³ /h	2,124
	Sound level (Rated)	dB(A)	48
	Fan speed (Rated)	rpm	650
	Pre-charged refrigerant quantity (R32)	kg	1.4
	Max refrigerant quantity (R32)	kg	2.4

*1 Measured under rated operating frequency.

*2 When connected with indoor units below.

MSZ-LN18VG + MSZ-LN18VG + MSZ-LN18VG + MSZ-LN18VG


NOTE: Test conditions are based on ISO 5151. (Refrigerant piping length (one way): 5 m)

COOLING INDOOR Dry-bulb temperature 27.0 °C Wet-bulb temperature 19.0 °C

OUTDOOR Dry-bulb temperature 35.0 °C Wet-bulb temperature 24.0 °C

HEATING INDOOR Dry-bulb temperature 20.0 °C

OUTDOOR Dry-bulb temperature 7.0 °C Wet-bulb temperature 6.0 °C



Outdoor model			MXZ-4F72VF2	
Outdoor unit power supply			Single phase 220 - 230 - 240 V, 50 Hz	
System	Indoor units number		2 to 4	
	Piping total length	m	Max. 60	
	Connecting pipe length	m	Max. 25	
	Height difference (Indoor – Outdoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.	
	Height difference (Indoor – Indoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.	
Function			Cooling	Heating
Capacity Rated (Min.-Max.) *2		kW	7.2 (3.7 - 8.8)	8.6 (3.4 - 10.7)
Breaker capacity		A	25	
Electrical data	Power input (Total) *1, *2	W	1,850	1,870
	Running current (Total) *1, *2	A	8.5 - 8.1 - 7.8	8.6 - 8.2 - 7.9
	Power factor (Total) *1, *2	%	99	
	Starting current (Total) *1, *2	A	10.1	
Coefficient of performance (C.O.P) (Total) *1, *2			3.89	4.60
Compressor	Model		SVB172FCKM1T	
	Output	W	2,000	
	Current *1, *2	A	6.98	
	Refrigeration oil (Model)	L	0.6 (FW68S)	
Fan motor	Model		SIC-82FX-F764-1	
	Current *1, *2	A	0.5	
Dimensions W x H x D		mm	840 x 710 x 330	
Weight		kg	59	
Special remarks	Air flow (Rated)	m ³ /h	2,124	2,562
	Sound level (Rated)	dB(A)	48	54
	Fan speed (Rated)	rpm	650	740
	Pre-charged refrigerant quantity (R32)	kg	2.4	
	Max refrigerant quantity (R32)	kg	2.4	

*1 Measured under rated operating frequency.

*2 When connected with indoor units below.

MSZ-LN18VG + MSZ-LN18VG + MSZ-LN18VG + MSZ-LN18VG


NOTE: Test conditions are based on ISO 5151. (Refrigerant piping length (one way): 5 m)

COOLING INDOOR Dry-bulb temperature 27.0 °C Wet-bulb temperature 19.0 °C

OUTDOOR Dry-bulb temperature 35.0 °C Wet-bulb temperature 24.0 °C

HEATING INDOOR Dry-bulb temperature 20.0 °C

OUTDOOR Dry-bulb temperature 7.0 °C Wet-bulb temperature 6.0 °C



Outdoor model		MXZ-4F72VF3	
Outdoor unit power supply		Single phase 220 - 230 - 240 V, 50 Hz	
System	Indoor units number	2 to 4	
	Piping total length	m	Max. 60
	Connecting pipe length	m	Max. 25
	Height difference (Indoor – Outdoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.
	Height difference (Indoor – Indoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.
Function		Cooling	Heating
Capacity Rated (Min.-Max.) *2	kW	7.2 (3.7 - 8.8)	8.6 (3.4 - 10.7)
Breaker capacity		A	25
Electrical data	Power input (Total) *1, *2	W	1,850
	Running current (Total) *1, *2	A	8.5 - 8.1 - 7.8
	Power factor (Total) *1, *2	%	99
	Starting current (Total) *1, *2	A	10.1
Coefficient of performance (C.O.P) (Total) *1, *2		3.89	4.60
Compressor	Model	SVB172FCKM1T	
	Output	W	2,000
	Current *1, *2	A	6.98
	Refrigeration oil (Model)	L	0.6 (FW68S)
Fan motor	Model	SIC-82FX-F764-1	
	Current *1, *2	A	0.5
Dimensions W x H x D		mm	840 x 710 x 330
Weight		kg	59
Special remarks	Air flow (Rated)	m ³ /h	2,124
	Sound level (Rated)	dB(A)	48
	Fan speed (Rated)	rpm	650
	Pre-charged refrigerant quantity (R32)	kg	2.4
	Max refrigerant quantity (R32)	kg	2.4

*1 Measured under rated operating frequency.

*2 When connected with indoor units below.

MSZ-LN18VG2 + MSZ-LN18VG2 + MSZ-LN18VG2 + MSZ-LN18VG2

NOTE: Test conditions are based on ISO 5151. (Refrigerant piping length (one way): 5 m)

COOLING INDOOR Dry-bulb temperature 27.0 °C Wet-bulb temperature 19.0 °C

OUTDOOR Dry-bulb temperature 35.0 °C Wet-bulb temperature 24.0 °C

HEATING INDOOR Dry-bulb temperature 20.0 °C

OUTDOOR Dry-bulb temperature 7.0 °C Wet-bulb temperature 6.0 °C



Outdoor model			MXZ-4F72VF4	
Outdoor unit power supply			Single phase 220 - 230 - 240 V, 50 Hz	
System	Indoor units number		2 to 4	
	Piping total length	m	Max. 60	
	Connecting pipe length	m	Max. 25	
	Height difference (Indoor – Outdoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.	
	Height difference (Indoor – Indoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.	
Function			Cooling	Heating
Capacity Rated (Min.-Max.) *2		kW	7.2 (3.7 - 8.8)	8.6 (3.4 - 10.7)
Breaker capacity		A	25	
Electrical data	Power input (Total) *1, *2	W	1,850	1,870
	Running current (Total) *1, *2	A	8.5 - 8.1 - 7.8	8.6 - 8.2 - 7.9
	Power factor (Total) *1, *2	%	99	
	Starting current (Total) *1, *2	A	10.1	
Coefficient of performance (C.O.P) (Total) *1, *2			3.89	4.60
Compressor	Model		SVB172FCKM1T	
	Output	W	2,000	
	Current *1, *2	A	6.98	
	Refrigeration oil (Model)	L	0.6 (FW68S)	
Fan motor	Model		SIC-82FX-F764-1	
	Current *1, *2	A	0.5	
Dimensions W x H x D		mm	840 x 710 x 330	
Weight		kg	59	
Special remarks	Air flow (Rated)	m ³ /h	2,124	2,562
	Sound level (Rated)	dB(A)	48	54
	Fan speed (Rated)	rpm	650	740
	Pre-charged refrigerant quantity (R32)	kg	2.4	
	Max refrigerant quantity (R32)	kg	2.4	

*1 Measured under rated operating frequency.

*2 When connected with indoor units below.

MSZ-LN18VG2 + MSZ-LN18VG2 + MSZ-LN18VG2 + MSZ-LN18VG2

NOTE: Test conditions are based on ISO 5151. (Refrigerant piping length (one way): 5 m)

COOLING INDOOR Dry-bulb temperature 27.0 °C Wet-bulb temperature 19.0 °C

OUTDOOR Dry-bulb temperature 35.0 °C Wet-bulb temperature 24.0 °C

HEATING INDOOR Dry-bulb temperature 20.0 °C

OUTDOOR Dry-bulb temperature 7.0 °C Wet-bulb temperature 6.0 °C



Outdoor model			MXZ-4F80VF2	
Outdoor unit power supply			Single phase 220 - 230 - 240 V, 50 Hz	
System	Indoor units number		2 to 4	
	Piping total length	m	Max. 60	
	Connecting pipe length	m	Max. 25	
	Height difference (Indoor – Outdoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.	
	Height difference (Indoor – Indoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.	
Function			Cooling	Heating
Capacity Rated (Min.-Max.) *2		kW	8.0 (3.7 - 9.0)	8.8 (3.4 - 11.0)
Breaker capacity		A	25	
Electrical data	Power input (Total) *1, *2	W	2,250	2,000
	Running current (Total) *1, *2	A	10.3 - 9.9 - 9.5	9.2 - 8.8 - 8.4
	Power factor (Total) *1, *2	%	99	
	Starting current (Total) *1, *2	A	10.1	
Coefficient of performance (C.O.P) (Total) *1, *2			3.56	4.40
Compressor	Model		SVB172FCKM1T	
	Output	W	2,000	
	Current *1, *2	A	6.98	
	Refrigeration oil (Model)	L	0.6 (FW68S)	
Fan motor	Model		SIC-82FX-F764-1	
	Current *1, *2	A	0.5	
Dimensions W x H x D		mm	840 x 710 x 330	
Weight		kg	59	
Special remarks	Air flow (Rated)	m ³ /h	2,418	2,646
	Sound level (Rated)	dB(A)	50	55
	Fan speed (Rated)	rpm	710	760
	Pre-charged refrigerant quantity (R32)	kg	2.4	
	Max refrigerant quantity (R32)	kg	2.4	

*1 Measured under rated operating frequency.

*2 When connected with indoor units below.

MSZ-LN18VG + MSZ-LN18VG + MSZ-LN18VG + MSZ-LN25VG

NOTE: Test conditions are based on ISO 5151. (Refrigerant piping length (one way): 5 m)

COOLING INDOOR Dry-bulb temperature 27.0 °C Wet-bulb temperature 19.0 °C

OUTDOOR Dry-bulb temperature 35.0 °C Wet-bulb temperature 24.0 °C

HEATING INDOOR Dry-bulb temperature 20.0 °C

OUTDOOR Dry-bulb temperature 7.0 °C Wet-bulb temperature 6.0 °C



Outdoor model			MXZ-4F80VF3	
Outdoor unit power supply			Single phase 220 - 230 - 240 V, 50 Hz	
System	Indoor units number		2 to 4	
	Piping total length	m	Max. 60	
	Connecting pipe length	m	Max. 25	
	Height difference (Indoor – Outdoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.	
	Height difference (Indoor – Indoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.	
Function			Cooling	Heating
Capacity Rated (Min.-Max.) *2		kW	8.0 (3.7 - 9.0)	8.8 (3.4 - 11.0)
Breaker capacity		A	25	
Electrical data	Power input (Total) *1, *2	W	2,250	2,000
	Running current (Total) *1, *2	A	10.3 - 9.9 - 9.5	9.2 - 8.8 - 8.4
	Power factor (Total) *1, *2	%	99	
	Starting current (Total) *1, *2	A	10.1	
Coefficient of performance (C.O.P) (Total) *1, *2			3.56	4.40
Compressor	Model		SVB172FCKM1T	
	Output	W	2,000	
	Current *1, *2	A	6.98	
	Refrigeration oil (Model)	L	0.6 (FW68S)	
Fan motor	Model		SIC-82FX-F764-1	
	Current *1, *2	A	0.5	
Dimensions W x H x D		mm	840 x 710 x 330	
Weight		kg	59	
Special remarks	Air flow (Rated)	m³/h	2,418	2,646
	Sound level (Rated)	dB(A)	50	55
	Fan speed (Rated)	rpm	710	760
	Pre-charged refrigerant quantity (R32)	kg	2.4	
	Max refrigerant quantity (R32)	kg	2.4	

*1 Measured under rated operating frequency.

*2 When connected with indoor units below.

MSZ-LN18VG2 + MSZ-LN18VG2 + MSZ-LN18VG2 + MSZ-LN25VG2


NOTE: Test conditions are based on ISO 5151. (Refrigerant piping length (one way): 5 m)

COOLING INDOOR Dry-bulb temperature 27.0 °C Wet-bulb temperature 19.0 °C

OUTDOOR Dry-bulb temperature 35.0 °C Wet-bulb temperature 24.0 °C

HEATING INDOOR Dry-bulb temperature 20.0 °C

OUTDOOR Dry-bulb temperature 7.0 °C Wet-bulb temperature 6.0 °C



Outdoor model			MXZ-4F80VF4	
Outdoor unit power supply			Single phase 220 - 230 - 240 V, 50 Hz	
System	Indoor units number		2 to 4	
	Piping total length	m	Max. 60	
	Connecting pipe length	m	Max. 25	
	Height difference (Indoor – Outdoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.	
	Height difference (Indoor – Indoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.	
Function			Cooling	Heating
Capacity Rated (Min.-Max.) *2		kW	8.0 (3.7 - 9.0)	8.8 (3.4 - 11.0)
Breaker capacity		A	25	
Electrical data	Power input (Total) *1, *2	W	2,250	2,000
	Running current (Total) *1, *2	A	10.3 - 9.9 - 9.5	9.2 - 8.8 - 8.4
	Power factor (Total) *1, *2	%	99	
	Starting current (Total) *1, *2	A	10.1	
Coefficient of performance (C.O.P) (Total) *1, *2			3.56	4.40
Compressor	Model		SVB172FCKM1T	
	Output	W	2,000	
	Current *1, *2	A	6.98	
	Refrigeration oil (Model)	L	0.6 (FW68S)	
Fan motor	Model		SIC-82FX-F764-1	
	Current *1, *2	A	0.5	
Dimensions W x H x D		mm	840 x 710 x 330	
Weight		kg	59	
Special remarks	Air flow (Rated)	m ³ /h	2,418	2,646
	Sound level (Rated)	dB(A)	50	55
	Fan speed (Rated)	rpm	710	760
	Pre-charged refrigerant quantity (R32)	kg	2.4	
	Max refrigerant quantity (R32)	kg	2.4	

*1 Measured under rated operating frequency.

*2 When connected with indoor units below.

MSZ-LN18VG2 + MSZ-LN18VG2 + MSZ-LN18VG2 + MSZ-LN25VG2


NOTE: Test conditions are based on ISO 5151. (Refrigerant piping length (one way): 5 m)

COOLING INDOOR Dry-bulb temperature 27.0 °C Wet-bulb temperature 19.0 °C

OUTDOOR Dry-bulb temperature 35.0 °C Wet-bulb temperature 24.0 °C

HEATING INDOOR Dry-bulb temperature 20.0 °C

OUTDOOR Dry-bulb temperature 7.0 °C Wet-bulb temperature 6.0 °C



Outdoor model			MXZ-4F83VF	
Outdoor unit power supply			Single phase 220 -230 - 240 V, 50 Hz *3	
System	Indoor units number		1 to 4 *4	
	Piping total length	m	Max. 70	
	Connecting pipe length	m	Max. 25	
	Height difference (Indoor – Outdoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.	
	Height difference (Indoor – Indoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.	
Function			Cooling	Heating
Capacity Rated (Min.-Max.) *2		kW	8.3 (3.7 - 9.2)	9.3 (3.4 - 11.6)
Breaker capacity		A	25	
Electrical data	Power input (Total) *1, *2	W	1,970	2,000
	Running current (Total) *1, *2	A	9.1 - 8.7 - 8.3	9.2 - 8.8 - 8.4
	Power factor (Total) *1, *2	%	99	
	Starting current (Total) *1, *2	A	8.8	
Coefficient of performance (C.O.P) (Total) *1, *2			4.21	4.65
Compressor	Model		SVB220FUGMC-L1	
	Output	W	2,200	
	Current *1, *2	A	7.4	7.5
	Refrigeration oil (Model)	L	0.6 (FW68CA)	
Fan motor	Model		SIC-88FWJ-D888-4	
	Current *1, *2	A	0.3	
Dimensions W x H x D		mm	950 x 796 x 330	
Weight		kg	62	
Special remarks	Air flow (Rated)	m³/h	3,420	3,720
	Sound level (Rated)	dB(A)	49	51
	Fan speed (Rated)	rpm	600	640
	Pre-charged refrigerant quantity (R32)	kg	2.4	
	Max refrigerant quantity (R32)	kg	2.4	

*1 Measured under rated operating frequency.

*2 When connected with below indoor units below.

MSZ-LN18VG2 + MSZ-LN18VG2 + MSZ-LN25VG2 + MSZ-LN25VG2

*3 220 and 240 V are only - [E1].

*4 At least 2 indoor units must be connected when using indoor unit with capacity lower than 25 class.

NOTE: Test conditions are based on ISO 5151. (Refrigerant piping length (one way): 5 m)

COOLING INDOOR Dry-bulb temperature 27.0°C Wet-bulb temperature 19.0°C

OUTDOOR Dry-bulb temperature 35.0°C Wet-bulb temperature 24.0°C

HEATING INDOOR Dry-bulb temperature 20.0°C

OUTDOOR Dry-bulb temperature 7.0°C Wet-bulb temperature 6.0°C



Outdoor model			MXZ-4F83VF2	
Outdoor unit power supply			Single phase 220 -230 - 240 V, 50 Hz *3	
System	Indoor units number		1 to 4 *4	
	Piping total length	m	Max. 70	
	Connecting pipe length	m	Max. 25	
	Height difference (Indoor – Outdoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.	
	Height difference (Indoor – Indoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.	
Function			Cooling	Heating
Capacity Rated (Min.-Max.) *2		kW	8.3 (3.7 - 9.2)	9.3 (3.4 - 11.6)
Breaker capacity		A	25	
Electrical data	Power input (Total) *1, *2	W	1,970	2,000
	Running current (Total) *1, *2	A	9.1 - 8.7 - 8.3	9.2 - 8.8 - 8.4
	Power factor (Total) *1, *2	%	99	
	Starting current (Total) *1, *2	A	8.8	
Coefficient of performance (C.O.P) (Total) *1, *2			4.21	4.65
Compressor	Model		SVB220FUGMC-L1	
	Output	W	2,200	
	Current *1, *2	A	7.4	7.5
	Refrigeration oil (Model)	L	0.6 (FW68CA)	
Fan motor	Model		ZWB2710D10A	
	Current *1, *2	A	0.3	
Dimensions W x H x D		mm	950 x 796 x 330	
Weight		kg	62	
Special remarks	Air flow (Rated)	m ³ /h	3,420	3,720
	Sound level (Rated)	dB(A)	49	51
	Fan speed (Rated)	rpm	600	640
	Pre-charged refrigerant quantity (R32)	kg	2.4	
	Max refrigerant quantity (R32)	kg	2.4	

*1 Measured under rated operating frequency.

*2 When connected with below indoor units below.

MSZ-LN18VG2 + MSZ-LN18VG2 + MSZ-LN25VG2 + MSZ-LN25VG2

*3 220 and 240 V are only - [E1].

*4 At least 2 indoor units must be connected when using indoor unit with capacity lower than 25 class.

NOTE: Test conditions are based on ISO 5151. (Refrigerant piping length (one way): 5 m)

COOLING INDOOR Dry-bulb temperature 27.0°C Wet-bulb temperature 19.0°C

OUTDOOR Dry-bulb temperature 35.0°C Wet-bulb temperature 24.0°C

HEATING INDOOR Dry-bulb temperature 20.0°C

OUTDOOR Dry-bulb temperature 7.0°C Wet-bulb temperature 6.0°C



Outdoor model			MXZ-5F102VF	
Outdoor unit power supply			Single phase 220 -230 - 240 V, 50 Hz *3	
System	Indoor units number		1 to 5 *4	
	Piping total length	m	Max. 80	
	Connecting pipe length	m	Max. 25	
	Height difference (Indoor – Outdoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.	
	Height difference (Indoor – Indoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.	
Function			Cooling	Heating
Capacity Rated (Min.-Max.) *2		kW	10.2 (3.9 - 11.0)	10.5 (4.1 - 14.0)
Breaker capacity		A	25	
Electrical data	Power input (Total) *1, *2	W	2,800	2,280
	Running current (Total) *1, *2	A	12.9 - 12.3 - 11.8	10.5 - 10.0 - 9.6
	Power factor (Total) *1, *2	%	99	
	Starting current (Total) *1, *2	A	12.3	
Coefficient of performance (C.O.P) (Total) *1, *2			3.64	4.60
Compressor	Model		SVB220FUGMC-L1	
	Output	W	2,800	
	Current *1, *2	A	10.7	8.4
	Refrigeration oil (Model)	L	0.6 (FW68CA)	
Fan motor	Model		SIC-88FWJ-D888-4	
	Current *1, *2	A	0.3	
Dimensions W x H x D		mm	950 x 796 x 330	
Weight		kg	62	
Special remarks	Air flow (Rated)	m³/h	3,780	4,500
	Sound level (Rated)	dB(A)	52	56
	Fan speed (Rated)	rpm	650	750
	Pre-charged refrigerant quantity (R32)	kg	2.4	
	Max refrigerant quantity (R32)	kg	2.4	

*1 Measured under rated operating frequency.

*2 When connected with below indoor units below.

MSZ-LN18VG2 + MSZ-LN18VG2 + MSZ-LN18VG2 + MSZ-LN25VG2 + MSZ-LN25VG2

*3 220 and 240 V are only - [E1].

*4 At least 2 indoor units must be connected when using indoor unit with capacity lower than 25 class.


NOTE: Test conditions are based on ISO 5151. (Refrigerant piping length (one way): 5 m)

COOLING INDOOR Dry-bulb temperature 27.0°C Wet-bulb temperature 19.0°C

OUTDOOR Dry-bulb temperature 35.0°C Wet-bulb temperature 24.0°C

HEATING INDOOR Dry-bulb temperature 20.0°C

OUTDOOR Dry-bulb temperature 7.0°C Wet-bulb temperature 6.0°C



Outdoor model		MXZ-5F102VF2	
Outdoor unit power supply		Single phase 220 -230 - 240 V, 50 Hz *3	
System	Indoor units number	1 to 5 *4	
	Piping total length	m	Max. 80
	Connecting pipe length	m	Max. 25
	Height difference (Indoor – Outdoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.
	Height difference (Indoor – Indoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.
Function		Cooling	Heating
Capacity Rated (Min.-Max.) *2	kW	10.2 (3.9 - 11.0)	10.5 (4.1 - 14.0)
Breaker capacity	A	25	
Electrical data	Power input (Total) *1, *2	W	2,800
	Running current (Total) *1, *2	A	12.9 - 12.3 - 11.8
	Power factor (Total) *1, *2	%	99
	Starting current (Total) *1, *2	A	12.3
Coefficient of performance (C.O.P) (Total) *1, *2		3.64	4.60
Compressor	Model	SVB220FUGMC-L1	
	Output	W	2,800
	Current *1, *2	A	10.7
	Refrigeration oil (Model)	L	0.6 (FW68CA)
Fan motor	Model	ZWB2710D10A	
	Current *1, *2	A	0.3
Dimensions W x H x D	mm	950 x 796 x 330	
Weight	kg	62	
Special remarks	Air flow (Rated)	m ³ /h	3,780
	Sound level (Rated)	dB(A)	52
	Fan speed (Rated)	rpm	650
	Pre-charged refrigerant quantity (R32)	kg	2.4
	Max refrigerant quantity (R32)	kg	2.4

*1 Measured under rated operating frequency.

*2 When connected with below indoor units below.

MSZ-LN18VG2 + MSZ-LN18VG2 + MSZ-LN18VG2 + MSZ-LN25VG2 + MSZ-LN25VG2

*3 220 and 240 V are only - **E1**.

*4 At least 2 indoor units must be connected when using indoor unit with capacity lower than 25 class.


NOTE: Test conditions are based on ISO 5151. (Refrigerant piping length (one way): 5 m)

COOLING INDOOR Dry-bulb temperature 27.0°C Wet-bulb temperature 19.0°C

OUTDOOR Dry-bulb temperature 35.0°C Wet-bulb temperature 24.0°C

HEATING INDOOR Dry-bulb temperature 20.0°C

OUTDOOR Dry-bulb temperature 7.0°C Wet-bulb temperature 6.0°C



Outdoor model			MXZ-6F120VF2	
Outdoor unit power supply			Single phase 220 - 230 - 240V, 50 Hz *3	
System	Indoor units number		1 to 6 *4	
	Piping total length	m	Max. 80	
	Connecting pipe length	m	Max. 25	
	Height difference (Indoor – Outdoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.	
	Height difference (Indoor – Indoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.	
Function			Cooling	Heating
Capacity Rated (Min.-Max.) *2		kW	12.0 (3.5 - 14.0)	14.0 (3.5 - 16.5)
Breaker capacity		A	32	
Electrical data	Power input (Total) *1, *2	W	3,600	3,310
	Running current (Total) *1, *2	A	15.2 - 14.5 - 13.9	15.2 - 14.5 - 13.9
	Power factor (Total) *1, *2	%	99	
	Starting current (Total) *1, *2	A	14.5	
Coefficient of performance (C.O.P) (Total) *1, *2			3.33	4.23
Compressor	Model		MVB33FBFMC	
	Output	W	3,300	
	Current *1, *2	A	14.2	12.6
	Refrigeration oil (Model)	L	1.10 (FW68CA)	
Fan motor	Model		SIC-88FWJ-D888-4	
	Current *1, *2	A	0.3	
Dimensions W x H x D		mm	950 x 1,048 x 330	
Weight		kg	87	
Special remarks	Air flow (Rated)	m ³ /h	3,780	4,620
	Sound level (Rated)	dB(A)	55	57
	Fan speed (Rated)	rpm	650	770
	Pre-charged refrigerant quantity (R32)	kg	2.4	
	Refrigerant filling capacity (R32)	kg	2.4	

*1 Measured under rated operating frequency.

*2 When connected with indoor units below.

MSZ-LN18VG2 + MSZ-LN18VG2 + MSZ-LN18VG2 + MSZ-LN18VG2 + MSZ-LN25VG2 + MSZ-LN25VG2

*3 220 and 240 V are only - [E1].

*4 At least 2 indoor units must be connected when using indoor unit with capacity lower than 25 class.

NOTE: Test conditions are based on ISO 5151. (Refrigerant piping length (one way): 5 m)

COOLING INDOOR Dry-bulb temperature 27.0 °C Wet-bulb temperature 19.0 °C

OUTDOOR Dry-bulb temperature 35.0 °C Wet-bulb temperature 24.0 °C

HEATING INDOOR Dry-bulb temperature 20.0 °C

OUTDOOR Dry-bulb temperature 7.0 °C Wet-bulb temperature 6.0 °C



Outdoor model		MXZ-6F122VF	
Outdoor unit power supply		Single phase 220 - 230 - 240V, 50 Hz *3	
System	Indoor units number	1 to 6 *4	
	Piping total length	m	Max. 80
	Connecting pipe length	m	Max. 25
	Height difference (Indoor – Outdoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.
	Height difference (Indoor – Indoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.
Function		Cooling	Heating
Capacity Rated (Min.-Max.) *2	kW	12.2 (3.5 - 14.0)	14.0 (3.5 - 16.5)
Breaker capacity		A 32	
Electrical data	Power input (Total) *1, *2	W	3,660
	Running current (Total) *1, *2	A	16.8 - 16.1 - 15.4
	Power factor (Total) *1, *2	%	99
	Starting current (Total) *1, *2	A	16.1
Coefficient of performance (C.O.P) (Total) *1, *2		3.33	4.23
Compressor	Model	MVB33FBFMC	
	Output	W	3,300
	Current *1, *2	A	14.2
	Refrigeration oil (Model)	L	1.10 (FW68CA)
Fan motor	Model	SIC-88FWJ-D888-4	
	Current *1, *2	A	0.3
Dimensions W x H x D		mm 950 x 1,048 x 330	
Weight		kg 87	
Special remarks	Air flow (Rated)	m ³ /h	3,780
	Sound level (Rated)	dB(A)	55
	Fan speed (Rated)	rpm	650
	Pre-charged refrigerant quantity (R32)	kg	2.4
	Refrigerant filling capacity (R32)	kg	2.4

*1 Measured under rated operating frequency.

*2 When connected with indoor units below.

MSZ-LN18VG2 + MSZ-LN18VG2 + MSZ-LN18VG2 + MSZ-LN18VG2 + MSZ-LN25VG2 + MSZ-LN25VG2

*3 220 and 240 V are only - [E1].

*4 At least 2 indoor units must be connected when using indoor unit with capacity lower than 25 class.

NOTE: Test conditions are based on ISO 5151. (Refrigerant piping length (one way): 5 m)

COOLING INDOOR Dry-bulb temperature 27.0 °C Wet-bulb temperature 19.0 °C

OUTDOOR Dry-bulb temperature 35.0 °C Wet-bulb temperature 24.0 °C

HEATING INDOOR Dry-bulb temperature 20.0 °C

OUTDOOR Dry-bulb temperature 7.0 °C Wet-bulb temperature 6.0 °C



Outdoor model			MXZ-2F53VFHZ	
Outdoor unit power supply			Single phase 220 -230 - 240 V, 50 Hz	
System	Indoor units number		1 to 2 *3	
	Piping total length	m	Max. 30	
	Connecting pipe length	m	Max. 20	
	Height difference (Indoor – Outdoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.	
	Height difference (Indoor – Indoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.	
Function			Cooling	Heating
Capacity Rated (Min.-Max.) *2		kW	5.3 (1.1 - 6.0)	6.4 (1.0 - 7.0)
Breaker capacity		A	16	
Electrical data	Power input (Total) *1, *2	W	1,290	1,360
	Running current (Total) *1, *2	A	5.9 - 5.7 - 5.4	6.2 - 6.0 - 5.7
	Power factor (Total) *1, *2	%	99	
	Starting current (Total) *1, *2	A	6.0	
Coefficient of performance (C.O.P) (Total) *1, *2			4.11	4.71
Compressor	Model		SVB220FUGMC-L1	
	Output	W	1,400	
	Current *1, *2	A	4.9	5.2
	Refrigeration oil (Model)	L	0.6 (FW68CA)	
Fan motor	Model		SIC-88FWJ-D888-4	
	Current *1, *2	A	0.3	
Dimensions W x H x D		mm	950 x 796 x 330	
Weight		kg	61	
Special remarks	Air flow (Rated)	m ³ /h	2,580	2,430
	Sound level (Rated)	dB(A)	45	47
	Fan speed (Rated)	rpm	480	460
	Pre-charged refrigerant quantity (R32)	kg	2.4	
	Max refrigerant quantity (R32)	kg	2.4	

*1 Measured under rated operating frequency.

*2 When connected with below indoor units below.

MSZ-LN18VG2 + MSZ-LN35VG2

*3 At least 2 indoor units must be connected when using indoor unit with capacity lower than 25 class.


NOTE: Test conditions are based on ISO 5151. (Refrigerant piping length (one way): 5 m)

COOLING INDOOR Dry-bulb temperature 27.0°C Wet-bulb temperature 19.0°C

OUTDOOR Dry-bulb temperature 35.0°C Wet-bulb temperature 24.0°C

HEATING INDOOR Dry-bulb temperature 20.0°C

OUTDOOR Dry-bulb temperature 7.0°C Wet-bulb temperature 6.0°C



Outdoor model			MXZ-2F53VFHZ2		
Outdoor unit power supply			Single phase 220 -230 - 240 V, 50 Hz		
System	Indoor units number		1 to 2 *3		
	Piping total length	m	Max. 30		
	Connecting pipe length	m	Max. 20		
	Height difference (Indoor – Outdoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.		
	Height difference (Indoor – Indoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.		
Function			Cooling	Heating	
Capacity Rated (Min.-Max.) *2		kW	5.3 (1.1 - 6.0)	6.4 (1.0 - 7.0)	
Breaker capacity		A	16		
Electrical data	Power input (Total) *1, *2		W	1,290	1,360
	Running current (Total) *1, *2		A	5.9 - 5.7 - 5.4	6.2 - 6.0 - 5.7
	Power factor (Total) *1, *2		%	99	
	Starting current (Total) *1, *2		A	6.0	
Coefficient of performance (C.O.P) (Total) *1, *2			4.11	4.71	
Compressor	Model		SVB220FUGMC-L1		
	Output	W	1,400		
	Current *1, *2	A	4.9	5.2	
	Refrigeration oil (Model)	L	0.6 (FW68CA)		
Fan motor	Model		ZWB2710D10A		
	Current *1, *2	A	0.3		
Dimensions W x H x D		mm	950 x 796 x 330		
Weight		kg	61		
Special remarks	Air flow (Rated)	m ³ /h	2,580	2,430	
	Sound level (Rated)	dB(A)	45	47	
	Fan speed (Rated)	rpm	480	460	
	Pre-charged refrigerant quantity (R32)	kg	2.4		
	Max refrigerant quantity (R32)	kg	2.4		

*1 Measured under rated operating frequency.

*2 When connected with below indoor units below.

MSZ-LN18VG2 + MSZ-LN35VG2

*3 At least 2 indoor units must be connected when using indoor unit with capacity lower than 25 class.

NOTE: Test conditions are based on ISO 5151. (Refrigerant piping length (one way): 5 m)

COOLING INDOOR Dry-bulb temperature 27.0°C Wet-bulb temperature 19.0°C

OUTDOOR Dry-bulb temperature 35.0°C Wet-bulb temperature 24.0°C

HEATING INDOOR Dry-bulb temperature 20.0°C

OUTDOOR Dry-bulb temperature 7.0°C Wet-bulb temperature 6.0°C



Outdoor model			MXZ-4F83VFHZ	
Outdoor unit power supply			Single phase 220 -230 - 240 V, 50 Hz	
System	Indoor units number		1 to 4 *3	
	Piping total length	m	Max. 70	
	Connecting pipe length	m	Max. 25	
	Height difference (Indoor – Outdoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.	
	Height difference (Indoor – Indoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.	
Function			Cooling	Heating
Capacity Rated (Min.-Max.) *2		kW	8.3 (3.5 - 9.2)	9.0 (3.5 - 11.6)
Breaker capacity		A	30	
Electrical data	Power input (Total) *1, *2	W	1,900	1,700
	Running current (Total) *1, *2	A	8.7 - 8.3 - 8.0	7.8 -7.5 -7.2
	Power factor (Total) *1, *2	%	99	
	Starting current (Total) *1, *2	A	8.3	
Coefficient of performance (C.O.P) (Total) *1, *2			4.37	5.29
Compressor	Model		MVB33FBFMC	
	Output	W	2,200	
	Current *1, *2	A	7.0	6.2
	Refrigeration oil (Model)	L	1.10 (FW68CA)	
Fan motor	Model		SIC-88FWJ-D888-4	
	Current *1, *2	A	0.3	
Dimensions W x H x D		mm	950 x 1,048 x 330	
Weight		kg	86	
Special remarks	Air flow (Rated)	m³/h	3,780	4,620
	Sound level (Rated)	dB(A)	55	57
	Fan speed (Rated)	rpm	650	770
	Pre-charged refrigerant quantity (R32)	kg	2.4	
	Max refrigerant quantity (R32)	kg	2.4	

*1 Measured under rated operating frequency.

*2 When connected with below indoor units below.

MSZ-LN18VG2 + MSZ-LN18VG2 + MSZ-LN25VG2 + MSZ-LN25VG2

*3 At least 2 indoor units must be connected when using indoor unit with capacity lower than 25 class.

NOTE: Test conditions are based on ISO 5151. (Refrigerant piping length (one way): 5 m)

COOLING INDOOR Dry-bulb temperature 27.0°C Wet-bulb temperature 19.0°C

OUTDOOR Dry-bulb temperature 35.0°C Wet-bulb temperature 24.0°C

HEATING INDOOR Dry-bulb temperature 20.0°C

OUTDOOR Dry-bulb temperature 7.0°C Wet-bulb temperature 6.0°C



Outdoor model		MXZ-4F83VFHZ2	
Outdoor unit power supply		Single phase 220 -230 - 240 V, 50 Hz	
System	Indoor units number	1 to 4 *3	
	Piping total length	m	Max. 70
	Connecting pipe length	m	Max. 25
	Height difference (Indoor – Outdoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.
	Height difference (Indoor – Indoor)	m	Refer to 8 REFRIGERANT SYSTEM DIAGRAM.
Function		Cooling	Heating
Capacity Rated (Min.-Max.) *2	kW	8.3 (3.5 - 9.2)	9.0 (3.5 - 11.6)
Breaker capacity		A	30
Electrical data	Power input (Total) *1, *2	W	1,900
	Running current (Total) *1, *2	A	8.7 - 8.3 - 8.0
	Power factor (Total) *1, *2	%	99
	Starting current (Total) *1, *2	A	8.3
Coefficient of performance (C.O.P) (Total) *1, *2		4.37	5.29
Compressor	Model	MVB33FBFMC	
	Output	W	2,200
	Current *1, *2	A	7.0
	Refrigeration oil (Model)	L	1.10 (FW68CA)
Fan motor	Model	SIC-88FWJ-D888-4	
	Current *1, *2	A	0.3
Dimensions W x H x D		mm	950 x 1,048 x 330
Weight		kg	86
Special remarks	Air flow (Rated)	m ³ /h	3,780
	Sound level (Rated)	dB(A)	55
	Fan speed (Rated)	rpm	650
	Pre-charged refrigerant quantity (R32)	kg	2.4
	Max refrigerant quantity (R32)	kg	2.4

*1 Measured under rated operating frequency.

*2 When connected with below indoor units below.

MSZ-LN18VG2 + MSZ-LN18VG2 + MSZ-LN25VG2 + MSZ-LN25VG2

*3 At least 2 indoor units must be connected when using indoor unit with capacity lower than 25 class.

NOTE: Test conditions are based on ISO 5151. (Refrigerant piping length (one way): 5 m)

COOLING INDOOR Dry-bulb temperature 27.0°C Wet-bulb temperature 19.0°C

OUTDOOR Dry-bulb temperature 35.0°C Wet-bulb temperature 24.0°C


HEATING INDOOR Dry-bulb temperature 20.0°C

OUTDOOR Dry-bulb temperature 7.0°C Wet-bulb temperature 6.0°C

NOISE CRITERIA CURVES


MXZ-2F33VF MXZ-2F33VF2
MXZ-2F33VF3 MXZ-2F33VF4

FAN SPEED	FUNCTION	SPL(dB(A))	LINE
High	Cooling	49	●—●
High	Heating	50	○—○

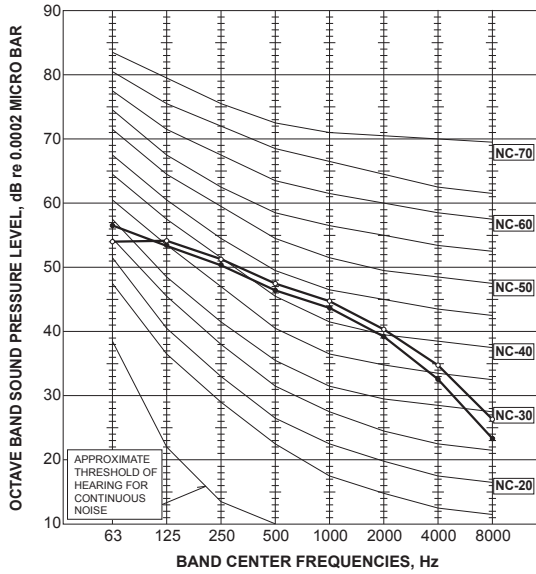


MXZ-2F42VF MXZ-2F42VF2
MXZ-2F42VF3 MXZ-2F42VF4

FAN SPEED	FUNCTION	SPL(dB(A))	LINE
High	Cooling	44	●—●
High	Heating	50	○—○

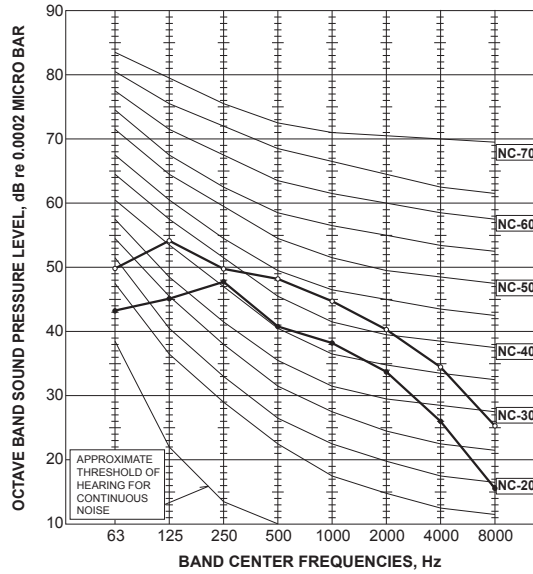


MXZ-2F53VF MXZ-2F53VFH
MXZ-2F53VF2 MXZ-2F53VFH2
MXZ-2F53VF3 MXZ-2F53VFH3
MXZ-2F53VF4 MXZ-2F53VFH4

FAN SPEED	FUNCTION	SPL(dB(A))	LINE
High	Cooling	46	●—●
High	Heating	51	○—○

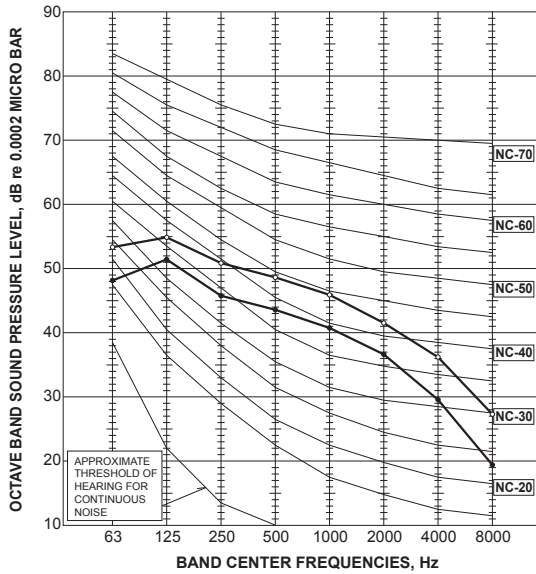


MXZ-3F54VF MXZ-3F54VF2
MXZ-3F54VF3 MXZ-3F54VF4

FAN SPEED	FUNCTION	SPL(dB(A))	LINE
High	Cooling	46	●—●
High	Heating	50	○—○

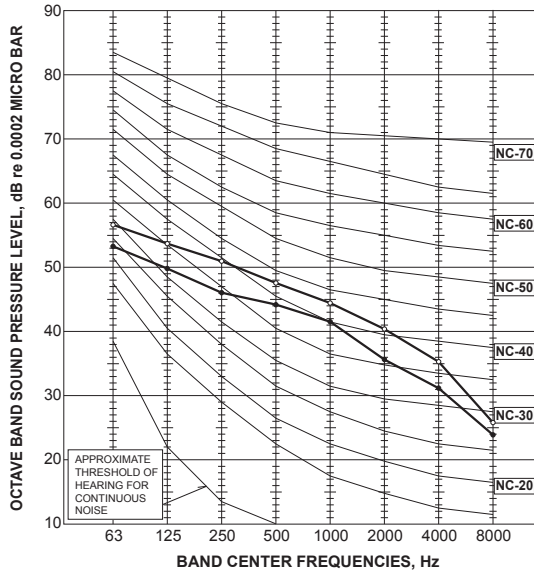


MXZ-3F68VF MXZ-3F68VF2
MXZ-3F68VF3 MXZ-3F68VF4

FAN SPEED	FUNCTION	SPL(dB(A))	LINE
High	Cooling	48	●—●
High	Heating	53	○—○

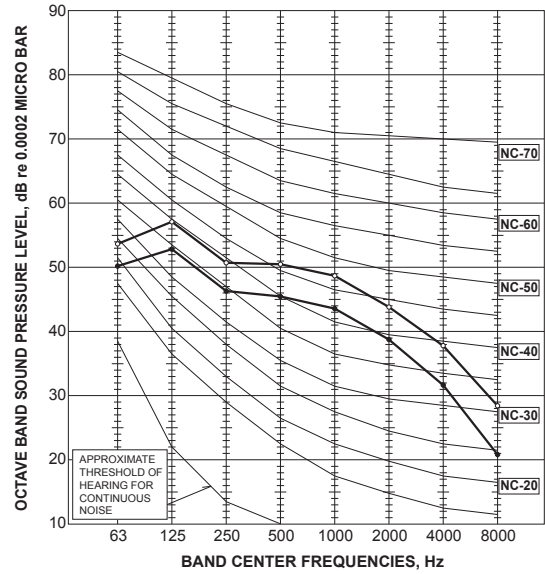


MXZ-4F72VF MXZ-4F72VF2
MXZ-4F72VF3 MXZ-4F72VF4

FAN SPEED	FUNCTION	SPL(dB(A))	LINE
High	Cooling	48	●—●
High	Heating	54	○—○

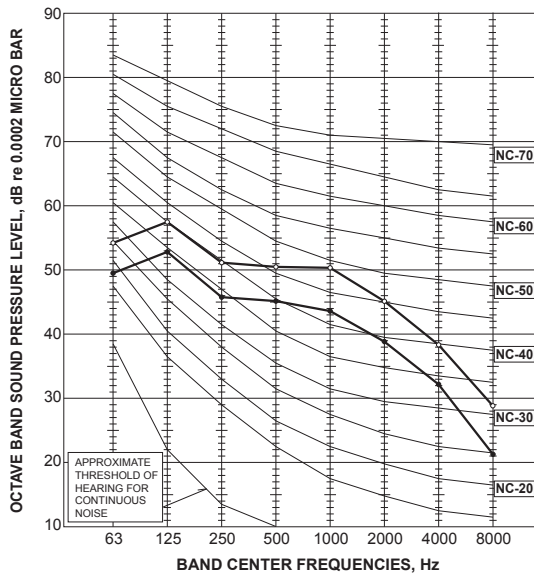


MXZ-4F80VF2
MXZ-4F80VF3
MXZ-4F80VF4

FAN SPEED	FUNCTION	SPL(dB(A))	LINE
High	Cooling	50	●—●
High	Heating	55	○—○

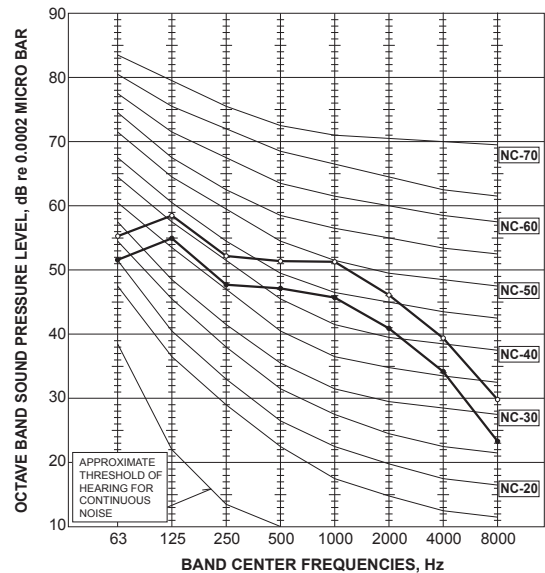


MXZ-4F83VF MXZ-4F83VF2

FAN SPEED	FUNCTION	SPL(dB(A))	LINE
High	Cooling	49	●—●
High	Heating	51	○—○

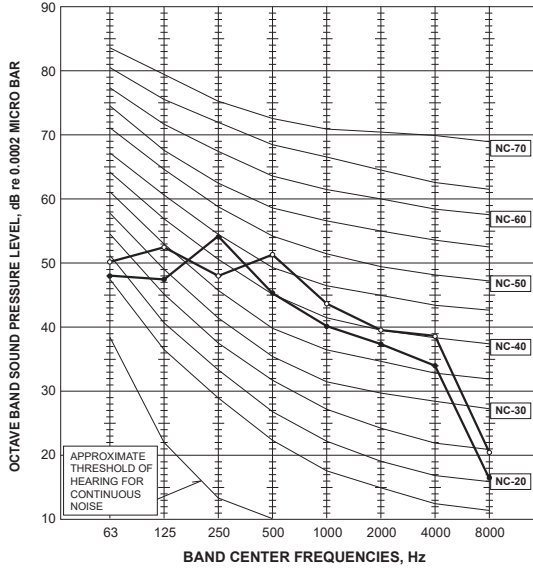


MXZ-5F102VF MXZ-5F102VF2

FAN SPEED	FUNCTION	SPL(dB(A))	LINE
High	Cooling	52	●—●
High	Heating	56	○—○

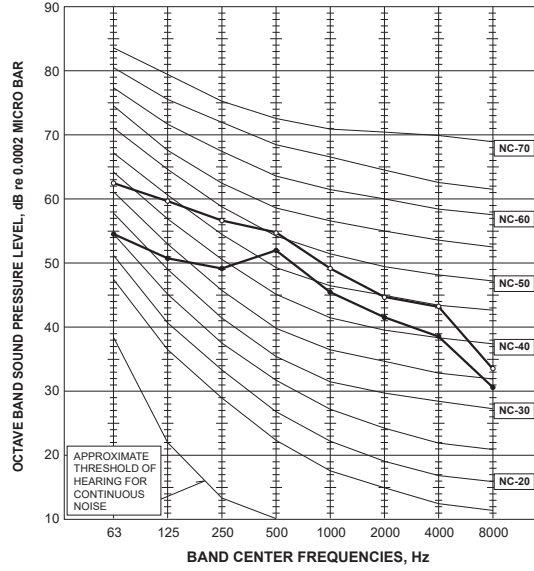


MXZ-6F120VF2 MXZ-6F122VF

FAN SPEED	FUNCTION	SPL(dB(A))	LINE
High	Cooling	55	●—●
High	Heating	57	○—○

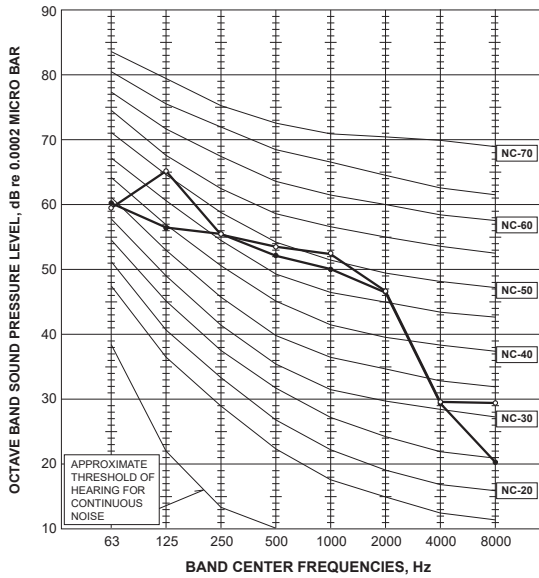



MXZ-2F53VFHZ MXZ-2F53VFHZ2

FAN SPEED	FUNCTION	SPL(dB(A))	LINE
High	Cooling	45	●—●
High	Heating	47	○—○

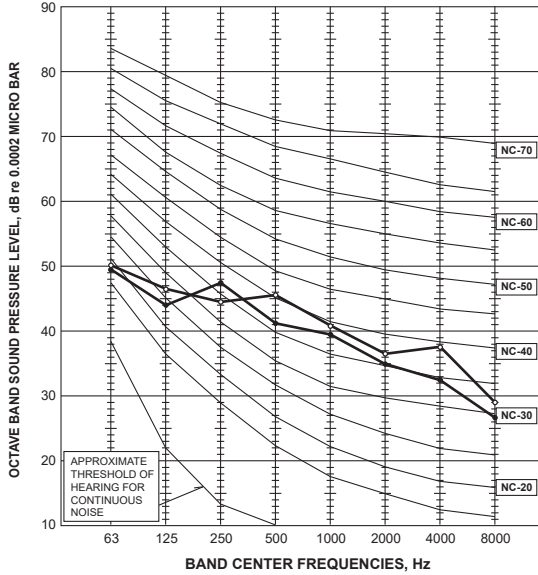

MXZ-4F83VFHZ MXZ-4F83VFHZ2

FAN SPEED	FUNCTION	SPL(dB(A))	LINE
High	Cooling	55	●—●
High	Heating	57	○—○

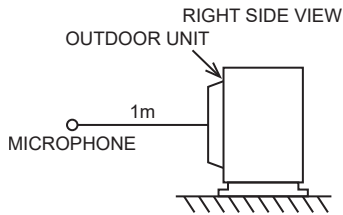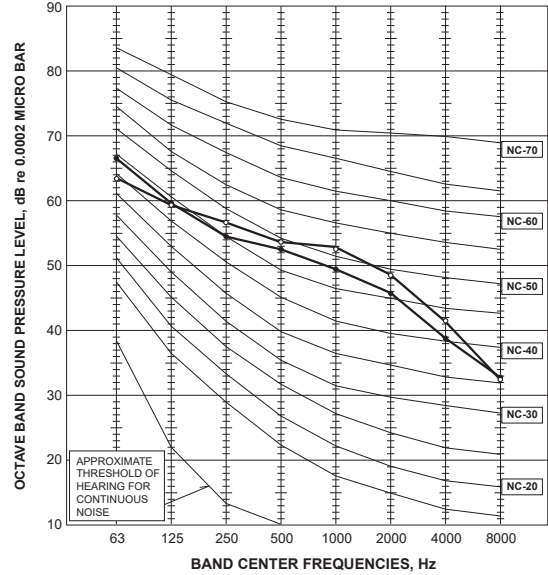

Test conditions

Cooling: Dry-bulb temperature 35.0°C Wet-bulb temperature 24.0°C
 Heating: Dry-bulb temperature 7.0°C Wet-bulb temperature 6.0°C


6


OUTLINES AND DIMENSIONS

MXZ-2F33VF	MXZ-2F42VF	MXZ-2F53VF	MXZ-2F53VFH
MXZ-2F33VF2	MXZ-2F42VF2	MXZ-2F53VF2	MXZ-2F53VFH2
MXZ-2F33VF3	MXZ-2F42VF3	MXZ-2F53VF3	MXZ-2F53VFH3
MXZ-2F33VF4	MXZ-2F42VF4	MXZ-2F53VF4	MXZ-2F53VFH4

Unit: mm


1. Installation space

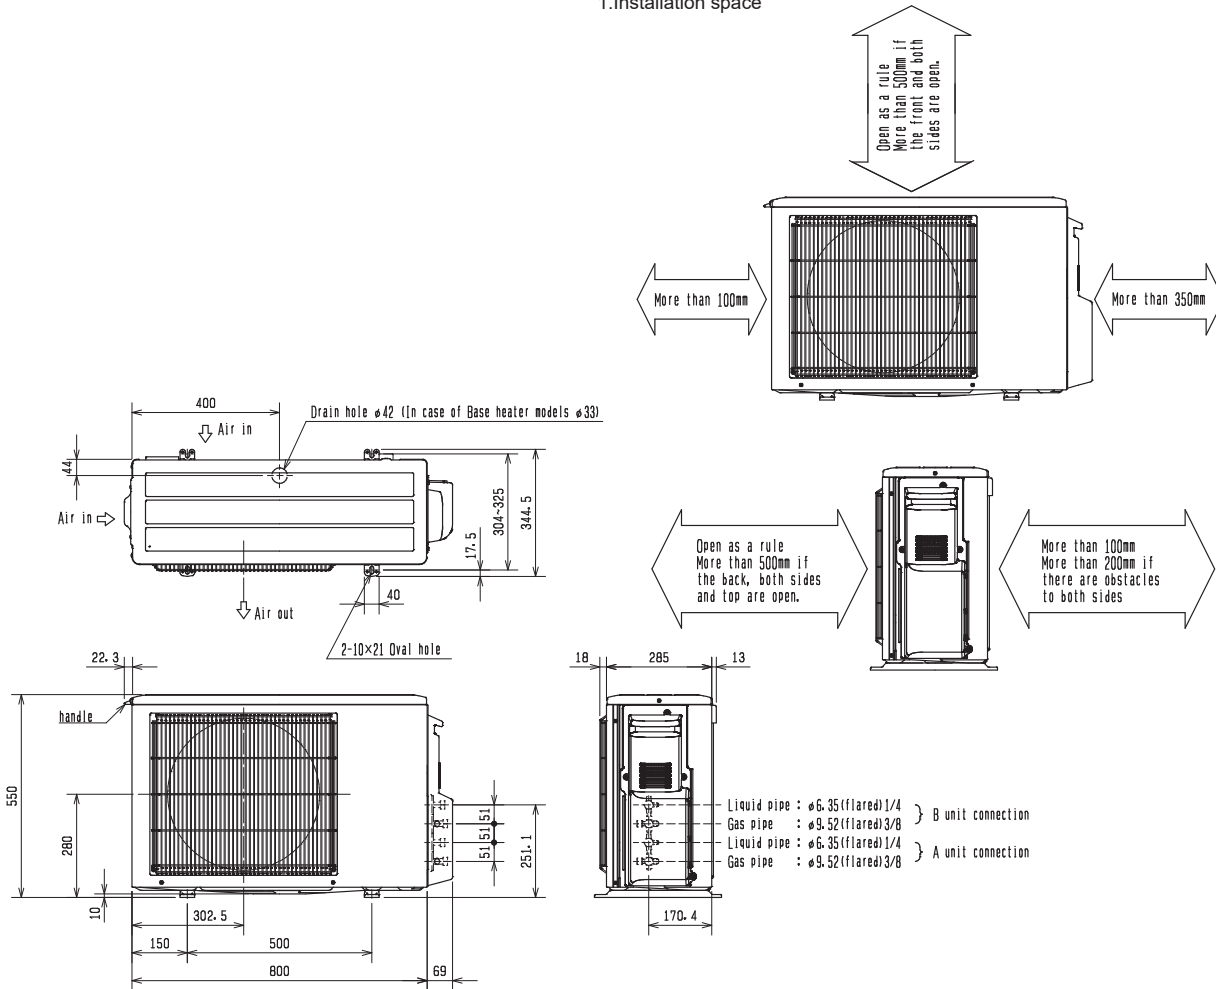




MXZ-3F54VF MXZ-3F68VF
MXZ-3F54VF2 MXZ-3F68VF2
MXZ-3F54VF3 MXZ-3F68VF3
MXZ-3F54VF4 MXZ-3F68VF4

Unit: mm

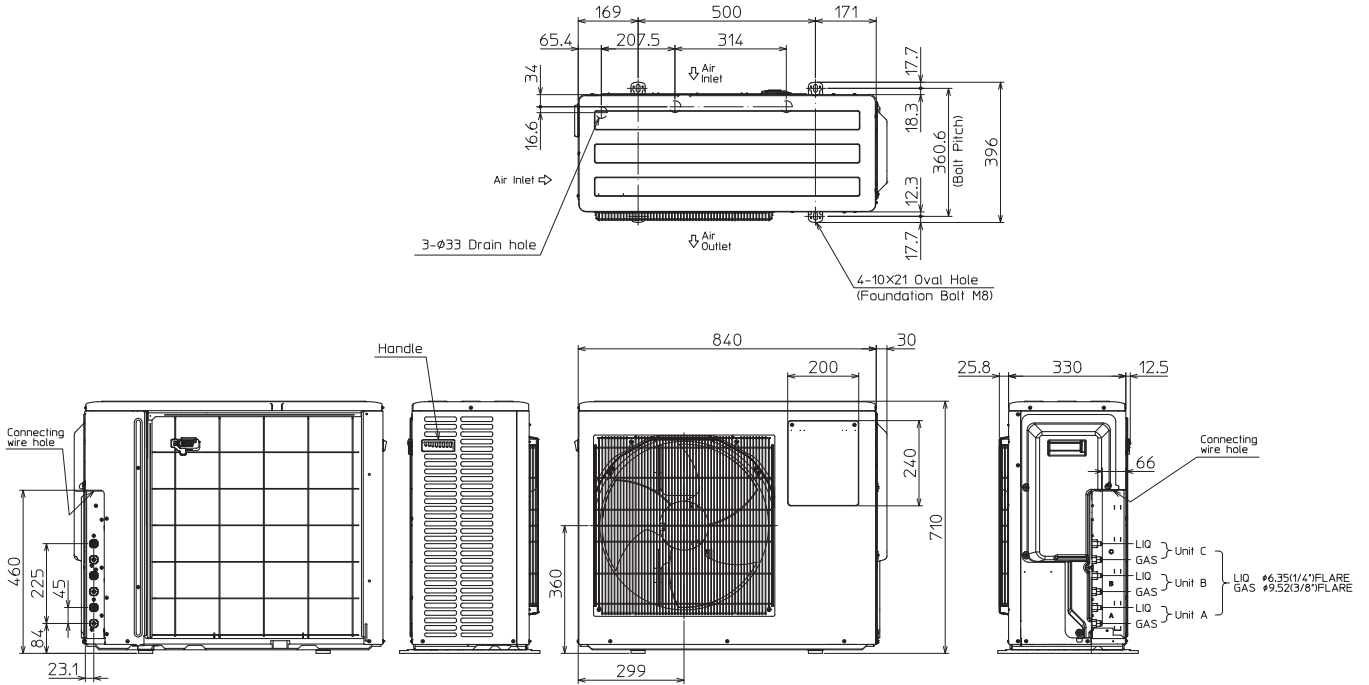


1.Installation space


Note : Leave front and both sides free of obstruction.

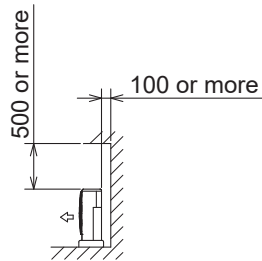


2.Service space

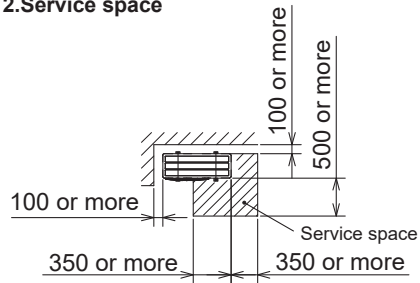

Note : Leave front and overhead free of obstruction.

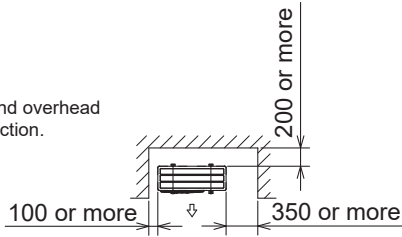


Note : Leave rear, overhead and both sides free of obstruction.

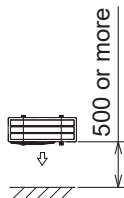


MXZ-4F72VF
MXZ-4F72VF2 MXZ-4F80VF2
MXZ-4F72VF3 MXZ-4F80VF3
MXZ-4F72VF4 MXZ-4F80VF4

Unit: mm

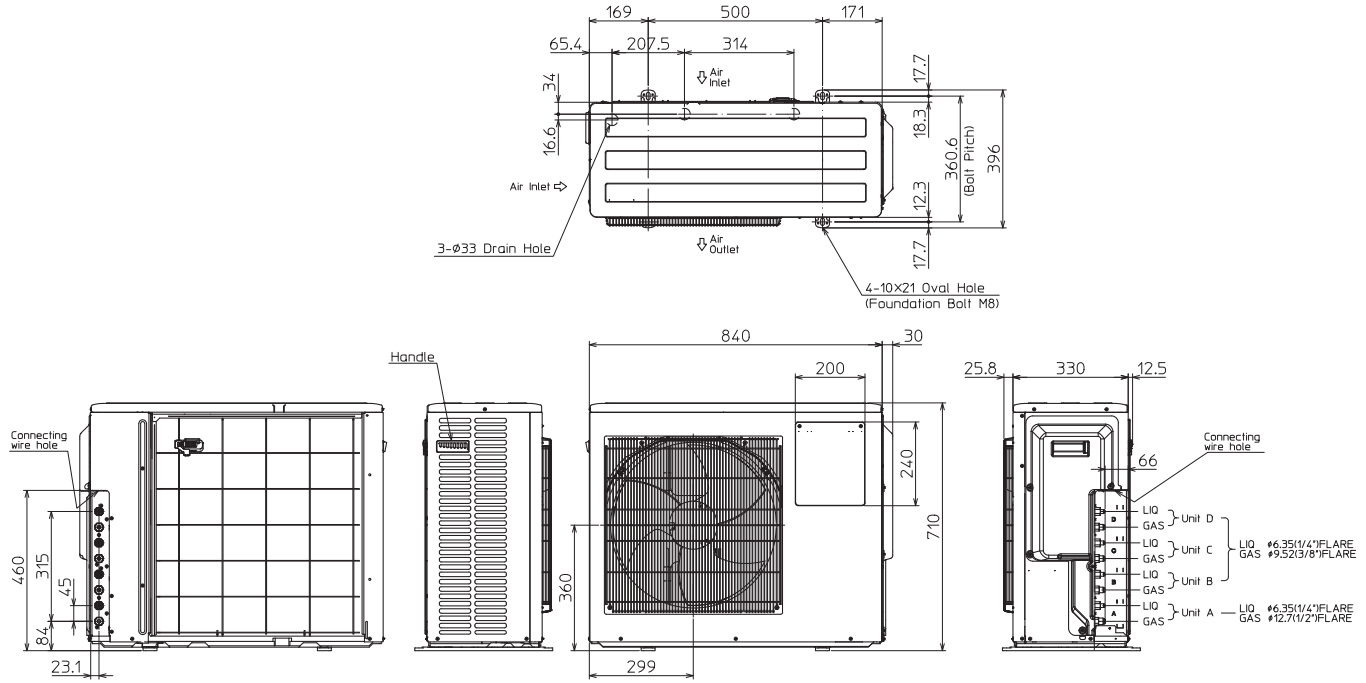


1. Installation space


Note : Leave front and both sides free of obstruction.

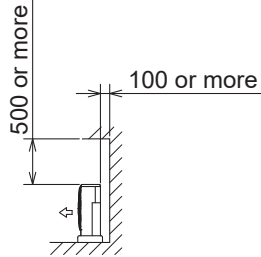


Note : Leave front and overhead free of obstruction.

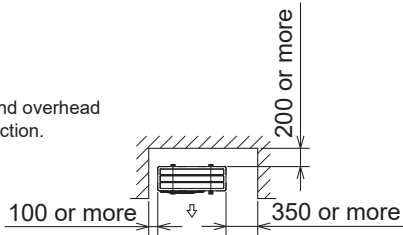

Note : Leave rear, overhead and both sides free of obstruction.

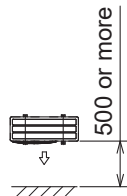


2. Service space

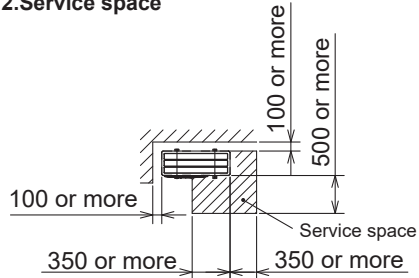



MXZ-4F83VF MXZ-4F83VF2

Unit: mm

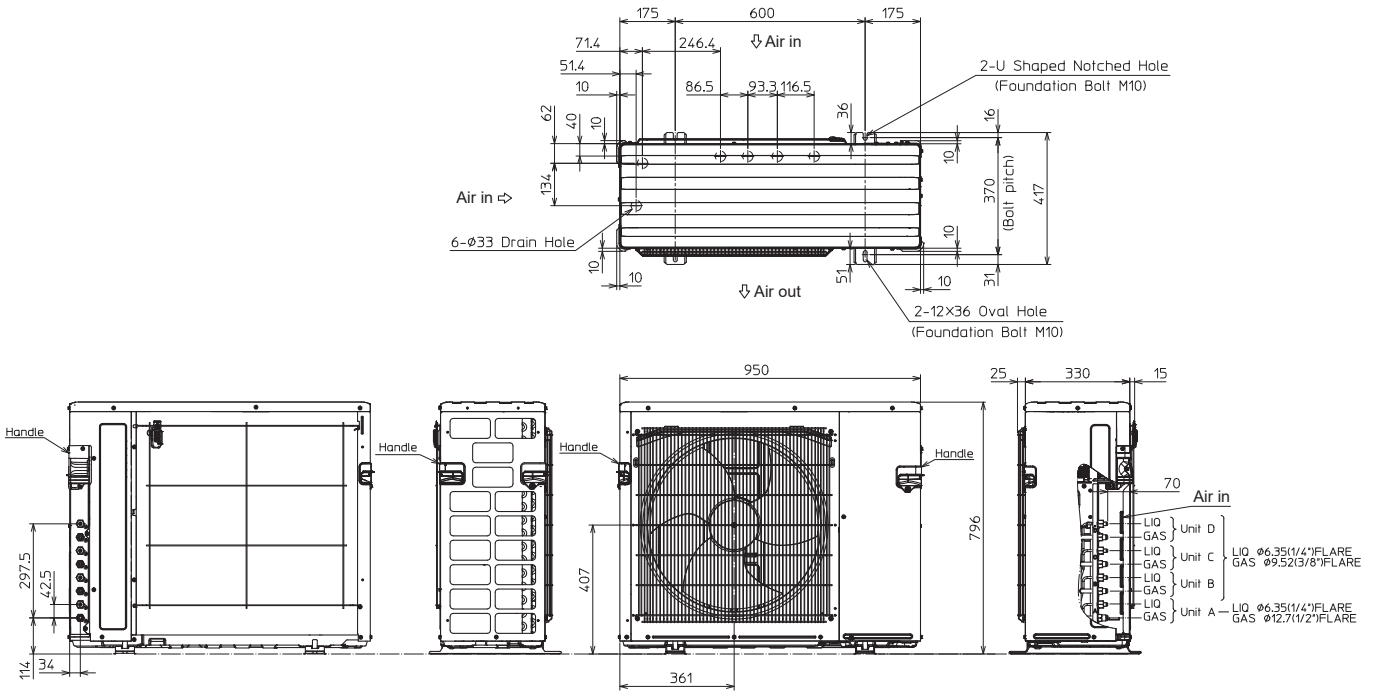


1.FREE SPACE

2.SERVICE SPACE

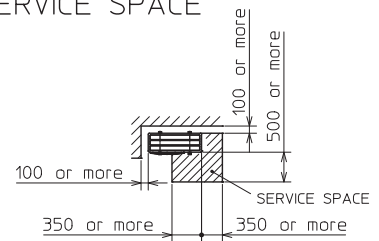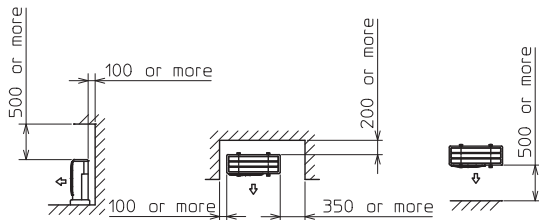


MXZ-5F102VF MXZ-5F102VF2


Unit: mm

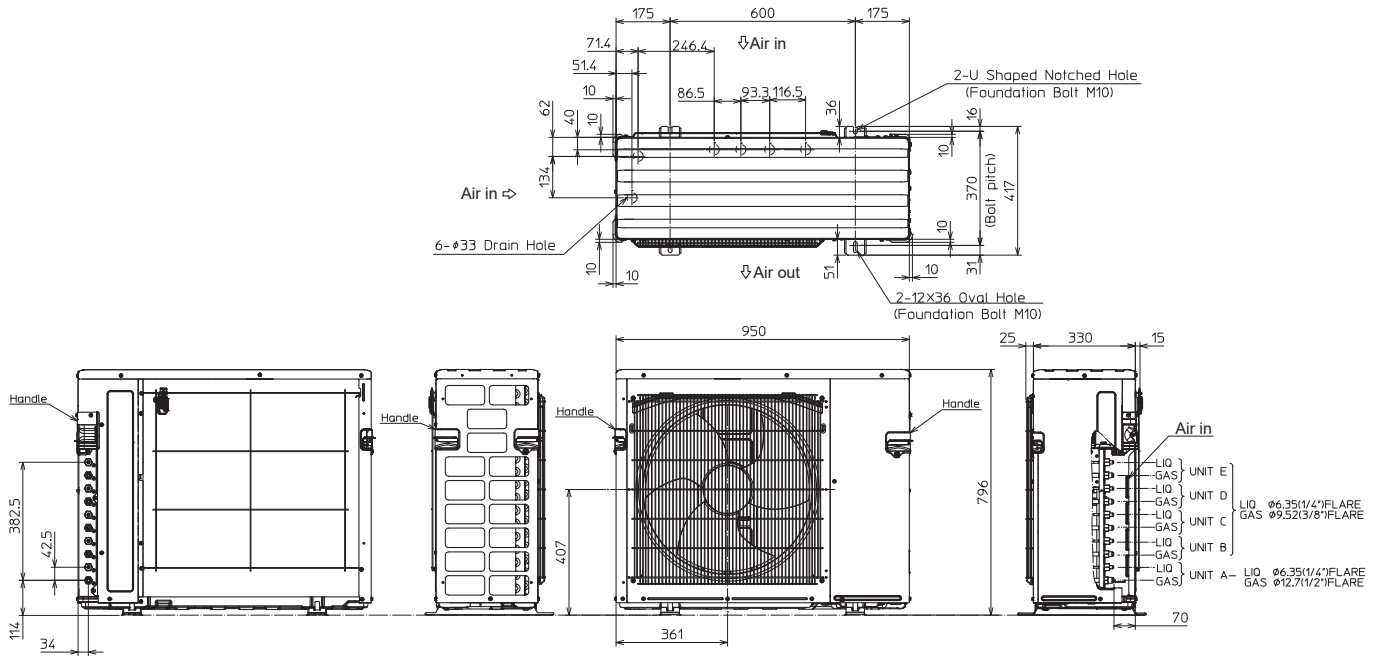

1.FREE SPACE

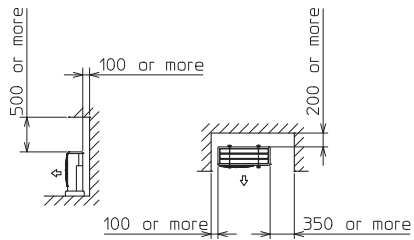


2.SERVICE SPACE

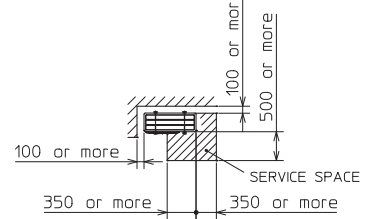


MXZ-6F120VF2 MXZ-6F122VF


Unit: mm

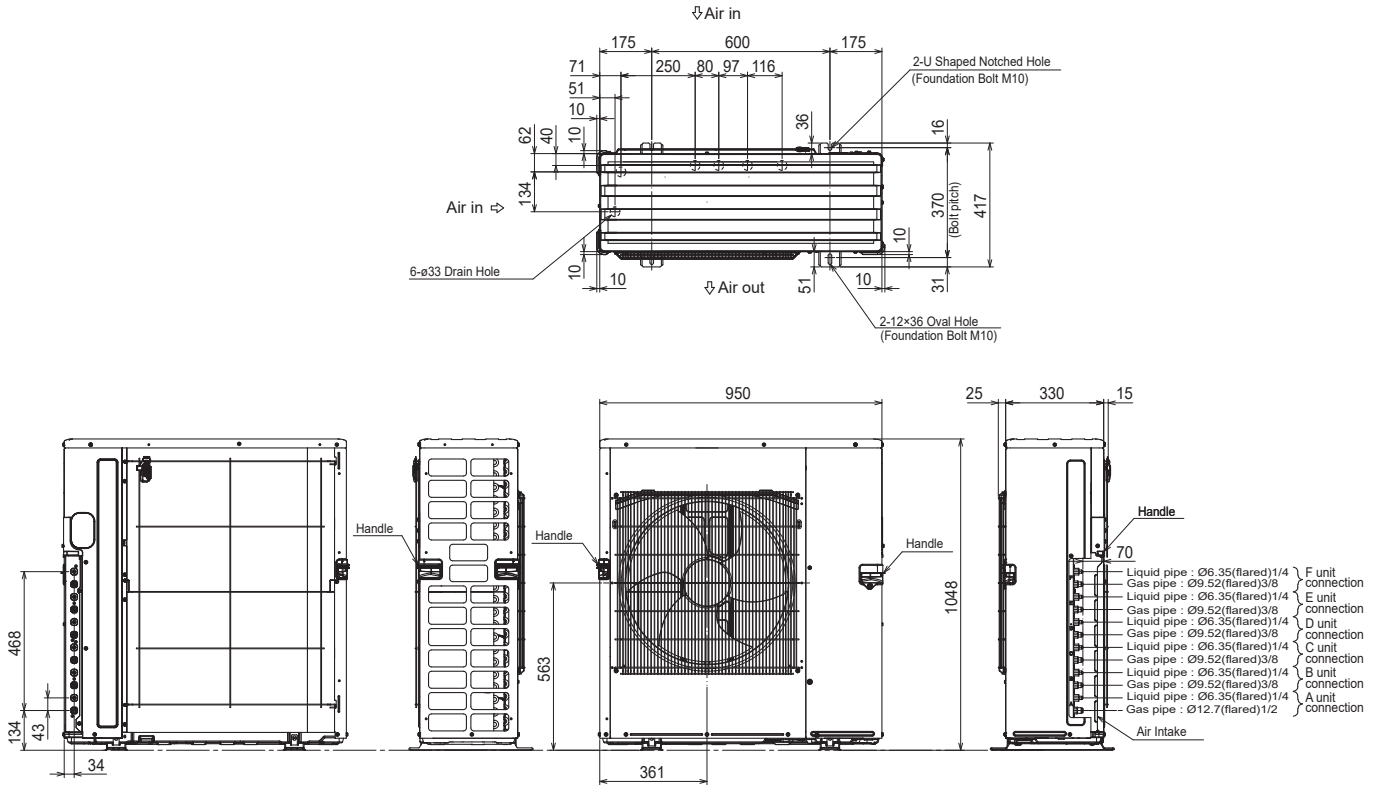

1.FREE SPACE

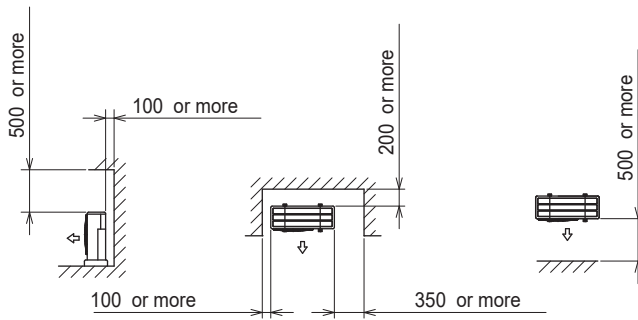


2.SERVICE SPACE

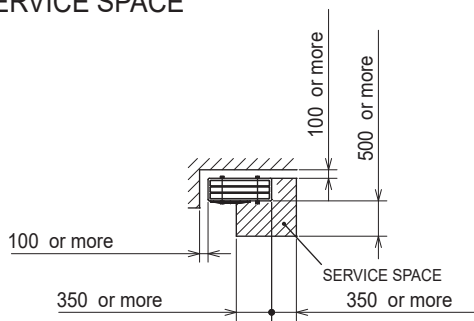


MXZ-2F53VFHZ MXZ-2F53VFHZ2


Unit: mm

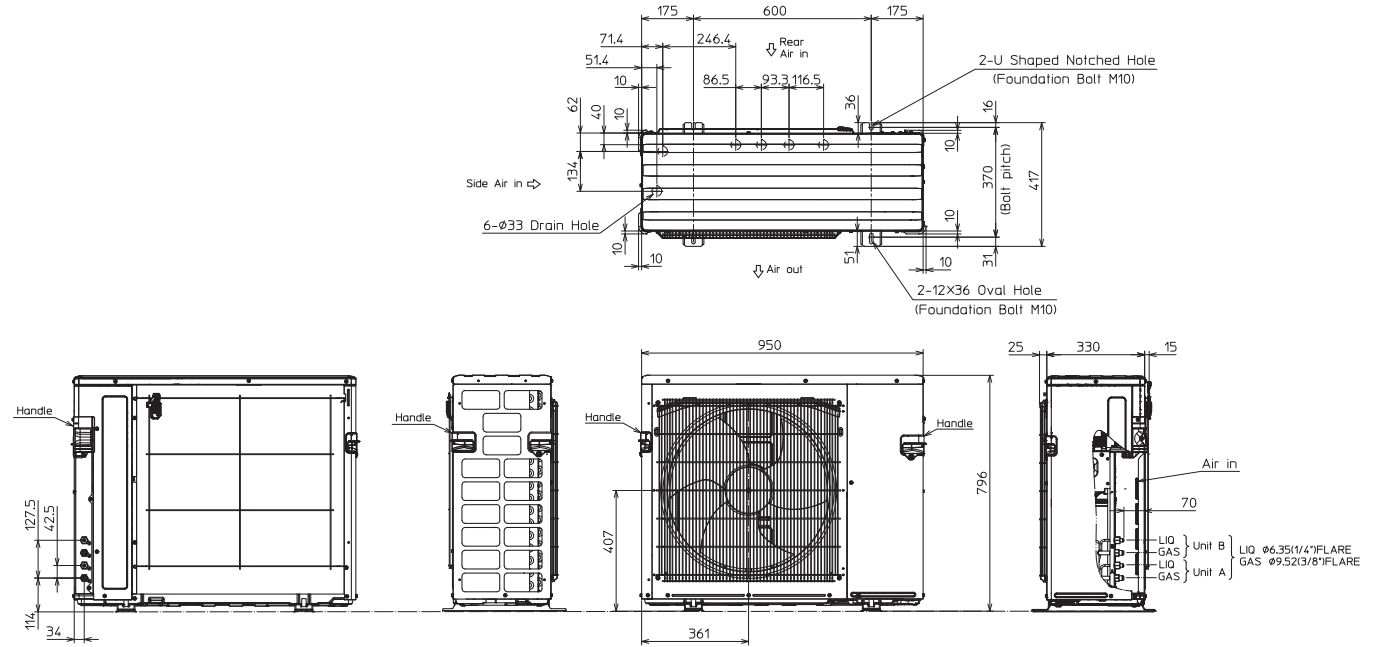

1.FREE SPACE

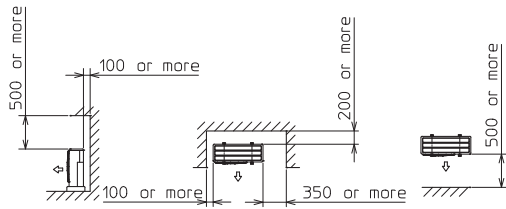


2.SERVICE SPACE

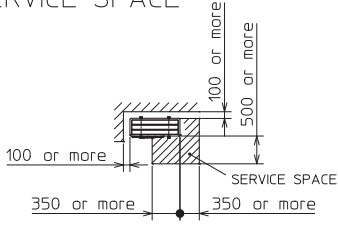


MXZ-4F83VFHZ MXZ-4F83VFHZ2


Unit: mm

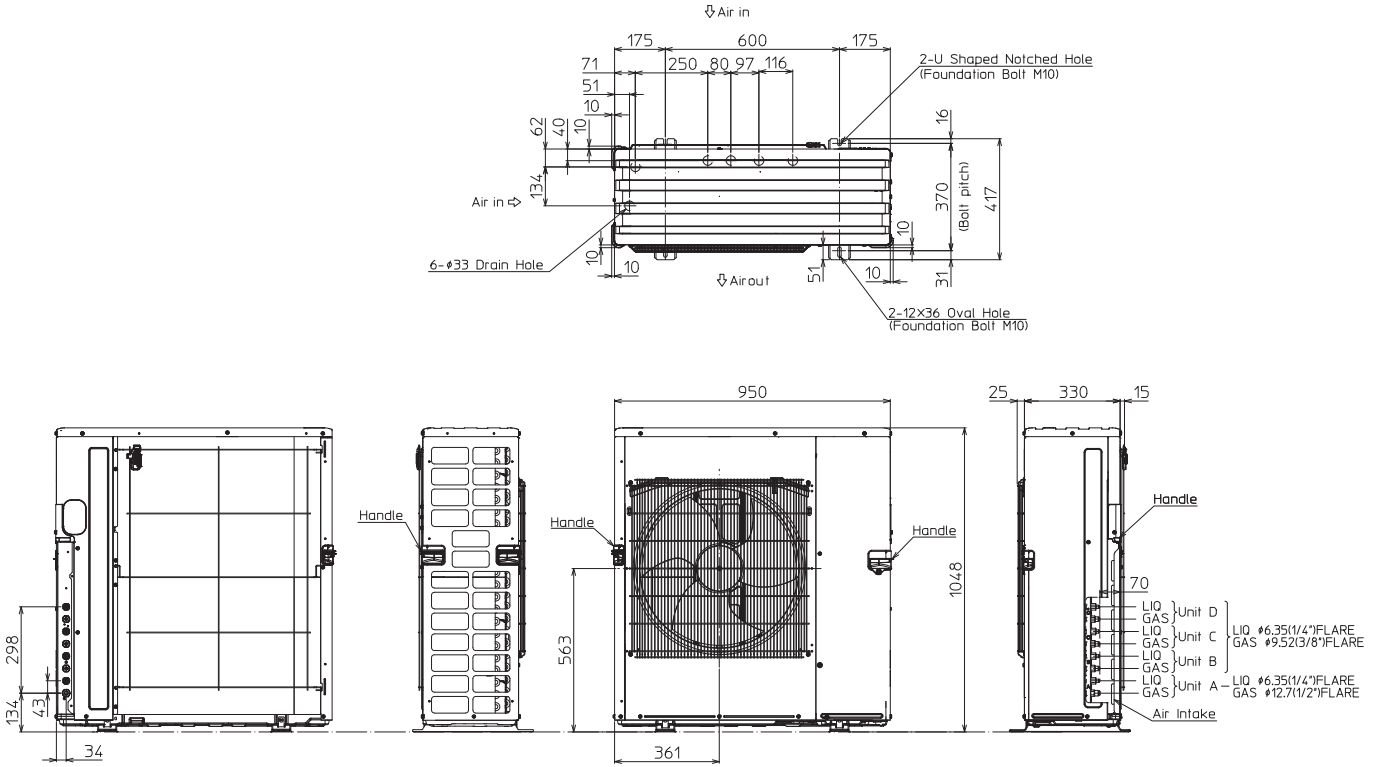


1.FREE SPACE

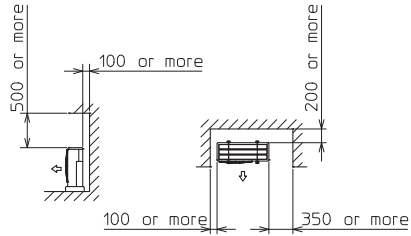

2.SERVICE SPACE

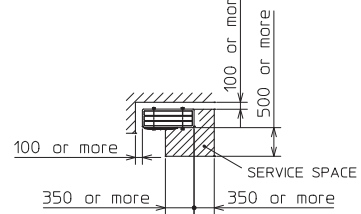


MXZ-2F33VF - [E1], [ET1] MXZ-2F42VF - [E1], [ET1] MXZ-2F53VF - [E1], [ET1]

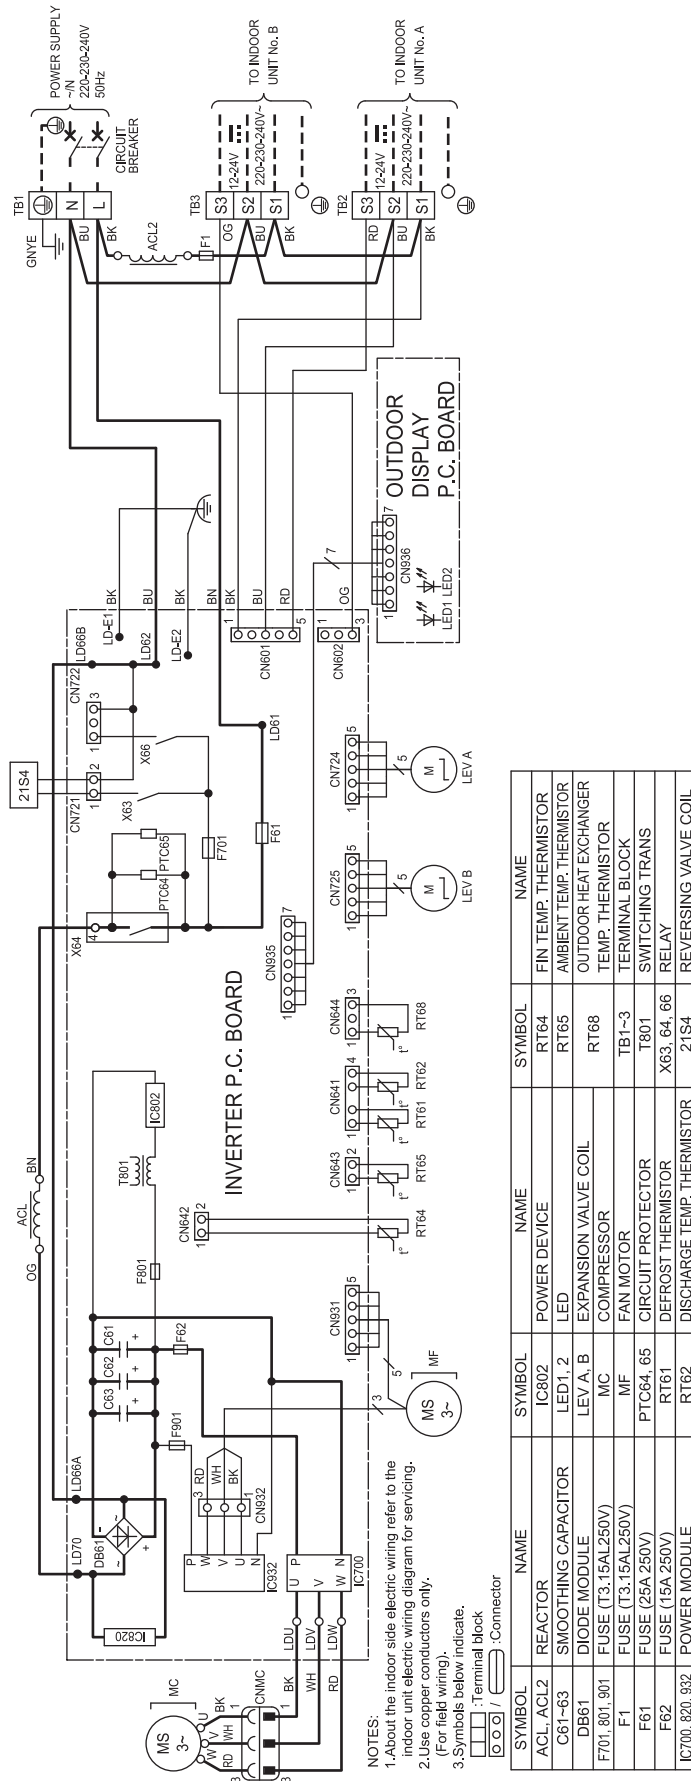

SYMBOL	NAME	SYMBOL	NAME	SYMBOL	NAME
IC802	REACTOR	RT64	POWER DEVICE	RT64	FIN TEMP. THERMISTOR
LED1, 2	SMOOTHING CAPACITOR	RT65	LED	RT65	AMBIENT TEMP. THERMISTOR
LEV A, B	DIODE MODULE	RT68	EXPANSION VALVE COIL	RT68	OUTDOOR HEAT EXCHANGER TEMP. THERMISTOR
MC	FUSE (T3:15AL250V)	TB1-3	COMPRESSOR	TB1-3	TERMINAL BLOCK
MF	FUSE (T3:15AL250V)	T801	FAN MOTOR	T801	SWITCHING TRANS
PTC64, 65	FUSE (25A, 250V)	RT61	CIRCUIT PROTECTOR	X63, 64, 66	RELAY
RT61	FUSE (15A, 250V)	RT62	DEFROST THERMISTOR	21S4	REVERSING VALVE COIL
RT62	POWER MODULE		DISCHARGE TEMP. THERMISTOR		

MXZ-2F33VF2 - [E1] MXZ-2F42VF2 - [E1] MXZ-2F53VF2 - [E1]

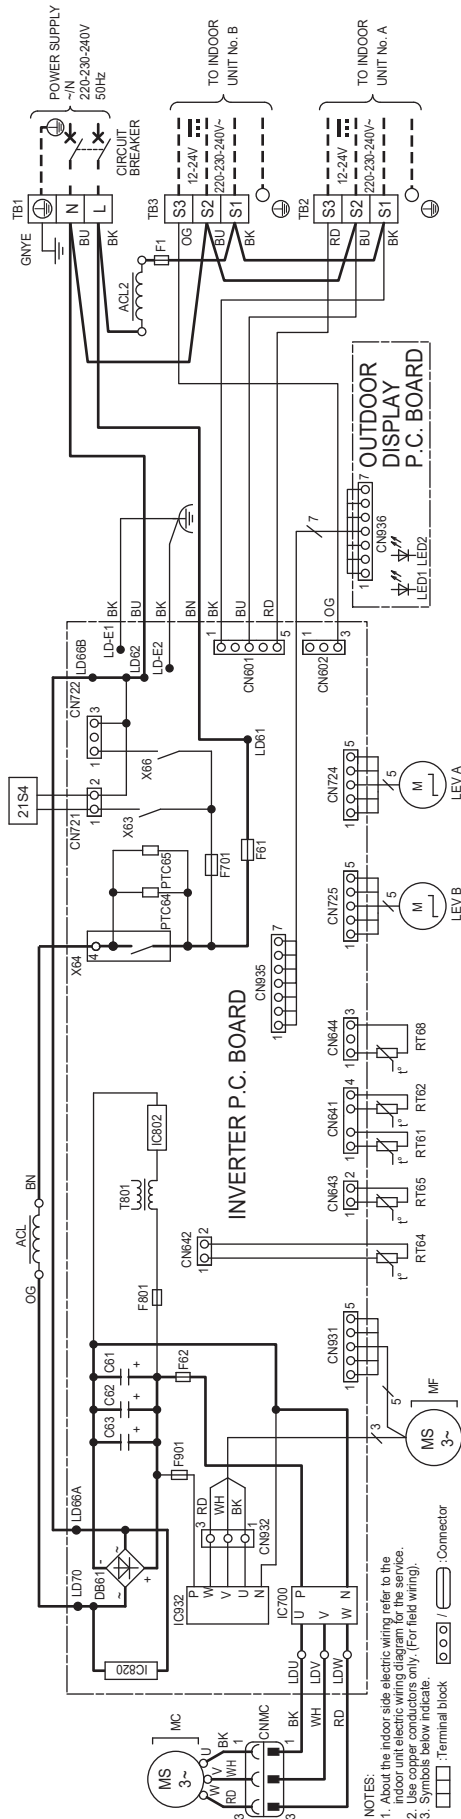


NOTES:
 1. About the indoor side electric wiring refer to the indoor unit electric wiring diagram for the service.
 2. Use copper conductors only. (For field wiring).
 3. Symbols below indicate.

□ □ □ □ : Terminal block
 ○ ○ ○ ○ / 3~ : Connector

SYMBOL	NAME	SYMBOL	NAME
ACL, ACL2	REACTOR	IC802	POWER DEVICE
C81-63	SMOOTHING CAPACITOR	LED1, 2	LED
DB61	DIODE MODULE	LEV A, B	EXPANSION VALVE COIL
F701, 801, 901	FUSE (T3, 15AL/250V)	MC	COMPRESSOR
F4	FUSE (T3, 15AL/250V)	MF	FAN MOTOR
F61	FUSE (25A/250V)	PTC84, 65	CIRCUIT PROTECTOR
F62	FUSE (15A/250V)	RT61	DEFROST THERMISTOR
IC700, 820, 932	POWER MODULE	RT62	DISCHARGE TEMP. THERMISTOR
		RT64	FIN TEMP. THERMISTOR
		RT65	AMBIENT TEMP. THERMISTOR
		RT66	OUTDOOR HEAT EXCHANGER
		RT68	TEMP. THERMISTOR
		TB1-3	TERMINAL BLOCK
		T801	TRANSFORMER
		X63, 64, 66	RELAY
		2T54	REVERSING VALVE COIL


MXZ-2F33VF2 - [ET1] MXZ-2F42VF2 - [ET1] MXZ-2F53VF2 - [ET1]

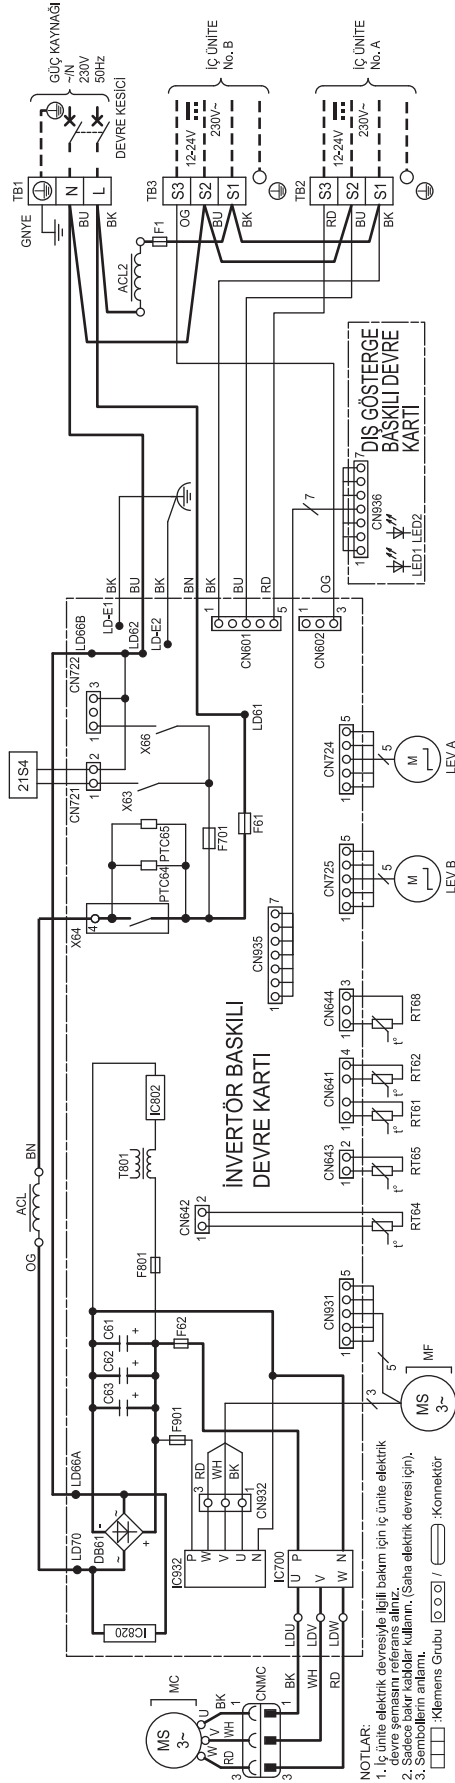

NOTLAR:
 1. İç ünite elektrik devresiyle ilgili bakım için iç ünite elektrik devre şemasının referans alınınız.
 2. İç ünite elektrik devresi için, (Saha elektrik devresi için).
 3. Sembollerin anlamı.
 □ :Klemens Grubu □ □ □ / □ □ □ :Konnektör

SEMBOLE	PARÇA ADI	SEMBOLE	PARÇA ADI
ACL, ACL2	REAKTÖR	IC802	GÜÇ ÇİHAZI
C61-63	KAPASİTÖR	LED1, 2	LED
DB61	DIYOT MODÜLÜ	LEV A, B	GENLEŞME VANASI SARGISI
F701, 801, 901	SİGORTA (T3,15AL,250V)	MC	KOMPRESÖR
F1	SİGORTA (T3,15AL,250V)	MF	FAN MOTORU
F61	SİGORTA (25A,250V)	PTC64, 65	DEVRE KORUMASI
F62	SİGORTA (15A,250V)	RT61	DEFROST TERMİSTÖRÜ
IC700, 820, 932	GÜÇ MODÜLÜ	RT62	BASMA SICAKLIK TERMİSTÖRÜ
		RT64	FIN SICAKLIK TERMİSTÖRÜ
		RT65	ORTAM SICAKLIK TERMİSTÖRÜ
		RT66	DİS ÜNİTE ESANJÖR SICAKLIK TERMİSTÖRÜ
		TB1-3	KLEMENS GRUBU
		T801	TRANSFORMATÖR
		X63, 64, 66	RÖLE
		21S4	İKİ YÖNLÜ VANA SARGISI


MXZ-2F33VF3 - [E1], [ER1], [E2] MXZ-2F42VF3 - [E1], [ER1], [E2] MXZ-2F53VF3 - [E1], [ER1], [E2]

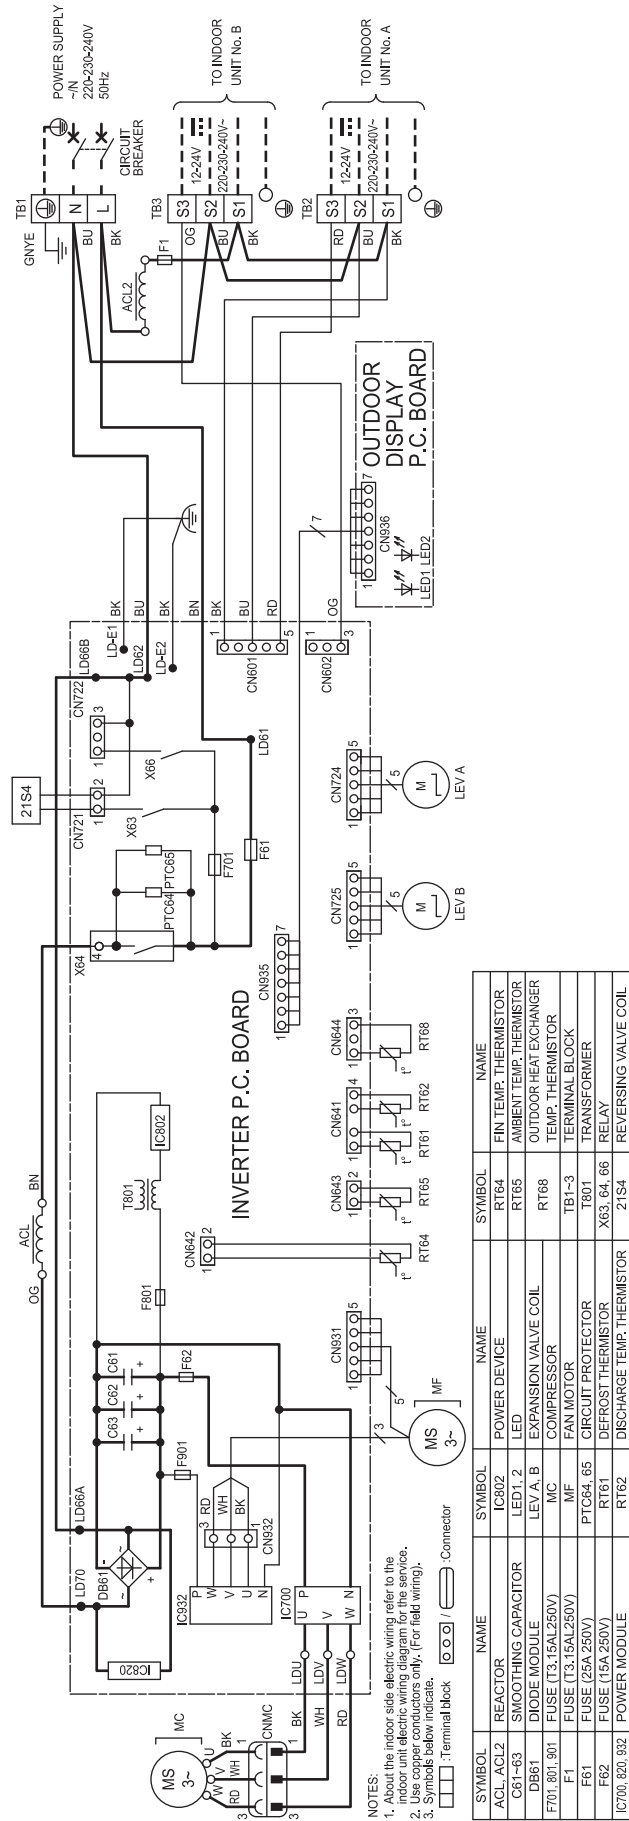

NOTES:
 1. About the indoor side electric wiring refer to the indoor unit electric wiring diagram for the service.
 2. Use copper conductors only. (For field wiring).
 3. Symbols indicate as follows:
 □ Terminal block ○ Connector

SYMBOL	NAME	SYMBOL	NAME	SYMBOL	NAME
ACL, ACL2	REACTOR	IC802	POWER DEVICE	RT64	FIN TEMP. THERMISTOR
C61~63	SMOOTHING CAPACITOR	LED1, 2	LED	RT65	AMBIENT TEMP. THERMISTOR
DB61	DIODE MODULE	LEV A, B	EXPANSION VALVE COIL	RT66	OUTDOOR HEAT EXCHANGER TEMP. THERMISTOR
F701, 801, 901	FUSE (T3, 15A/250V)	MC	COMPRESSOR	TB1~3	TERMINAL BLOCK
F1	FUSE (T3, 15A/250V)	MF	FAN MOTOR	T801	TRANSFORMER
F61	FUSE (25A 250V)	PTC64, 65	CIRCUIT PROTECTOR	X63, 64, 66	RELAY
F62	FUSE (15A 250V)	RT61	DEFROST THERMISTOR	21S4	DISCHARGE TEMP. THERMISTOR
IC700, 820, 932	POWER MODULE	RT62	POWER MODULE		REVERSING VALVE COIL


MXZ-2F33VF3 - [ET1] MXZ-2F42VF3 - [ET1] MXZ-2F53VF3 - [ET1]

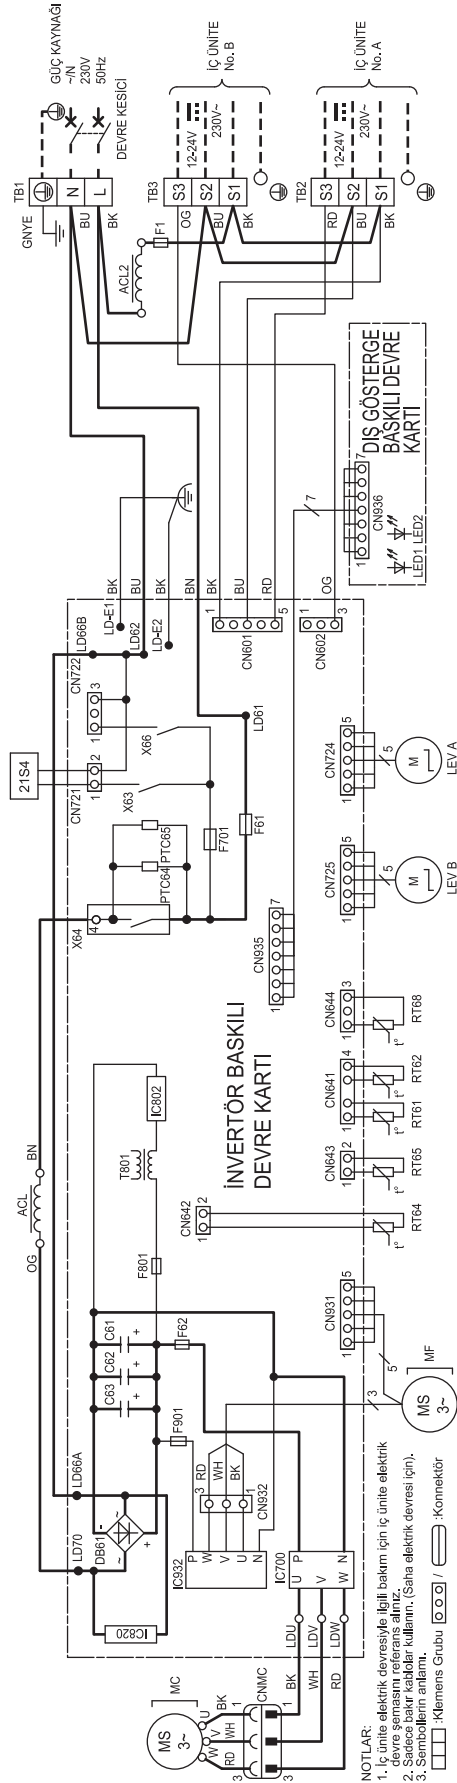

NOTLAR:
 1. İç ünite elektrik devresiyle ilgili bakımlar için iç ünite elektrik devre şemasını referans alınınız.
 2. Sadece bakır kablolar kullanınız. (Saha elektrik devresi için).
 3. Sembollerin anlamı için bkz. 4.
 4. Klemens Grubu () / () :Konnektör

SEMBOLE	PARÇA ADI	SEMBOLE	PARÇA ADI
ACL, ACL2	REAKTÖR	IC802	GÜÇ CİHAZI
C61-63	KAPASİTÖR	LED1, 2	LED
DB61	DIYOT MODÜLÜ	LEV A, B	GENLEŞME VANASI SARGISI
F701, 801, 901	SİGORTA (T3,15AL,250V)	MC	KOMPRESÖR
F1	SİGORTA (T3,15AL,250V)	MF	FAN MOTORU
F61	SİGORTA (25A,250V)	PTC64, 65	DEVRE KORUMASI
F62	SİGORTA (15A,250V)	RT61	DEFROST TERMİSTÖRÜ
IC700, 820, 932	GÜÇ MODÜLÜ	RT62	BASMA SICAKLIK TERMİSTÖRÜ
		RT64	LEV A
		RT65	LEV B
		RT66	FIN SICAKLIK TERMİSTÖRÜ
		RT68	ORTAM SICAKLIK TERMİSTÖRÜ
		21S4	DİŞ ÜNİTE EŞANJÖR SICAKLIK TERMİSTÖRÜ
		X63	KLEMENS GRUBU
		X64	TRANSFORMATÖR
		X66	ROLÉ
		X68	İKİ YÖNLÜ VANA SARGISI


MXZ-2F33VF4 - [E1] MXZ-2F42VF4 - [E1] MXZ-2F53VF4 - [E1]

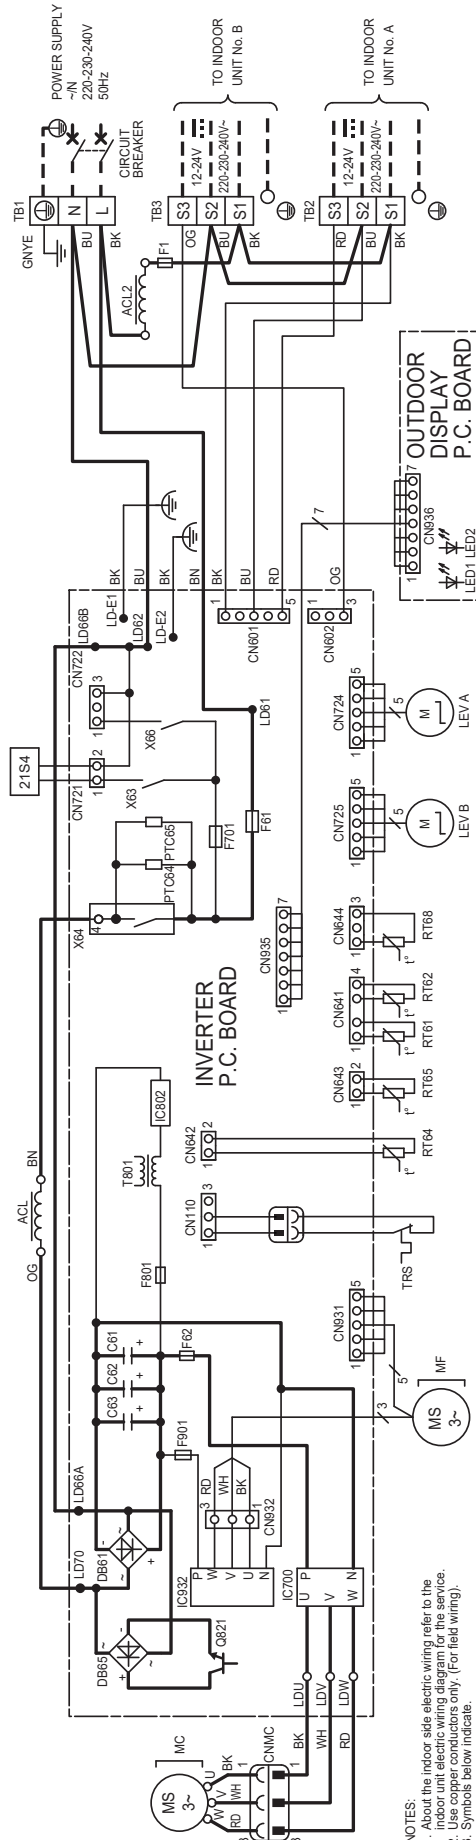


- NOTES:
1. About the indoor side electric wiring refer to the indoor unit electric wiring diagram for the service.
 2. For the outdoor side electric wiring refer to the outdoor unit electric wiring diagram for the service.
 3. Symbols below indicate:
 - : Terminal block
 - : Connector

SYMBOL	NAME	SYMBOL	NAME	SYMBOL	NAME
ACL	ACLI2 REACTOR	IC802	POWER DEVICE	RT64	FIN TEMP. THERMISTOR
C61-63	SMOOTHING CAPACITOR	LED1, 2	LED	RT65	AMBIENT TEMP. THERMISTOR
DB61, DB65	DIODE MODULE	LEV.A, B	EXPANSION VALVE COIL	RT68	OUTDOOR HEAT EXCHANGER TEMP. THERMISTOR
F701, 801, 901	FUSE (T3.15A/250V)	MC	COMPRESSOR	TB1-3	TERMINAL BLOCK
F1	FUSE (T3.15A/250V)	MF	FAN MOTOR	TRS	TRMIAL PROTECTOR
F62	FUSE (25A/250V)	Q821	CIRCUIT PROTECTOR	T801	SWITCHING POWER TRANSISTOR
IC700, 932	POWER MODULE	RT61	DEFROST THERMISTOR	X63, 64, 66	RELAY
		RT62	DISCHARGE TEMP. THERMISTOR	21S4	4-WAY VALVE SOLENOID COIL

MXZ-2F33VF4 - [ET1] MXZ-2F42VF4 - [ET1] MXZ-2F53VF4 - [ET1]

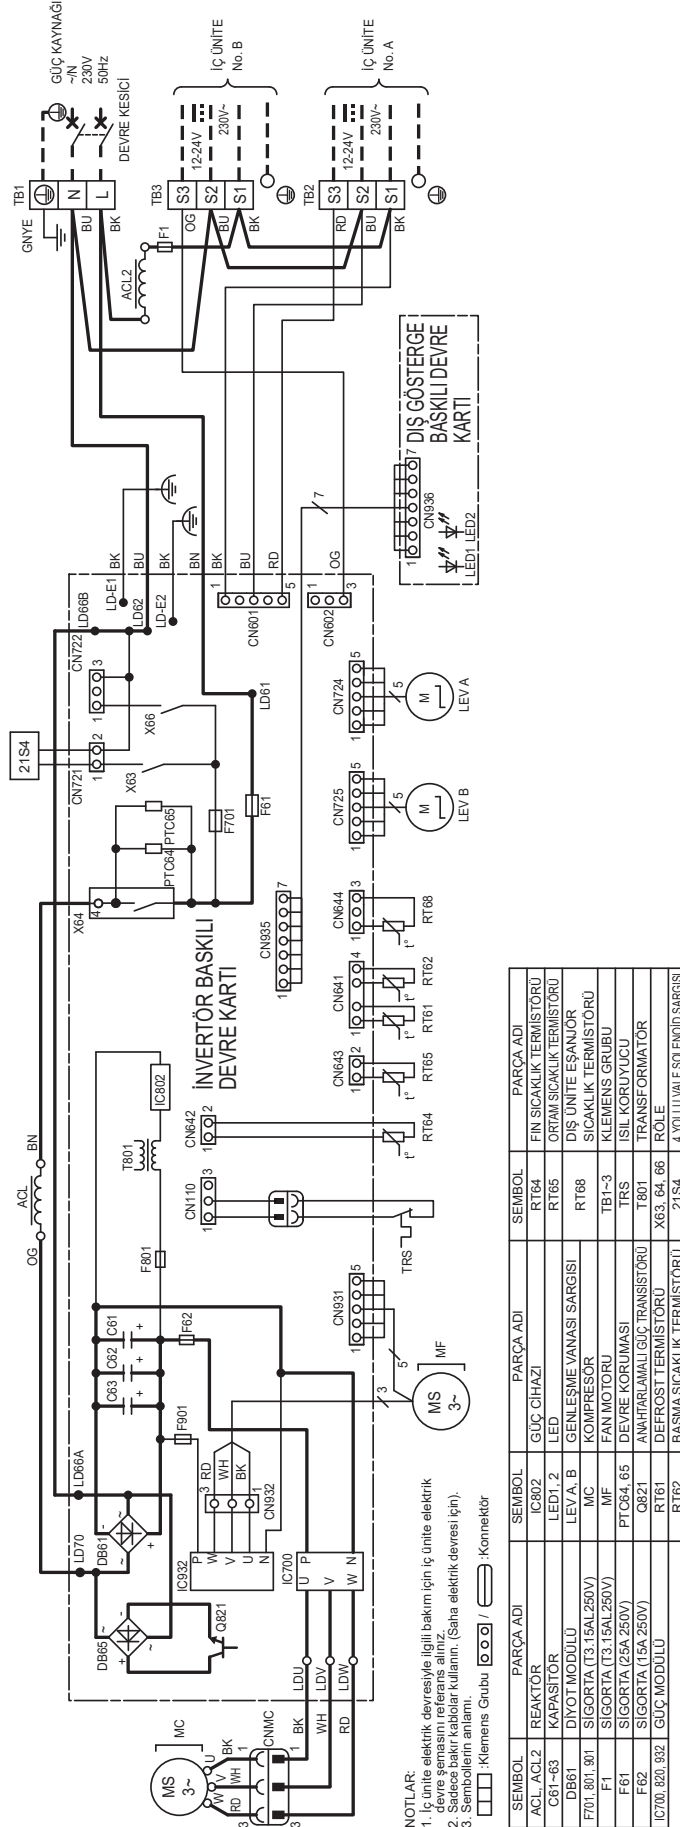


MXZ-2F53VFH - E1

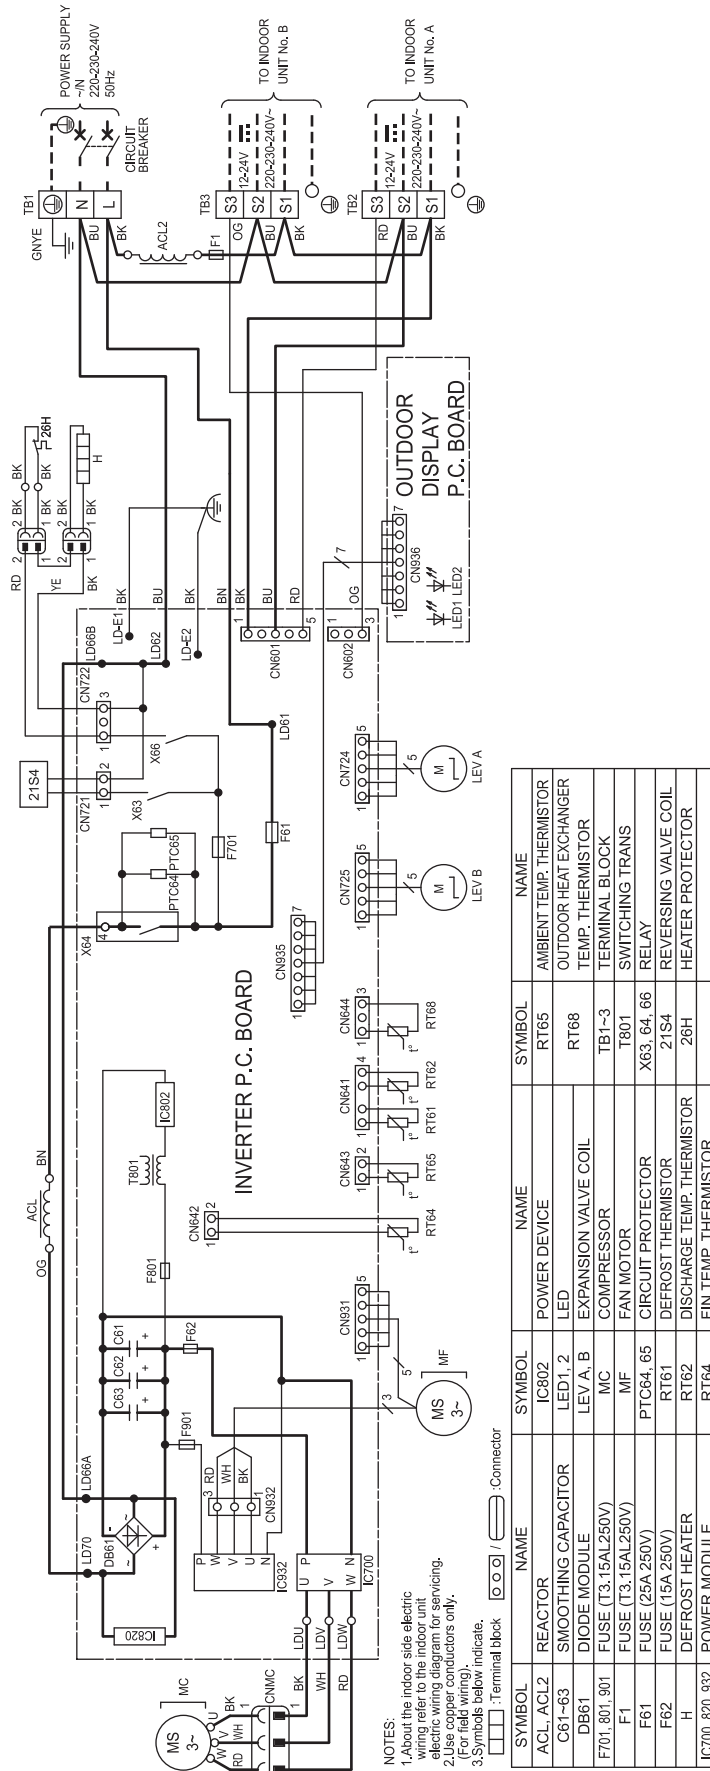

- NOTES:
- 1>About the indoor side electric wiring refer to the indoor unit electric wiring diagram for servicing. (For field wiring).
 - 2.Use copper conductors only.
 - 3.Symbols below indicate.
 - Terminal block
 - Connector


SYMBOL	NAME	SYMBOL	NAME	SYMBOL	NAME
IC802	REACTOR	IC802	POWER DEVICE	RT65	AMBIENT TEMP. THERMISTOR
ACL, ACL2		LED1, 2	LED	RT68	OUTDOOR HEAT EXCHANGER TEMP. THERMISTOR
C61-63	SMOOTHING CAPACITOR	LEV A, B	EXPANSION VALVE COIL	TB1-3	TERMINAL BLOCK
DB61	DIODE MODULE	MC	COMPRESSOR	T801	SWITCHING TRANS
F701, 801, 901	FUSE (T3,15AL250V)	MF	FAN MOTOR	X63, 64, 66	RELAY
F1	FUSE (T3,15AL250V)	PTC64, 65	CIRCUIT PROTECTOR	21S4	REVERSING VALVE COIL HEATER PROTECTOR
F61	FUSE (25A 250V)	RT61	DEFROST THERMISTOR	26H	HEATER PROTECTOR
F62	FUSE (15A 250V)	RT62	DISCHARGE TEMP. THERMISTOR		
H	DEFROST HEATER	RT64	FIN TEMP. THERMISTOR		
IC700, 820, 932	POWER MODULE				

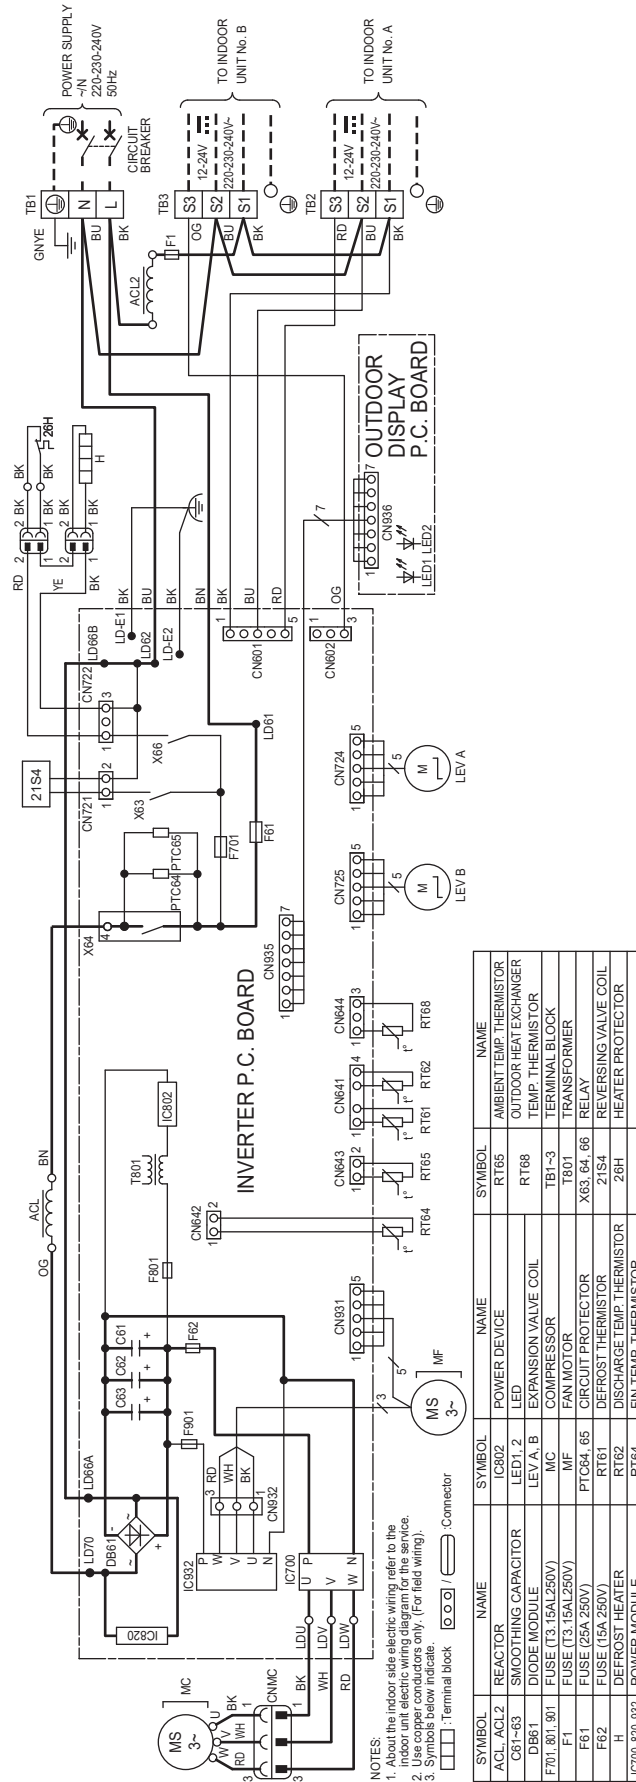

NOTES:
 1. About the indoor site electric wiring refer to the indoor unit electric wiring diagram for the service.
 2. Use copper conductors only. (For field wiring).
 3. Symbols below indicate:
 □ □ □ □ : Terminal block
 □ □ □ □ / □ □ □ □ : Connector

SYMBOL	NAME	SYMBOL	NAME
IC802	REACTOR	RT65	AMBIENT TEMP. THERMISTOR
ACL2	AC LINE	RT66	OUTDOOR HEAT EXCHANGER TEMP. THERMISTOR
C81-63	SMOOTHING CAPACITOR	TB1-3	TERMINAL BLOCK
DB61	DIODE MODULE	T801	TRANSFORMER
F701, 801, 901	FUSE (T3, 15AL250V)	X63, 64, 66	RELAY
F1	FUSE (T3, 15AL250V)	21S4	REVERSING VALVE COIL
F61	FUSE (25A, 250V)	28H	HEATER PROTECTOR
F62	FUSE (16A, 250V)		
H	DEFROST HEATER		
IC700, 820, 932	POWER MODULE		


MXZ-2F53VFH3 - [E1], [E2]

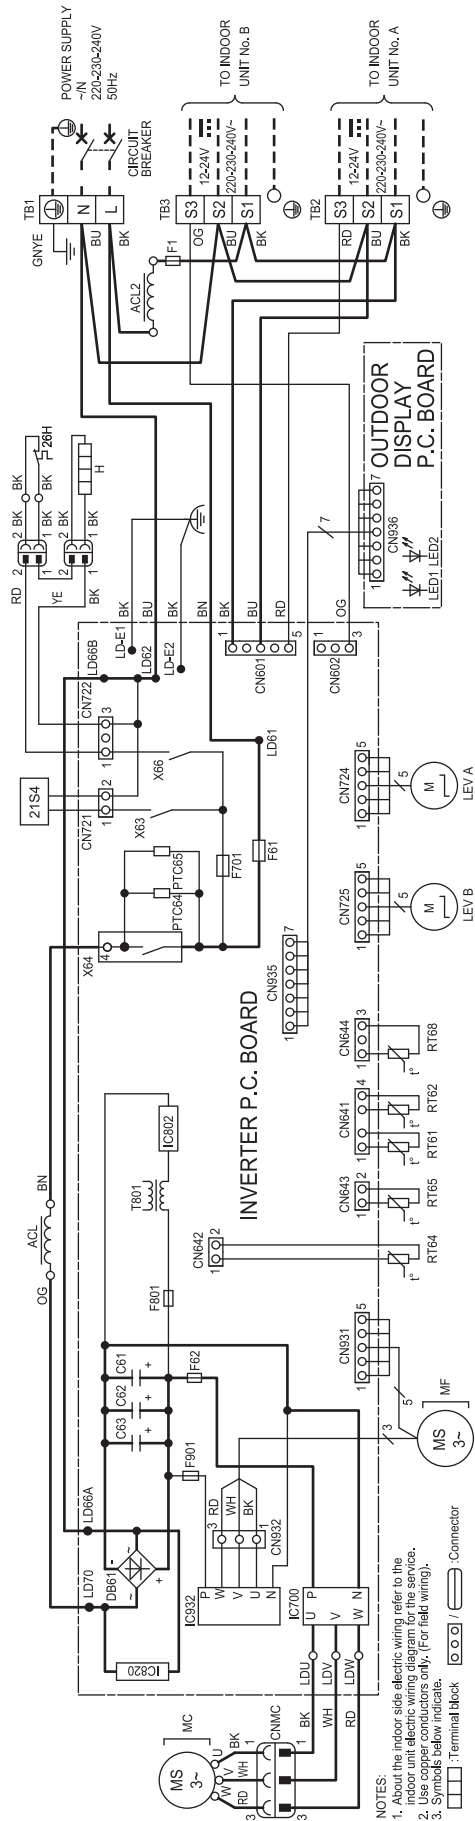

NOTES:
 1. About the indoor side electric wiring refer to the indoor unit electric wiring diagram for the service.
 2. Use capped conductors only, (for field wiring).
 3. Symptom refer to the service manual.

SYMBOL	NAME	SYMBOL	NAME	SYMBOL	NAME
IC802	REACTOR	IC802	POWER DEVICE	RT65	AMBIENT TEMP. THERMISTOR
ACL, ACL2	SMOOTHING CAPACITOR	LED1, 2	LED	RT68	OUTDOOR HEAT EXCHANGER TEMP. THERMISTOR
DB81	DIODE MODULE	LEV A, B	EXPANSION VALVE COIL	TB1~3	TERMINAL BLOCK
F701-801, 901	FUSE (T3, 15A/250V)	MC	COMPRESSOR	T801	TRANSFORMER
F1	FUSE (T3, 15A/250V)	MF	FAN MOTOR	X63, 64, 66	RELAY
F61	FUSE (25A, 250V)	PTC64, 65	CIRCUIT PROTECTOR	21S4	REVERSING VALVE COIL
F62	FUSE (16A, 250V)	RT61	DEFROST THERMISTOR	28H	HEATER PROTECTOR
H	DEFROST HEATER	RT62	DISCHARGE TEMP. THERMISTOR		
IC700, 820, 932	POWER MODULE	RT64	FIN TEMP. THERMISTOR		


MXZ-2F53VFH4 - E1

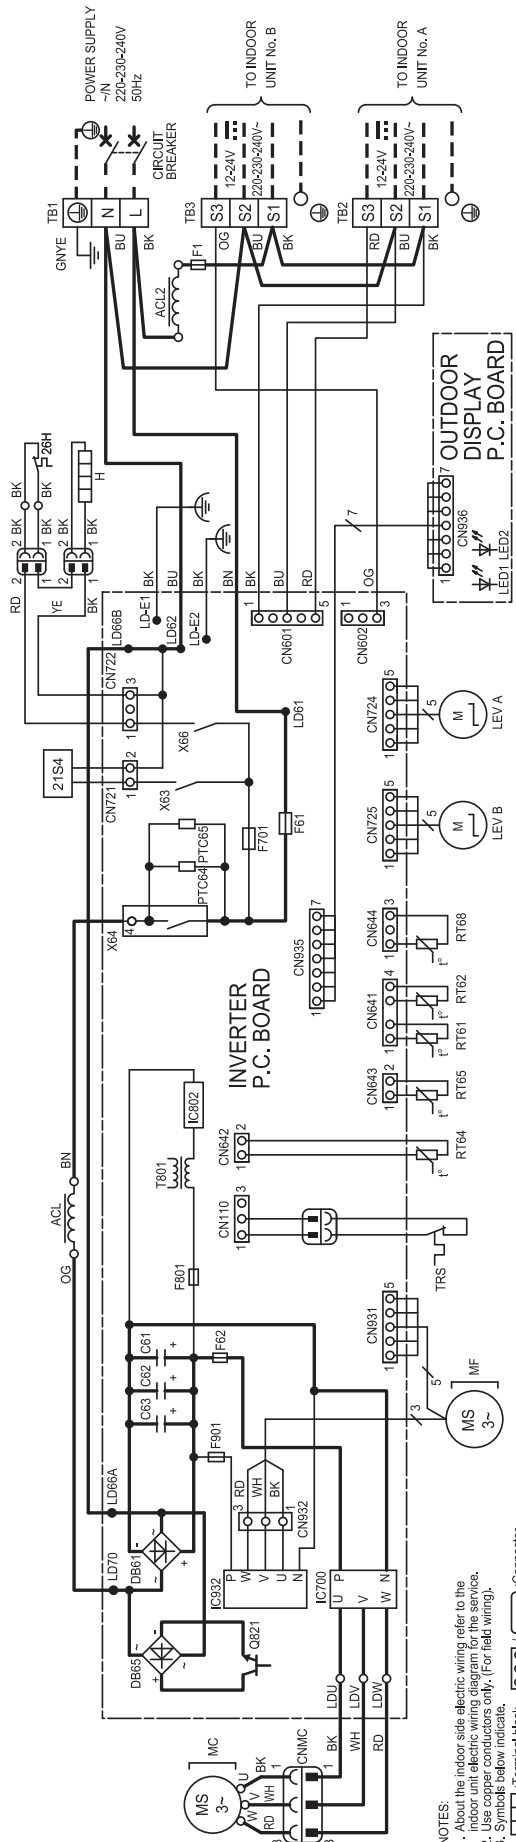

- NOTES:
- About the indoor site electric wiring refer to the indoor unit electric wiring diagram for the service.
 - Use copper conductors only. (For field wiring).
 - Symbols below indicate.
 - : terminal block
 - : Connector


SYMBOL	NAME	SYMBOL	NAME	SYMBOL	NAME
ACL ACL2	REACTOR	RT64	FIN TEMP. THERMISTOR	21S4	44WAY VALVE SOLENOID COIL
C61-63	SMOOTHING CAPACITOR	RT65	AMBIENT TEMP. THERMISTOR		
DB61, DB65	DIODE MODULE	RT68	OUTDOOR HEAT EXCHANGER TEMP. THERMISTOR		
F701, 801, 901	FUSE (T3, 15AL/250V)	TB1-3	TERMINAL BLOCK		
F1	FUSE (T3, 15AL/250V)	TRC	CIRCUIT PROTECTOR		
F61	FUSE (25A/250V)	T801	SWITCHING POWER TRANSFORMER		
F62	FUSE (15A/250V)	X63, 64, 66	DEFROST THERMISTOR		
IC700, 932	POWER MODULE				
H	DEFROST HEATER				
26H	HEATER PROTECTOR				

MXZ-3F54VF2 - [E1]
MXZ-3F68VF2 - [E1]

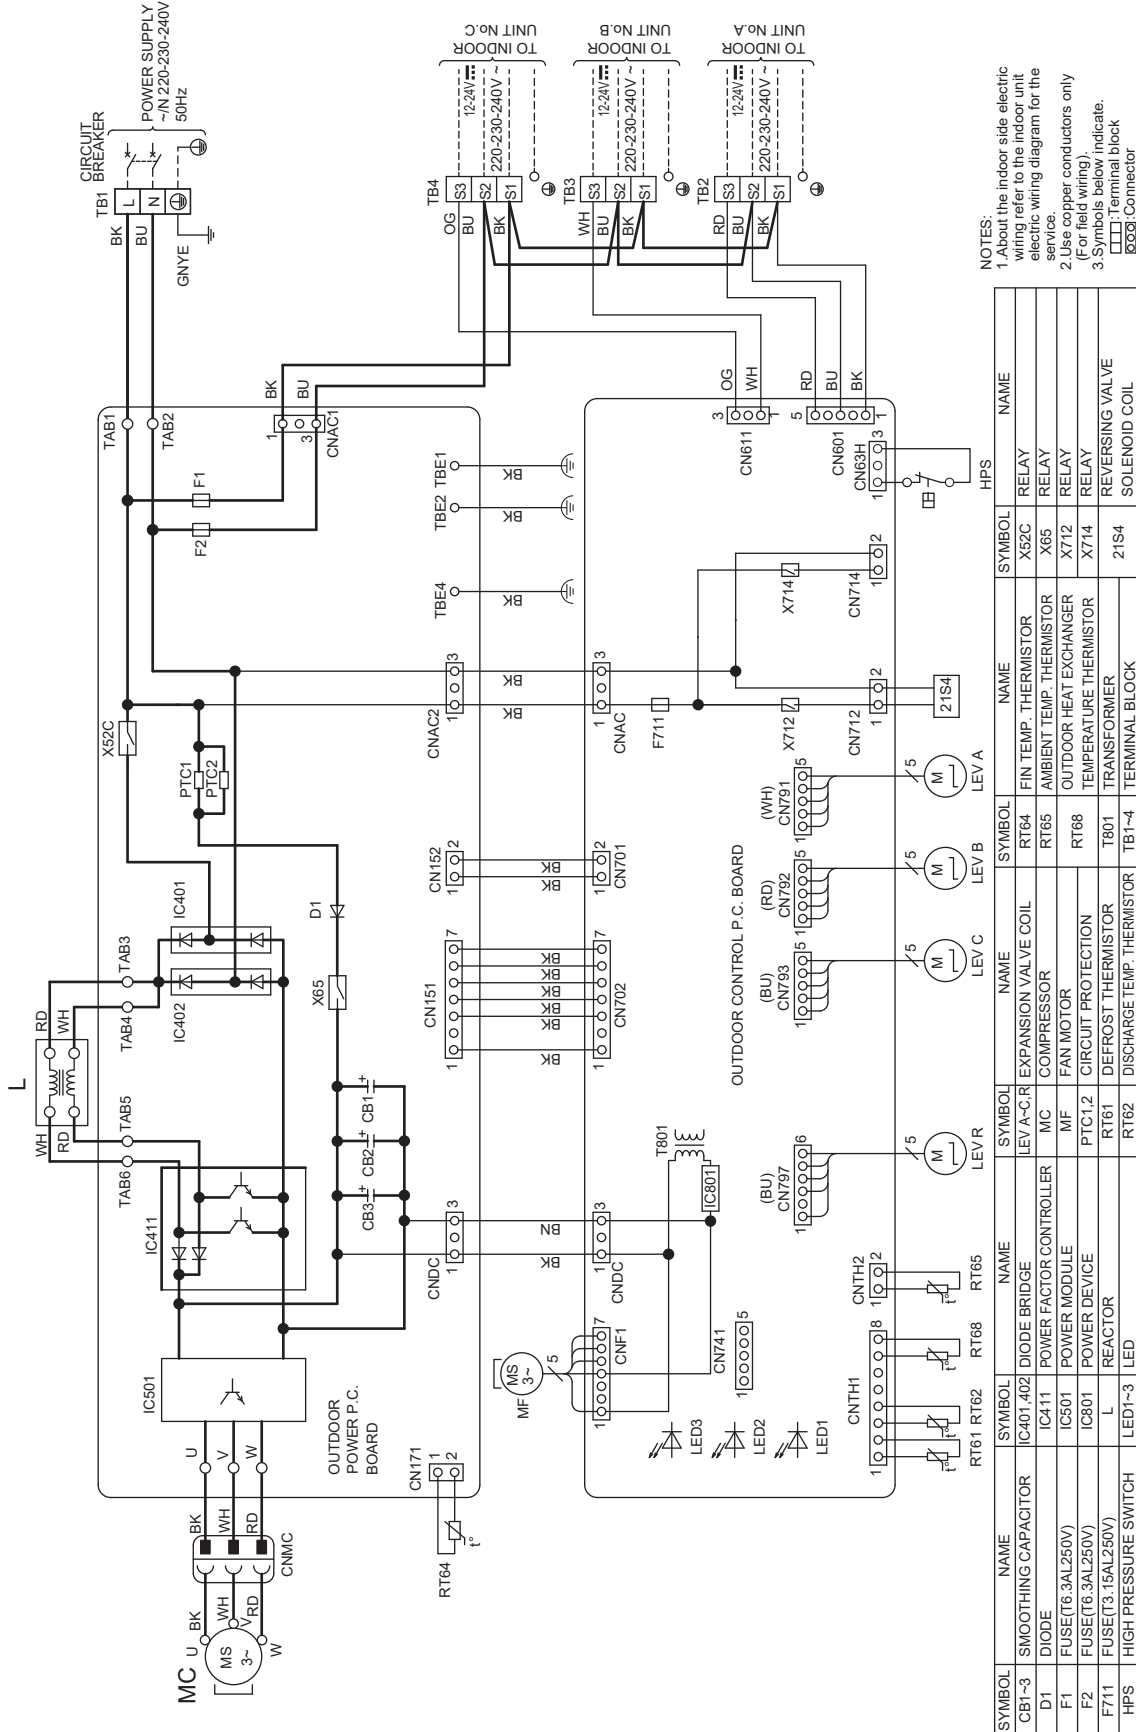


MXZ-3F54VF2 - ET1

MXZ-3F68VF2 - ET1

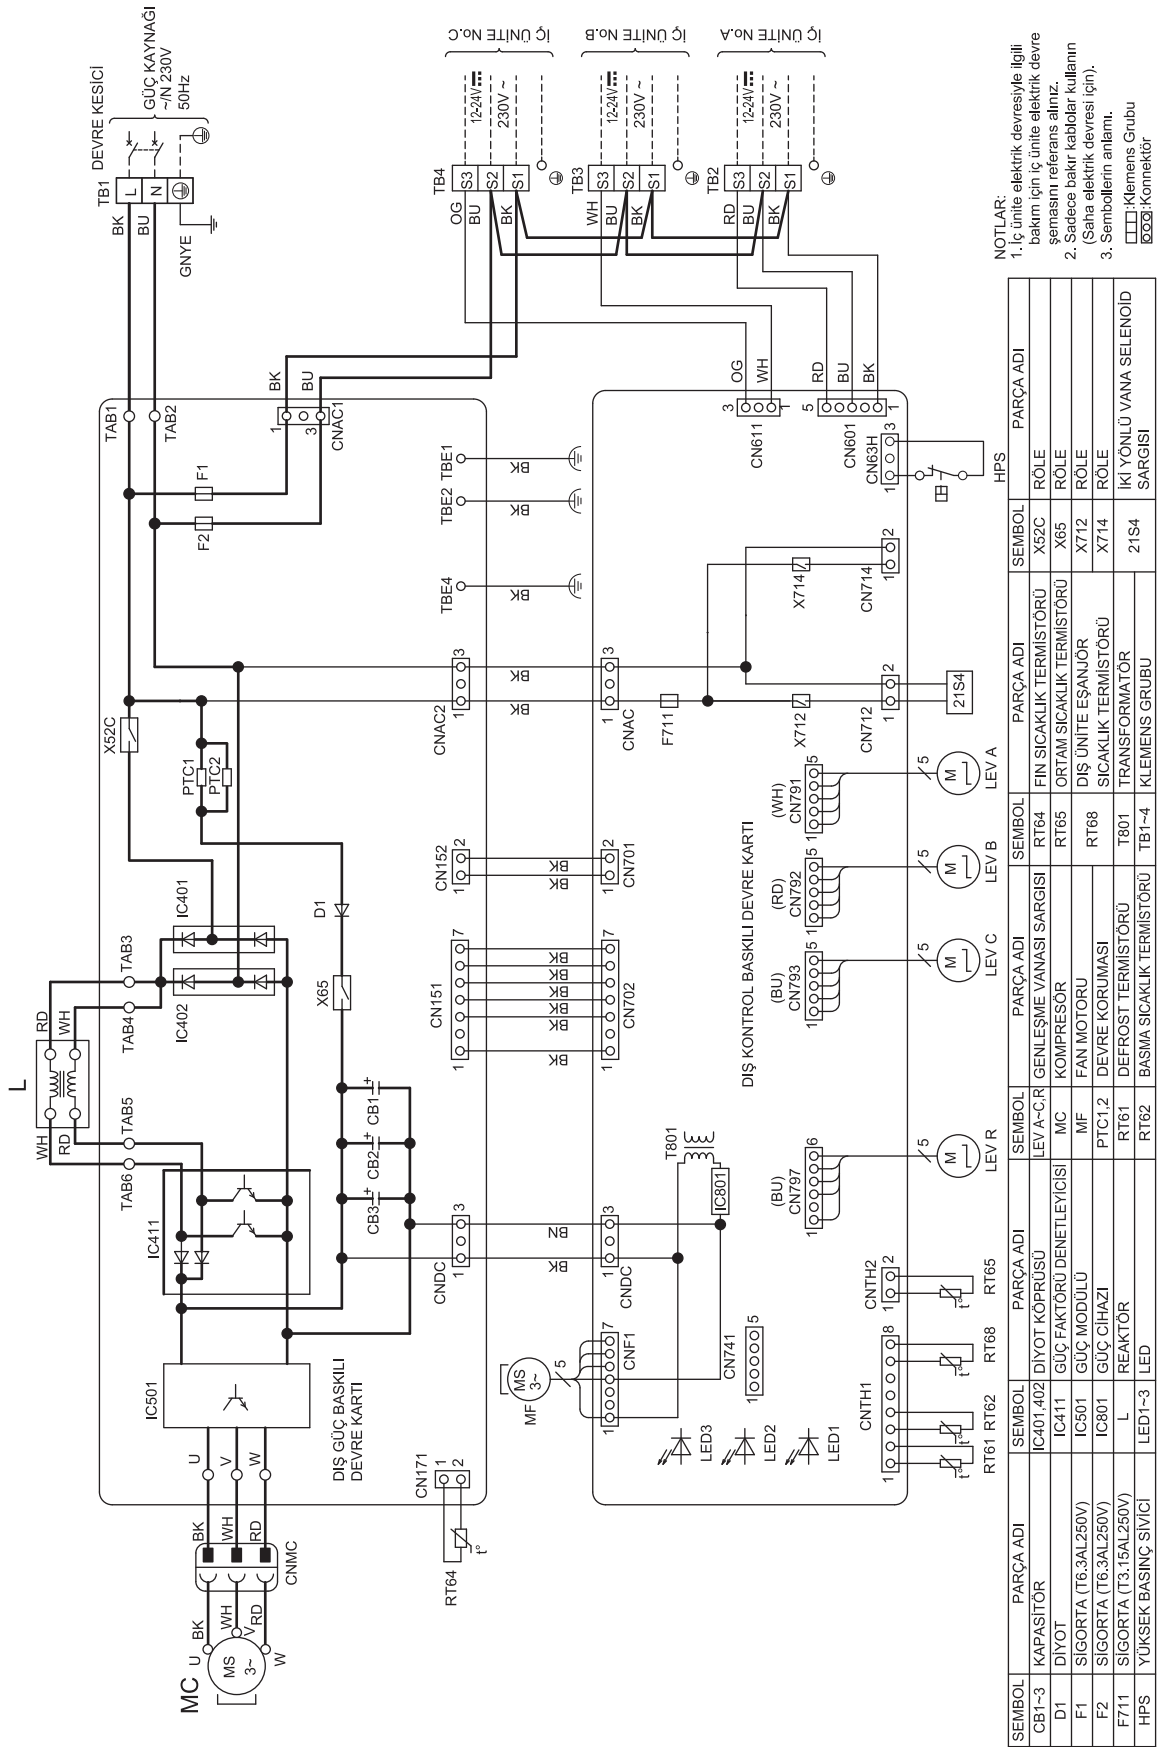


MXZ-3F54VF3 - [E1], [ER1], [E2], [ER2]
MXZ-3F68VF3 - [E1], [ER1]

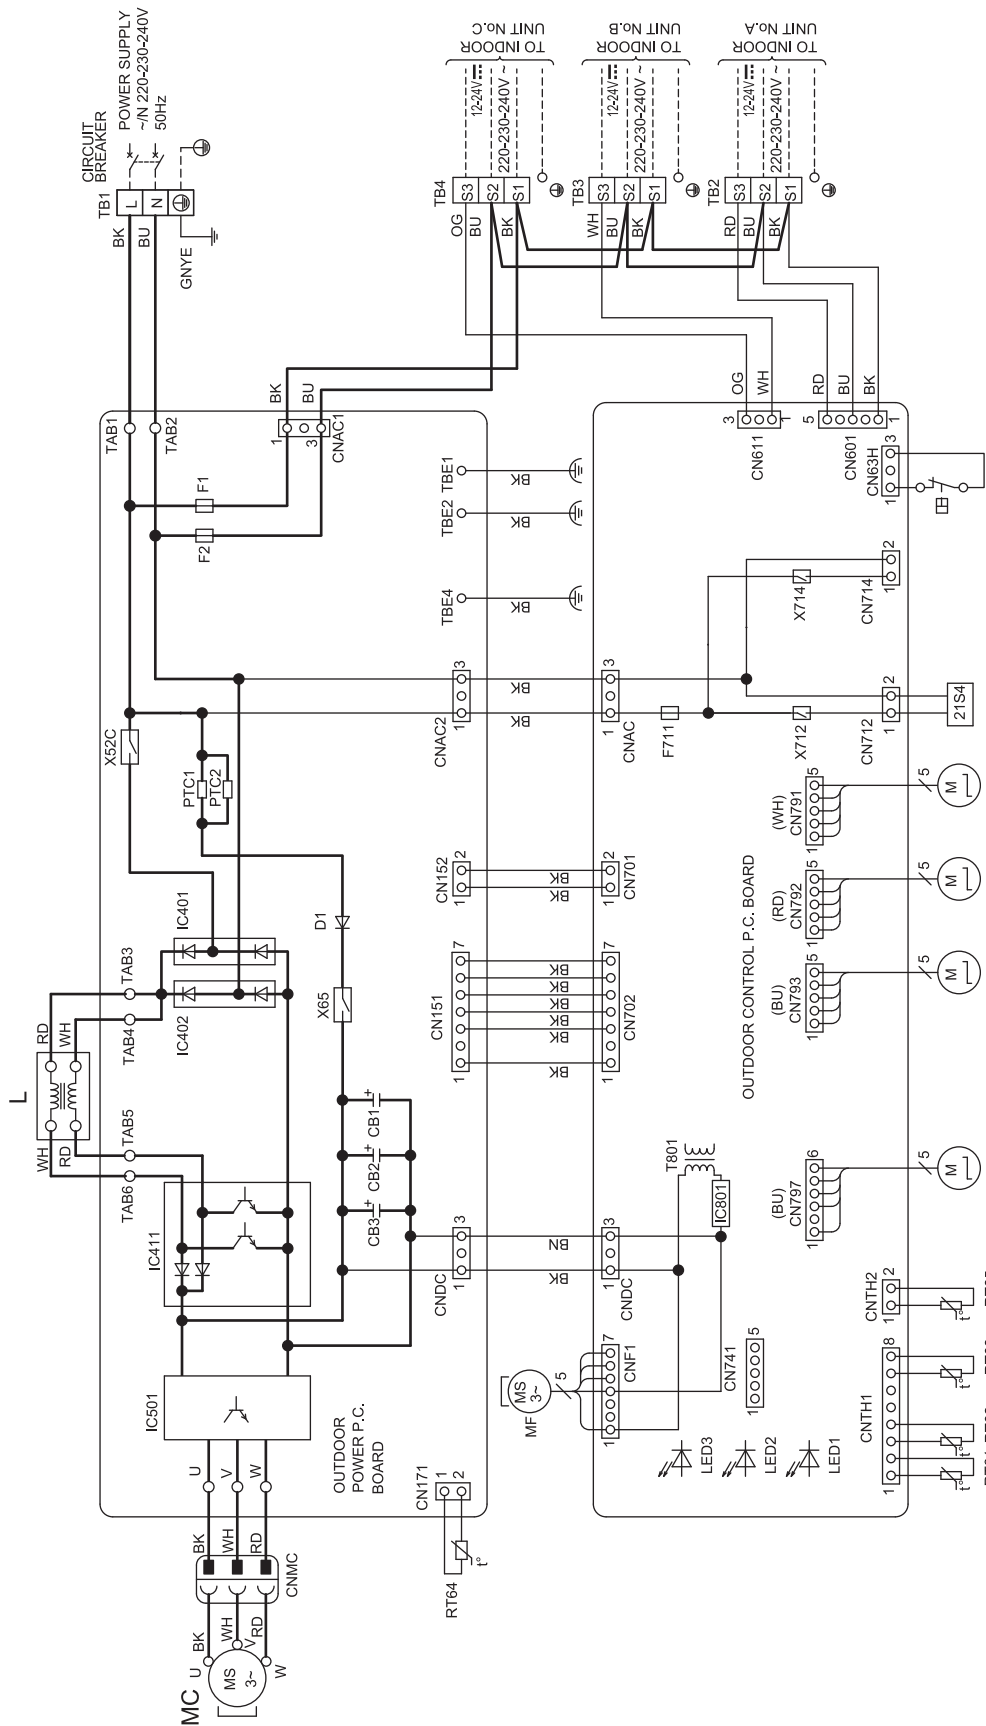

NOTES:
 1. About the indoor side electric wiring refer to the indoor unit electric wiring diagram for the service.
 2. Use copper conductors only (For field wiring).
 3. Symbols below indicate.
 [Terminal block]
 [] Connector

SYMBOL	NAME	SYMBOL	NAME	SYMBOL	NAME	SYMBOL	NAME
MS 3~	SMOOTHING CAPACITOR	RT64	FIN TEMP. THERMISTOR	X52C	RELAY		
IC401.402	DIODE BRIDGE	RT65	AMBIENT TEMP. THERMISTOR	X65	RELAY		
MC	POWER FACTOR CONTROLLER	RT66	OUTDOOR HEAT EXCHANGER	X712	RELAY		
MF	POWER MODULE	RT68	TEMP. THERMISTOR	X714	RELAY		
PTC1.2	CIRCUIT PROTECTOR	T801	TRANSFORMER	21S4	SOLENOID COIL		
RT61	REACTOR	TB1-4	TERMINAL BLOCK				
LED1-3	HIGH PRESSURE SWITCH LED						


MXZ-3F54VF3 - [ET1], [ET2]
MXZ-3F68VF3 - [ET1]

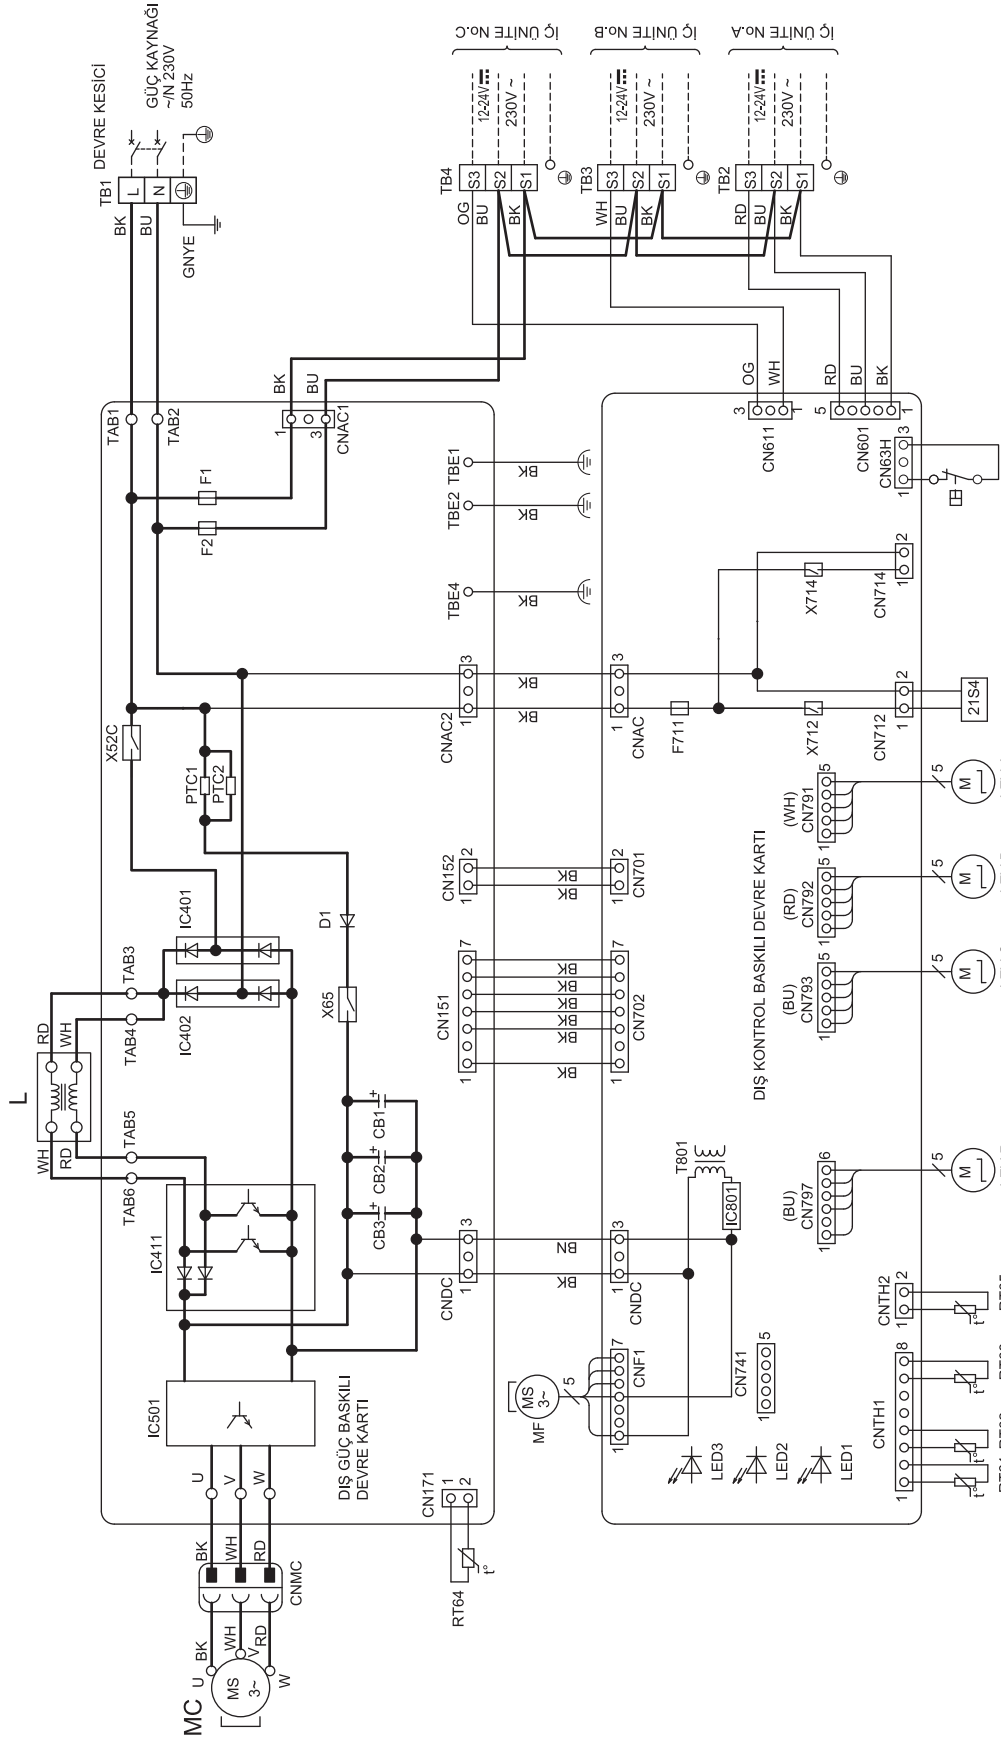

NOTLAR:
1. İç ünite elektrik devresiyle ilgili bakım için iç ünite elektrik devre şemasını referans alınır.
2. Sadece bakır kablolar kullanın (Saha elektrik devresi için).
3. Sembollerin anlamı.
□:Klemens Grubu
⊞:Konnektör

SEMBOLE	PARÇA ADI	SEMBOLE	PARÇA ADI	SEMBOLE	PARÇA ADI
CB1-3	KAPASİTÖR	LEV A-C-R	GENLEŞME VANASI SARGISI	RT64	FIN SICAKLIK TERMİSTÖRÜ
D1	DIYOT	MC	KOMPRESÖR	RT65	ORTAM SICAKLIK TERMİSTÖRÜ
F1	SİGORTA (T6.3AL250V)	MF	FAN MOTORU	RT68	DİŞ ÜNİTE EŞANJÖR
F2	SİGORTA (T6.3AL250V)	PTC1,2	GÜÇ KORUMASI	T801	SICAKLIK TERMİSTÖRÜ
F711	SİGORTA (T3.15AL250V)	RT61	REAKTÖR	TB1-4	İKİ YÖNLÜ VANA SELENOİD
HPS	YÜKSEK BASINÇ SIVICI	LED1-3	LED		SARGISI

MXZ-3F54VF4 - [E1]
MXZ-3F68VF4 - [E1]

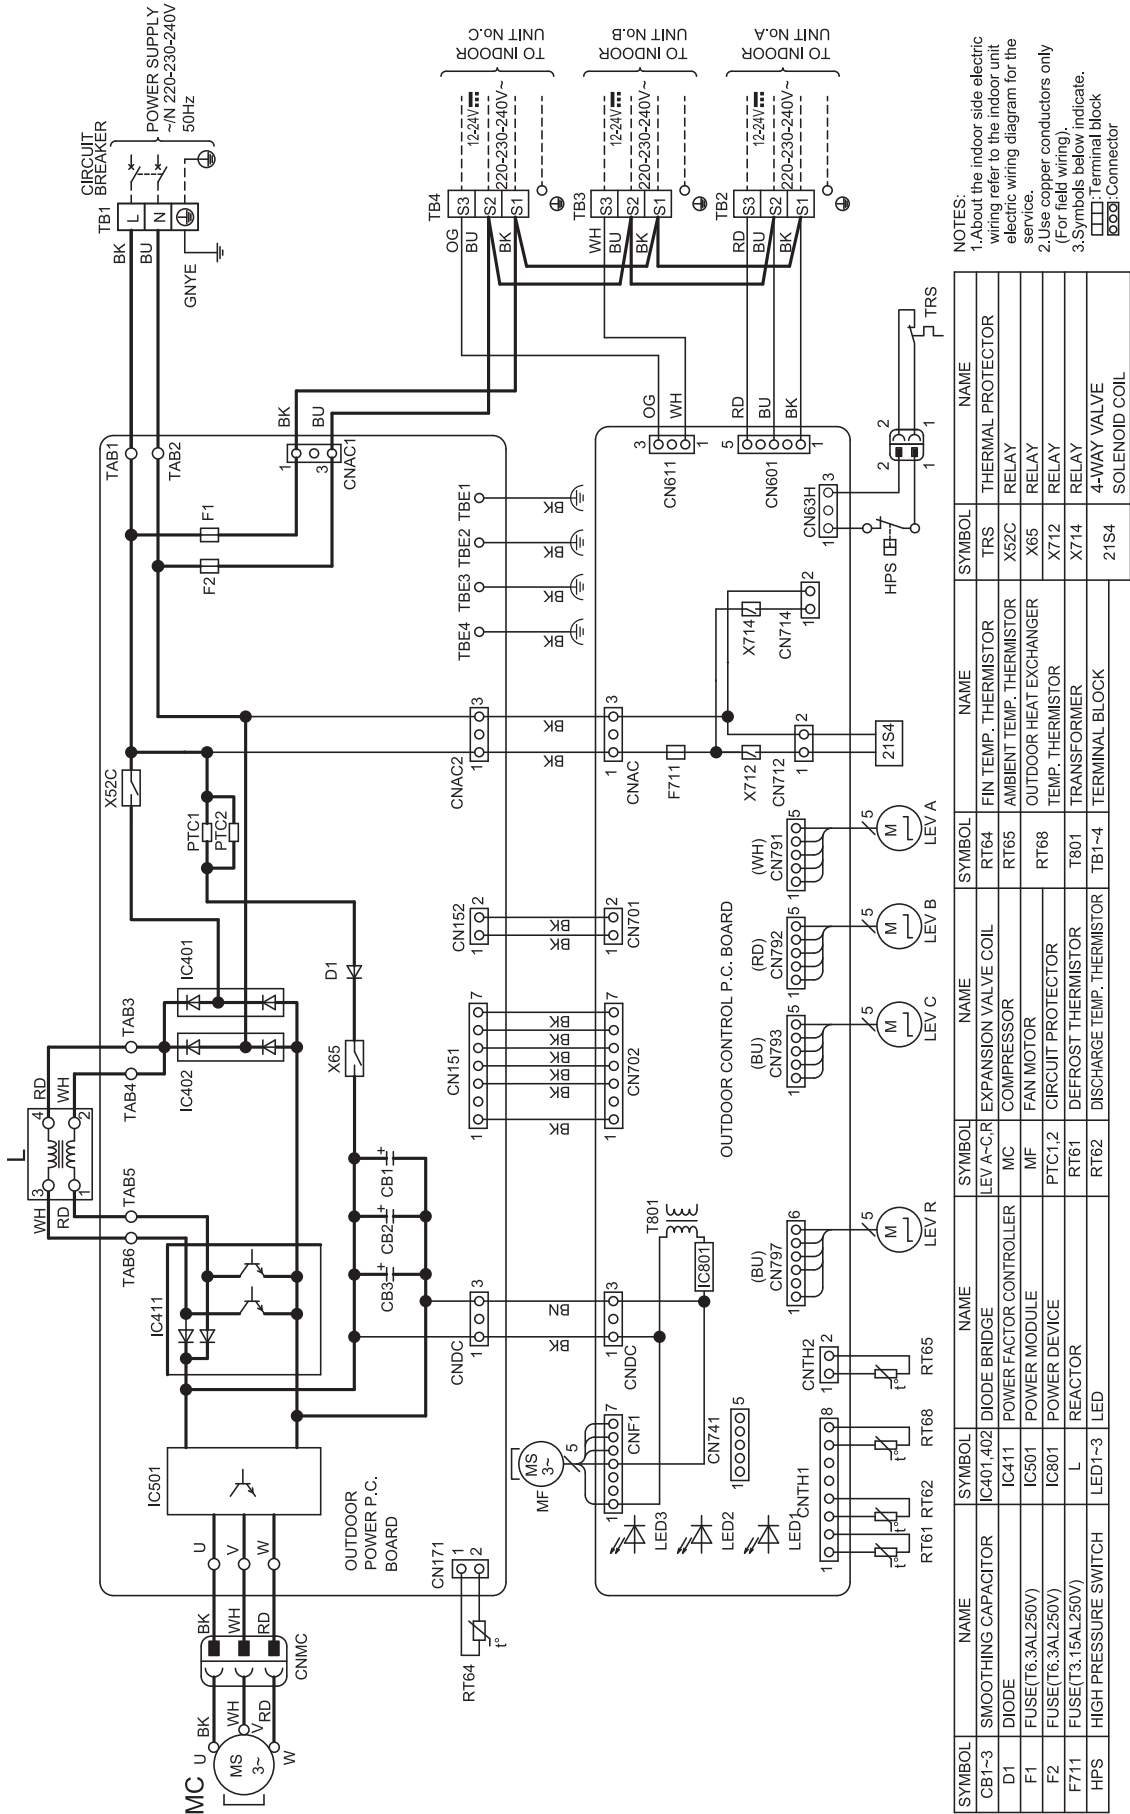


- NOTES:**
1. About the indoor side electric wiring refer to the indoor unit electric wiring diagram for the service.
 2. Use copper conductors only (For field wiring).
 3. Symbols below indicate.
 - : Terminal block
 - : Connector

SYMBOL	NAME	SYMBOL	NAME	SYMBOL	NAME	SYMBOL	NAME
CB1-3	SMOOTHING CAPACITOR	IC401,402	DIODE BRIDGE	LEV A-C,R	EXPANSION VALVE COIL	RT65	THERMAL PROTECTOR
D1	DIODE	IC411	POWER FACTOR CONTROLLER	MC	COMPRESSOR	X52C	RELAY
F1	FUSE(T6.3AL250V)	IC501	POWER MODULE	MF	FAN MOTOR	X65	RELAY
F2	FUSE(T6.3AL250V)	IC801	POWER DEVICE	PTC1,2	CIRCUIT PROTECTOR	X712	RELAY
F711	FUSE(T3.15AL250V)	L	REACTOR	RT61	DEFROST THERMISTOR	X714	RELAY
HPS	HIGH PRESSURE SWITCH	LED1-3	LED	RT62	DISCHARGE TEMP. THERMISTOR	21S4	4-WAY VALVE SOLENOID COIL
				RT66	TERMINAL BLOCK		
				LEV A	LEV A		
				LEV B	LEV B		
				LEV C	LEV C		
				LEV R	LEV R		

MXZ-3F54VF4 - ET1


MXZ-3F68VF4 - ET1

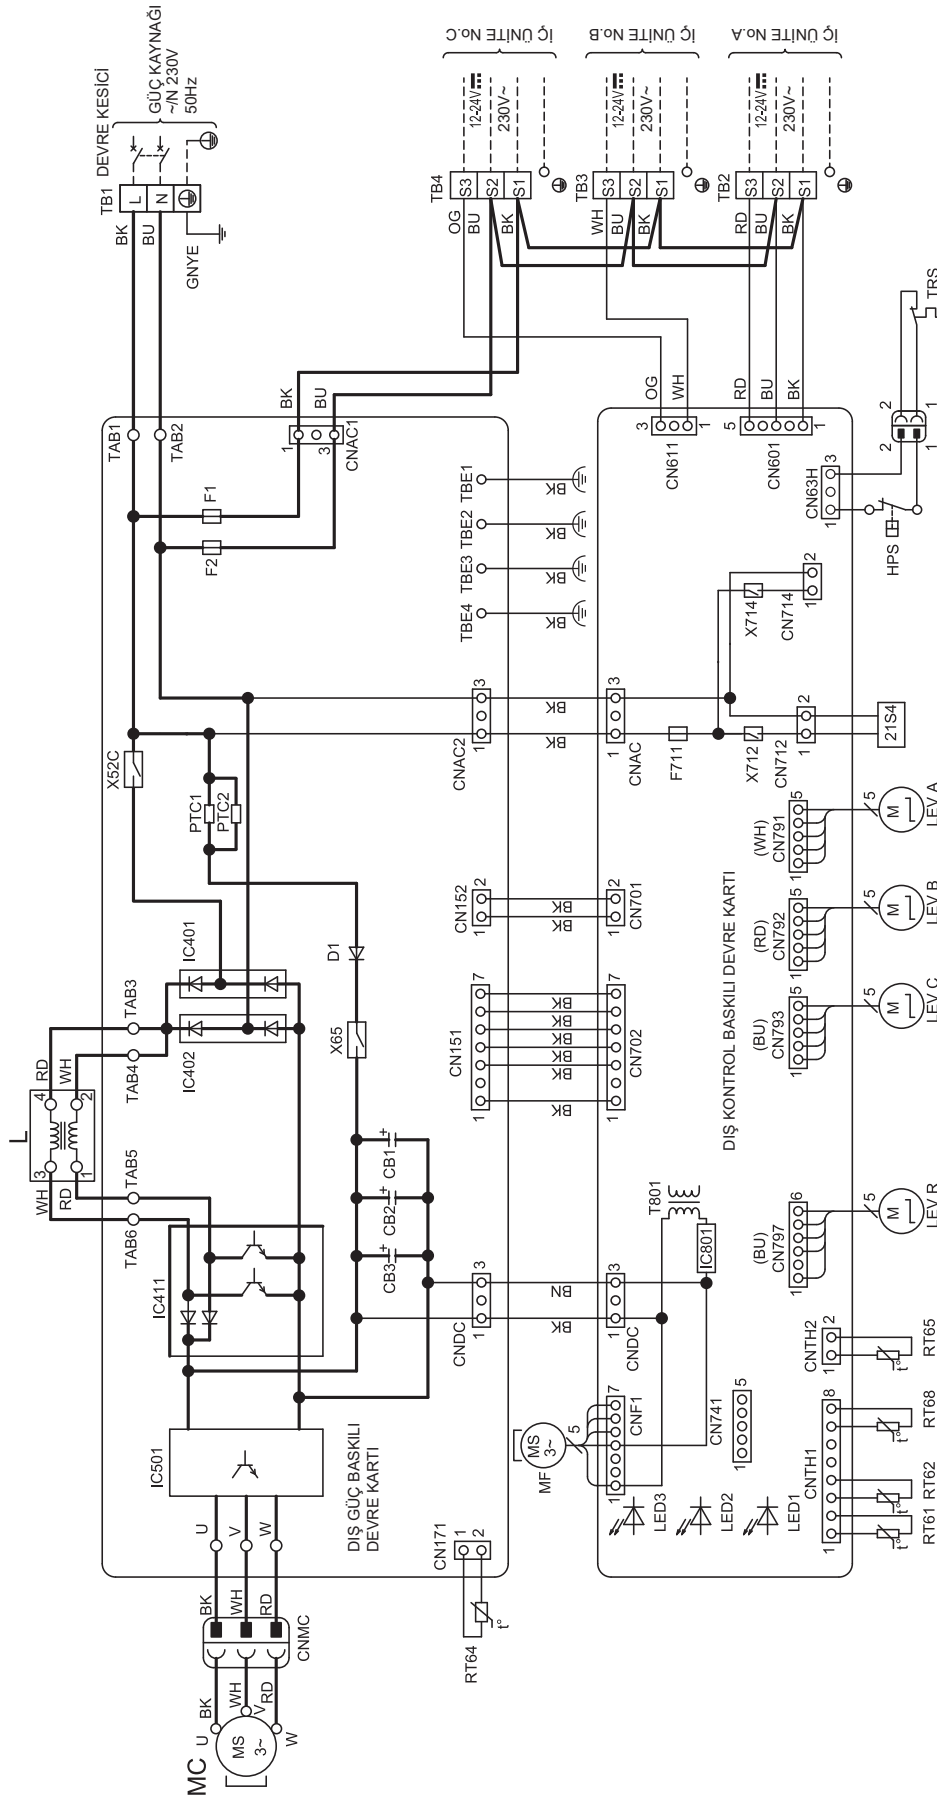

NOTLAR:
1. İç ünite elektrik devresiyle ilgili bakım için iç ünite elektrik devre şemasını referans alınız.
2. Sadece bakır kablolar kullanın (Saha elektrik devresi için).
3. Sembollerin anlamları:
□: Klemens Grubu
□□□: Konnektör

SEMBOL	PARÇA ADI	SEMBOL	PARÇA ADI	SEMBOL	PARÇA ADI	SEMBOL	PARÇA ADI
CB1-3	KAPASİTÖR	IC401,402	DIYOT KÖPRÜSÜ	LEV A-C-R	KOMPLEŞME VANASI SARGISI	RT64	FIN SICAKLIK TERMİSTÖRÜ
D1	DIYOT	IC411	GÜÇ FAKTÖRÜ DENETLEYİCİSİ	MC	KOMPRESÖR	RT65	ORTAM SICAKLIK TERMİSTÖRÜ
F1	SIGORTA (T6.3AL250V)	IC501	GÜÇ MODÜLÜ	MF	FAN MOTORU	RT66	DİŞ ÜNİTE EŞANJÖR SICAKLIK TERMİSTÖRÜ
F2	SIGORTA (T6.3AL250V)	IC801	GÜÇ CHAZI	PTC1,2	DEVRE KORUMASI	RT68	SICAKLIK TERMİSTÖRÜ
F71	SIGORTA (T3.15AL250V)	L	REAKTÖR	RT61	DEFROST TERMİSTÖRÜ	T801	TRANSFORMATÖR
HPS	YÜKSEK BASINÇ SIVICI	LED1-3	LED	RT62	BASMA SICAKLIK TERMİSTÖRÜ	TB1-4	KLEMENS GRUBU
						21S4	SOLENOİD SARGISI


MXZ-4F72VF - [E1], [ET1], [E2], [ET2]

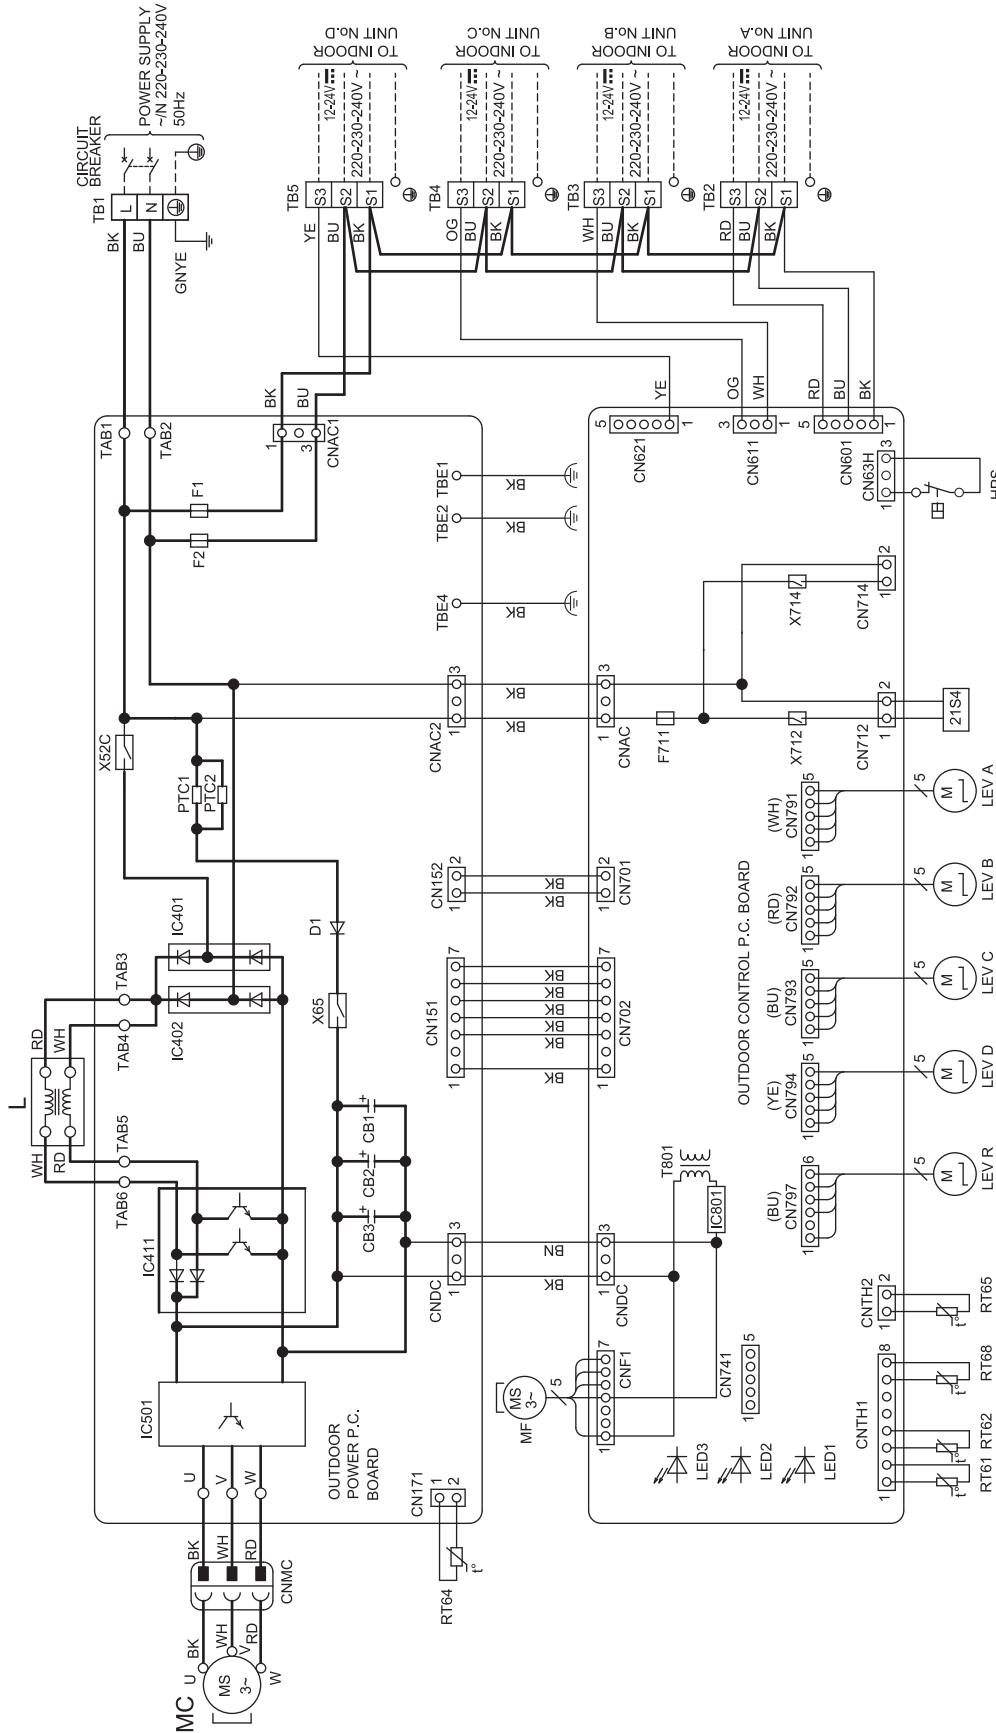

NOTES:
 1. About the indoor side electric wiring refer to the indoor unit electric wiring diagram for the service.
 2. Use copper conductors only (For field wiring).
 3. Symbols below indicate.
 [] : Terminal block
 [] : Connector


SYMBOL	NAME	SYMBOL	NAME	SYMBOL	NAME	SYMBOL	NAME
CB1-3	SMOOTHING CAPACITOR	IC401,402	DIODE BRIDGE	LEV A-DR	EXPANSION VALVE COIL	X52C	RELAY
D1	DIODE	IC411	POWER FACTOR CONTROLLER	RT64	FIN TEMP. THERMISTOR	X65	RELAY
F1	FUSE(T6.3AL250V)	IC501	POWER MODULE	RT65	AMBIENT TEMP. THERMISTOR	X712	RELAY
F2	FUSE(T6.3AL250V)	IC801	POWER DEVICE	RT66	OUTDOOR HEAT EXCHANGER	X714	RELAY
F711	FUSE(T3.15AL250V)	L	REACTOR	PTC1,2	CIRCUIT PROTECTION	X715	RELAY
HPS	HIGH PRESSURE SWITCH	LED1-3	LED	RT61	DEFROST THERMISTOR	X716	RELAY
				RT62	DISCHARGE TEMP. THERMISTOR	21S4	SOLENOID COIL
				RT63	TEMPERATURE THERMISTOR		
				RT64	FIN TEMP. THERMISTOR		
				RT65	AMBIENT TEMP. THERMISTOR		
				RT66	OUTDOOR HEAT EXCHANGER		
				RT67	TEMPERATURE THERMISTOR		
				RT68	CIRCUIT PROTECTION		
				RT69	DEFROST THERMISTOR		
				RT70	DISCHARGE TEMP. THERMISTOR		
				RT71	FIN TEMP. THERMISTOR		
				RT72	AMBIENT TEMP. THERMISTOR		
				RT73	OUTDOOR HEAT EXCHANGER		
				RT74	TEMPERATURE THERMISTOR		
				RT75	CIRCUIT PROTECTION		
				RT76	DEFROST THERMISTOR		
				RT77	DISCHARGE TEMP. THERMISTOR		
				RT78	FIN TEMP. THERMISTOR		
				RT79	AMBIENT TEMP. THERMISTOR		
				RT80	OUTDOOR HEAT EXCHANGER		
				RT81	TEMPERATURE THERMISTOR		
				RT82	CIRCUIT PROTECTION		
				RT83	DEFROST THERMISTOR		
				RT84	DISCHARGE TEMP. THERMISTOR		
				RT85	FIN TEMP. THERMISTOR		
				RT86	AMBIENT TEMP. THERMISTOR		
				RT87	OUTDOOR HEAT EXCHANGER		
				RT88	TEMPERATURE THERMISTOR		
				RT89	CIRCUIT PROTECTION		
				RT90	DEFROST THERMISTOR		
				RT91	DISCHARGE TEMP. THERMISTOR		
				RT92	FIN TEMP. THERMISTOR		
				RT93	AMBIENT TEMP. THERMISTOR		
				RT94	OUTDOOR HEAT EXCHANGER		
				RT95	TEMPERATURE THERMISTOR		
				RT96	CIRCUIT PROTECTION		
				RT97	DEFROST THERMISTOR		
				RT98	DISCHARGE TEMP. THERMISTOR		
				RT99	FIN TEMP. THERMISTOR		
				RT100	AMBIENT TEMP. THERMISTOR		

MXZ-4F72VF2 - E1
MXZ-4F80VF2 - E1

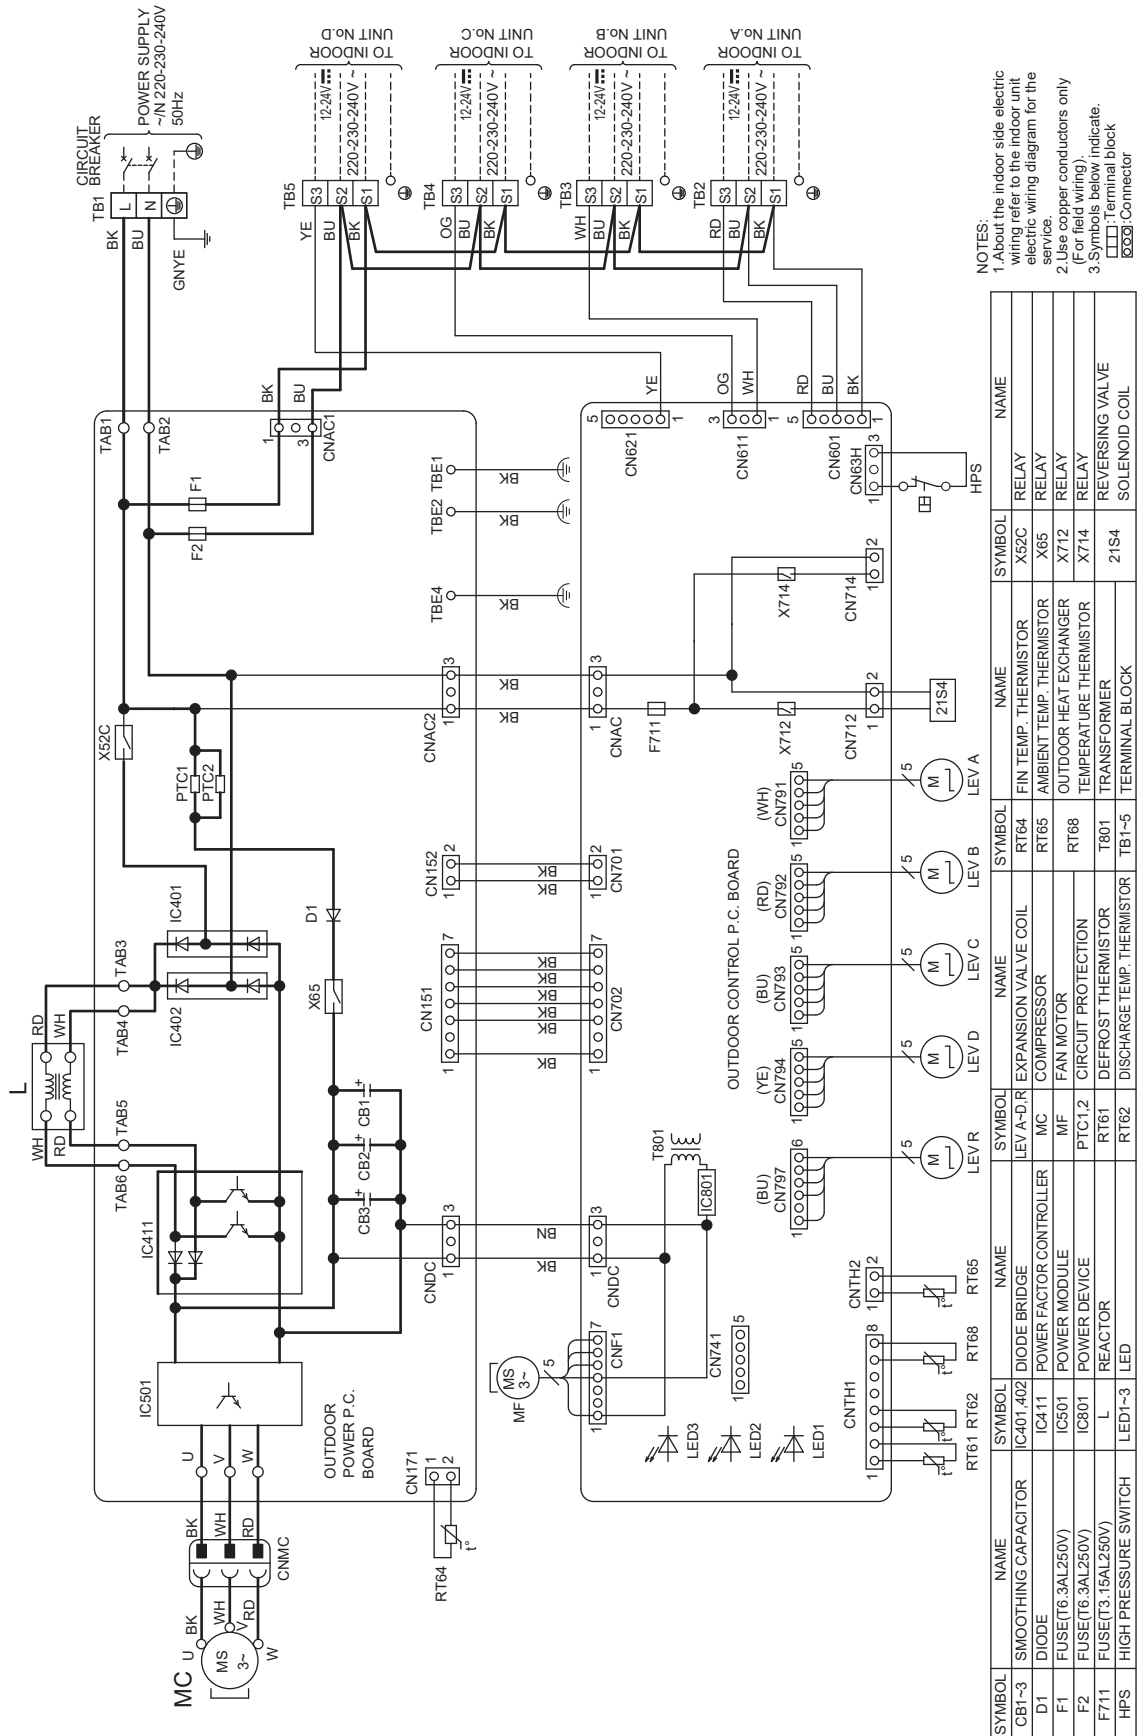


MXZ-4F72VF2 - ET1

MXZ-4F80VF2 - ET1

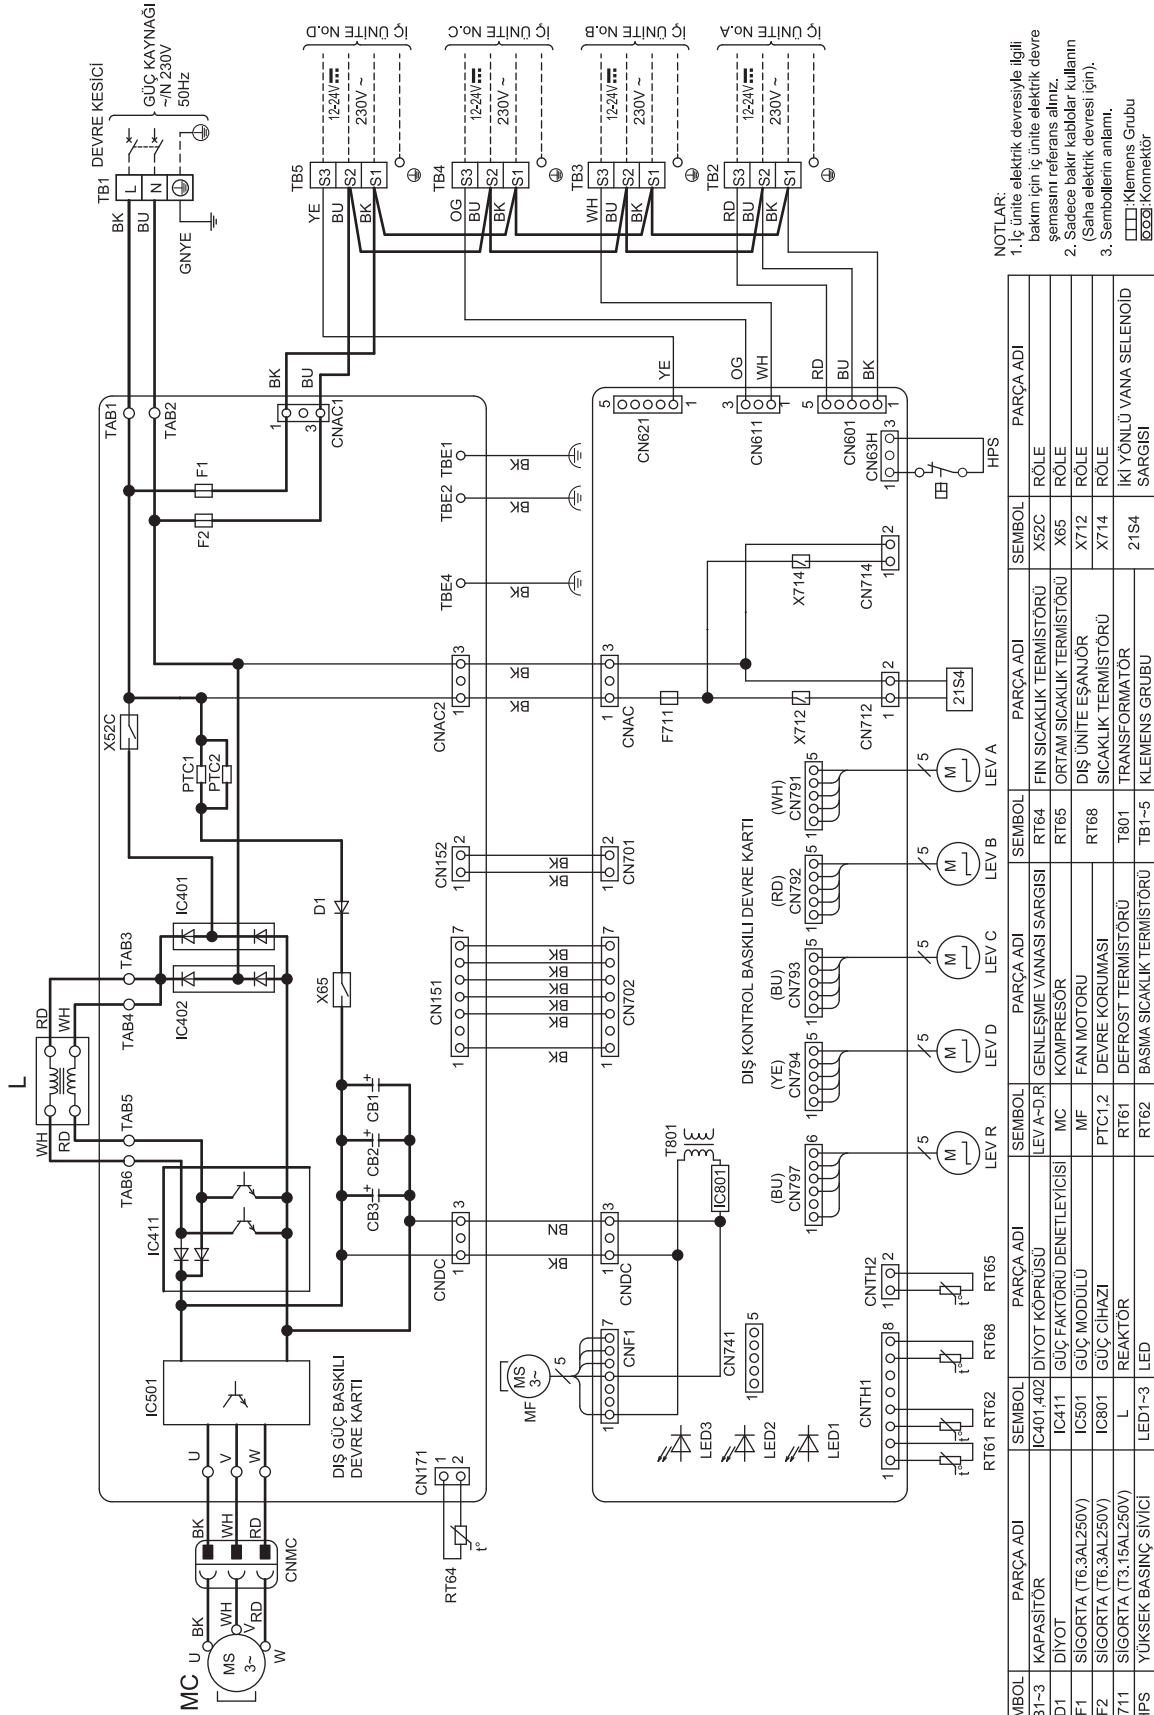


MXZ-4F72VF3 - [E1], [ER1]
MXZ-4F80VF3 - [E1]

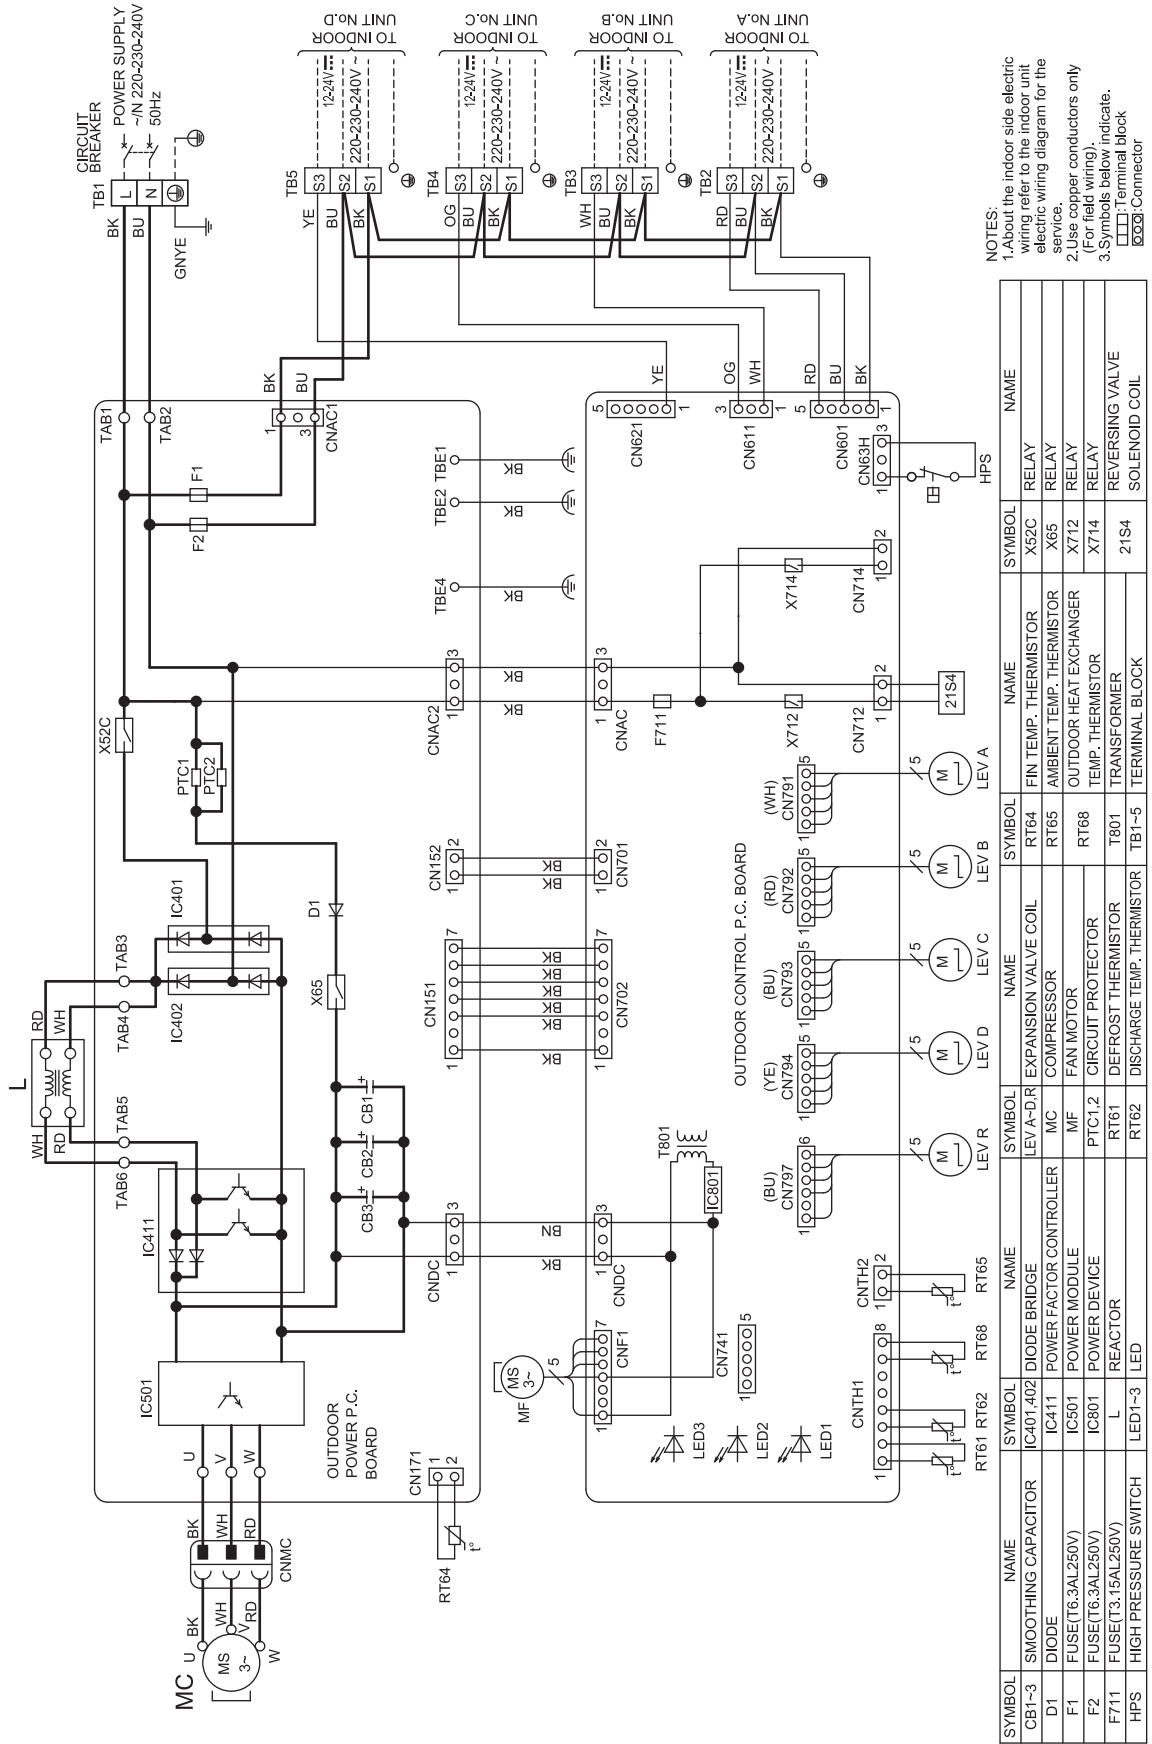

NOTES:
 1. About the indoor side electric wiring refer to the indoor unit electric wiring diagram for the service.
 2. Use copper conductors only (For field wiring).
 3. Symbols below indicate.
 □ □ □ □: Terminal block
 □ □ □ □: Connector

SYMBOL	NAME	SYMBOL	NAME	SYMBOL	NAME	SYMBOL	NAME
CB1-3	SMOOTHING CAPACITOR	IC401, 402	DIODE BRIDGE	LEV A-D, R	EXPANSION VALVE COIL	RT64	FIN TEMP. THERMISTOR
D1	DIODE	IC411	POWER FACTOR CONTROLLER	MC	COMPRESSOR	RT65	AMBIENT TEMP. THERMISTOR
F1	FUSE(T6.3AL250V)	IC501	POWER MODULE	MF	FAN MOTOR	RT68	OUTDOOR HEAT EXCHANGER
F2	FUSE(T6.3AL250V)	IC801	POWER DEVICE	PTC1, 2	CIRCUIT PROTECTOR	RT61	TEMP. THERMISTOR
F711	FUSE(T3.15AL250V)	L	REACTOR	RT62	DISCHARGE TEMP. THERMISTOR	T801	TRANSFORMER
HPS	HIGH PRESSURE SWITCH	LED1-3	LED	RT65	TERMINAL BLOCK	TB1-5	TERMINAL BLOCK
						X52C	RELAY
						X65	RELAY
						X712	RELAY
						X714	RELAY
						21S4	REVERSING VALVE SOLENOID COIL

MXZ-4F72VF3 - [ET1]
MXZ-4F80VF3 - [ET1]

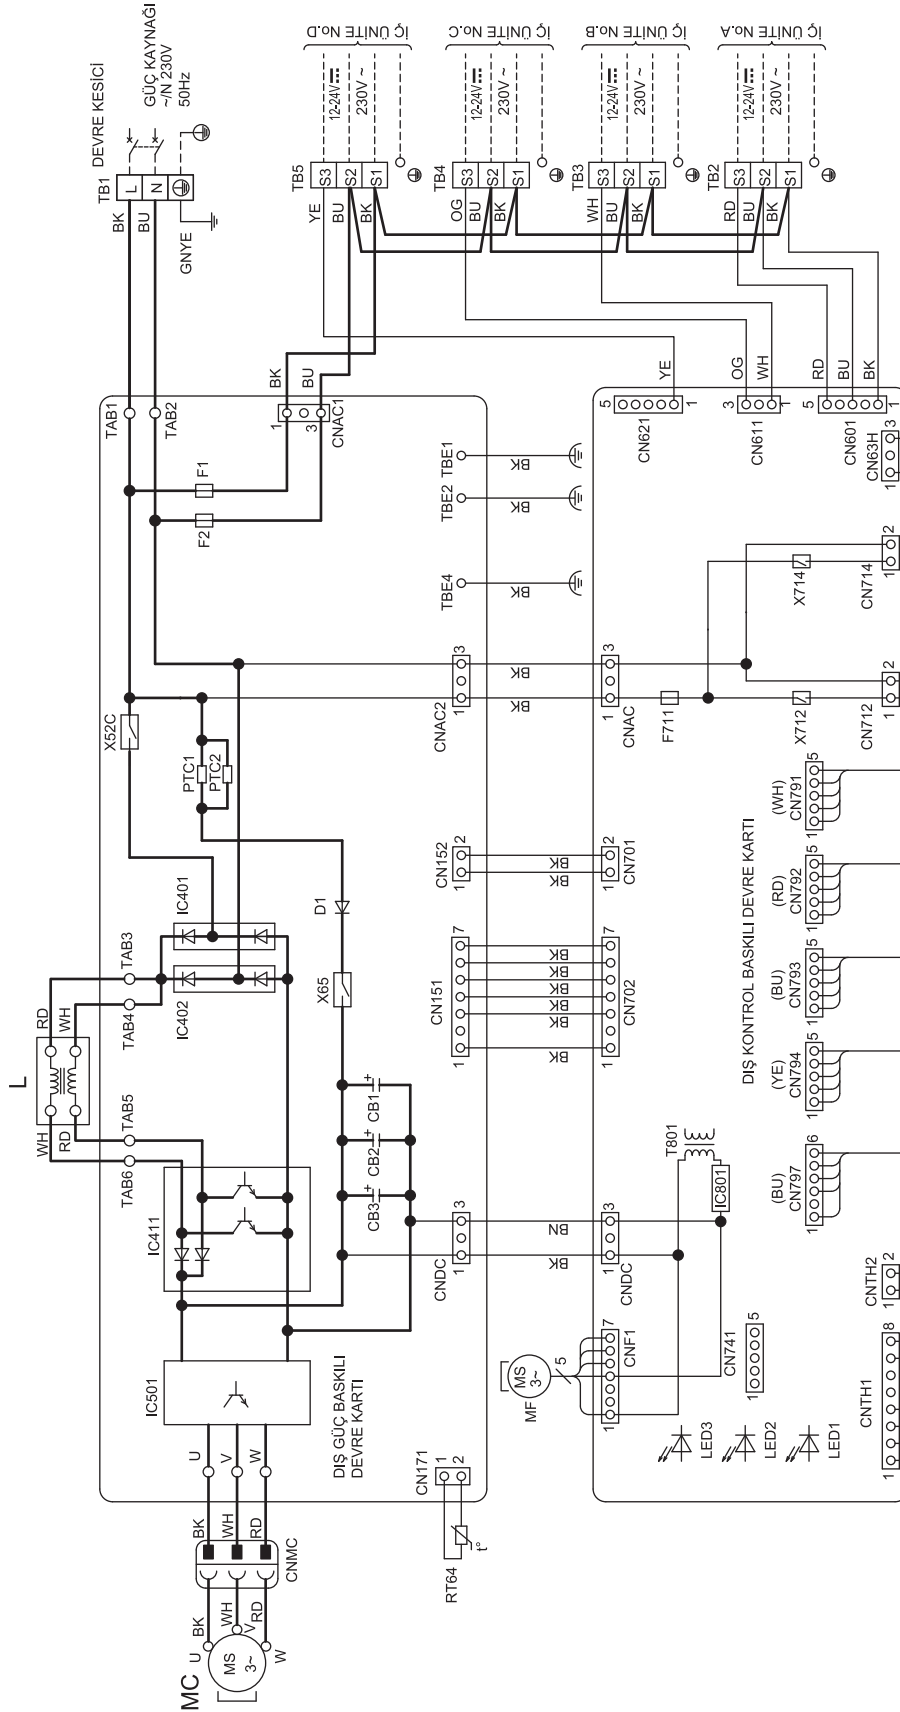


NOTLAR:
1. İç ünite, elektrik devresiyle ilgili bakım için iç ünite elektrik devre şemasını referans alınınız.
2. Sadece bakır kablolar kullanın (Saha elektrik devresi için).
3. Sembollerin anlamı.
□ Klemens Grubu
⊞ Konnektör

SEMBOLE	PARÇA ADI	SEMBOLE	PARÇA ADI	SEMBOLE	PARÇA ADI
CB1-3	KAPASİTÖR	RT64	GENLEŞME VANASI SARGISI	X52C	RÖLE
D1	DIYOT	RT65	KOMPRESÖR	X65	RÖLE
F1	SİGORTA (T6.3AL250V)	MF	FAN MOTORU	X712	RÖLE
F2	SİGORTA (T6.3AL250V)	PTC1,2	DEPRE KÖRUMASI	X714	RÖLE
F711	SİGORTA (T3.15AL250V)	RT61	GUÇ CİHAZI	21S4	SARGISI
HPS	YUKSEK BASINÇ SIVICI	RT62	BASMA SİCİKLİK TERMİSTÖRÜ		
		RT66	DIŞ SİCİKLİK TERMİSTÖRÜ		
		RT67	ORTAM SİCİKLİK TERMİSTÖRÜ		
		RT68	DIŞ ÜNİTE EŞANÖR		
		RT69	ORTAM SİCİKLİK TERMİSTÖRÜ		
		RT70	DIŞ ÜNİTE EŞANÖR		
		RT71	SİCİKLİK TERMİSTÖRÜ		
		RT72	TRANSFORMATÖR		
		RT73	İKİ YÖNLÜ VANA SELENOİD		
		RT74	İKİ YÖNLÜ VANA SELENOİD		
		RT75	İKİ YÖNLÜ VANA SELENOİD		
		RT76	İKİ YÖNLÜ VANA SELENOİD		
		RT77	İKİ YÖNLÜ VANA SELENOİD		
		RT78	İKİ YÖNLÜ VANA SELENOİD		
		RT79	İKİ YÖNLÜ VANA SELENOİD		
		RT80	İKİ YÖNLÜ VANA SELENOİD		
		RT81	İKİ YÖNLÜ VANA SELENOİD		
		RT82	İKİ YÖNLÜ VANA SELENOİD		
		RT83	İKİ YÖNLÜ VANA SELENOİD		
		RT84	İKİ YÖNLÜ VANA SELENOİD		
		RT85	İKİ YÖNLÜ VANA SELENOİD		
		RT86	İKİ YÖNLÜ VANA SELENOİD		
		RT87	İKİ YÖNLÜ VANA SELENOİD		
		RT88	İKİ YÖNLÜ VANA SELENOİD		

MXZ-4F72VF4 - [E1]

MXZ-4F80VF4 - [E1]

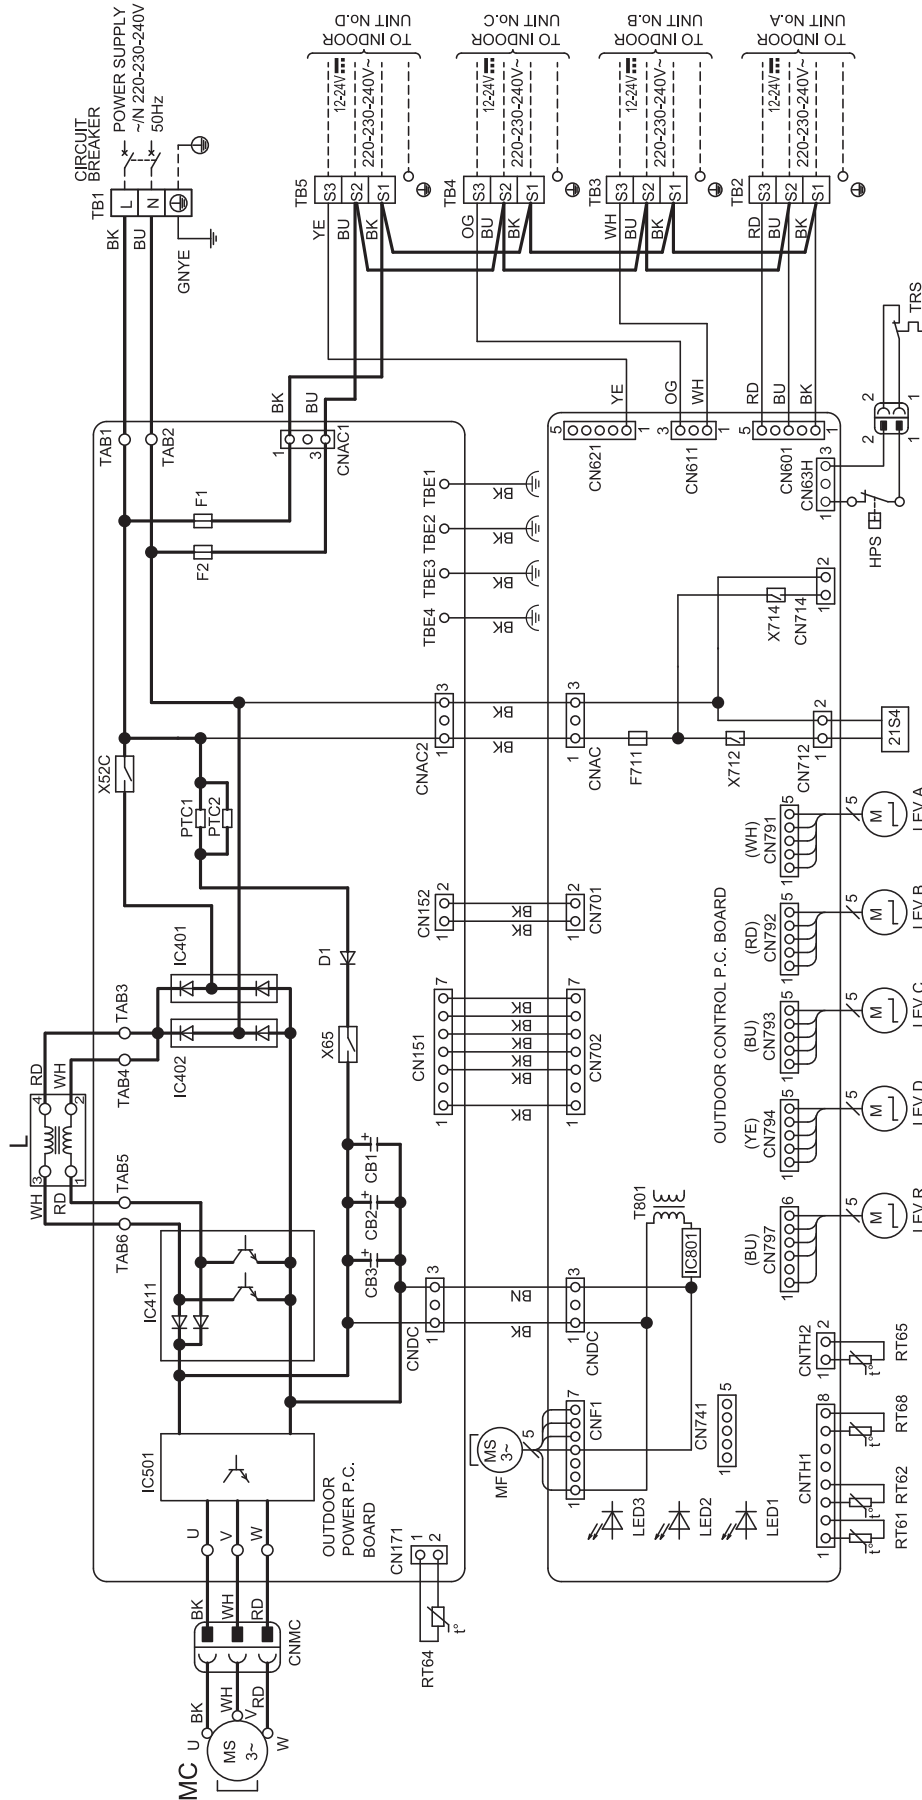


NOTES:
 1. About the indoor side electric wiring refer to the indoor unit electric wiring diagram for the service.
 2. Use copper conductors only (For field wiring).
 3. Symbols below indicate.
 [] Terminal block
 [] Connector

SYMBOL	NAME	SYMBOL	NAME	SYMBOL	NAME	SYMBOL	NAME
CB1-3	SMOOTHING CAPACITOR	IC401,402	DIODE BRIDGE	LEV A-D-R	EXPANSION VALVE COIL	RT64	FIN TEMP. THERMISTOR
D1	DIODE	IC411	POWER FACTOR CONTROLLER	MC	COMPRESSOR	RT65	AMBIENT TEMP. THERMISTOR
F1	FUSE(T6.3AL250V)	IC501	POWER MODULE	MF	FAN MOTOR	RT68	OUTDOOR HEAT EXCHANGER
F2	FUSE(T6.3AL250V)	IC801	POWER DEVICE	PTC1,2	CIRCUIT PROTECTOR	X712	TEMP. THERMISTOR
F71	FUSE(T3.15AL250V)	L	REACTOR	RT61	DEFROST THERMISTOR	T801	TRANSFORMER
HPS	HIGH PRESSURE SWITCH	LED1-3	LED	RT62	DISCHARGE TEMP. THERMISTOR	TB1-5	TERMINAL BLOCK
						21S4	SOLENOID COIL

MXZ-4F72VF4 - ET1

MXZ-4F80VF4 - ET1

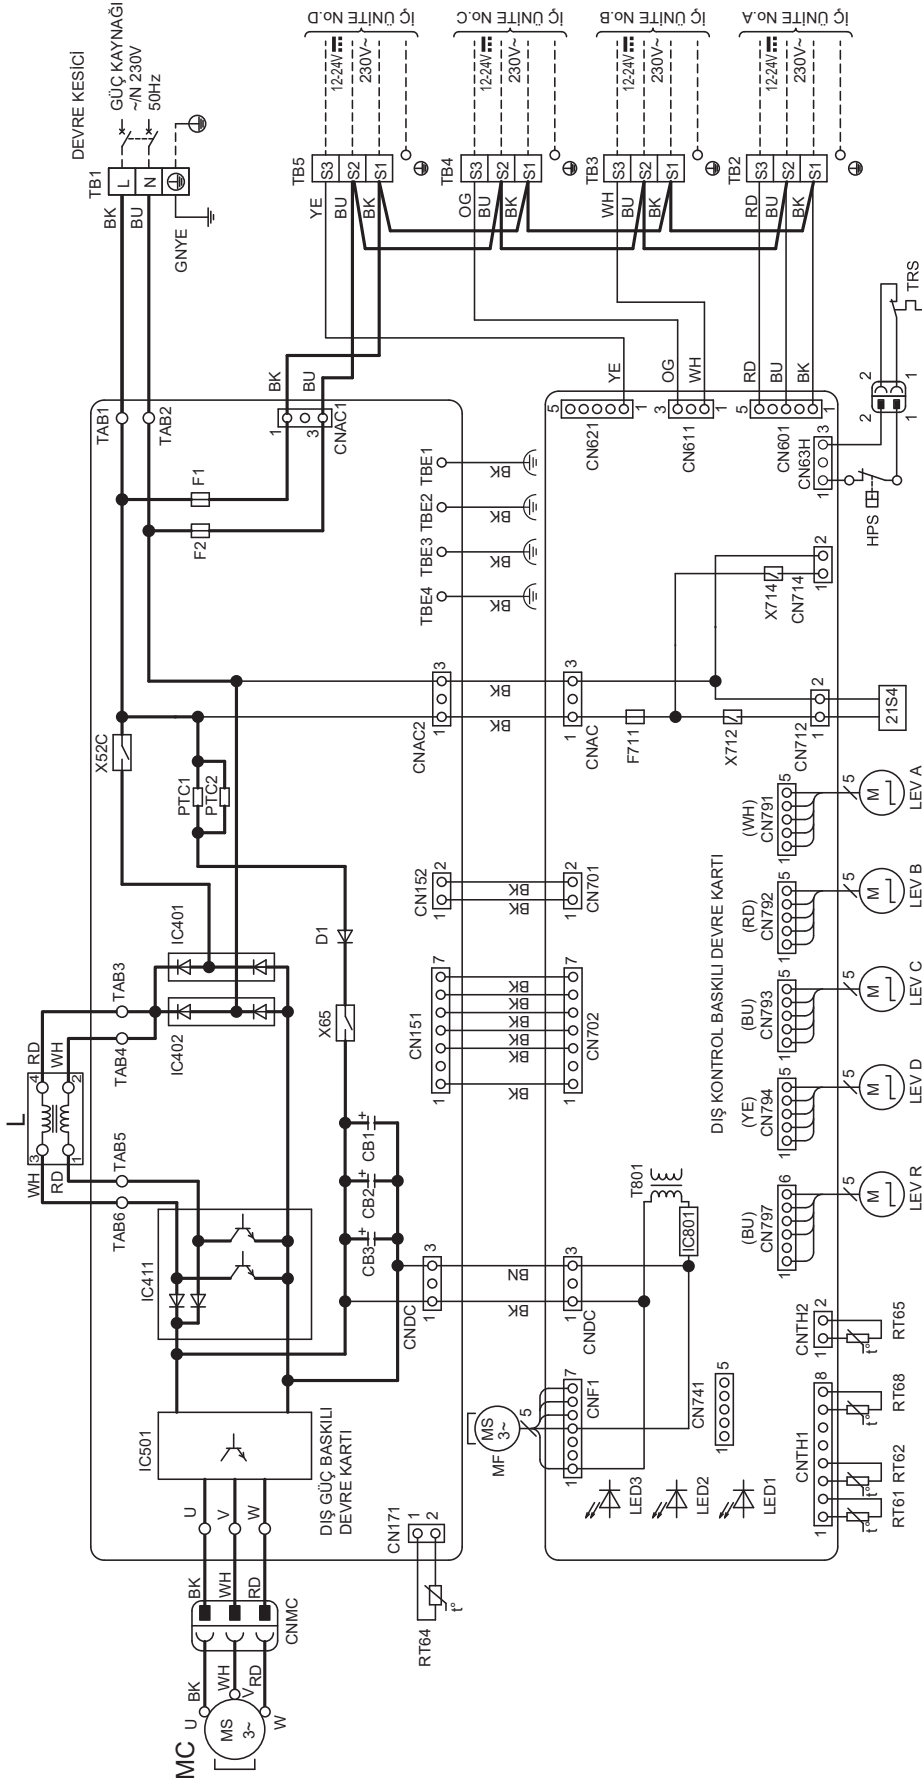


NOTLAR:

1. İç ünite elektrik devresiyle ilgili bakım için iç ünite elektrik devre şemasını referans alınınız.
2. Sadece bakır kablolar kullanın (Saha elektrik devresi için).
3. Sembollerin anlamı:
□ Klemens Grubu
⊞ Konnektör

SEMBOL	PARÇA ADI	SEMBOL	PARÇA ADI	SEMBOL	PARÇA ADI
CB1-3	KAPASİTÖR	IC401.402	DIYOT KÖPRÜSÜ	RT64	GENLEŞME VANASI (SARGISI)
D1	DIYOT	IC411	GÜÇ FAKTÖRÜ DENETLEYİCİSİ	MC	KOMPRESOR
F1	SIGORTA (T6.3AL250V)	IC501	GÜÇ MODÜLÜ	MF	FAN MOTORU
F2	SIGORTA (T6.3AL250V)	IC801	GÜÇ CHAZI	PTC1.2	DEVRE KORUMASI
F711	SIGORTA (T3.15AL250V)	L	REAKTÖR	RT61	DEFROST TERMİSTÖRÜ
HPS	YÜKSEK BASINÇ SIVICI	LED1-3	LED	RT62	BASMA SICAKLIK TERMİSTÖRÜ
				TB1-5	KLEMENS GRUBU
				21S4	SOLENOID SARGISI


MXZ-4F83VF - E1, ER1

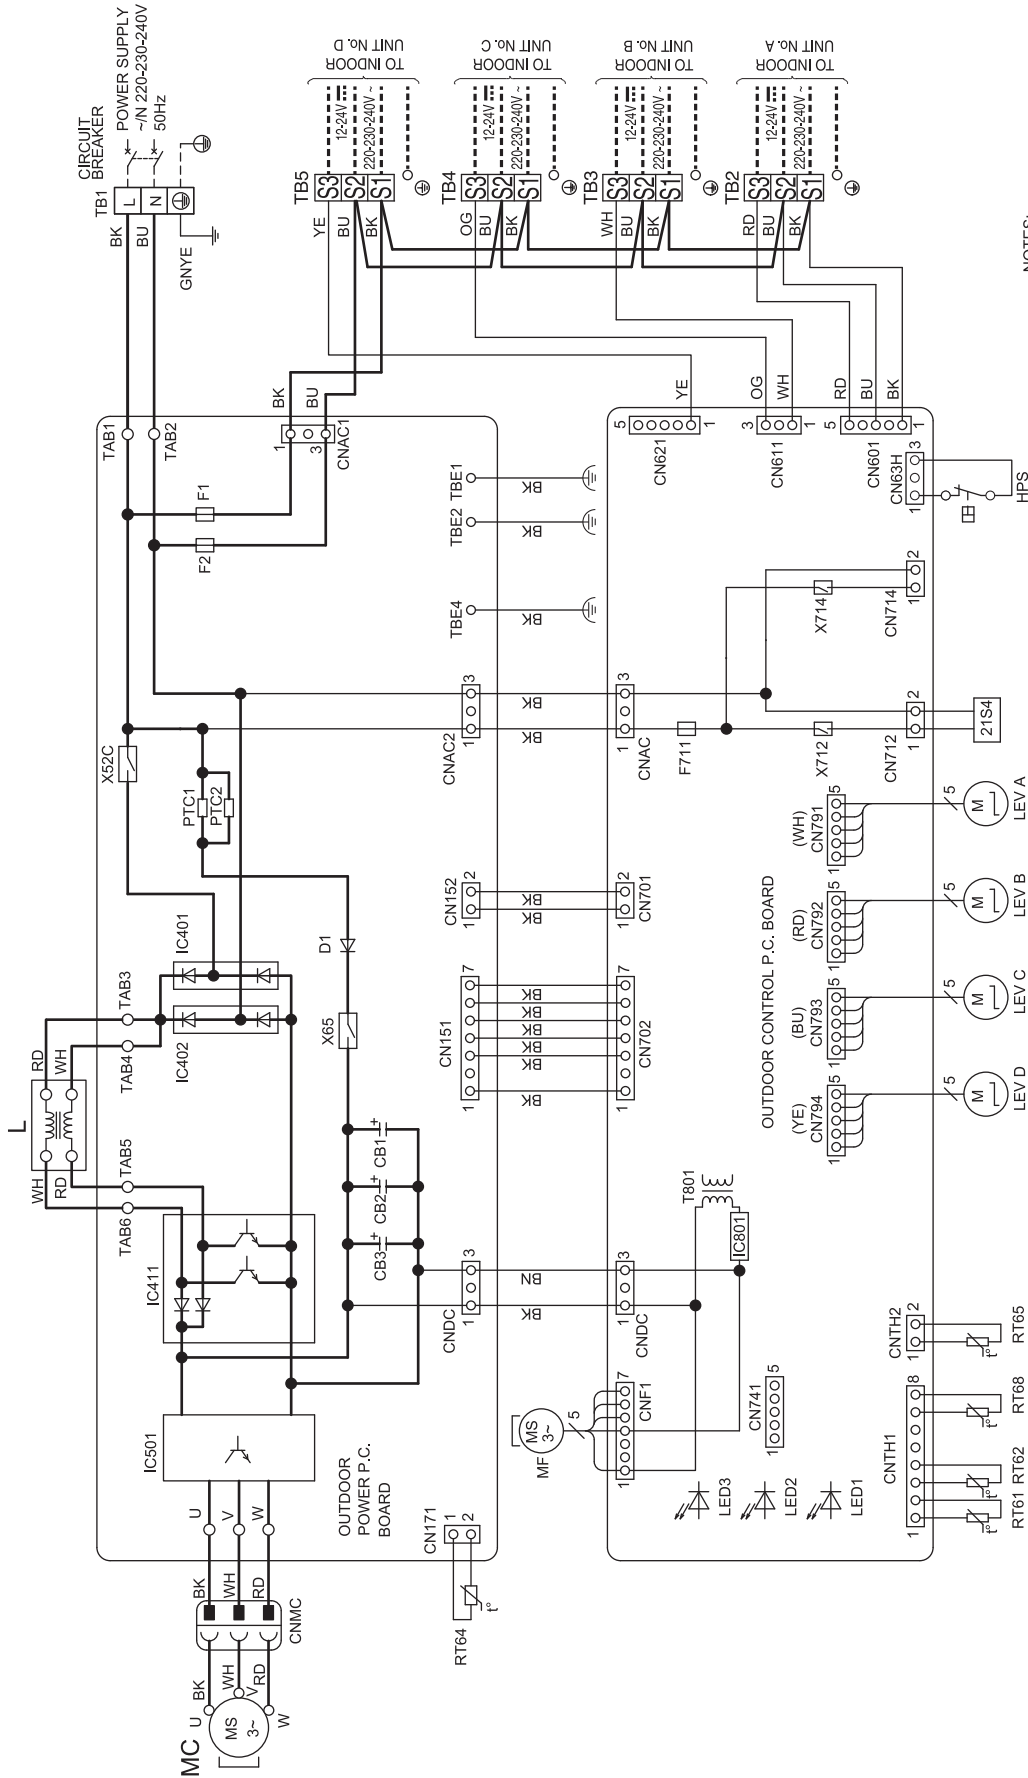

NOTES:
 1. About the indoor side electric wiring refer to the indoor unit electric wiring diagram for the service.
 2. Use copper conductors only (For field wiring).
 3. Symbols below indicate.
 □ Terminal block
 ○ Connector

SYMBOL	NAME	SYMBOL	NAME	SYMBOL	NAME	SYMBOL	NAME
CB1-3	SMOOTHING CAPACITOR	IC401,402	DIODE BRIDGE	LEV A-D	EXPANSION VALVE COIL	X52C	RELAY
D1	DIODE	IC411	POWER FACTOR CONTROLLER	RT64	COMPRESSOR	X65	RELAY
F1	FUSE (T6.3AL250V)	IC501	POWER MODULE	MC	AMBIENT TEMP. THERMISTOR	X712	RELAY
F2	FUSE (T6.3AL250V)	IC801	POWER DEVICE	MF	OUTDOOR HEAT EXCHANGER	X714	RELAY
F711	FUSE (T3.15AL250V)	L	REACTOR	PTC1,2	CIRCUIT PROTECTOR	X714	RELAY
HPS	HIGH PRESSURE SWITCH	LED1-3	LED	RT61	DEFROST THERMISTOR	21S4	SOLENOID COIL
		RT62	LED	RT62	DISCHARGE TEMP. THERMISTOR		
		RT65	LED	RT65	TERMINAL BLOCK		
		RT66	LED	RT66	TERMINAL BLOCK		
		RT68	LED	RT68	TERMINAL BLOCK		
		RT69	LED	RT69	TERMINAL BLOCK		
		RT70	LED	RT70	TERMINAL BLOCK		
		RT71	LED	RT71	TERMINAL BLOCK		
		RT72	LED	RT72	TERMINAL BLOCK		
		RT73	LED	RT73	TERMINAL BLOCK		
		RT74	LED	RT74	TERMINAL BLOCK		
		RT75	LED	RT75	TERMINAL BLOCK		
		RT76	LED	RT76	TERMINAL BLOCK		
		RT77	LED	RT77	TERMINAL BLOCK		
		RT78	LED	RT78	TERMINAL BLOCK		
		RT79	LED	RT79	TERMINAL BLOCK		
		RT80	LED	RT80	TERMINAL BLOCK		
		RT81	LED	RT81	TERMINAL BLOCK		
		RT82	LED	RT82	TERMINAL BLOCK		
		RT83	LED	RT83	TERMINAL BLOCK		
		RT84	LED	RT84	TERMINAL BLOCK		
		RT85	LED	RT85	TERMINAL BLOCK		
		RT86	LED	RT86	TERMINAL BLOCK		
		RT87	LED	RT87	TERMINAL BLOCK		
		RT88	LED	RT88	TERMINAL BLOCK		
		RT89	LED	RT89	TERMINAL BLOCK		
		RT90	LED	RT90	TERMINAL BLOCK		
		RT91	LED	RT91	TERMINAL BLOCK		
		RT92	LED	RT92	TERMINAL BLOCK		
		RT93	LED	RT93	TERMINAL BLOCK		
		RT94	LED	RT94	TERMINAL BLOCK		
		RT95	LED	RT95	TERMINAL BLOCK		
		RT96	LED	RT96	TERMINAL BLOCK		
		RT97	LED	RT97	TERMINAL BLOCK		
		RT98	LED	RT98	TERMINAL BLOCK		
		RT99	LED	RT99	TERMINAL BLOCK		
		RT100	LED	RT100	TERMINAL BLOCK		


MXZ-4F83VF - [ET1]

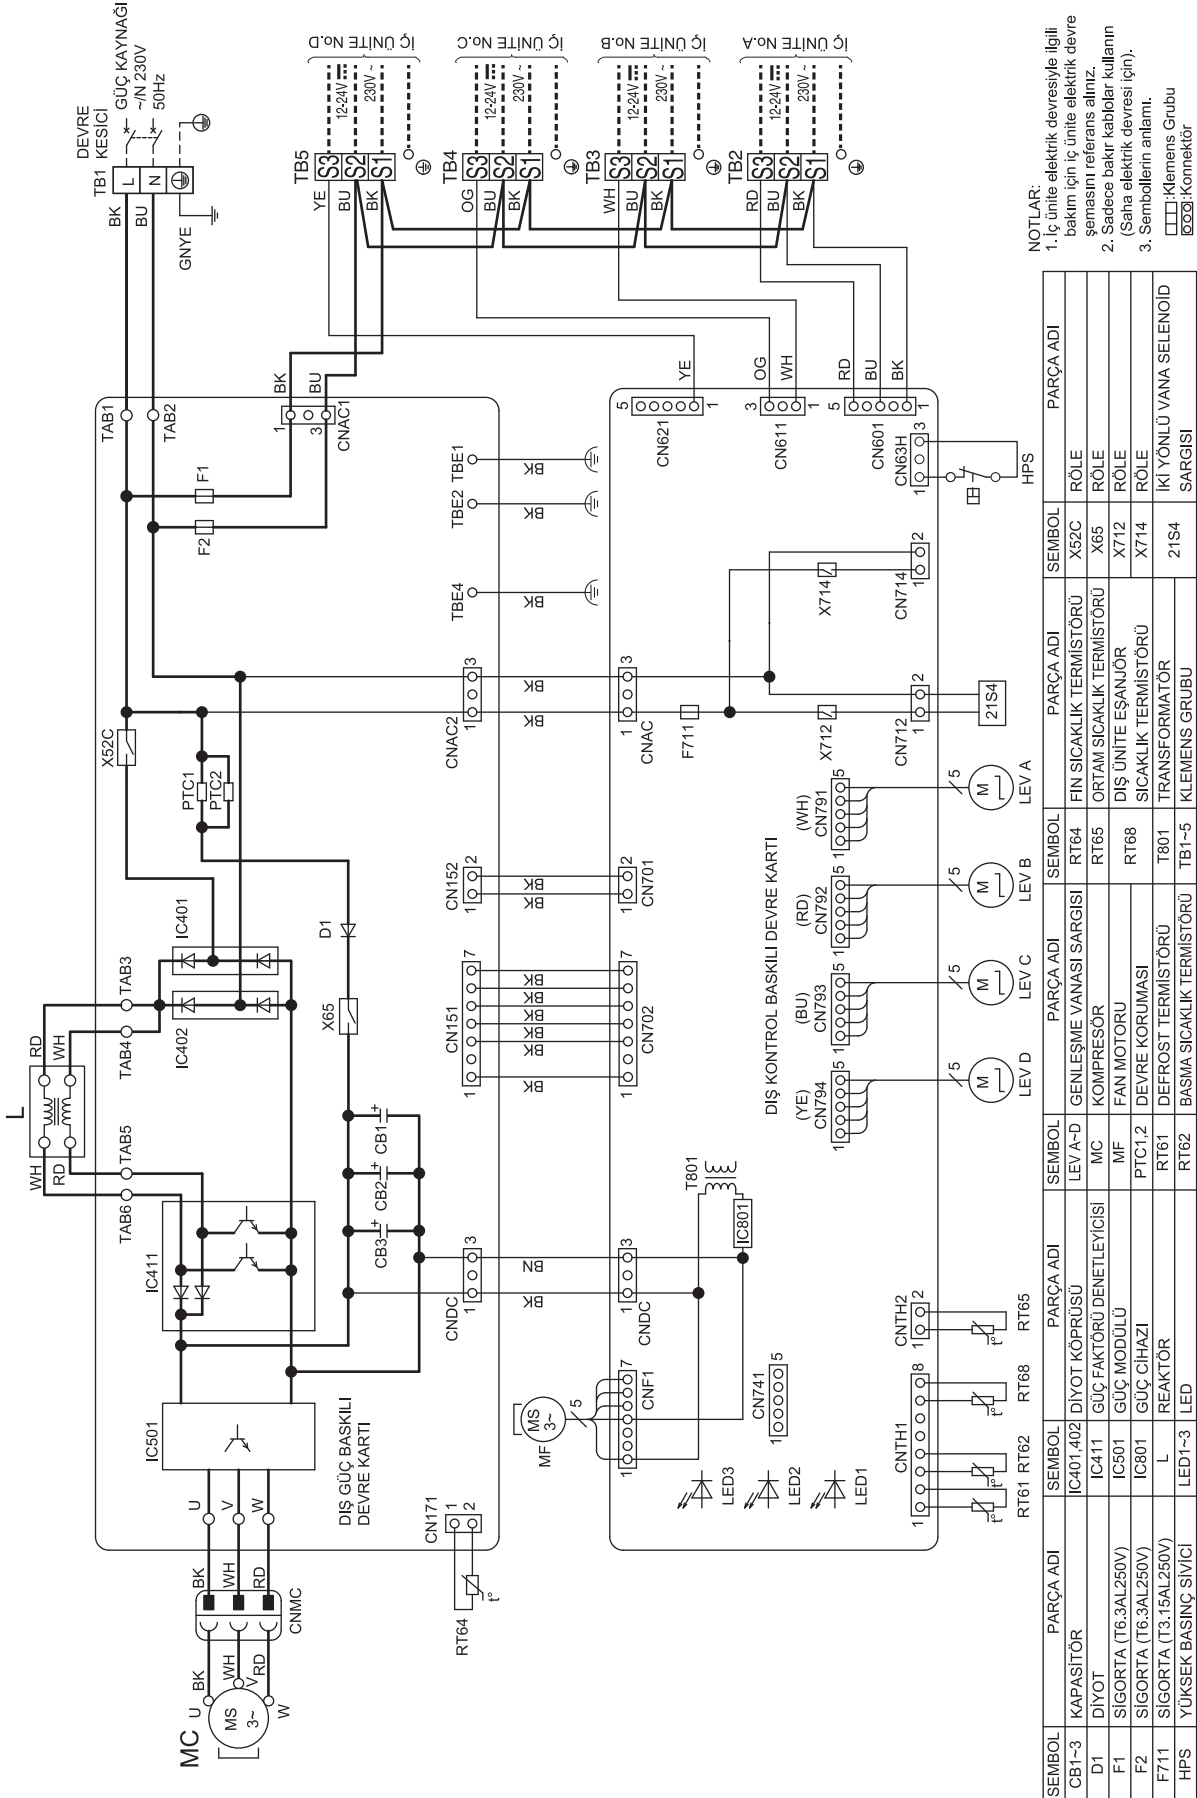

- NOTLAR:**
1. İç ünite elektrik devresiyle ilgili bakım için iç ünite elektrik devre semasını referans alınız.
 2. Sadece bakır kablolar kullanın (Saha elektrik devresi için).
 3. Sembollerin anlamı:
 - Klemens Grubu
 - Konnektör

SEMBOLE	PARÇA ADI	SEMBOLE	PARÇA ADI	SEMBOLE	PARÇA ADI	SEMBOLE	PARÇA ADI
CB1-3	KAPASİTÖR	LEV A-D	GENLEŞME VANASI SARGISI	RT64	FIN SICAKLIK TERMİSTÖRÜ	X52C	RÖLE
D1	DIYOT	MC	KOMPRESOR	RT65	ORTAM SICAKLIK TERMİSTÖRÜ	X65	RÖLE
F1	SİGORTA (T6.3AL250V)	MF	FAN MOTORU	RT68	DIŞ ÜNİTE EŞANJÖR	X712	RÖLE
F2	SİGORTA (T6.3AL250V)	PTC1.2	DEVRE KORUMASI	T801	SICAKLIK TERMİSTÖRÜ	X714	RÖLE
F711	SİGORTA (T3.15AL250V)	RT61	DEFROST TERMİSTÖRÜ	T801	TRANSFORMATÖR	21S4	İKİ YÖNLÜ VANA SELENOİD
HPS	YÜKSEK BASINÇ SIVICI	RT62	BASMA SICAKLIK TERMİSTÖRÜ	TB1-5	KLEMENS GRUBU		SARGISI


MXZ-4F83VF2 - E1

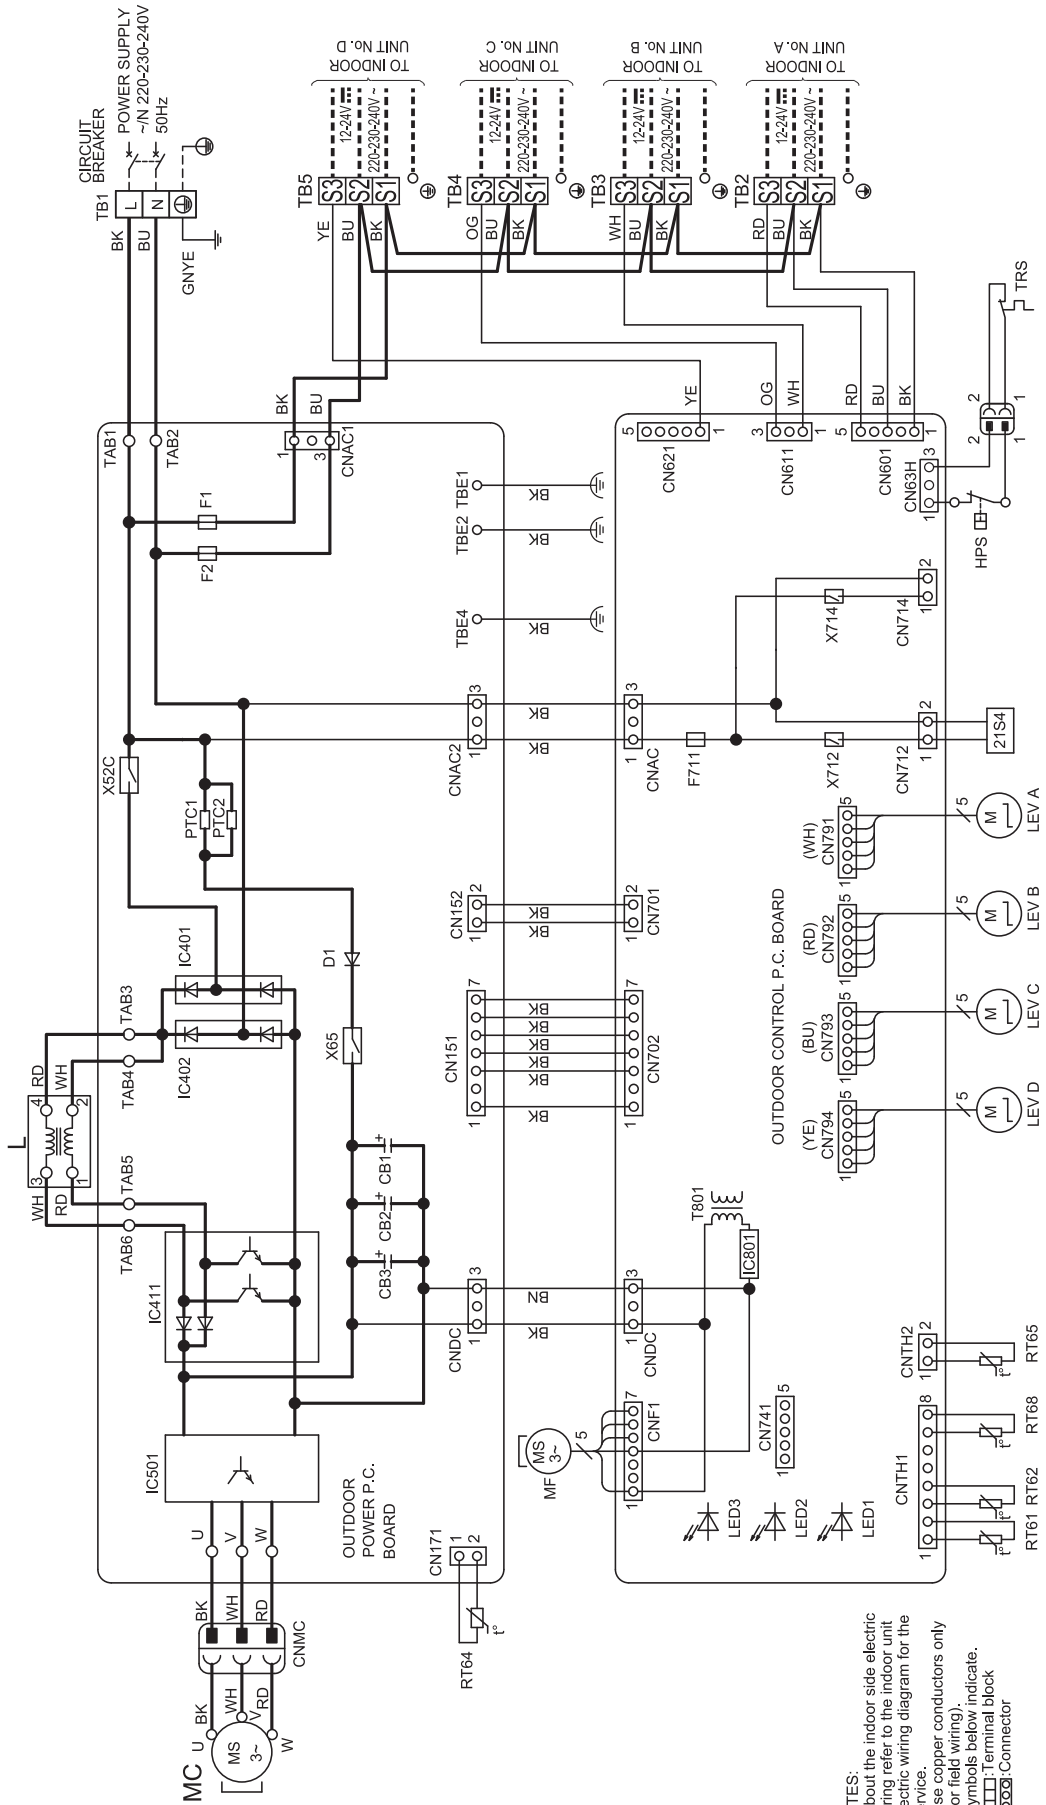

NOTES:
 1. About the indoor side electric wiring refer to the indoor unit electric wiring diagram for the service.
 2. Use copper conductors only (For field wiring).
 3. Symbols below indicate.
 □: Terminal block
 ○: Connector

SYMBOL	NAME	SYMBOL	NAME	SYMBOL	NAME	SYMBOL	NAME	SYMBOL	NAME
IC41-3	SMOOTHING CAPACITOR	IC401.402	DIODE BRIDGE	RT64	LED1-3	LED	RT68	LED	LED1-3
D1	DIODE	IC411	POWER FACTOR CONTROLLER	MC	COMPRESSOR	LEV A-D	EXPANSION VALVE COIL	RT64	FIN TEMP. THERMISTOR
F1	FUSE (T6.3AL250V)	IC501	POWER MODULE	MF	FAN MOTOR	RT65	AMBIENT TEMP. THERMISTOR	X52C	THERMAL PROTECTOR
F2	FUSE (T6.3AL250V)	IC801	POWER DEVICE	PTC1.2	CIRCUIT PROTECTOR	RT66	OUTDOOR HEAT EXCHANGER TEMP. THERMISTOR	X65	RELAY
F711	FUSE (T3.15AL250V)	L	REACTOR	RT61	DEFROST THERMISTOR	T801	TRANSFORMER	X712	RELAY
HPS	HIGH PRESSURE SWITCH	LED1-3	LED	RT62	DISCHARGE TEMP. THERMISTOR	TB1-5	TERMINAL BLOCK	X714	RELAY
								21S4	COIL
								TRS	4-WAY VALVE SOLENOID


MXZ-4F83VF2 - [ET1]

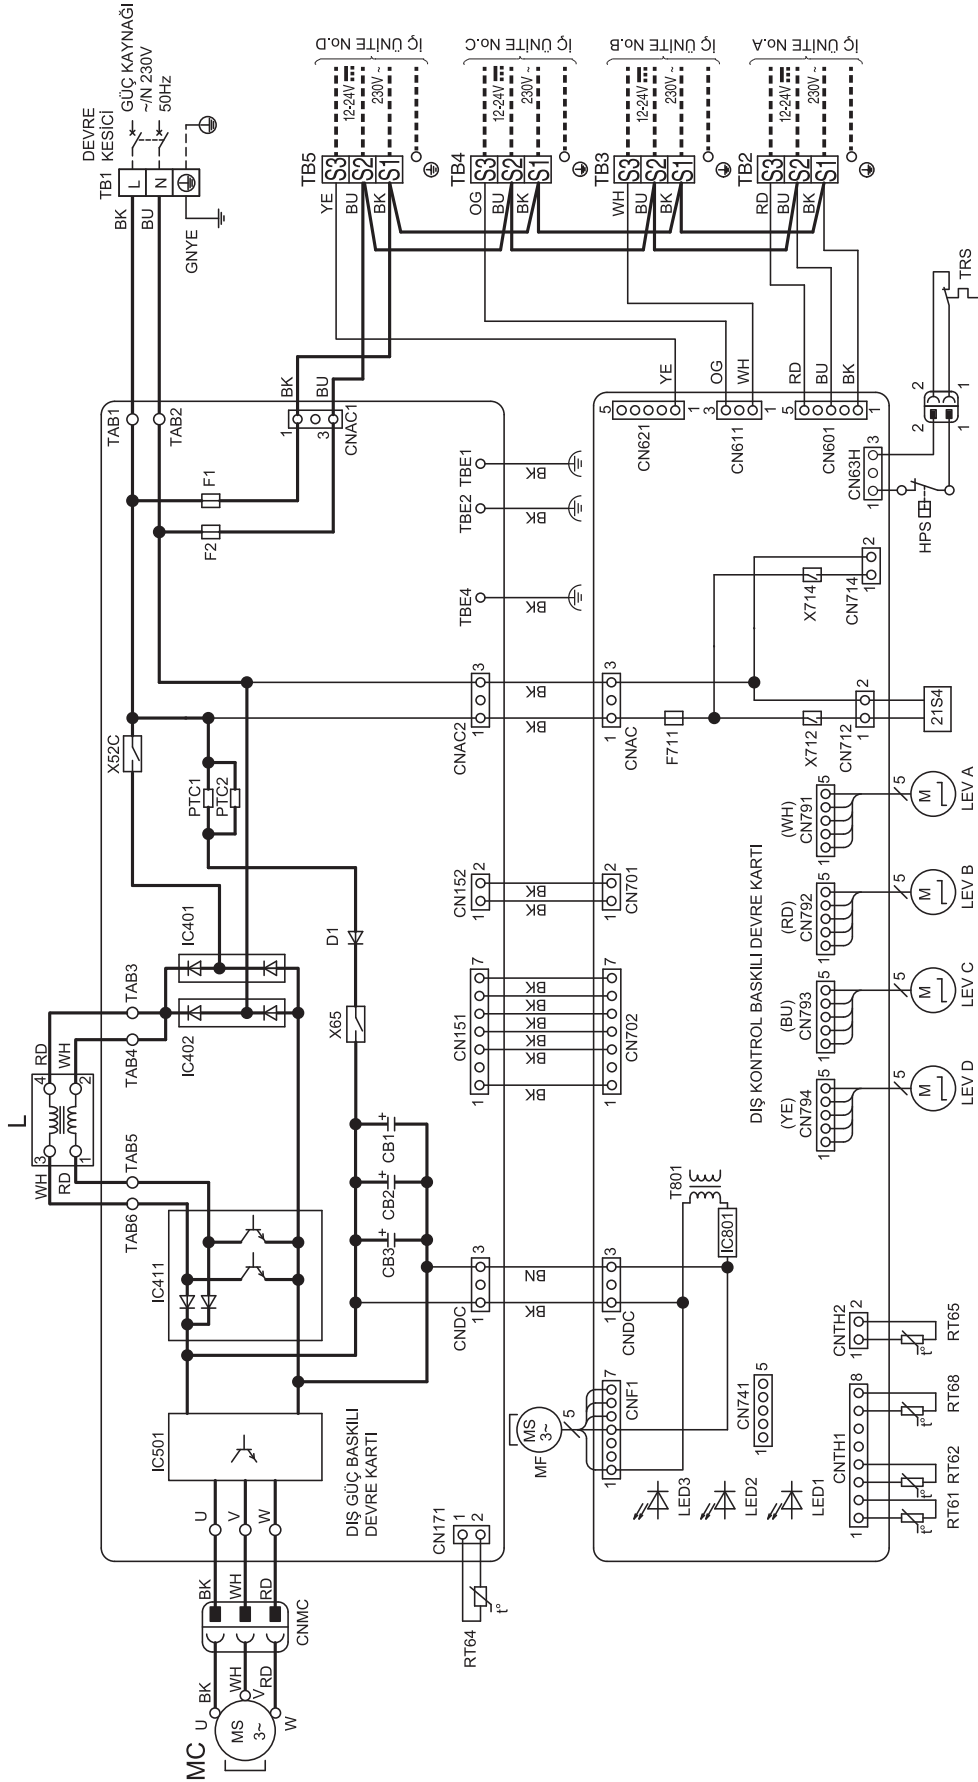

NOTLAR:
 1. İç ünite elektrik devresiyle ilgili bakım için iç ünite elektrik devre şemasını referans alınız.
 2. Sadece bakır kablolar kullanın (Saha elektrik devresi için).
 3. Sembollerin anlamı:
 □ Klemens Grubu
 ○ Konnektör


SEMBOLO	PARÇA ADI	SEMBOLO	PARÇA ADI	SEMBOLO	PARÇA ADI
CB1-3	KAPASİTÖR	IC401,402	DIYOT KÖPRÜSÜ	RT64	GENLEŞME VANASI SARGISI
D1	DIYOT	IC411	GÜÇ FAKTÖRÜ DENETLEYİCİSİ	MC	KOMPRESÖR
F1	SIGORTA (T6.3AL250V)	IC501	GÜÇ MODÜLÜ	MF	FAN MOTORU
F2	SIGORTA (T6.3AL250V)	IC801	GÜÇ CİHAZI	PTC1,2	DEVRE KORUMASI
F711	SIGORTA (T3.15AL250V)	L	REAKTÖR	RT61	DEFROST TERMİSTÖRÜ
HPS	YÜKSEK BASINÇ SIVICI	LED1-3	LED	RT62	BASMA SICAKLIK TERMİSTÖRÜ
				RT65	GENLEŞME VANASI SARGISI
				RT66	ORTAM SICAKLIK TERMİSTÖRÜ
				RT68	SICAKLIK TERMİSTÖRÜ
				X712	SICAKLIK TERMİSTÖRÜ
				X714	SICAKLIK TERMİSTÖRÜ
				21S4	4 YOLLU VALF SOLENOİD SARGISI

MXZ-5F102VF - [E1], [ER1]

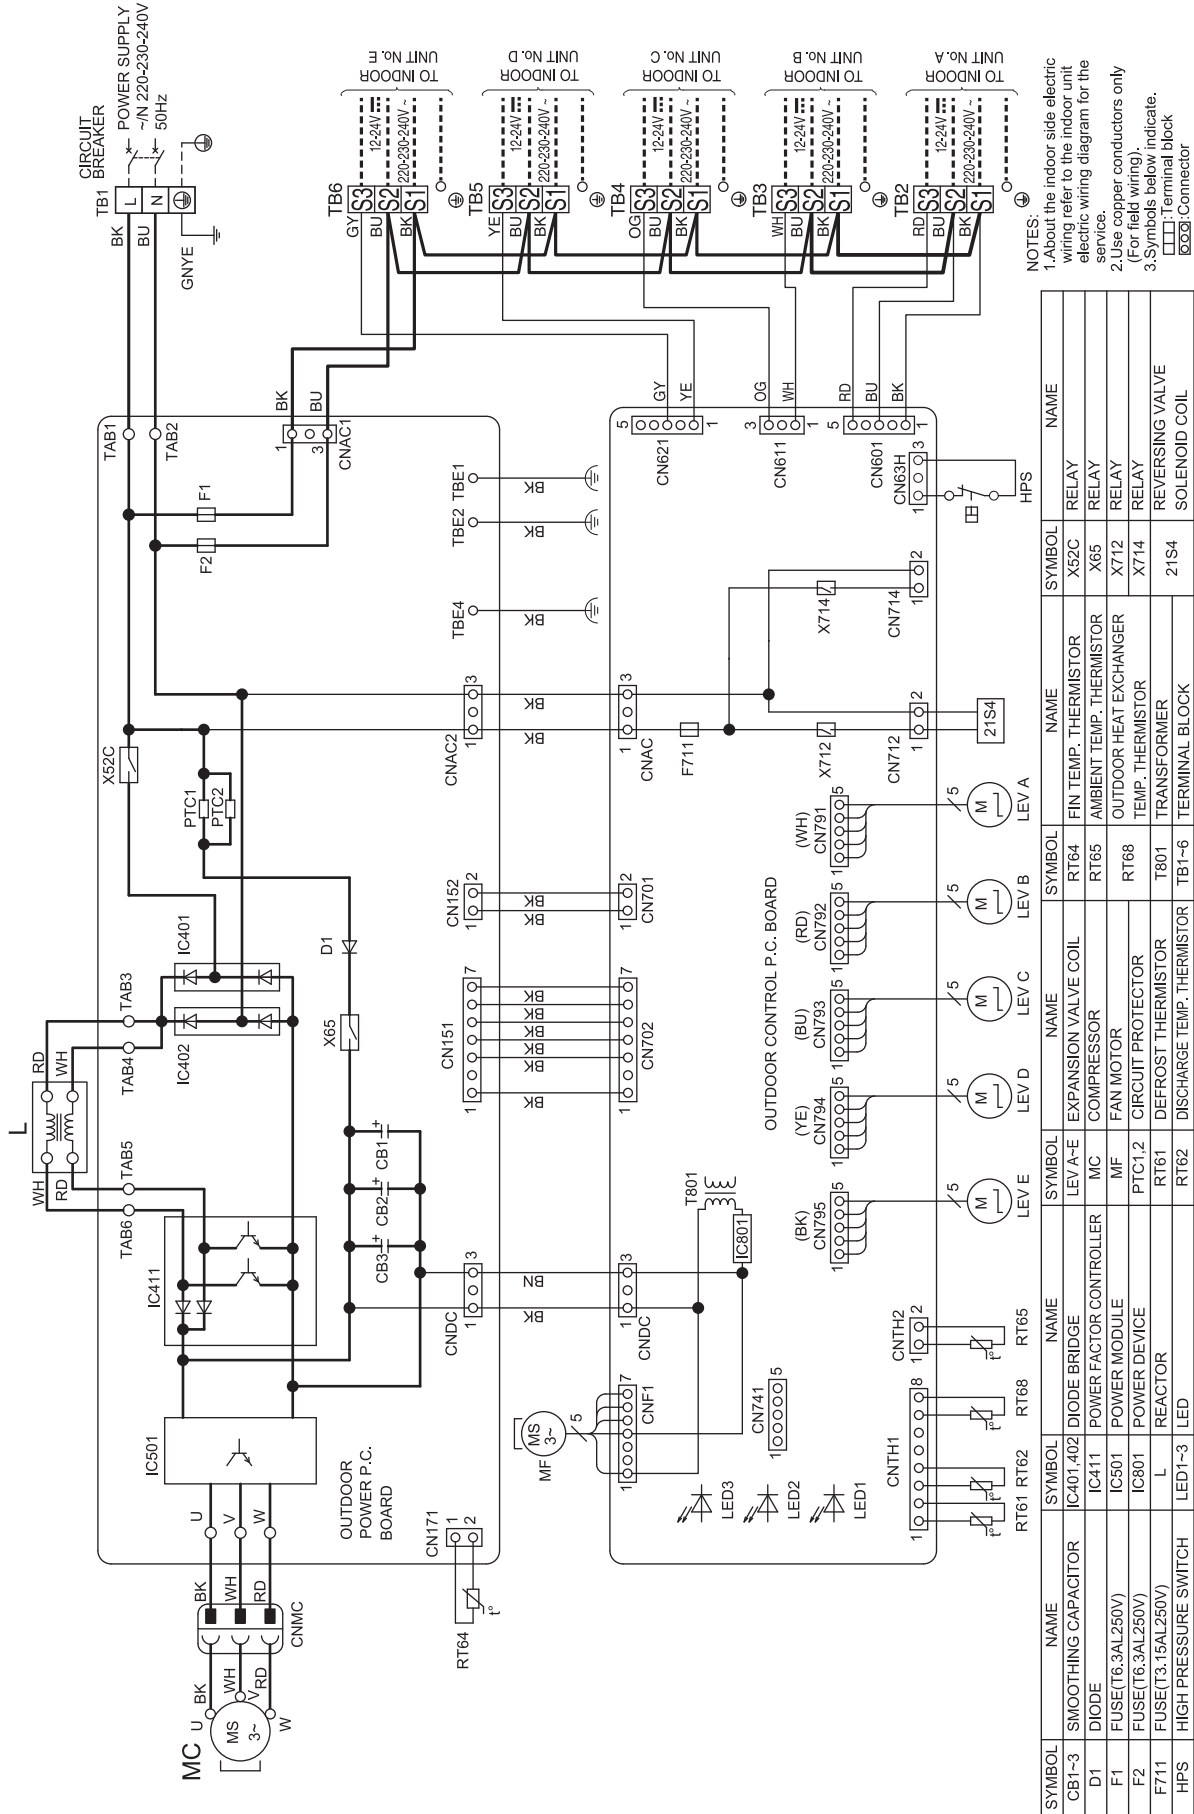

SYMBOL	NAME	SYMBOL	NAME	SYMBOL	NAME	SYMBOL	NAME
CBT-3	SMOOTHING CAPACITOR	IC401,402	DIODE BRIDGE	LEV A-E	EXPANSION VALVE COIL	RT64	FIN TEMP. THERMISTOR
D1	DIODE	IC411	POWER FACTOR CONTROLLER	MC	COMPRESSOR	RT65	AMBIENT TEMP. THERMISTOR
F1	FUSE(T6.3AL250V)	IC501	POWER MODULE	MF	FAN MOTOR	RT66	OUTDOOR HEAT EXCHANGER
F2	FUSE(T6.3AL250V)	IC801	POWER DEVICE	PTC1,2	CIRCUIT PROTECTOR	RT68	TEMP. THERMISTOR
F711	FUSE(T3.15AL250V)	L	REACTOR	RT61	DEFROST THERMISTOR	T801	TRANSFORMER
HPS	HIGH PRESSURE SWITCH	LED1-3	LED	RT62	DISCHARGE TEMP. THERMISTOR	TBT-6	TERMINAL BLOCK
						21S4	SOLENOID COIL


MXZ-5F102VF - ET1

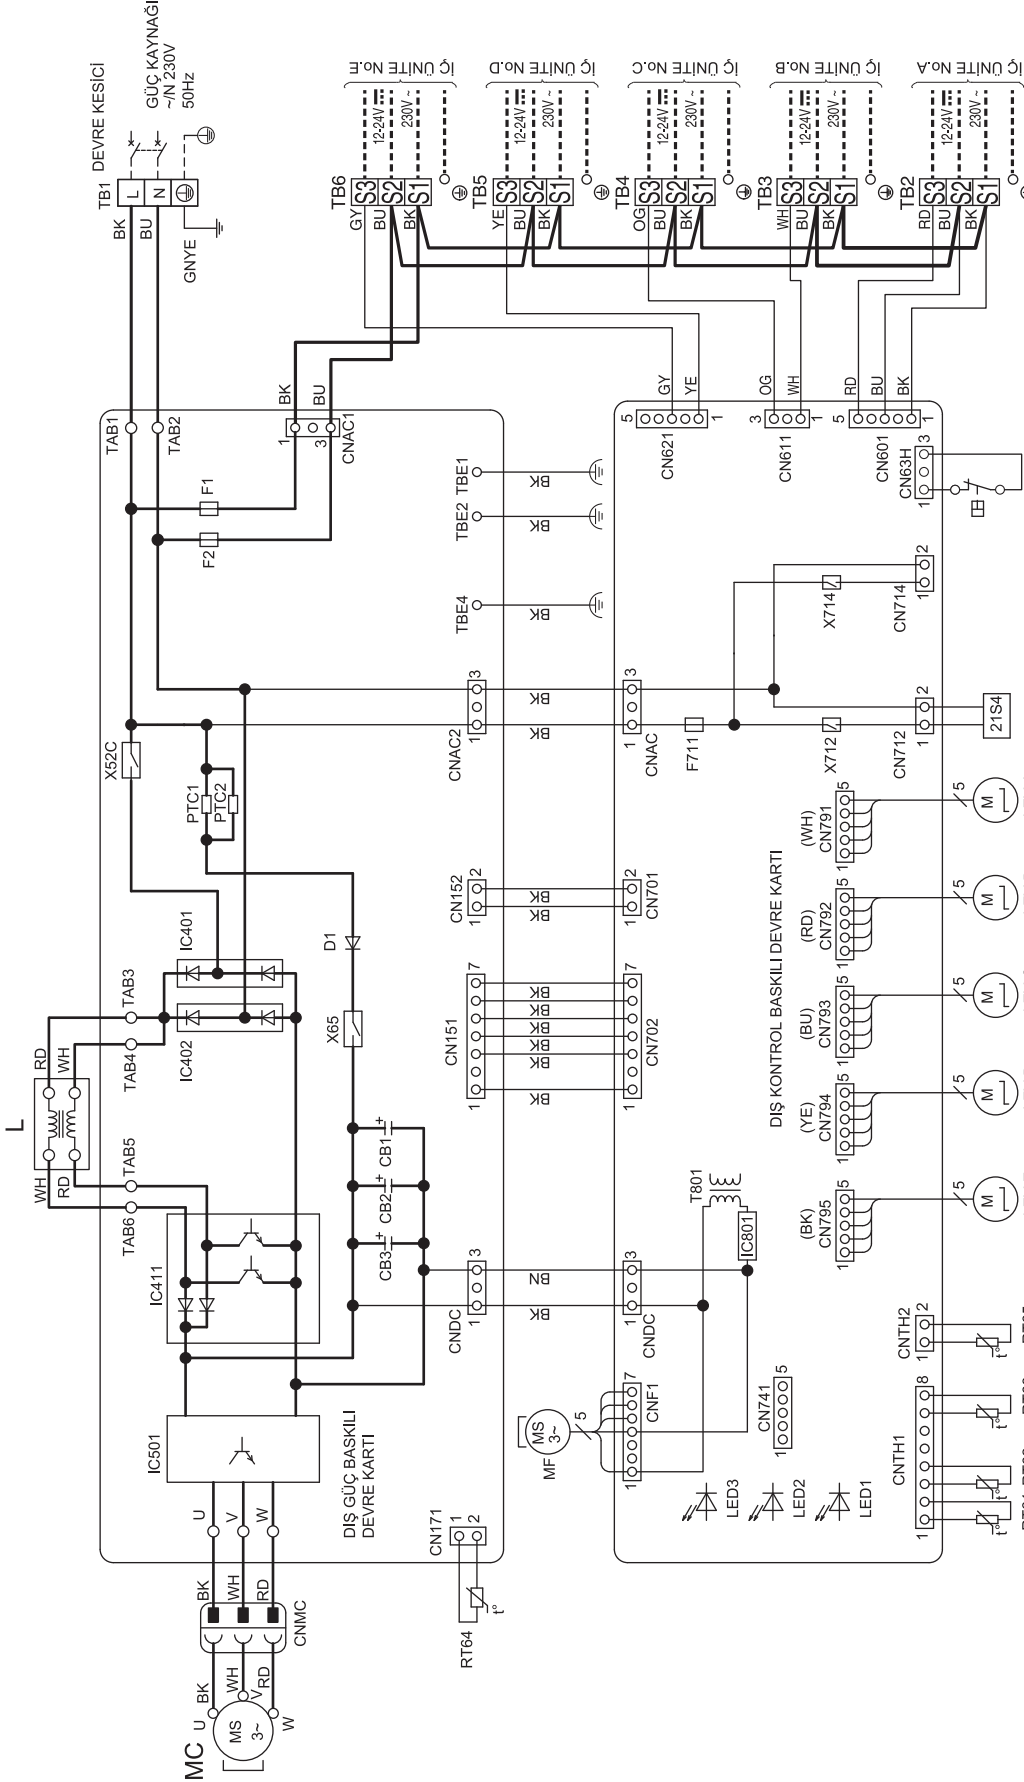

NOTLAR:
 1. İç ünite elektrik devresiyle ilgili bakım için iç ünite elektrik devre şemasını referans alınız.
 2. Sadece bakır kablolar kullanın (Saha elektrik devresi için).
 3. Sembollerin anlamları:
 □: Klemens Grubu
 ○: Konnektör

SEMBOLE	PARÇA ADI	SEMBOLE	PARÇA ADI	SEMBOLE	PARÇA ADI
CB1-3	KAPASİTÖR	IC401,402	DIYOT KÖPRÜSÜ	LEV A-E	GENLEŞME VANASI SARGISI
D1	DIYOT	IC411	GÜÇ FAKTÖRÜ DENETLEYİCİSİ	MC	KOMPRESÖR
F1	SİGORTA (T6.3AL250V)	IC501	GÜÇ MODÜLÜ	MF	FAN MOTORU
F2	SİGORTA (T6.3AL250V)	IC801	GÜÇ ÇIHAZI	PTC1,2	DEVRE KORUMASI
F711	SİGORTA (T3.15AL250V)	L	REAKTÖR	RT61	DEFROST TERMİSTÖRÜ
HPS	YÜKSEK BASINÇ SIVICI	LED1-3	LED	RT62	BASMA SICAKLIK TERMİSTÖRÜ
		X52C	GENLEŞME VANASI SARGISI	LEV A	LEV A
		X65	KOMPRESÖR	LEV B	LEV B
		X712	FAN MOTORU	LEV C	LEV C
		X714	DEVRE KORUMASI	LEV D	LEV D
		X716	DEFROST TERMİSTÖRÜ	LEV E	LEV E
		X718	BASMA SICAKLIK TERMİSTÖRÜ		
		X720	YÜKSEK BASINÇ SIVICI		
		X722	DIYOT KÖPRÜSÜ		
		X724	GÜÇ FAKTÖRÜ DENETLEYİCİSİ		
		X726	GÜÇ MODÜLÜ		
		X728	GÜÇ ÇIHAZI		
		X730	REAKTÖR		
		X732	DEFROST TERMİSTÖRÜ		
		X734	BASMA SICAKLIK TERMİSTÖRÜ		
		X736	YÜKSEK BASINÇ SIVICI		
		X738	DIYOT KÖPRÜSÜ		
		X740	GÜÇ FAKTÖRÜ DENETLEYİCİSİ		
		X742	GÜÇ MODÜLÜ		
		X744	GÜÇ ÇIHAZI		
		X746	REAKTÖR		
		X748	DEFROST TERMİSTÖRÜ		
		X750	BASMA SICAKLIK TERMİSTÖRÜ		
		X752	YÜKSEK BASINÇ SIVICI		
		X754	DIYOT KÖPRÜSÜ		
		X756	GÜÇ FAKTÖRÜ DENETLEYİCİSİ		
		X758	GÜÇ MODÜLÜ		
		X760	GÜÇ ÇIHAZI		
		X762	REAKTÖR		
		X764	DEFROST TERMİSTÖRÜ		
		X766	BASMA SICAKLIK TERMİSTÖRÜ		
		X768	YÜKSEK BASINÇ SIVICI		
		X770	DIYOT KÖPRÜSÜ		
		X772	GÜÇ FAKTÖRÜ DENETLEYİCİSİ		
		X774	GÜÇ MODÜLÜ		
		X776	GÜÇ ÇIHAZI		
		X778	REAKTÖR		
		X780	DEFROST TERMİSTÖRÜ		
		X782	BASMA SICAKLIK TERMİSTÖRÜ		
		X784	YÜKSEK BASINÇ SIVICI		
		X786	DIYOT KÖPRÜSÜ		
		X788	GÜÇ FAKTÖRÜ DENETLEYİCİSİ		
		X790	GÜÇ MODÜLÜ		
		X792	GÜÇ ÇIHAZI		
		X794	REAKTÖR		
		X796	DEFROST TERMİSTÖRÜ		
		X798	BASMA SICAKLIK TERMİSTÖRÜ		
		X800	YÜKSEK BASINÇ SIVICI		


MXZ-5F102VF2 - E1

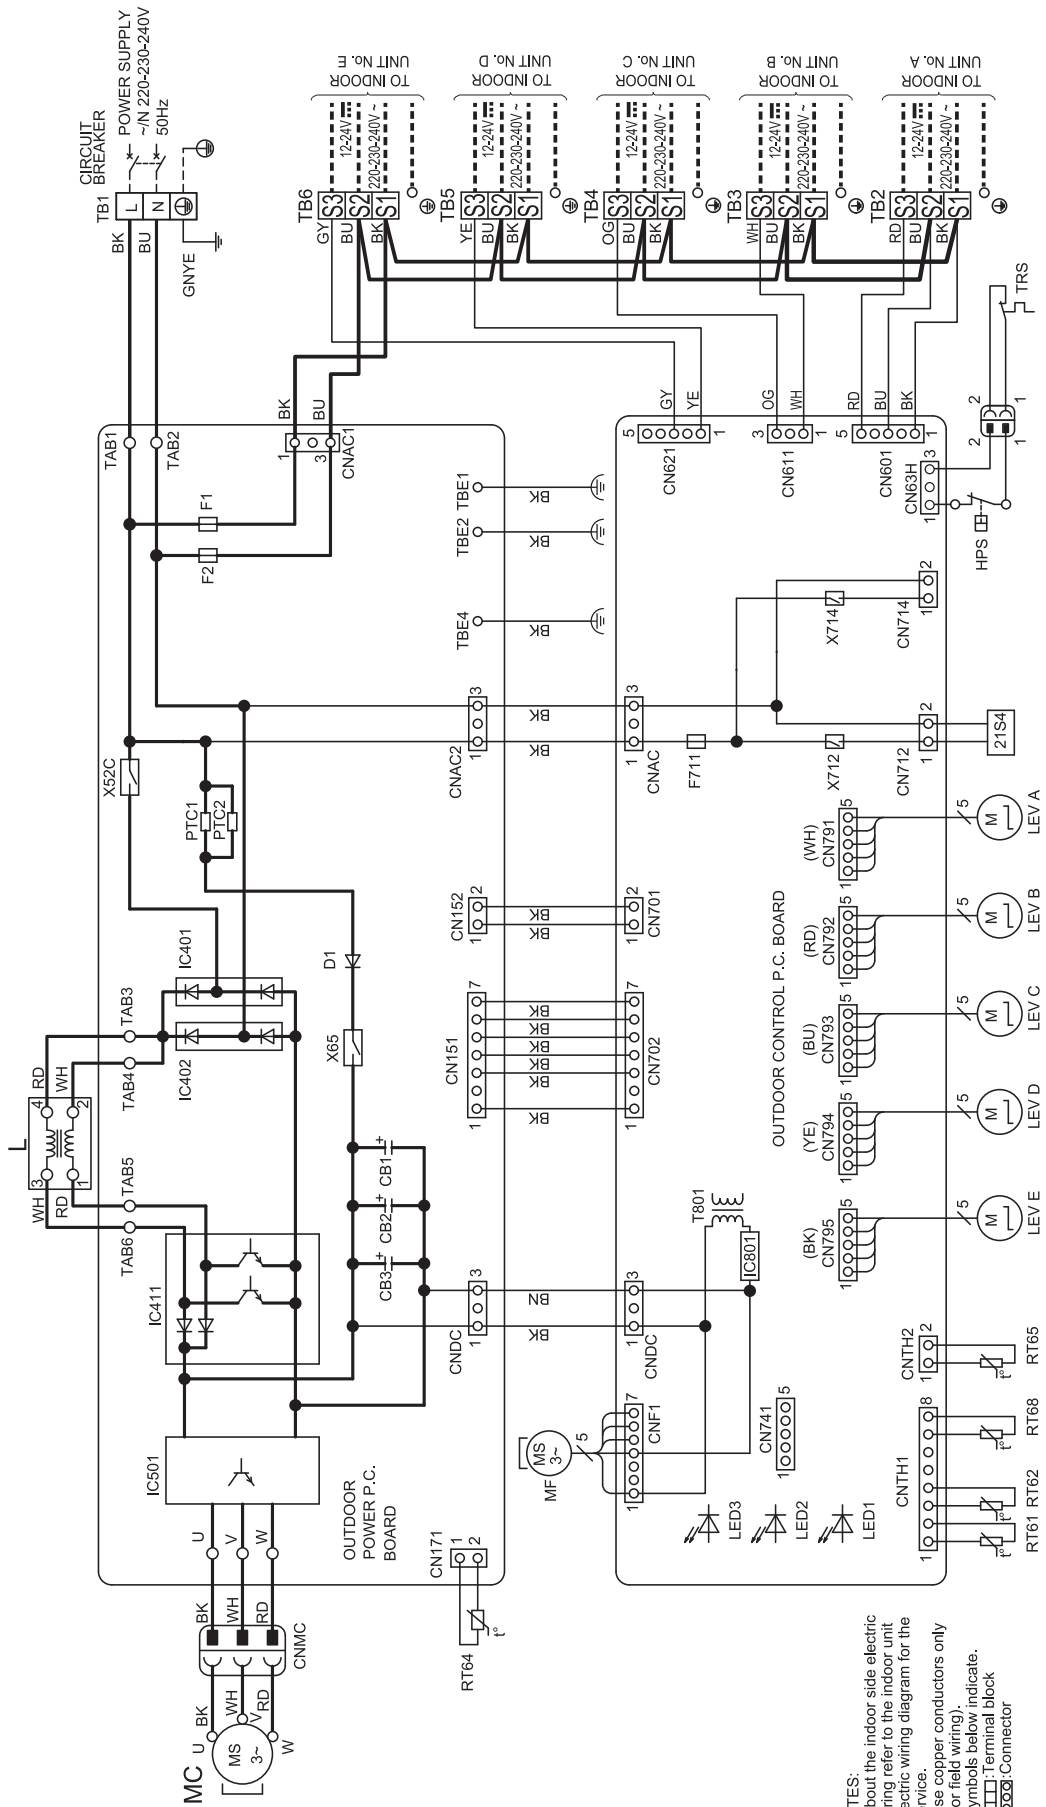

NOTES:
 1. About the indoor side electric wiring refer to the indoor unit electric wiring diagram for the service.
 2. Use copper conductors only (For field wiring).
 3. Symbols below indicate:
 [Symbol] : Terminal block
 [Symbol] : Connector

SYMBOL	NAME	SYMBOL	NAME	SYMBOL	NAME	SYMBOL	NAME	SYMBOL	NAME
CB1-3	SMOOTHING CAPACITOR	IC401,402	DIODE BRIDGE	LEV A-E	EXPANSION VALVE COIL	RT64	FIN TEMP. THERMISTOR	TRS	THERMAL PROTECTOR
D1	DIODE	IC411	POWER FACTOR CONTROLLER	MC	COMPRESSOR	RT65	AMBIENT TEMP. THERMISTOR	X65	RELAY
F1	FUSE (T6.3A/250V)	IC501	POWER MODULE	MF	FAN MOTOR	RT66	OUTDOOR HEAT EXCHANGER TEMP. THERMISTOR	X712	RELAY
F2	FUSE (T6.3A/250V)	IC801	POWER DEVICE	PTC1,2	CIRCUIT PROTECTOR	RT68	TEMP. THERMISTOR	X714	RELAY
F711	FUSE (T3.15A/250V)	L	REACTOR	RT61	DEFROST THERMISTOR	T801	TRANSFORMER		
HPS	HIGH PRESSURE SWITCH	LED1-3	LED	RT62	DISCHARGE TEMP. THERMISTOR	TB1-6	TERMINAL BLOCK		

MXZ-5F102VF2 - [ET1]

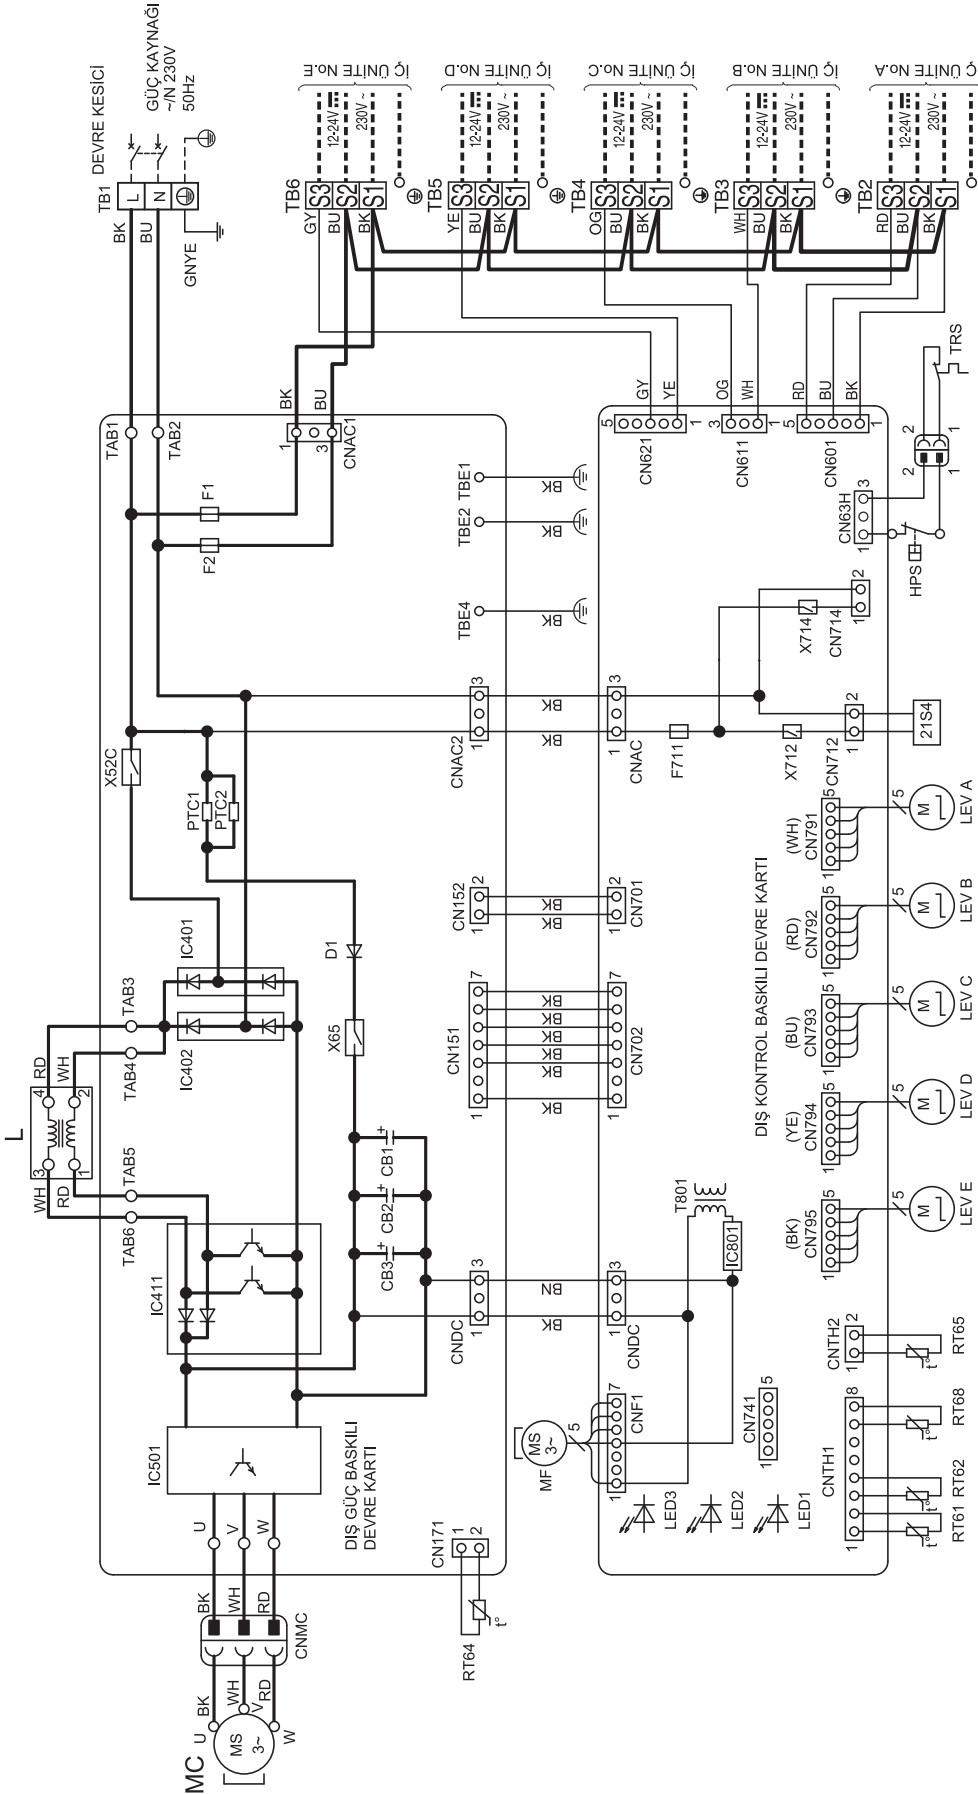


NOTLAR:
 1. İç ünite elektrik devresiyle ilgili bakım için iç ünite elektrik devre şemasını referans alınız.
 2. Sadece bakır kablolar kullanın.
 3. Saha elektrik devresi için).
 Sembollerin anlamı:
 [Klemens Grubu]
 [Konnektör]

SEMBOL	PARÇA ADI	SEMBOL	PARÇA ADI	SEMBOL	PARÇA ADI
CB1-3	KAPASİTÖR	LEV A-E	GENLEŞME VANASI SARGISI	RT64	FIN SICAKLIK TERMİSTÖRÜ
D1	DIYOT	MC	KOMPRESÖR	RT65	ORTAM SICAKLIK TERMİSTÖRÜ
F1	SIGORTA (T6,3AL250V)	MF	FAN MODÜLÜ	RT68	DİŞ ÜNİTE EŞANJÖR
F2	SIGORTA (T6,3AL250V)	PTC1.2	GÜÇ KORUMASI	RT68	SICAKLIK TERMİSTÖRÜ
F711	SIGORTA (T3,15AL250V)	RT61	REAKTÖR	T801	DEFROST TERMİSTÖRÜ
HPS	YÜKSEK BASINÇ SIVICI	LED1-3	LED	RT62	BASMA SICAKLIK TERMİSTÖRÜ
				TB1-6	KLEMENS GRUBU
				21S4	4 YOLLU VALF SOLENOİD SARGISI

MXZ-6F120VF2 - [E1]


POWER SUPPLY
~N 220-230-240V 50Hz

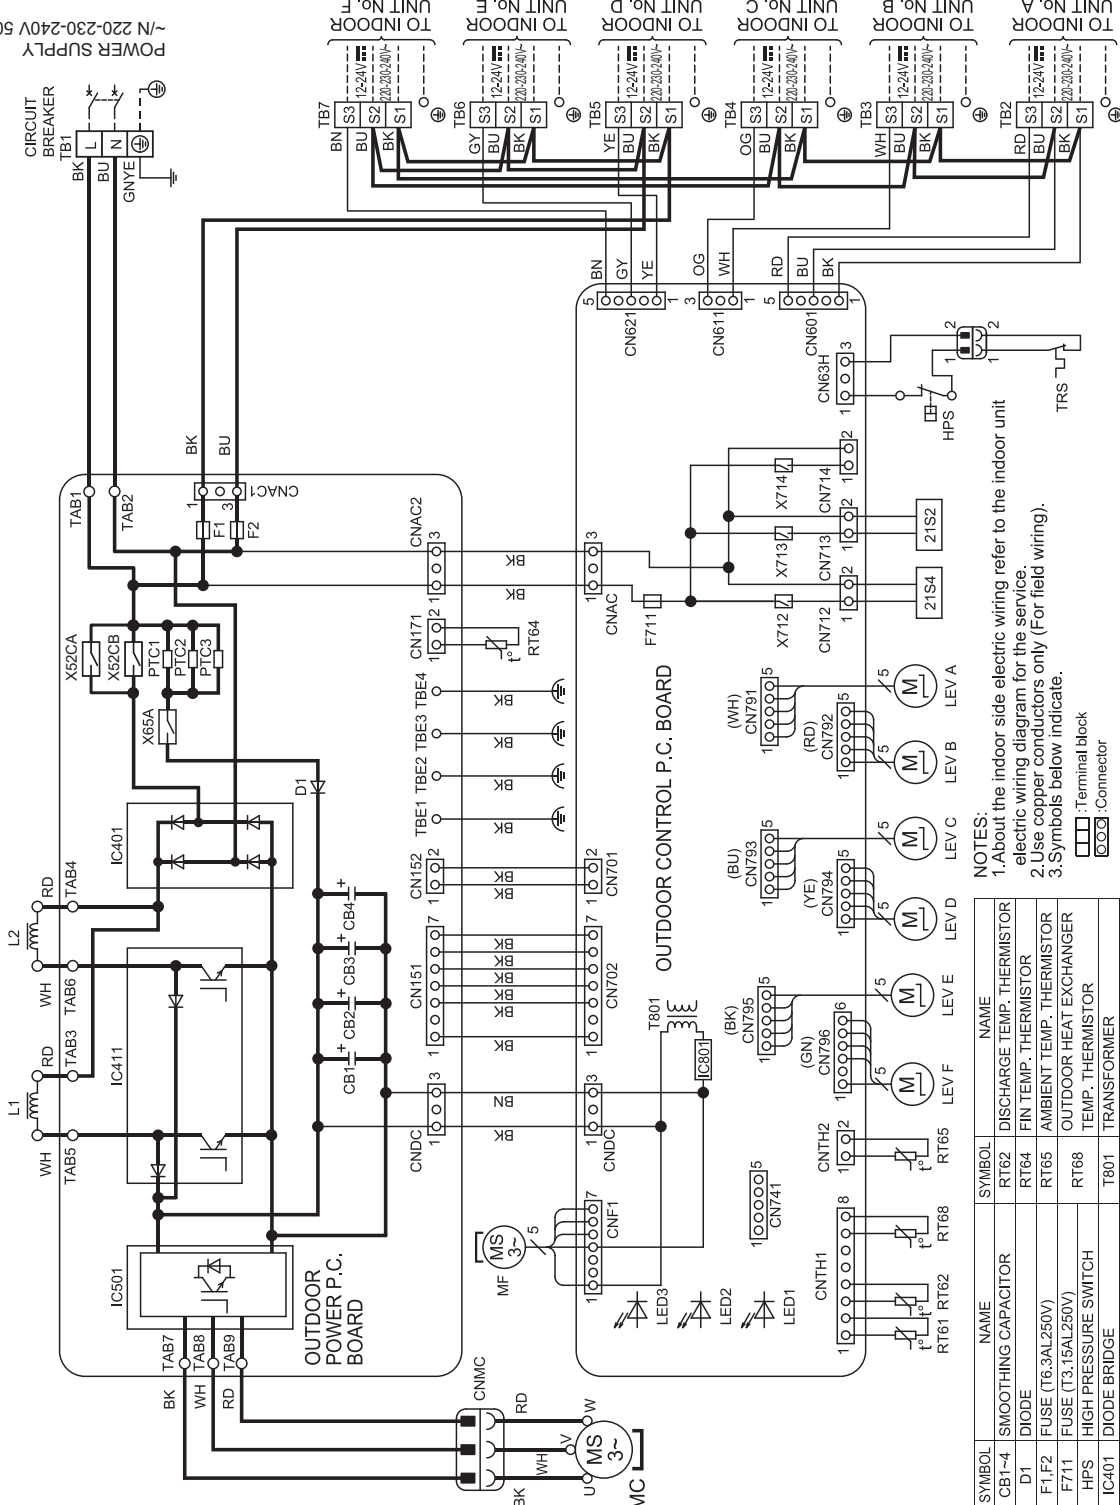

NOTES:
1. About the indoor side electric wiring refer to the indoor unit electric wiring diagram for the service.
2. Use copper conductors only (For field wiring).
3. Symbols below indicate.
□ : Terminal block
○ : Connector


SYMBOL	NAME	SYMBOL	NAME
CB1-4	SMOOTHING CAPACITOR	RT62	DISCHARGE TEMP. THERMISTOR
D1	DIODE	RT64	FIN TEMP. THERMISTOR
F1, F2	FUSE (T6.3AL250V)	RT65	AMBIENT TEMP. THERMISTOR
F711	FUSE (T3.15AL250V)	RT68	OUTDOOR HEAT EXCHANGER TEMP. THERMISTOR
HPS	HIGH PRESSURE SWITCH	T801	TRANSFORMER
IC401	DIODE BRIDGE	TB1-7	TERMINAL BLOCK
IC411	POWER MODULE	TRS	THERMAL PROTECTOR
IC801	POWER DEVICE	X52CA, B	RELAY
L1, L2	REACTOR	X65A	RELAY
LED1-3	LED	X712	RELAY
LEV A-F	EXPANSION VALVE COIL	X713	RELAY
MC	COMPRESSOR	X714	RELAY
MF	FAN MOTOR	21S2	2-WAY VALVE SOLENOID COIL
PTC1-3	CIRCUIT PROTECTOR	21S4	4-WAY VALVE SOLENOID COIL
RT61	DEFROST THERMISTOR		

MXZ-6F120VF2 - [ET1]

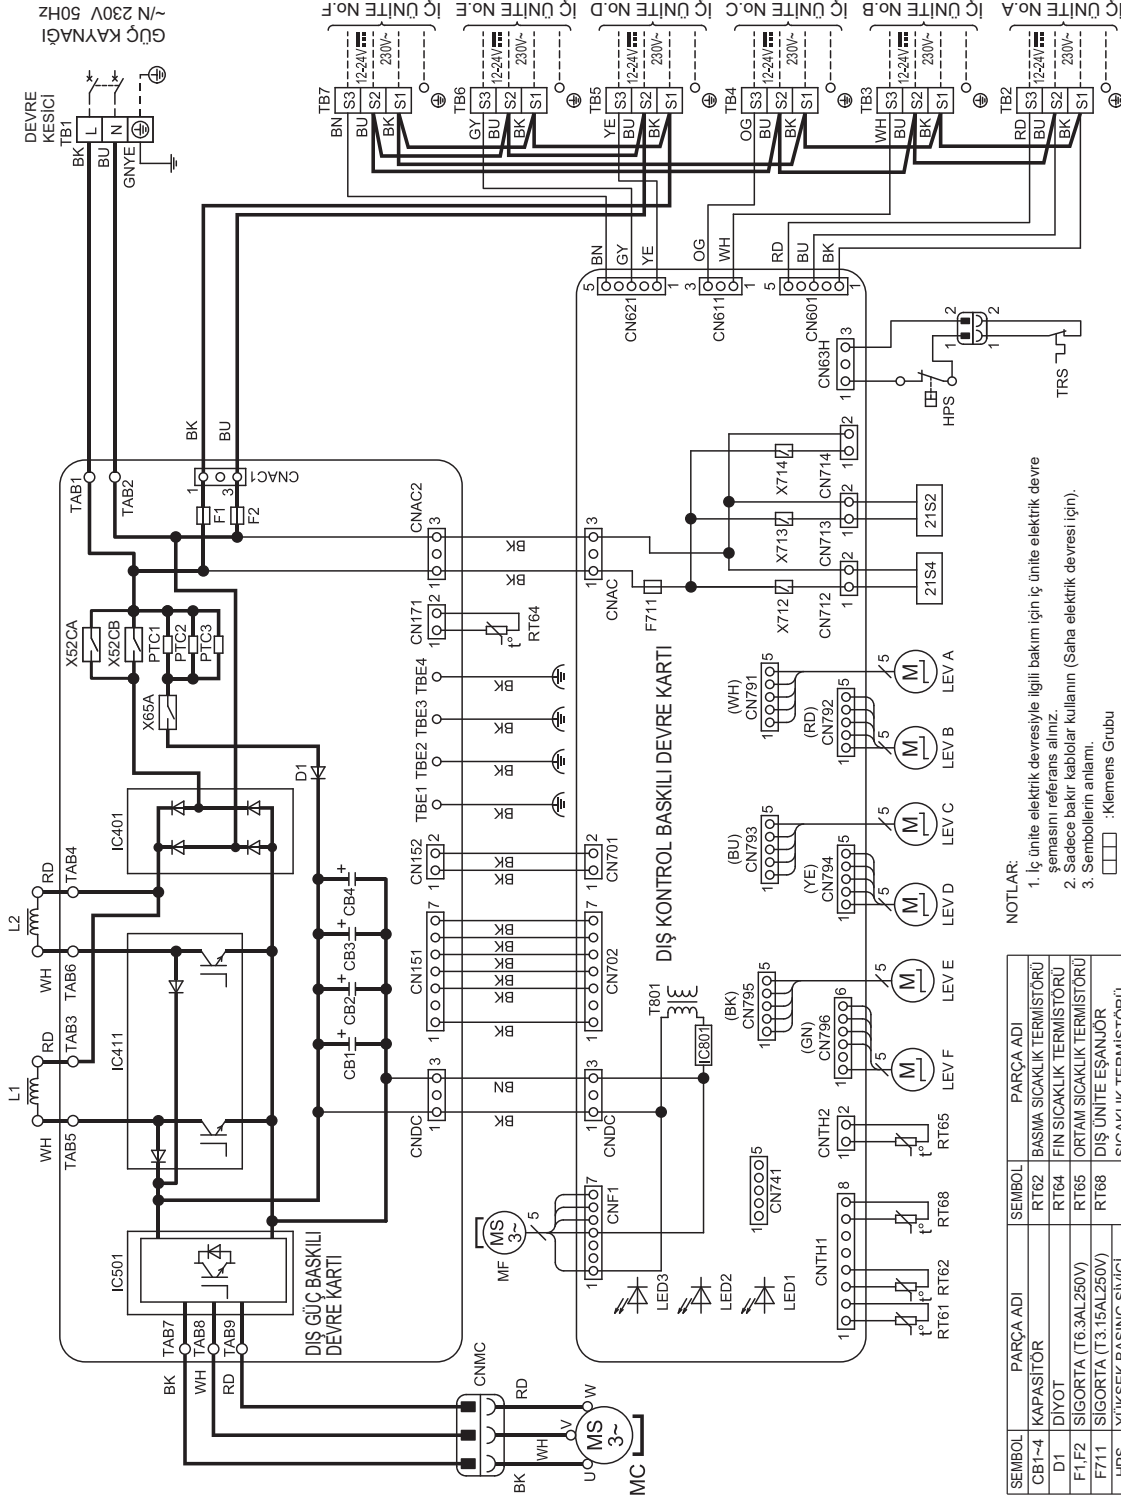

SEMBOLE	PARÇA ADI	SEMBOLE	PARÇA ADI
CB1-4	KAPASİTÖR	RT62	BASMA SICAKLIK TERMİSTÖRÜ
D1	DIYOT	RT64	FIN SICAKLIK TERMİSTÖRÜ
F1,F2	SİGORTA (T6.3AL250V)	RT65	ORTAM SICAKLIK TERMİSTÖRÜ
F711	SİGORTA (T3.15AL250V)	RT68	DIŞ ÜNİTE ESANJÖR
HPS	YÜKSEK BASINÇ SIVICI	T801	SICAKLIK TERMİSTÖRÜ
IC401	DIYOT KÖPRÜSÜ	TR5	TRANSFORMATOR
IC411	GÜÇ FAKTÖRÜ DENETLEYİCİSİ	TR5	ISIL KORUYUCU
IC501	GÜÇ MODÜLÜ	X52CA,B	RÖLE
IC801	GÜÇ CİHAZI	X65A	RÖLE
L1,L2	REAKTÖR	X712	RÖLE
LED1-3	LED	X713	RÖLE
LEV A-F	GENLEŞME VANASI SARGISI	X714	RÖLE
MC	KOMPRESÖR	21S2	2 YÖNLÜ VANA SELENOİD SARGISI
MF	FAN MOTORU	21S4	4 YÖNLÜ VALF SELENOİD SARGISI
PTC1-3	DEVRE KORUMASI		
RT61	DEFROST TERMİSTÖRÜ		


MXZ-6F122VF - [E1], [ER1]

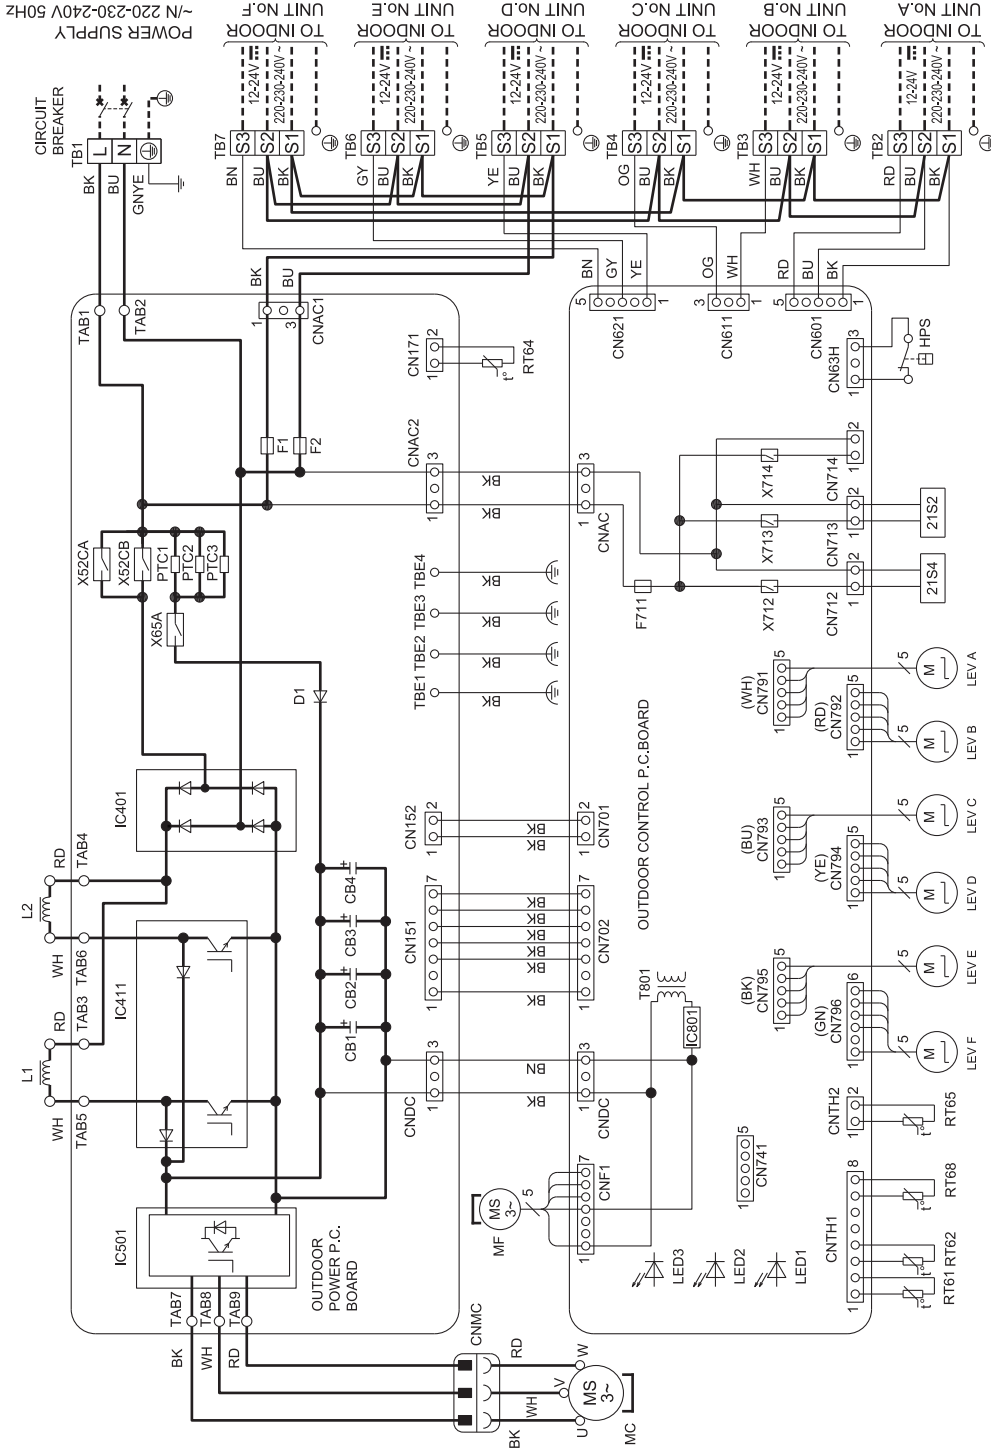

- NOTES:**
- About the indoor side electric wiring refer to the indoor unit electric wiring diagram for the service.
 - Use copper conductors only (For field wiring).
 - Symbols below indicate.
 - Terminal block
 - Connector

SYMBOL	NAME	SYMBOL	NAME
CB1-4	SMOOTHING CAPACITOR	RT61	DEFROST THERMISTOR
D1	DIODE	RT62	DISCHARGE TEMP.THERMISTOR
F1,F2	FUSE(T6.3AL250V)	RT64	FIN TEMP.THERMISTOR
F711	FUSE(T3.15AL250V)	RT65	AMBIENT TEMP.THERMISTOR
HPS	HIGH PRESSURE SWITCH	RT68	OUTDOOR HEAT EXCHANGER
IC401	DIODE BRIDGE	T801	TEMP. THERMISTOR
IC411	POWER MODULE	TB1-7	TERMINAL BLOCK
IC501	POWER MODULE	X52CAB	RELAY
IC801	POWER DEVICE	X65A	RELAY
L1,L2	REACTOR	X712	RELAY
LED1-3	LED	X713	RELAY
LEV A-F	EXPANSION VALVE COIL	X714	RELAY
MC	COMPRESSOR	21S2	2WAY VALVE SOLENOID COIL
MF	FAN MOTOR	21S4	REVERSING VALVE SOLENOID COIL
PTC1-3	CIRCUIT PROTECTOR		


MXZ-6F122VF - [ET1]

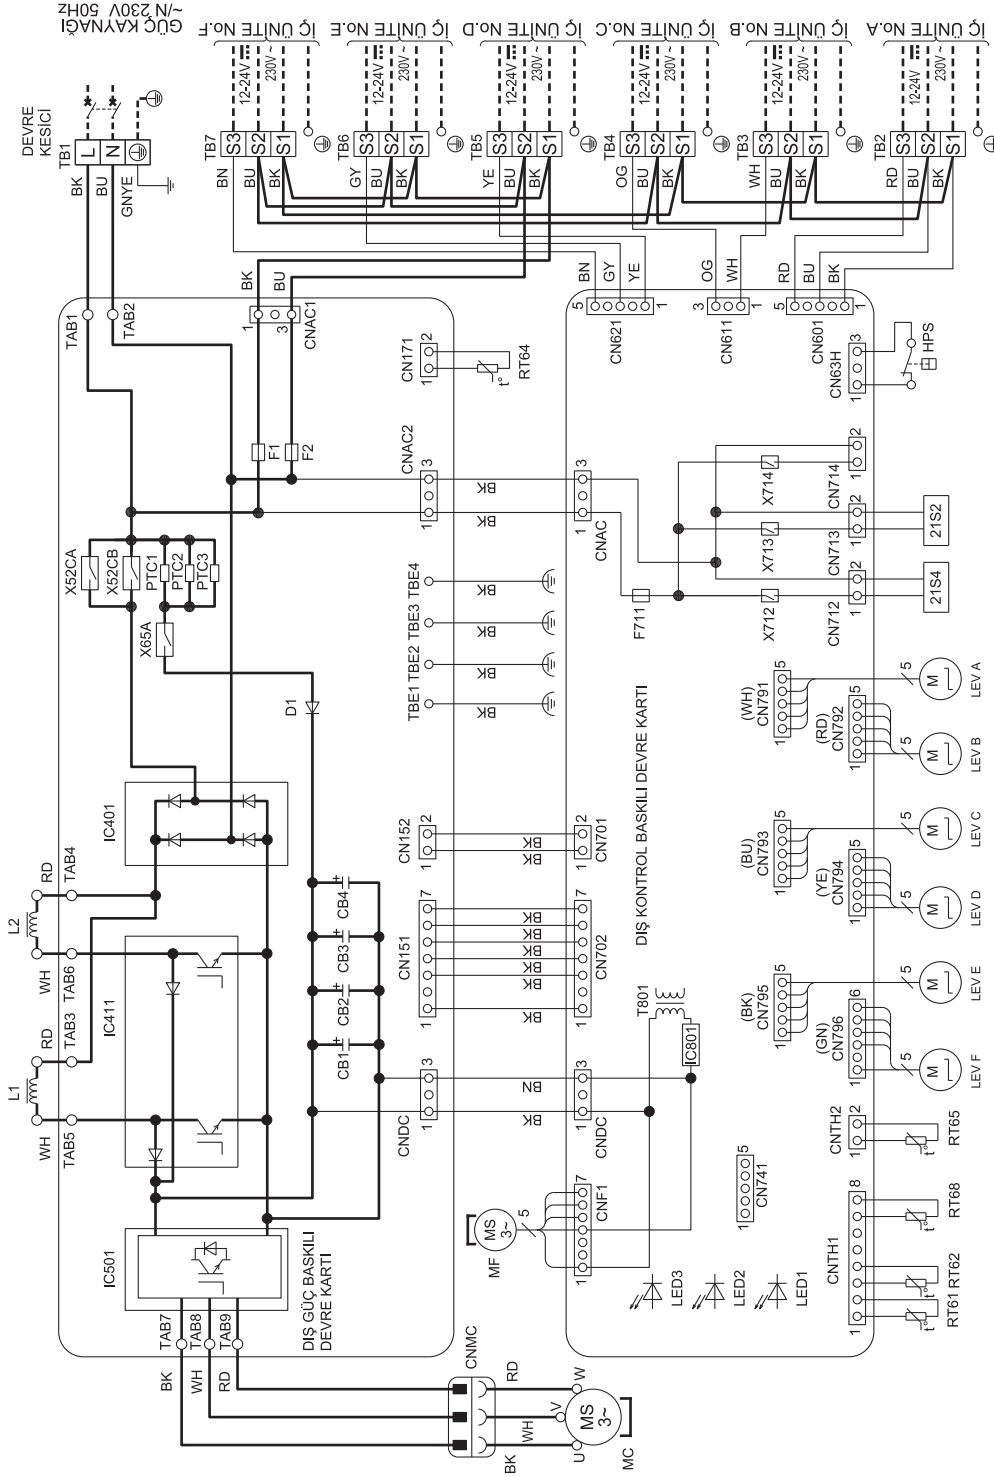


- NOTLAR:**
1. İç ünite elektrik devresiyle ilgili bakımlar için iç ünite elektrik devre şemasını referans alın.
 2. Sadece bakır kablolar kullanın (Saha elektrik devresi için).
 3. Sembollerin anlamları:
 :Klemens Grubu
 :Konnektör

SEMBOL	PARÇA ADI	SEMBOL	PARÇA ADI
CB1-4	KAPASİTÖR	RT61	DEFROST TERMİSTÖRÜ
D1	DIYOT	RT62	BASMA SICAKLIK TERMİSTÖRÜ
F1,F2	SIGORTA (T6.3AL250V)	RT64	FIN SICAKLIK TERMİSTÖRÜ
F711	SIGORTA (T3.15AL250V)	RT65	ORTAM SICAKLIK TERMİSTÖRÜ
HPS	YÜKSEK BASINÇ SIVICI	RT68	DIŞ ÜNİTE ESANJÖR SICAKLIK TERMİSTÖRÜ
IC401	DIYOT KÖPRÜSÜ	T801	TRANSFORMATÖR
IC411	GUÇ FAKTÖRÜ DENETLEYİCİSİ	TB1-7	KLEMENS GRUBU
IC501	GUÇ MODÜLÜ	X52CA,B	RÖLE
IC801	GUÇ ÇIHAZI	X65A	RÖLE
L1,L2	REAKTÖR	X712	RÖLE
LED1-3	LED	X713	RÖLE
LEV A-F	GENLEŞME VANASI SARGISI	X714	RÖLE
MC	KOMPRESÖR	21S2	2 YÖNLÜ VANA SELENİD SARGISI
MF	FAN MOTORU	21S4	İKİ YÖNLÜ VANA SELENİD SARGISI
PTC1-3	DEVRE KORUMASI		

MXZ-2F53VFHZ - [E1], [ER1]

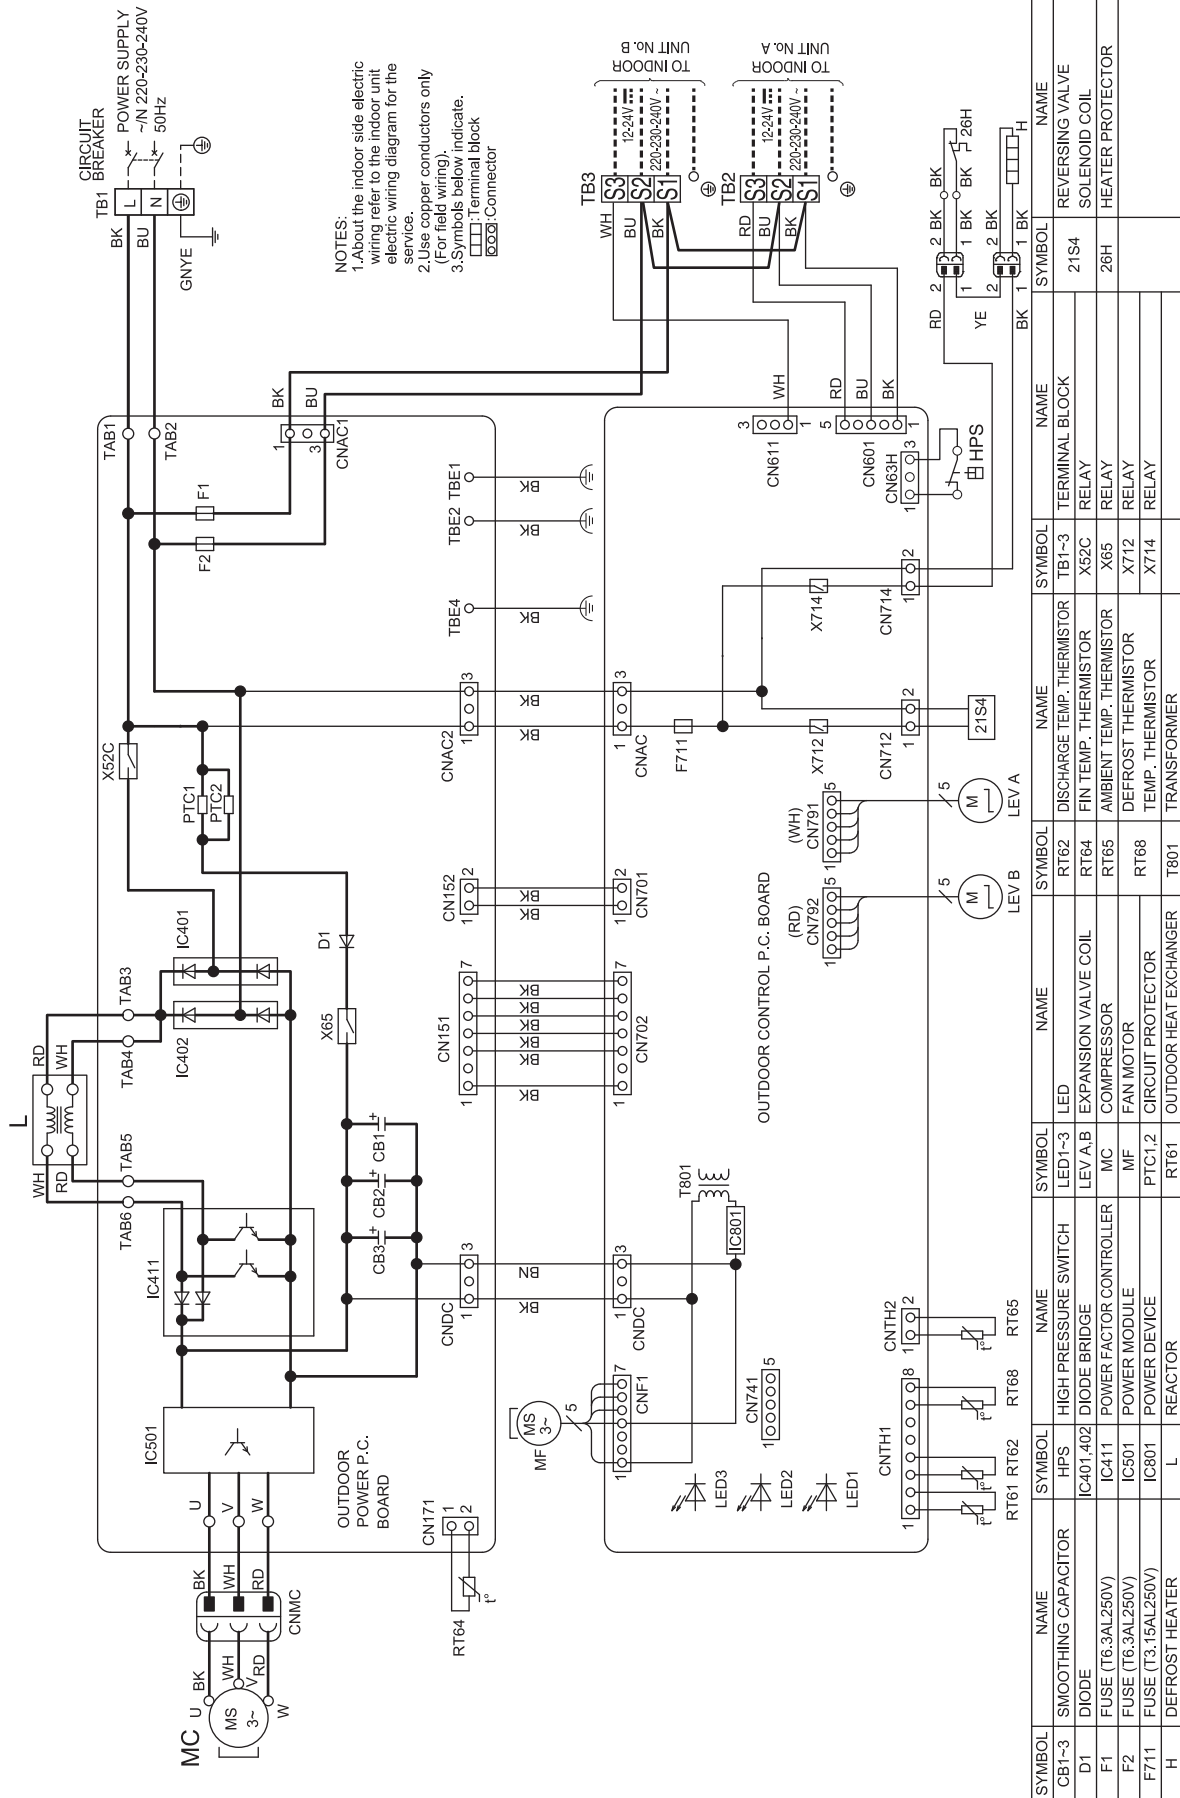

MXZ-2F53VFHZ2 - E1

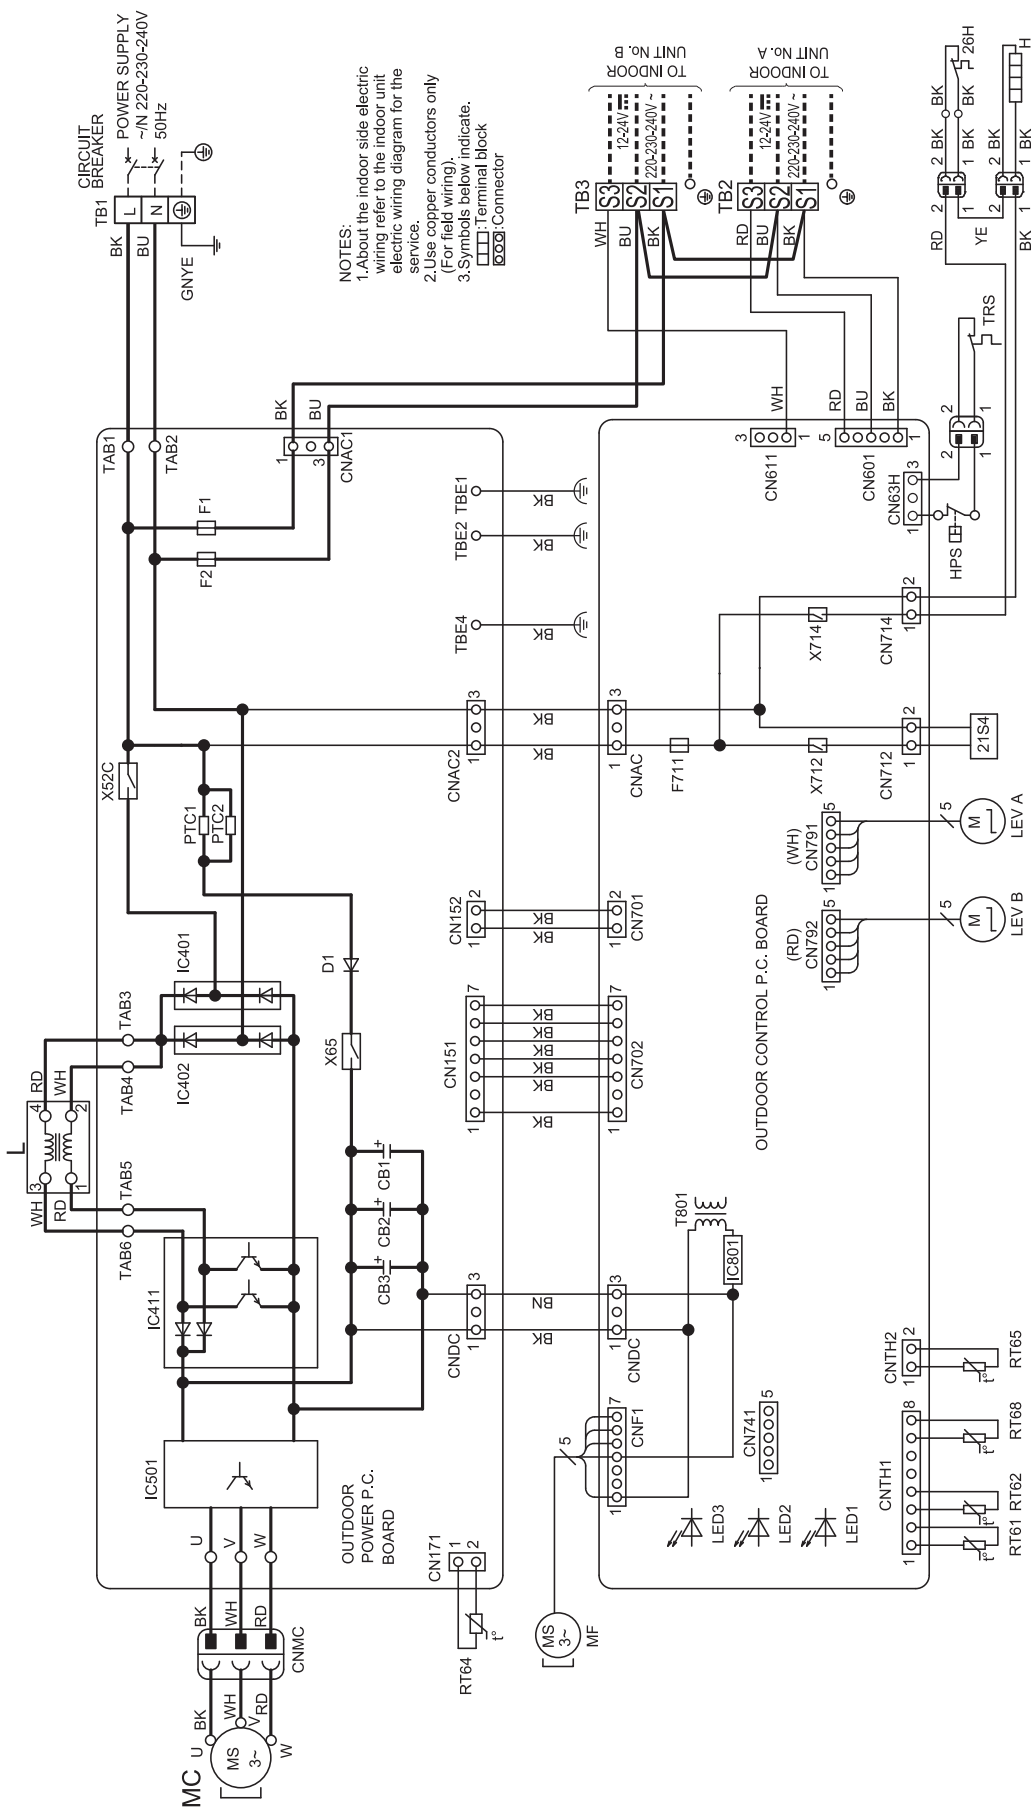


NOTES:
 1. About the indoor side electric wiring refer to the indoor unit electric wiring diagram for the service.
 2. Use copper conductors only (For field wiring).
 3. Symbols below indicate.
 □ Terminal block
 ○ Connector

SYMBOL	NAME	SYMBOL	NAME	SYMBOL	NAME	SYMBOL	NAME
CB1~3	SMOOTHING CAPACITOR	HPS	HIGH PRESSURE SWITCH	TB1~3	TERMINAL BLOCK	21S4	4-WAY VALVE SOLENOID COIL
D1	DIODE	IC401,402	DIODE BRIDGE	TRS	THERMAL PROTECTOR	26H	HEATER PROTECTOR
F1	FUSE (T6.3AL250V)	IC411	POWER FACTOR CONTROLLER	X52C	RELAY	X65	RELAY
F2	FUSE (T6.3AL250V)	IC501	POWER MODULE	X712	RELAY	X714	RELAY
F711	FUSE (T3.15AL250V)	IC801	POWER DEVICE	T801	TRANSFORMER		
H	DEFROST HEATER	L	REACTOR				

MXZ-4F83VFHZ - [E1], [ER1]

-N 220-230-240V 50HZ
POWER SUPPLY

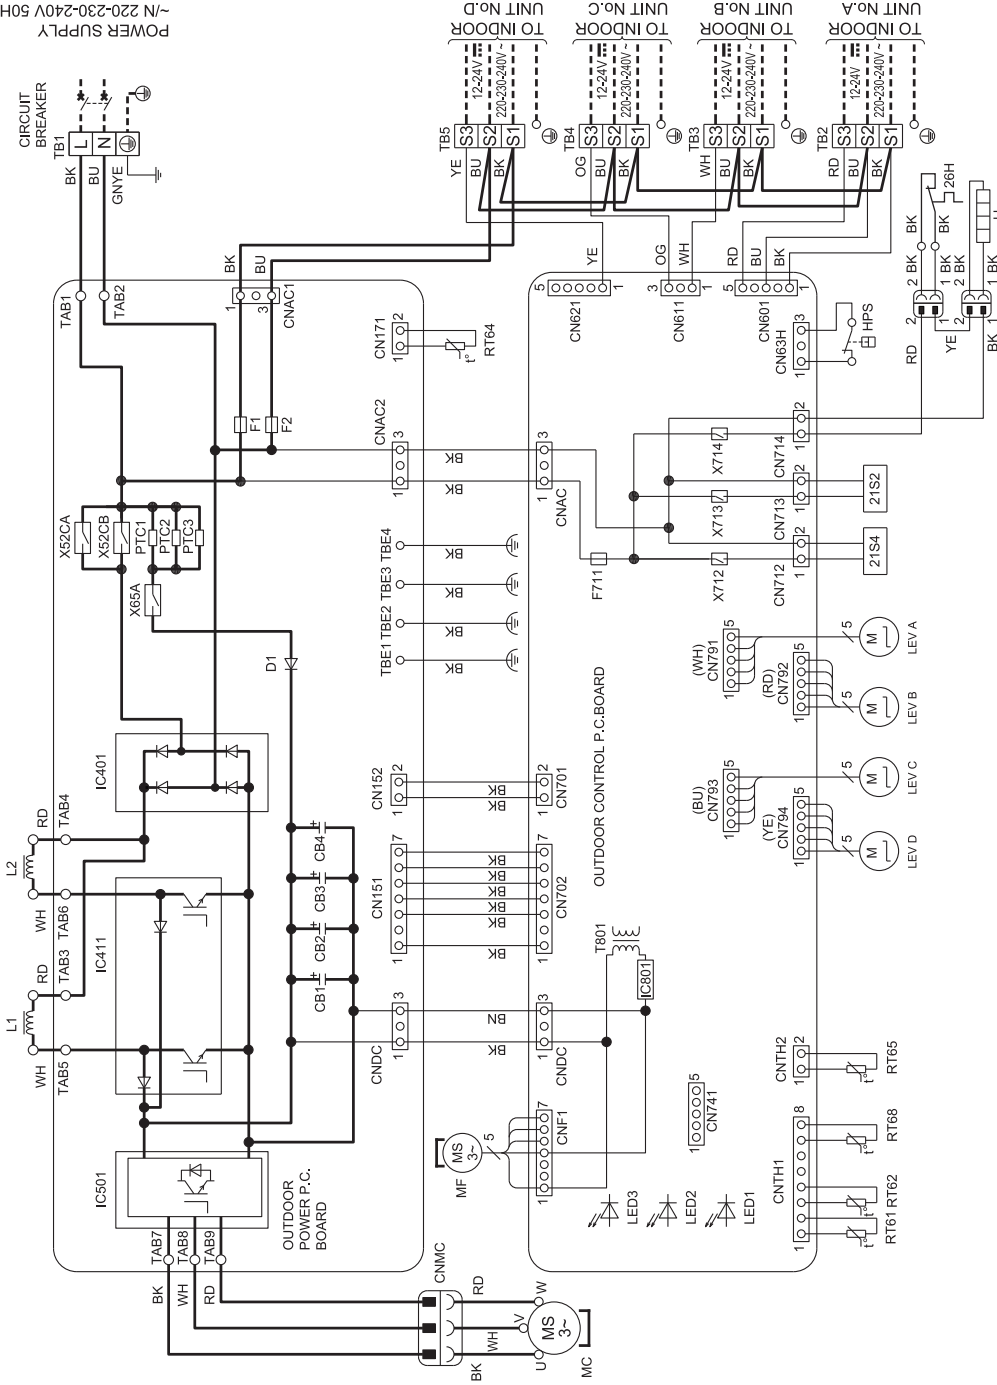


- NOTES:
1. About the indoor side electric wiring refer to the indoor unit electric wiring diagram for the service.
 2. Use capacitor conductors only (For field wiring).
 3. Symbols below indicate.
 - : Terminal block
 - : Connector

SYMBOL	NAME	SYMBOL	NAME
CB1-4	SMOOTHING CAPACITOR	RT61	DEFROST THERMISTOR
D1	DIODE	RT62	DISCHARGE TEMP.THERMISTOR
F1,F2	FUSE(T6.3AL250V)	RT64	FIN TEMP.THERMISTOR
F711	FUSE(T3.15AL250V)	RT65	AMBIENT TEMP.THERMISTOR
H	DEFROST HEATER	RT68	OUTDOOR HEAT EXCHANGER
HPS	HIGH PRESSURE SWITCH		TEMP. THERMISTOR
IC401	DIODE BRIDGE	T801	TRANSFORMER
IC411	POWER MODULE	TB1-5	TERMINAL BLOCK
IC501	POWER MODULE	X52CAB	RELAY
IC801	POWER DEVICE	X65A	RELAY
L1,L2	REACTOR	X712	RELAY
LED1-3	LED	X713	RELAY
LEV A-D	EXPANSION VALVE COIL	X714	RELAY
MC	COMPRESSOR	21S2	2WAY VALVE SOLENOID COIL
MF	FAN MOTOR	21S4	REVERSING VALVE SOLENOID COIL
PTC1-3	CIRCUIT PROTECTOR	26H	HEATER PROTECTOR

MXZ-4F83VFHZ2 - [E1]

POWER SUPPLY
~N 220-230-240V 50HZ

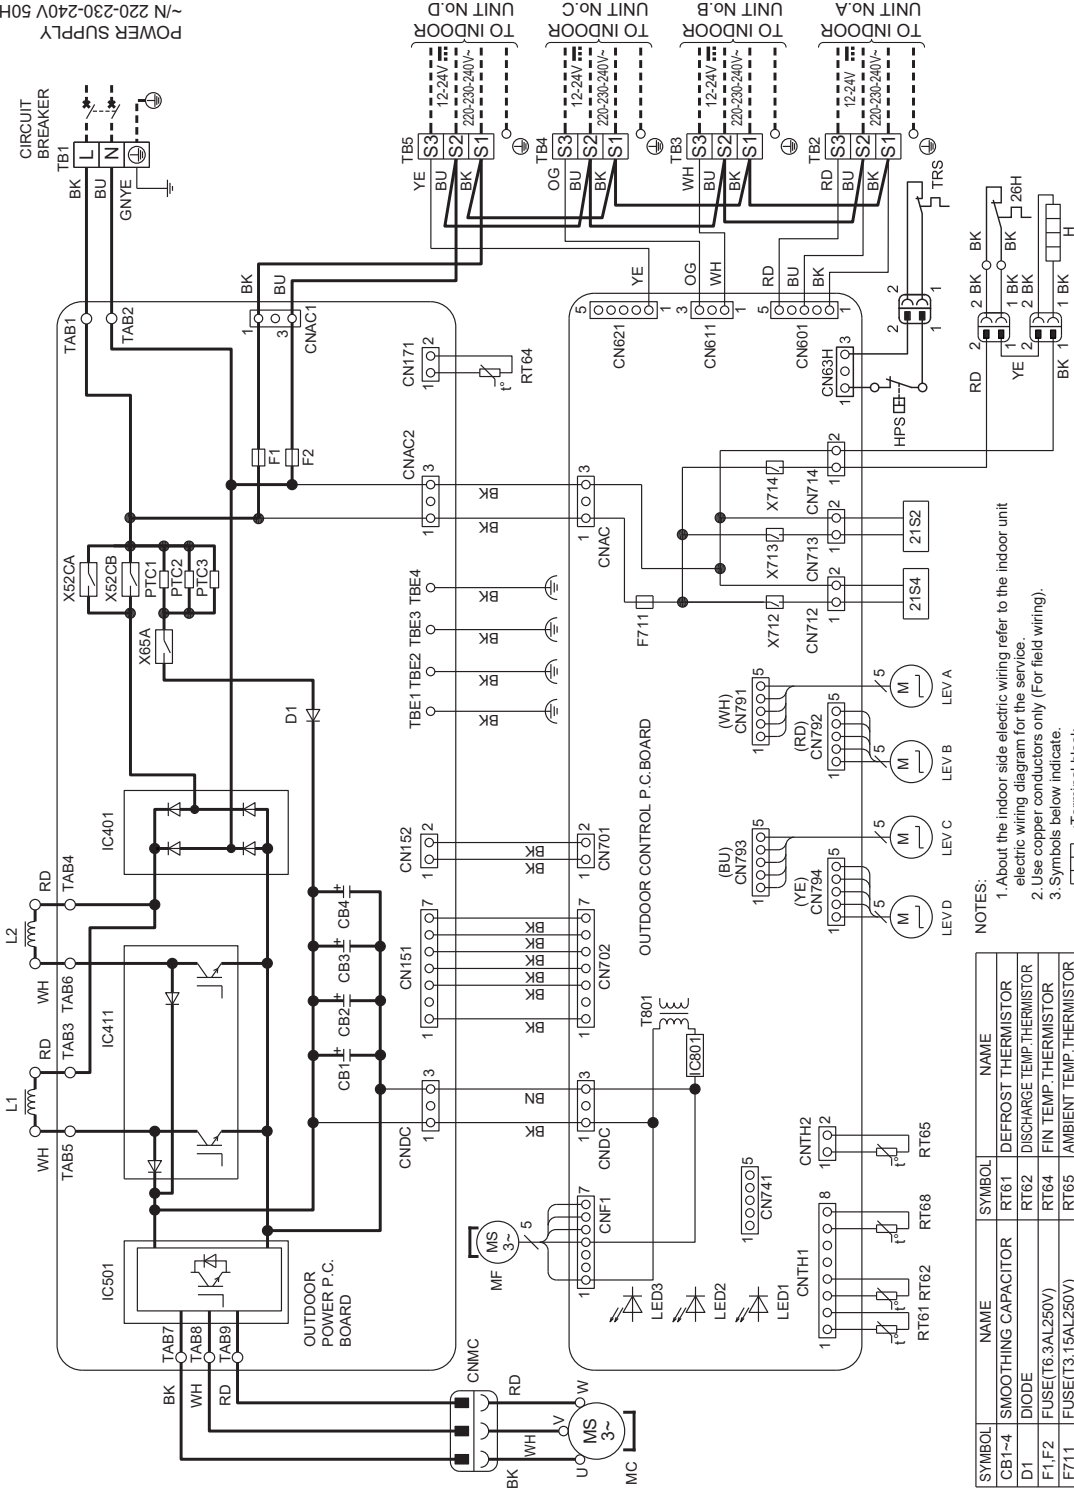


NOTES:
 1. About the indoor side electric wiring refer to the indoor unit electric wiring diagram for the service.
 2. Use copper conductors only (For field wiring).
 3. Symbols below indicate.
 □ : Terminal block
 ○ : Connector

SYMBOL	NAME	SYMBOL	NAME
CB1~4	SMOOTHING CAPACITOR	RT61	DEFROST THERMISTOR
D1	DIODE	RT62	DISCHARGE TEMP.THERMISTOR
F1,F2	FUSE(T6.3AL250V)	RT64	FIN TEMP.THERMISTOR
F711	FUSE(T3.15AL250V)	RT65	AMBIENT TEMP.THERMISTOR
H	DEFROST HEATER	RT68	OUTDOOR HEAT EXCHANGER
HPS	HIGH PRESSURE SWITCH		TEMP. THERMISTOR
IC401	DIODE BRIDGE	T801	TRANSFORMER
IC411	POWER MODULE	TB1~5	TERMINAL BLOCK
IC501	POWER MODULE	TRS	THERMAL PROTECTOR
IC801	POWER DEVICE	X52CA,B	RELAY
L1,L2	REACTOR	X65A	RELAY
LED1~3	LED	X712	RELAY
LEV-A-D	EXPANSION VALVE COIL	X713	RELAY
MC	COMPRESSOR	X714	RELAY
MF	FAN MOTOR	21S2	2-WAY VALVE SOLENOID COIL
PTC1~3	CIRCUIT PROTECTOR	21S4	4-WAY VALVE SOLENOID COIL
		26H	HEATER PROTECTOR

MXZ-2F33VF
 MXZ-2F33VF2
 MXZ-2F33VF3
 MXZ-2F33VF4

Unit: mm

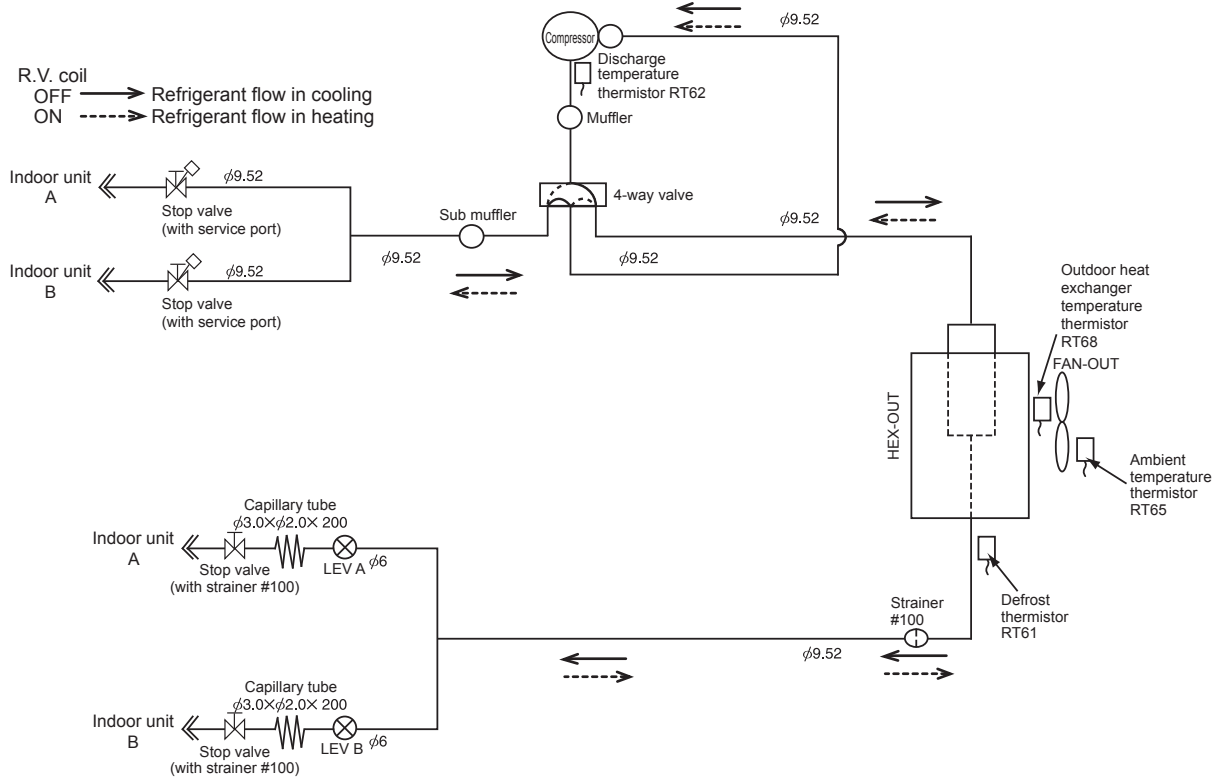

MAX REFRIGERANT PIPING LENGTH


Piping length each indoor unit (a, b)	15 m
Total piping length (a+b)	20 m
Number of bends for each unit	15
Total number of bends	20

*It is irrelevant which unit is higher.

ADDITIONAL REFRIGERANT CHARGE

Model name	Outdoor unit precharged (g)	Refrigerant piping length (one way, 2 unit total)
		20 m
MXZ-2F33VF MXZ-2F33VF2	1,000	0
MXZ-2F33VF3 MXZ-2F33VF4	800	0

● Refrigerant pipe diameter is different according to indoor unit to be connected. When using extension pipes, refer to the right table.

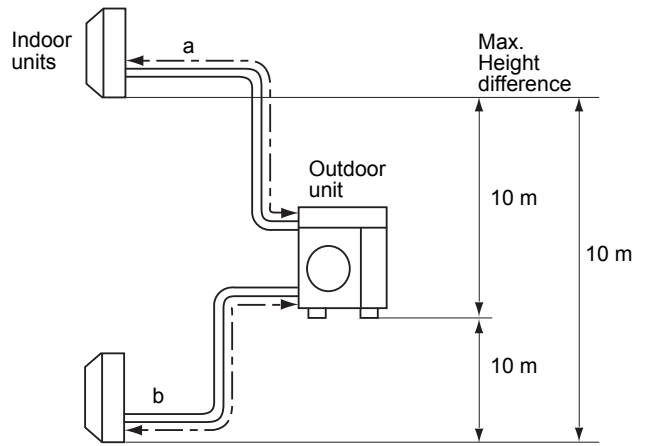


Unit: mm (inch)

Outdoor unit union diameter		
For		
Indoor unit A	Liquid	6.35(1/4)
	Gas	9.52(3/8)
Indoor unit B	Liquid	6.35(1/4)
	Gas	9.52(3/8)

MXZ-2F42VF **MXZ-2F53VF** **MXZ-2F53VFH**
MXZ-2F42VF2 **MXZ-2F53VF2** **MXZ-2F53VFH2**
MXZ-2F42VF3 **MXZ-2F53VF3** **MXZ-2F53VFH3**
MXZ-2F42VF4 **MXZ-2F53VF4** **MXZ-2F53VFH4**

Unit: mm

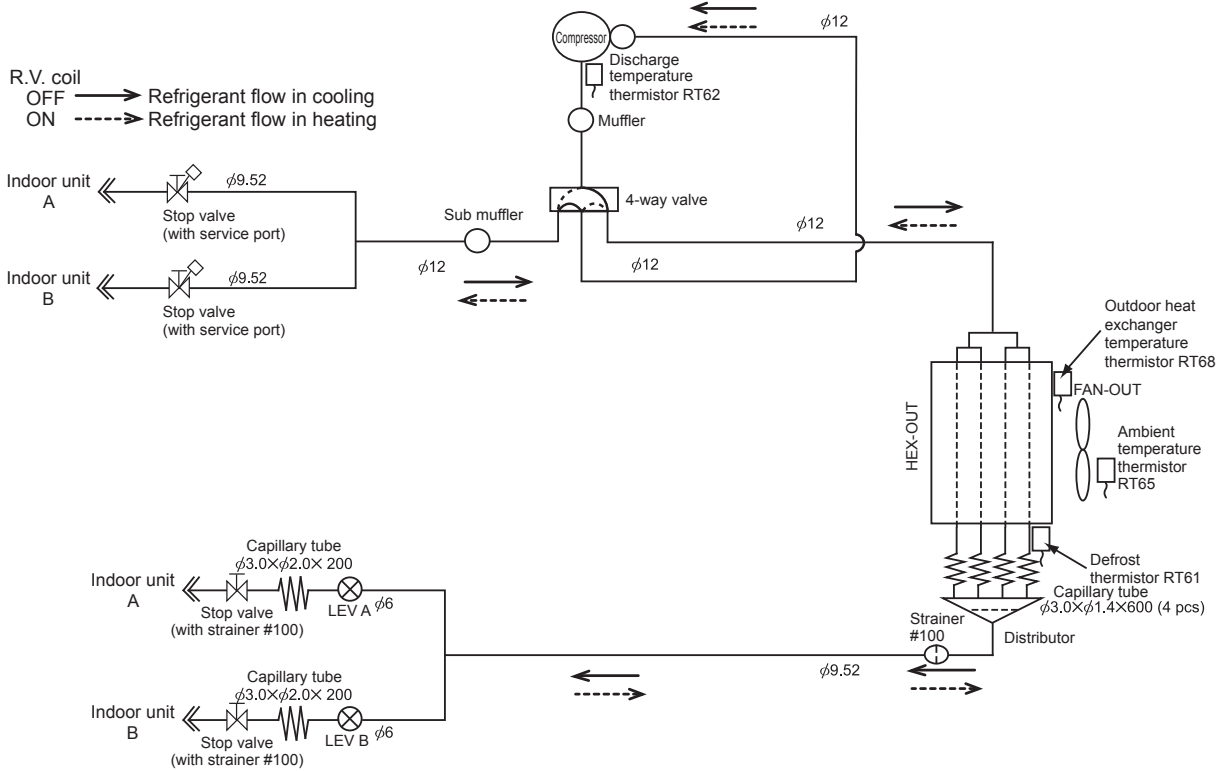

MAX REFRIGERANT PIPING LENGTH


Piping length each indoor unit (a, b)	20 m
Total piping length (a+b)	30 m
Number of bends for each unit	20
Total number of bends	30

*It is irrelevant which unit is higher.

ADDITIONAL REFRIGERANT CHARGE

Model name	Outdoor unit precharged (g)	Refrigerant piping length (one way, 2 unit total)
		30 m
MXZ-2F42/53VF MXZ-2F53VFH MXZ-2F42/53VF2 MXZ-2F53VFH2	1,200	0
MXZ-2F42/53VF3 MXZ-2F53VFH3 MXZ-2F42/53VF4 MXZ-2F53VFH4	1,000	0

- Refrigerant pipe diameter is different according to indoor unit to be connected. When using extension pipes, refer to the right table.
- For **MXZ-2F53VF**, **MXZ-2F53VF2**, **MXZ-2F53VF3**, **MXZ-2F53VF4**, **MXZ-2F53VFH**, **MXZ-2F53VFH2**, **MXZ-2F53VFH3** and **MXZ-2F53VFH4** when diameter of refrigerant pipe is different from that of outdoor unit union, use optional Different-diameter pipe. For further information on Different-diameter pipe, refer to "PARTS CATALOG".

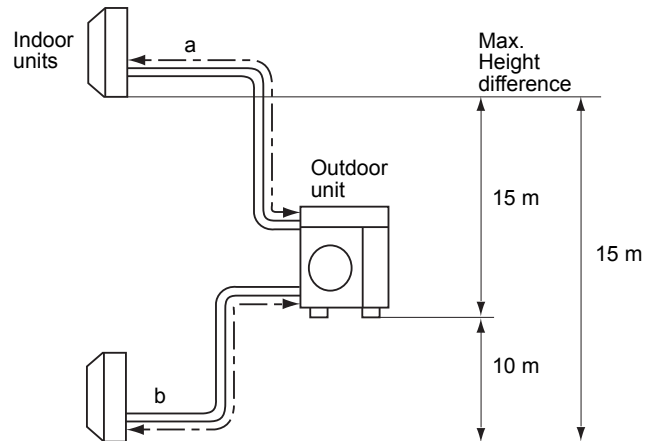


Unit: mm (inch)

Outdoor unit union diameter		
For		
Indoor unit A	Liquid	6.35(1/4)
	Gas	9.52(3/8)
Indoor unit B	Liquid	6.35(1/4)
	Gas	9.52(3/8)

MXZ-3F54VF MXZ-3F54VF2 MXZ-3F54VF3 MXZ-3F54VF4

Unit: mm

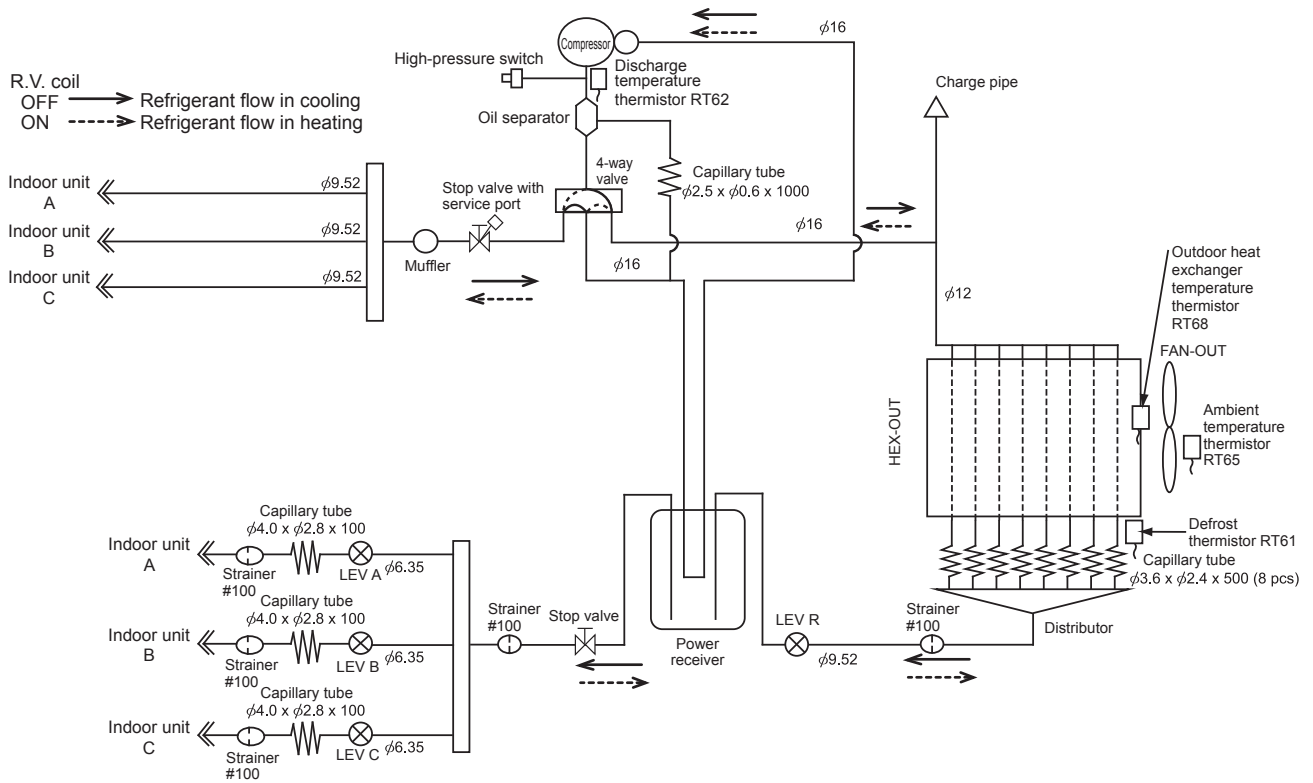

MAX REFRIGERANT PIPING LENGTH

Piping length each indoor unit (a, b, c)	25 m
Total piping length (a+b+c)	50 m
Number of bends for each unit	25
Total number of bends	50


*It is irrelevant which unit is higher.

ADDITIONAL REFRIGERANT CHARGE

*Refer to "Method of charging refrigerant".

Model name	Outdoor unit precharged (g)	Refrigerant piping length (one way, 3 unit total)
		50 m
MXZ-3F54VF	1,400	0
MXZ-3F54VF2 MXZ-3F54VF3 MXZ-3F54VF4	2,400	0

- Refrigerant pipe diameter is different according to indoor unit to be connected. When using extension pipes, refer to the right table.
- When diameter of refrigerant pipe is different from that of outdoor unit union, use optional Different-diameter pipe. For further information on Different-diameter pipe, refer to "PARTS CATALOG".

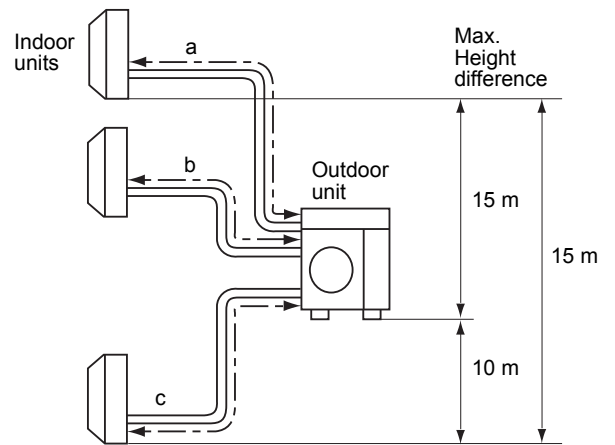


Unit: mm (inch)

Outdoor unit union diameter		
For		
Indoor unit A	Liquid	6.35(1/4)
	Gas	9.52(3/8)
Indoor unit B	Liquid	6.35(1/4)
	Gas	9.52(3/8)
Indoor unit C	Liquid	6.35(1/4)
	Gas	9.52(3/8)

MXZ-3F68VF MXZ-3F68VF2 MXZ-3F68VF3 MXZ-3F68VF4

Unit: mm

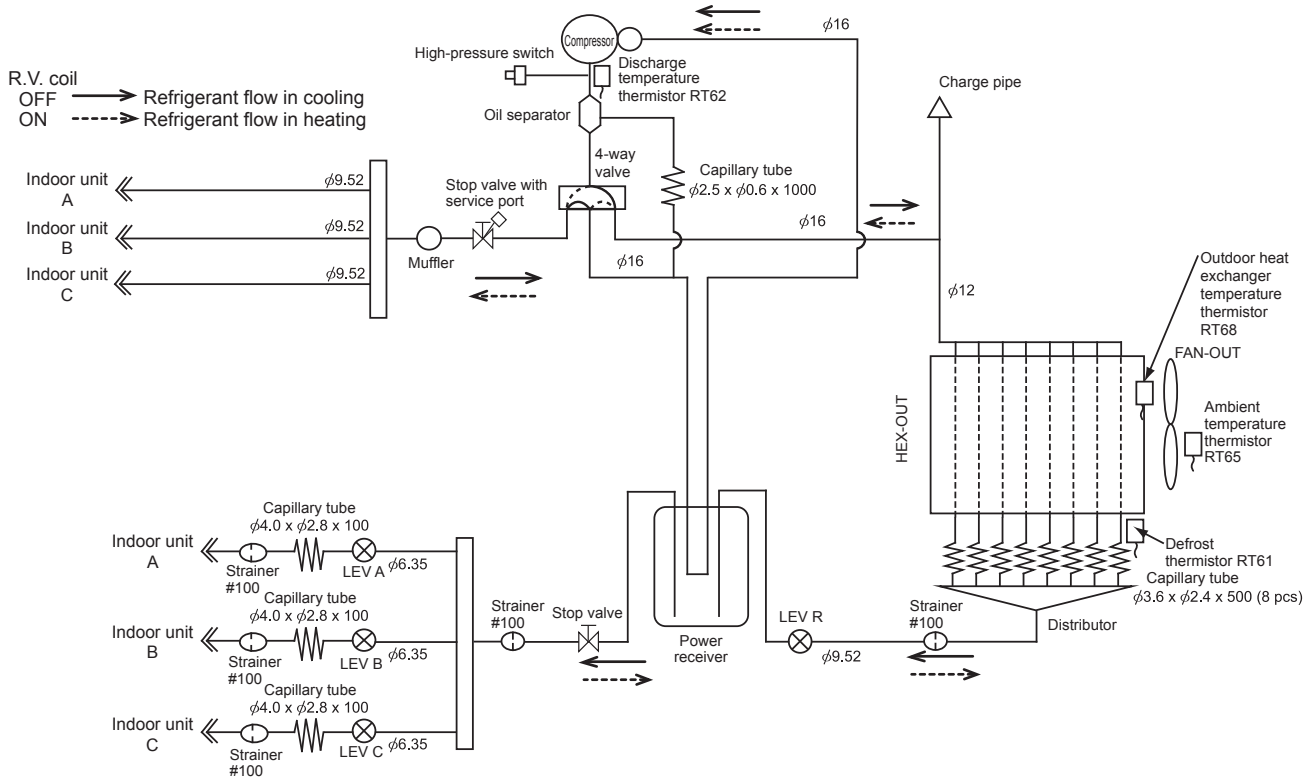

MAX REFRIGERANT PIPING LENGTH

Piping length each indoor unit (a, b, c)	25 m
Total piping length (a+b+c)	60 m
Number of bends for each unit	25
Total number of bends	60


*It is irrelevant which unit is higher.

ADDITIONAL REFRIGERANT CHARGE

*Refer to "Method of charging refrigerant".

Model name	Outdoor unit precharged (g)	Refrigerant piping length (one way, 3 unit total)
		60 m
MXZ-3F68VF	1,400	0
MXZ-3F68VF2 MXZ-3F68VF3 MXZ-3F68VF4	2,400	0

- Refrigerant pipe diameter is different according to indoor unit to be connected. When using extension pipes, refer to the right table.
- When diameter of refrigerant pipe is different from that of outdoor unit union, use optional Different-diameter pipe. For further information on Different-diameter pipe, refer to "PARTS CATALOG".

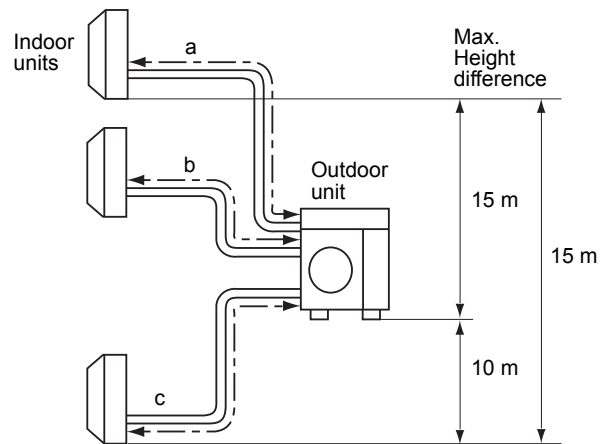

Unit: mm (inch)

Outdoor unit union diameter		
For		
Indoor unit A	Liquid	6.35(1/4)
	Gas	9.52(3/8)
Indoor unit B	Liquid	6.35(1/4)
	Gas	9.52(3/8)
Indoor unit C	Liquid	6.35(1/4)
	Gas	9.52(3/8)



MXZ-4F72VF

MXZ-4F72VF2

MXZ-4F72VF3


MXZ-4F72VF4

Unit: mm

MXZ-4F80VF2

MXZ-4F80VF3

MXZ-4F80VF4

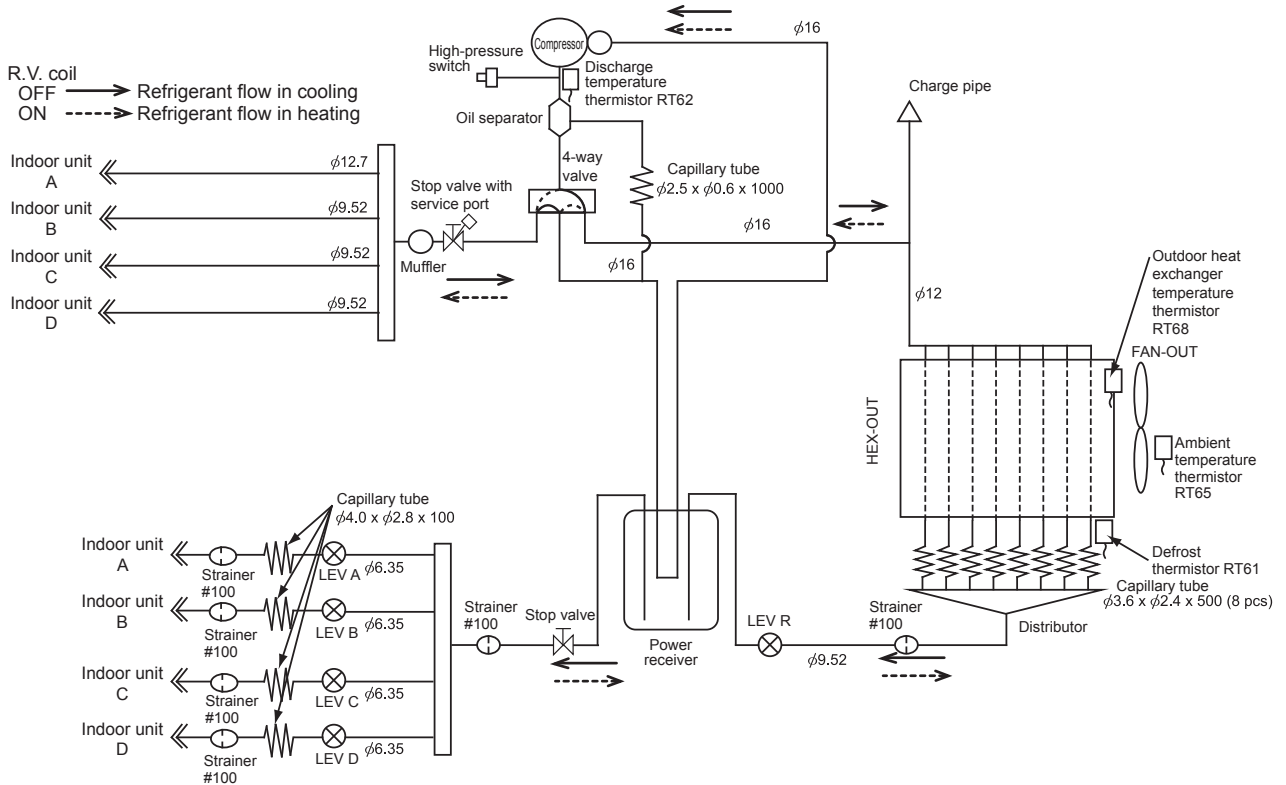

MAX REFRIGERANT PIPING LENGTH

Piping length each indoor unit (a, b, c, d)	25 m
Total piping length (a+b+c+d)	60 m
Number of bends for each unit	25
Total number of bends	60


*It is irrelevant which unit is higher.

ADDITIONAL REFRIGERANT CHARGE

*Refer to "Method of charging refrigerant".

Model name	Outdoor unit precharged (g)	Refrigerant piping length (one way, 4 unit total)
		60 m
MXZ-4F72VF	1,400	0
MXZ-4F72VF2 MXZ-4F72VF3 MXZ-4F72VF4 MXZ-4F80VF2 MXZ-4F80VF3 MXZ-4F80VF4	2,400	0

- Refrigerant pipe diameter is different according to indoor unit to be connected. When using extension pipes, refer to the right table.
- When diameter of refrigerant pipe is different from that of outdoor unit union, use optional Different-diameter pipe. For further information on Different-diameter pipe, refer to "PARTS CATALOG".

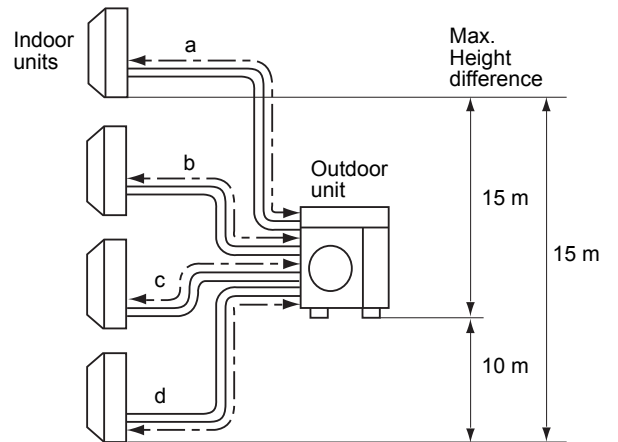


Unit: mm (inch)

Outdoor unit union diameter		
For		
Indoor unit A	Liquid	6.35(1/4)
	Gas	12.7(1/2)
Indoor unit B	Liquid	6.35(1/4)
	Gas	9.52(3/8)
Indoor unit C	Liquid	6.35(1/4)
	Gas	9.52(3/8)
Indoor unit D	Liquid	6.35(1/4)
	Gas	9.52(3/8)

MXZ-4F83VF MXZ-4F83VF2

Unit: mm

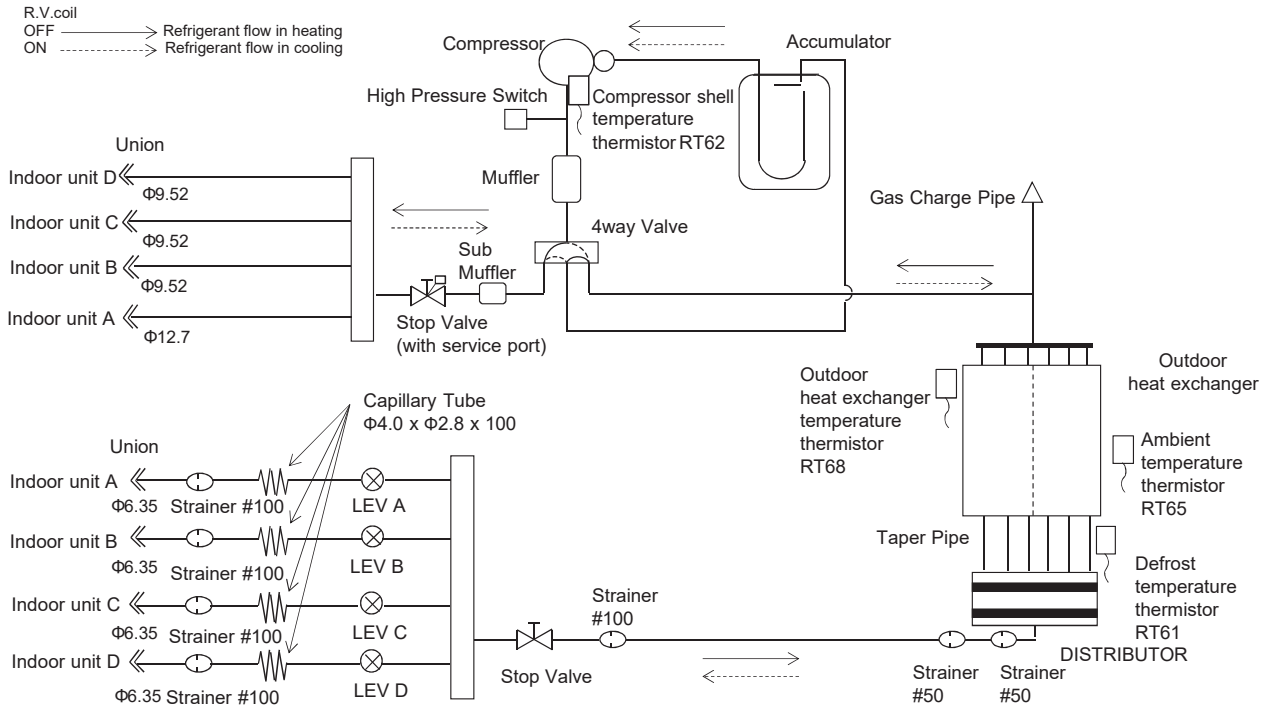


MAX REFRIGERANT PIPING LENGTH

Piping length each indoor unit (a, b, c, d)	25 m
Total piping length (a+b+c+d)	70 m
Number of bends for each unit	25
Total number of bends	70

*It is irrelevant which unit is higher.

ADDITIONAL REFRIGERANT CHARGE

Outdoor unit precharged (g)	Refrigerant piping length (one way, 4 units total)	
		70 m
2,400		0

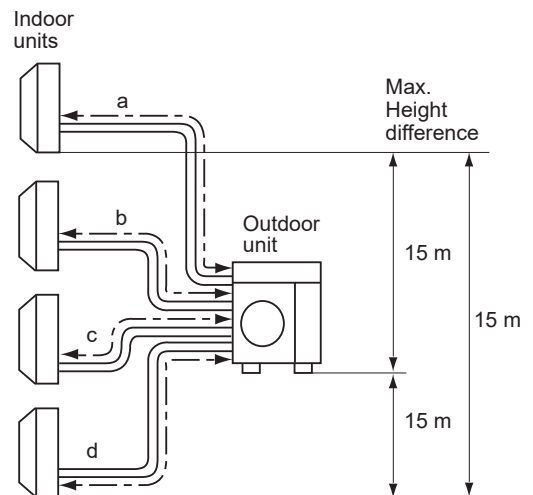


- Refrigerant pipe diameter is different according to indoor unit to be connected. When using extension pipes, refer to the tables below.
- When diameter of refrigerant pipe is different from that of outdoor unit union, use optional Different-diameter pipe. For further information on Different-diameter pipe, refer to "PARTS CATALOG".

Unit: mm (inch)

Outdoor unit union diameter		
For		
Indoor unit A	Liquid	6.35(1/4)
	Gas	12.7(1/2)
Indoor unit B	Liquid	6.35(1/4)
	Gas	9.52(3/8)
Indoor unit C	Liquid	6.35(1/4)
	Gas	9.52(3/8)
Indoor unit D	Liquid	6.35(1/4)
	Gas	9.52(3/8)

MXZ-5F102VF MXZ-5F102VF2

Unit: mm

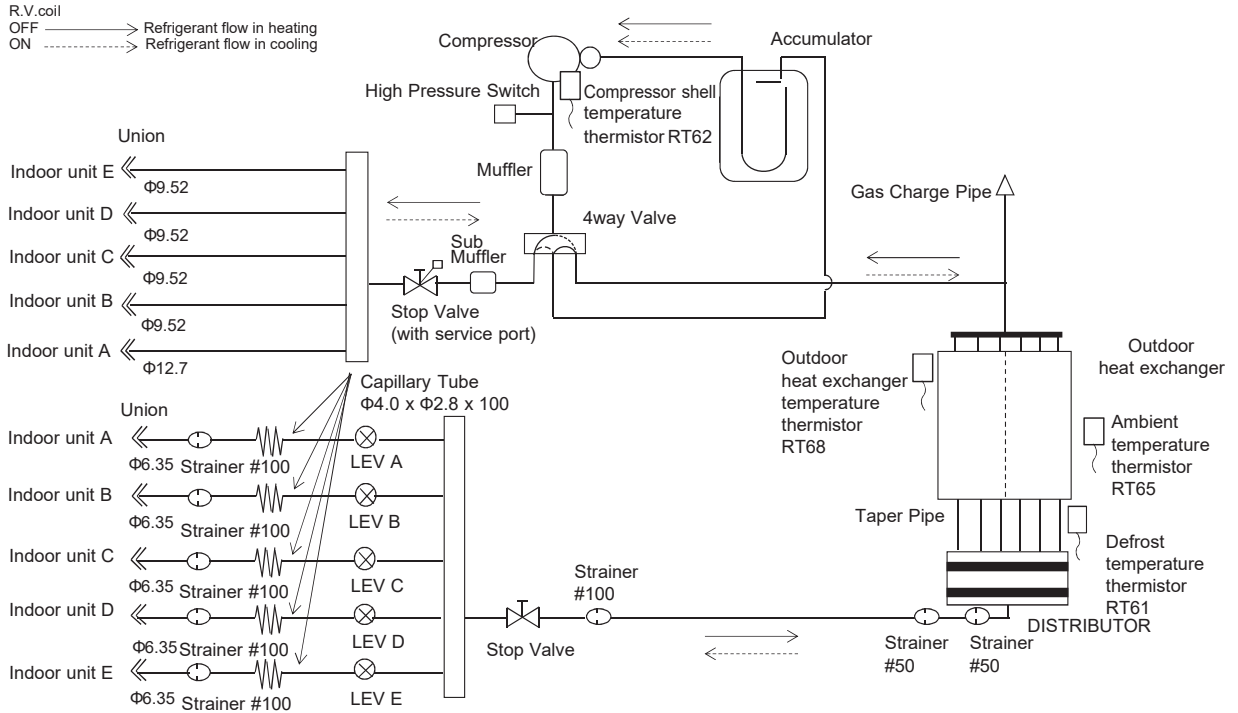


MAX REFRIGERANT PIPING LENGTH

Piping length each indoor unit (a, b, c, d, e)	25 m
Total piping length (a+b+c+d+e)	80 m
Number of bends for each unit	25
Total number of bends	80

*It is irrelevant which unit is higher.

ADDITIONAL REFRIGERANT CHARGE

Outdoor unit precharged (g)	Refrigerant piping length (one way, 5 units total)	
	80 m	
2,400	0	

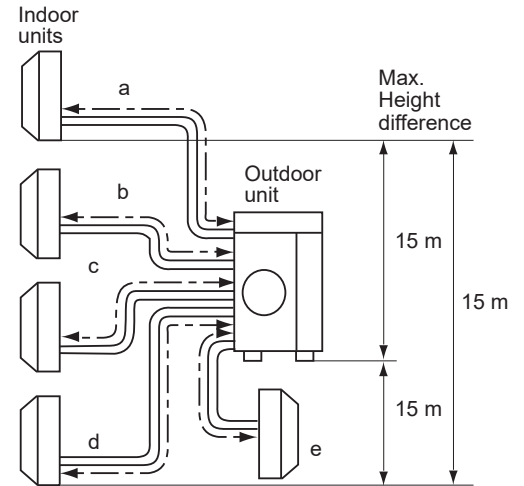


- Refrigerant pipe diameter is different according to indoor unit to be connected. When using extension pipes, refer to the tables below.
- When diameter of refrigerant pipe is different from that of outdoor unit union, use optional Different-diameter pipe. For further information on Different-diameter pipe, refer to "PARTS CATALOG".

Unit: mm (inch)

Outdoor unit union diameter		
For		
Indoor unit A	Liquid	6.35(1/4)
	Gas	12.7(1/2)
Indoor unit B	Liquid	6.35(1/4)
	Gas	9.52(3/8)
Indoor unit C	Liquid	6.35(1/4)
	Gas	9.52(3/8)
Indoor unit D	Liquid	6.35(1/4)
	Gas	9.52(3/8)
Indoor unit E	Liquid	6.35(1/4)
	Gas	9.52(3/8)

MXZ-6F120VF2 MXZ-6F122VF

Unit: mm

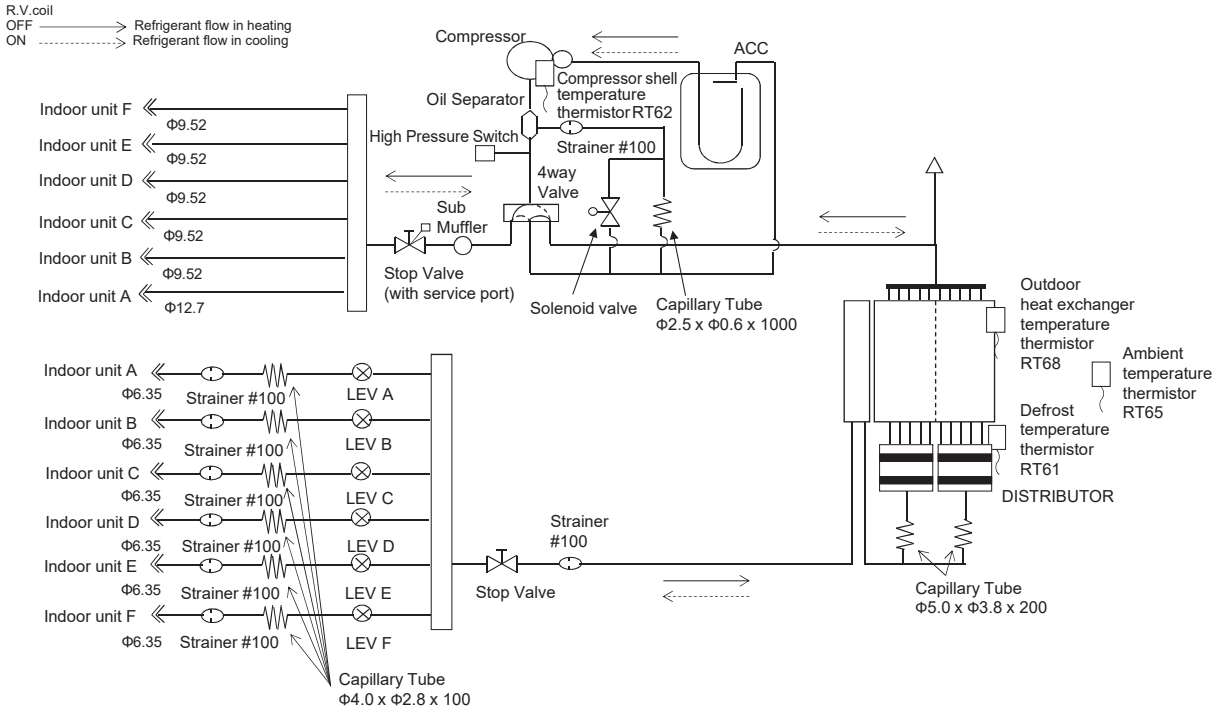


MAX REFRIGERANT PIPING LENGTH

Piping length each indoor unit (a, b, c, d, e, f)	25 m
Total piping length (a+b+c+d+e+f)	80 m
Number of bends for each unit	25
Total number of bends	80

*It is irrelevant which unit is higher.

ADDITIONAL REFRIGERANT CHARGE


Outdoor unit precharged (g)	Refrigerant piping length (one way, 6 units total)	
		80 m
2,400	0	

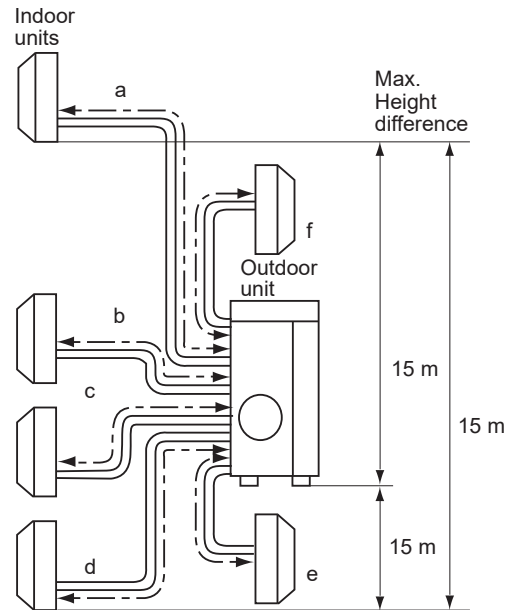

- Refrigerant pipe diameter is different according to indoor unit to be connected. When using extension pipes, refer to the tables below.
- When diameter of refrigerant pipe is different from that of outdoor unit union, use optional Different-diameter pipe. For further information on Different-diameter pipe, refer to "PARTS CATALOG".


Unit: mm (inch)

Outdoor unit union diameter			Outdoor unit union diameter		
For			For		
Indoor unit A	Liquid	6.35(1/4)	Indoor unit D	Liquid	6.35(1/4)
	Gas	12.7(1/2)		Gas	9.52(3/8)
Indoor unit B	Liquid	6.35(1/4)	Indoor unit E	Liquid	6.35(1/4)
	Gas	9.52(3/8)		Gas	9.52(3/8)
Indoor unit C	Liquid	6.35(1/4)	Indoor unit F	Liquid	6.35(1/4)
	Gas	9.52(3/8)		Gas	9.52(3/8)



MXZ-2F53VFHZ MXZ-2F53VFHZ2

Unit: mm

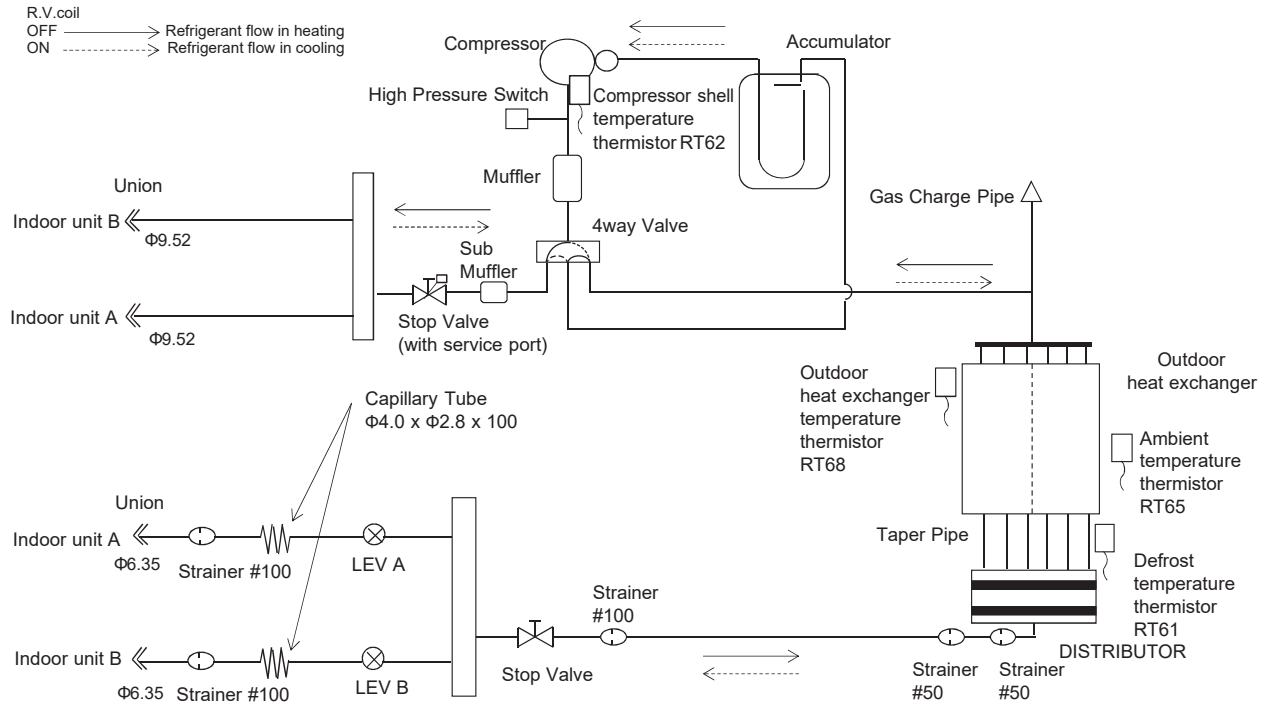


MAX REFRIGERANT PIPING LENGTH

Piping length each indoor unit (a, b)	20 m
Total piping length (a+b)	30 m
Number of bends for each unit	20
Total number of bends	30

*It is irrelevant which unit is higher.

ADDITIONAL REFRIGERANT CHARGE

Outdoor unit precharged (g)	Refrigerant piping length (one way, 2 units total)	
	30 m	
2,400	0	

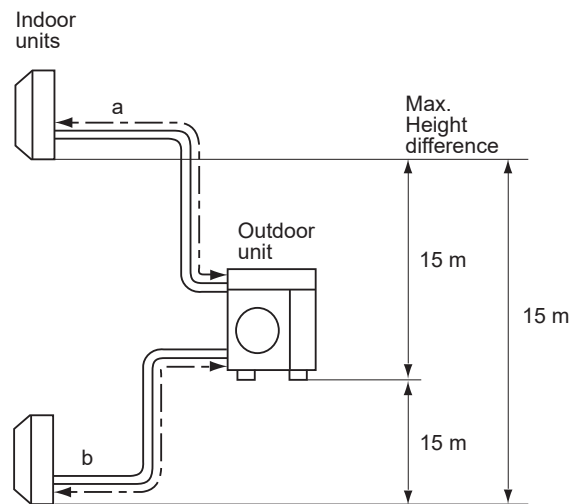


- Refrigerant pipe diameter is different according to indoor unit to be connected. When using extension pipes, refer to the tables below.
- When diameter of refrigerant pipe is different from that of outdoor unit union, use optional Different-diameter pipe. For further information on Different-diameter pipe, refer to "PARTS CATALOG".

Unit: mm (inch)

Outdoor unit union diameter		
For		
Indoor unit A	Liquid	6.35(1/4)
	Gas	9.52(3/8)
Indoor unit B	Liquid	6.35(1/4)
	Gas	9.52(3/8)

MXZ-4F83VFHZ MXZ-4F83VFHZ2

Unit: mm

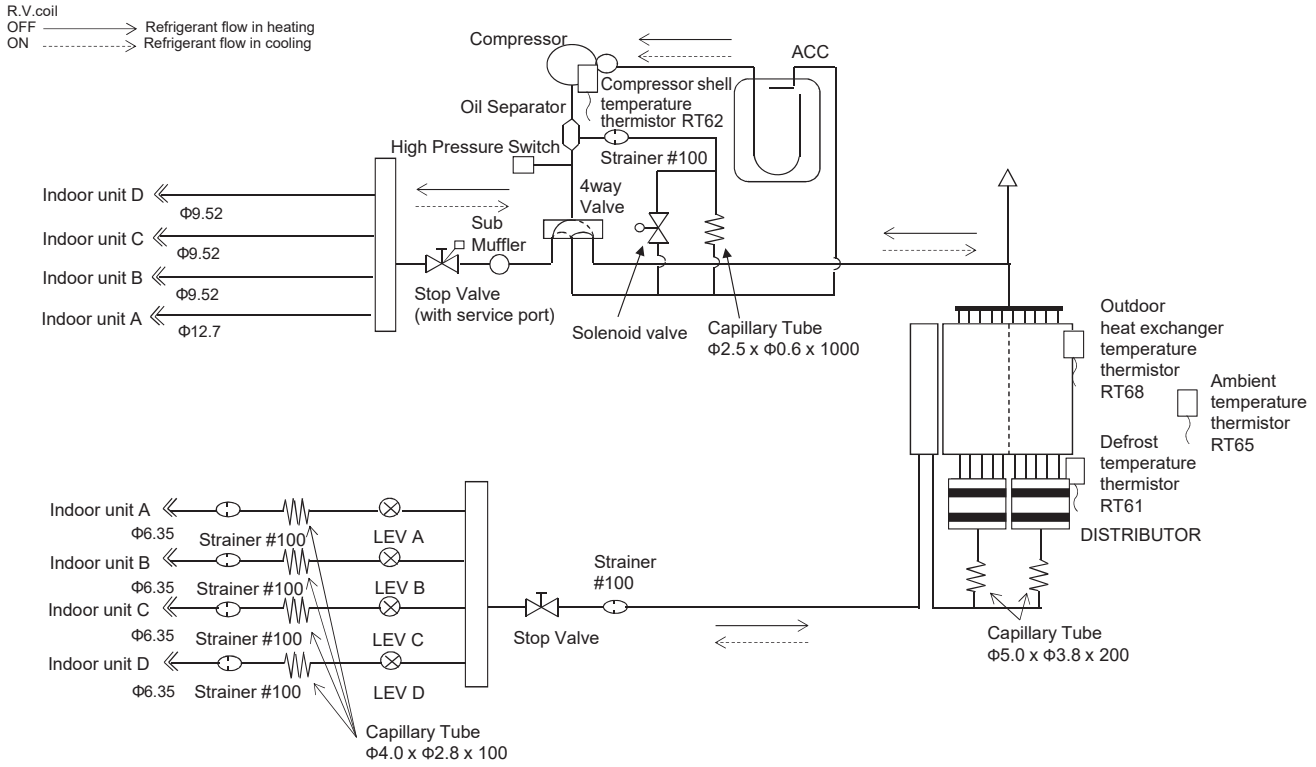


MAX REFRIGERANT PIPING LENGTH

Piping length each indoor unit (a, b, c, d)	25 m
Total piping length (a+b+c+d)	70 m
Number of bends for each unit	25
Total number of bends	70

*It is irrelevant which unit is higher.

ADDITIONAL REFRIGERANT CHARGE

Outdoor unit precharged (g)	Refrigerant piping length (one way, 4 units total)	
		70 m
2,400		0

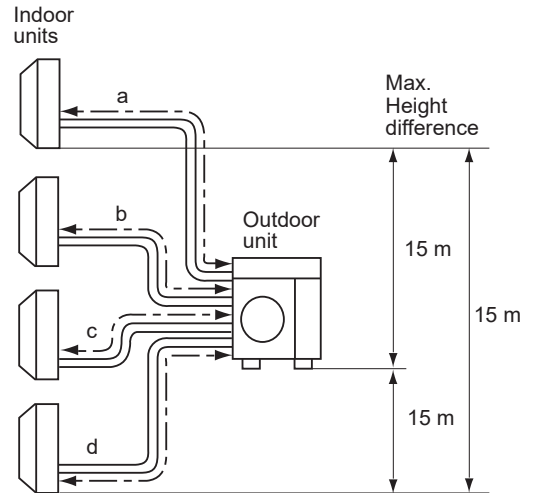

- Refrigerant pipe diameter is different according to indoor unit to be connected. When using extension pipes, refer to the tables below.
- When diameter of refrigerant pipe is different from that of outdoor unit union, use optional Different-diameter pipe. For further information on Different-diameter pipe, refer to "PARTS CATALOG".

Unit: mm (inch)

Outdoor unit union diameter		
For		
Indoor unit A	Liquid	6.35(1/4)
	Gas	12.7(1/2)
Indoor unit B	Liquid	6.35(1/4)
	Gas	9.52(3/8)
Indoor unit C	Liquid	6.35(1/4)
	Gas	9.52(3/8)
Indoor unit D	Liquid	6.35(1/4)
	Gas	9.52(3/8)

Method of Charging refrigerant

■MXZ-3F54VF/3F68VF/4F72VF

Total refrigerant *3 _____ kg	=	Pre charge 1.4 kg	+	Indoor unit number *1 _____ kg	+	Connection of specific I/U *2 _____ kg	+	Piping length 0.0 kg
----------------------------------	---	----------------------	---	-----------------------------------	---	---	---	-------------------------

■MXZ-3F54VF2/3F68VF2/4F72VF2/4F80VF2 ■MXZ-3F54VF3/3F68VF3/4F72VF3/4F80VF3 ■MXZ-3F54VF4/3F68VF4/4F72VF4/4F80VF4

Total refrigerant 2.4 kg	=	Pre charge 2.4 kg	+		+		+	Piping length 0.0 kg
-----------------------------	---	----------------------	---	--	---	--	---	-------------------------

■MXZ-2F42VF/2F53VF/2F53VFH ■MXZ-2F42VF2/2F53VF2/2F53VFH2

Total refrigerant 1.2 kg	=	Pre charge 1.2 kg	+		+		+	Piping length 0.0 kg
-----------------------------	---	----------------------	---	--	---	--	---	-------------------------

■MXZ-2F42VF3/2F53VF3/2F53VFH3 ■MXZ-2F42VF4/2F53VF4/2F53VFH4

Total refrigerant 1.0 kg	=	Pre charge 1.0 kg	+		+		+	Piping length 0.0 kg
-----------------------------	---	----------------------	---	--	---	--	---	-------------------------

■MXZ-2F33VF ■MXZ-2F33VF2

Total refrigerant 1.0 kg	=	Pre charge 1.0 kg	+		+		+	Piping length 0.0 kg
-----------------------------	---	----------------------	---	--	---	--	---	-------------------------

■MXZ-2F33VF3 ■MXZ-2F33VF4

Total refrigerant 0.8 kg	=	Pre charge 0.8 kg	+		+		+	Piping length 0.0 kg
-----------------------------	---	----------------------	---	--	---	--	---	-------------------------

*1 If you connect indoor unit number 3 or 4 units, please add to charge refrigerant amount **0.5kg**

*2 If you connect specific indoor unit(s), please add to charge refrigerant amount **0.17kg per 1unit**

Specific indoor unit is following: MSZ-LN18/25/35VG MLZ-KP25/35/50VF

SEZ-M50DA(L) PCA-M50/60KA

PEAD-M50JA(L)

*3 In case total refrigerant amount exceed **2.4kg** depending on combination, please charge only **1.0kg** for maximum.

PUMPING DOWN

When relocating or disposing of the air conditioner, pump down the system following the procedure below so that no refrigerant is released into the atmosphere.

- 1) Turn off the breaker.
- 2) Connect the gauge manifold valve to the service port of the stop valve on the gas pipe side of the outdoor unit.
- 3) Fully close the stop valve on the liquid pipe side of the outdoor unit.
- 4) Turn on the breaker.
- 5) Start the emergency COOL operation on all the indoor units.
- 6) When the pressure gauge shows 0.05 to 0 MPa [Gauge] (approximately 0.5 to 0 kgf/cm²), fully close the stop valve on the gas pipe side of the outdoor unit and stop the operation. (Refer to the indoor unit installation manual about the method for stopping the operation.)
- * If too much refrigerant has been added to the air conditioner system, the pressure may not drop to 0.05 to 0 MPa [Gauge] (approximately 0.5 to 0 kgf/cm²), or the protection function may operate due to the pressure increase in the high pressure refrigerant circuit. If this occurs, use a refrigerant collecting device to collect all of the refrigerant in the system, and then recharge the system with the correct amount of refrigerant after the indoor and outdoor units have been relocated.
- 7) Turn off the breaker. Remove the pressure gauge and the refrigerant piping.

WARNING

When pumping down the refrigerant, stop the compressor before disconnecting the refrigerant pipes. The compressor may burst and cause injury if any foreign substance, such as air, enters the pipes.

- | | | | |
|-----------------------|-----------------------|---------------------|---------------------|
| MXZ-2F33VF | MXZ-2F42VF | MXZ-2F53VF | MXZ-2F53VFH |
| MXZ-2F33VF2 | MXZ-2F42VF2 | MXZ-2F53VF2 | MXZ-2F53VFH2 |
| MXZ-2F33VF3 | MXZ-2F42VF3 | MXZ-2F53VF3 | MXZ-2F53VFH3 |
| MXZ-2F33VF4 | MXZ-2F42VF4 | MXZ-2F53VF4 | MXZ-2F53VFH4 |
| MXZ-3F54VF | MXZ-3F68VF | MXZ-4F72VF | |
| MXZ-3F54VF2 | MXZ-3F68VF2 | MXZ-4F72VF2 | MXZ-4F80VF2 |
| MXZ-3F54VF3 | MXZ-3F68VF3 | MXZ-4F72VF3 | MXZ-4F80VF3 |
| MXZ-3F54VF4 | MXZ-3F68VF4 | MXZ-4F72VF4 | MXZ-4F80VF4 |
| MXZ-4F83VF | MXZ-5F102VF | MXZ-6F120VF2 | |
| MXZ-4F83VF2 | MXZ-5F102VF2 | MXZ-6F122VF | |
| MXZ-2F53V FHZ | MXZ-4F83V FHZ | | |
| MXZ-2F53V FHZ2 | MXZ-4F83V FHZ2 | | |

The standard specifications apply only to the operation of the air conditioner under normal conditions. Since operating conditions vary according to the areas where these units are installed, the following information has been provided to clarify the operating characteristics of the air conditioner under the conditions indicated by the performance curve.

(1) GUARANTEED VOLTAGE

198 - 264 V 50 Hz

(2) AIR FLOW

Air flow should be set at MAX.


(3) MAIN READINGS

- | | | |
|--|------|-----------|
| (1) Indoor intake air wet-bulb temperature: | °CWB | } Cooling |
| (2) Indoor outlet air wet-bulb temperature: | °CWB | |
| (3) Outdoor intake air dry-bulb temperature: | °CDB | |
| (4) Total input: | W | } Heating |
| (5) Indoor intake air dry-bulb temperature: | °CDB | |
| (6) Outdoor intake air wet-bulb temperature: | °CWB | |
| (7) Total input: | W | |

Indoor air wet and dry bulb temperature difference on the left side of the following chart shows the difference between the indoor intake air wet and dry bulb temperature and the indoor outlet air wet and dry bulb temperature for your reference at service.

How to measure the indoor air wet and dry bulb temperature difference



1. Attach at least 2 sets of wet and dry bulb thermometers to the indoor air intake as shown in the figure, and at least 2 sets of wet and dry bulb thermometers to the indoor air outlet. The thermometers must be attached to the position where air speed is high.
2. Attach at least 2 sets of wet and dry bulb thermometers to the outdoor air intake. Cover the thermometers to prevent direct rays of the sun.
3. Check that the air filter is cleaned.
4. Open windows and doors of room.
5. Press the emergency operation switch once (twice) to start the EMERGENCY COOL (HEAT) MODE.
6. When system stabilizes after more than 15 minutes, measure temperature and take an average temperature.
7. 10 minutes later, measure temperature again and check that the temperature does not change.

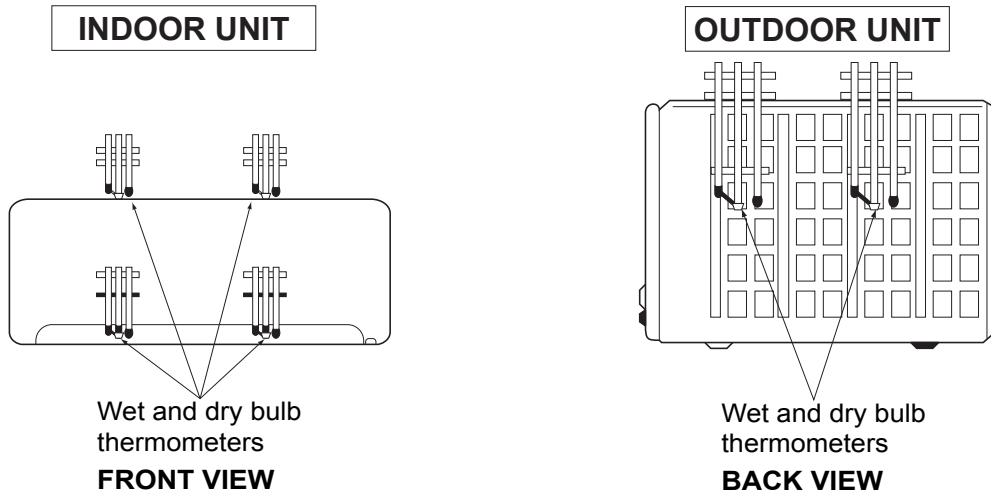



9-1. CAPACITY AND THE INPUT CURVES

MXZ-2F33VF MXZ-2F42VF MXZ-2F53VF MXZ-2F53VFH
MXZ-2F33VF2 MXZ-2F42VF2 MXZ-2F53VF2 MXZ-2F53VFH2
MXZ-2F33VF3 MXZ-2F42VF3 MXZ-2F53VF3 MXZ-2F53VFH3
MXZ-2F33VF4 MXZ-2F42VF4 MXZ-2F53VF4 MXZ-2F53VFH4

5.8	4.1	7.4	5.2	5.9	8.7	11.1	12.8
5.4	3.8	6.8	4.8	5.5	8.0	10.2	11.6
4.9	3.5	6.2	4.4	5.0	7.3	9.3	10.5
4.5	3.2	5.7	4.0	4.6	6.6	8.3	9.5
4.0	2.9	5.1	3.6	4.1	5.9	7.5	8.5
3.6	2.6	4.5	3.2	3.7	5.3	6.6	7.5
3.2	2.3	4.0	2.8	3.2	4.6	5.8	6.6
2.8	2.0	3.5	2.4	2.8	4.0	5.0	5.6
15 class	18 class	20 class	22 class	25 class	35 class (MXZ-2F42VF)	42 class (MXZ-2F53)	50 class (MXZ-2F53)

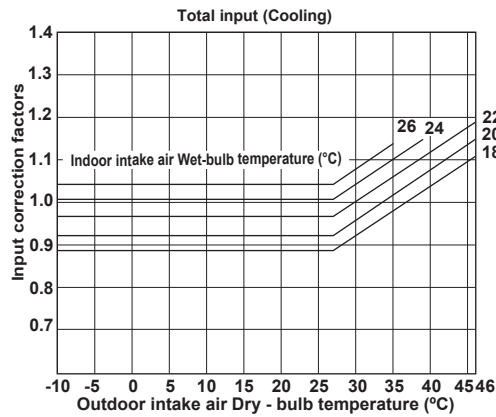
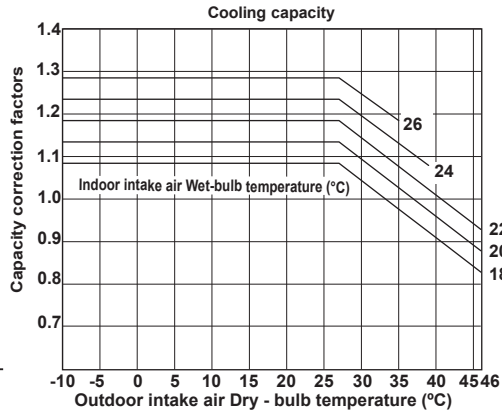


17.6	19.5	21.2	19.5	21.3	22.2	26.6	26.7
16.3	18.1	19.7	18.1	19.8	20.6	24.7	24.8
15.1	16.7	18.2	16.7	18.3	19.0	22.8	22.9
13.8	15.3	16.7	15.3	16.7	17.4	20.9	21.0
12.6	13.9	15.2	13.9	15.2	15.8	19.0	19.1
11.3	12.6	13.6	12.6	13.7	14.3	17.1	17.1
10.1	11.2	12.1	11.2	12.2	12.7	15.2	15.2
8.8	9.8	10.6	9.8	10.7	11.1	13.3	13.3
7.5	8.4	9.1	8.4	9.1	9.5	11.4	11.4
6.3	7.0	7.6	7.0	7.6	7.9	9.5	9.5
5.0	5.6	6.1	5.6	6.1	6.3	7.6	7.6
15 class	18 class	20 class	22 class	25 class	35 class (MXZ-2F42VF)	42 class (MXZ-2F53)	50 class (MXZ-2F53)

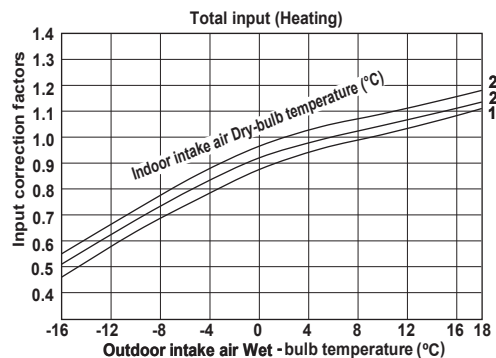
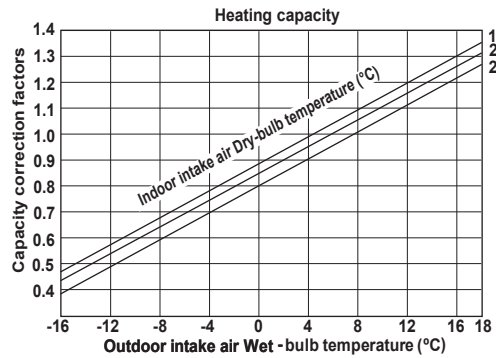


MXZ-3F54VF MXZ-3F68VF MXZ-4F72VF
MXZ-3F54VF2 MXZ-3F68VF2 MXZ-4F72VF2 MXZ-4F80VF2
MXZ-3F54VF3 MXZ-3F68VF3 MXZ-4F72VF3 MXZ-4F80VF3
MXZ-3F54VF4 MXZ-3F68VF4 MXZ-4F72VF4 MXZ-4F80VF4

5.8	4.1	7.4	5.2	5.9	8.7	11.1	12.8	8.7
5.4	3.8	6.8	4.8	5.5	8.0	10.2	11.6	8.0
4.9	3.5	6.2	4.4	5.0	7.3	9.3	10.5	7.3
4.5	3.2	5.7	4.0	4.6	6.6	8.3	9.5	6.6
4.0	2.9	5.1	3.6	4.1	5.9	7.5	8.5	5.9
3.6	2.6	4.5	3.2	3.7	5.3	6.6	7.5	5.3
3.2	2.3	4.0	2.8	3.2	4.6	5.8	6.6	4.6
2.8	2.0	3.5	2.4	2.8	4.0	5.0	5.6	4.0
15 class	18 class	20 class	22 class	25 class	35 class	42 class	50 class	60 class

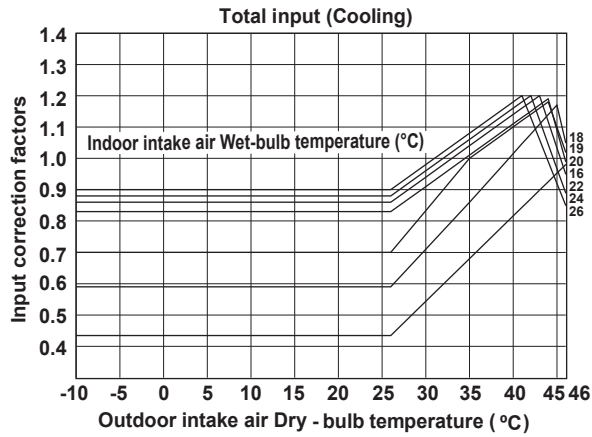
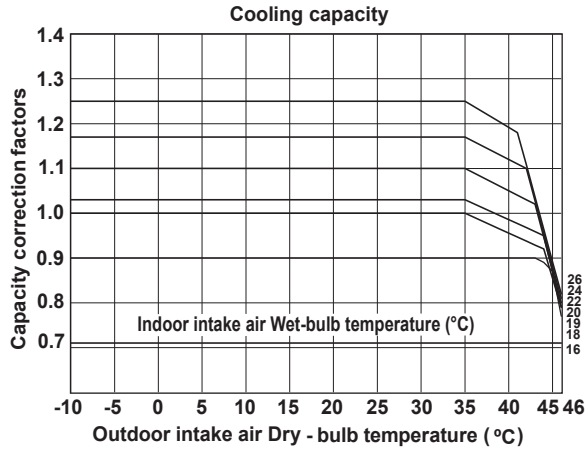


17.6	19.5	21.2	19.5	21.3	22.2	29.9	38.4	30.9
16.3	18.1	19.7	18.1	19.8	20.6	27.8	35.7	28.7
15.1	16.7	18.2	16.7	18.3	19.0	25.7	32.9	26.5
13.8	15.3	16.7	15.3	16.7	17.4	23.5	30.2	24.3
12.6	13.9	15.2	13.9	15.2	15.8	21.4	27.4	22.1
11.3	12.6	13.6	12.6	13.7	14.3	19.2	24.7	19.9
10.1	11.2	12.1	11.2	12.2	12.7	17.1	21.9	17.7
8.8	9.8	10.6	9.8	10.7	11.1	15.0	19.2	15.5
7.5	8.4	9.1	8.4	9.1	9.5	12.8	16.5	13.2
6.3	7.0	7.6	7.0	7.6	7.9	10.7	13.7	11.0
5.0	5.6	6.1	5.6	6.1	6.3	8.6	11.0	8.8
15 class	18 class	20 class	22 class	25 class	35 class	42 class	50 class	60 class

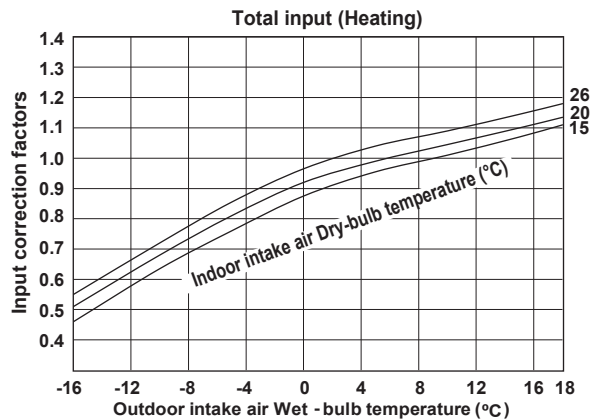
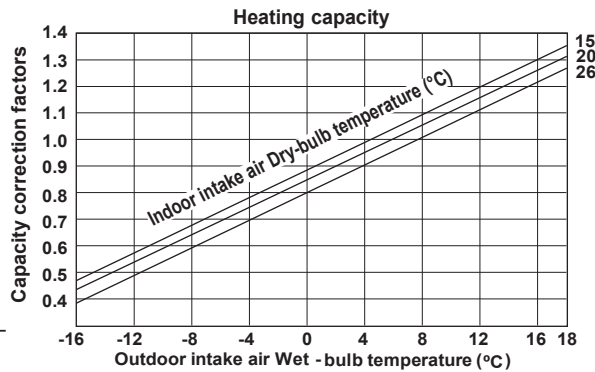


MXZ-4F83VF MXZ-4F83VF2 MXZ-5F102VF MXZ-5F102VF2

5.4	3.8	6.8	4.8	5.0	7.3	9.0	9.9	8.2	8.6
4.9	3.5	6.2	4.4	4.6	6.7	8.2	9.0	7.5	7.9
4.5	3.2	5.7	4.0	4.2	6.0	7.4	8.1	6.8	7.1
4.0	2.9	5.1	3.6	3.8	5.4	6.7	7.3	6.1	6.4
3.6	2.6	4.5	3.2	3.4	5.8	5.9	6.4	5.4	5.7
3.2	2.3	4.0	2.8	3.0	4.2	5.2	5.6	4.7	5.0
2.8	2.0	3.5	2.5	2.6	3.7	4.5	4.9	4.1	4.3
15 class	18 class	20 class	22 class	25 class	35 class	42 class	50 class	60 class	71 class

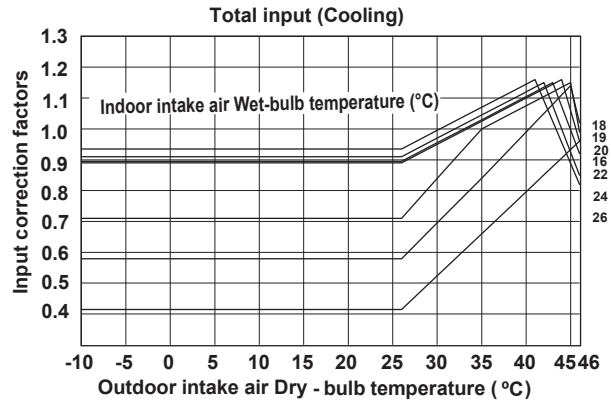
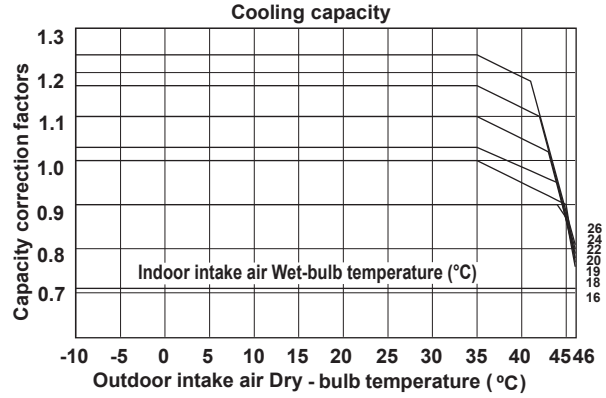


17.9	19.2	21.5	19.2	17.7	22.1	27.5	29.5	27.0	28.9
16.6	17.8	20.5	17.8	16.4	20.6	25.6	27.5	25.0	26.9
15.3	16.5	18.4	16.5	15.2	19.0	23.6	25.4	23.1	24.8
14.0	15.1	16.9	15.1	13.9	17.4	21.6	23.2	21.2	22.7
12.9	13.9	15.6	13.9	12.8	16.0	19.9	21.4	19.5	20.9
11.6	12.5	14.0	12.5	11.5	14.4	17.9	19.2	17.5	18.8
10.3	11.1	12.4	11.1	10.2	12.8	15.9	17.1	15.6	16.7
9.0	9.7	10.9	9.7	9.0	11.2	13.9	15.0	13.6	14.6
7.8	8.4	9.4	8.4	7.8	9.7	12.1	13.0	11.8	12.7
6.5	7.0	7.9	7.0	6.5	8.1	10.1	10.8	9.9	10.6
5.2	5.5	6.3	5.6	5.2	6.5	8.1	8.7	7.9	8.5
15 class	18 class	20 class	22 class	25 class	35 class	42 class	50 class	60 class	71 class

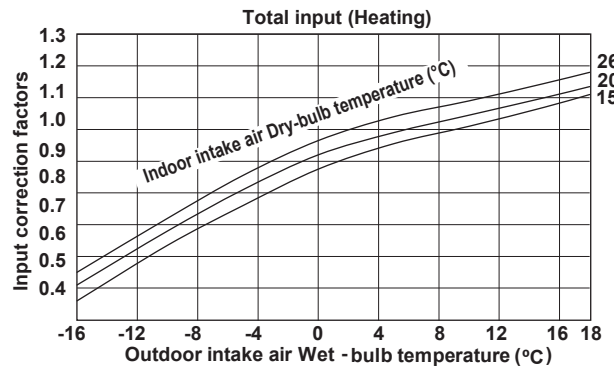
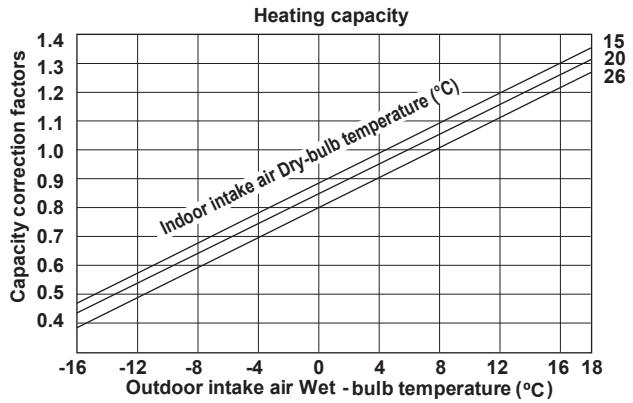


MXZ-6F120VF2 MXZ-6F122VF

Indoor air Wet-bulb temperature difference (°C)	15 class	18 class	20 class	22 class	25 class	35 class	42 class	50 class	60 class	71 class
5.4	3.8	6.8	4.8	5.0	7.3	9.0	9.9	8.2	8.6	
4.9	3.5	6.2	4.4	4.6	6.7	8.2	9.0	7.5	7.9	
4.5	3.2	5.7	4.0	4.2	6.0	7.4	8.1	6.8	7.1	
4.0	2.9	5.1	3.6	3.8	5.4	6.7	7.3	6.1	6.4	
3.6	2.6	4.5	3.2	3.4	5.8	5.9	6.4	5.4	5.7	
3.2	2.3	4.0	2.8	3.0	4.2	5.2	5.6	4.7	5.0	
2.8	2.0	3.5	2.5	2.6	3.7	4.5	4.9	4.1	4.3	

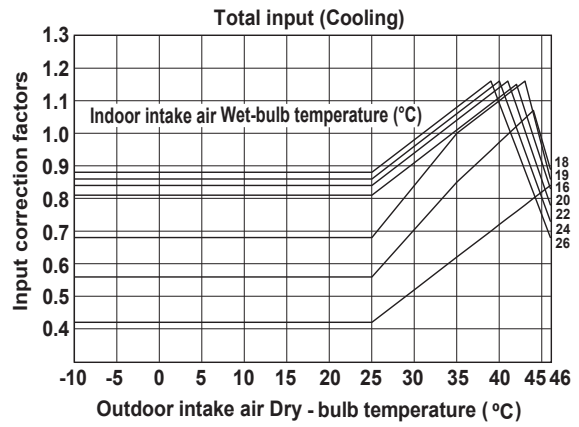
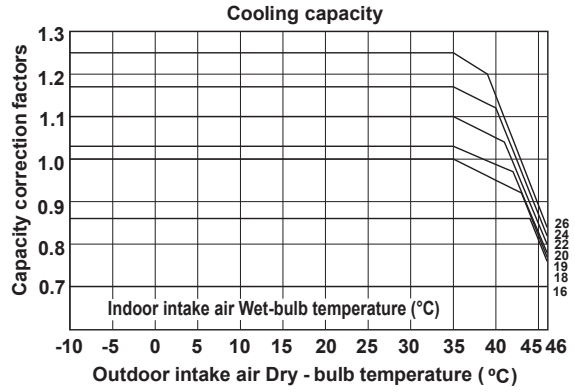


Indoor air Dry-bulb temperature difference (°C)	15 class	18 class	20 class	22 class	25 class	35 class	42 class	50 class	60 class	71 class
17.9	19.2	21.5	19.2	17.7	22.1	27.5	29.5	27.0	28.9	
16.6	17.8	20.5	17.8	16.4	20.6	25.6	27.5	25.0	26.9	
15.3	16.5	18.4	16.5	15.2	19.0	23.6	25.4	23.1	24.8	
14.0	15.1	16.9	15.1	13.9	17.4	21.6	23.2	21.2	22.7	
12.9	13.9	15.6	13.9	12.8	16.0	19.9	21.4	19.5	20.9	
11.6	12.5	14.0	12.5	11.5	14.4	17.9	19.2	17.5	18.8	
10.3	11.1	12.4	11.1	10.2	12.8	15.9	17.1	15.6	16.7	
9.0	9.7	10.9	9.7	9.0	11.2	13.9	15.0	13.6	14.6	
7.8	8.4	9.4	8.4	7.8	9.7	12.1	13.0	11.8	12.7	
6.5	7.0	7.9	7.0	6.5	8.1	10.1	10.8	9.9	10.6	
5.2	5.5	6.3	5.6	5.2	6.5	8.1	8.7	7.9	8.5	

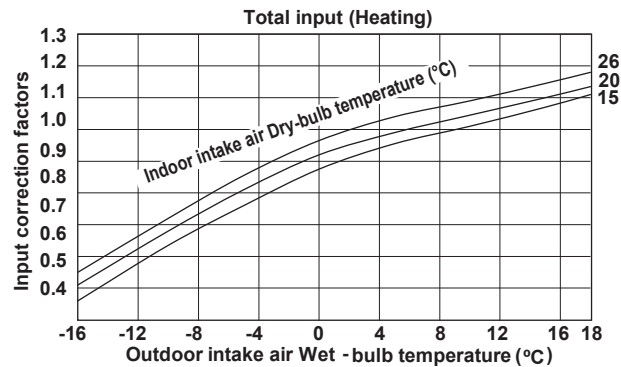
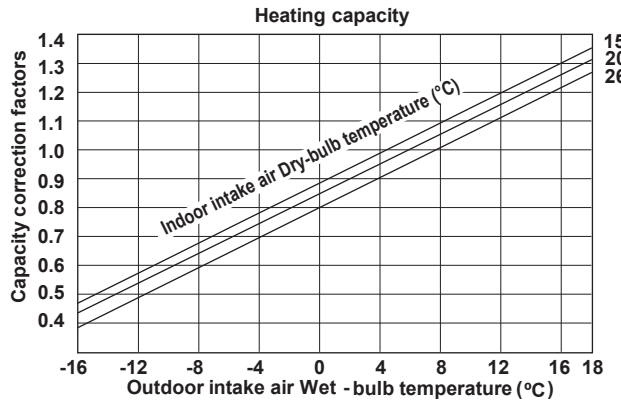


MXZ-2F53VFHZ MXZ-2F53VFHZ2

5.4	3.8	6.8	4.8	5.0	7.3	9.0	9.9
4.9	3.5	6.2	4.4	4.6	6.7	8.2	9.0
4.5	3.2	5.7	4.0	4.2	6.0	7.4	8.1
4.0	2.9	5.1	3.6	3.8	5.4	6.7	7.3
3.6	2.6	4.5	3.2	3.4	4.8	5.9	6.4
3.2	2.3	4.0	2.8	3.0	4.2	5.2	5.6
2.8	2.0	3.5	2.5	2.6	3.7	4.5	4.9
15 class	18 class	20 class	22 class	25 class	35 class	42 class	50 class

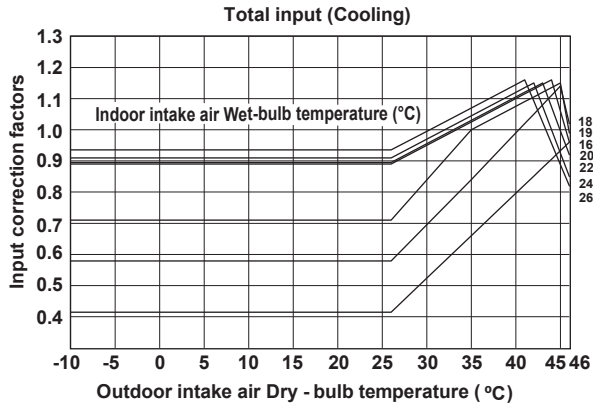
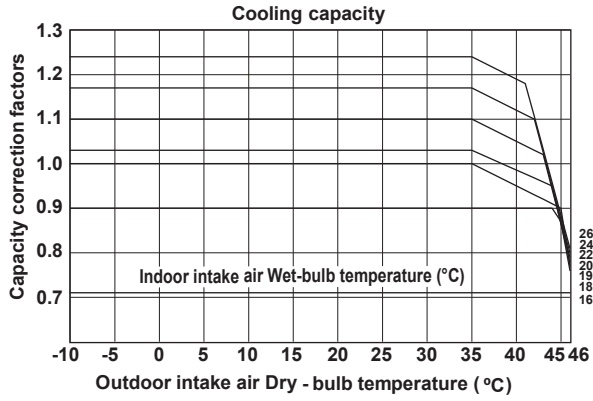


17.9	19.2	21.5	19.2	17.7	22.1	27.5	29.6
16.6	17.8	20.0	17.8	16.4	20.6	25.6	27.5
15.3	16.5	18.4	16.5	15.2	19.0	23.6	25.4
14.0	15.1	16.9	15.1	13.9	17.4	21.6	23.2
12.9	13.9	15.6	13.9	12.8	16.0	19.9	21.4
11.6	12.5	14.0	12.5	11.5	14.4	17.9	19.2
10.3	11.1	12.4	11.1	10.2	12.8	15.9	17.1
9.0	9.7	10.9	9.7	9.0	11.2	13.9	15.0
7.8	8.4	9.4	8.4	7.8	9.7	12.1	13.0
6.5	7.0	7.9	7.0	6.5	8.1	10.1	10.8
15 class	18 class	20 class	22 class	25 class	35 class	42 class	50 class

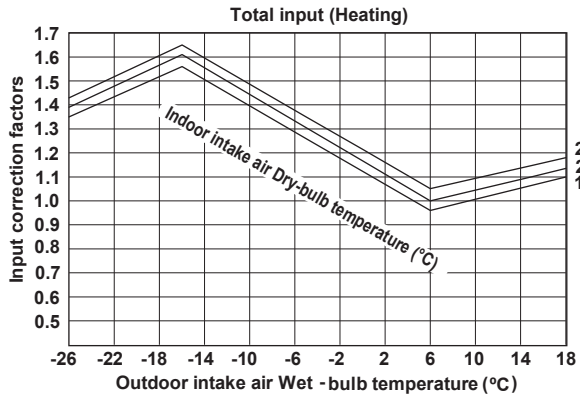
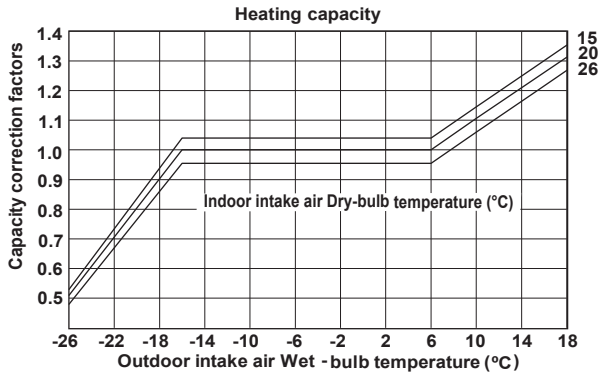


MXZ-4F83VFHZ MXZ-4F83VFHZ2

5.4	3.8	6.8	4.8	5.0	7.3	9.0	9.9	8.2	8.6
4.9	3.5	6.2	4.4	4.6	6.7	8.2	9.0	7.5	7.9
4.5	3.2	5.7	4.0	4.2	6.0	7.4	8.1	6.8	7.1
4.0	2.9	5.1	3.6	3.8	5.4	6.7	7.3	6.1	6.4
3.6	2.6	4.5	3.2	3.4	5.8	5.9	6.4	5.4	5.7
3.2	2.3	4.0	2.8	3.0	4.2	5.2	5.6	4.7	5.0
2.8	2.0	3.5	2.5	2.6	3.7	4.5	4.9	4.1	4.3
15 class	18 class	20 class	22 class	25 class	35 class	42 class	50 class	60 class	71 class

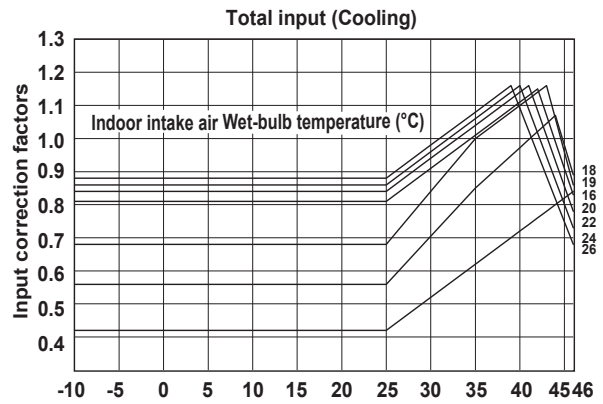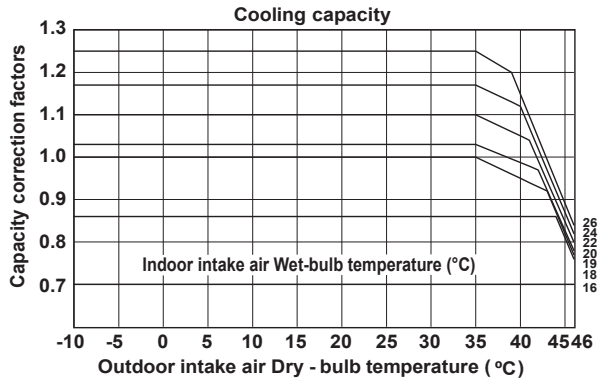


17.9	19.2	21.5	19.2	17.7	22.1	27.5	29.5	27.0	28.9
16.6	17.8	20.5	17.8	16.4	20.6	25.6	27.5	25.0	26.9
15.3	16.5	18.4	16.5	15.2	19.0	23.6	25.4	23.1	24.8
14.0	15.1	16.9	15.1	13.9	17.4	21.6	23.2	21.2	22.7
12.9	13.9	15.6	13.9	12.8	16.0	19.9	21.4	19.5	20.9
11.6	12.5	14.0	12.5	11.5	14.4	17.9	19.2	17.5	18.8
10.3	11.1	12.4	11.1	10.2	12.8	15.9	17.1	15.6	16.7
9.0	9.7	10.9	9.7	9.0	11.2	13.9	15.0	13.6	14.6
7.8	8.4	9.4	8.4	7.8	9.7	12.1	13.0	11.8	12.7
6.5	7.0	7.9	7.0	6.5	8.1	10.1	10.8	9.9	10.6
5.2	5.5	6.3	5.6	5.2	6.5	8.1	8.7	7.9	8.5
15 class	18 class	20 class	22 class	25 class	35 class	42 class	50 class	60 class	71 class

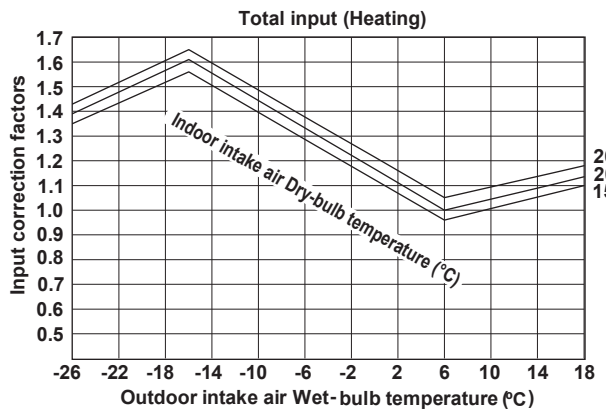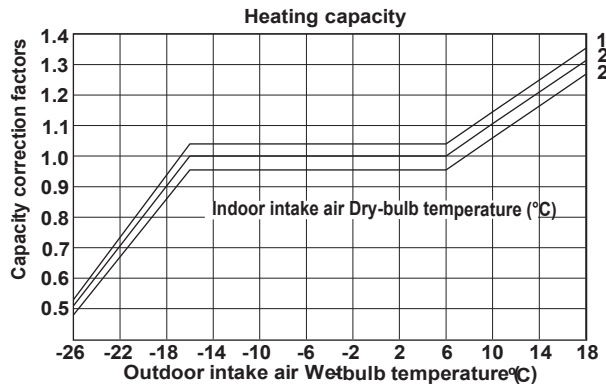


**9-2. CAPACITY AND INPUT CORRECTION BY INVERTER OUTPUT FREQUENCY (single operation)
MXZ-2F33VF MXZ-2F33VF2 MXZ-2F33VF3 MXZ-2F33VF4**


15-class unit

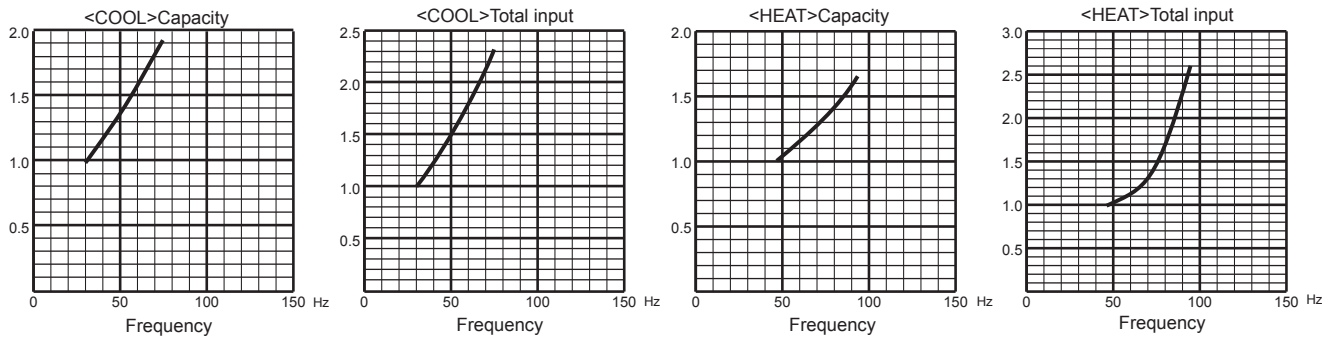


18-class unit

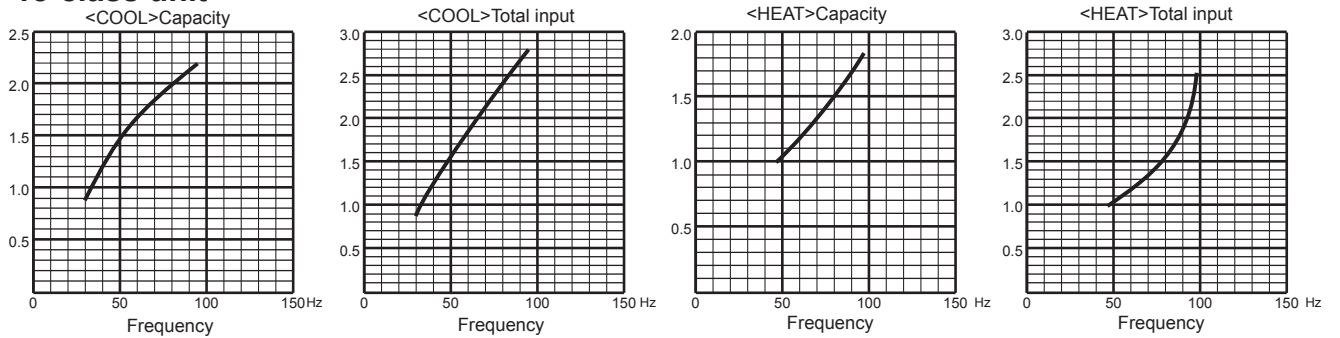


20-class unit

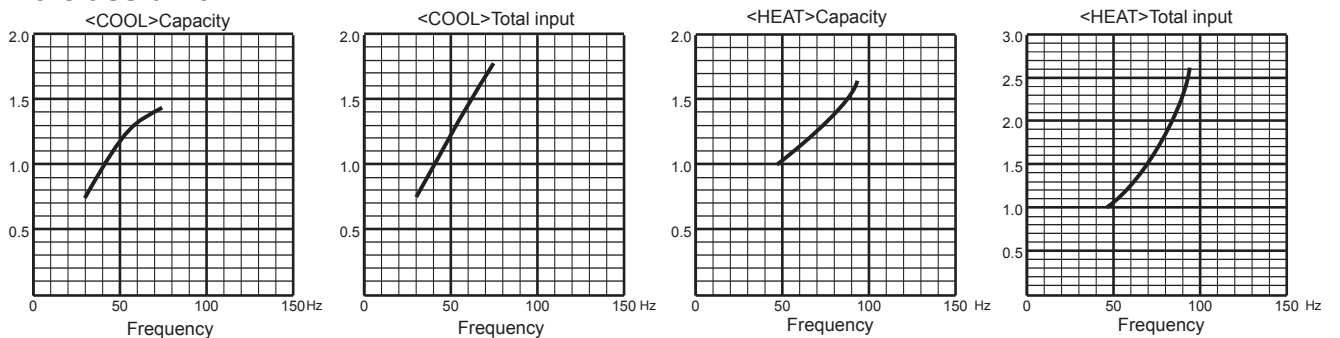

22-class unit

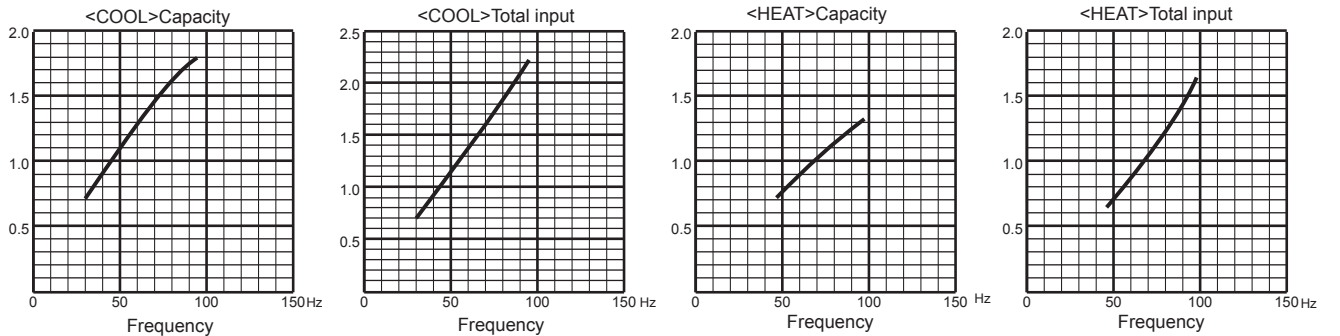


25-class unit

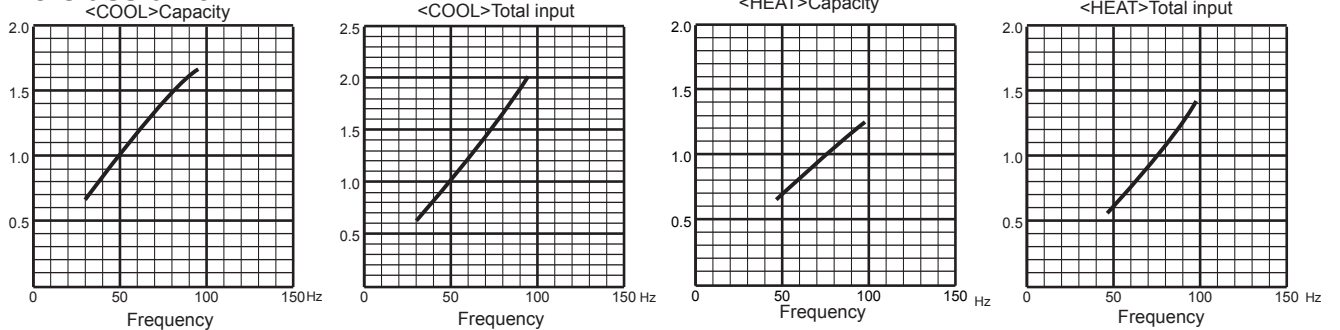


MXZ-2F42VF MXZ-2F42VF2 MXZ-2F42VF3 MXZ-2F42VF4


15-class unit

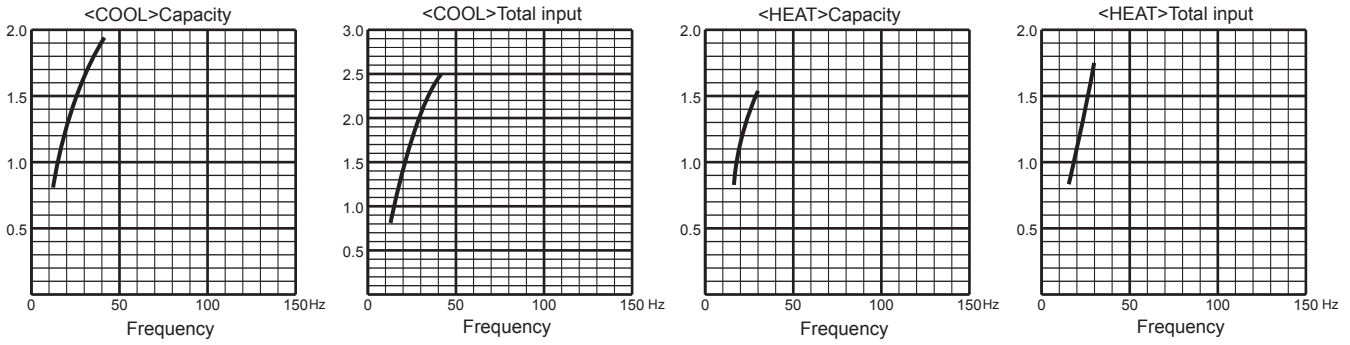


18-class unit

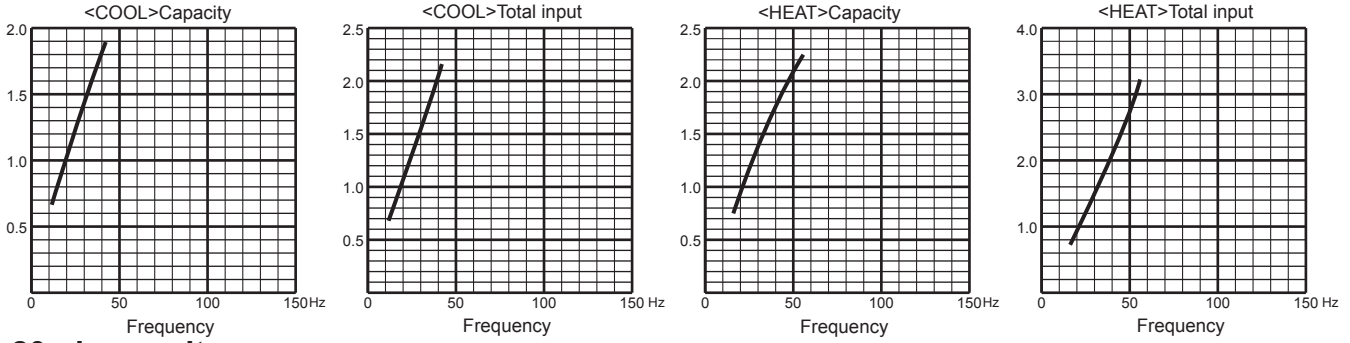


20-class unit

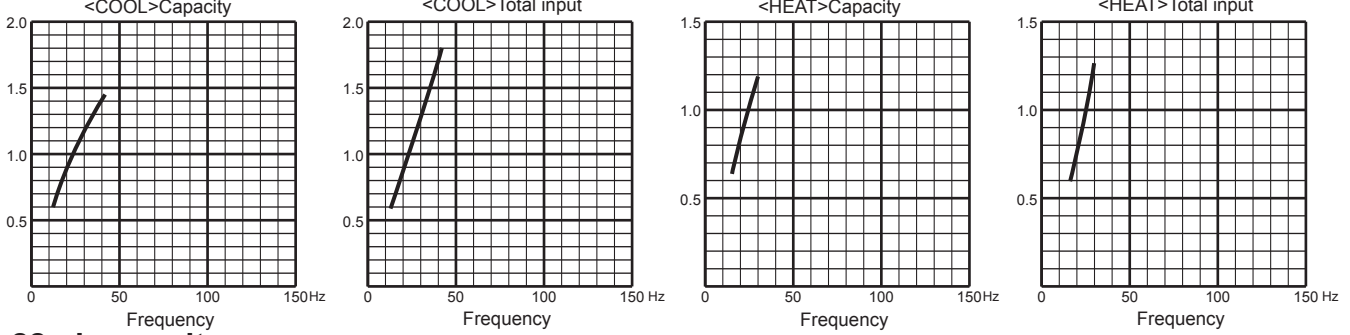

22-class unit

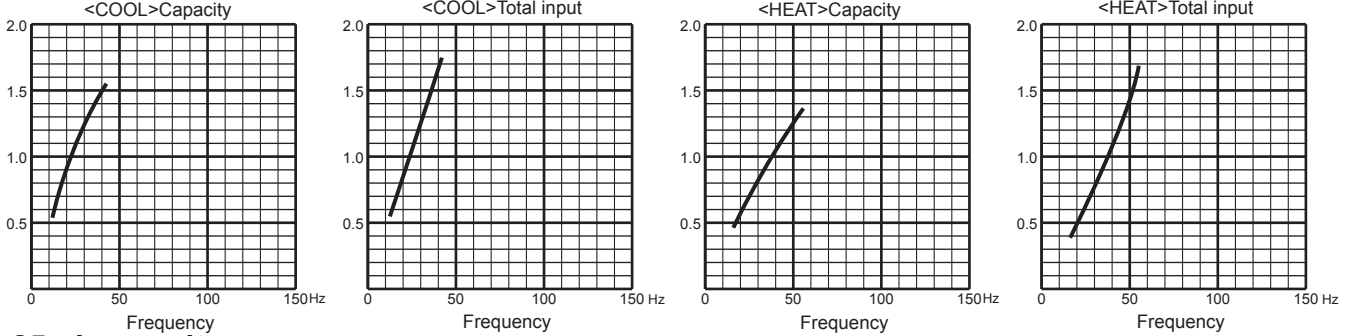


25-class unit

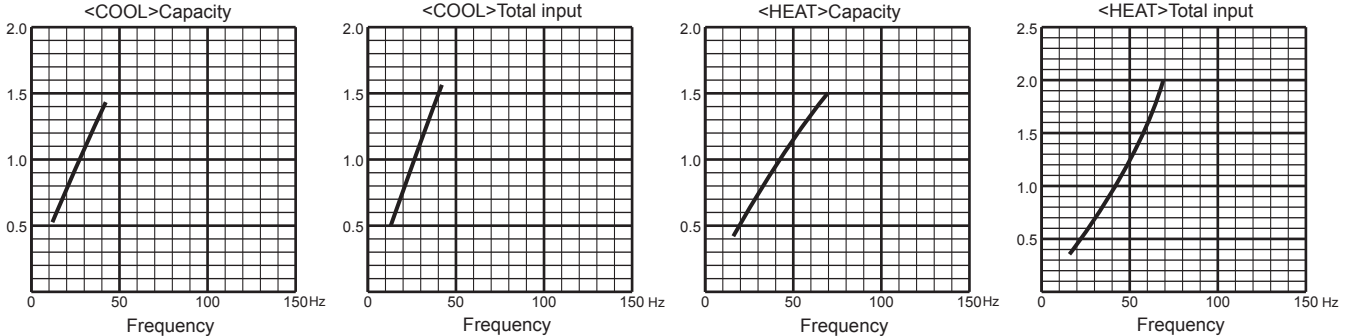


MXZ-2F42VF MXZ-2F42VF2 MXZ-2F42VF3 MXZ-2F42VF4

35-class unit

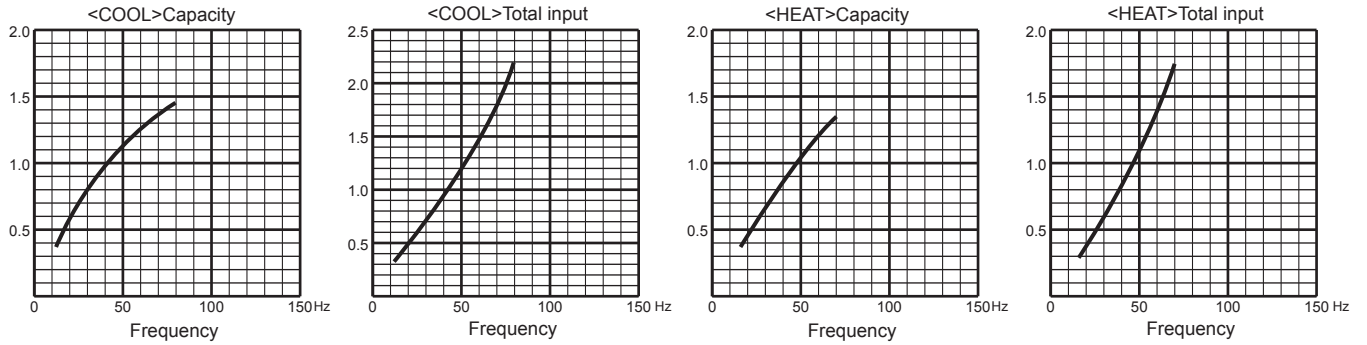


**MXZ-2F53VF MXZ-2F53VF2 MXZ-2F53VF3 MXZ-2F53VF4 MXZ-2F53VFH MXZ-2F53VFH2
MXZ-2F53VFH3 MXZ-2F53VFH4**


15-class unit

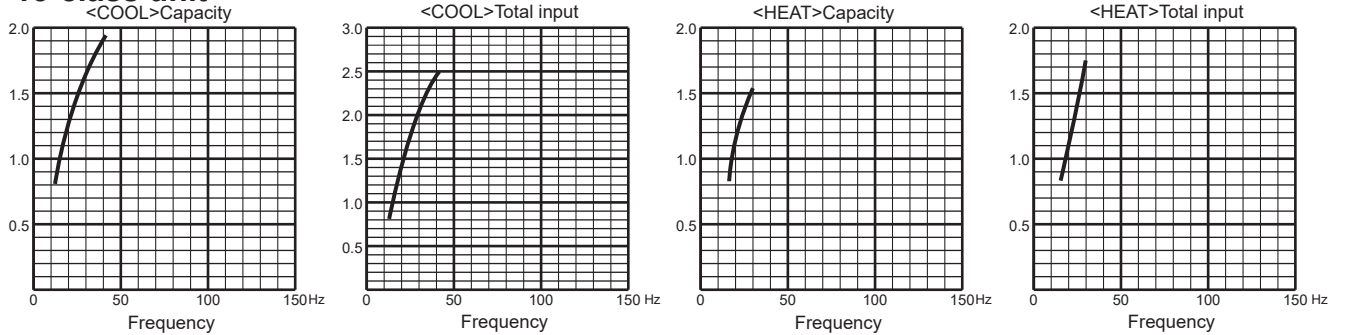

18-class unit

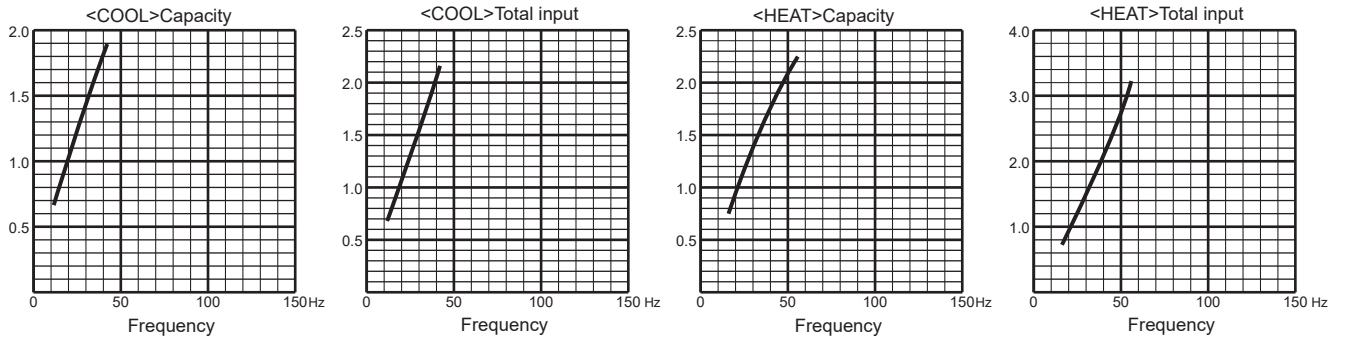


20-class unit

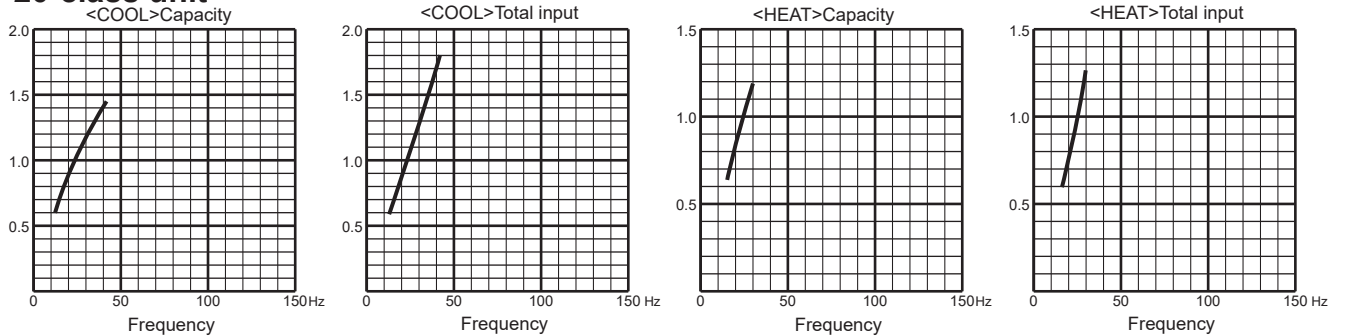


**MXZ-2F53VF MXZ-2F53VF2 MXZ-2F53VF3 MXZ-2F53VF4 MXZ-2F53VFH MXZ-2F53VFH2
MXZ-2F53VFH3 MXZ-2F53VFH4**


22-class unit

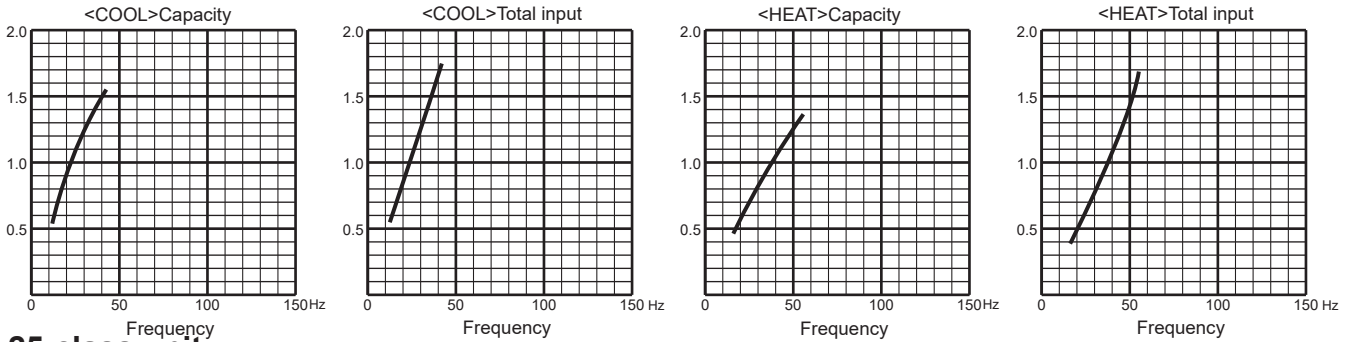


25-class unit

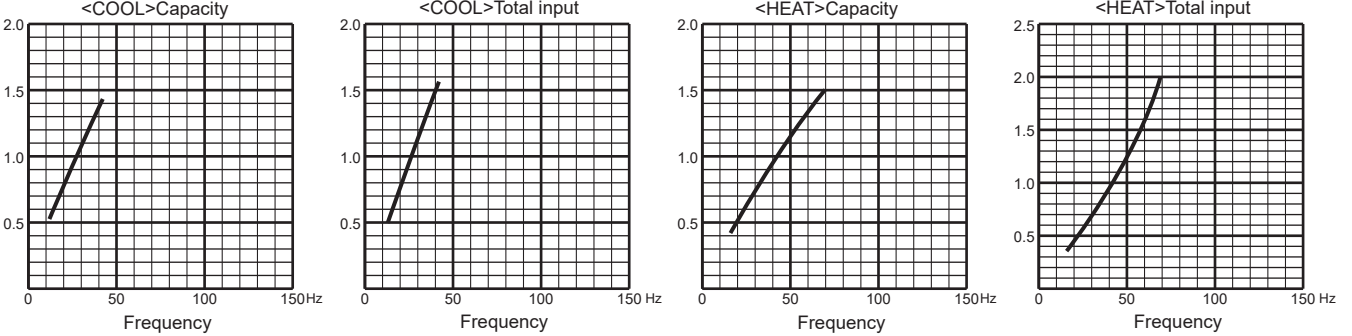


35-class unit

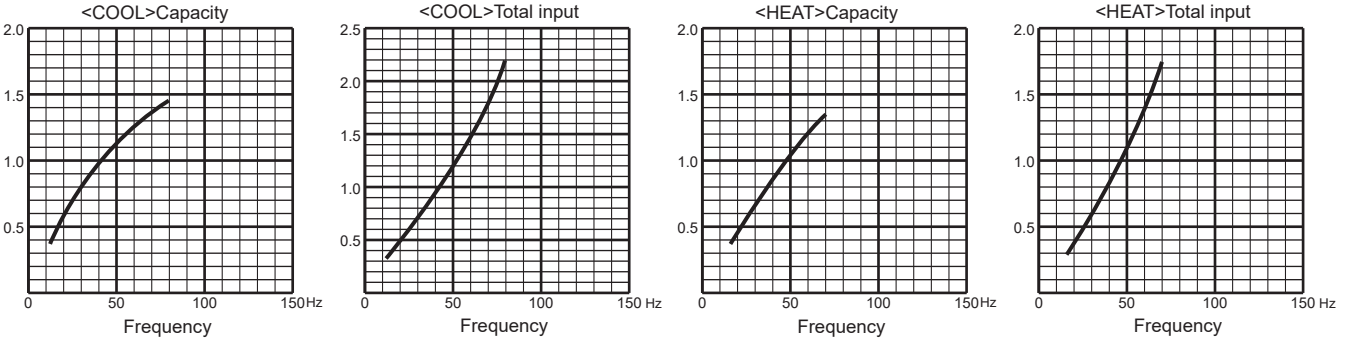

42-class unit

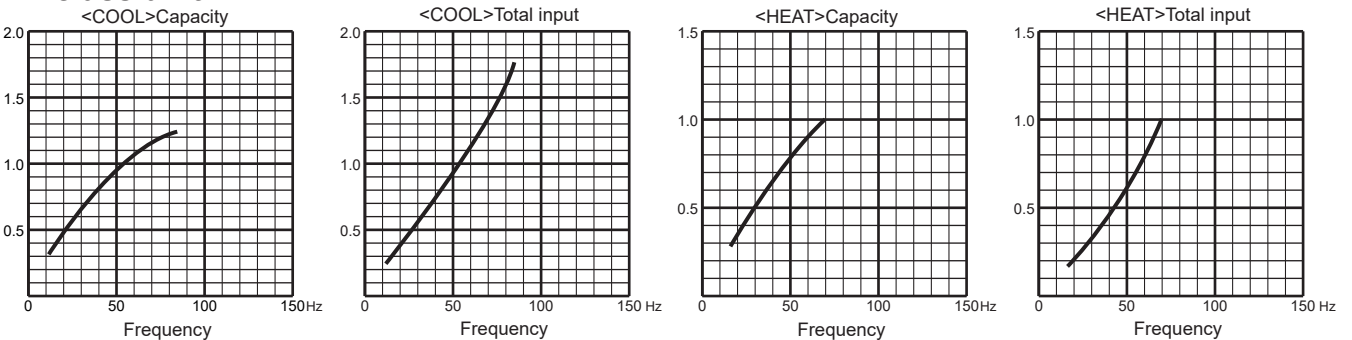


50-class unit

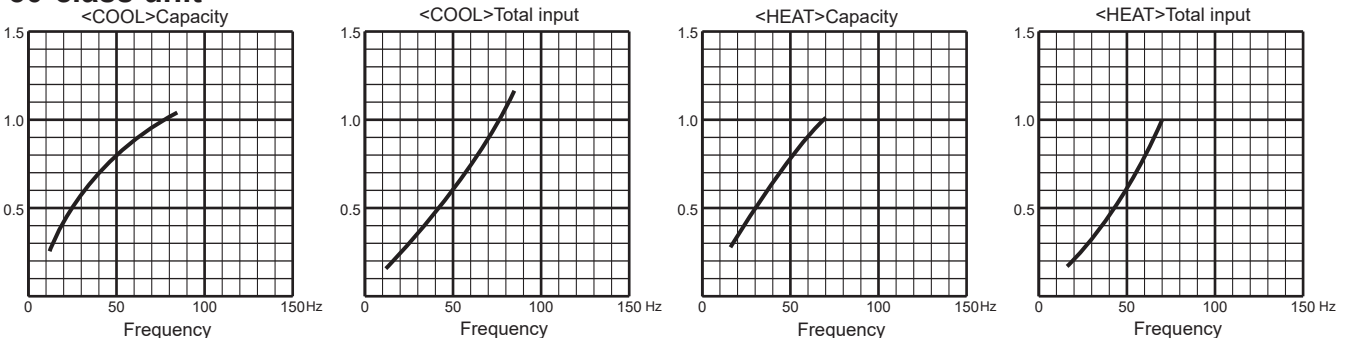


MXZ-3F54VF MXZ-3F54VF2 MXZ-3F54VF3 MXZ-3F54VF4


15-class unit

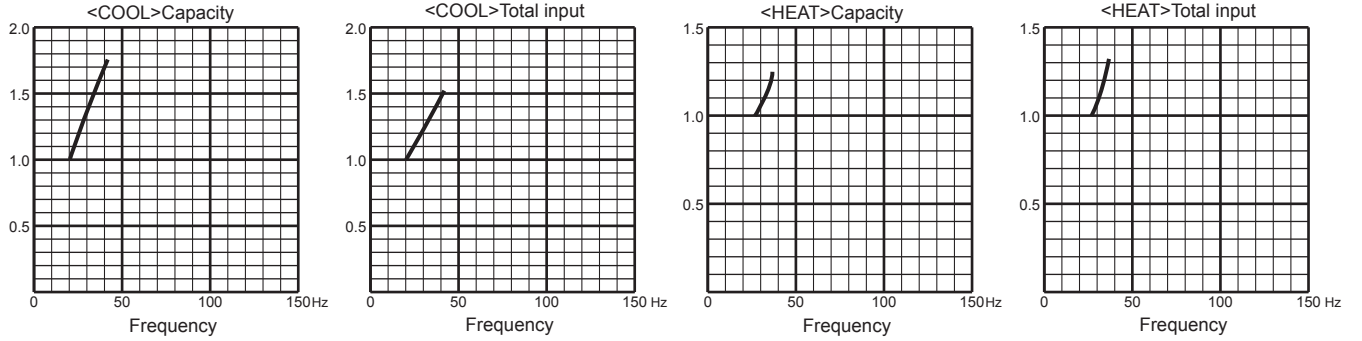


18-class unit

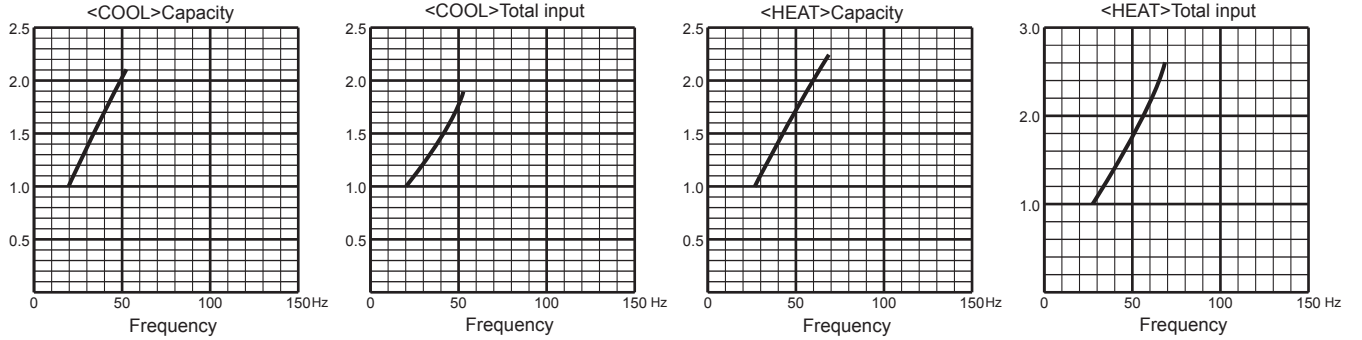

20-class unit

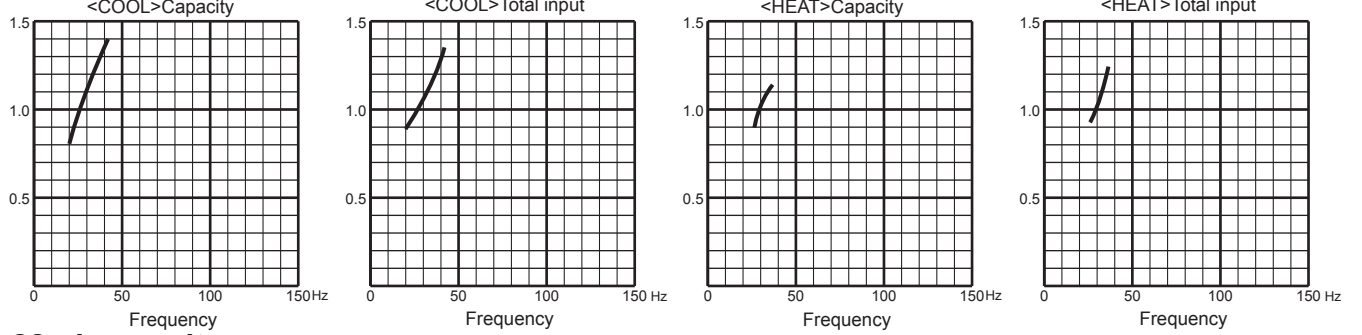


22-class unit

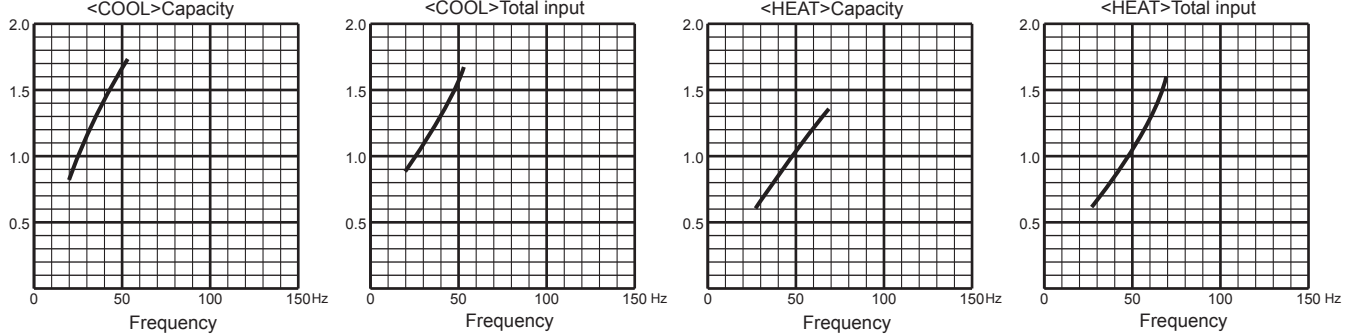


MXZ-3F54VF MXZ-3F54VF2 MXZ-3F54VF3 MXZ-3F54VF4


25-class unit

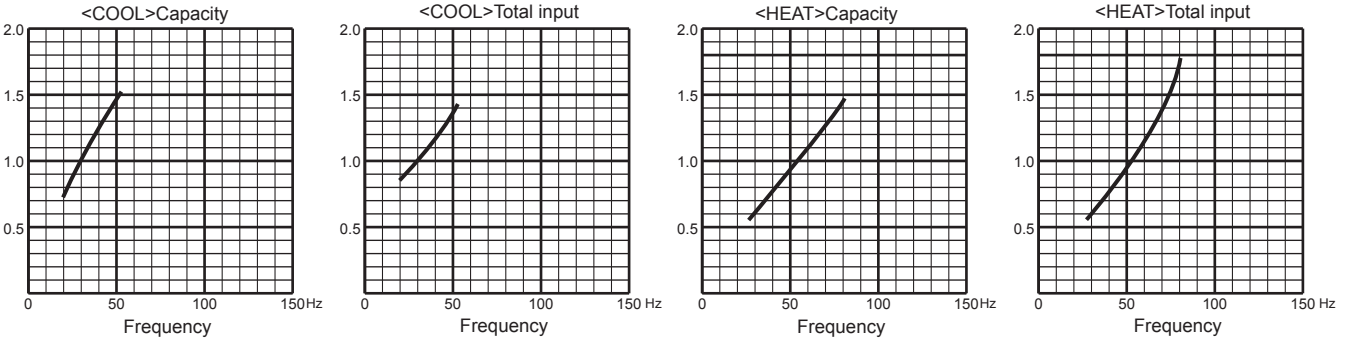


35-class unit

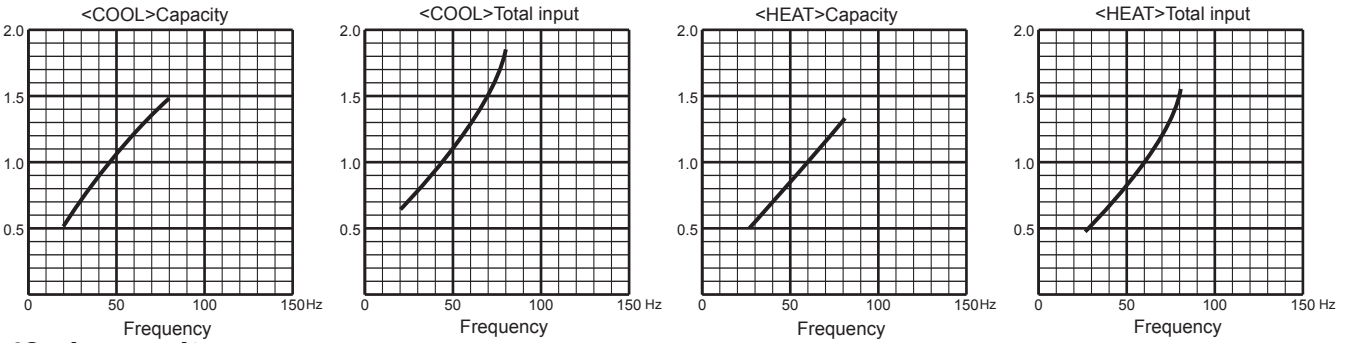

42-class unit

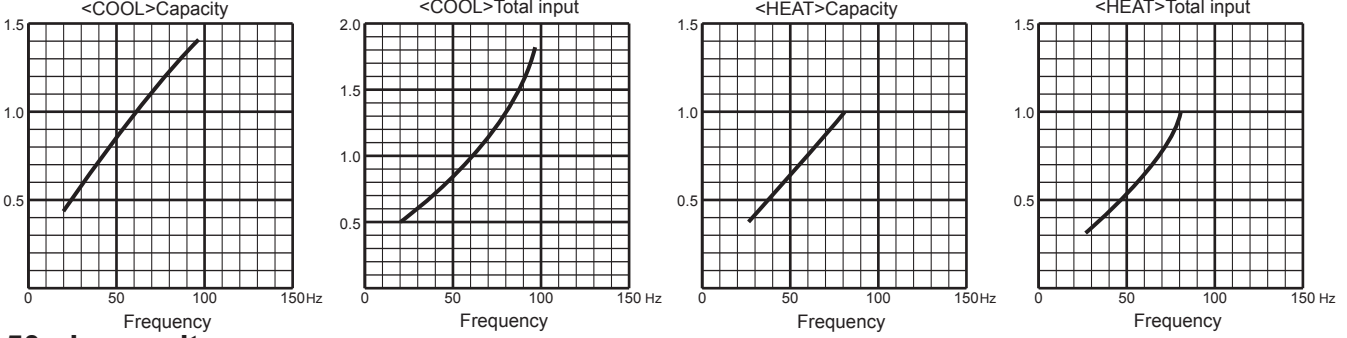


50-class unit

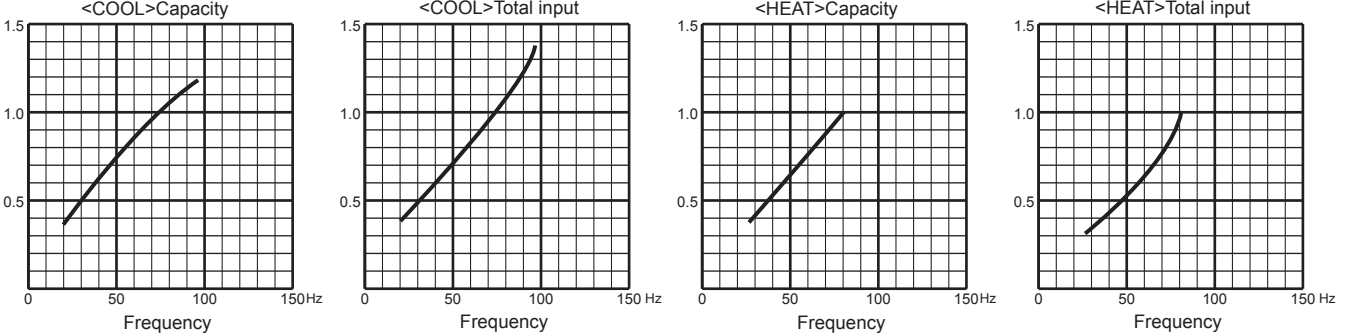


MXZ-3F68VF MXZ-3F68VF2 MXZ-3F68VF3 MXZ-3F68VF3


15-class unit

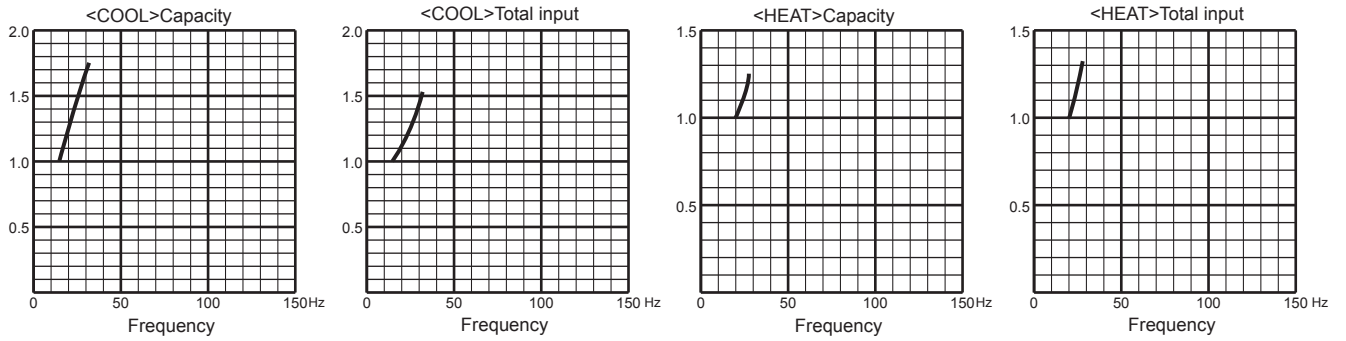


18-class unit

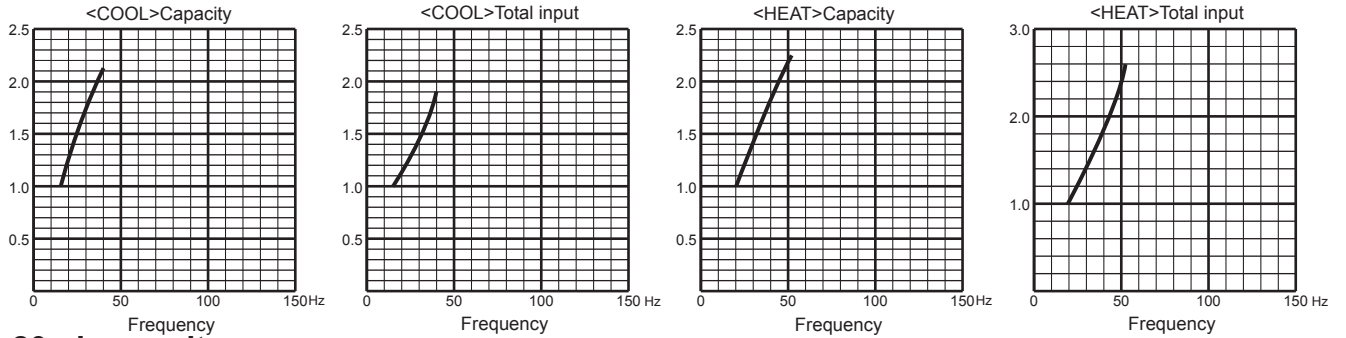


20-class unit

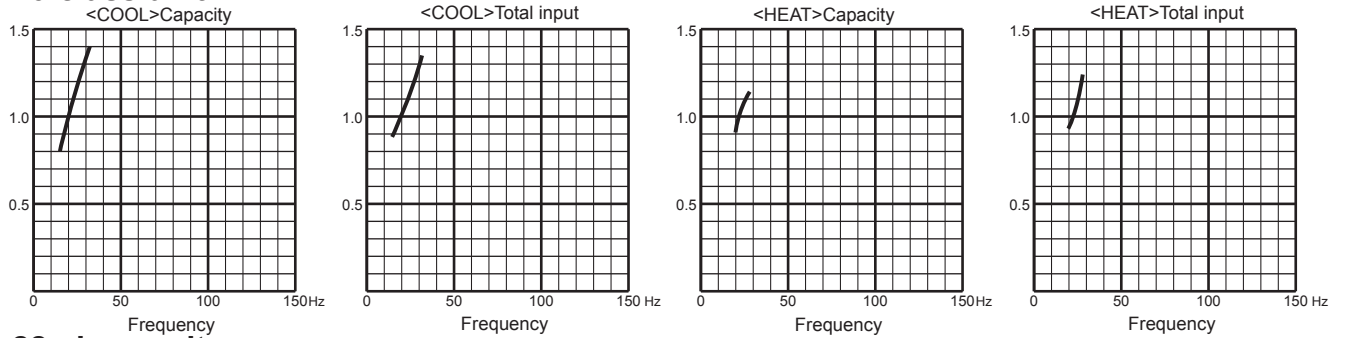

22-class unit

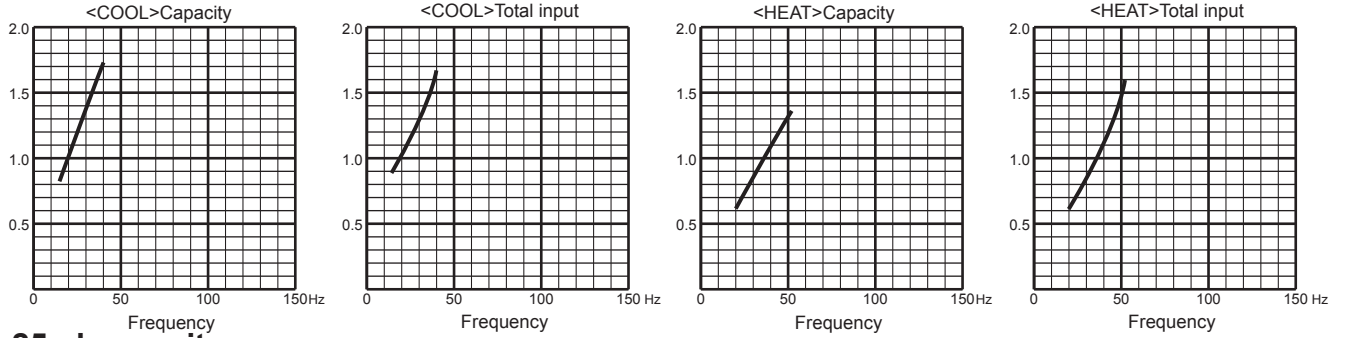


25-class unit

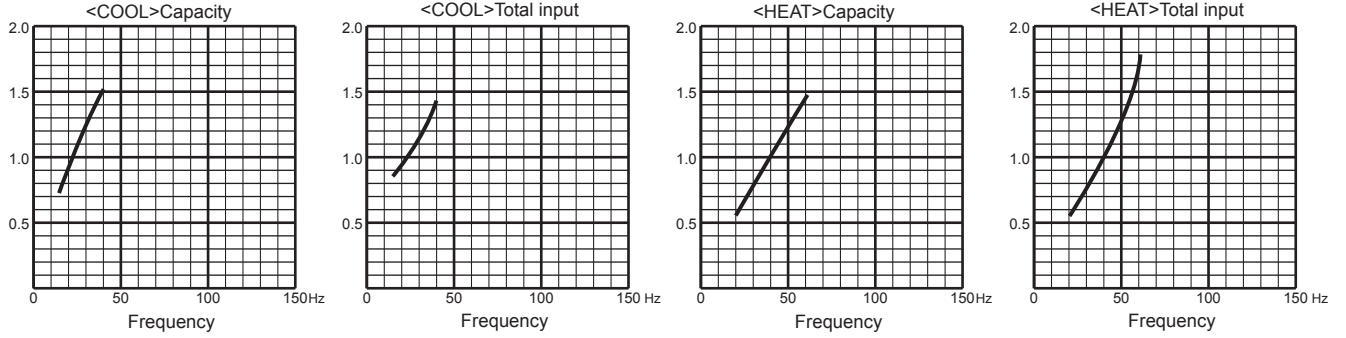


MXZ-3F68VF MXZ-3F68VF2 MXZ-3F68VF3 MXZ-3F68VF4


35-class unit

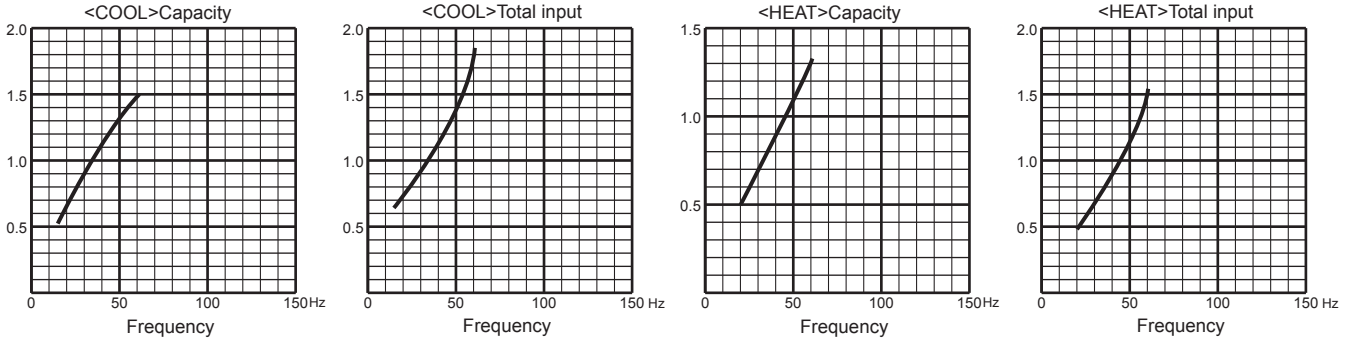


42-class unit

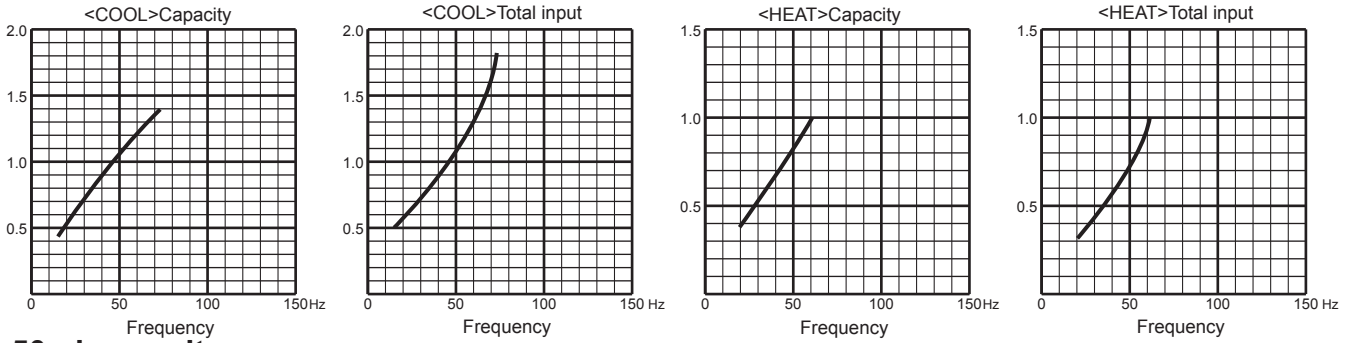

50-class unit

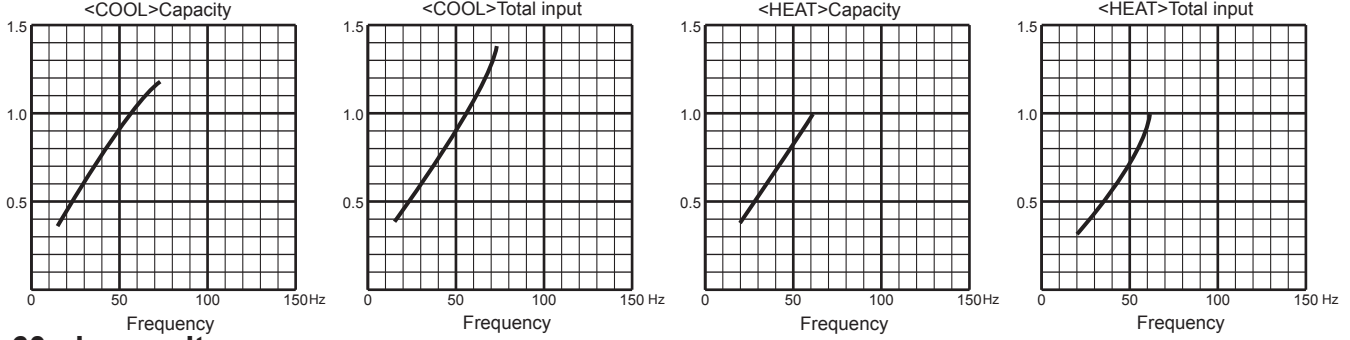


60-class unit

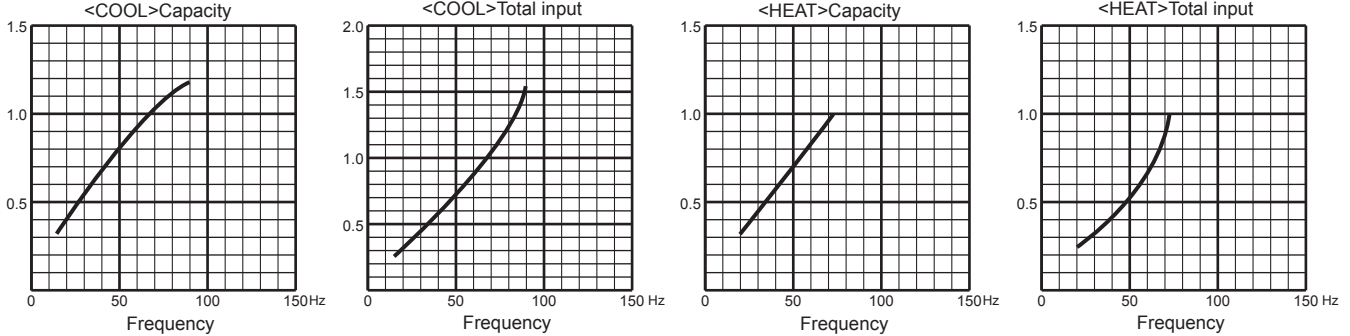


MXZ-4F72VF MXZ-4F72VF2 MXZ-4F72VF3 MXZ-4F72VF4


15-class unit

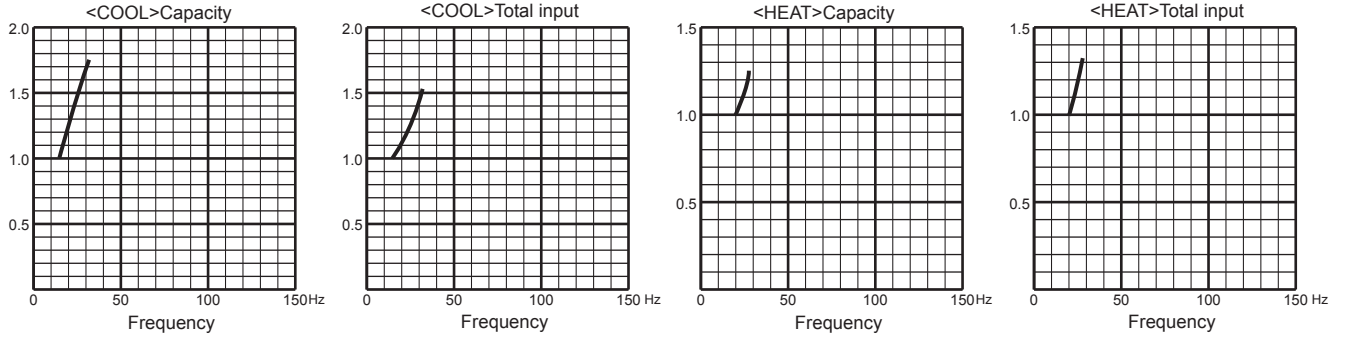


18-class unit

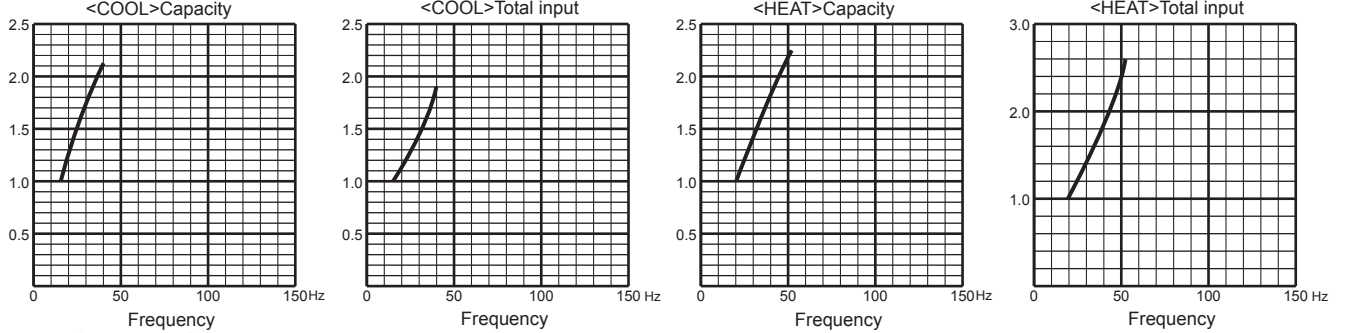


20-class unit

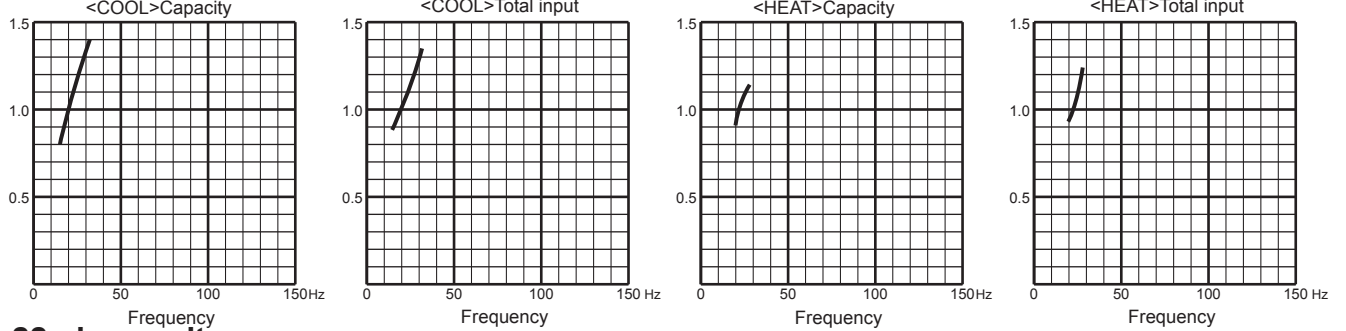

22-class unit

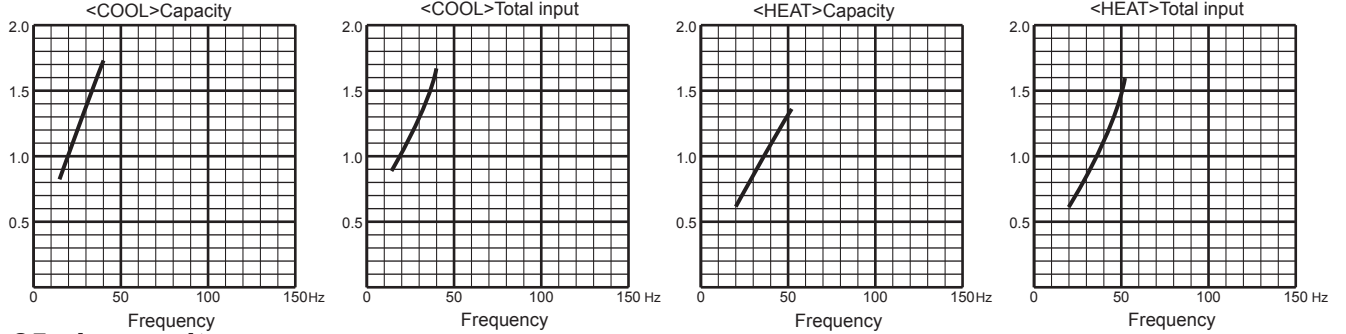


25-class unit

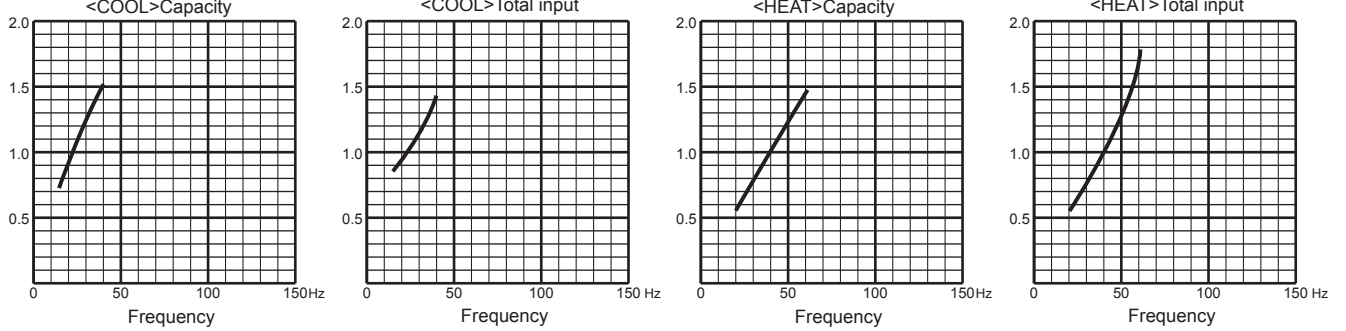


MXZ-4F72VF MXZ-4F72VF2 MXZ-4F72VF3 MXZ-4F72VF4


35-class unit

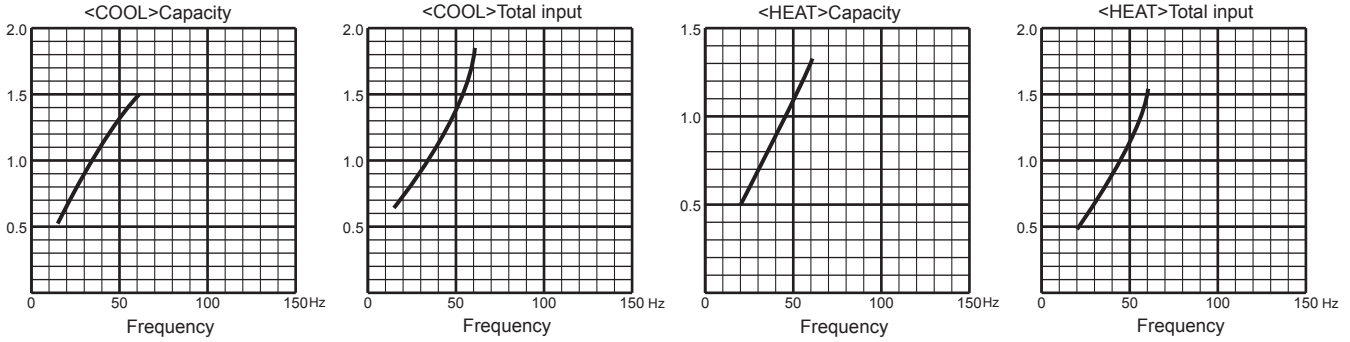


42-class unit

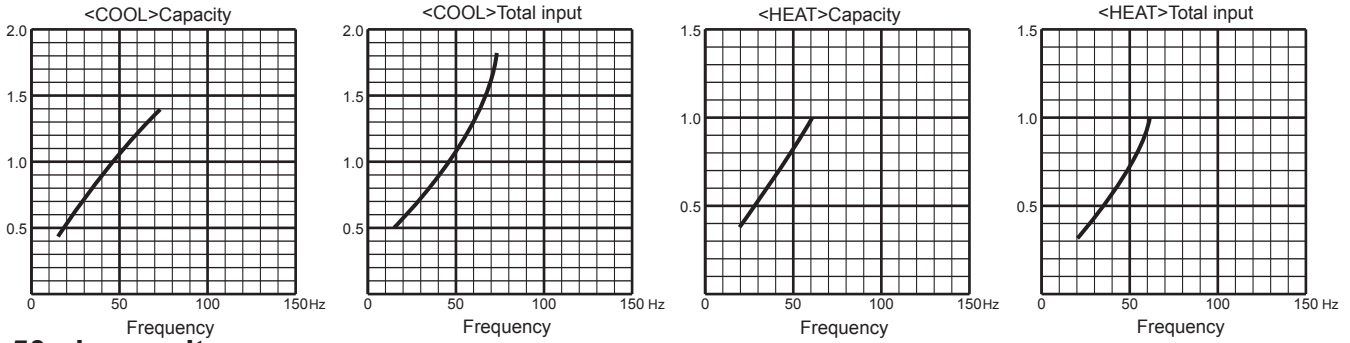

50-class unit

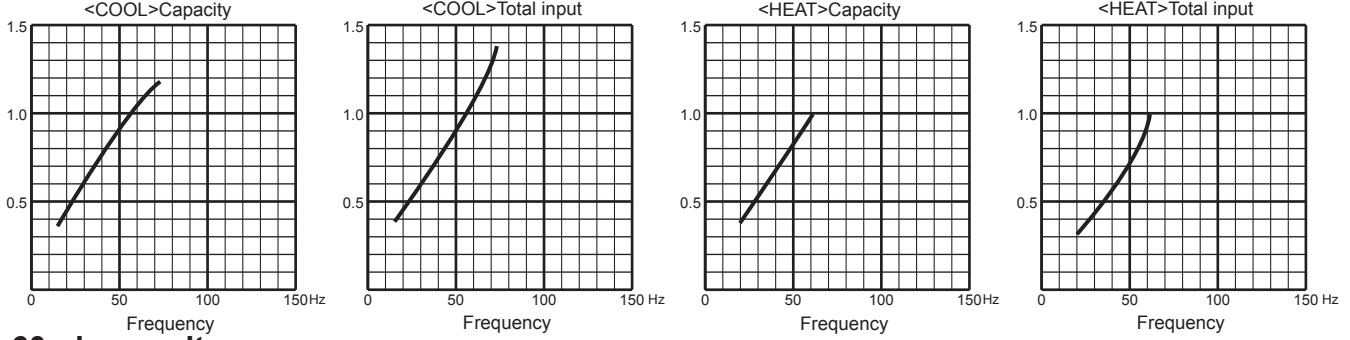


60-class unit

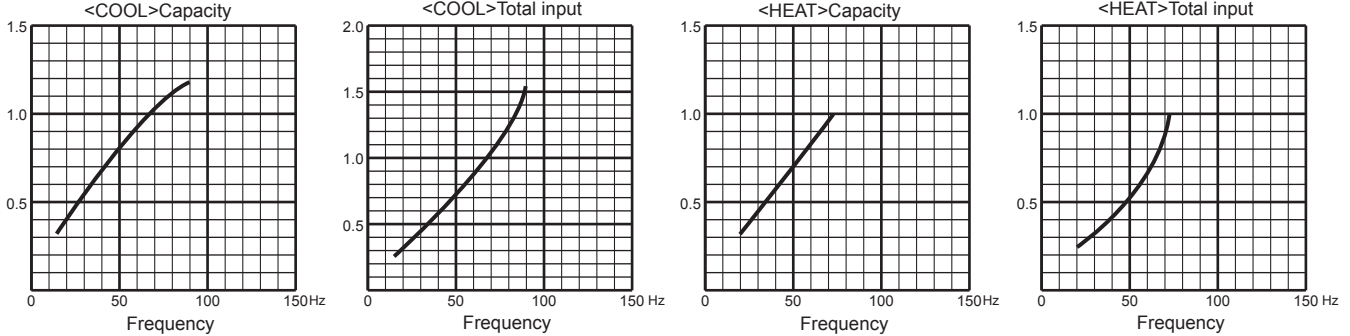


MXZ-4F80VF2 MXZ-4F80VF3 MXZ-4F80VF4


15-class unit

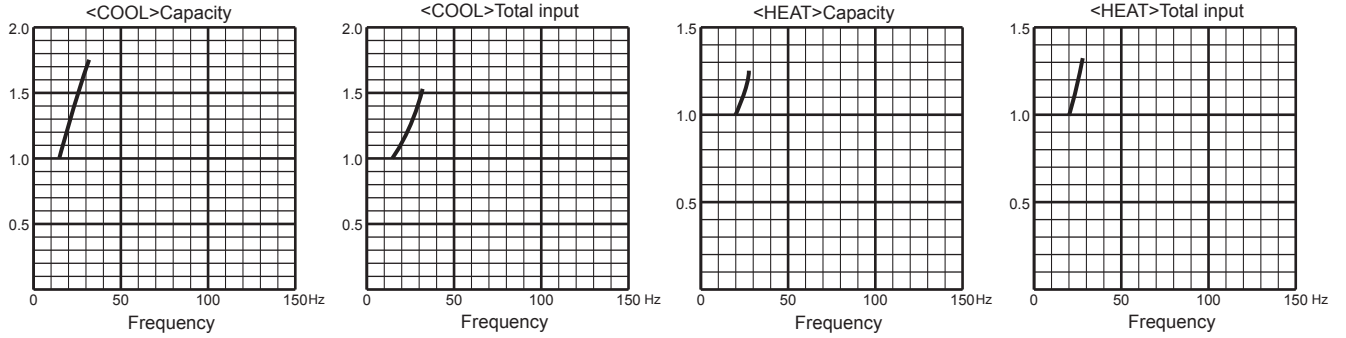


18-class unit

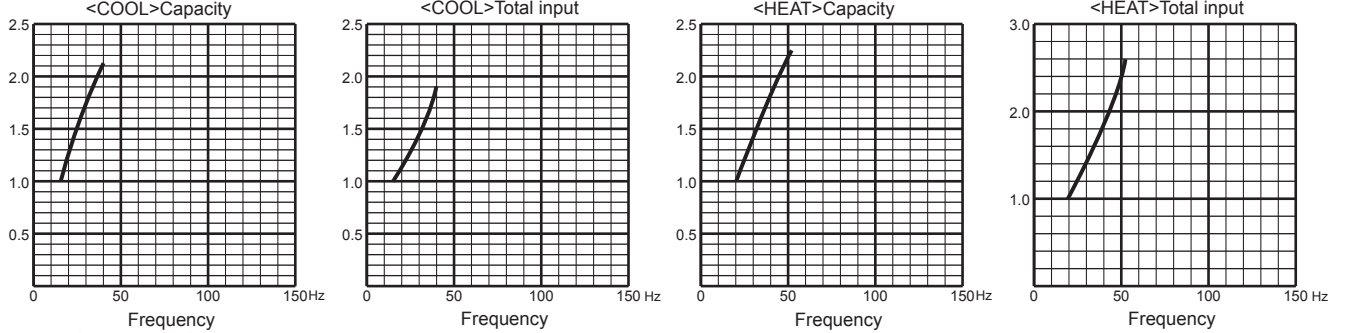


20-class unit

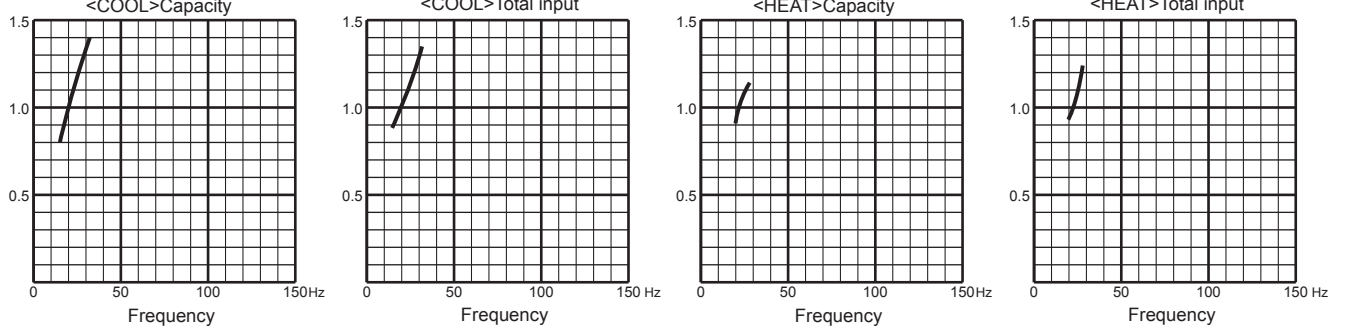

22-class unit

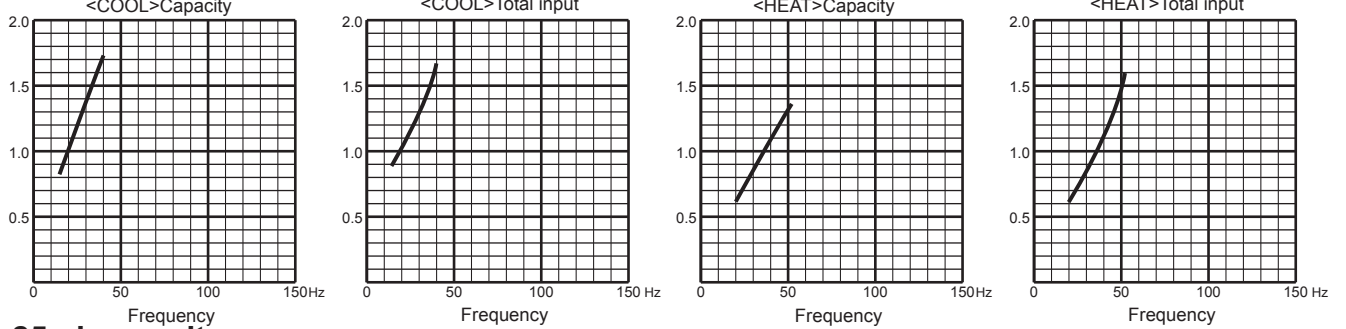


25-class unit

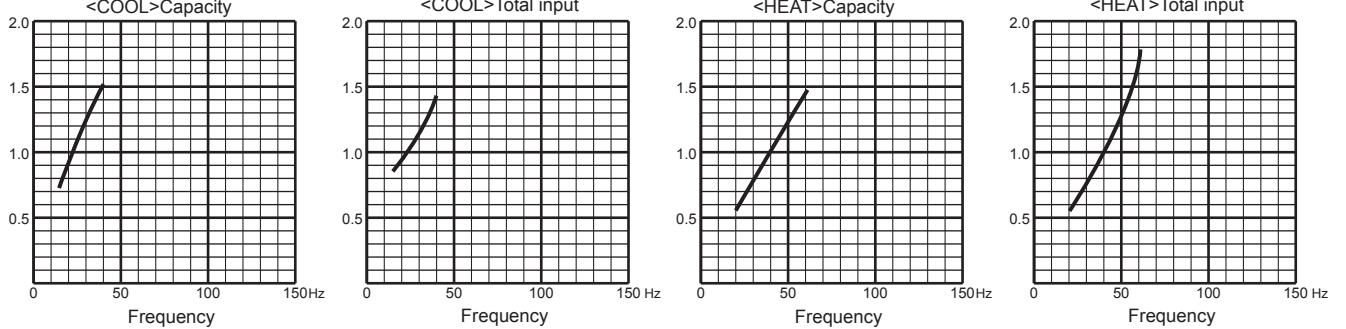


MXZ-4F80VF2 MXZ-4F80VF3 MXZ-4F80VF4


35-class unit

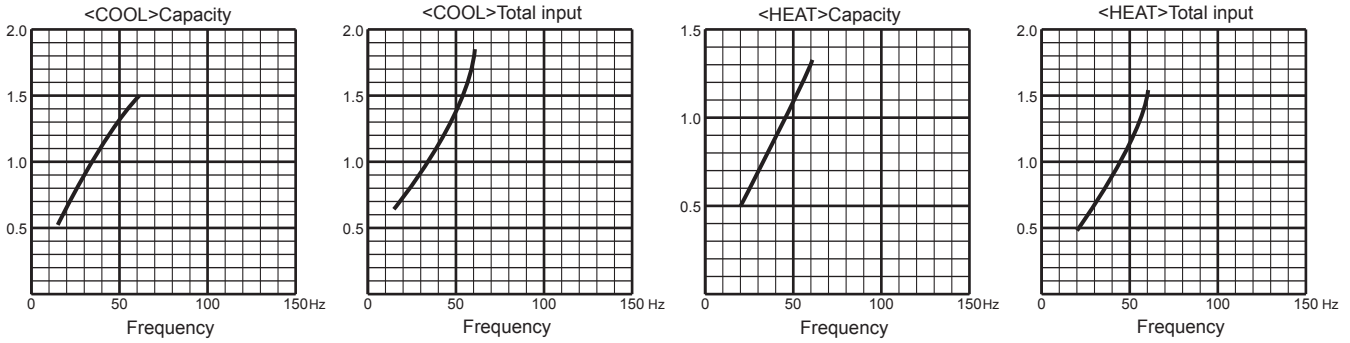


42-class unit

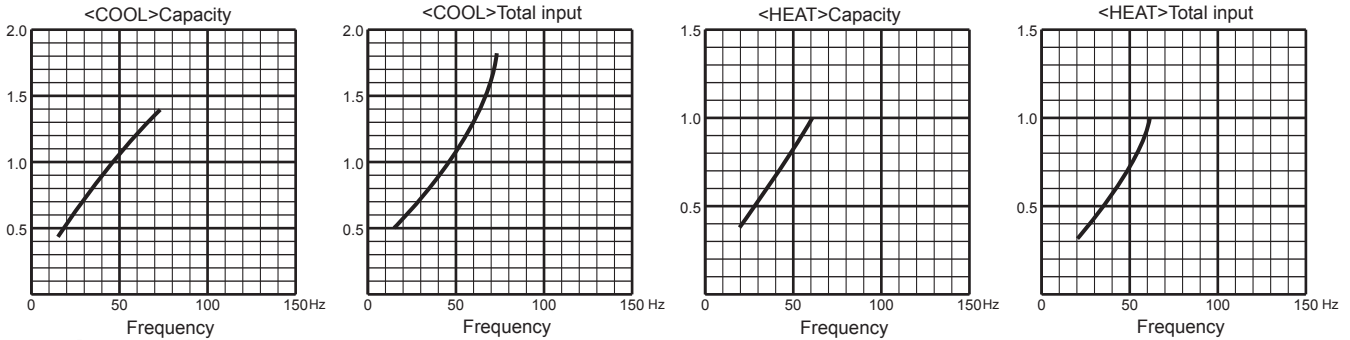

50-class unit

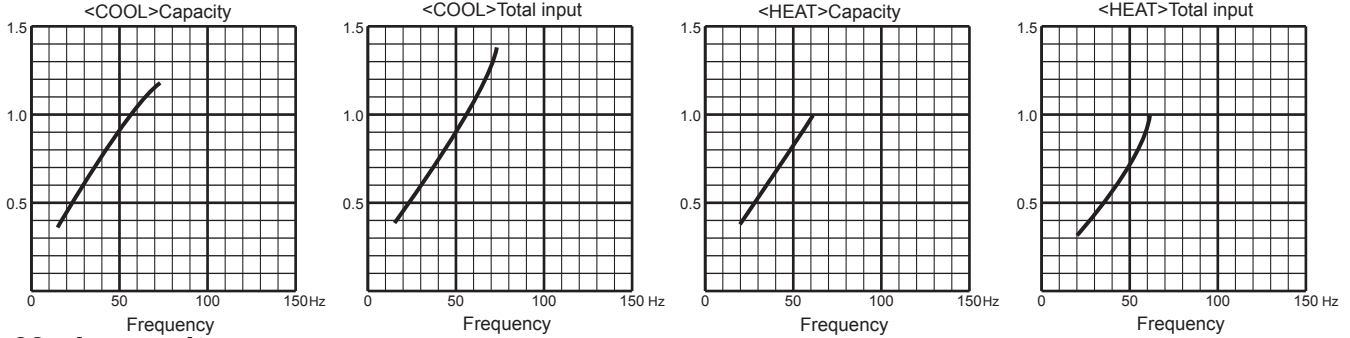


60-class unit

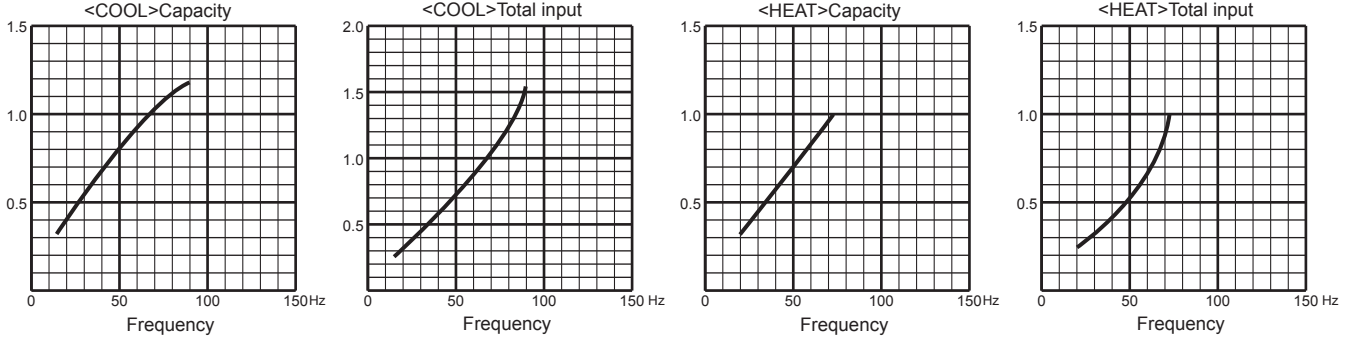


MXZ-4F83VF MXZ-4F83VF2


15-class unit

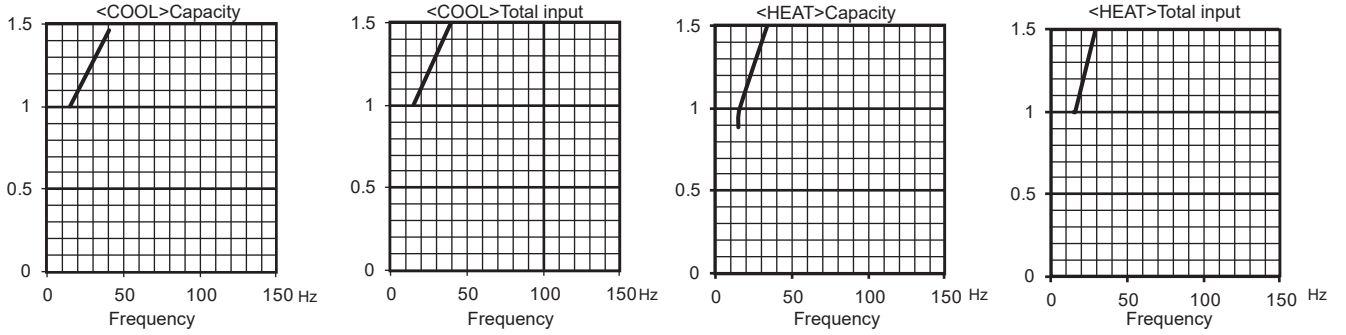


18-class unit

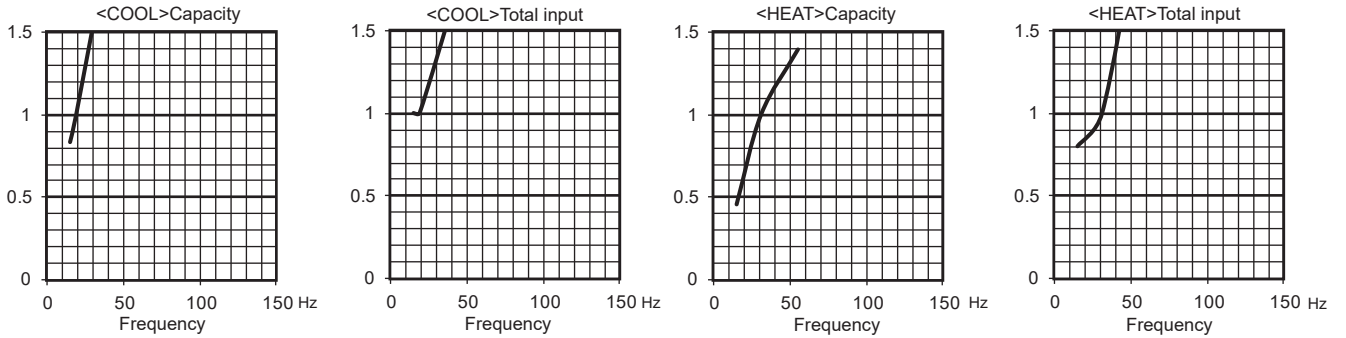


20-class unit

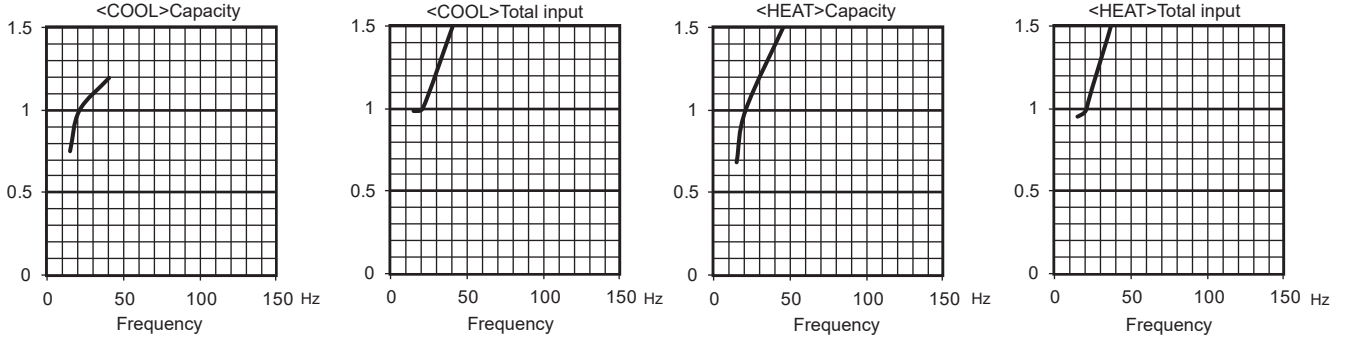

22-class unit

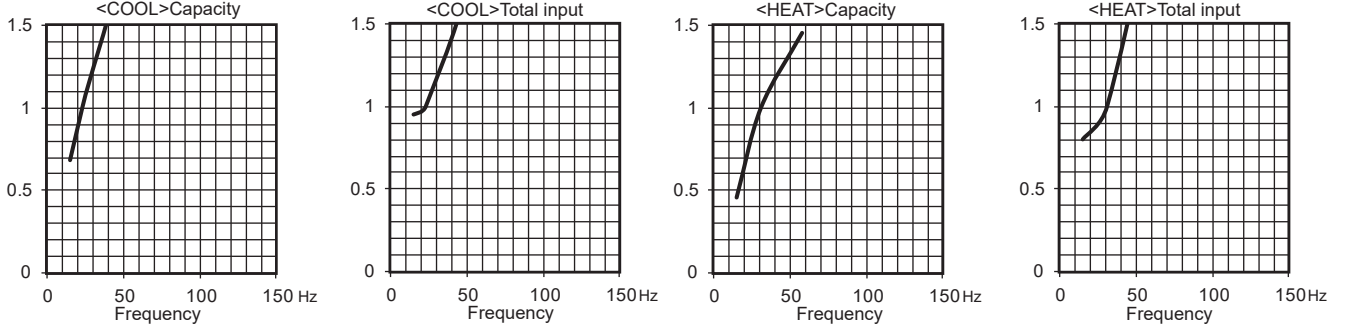


25-class unit

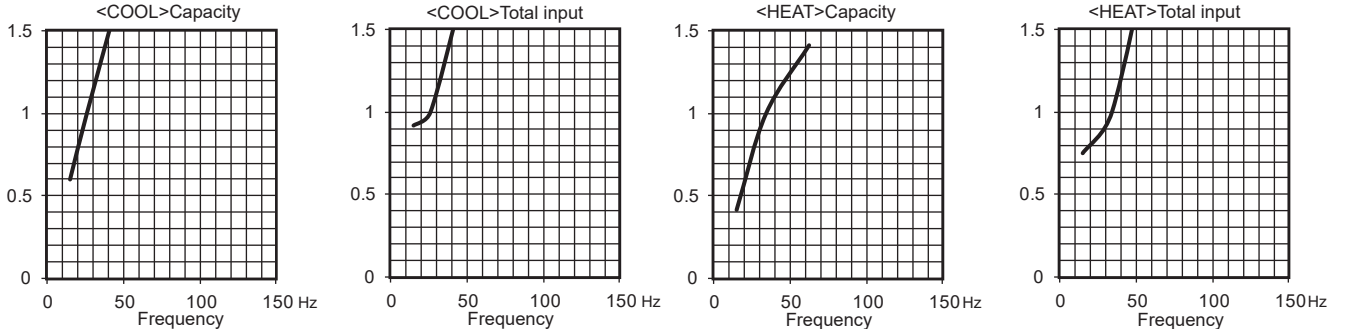


MXZ-4F83VF MXZ-4F83VF2


35-class unit

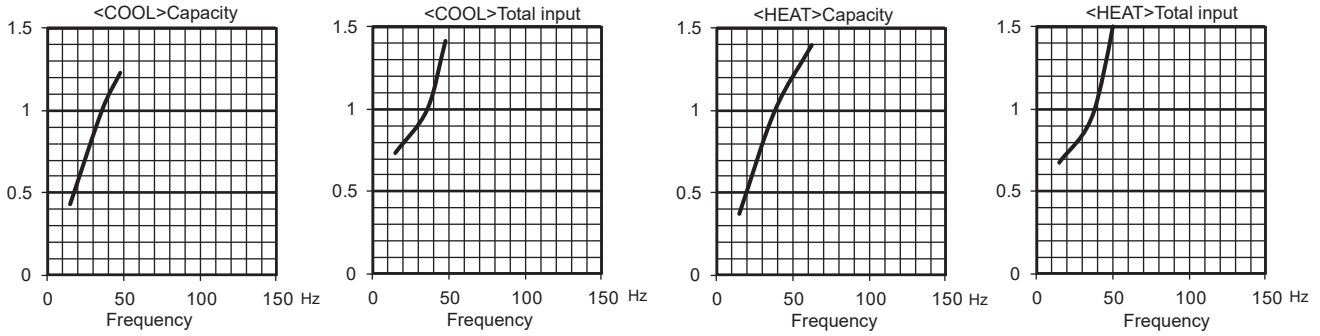


42-class unit

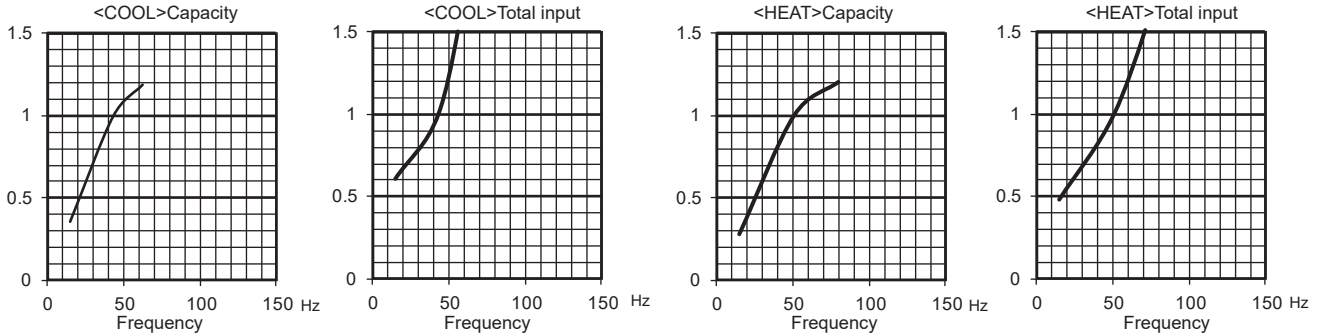


50-class unit

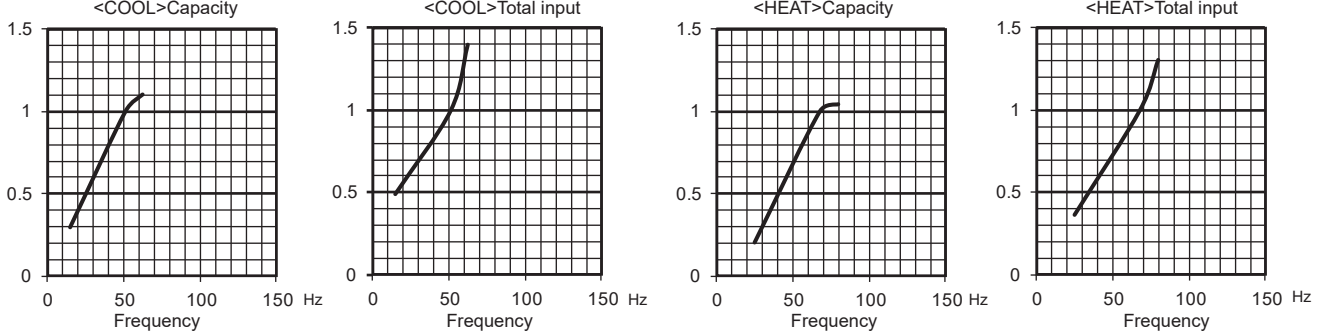

60-class unit

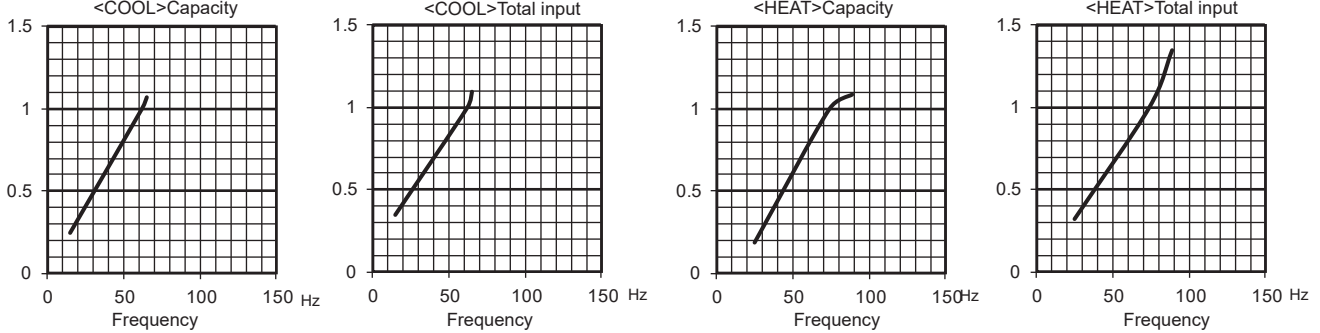


71-class unit

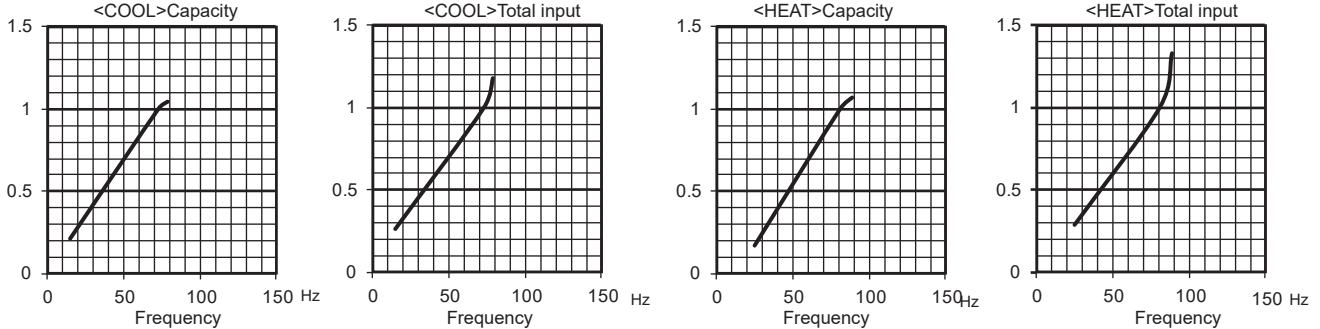


MXZ-5F102VF MXZ-5F102VF2


15-class unit

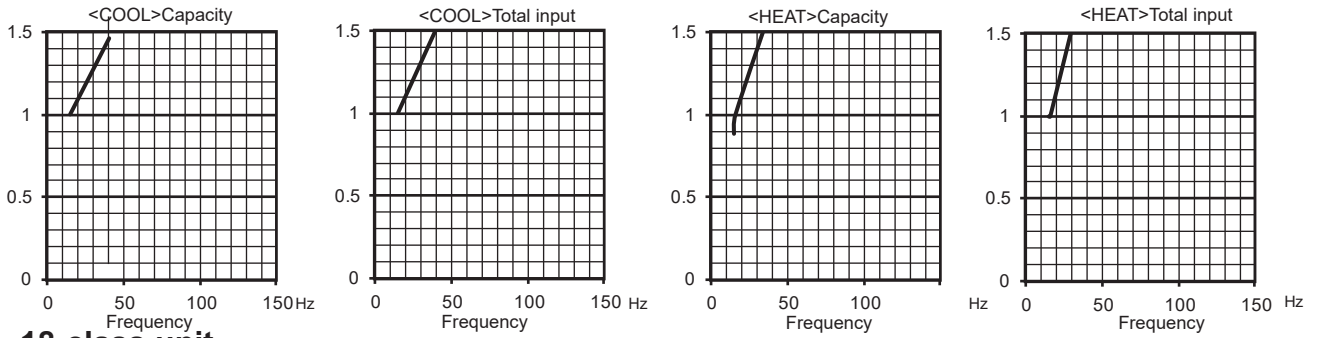


18-class unit

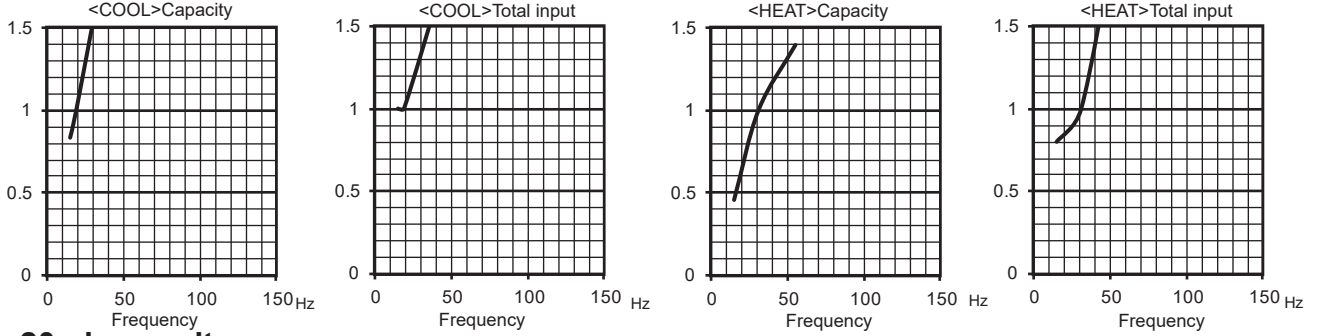


20-class unit

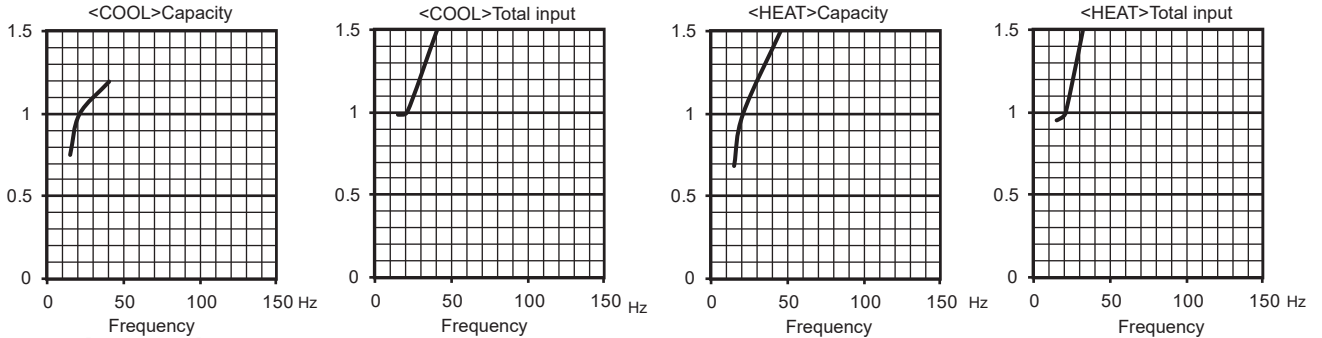

22-class unit

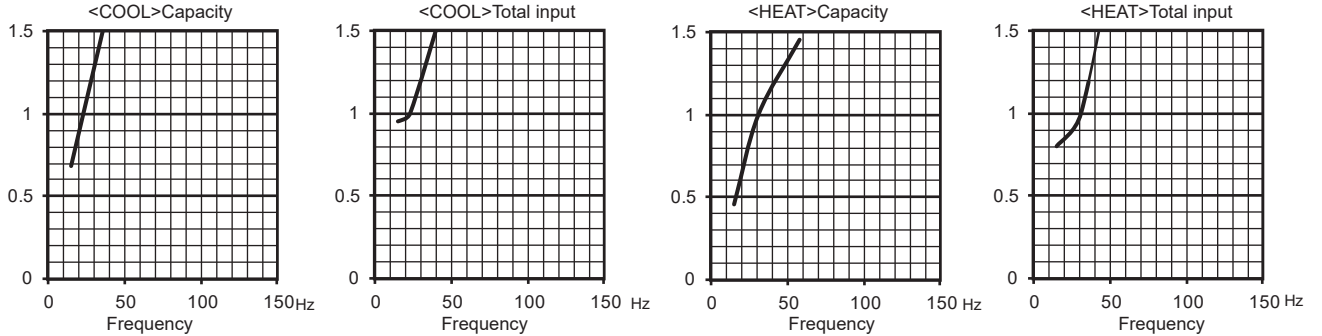


25-class unit

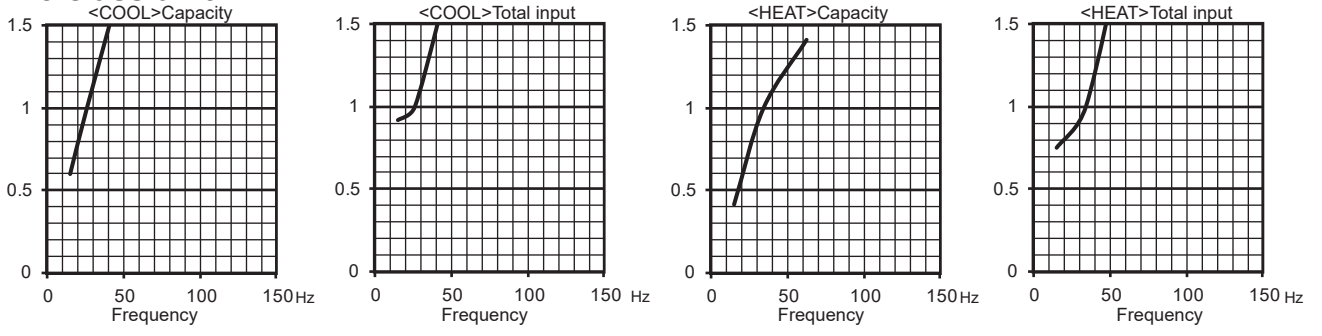


MXZ-5F102VF MXZ-5F102VF2


35-class unit

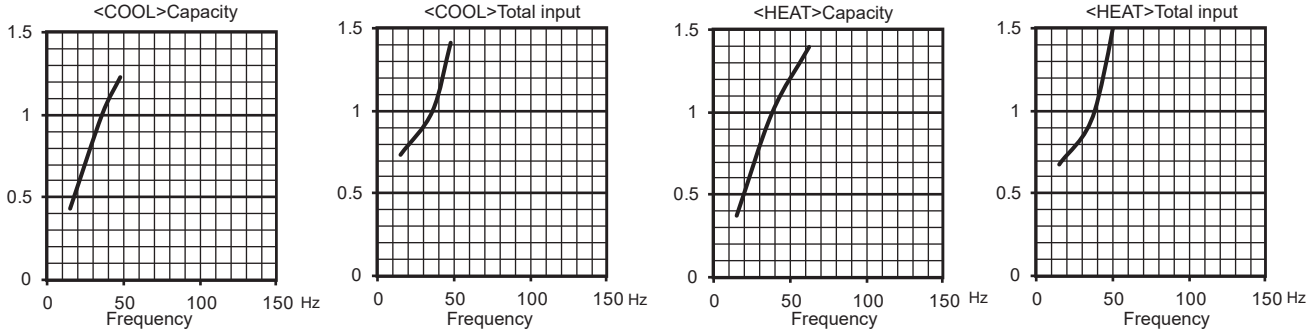


42-class unit

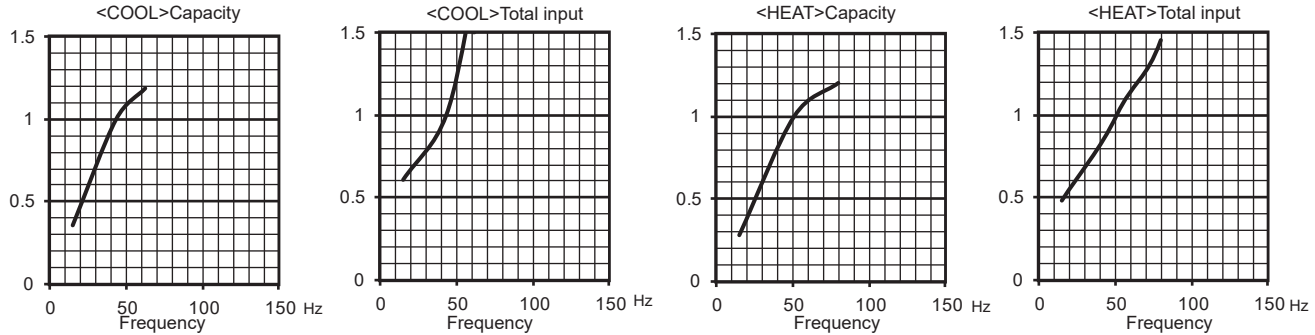


50-class unit

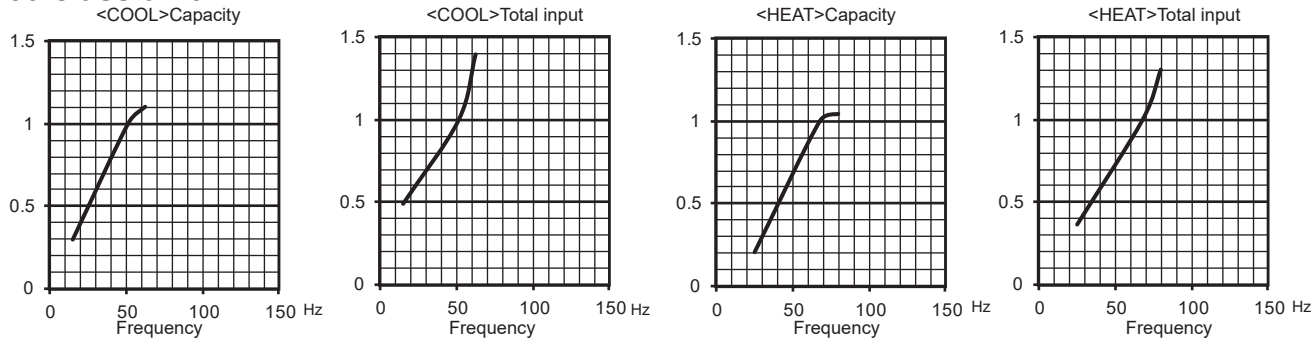

60-class unit

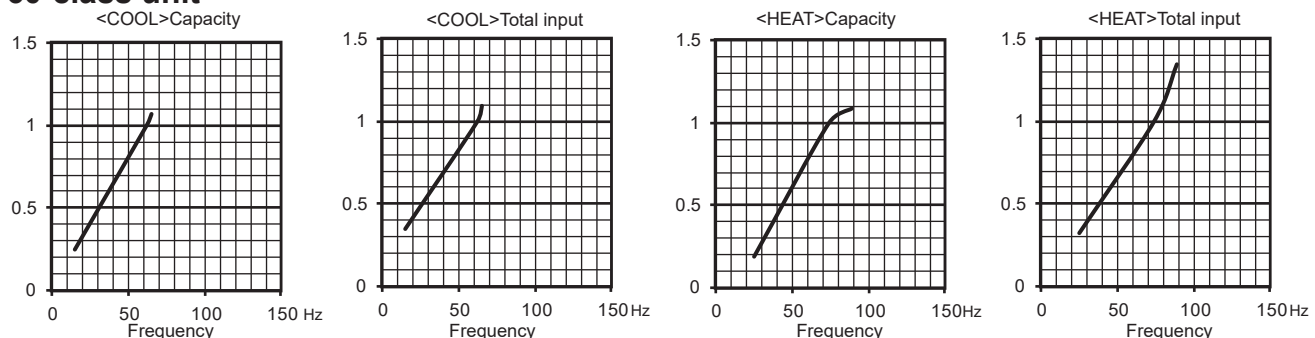


71-class unit

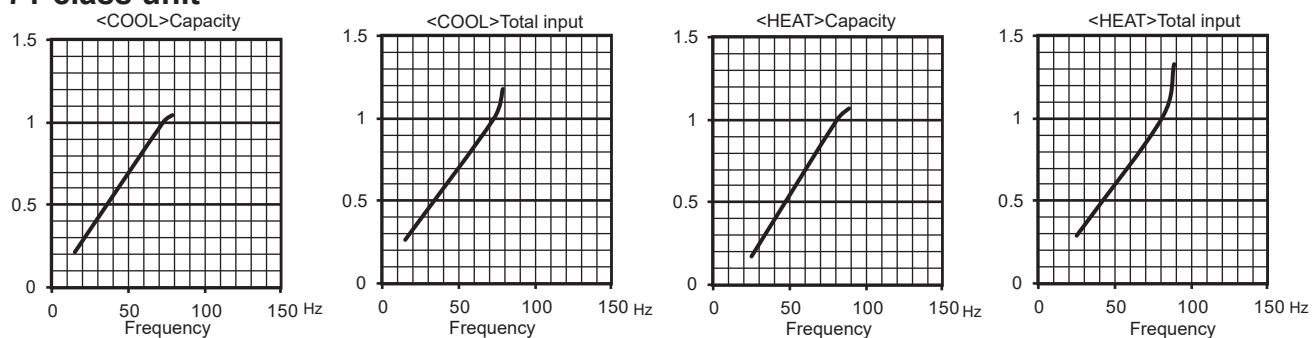


MXZ-6F120VF2 MXZ-6F122VF


15-class unit

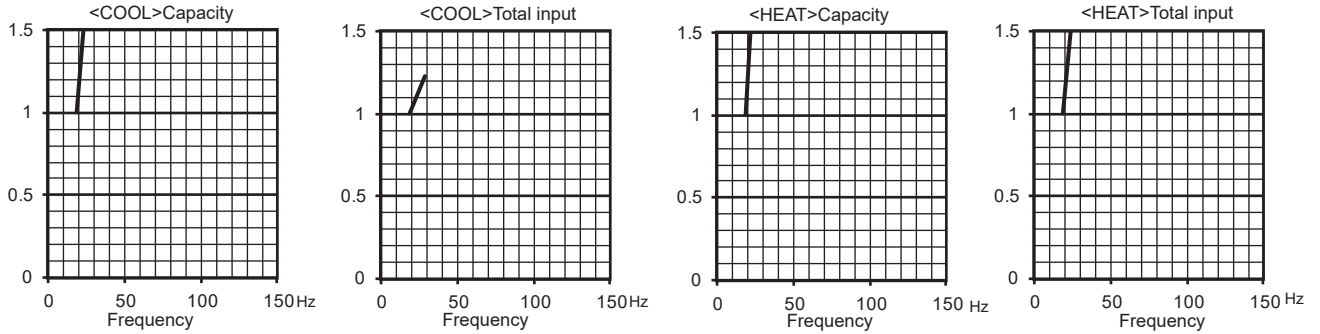


18-class unit

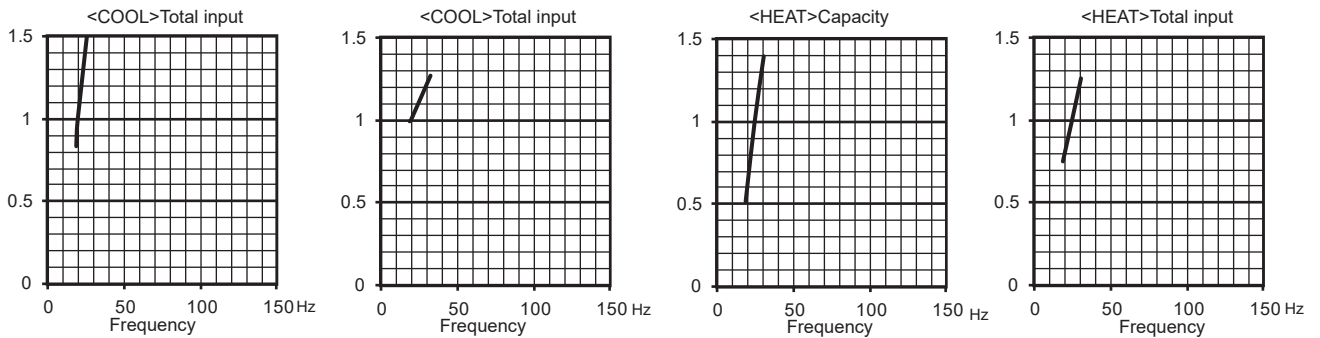


20-class unit

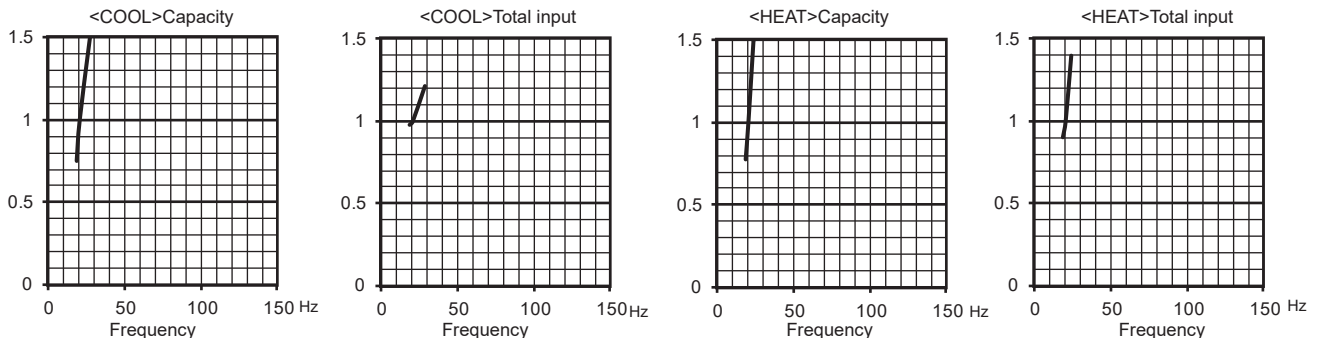

22-class unit

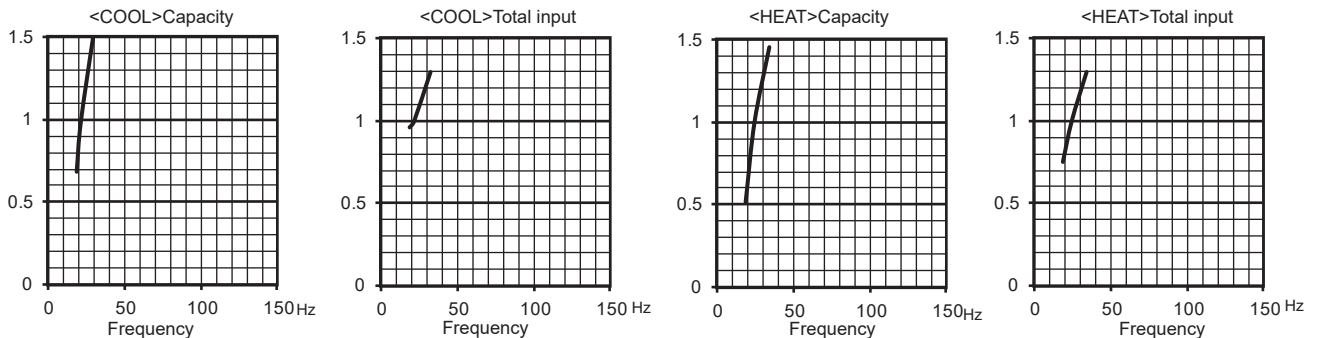


25-class unit

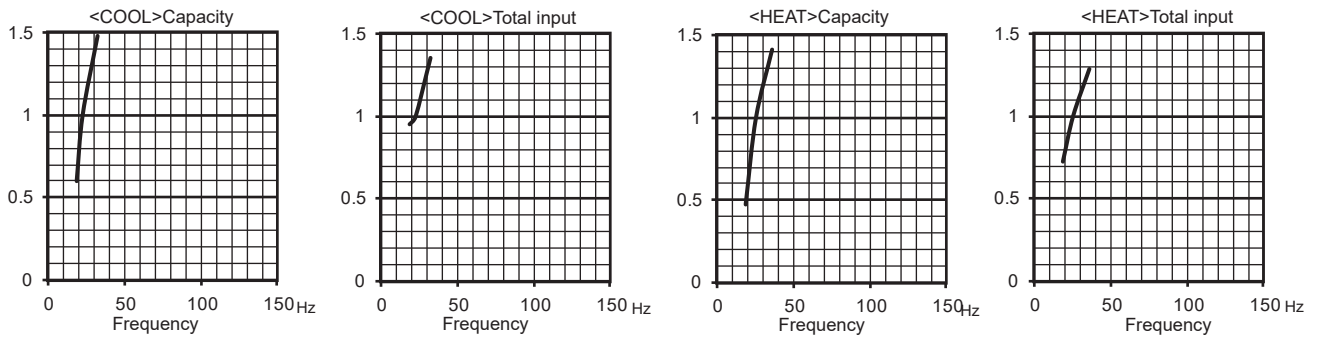


MXZ-6F120VF2 MXZ-6F122VF


35-class unit

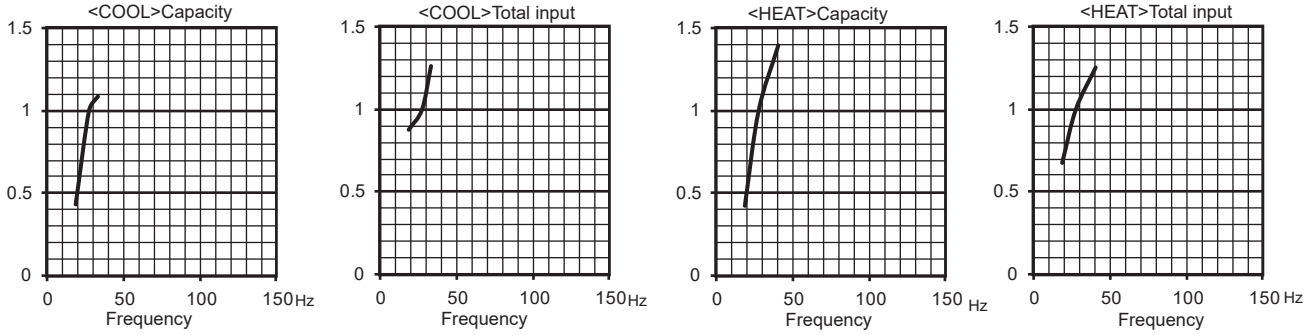


42-class unit

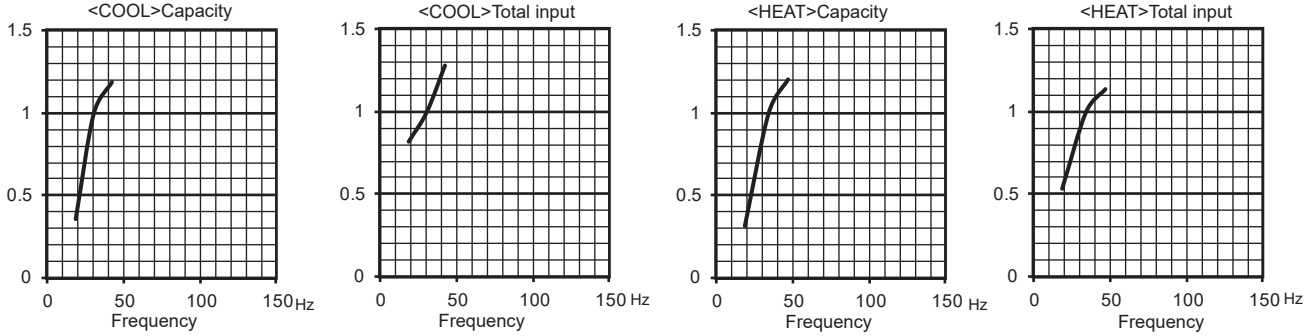


50-class unit

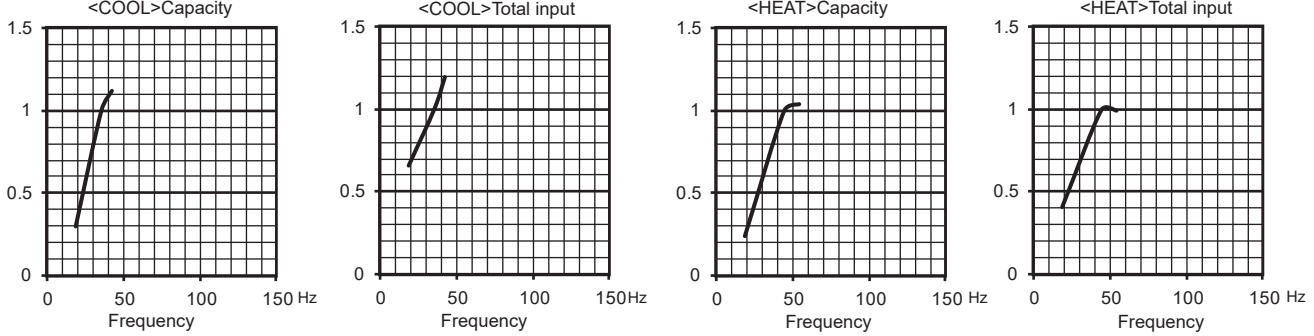

60-class unit

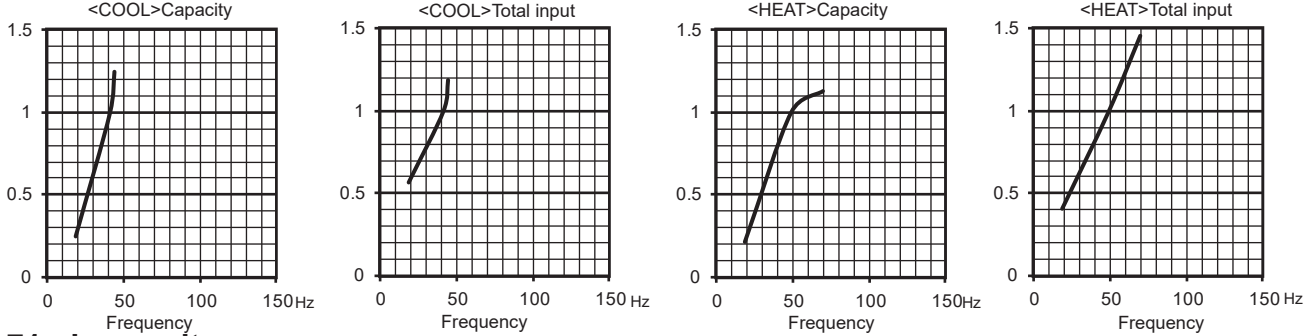


71-class unit

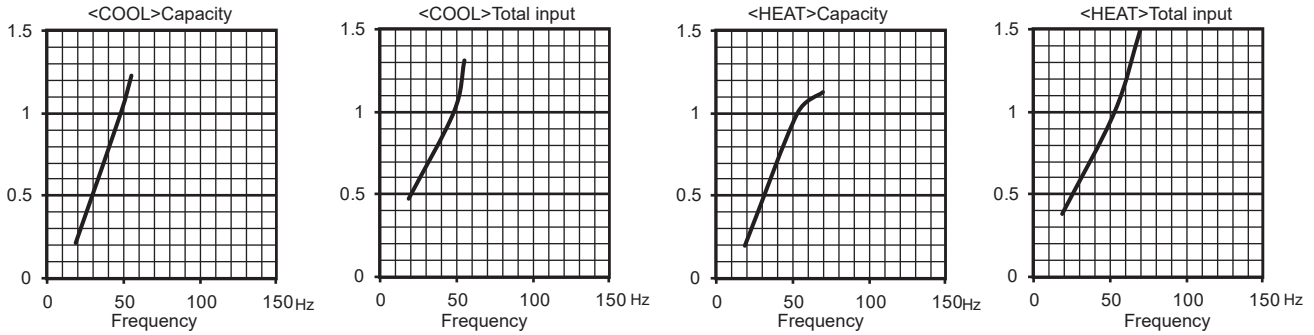


MXZ-2F53VFHZ MXZ-2F53VFHZ2


15-class unit

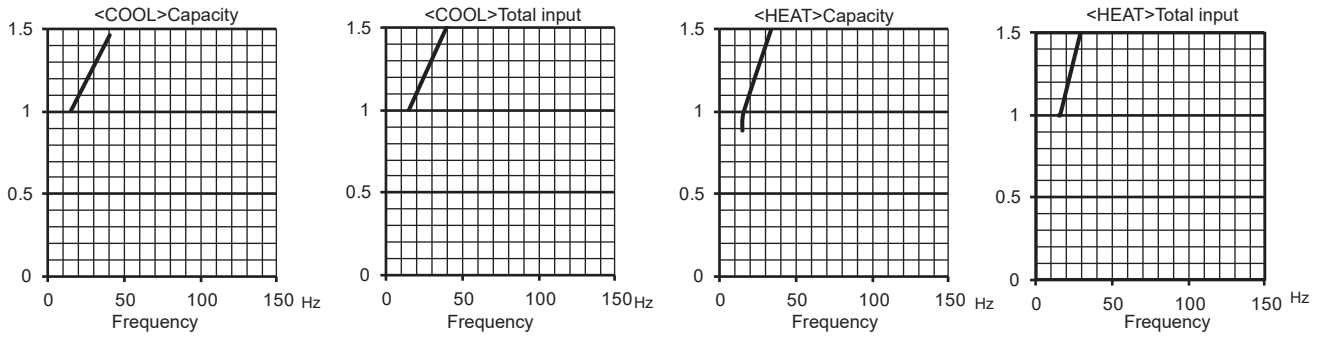


18-class unit

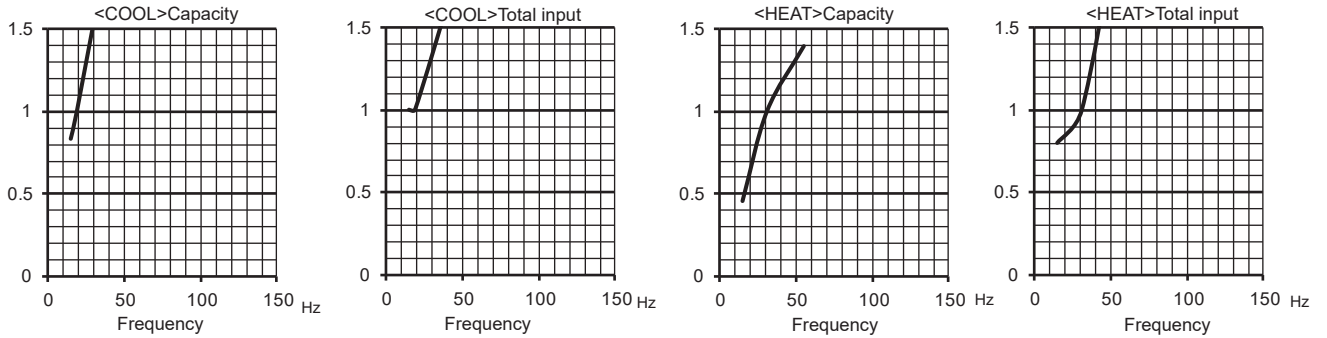


20-class unit

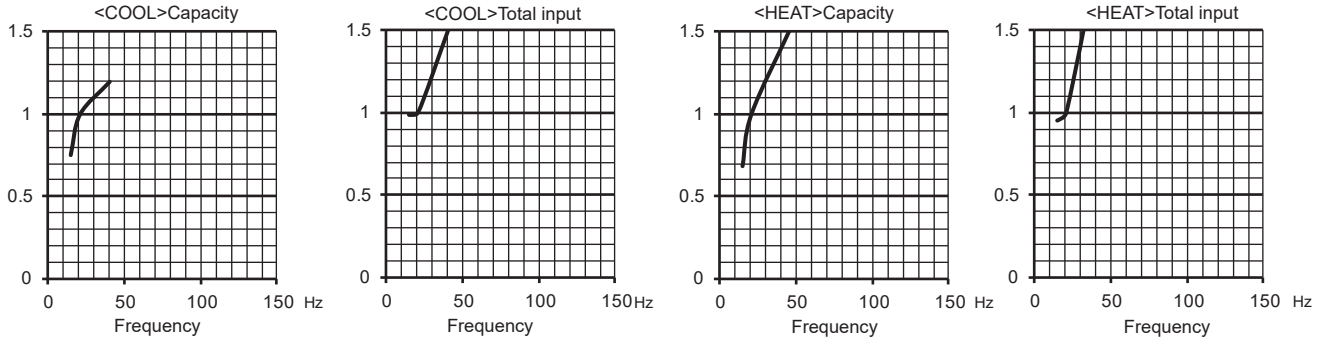

22-class unit




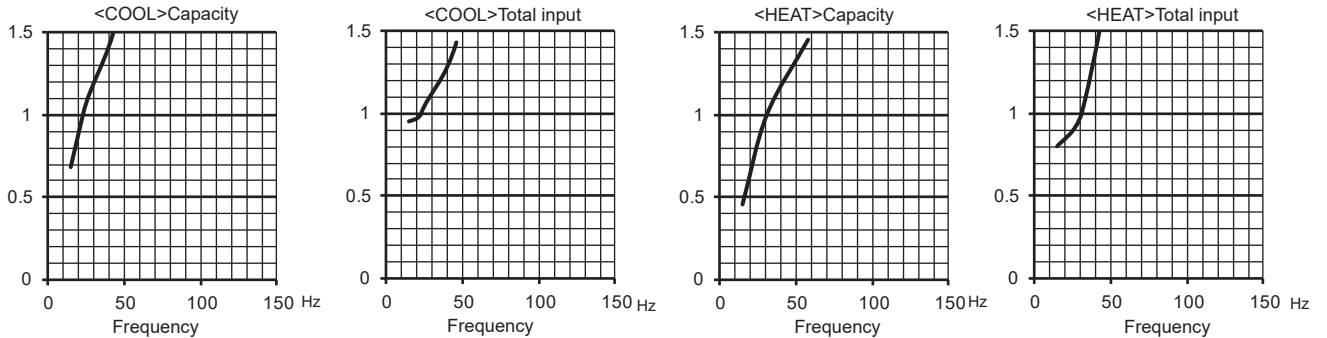


25-class unit




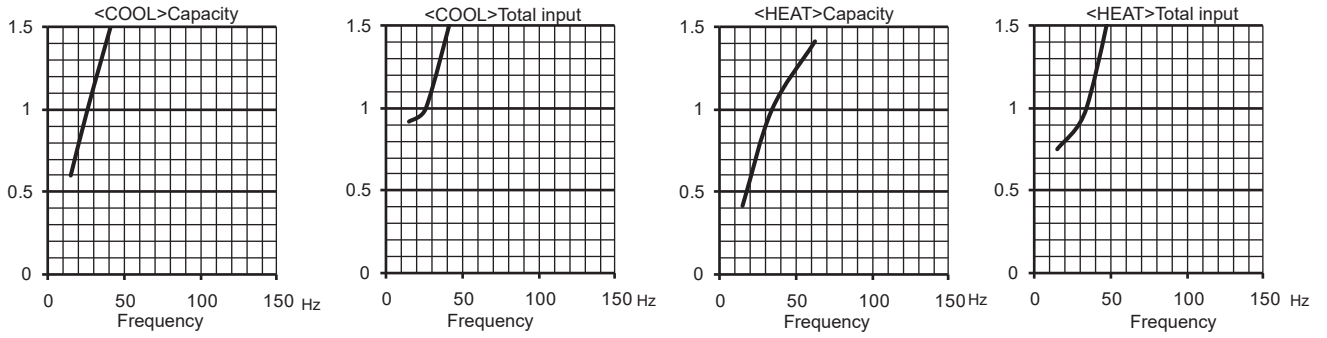


MXZ-2F53VFHZ MXZ-2F53VFHZ2





35-class unit

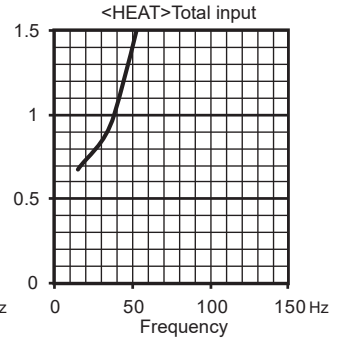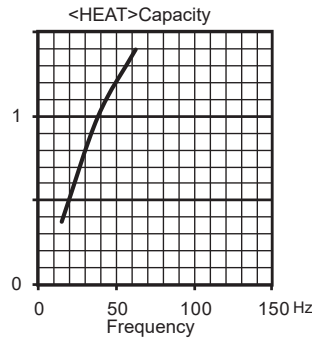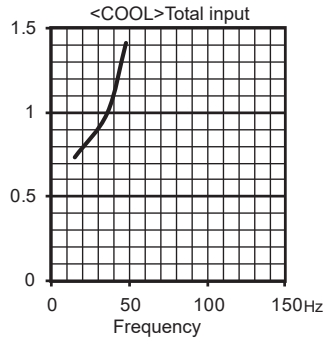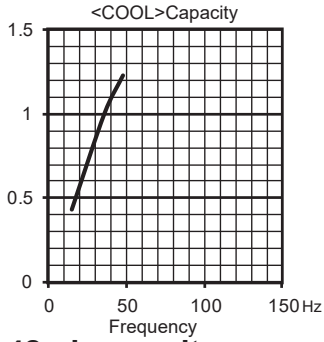

42-class unit

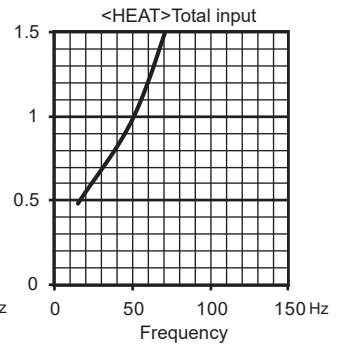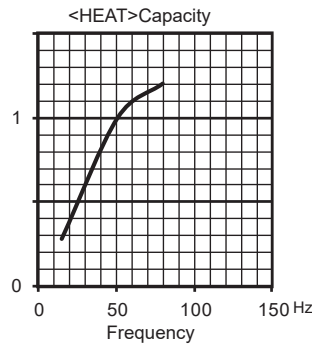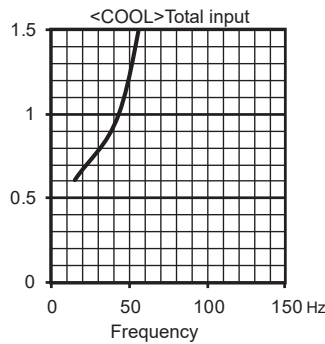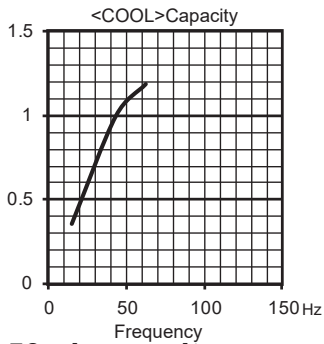


50-class unit

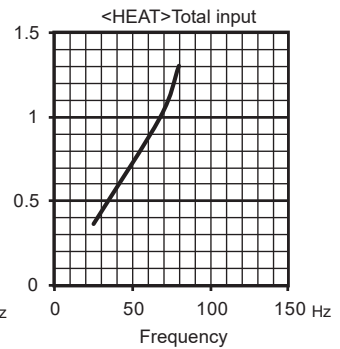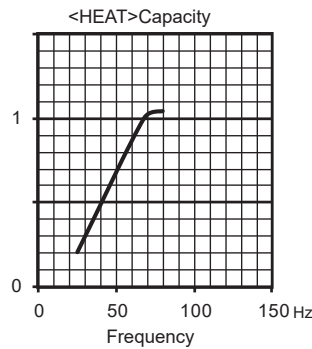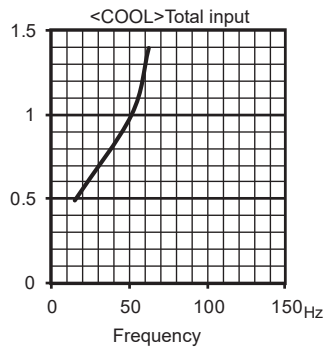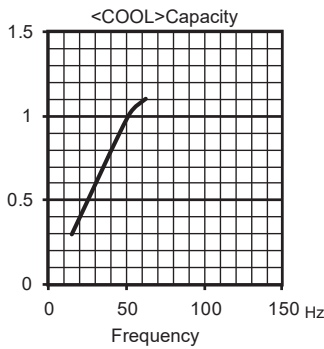


MXZ-4F83VFHZ MXZ-4F83VFHZ2


15-class unit

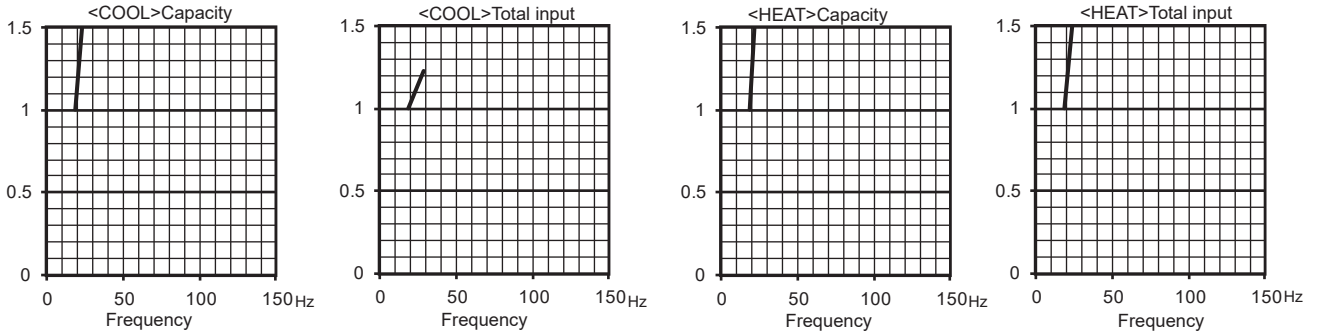


18-class unit

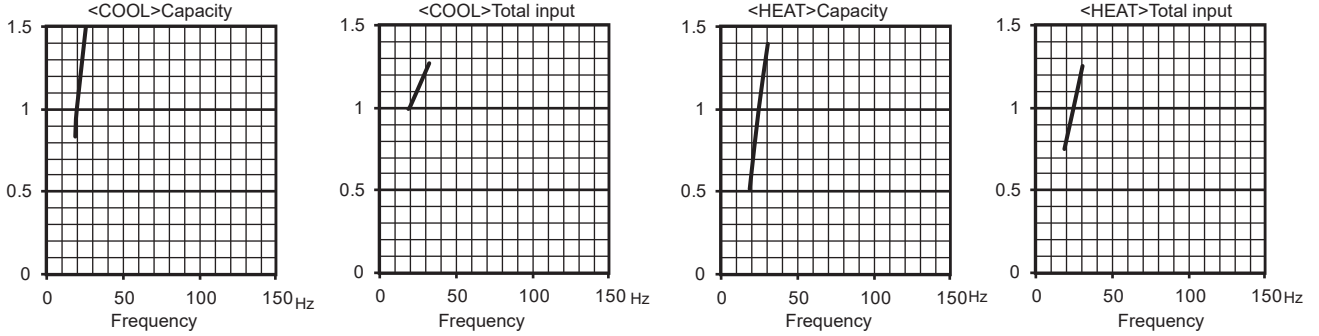


20-class unit

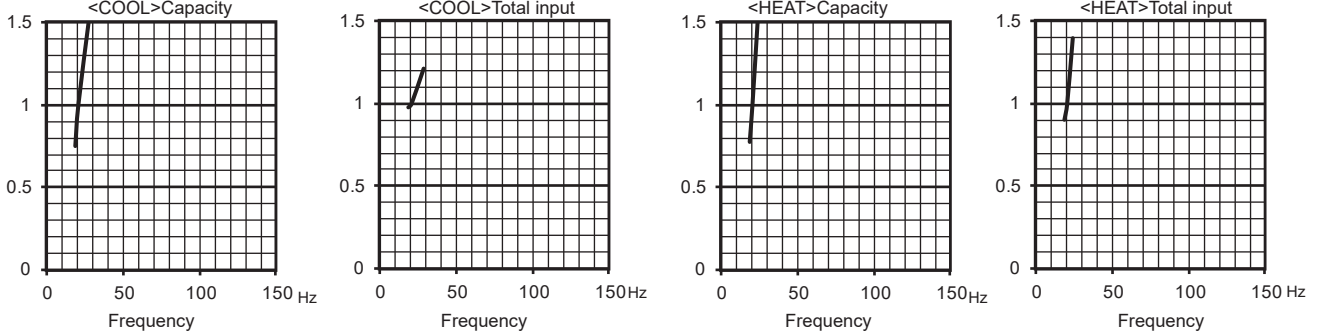

22-class unit

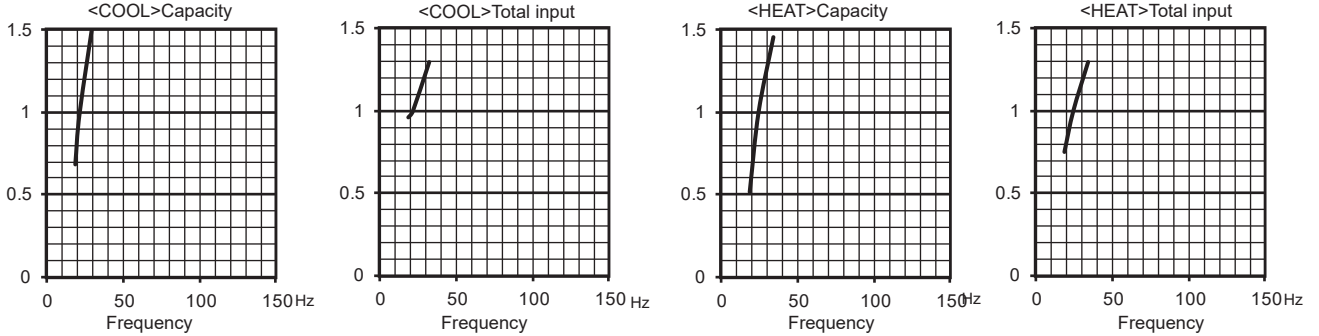


25-class unit

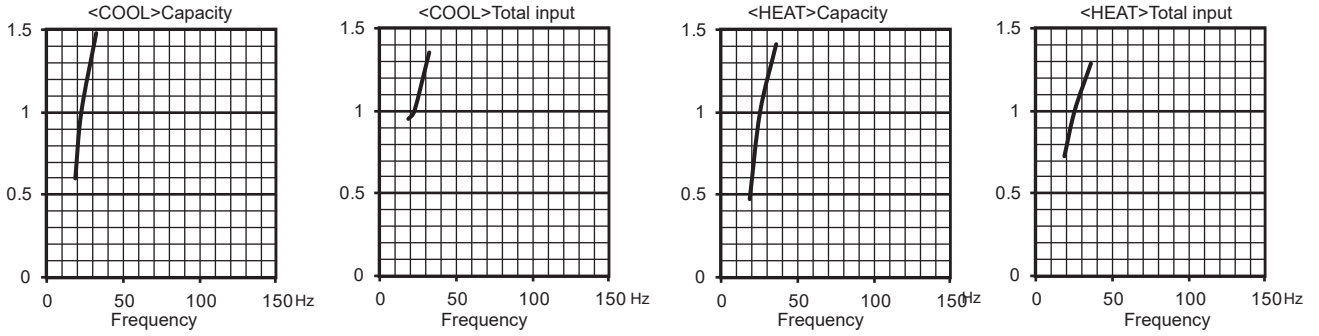


MXZ-4F83VFHZ MXZ-4F83VFHZ2


35-class unit

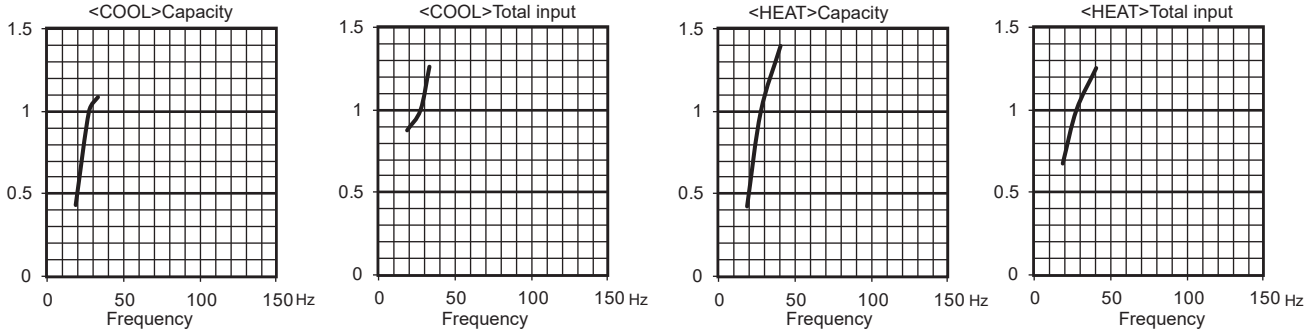


42-class unit

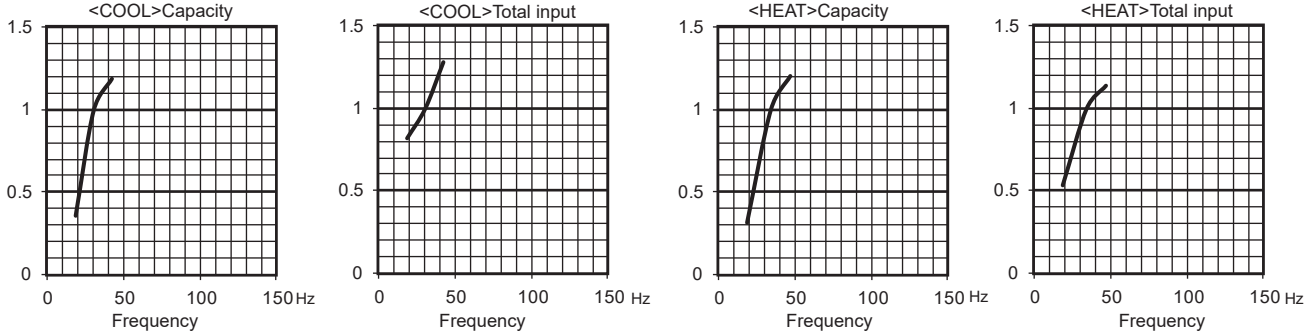


50-class unit

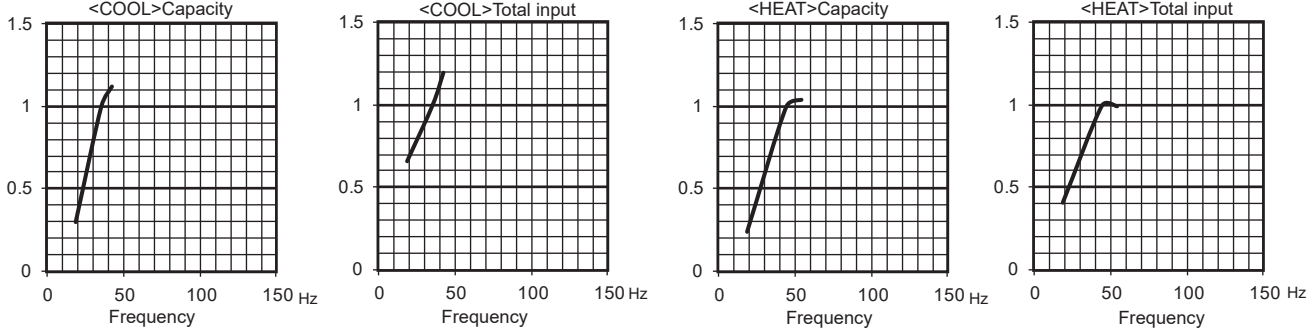

60-class unit

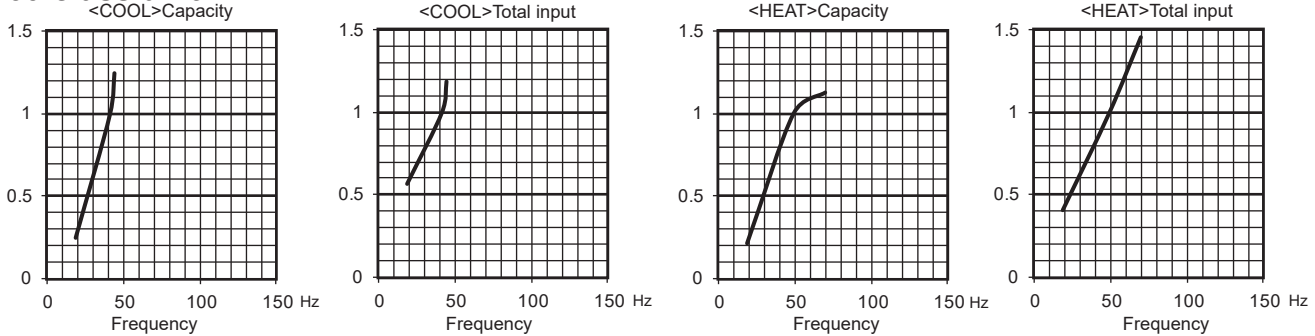

71-class unit

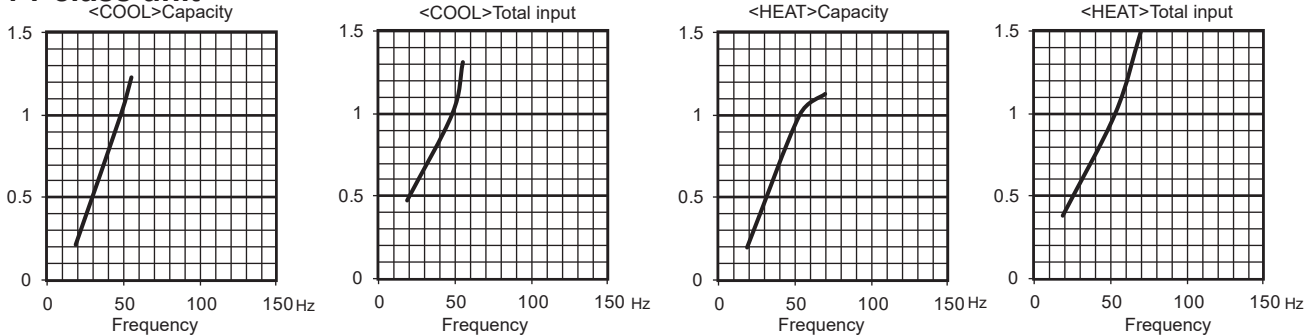

9-3. HOW TO OPERATE FIXED-FREQUENCY OPERATION <Test run operation>

1. Press the emergency operation switch to start COOL or HEAT mode (COOL : Press once, HEAT : Press twice).
2. Test run operation starts and continues to operate for 30 minutes.
3. Compressor operates at rated frequency.
4. Indoor fan operates at High speed.
5. After 30 minutes, test run operation finishes and EMERGENCY OPERATION starts (Operation frequency of compressor varies).
6. To cancel test run operation or EMERGENCY OPERATION, press the emergency operation switch or any button on remote controller.

9-4. OUTDOOR LOW PRESSURE AND OUTDOOR UNIT CURRENT CURVE (single operation)

NOTE: The unit of pressure has been changed to MPa on the international system of units (SI unit system).
The conversion factor is : **1 (MPa [Gauge]) = 10.2 (kgf/cm² [Gauge])**


(1) COOL operation

- ① Both indoor and outdoor units are under the same temperature/humidity condition.
- ② Operation : TEST RUN OPERATION (Refer to 9-3.)


Dry-bulb temperature (°C)	Relative humidity (%)
20	50
25	60
30	70

MXZ-2F33VF MXZ-2F33VF2 MXZ-2F33VF3 MXZ-2F33VF4


15-class unit

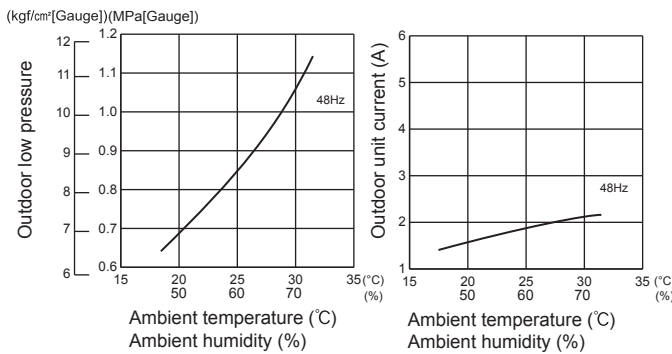


18-class unit

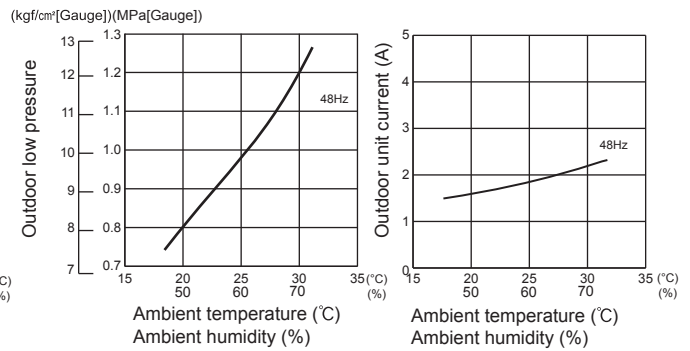


20-class unit

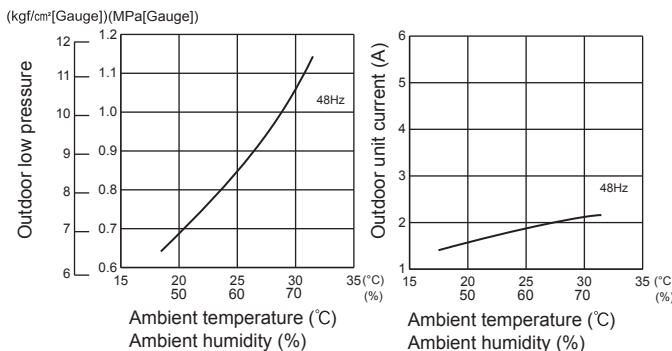

22-class unit

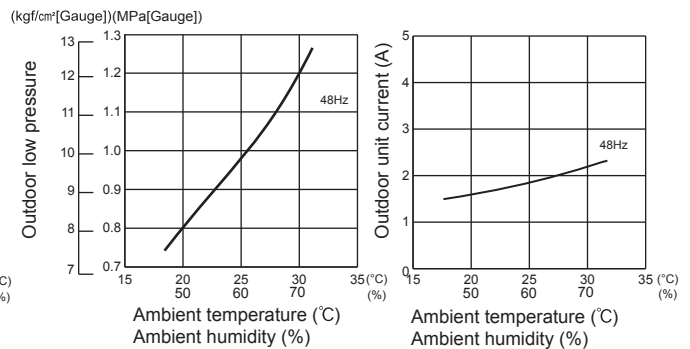


25-class unit

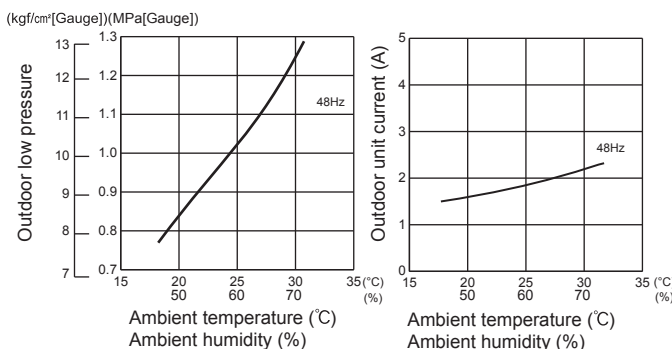


MXZ-2F42VF MXZ-2F42VF2 MXZ-2F42VF3 MXZ-2F33VF4


15-class unit

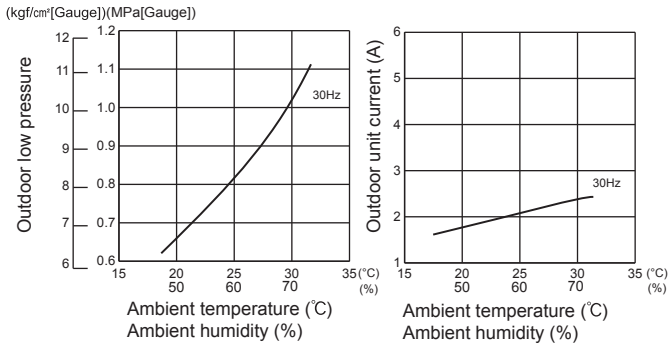


18-class unit

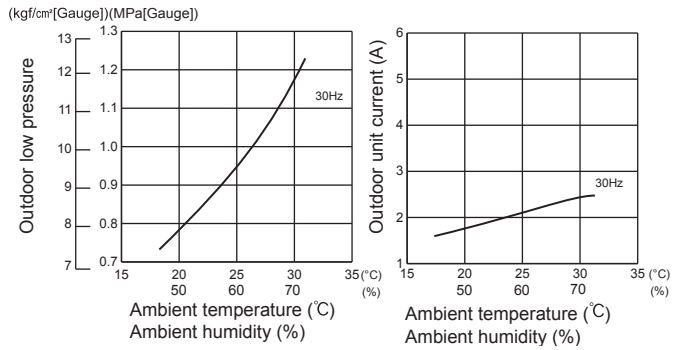


20-class unit

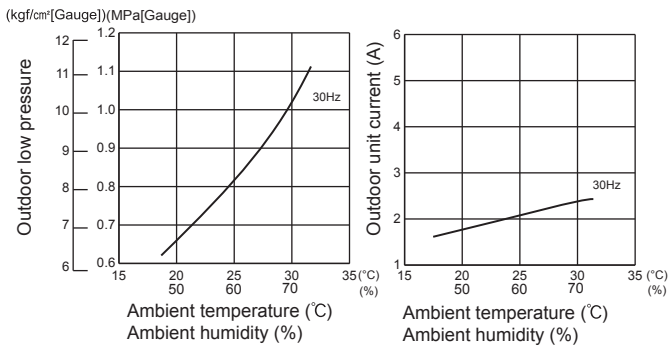


22-class unit

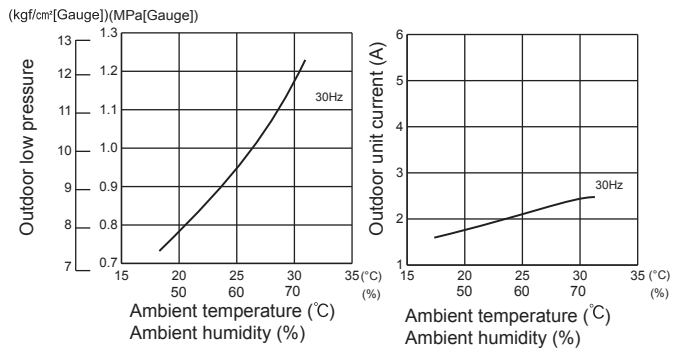

25-class unit

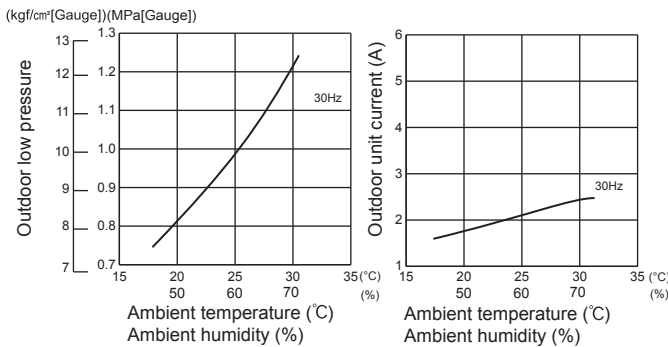


35-class unit

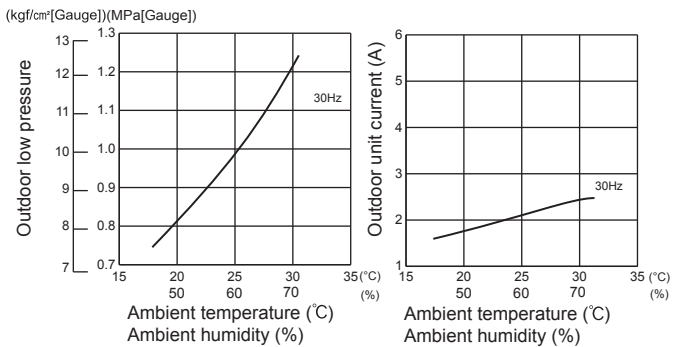


**MXZ-2F53VF MXZ-2F53VF2 MXZ-2F53VF3 MXZ-2F53VF4 MXZ-2F53VFH MXZ-2F53VFH2
MXZ-2F53VFH3 MXZ-2F53VFH4**


15-class unit

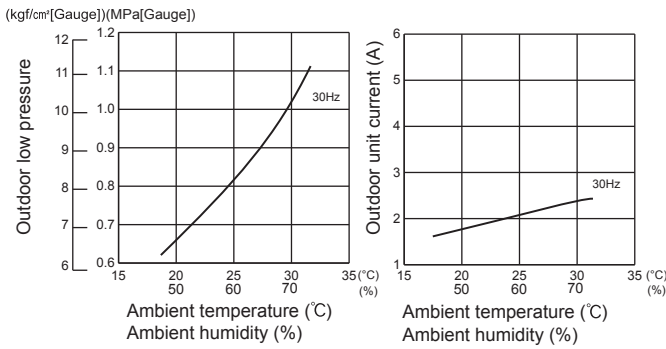


18-class unit

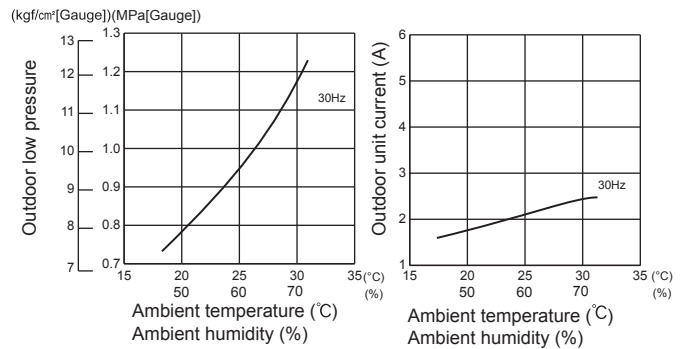


20-class unit

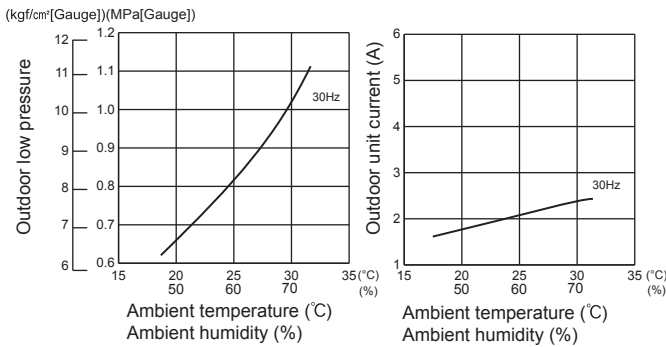


22-class unit

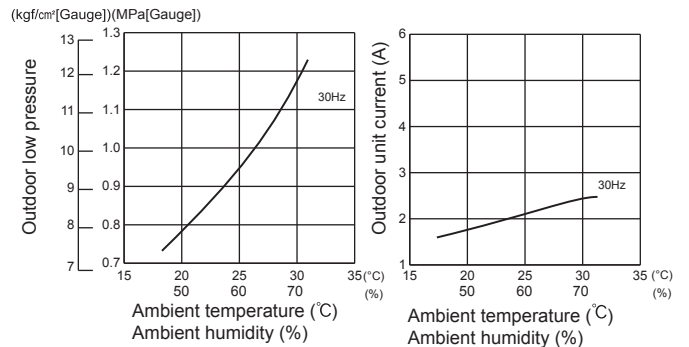


25-class unit

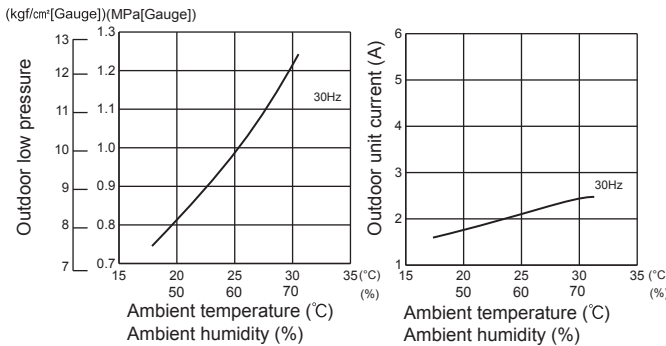


35-class unit

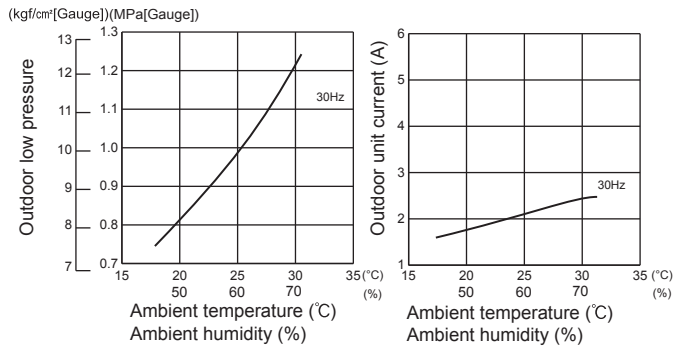

42-class unit

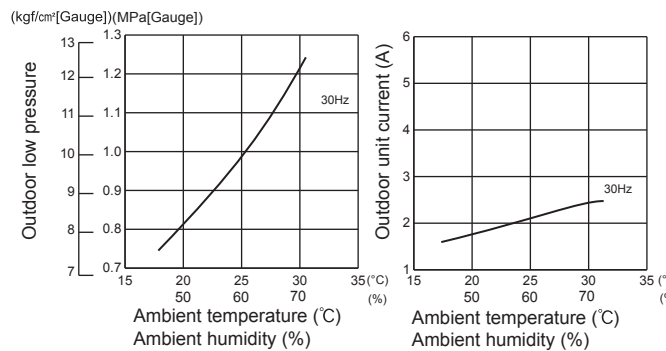


50-class unit

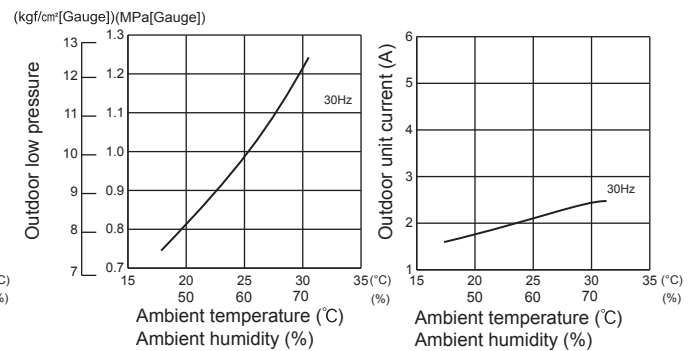


MXZ-3F54VF MXZ-3F54VF2 MXZ-3F54VF3 MXZ-3F54VF4


15-class unit

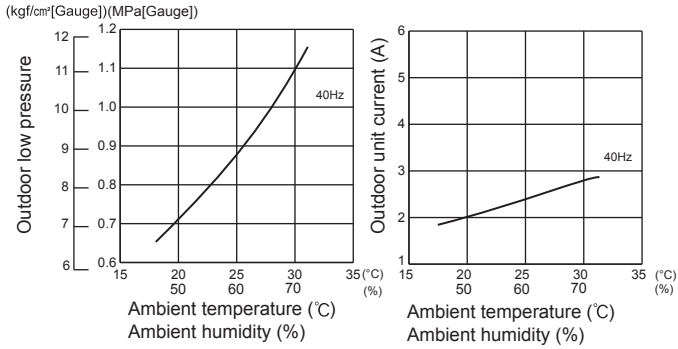


18-class unit

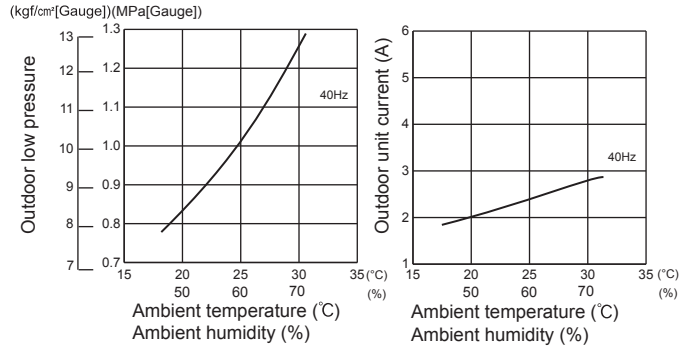


20-class unit

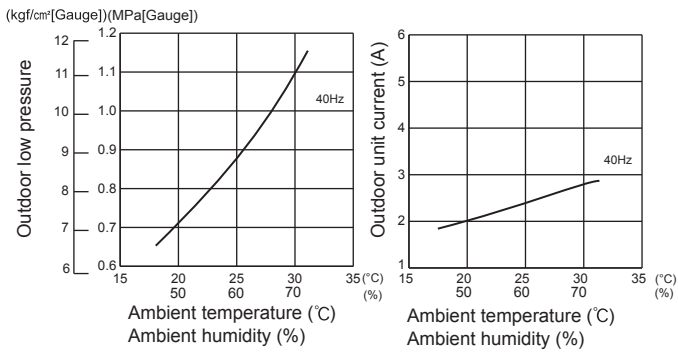


22-class unit

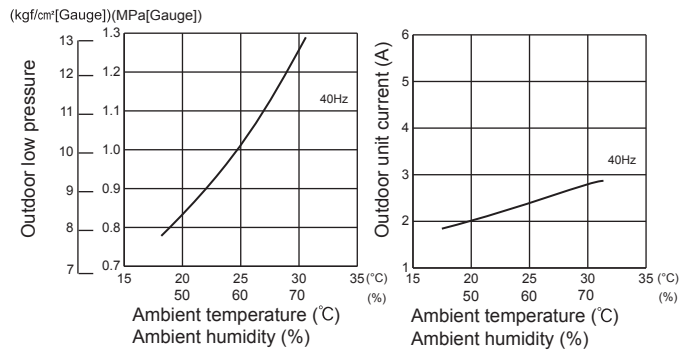


25-class unit

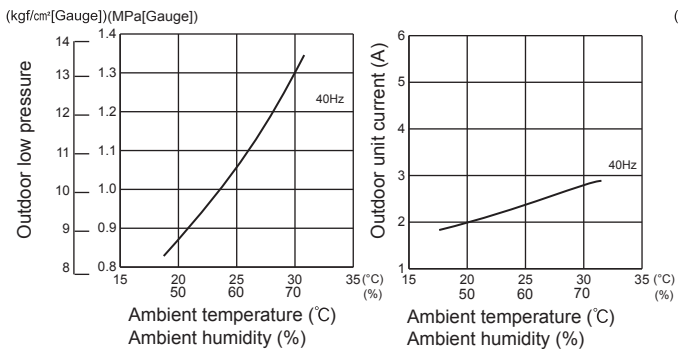


35-class unit

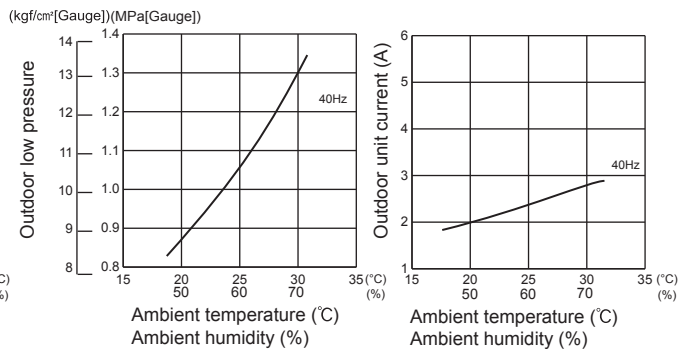

42-class unit

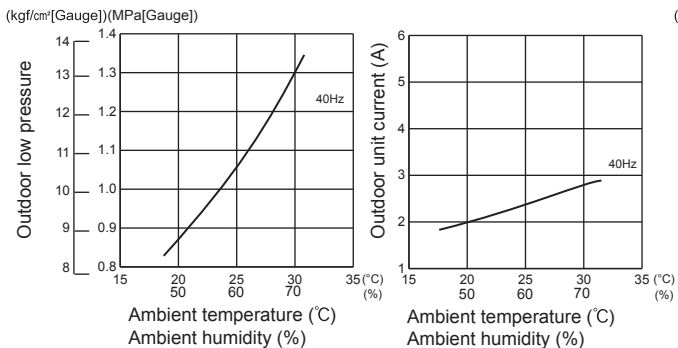


50-class unit

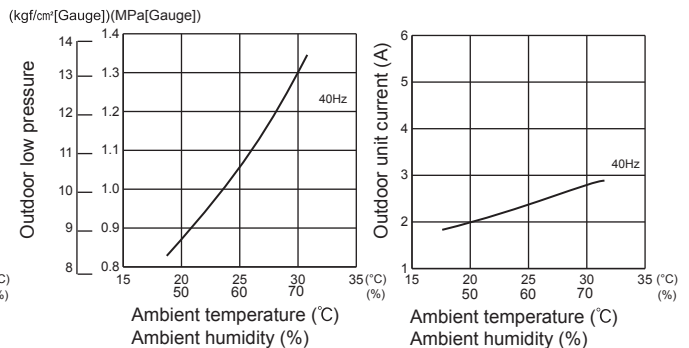


**MXZ-3F68VF MXZ-3F68VF2 MXZ-3F68VF3 MXZ-3F68VF4 MXZ-4F72VF MXZ-4F72VF2
MXZ-4F72VF3 MXZ-4F72VF4**

60-class unit

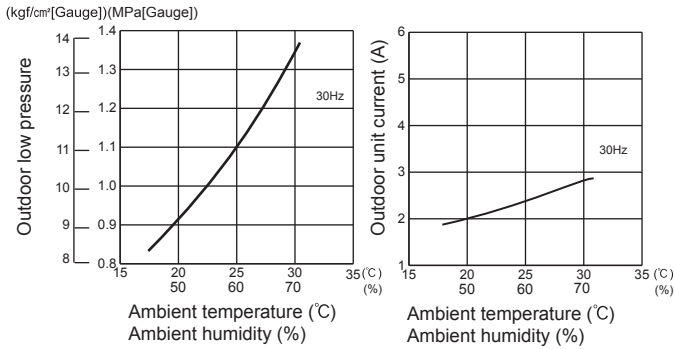


MXZ-4F80VF2 MXZ-4F80VF3 MXZ-4F80VF4


15-class unit

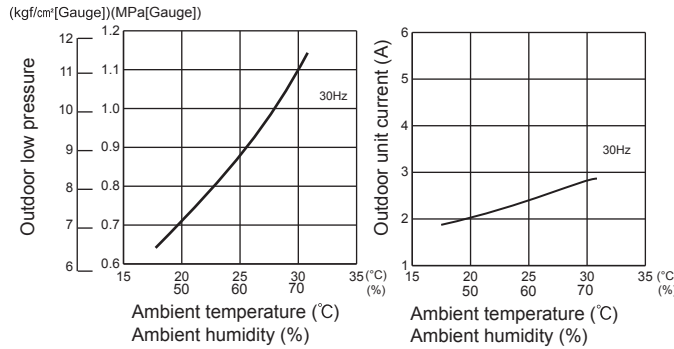


18-class unit

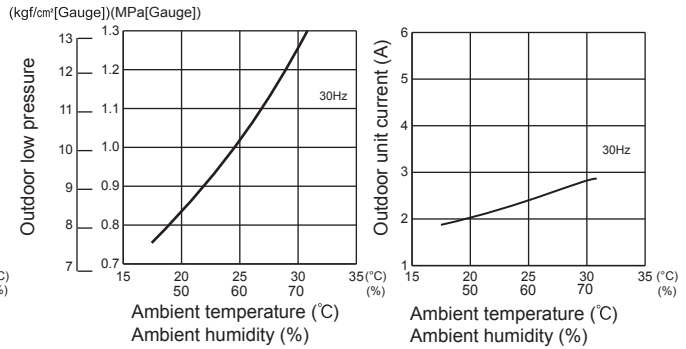


20-class unit

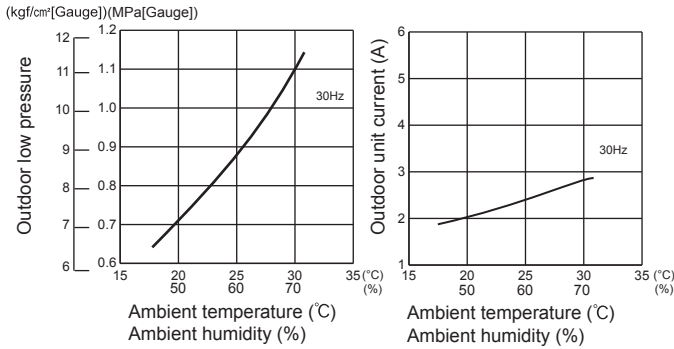


22-class unit

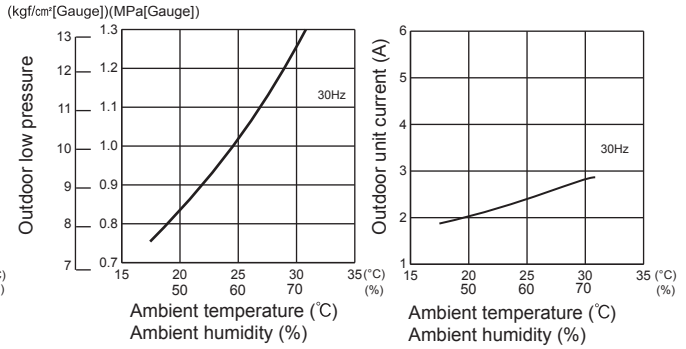

25-class unit

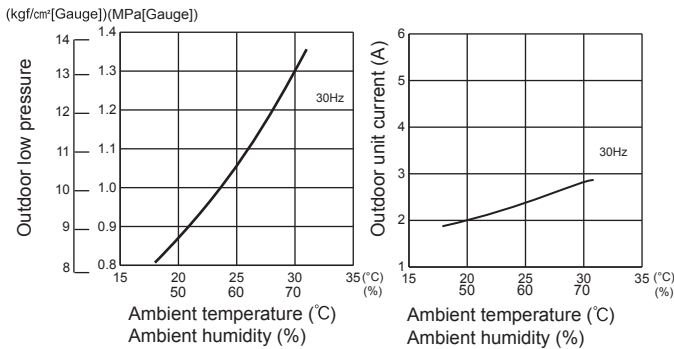


35-class unit

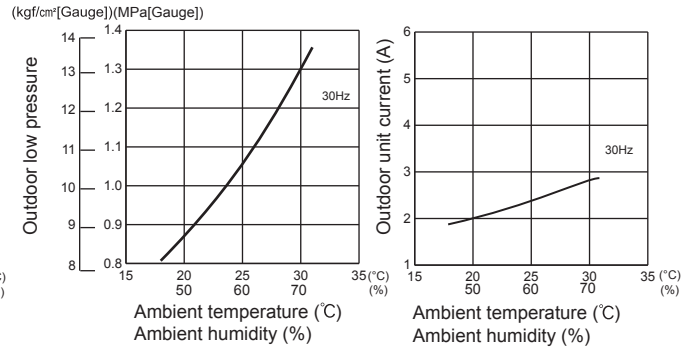


MXZ-4F80VF2 MXZ-4F80VF3 MXZ-4F80VF4


42-class unit

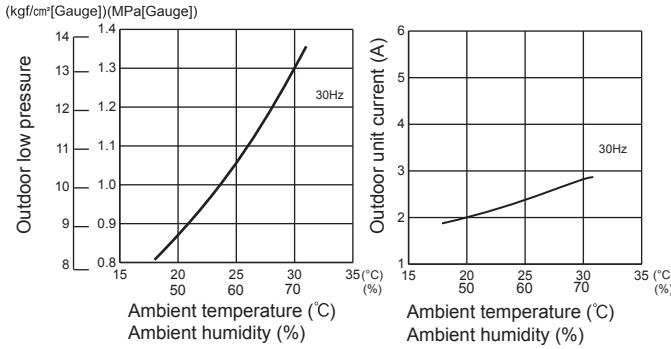

50-class unit

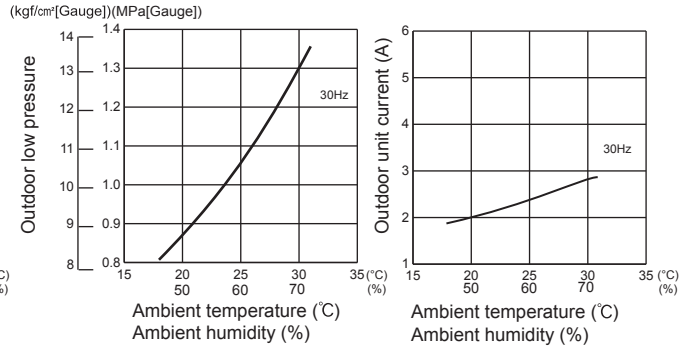


60-class unit

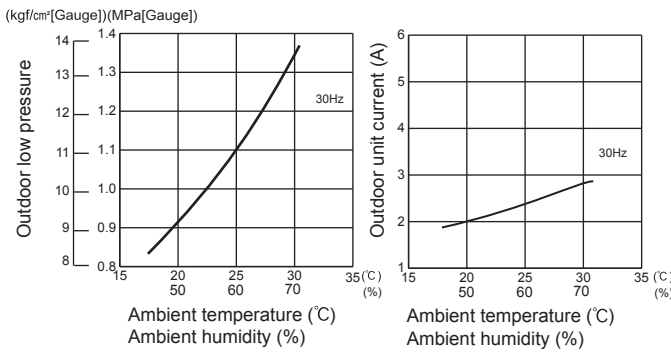


MXZ-4F83VF MXZ-4F83VF2


15-class unit

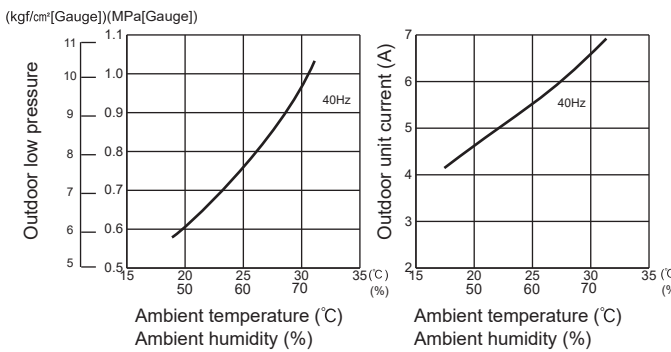


18-class unit

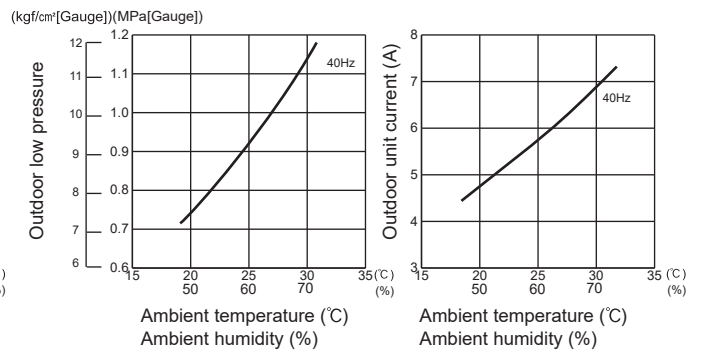

20-class unit

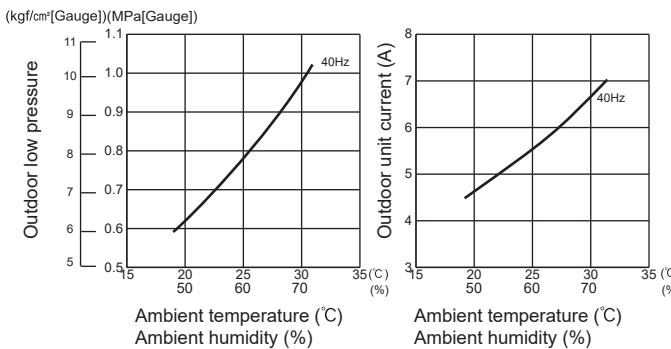


22-class unit

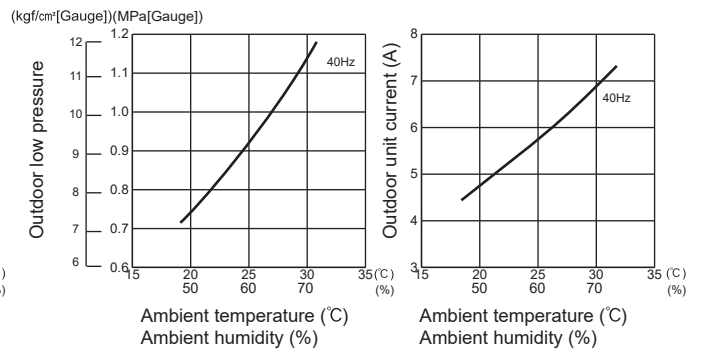


MXZ-6F120VF2 MXZ-6F122VF


15-class unit

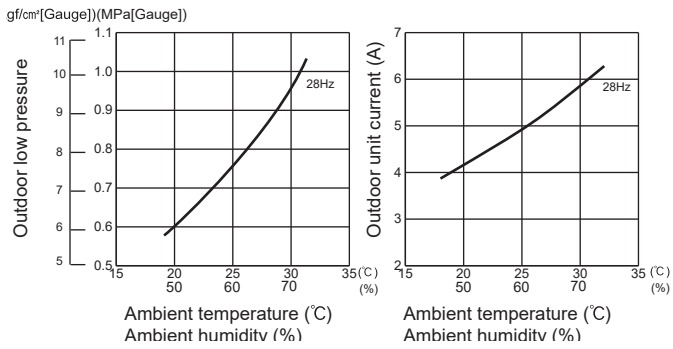


18-class unit

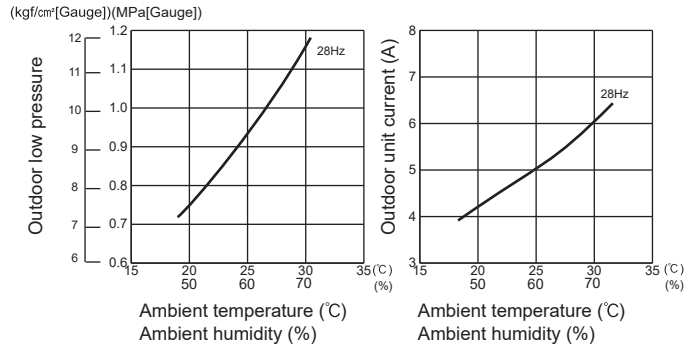


20-class unit

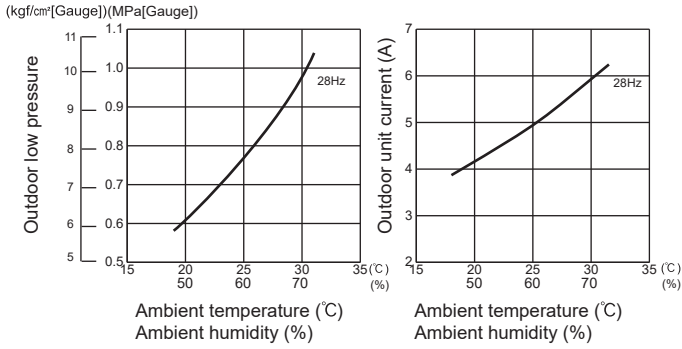


22-class unit

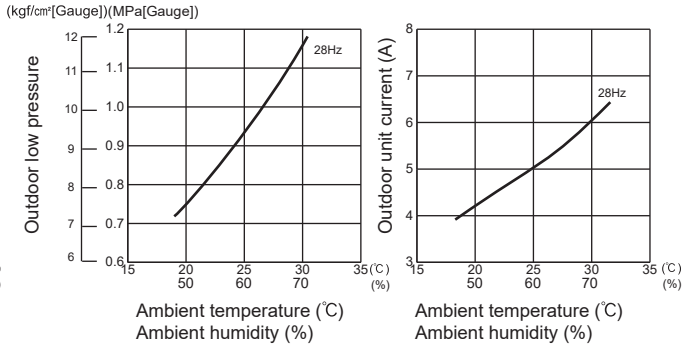


25-class unit

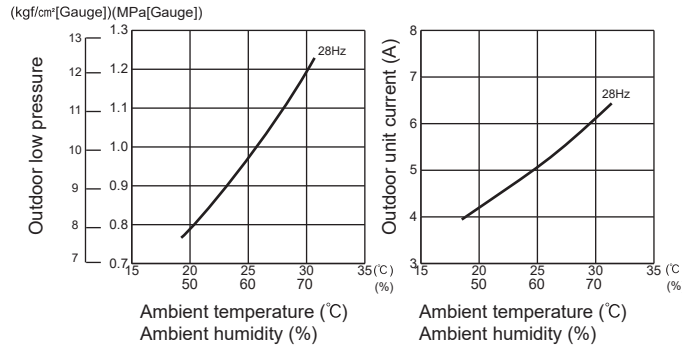


35-class unit

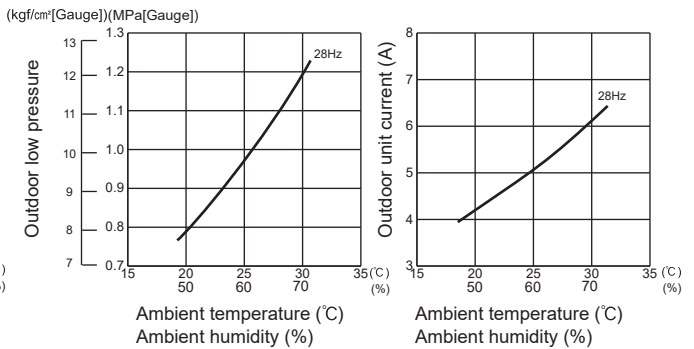

42-class unit

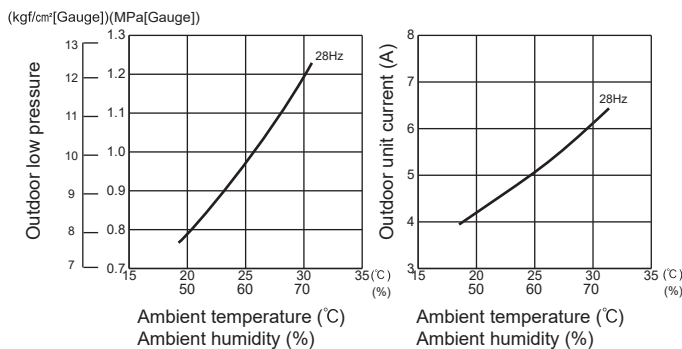


50-class unit

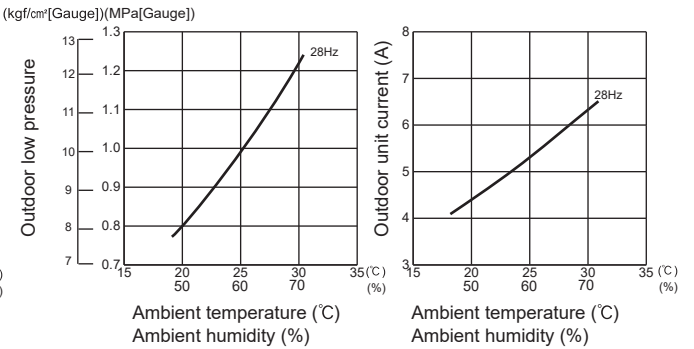


MXZ-2F53VFHZ MXZ-2F53VFHZ2

42-class unit

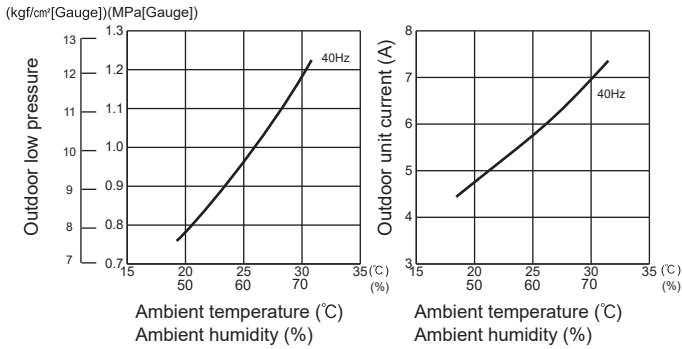


50-class unit

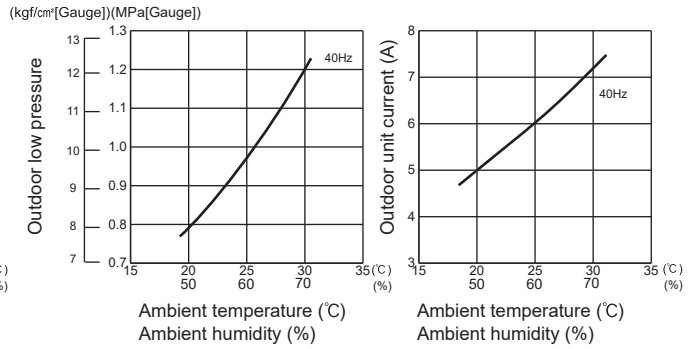


MXZ-4F83VFHZ MXZ-4F83VFHZ2


15-class unit

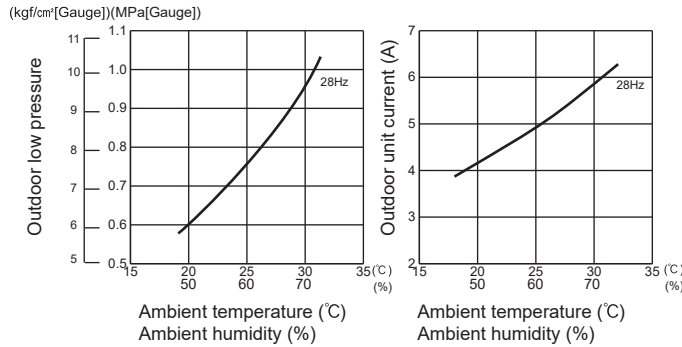


18-class unit

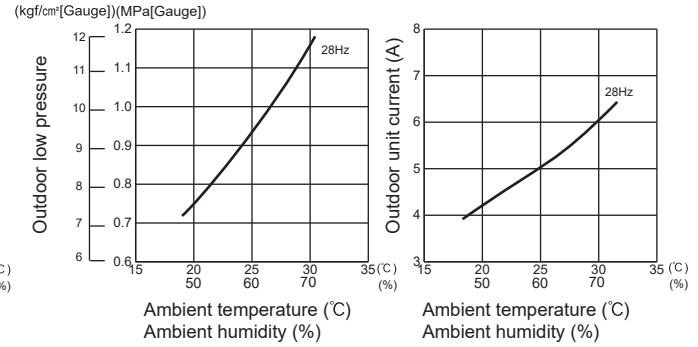


20-class unit

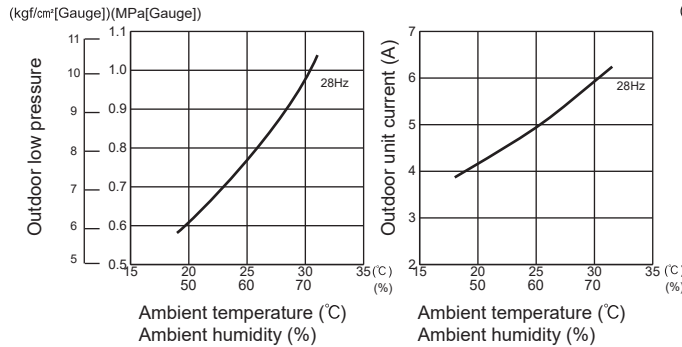


22-class unit

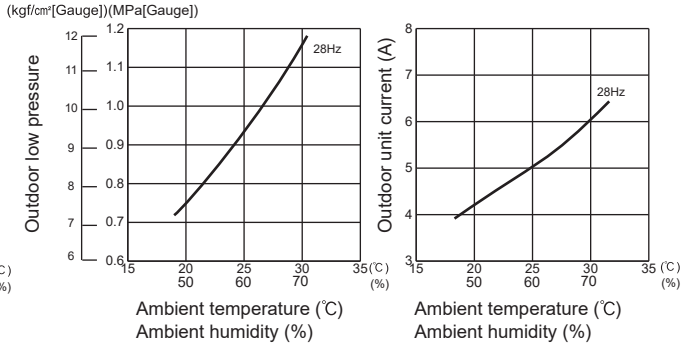

25-class unit

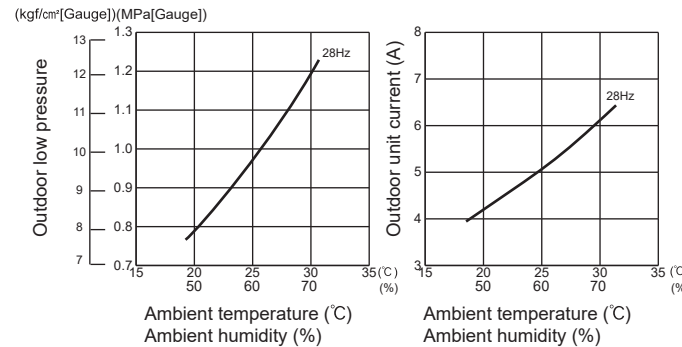


35-class unit

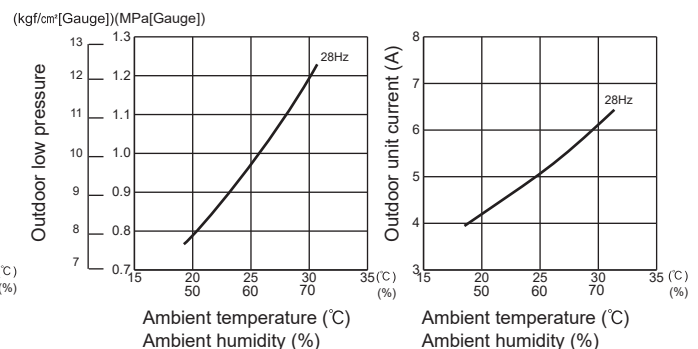


MXZ-4F83VFHZ MXZ-4F83VFHZ2


42-class unit

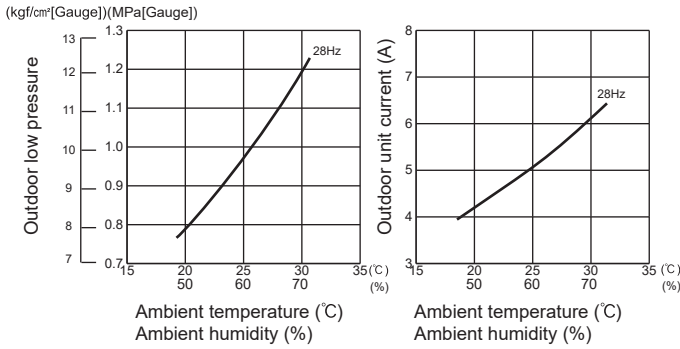


50-class unit

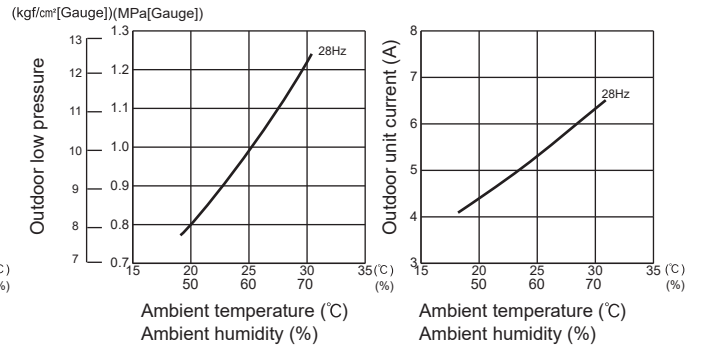

60-class unit

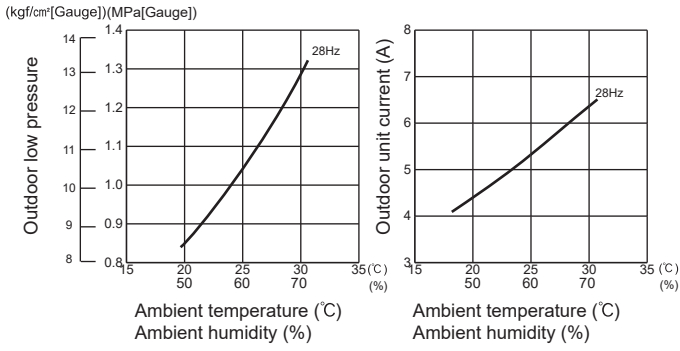

71-class unit

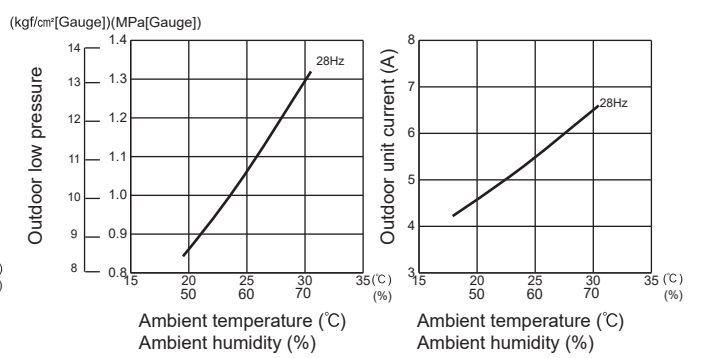

(2) HEAT operation


① Condition :

	Indoor	Outdoor			
Dry bulb temperature (°C)	20.0	2	7	15	20.0
Wet bulb temperature (°C)	14.5	1	6	12	14.5


② Operation : TEST RUN OPERATION (Refer to 9-3.)

MXZ-2F33VF MXZ-2F33VF2 MXZ-2F33VF3 MXZ-2F33VF4


15-class unit

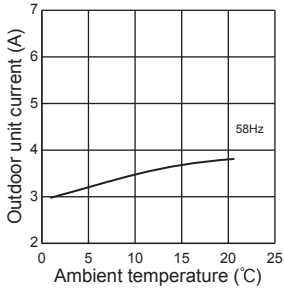


18-class unit

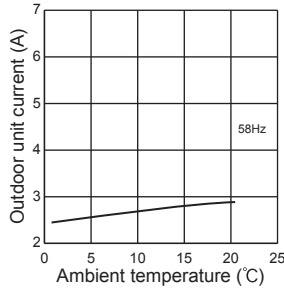


20-class unit

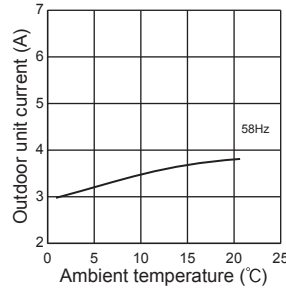

22-class unit

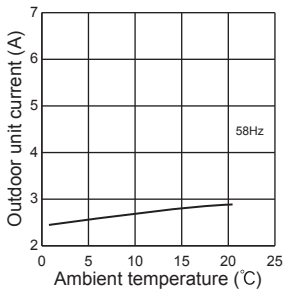


25-class unit

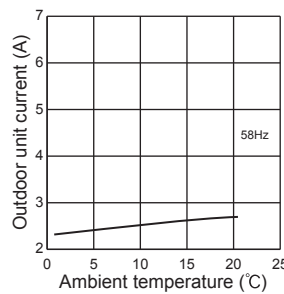


MXZ-2F42VF MXZ-2F42VF2 MXZ-2F42VF3 MXZ-2F42VF4


15-class unit

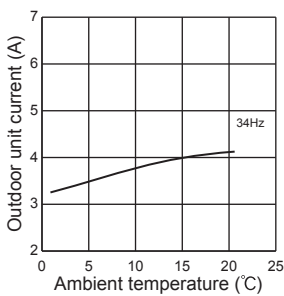


18-class unit

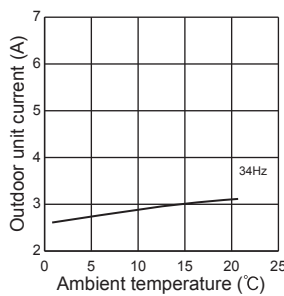


20-class unit

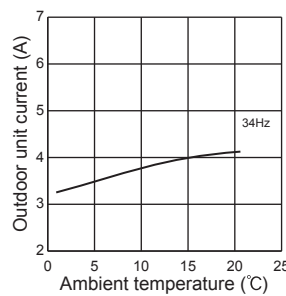


22-class unit

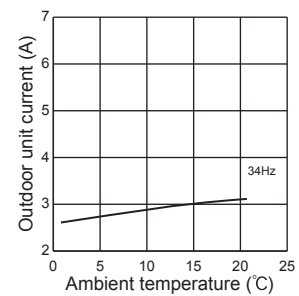

25-class unit

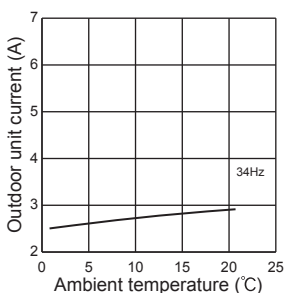


35-class unit

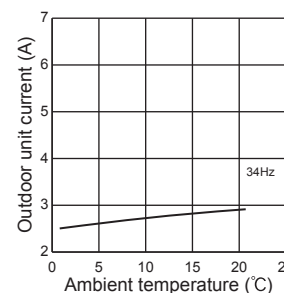


**MXZ-2F53VF MXZ-2F53VF2 MXZ-2F53VF3 MXZ-2F53VF4 MXZ-2F53VFH MXZ-2F53VFH2
MXZ-2F53VFH3 MXZ-2F53VFH4**


15-class unit

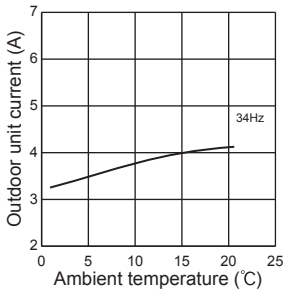


18-class unit

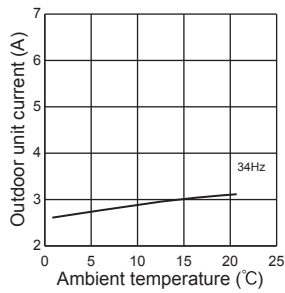


20-class unit

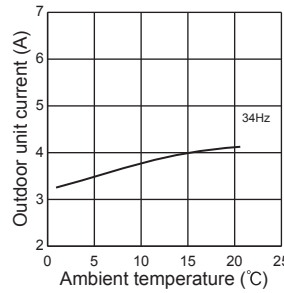


22-class unit

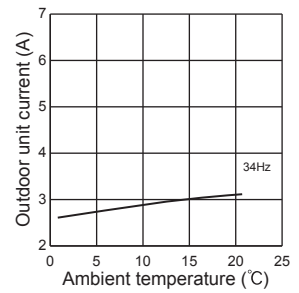


25-class unit

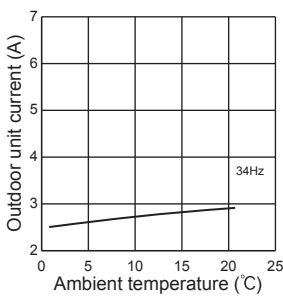


35-class unit

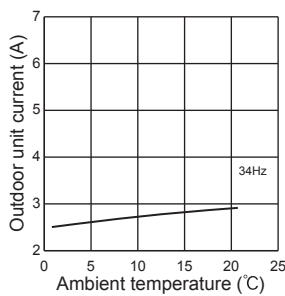

42-class unit

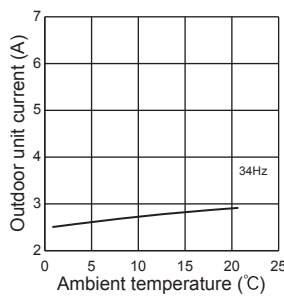


50-class unit

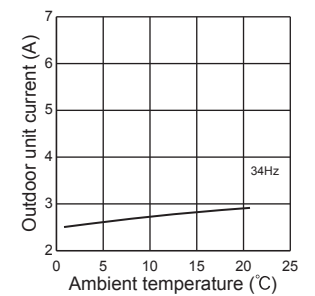


MXZ-3F54VF MXZ-3F54VF2 MXZ-3F54VF3 MXZ-3F54VF4


15-class unit

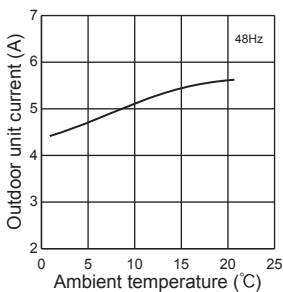


18-class unit

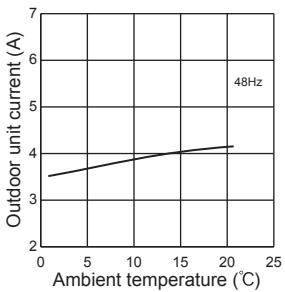


20-class unit

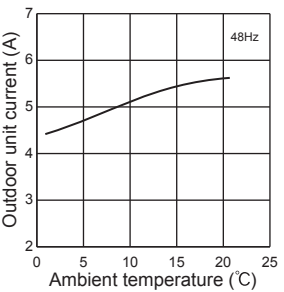


22-class unit

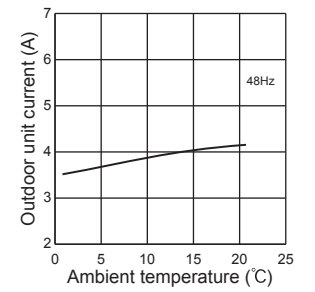


25-class unit

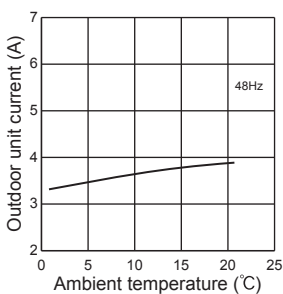


35-class unit

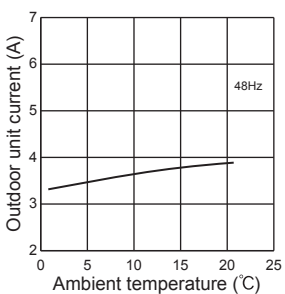

42-class unit

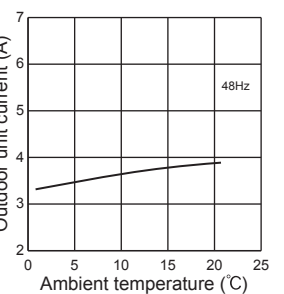


50-class unit

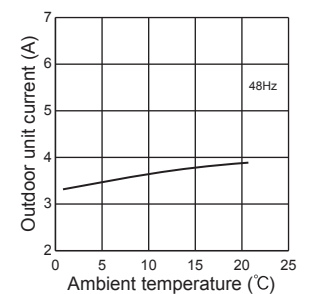


**MXZ-3F68VF MXZ-3F68VF2 MXZ-3F68VF3 MXZ-3F68VF4 MXZ-4F72VF MXZ-4F72VF2
MXZ-4F72VF3 MXZ-4F72VF4**


15-class unit

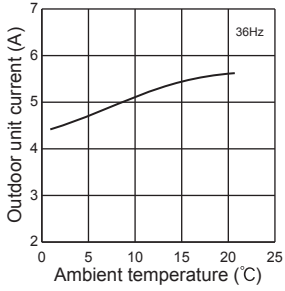


18-class unit

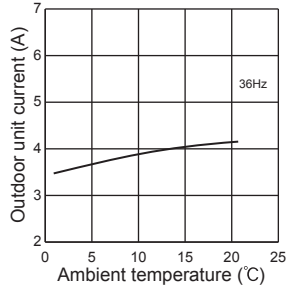


20-class unit

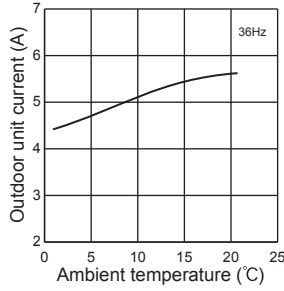


22-class unit

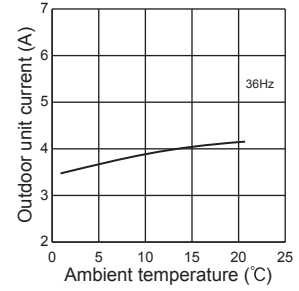


25-class unit

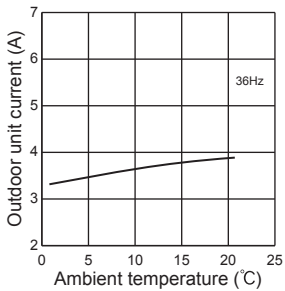


35-class unit

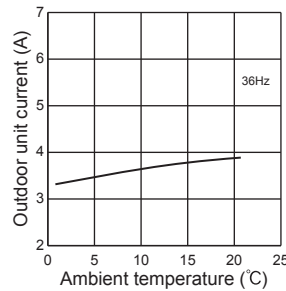


42-class unit

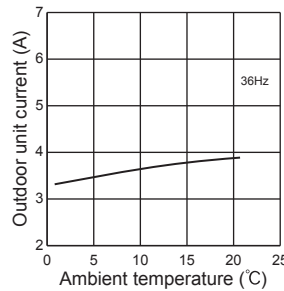

50-class unit

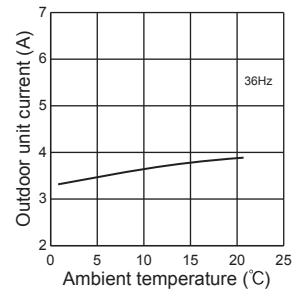


60-class unit

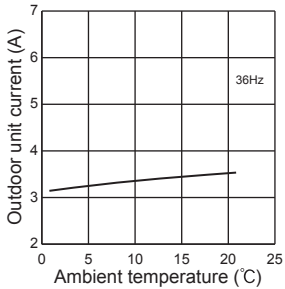


MXZ-4F80VF2 MXZ-4F80VF3 MXZ-4F80VF4


15-class unit

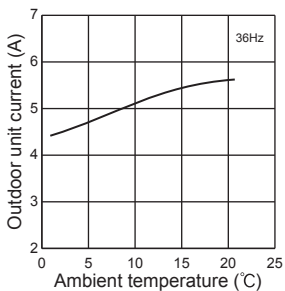


18-class unit

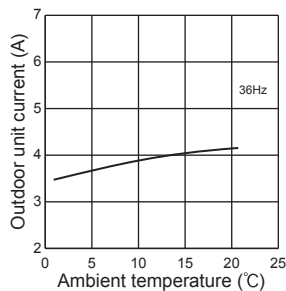


20-class unit

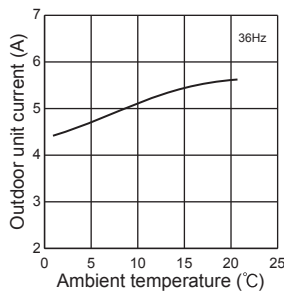


22-class unit

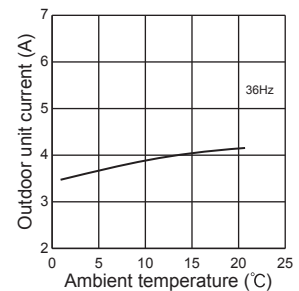


25-class unit

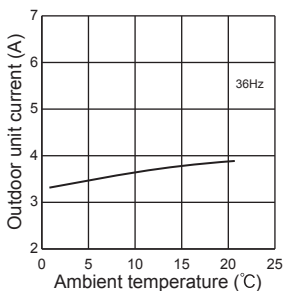


35-class unit

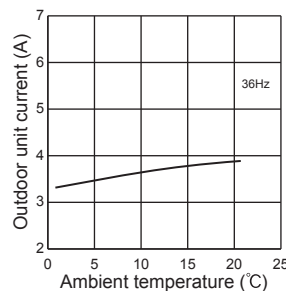

42-class unit

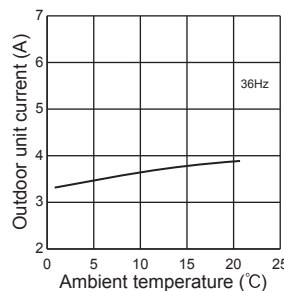


50-class unit

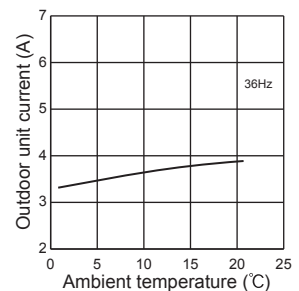


MXZ-4F80VF2 MXZ-4F80VF3 MXZ-4F80VF4

60-class unit

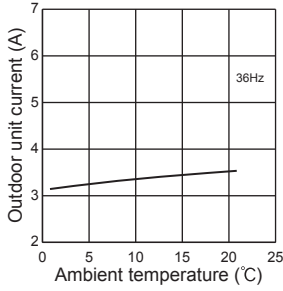


MXZ-4F83VF MXZ-4F83VF2


15-class unit

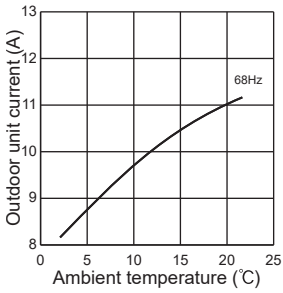


18-class unit

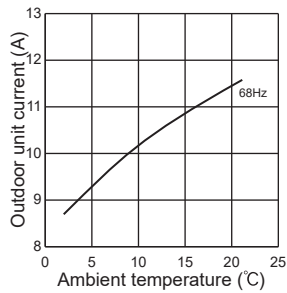


20-class unit

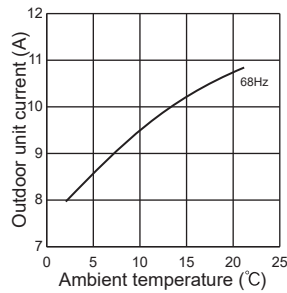


22-class unit

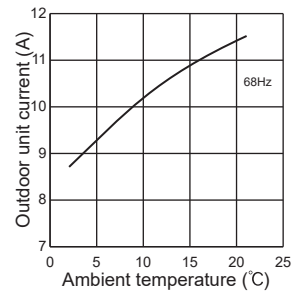


25-class unit

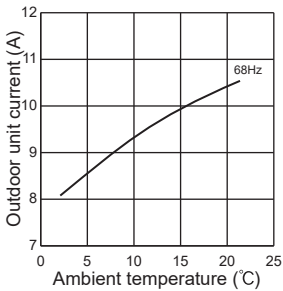


35-class unit

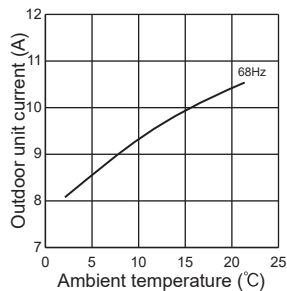


42-class unit

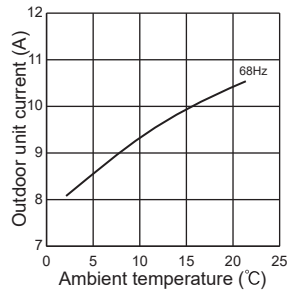


50-class unit

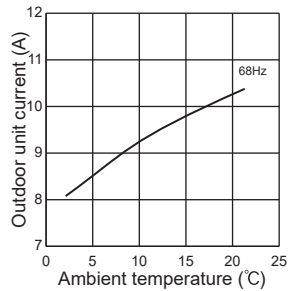

60-class unit

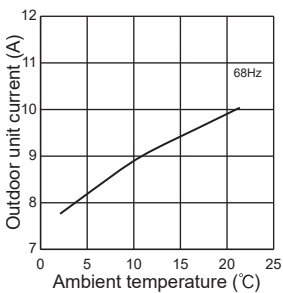


71-class unit

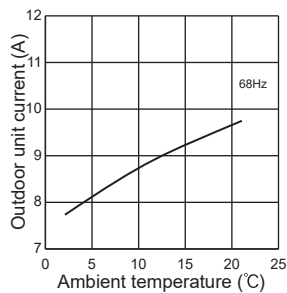


MXZ-5F102VF MXZ-5F102VF2


15-class unit

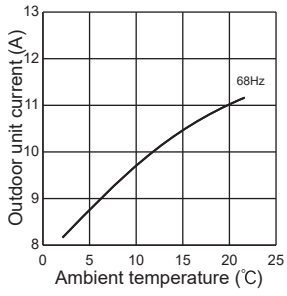


18-class unit

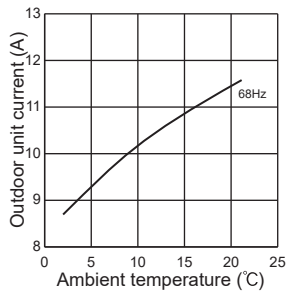


20-class unit

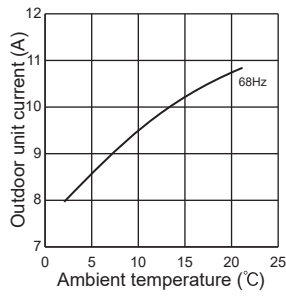


22-class unit

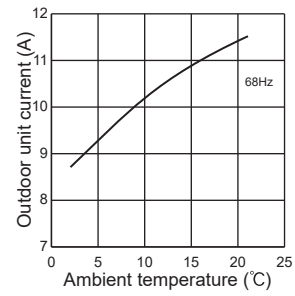


25-class unit

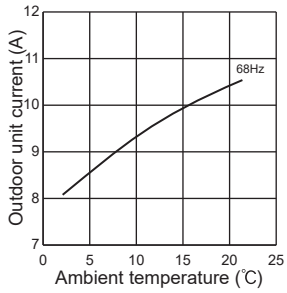


35-class unit

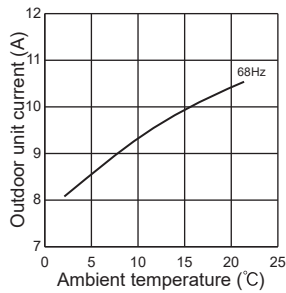


42-class unit

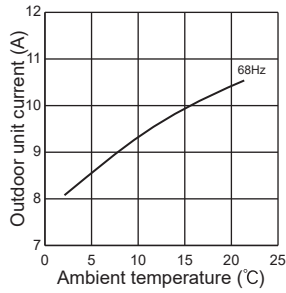


50-class unit

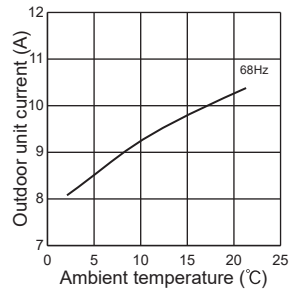

60-class unit

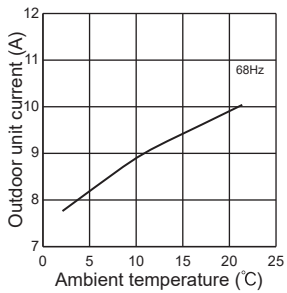


71-class unit

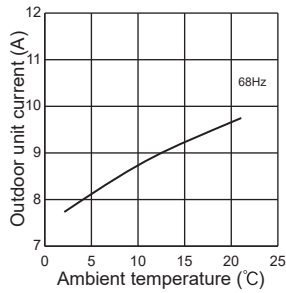


MXZ-6F120VF2 MXZ-6F122VF


15-class unit

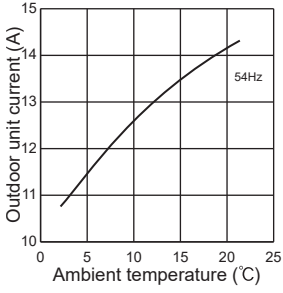


18-class unit

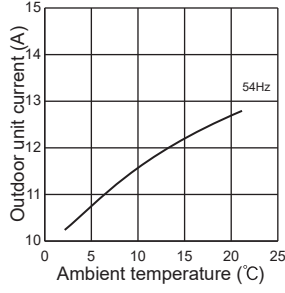


20-class unit

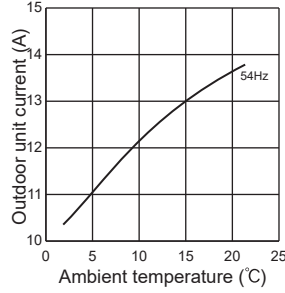


22-class unit

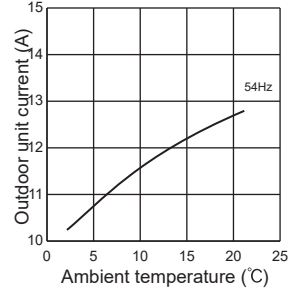


25-class unit

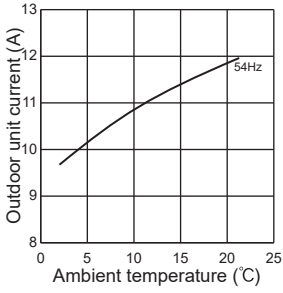


35-class unit

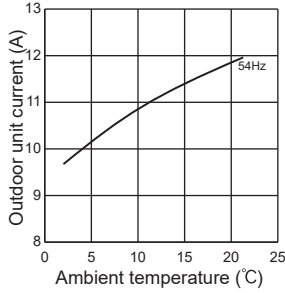


42-class unit

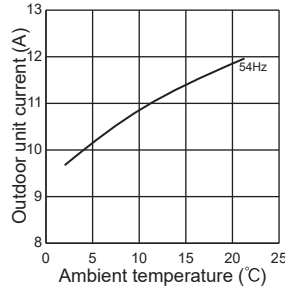


50-class unit

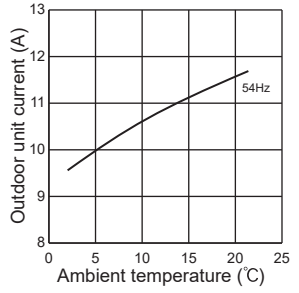

60-class unit

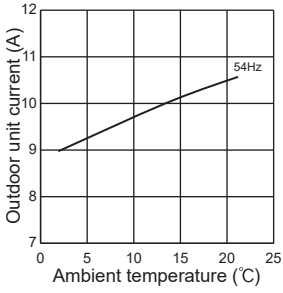


71-class unit

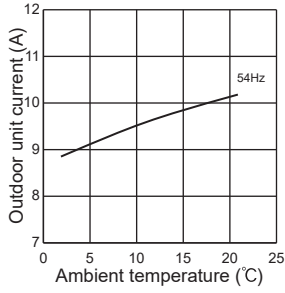


MXZ-2F53VFHZ MXZ-2F53VFHZ2


15-class unit

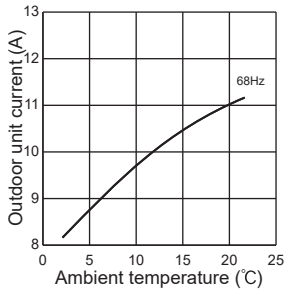


18-class unit

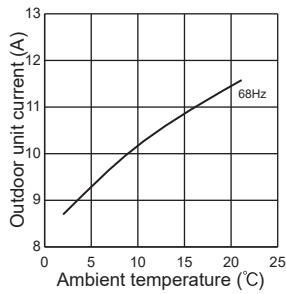


20-class unit

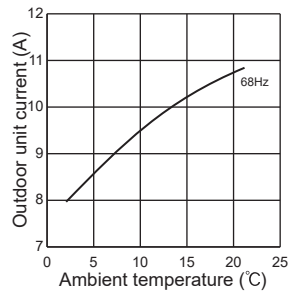


22-class unit

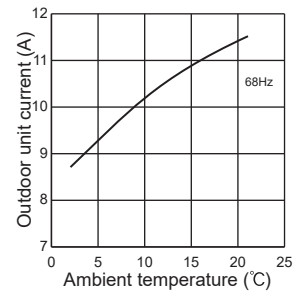


25-class unit

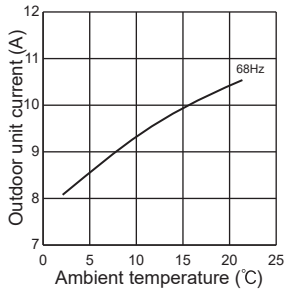


35-class unit

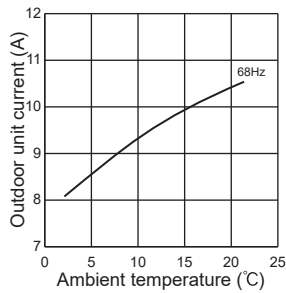

42-class unit

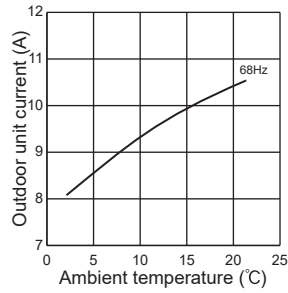


50-class unit

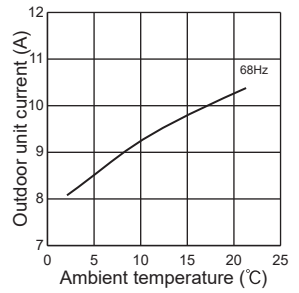


MXZ-4F83VFHZ MXZ-4F83VFHZ2


15-class unit

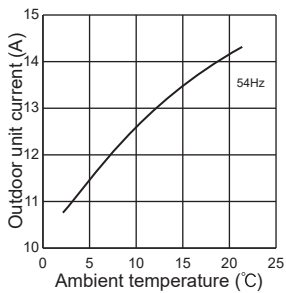


18-class unit

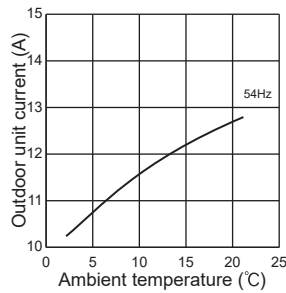


20-class unit

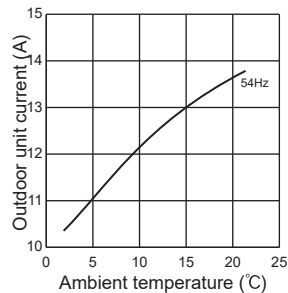


22-class unit

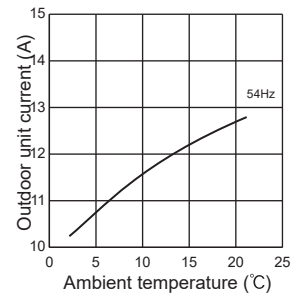


25-class unit

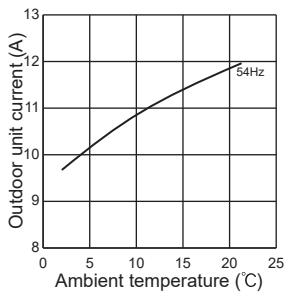


35-class unit

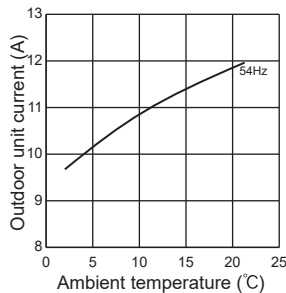


42-class unit

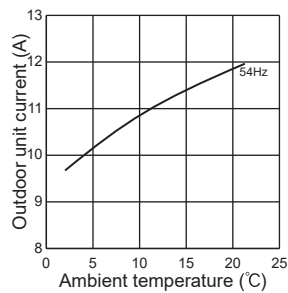


50-class unit

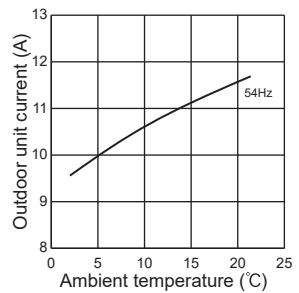

60-class unit

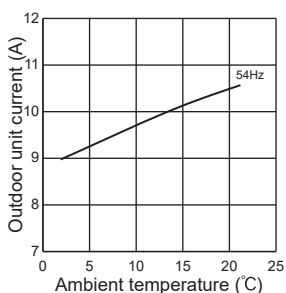

71-class unit

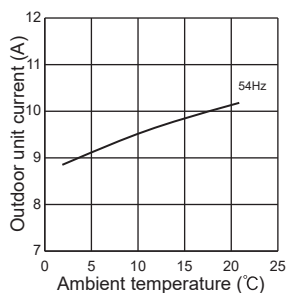

MXZ-2F33VF	MXZ-2F42VF	MXZ-2F53VF	MXZ-2F53VFH
MXZ-2F33VF2	MXZ-2F42VF2	MXZ-2F53VF2	MXZ-2F53VFH2
MXZ-2F33VF3	MXZ-2F42VF3	MXZ-2F53VF3	MXZ-2F53VFH3
MXZ-2F33VF4	MXZ-2F42VF4	MXZ-2F53VF4	MXZ-2F53VFH4
MXZ-3F54VF	MXZ-3F68VF	MXZ-4F72VF	
MXZ-3F54VF2	MXZ-3F68VF2	MXZ-4F72VF2	MXZ-4F80VF2
MXZ-3F54VF3	MXZ-3F68VF3	MXZ-4F72VF3	MXZ-4F80VF3
MXZ-3F54VF4	MXZ-3F68VF4	MXZ-4F72VF4	MXZ-4F80VF4

Relation between main sensor and actuator

Sensor	Purpose	Actuator				
		Compressor	LEV	Outdoor fan motor	4-way valve	Defrost heater *1
Discharge temperature thermistor	Protection	○	○			
Indoor coil temperature thermistor	Cooling: Coil frost prevention	○				
	Heating: High pressure protection	○	○			
Defrost thermistor	Heating: Defrosting	○	○	○	○	
Fin temperature thermistor	Protection	○		○		
Ambient temperature thermistor	Control/Protection	○	○	○		
	Heating: Defrosting (Heater)					○
Outdoor heat exchanger temperature thermistor	Cooling: Control/Protection	○	○	○		
Capacity code	Control	○	○			

*1 MXZ-2F53VFH, MXZ-2F53VFH2, MXZ-2F53VFH3

MXZ-4F83VF	MXZ-5F102VF	MXZ-6F120VF2
MXZ-4F83VF2	MXZ-5F102VF2	MXZ-6F122VF
MXZ-2F53VFHZ	MXZ-4F83VFHZ	
MXZ-2F53VFHZ2	MXZ-4F83VFHZ2	

Relation between main sensor and actuator

Sensor	Purpose	Actuator					
		Compressor	LEV	Outdoor fan motor	4-way valve	2-way solenoid valve *1	Defrost heater *2
Discharge temperature thermistor	Protection	○	○			○	
Indoor coil temperature thermistor	Cooling: Coil frost prevention	○				○	
	Heating: High pressure protection	○	○				
Defrost thermistor	Heating: Defrosting	○	○	○	○		
Fin temperature thermistor	Protection	○		○			
Ambient temperature thermistor	Control/Protection	○	○	○		○	
	Heating: Defrosting (Heater)						○
Outdoor heat exchanger temperature thermistor	Cooling: Control/Protection	○	○	○		○	
Capacity code	Control	○	○				


*1 MXZ-6F120VF2, MXZ-6F122VF, MXZ-4F83VFHZ, MXZ-4F83VFHZ2

*2 MXZ-2F53VFHZ, MXZ-4F83VFHZ, MXZ-2F53VFHZ2, MXZ-4F83VFHZ2

MXZ-2F33VF	MXZ-2F42VF	MXZ-2F53VF	MXZ-2F53VFH
MXZ-2F33VF2	MXZ-2F42VF2	MXZ-2F53VF2	MXZ-2F53VFH2
MXZ-2F33VF3	MXZ-2F42VF3	MXZ-2F53VF3	MXZ-2F53VFH3
MXZ-2F33VF4	MXZ-2F42VF4	MXZ-2F53VF4	MXZ-2F53VFH4
MXZ-3F54VF	MXZ-3F68VF	MXZ-4F72VF	
MXZ-3F54VF2	MXZ-3F68VF2	MXZ-4F72VF2	MXZ-4F80VF2
MXZ-3F54VF3	MXZ-3F68VF3	MXZ-4F72VF3	MXZ-4F80VF3
MXZ-3F54VF4	MXZ-3F68VF4	MXZ-4F72VF4	MXZ-4F80VF4
MXZ-4F83VF	MXZ-5F102VF	MXZ-6F120VF2	
MXZ-4F83VF2	MXZ-5F102VF2	MXZ-6F122VF	
MXZ-2F53VFHZ	MXZ-4F83VFHZ		
MXZ-2F53VFHZ2	MXZ-4F83VFHZ2		



11-1. THE POSITION OF SWITCH

<MXZ-2F33VF/2F42VF/2F53VF/2F53VFH, MXZ-2F33VF2/2F42VF2/2F53VF2/2F53VFH2, MXZ-2F33VF3/2F42VF3/2F53VF3/2F53VFH3/MXZ-2F33VF4/2F42VF4/2F53VF4/2F53VFH4>

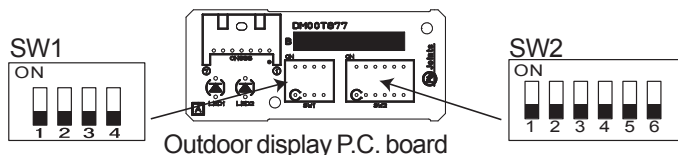

<MXZ-3F54VF/3F68VF/4F72VF, MXZ-3F54VF2/3F68VF2/4F72VF2/4F80VF2, MXZ-3F54VF3/3F68VF3/4F72VF3/4F80VF3, MXZ-3F54VF4/3F68VF4/4F72VF4/4F80VF4>

<MXZ-4F83/5F102/6F122VF/ MXZ-2F53VFHZ/4F83VFHZ MXZ-4F83/5F102/6F120VF2/ MXZ-2F53VFHZ2/4F83VFHZ2>

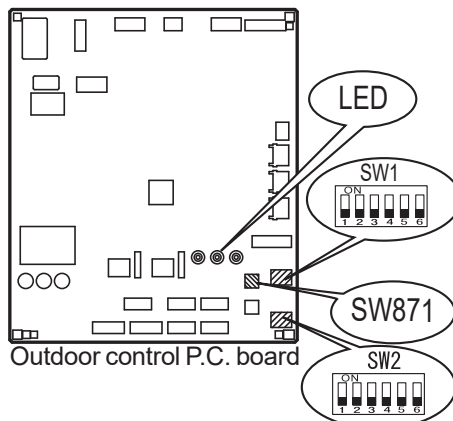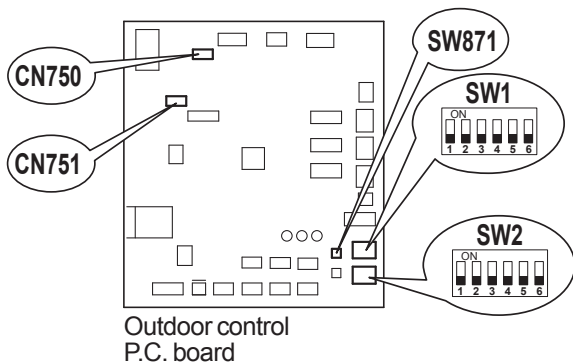

11-2. LOCKING THE OPERATION MODE OF THE AIR CONDITIONER (COOL, DRY, HEAT)

With this function, once the operation mode is locked to either COOL/DRY mode or HEAT mode, the air conditioner operates in that mode only.

Changing the setting is required to activate this function. Explain about this function to your customers and ask them whether they want to use it.


[How to lock the operation mode]

- (1) Turn OFF the power supply and make sure that the LED goes off.
- (2) Set SW1 as shown in the figure below.
- (3) Turn ON the power supply.


<MXZ-2F33VF/2F42VF/2F53VF/2F53VFH
 MXZ-2F33VF2/2F42VF2/2F53VF2/2F53VFH2
 MXZ-2F33VF3/2F42VF3/2F53VF3/2F53VFH3
 MXZ-2F33VF4/2F42VF4/2F53VF4/2F53VFH4>

<MXZ-3F54VF/3F68VF/4F72VF
 MXZ-3F54VF2/3F68VF2/4F72VF2/4F80VF2
 MXZ-3F54VF3/3F68VF3/4F72VF3/4F80VF3
 MXZ-3F54VF4/3F68VF4/4F72VF4/4F80VF4
 MXZ-4F83/5F102/6F122VF/2F53/4F83VFH
 MXZ-4F83/5F102/6F120VF2/2F53/4F83VFHZ2>

SW1 on the outdoor display P.C. board

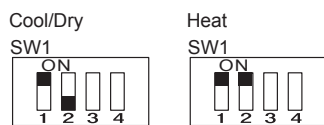

SW1 on the outdoor control P.C. board

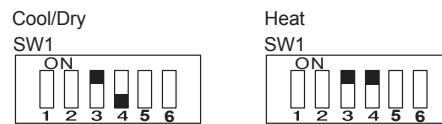

11-3. HOW TO SET LOW STANDBY POWER MODE

MXZ-3F54VF MXZ-3F68VF MXZ-4F72VF
 MXZ-3F54VF2 MXZ-3F68VF2 MXZ-4F72VF2 MXZ-4F80VF2

- The factory setting of low standby power mode for above units is “Activated”.

In case that compressor is not in operation, and both LED1 (Red) and LED2 (Yellow) are not lit, check the setting of low standby power mode on the outdoor control P.C. board. And check the settings for dip switch (SW1) and jumper connector (SC751).

- Before turning on the breaker, settings for dip switch (SW1) and jumper connector (SC751) are necessary on the outdoor control P.C. board.
- When connecting one or more indoor units listed in Table 1, change the setting to deactivated low standby power mode.

NOTE:

- Units come with low standby power mode activated as factory setting.
- When connecting one or more indoor units listed in Table 1, the outdoor unit does not work at activated low standby power mode.
- In the event that SC751 is missing, outdoor unit will not work.

Table 1: List of the target models

Type	Model name	Capacity
Wall-mounted	MSZ-AP**VF	15 / 20
1way-cassette	MLZ-KP**VF	25 / 35 / 50
4way-cassette	SLZ-M**FA	15 / 25 / 35 / 50
Ceiling-Concealed	PEAD-M**JA(L)	50
	SEZ-M**DA(L)	25 / 35 / 50 / 60
Ceiling-Suspended	PCA-M**KA	50 / 60


To activate low standby power mode:

- Connect SC751 to CN750.
- Set “2” on SW1 to ON.

To deactivate low standby power mode:

- Connect SC751 to CN751.
- Set “2” on SW1 to OFF.

SC751	SW1	MODE
CN750		Activated
CN751		Deactivated

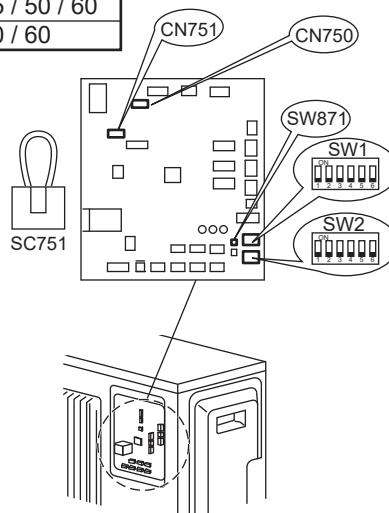

MXZ-3F54VF3 MXZ-3F68VF3 MXZ-4F72VF3 MXZ-4F80VF3
MXZ-3F54VF4 MXZ-3F68VF4 MXZ-4F72VF4 MXZ-4F80VF4
MXZ-4F83VF MXZ-5F102VF MXZ-6F120VF2
MXZ-4F83VF2 MXZ-5F102VF2 MXZ-6F122VF

•The factory setting of low standby power mode for above units is “Deactivated”.

In case that compressor is not in operation, and both LED1 (Red) and LED2 (Yellow) are not lit, check the setting of low standby power mode on the outdoor control P.C. board. And check the settings for dip switch (SW1) and jumper connector (SC751).

- Before turning on the breaker, settings for dip switch (SW1) and jumper connector (SC751) are necessary on the outdoor control P.C. board.
- It is recommended to activate the low standby power mode when none of the indoor units listed in Table 1 is connected.

NOTE:

- Units come with low standby power mode deactivated as factory setting.
- When connecting one or more indoor units listed in Table 1, the outdoor unit does not work at activated low standby power mode.
- In the event that SC751 is missing, outdoor unit will not work.

Table 1: List of the target models



Type	Model name
Wall-mounted	MSZ-AP**VF
1way-cassette	MLZ-KP**VF
4way-cassette	SLZ-M**FA
Ceiling-Concealed	PEAD-M**JA(L)
	SEZ-M**DA(L)
Ceiling-Suspended	PCA-M**KA
Floor-Standing	SFZ-M**VA


To activate low standby power mode:

Connect SC751 to CN750.
 Set “2” on SW1 to ON.

To deactivate low standby power mode:

Connect SC751 to CN751.
 Set “2” on SW1 to OFF.

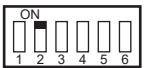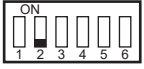SC751	SW1	MODE
CN750		Activated
CN751		Deactivated

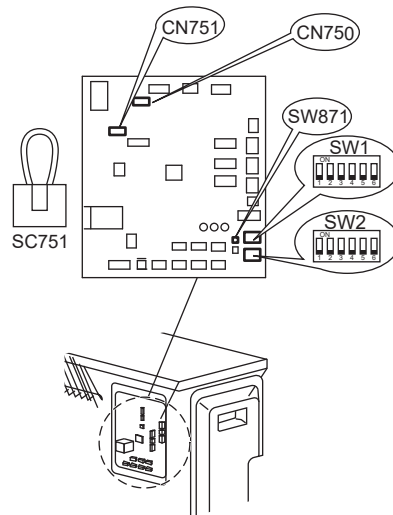

11-4. LOWERING THE OPERATING NOISE OF THE OUTDOOR UNIT

With this function, the operating noise of the outdoor unit can be lowered by reducing the operation load, for example, during nighttime in COOL mode.

However, note that the cooling and heating capacity may lower if this function is activated.


Changing the setting is required to activate this function. Explain about this function to your customers and ask them whether they want to use it.

**<MXZ-2F33VF/2F42VF/2F53VF/2F53VFH
MXZ-2F33VF2/2F42VF2/2F53VF2/2F53VFH2
MXZ-2F33VF3/2F42VF3/2F53VF3/2F53VFH3
MXZ-2F33VF4/2F42VF4/2F53VF4/2F53VFH4>**

[How to lower the operating noise]

- (1) Turn OFF the power supply and make sure that the LED goes off.
- (2) Set "3" on SW1 to ON to enable this function.
- (3) Turn ON the power supply.

SW1 on the outdoor display P.C. board




**<MXZ-3F54VF/3F68VF/4F72VF
MXZ-3F54VF2/3F68VF2/4F72VF2/4F80VF2
MXZ-3F54VF3/3F68VF3/4F72VF3/4F80VF3
MXZ-3F54VF4/3F68VF4/4F72VF4/4F80VF4
MXZ-4F83/5F102/6F122VF/MXZ-2F53/4F83VFHZ
MXZ-4F83/5F102/6F120VF2/MXZ-2F53/4F83VFHZ2>**

[How to lower the operating noise]

- (1) Turn OFF the power supply and make sure that the LED goes off.
- (2) Set "5" on SW1 to ON to enable this function.
- (3) Turn ON the power supply.

SW1 on the outdoor control P.C. board



11-5. CHANGING THE AMPERE LIMIT

<MXZ-2F53VFHZ/MXZ-2F53VFHZ2/4F83VFHZ/4F83VFHZ2/MXZ-6F120VF2/MXZ-6F122VF>

With this function, the amount of current that flows in the outdoor unit can be changed.

NOTE: Use this function only when the amount of current exceeds the allowed value.

[How to change the ampere limit]

- (1) Be sure to turn off the power supply for the air conditioner before making the setting.
- (2) Make the setting referring to the table below.
- (3) Turn ON the power supply.

SW2 on the outdoor control P.C. board

SW2	MXZ-2F53VFHZ MXZ-2F53VFHZ2	MXZ-4F83VFHZ MXZ-4F83VFHZ2	MXZ-6F120VF2 MXZ-6F122VF
	13.6 A (Factory setting)	21 A	20 A
	18.4 A	Full (Factory setting)	Full (Factory setting)

11-6. AUTOMATIC LINE CORRECTING

<MXZ-2F33VF/2F42VF/2F53VF/2F53VFH, MXZ-2F33VF2/2F42VF2/2F53VF2/2F53VFH2, MXZ-2F33VF3/2F42VF3/2F53VF3/2F53VFH3, MXZ-2F33VF4/2F42VF4/2F53VF4/2F53VFH4>

This outdoor unit has an automatic line correcting function which automatically detects and corrects improper wiring or piping.

<MXZ-2F33VF/2F42VF/2F53VF/2F53VFH, MXZ-2F33VF2/2F42VF2/2F53VF2/2F53VFH2, MXZ-2F33VF3/2F42VF3/2F53VF3/2F53VFH3, MXZ-2F33VF4/2F42VF4/2F53VF4/2F53VFH4>


Improper wiring or piping can be automatically detected when one indoor unit is operated in COOL mode for 30 minutes. When improper wiring or piping is detected, wiring lines are corrected (A to B/ B to A) with the software.

NOTE: This function may not work due to the condition or environment of the unit, such as the following:


- gas leak, closed stop valve
- unit failure such as defective LEV
- indoor/outdoor temperature

NOTE: This function does not work when "2" on SW2 on the outdoor display P.C. board is turned OFF.



<Correct>

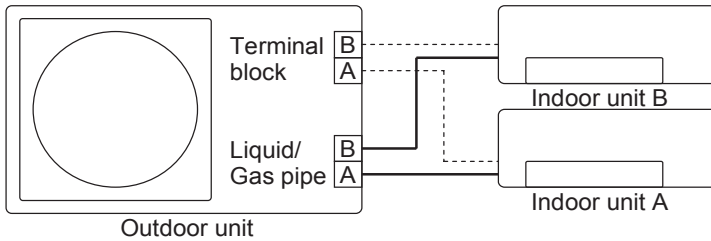


**MXZ-2F33VF/2F42VF/2F53VF/2F53VFH
MXZ-2F33VF2/2F42VF2/2F53VF2/2F53VFH2
MXZ-2F33VF3/2F42VF3/2F53VF3/2F53VFH3
MXZ-2F33VF4/2F42VF4/2F53VF4/2F53VFH4
SW2 on the outdoor display P.C. board**



<Incorrect wiring>

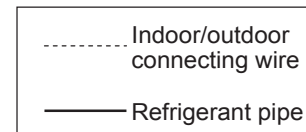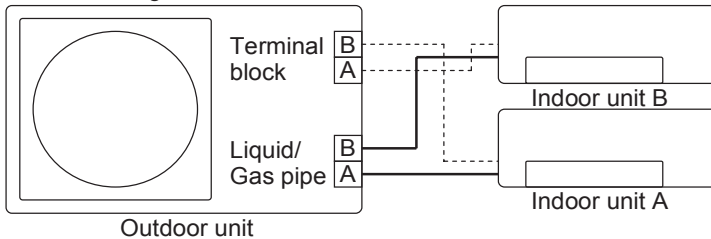

<Incorrect piping>

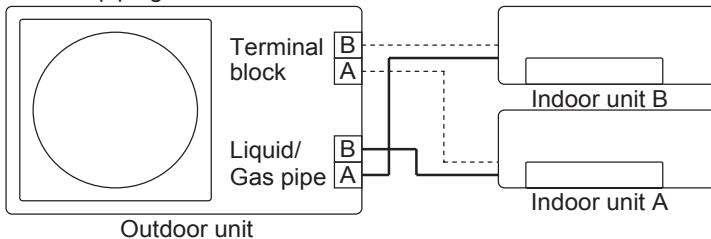


The record of automatic line correcting can be checked in the following way:

- (1) Turn OFF the power supply and make sure that the LED goes off.
- (2) Turn ON "3" on SW2 on the outdoor display P.C. board.
- (3) Turn ON the power supply.
- (4) Check the correction state with the LED lamps on the outdoor display P.C. board.
- (5) Turn OFF the power supply and make sure that the LED goes off.
- (6) Turn OFF "3" on SW2 on the outdoor display P.C. board.
- (7) Turn ON the power supply.

Number of blinks		Wiring line
LED1 (Red)	LED2 (Yellow)	
Once	Once	Not corrected
3 times	3 times	Corrected

**MXZ-2F33VF/2F42VF/2F53VF/2F53VFH
MXZ-2F33VF2/2F42VF2/2F53VF2/2F53VFH2
MXZ-2F33VF3/2F42VF3/2F53VF3/2F53VFH3
MXZ-2F33VF4/2F42VF4/2F53VF4/2F53VFH4
SW2 on the outdoor display P.C. board**

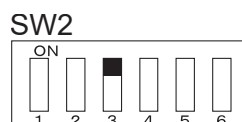

<MXZ-3F54VF/3F68VF/4F72VF, MXZ-3F54VF2/3F68VF2/4F72VF2/4F80VF2,
 MXZ-3F54VF3/3F68VF3/4F72VF3/4F80VF3, MXZ-4F83/5F102/6F122VF, MXZ-2F53/4F83VFHZ
 MXZ-3F54VF4/3F68VF4/4F72VF4/4F80VF4, MXZ-4F83/5F102/6F120VF2, MXZ-2F53/4F83VFHZ2>

Outdoor unit has an auto line correcting function which automatically detects and corrects improper wiring or piping.

Improper wiring or piping can be automatically detected by pressing the piping/wiring correction switch (SW871).
 When improper wiring or piping is detected, wiring lines are corrected.
 This will be completed in about 10 to 15 minutes.

[How to activate this function]

1. Check that outside temperature is above 0°C.
 (This function does not work when the outside temperature is 0°C or below.)
2. Check that the stop valves of the liquid pipe and gas pipe are open.
3. Check that the wiring between indoor and outdoor unit is correct.
 (If the wiring is not correct, this function does not work.)
4. Turn ON the power supply and wait at least 1 minute.
5. Press the piping/wiring correction switch (SW871) on the outdoor control P.C. board.
 Do not touch energized parts.

LED indication during detection:

LED1 (Red)	LED2 (Yellow)	LED3 (Green)
Lit	Lit	Once

LED indication after detection:

LED1 (Red)	LED2 (Yellow)	LED3 (Green)	Result
Lit	Not lit	Lit	Completed (Problem corrected/ normal)
Once	Once	Once	Not completed (Detection failed)
Other indications			Refer to "SAFETY PRECAUTIONS WHEN LED BLINKS" located behind the top panel.

*Make sure that the valves are open and the pipes are not collapsed or clogged.

6. Press the switch to cancel.

LED indication after cancel :

LED1 (Red)	LED2 (Yellow)	LED3 (Green)
Lit	Lit	Not lit

NOTE: Indoor unit cannot be operated while this function is activated.
 When this function is activated while indoor unit is operating, the operation will be stopped.
 Operate indoor unit after the auto line correcting is finished.
 Pressing the switch during detection cancels this function.

The record of auto line correcting can be confirmed in the following way:

Press the switch for more than 5 seconds.
 LED will show the record of auto correcting for about 30 seconds as shown in the table below:

Number of blinks			Wiring line
LED1 (Red)	LED2 (Yellow)	LED3 (Green)	
Once	Once	Lit	Not corrected
3 times	3 times	Lit	Corrected

NOTE: Activate this function to confirm the correct wiring after replacing the outdoor control P.C. board.
 (Previous records are deleted when the outdoor control P.C. board is replaced.)
 The record cannot be shown if auto line correcting is not canceled (Refer to "How to activate this function").



11-7. CHANGING THE SET REFRIGERANT EVAPORATING TEMPERATURE

NOTE: If you lower the refrigerant evaporating temperature with the windows open, it may cause dew drop.

[How to change the refrigerant evaporating temperature]

- (1) Make sure there is no possibility of causing dew drop before making the setting.
- (2) Make the setting referring to the table below.

SW2 on the outdoor control P.C. board

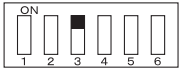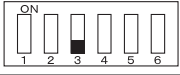SW2	MXZ-3F54VF MXZ-3F68VF MXZ-4F72VF	MXZ-3F54VF2/VF3/VF4 MXZ-3F68VF2/VF3/VF4 MXZ-4F72VF2/VF3/VF4 MXZ-4F80VF2/VF3/VF4	MXZ-4F83VF/VF2 MXZ-5F102VF/VF2 MXZ-6F120VF2 MXZ-6F122VF MXZ-2F53VFHZ/VFHZ2 MXZ-4F83VFHZ/VFHZ2
	7 °C or 9 °C	6 °C	
	Normal control		


MXZ-3F54/3F68/4F72/4F80VF4

11-8. SETTING WHEN THE PIPING LENGTH IS LONG

For a system that connects all rooms and has a total piping length of 40 m or more, change the setting to improve the circulation of the refrigerant.

[How to perform the setting]

- (1) Be sure to turn off the main power of the air conditioner before performing the setting.
- (2) To enable this function, set SW1 "6" on the outdoor controller board to ON.
- (3) Turn on the main power of the air conditioner.



When the piping length is long

11-9. SETTING WHEN USING PIPING WITH A LARGER DIAMETER THAN THE STANDARD SPEC

When using existing piping, the piping may be thicker than the standard diameter due to the replace from R22 refrigerant. In that case, you will need to change the settings to improve the circulation of the refrigerant and oil.


If standard pipe sizes are used, this setting should not be changed.

Please note that this function only applies to models produced after the following serial numbers:

4YP00001 –

[Setting method]

- (1) Be sure to turn off the main power of the air conditioner before performing the setting.
- (2) To enable this function, set SW2 "6" on the outdoor controller board to ON.
- (3) Turn on the main power of the air conditioner.



MXZ-2F33VF	MXZ-2F42VF	MXZ-2F53VF	MXZ-2F53VFH
MXZ-2F33VF2	MXZ-2F42VF2	MXZ-2F53VF2	MXZ-2F53VFH2
MXZ-2F33VF3	MXZ-2F42VF3	MXZ-2F53VF3	MXZ-2F53VFH3
MXZ-2F33VF4	MXZ-2F42VF4	MXZ-2F53VF4	MXZ-2F53VFH4
MXZ-3F54VF	MXZ-3F68VF	MXZ-4F72VF	
MXZ-3F54VF2	MXZ-3F68VF2	MXZ-4F72VF2	MXZ-4F80VF2
MXZ-3F54VF3	MXZ-3F68VF3	MXZ-4F72VF3	MXZ-4F80VF3
MXZ-3F54VF4	MXZ-3F68VF4	MXZ-4F72VF4	MXZ-4F80VF4
MXZ-4F83VF	MXZ-5F102VF	MXZ-6F120VF2	
MXZ-4F83VF2	MXZ-5F102VF2	MXZ-6F122VF	
MXZ-2F53VFHZ	MXZ-4F83VFHZ		
MXZ-2F53VFHZ2	MXZ-4F83VFHZ2		

12-1. CAUTIONS ON TROUBLESHOOTING

1. Before troubleshooting, check the following:

- 1) Check the power supply voltage.
- 2) Check the indoor/outdoor connecting wire for miswiring.

2. Take care of the following during servicing


- 1) Before servicing the air conditioner, be sure to turn OFF the unit first with the remote controller, and after confirming the horizontal vane is closed, turn OFF the breaker and/or disconnect the power plug.
- 2) Be sure to turn OFF the power supply before removing the front panel, the cabinet, the top panel, and the P.C. board.
- 3) When removing the electrical parts, be careful of the residual voltage of smoothing capacitor.
- 4) When removing the P.C. board, hold the edge of the board with care NOT to apply stress on the components.
- 5) When connecting or disconnecting the connectors, hold the connector housing. DO NOT pull the lead wires.

<Incorrect>



Lead wiring

<Correct>



Connector housing

3. Troubleshooting procedure

- 1) Check if the OPERATION INDICATOR lamp on the indoor unit is blinking on and off to indicate an abnormality. To make sure, check how many times the OPERATION INDICATOR lamp is blinking on and off before starting service work.
- 2) Before servicing, verify that all connectors and terminals are connected properly.
- 3) When the electronic control P.C. board seems to be defective, check for disconnection of the copper foil pattern and burnt or discolored components.
- 4) Refer to 12-2, 12-3 and 12-4.

12-2. FAILURE MODE RECALL FUNCTION

This air conditioner can memorize the abnormal condition which has occurred once.


Even though LED indication listed on the troubleshooting check table (12-4.) disappears, the memorized failure details can be recalled.

1. Flow chart of failure mode recall function for the indoor/outdoor unit

Refer to the service manual of indoor unit.

2. Flow chart of the detailed outdoor unit failure mode recall function

Operational procedure

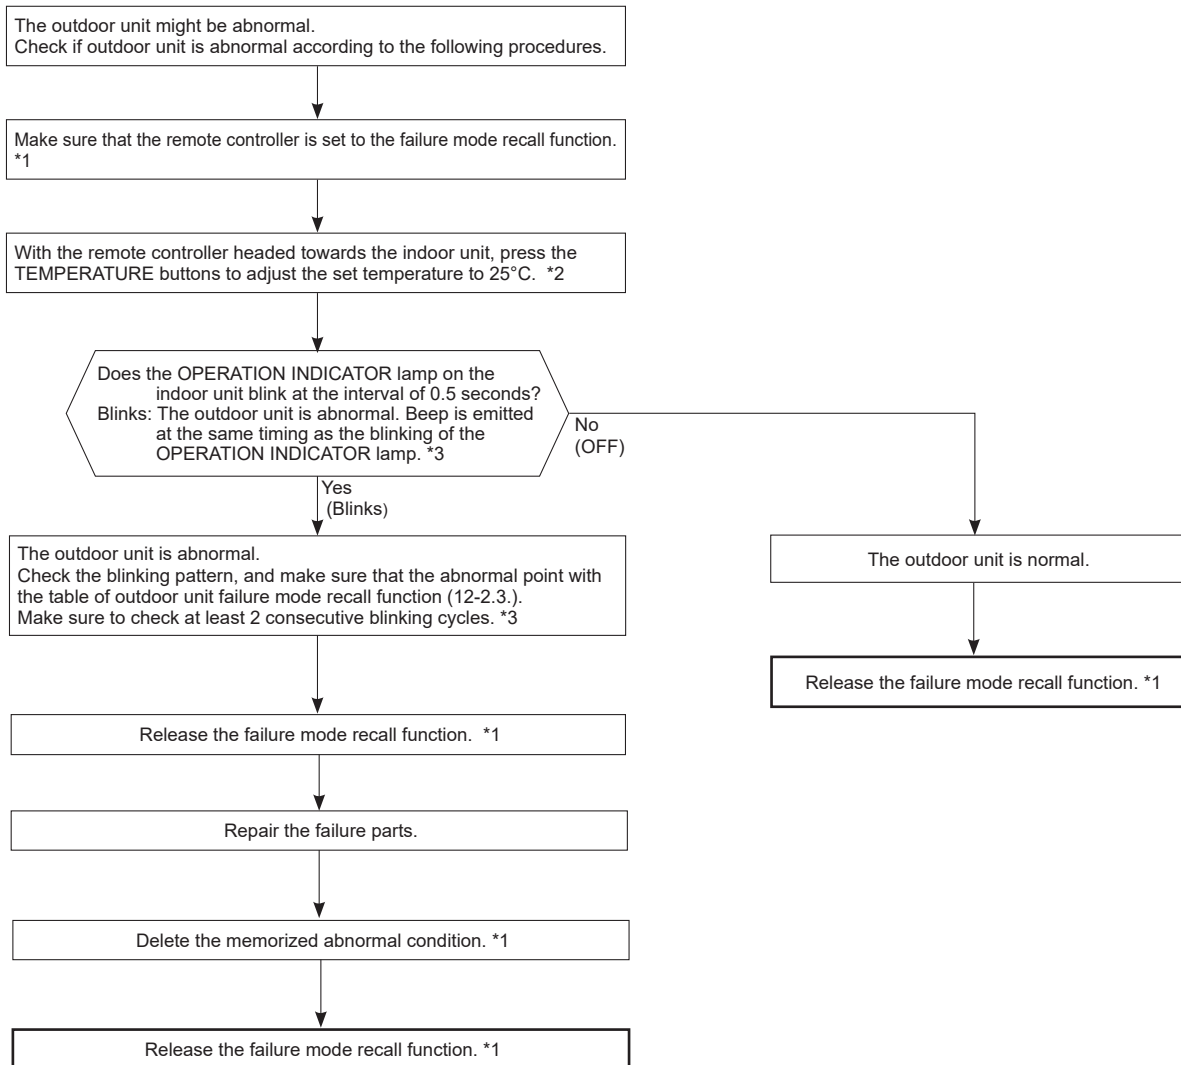



NOTE: 1. Make sure to release the failure mode recall function after it is set up, otherwise the unit cannot operate properly.
2. If the abnormal condition is not deleted from the memory, the last abnormal condition is kept memorized.

*1. Refer to the service manual of indoor unit.

*2. Regardless of normal or abnormal condition, 2 short beeps are emitted as the signal is received.

*3. Blinking pattern when outdoor unit is abnormal:

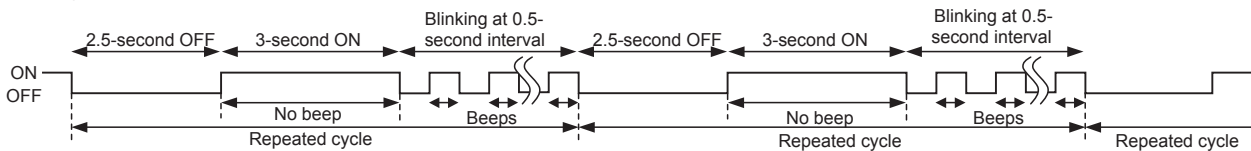



3. Table of outdoor unit failure mode recall function

NOTE: Blinking patterns of this mode differ from the ones of

MXZ-2F33/42/53VF/VF2/VF3/VF4, MXZ-2F53VFH/VFH2/VFH3/VFH4

Troubleshooting check table (12-4).

Upper or left lamp of OPERATION INDICATOR lamp (Indoor unit)	Abnormal point (Failure mode/protection)	LED indication (Outdoor P.C. board)		Condition	Remedy	Indoor/outdoor unit failure mode recall function
		LED 1	LED 2			
OFF	None (Normal)	Not lit	Not lit	—	—	—
2-time blink	Outdoor power system	Lit	Lit	Overcurrent protection cut-out operates 3 consecutive times within 1 minute after the compressor gets started. Compressor protection cut-out operates 24 consecutive times within 10 seconds after the compressor gets started.	<ul style="list-style-type: none"> Check the compressor connecting wire. Refer to 12-6. Ⓢ "How to check inverter/compressor". Check the stop valve. 	○
3-time blink	Discharge temperature thermistor	Lit	Once	Thermistor shorts or opens during compressor running.	<ul style="list-style-type: none"> Refer to 12-6. Ⓢ "Check of outdoor thermistors". 	○
	Defrost thermistor	Lit	Once			○
	Ambient temperature thermistor	Lit	Twice			○
	Fin temperature thermistor	Lit	3 times			○
	P.C. board temperature thermistor	Lit	4 times		<ul style="list-style-type: none"> Replace the inverter P.C. board. 	○
	Outdoor heat exchanger temperature thermistor	Lit	9 times		<ul style="list-style-type: none"> Refer to 12-6. Ⓢ "Check of outdoor thermistors". 	○
4-time blink	Overcurrent	Once	Not lit	The overcurrent flows into intelligent power module.	<ul style="list-style-type: none"> Check the compressor connecting wire. Refer to 12-6. Ⓢ "How to check inverter/compressor". Check the stop valve. 	—
	Compressor	Twice	Not lit	The overcurrent flows into intelligent power module within 10 seconds after the compressor gets started. (The compressor gets restarted in 15 seconds.)	<ul style="list-style-type: none"> Check the compressor connecting wire. Refer to 12-6. Ⓢ "How to check inverter/compressor". 	—
		9 times	Not lit	Waveform of compressor current is distorted.		—
5-time blink	Discharge temperature	Lit	Lit	Discharge temperature exceeds 116°C during operation.	<ul style="list-style-type: none"> Check the refrigerant circuit and the refrigerant amount. Refer to 12-6. Ⓢ "Check of LEV". 	—
6-time blink	High pressure	Lit	Lit	The outdoor heat exchanger temperature exceeds 70°C during cooling or the indoor gas pipe temperature exceeds 70°C during heating.	<ul style="list-style-type: none"> Check the refrigerant circuit and the refrigerant amount. Check the stop valve. 	—
7-time blink	Fin temperature	3 times	Not lit	The fin temperature exceeds 90°C during operation.	<ul style="list-style-type: none"> Check the around outdoor unit. Check the outdoor unit air passage. 	—
	P.C. board temperature	4 times	Not lit	The P.C. board temperature exceeds 80°C during operation.	<ul style="list-style-type: none"> Refer to 12-6. Ⓢ "Check of outdoor fan motor". 	—
8-time blink	Outdoor fan motor	Lit	Lit	Failure occurs 3 consecutive times within 30 seconds after the fan gets started.	<ul style="list-style-type: none"> Refer to 12-6. Ⓢ "Check of outdoor fan motor". 	—
9-time blink	Nonvolatile memory data	Lit	5 times	Nonvolatile memory data cannot be read properly.	<ul style="list-style-type: none"> Replace the inverter P.C. board. 	○
	Power module	7 times	Not lit	The output of the power module that drove the compressor was shorted or the winding of the compressor was shorted.	<ul style="list-style-type: none"> Refer to 12-6. Ⓢ "How to check inverter/compressor". 	○
10-time blink	Discharge temperature	Lit	Lit	The discharge temperature is kept under 50°C (COOL mode)/40°C (HEAT mode) for more than 40 minutes.	<ul style="list-style-type: none"> Check the refrigerant circuit and the refrigerant amount. Refer to 12-6. Ⓢ "Check of LEV". 	—
11-time blink	Current sensor	8 times	Not lit	The sensor circuit of current of compressor shorts or opens during compressor operate.	<ul style="list-style-type: none"> Replace the inverter P.C. board. 	○
	Bus-bar voltage	6 times	Not lit	The bus-bar voltage exceeds 430 V or falls to 50 V or below during compressor operating.	<ul style="list-style-type: none"> Check the power supply. Replace the inverter P.C. board. 	○
14-time blink	Stop valve	Lit	12 times	The current of compressor is power module is out of order.	<ul style="list-style-type: none"> Check the stop valve. Check the refrigerant circuit and the refrigerant amount. 	○
	Refrigerant leakage (Sensor detection)	Lit	Lit	1. Refrigerant leaks from the piping or the heat exchanger in the indoor unit. 2. The following items are used around the indoor unit. <ul style="list-style-type: none"> Spray (LP gas including Freon, and whose main ingredient is propane and butane) Aerosol insecticide (including ethanol) Air spray painting (including dichloromethane) Charcoal (charcoal fire) Chemicals (such as ethanol) 	<ul style="list-style-type: none"> Turn off the power after the indoor unit finishes its FAN operation. (The FAN operation continues for 3 hours.) Check the indoor unit to detect the part where refrigerant leaks. Repair the part where refrigerant leaks. Turn on the power again. Replace the refrigerant sensor if the problem is not fixed. 	○



Upper or left lamp of OPERATION INDICATOR lamp (Indoor unit)	Abnormal point (Failure mode/protection)	LED indication (Outdoor P.C. board)		Condition	Remedy	Indoor/outdoor unit failure mode recall function
		LED 1	LED 2			
14-time blink	Refrigerant leakage (Sensor detection)	Lit	Lit	The refrigerant sensor mounted on the indoor unit does not work. The refrigerant sensor is not connected properly or the wire is broken.	<ul style="list-style-type: none"> • Connect the connector of the refrigerant sensor properly. • Replace the refrigerant sensor. 	○
	Incompatible unit combination	Lit	11 times	The indoor unit which is not compatible with the outdoor unit is connected.	<ul style="list-style-type: none"> • Replace the indoor unit with the one which is compatible with the outdoor unit. 	○
17-time blink	Outdoor refrigerant system abnormality	Lit	17 times	A closed valve and air trapped in the refrigerant circuit are detected based on the temperature sensed by the indoor and outdoor thermistors and the current of the compressor.	<ul style="list-style-type: none"> • Check for a gas leak in a connecting piping etc. • Check the stop valve. • Refer to 12-6. ⑧ "Check of outdoor refrigerant circuit". 	○

NOTE: Blinking patterns of this mode differ from the ones of Troubleshooting check table (12-4.).

MXZ-3F, 4F, 5F, 6F, MXZ-2F53VFHZ/VFHZ2, MXZ-4F83VFHZ/VFHZ2


The left lamp of OPERATION INDICATOR lamp (Indoor unit)	Abnormal point (Failure mode/protection)	LED indication (Outdoor P.C. board)		Condition	Remedy	Indoor/outdoor unit failure mode recall function
		LED1	LED2			
OFF	None (Normal)	Lit	Lit	—	—	—
2-time blink	Outdoor power system	Lit	Lit	Overcurrent protection cut-out operates 3 consecutive times within 1 minute after the compressor gets started, or converter protection cut-out or bus-bar voltage protection cut-out operates 3 consecutive times within 3 minutes after startup.	<ul style="list-style-type: none"> • Check the connection of the compressor connecting wire. • Refer to 12-6. ⑥ "How to check inverter/compressor". • Check the stop valve. 	○
3-time blink	Discharge temperature thermistor	Lit	Once	A thermistor shorts or opens during compressor running.	<ul style="list-style-type: none"> • Refer to 12-6. ⑥ "Check of outdoor thermistors". 	○
	Defrost thermistor	Lit	Once			
	Ambient temperature thermistor	Lit	Twice			
	Fin temperature thermistor	Lit	3 times			
	P.C. board temperature thermistor	Lit	4 times			
	Outdoor heat exchanger temperature thermistor	Lit	9 times	<ul style="list-style-type: none"> • Replace the outdoor control P.C. board. • Refer to 12-6. ⑥ "Check of outdoor thermistors". 		
4-time blink	Overcurrent	Once	Not lit	21 A current flows into power module.	<ul style="list-style-type: none"> • Reconnect compressor connector. • Refer to 12-6. ⑥ "How to check inverter/compressor". • Check the stop valve. 	—
5-time blink	Discharge temperature	Lit	Lit	The discharge temperature exceeds 115°C (MXZ-3F54/3F68/4F72VF/VF2/VF3/4F80VF2/VF3/VF4)/ 106°C (MXZ-4F83/5F102VF, MXZ-2F53VFHZ)/ 116°C (MXZ-4F83VFHZ/VFHZ2) during operation. Compressor can restart if discharge temperature thermistor reads 80°C (MXZ-3F54/3F68/4F72VF/VF2/VF3/VF4)/ 95°C (MXZ-4F83/5F102VF/VF2, MXZ-2F53VFHZ/VFHZ2)/ 100°C (MXZ-6F120VF2, MXZ-6F122VF, MXZ-4F83VFHZ/VFHZ2) or less 3 minutes later.	<ul style="list-style-type: none"> • Check refrigerant circuit and refrigerant amount. • Refer to 12-6. ⑥ "Check of LEV". 	—
6-time blink	High pressure	Lit	Lit	The outdoor heat exchanger temperature exceeds 70°C during cooling or the indoor gas pipe temperature exceeds 70°C during heating.	<ul style="list-style-type: none"> • Check refrigerant circuit and refrigerant amount. • Check the stop valve. 	—
7-time blink	Fin temperature	3 times	Not lit	The fin temperature exceeds 88°C (MXZ-3F54/3F68/4F72VF/VF2/VF3/VF4, 4F83/5F102VF/VF2, MXZ-2F53VFHZ/VFHZ2)/89°C (MXZ-6F120VF2, MXZ-6F122VF, MXZ-4F83VFHZ/VFHZ2) during operation.	<ul style="list-style-type: none"> • Check around outdoor unit. • Check outdoor unit air passage. • Refer to 12-6. ⑥ "Check of outdoor fan motor". 	—
	P.C. board temperature	4 times	Not lit	The P.C. board temperature exceeds 67°C (MXZ-3F54/3F68/4F72VF/VF2/VF3/VF4 /4F80VF2/VF3/VF4/4F83/5F102VF/VF2, MXZ-2F53VFHZ)/87°C (MXZ-6F120VF2, MXZ-6F122VF, MXZ-4F83VFHZ/VFHZ2) during operation.		
8-time blink	Outdoor fan motor	Lit	Lit	A failure occurs 3 consecutive times within 30 seconds after the fan gets started.	<ul style="list-style-type: none"> • Refer to 12-6. ⑥ "Check of outdoor fan motor". 	—
	4-way valve switching operation abnormality	Lit	12 times	Connector of R.V. coil is disconnected, poorly connected or 4-way valve is faulty.	<ul style="list-style-type: none"> • Refer to 12-6. ⑥ "Check of R.V. coil". • Check the 4-way valve. 	○
9-time blink	Outdoor control system	Lit	5 times	Nonvolatile memory data cannot be read properly.	<ul style="list-style-type: none"> • Replace the outdoor control P.C. board. 	○
10-time blink	Low discharge temperature protection	Lit	Lit	The frequency of the compressor is kept 80 Hz or more and the discharge temperature is kept under 39°C for more than 20 minutes.	<ul style="list-style-type: none"> • Check refrigerant circuit and refrigerant amount. • Refer to 12-6. ⑥ "Check of LEV". 	—



The left lamp of OPERATION INDICATOR lamp (Indoor unit)	Abnormal point (Failure mode/protection)	LED indication (Outdoor P.C. board)		Condition	Remedy	Indoor/outdoor unit failure mode recall function
		LED1	LED2			
11-time blink	Communication error between P.C. boards	Lit	6 times	Communication error occurs between the outdoor control P.C. board and outdoor power P.C. board for more than 10 seconds.	<ul style="list-style-type: none"> • Check the connecting wire between outdoor control P.C. board and outdoor power P.C. board. 	—
				The communication between boards protection cut-out operates 2 consecutive times.		○
	Current sensor	Lit	7 times	A short or open circuit is detected in the current sensor during compressor operating.	—	—
				Current sensor protection cut-out operates 2 consecutive times.		○
	Zero cross detecting circuit	5 times	Not lit	Zero cross signal cannot be detected while the compressor is operating.	<ul style="list-style-type: none"> • Check the connecting wire among outdoor control P.C. board and outdoor power P.C. board. 	—
				The protection cut-out of the zero cross detecting circuit operates 10 consecutive times.		○
Converter	5 times	Not lit	A failure is detected in the operation of the converter during operation.	<ul style="list-style-type: none"> • Check the voltage of power supply. • Replace the outdoor power P.C. board. 	—	
Bus-bar voltage	5 times	Not lit	The bus-bar voltage exceeds 400 V or falls to low level during compressor operating.	<ul style="list-style-type: none"> • Check the voltage of power supply. • Replace the outdoor control P.C. board. 		
14-time blink	Refrigerant leakage (Sensor detection)	Lit	Lit	1.Refrigerant leaks from the piping or the heat exchanger in the indoor unit. 2.The following items are used around the indoor unit. <ul style="list-style-type: none"> • Spray (LP gas including Freon, and whose main ingredient is propane and butane) • Aerosol insecticide (including ethanol) • Air spray painting (including dichloromethane) • Charcoal (charcoal fire) • Chemicals (such as ethanol) 	<ul style="list-style-type: none"> • Turn off the power after the indoor unit finishes its FAN operation. (The FAN operation continues for 3 hours.) • Check the indoor unit to detect the part where refrigerant leaks. • Repair the part where refrigerant leaks. • Turn on the power again. • Replace the refrigerant sensor if the problem is not fixed. 	○
14-time blink	Refrigerant leakage (Sensor detection)	Lit	Lit	The refrigerant sensor mounted on the indoor unit does not work. The refrigerant sensor is not connected properly or the wire is broken.	<ul style="list-style-type: none"> • Connect the connector of the refrigerant sensor properly. • Replace the refrigerant sensor. 	○
	Incompatible unit combination	Lit	11 times	The indoor unit which is not compatible with the outdoor unit is connected.	<ul style="list-style-type: none"> • Replace the indoor unit with the one which is compatible with the outdoor unit. 	○
	4-way valve switching operation abnormality	Lit	12 times	Connector of R.V. coil is disconnected, poorly connected or 4-way valve is faulty.	<ul style="list-style-type: none"> • Refer to 12-6. © "Check of R.V. coil". • Check the 4-way valve. 	○
15-time blink	LEV and drain pump	Lit	Lit	The indoor unit detects an abnormality in the LEV and drain pump.	<ul style="list-style-type: none"> • Refer to 12-6. © "Check of LEV". • Check the drain pump of the indoor unit. 	—

12-3. INSTRUCTION OF TROUBLESHOOTING

- Check the indoor unit referring to the indoor unit service manual, and confirm that there is any problem in the indoor unit. Then, check the outdoor unit with referring to this page.

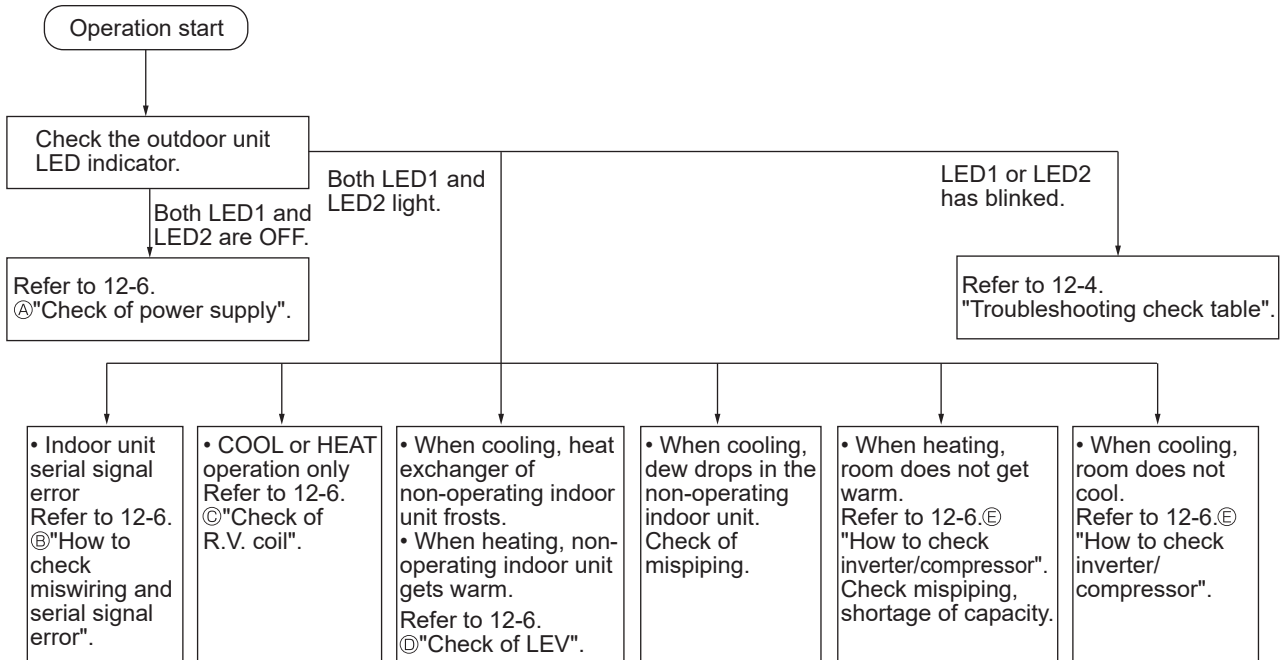

12-4. TROUBLESHOOTING CHECK TABLE

MXZ-2F33/42/53VF/VF2/VF3/VF4, MXZ-2F53VFH/VFH2/VFH3/VFH4

No.	Symptom	Indication		Abnormal point / Condition	Condition	Remedy
		LED1(Red)	LED2(Yellow)			
1	Outdoor unit does not operate.	Lit	Once	LEV and drain pump	The indoor unit detects an abnormality in the LEV and drain pump.	<ul style="list-style-type: none"> Refer to 12-6. ⑩ "Check of LEV". Check the drain pump of the indoor unit.
2		Lit	Twice	Outdoor power system	Overcurrent protection cut-out operates 3 consecutive times within 1 minute after the compressor gets started.	<ul style="list-style-type: none"> Check the connection of the compressor connecting wire. Refer to 12-6. ⑩ "How to check inverter/compressor". Check the stop valve.
3		Lit	3 times	Discharge temperature thermistor	A short circuit is detected in the thermistor during operation, or when an open circuit is detected in the thermistor after 10 minutes of compressor startup.	Refer to 12-6. ⑩ "Check of outdoor thermistors".
4		Lit	4 times	Fin temperature thermistor P.C board temperature thermistor	A short or open circuit is detected in the thermistor during operation.	<ul style="list-style-type: none"> Refer to 12-6. ⑩ "Check of outdoor thermistors". Replace the inverter P.C. board.
5		Lit	5 times	Ambient temperature thermistor Outdoor heat exchanger temperature thermistor Defrost thermistor	A short or open circuit is detected in the thermistor during operation. A short circuit is detected in the thermistor during operation, or when an open circuit is detected in the thermistor after 5 minutes (in cooling) and 10 minutes (in heating) of compressor startup. A short circuit is detected in the thermistor during operation, or when an open circuit is detected in the thermistor after 5 minutes of compressor startup.	Refer to 12-6. ⑩ "Check of outdoor thermistors".
6		Lit	7 times	Nonvolatile memory data	The nonvolatile memory data cannot be read properly.	Replace the inverter P.C. board.
7		Lit	11 times	Stop valve Closed valve	Closed valve is detected by compressor current. (MXZ-2F33VF, MXZ-2F33VF2, MXZ-2F33VF3, MXZ-2F33VF4)	Check the stop valve.
8		Lit	17 times	Outdoor refrigerant system abnormality	A closed valve and air trapped in the refrigerant circuit are detected based on the temperature sensed by the indoor and outdoor thermistors and the current of the compressor.	<ul style="list-style-type: none"> Check for a gas leak in a connecting piping etc. Check the stop valve. Refer to 12-6. ⑩ "Check of outdoor refrigerant circuit".
9		Lit	18 times	Detection of refrigerant (Indoor unit)	<ol style="list-style-type: none"> Refrigerant leaks from the piping or the heat exchanger in the indoor unit. The following items are used around the indoor unit. <ul style="list-style-type: none"> Spray (LP gas including Freon, and whose main ingredient is propane and butane) Aerosol insecticide (including ethanol) Air spray painting (including dichloromethane) Charcoal (charcoal fire) Chemicals (such as ethanol) 	<ul style="list-style-type: none"> Turn off the power after the indoor unit finishes its fan operation. (The fan operation continues for 3 hours.) Check the indoor unit to detect the part where refrigerant leaks. Repair the part where refrigerant leaks. Turn on the power again. Replace the refrigerant sensor if the problem is not fixed.
10		Lit	19 times	Abnormality of refrigerant leakage sensor (Indoor unit)	The refrigerant sensor mounted on the indoor unit does not work. The refrigerant sensor is not connected properly or the wire is broken.	<ul style="list-style-type: none"> Connect the connector of the refrigerant sensor properly. Replace the refrigerant sensor.
11		Lit	20 times	Incompatible unit combination error	The indoor unit which is not compatible with the outdoor unit is connected.	Replace the indoor unit with the one which is compatible with the outdoor unit.
12	'Outdoor unit stops and restarts 3 minutes later' is repeated.	Twice	Not lit	Overcurrent	14 A (MXZ-2F33VF, MXZ-2F33VF2, MXZ-2F33VF3, MXZ-2F33VF4)/18 A (MXZ-2F42VF, MXZ-2F42VF2, MXZ-2F42VF3, MXZ-2F42VF4, MXZ-2F53VF/VFH, MXZ-2F53VF2/VFH2, MXZ-2F53VF3/VFH3, MXZ-2F53VF4/VFH4) current flows into intelligent power module.	<ul style="list-style-type: none"> Reconnect compressor connector. Refer to 12-6. ⑩ "How to check inverter/compressor". Check the stop valve.
13		3 times	Not lit	Discharge temperature protection	Discharge temperature exceeds 116°C during operation. Compressor can restart if discharge temperature thermistor reads 100°C or less 3 minutes later.	<ul style="list-style-type: none"> Check the amount of gas and the refrigerant circuit. Refer to 12-6. ⑩ "Check of LEV".
14		4 times	Not lit	Fin temperature protection P.C. board temperature protection	The fin temperature exceeds 90°C during operation. The P.C. board temperature exceeds 78°C during operation.	<ul style="list-style-type: none"> Check the refrigerant circuit and the refrigerant amount. Refer to 12-6. ⑩ "Check of outdoor fan motor".
15		5 times	Not lit	High pressure protection	The outdoor heat exchanger temperature exceeds 70°C during cooling or indoor gas pipe temperature exceeds 70°C during heating.	<ul style="list-style-type: none"> Check the amount of gas and the refrigerant circuit. Check the stop valve.
16		9 times	Not lit	Bus-bar voltage protection	The bus-bar voltage exceeds 430 V or falls to 50 V or below during compressor operating.	Replace the inverter P.C. board.
17		13 times	Not lit	Outdoor fan motor	Failure occurs 3 consecutive times within 30 seconds after the fan gets started.	Refer to 12-6. ⑩ "Check of outdoor fan motor".
18		8 times	Not lit	Current sensor protection	A short or open circuit is detected in the current sensor during compressor operating.	Replace the inverter P.C. board.




No.	Symptom	Indication		Abnormal point / Condition	Condition	Remedy
		LED1(Red)	LED2(Yellow)			
19	'Outdoor unit stops and restarts 3 minutes later' is repeated.	10 times	Not lit	Compressor	The compressor does not synchronize with the operating power.	<ul style="list-style-type: none"> • Reconnect compressor connector. • Refer to 12-6. Ⓔ "How to check inverter/compressor". • Check the stop valve.
20		Once	Lit	Primary current protection	The input current exceeds 8 A (MXZ-2F33VF, MXZ-2F33VF2, MXZ-2F33VF3, MXZ-2F33VF4)/ 10 A (MXZ-2F42VF, MXZ-2F42VF2, MXZ-2F42VF3, MXZ-2F42VF4, MXZ-2F53VF/VFH, MXZ-2F53VF2/VFH2, MXZ-2F53VF3/VFH3, MXZ-2F53VF4/VFH4).	<ul style="list-style-type: none"> • These symptoms do not mean any abnormality of the product, but check the following points. • Check if indoor filters are clogged. • Check if refrigerant is short. • Check if indoor/outdoor unit air circulation is short cycled.
				Secondary current protection	The current of the compressor exceeds 17 A.	
21		Twice	Lit	High pressure protection	The indoor gas pipe temperature exceeds 45°C during heating.	
				Defrosting in cooling	The indoor gas pipe temperature falls 3°C or below during cooling.	
22	Outdoor unit operates.	3 times	Lit	Discharge temperature protection	The discharge temperature exceeds 100°C during operation.	<ul style="list-style-type: none"> • Check the refrigerant circuit and the refrigerant amount. • Refer to 12-6. Ⓓ "Check of LEV". • Refer to 12-6. Ⓔ "Check of outdoor thermistors".
23		4 times	Lit	Low discharge temperature protection	The frequency of the compressor is kept 68 Hz (MXZ-2F33VF, MXZ-2F33VF2, MXZ-2F33VF3, MXZ-2F33VF4)/80 Hz (MXZ-2F42VF, MXZ-2F42VF2, MXZ-2F42VF3, MXZ-2F42VF4, MXZ-2F53VF/VFH, MXZ-2F53VF2/VFH2, MXZ-2F53VF3/VFH3, MXZ-2F53VF4/VFH4) or more and the discharge temperature is kept under 50°C (COOL mode)/40°C (HEAT mode) for more than 40 minutes.	<ul style="list-style-type: none"> • Refer to 12-6. Ⓓ "Check of LEV". • Check the refrigerant circuit and the refrigerant amount.
24		5 times	Lit	Cooling high pressure protection	The outdoor heat exchanger temperature exceeds 58°C during operation.	<ul style="list-style-type: none"> • This symptom does not mean any abnormality of the product, but check the following points. • Check if indoor filters are clogged. • Check if refrigerant is short. • Check if indoor/outdoor unit air circulation is short cycled.
25		8 times	Lit	Converter protection	A failure is detected in the operation of the converter during operation.	<ul style="list-style-type: none"> • Check the voltage of power supply. • Replace the inverter P.C. board.
26	Outdoor unit operates normally.	9 times	Lit	Inverter check mode	The connector of compressor is disconnected. Inverter check mode starts.	—
27		Lit	Lit	Normal	—	—

NOTE 1. The location of LED is illustrated at the right figure. Refer to 12-7.4.


2. LED is lit during normal operation.

The blinking frequency shows the number of times the LED blinks after every 2.5-second OFF.

(Example) When the blinking frequency is "2".

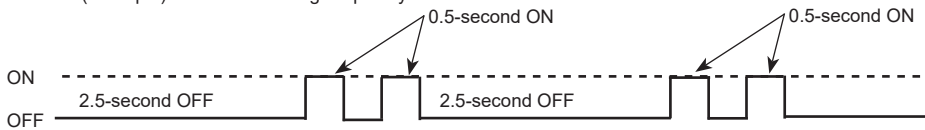

Outdoor display P.C. board (Parts side)



MXZ-3F, 4F, 5F, 6F, MXZ-2F53VFHZ/VFHZ2, MXZ-4F83VFHZ/VFHZ2

No.	Symptom	Indication		Abnormal point / Condition	Condition	Remedy
		LED1(Red)	LED2(Yellow)			
1	Outdoor unit does not operate.	Lit	Once	LEV and drain pump	The indoor unit detects an abnormality in the LEV and drain pump.	<ul style="list-style-type: none"> Refer to 12-6. ③ "Check of LEV". Check the drain pump of the indoor unit.
2		Lit	Twice	Outdoor power system	Overcurrent protection cut-out operates 3 consecutive times within 1 minute after the compressor gets started, or converter protection cut-out or bus-bar voltage protection cut-out operates 3 consecutive times within 3 minutes after startup.	<ul style="list-style-type: none"> Check the connection of the compressor connecting wire. Refer to 12-6. ⑤ "How to check inverter/compressor". Check the stop valve.
3		Lit	3 times	Discharge temperature thermistor	A short circuit is detected in the thermistor during operation, or an open circuit is detected in the thermistor after 10 minutes of compressor startup.	<ul style="list-style-type: none"> Refer to 12-6. ⑥ "Check of outdoor thermistors".
4		Lit	4 times	Fin temperature thermistor P. C. board temperature thermistor	A short or open circuit is detected in the thermistor during operation.	<ul style="list-style-type: none"> Refer to 12-6. ⑥ "Check of outdoor thermistors". Replace the outdoor control P.C. board.
5		Lit	5 times	Ambient temperature thermistor Outdoor heat exchanger temperature thermistor Defrost thermistor	A short or open circuit is detected in the thermistor during operation. A short circuit is detected in the thermistor during operation, or an open circuit is detected in the thermistor after 5 minutes (in cooling) and 10 minutes (in heating) of compressor startup. A short circuit is detected in the thermistor during operation, or an open circuit is detected in the thermistor after 5 minutes of compressor startup.	<ul style="list-style-type: none"> Refer to 12-6. ⑥ "Check of outdoor thermistors".
6		Lit	6 times	Zero cross detecting circuit (Outdoor control P.C. board)	Zero cross signal cannot be detected.	<ul style="list-style-type: none"> Replace the outdoor control P.C. board.
7		Lit	7 times	Outdoor control system	The nonvolatile memory data cannot be read properly.	<ul style="list-style-type: none"> Replace the outdoor control P.C. board.
8		Lit	8 times	Current sensor	Current sensor protection cut-out operates 2 consecutive times.	<ul style="list-style-type: none"> Replace the outdoor power P.C. board.
9		Lit	11 times	Communication error between P.C. boards M-NET communication error	The communication protection cut-out between boards operates 2 consecutive times. M-NET adapter P.C. board detects an abnormality in the communication error.	<ul style="list-style-type: none"> Check the connecting wire between outdoor control P.C. board and outdoor power P.C. board. Check the connecting wire between M-NET adapter P.C. board and outdoor control P.C. board, or terminal block.
10		Lit	12 times	Zero cross detecting circuit (Outdoor power P.C. board)	The protection cut-out of the zero cross detecting circuit operates 10 consecutive times.	<ul style="list-style-type: none"> Replace the outdoor power P.C. board.
11		Lit	13 times	Current sensor	A short or open circuit is detected in the input current detection circuit during operation.	<ul style="list-style-type: none"> Replace the outdoor power P.C. board.
12		Lit	14 times	Voltage sensor	A short or open circuit is detected in the input voltage detection circuit during operation.	<ul style="list-style-type: none"> Replace the outdoor power P.C. board.
13		Lit	15 times	Relay operation	No relay operation is detected during operation.	<ul style="list-style-type: none"> Replace the outdoor power P.C. board.
14	Lit	18 times	Detection of refrigerant (Indoor unit)	<ol style="list-style-type: none"> Refrigerant leaks from the piping or the heat exchanger in the indoor unit. The following items are used around the indoor unit. <ul style="list-style-type: none"> Spray (LP gas including Freon, and whose main ingredient is propane and butane) Aerosol insecticide (including ethanol) Air spray painting (including dichloromethane) Charcoal (charcoal fire) Chemicals (such as ethanol) 	<ul style="list-style-type: none"> Turn off the power after the indoor unit finishes its fan operation. (The fan operation continues for 3 hours.) Check the indoor unit to detect the part where refrigerant leaks. Repair the part where refrigerant leaks. Turn on the power again. Replace the refrigerant sensor if the problem is not fixed. 	
15	Lit	19 times	Abnormality of refrigerant leakage sensor (Indoor unit)	The refrigerant sensor mounted on the indoor unit does not work. The refrigerant sensor is not connected properly or the wire is broken.	<ul style="list-style-type: none"> Connect the connector of the refrigerant sensor properly. Replace the refrigerant sensor. 	
16	Lit	20 times	Incompatible unit combination error	The indoor unit which is not compatible with the outdoor unit is connected.	<ul style="list-style-type: none"> Replace the indoor unit with the one which is compatible with the outdoor unit. 	
17	Lit	21 times	4-way valve	Connector of R.V. coil is disconnected, poorly connected or 4-way valve is faulty.	<ul style="list-style-type: none"> Refer to 12-6. ④ "Check of R.V. coil". Check the 4-way valve. 	
18	Outdoor unit stops and restarts 3 minutes later' is repeated.	Twice	Not lit	IPM protection	Overcurrent is detected after 30 seconds of compressor startup.	<ul style="list-style-type: none"> Reconnect compressor connector. Refer to 12-6. ④ "How to check inverter/compressor".
18				Lock protection	Overcurrent is detected within 30 seconds of compressor startup.	<ul style="list-style-type: none"> Check the stop valve. Check the power module (PAM module).
19		3 times	Not lit	Discharge temperature protection	The discharge temperature exceeds 115°C (MXZ-3F54/3F68/4F72VF/VF2/VF3/4F80VF2/VF3/VF4)/106°C (MXZ-4F83/5F102VF/VF2, MXZ-2F53VFHZ/VFHZ2)/116°C (MXZ-6F120VF2, MXZ-6F122VF, MXZ-4F83VFHZ/VFHZ2) during operation. Compressor can restart if discharge temperature thermistor reads 80°C (MXZ-3F54/3F68/4F72VF/VF2/VF3/VF4/4F80VF2/VF3/VF4)/95°C (MXZ-4F83/5F102VF/VF2, MXZ-2F53VFHZ/VFHZ2)/100°C (MXZ-6F120VF2, MXZ-6F122VF, MXZ-4F83VFHZ/VFHZ2) or less 3 minutes later.	<ul style="list-style-type: none"> Check the amount of gas and refrigerant circuit. Refer to 12-6. ③ "Check of LEV".




No.	Symptom	Indication		Abnormal point / Condition	Condition	Remedy
		LED1(Red)	LED2(Yellow)			
20	Outdoor unit stops and restarts 3 minutes later' is repeated.	4 times	Not lit	Fin temperature protection P.C. board temperature protection	The fin temperature exceeds during operation. The P.C. board temperature exceeds during operation.	•Check refrigerant circuit and refrigerant amount. •Refer to 12-6. ③ "Check of outdoor fan motor".
21		5 times	Not lit	High pressure protection	High pressure is detected with the high pressure switch (HPS) during operation. The outdoor heat exchanger temperature exceeds 70°C during cooling or the indoor gas pipe temperature exceeds 70°C during heating.	• Check around of gas and the refrigerant circuit. • Check the stop valve.
22		6 times	Not lit	Pre-heating protection	Overcurrent is detected during pre-heating.	• Reconnect compressor connector. • Refer to 12-6. ③ "How to check inverter/compressor". • Check the power module.
23		8 times	Not lit	Converter protection	A failure is detected in the operation of the converter during operation.	• Replace the outdoor power P.C. board.
24		9 times	Not lit	Bus-bar voltage protection	The bus-bar voltage exceeds 400 V or falls to low level during compressor operating.	• Check the voltage of power supply. • Replace the outdoor power P.C. board or the outdoor control P.C. board. • Refer to 12-6. ④ "Check of bus-bar voltage".
25		11 times	Not lit	Low outside temperature protection(cooling)	The ambient became -12°C or less.	—
26		13 times	Not lit	Outdoor fan motor	A failure occurs 3 consecutive times within 30 seconds after the fan gets started.	• Refer to 12-6. ③ "Check of outdoor fan motor".
27		14 times	Not lit	4-way valve switching operation	Connector of R.V. coil is disconnected, poorly connected or 4-way valve is faulty.	• Refer to 12-6. ③ "Check of R.V. coil". • Check the 4-way valve.
28		Lit	8 times	Current sensor protection	A short or open circuit is detected in the current sensor during compressor operating.	• Replace the outdoor power P.C. board.
29		Lit	11 times	Communication between P.C. boards protection	Communication error occurs between the outdoor control P.C. board and outdoor power P.C. board for more than 10 seconds.	• Check the connecting wire between outdoor control P.C. board and outdoor power P.C. board.
30	Lit	12 times	Zero cross detecting circuit (Outdoor power P.C. board)	Zero cross signal cannot be detected while the compressor is operating.	• Replace the outdoor power P.C. board.	
31	Outdoor unit operates.	Once	Lit	Primary current protection	The input current exceeds 13.6 A (MXZ-2F53VFH2/ VFH2)/ 15 A (MXZ-3F54/3F68/4F72VF/VF2/ VF4/4F80VF2/VF3/VF4)/18.4 A (MXZ-4F83/5F102VF/VF2)/26.8A MXZ-6F120VF2,MXZ-6F122VF/25 A (MXZ-4F83VFH2/VFH2).	These symptoms do not mean any abnormality of the product, but check the following points. • Check if indoor filters are clogged. • Check if refrigerant is short. • Check if indoor/outdoor unit air circulation is short cycled.
32		Twice	Lit	High pressure protection Defrosting in cooling	The indoor gas pipe temperature exceeds 45°C during heating. The indoor gas pipe temperature falls 3°C or below during cooling.	
33		3 times	Lit	Discharge temperature protection	The frequency of the compressor is kept 80 Hz or more and the discharge temperature is kept under 50°C(COOL mode)/40°C(HEAT mode) for more than 40 minutes.	• Check refrigerant circuit and refrigerant amount. • Refer to 12-6. ③ "Check of LEV". • Refer to 12-6. ⑤ "Check of outdoor thermistors".
34		4 times	Lit	Low discharge temperature protection	The frequency of the compressor is kept 80 Hz or more and the discharge temperature is kept under 39°C for more than 20 minutes.	• Refer to 12-6. ③ "Check of LEV". • Check refrigerant circuit and refrigerant amount.
35		5 times	Lit	Cooling high pressure protection	The outdoor heat exchanger temperature exceeds 58°C during operation.	This symptom does not mean any abnormality of the product, but check the following points. • Check if indoor filters are clogged. • Check if refrigerant is short. • Check if indoor/outdoor unit air circulation is short cycled.
36		7 times	Lit	High → Low pressure bypass valve Cooling evaporating temperature drop prevention control	MXZ-3F54/3F68/4F72VF/VF2/VF3/4F80VF2/VF3/ VF4 During cooling operation, the temperature of indoor heat exchanger becomes 3°C or less within 1 hour after the compressor starts running, or it becomes less than 12°C - 16°C* later than that. * It depends on the difference between the set temperature and the room temperature.	This symptom does not mean any abnormality of the product, but check the following points. • Check the indoor filters are not clogged. • Check there is sufficient refrigerant. • Check the indoor/outdoor unit air circulation is not short cycled.
				High → Low pressure bypass valve High pressure protection control at startup of heating operation	MXZ-6F120VF2, MXZ-6F122VF, MXZ-4F83VFH2/ VFH2 The room temperature is 24°C or more when 1 or 2 unit(s) start(s) the heating operation.	
	High → Low pressure bypass valve Compressor oil tempering control at startup of heating operation			MXZ-6F120VF2, MXZ-6F122VF, MXZ-4F83VFH2 /VFH2 Both the following are true: • The outside temperature is -2°C or less when the heating operation is started. • [(Discharge temperature) - (Indoor heat exchanger temperature)] < 5°C		




No.	Symptom	Indication		Abnormal point / Condition	Condition	Remedy	
		LED1(Red)	LED2(Yellow)				
37	Outdoor unit operates.	11 times	Lit	M-NET communication error	M-NET adapter P.C. board detects an abnormality in the communication error.	• Check the connecting wire between M-NET adapter P.C. board and outdoor control P.C. board, or terminal block.	
38	Outdoor unit operates normally.	8 times	Lit	Cooling evaporating temperature protection	During cooling operation, the temperature of indoor heat exchanger becomes 7°C - 11°C* or less within 1 hour after the compressor starts running, or it becomes 9°C - 17°C* or less later than that. * It depends on the indoor unit type/model or the difference between the set temperature and the room temperature.	This symptom does not mean any abnormality of the product.	
39		9 times	Lit	Inverter check mode	The unit is operated with the emergency operation switch.		—
40		Lit	Lit	Normal	—		—

NOTE 1. The location of LED is illustrated at the right figure. Refer to 12-7.2.

2. LED is lit during normal operation.
The blinking frequency shows the number of times the LED blinks after every 2.5-second OFF.
(Example) When the blinking frequency is "2".


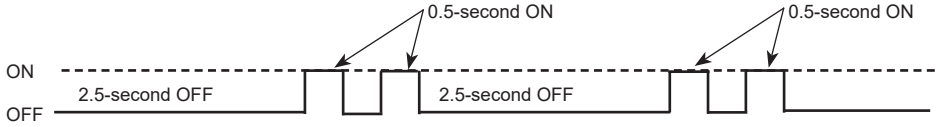


Outdoor control P.C. board (Parts side)

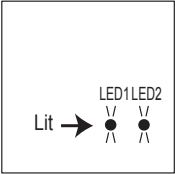


12-5. TROUBLESHOOTING CRITERION OF MAIN PARTS

MXZ-2F33VF	MXZ-2F42VF	MXZ-2F53VF	MXZ-2F53VFH
MXZ-2F33VF2	MXZ-2F42VF2	MXZ-2F53VF2	MXZ-2F53VFH2
MXZ-2F33VF3	MXZ-2F42VF3	MXZ-2F53VF3	MXZ-2F53VFH3
MXZ-2F33VF4	MXZ-2F42VF4	MXZ-2F53VF4	MXZ-2F53VFH4
MXZ-3F54VF	MXZ-3F68VF	MXZ-4F72VF	
MXZ-3F54VF2	MXZ-3F68VF2	MXZ-4F72VF2	MXZ-4F80VF2
MXZ-3F54VF3	MXZ-3F68VF3	MXZ-4F72VF3	MXZ-4F80VF3
MXZ-3F54VF4	MXZ-3F68VF4	MXZ-4F72VF4	MXZ-4F80VF4
MXZ-4F83VF	MXZ-5F102VF	MXZ-6F122VF	
MXZ-4F83VF2	MXZ-5F102VF2	MXZ-6F120VF2	
MXZ-2F53VFHZ	MXZ-4F83VFHZ		
MXZ-2F53VFHZ2	MXZ-4F83VFHZ2		

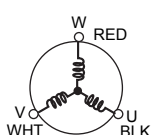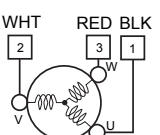Part name	Check method and criterion	Figure																		
Defrost thermistor (RT61) Fin temperature thermistor (RT64) Ambient temperature thermistor (RT65) Outdoor heat exchanger temperature thermistor (RT68)	Measure the resistance with a multimeter. Refer to 12-7. "TEST POINT DIAGRAM AND VOLTAGE" 1. "Inverter P.C. board", 2. "Outdoor control P.C. board " or 3. "Outdoor power P.C. board" for the chart of thermistor.																			
Discharge temperature thermistor (RT62)	Measure the resistance with a multimeter. Before measurement, hold the thermistor with your hands to warm it up. Refer to 12-7. "TEST POINT DIAGRAM AND VOLTAGE" 1. "Inverter P.C. board", 2. "Outdoor control P.C. board ", for the chart of thermistor.																			
Compressor	Measure the resistance between terminals with a multimeter. (Winding temperature : -10°C - 40°C) <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <th colspan="3">Normal (Each phase)</th> </tr> <tr> <td style="width: 33%;">MXZ-2F33VF/VF2/VF3</td> <td style="width: 33%;">MXZ-2F42VF/VF2/VF3/VF4 MXZ-2F53VF/VF2/VF3/VF4 MXZ-2F53VFH/VFH2/VFH3/VFH4 MXZ-3F54VF/VF2/VF3/VF4</td> <td style="width: 33%;"></td> </tr> <tr> <td>1.59 Ω - 2.16 Ω</td> <td>0.86 Ω - 1.06 Ω</td> <td></td> </tr> </table> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <th colspan="3">Normal (Each phase)</th> </tr> <tr> <td style="width: 33%;">MXZ-3F68VF/VF2/VF3/VF4 MXZ-4F72VF/VF2/VF3/VF4 MXZ-4F80VF2/VF3/VF4</td> <td style="width: 33%;">MXZ-4F83VF/VF2 MXZ-5F102VF/VF2 MXZ-2F53VFHZ/ VFHZ2</td> <td style="width: 33%;">MXZ-6F102VF2/ MXZ-6F122VF MXZ-4F83VFHZ/ VFHZ2</td> </tr> <tr> <td>0.91 Ω - 1.13 Ω</td> <td>0.83 Ω - 1.03 Ω</td> <td>0.77 Ω - 0.95 Ω</td> </tr> </table>	Normal (Each phase)			MXZ-2F33VF/VF2/VF3	MXZ-2F42VF/VF2/VF3/VF4 MXZ-2F53VF/VF2/VF3/VF4 MXZ-2F53VFH/VFH2/VFH3/VFH4 MXZ-3F54VF/VF2/VF3/VF4		1.59 Ω - 2.16 Ω	0.86 Ω - 1.06 Ω		Normal (Each phase)			MXZ-3F68VF/VF2/VF3/VF4 MXZ-4F72VF/VF2/VF3/VF4 MXZ-4F80VF2/VF3/VF4	MXZ-4F83VF/VF2 MXZ-5F102VF/VF2 MXZ-2F53VFHZ/ VFHZ2	MXZ-6F102VF2/ MXZ-6F122VF MXZ-4F83VFHZ/ VFHZ2	0.91 Ω - 1.13 Ω	0.83 Ω - 1.03 Ω	0.77 Ω - 0.95 Ω	
Normal (Each phase)																				
MXZ-2F33VF/VF2/VF3	MXZ-2F42VF/VF2/VF3/VF4 MXZ-2F53VF/VF2/VF3/VF4 MXZ-2F53VFH/VFH2/VFH3/VFH4 MXZ-3F54VF/VF2/VF3/VF4																			
1.59 Ω - 2.16 Ω	0.86 Ω - 1.06 Ω																			
Normal (Each phase)																				
MXZ-3F68VF/VF2/VF3/VF4 MXZ-4F72VF/VF2/VF3/VF4 MXZ-4F80VF2/VF3/VF4	MXZ-4F83VF/VF2 MXZ-5F102VF/VF2 MXZ-2F53VFHZ/ VFHZ2	MXZ-6F102VF2/ MXZ-6F122VF MXZ-4F83VFHZ/ VFHZ2																		
0.91 Ω - 1.13 Ω	0.83 Ω - 1.03 Ω	0.77 Ω - 0.95 Ω																		
Outdoor fan motor MXZ-2F33VF/VF2/VF3/VF4 MXZ-2F42VF/VF2/VF3/VF4 MXZ-2F53VF/VF2/VF3/VF4 MXZ-2F53VFH/VFH2/VFH3/VFH4	Measure the resistance between lead wires with a multimeter. (Part temperature : -10°C - 40°C) <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <th colspan="2">Normal (Each phase)</th> </tr> <tr> <td style="width: 50%;">MXZ-2F33VF/42VF/53VF/53VFH</td> <td style="width: 50%;"></td> </tr> <tr> <td>12 Ω - 16 Ω</td> <td></td> </tr> </table> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 100%;">MXZ-2F33VF2/42VF2/53VF2/53VFH2 MXZ-2F33VF3/42VF3/53VF3/53VFH3 MXZ-2F33VF4/42VF4/53VF4/53VFH4</td> </tr> <tr> <td>32 Ω - 43 Ω</td> </tr> </table>	Normal (Each phase)		MXZ-2F33VF/42VF/53VF/53VFH		12 Ω - 16 Ω		MXZ-2F33VF2/42VF2/53VF2/53VFH2 MXZ-2F33VF3/42VF3/53VF3/53VFH3 MXZ-2F33VF4/42VF4/53VF4/53VFH4	32 Ω - 43 Ω											
Normal (Each phase)																				
MXZ-2F33VF/42VF/53VF/53VFH																				
12 Ω - 16 Ω																				
MXZ-2F33VF2/42VF2/53VF2/53VFH2 MXZ-2F33VF3/42VF3/53VF3/53VFH3 MXZ-2F33VF4/42VF4/53VF4/53VFH4																				
32 Ω - 43 Ω																				
Outdoor fan motor MXZ-3F54VF/VF2/VF3/VF4 MXZ-3F68VF/VF2/VF3/VF4 MXZ-4F72VF/VF2/VF3/VF4 MXZ-4F80VF2/VF3/VF4 MXZ-4F83VF/VF2 MXZ-5F102VF/VF2 MXZ-6F120VF2 MXZ-6F122VF MXZ-2F53VFHZ/VFHZ2 MXZ-4F83VFHZ/VFHZ2	Refer to 12-6. ©.																			

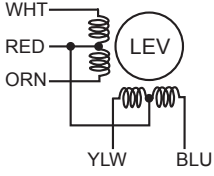

Part name	Check method and criterion	Figure																																			
R.V. coil	Measure the resistance with a multimeter. (Part temperature : -10°C - 40°C) <table border="1" data-bbox="456 331 1056 501"> <tr><td colspan="2">Normal</td></tr> <tr><td>MXZ-2F33VF/VF2/VF3/VF4</td><td>MXZ-3F54VF/VF2/VF3/VF4</td></tr> <tr><td>MXZ-2F42VF/VF2/VF3/VF4</td><td>MXZ-3F68VF/VF2/VF3/VF4</td></tr> <tr><td>MXZ-2F53VF/VF2/VF3/VF4</td><td>MXZ-4F72VF/VF2/VF3/VF4</td></tr> <tr><td>MXZ-2F53VFH/VFH2/VFH3/VF4</td><td>MXZ-4F80VF2/VF3/VF4</td></tr> <tr><td>1.20 kΩ - 1.56 kΩ</td><td>1.26 kΩ - 1.62 kΩ</td></tr> </table> <table border="1" data-bbox="456 510 959 654"> <tr><td colspan="2">Normal</td></tr> <tr><td>MXZ-4F83VF/VF2</td><td>MXZ-6F120VF2</td></tr> <tr><td>MXZ-5F102VF/VF2</td><td>MXZ-6F122VF</td></tr> <tr><td>MXZ-2F53VFHZ/VFHZ2</td><td>MXZ-4F83VFHZ/VFHZ2</td></tr> <tr><td>1.20 kΩ - 1.77 kΩ</td><td>1.24 kΩ - 1.86 kΩ</td></tr> </table>	Normal		MXZ-2F33VF/VF2/VF3/VF4	MXZ-3F54VF/VF2/VF3/VF4	MXZ-2F42VF/VF2/VF3/VF4	MXZ-3F68VF/VF2/VF3/VF4	MXZ-2F53VF/VF2/VF3/VF4	MXZ-4F72VF/VF2/VF3/VF4	MXZ-2F53VFH/VFH2/VFH3/VF4	MXZ-4F80VF2/VF3/VF4	1.20 kΩ - 1.56 kΩ	1.26 kΩ - 1.62 kΩ	Normal		MXZ-4F83VF/VF2	MXZ-6F120VF2	MXZ-5F102VF/VF2	MXZ-6F122VF	MXZ-2F53VFHZ/VFHZ2	MXZ-4F83VFHZ/VFHZ2	1.20 kΩ - 1.77 kΩ	1.24 kΩ - 1.86 kΩ														
Normal																																					
MXZ-2F33VF/VF2/VF3/VF4	MXZ-3F54VF/VF2/VF3/VF4																																				
MXZ-2F42VF/VF2/VF3/VF4	MXZ-3F68VF/VF2/VF3/VF4																																				
MXZ-2F53VF/VF2/VF3/VF4	MXZ-4F72VF/VF2/VF3/VF4																																				
MXZ-2F53VFH/VFH2/VFH3/VF4	MXZ-4F80VF2/VF3/VF4																																				
1.20 kΩ - 1.56 kΩ	1.26 kΩ - 1.62 kΩ																																				
Normal																																					
MXZ-4F83VF/VF2	MXZ-6F120VF2																																				
MXZ-5F102VF/VF2	MXZ-6F122VF																																				
MXZ-2F53VFHZ/VFHZ2	MXZ-4F83VFHZ/VFHZ2																																				
1.20 kΩ - 1.77 kΩ	1.24 kΩ - 1.86 kΩ																																				
Linear expansion valve	Measure the resistance with a multimeter. (Part temperature : -10°C - 40°C) <table border="1" data-bbox="456 734 1114 887"> <tr><td>Color of lead wire</td><td>Normal</td></tr> <tr><td>WHT - RED</td><td rowspan="4">37.4 Ω - 53.9 Ω</td></tr> <tr><td>RED - ORN</td></tr> <tr><td>YLW - RED</td></tr> <tr><td>RED - BLU</td></tr> </table>	Color of lead wire	Normal	WHT - RED	37.4 Ω - 53.9 Ω	RED - ORN	YLW - RED	RED - BLU																													
Color of lead wire	Normal																																				
WHT - RED	37.4 Ω - 53.9 Ω																																				
RED - ORN																																					
YLW - RED																																					
RED - BLU																																					
High pressure switch (HPS) MXZ-3F54VF/VF2/VF3/VF4 MXZ-3F68VF/VF2/VF3/VF4 MXZ-4F72VF/VF2/VF3/VF4 MXZ-4F80VF2/VF3/VF4 MXZ-4F83VF/VF2 MXZ-5F102VF/VF2 MXZ-6F120VF2 MXZ-6F122VF MXZ-2F53VFHZ/VFHZ2 MXZ-4F83VFHZ/VFHZ2	<table border="1" data-bbox="456 909 1136 1223"> <tr><td colspan="2">Pressure</td><td>Normal</td></tr> <tr><td>MXZ-3F54VF/VF2/VF3/VF4</td><td>MXZ-4F83VF/VF2</td><td rowspan="5">Normal</td></tr> <tr><td>MXZ-3F68VF/VF2/VF3/VF4</td><td>MXZ-5F102VF/VF2</td></tr> <tr><td>MXZ-4F72VF/VF2/VF3/VF4</td><td>MXZ-6F120VF2</td></tr> <tr><td>MXZ-4F80VF2/VF3/VF4</td><td>MXZ-6F122VF</td></tr> <tr><td>MXZ-4F83VF/VF2</td><td>MXZ-2F53VFHZ/VFHZ2</td></tr> <tr><td>MXZ-5F102VF/VF2</td><td>MXZ-4F83VFHZ/VFHZ2</td><td></td></tr> <tr><td>MXZ-6F120VF2</td><td></td><td></td></tr> <tr><td>MXZ-6F122VF</td><td></td><td></td></tr> <tr><td>MXZ-2F53VFHZ/VFHZ2</td><td></td><td></td></tr> <tr><td>MXZ-4F83VFHZ/VFHZ2</td><td></td><td></td></tr> <tr><td>HPS</td><td>3.14 ± 0.15 MPa</td><td>Close</td></tr> <tr><td></td><td>4.14 ± 0.1 MPa</td><td>Open</td></tr> </table>	Pressure		Normal	MXZ-3F54VF/VF2/VF3/VF4	MXZ-4F83VF/VF2	Normal	MXZ-3F68VF/VF2/VF3/VF4	MXZ-5F102VF/VF2	MXZ-4F72VF/VF2/VF3/VF4	MXZ-6F120VF2	MXZ-4F80VF2/VF3/VF4	MXZ-6F122VF	MXZ-4F83VF/VF2	MXZ-2F53VFHZ/VFHZ2	MXZ-5F102VF/VF2	MXZ-4F83VFHZ/VFHZ2		MXZ-6F120VF2			MXZ-6F122VF			MXZ-2F53VFHZ/VFHZ2			MXZ-4F83VFHZ/VFHZ2			HPS	3.14 ± 0.15 MPa	Close		4.14 ± 0.1 MPa	Open	
Pressure		Normal																																			
MXZ-3F54VF/VF2/VF3/VF4	MXZ-4F83VF/VF2	Normal																																			
MXZ-3F68VF/VF2/VF3/VF4	MXZ-5F102VF/VF2																																				
MXZ-4F72VF/VF2/VF3/VF4	MXZ-6F120VF2																																				
MXZ-4F80VF2/VF3/VF4	MXZ-6F122VF																																				
MXZ-4F83VF/VF2	MXZ-2F53VFHZ/VFHZ2																																				
MXZ-5F102VF/VF2	MXZ-4F83VFHZ/VFHZ2																																				
MXZ-6F120VF2																																					
MXZ-6F122VF																																					
MXZ-2F53VFHZ/VFHZ2																																					
MXZ-4F83VFHZ/VFHZ2																																					
HPS	3.14 ± 0.15 MPa	Close																																			
	4.14 ± 0.1 MPa	Open																																			
Defrost heater MXZ-2F53VFH MXZ-2F53VFH2 MXZ-2F53VFH3 MXZ-2F53VFH4 MXZ-2F53VFHZ MXZ-2F53VFHZ2 MXZ-4F83VFHZ MXZ-4F83VFHZ2	Measure the resistance with a multimeter. (Part temperature : -10°C - 40°C) <table border="1" data-bbox="456 1294 794 1352"> <tr><td>Normal</td></tr> <tr><td>349 Ω - 428 Ω</td></tr> </table>	Normal	349 Ω - 428 Ω																																		
Normal																																					
349 Ω - 428 Ω																																					

12-6. TROUBLESHOOTING FLOW

Outdoor unit does not operate.

Ⓐ Check of power supply

MXZ-2F33VF/2F42VF/2F53VF/2F53VFH

MXZ-2F33VF2/2F42VF2/2F53VF2/2F53VFH2

MXZ-2F33VF3/2F42VF3/2F53VF3/2F53VFH3

MXZ-2F33VF4/2F42VF4/2F53VF4/2F53VFH4

Check the main power supply circuit for proper connections.

Turn ON the power supply.

Is there voltage of 220 - 230 - 240 V AC in the power supply terminal block?

No

Check the power supply and correct them.

Yes

Is there voltage of 220 - 230 - 240 V AC between LD66B and X64 ④ on the inverter P.C. board?

No

Replace the inverter P.C. board.

Yes

Is there voltage of 220 - 230 - 240 V AC between LD66A and LD70 on the inverter P.C. board?

No

Replace the reactor.

Yes

Is there voltage of 311 - 339 V DC between DB61 ⊕ and DB61 ⊖ on the inverter P.C. board?

No

Replace the inverter P.C. board.

Yes

Is there voltage of 5 V DC between CN936 ⑦ and CN936 ① on the outdoor display P.C. board?

No

Check the connected wire between the inverter P.C. board and outdoor display P.C. board and correct it. Replace the inverter P.C. board.

Yes

Replace the outdoor display P.C. board.

MXZ-3F54VF/3F68VF/4F72VF

MXZ-4F83/5F102/6F122VF

MXZ-3F54VF2/3F68VF2/4F72VF2/4F80VF2

MXZ-2F53/4F83VFHZ

MXZ-3F54VF3/3F68VF3/4F72VF3/4F80VF3

MXZ-4F83/5F102/6F120VF2

MXZ-3F54VF4/3F68VF4/4F72VF4/4F80VF4

MXZ-2F53/4F83VFHZ2

Check the main power supply circuit for proper connections.

Turn ON the power supply.

Is there voltage of 220 - 230 - 240 V AC in the power supply terminal block?

No

Check the power supply cable.

Yes

Is the output voltage from the outdoor power P.C. board 311 - 339 V DC?

Yes

Replace the outdoor control P.C. board.

No

Turn OFF the power supply and disconnect the reactor.

Is the reactor short-circuited?

No

Replace the reactor.

Yes

Replace the outdoor power P.C. board.

- When the indoor unit does not operate, it cannot be operated either with the remote controller or with the emergency operation switch.
- When the outdoor unit does not operate, the OPERATION INDICATOR lamp on the indoor unit blinks ON and OFF every 0.5-second.

Ⓑ How to check miswiring and serial signal error (when outdoor unit does not work)

MXZ-2F33VF/2F42VF/2F53VF/2F53VFH MXZ-2F33VF2/2F42VF2/2F53VF2/2F53VFH2
MXZ-2F33VF3/2F42VF3/2F53VF3/2F53VFH3 MXZ-2F33VF4/2F42VF4/2F53VF4/2F53VFH4

LED indication for communication status

Communication status is indicated by the LED.


Unit status

- Blinking: normal communication
- Lighted: abnormal communication or not connected
- Not lighted: The outdoor P.C. board is abnormal.
- NOTE: "Lighted" and "Not lighted" in the table below does not indicate abnormal.

Outdoor display P.C. board

LED1 LED2

LED 1	LED 2
Unit A status	Unit B status

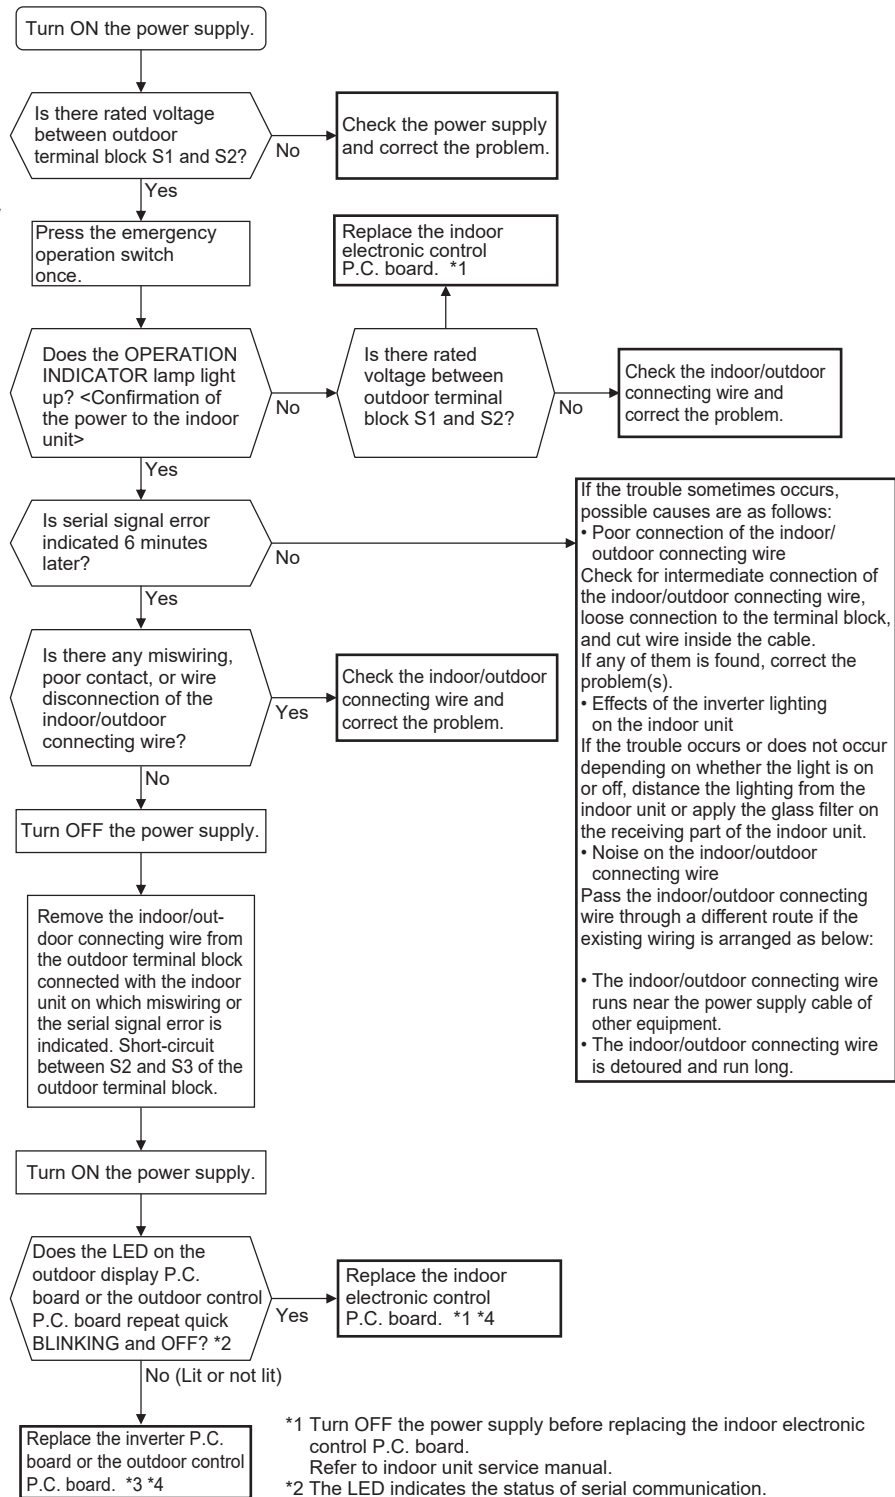

*1 Turn OFF the power supply before replacing the indoor electronic control P.C. board. Refer to indoor unit service manual.
 *2 The LED indicates the status of serial communication. Check the communication status.
 *3 Turn OFF the power supply before replacing the inverter P.C. board. Be careful of residual voltage of smoothing capacitor.
 *4 Remove the short-circuit between outdoor terminal block S2 and S3. Connect the indoor/outdoor connecting wire.

MXZ-3F54VF/3F68VF/4F72VF **MXZ-4F83/5F102/6F122VF**
MXZ-3F54VF2/3F68VF2/4F72VF2/4F80VF2 **MXZ-2F53/4F83VFHZ**
MXZ-3F54VF3/3F68VF3/4F72VF3/4F80VF3 **MXZ-4F83/5F102/6F120VF2**
MXZ-3F54VF4/3F68VF4/4F72VF4/4F80VF4 **MXZ-2F53/4F83VFHZ2**

LED indication for communication status


Communication status is indicated by the LED.

Unit status
 Blinking: normal communication
 Lighting: abnormal communication or not connected


Pattern 1 and 2 is repeatedly displayed alternately. Each pattern is displayed for 10 seconds.

NOTE: "Lighting" in the table below does not indicate abnormal communication.

Outdoor control P.C. board

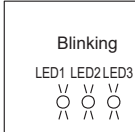

Pattern	LED 1	LED 2	LED 3
1	Unit A status	Unit B status	Lit
2	Unit C status	Unit D status	Not lit

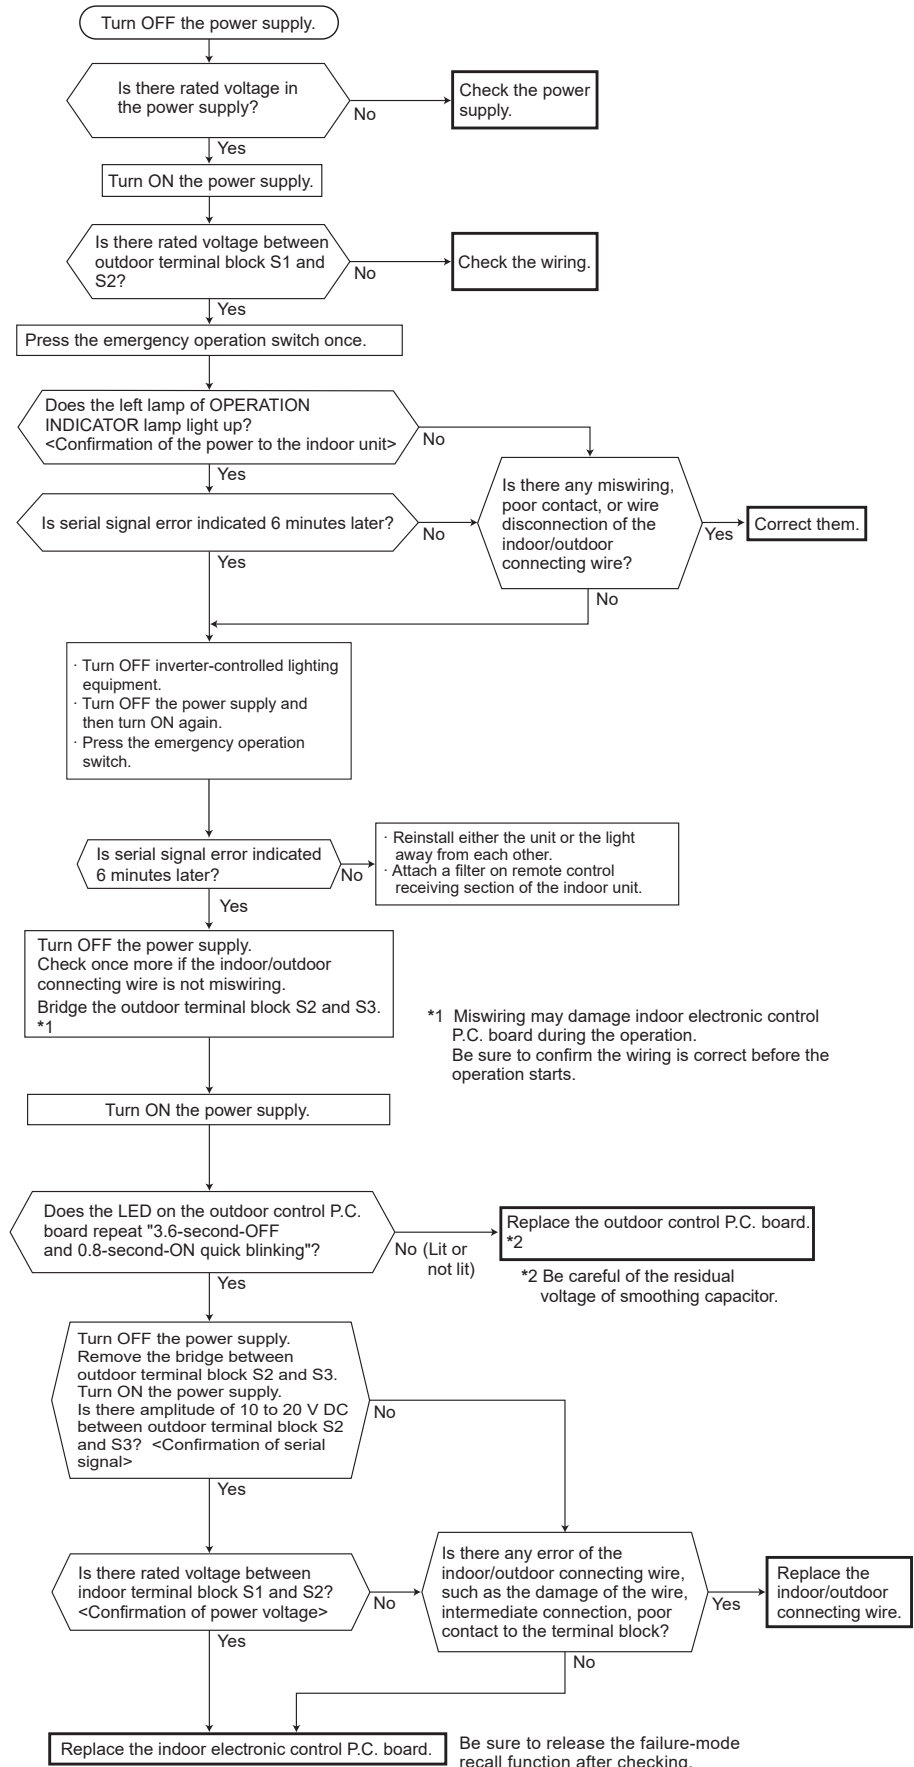

*1 Miswiring may damage indoor electronic control P.C. board during the operation. Be sure to confirm the wiring is correct before the operation starts.

*2 Be careful of the residual voltage of smoothing capacitor.

The cooling operation or heating operation does not operate.


© Check of R.V. coil

MXZ-2F33VF/2F42VF/2F53VF/2F53VFH
MXZ-2F33VF2/2F42VF2/2F53VF2/2F53VFH2
MXZ-2F33VF3/2F42VF3/2F53VF3/2F53VFH3
MXZ-2F33VF4/2F42VF4/2F53VF4/2F53VFH4

Connector	MXZ-2F
CN721	Inverter P.C. board


• When cooling operation does not work,

1. Disconnect the lead wire leading to the compressor.
2. 3 minutes after turning ON the power supply, start EMERGENCY OPERATION in COOL mode.

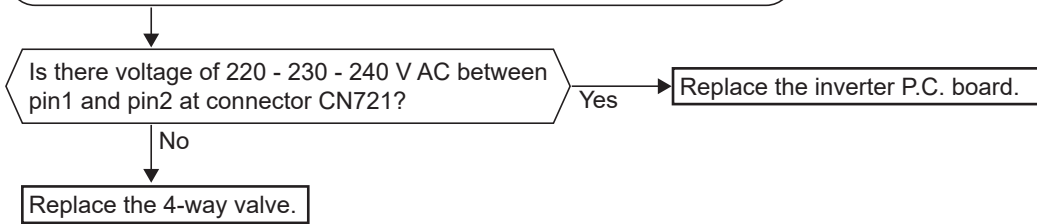

• When heating operation does not work,

1. Disconnect the lead wire leading to the compressor.
2. 3 minutes after turning ON the power supply, start EMERGENCY OPERATION in HEAT mode.

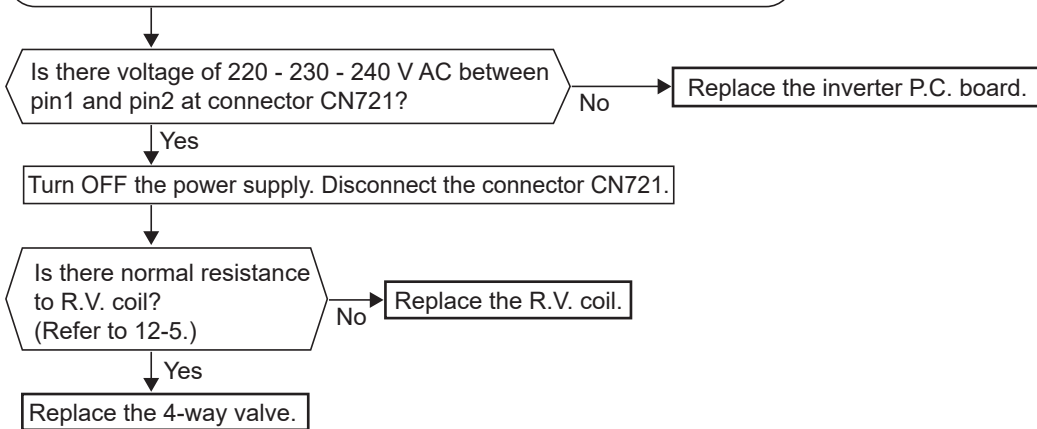

MXZ-3F54VF/3F68VF/4F72VF

MXZ-4F83/5F102/6F122VF

MXZ-3F54VF2/3F68VF2/4F72VF2/4F80VF2

MXZ-2F53/4F83VFHZ

MXZ-3F54VF3/3F68VF3/4F72VF3/4F80VF3

MXZ-4F83/5F102/6F120VF2


MXZ-3F54VF4/3F68VF4/4F72VF4/4F80VF4

MXZ-2F53/4F83VFHZ2

Connector	MXZ-3F, 4F, 5F, 6F 2F53/4F83VFHZ
CNAC CN712	Outdoor control P.C. board
CNAC2	Outdoor power P.C. board


• When cooling operation does not work,

1. Disconnect the lead wire leading to the compressor.
2. 3 minutes after turning ON the power supply, start EMERGENCY OPERATION in COOL mode.

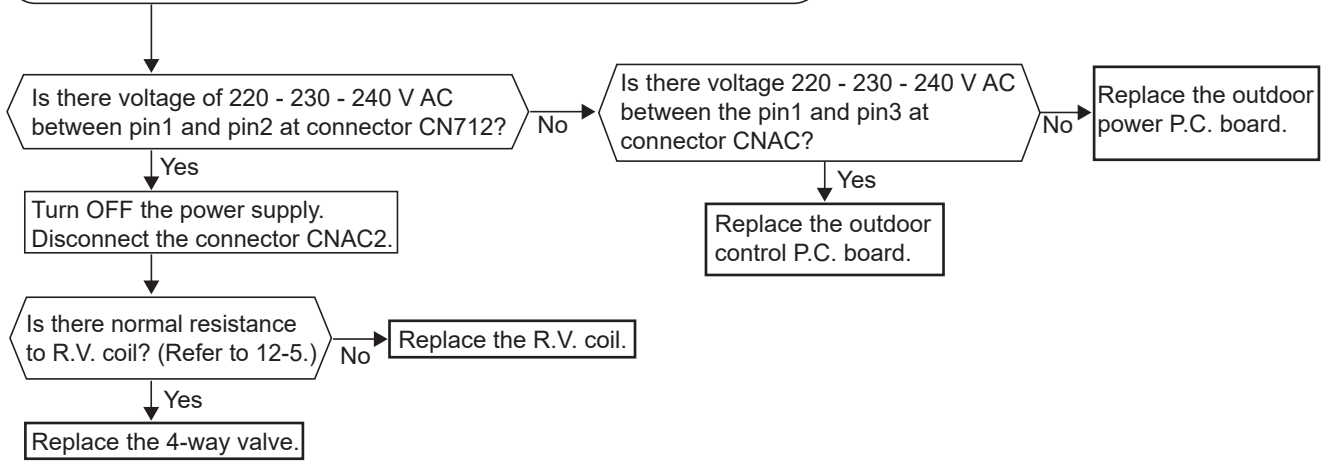


• When heating operation does not work,

1. Disconnect the lead wire leading to the compressor.
2. 3 minutes after turning ON the power supply, start EMERGENCY OPERATION in HEAT mode.

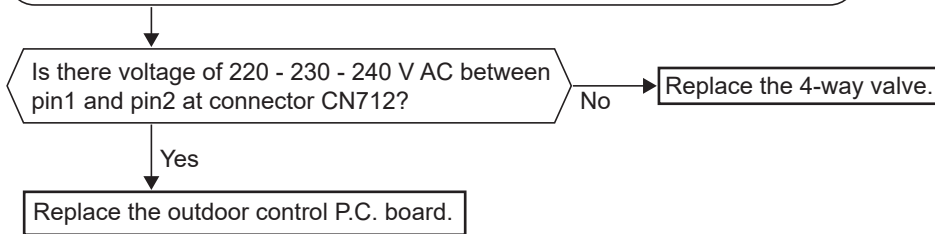

- When cooling, heat exchanger of non-operating indoor unit frosts.
- When heating, non-operating indoor unit gets warm.

① Check of LEV

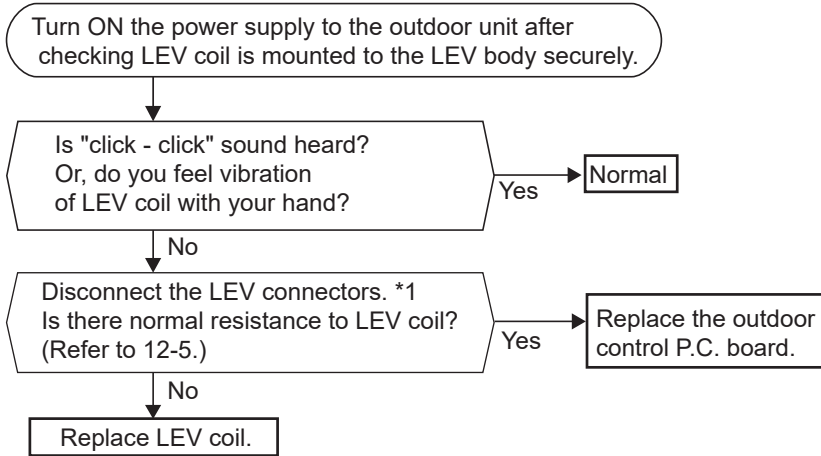

Connector	MXZ-2F	MXZ-3F, 4F, 5F, 6F 2F53/4F83VFHZ
CN724 CN725	Inverter P.C. board	—
CN791 CN792 CN793 CN794 CN795 CN796 CN797	—	Outdoor control P.C. board


*1

LEV Connector	LEV	MXZ-2F	MXZ-3F	MXZ-4F72 MXZ-4F80VF	MXZ-4F83VF	MXZ-5F	MXZ-6F	MXZ-2F53VFHZ	MXZ-4F83VFHZ
CN724	LEV A	●	—	—	—	—	—	—	—
CN725	LEV B	●	—	—	—	—	—	—	—
CN791	LEV A	—	●	●	●	●	●	●	●
CN792	LEV B	—	●	●	●	●	●	●	●
CN793	LEV C	—	●	●	●	●	●	—	●
CN794	LEV D	—	—	●	●	●	●	—	●
CN795	LEV E	—	—	—	—	●	●	—	—
CN796	LEV F	—	—	—	—	—	●	—	—
CN797	LEV R	—	●	●	—	—	—	—	—

- When heating, room does not get warm.
- When cooling, room does not get cool.


⑤ How to check inverter/compressor

Disconnect the terminal of the compressor or the connector (CNMC) between the compressor and the outdoor power P.C. board. 3 minutes after the power supply is turned ON, start EMERGENCY OPERATION.

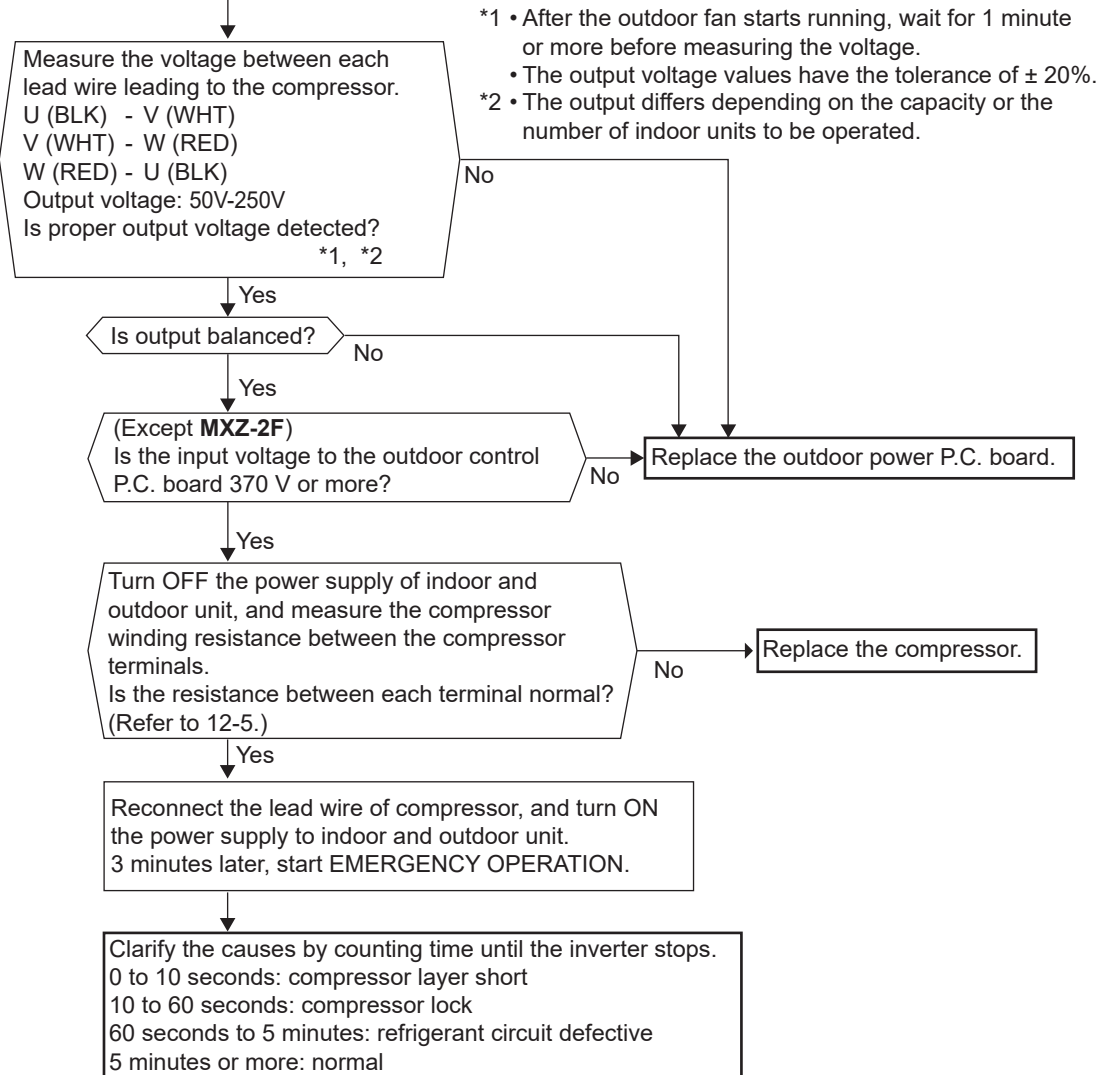

• When thermistor is abnormal.

Ⓔ Check of outdoor thermistors

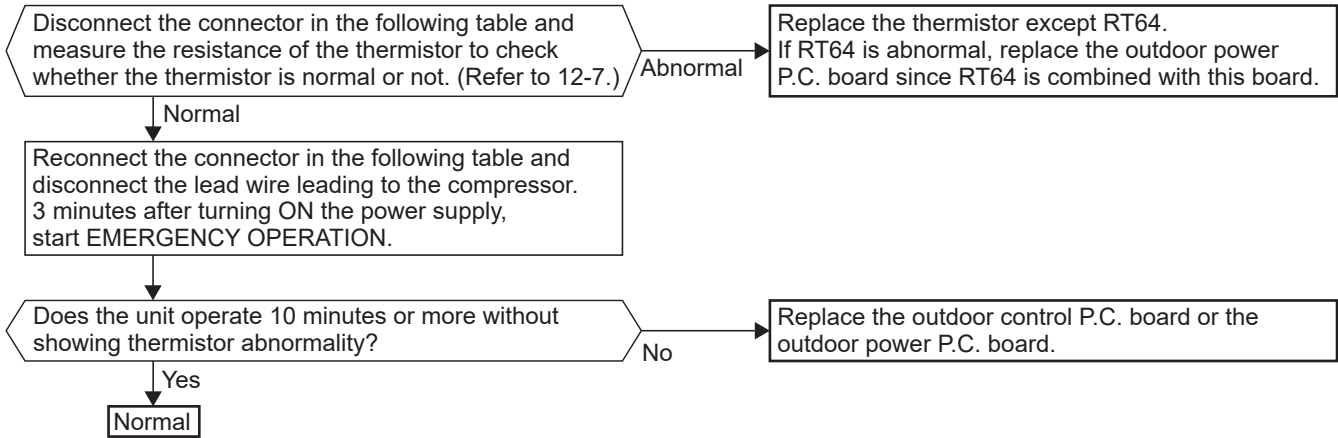

- MXZ-2F33VF/2F42VF/2F53VF
- MXZ-2F33VF2/2F42VF2/2F53VF2
- MXZ-2F33VF3/2F42VF3/2F53VF3
- MXZ-2F33VF4/2F42VF4/2F53VF4
- MXZ-2F53VFH
- MXZ-2F53VFH2
- MXZ-2F53VFH3
- MXZ-2F53VFH4

Thermistor	Symbol	Connector, Pin No.	Board
Defrost	RT61	CN641 pin1 and pin2	Inverter P.C. board
Discharge temperature	RT62	CN641 pin3 and pin4	
Fin temperature	RT64	CN642 pin1 and pin2	
Ambient temperature	RT65	CN643 pin1 and pin2	
Outdoor heat exchanger temperature	RT68	CN644 pin1 and pin3	

- MXZ-3F54VF/3F68VF/4F72VF
- MXZ-3F54VF2/3F68VF2/4F72VF2/4F80VF2
- MXZ-3F54VF3/3F68VF3/4F72VF3/4F80VF3
- MXZ-3F54VF4/3F68VF4/4F72VF4/4F80VF4
- MXZ-4F83/5F102/6F122VF
- MXZ-2F53/4F83VFHZ
- MXZ-4F83/5F102/6F120VF2
- MXZ-2F53/4F83VFHZ2

Thermistor	Symbol	Connector, Pin No.	Board
Defrost	RT61	Between CNTH1 pin1 and pin2	Outdoor control P.C. board
Discharge temperature	RT62	Between CNTH1 pin3 and pin4	
Outdoor heat exchanger temperature	RT68	Between CNTH1 pin7 and pin8	
Ambient temperature	RT65	Between CNTH2 pin1 and pin2	Outdoor power P.C. board
Fin temperature	RT64	Between CN171 pin1 and pin2	




• Fan motor does not operate or stops operating shortly after starting the operation.

Ⓒ Check of outdoor fan motor

**MXZ-2F33VF/2F42VF/2F53VF/2F53VFH
 MXZ-2F33VF2/2F42VF2/2F53VF2/2F53VFH2
 MXZ-2F33VF3/2F42VF3/2F53VF3/2F53VFH3
 MXZ-2F33VF4/2F42VF4/2F53VF4/2F53VFH4**

Connector	MXZ-2F
CN931 CN932	Inverter P.C. board

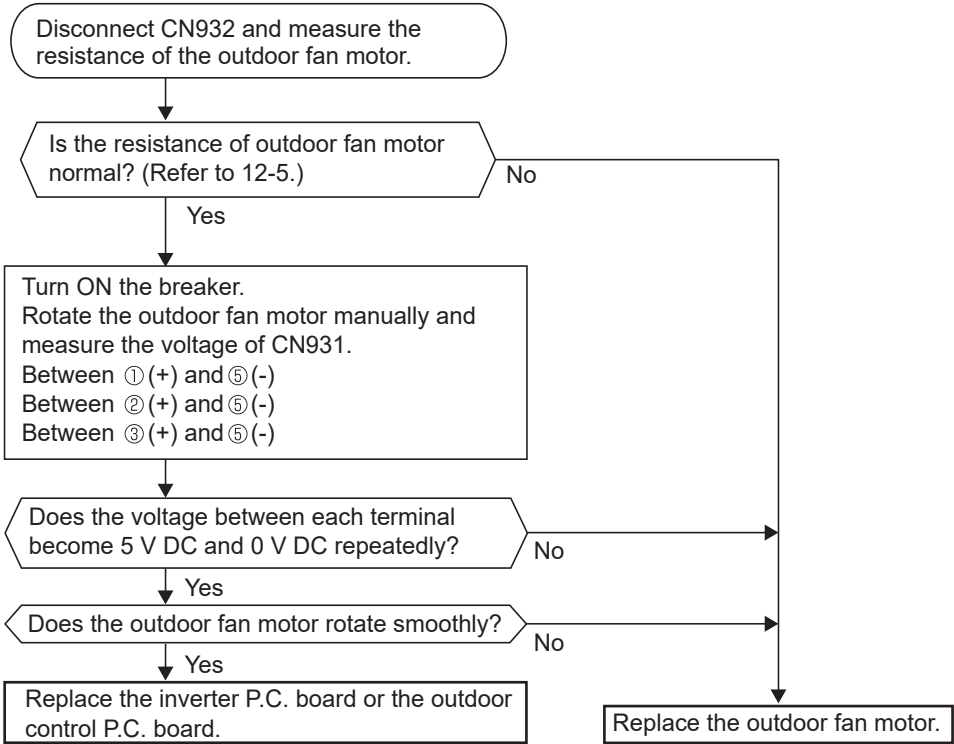

MXZ-3F54VF/3F68VF/4F72VF

MXZ-3F54VF2/3F68VF2/4F72VF2/4F80VF2

MXZ-3F54VF3/3F68VF3/4F72VF3/4F80VF3

MXZ-3F54VF4/3F68VF4/4F72VF4/4F80VF4


MXZ-4F83/5F102/6F122VF

MXZ-2F53/4F83VFHZ

MXZ-4F83/5F102/6F120VF2

MXZ-2F53/4F83VFHZ2

Connector	MXZ-3F, 4F, 5F, 6F 2F53/4F83VFHZ
CNF1	Outdoor control P.C. board

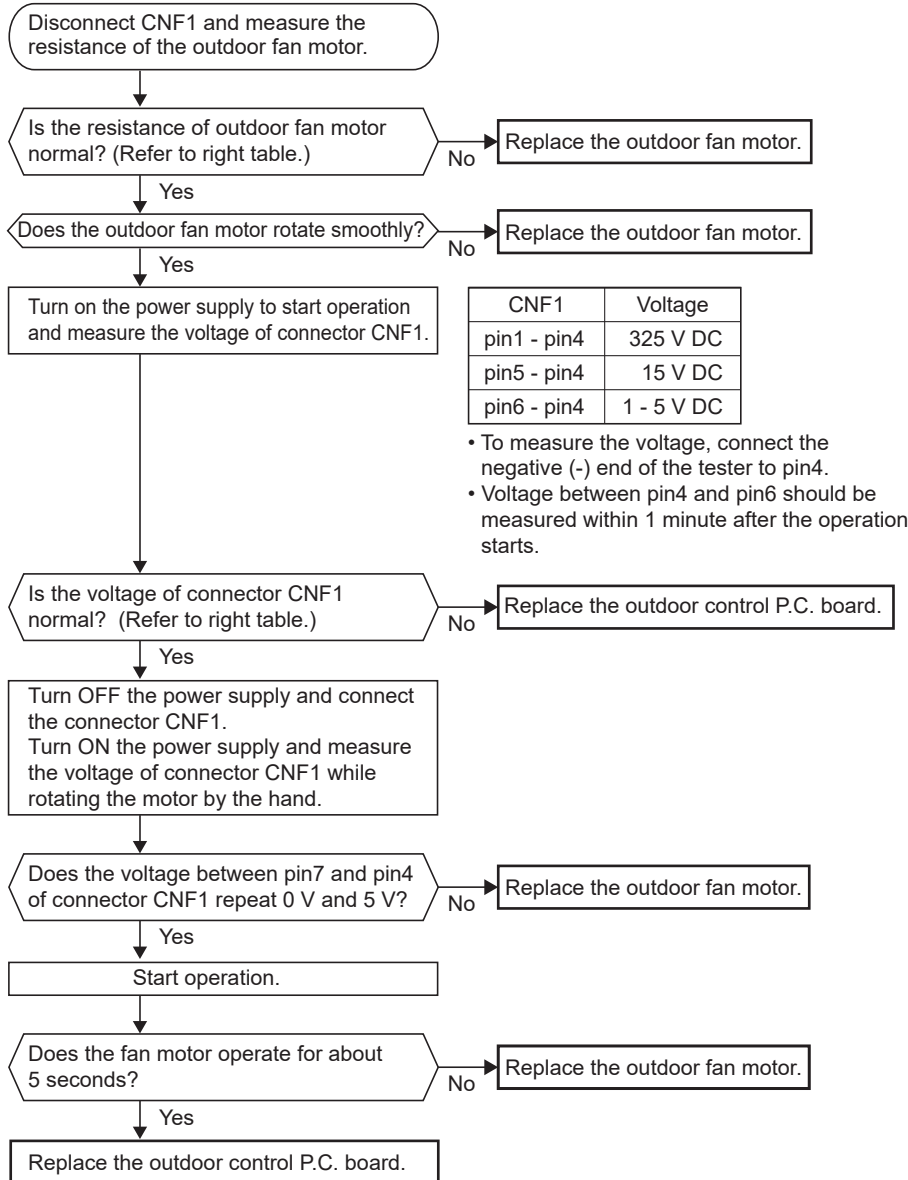

**Model name of fan motor
SIC-71XX-XXXX-X, SIC-81XX-XXXX-X**

Measuring points	Resistance
pin1 - pin4	∞
pin5 - pin4	60 kΩ
pin6 - pin4	160 kΩ
pin7 - pin4	∞


**Model name of fan motor
SIC-82XX-XXXX-X, SIC-88XX-XXXX-X**

Measuring points	Resistance
pin1 - pin4	1.1 MΩ
pin5 - pin4	40 kΩ
pin6 - pin4	220 kΩ
pin7 - pin4	∞

**Model name of fan motor
ZWB27XXXXXX**

Measuring points	Resistance
pin1 - pin4	0.9 - 1.2 MΩ
pin5 - pin4	42 - 52 kΩ
pin6 - pin4	170 - 210 kΩ
pin7 - pin4	5.8 - 7.1 MΩ

- To measure the resistance, connect the negative (-) end of the tester to pin4.
- See the spec name plate indicated in the diagram for the model name of fan motor.
- Where "X" in model name of fan motor represents numbers and letters

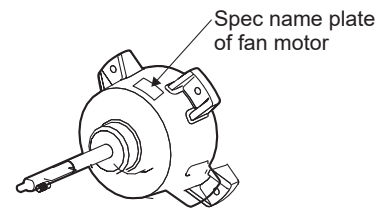


• When the operation frequency does not go up from the lowest frequency.

Ⓜ Check of HPS

- MXZ-3F54VF/3F68VF/4F72VF MXZ-4F83/5F102VF
- MXZ-3F54VF2/3F68VF2/4F72VF2/4F80VF2 MXZ-2F53/4F83VFHZ
- MXZ-3F54VF3/3F68VF3/4F72VF3/4F80VF3 MXZ-4F83/5F102VF2
- MXZ-3F54VF4/3F68VF4/4F72VF4/4F80VF4 MXZ-2F53/4F83VFHZ2

Connector	MXZ-3F, 4F, 5F, 6F 2F53/4F83VFHZ
CN63H	Outdoor control P.C. board

1. Disconnect the connector CN63H in the outdoor control P.C. board.
2. Check the resistance of HPS after 1 minute has passed since the outdoor unit power supply was turned OFF.

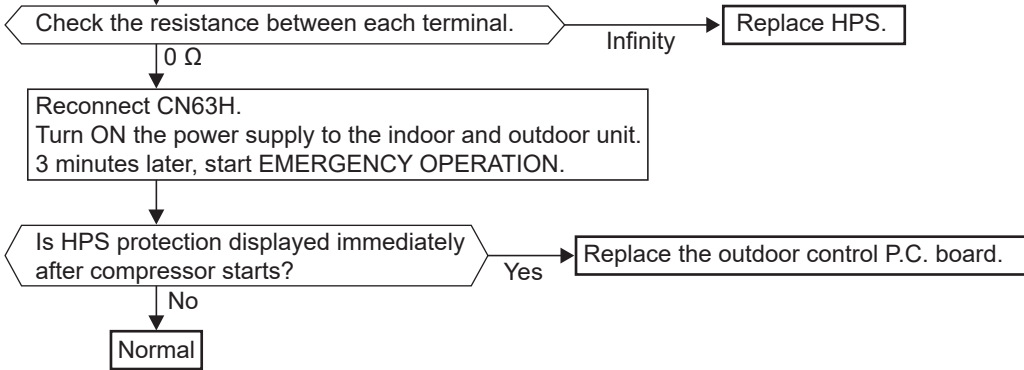

Ⓜ The other cases

Indoor unit does not operate. (different operating models in multi system)


- When you try to run 2 indoor units simultaneously, one for cooling and the other for heating, the unit which transmits signal to the outdoor unit first decides the operation mode.
- When the above situation occurs, set all the indoor units to the same mode, turn OFF the indoor units, and then turn them back ON.
- Though the top of the indoor unit sometimes gets warm, this does not mean malfunction. The reason is that the refrigerant gas continuously flows into the indoor unit even while it is not operating.

Ⓜ Check of bus-bar voltage

- MXZ-3F54VF/3F68VF/4F72VF MXZ-4F83/5F102VF
- MXZ-3F54VF2/3F68VF2/4F72VF2/4F80VF2 MXZ-2F53/4F83VFHZ
- MXZ-3F54VF3/3F68VF3/4F72VF3/4F80VF3 MXZ-4F83/5F102VF2
- MXZ-3F54VF4/3F68VF4/4F72VF4/4F80VF4 MXZ-2F53/4F83VFHZ2

- Check the voltage of power supply.
- Confirm outdoor unit failure mode recall function. (Refer to 12-2.2.)


Confirm LED1 indication lamp on the outdoor control P.C. board.

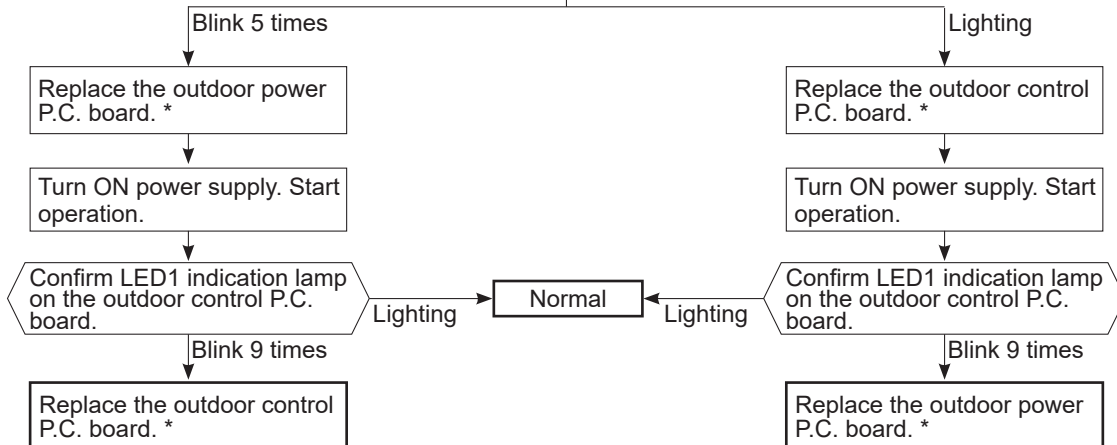

*Turn OFF power supply before removing P.C. board.

Ⓚ Check of outdoor refrigerant circuit


MXZ-2F33VF/2F42VF/2F53VF/2F53VFH
MXZ-2F33VF2/2F42VF2/2F53VF2/2F53VFH2
MXZ-2F33VF3/2F42VF3/2F53VF3/2F53VFH3
MXZ-2F33VF4/2F42VF4/2F53VF4/2F53VFH4
MXZ-6F120VF2/6F122VF

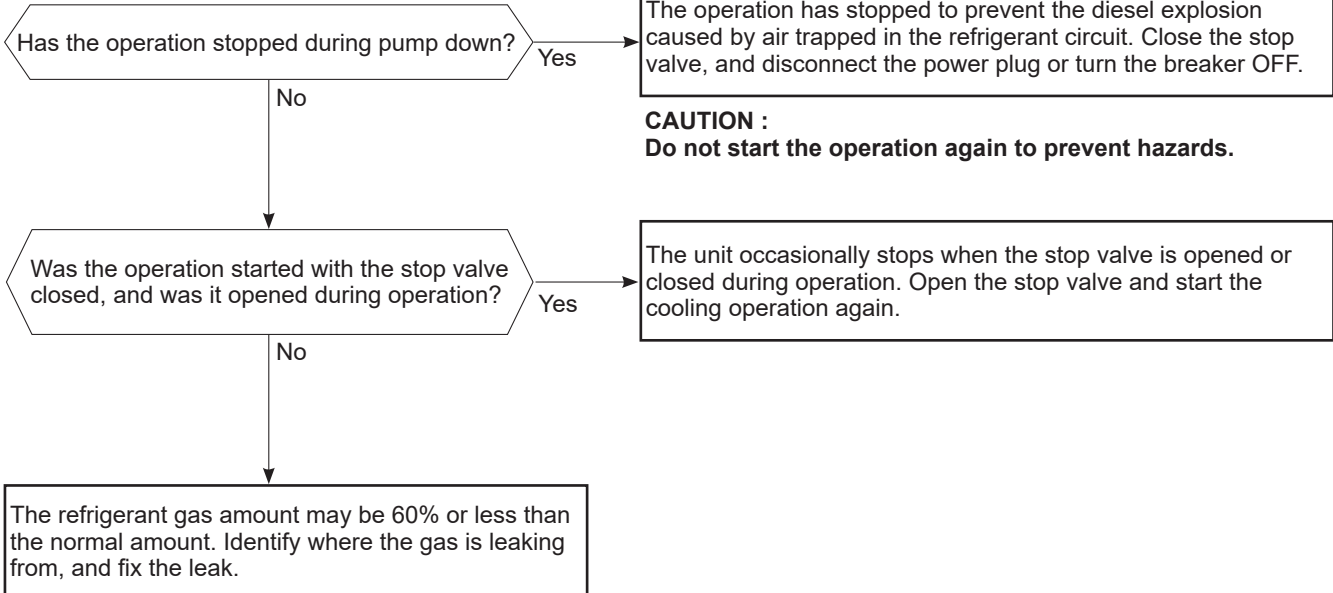


12-7. TEST POINT DIAGRAM AND VOLTAGE

1. Inverter P.C. board

MXZ-2F33VF MXZ-2F42VF MXZ-2F53VF MXZ-2F53VFH
MXZ-2F33VF2 MXZ-2F42VF2 MXZ-2F53VF2 MXZ-2F53VFH2
MXZ-2F33VF3 MXZ-2F42VF3 MXZ-2F53VF3 MXZ-2F53VFH3




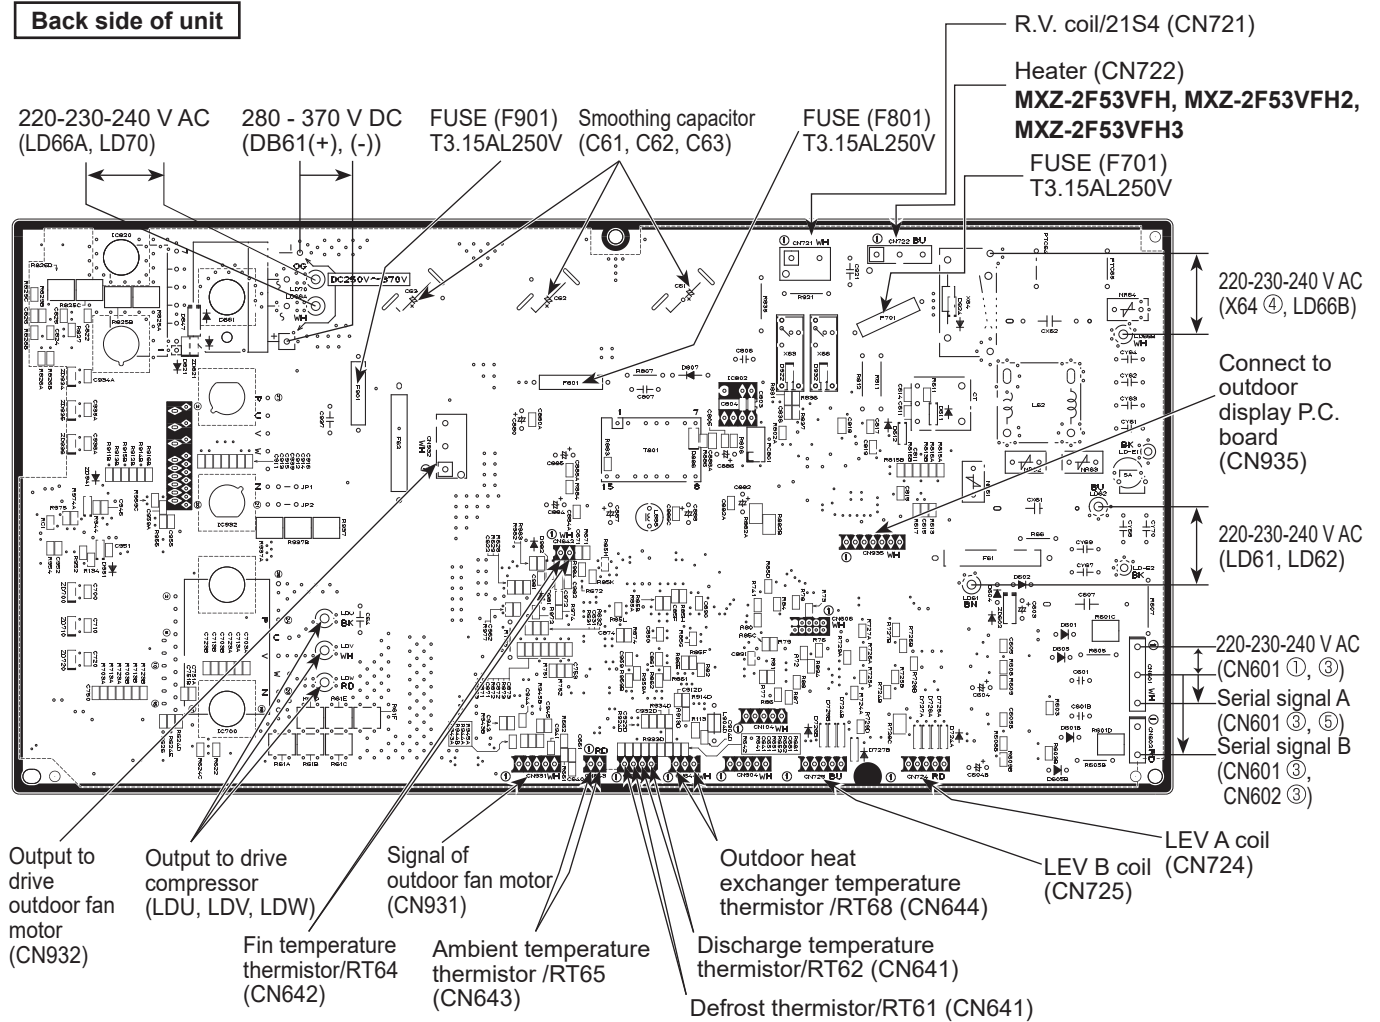


Front side of unit

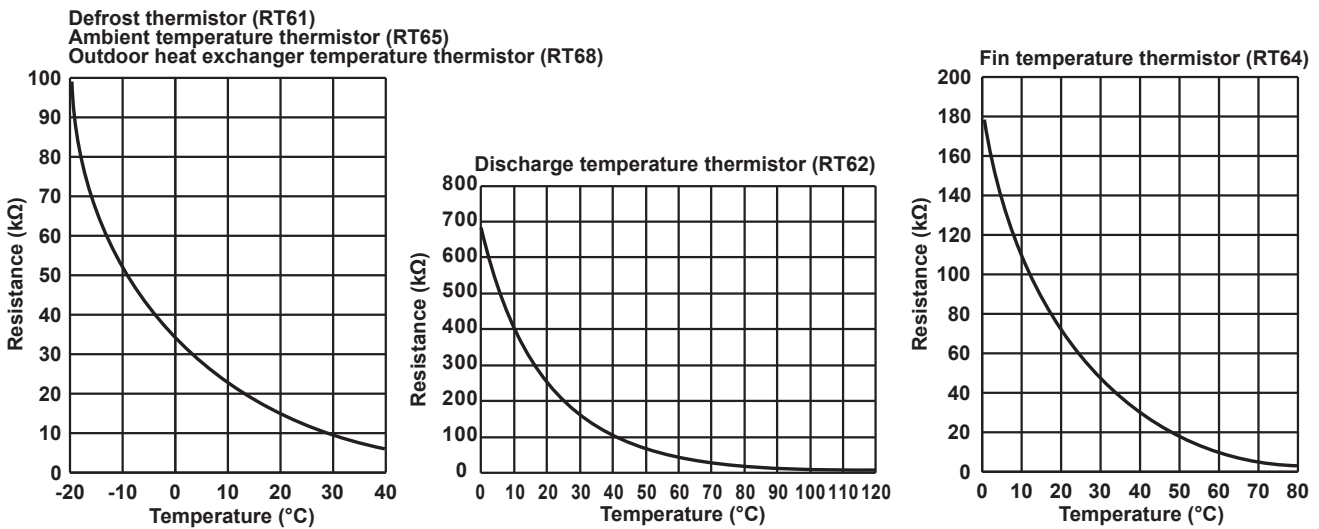


MXZ-2F33VF4 MXZ-2F42VF4 MXZ-2F53VF4 MXZ-2F53VFH4

Back side of unit

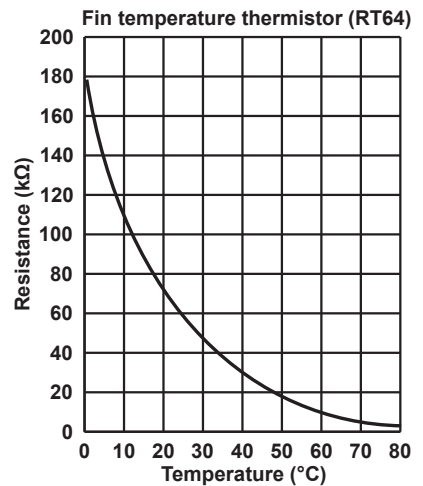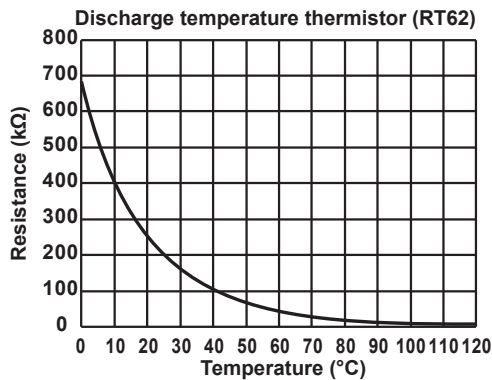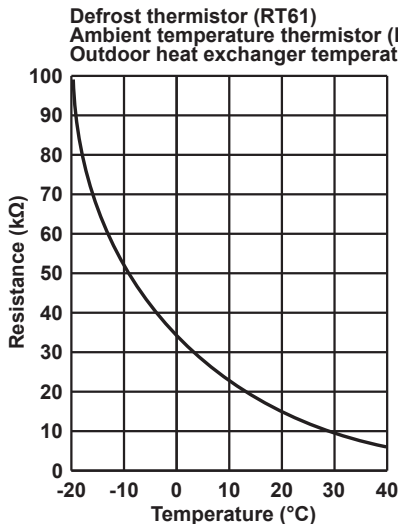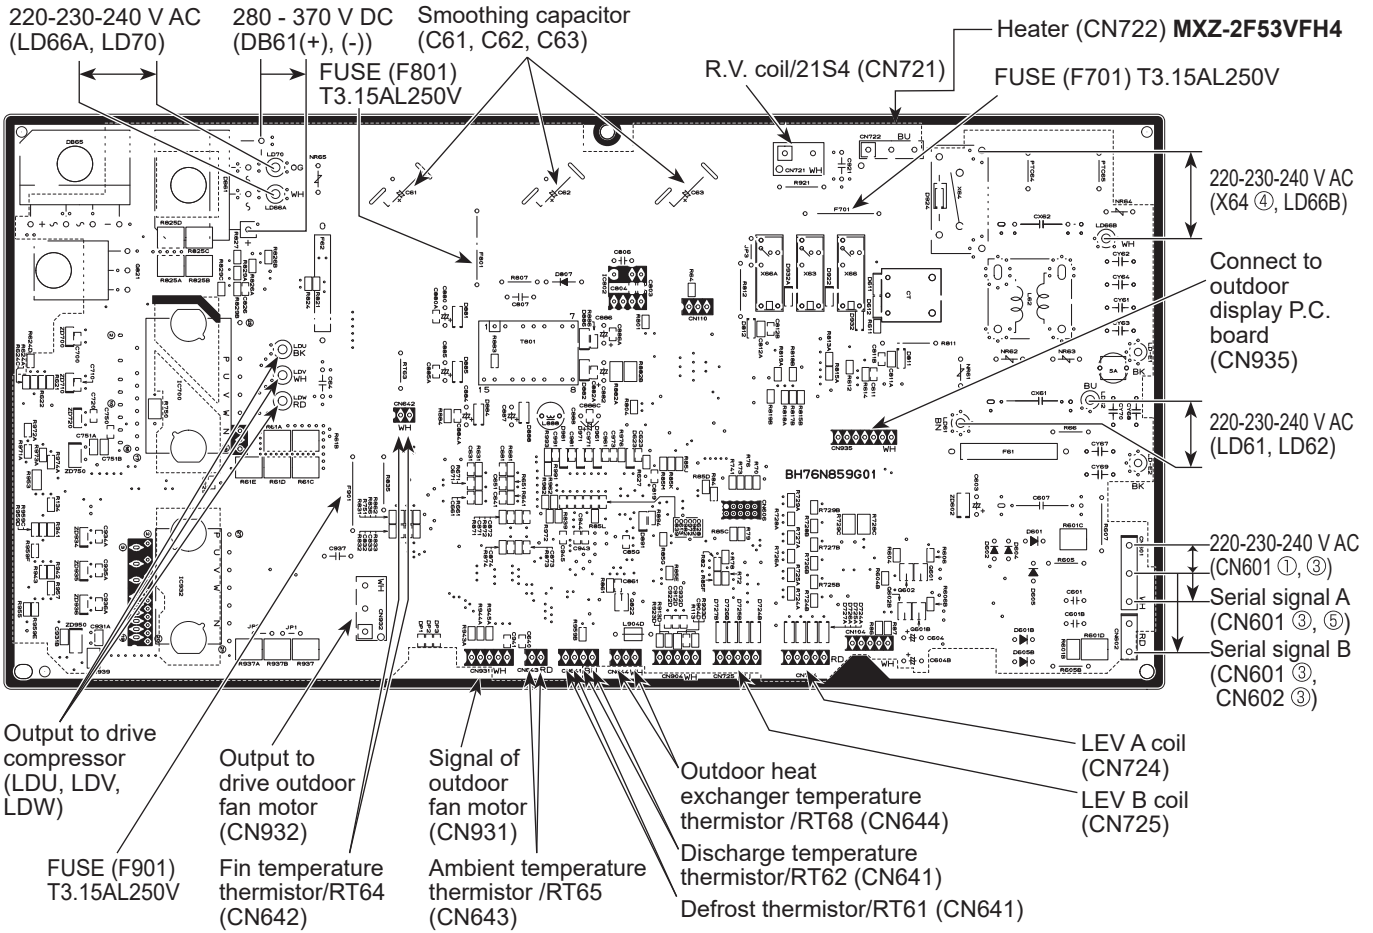


2. Outdoor control P.C. board

MXZ-3F54VF MXZ-3F68VF MXZ-4F72VF
MXZ-3F54VF2 MXZ-3F68VF2 MXZ-4F72VF2 MXZ-4F80VF2
MXZ-3F54VF3 MXZ-3F68VF3 MXZ-4F72VF3 MXZ-4F80VF3
MXZ-3F54VF4 MXZ-3F68VF4 MXZ-4F72VF4 MXZ-4F80VF4

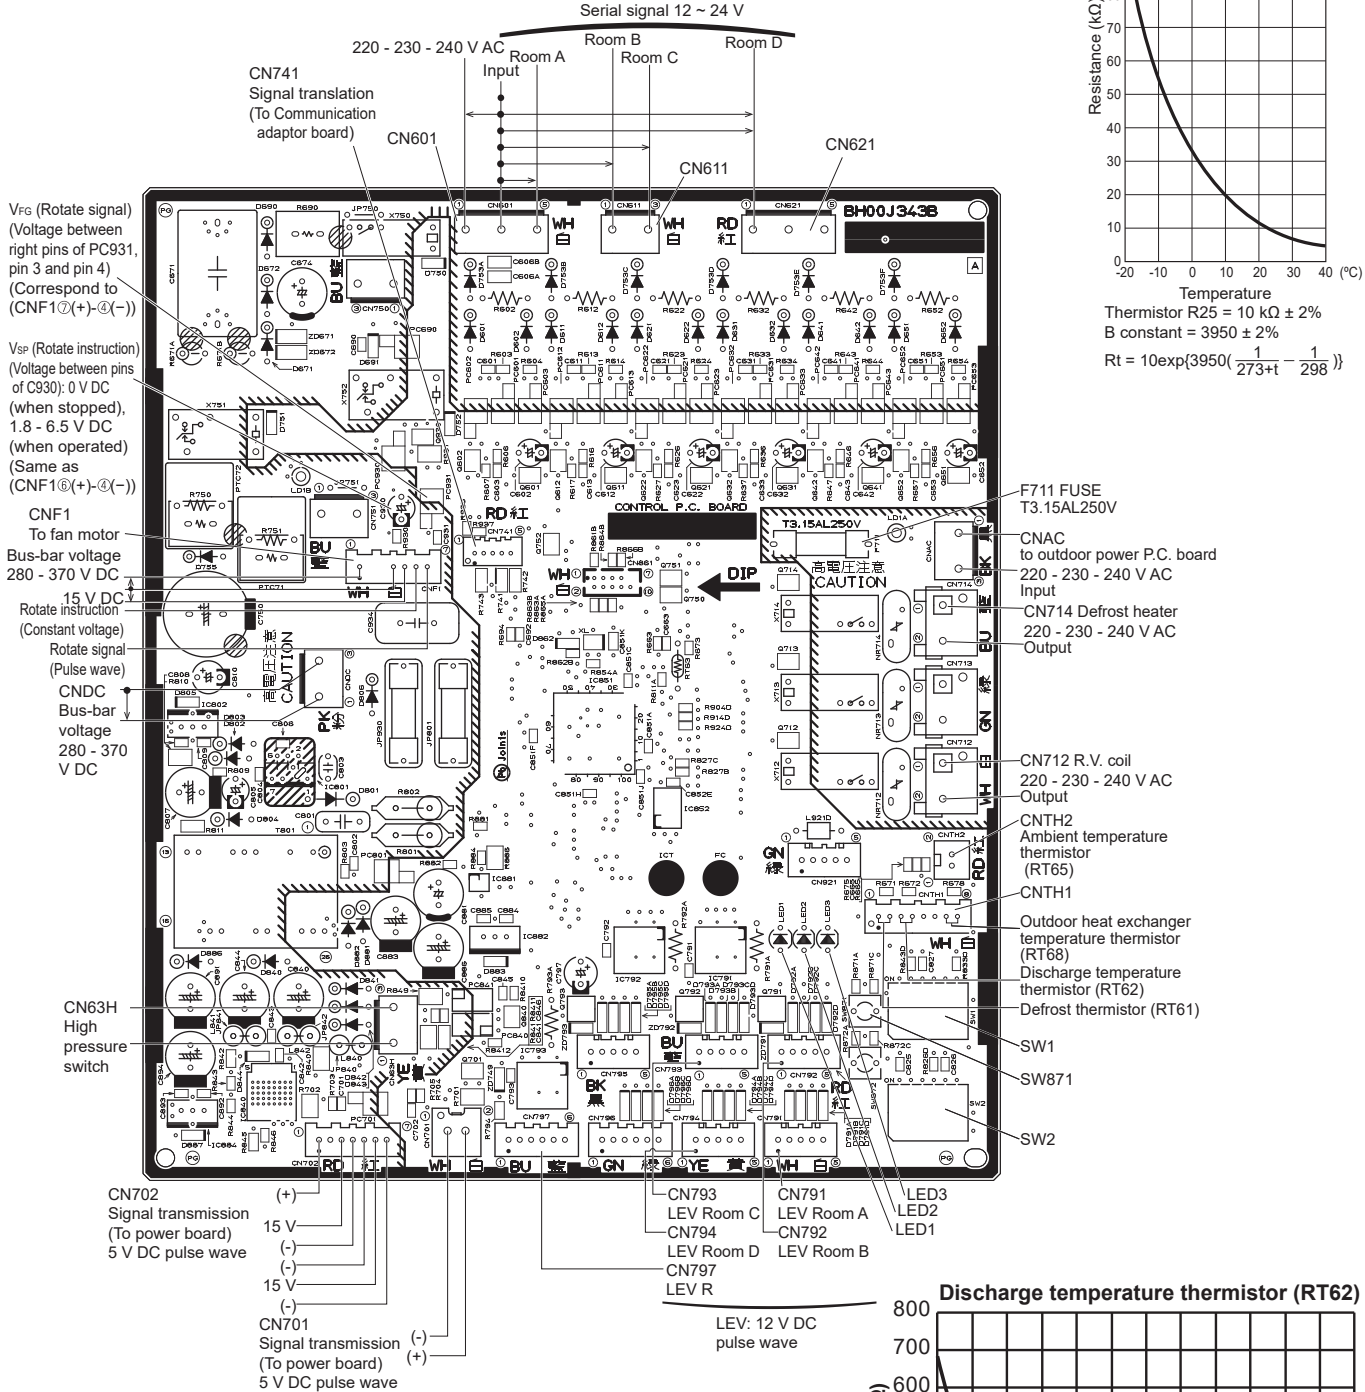


Defrost thermistor (RT61)
Ambient temperature thermistor (RT65)
Outdoor heat exchanger temperature thermistor (RT68)

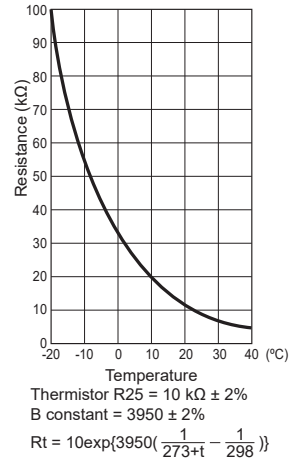

F711 FUSE
T3.15AL250V
CNAC
 to outdoor power P.C. board
 220 - 230 - 240 V AC
 Input
CN714
 Defrost heater
 220 - 230 - 240 V AC
 Output
CN712
 R.V. coil
 220 - 230 - 240 V AC
 Output
CNTH2
 Ambient temperature
 thermistor
 (RT65)
CNTH1
 Outdoor heat exchanger
 temperature
 thermistor
 (RT68)
 Discharge temperature
 thermistor
 (RT62)
 Defrost thermistor (RT61)



CN702
 Signal transmission
 (To power board)
 15 V (+)
 5 V DC pulse wave (-)
CN701
 Signal transmission
 (To power board)
 15 V (-)
 5 V DC pulse wave (+)

LEV: 12 V DC
 pulse wave

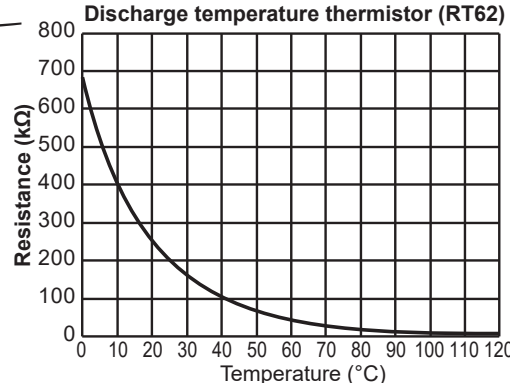


MXZ-4F83VF MXZ-4F83VF2
 MXZ-5F102VF MXZ-5F102VF2
 MXZ-2F53VFHZ MXZ-2F53VFHZ2

Defrost thermistor (RT61)
 Ambient temperature thermistor (RT65)
 Outdoor heat exchanger temperature thermistor (RT68)

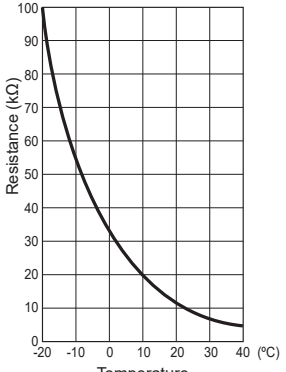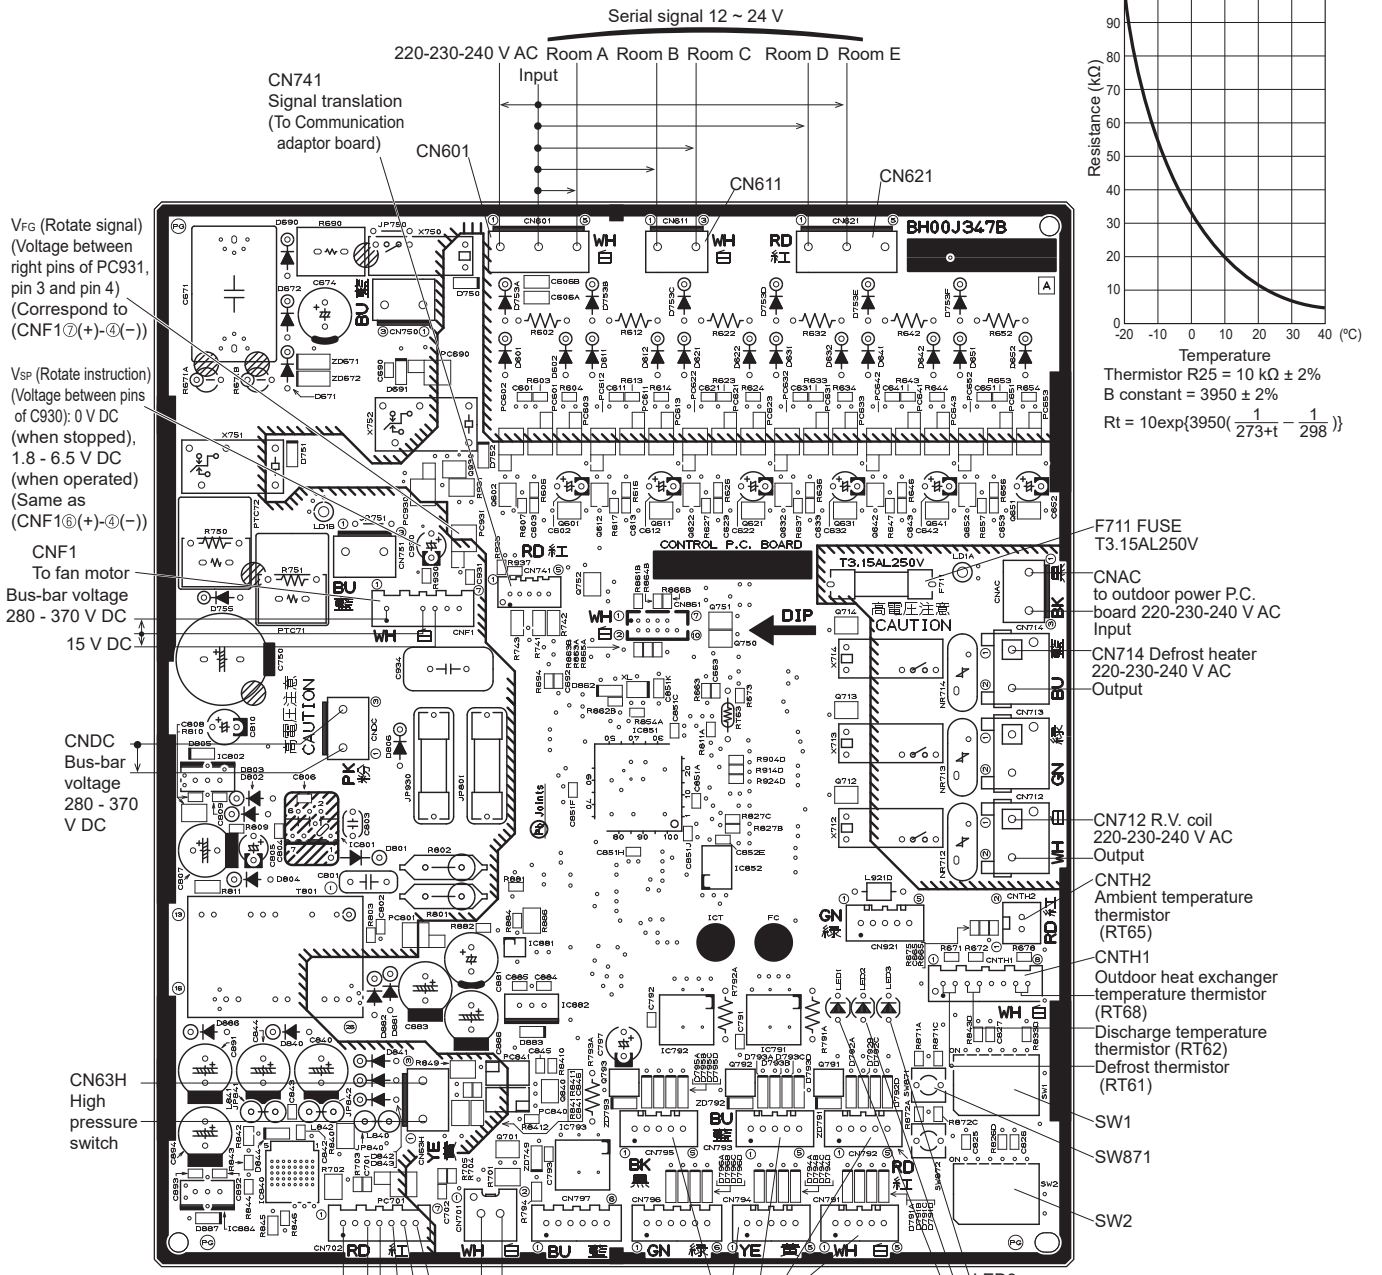



Temperature
 Thermistor R25 = 10 kΩ ± 2%
 B constant = 3950 ± 2%
 $R_t = 10 \exp(3950(\frac{1}{273+t} - \frac{1}{298}))$

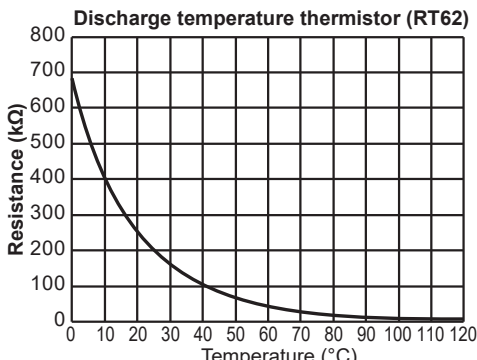

Discharge temperature thermistor (RT62)
 Thermistor R100 = 13.36 kΩ ± 2%
 B constant = 4014 ± 2%
 $R_t = 13.36 \exp(4014(\frac{1}{273+t} - \frac{1}{373}))$

MXZ-6F120VF2 MXZ-6F122VF
MXZ-4F83VFHZ MXZ-4F83VFHZ2

Defrost thermistor (RT61)
Ambient temperature thermistor (RT65)
Outdoor heat exchanger temperature thermistor (RT68)

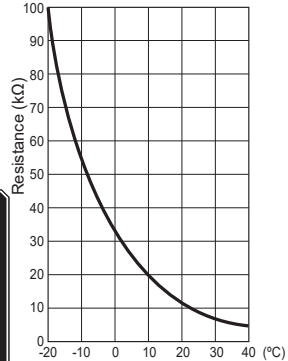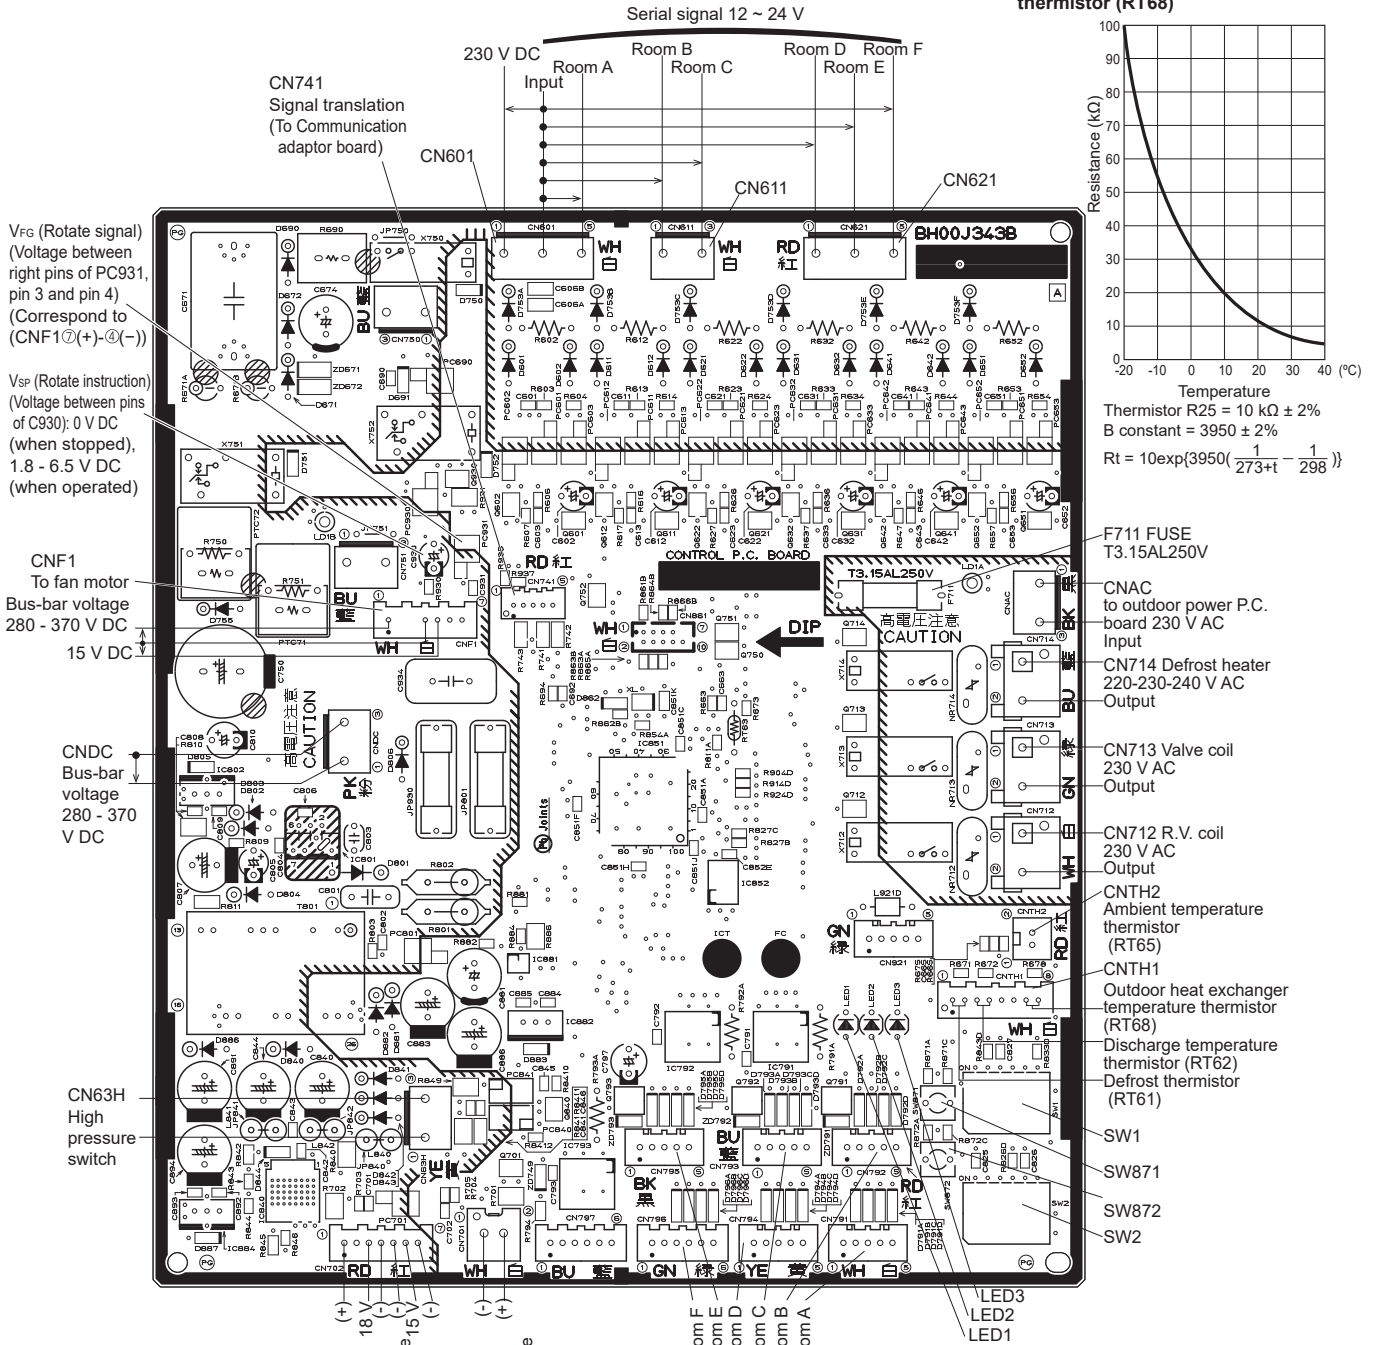

Temperature
 Thermistor R25 = 10 kΩ ± 2%
 B constant = 3950 ± 2%
 $R_t = 10 \exp(3950(\frac{1}{273+t} - \frac{1}{298}))$

Vfc (Rotate signal)
 (Voltage between right pins of PC931, pin 3 and pin 4)
 (Correspond to (CNF1①(+)-④(-)))

Vsp (Rotate instruction)
 (Voltage between pins of C930): 0 V DC (when stopped), 1.8 - 6.5 V DC (when operated)

CNF1
 To fan motor
 Bus-bar voltage
 280 - 370 V DC

CNDC
 Bus-bar voltage
 280 - 370 V DC

CN63H
 High pressure switch


- F711 FUSE T3.15A/250V
- CNAC to outdoor power P.C. board 230 V AC Input
- CN714 Defrost heater 220-230-240 V AC Output
- CN713 Valve coil 230 V AC Output
- CN712 R.V. coil 230 V AC Output
- CNTH2 Ambient temperature thermistor (RT65)
- CNTH1 Outdoor heat exchanger temperature thermistor (RT68)
- Discharge temperature thermistor (RT62)
- Defrost thermistor (RT61)
- SW1
- SW871
- SW872
- SW2

CN702 Signal transmission (To power board) 5 V DC pulse wave

CN701 Signal transmission (To power board) 5 V DC pulse wave

CN796 LEV Room F
 CN795 LEV Room E
 CN794 LEV Room D
 CN793 LEV Room C
 CN792 LEV Room B
 CN791 LEV Room A


LEV: 12 V DC pulse wave

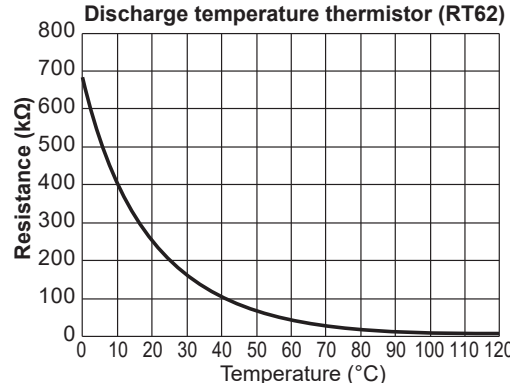



Discharge temperature thermistor (RT62)
 Thermistor R100 = 13.36 kΩ ± 2%
 B constant = 4014 ± 2%
 $R_t = 13.36 \exp(4014(\frac{1}{273+t} - \frac{1}{373}))$

3. Outdoor power P.C. board

MXZ-3F54VF MXZ-3F68VF MXZ-4F72VF
MXZ-3F54VF2 MXZ-3F68VF2 MXZ-4F72VF2 MXZ-4F80VF2
MXZ-3F54VF3 MXZ-3F68VF3 MXZ-4F72VF3 MXZ-4F80VF3
MXZ-3F54VF4 MXZ-3F68VF4 MXZ-4F72VF4 MXZ-4F80VF4


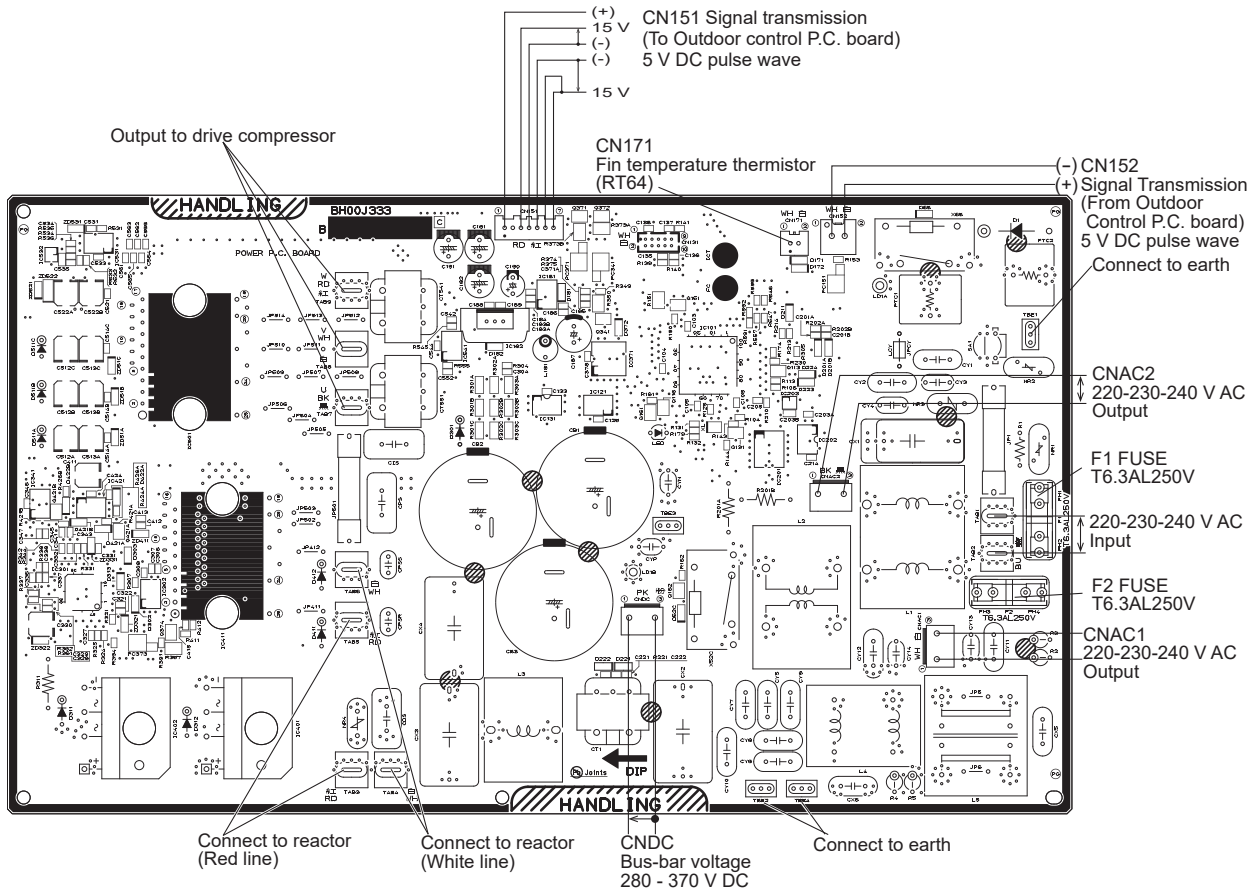


MXZ-4F83VF **MXZ-4F83VF2**
MXZ-5F102VF **MXZ-5F102VF2**
MXZ-2F53VFHZ **MXZ-2F53VFHZ2**

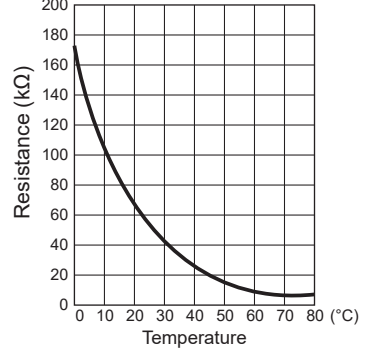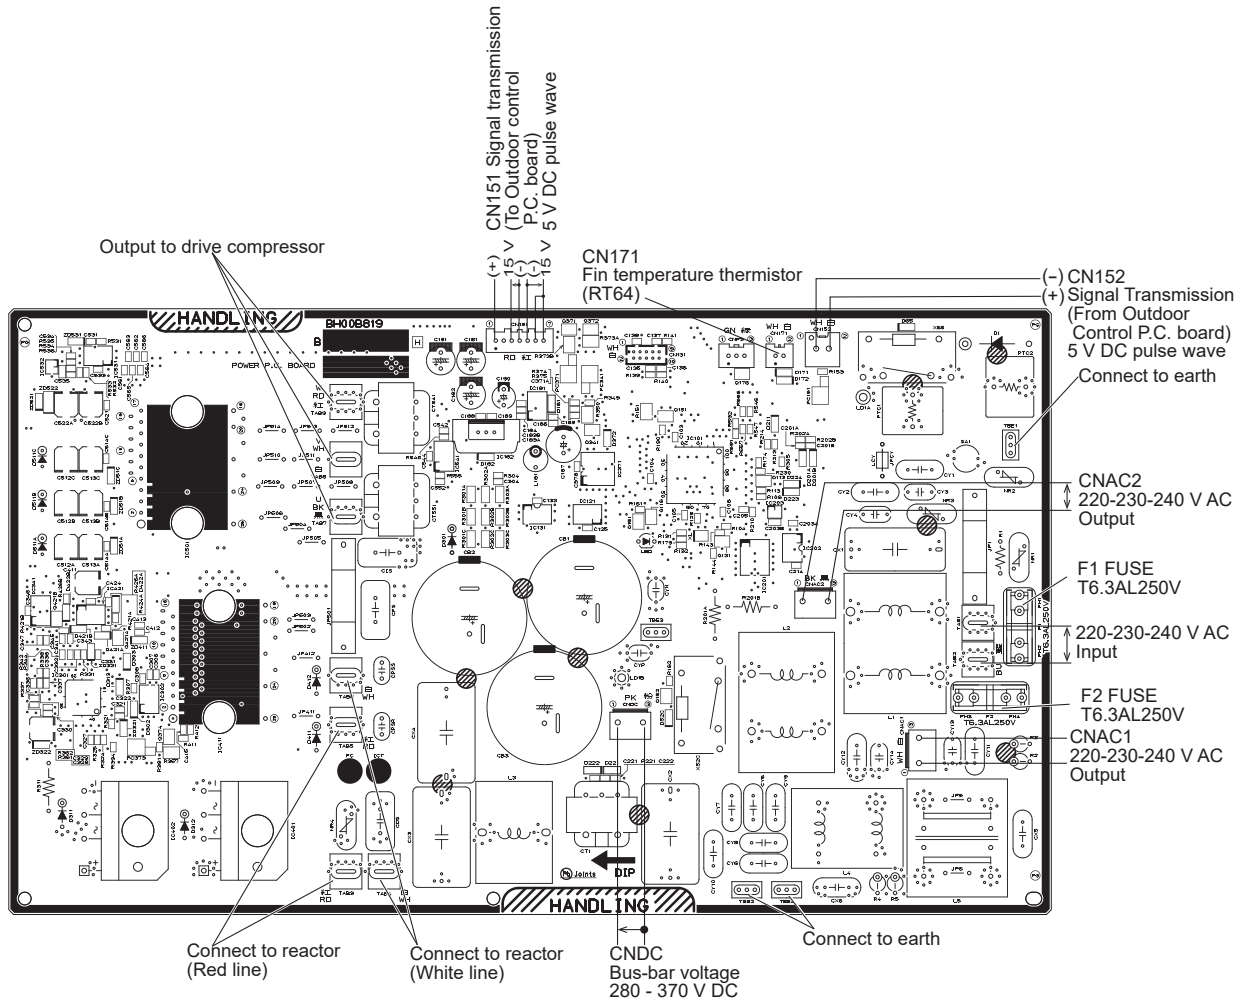


Thermistor R50 = 17 kΩ ± 2%
 B constant = 4150 ± 3%
 $R_t = 17 \exp\left\{4150 \left(\frac{1}{273+t} - \frac{1}{323}\right)\right\}$

MXZ-6F120VF2 MXZ-6F122VF
MXZ-4F83VFHZ MXZ-4F83VFHZ2

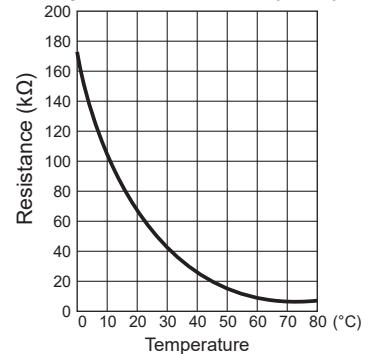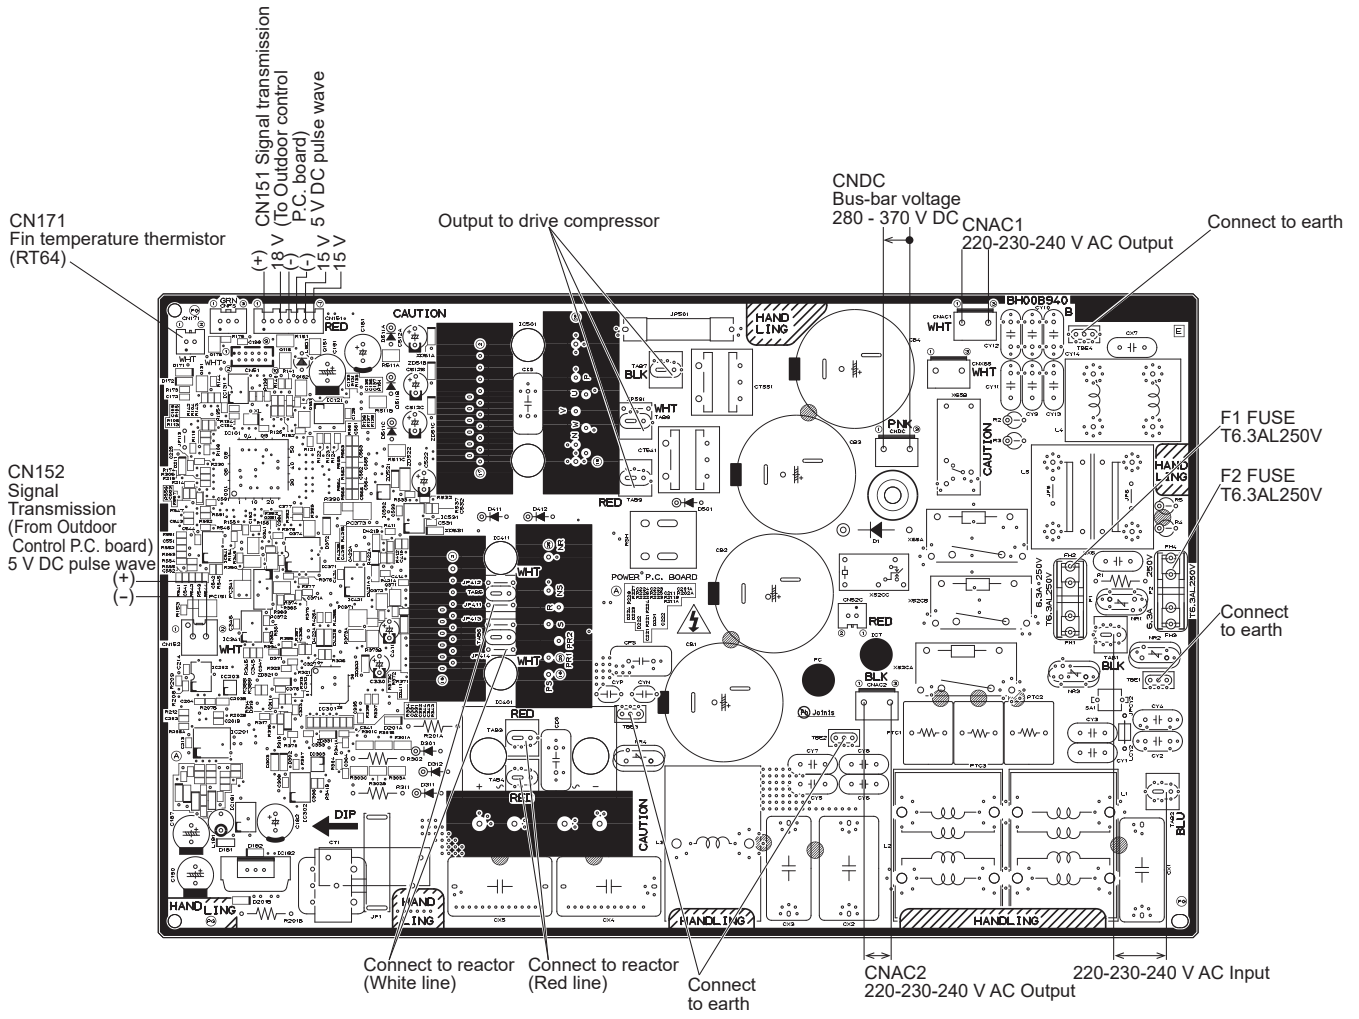

Thermistor R50 = 17 kΩ ± 2%
 B constant = 4150 ± 3%


$$R_t = 17 \exp\left\{4150 \left(\frac{1}{273+t} - \frac{1}{323} \right)\right\}$$




4. Outdoor display P.C. board

- MXZ-2F33VF MXZ-2F42VF MXZ-2F53VF MXZ-2F53VFH
- MXZ-2F33VF2 MXZ-2F42VF2 MXZ-2F53VF2 MXZ-2F53VFH2
- MXZ-2F33VF3 MXZ-2F42VF3 MXZ-2F53VF3 MXZ-2F53VFH3
- MXZ-2F33VF4 MXZ-2F42VF4 MXZ-2F53VF4 MXZ-2F53VFH4

To inverter P.C. board (CN936)

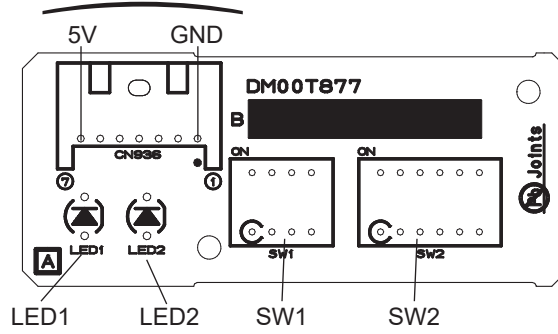

Fin temperature thermistor (RT64)

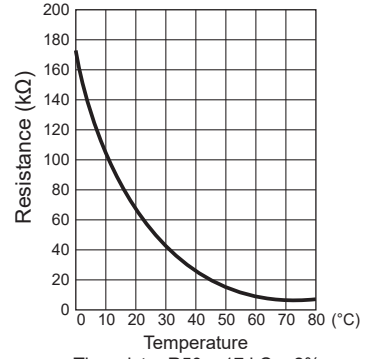

Thermistor R50 = 17 kΩ ± 2%
 B constant = 4150 ± 3%
 $R_t = 17 \exp\left\{4150 \left(\frac{1}{273+t} - \frac{1}{323}\right)\right\}$

<Detaching method of the terminal with locking mechanism>

The terminal which has the locking mechanism can be detached as shown below.



There are 2 types of the terminal with locking mechanism.

The terminal without locking mechanism can be detached by pulling it out.

Check the shape of the terminal before detaching.

(1) Slide the sleeve and check if there is a locking lever or not.

(2) The terminal with this connector shown below has the locking mechanism.

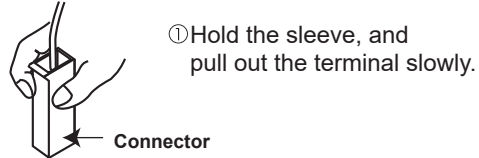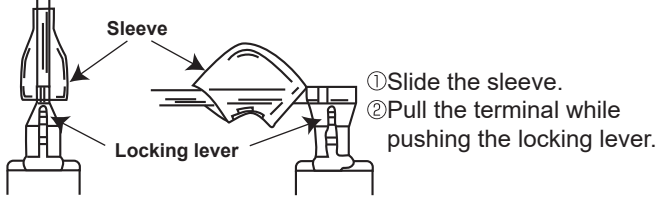

- 13-1. MXZ-2F33VF MXZ-2F42VF MXZ-2F53VF MXZ-2F53VFH
 MXZ-2F33VF2 MXZ-2F42VF2 MXZ-2F53VF2 MXZ-2F53VFH2
 MXZ-2F33VF3 MXZ-2F42VF3 MXZ-2F53VF3 MXZ-2F53VFH3
 MXZ-2F33VF4 MXZ-2F42VF4 MXZ-2F53VF4 MXZ-2F53VFH4

—>: Indicates the visible parts in the photos/figures.

--->: Indicates the invisible parts in the photos/figures.

NOTE: Turn OFF the power supply before disassembly.

OPERATING PROCEDURE	PHOTOS/FIGURES
<p>1. Removing the cabinet and the panels</p> <p>(1) Remove the screws fixing the service panel. (2) Pull down the service panel and remove it. (3) Disconnect the power supply and indoor/outdoor connecting wire. (4) Remove the screws fixing the top panel. (5) Remove the top panel. (6) Remove the screws fixing the cabinet. (7) Remove the cabinet. (8) Remove the screws fixing the back panel. (9) Remove the back panel.</p> <p>Photo 2</p>	<p>Photo 1</p> <p>Photo 3</p>

OPERATING PROCEDURE

2. Removing the inverter assembly and the inverter P.C. board

- (1) Remove the service panel, the top panel and the cabinet (Refer to section 1).
- (2) Disconnect the power supply and indoor/outdoor connecting wire and remove the back panel (Refer to section 1).
- (3) Disconnect all connectors and lead wires on the inverter P.C. board.
- (4) Remove the compressor connector (CNMC).
- (5) Remove the screws fixing the heat sink support and the separator.
- (6) Remove the screws of the terminal block support and the back panel. (Photo 2)
- (7) Remove the inverter assembly.
- (8) Remove the screw of the earth wire and screws of the terminal block support.
- (9) Remove the hooks of the heat sink support and remove the heat sink support from the P.C. board support.
- (10) Remove the screw fixing the inverter P.C. board and remove the inverter P.C. board from the P.C. board support.

3. Removing the R.V. coil

- (1) Remove the service panel, the top panel and the cabinet (Refer to section 1).
- (2) Disconnect the power supply and indoor/outdoor connecting wire and remove the back panel (Refer to section 1).
- (3) Remove the inverter assembly (Refer to section 2).
- (4) Remove the R.V. coil.

4. Removing the discharge temperature thermistor, defrost thermistor and outdoor heat exchanger temperature thermistor

- (1) Remove the service panel, the top panel and the cabinet (Refer to section 1).
- (2) Disconnect the power supply and indoor/outdoor connecting wire and remove the back panel (Refer to section 1).
- (3) Remove the inverter assembly (Refer to section 2).
- (4) Remove the terminal cover, and remove the thermal protector (TRS).
- (5) Pull out the discharge temperature thermistor from its holder.
- (6) Pull out the defrost thermistor from its holder (Photo 7).
- (7) Pull out the outdoor heat exchanger temperature thermistor from its holder (Photo 7).

PHOTOS/FIGURES

Photo 4

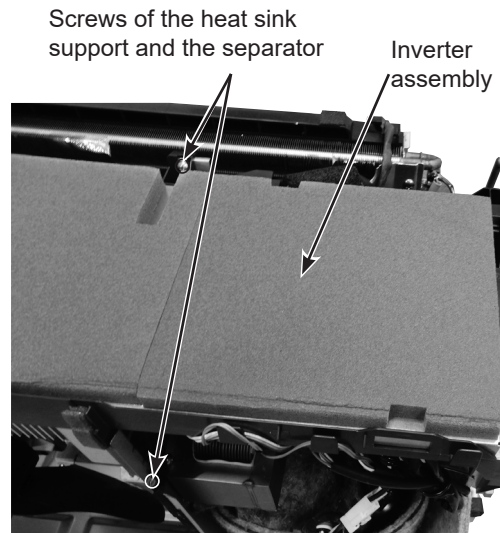


Photo 5


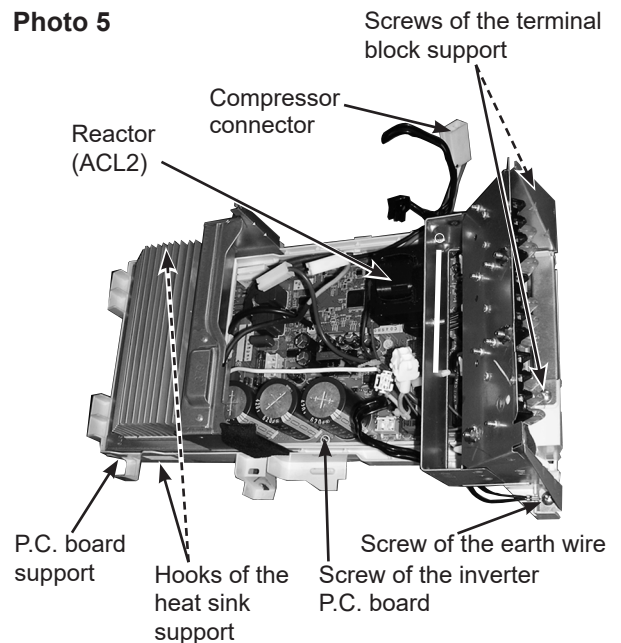


Photo 6

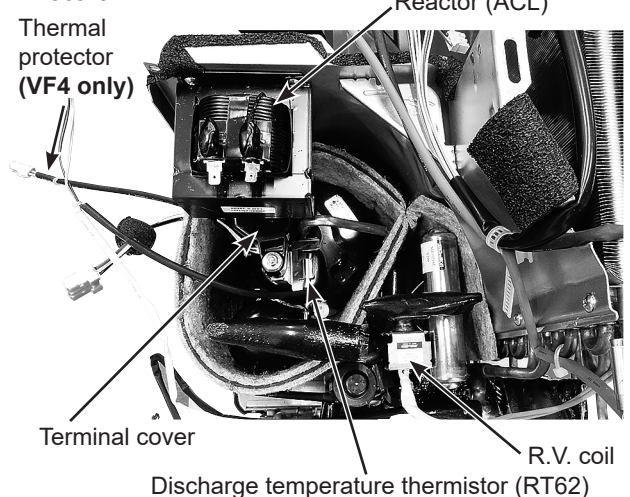

OPERATING PROCEDURE

5. Removing the outdoor fan motor

- (1) Remove the service panel, the top panel and the cabinet (Refer to section 1).
- (2) Disconnect the power supply and indoor/outdoor connecting wire.
- (3) Disconnect the connectors for outdoor fan motor.
- (4) Remove the propeller fan nut.
- (5) Remove the propeller fan.
- (6) Remove the screws fixing the fan motor.
- (7) Remove the fan motor.


6. Removing the compressor and the 4-way valve

- (1) Remove the service panel, the top panel and the cabinet (Refer to section 1).
- (2) Disconnect the power supply and indoor/outdoor connecting wire and remove the back panel (Refer to section 1).
- (3) Remove the inverter assembly (Refer to section 2).
- (4) Remove the terminal cover, and remove the thermal protector (TRS).
- (5) Pull out the discharge temperature thermistor from its holder.
- (6) Recover gas from the refrigerant circuit.

NOTE: Recover gas from the pipes until the pressure gauge shows 0 kg/cm² (0 MPa).

- (7) Detach the brazed part of the suction and the discharge pipe connected with compressor.
- (8) Remove the nuts of compressor legs.
- (9) Remove the compressor.
- (10) Detach the brazed part of pipes connected with 4-way valve.

Photo 10

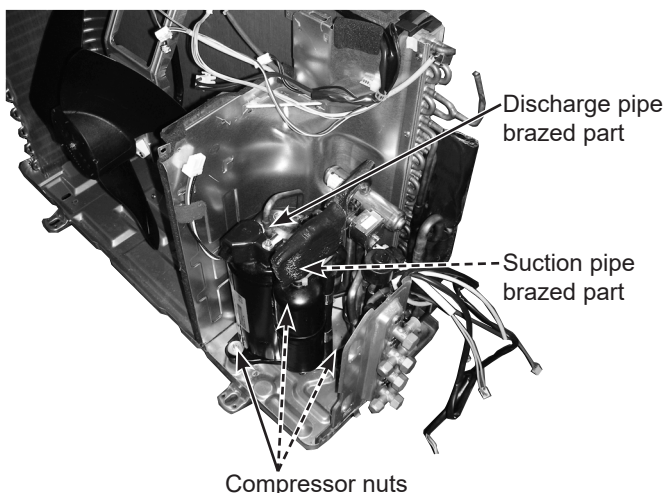

PHOTOS/FIGURES

Photo 7

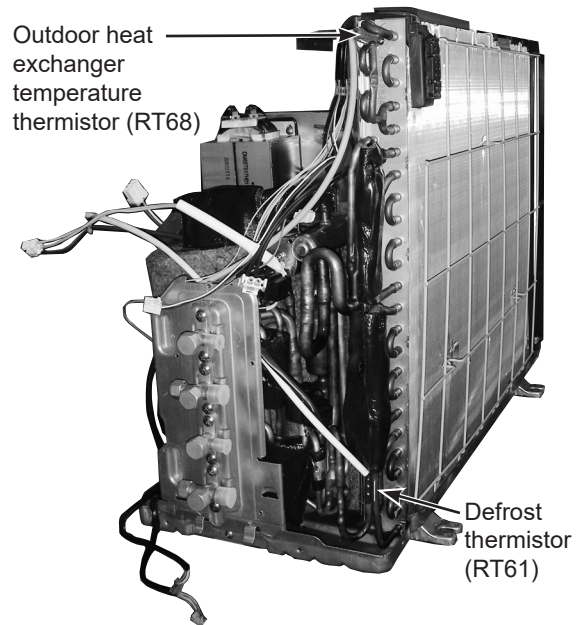


Photo 8





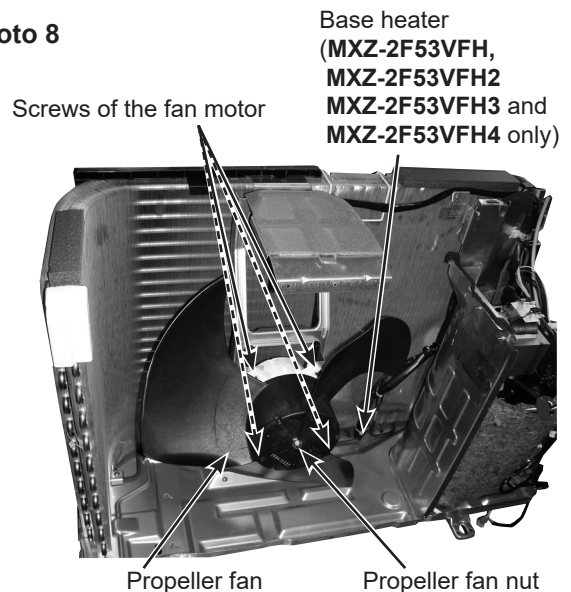


Photo 9

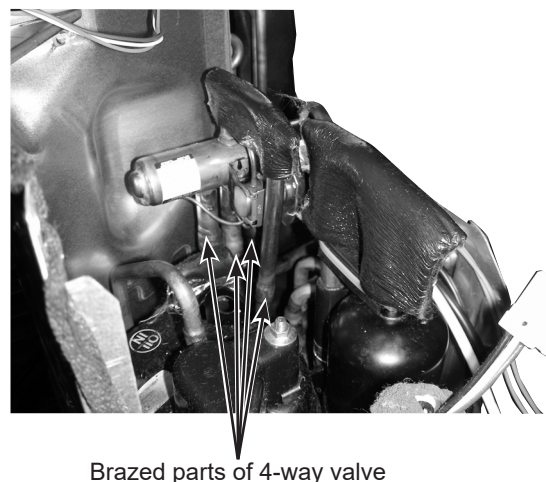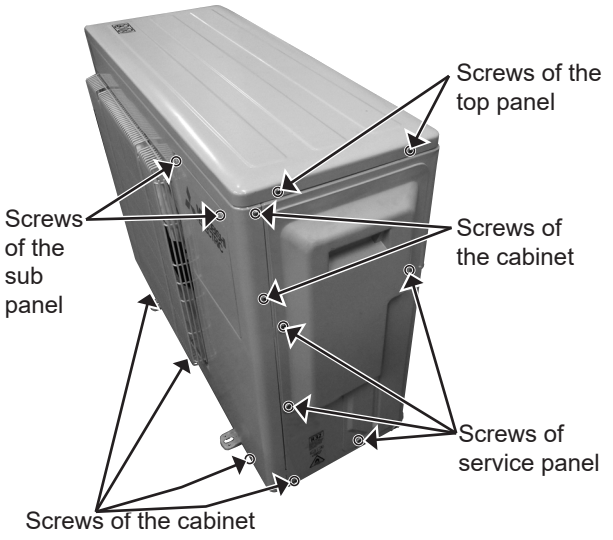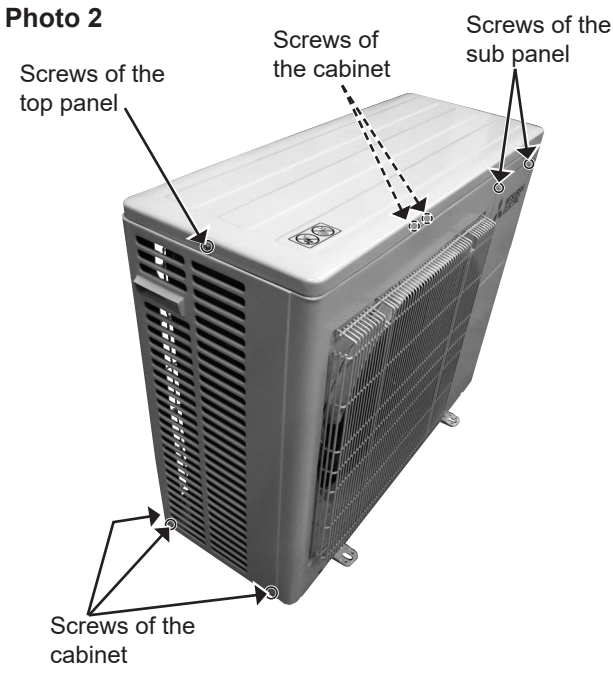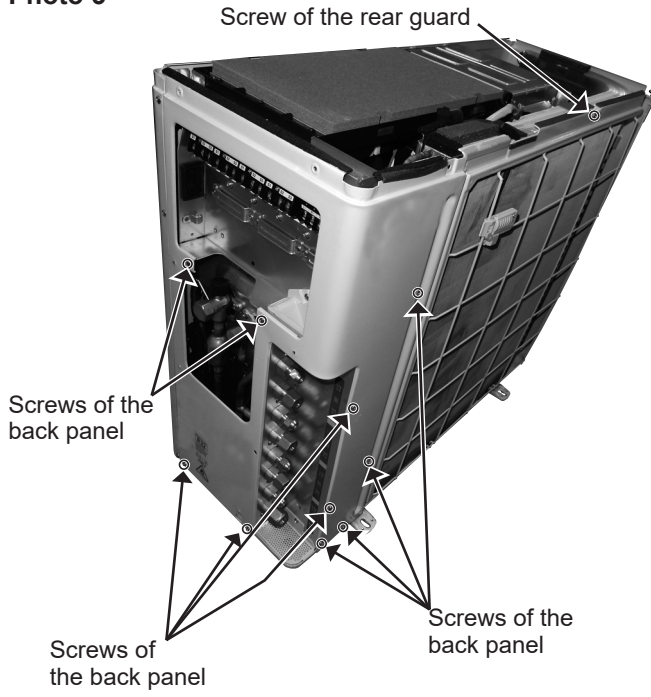

**13-2. MXZ-3F54VF MXZ-3F68VF MXZ-4F72VF
 MXZ-3F54VF2 MXZ-3F68VF2 MXZ-4F72VF2 MXZ-4F80VF2
 MXZ-3F54VF3 MXZ-3F68VF3 MXZ-4F72VF3 MXZ-4F80VF3
 MXZ-3F54VF4 MXZ-3F68VF4 MXZ-4F72VF4 MXZ-4F80VF4**

NOTE: Turn OFF the power supply before disassembly.


OPERATING PROCEDURE	PHOTOS/FIGURES
<p>1. Removing the cabinet and the panels</p> <p>(1) Remove the screws of the service panel, and remove the service panel.</p> <p>(2) Disconnect the power supply and indoor/outdoor connecting wire.</p> <p>(3) Remove the screws of the top panel, and remove the top panel.</p> <p>(4) Remove the screws of the cabinet, and remove the cabinet.</p> <p>(5) Remove the screws of the back panel, and remove the back panel (Photo 3).</p>	<p>Photo 1</p>  <p>Screws of the top panel</p> <p>Screws of the sub panel</p> <p>Screws of the cabinet</p> <p>Screws of service panel</p> <p>Screws of the cabinet</p> <p>Photo 2</p>  <p>Screws of the top panel</p> <p>Screws of the cabinet</p> <p>Screws of the sub panel</p> <p>Screws of the cabinet</p> <p>Photo 3</p>  <p>Screw of the rear guard</p> <p>Screws of the back panel</p> <p>Screws of the back panel</p> <p>Screws of the back panel</p> <p>Screws of the back panel</p>

OPERATING PROCEDURE

2. Removing the outdoor control P.C. board, the outdoor power P.C. board and the reactor

- (1) Remove the service panel (Photo 1).
- (2) Disconnect the power supply and indoor/outdoor connecting wire.
- (3) Remove the top panel, the cabinet, and the back panel (Photo 1, 2, 3).
- (4) Disconnect all connectors and lead wires on the outdoor control P.C. board.
- (5) Unhook the catches of the outdoor control P.C. board, and remove the outdoor control P.C. board.
- (6) Remove the screws of the electrical box assembly, unhook the catches of the electrical box assembly, and remove the electrical box assembly.
- (7) Remove the screws of outdoor control P.C. board holder, and remove the outdoor control P.C. board holder.
- (8) Remove the screws of the reactor, and remove the reactor.
- (9) Remove the screws of the reactor bed, and remove the reactor bed.
- (10) Remove the screws of the heat sink support, and remove the heat sink support.
- (11) Remove the screws fixing the outdoor power P.C. board.
- (12) Disconnect all connectors and lead wires on the outdoor power P.C. board.

Photo 7

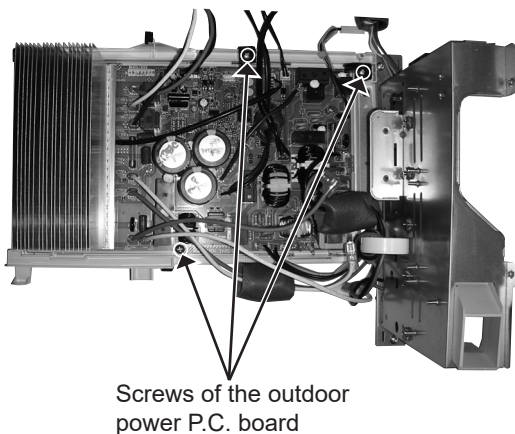

PHOTOS/FIGURES

Photo 4


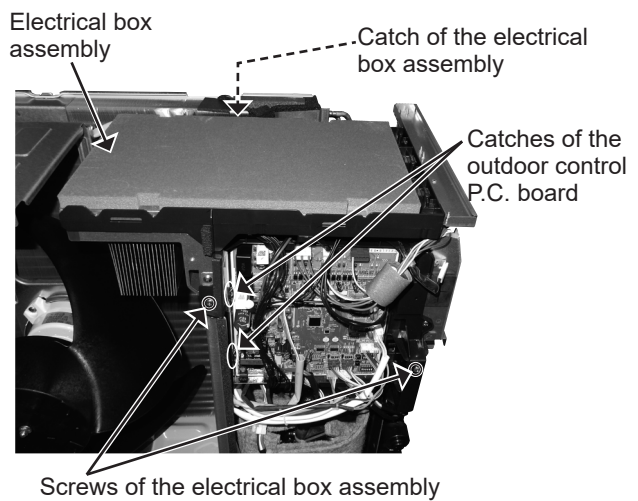


Photo 5



Photo 6




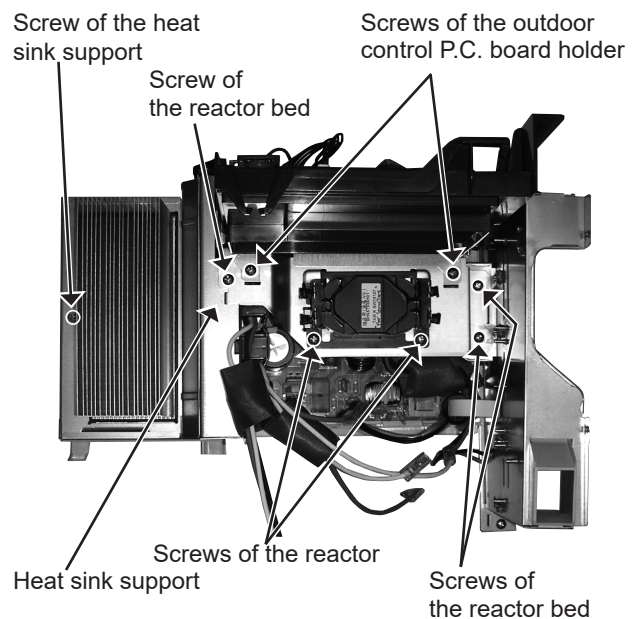

OPERATING PROCEDURE

3. Removing the fan motor

- (1) Remove the service panel (Photo 1).
- (2) Disconnect the power supply and indoor/outdoor connecting wire.
- (3) Remove the top panel, the cabinet, and the back panel (Photo 1, 2, 3).
- (4) Disconnect connectors CN712, CNF1, CNTH1, CNTH2, CN63H, CN791, CN792, CN793, CN794 (**MXZ-4F72VF/4F72VF2/4F72VF3/4F72VF4/4F80VF2/4F80VF3/4F80VF4**), CN797 on the outdoor control P.C. board and disconnect the relay connector of the compressor lead wire.
- (5) Remove the screws of the electrical box assembly, and remove the electrical box assembly (Photo 4).
- (6) Remove the propeller fan.
- (7) Remove the fan motor.


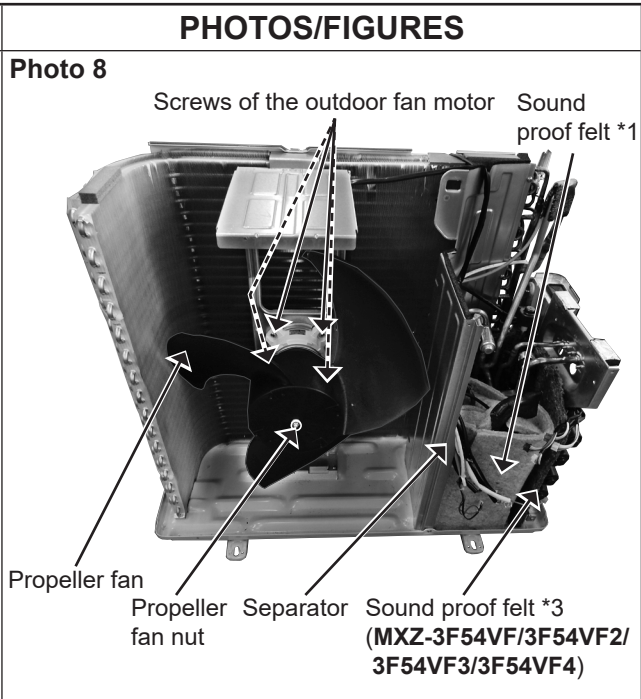


4. Removing the compressor and the 4-way valve

- (1) Remove the service panel (Photo 1).
- (2) Disconnect the power supply and indoor/outdoor connecting wire.
- (3) Remove the top panel, the cabinet, and the back panel (Photo 1, 2, 3).
- (4) Recover gas from the refrigerant circuit.

NOTE: Recover gas from the pipes until the pressure gauge shows 0 kg/cm² (0 MPa).
- (5) Disconnect the outdoor control P.C. board connectors: CN712, CNF1, CNTH1, CNTH2, CN63H, CN791, CN792, CN793, CN794 (**MXZ-4F72VF/4F72VF2/4F72VF3/4F72VF4/4F80VF2/4F80VF3/4F80VF4**), CN797.
- (6) Remove terminal cover and the thermal protector (TRS).
- (7) Disconnect the compressor lead wire from the terminal of the compressor (U, V, W).
- (8) Remove the screws of the electrical box assembly, and remove the electrical box assembly (Photo 4).
- (9) Remove the propeller fan.
- (10) Remove the sound proof felt *1, *2 and *3 (**MXZ-3F54VF/3F54VF2/3F54VF3/3F54VF4**).

NOTE: Before removing the sound proof felt, remove the hook-and-loop fastener of the top felt by the power receiver.
- (11) Remove the screws of the separator, and remove the separator.
- (12) Detach the brazed parts of the compressor suction and discharge pipes.
- (13) Remove the compressor nuts and remove the compressor.
- (14) Detach the brazed parts of the 4-way valve and pipe.

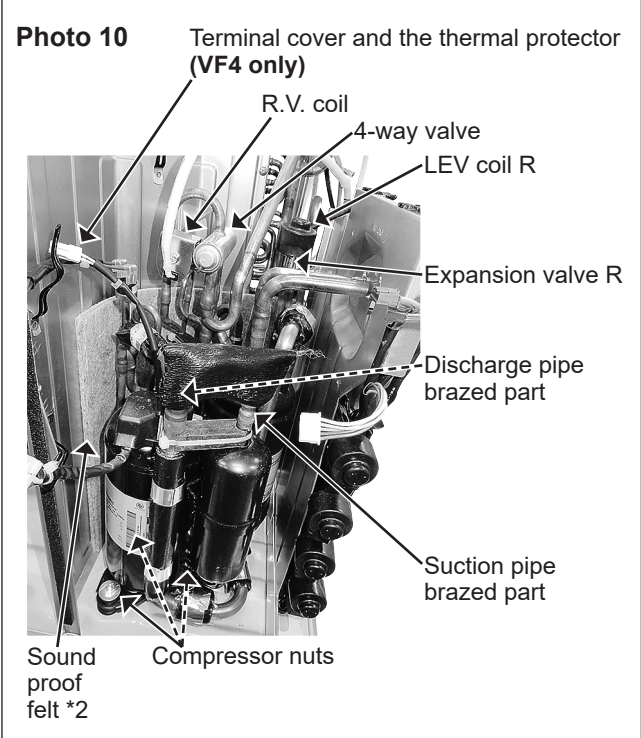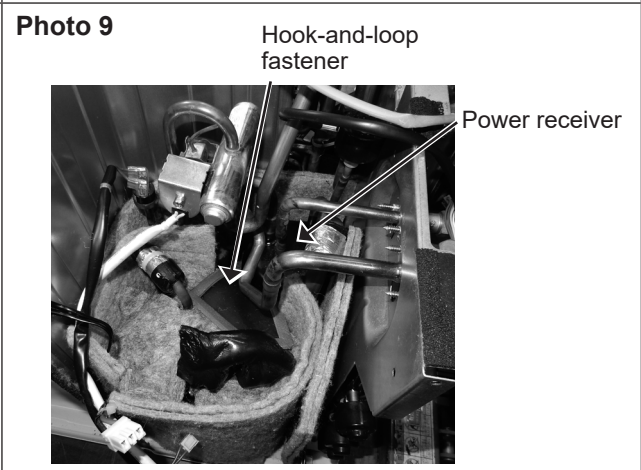

OPERATING PROCEDURE

5. Removing the expansion valve

- (1) Remove the service panel (Photo 1).
- (2) Remove the top panel, the cabinet, and the back panel (Photo 1, 2, 3).
(Gas recovery is not required if the unit is pumped down.)
- (3) Remove the electrical parts for removing LEV R (Photo 4, 8).
- (4) Remove the LEV coils.
- (5) Detach the brazed parts of expansion valves and pipes.

PHOTOS/FIGURES

Photo 11







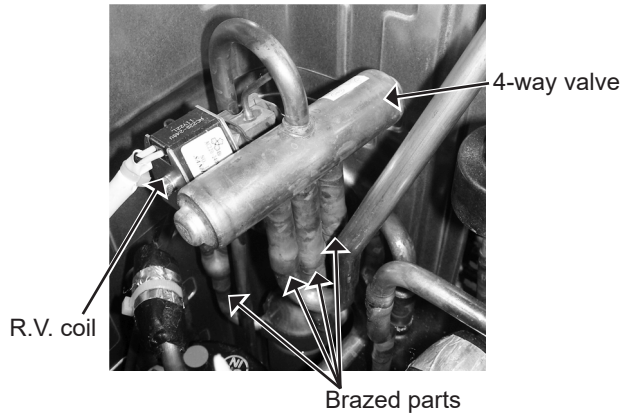


Photo 12

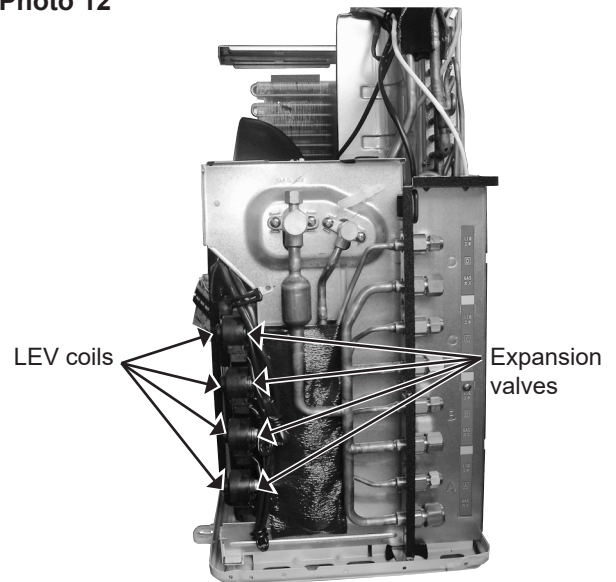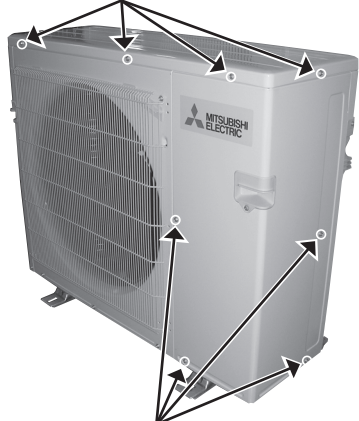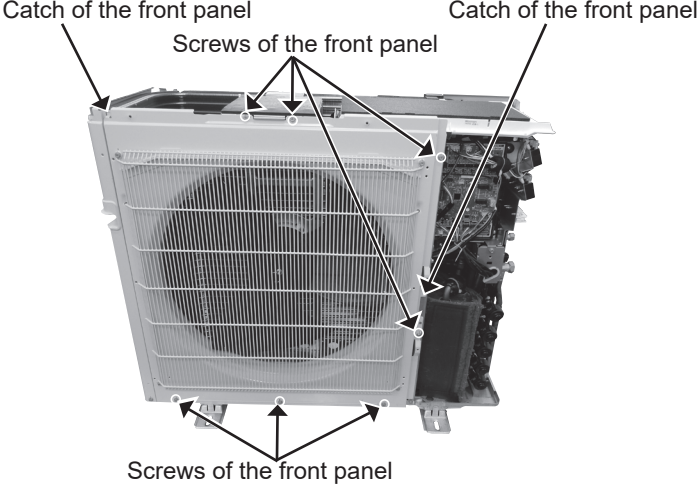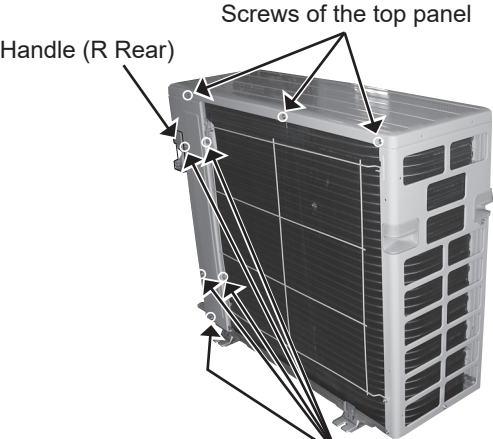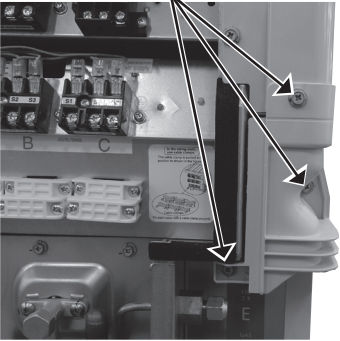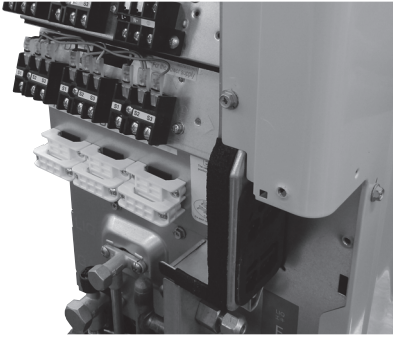

13-3. MXZ-4F83VF MXZ-4F83VF2 MXZ-5F102VF MXZ-5F102VF2

NOTE: Turn OFF the power supply before disassembly.


OPERATING PROCEDURE	PHOTOS/FIGURES
<p>1. Removing the panels</p> <p>(1) Remove the screws fixing the service panel, and remove the service panel.</p> <p>(2) Remove the screws fixing the top panel and remove the top panel.</p> <p>(3) Remove the screws fixing the handle (R Rear), and remove the handle (R Rear).</p> <p>(4) Disconnect the power supply and indoor/outdoor connecting wire.</p> <p>(5) Remove the screws fixing the front panel, and remove the front panel.</p> <p>(6) Remove the screws fixing the back panel, and remove the back panel.</p>	<p>Photo 1</p> <p>Screws of the top panel</p>  <p>Screws of the service panel</p>
<p>Photo 3</p> <p>Catch of the front panel</p> <p>Screws of the front panel</p>  <p>Screws of the front panel</p>	<p>Photo 2</p> <p>Screws of the top panel</p> <p>Handle (R Rear)</p>  <p>Screws of the back panel</p>
<p>Photo 4-1</p> <p>Screws of the handle (R Rear)</p>  <p>Remove the handle (R Rear).</p>	<p>Photo 4-2</p> 

OPERATING PROCEDURE

2. Removing the outdoor control P.C. board, the reactor and the outdoor power P.C. board

- (1) Remove the service panel and the top panel (Refer to section 1).
- (2) Disconnect the power supply and indoor/outdoor connecting wire.
- (3) Disconnect the connectors on the outdoor control P.C. board.
- (4) Remove the screws fixing the outdoor control P.C. board holder, and remove the outdoor control P.C. board.
- (5) Disconnect the lead wire from the reactor.
- (6) Remove the screws fixing the reactor, and remove the reactor.
- (7) Disconnect the lead wire of the power P.C. board.
- (8) Disconnect the catches of the PB cover, and remove the PB cover.
- (9) Remove the outdoor power P.C. board.

Photo 7

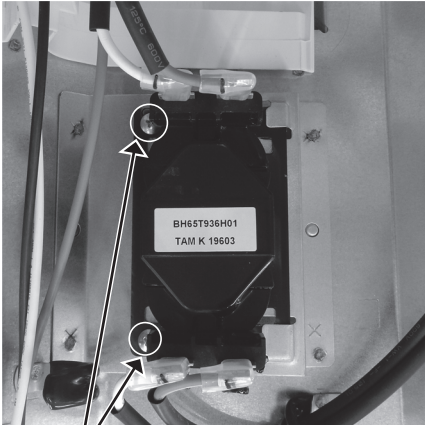

Screws of the reactor

PHOTOS/FIGURES

Photo 5


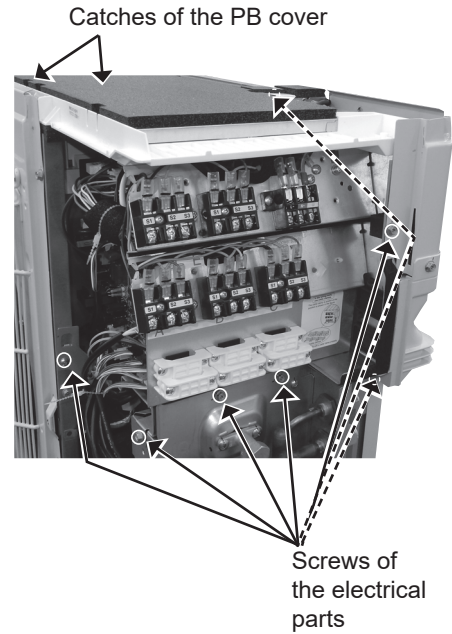


Photo 6

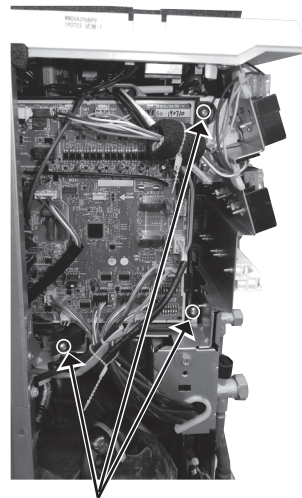

Screws of the outdoor control P.C. board holder

OPERATING PROCEDURE

3. Removing the fan motor

- (1) Remove the service panel, the top panel and the front panel (Refer to section 1).
- (2) Disconnect the power supply and indoor/outdoor connecting wire.
- (3) Disconnect the connector CNF1 on the outdoor control P.C. board.
- (4) Remove the propeller fan.
- (5) Remove the fan motor.


4. Removing the expansion valve

- (1) Remove the service panel and the top panel (Refer to section 1).
- (2) Disconnect the power supply and indoor/outdoor connecting wire.
(Gas recovery is not required if the unit is pumped down.)
- (3) Remove the LEV coils.
- (4) Detach the brazed parts of the expansion valves and pipes.

PHOTOS/FIGURES


Photo 8

Propeller fan

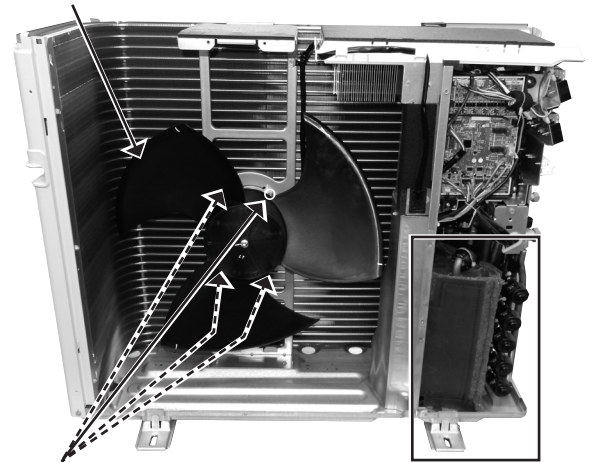

Screws of the outdoor fan motor

Photo 9

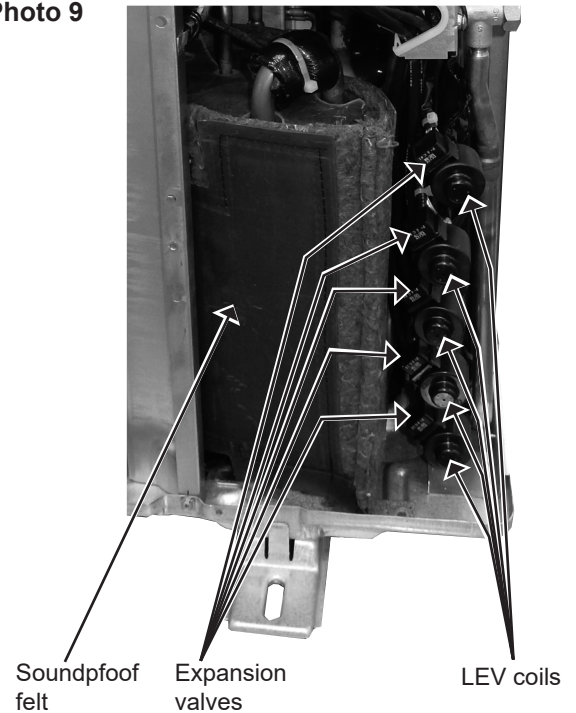

Soundproof felt

Expansion valves

LEV coils

OPERATING PROCEDURE

5. Removing the compressor and 4-way valve


- (1) Remove the service panel, the top panel, the handle (R Rear), the back panel and the front panel (Refer to section 1).
- (2) Disconnect the power supply and indoor/outdoor connecting wire, and remove the back panel.
- (3) Recover gas from the refrigerant circuit.

NOTE: Recover gas from the pipes until the pressure gauge shows 0 kg/cm² (0 MPa).

- (4) Remove the terminal cover, and remove thermal protector (TRS).
- (5) Disconnect the compressor lead wire from the terminal of the compressor (U, V, W).
- (6) Disconnect the outdoor control P.C. board connectors: CNF1, CNTH1, CNTH2, CN63H, CN712, CN791, CN792, CN793, CN794, CN795 (**MXZ-5F**)
- (7) Remove the screws fixing the electrical parts, and remove the electrical parts (Photo 5).
- (8) Remove the propeller fan.
- (9) Remove the screws fixing the separator, and remove the separator.
- (10) Remove the soundproof felt.
- (11) Detach the brazed parts of the compressor suction pipe and discharge pipe.
- (12) Remove the compressor nuts and remove the compressor.
- (13) Detach the brazed parts of 4-way valve and pipes.

Photo 11

Thermal protector (**VF2 only**)

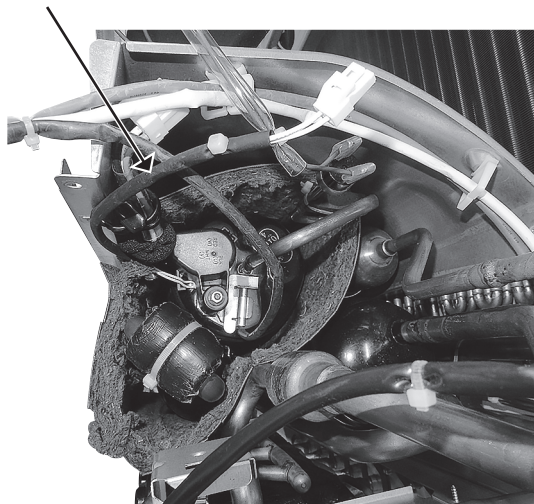

PHOTOS/FIGURES

Photo 10


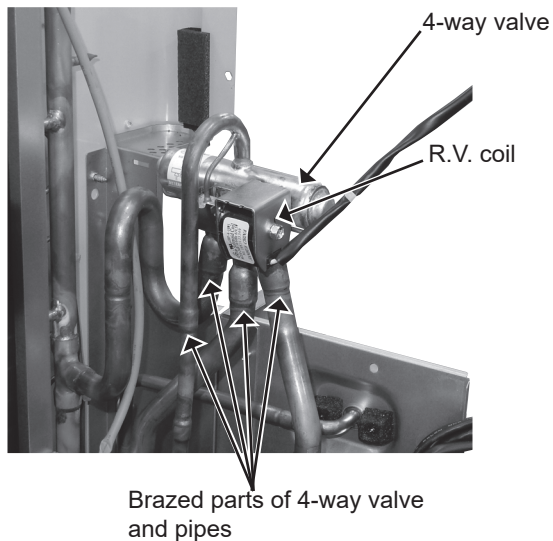






Photo 12

Discharge pipe brazed part

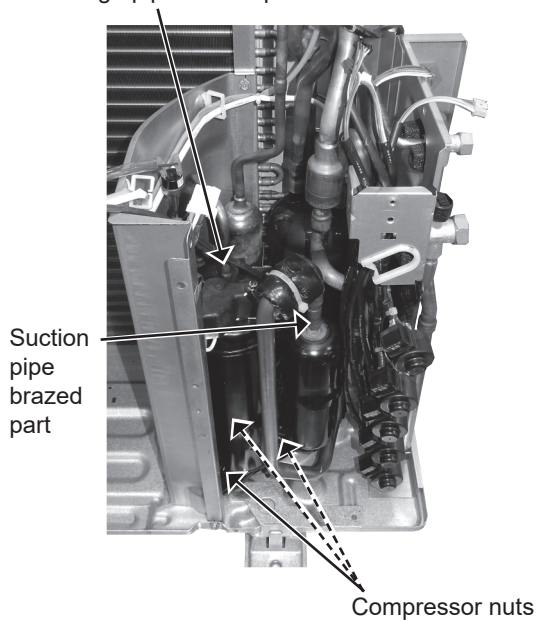

13-4. MXZ-2F53VFHZ MXZ-2F53VFHZ2

NOTE: Turn OFF the power supply before disassembly.

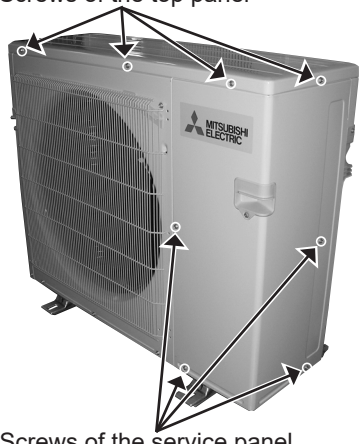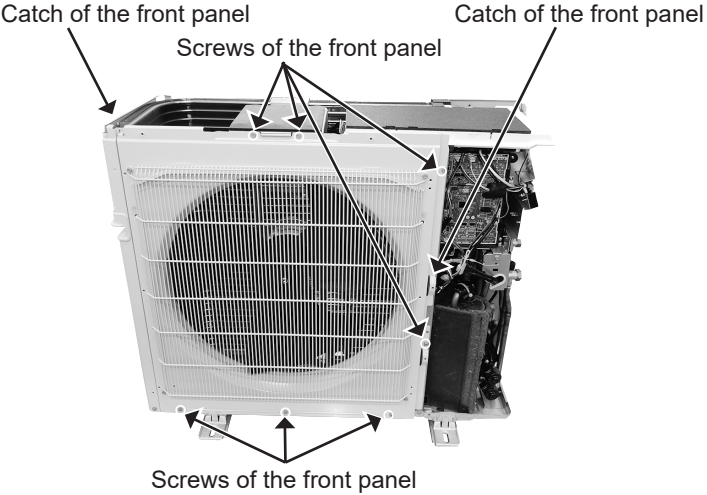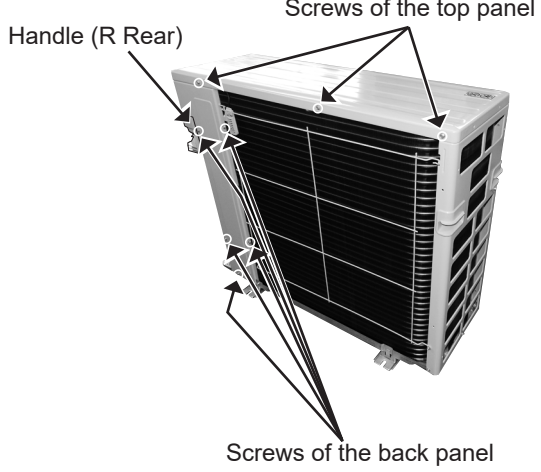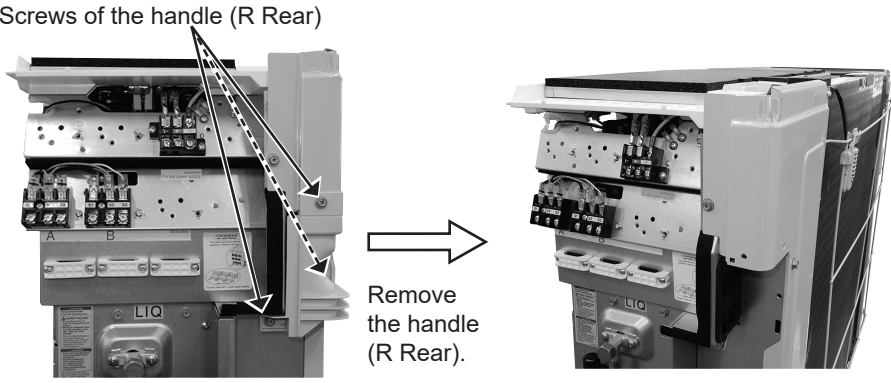
OPERATING PROCEDURE	PHOTOS/FIGURES
<p>1. Removing the panels</p> <ol style="list-style-type: none"> (1) Remove the screws fixing the service panel, and remove the service panel. (2) Remove the screws fixing the top panel and remove the top panel. (3) Remove the screws fixing the handle (R Rear), and remove the handle (R Rear). (4) Disconnect the power supply and indoor/outdoor connecting wire. (5) Remove the screws fixing the front panel, and remove the front panel. (6) Remove the screws fixing the back panel, and remove the back panel. 	<p>Photo 1</p>  <p>Screws of the top panel</p> <p>Screws of the service panel</p>
<p>Photo 3</p>  <p>Catch of the front panel</p> <p>Screws of the front panel</p> <p>Catch of the front panel</p> <p>Screws of the front panel</p>	<p>Photo 2</p>  <p>Handle (R Rear)</p> <p>Screws of the top panel</p> <p>Screws of the back panel</p>
<p>Photo 4</p>  <p>Screws of the handle (R Rear)</p> <p>Remove the handle (R Rear).</p>	

OPERATING PROCEDURE

2. Removing the outdoor control P.C. board, the reactor and the outdoor power P.C. board

- (1) Remove the service panel and the top panel (Refer to section 1).
- (2) Disconnect the power supply and indoor/outdoor connecting wire.
- (3) Disconnect the connectors on the outdoor control P.C. board.
- (4) Remove the screws fixing the outdoor control P.C. board holder, and remove the outdoor control P.C. board.
- (5) Disconnect the lead wire from the reactor.
- (6) Remove the screws fixing the reactor, and remove the reactor.
- (7) Disconnect the lead wire of the power P.C. board.
- (8) Disconnect the catches of the PB cover, and remove the PB cover.
- (9) Remove the outdoor power P.C. board.

Photo 7

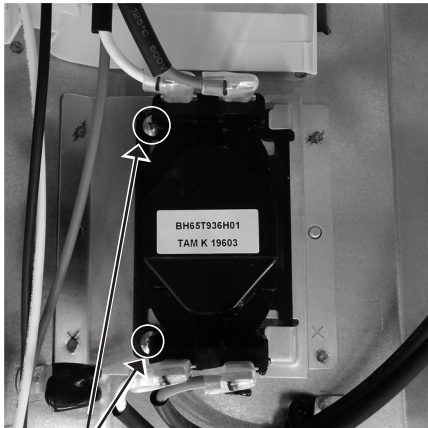


Screws of the reactor

PHOTOS/FIGURES


Photo 5

Catches of the PB cover

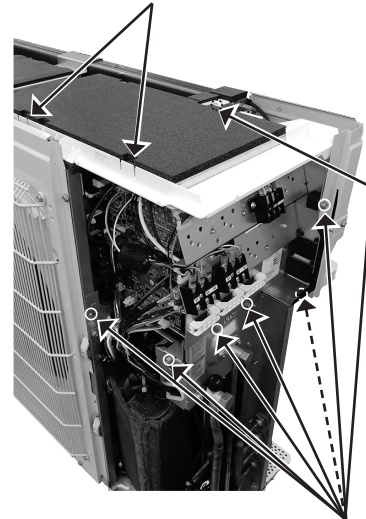

Screws of the electrical parts

Photo 6

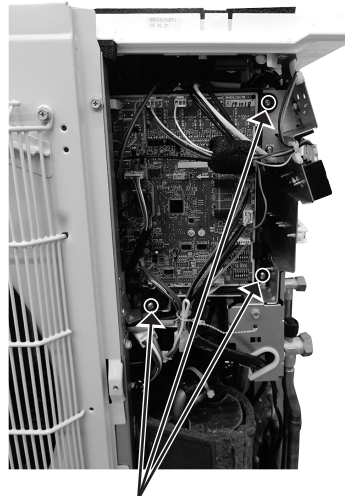

Screws of the outdoor control P.C. board holder

OPERATING PROCEDURE

3. Removing the fan motor

- (1) Remove the service panel, the top panel and the front panel (Refer to section 1).
- (2) Disconnect the power supply and indoor/outdoor connecting wire.
- (3) Disconnect the connector CNF1 on the outdoor control P.C. board.
- (4) Remove the propeller fan.
- (5) Remove the fan motor.

4. Removing the expansion valve

- (1) Remove the service panel and the top panel (Refer to section 1).
- (2) Disconnect the power supply and indoor/outdoor connecting wire.
(Gas recovery is not required if the unit is pumped down.)
- (3) Remove the LEV coils.
- (4) Detach the brazed parts of the expansion valves and pipes.

5. Removing the defrost heater

- (1) Remove the service panel, the top panel and the front panel (Refer to section 1).
- (2) Disconnect the power supply and indoor/outdoor connecting wire.
- (3) Disconnect the defrost heater lead wires from CN714 on the outdoor control P.C. board.
- (4) Remove the defrost heater lead wires from the lead clamp.
- (5) Remove the screws of the defrost heater.
- (6) Remove the heater protector and the defrost heater.

PHOTOS/FIGURES

Photo 8


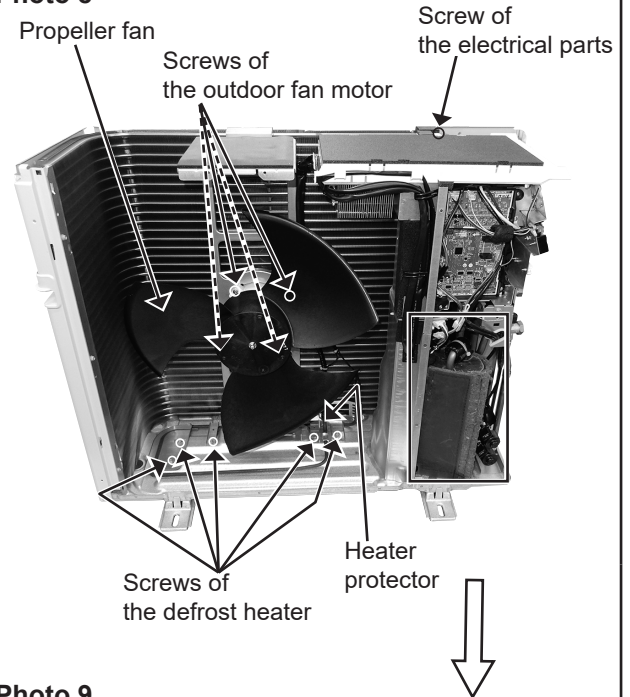


Photo 9

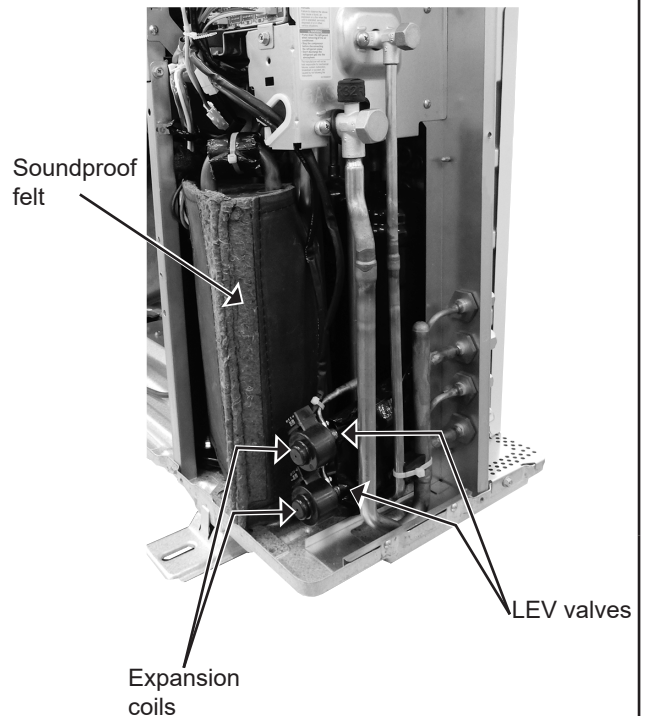

OPERATING PROCEDURE

6. Removing the compressor and 4-way valve


- (1) Remove the service panel, the top panel, the handle (R Rear), the back panel and the front panel (Refer to section 1).
- (2) Disconnect the power supply and indoor/outdoor connecting wire, and remove the back panel.
- (3) Recover gas from the refrigerant circuit.

NOTE: Recover gas from the pipes until the pressure gauge shows 0 kg/cm² (0 MPa).

- (4) Remove the terminal cover, and remove thermal protector (TRS).
- (5) Disconnect the compressor lead wire from the terminal of the compressor (U, V, W).
- (6) Disconnect the outdoor control P.C. board connectors: CNF1, CNTH1, CNTH2, CN63H, CN712, CN791, CN792, CN714
- (7) Remove the screws fixing the electrical parts, and remove the electrical parts (Photo 5).
- (8) Remove the propeller fan.
- (9) Remove the screws fixing the separator, and remove the separator.
- (10) Remove the soundproof felt.
- (11) Detach the brazed parts of the compressor suction pipe and discharge pipe.
- (12) Remove the compressor nuts and remove the compressor.
- (13) Detach the brazed parts of 4-way valve and pipes.


Photo 11

Thermal protector (VFH22 only)

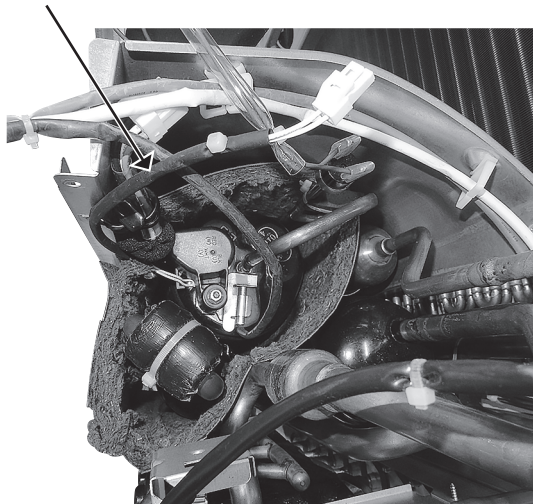

PHOTOS/FIGURES


Photo 10

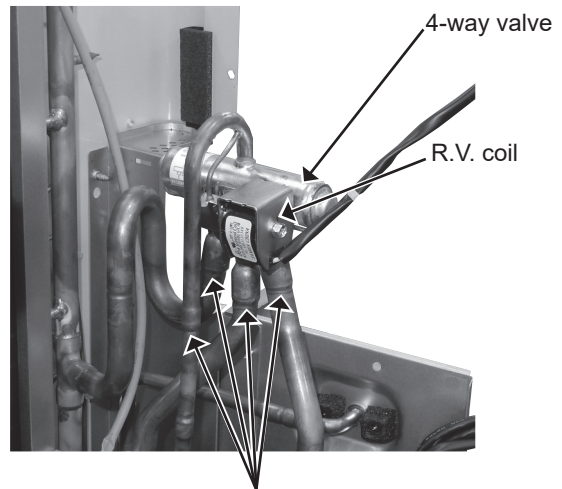

Brazed parts of 4-way valve and pipes

Photo 12

Discharge pipe brazed part

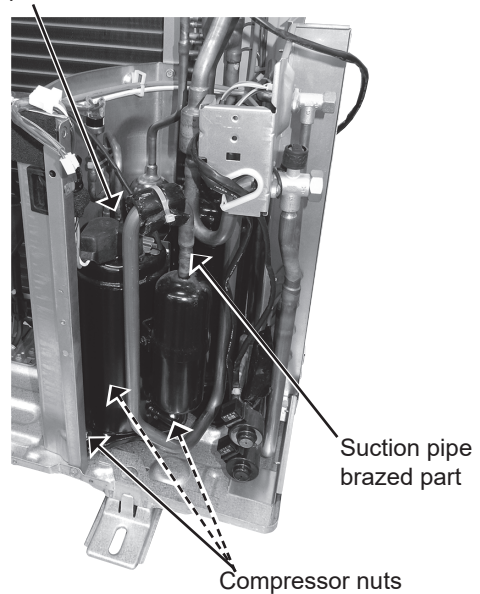

Suction pipe brazed part

Compressor nuts

13-5. MXZ-4F83VFHZ MXZ-4F83VFHZ2


NOTE: Turn OFF the power supply before disassembly.

OPERATING PROCEDURE

1. Removing the panels

- (1) Remove the screws fixing the service panel, and remove the service panel.
- (2) Remove the screws fixing the top panel, remove the top panel.
- (3) Disconnect the power supply and indoor/outdoor connecting wire.
- (4) Remove the screws fixing the front panel, and remove the front panel.
- (5) Remove the screws fixing the back panel, and remove the back panel.

Photo 3

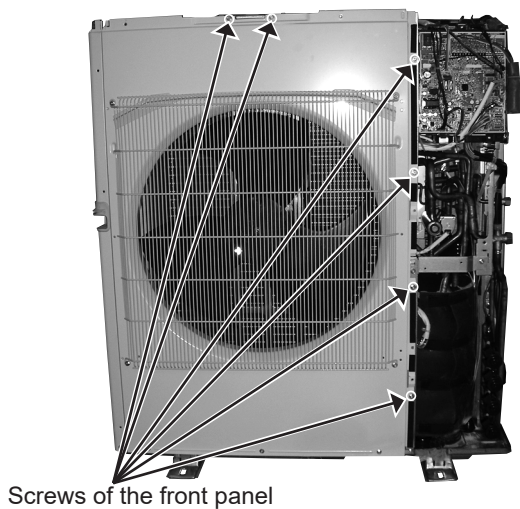

PHOTOS/FIGURES

Photo 1


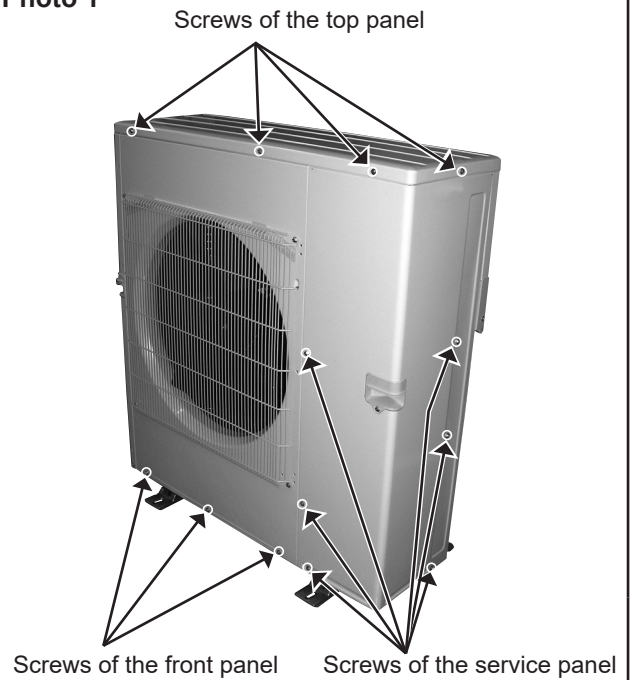


Photo 2

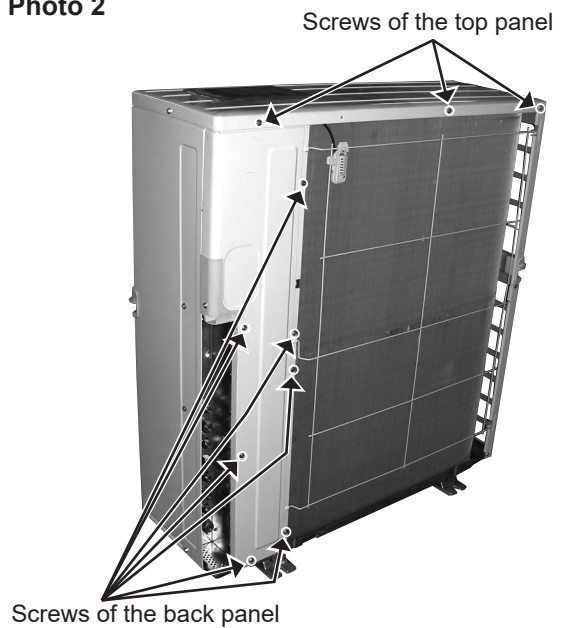


OPERATING PROCEDURE

2. Removing the outdoor control P.C. board, the reactor and the outdoor power P.C. board


- (1) Remove the service panel, the top panel and the front panel (Refer to section 1).
- (2) Disconnect the power supply and indoor/outdoor connecting wire.
- (3) Disconnect the connectors on the outdoor control P.C. board.
- (4) Remove the screws fixing the outdoor control P.C. board, and remove the outdoor control P.C. board.
- (5) Remove the screws fixing the electrical parts, and remove the electrical parts.
- (6) Remove the screws fixing the TB support, and remove the TB support.
- (7) Remove the screws fixing the control box separator, and remove the control box separator.
- (8) Disconnect the lead wire of the outdoor power P.C. board.
- (9) Remove the screws fixing the outdoor power P.C. board, and remove the outdoor power P.C. board with the outdoor P.C. board holder.
- (10) Remove the screws fixing the control box F, and remove the control box F.
- (11) Remove the screws fixing the reactors, and remove the reactors.

Photo 7

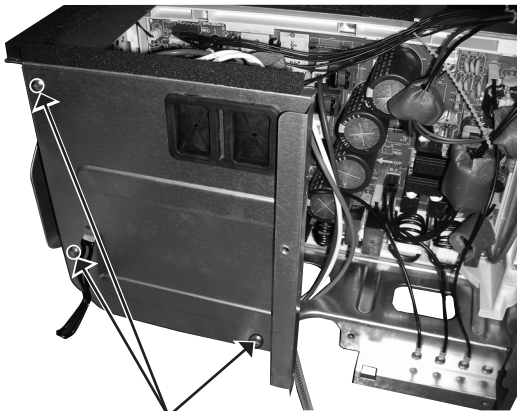

Screws of the control box F

Photo 8

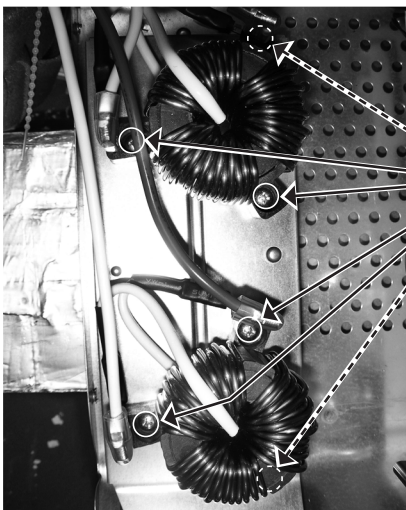

Screws of the reactor

PHOTOS/FIGURES

Photo 4

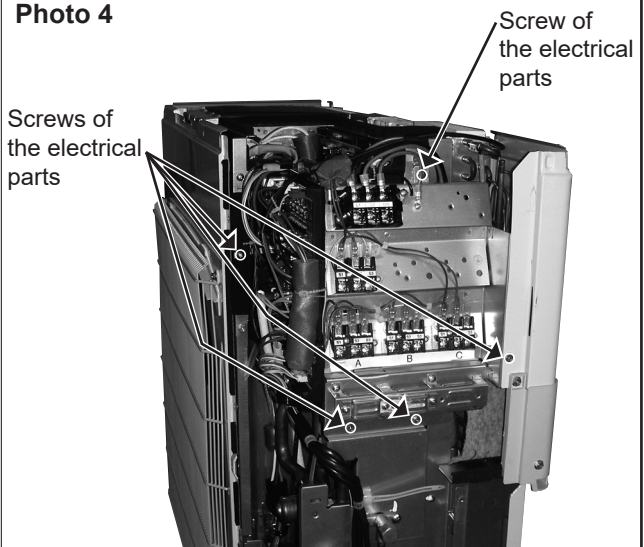


Photo 5


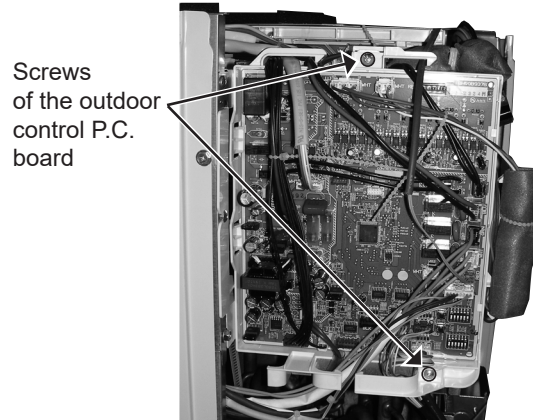


Photo 6

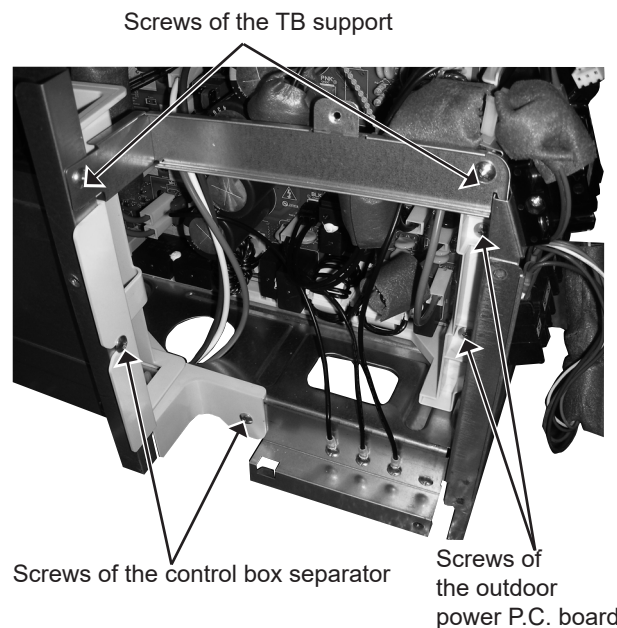

OPERATING PROCEDURE

3. Removing the fan motor

- (1) Remove the service panel, the top panel and the front panel (Refer to section 1).
- (2) Disconnect the power supply and indoor/outdoor connecting wire.
- (3) Disconnect the connector CNF1 on the outdoor control P.C. board.
- (4) Remove the propeller fan.
- (5) Remove the fan motor.

4. Removing the expansion valve

- (1) Remove the service panel and the top panel (Refer to section 1).
- (2) Disconnect the power supply and indoor/outdoor connecting wire.
(Gas recovery is not required if the unit is pumped down.)
- (3) Remove the LEV coils.
- (4) Detach the brazed parts of expansion valves and pipes.

5. Removing the defrost heater

- (1) Remove the service panel, the top panel and the front panel (Refer to section 1.).
- (2) Disconnect the power supply and indoor/outdoor connecting wire.
- (3) Disconnect the defrost heater lead wires from CN714 on the outdoor control P.C. board.
- (4) Remove the defrost heater lead wires from the lead clamp.
- (5) Remove the screws of the defrost heater.
- (6) Remove the heater protector and the defrost heater.

PHOTOS/FIGURES

Photo 9


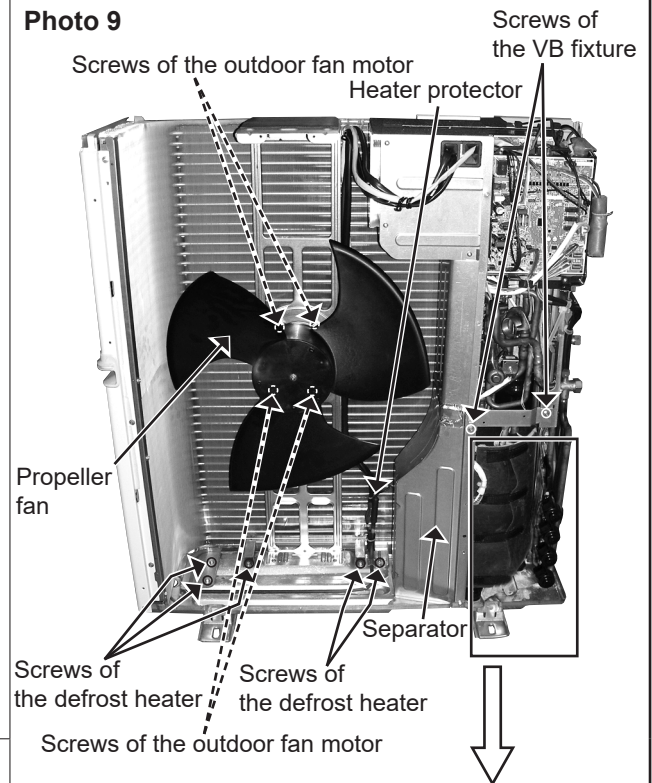


Photo 10

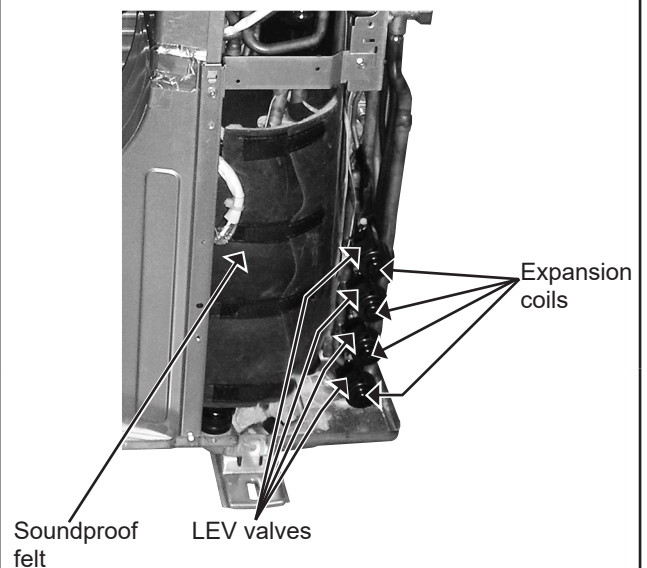

OPERATING PROCEDURE

6. Removing the compressor and 4-way valve

- (1) Remove the service panel, the top panel, the back panel and the front panel (Refer to section 1).
- (2) Disconnect the power supply and indoor/outdoor connecting wire, and remove the back panel.
- (3) Recover gas from the refrigerant circuit.

NOTE: Recover gas from the pipes until the pressure gauge shows 0 kg/cm² (0 MPa).


- (4) Remove the terminal cover, the thermal protector (TRS) and the discharge temperature thermistor. (Photo 12)
- (5) Disconnect the compressor lead wire from the terminal of the compressor (U, V, W).
- (6) Disconnect the outdoor control P.C. board connectors: CNF1, CNTH1, CNTH2, CN63H, CN712, CN713, CN714, CN791, CN792, CN793, CN794
- (7) Remove the screws fixing the electrical parts, and remove the electrical parts (Photo 4).
- (8) Remove the propeller fan.
- (9) Remove the screws fixing the VB fixture, and remove the VB fixture.
- (10) Remove the screws fixing the separator, and remove the separator.

NOTE: When installing the separator, insert the tabs of the heat exchanger into the separator.

- (11) Remove the soundproof felt.
- (12) Detach the brazed parts of the suction pipe and discharge pipe.
- (13) Remove the nuts of the compressor, and remove the compressor.
- (14) Detach the brazed parts of 4-way valve and pipes.

Photo 12

Terminal cover and the thermal protector (VFH22 only)

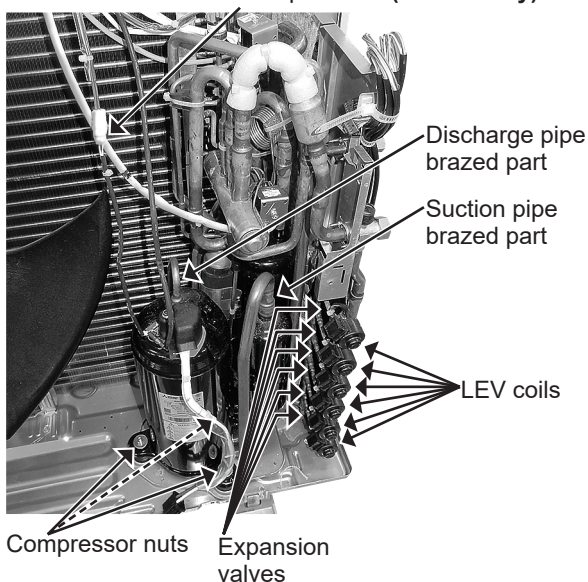

PHOTOS/FIGURES

Photo 11




4-way valve

R.V. coil

Brazed parts of 4-way valve and pipes

Photo 13

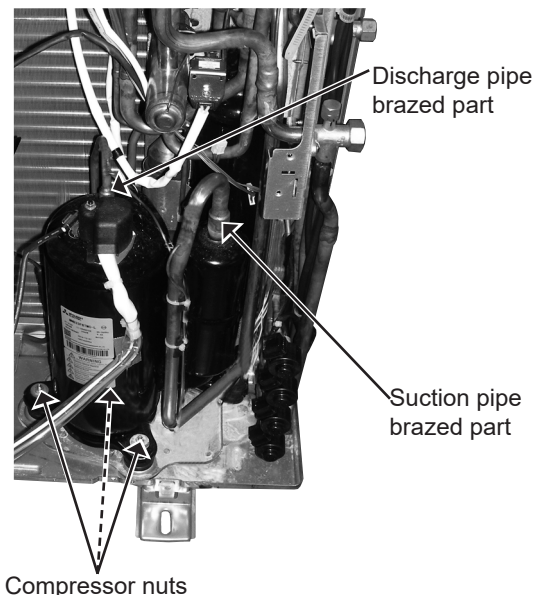

Discharge pipe brazed part

Suction pipe brazed part

Compressor nuts

13-6. MXZ-6F122VF MXZ-6F120VF2


NOTE: Turn OFF the power supply before disassembly.

OPERATING PROCEDURE

1. Removing the panels

- (1) Remove the screws fixing the service panel, and remove the service panel.
- (2) Remove the screws fixing the top panel, remove the top panel.
- (3) Disconnect the power supply cord and indoor/outdoor connecting wire.
- (4) Remove the screws fixing the front panel, and remove the front panel.
- (5) Remove the screws fixing the back panel, and remove the back panel.

Photo 3

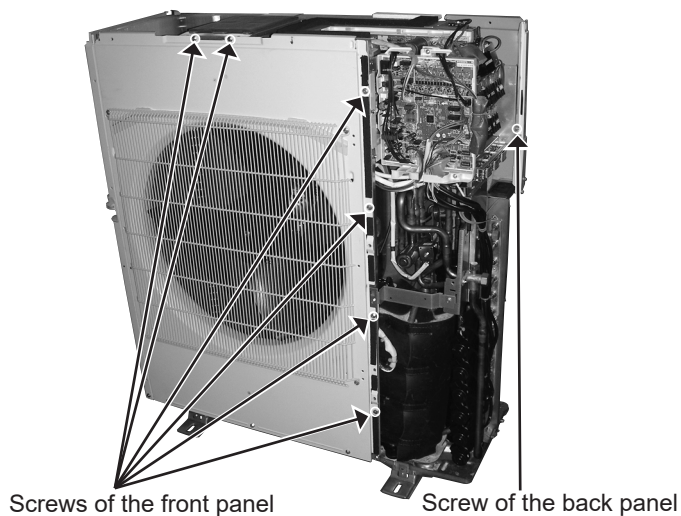

PHOTOS/FIGURES

Photo 1


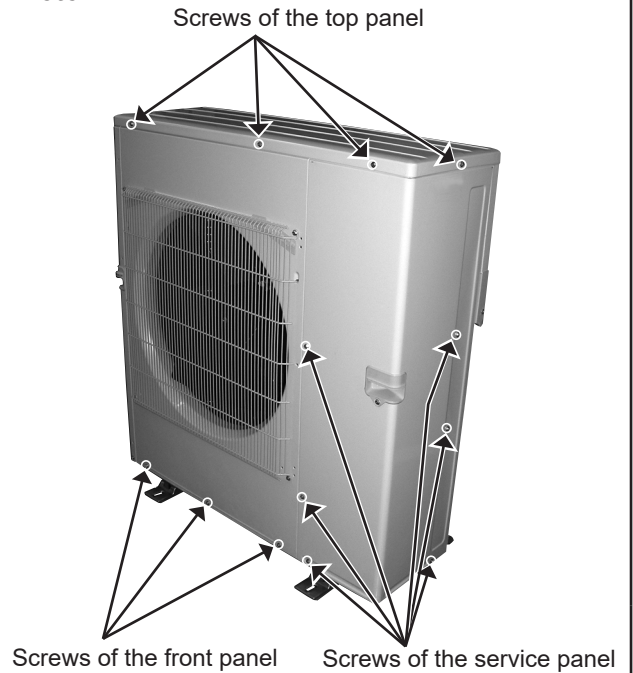


Photo 2

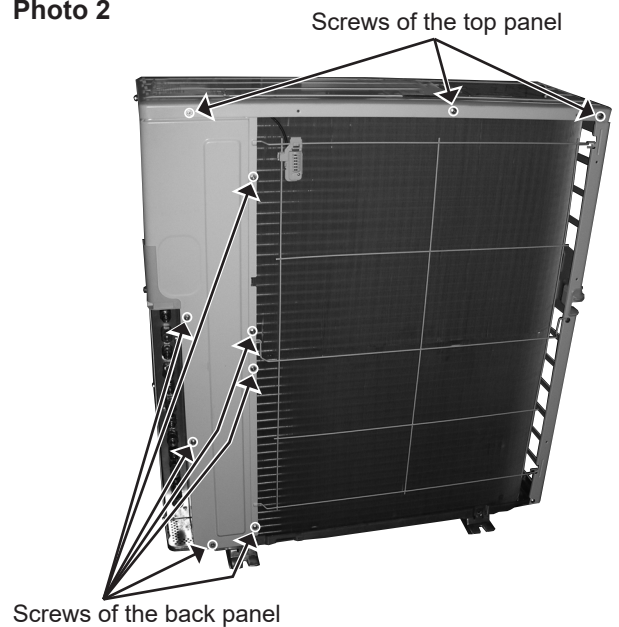


OPERATING PROCEDURE

2. Removing the outdoor control P.C. board, the reactor and the outdoor power P.C. board


- (1) Remove the service panel, the top panel and the front panel (Refer to section 1).
- (2) Disconnect the power supply cord and indoor/outdoor connecting wire.
- (3) Disconnect the connectors on the outdoor control P.C. board.
- (4) Remove the screws fixing the outdoor control P.C. board, and remove the outdoor control P.C. board.
- (5) Remove the screws fixing the electrical parts, and remove the electrical parts.
- (6) Remove the screws fixing the TB support, and remove the TB support.
- (7) Remove the screws fixing the control box separator, and remove the control box separator.
- (8) Disconnect the lead wire of the outdoor power P.C. board.
- (9) Remove the screws fixing the outdoor power P.C. board, and remove the outdoor power P.C. board with the outdoor P.C. board holder.
- (10) Remove the screws fixing the control box F, and remove the control box F.
- (11) Remove the screws fixing the reactors, and remove the reactors.

Photo 7

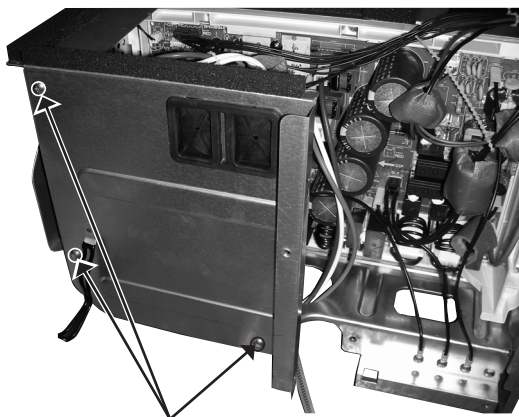

Screws of the control box F

Photo 8

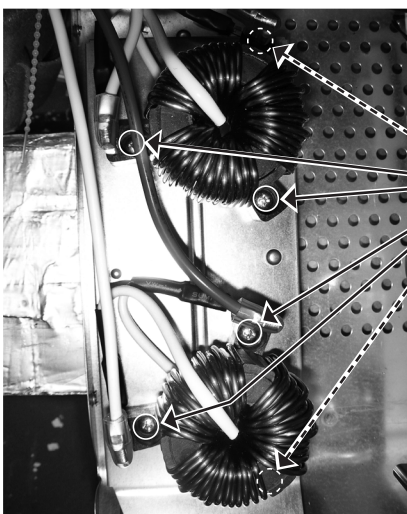

Screws of the reactor

PHOTOS/FIGURES

Photo 4

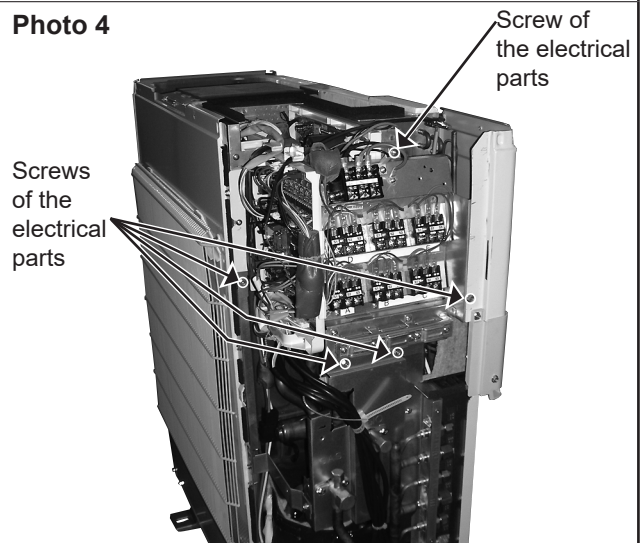


Photo 5


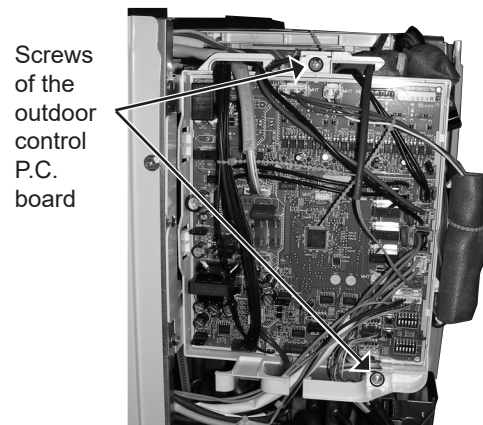


Photo 6

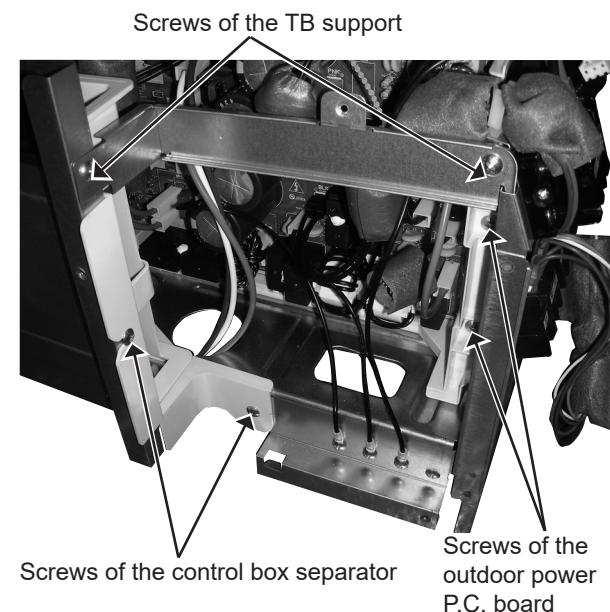

OPERATING PROCEDURE

3. Removing the fan motor

- (1) Remove the service panel, the top panel and the front panel (Refer to section 1).
- (2) Disconnect the power supply cord and indoor/outdoor connecting wire.
- (3) Disconnect the connector CNF1 on the outdoor control P.C. board.
- (4) Remove the propeller fan.
- (5) Remove the fan motor.

4. Removing the compressor and 4-way valve

- (1) Remove the service panel, the top panel, the back panel and the front panel (Refer to section 1).
- (2) Disconnect the power supply cord and indoor/outdoor connecting wire, and remove the back panel.
- (3) Recover gas from the refrigerant circuit.

NOTE: Recover gas from the pipes until the pressure gauge shows 0 kg/cm² (0 MPa).

- (4) Remove the terminal cover, the thermal protector (TRS) and the discharge temperature thermistor. (Photo 11)
- (5) Disconnect the compressor lead wire from the terminal of the compressor (U, V, W).
- (6) Disconnect the outdoor control P.C. board connectors: CNF1, CNTH1, CNTH2, CN63H, CN712, CN713, CN714, CN791, CN792, CN793, CN794, CN795
- (7) Remove the screws fixing the electrical parts, and remove the electrical parts (Photo 4).
- (8) Remove the propeller fan.
- (9) Remove the screws fixing the VB fixture, and remove the VB fixture.
- (10) Remove the screws fixing the separator, and remove the separator.

NOTE: When installing the separator, insert the tabs of the heat exchanger into the separator.

- (11) Remove the sound proof felt.
- (12) Detach the brazed parts of the suction and discharge pipes (Photo 11).
- (13) Remove the nuts of the compressor, and remove the compressor (Photo 11).
- (14) Detach the brazed parts of 4-way valve and pipes.

PHOTOS/FIGURES

Photo 9




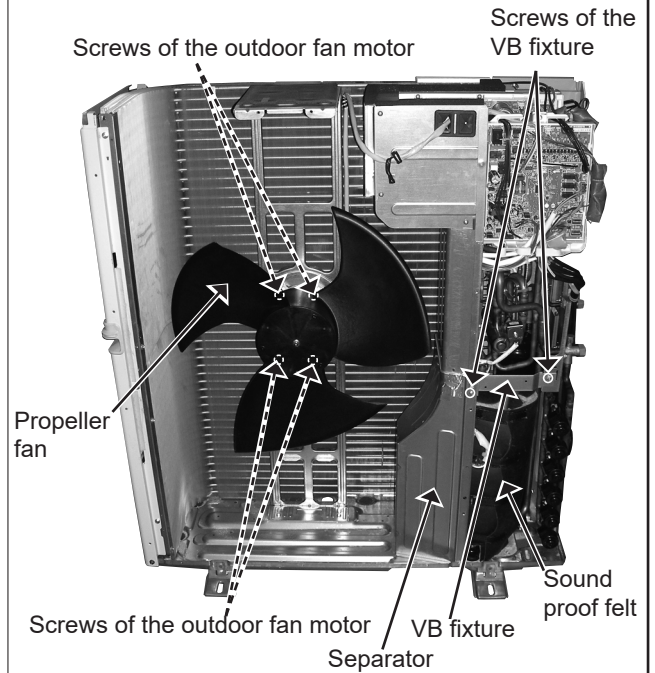


Photo 10

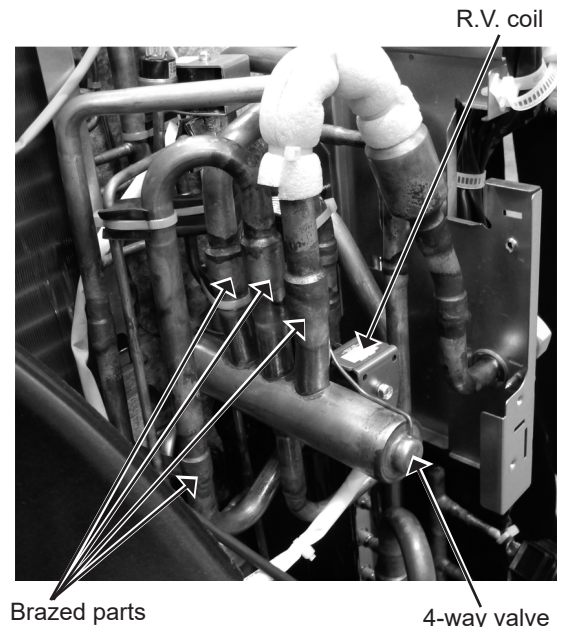

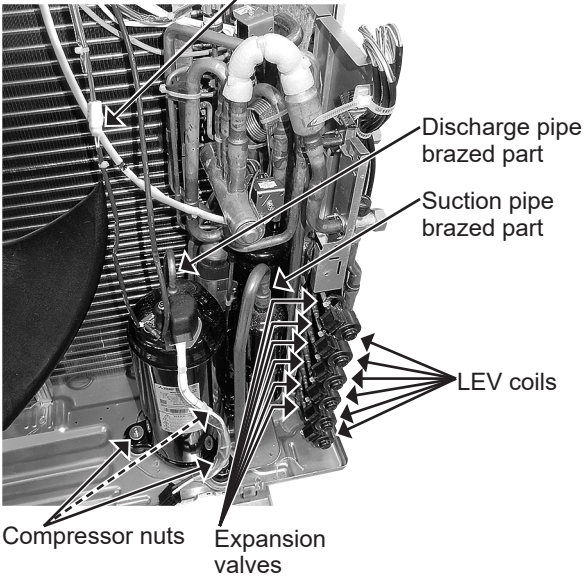

OPERATING PROCEDURE	PHOTOS/FIGURES
<p>5. Removing the expansion valve</p> <p>(1) Remove the service panel and the top panel (Refer to section 1).</p> <p>(2) Disconnect the power supply cord and indoor/outdoor connecting wire. (Gas recovery is not required if the unit is pumped down.)</p> <p>(3) Remove the LEV coils.</p> <p>(4) Detach the brazed parts of expansion valves and pipes.</p>	<p>Photo 11 Terminal cover and the thermal protector (VF2 only)</p>  <p>Discharge pipe brazed part</p> <p>Suction pipe brazed part</p> <p>LEV coils</p> <p>Expansion valves</p> <p>Compressor nuts</p>

MITSUBISHI ELECTRIC CORPORATION

HEAD OFFICE: TOKYO BUILDING, 2-7-3, MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN

© Copyright 2018 MITSUBISHI ELECTRIC CORPORATION

Issued: Nov. 2024. No.OBH790 REVISED EDITION-P

Issued: Aug. 2024. No.OBH790 REVISED EDITION-N

Issued: Feb. 2024. No.OBH790 REVISED EDITION-M

Issued: Dec. 2022. No.OBH790 REVISED EDITION-L

Issued: Jun. 2022. No.OBH790 REVISED EDITION-K

Issued: Jun. 2021. No.OBH790 REVISED EDITION-J

Issued: Mar. 2021. No.OBH790 REVISED EDITION-H

Issued: Feb. 2021. No.OBH790 REVISED EDITION-G

Issued: Jul. 2020. No.OBH790 REVISED EDITION-F

Issued: Mar. 2020. No.OBH790 REVISED EDITION-E

Issued: Nov. 2019. No.OBH790 REVISED EDITION-D

Issued: May 2019. No.OBH790 REVISED EDITION-C

Issued: Feb. 2019. No.OBH790 REVISED EDITION-B

Issued: Sep. 2018. No.OBH790 REVISED EDITION-A

Published: Mar. 2018. No.OBH790

Made in Japan

Specifications are subject to change without notice.